CHAPTER 38 WATER / WASTE



CHAPTER 38 WATER / WASTE

CH-SC-SU	Schem	Page	Sheet	Date		CH-SC-SU	Schem	Page	Sheet	Date
38-EFFECTIVE PAGES							_			
		1		Jun 21/2016						
		2		BLANK						
38-CONTENTS										
R		1		Jun 21/2016						
		2		BLANK						
38-ALPHABETIC	AL INDEX									
		1		Aug 15/2013						
		2		BLANK						
38-21-11										
R		101		Jun 21/2016						
38-32-12										
		101		Mar 14/2016						
Α		102		Jun 21/2016						
38-32-13										
R		101		Jun 21/2016						
38-41-11										
R		101		Jun 21/2016						
38-41-13		101		Juli 2 1/2010						
R		101		lun 01/0016						
11		101		Jun 21/2016						

A = Added, R = Revised, D = Deleted, O = Overflow

38-EFFECTIVE PAGES



CHAPTER 38 WATER / WASTE

WAIER / WASIE							
	Title	CH-SC-SU	Schem	Page	Sheet	Date	Effectivity
	LAVATORY WATER HEATERS						
ı	LAVATORY WATER HEATERS	38-21-11		101		Jun 21/2016	YT101-YT131
	VACUUM WASTE SYSTEM						
	VACUUM WASTE SYSTEM CONTROL	38-32-12		101		Mar 14/2016	YT101-YT118 YT126-YT131
				102		Jun 21/2016	YT119-YT120 YT132-YT133
	VACUUM WASTE SYSTEM INDICATION	38-32-13		101		Jun 21/2016	ALL
	WATER INDICATOR SYSTEM						
	WATER QUANTITY INDICATOR	38-41-11		101		Jun 21/2016	ALL
	POTABLE WATER PRESSURE SYSTEM	38-41-13		101		Jun 21/2016	ALL

38-CONTENTS



CHAPTER 38 WATER / WASTE

	WAIE	K /	R / WASIE
CH-SC-SU	Title		CH-SC-SU Title
38-21-11	LAVATORY WATER HEATERS		
38-41-13	POTABLE WATER PRESSURE SYSTEM		
38-32-12	VACUUM WASTE SYSTEM CONTROL		
38-32-13	VACUUM WASTE SYSTEM INDICATION		
38-41-11	WATER QUANTITY INDICATOR		


38-ALPHABETICAL INDEX



-c

737-800 SYSTEM SCHEMATIC MANUAL

WIRING DIAGRAMS 38-21-11

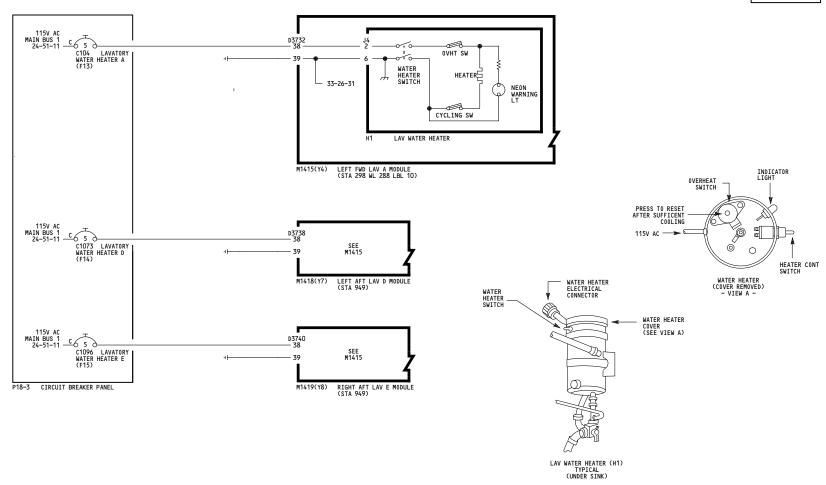

NOTES


1. FOR PLUMBING/MECHANICAL CONFIGURATION SEE THE MAINTENANCE MANUAL


YT101-YT131	LAVATORY WATER HEATERS
	D280A451

38-21-11

Page 101


Jun 21/2016

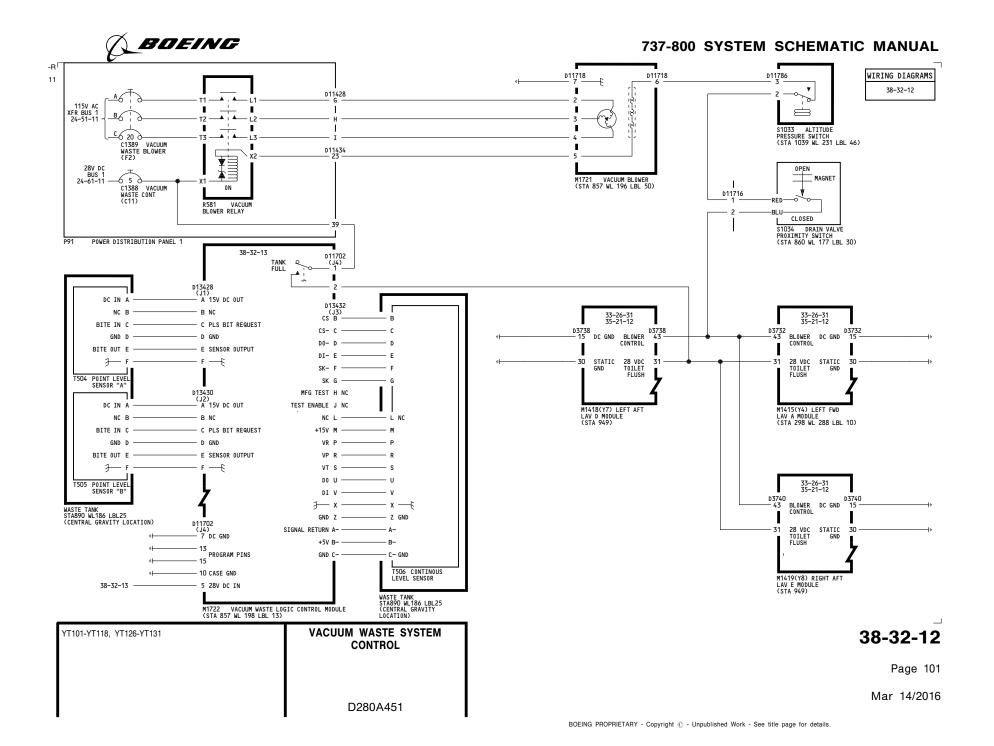

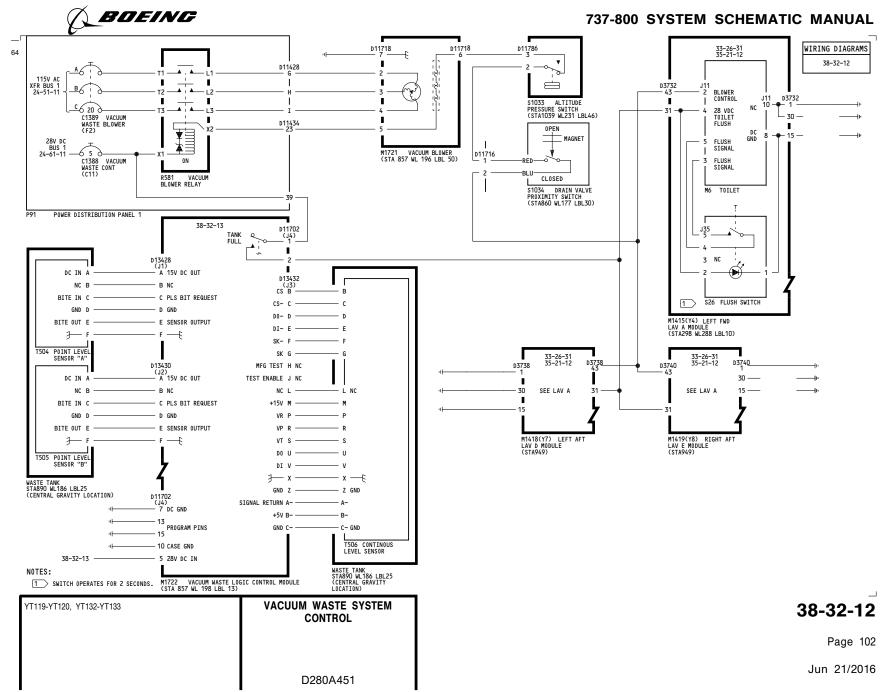

BOEING PROPRIETARY - Copyright () - Unpublished Work - See title page for details.



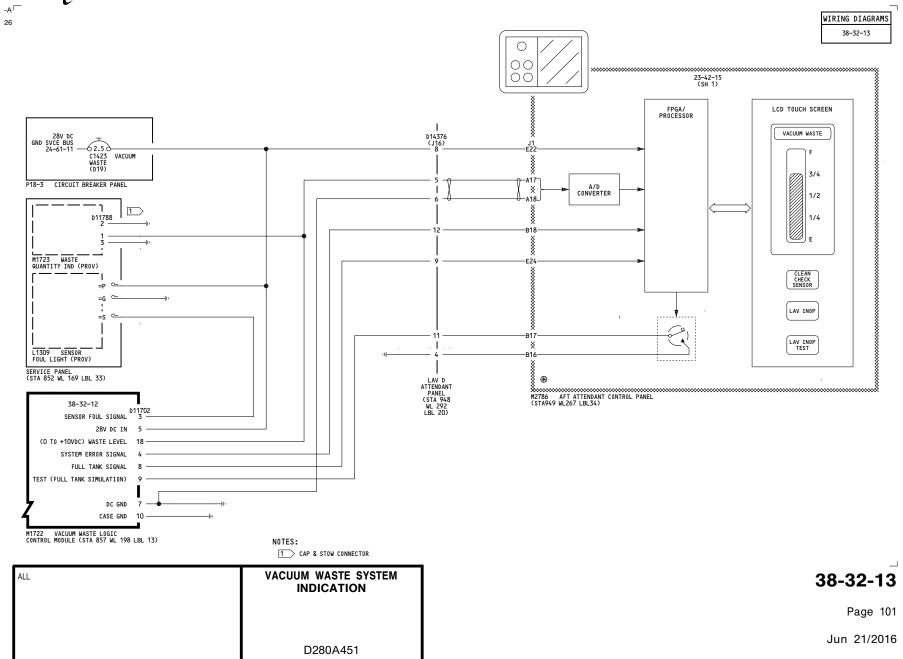

BOEING PROPRIETARY - Copyright \odot - Unpublished Work - See title page for details.




-A┌

15

737-800 SYSTEM SCHEMATIC MANUAL

WIRING DIAGRAMS
38-41-11

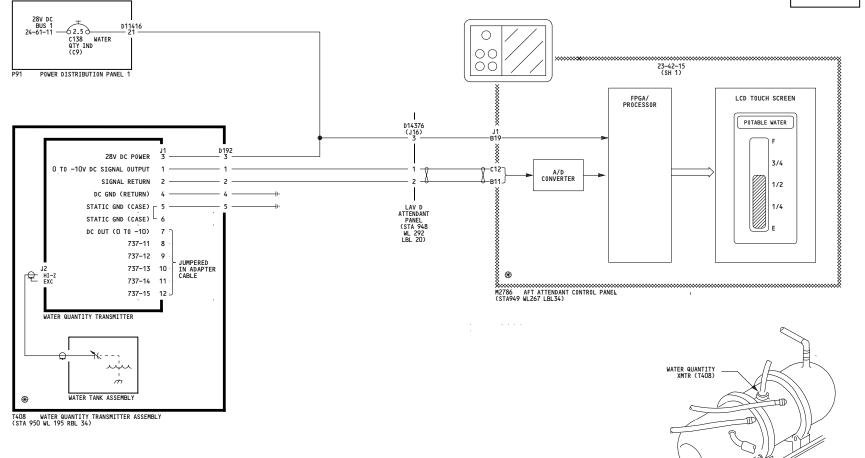

NOTES:

1. FOR PLUMBING/MECHANICAL CONFIGURATION SEE THE MAINTENANCE MANUAL

ALL WATER QUANTITY INDICATOR

D280A451

POTABLE WATER TANK (AFT OF AFT CARGO COMPARTMENT - STA 947-967 APPROX)

38-41-11

Page 101

Jun 21/2016



-вГ

737-800 SYSTEM SCHEMATIC MANUAL

WIRING DIAGRAMS 38-41-13

