CHAPTER 47 INERT GAS SYSTEMS



WIRING DIAGRAM MANUAL

CHAPTER 47 INERT GAS SYSTEMS

CH-SC-SU Schem	Page	Sheet	Date	CH-SC-SU	Schem	Page	Sheet	Date
47-EFFECTIVE PAGES								
	1		Jun 21/2016					
47 CONTENTS	2	I	BLANK					
47-CONTENTS R	1	_	Jun 21/2016					
	2	ı	BLANK					
47-ALPHABETICAL IND								
	1	,	Aug 15/2013					
47-30-11	2	ı	BLANK					
47-30-11	1	1 /	Aug 15/2013					
		2 /	Apr 17/2014					
R	2	1 .	Jun 21/2016					
R		2 .	Jun 21/2016					

A = Added, R = Revised, D = Deleted, O = Overflow



WIRING DIAGRAM MANUAL

CHAPTER 47 INERT GAS SYSTEMS

Title	CH-SC-SU	Schem	Page	Sheet	Date	Effectivity
CONTROL						
INERT GAS SYSTEM CONTROL	47-30-11		1	1	Aug 15/2013	YT101-YT103
				2	Apr 17/2014	YT101-YT103
			2	1	Jun 21/2016	YT104-YT133
				2	Jun 21/2016	YT104-YT133





CHAPTER 47 INERT GAS SYSTEMS

CH-SC-SU	Title
47-30-11	INERT GAS SYSTEM CONTROL

BOEING


737-800 WIRING DIAGRAM MANUAL

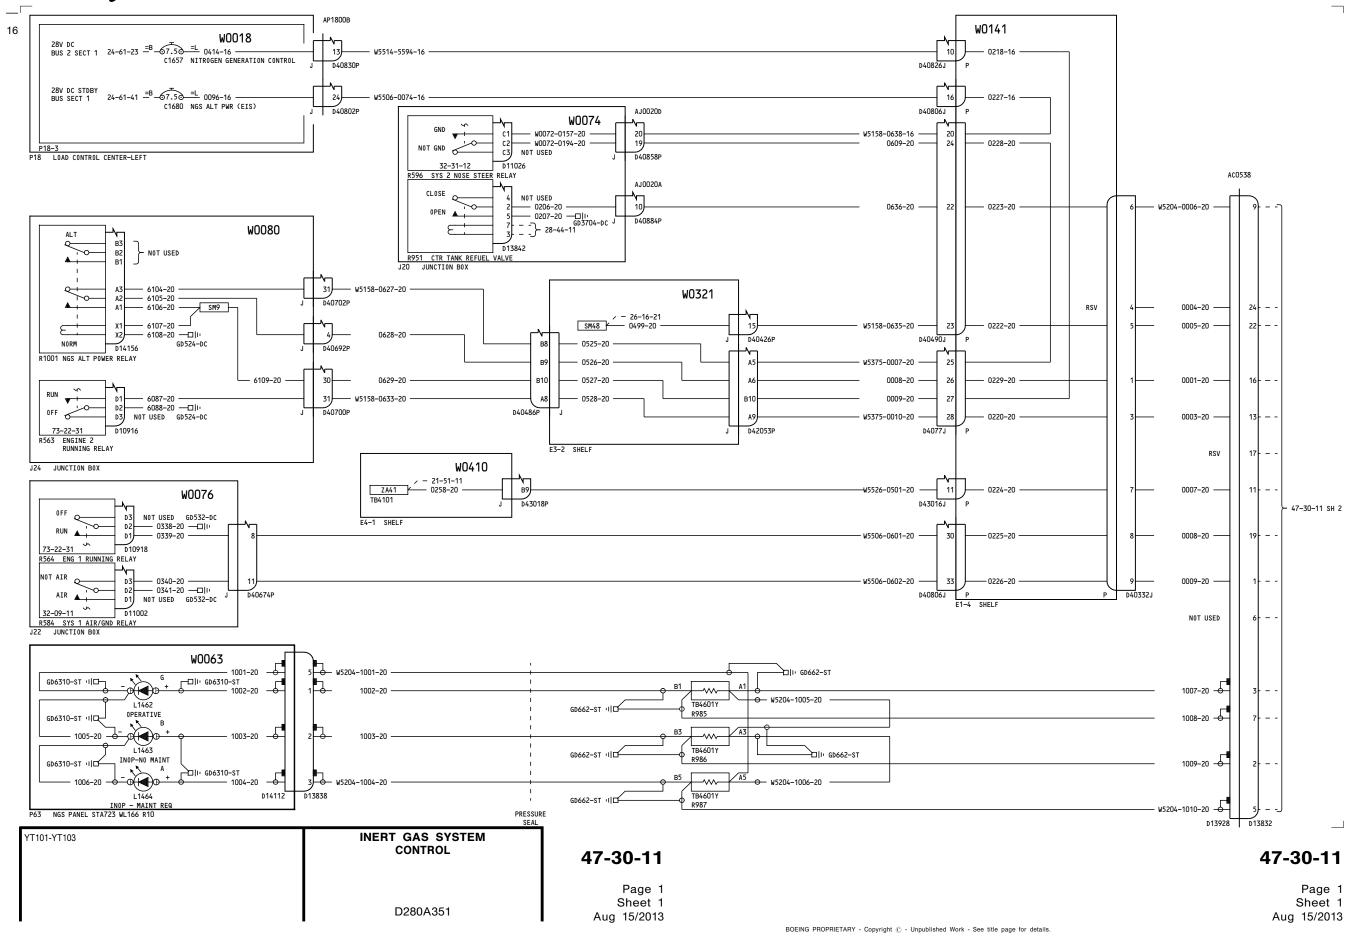


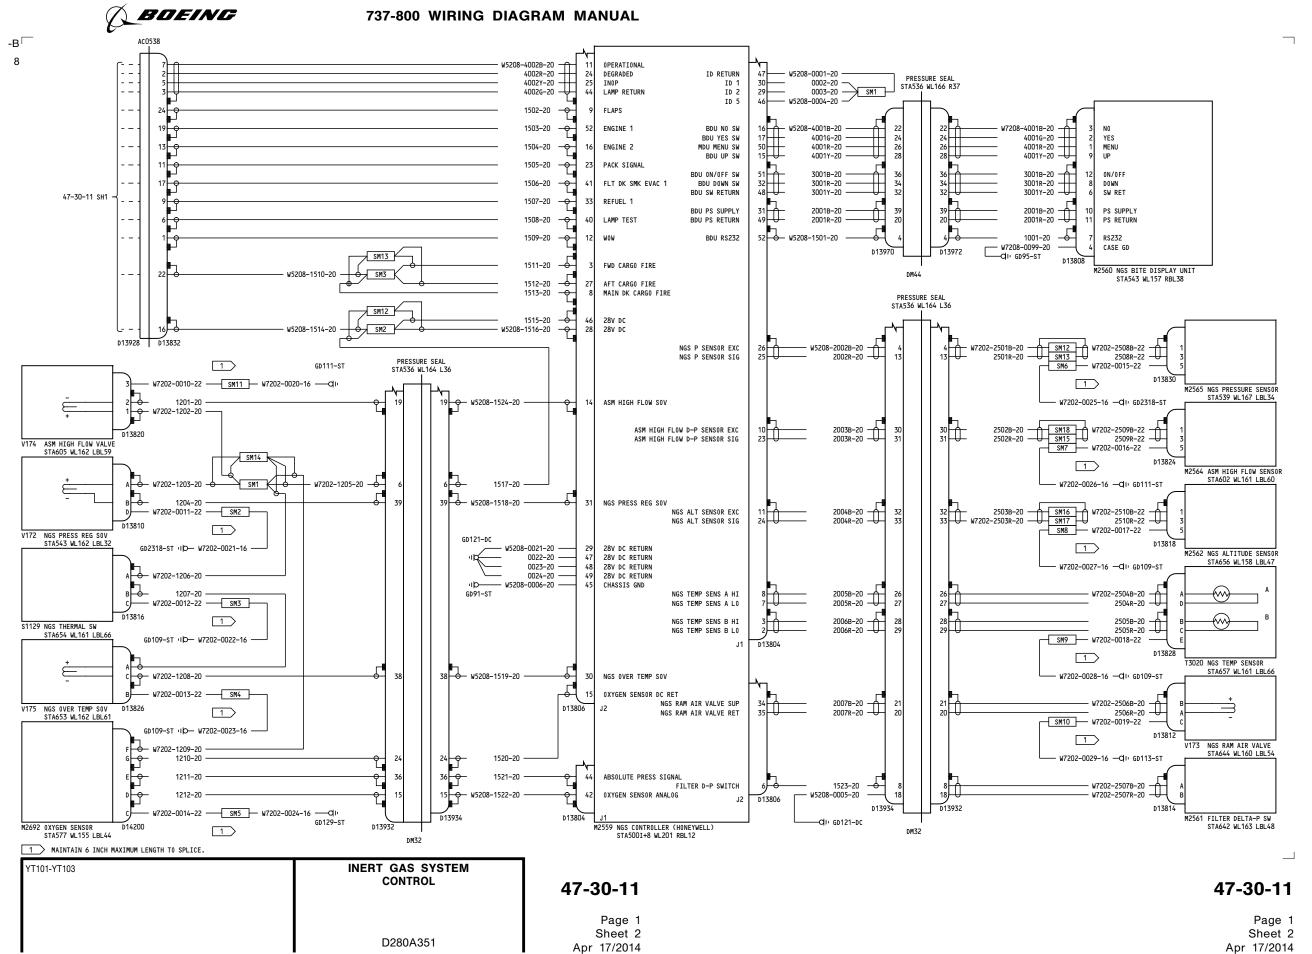

BOEING PROPRIETARY - Copyright (*) - Unpublished Work - See title page for details.

BOEING 737-800 WIRING DIAGRAM MANUAL AP1800B 37 BUS 2 SECT 1 24-61-23 =B -67.50 =L 0414-16 -W5514-5594-16 C1657 NITROGEN GENERATION CONTROL D40830P 28V DC STDBY BUS SECT 1 24-61-41 =B -07.50 =L 0096-16 --W5506-0074-16 C1680 NGS ALT PWR (EIS) J D40802P AJ0020D W0074 - w0072-0157-20 · --- w0072-0194-20 · P18-3 NOT USED P18 LOAD CONTROL CENTER-LEFT D40858I 32-31-12 D11026 R596 SYS 2 NOSE STEER RELAY AJ0020A 0206-20 — []II 0207-20 — []II - -] 28-44-11 D40884P W0080 R951 CTR TANK REFUEL VALVE J20 JUNCTION ROY D13842 <u>`</u> ⊢ NOT USED W5158-0627-20 W0321 — 6105**-**20 -D40702P SM9 — 6106-20 -✓ - 26-16-21 SM48 ← 0499-20 -6107-20

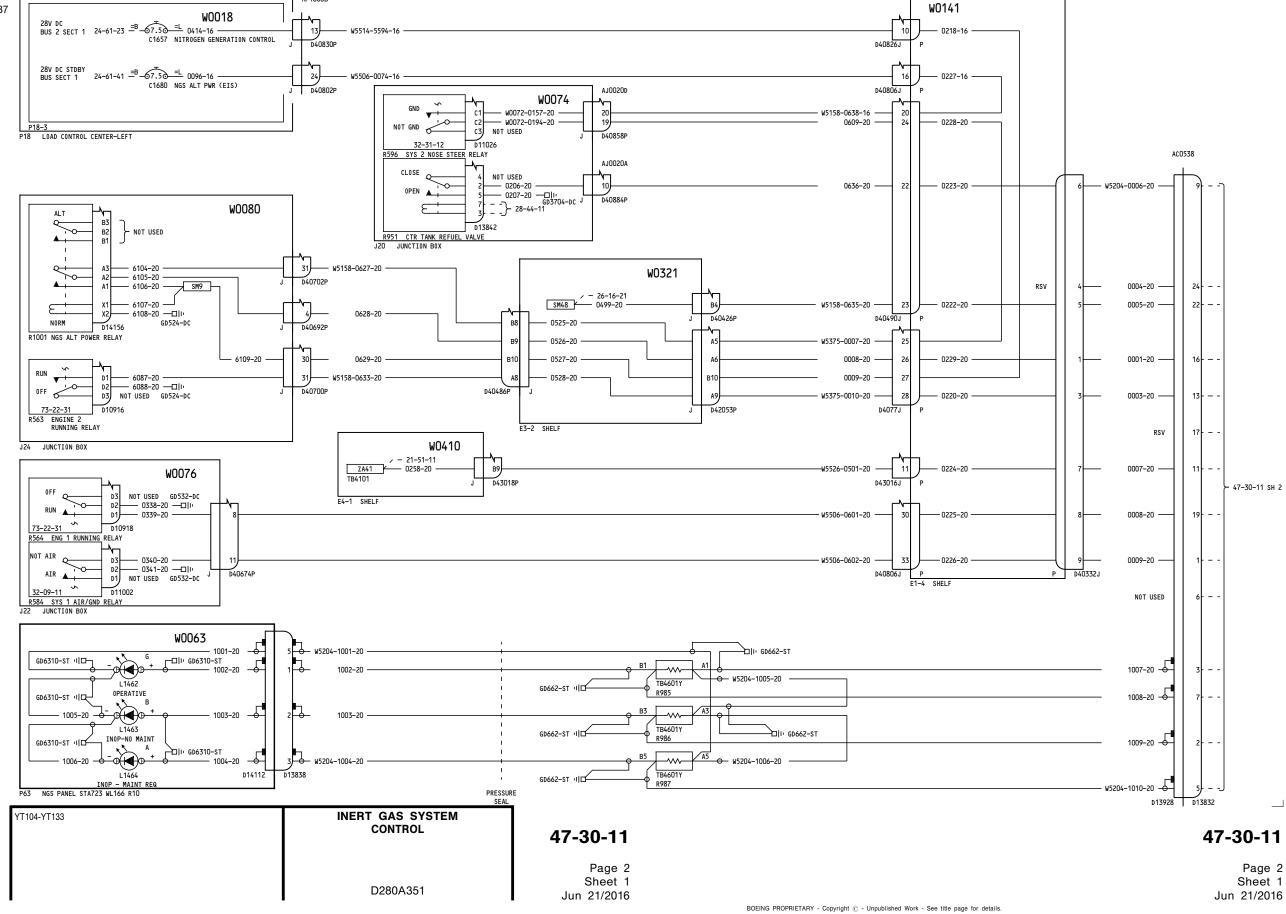

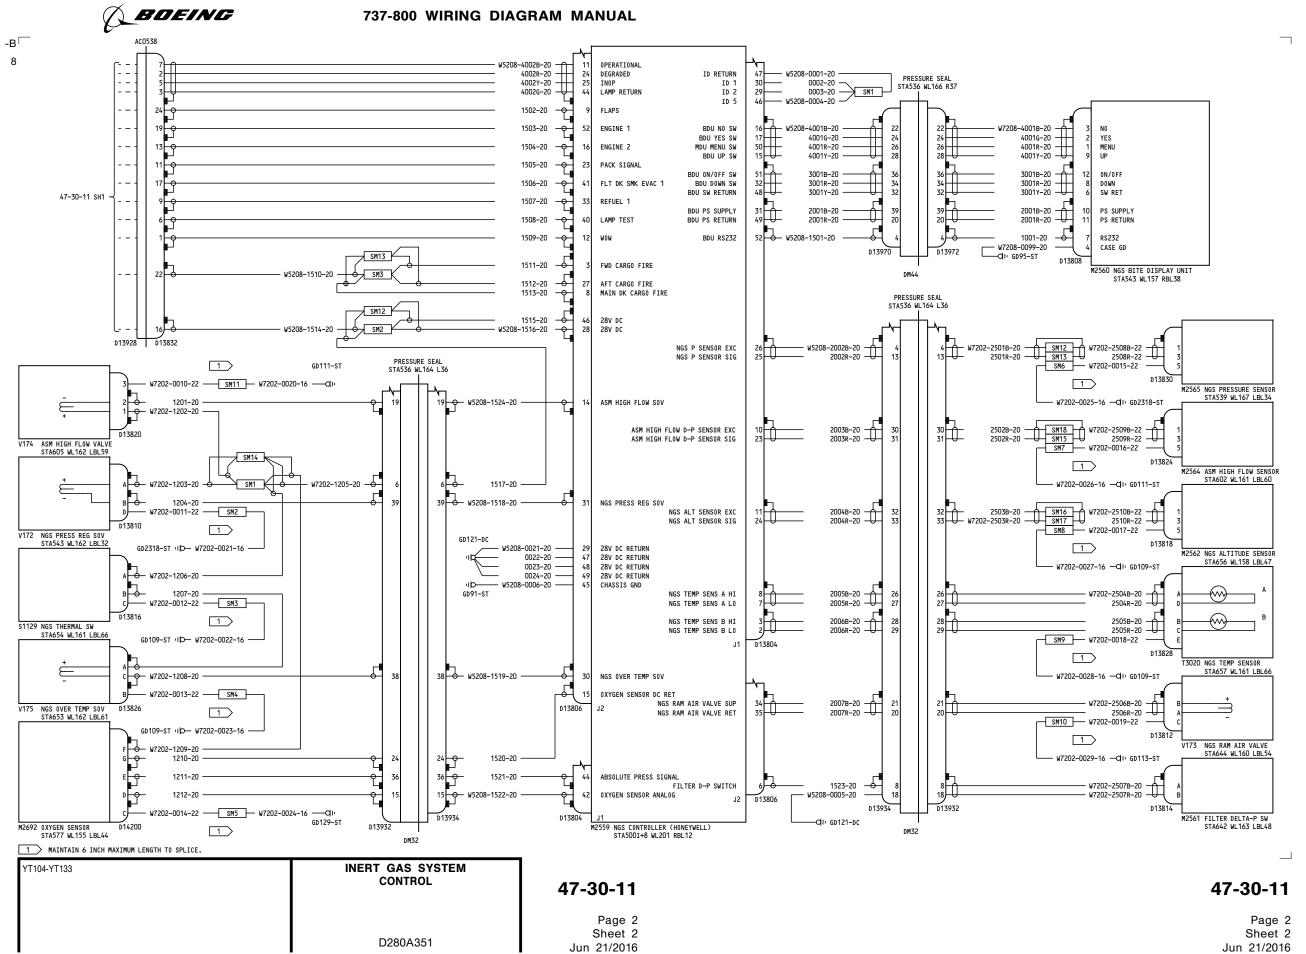

BOEING PROPRIETARY - Copyright (*) - Unpublished Work - See title page for details.