DIGITALS INDIA

Electronic Security Solutions

FIRE GUARD FG-04

DI-FIRE
Fire Alarm Systems

FIRE ALARM SYSTEM

TYPE: Fire Guard (PSTN, GSM + IP Communication)

USER'S MANUAL

Version 1.0 | DI-FIRE Series

CAUTION: Please read this manual carefully before operating your product and retain it for future reference.

DI-FIRE

digitals
Electronic Security Solutions

USER MANUAL

FIRE GUARD (FG-04)

CONVENTIONAL FIRE ALARM CONTROL PANEL

REAL-TIME STATUS DISPLAY
LCD shows time & 'System Normal' in optimal conditions

SECURE KEYED ACCESS
Tamper-resistant front for authorized personnel

4-ZONE PROTECTION
Dedicated monitoring for four distinct areas



RELIABLE POWER MANAGEMENT
Optional battery management

INSTANT ALARM NOTIFICATION
Powerful sirens and fire strobes activation on fire detection

SIMPLE OPERATION INTERFACE
Easy-to-use control keypad for system management.

EASY MAINTENANCE & DIAGNOSTICS
Quick access to system status and test features

EVENT LOGGING & HISTORY
Store up to 2000 previous events)

Table of Contents

TYPE : Fire Guard (PSTN, GSM + IP Communication) 4
Workflow Chart 5
Chapter 1: Product Overview 6
Chapter 1.1: Features 7
Chapter 1.2: System Terminology and Definitions 9
Chapter 1.3: Hardware Specifications 9
Chapter 1.4: LED Status Indications 10
Chapter 1.5: Control and Indications 11
Chapter 1.6: System Components Overview 12
Chapter 1.6.1: Normal Mode 12
Chapter 1.6.2: Programming Mode 13
Chapter 1.6.3: On-Board Keypad Programming 13
Chapter 2: Installation 14
Chapter 2.1: Installation Precaution 14
Chapter 2.2: Fire System Installations 15
Chapter 2.3: Wiring Installation 15
Chapter 2.3.1: 220V AC Power 15
Chapter 2.3.2: Relay Outputs 15
Chapter 2.3.3: Hooter Outputs 16
Chapter 2.3.4: RS485 Communications 16
Chapter 2.3.5: Battery Connection 16
Chapter 2.3.6: Solar Connection 16
Chapter 2.3.7: Input Circuits 16
Chapter 3: Programming Instruction 17
Chapter 3.1: Programming Mode Access Code 17
Chapter 3.2: Configurable Parameters 17
Chapter 3.3: Remote Programming 20
Chapter 3.4: Shortcut Keys 24

TYPE : Fire Guard (PSTN, GSM + IP Communication)



GSM+PSTN Auto Dialer


IP+GSM+PSTN Auto Dialer


(Basic) without Auto Dialer

Model	Communication	Description
Fire Guard FG-04 IP	IP + GSM + PSTN	Full-featured: IP-based CMS reporting via various protocol
Fire Guard FG-04 (GSM)	GSM + PSTN	Auto dialer with GSM and PSTN reporting
Fire Guard FG-04	Standalone	Local alarm only; suitable for simple installations

NOTE: The colour of the panel has no relation to the zone number or panel functionality.

Workflow Chart

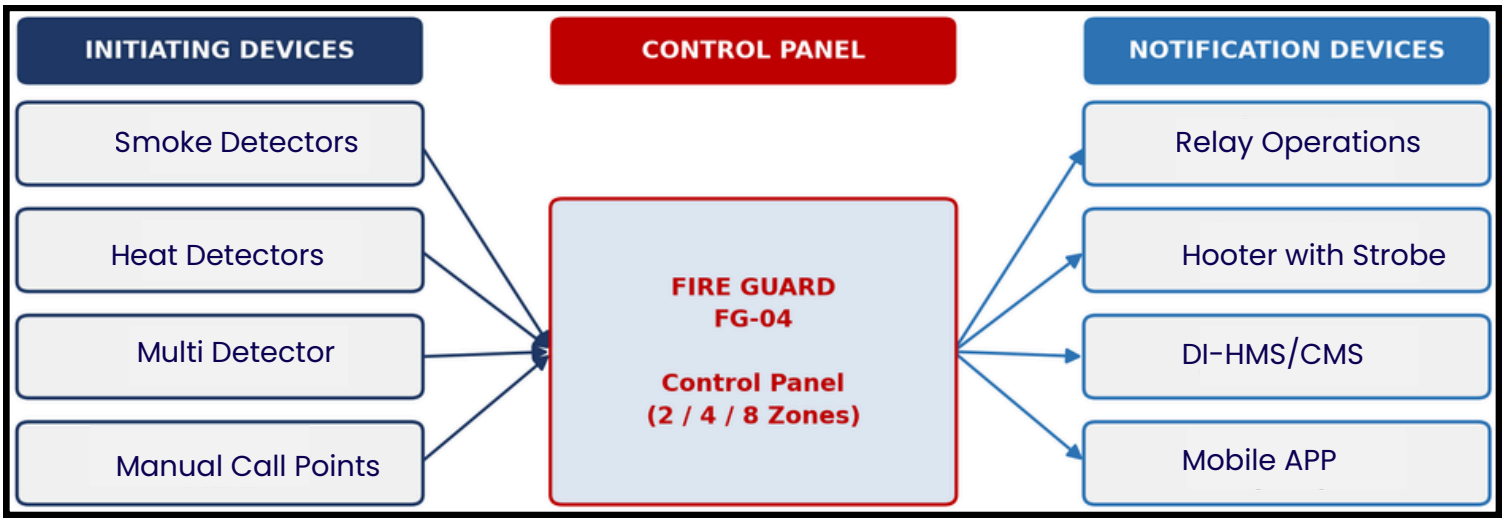

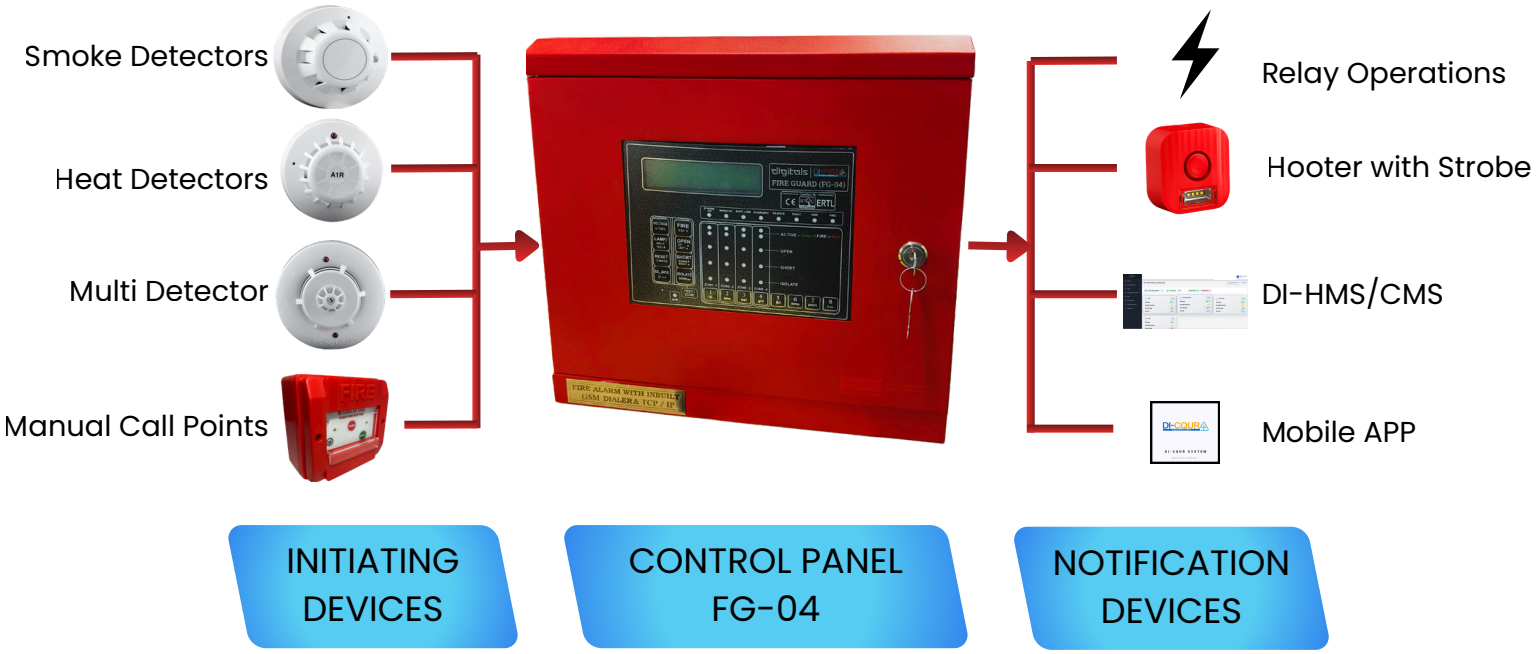

MAKE IN INDIA

Chapter 1: Product Overview

The FG-04 is a compact, cost-effective, and intelligent 2/4/8 Zone Conventional Fire Alarm Control Panel designed to deliver reliable fire detection and alarm management for a wide range of commercial, industrial, and institutional applications. It supports conventional input devices while offering a comprehensive set of advanced features for efficient system operation and monitoring.

The panel provides multiple notification and communication options, including Notification Appliance Circuits (Hooters), Voice Call, SMS, and HMS integration, ensuring that critical fire events are promptly communicated to the appropriate personnel. The system is fully field-programmable through both the front-panel keypad and the mobile application, enabling quick configuration, maintenance, and remote management.

For enhanced system reliability, the FG-04 continuously supervises all field wiring, AC mains supply, and battery health. It also supports optional Ethernet and GSM communication modules, providing secure and reliable event transmission to remote monitoring stations.

When configured in a Master/Slave network, the Master Panel can display complete event and status information from all connected slave panels, providing centralized control and monitoring across multiple locations.


The FG-04 can also be seamlessly integrated with the HMS (Health Monitoring System), enabling centralized monitoring, real-time diagnostics, enhanced situational awareness, and efficient system management. This integration helps ensure continuous supervision of the fire alarm network while simplifying maintenance and improving overall operational reliability

With its intelligent features, flexible communication options, and scalable architecture, the FG-04 delivers a complete, reliable, and future-ready fire alarm solution for modern fire safety applications.

Chapter 1.1: Features:-

- Built-in Emergency Speech Dialer with 30 Numbers & 1/8 Message (Optional)
- Complete with Integral SMPS and battery charger for sealed lead acid battery
- Automatic changeover arrangement to standby supply,with battery charger with low battery indication
- Capability to interface external auto dialer (GSM/PSTN) for generating calls in case of faults.
- Supports upto 25 Detectors in each zone.
- Supports universal for CMS compatible (Protocol SIA / Contact-ID).
- Supports Mobile Application
- Built-in panel buzzer with smart features
- Built-in mains/Battery voltage and current meter
- Lamp test, silence / acknowledgment features.
- Tactile keypad with password protection
- NO/NC contacts for both fire, fault and supervisory
- Event log up to 1000
- IP-50 rating enclosure
- 2/4/8 zone options
- LCD and LED indications for Open, Short, Isolate, Fire in each zone
- Fault/Failure indication such as MAINS FAIL, Battery fail etc
- Automatic ‘smart’ zone isolating along with hard isolation through toggles for ease of use
- Double knocking & cross zoning facility
- Inbuilt RS-485 communication capability
- Supports up to 10 repeater panels
- Zone wise relay output for sounder [**Optional**]
- Auto Isolation of defective zone
- ERTL, CE & FCC Certified
- **Features may vary depending on the variant.**

MAKE IN INDIA

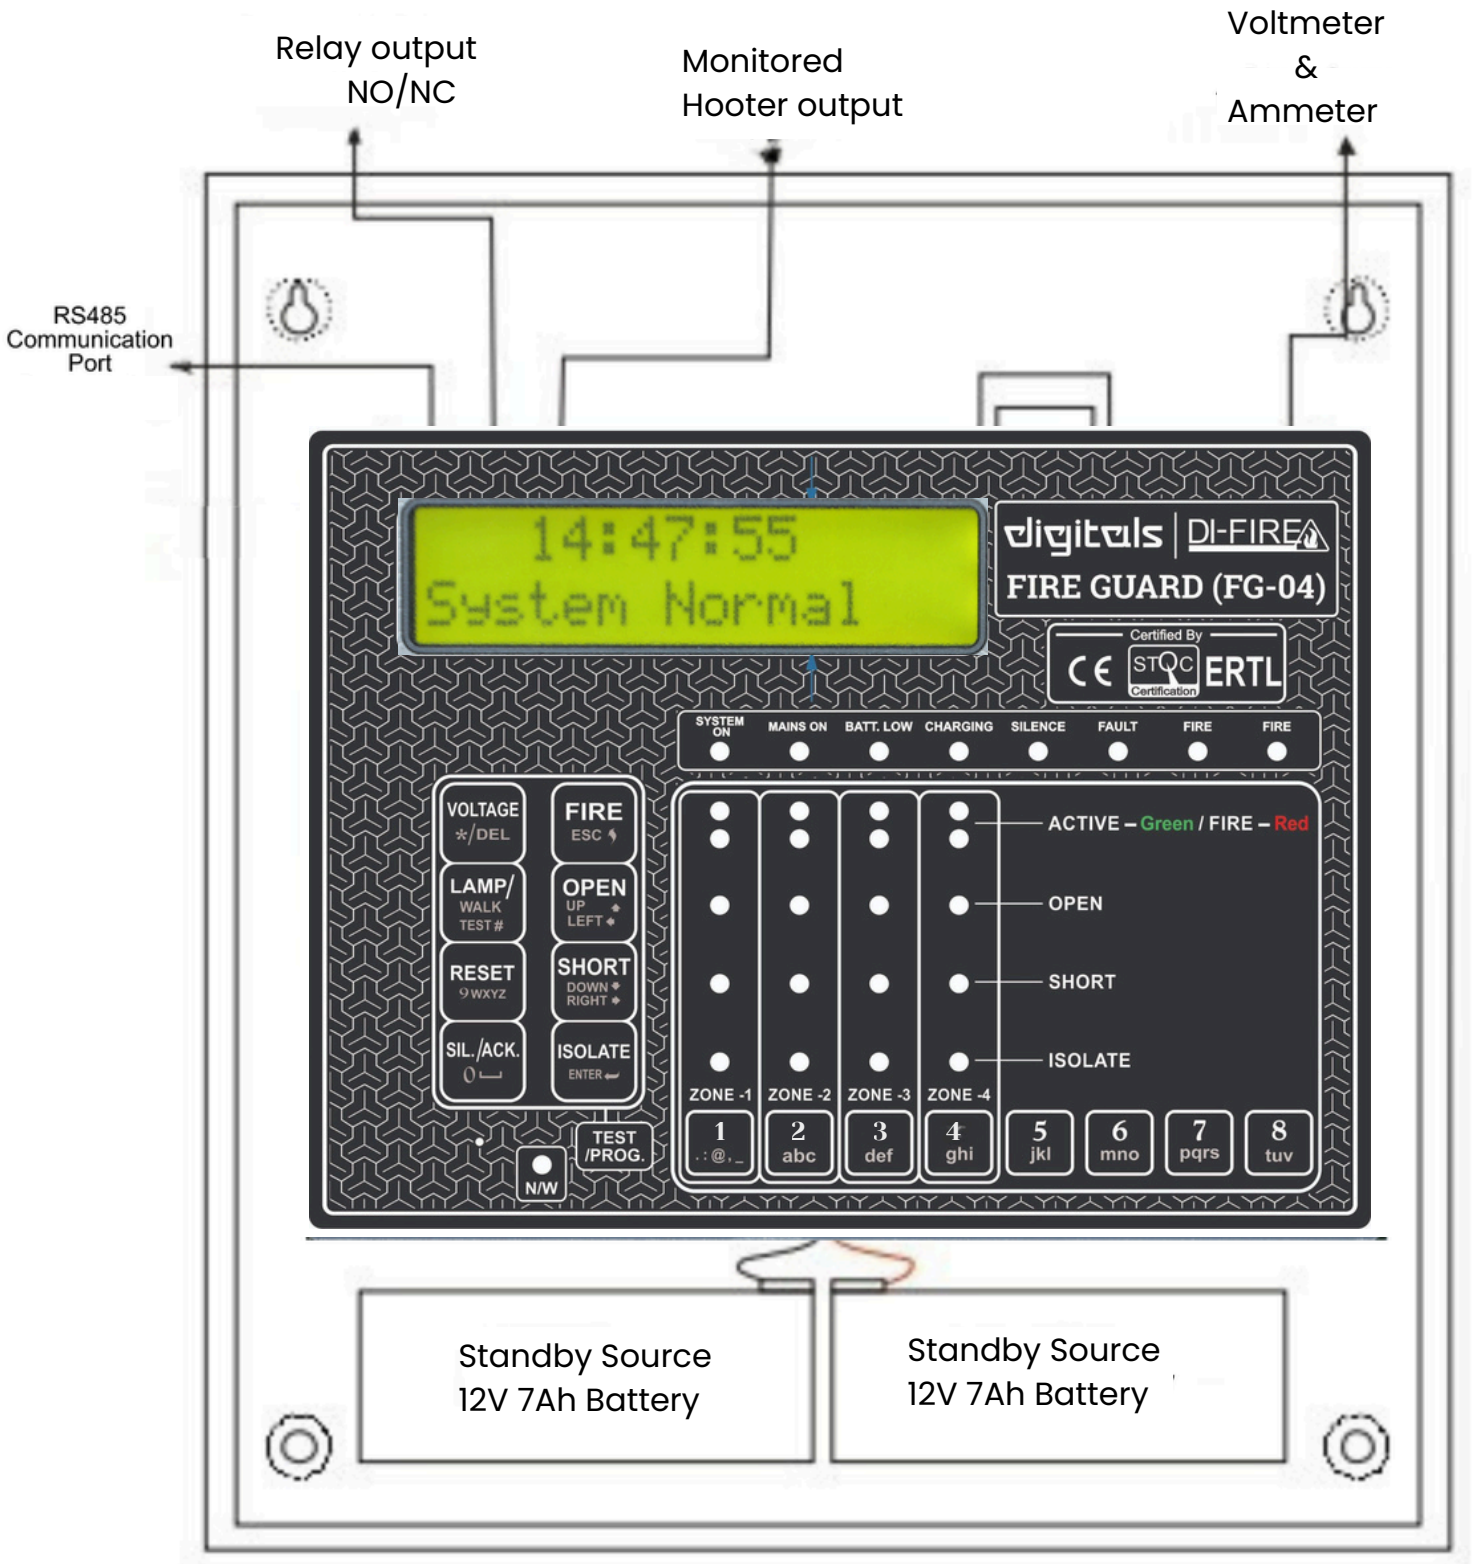

MAKE IN INDIA

Chapter 1.2: System Terminology and Definitions:-

System	The FG-04 is referred to as a system in the entire manual.
SIM Card(Subscriber's Identity Module)	The chip inserted in the phone is known as a SIM card.
Input/Output Connectors	In respect to the Communicator Input/Output Terminals.
GSM Antina	GSM Antenna For GSM Single
RS485	The (RS) Recommended Standard 485 are the standard interfacing (Connection) standards which are followed around the world.
Dual Color LED (Light Emitting Diode)	Small lights present on the front panel of the system are called LEDs. ToShow The Status Of Inputs.

Chapter 1.3: Hardware Specifications:-


Power Input	24V DC
Backup Power	24 volts DC (2X12 volt DC) SMF Battery
Stand by current	~100mA
Inputs Zones	2/4/8 wired Inputs with Expansion
Output	2 Relay Output with Expansion
Working environment	Temperature -10 - +55°C
GSM	2G/3G/4G/5G
EOL Resistance	4.7K Ohms
Charging Voltage	28 V (DC)

MAKE IN INDIA

Chapter 1.4: LED Status Indications:-

Lamp light name	Description
SYSTEM ON	Indicates the fire alarm panel is powered and operating normally (**Green LED**).
MAINS ON	Shows that the AC mains supply to the panel is present (**Green LED**).
N/W	Network status indicator; fast blink = weak/unstable network, slow blink = normal network (**Green LED**).
BATT. LOW	Illuminates when the standby battery voltage is low or battery is faulty (**Amber Led**).
CHARGING	Indicates that the panel is charging the standby batteries (**Green LED**).
SILENCE	Lights when alarms / buzzers have been silenced but conditions still exist (**Blue LED**).
FAULT	Comes on when any system fault is present (wiring, supply, battery, etc.) (**Amber Led**).
FIRE (per zone row)	**Green LED:** Indicates the zone is active. **Red LED:** Indicates a fire alarm in the corresponding zone.
OPEN (per zone row)	Indicates an open-circuit fault in the wiring of the corresponding zone (**Amber Led**).
SHORT (per zone row)	Indicates a short-circuit fault in the wiring of the corresponding zone (**Amber Led**).
ISO (per zone row)	Shows that the corresponding zone is isolated and will not give fire output (**Blue LED**).

Chapter 1.5: Control and Indications:-

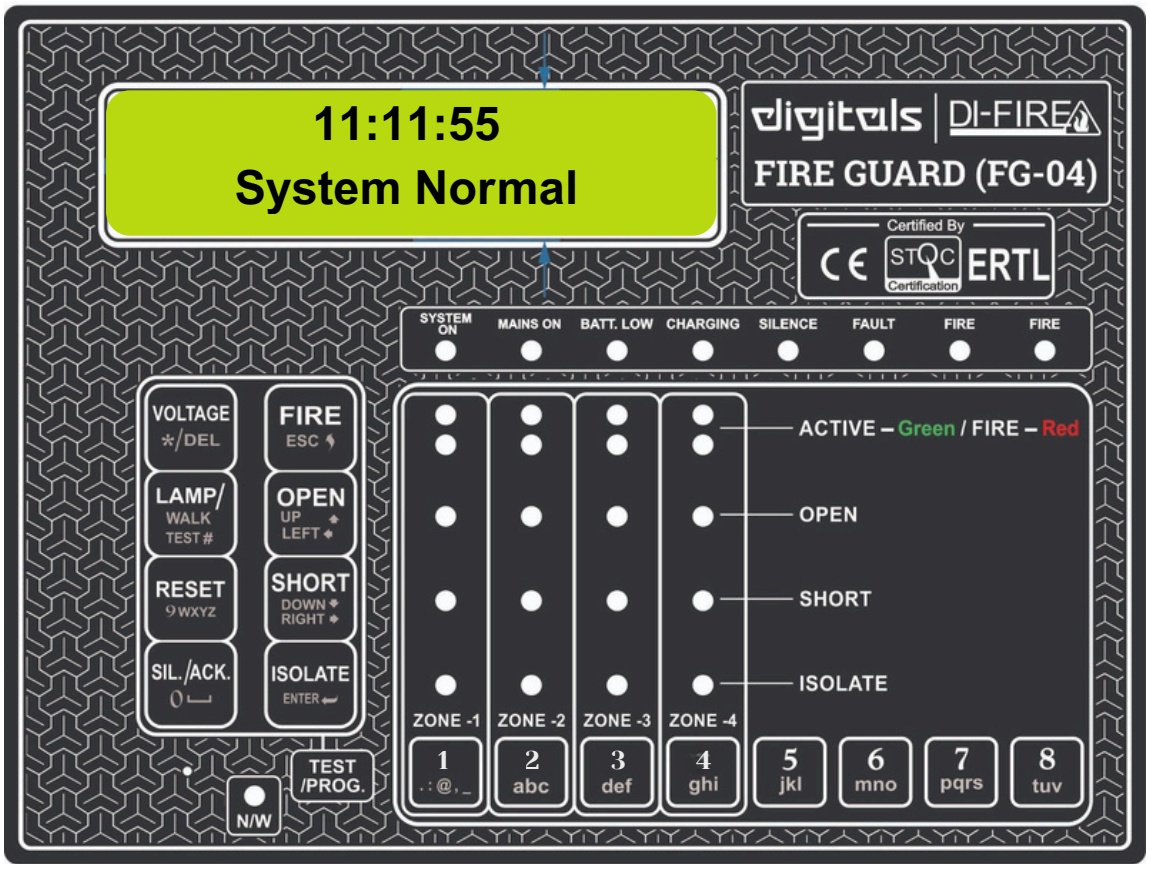

VOLTAGE / * / DEL	View system voltages on the display; used as delete key in programming.
FIRE / ESC	Escape from a menu or step; used to return to normal fire display screen.
LAMP /Walk TEST / #	Turn on all LEDs briefly to verify indications./ Walk Test is used to test the connected sensors.
OPEN UP / LEFT	Scroll up or move the cursor left in menus; view previous events.
RESET / 9/ WXYZ	Resets the panel after a fire/FAULT once conditions are normal.
SHORT DOWN / RIGHT	Scroll down or move the cursor right in menus; view next events.
SIL. / ACK. / 0	Silence audible sounders/buzzers and acknowledge current alarms or faults.
ISOLATE / ENTER	Isolates or de-isolates selected zones; acts as ENTER for confirming selections.
1/ @	Numeric key 1; used for entering numbers and symbol “@” during programming.
ALPHANUMERIC KEYS:	These keys are used for entering the names etc. and numbers.

Chapter 1.6: System Components Overview :-

- **Keypad :** The keypad provided on the front panel is a 4*4 (16 keys) and multi function in operation. The various characters which can be typed using the keypad are printed under each key.

- **GSM Antenna:** The GSM antenna is provided for the proper reception of GSM range.


- **Metal Box:** The system is enclosed in a metal box which prevents the system from external noises and also provides mechanical strength to the module. The box is perforated at the back (for wirings and mounting holes) and on the top(for installing antennae).

- The LCD display on the front panel is 16*2 line display which has the following functions:

LCD DISPLAY

Chapter 1.6.1: Normal Mode :-

- The LCD automatically switches every 4 seconds between the system status, date/time, and battery information.

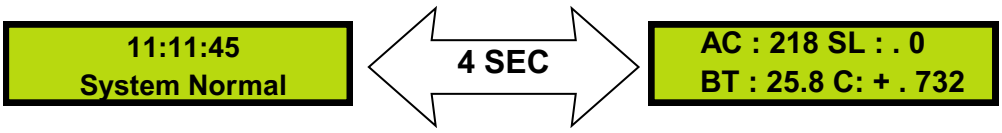

- Under alarm conditions in addition to time it also displays the status of the alarmed zones



Chapter 1.6.2: Two way of Programming Mode :-

The panel can be configured using either of the following methods:

- On-Board Keypad
- Mobile App / DI-HMS / CMS

Chapter 1.6.3: On-Board Keypad Programming :-


The FG-04 supports complete system programming through the built-in keypad. Users can configure panel settings, system parameters, and other options directly from the panel. During programming, the LCD screen displays the selected menu, configuration options, and status in real time, ensuring simple navigation and user-friendly operation.

Chapter 1.6.4: Mobile App & Command Center Configuration:-

The FG-04 also supports remote programming and configuration through the Mobile Application and Command Center. Users can conveniently configure panel settings, manage system parameters, and perform remote programming without accessing the panel directly, providing greater flexibility and ease of maintenance.

Chapter 2: Installation

Chapter 2.1: Installation Precaution :-

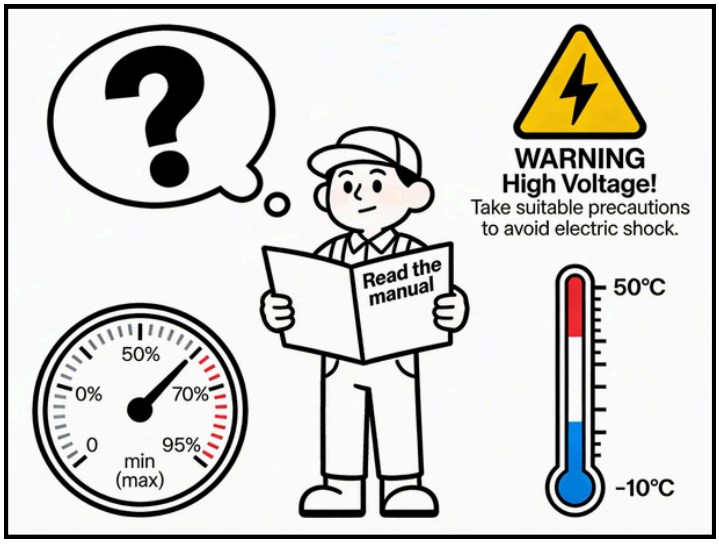

WARNING- Several different sources of power can be connected to the fire alarm control panel. Disconnect all sources of power before servicing. Control units and associated equipment may be damaged by removing and/or inserting cards, modules, or interconnecting cables while the unit is energized.

Do not attempt to install, service, or operate this unit this manual is read and understood.

- **CAUTION -** Do not ignore warnings - Adhere to all warnings on the unit and in the operating instructions.

1. **Accessories -** Use only manufacturer-recommended . Please do not use any other components other than manufacturer suggested materials.
2. **Precautions for the installation –** Do not place this device on an unstable stand or frame. It may fall and cause serious injury to persons and damage to the device.
3. **Service -** Do not try to service this unit yourself. Opening or removing covers may expose you to hazardous voltages or other hazards.
4. **Power sources -** Operate the system only from the label's power source form. If the sort of power supply to use is unclear, call your dealer.
5. **Replacement parts -** When replacement parts are required, service technicians must only use replacement parts provided by the supplier. Unauthorized substitutes can result in a burn, shock,or other hazards.
6. **Damage requiring service -** Disconnect the system from the Mains AC or DC power source and refer service personnel under the following conditions:

   a. When cord or connection control is affected.

   b. When the liquid spilled, or an item dropped into the system.

   c. If the system is not operating normally, under operating instructions.

Chapter 2.2: Fire System Installations :-


Proper installation is essential for reliable system performance and long-term operation. Ensure the system is installed by qualified personnel, follow all wiring and safety instructions, use compatible devices, verify proper grounding, and perform a complete system test before commissioning in accordance with applicable fire safety and electrical standards.

Chapter 2.3: Wiring Installation :-

The unit is designed for easy wiring installation. “Plug-in” terminal blocks are provided for all connections to the unit. Recommended 2 Core × 1.5 mm² Copper Fire-Resistant Armoured Cable for all field wiring requiring protection.

Chapter 2.3.1: 220V AC Power :-

Connect a 90–270V AC (50Hz) power supply to the P (Phase) and N (Neutral) terminals to ensure a stable input voltage.

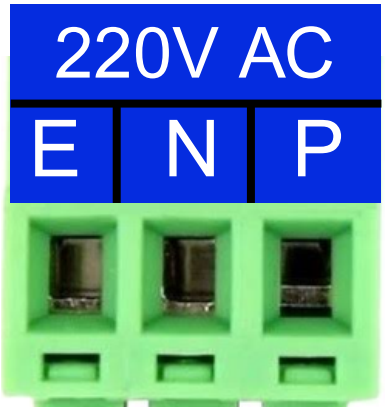




Connect the earth cable securely to the E (Earth) terminal to ensure proper grounding and reduce susceptibility to electrical interference and lightning effects.

Chapter 2.3.2: Relay Outputs :-

The FG-04 is equipped with two relay modules. These relays can be connect to activate based on specific system events, such as Fire, Fault, Supervisory, or other user-defined conditions. They provide dry-contact outputs for interfacing with external devices, including hooters, access control systems, elevators, and other third-party equipment.

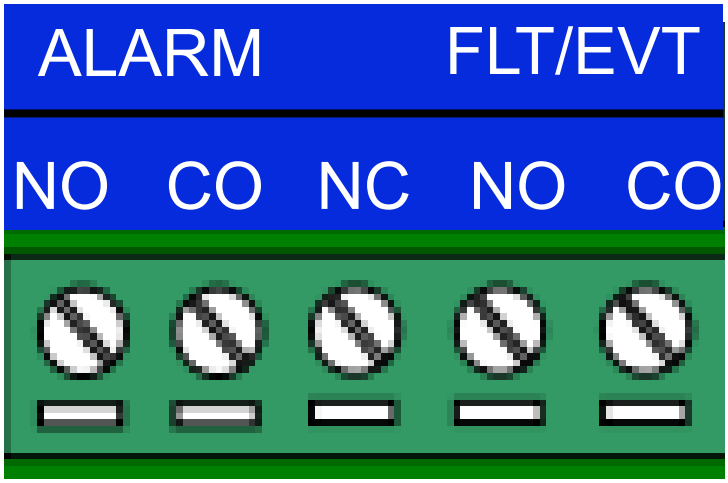


Chapter 2.3.3: Hooter Outputs :-

The FG-04 is equipped with two supervised hooter output circuits . These circuits are continuously monitored for open-circuit (wire cut) and short-circuit conditions. If a wiring fault is detected, the panel generates a fault indication, enabling quick identification and rectification of the problem while ensuring reliable alarm operation.




Chapter 2.3.4: RS485 Communications :-

The RS-485 communication port is used to connect the Ethernet Module and provides both communication and power to compatible accessories. It also supports Master–Slave panel communication, other RS-485 compatible devices, and a printer for event log printing and system monitoring.

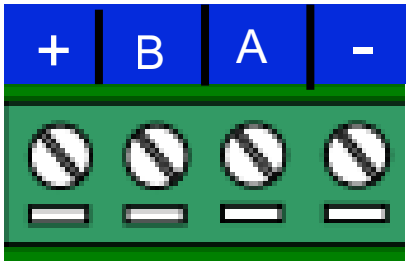


Chapter 2.3.5: Battery Connection :-

The panel operates using two 12 V rechargeable sealed lead-acid (SMF) batteries connected in series to provide a 24 V DC backup supply. The batteries automatically power the system during AC mains failure, ensuring uninterrupted operation.

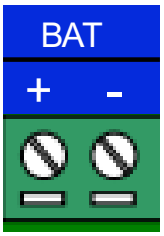


Chapter 2.3.6: Solar Connection :-

This port is used to connect the solar panel for charging the system batteries and providing auxiliary power.

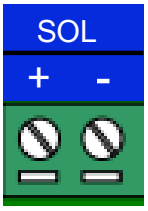

Chapter 2.3.7: Input Circuits :-

Available in 2, 4, and 8 Zone configurations. Each zone input circuit is continuously supervised for open-circuit, short-circuit and Fire conditions to ensure reliable system operation

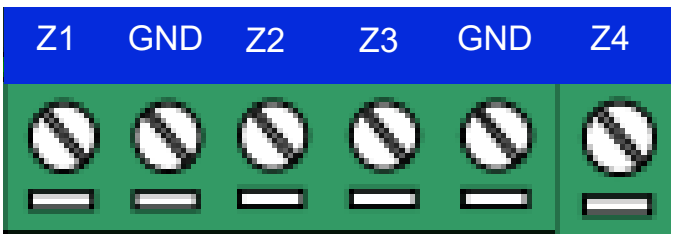

Chapter 3: Programming Instruction

Programming Mode allows the user to configure system parameters, user details, panel settings, and event log options. It is used for the complete configuration and customization of the fire alarm control panel.

Chapter 3.1: Programming Mode Access Code :-

To enter the programming mode, follow the sequence below:

Press:- ENTER → User ID (2 digit) → Passcode (4 digits) → *55 → ENTER

Example:-ENTER → 00 → 1234 → *55 → ENTER

(Here, 00 is the User ID and 1234 is the default password.)

Chapter 3.2: Configurable Parameters :-

Setting Name	Description
Baud Rate	This is the communication rate at which the module connects with the external device at the same communication rate. It can be set to either 9600 or 19200 bps(bits per second). By default it is set at 9600bps.
Protection Mode	It is related to the security type of the system. It can be of three (3) types: **A) Caller ID Only:** When the Caller ID is sufficient to access the system (Primarily used for remote operation). **B) Pass code Only:** Where the 4-digit pass code is sufficient to access the system. **C) Caller ID + Pass code:** Both the caller ID & the pass code is required to access the system.
Date/Time Set	Date & Time can be set using this option. With the help of the RTC along with non-volatile memory with a dedicated power source, this remains intact even when all of the power sources are removed.
Evacuate	The Evacuation function is used to activate connected external evacuation devices during a fire emergency. It can be configured in the following modes: **Manual** Press and hold the ESC key for 5 seconds, then enter a valid User ID and Password. The connected external device will be activated. **Auto** The connected external device is activated automatically 20 seconds after a fire alarm is detected. **Disable** The evacuation output remains disabled. If any sensor fault occurs, a Fault indication is generated; otherwise, the panel remains in Normal status.

Setting Name	Description
Dialer	**Dial Count** It is the number of times the system calls the authorized user, till the time the call is either rejected or received by the person. **Retry Count** It is the number of times the system calls the authorized user when the person does not give any response to the system's **The values can be set between 0 to 9.**
	Receiver Group:- **Call Group:-** If you want to get a Call alert of the fire alarm system on your mobile phone, then select the Call group. (Press 1 to 8 for each zones number) **SMS Group:-** If you want to get an SMS alert of the fire alarm system on your mobile phone, then select the SMS group. (Press 1 to 8 for each zones number) **Message Edit:-** The Message Edit function supports a total of 8 configurable messages. Each message can be created or modified as required and can contain up to 160 characters, including spaces. **PLAY Voice SMS**: Play the recorded voice messages. (Press 1 to 8 for each zone message). **RECORD Voice SMS**: Record the Voice Message (Press 1 to 8 for each zone message).
CMS(Central Monitoring System)	The CMS option is provided to feed the mobile number of the central monitoring system. CMS is basically a SMS based monitoring system to which the system sends messages regarding all events and triggers such as battery errors, alarm, reset, program etc.
Alarm Duration	The alarm will continue to sound until the panel is manually reset. Alarm duration configuration is optional
Zone Settings	We can configure the 2/4/8 zones & 8 wireless zones (optional) as per user's requirement **Property:-** The Zone Property can be configured in the following modes: **Single Trigger** The alarm is activated immediately when a fire signal is received from the zone. **Double Trigger** The alarm is activated only if the same zone is triggered twice within 5 seconds. A single trigger will not generate an alarm. **Disable** The selected zone remains disabled and will not respond to any alarm condition.

Setting Name	Description
	Cross Zone- The Cross Zone function links two selected zones. For example, if Zone 1 is linked with Zone 2, an alarm will be generated only when both Zone 1 and Zone 2 are triggered. If only one of the two zones is activated, no alarm will be generated. **Label-** (a maximum of eight characters): This option is used to assign a name to a zone. The ' # ' key is used to change the text format (displayed on top right of the LCD screen) while typing the name.
User Settings User (00 – 29):	In this option we can form a maximum of 30 users(0-29) who can operate with the module with different levels of access. The sub-options of each user(0-29) are : a.) **Name:** User name can be set here. b.) **Mobile Number**: Saved the Mobile-Number in this option. c.) **User Group**: We can set the user group of a user using this:- Options are: 1.) **Disable :** Selecting this will disable the user 2.) **Admin**: If we select the user group as admin then the user has full level of access 3.) **Installer:** If we select the user group as installer then the user can access only programming options. 4.) **Receiver Only**: If we select the user group as receiver then the user can not access. d.) **Receiver Group**: select the receiver group for fire sensors alert. e.) **Reset Pass code :** Default Settings(YES/NO): The option resets the pass code to the default pass code i.e. “1234”. f.) **RF Reset Learn:** Press the reset button so that the module remembers the remote's reset button.
Pass code Edit	This option provides the flexibility of changing the pass code for security purposes.
System Log	All the events (up to-2000) are recorded by the system which can be either seen on the LCD screen (display) or can be printed (print) using a thermal printer. **Print:-** Date: Set the date for which the system log is to be printed. **Display:-** Select this option to display the system log on the LCD screen of the system.
Default Settings(YES/NO)	Selecting the default setting resets the entire system properties to the default factory settings.
System Mode/Product ID:-	For use by manufacturers only.
Product address	For Slave and Master configuration.

Chapter 3.3: Remote Programming through sms:-

Program code	Program Tag	Program Code	Format	Default Value
0	SYS	0-1(system mode) 0 (normal mode) 1(debug mode)	SYS <system mode>	1
1	PID	Product ID	PID < product id>	XXXXXXXXXXXXXXXX
2	BAUD	0-1(baud rate) 0 (9600bps) 1(19200 bps)	BAUD <baud rate>	0
3	MODE	0-2(protection mode) 0 (Caller id) 1(passcode) 2(phone Id & passcode)	MODE <protection mode>	2
4	PASS	New 4 digit numeric passcode	PASS <new 4 digit numeric passcode>	1234
6	RETRY	0-9 (dial count) 0-9 (retry count)	RETRY <dial count (0-9)> , <retry count (0-9)>	25
8	TIME	dd/mm/yy(date) hh:mm:ss(time) 1-7(day(sun – sat))	TIME <yy/mm/dd>,<hh:mm:ss >, <day>	Current time
9	CMS	XXXXXXXXXX(ten digit phone number)	CMS<phone number>	XXXXXXXXXX
10	LABEL	00-07(wired zone number) 08-15(wireless zone number) XXXXXXXX(eight character zone name)	LABEL<zone number>,<zone name>	zone number(00-07),zone or rf zone alarm (08-15).

Program code	Program Tag	Program Code	Format	Default Value
11	ZONE	0-2(wired zone mode) 0 - Disable 1 - Single Trigger 2 - Double Trigger Wired Cross Zone Zone wise (1-8) 0-2(wireless zone modes) 0 - Disable 1 - Single Trigger 2 - Double Trigger RF Criss Zone Zone wise (1-8)	ZONE <8 wired zones mode> <8 cross zones mode> <8 RF zones> <8 wireless cross zones>	11111111,12345678, 11111111,12345678
12	MSG	0-8(zone number) XXXX(message up to 100 characters)	MSG<zone no.>, <message up to 100 characters>	Sensor 1 Alarm (wired zones) RF Zone 1 alarm (wireless)
13	GROUP	0-5(group number) XXXXXXXXXX (8 wired zones) XXXXXXXXXX (8 wired zones) X(power) Note: X=0(disable) X=1(enable)	CGROUP<group no.> <8 wired zones> <8 rf zones> <power><fault> SGROUP<group no.> <8 wired zones> <8 rf zones> <power><fault>	N.A.
15	USER	00-29(user number) XXX(name) XXX(phone number) 0-4 (user group) (Disabled, Admin, Installer, Receiver Only) 0-5(sms receiver group)	USER <user number (00-29)> <name(16 char max)> <phone no.> <user group(0- 4)> <sms receiver group(0- 5)>	N.A.

Program code	Program Tag	Program Code	Format	Default Value
19	TEST	Program code or tag of any setting which is to be tested.	TEST<prog code> <user/zone message>	N.A.
20	STATUS	N.A.	STATUS	N.A.
21	RESET	N.A.	RESET	N.A.
22	DEFAULT	N.A.	DEFAULT	N.A.
24	REPLOG	dd.mm.yy(date)	REPLOG<date(dd.mm.yy)>	N.A.
25	PRNLOG	dd.mm.yy(date)	PRNLOG<date(dd.mm.yy)>	N.A.

Chapter 3.4: Shortcut Keys :-

Hot Key	Function
0	Silence the panel during an alarm.
1	Display the last alarm information.
2	Display the battery voltage.
3	Display the GSM signal strength.
4	Display the current date and time.
5	Display the CMS connection status.
6	Display the software build date.
7	Display the panel address (Master/Slave).
8	Display the dialed number.
9	Reset the alarm.
*	Display the battery voltage / AC supply voltage.
FIRE + Zone	Perform a zone fire test.
SHORT + Zone	Perform a zone short-circuit test.
OPEN + Zone	Perform a zone open-circuit test.
ISOLATE + Zone	Perform a zone isolation test(For Deisolate same process).
LAMP TEST	Perform an LED/Lamp test.
WALK TEST	Press and hold for 5 seconds to activate Walk Test Mode.
ESC	Press and hold for 5 seconds to activate Evacuation Mode.

Note:

- Walk Test Mode is automatically disabled if no sensor activity is detected for 10 minutes. The panel then returns to Normal Mode.



digitals™ Electronic Security Solutions 46 YEARS

Digitals India Security Products Pvt. Ltd.

+91 120 4202273 | 4275850 | 9212787332

Address: C-22, Sector-63, Noida-201301, U.P, INDIA

digitals™ Electronic Security Solutions

DI-CQUR

Guard NG-IP

New Generation Integrated Wired / Wireless Security Alarm System with IP technology

- be future ready !

IP Based

GeM Government e Marketplace
PRODUCT AVAILABLE ON



Alarming through Input Devices
- Wired / Wireless Smoke Sensor, RF Panic Switch can activate the Alarm System.

DVR Event Alarming
- Camera Masking / Video Loss can also activate alarm system.

Inbuilt Guard Monitoring
- Ensures the Security Guard presence and alertness.
- Checks on issues like guard pooling.
- Guard have to press the wireless push button at defined intervals.
- The missed intervals are recorded.

Report generation
- Log Event Report can be checked on . . .
  - Display Screen
  - CMS Software
  - Thermal Printer

Automates Devices
- One or more of the Electronic device can be automated anytime.
  - Lights
  - Signboards
  - Air conditioners

Easy & Hassle Free installation
- Can be fixed in your existing IT infra-structure.
- In-built 4amp SMPS able to accept "UNIVERSAL VOLTAGE" range 90 to 270 VAC.

Green Energy
- Inbuilt Solar charger for dual power input specially for rural areas.



The alarm will be activate in following conditions . . .



If the ATM is moved | If the ATM is tilted | If the ATM is pried into | If the ATM is cut into with a torch, saw, grinder or axe | On detection of fire | Mild bumps won't activate

ALL SENSORS ARE EXTERNAL POSING NO RISK ON ATM DATA

digitals™
Electronic Security Solutions

AI assisted DIGITAL SUPERVISOR

Fire , Security and CCTV in one solution

Your Always-On Partner in Fire Alarm, Security System and CCTV Upkeep.





WHY CHOOSE US?

- Experience of 44+ years
- OEM of electronic security products
- Comprehensive 24/7 Support





Contact Us +91 93558 30974

Website www.digitalsindia.com/CMS.html

Email cms@digitalsindia.com

digitals™
Electronic Security Solutions

Thank you !

We're grateful to have you as a customer.



Enjoy your experience

OUR PRODUCTS:

- INTRUSION ALARMS
- FIRE ALARMS
- IP SURVEILLANCE
- SMART AUTO DIALERS
- METAL DETECTORS
- ELECTRONIC TIME LOCK
- ACCESS CONTROL SYSTEMS
- DEVICE HEALTH MONITORING
- DOOR & SHUTTER GUARD
- CENTRAL MONITORING SERVICE

Ready to Get Started?

Visit Us
www.digitalsindia.com