



for Laser Systems

Maintenance instructions

English

Type

P87.0634-054-A10

Copyright

Passing on as well as duplication of this documentation, evaluation and communication of its content are prohibited without specific authorization. Contraventions are subject to damages. All rights reserved.

Decisive for the technical contents is the language version of the manufacturer (DE/EN).

Original operating instructions

© by Blum-Novotest GmbH

1. Keys



WARNING!

signifies a danger with medium risk, which may cause heavy injuries, if it is not avoided.

2. Maintenance

The adjustments of the pressure reducer and the throttle should not be modified. They have to comply with the indications in chap. "pneumatic connection" in the operating instructions LaserControl, or with specifications of the machine manufacturer.



WARNING!

Pressure air can cause severe injuries.

- Before effecting any mounting or service at the laser system and the pneumatic unit, turn off the air supply. The display of the manometer at the pneumatic unit must be 0 bar / 0 MPa.



Order number filter set: P87.0634-051.110

1. Close the stop valve (56). The display of the manometer (64) of the pneumatic unit must be 0 bar/0 MPa.
2. Check the activated carbon filter (54) for contamination: All filters have to be exchanged, if the colour of the index ring (53) has turned to blue.
3. In case of strong contamination inside the filter cover (51) the pipes to the laser system have to be exchanged or cleaned. Furthermore the pneumatic unit must be exchanged or completely dismantled and carefully cleaned by an expert:
 - a) Turn-off the cover (51) counter-clockwise and clean it. Replace the activated carbon filter (54); observe the correct fit of the O-ring during mounting (55). Screw-on the cover (51) again; observe the correct fit of the O-ring (52).
 - b) Turn-off the container (62) counter-clockwise and clean it. Turn-off the fine filter (60) and the knurled nut (58) of the pre-filter (57) and replace both filters. Observe the correct fit of the O-ring (59) during mounting of the fine filter (59).
 - c) Screw-on the container (62) again; observe the correct fit of the O-ring (61). Screw-off the container (62) to align the inspection glass (65) by 0.5 - 1 revolutions.
4. Open the stop valve (56) and check the functions of the laser system.

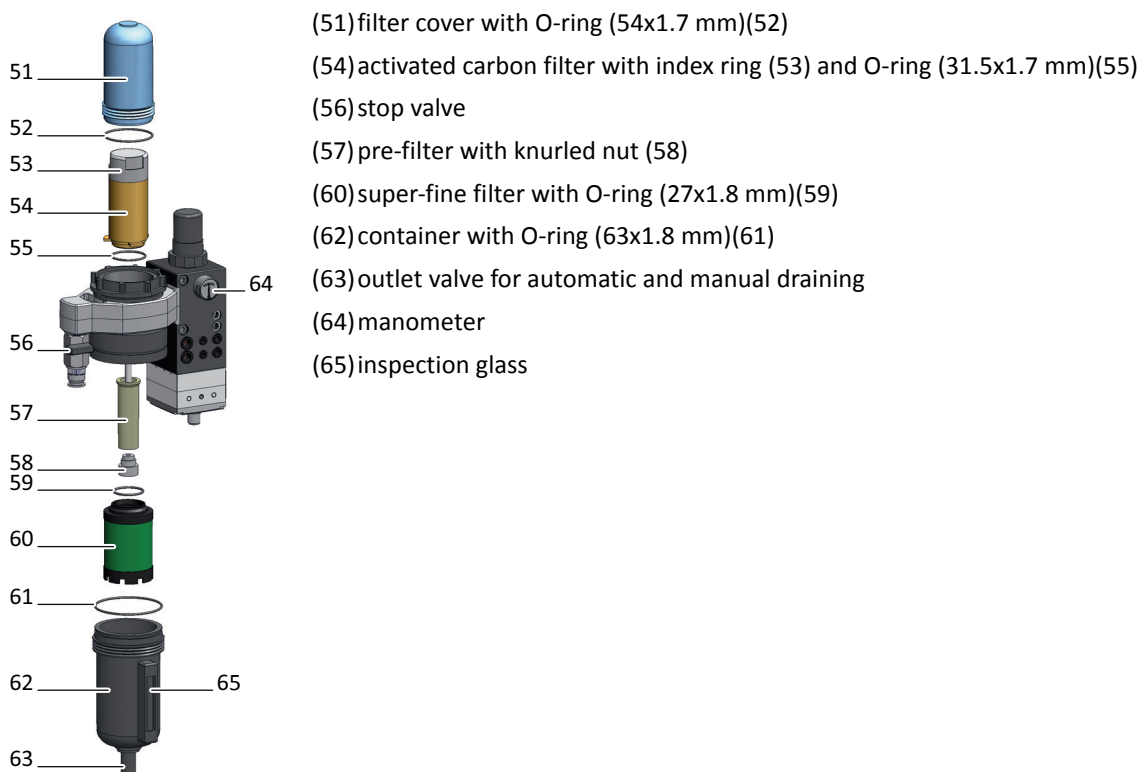


Fig. 2-1

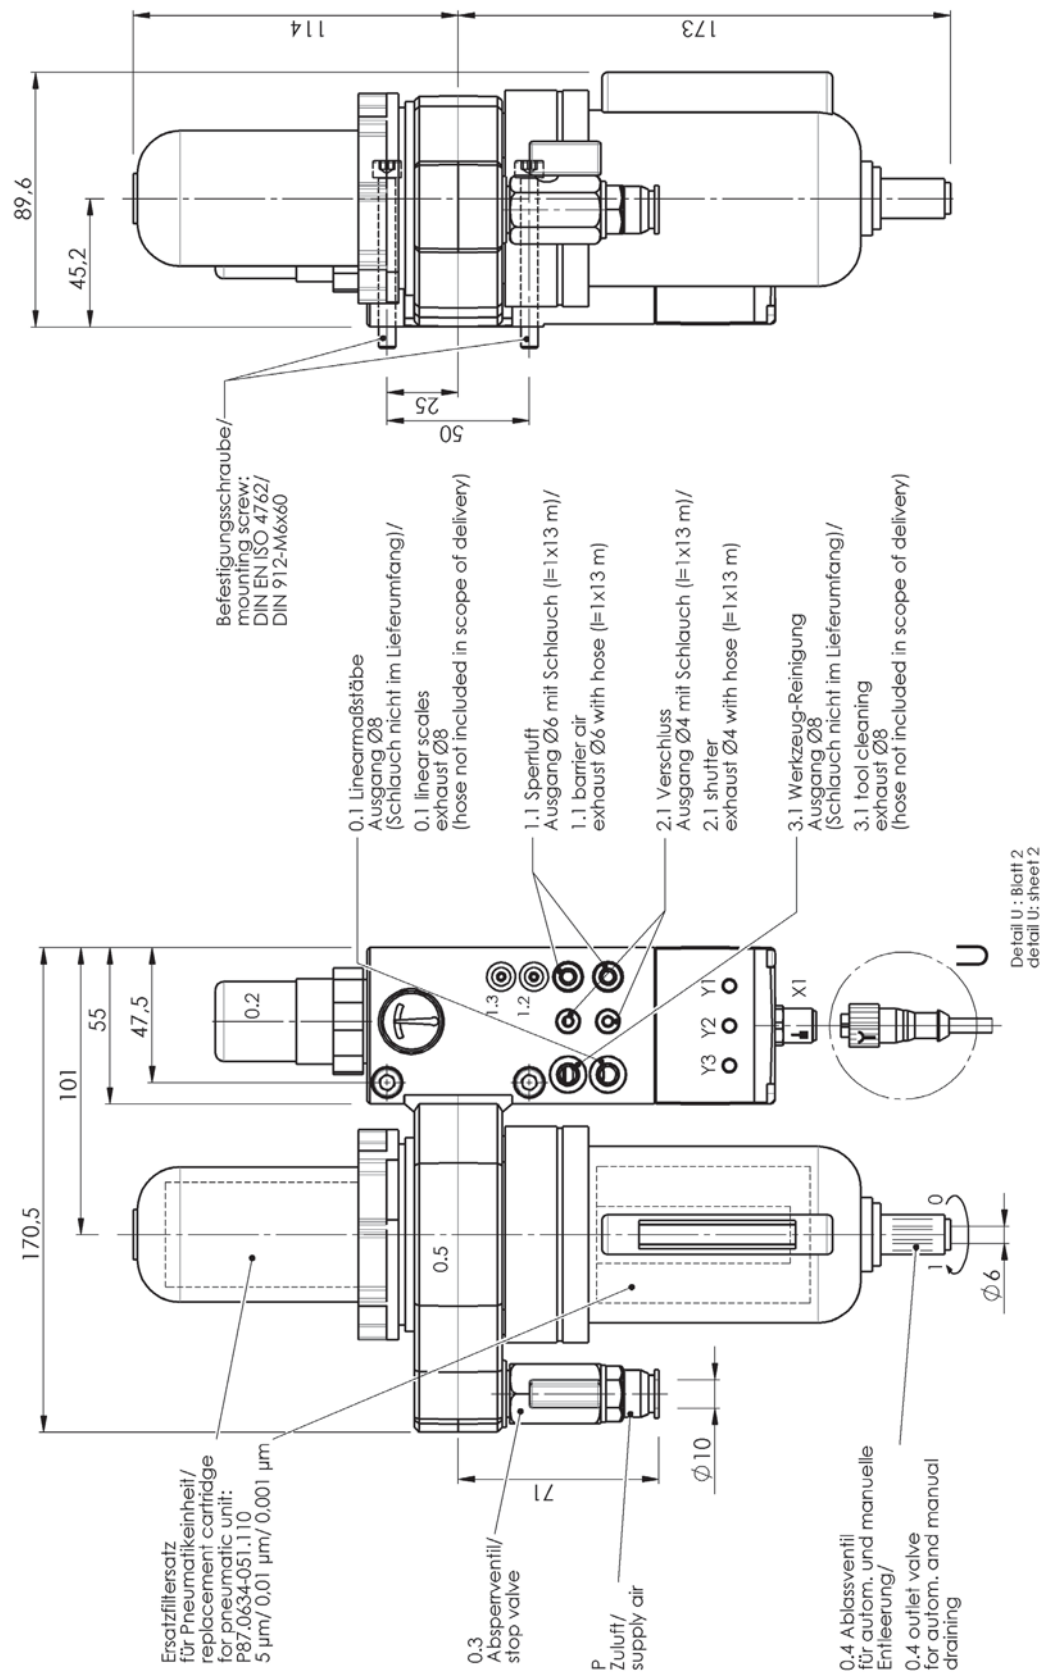


Fig. 2-2

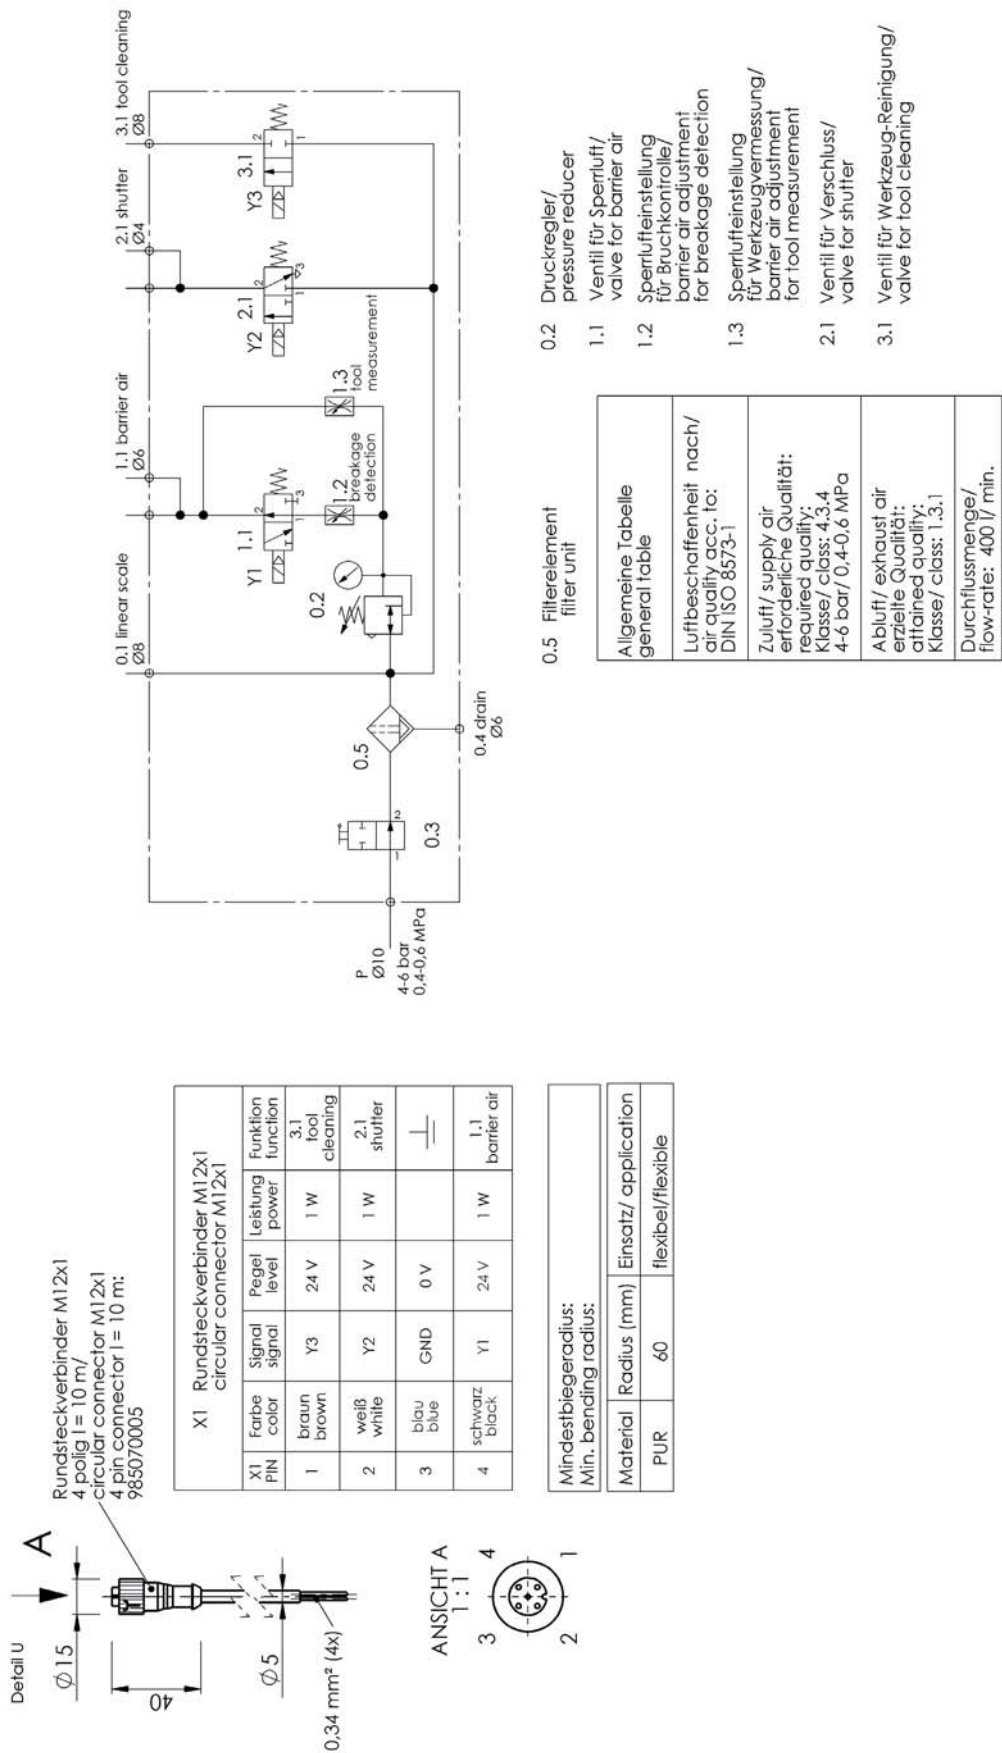


Fig. 2-3

3. Service



focus on productivity

Blum-Novotest GmbH
Kaufstr. 14
88287 Gruenkrut, Germany
Tel.: +49 751 6008-0
Fax: +49 751 6008-156
www.blum-novotest.com
Sales: vk@blum-novotest.com
Service: snc@blum-novotest.com

Hotline:

Sales:	Tel.: +49 751 6008-200
Service LaserControl:	Tel.: +49 751 6008-202
Service probes:	Tel.: +49 751 6008-203

Worldwide:

Blum-Novotest GmbH Test Eng. Division
Willich, Germany
Tel. +49 2154 921970

Blum-Novotest Srl
Como, Italy
Tel. +39 031 283 955

Blum-Novotest Ltd.
Birmingham, England
Tel. +44 1543 257111

Blum-Novotest Sarl
Bordeaux, France
Tel. +33 55702 0135

Blum-Novotest s.r.o.
Kroměříž, Czech Republic
Tel. +420 573 330373

Blum Laser Measuring Technology Inc.
Cincinnati, USA
Tel. +1 859 3446789

Blum-Novotest Sistemas de Medição Ltda,
São Paulo, Brazil
Tel. +55 19 41413458

KK Blum Laser Measuring Technology
Nagoya, Japan
Tel. +81 568 74-5311

Blum-Novotest
Shanghai, China
Tel. +86 21 52080480

Blum Production Metrology Co., Ltd.
Taichung, Taiwan
Tel. +886 4 2358 3900

Blum Production Metrology Pte. Ltd.
Singapore, Singapore
Tel. +65 62720998

Blum-Novotest Ltd.
Seoul, Republic of Korea
Tel. +82 2 2026-1300

Blum-Novotest Measuring & Testing Technology Pvt Ltd,
Bangalore, India
+91 80 23185468

