Nav2's default file

```
controller_server:
  ros__parameters:
    controller_frequency:  20.0
    FollowPath:
      vx_max:  0.5
```

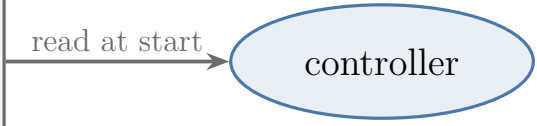

forward speed at most 0.5 m/s

our room robot's file

```
controller_server:
  ros__parameters:
    controller_frequency:  20.0
    FollowPath:
      vx_max:  0.6
```

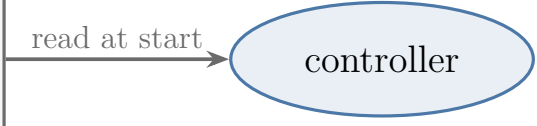

forward speed at most 0.6 m/s

the same program, two robots: only the file changes