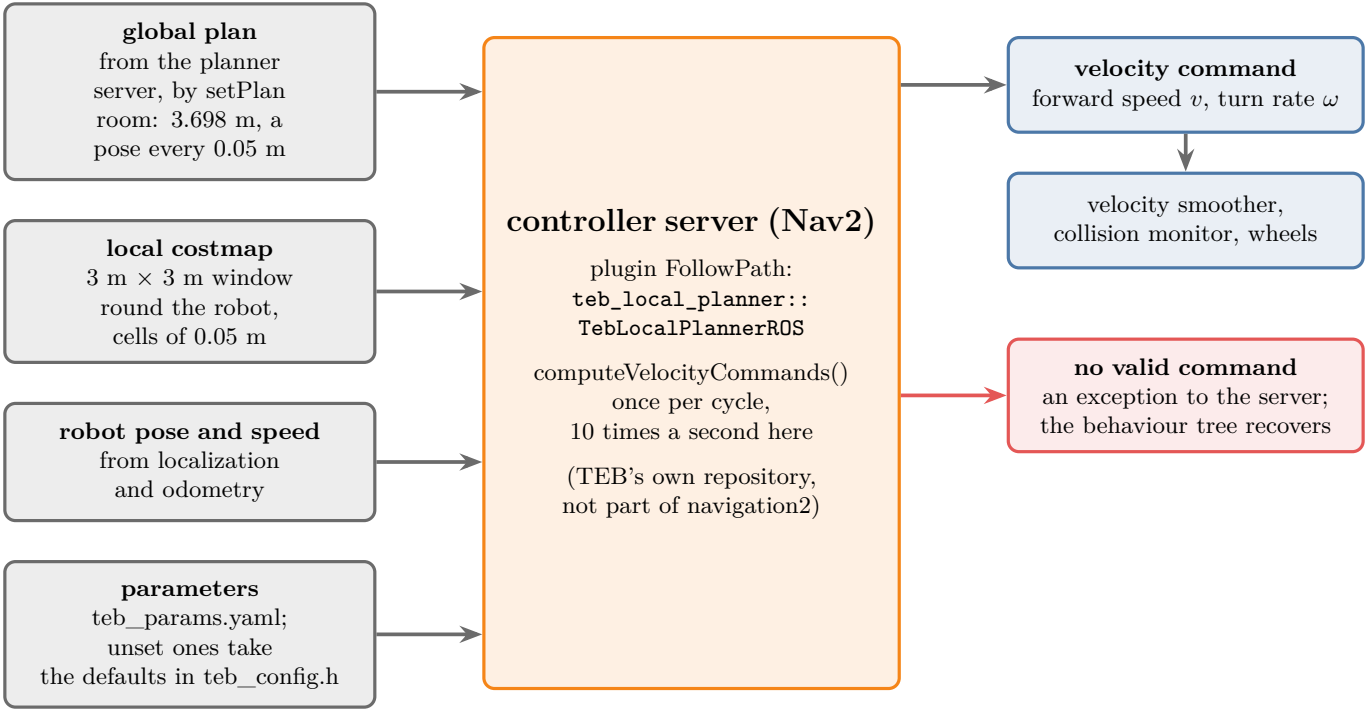

global plan
from the planner server, by setPlan
room: 3.698 m, a pose every 0.05 m
local costmap
3 m × 3 m window round the robot, cells of 0.05 m
robot pose and speed
from localization and odometry
parameters
teb_params.yaml; unset ones take the defaults in teb_config.h
controller server (Nav2)
plugin FollowPath:
teb_local_planner::TebLocalPlannerROS
computeVelocityCommands()
once per cycle,
10 times a second here
(TEB's own repository, not part of navigation2)
velocity command
forward speed v, turn rate ω
velocity smoother, collision monitor, wheels
no valid command
an exception to the server; the behaviour tree recovers