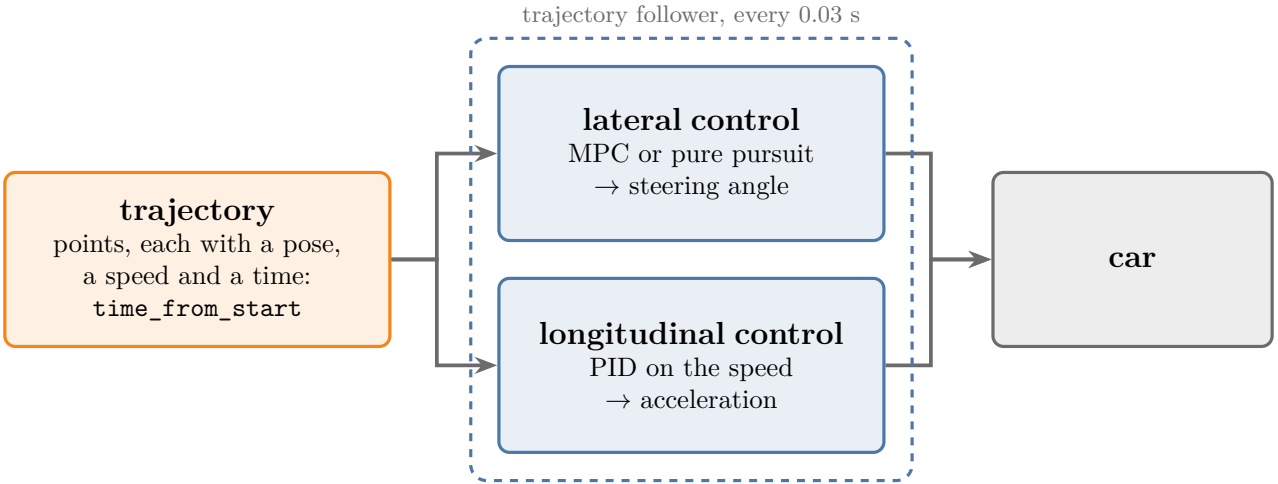


`trajectory_reference_mode`: `spatial` (the default) finds the robot's place on the trajectory by distance and works out the times from distance and speed; `temporal` uses each point's time as given, which is timed tracking