


Assembly Instructions

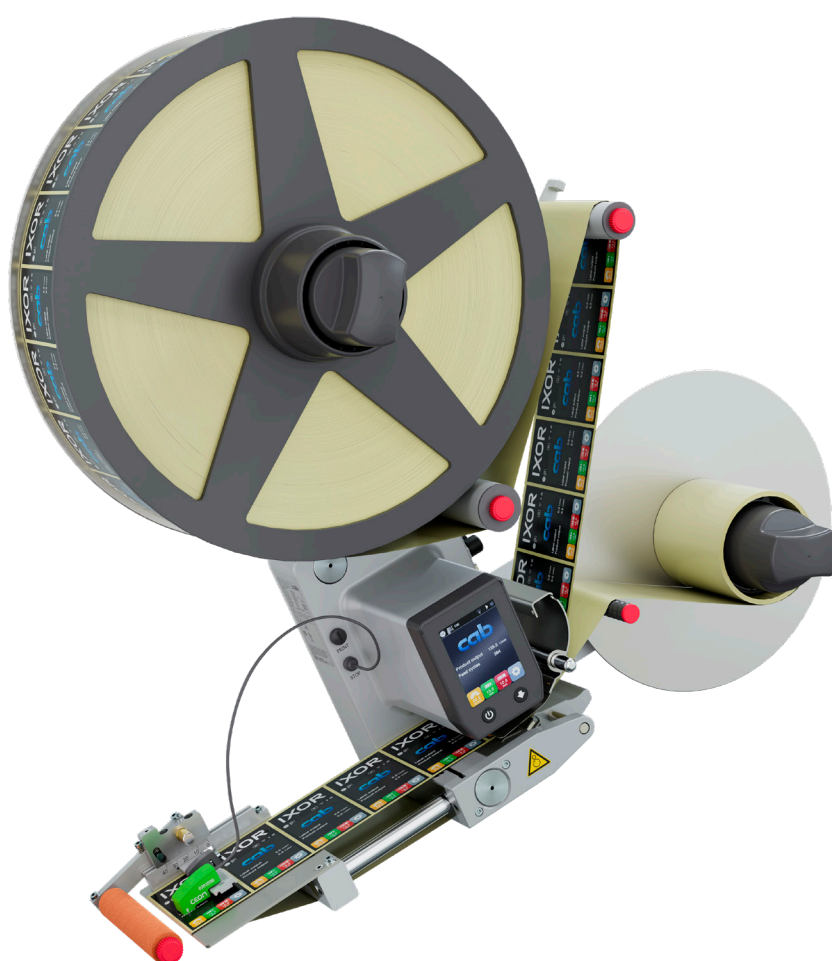

Label dispenser

IXOR+

Family	Type
Label dispenser IXOR+	62L
	124L
	186L
	62R
	124R
	186R

Edition: 04/2026 - Part No. 9004290.131

Copyright

This documentation as well as translation hereof are property of cab Produkttechnik GmbH & Co. KG.

The replication, conversion, duplication or divulgement of the whole manual or parts of it for other intentions than its original intended purpose demand the previous written authorization by cab.

Trademark

Microsoft® is a registered trademark of the Microsoft Corporation.

Windows 7® and Windows 8® are registered trademarks of the Microsoft Corporation.

TrueType™ is a registered trademark of Apple Computer, Inc.

Editor

Regarding questions or suggestions, please contact cab Produkttechnik GmbH & Co. KG, Germany.

Topicality

Due to the constant further development of our products, discrepancies between documentation and product may occur.

For the current edition, please see www.cab.de.

Terms and conditions

Deliveries and services are carried out according to the general sales conditions of cab.

Deutschland
cab Produkttechnik GmbH & Co KG
Karlsruhe
Tel. +49 721 6626 0
www.cab.de

USA
cab Technology, Inc.
Chelmsford, MA
Tel. +1 978 250 8321
www.cab.de/us

Taiwan
cab Technology Co., Ltd.
Taipeh
Tel. +886 (02) 8227 3966
www.cab.de/tw

Singapur
cab Singapore Pte. Ltd.
Singapur
Tel. +65 6931 9099
www.cab.de/en

Frankreich
cab Technologies S.à.r.l.
Niedermörsen
Tel. +33 388 722501
www.cab.de/fr

Mexiko
cab Technology, Inc.
Juárez
Tel. +52 656 682 4301
www.cab.de/es

China
cab (Shanghai) Trading Co., Ltd.
Shanghai
Tel. +86 (021) 6236 3161
www.cab.de/cn

Südafrika
cab Technology (Pty) Ltd.
Randburg
Tel. +27 11 886 3580
www.cab.de/za

Table of contents

1	Introduction	6
1.1	Instructions	6
1.2	Intended use	6
1.3	Safety instructions	7
1.4	General operation	7
1.5	Safety markings	8
1.6	Environment	8
2	Device overview	9
2.1	Label dispenser	9
2.2	Base unit	10
2.3	Unwinder	11
2.4	Rewinder	11
2.5	Demand unit (optional)	12
2.5.1	Demand modules	12
2.5.2	Mounting rods	13
2.5.3	Wipe-down roller (optional)	14
2.5.4	Wipe-down brush (optional)	14
2.5.5	CEON label sensor (optional)	14
2.5.6	Forked light barrier (optional)	15
2.5.7	Cross-section profile (optional)	15
2.6	Assembly assistance	15
2.6.1	Unit retainer	16
2.6.2	Tie rod	16
2.6.3	Column stand	17
2.6.4	Floor stand	17
3	Installation	18
3.1	Safety instructions for installation	18
3.2	Unpacking the device	18
3.3	Mounting the assembly accessories	19
3.4	Mounting the position indicator	20
3.5	Adjusting the stand	23
3.6	Adjusting the tie rod	23
3.7	Mounting the device	24
3.7.1	Mounting the device in a fixed position	24
3.7.2	Grundeinheit in variabler Position montieren (axial verschiebbar)	24
3.7.3	Mounting the device in a variable axis (axially finely adjustable)	25
3.8	Adjusting the device	25
3.9	Mounting the rewinder	26
3.10	Mounting the unwinder	28
3.11	Montagestange montieren	29
3.12	Mounting the demand module	29
3.13	Adjusting the SPE demand module	30
3.14	Adjusting the paper feed	30
3.15	Inserting the carriage	30
3.16	Mounting the wipe-down roller	31
3.17	Adjusting the wipe-down roller	32
3.18	Mounting wipe-down brush	32
3.19	Adjusting the wipe-down brush	33
3.20	Mounting sensors	33
3.20.1	Mounting the CEON label sensor	33
3.20.2	Adjusting the CEON label sensor	35
3.20.3	Mounting the forked light barrier to the demand unit	35
3.20.4	Adjusting the forked light barrier (demand unit)	36
3.20.5	Mounting fork light barrier on holder	37
3.20.6	Adjusting fork light barrier (holder)	38
3.21	Connection the device	39
3.21.1	Connecting to the power supply	39
3.21.2	Making further connections	39

4	Touchscreen display	41
4.1	Operating panel	41
4.2	Start screen	41
4.2.1	Status bar	41
4.2.2	Display of messages	42
4.2.3	Display of parameters quick access	42
4.2.4	Quick menu	43
4.3	Navigating the menu	44
4.4	Entering values	45
5	Operation	46
5.1	Safety during operation	46
5.2	Loading material	46
5.3	Andrucksystem auf Materialbreite einstellen	48
5.4	Gerät einschalten	48
5.5	Test and Synchronisation without external starting signal	48
5.6	Auto-teaching the sensors	49
5.7	Speed button	49
5.8	Start delay button	50
5.9	Stop delay button	50
6	Cleaning	51
6.1	Safety during cleaning	51
6.2	Cleaning the outer surface	51
6.3	Cleaning the touchscreen display	51
6.4	Cleaning the rewind guide roller	51
6.5	Cleaning the pinch roller	52
6.6	Cleaning the deflection rollers	52
6.7	Cleaning the guide plate	53
7	Error messages	54
7.1	Information	54
7.2	Warnings	55
7.3	Errors	55
8	Parameters	56
9	Interfaces	57
9.1	Overview	57
9.2	Interface specification	57
9.3	START	58
9.4	I/O	58
9.5	SYNC	59
9.6	APPLY	59
9.7	POWER	59
9.8	END / DIM	60
9.9	PRINT	60
9.10	STOP	60
9.11	RS232 - optional	61
9.12	RS485 IN - optional	61
9.13	RS485 OUT - optional	61
9.14	LAN Port 1 & Port 2- optional	61
10	External Connection - Examples	62
10.1	Start Sensor	62
10.2	Connection to a PLC	62
10.3	Controlling via PLC	63
10.4	Controlling via manual regulator	63
10.5	Connecting a Signal Light	64
10.6	CEON label sensor	64

11	Signal diagram I/O Interface.....	65
12	Technical data	66
13	Licenses.....	68
13.1	Declaration of Incorporation	68
13.2	EU Declaration of Conformity.....	69

1.1 Instructions

Important information and instructions in this documentation are indicated as follows:

**Danger!**

Draws attention to an exceptionally great, imminent danger to health or life due to dangerous electrical voltage.

**Danger!**

Draws attention to a danger with high risk that, if not avoided, will result in death or serious injury.

**Warning!**

Draws attention to a danger with medium risk that, if not avoided, may result in death or serious injury.

**Caution!**

Draws attention to a danger with low risk that, if not avoided, may result in minor or moderate injury.

**Attention!**

Draws attention to potential risk of property damage or loss of quality.

**Note!**

Advice on how to make work easier or an important step to be carried out.

**Environment!**

Tips for environmental protection.



Handling instructions



Reference to chapter, position, image number or document.



Option (accessories, peripherals, special equipment).

Time

Viewed in the display/monitor.

1.2 Intended use

- The device is designed for use in production lines and is intended exclusively for dispensing suitable materials approved by the manufacturer. Any other use or use going beyond this shall be regarded as improper use. The manufacturer/supplier shall not be liable for damage resulting from unauthorized use; the user shall bear the risk alone.
- The device is manufactured in accordance with the current technological standards and the recognized safety rules. However, danger to the life and limb of the user or third parties and/or damage to the device and other tangible assets can arise during use.
- The device may only be used for its intended purpose and if it is in perfect working order, and it must be used with regard to safety and dangers as stated in the operating manual.
- Usage for the intended purpose also includes complying with the manual, including the maintenance recommendations and instructions provided by the manufacturer.

**Note!**

All documentation is currently also available on the Internet at www.cab.de/en.

1.3 Safety instructions

**Danger!**

Danger to life and limb from power supply!

- Do not open the device casing.

**Warning!**

This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

- The device is configured for voltages of 100 to 240 V AC. It only has to be plugged into a grounded socket.
- Only connect the device to other devices which have a protective low voltage.
- Switch off all affected devices (computer, printer, accessories) before connecting or disconnecting.
- The device may only be used in a dry environment, do not expose it to moisture (sprays of water, mists, etc.).
- Do not use the device in an explosive atmosphere.
- Do not use the device close to high-voltage power lines.
- Ensure that people's clothing, hair, jewelry etc. do not come into contact with the exposed rotating parts.
- Perform only those actions described in this operating manual. Work going beyond this may only be performed by trained personnel or service technicians.
- Unauthorized interference with electronic modules or their software can cause malfunctions.
- Other unauthorized work on or modifications to the device can also endanger operational safety.
- Always have service work done in a qualified workshop, where the personnel have the technical knowledge and tools required to do the necessary work
- There are various warning stickers on the device. They draw your attention to dangers. Warning stickers must therefore not be removed, as then you and other people cannot be aware of dangers and may be injured.
- The maximum sound pressure level LpA is less than 70 dB(A).

1.4 General operation

**Warning!**

Rotating parts! Be aware that clothes, hair, jewelry or the like does not come in contact with the rotating parts.

**Caution!**

Danger of being cut by fast moving paper. Do not reach into the area where the paper is being guided while the device is active!

**Attention!**

To prevent the material from falling, the installation position with the display facing downwards is not permitted.

- The device should only be used if locally secured and indoors.
- Due to high mechanical strain through the rapid movement of large weights the device and all of its components must be securely mounted on a stable mounting.

1.5 Safety markings



Attention!

Do not remove, cover or otherwise make the safety instructions unrecognisable!

Replace if damaged!

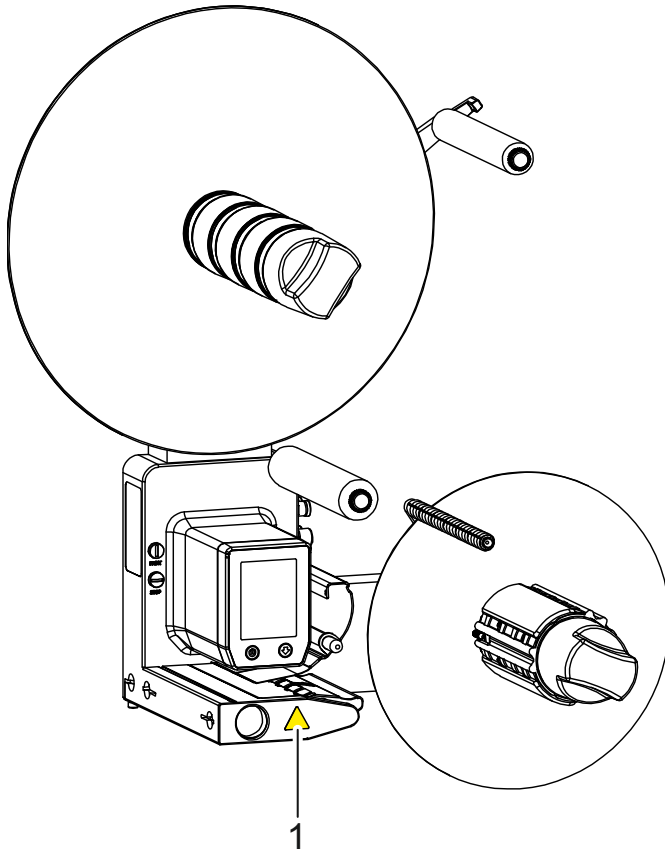


Figure 1 Safety marking



1

Warning of risk of injury from rotating parts

1.6 Environment



Obsolete devices contain valuable recyclable materials that should be sent for recycling.

► Send to suitable collection points, separately from residual waste.

The modular construction of the applicator enables it to be easily disassembled into its component parts.

► Send the parts for recycling.

2.1 Label dispenser

**Note!**

The device is described in the following using the left-hand version as an example.

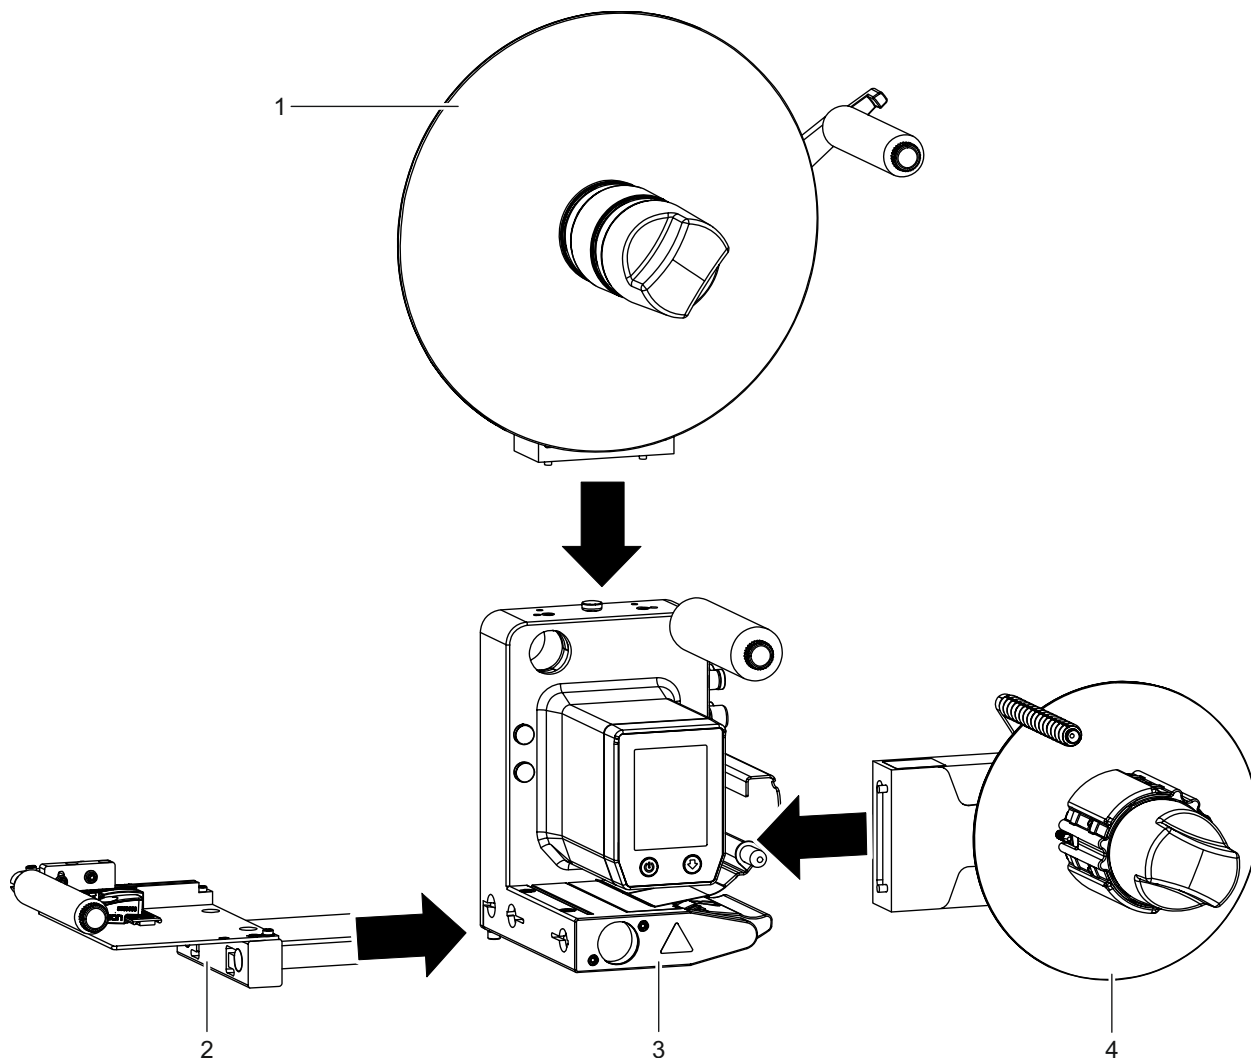


Figure 2 Overview label dispenser

1 Unwinder

2 Demand unit, example

3 Base unit

4 Rewinder

2.2 Base unit

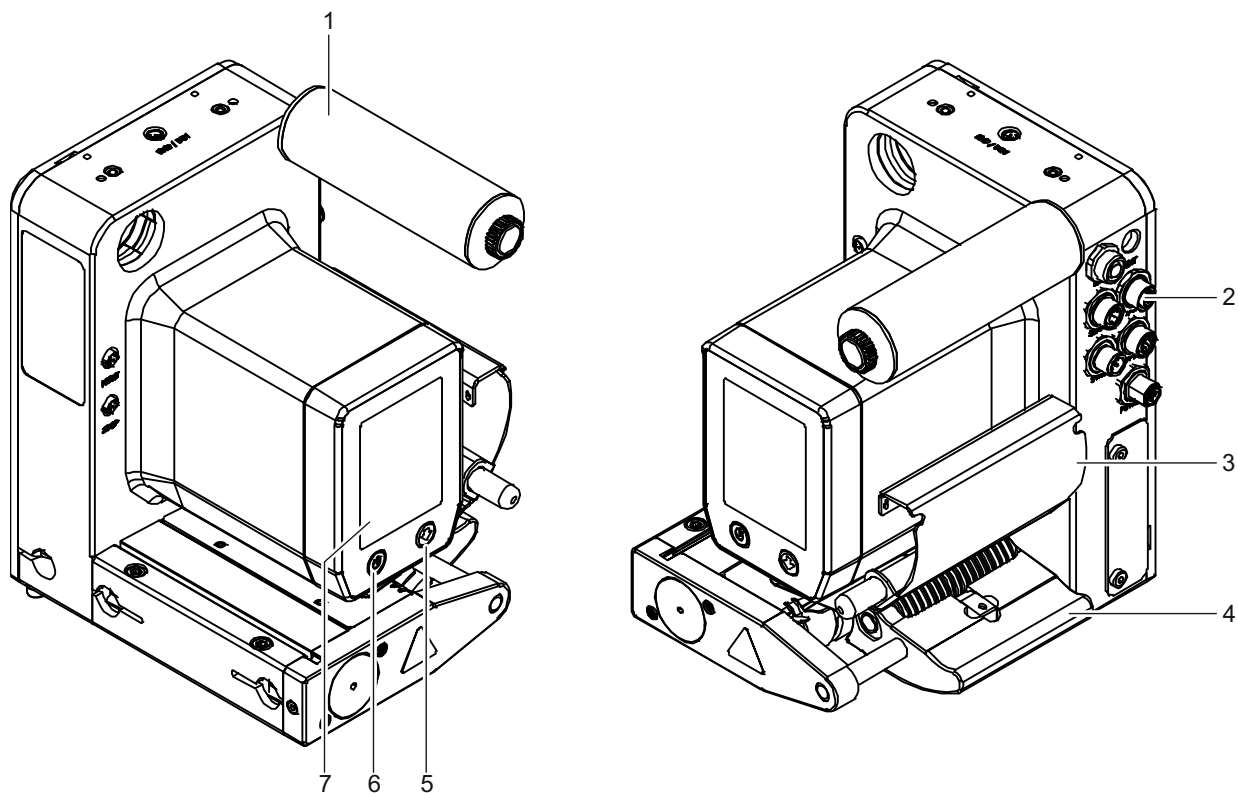


Figure 3 Overview base unit

- 1 Deflection roller
- 2 Electrical connections
- 3 Web brake
- 4 Pressure system

- 5 Button Pre-dispenser
- 6 Button ON / OFF
- 7 Operation panel

2.3 Unwinder

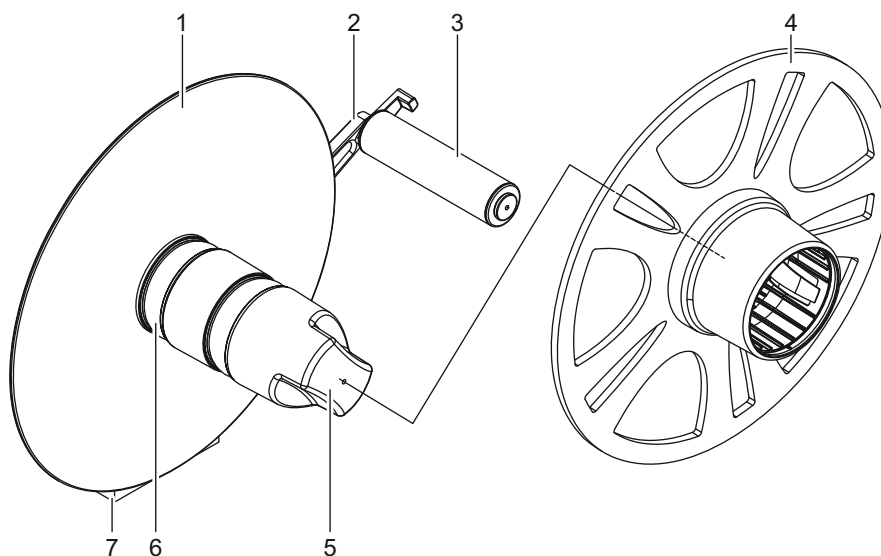


Figure 4 Unwinder

- | | |
|------------------------------|-----------------|
| 1 Plate | 5 Turning grip |
| 2 Guiding pendulum arm | 6 Binding rings |
| 3 Roller at the pendulum arm | 7 Unwinder body |
| 4 Counterholder (optional?) | |

2.4 Rewinder

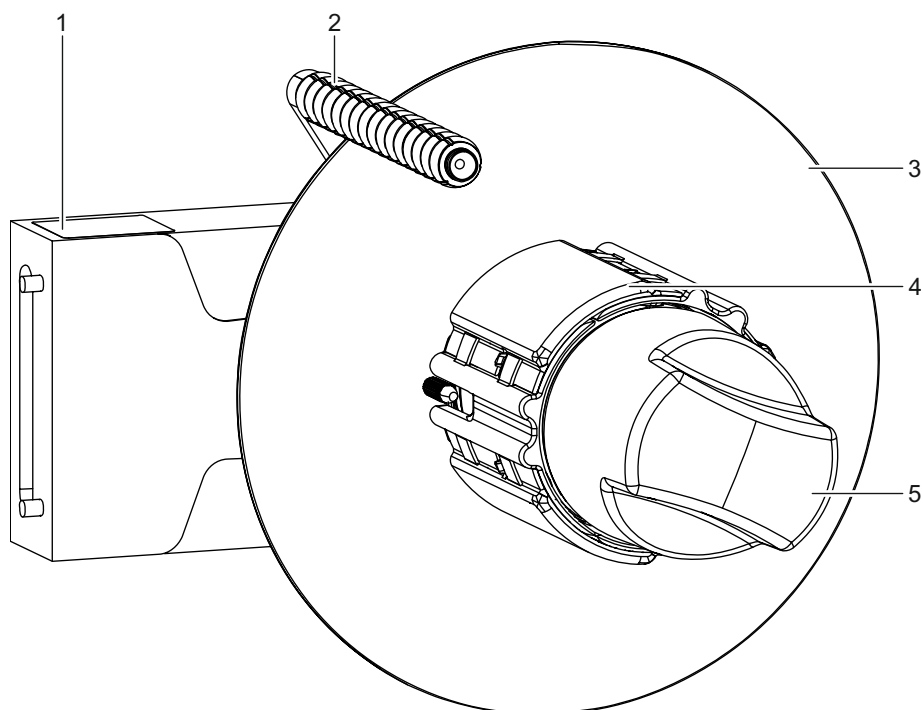


Figure 5 Rewinder

- | | |
|-----------------|-----------------|
| 1 Rewinder body | 4 Binding rings |
| 2 Pendulum arm | 5 Turning grip |
| 3 Plate | |

2.5 Demand unit (optional)

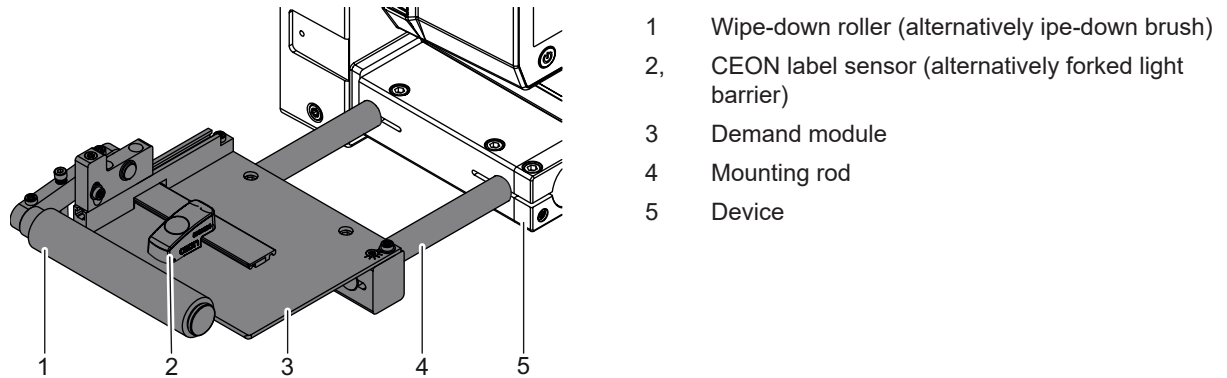


Figure 6 Overview demand unit

The demand unit has a modular design and is customisable. It can be assembled in 4 steps according to requirements. The demand unit consists of the demand module (3), the mounting rods (4), sensor (2) and a wipe-down roller or wipe-down brush (1).

2.5.1 Demand modules

SP demand module

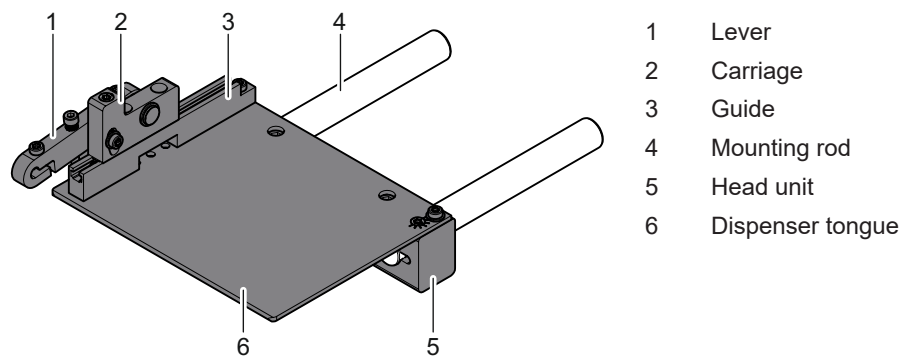


Figure 7 Overview SP demand module

The label is applied to the product via the demand module.

The demand head consists of the dispensing tongue (6), the guide (3) and the carriage (2). The demand head is mounted on the head unit (5). The label feed can also be adjusted during operation.

The demand module is attached to 2 mounting rods (4). Both the forked light barrier and the CEON label sensor can be mounted directly on the demand module.

The wipe-down roller or wipe-down brush is attached to the lever (1). The distance between the wipe-down roller or wipe-down brush and the demand tongue (6) is set via the carriage.

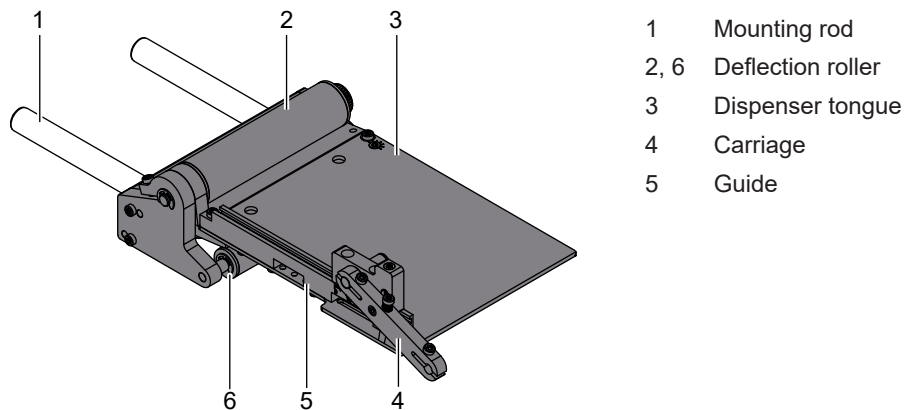
SPE demand module

Figure 8 Overview SPE demand module

For better operation or where installation space is limited, it may be necessary to install the label dispenser rotated in a vertical direction. The head unit can be continuously adjusted from 0 to 90°

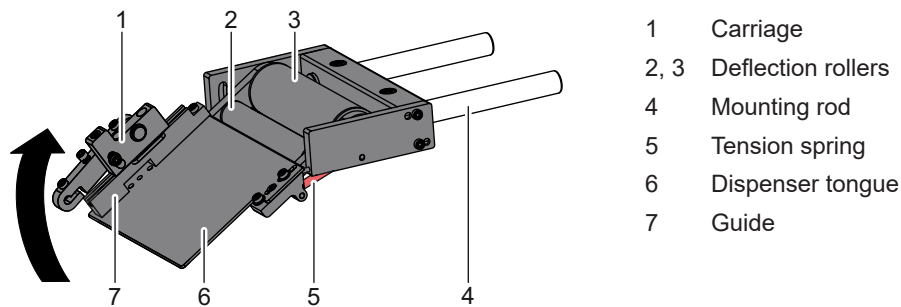
SPFA demand module

Figure 9 Overview SPFA demand module

When labeling insert onto curved surfaces, demand modules may adapt to the surfaces and heights of items by spring force (5).

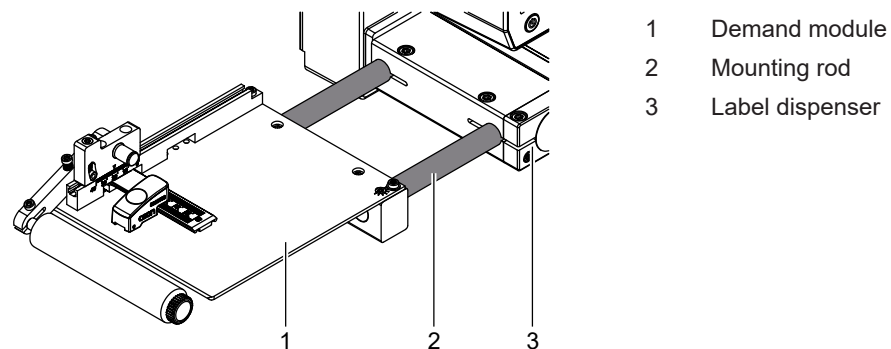
2.5.2 Mounting rods

Figure 10 Mounting rods, example

The mounting rods (2) are used to connect the demand module (1) to the label dispenser (3). The length of the mounting rods varies depending on the installation situation.

2.5.3 Wipe-down roller (optional)

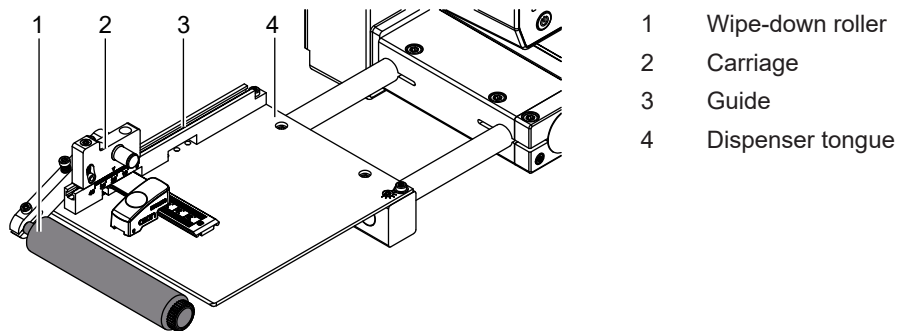


Figure 11 Overview wipe-down roller, example

The wipe-down roller (1) is used to press the label onto the product during labelling.

2.5.4 Wipe-down brush (optional)

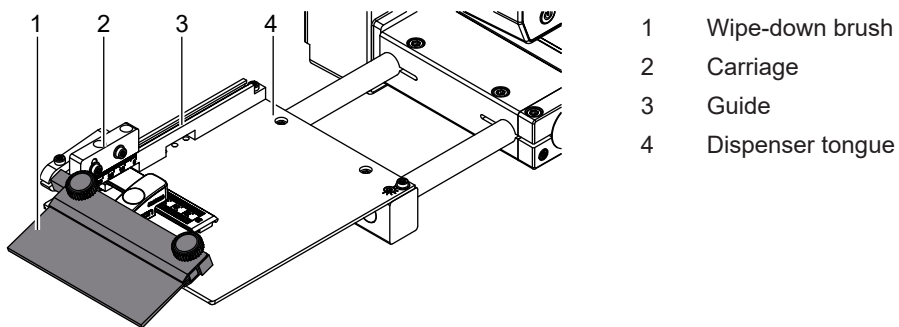


Figure 12 Overview wipe-down brush, example

The wipe-down brush (1) is used to press the label onto the product during labelling.

2.5.5 CEON label sensor (optional)


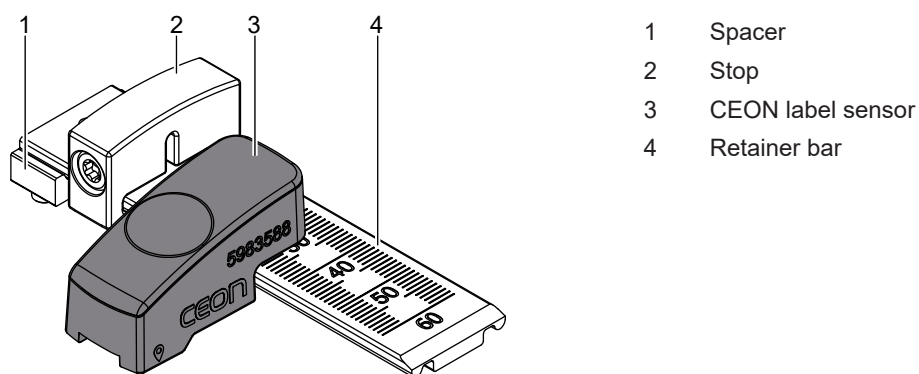


Figure 13 Overview CEON label sensor

A ceramic probe is used to inductively detect the difference in height from a liner to the top of a label. For sensor accommodation, a retainer bar (3) is attached in conjunction with a spacer (1) precisely and torsion-proof to a dispenser tongue.

2.5.6 Forked light barrier (optional)

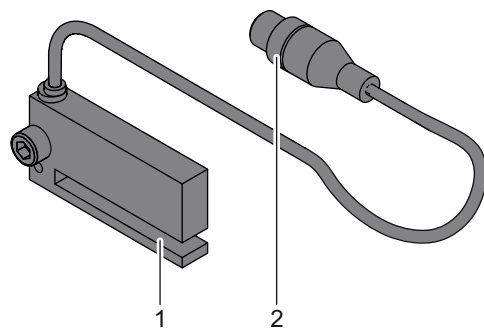


- 1 Forked light barrier
- 2 Round plug

Figure 14 Overview forked light barrier, example

The fork light barrier (1) detects translucent labels with transparent or semi-transparent liner tapes. It is mounted on the device or on the demand module.

2.5.7 Cross-section profile (optional)

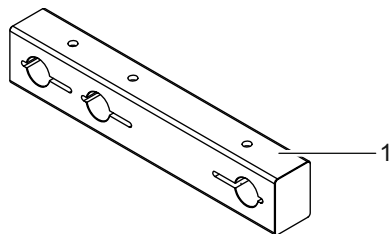


- 1 Cross-section profile

Figure 15 Overview cross-section profile

A third mounting rod and additional cross-section profiles (1) can be fitted to reinforce long mounting rods or to attach accessories.

2.6 Assembly assistance

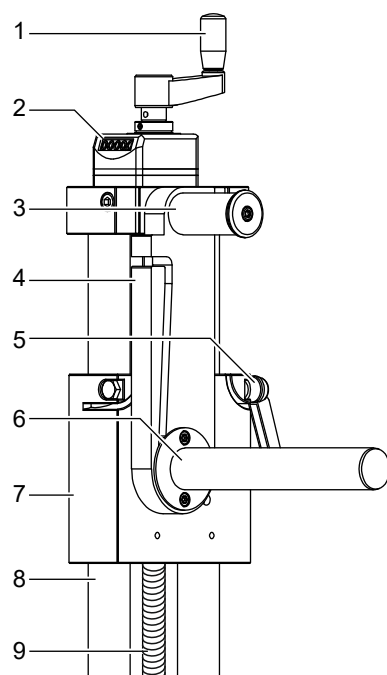

- 1 Hand crank
- 2 Electronic position indicator, accessory
- 3 Unit retainer, short
- 4 Tie rod
- 5 Clamping lever
- 6 Unit retainer, long
- 7 Profile
- 8 Stand, example
- 9 Guide

Figure 16 Overview assembly assistance

The assembly assistance can be used to mount the label dispenser on production lines as well as to install the label dispenser in labelling machines on a customer-specific basis.

A modular system is available, consisting of a unit retainer (3, 6), tie rod (4) and column or floor stand (8).

2.6.1 Unit retainer

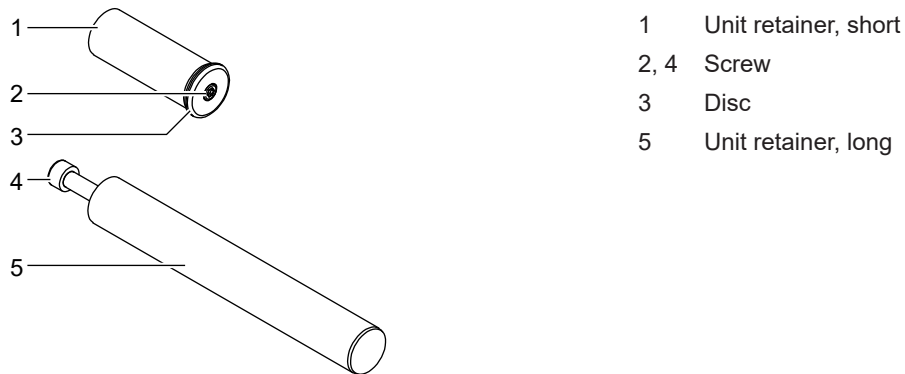


Figure 17 Overview, unit retainer, example

The label dispenser is mounted on two unit retainers (1, 5) and can therefore be installed either vertically or horizontally.

2.6.2 Tie rod


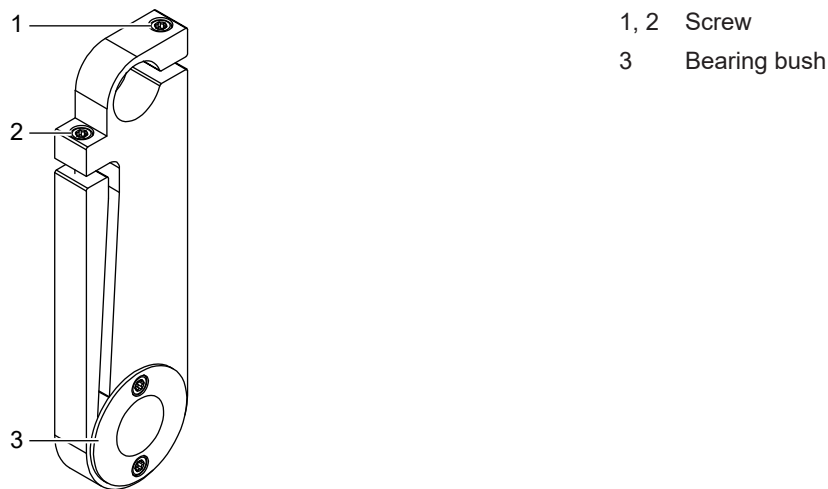


Figure 18 Overview tie rod

The dispensing angle can be adjusted using the tie rod. In addition, the spot of dispensing a label can be aligned on the unit retainers (▷Figure 17/1, 5).

The shorter unit retainer (▷Figure 16/1) is attached to the tie rod. The longer unit retainer (▷Figure 16/5) together with the bearing bush (3) is secured to a plate, a profile or the column stand. The tie rod is swivel-mounted and is fixed with a screw (2).

2.6.3 Column stand

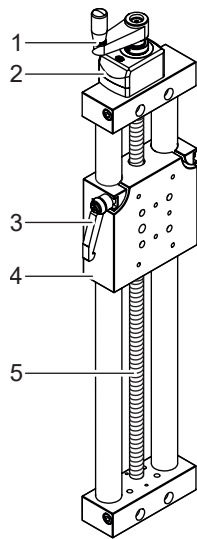


- 1 Hand crank
- 2 Electronic position indicator, accessory
- 3 Clamping lever
- 4 Profile
- 5 Gudie

Figure 19 Overview column stand

The column stand is used to mount the label dispenser on a base plate or on a conveyor belt. The position is adjusted using a hand crank (1).

2.6.4 Floor stand

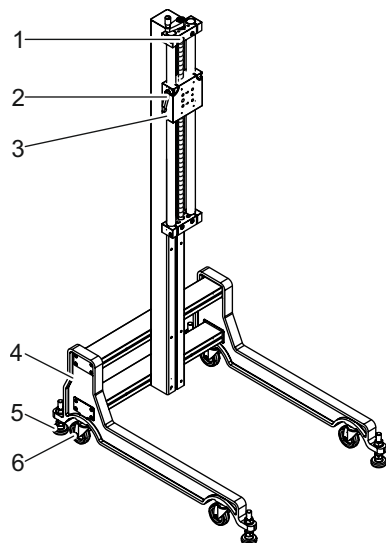

- 1 Hand crank
- 2 Clamping lever
- 3 Profile
- 4 Chassis
- 5 Adjustable foot
- 6 Castor

Figure 20 Overview floor stand, example

The floor stand is preferably used for top labelling. The floor stand is mobile and can be locked and aligned at the place of use using adjustable feet (5). The preferred application is for use on various lines.

3.1 Safety instructions for installation



Danger!

Risk of death by electrocution!

- ▶ The power cable with shockproof plug (Schuko-plug (protective contact)) is to be kept freely accessible at all times during operation and serves as a separation mechanism of the power supply by pulling it out of the plug point.
- ▶ In the version without a shockproof plug an approved separation mechanism, disconnecting every pole of the contact opening width by at least 3mm, securely interrupting the power supply, must be integrated into the device.
- ▶ Do not open the casing while the device is in operation.
- ▶ Especially when cleaning remove the device from the power grid and wait 10 minutes for the device to fully discharge.
- ▶ Under no circumstances may the cover be removed by anyone not qualified and accredited with electronic knowledge such as service personnel. Electrical connection must only be carried out by a certified electrician.
- ▶ For power supply wiring, strictly conform to the Local Regulation in each country.



Warning!

This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.



Attention!

Insufficient earthing can lead to disruptions during operation.

Ensure that all electrical devices connected to the IXOR+, as well as connecting cables are properly earthed.

3.2 Unpacking the device

- ▶ Lift the label dispenser out of the box.
- ▶ Check the label dispenser for transport damage.
- ▶ Check the delivery for completeness.
- ▶ Remove the foam transport safeguards.

Contents of delivery:

- Label dispenser
- Assembly instructions



Note!

Please keep the original packaging in case the printer must be returned.



Attention!

The device and printing materials will be damaged by moisture and wetness.

- ▶ Only set up label dispensers in dry locations protected from splash water.

3.3 Mounting the assembly accessories

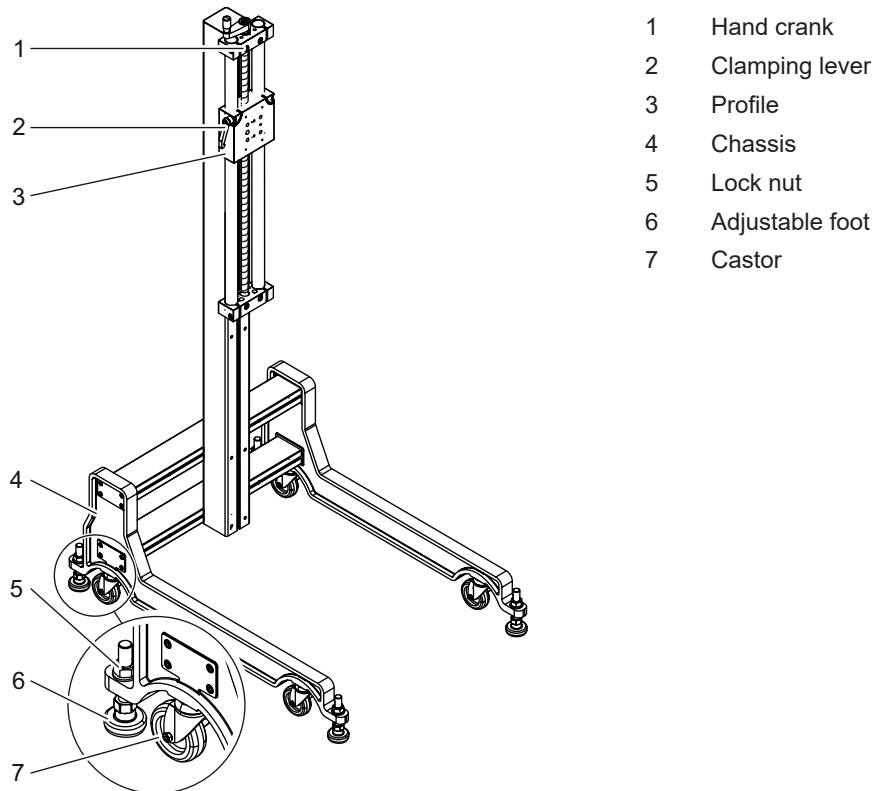


Figure 21 Setting up the floor stand

- Move the floor stand to the required position.
- Loosen the 4 lock nuts (5) with an open-end spanner.
- Turn the 4 adjustable feet (6) downwards into position.
- Use an open-end spanner to lock the 4 lock nuts (5) against the chassis (4).
- Check that all levelling feet (6) are secure and that the floor stand does not wobble. The castors (7) must not come into contact with the floor.

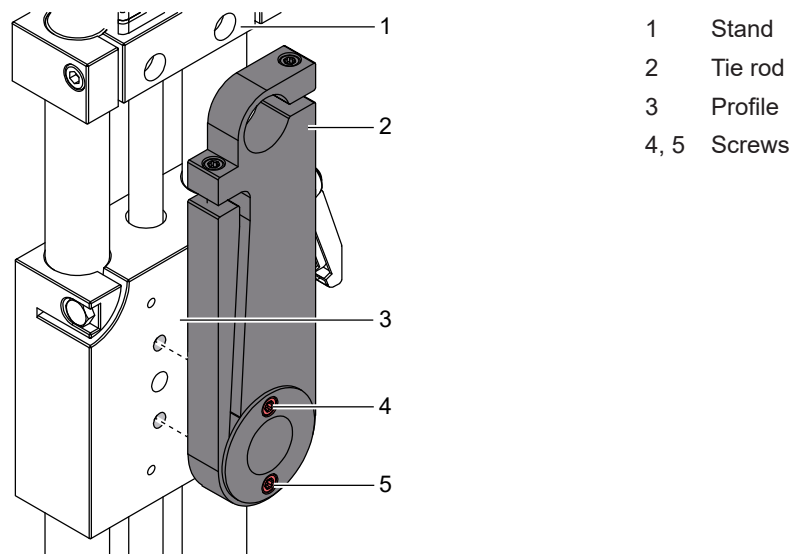


Figure 22 Mounting the tie rod

- Fasten the tie rod (2) to the profile (3) in the correct position using 2 screws (4, 5).

**Note!**

To mount the unit retainer (finely adjustable), observe chapter „3.7.3 Mounting the device in a variable axis (axially finely adjustable)“.

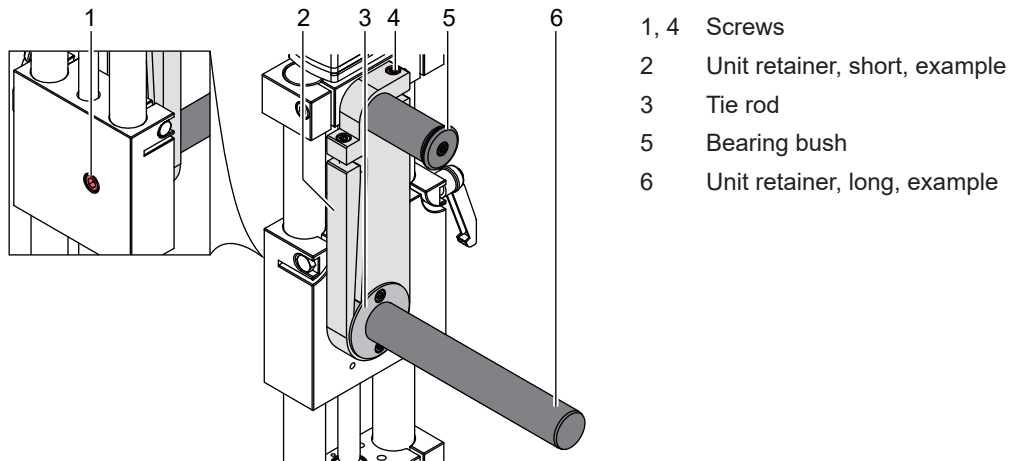


Figure 23 Mounting the unit retainers

- Insert the short unit retainer (3) into the mounting opening of the tie rod (4).
- Fasten the short unit retainer (3) with a screw (2). To do this, swivel the tie rod (4) sideways if necessary.
- Insert the long unit retainer (6) into the bearing bush (5) of the tie rod (4).
- Fasten the long unit retainer (6) with a screw (1).

3.4 Mounting the position indicator


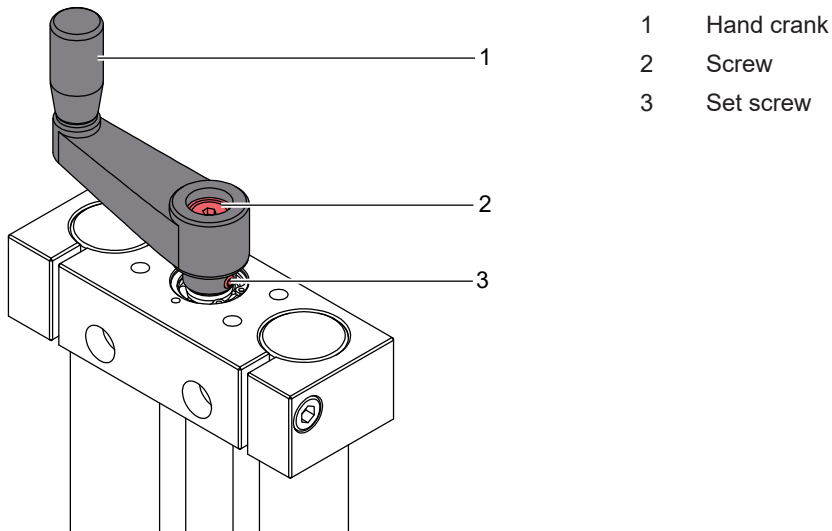


Figure 24 Mounting the hand crank


- Unscrew the screw (2).
- Unscrew the set screw (3).
- Remove the hand crank (1).

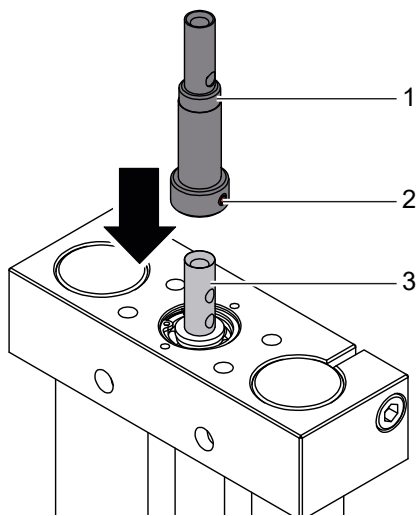

- 1 Extension
- 2 Set screw
- 3 Spindle

Figure 25 Mounting the extension


- Place the extension (1) onto the spindle (3) and secure with the set screw (2).

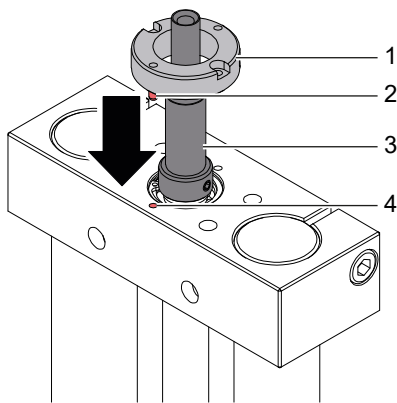

- 1 Retaining ring
- 2 Cylindrical pin
- 3 Extension
- 4 Bore

Figure 26 Mounting the retaining ring

- Slide the retaining ring (1) in the correct position over the extension (3).
- Make sure that the cylindrical pin (2) engages in the bore (4).

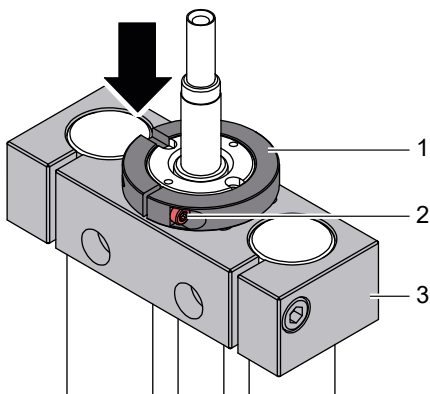

- 1 Driver ring
- 2 Screw
- 3 Upper guide

Figure 27 Mounting the driver ring

- Place the driver ring (1) in the correct position onto the guide (3).
- Tighten the screw (2).

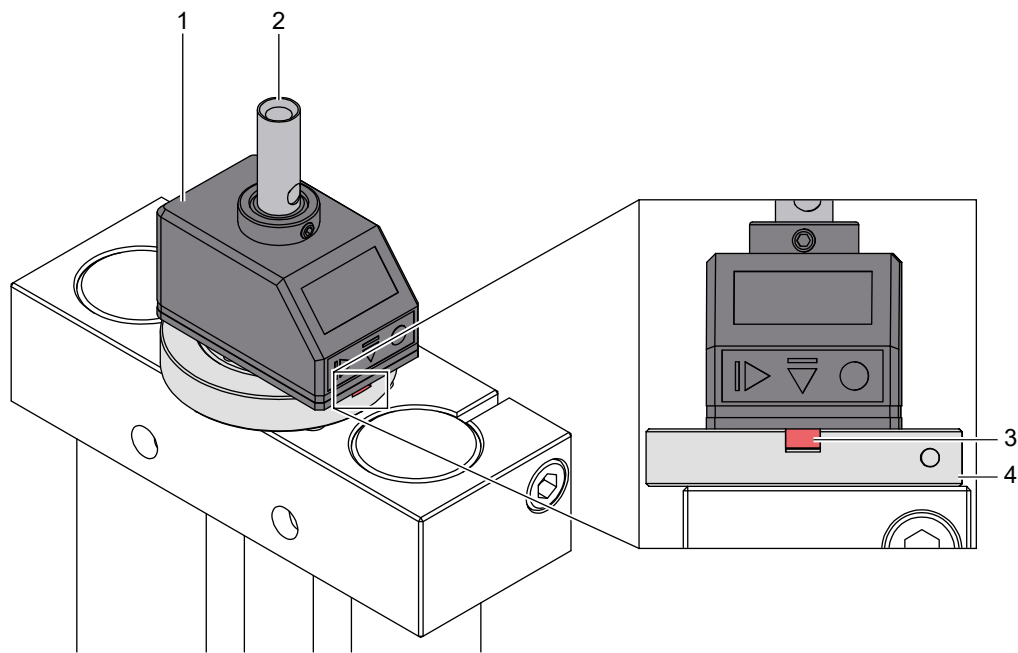


Figure 28 Mounting the position indicator

- | | |
|----------------------|---------------|
| 1 Position indicator | 3 Driver |
| 2 Extension | 4 Driver ring |

- Slide the position indicator (1) over the extension (2).
- Make sure that the driver (3) sits in the opening of the driver ring (4).


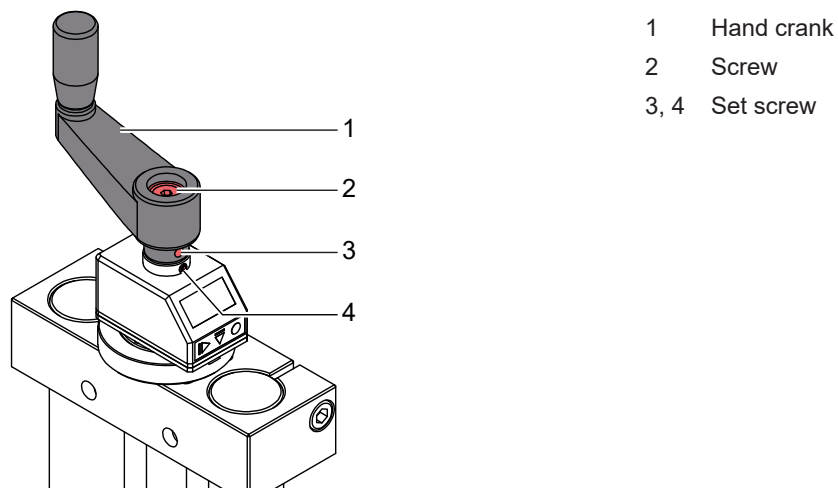


Figure 29 Mounting hand crank

- Slide the hand crank (1) onto the extension (►Figure 29/2) schieben.
- Secure the hand crank (1) to the extension (►Figure 29/2) with the screw (2).
- Fix the hand crank (1) with the set screw (3)
- Tighten the set screw (4).

3.5 Adjusting the stand

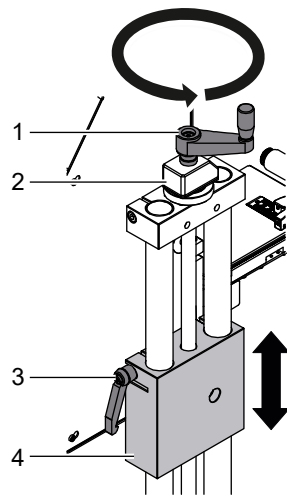

- 1 Hand crank
- 2 Position indicator (optional)
- 3 Clamping lever
- 4 Profile

Figure 30 Adjusting the height of the stand




Note!

To ensure process reliability and reproducibility, cab recommends reading the set value from the display of the position indicator (2/optional) and recording it.

- Loosen the clamping lever (3).
- To move the profile of the stand (4), turn the hand crank (1).
- Tighten the clamping lever (3).

3.6 Adjusting the tie rod

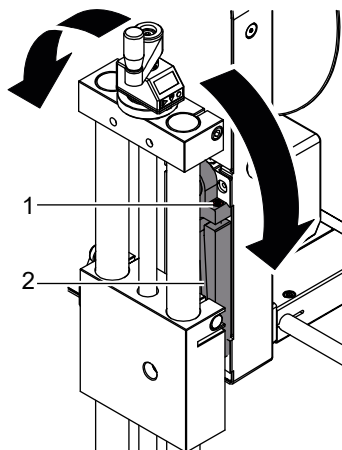

- 1 Screw
- 2 Tie rod

Figure 31 Aligning the tie rod

- Loosen the screw (1).
- Adjust the tie rod (2) by turning it.
- Tighten the screw (1).

3.7 Mounting the device

3.7.1 Mounting the device in a fixed position

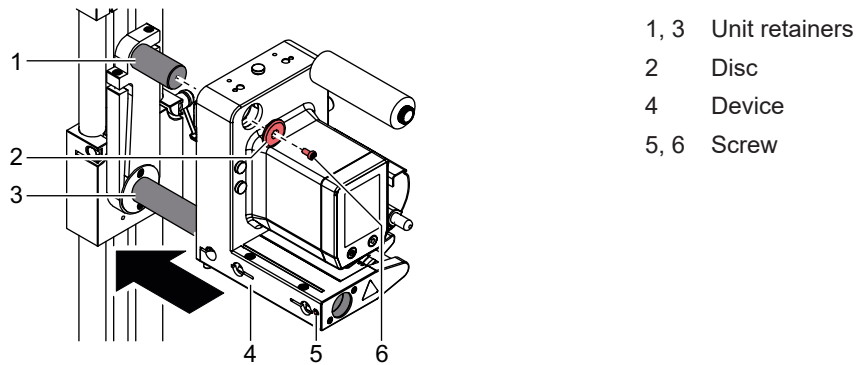


Figure 32 Mounting the device in a fixed position

- ▶ Slide the device (4) onto the pre-assembled unit retainers (1, 3). Make sure that the device is pushed up to the rear stop.
- ▶ Secure the disc (4) to the unit retainer (1) with the screw (7).
- ▶ Tighten the screw (6).

3.7.2 Grundeinheit in variabler Position montieren (axial verschiebbar)

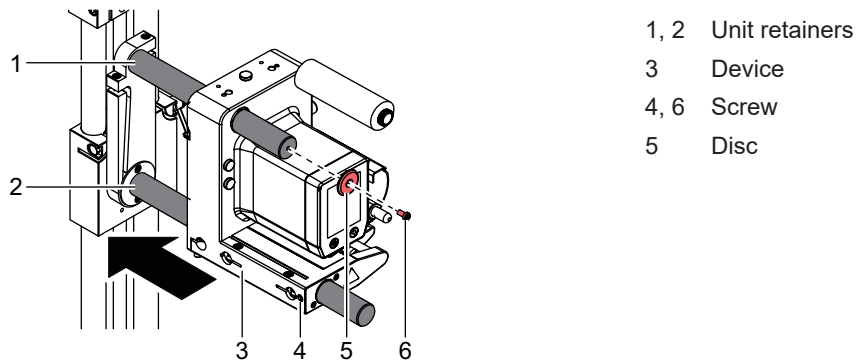


Figure 33 Mounting the device in a variable position (axially adjustable)

- ▶ Slide the device (3) onto the pre-assembled unit retainers (1, 2).
- ▶ Secure the disc (5) to the unit retainer (1) with the screw (6).
- ▶ Tighten the screw (4).

3.7.3 Mounting the device in a variable axis (axially finely adjustable)


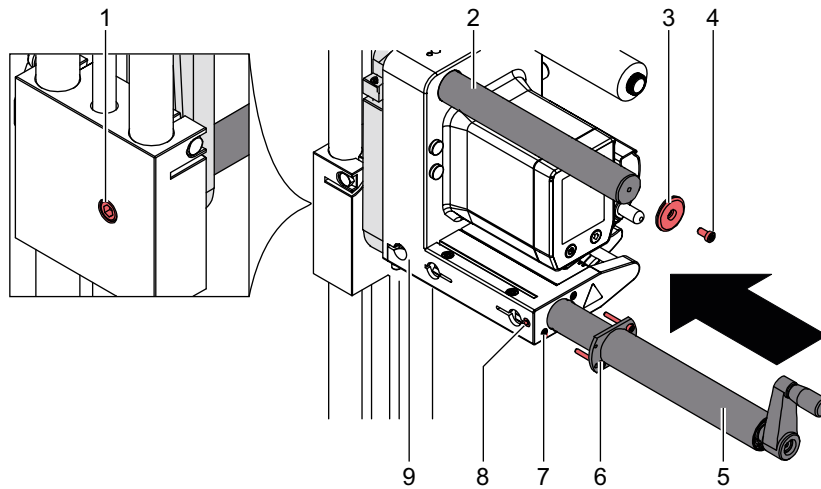


Figure 34 Mounting the device in a variable axis (axially finely adjustable)

1, 4, 6, 7, 8	Schraube	3	Scheibe
2, 5	Gerätehalter	9	Gerät

- Slide the pre-assembled unit retainer (2) through the upper guide. Make sure that the device (9) is pushed up to the stop.
- Loosen and unscrew the screws (7).
- Slide the unit retainer (5) through the lower guide. Make sure that the unit retainer is seated in the bearing bush of the tie rod.
- Secure the unit retainer (5) with the screw (1).
- Screw the flange of the unit retainer to the bar of the device (9) with 2 screws (6).
- Secure the disc (3) to the unit retainer (2) with the screw (4).
- Tighten the screw (8).

3.8 Adjusting the device

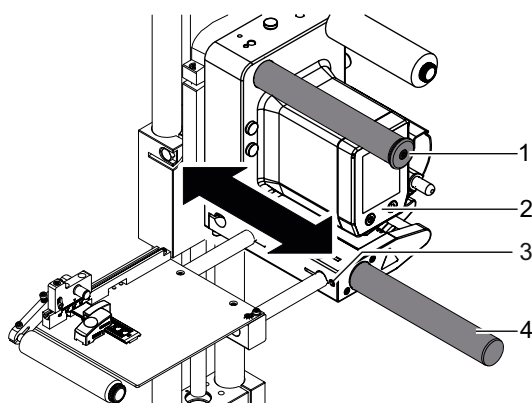

1, 4	Unit retainers
2	Device
3	Screw

Figure 35 Adjusting the device along the X-axis (movable)

- Loosen the screw (3).
- Move the device (2) along the X-axis.
- Tighten the screw (3).

OR

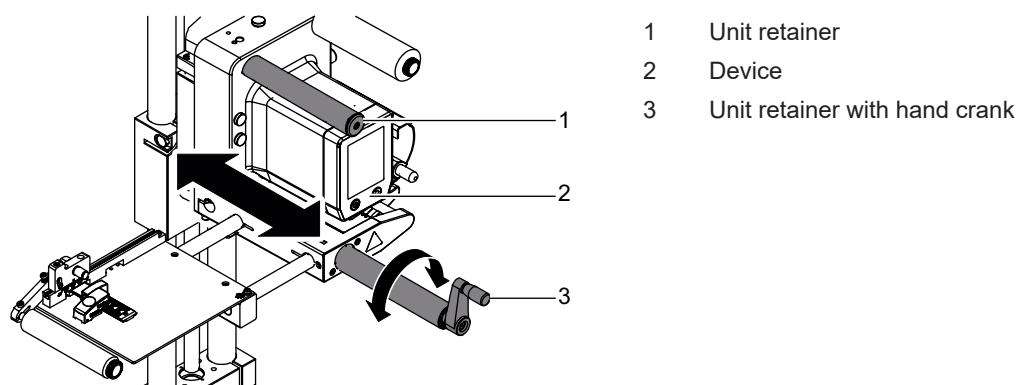


Figure 36 Adjusting the device along the X-axis (finely adjustable)

► To align the device (2) along the X-axis, turn the hand crank (3).

3.9 Mounting the rewinder

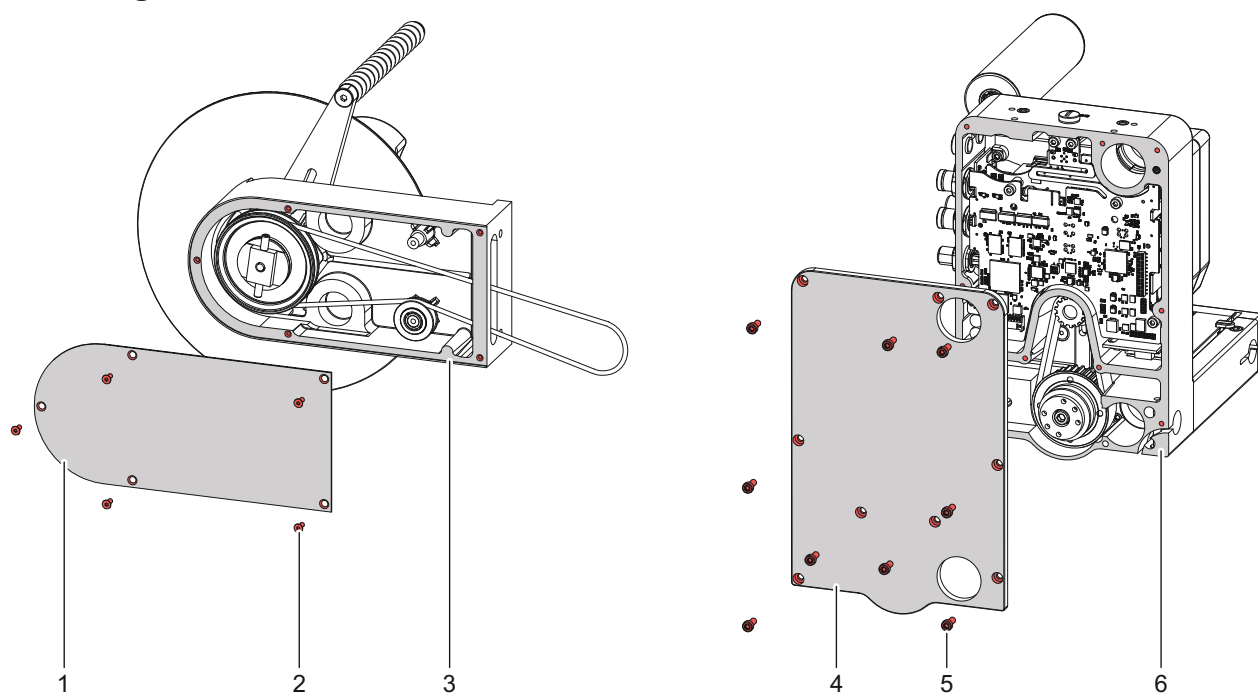


Figure 37 Removing the covers

- | | | | |
|------|----------------|---|-----------------|
| 1 | Cover rewinder | 4 | Cover base unit |
| 2, 5 | Screws | 6 | Base unit |
| 3 | Rewinder | | |

- Unscrew the screws (2) from the rewinder (3) and remove the cover (1).
- Unscrew the screws (5) from the base unit (6) and remove the cover (4)

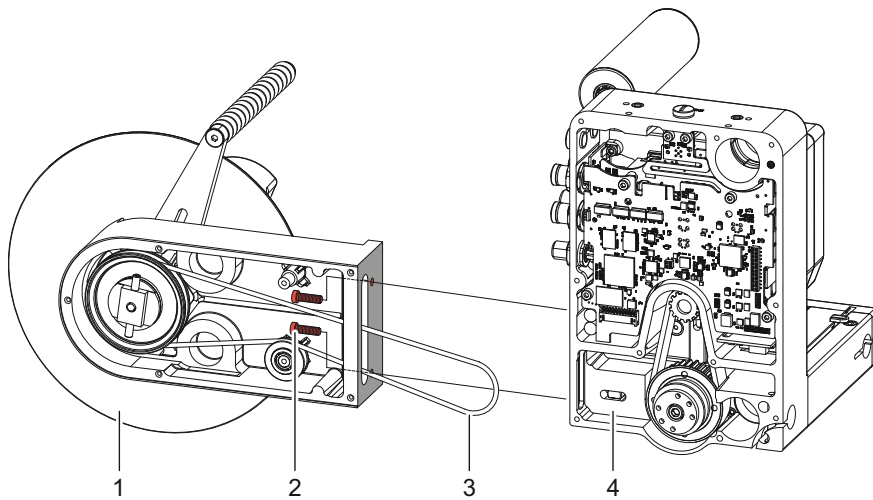


Figure 38 Mounting the rewinder

- | | | | |
|---|----------|---|-----------|
| 1 | Rewinder | 3 | Belt |
| 2 | Screws | 4 | Base unit |

- Mount the rewinder (1) to the base unit (4) with the screws (2).
Route the belt (3) through the openings on the rewinder (1) and the base unit (4).

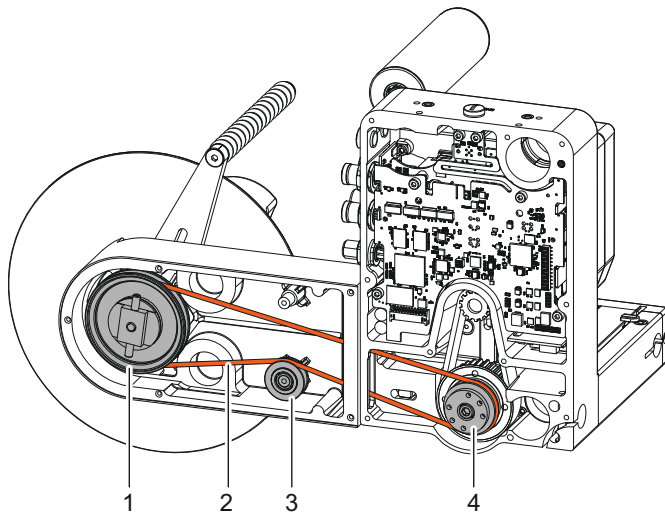


Figure 39 Belt guide

- | | | | |
|------|-------------|---|---------------------|
| 1, 3 | Belt pulley | 4 | Belt gear base unit |
| 2 | Belt | | |

- Route the belt (2) around the belt pulley (1) and the belt gear (4). Make sure that the belt runs over the belt pulley (3).
- Re-mount the covers on the base unit and rewinder („Figure 37 Removing the covers“ auf Seite 26).

3.10 Mounting the unwinder

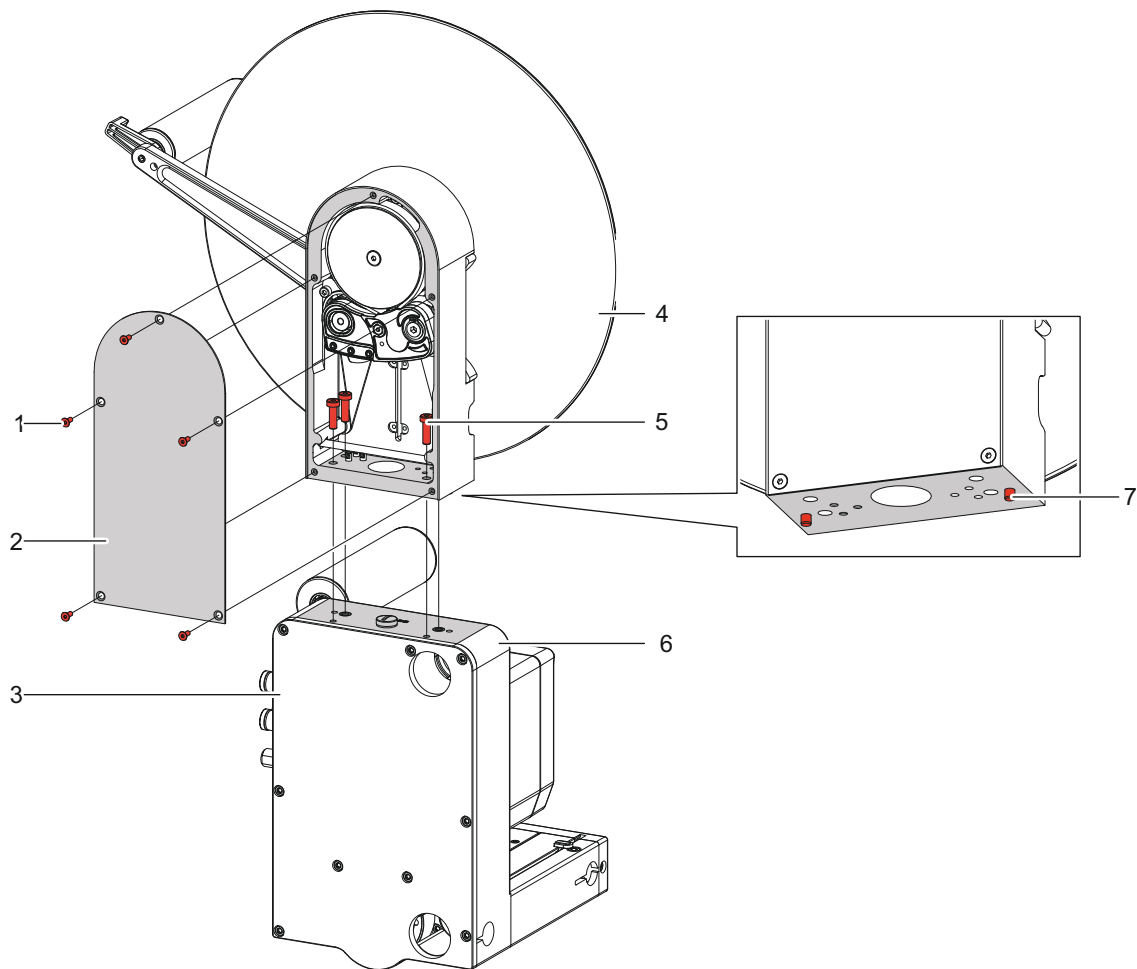


Figure 40 Mounting the unwinder

1, 5	Screw	4	Unwinder
2	Cover unwinder	6	Bore
3	Base unit	7	Guide pin

- Unscrew the screws (1) and remove the cover of the unwinder (2).
- Place the unwinder (4) onto the base unit (3) so that the guide pins (7) sit in the bores (6).
- Mount the unwinder (4) onto the base unit (3) with the screws (5).
- Re-mount the cover (2).

3.11 Montagestange montieren

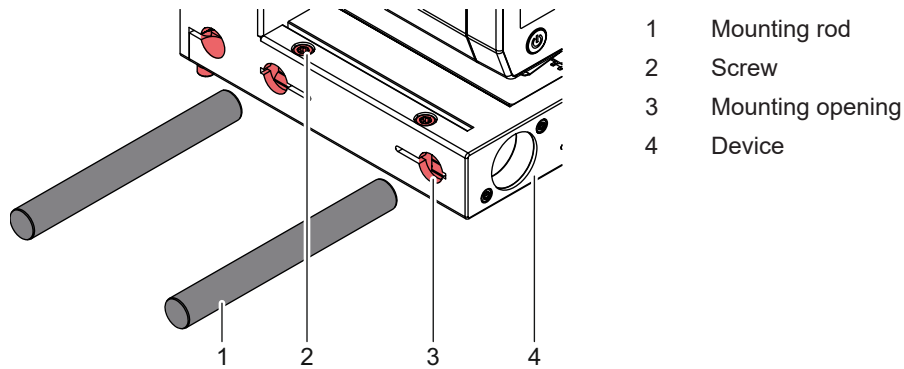


Figure 41 Mounting the mounting rods

- Loosen both screws (2).
- Insert both mounting rods (1) into the mounting openings (3) until they stop.
- Tighten both screws (2).

3.12 Mounting the demand module


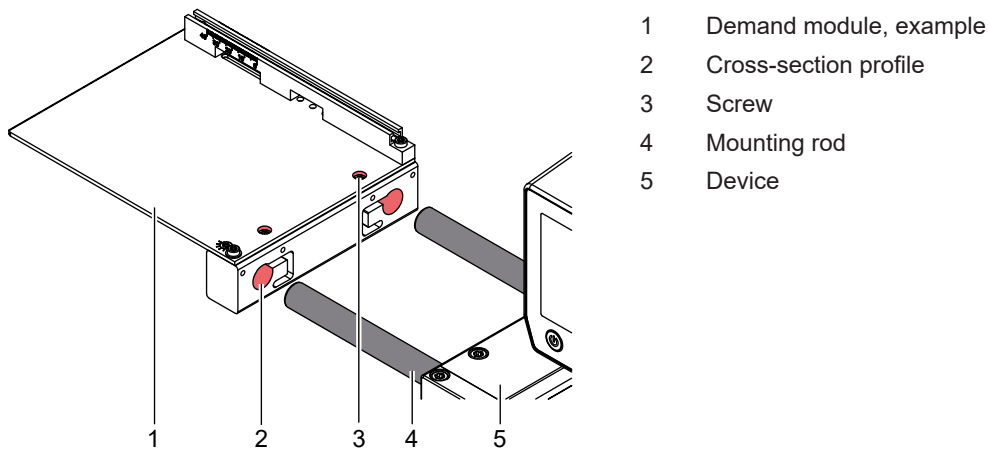


Figure 42 Mounting the demand module

- Loosen both screws (3).
- Insert the demand module (1) flush with the cross-section profile (2) into the mounting rods (4).
- Tighten both screws (3).

3.13 Adjusting the SPE demand module

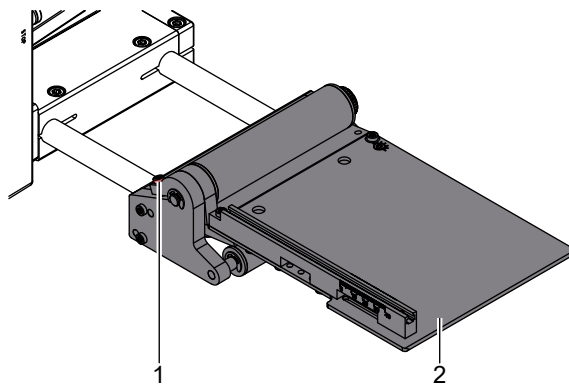


- 1 Screw
- 2 Demand module

Figure 43 Adjusting the SPE demand module

- To adjust the demand module (2), loosen the screws (1).
- Swivel the demand module (2) into the required position (arrow).
- Tighten the screws (1).

3.14 Adjusting the paper feed

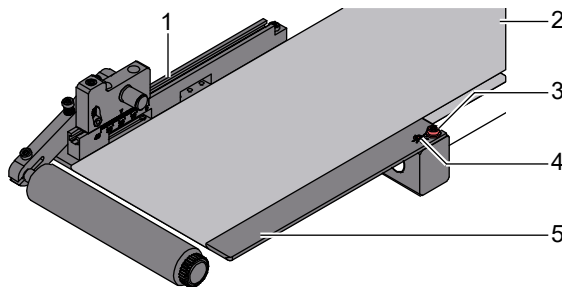


- 1 Guide
- 2 Paper feed
- 3 Screw
- 4 Eccentric screw
- 5 Demand head

Figure 44 Adjusting the paper feed

- To adjust the paper feed (2), loosen the screw (3) and adjust the demand head (5) using the eccentric screw (4).
- Adjust the paper feed (2) along the guide (1).

3.15 Inserting the carriage

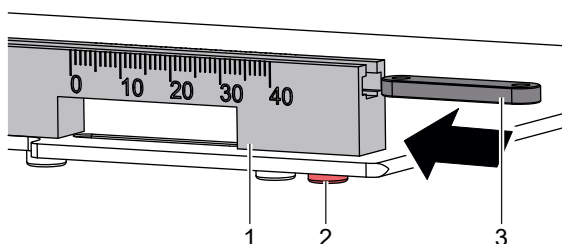

- 1 Guide
- 2 Screw
- 3 T-slot nut

Figure 45 Inserting T-slot nut

- Loosen the screw (1).
- Insert the T-slot nut (3) into the guide (2).
- Tighten the screw (1).

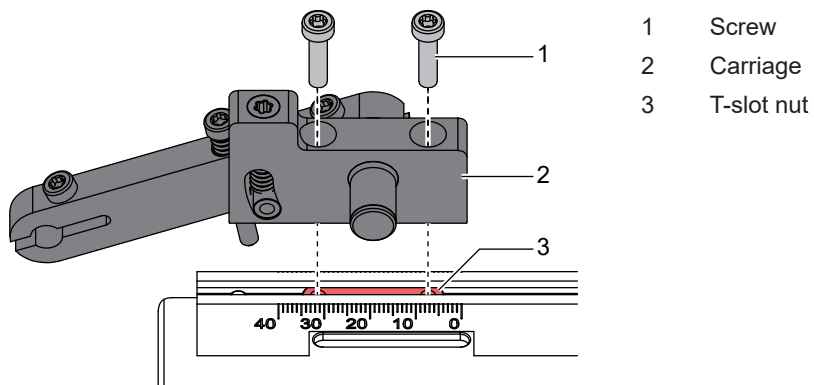


Figure 46 Inserting carriage, example

- Place the carriage (2) in the correct position onto the T-slot nut (3).
- Tighten the screws (1).

3.16 Mounting the wipe-down roller

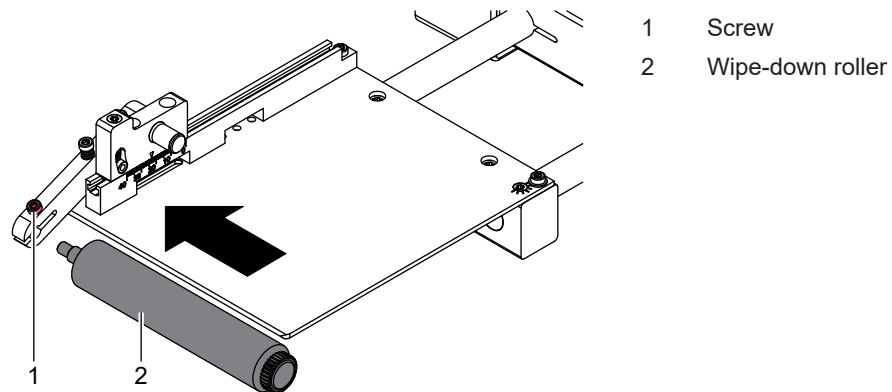


Figure 47 Mounting the wipe-down roller

- Loosen the screw (1).
- Insert the wipe-down roller (2) in the correct position.
- Tighten the screw (1)

3.17 Adjusting the wipe-down roller

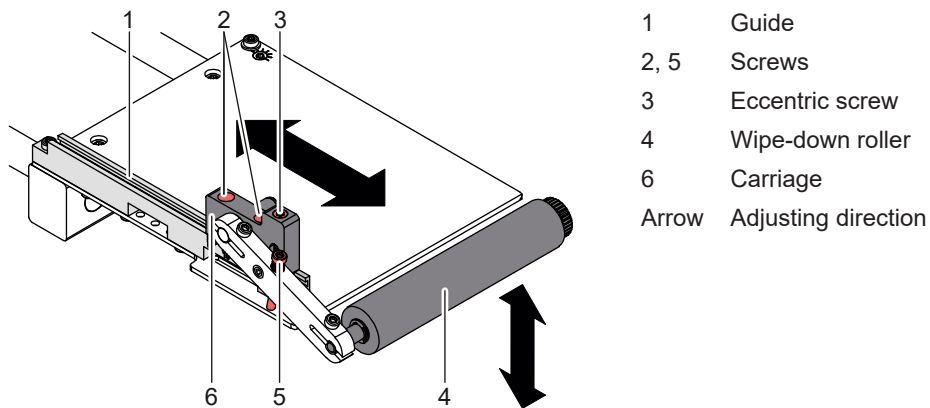


Figure 48 Adjusting the wipe-down roller



Notice!

To ensure process reliability and reproducibility, cab recommends reading the set value from the scale and recording it.

Adjusting the distance to the peel-off plate

- ▶ To adjust the distance to the peel-off plate, loosen the two screws (2).
- ▶ Slide the carriage (6) along the guide (1) to the required position.
- ▶ Tighten the two screws (2)

Adjusting the lower end position

- ▶ To adjust the lower end position of the wipe-down roller (4) to the product, adjust the screw (5).

Adjusting the wipe-down force

- ▶ To adjust the wipe-down force on the product, adjust the eccentric screw (3).

3.18 Mounting wipe-down brush

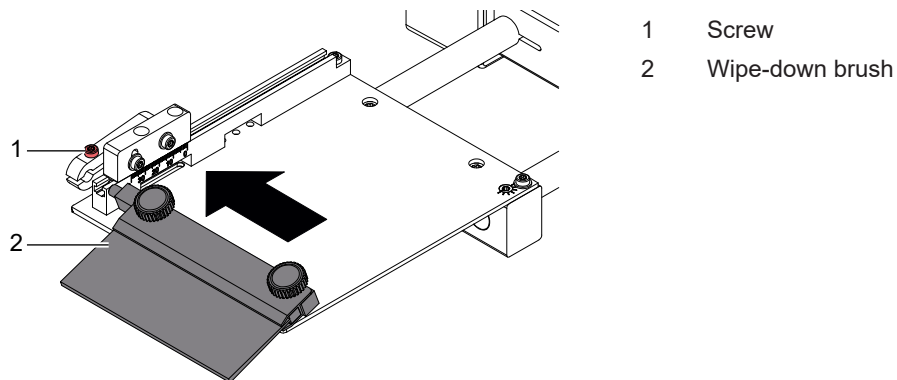


Figure 49 Mounting wipe-down brush

- ▶ Loosen the screw (1).
- ▶ Insert the wipe-down brush (2) in the correct position.
- ▶ Tighten the screw (1).

3.19 Adjusting the wipe-down brush

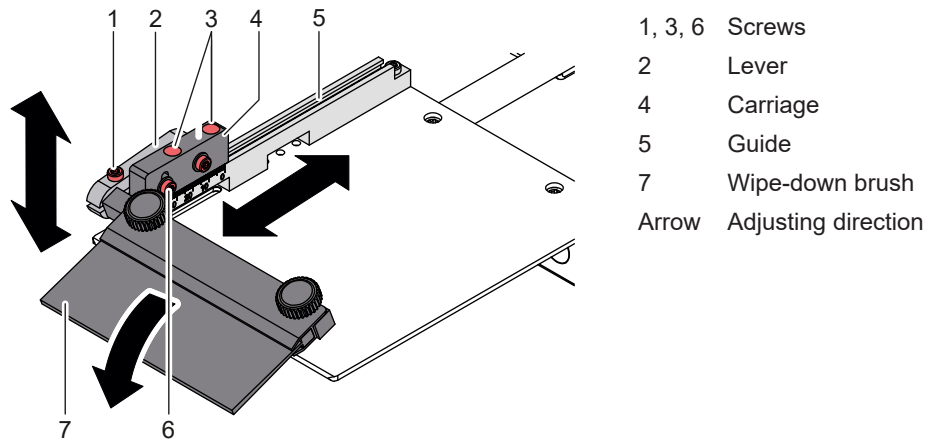


Figure 50 Adjusting the wipe-down brush



Notice!

To ensure process reliability and reproducibility, cab recommends reading the set value from the scale and recording it.

Adjusting the distance to the peel-off plate

- ▶ To adjust the distance to the peel-off plate, loosen the two screws (4).
- ▶ Slide the carriage (3) along the guide (5) to the required position.
- ▶ Tighten the two screws (4).

Adjusting the angle of the wipe-down brush

- ▶ To adjust the angle of the wipe-down brush (7) to the peel-off plate, loosen the screw (1).
- ▶ Adjust the angle of the wipe-down brush (7).
- ▶ Tighten the screw (1).

Adjusting the height of the wipe-down brush

- ▶ To adjust the height of the wipe-down brush (7) to the product, loosen the screw (6).
- ▶ Adjust the height of the lever (2).
- ▶ Tighten the screw (6).

3.20 Mounting sensors

3.20.1 Mounting the CEON label sensor

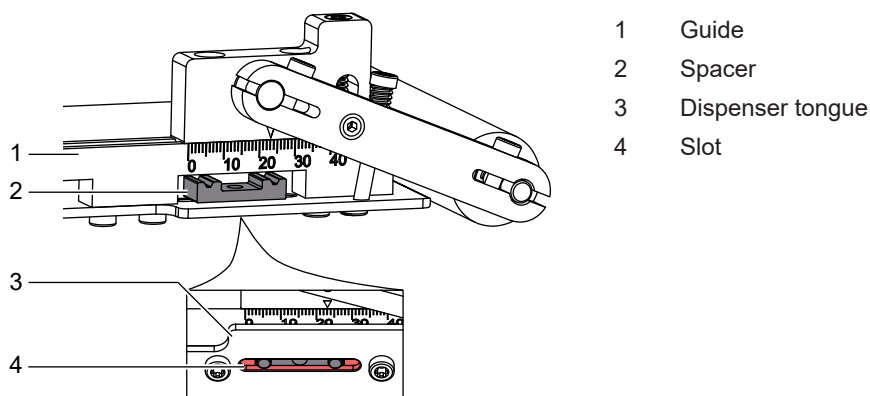


Figure 51 Mounting the spacer

- ▶ Slide the spacer (2) into the guide (1) in the correct position.
- ▶ Ensure that the spacer (2) is fixed in the slot (4) of the dispenser tongue (3).

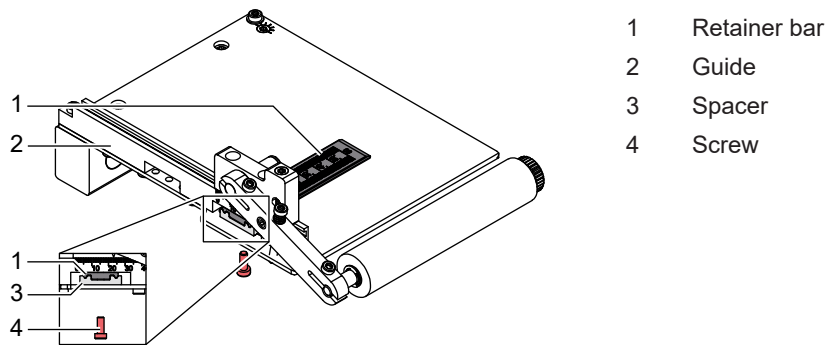


Figure 52 Mounting the CEON label sensor

- ▶ Slide the retainer bar (2) with the pre-assembled label sensor (1) into the opening of the guide (3) in the correct position. Ensure that the retainer bar (2) is positioned correctly on the spacer (5).
- ▶ Tighten the screw (4) to secure the spacer (5) with the retainer bar (2).

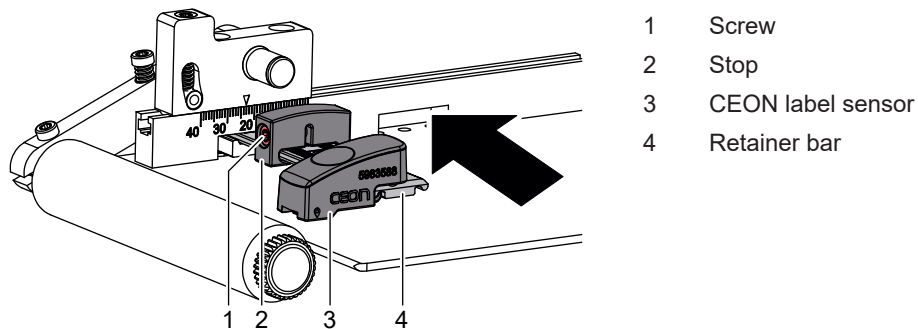


Figure 53 Slide the CEON label sensor onto the retainer bar

- ▶ Slide the stop (2) onto the retainer bar (4) and tighten the screw (1).
- ▶ Slide the label sensor (3) onto the retaining bar (4).

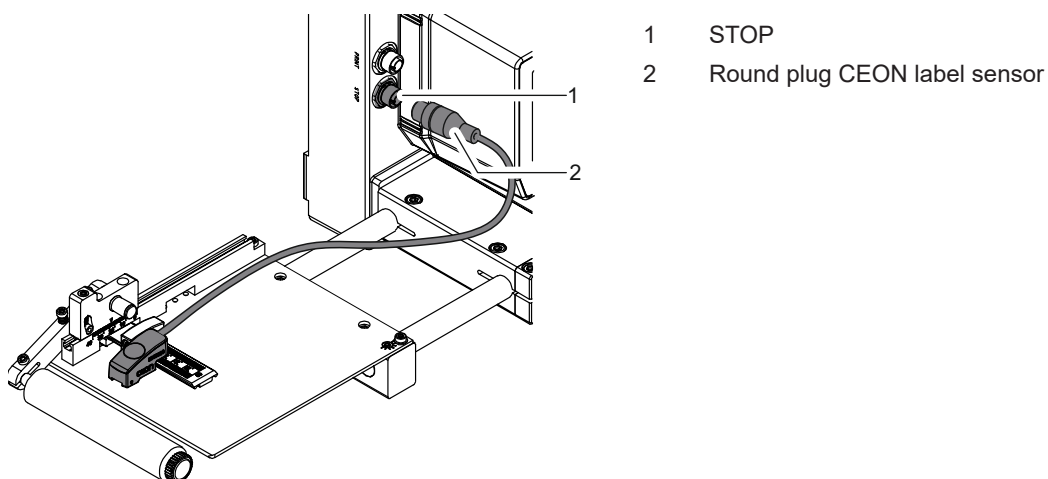


Figure 54 Connecting the CEON label sensor


- ▶ Insert the round plug of the label sensor (2) into the STOP connection (1).
- ▶ The CEON label sensor is set when auto teach mode is activated.



Note!

For more information, please see the "CEON label sensor" assembly instructions.

3.20.2 Adjusting the CEON label sensor

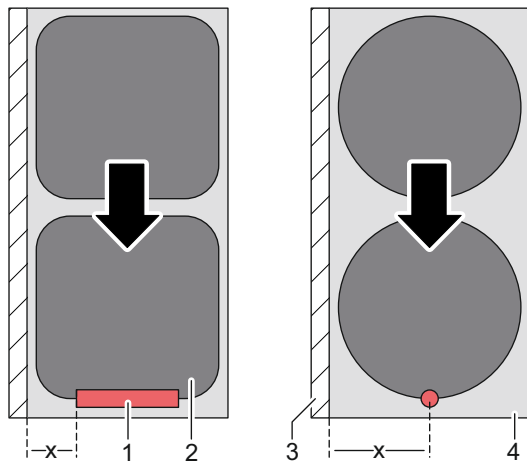

- 1 Contact edge
- 2 Label (example)
- 3 Detection by the label sensor at this point
- 4 Liner material
- x Distance to the contact edge
- Arrow Direction of label demand

Figure 55 Setting point of the label sensor, exemplary

**Notice!**

To ensure process reliability and reproducibility, cab recommends reading the set value from the scale and recording it.

**Note!**


When changing the label type the label sensor needs to be set up anew.

CEON label sensor on demand module	62	124	186
Distance to the contact edge (x)	9 - 33 mm	9 - 64 mm	9 - 95 mm

Table 1 Setting values for distance to contact edge (x)

- The sensor must detect the label at the outermost point of the label (1) in the direction of label demand (arrow). Consider the values from Table 1.


3.20.3 Mounting the forked light barrier to the demand unit

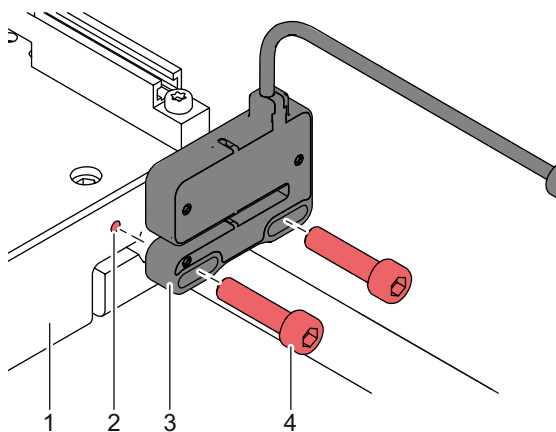

- 1 Demand module
- 2 Drill hole
- 3 Forked light barrier
- 4 Screw

Figure 56 Mounting the forked light barrier

- Screw the fork light barrier (3) to the demand module (1) using the screws (4).

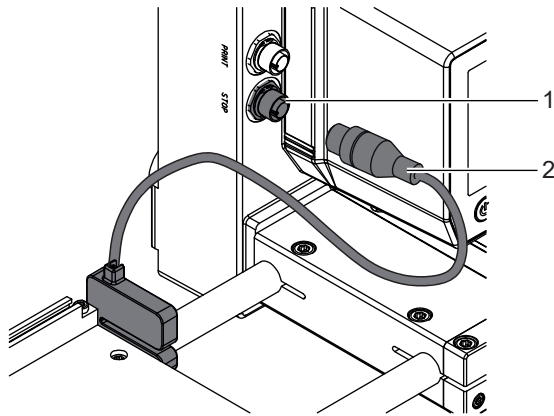


- 1 STOP
- 2 Round plug forked light barrier

Figure 57 Connecting the forked light barrier


- Insert the round plug of the forked light barrier (2) into the STOP connection (1). The forked light barrier is set when auto teach mode is activated.

3.20.4 Adjusting the forked light barrier (demand unit)

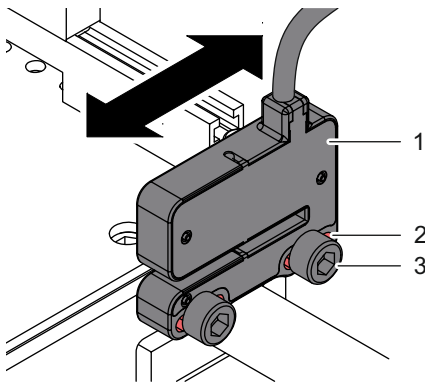

- 1 Forked light barrier
- 2 Slotted holes
- 3 Screws

Figure 58 Adjusting the forked light barrier

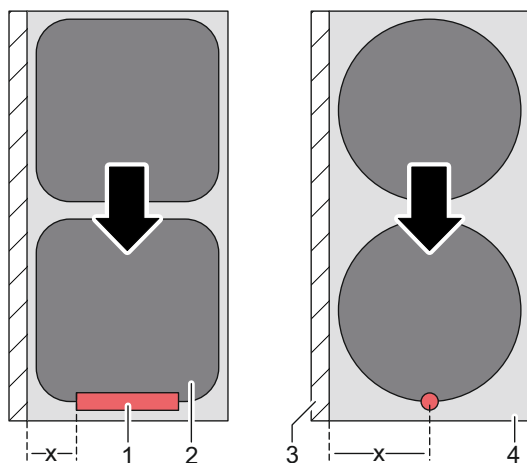

- 1 Contact edge
- 2 Label (example)
- 3 Detection by the label sensor at this point
- 4 Liner material
- x Distance to the contact edge
- Arrow Direction of label demand

Figure 59 Setting point of the label sensor, exemplary



Notice!

To ensure process reliability and reproducibility, cab recommends reading the set value from the scale and recording it.



Note!

The distance from the contact edge to the detection point is 7.5 - 17.5 mm.

- ▶ Loosen the screws (3).
- ▶ Move the fork light barrier (1) along the slotted holes (2).
- ▶ Tighten the screws (3).

3.20.5 Mounting fork light barrier on holder

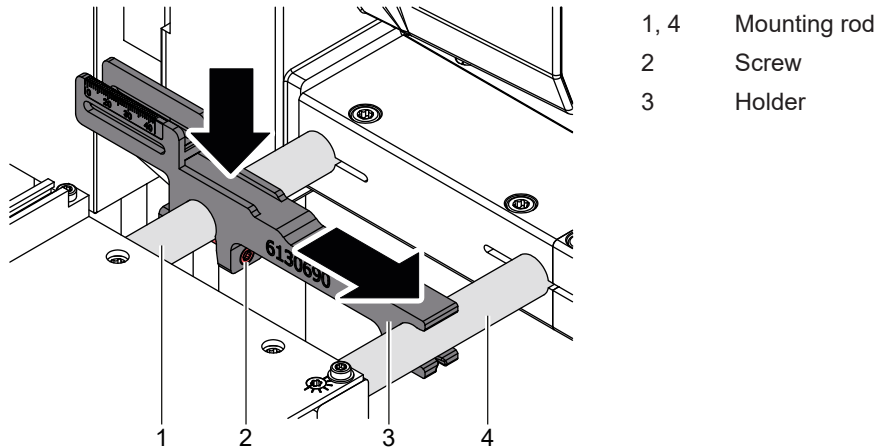


Figure 60 Mounting holder

- ▶ Slide the holder (3) onto the mounting rod (4).
- ▶ Slide the holder (3) onto the mounting rod (1).
- ▶ To fix the holder (3) on the mounting rod (1), tighten the screw (2).

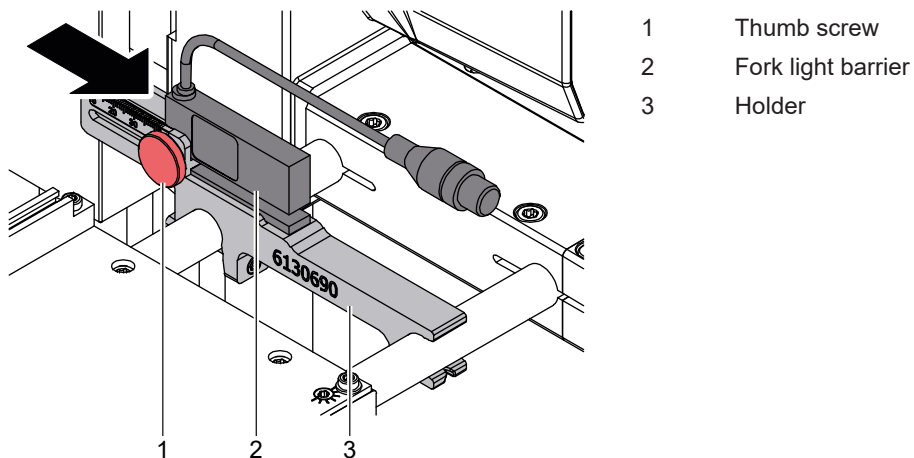


Figure 61 Mounting fork light barrier

- ▶ Slide the fork light barrier (2) into the holder (3).
- ▶ Fix the fork light barrier (2) with the thumb screw (1).

3.20.6 Adjusting fork light barrier (holder)

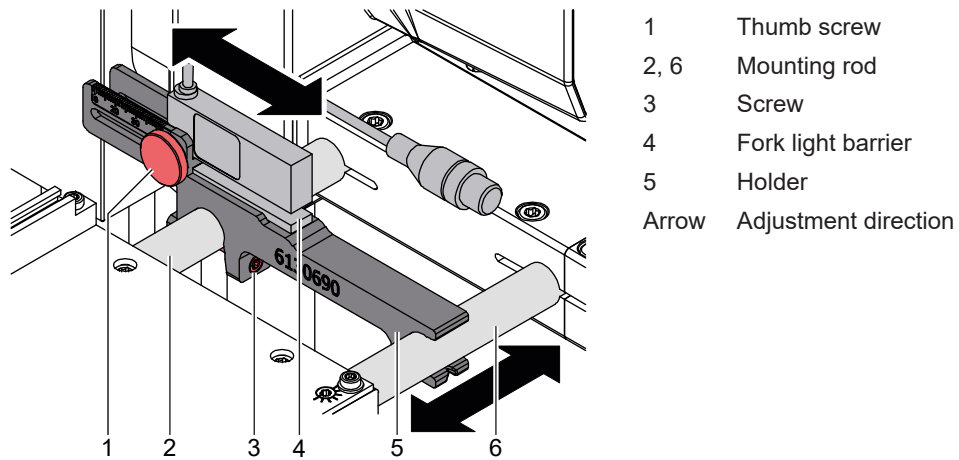


Figure 62 Gabellichtschranke einstellen



Notice!

To ensure process reliability and reproducibility, cab recommends reading the set value from the scale and recording it.



Notice!

The distance from the contact edge to the detection area is 8–40 mm.

- ▶ To adjust the fork light barrier (4), loosen the thumb screw (1).
- ▶ Slide the fork light barrier (4) along the holder (5).
- ▶ Tighten the thumb screw (1).

- ▶ To adjust the holder (5), loosen the screw (3).
- ▶ Slide the holder along the mounting rods (2, 6).
- ▶ Tighten the screw (3).

3.21 Connection the device

3.21.1 Connecting to the power supply

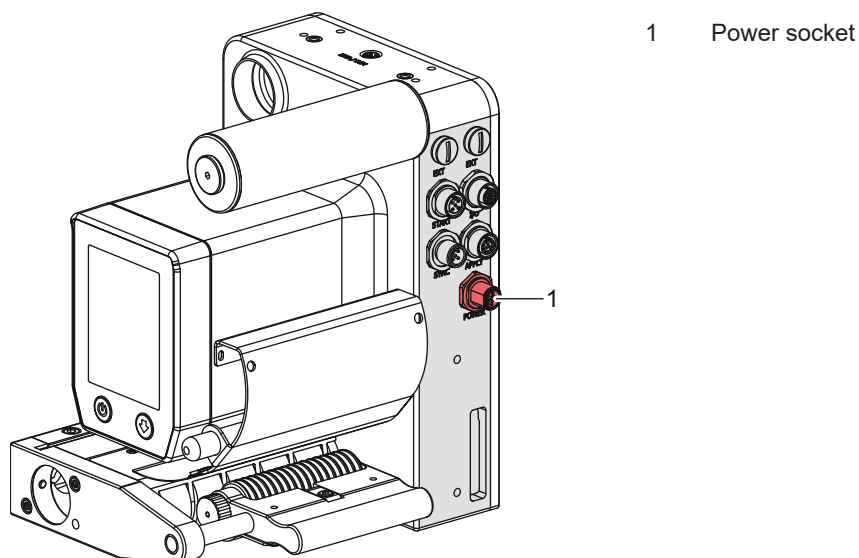


Figure 63 Netzanschluss herstellen

- ▶ Insert the power plug into the power socket (1).
- ▶ Insert the power cable plug into a grounded outlet.

3.21.2 Making further connections



Note!

For more information on the connections, see chapter „9 Interfaces“.

4.1 Operating panel



Figure 64 Operating panel / Start screen

The control panel consists of a touchscreen display and 2 buttons:



ON / OFF button

When the device is switched on, the ON / OFF button pulses green.

When the ON / OFF button is pressed, the device switches to operating mode. The ON / OFF button lights up green.



Pre-dispense button

Button to synchronise the system after labeling material has been changed or to manually adjust settings.

4.2 Start screen

4.2.1 Status bar

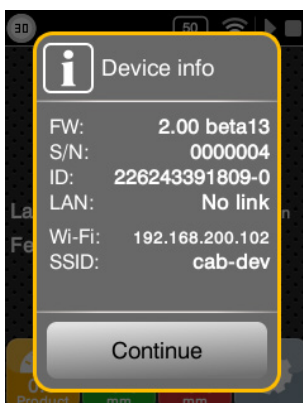


Figure 65 Status bar

The status bar displays the following information:

- Display of the speed version
- Display of the label winder
- Display of the current diameter of the label roll
- Display of the currently measured feed length
- Display of the WiFi signal strength
- Display of the status of the start and stop signal


Open information field



Pressing the status bar on the start screen opens an information field. The information field contains the system information and communication parameters.

Figure 66 Dispenser information

4.2.2 Display of messages

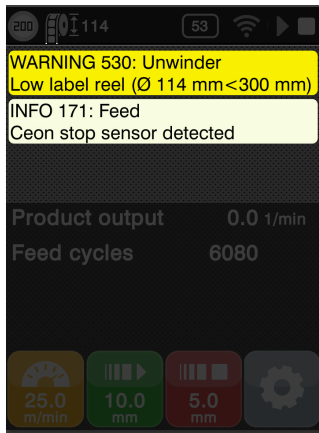

Errors

- Errors are displayed in red.
- Operating messages are not critical for the labelling process.
- Labelling is not stopped.

Warnings

- Warnings are displayed in yellow.
- The warning message only disappears when the condition is no longer met.
- Labelling is not stopped.

Information


- Information is displayed in white.
- The message disappears after 10 seconds.
- Labelling is not stopped.

Service

- Information is displayed in blue.
- If the cause cannot be resolved, contact a service technician.
- Labelling is not stopped.

Figure 67 Display of messages

4.2.3 Display of parameters quick access

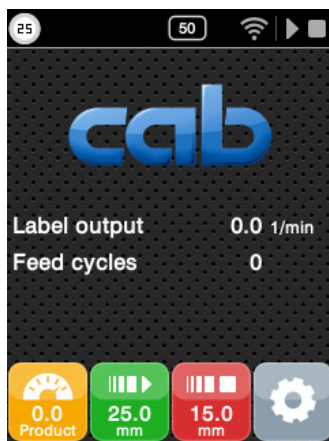

- Quick access to parameter values
- additional parameters can be added (► „Adding parameters to quick access“)

Figure 68 Parameters quick acces

Adding parameters to quick access

-
- To open the "Add as..." window, click on the desired menu item and hold it down.
- Select the desired info line and confirm with the button .
- The selected menu item is displayed on the start screen.

Figure 69 Adding parameters to quick access


4.2.4 Quick menu

Speed



The "Speed" button is used to adjust the label feed to the product speed. The feed speed of the dispenser can be adjusted. This adjustment is necessary if there is no automatic adjustment via external control.

The exact product speed must be determined for this setting. The determined value is set.

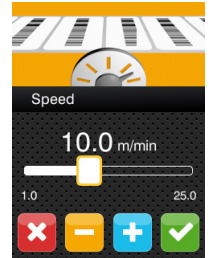


Start delay



The "Delay start" button allows the labelling position on the product to be adjusted in the transport and labelling direction.


The labelling position on the product is adjusted at right angles to the transport and labelling direction mechanically by moving the base unit on the unit retainers.

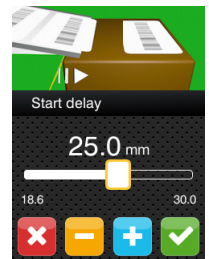

Stop delay



The "Stop delay" button determines the position of the label at the dispensing edge. The label should protrude approx. 1 mm in the waiting position.

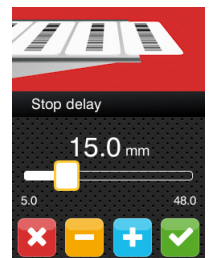

4.3 Navigating the menu

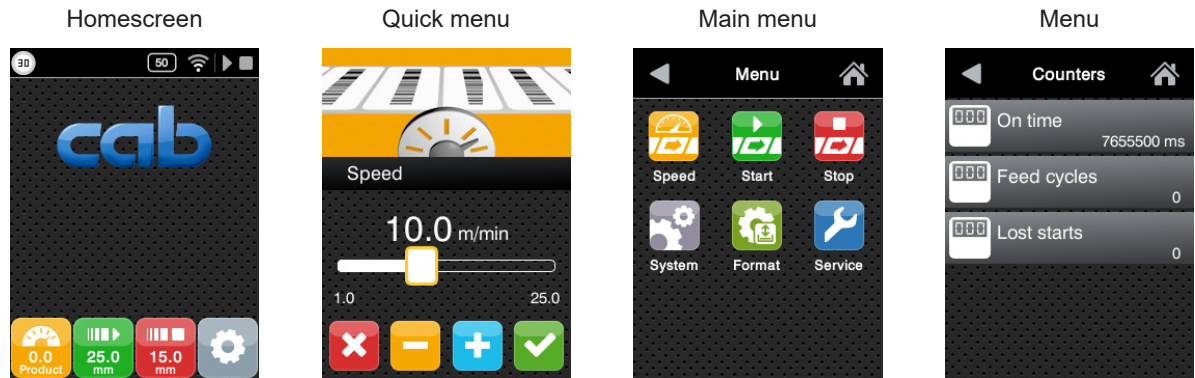


Figure 70 Menu levels

- ▶ To open the main menu, press the  button on the start screen.
 - ▶ Select the topic in the main menu.
Various themes have substructures with further selection levels.
Press  to return to the higher level, press  to return to the homescreen.
 - ▶ Continue the selection until the desired menu level is reached.
 - ▶ Select the required function. The label dispenser executes the function after a preparatory dialogue if necessary.
- OR
- ▶ Select the required parameter. The setting options depend on the type of parameter.

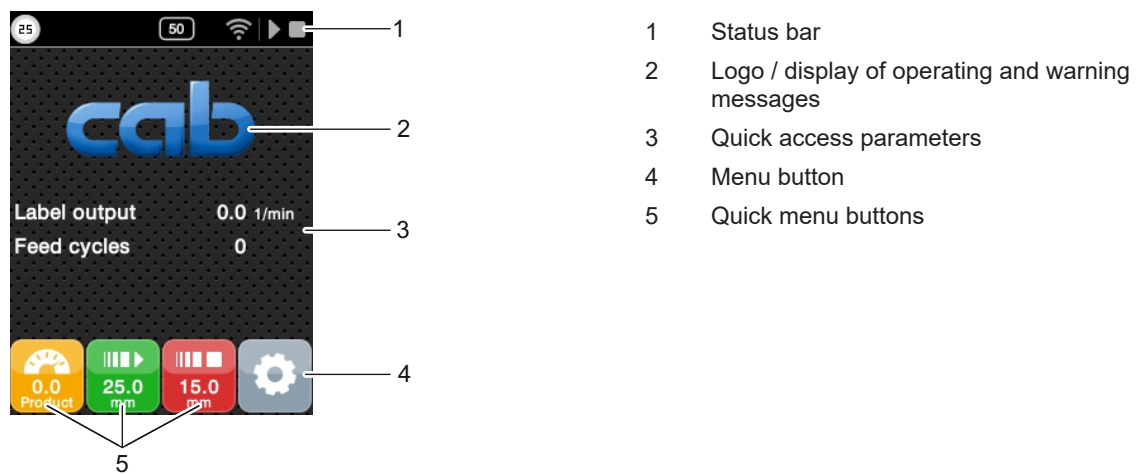


Figure 71 Homescreen

4.4 Entering values

		Slider for rough setting of the value (2)
		Gradual reduction of the value (4)
		Gradual increase of the value (5)
		Exit setting without saving (3)
		Exit setting with saving (6)
		Parameter is switched off, activation enables parameter
		Parameter is switched on, activation disables parameter
		Numeric keypad for entering the exact value. ► To open the numeric keypad, press the value (1) to be changed. The numeric keypad opens.

Table 2 Entering values

5.1 Safety during operation



Warning!

Rotating parts! Ensure that clothing, hair, jewellery or similar items do not come into contact with the rotating parts.



Caution!

Risk of being cut by fast-moving paper. Do not reach into the area of the paper feed during operation!

5.2 Loading material



Note!

An example video is available in the menu under "Service -> Manual -> Install label web".

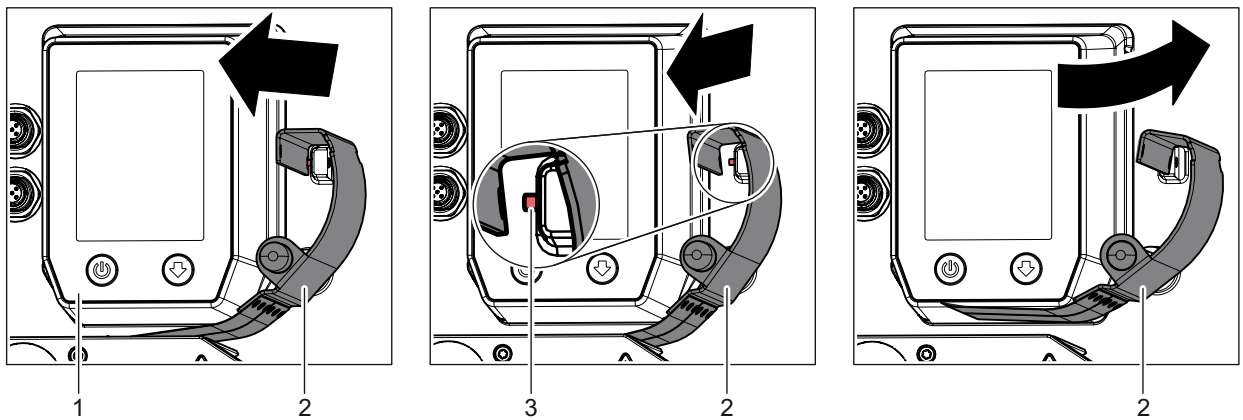



Figure 72 Releasing the web plate

1 Operating panel

3 Grub screw

2 Web brake

- ▶ Press the web brake (2) towards the operating panel (1).
- ▶ Pull the web brake (2) forwards and remove it from the grub screw (3).
- ▶ Swivel the web brake (2) to the right.

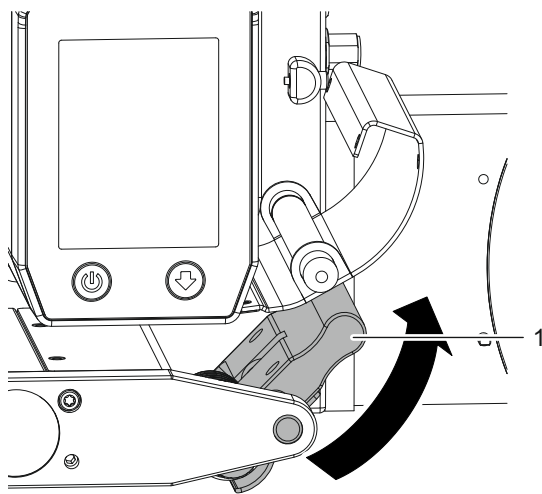

1 Pressure system

Figure 73 Opening the pressure system

- ▶ To open the pressure system, press the handle of the pressure system (1) in the direction of the operating panel.


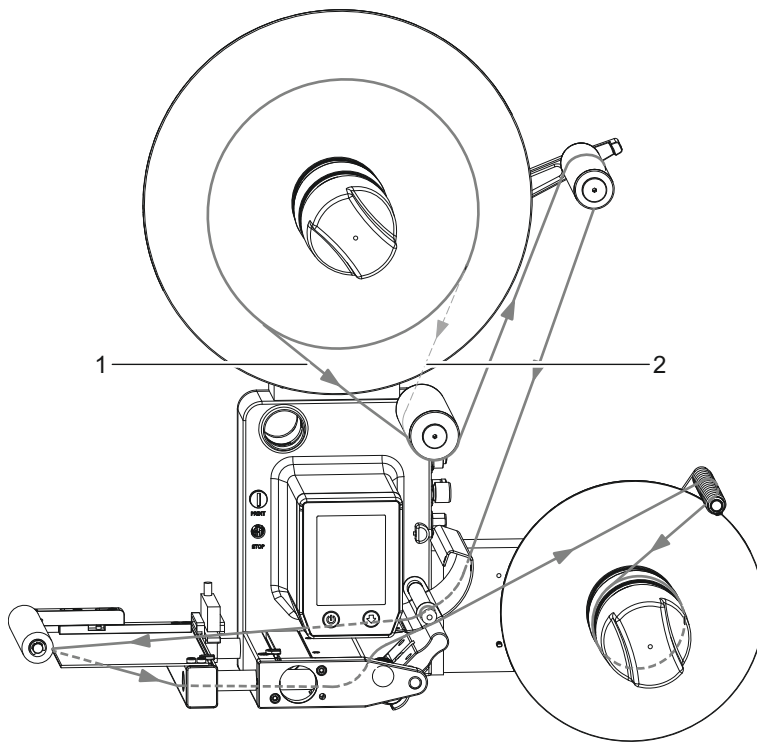


Figure 74 Paper feed, outside wound and inside wound

1 Paper feed, outside wound

2 Paper feed, inside wound

- Unwind approximately 200 cm of material (for mounting rod 100 mm) and peel off the labels on the first half.
- Insert the material as shown

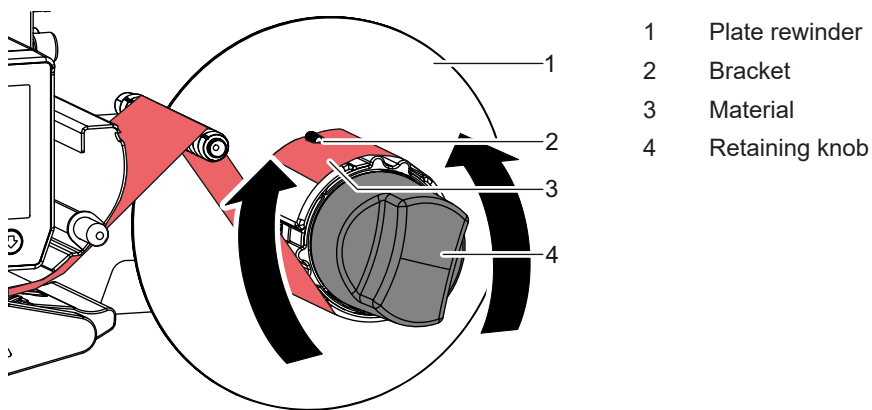


- 1 Plate rewinder
- 2 Bracket
- 3 Material
- 4 Retaining knob

Figure 75 Clamping the material

- To loosen the mandrel (5), hold the plate of the rewinder (1) and turn the retaining knob (4) clockwise.
- Place the material (3) on the mandrel as shown, and slide it under at least one bracket (2).
- To tighten the mandrel and secure the material (3), hold the plate of the rewinder (1) and turn the retaining knob (4) counterclockwise.
- Swing back the web brake (►Figure 72/1) and lock it into place.
- Fold down the pressure system (►Figure 73/1).
- To wind the material (3) tightly, turn the mandrel counterclockwise.

5.3 Andrucksystem auf Materialbreite einstellen

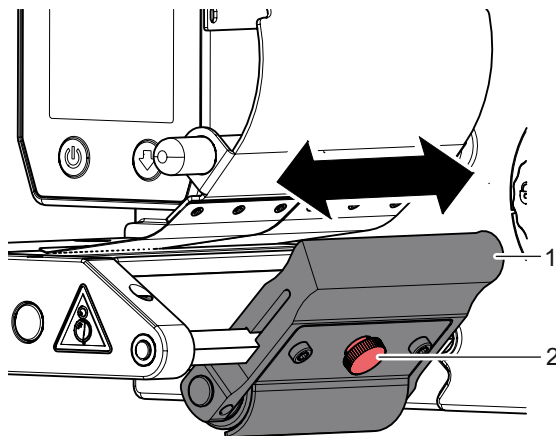

- 1 Pressure system
- 2 Thumb screw
- Pfeil Adjusting direction

Figure 76 Adjusting the pressure system



Notice!

To ensure process reliability and reproducibility, cab recommends reading the set value from the scale and recording it.

- To adjust the pressure system (1) to the material width, open the pressure system (►Figure 73/1).
- Loosen the thumb screw (2).
- Align the pressure system with the material width (arrow).



Note!

If the labels are wider than the pressure roller of the pressure system, align the pressure system in the centre of the material.

If the labels are narrower than the pressure roller of the pressure system, align the pressure system to the right of the material.

- Tighten the thumb screw (2).
- Fold down the pressure system (1).

5.4 Gerät einschalten

The  button indicates through green pulsing that the device is in standby mode. To put the device into operating mode, briefly press the  button.


5.5 Test and Synchronisation without external starting signal

After inserting the material, synchronisation of the dispensing feed is necessary.

A new synchronisation is necessary when the pressure system has been opened and the label material has been manually moved.

- Press the  button repeatedly until the first label is at the demand module of the demand unit. This also tests the function of the label sensor.

5.6 Auto-teaching the sensors

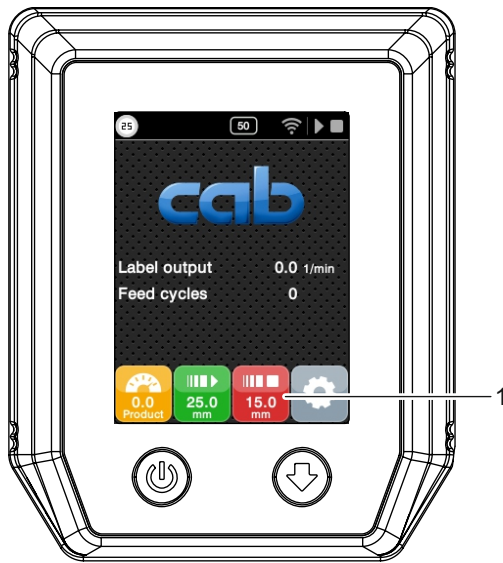

1 Stop delay button

Figure 77 Modus Auto-Teach



Note!

The push button for manual teach on the CEON sensor is deactivated by default when the CEON sensor is installed on the device.

- ▶ To access the "Auto-Teach" menu, press the Stop delay button (1) for approximately 3 seconds.
- ▶ To start the sensor calibration, press the *Continue* button.
- ▶ After successful completion of the calibration (Auto-Teach), press the *Continue* button again.

5.7 Speed button



The "Speed" button opens the parameter menu. The transport speed of the label material can be set in this menu.

The speed value is set in metres per minute.

The subdivision is in 0.1 m/min increments.

- ▶ Open the Speed menu.
- ▶ Use the  slider to preset the value.
- ▶ If necessary, fine-tune the value using the  and  buttons.
- ▶ To test the setting, press the pre-dispense button .
- ▶ Confirm with the  button.



5.8 Start delay button




The "Start delay" button opens the parameter menu. The delay of the dispensing start can be set in this menu.

The value of the delay is set in millimetres.

The subdivision is in 0.1 mm steps.

- ▶ Open the Delay start menu.
- ▶ Use the  slider to preset the value.
- ▶ If necessary, fine-tune the value using the  and  buttons.
- ▶ To test the setting, press the pre-dispense button .
- ▶ Confirm with the  button.

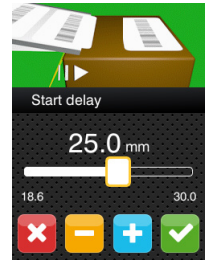

5.9 Stop delay button




The "Stop delay" button opens the parameter menu. The stop delay after the label feed can be set in this menu. The position in relation to the demand module can thus be varied.

The value of the delay is set in millimetres.

The subdivision is in 0.1 mm steps.

- ▶ Open the Stop delay menu.
- ▶ Use the  slider to preset the value.
- ▶ If necessary, fine-tune the value using the  and  buttons.
- ▶ To test the setting, press the pre-dispense button .
- ▶ Confirm with the  button.

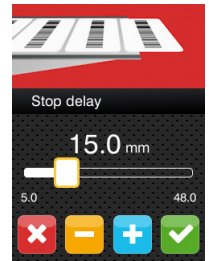

6.1 Safety during cleaning


Danger!

Danger to life from electric shock!

- ▶ Disconnect the device from the power supply before all cleaning work.


Attention!

Damage to the device from harsh cleaning agents!

- ▶ Do not use abrasive cleaners or solvents to clean the outer surfaces or assemblies.
- ▶ Use a suitable plastic cleaner or mild soapy water to clean plastic parts.


Note!

It is recommended to clean the device once a month.

Empfohlene Reinigungsmittel

Surfaces on the device	Isopropanol 70-100%
Rewind guide roller	Roller cleaner WR1 (Part No. 9200051)

Table 3 Empfohlene Reinigungsmittel

6.2 Cleaning the outer surface

- ▶ Clean the outer surfaces with Isopropanol 70-100%

6.3 Cleaning the touchscreen display

- ▶ Clean the touchscreen with a dry, lint-free cloth. Wipe the touchscreen with light circular movements. Do not apply pressure to the screen.
- ▶ For heavier soiling, use special cleaning cloths and screen cleaners for touchscreens if necessary.

6.4 Cleaning the rewind guide roller

Soiling on the rewind guide roller can impair material transport.

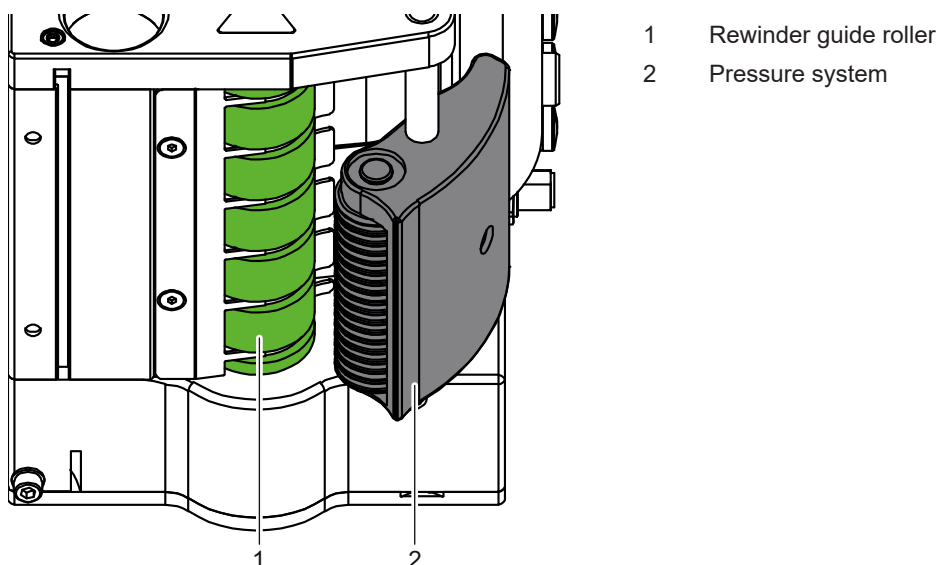


Figure 78 Cleaning the rewind guide roller

- ▶ Open the pressure system (2).
- ▶ Remove labels and transfer ribbon from the label dispenser.
- ▶ Remove deposits with roller cleaner WR1 and a soft cloth.

6.5 Cleaning the pinch roller

- Releasing the brake plate (► „5.2 Material einlegen“).


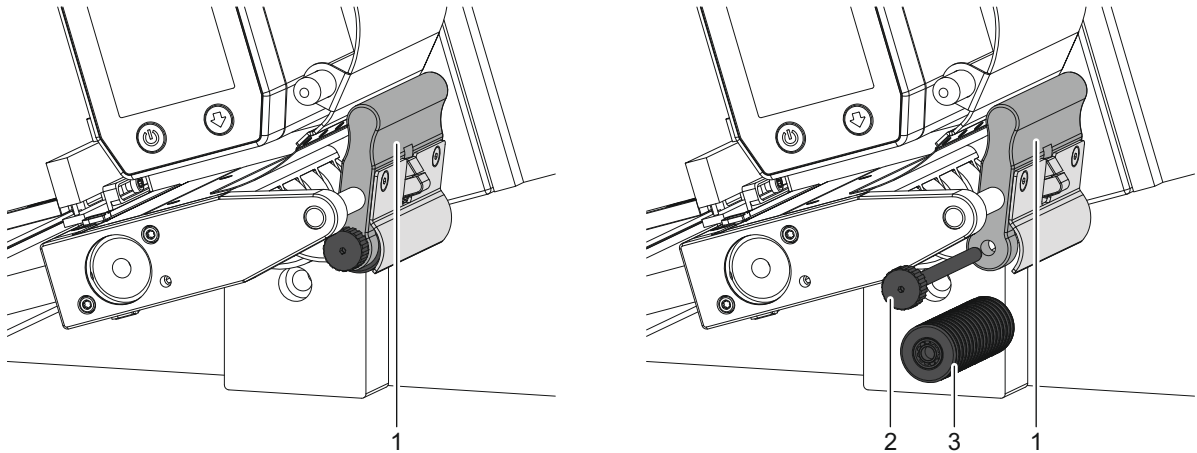


Figure 79 Cleaning the pinch roller

- | | |
|-------------------|----------------|
| 1 Pressure system | 3 Pinch roller |
| 2 Splint pin | |

- To open the pressure system, push the pressure system (1) towards the web brake.
- Pull out the splint pin (2).
- Remove the pinch roller (3).
- Clean the pinch roller (3) with Isopropanol 70-100%.
- Installation of the cleaned pinch roller is carried out in reverse order.

6.6 Cleaning the deflection rollers

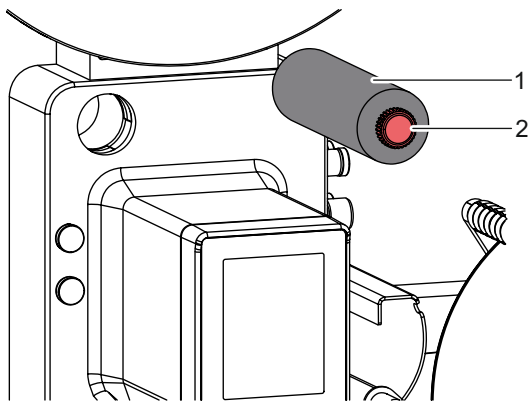


- | |
|------------------------------|
| 1 Deflection roller, example |
| 2 Thumb screw |

Figure 80 Cleaning the thumb screw, example

- Loosen the thumb screw (2).
- Remove the pinch roller (1).
- Clean the pinch roller (1) with Isopropanol 70-100%.
- Installation of the cleaned pinch roller is carried out in reverse order.

6.7 Cleaning the guide plate

- Remove the label web from the machine.

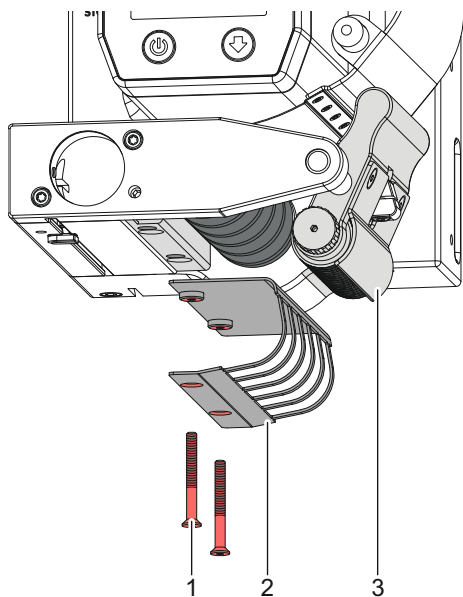

- 1 Screw
- 2 Guide plate
- 3 Pressure system

Figure 81 Cleaning the guide plate

- To open the pressure system, push the pressure system (3) towards the web brake.
- Loosen the screws (1).
- Remove the guide plate (2).
- Clean the guide plate (2) with Isopropanol 70-100%.

The following error messages are relevant for the user. The user may be able to eliminate the causes.



Caution!

Contact a service technician in the case of faults whose causes cannot be rectified or which are not listed here.



Note!

A complete list of notifications is available at https://www.cab.de/ftp/media/firmware/ixor/doc/current/messages_en.html.

7.1 Information

Information indicates operating statuses in the process or on the appliance.

ID	Displayed text	Description	How to fix
160	Stop delay > label length	The entered stop delay exceeds the currently measured label length. This results in the feeding of at least two labels for a single START signal, as after receiving the STOP signal the labelinghead will feed a stop delay distance bigger than one label.	Decrease the stop delay.
161	Minimum stop delay changed	The minimum stop delay has been altered. The minimum stop delay determines the smallest adjustable stop delay. If only this message appears (without message 163), the set stop delay has not been changed. The minimum stop delay directly depends on the maximum speed parameter.	Decrease the maximum speed.
162	Minimum start delay changed	The minimum start delay has been altered. The minimum start delay determines the smallest adjustable start delay. If only this message appears (without message 164), the set start delay has not been changed. The minimum start delay directly depends on the maximum speed parameter.	Decrease the maximum speed.
165	Max. feed length < label length	The maximum feed length has been decreased below the currently measured label length/ feed length. This would result in a too short feed the next time the manual feed button is pressed and the message 166 is created.	Increase the maximum feed length.
166	Clamp roller open	The manual feed was executed. No STOP signal was received.	Close the pressure system or check the stop sensor.

Table 4 Information

7.2 Warnings

Warnings indicate critical conditions that can lead to an interruption in ongoing operation.

ID	Displayed text	Description	How to fix
130	Reverse master encoder direction	Several START signals were received when the detected product speed has been negative.	Check whether the product speed displayed in the "Speed" quick menu has a positive value when the master encoder is rotating. Change the direction of rotation in the software.
530	Low label reel (Ø §<§)	The reel diameter on the unwinder has fallen below the threshold given by the DIM diameter parameter (System - Presets - DIM diameter).	The warning can be switched off under "DIM diameter" by setting the parameter to the minimum value.

Table 5 Warnings

7.3 Errors

Error messages indicate faults that lead to an interruption in ongoing operation.

ID	Displayed text	Description	How to fix
101	Missing labels	The device has detected a number of missing labels in a row on the label web.	Check the label material. Check the stop sensor.
107	Label web broken	The label web was broken during a feed.	Check the label web path for one-sided stress Check if the clamp roller's guard plate is too close to the shaft.
501	End of label reel	End of label reel on unwinder was detected.	Check the label reel.

Table 6 Error messages

**Note!**

A complete list of parameters is available at <https://www.cab.de/ftp/media/firmware/ixor/doc/current/parameters.html>.

ID	Symbol	Name	Min	Max	Default
5		Speed	1 m/min	30 m/min	20 m/min
22		Start delay	16,3 mm	29 mm	20 mm
46		Stop delay	7 mm	51,9 mm	10 mm

Table 7 Parameters

9.1 Overview

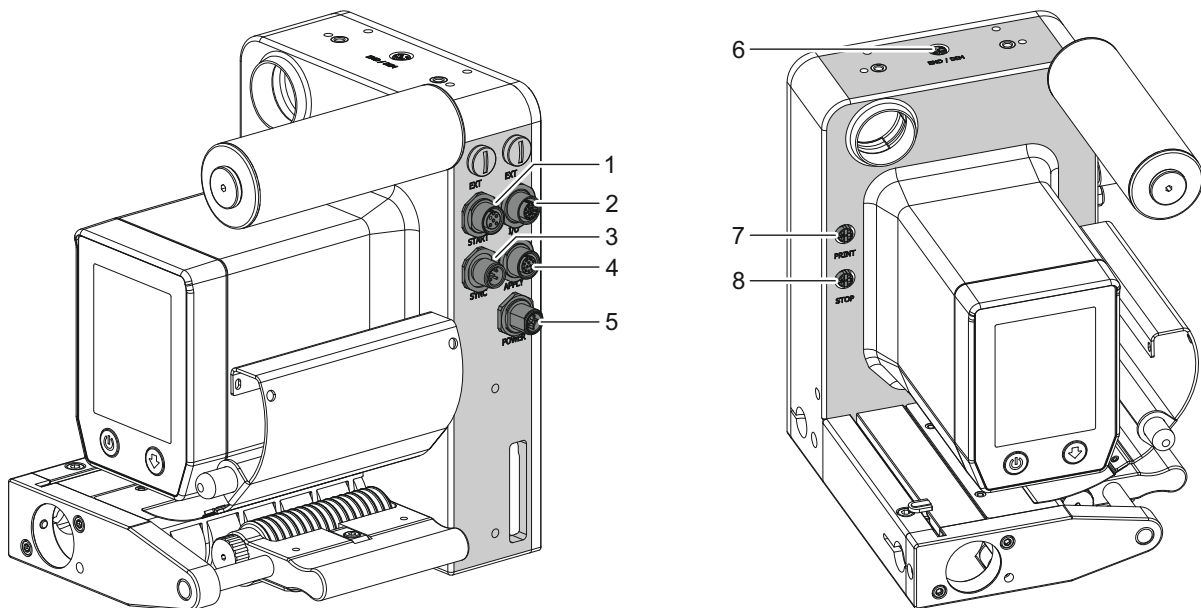


Figure 82 Interfaces

- | | | | |
|---|-------|---|-----------|
| 1 | START | 5 | POWER |
| 2 | I/O | 6 | END / DIM |
| 3 | SYNC | 7 | PRINT |
| 4 | APPLY | 8 | STOP |

9.2 Interface specification

Digital inputs	Digital outputs
- Conform to IEC/EN 61131-2 (Type 1+3) - Operating voltage: 24 V DC (18..30 V) - Switching logic: PNP - Low level „0“: < 5 V DC - High level „1“: > 15 V DC - Input current per channel in 4..5 mA (at 24 V DC) - Reverse polarity protection: Yes - ESD protection: up to 8 kV - Galvanic isolation: 3,75 kV	- Conform to IEC/EN 61131-2 - Operating voltage: 24 V DC (18..30 V) - Max. output current: - Internal 24V per channel out: 500mA - total: 500mA - External 24V per channel out: 700mA - total: 1000mA - Overload protection: Yes - Short-circuit proof: Yes - Reverse polarity protection: Yes - ESD protection: up to 8 kV - Galvanic isolation: 3,75 kV - ESD-Schutz: bis 8 kV - Galvanische Trennung: 3,75 kV

Table 8 Interface specification

9.3 START

Interface to start labeling and roller prism

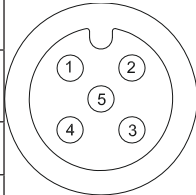
Pin	Symbol	I/O	Description	Color	
1	24V	OUT	Power supply	brown	
2	PRISM	IN	Start product centering (e.g. roller prism)	white	
3	GND		Ground	blue	
4	START	IN	Start labeling	black	
5	START_X	IN	Internal test pin	gray	

Table 9 START pin assignment

9.4 I/O

Interface for PLC or signal lights

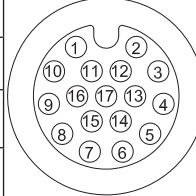
Pin	Symbol	I/O	Description	Color	
1	24V	IN	Power supply	brown	
2	GND		Ground	blue	
3	BTN_FEED	OUT	Button FEED pressed	white	
4	FEED	IN	Manual label feed	green	
5	START	IN	Labeling start	pink	
6	LOCK	I/O	Labeling locked	yellow	
7	STOP	I/O	Stop label feed	black	
8	FEEDING	OUT	Label transport in motion	gray	
9	NO_LABEL	OUT	Missing label on label web	red	
10	READY	OUT	Device ready for START	violet	
11	DIM	OUT	Diminishing label reel	gray pink	
12	END	OUT	End of label reel	red blue	
13	ERROR	OUT	Device error	white green	
14	RESET	IN	Reset error	brown green	
15	ON	IN	Device ON (only if on/off switch has been disabled)	white yellow	
16	USER_IN	IN	User defined input	yellow brown	
17	USER_OUT	OUT	User defined output	white gray	

Table 10 I/O pin assignment

9.5 SYNC

Speed synchronization e.g. via master encoder

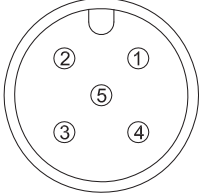
Pin	Symbol	I/O	Description	Color	
1	24V	OUT	Power supply	brown	
2	ME_A	IN	Master encoder channel A	white	
3	GND		Ground	blue	
4	ME_B	IN	Master encoder channel B	black	
5	ME_X	IN	Internal test pin	gray	

Table 11 SYNC pin assignment

9.6 APPLY

Connection to the applicator module

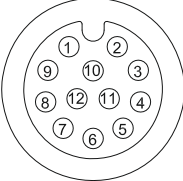
Pin	Symbol	I/O	Description	Color	
1	24V	OUT	Power supply	brown	
2	GND		Ground	blue	
3	5V	OUT	USB power supply	white	
4	USB1_P	I/O	USB data line +	green	
5	USB1_N	I/O	USB data line -	pink	
6	GND		USB ground	yellow	
7	APPLY	OUT	Applicator unit (Pivot dispensing plate, telescope ...)	black	
8	TAMP_HOME	IN	Applicator unit in home position	gray	
9	TAMP_END	IN	Applicator unit in work position	red	
10	BLOW	OUT	Blow off the label	violet	
11	PRT	OUT	Start printing	orange	
12	PRT_BUSY	IN	Printer busy/printer error	dark red	

Table 12 APPLY pin assignment

9.7 POWER

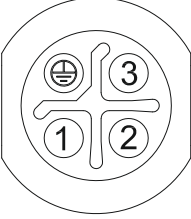
Pin	Symbol	I/O	Description	Color 5918758	Color 5918531	
1	L	IN	Phase	black red	brown	
2	DATA	I/O	cab PowerBus	black white	N/C	
3	N	IN	Neutral conductor	black green	blue	
4	PE 	IN	Protective earth conductor	green yellow	green yellow	

Table 13 POWER pin assignment

9.8 END / DIM

Sensor for end of reel/diminishing label reel (internal or external)

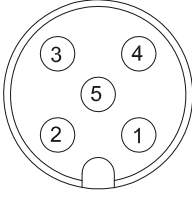
Pin	Symbol	I/O	Description	Color	
1	24V	OUT	Power supply Sensor	brown	
2	DIM_IN	IN	End of label reel sensor	white	
3	GND_i		Ground	blue	
4	END_IN	IN	Diminishing label reel sensor	black	
5	END_DIM	IN	END/DIM sensor 3,3V only	gray	

Table 14 END / DIM pin assignment

9.9 PRINT

Peripheral interface; Plugging a printer or controlling an applicator with power supply 24VDC, 2A

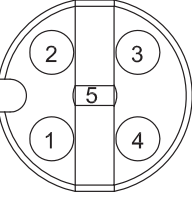
Pin	Symbol	I/O	Description	Color	
1	24V	OUT	Power supply	brown	
2	APPLY	OUT	Applicator unit (Pivot plate, telescope ...)	white	
3	GND		Ground	blue	
4	PRT	OUT	Print signal	black	
5	PRT_BUSY	IN	Printer busy/printer error	gray	

Table 15 PRINT pin assignment

9.10 STOP

Plugging a label sensor, optical or inductive detection

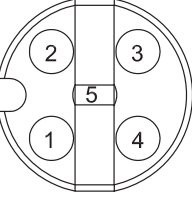
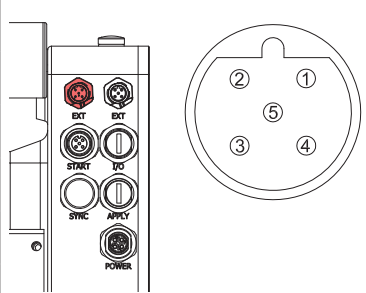
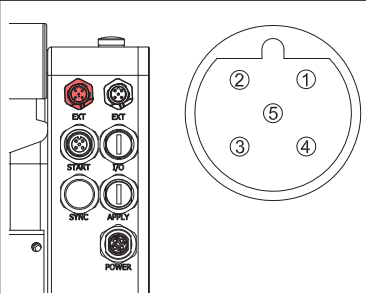
Pin	Symbol	I/O	Description	Color	
1	24V	OUT	Power supply	brown	
2	TEACH	OUT	“Teach“ the label sensor and cab SensorBus	white	
3	GND		Ground	blue	
4	STOP	IN	Stop label feed (label sensor)	black	
5	PE	OUT	Protective earth for sensor housing	gray	

Table 16 STOP pin assignment


9.11 RS232 - optional

Pin	Symbol	I/O	Description	Color	
1	+5V	Out	+5V	brown	
2	TXD	I/O	RS232 TXD	white	
3	GND		RS232 Ground	blue	
4	RXD	I/O	RS232 RXD	black	
5	PE		PE on cable protection	—	


9.12 RS485 IN - optional

Pin	Symbol	I/O	Description	Color	
1			NC	brown	
2	RS485A	I/O	Bus cable RS485 A	white	
3			NC	blue	
4	RS485B	I/O	Bus cable RS485 B	black	
5	PE		PE on cable protection	—	


9.13 RS485 OUT - optional

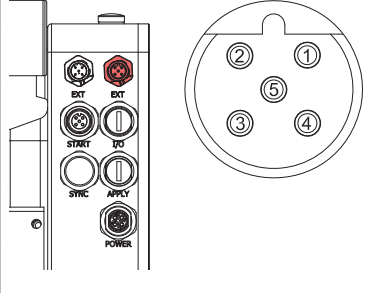Pin	Symbol	I/O	Description	Color	
1	+5V	IN	+5V	brown	
2	RS485A	I/O	Bus cable RS485 A	white	
3	GND		RS232 Ground	blue	
4	RS485B	I/O	Bus cable RS485 B	black	
5	PE		PE on cable protection	—	


9.14 LAN Port 1 & Port 2- optional

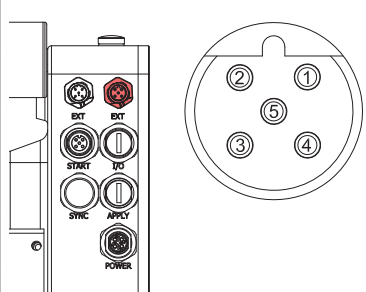Pin	Symbol	I/O	Description	Color	
1	TD+	I/O	Ethernet TD+	brown	
2	RD+	I/O	Ethernet RD+	white	
3	TD-	I/O	Ethernet TD-	blue	
4	RD-	I/O	Ethernet RD-	black	
5	PE		PE on cable protection	—	

10.1 Start Sensor

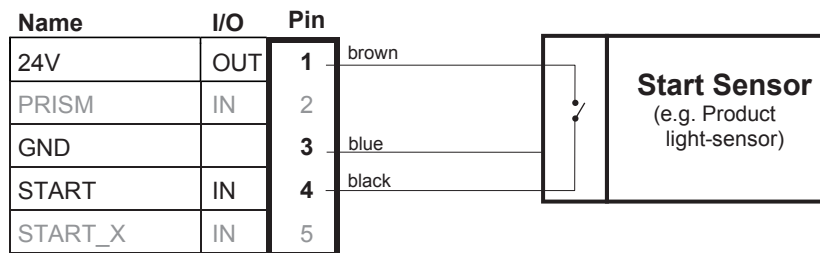
START (M12 5-pin)

10.2 Connection to a PLC

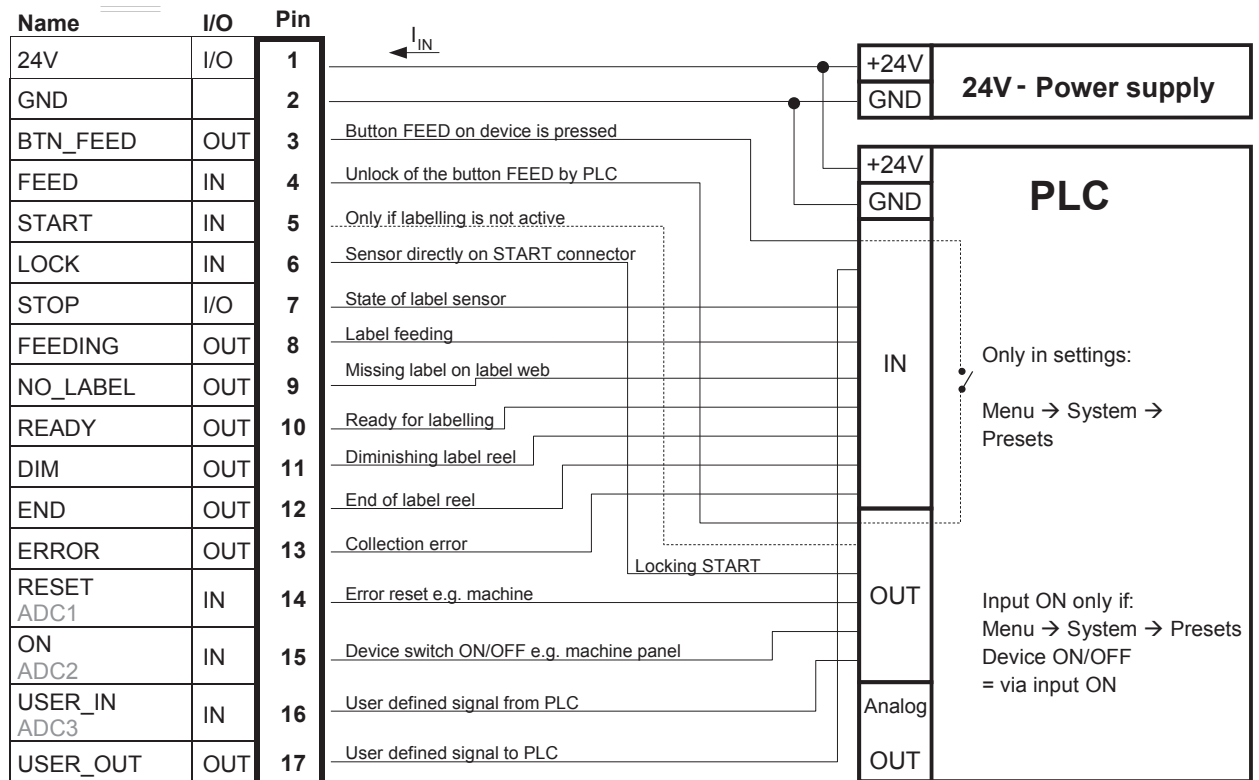I/O (M12 17-pin)


10.3 Controlling via PLC

I/O (M12 17-pin)

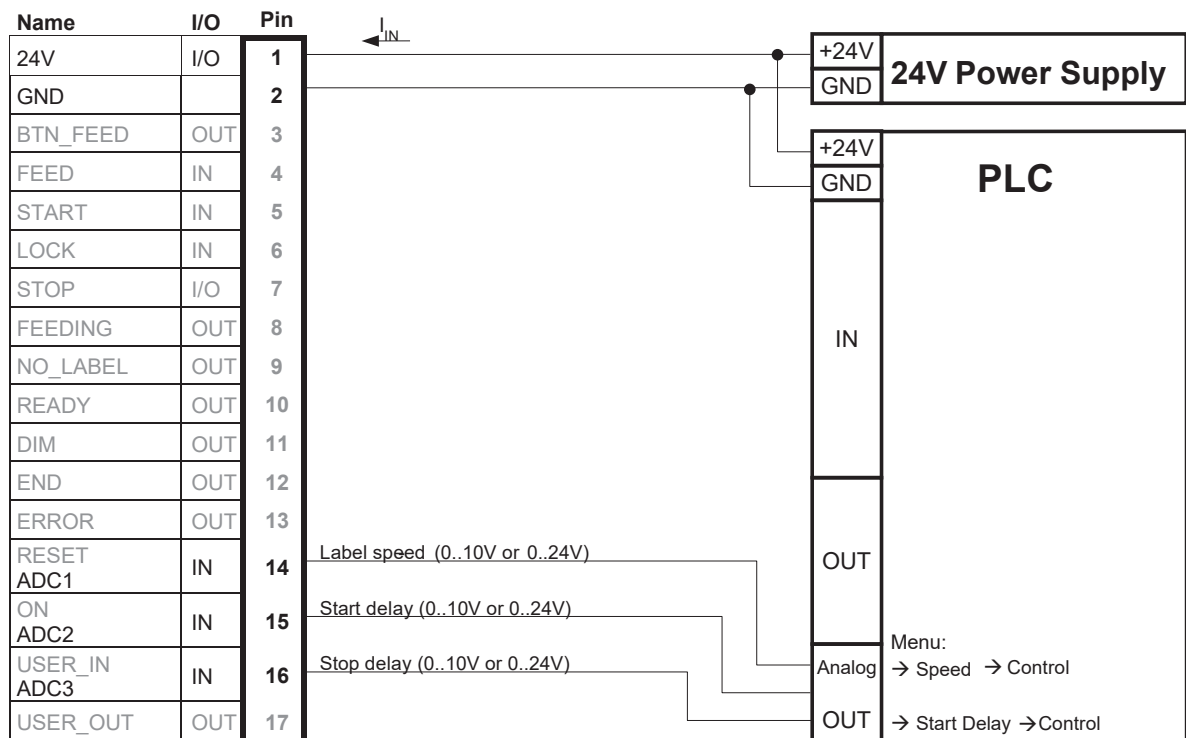

10.4 Controlling via manual regulator

I/O (M12 17-pin)

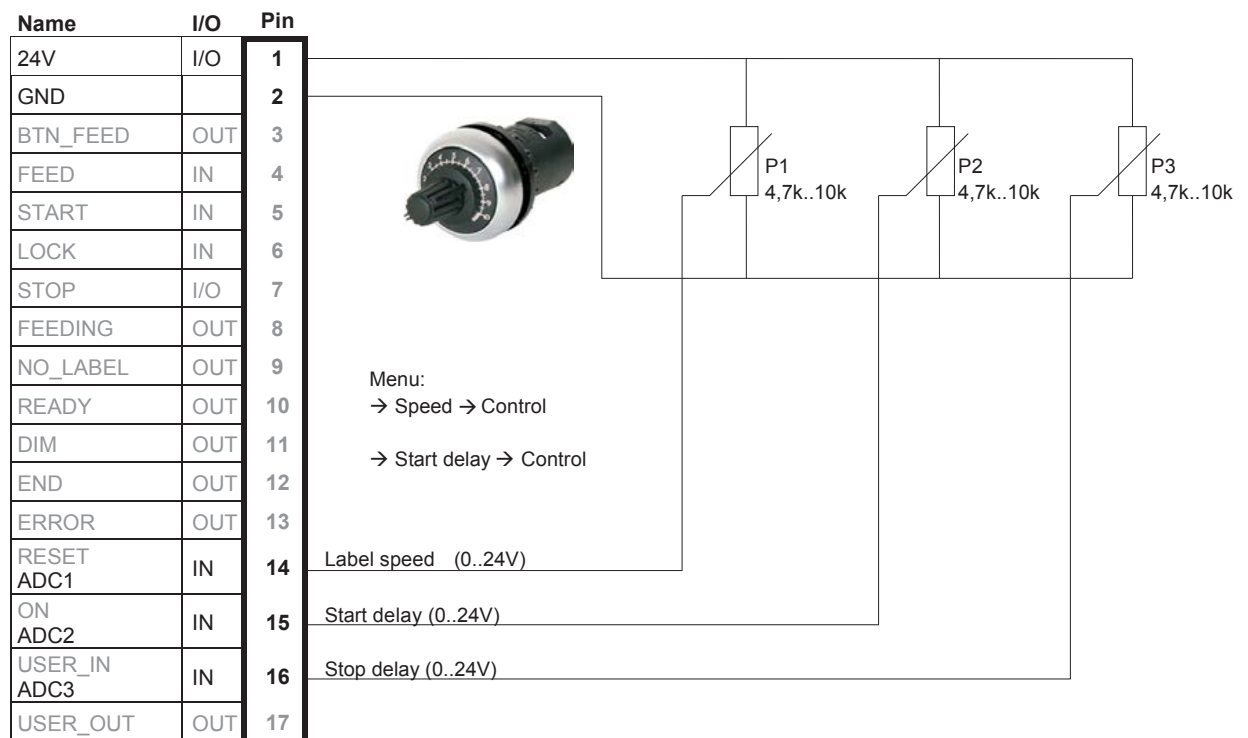

10.5 Connecting a Signal Light

I/O (M12 17-pin)


Name	I/O	Pin
24V	I/O	1
GND		2
BTN_FEED	OUT	3
FEED	IN	4
START	IN	5
LOCK	IN	6
STOP	I/O	7
FEEDING	OUT	8
NO_LABEL	OUT	9
READY	OUT	10
DIM	OUT	11
END	OUT	12
ERROR	OUT	13
RESET	IN	14
ON	IN	15
ADC1		16
ADC2		17
USER_IN	IN	
ADC3		
USER_OUT	OUT	

0	GND
1	green
2	yellow
3	red
4	free
5	free




10.6 CEON label sensor

Pin assignment M12 5-pin a-coded

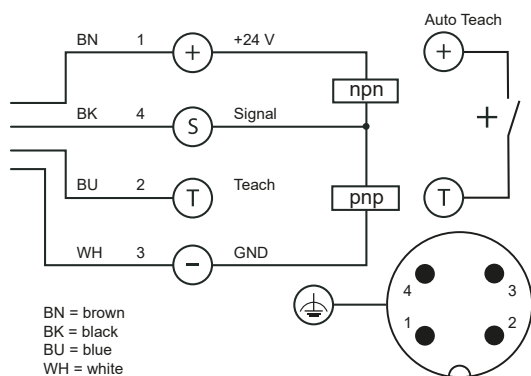

I/O

I/O interface (e. g. for PLC or signal lights)

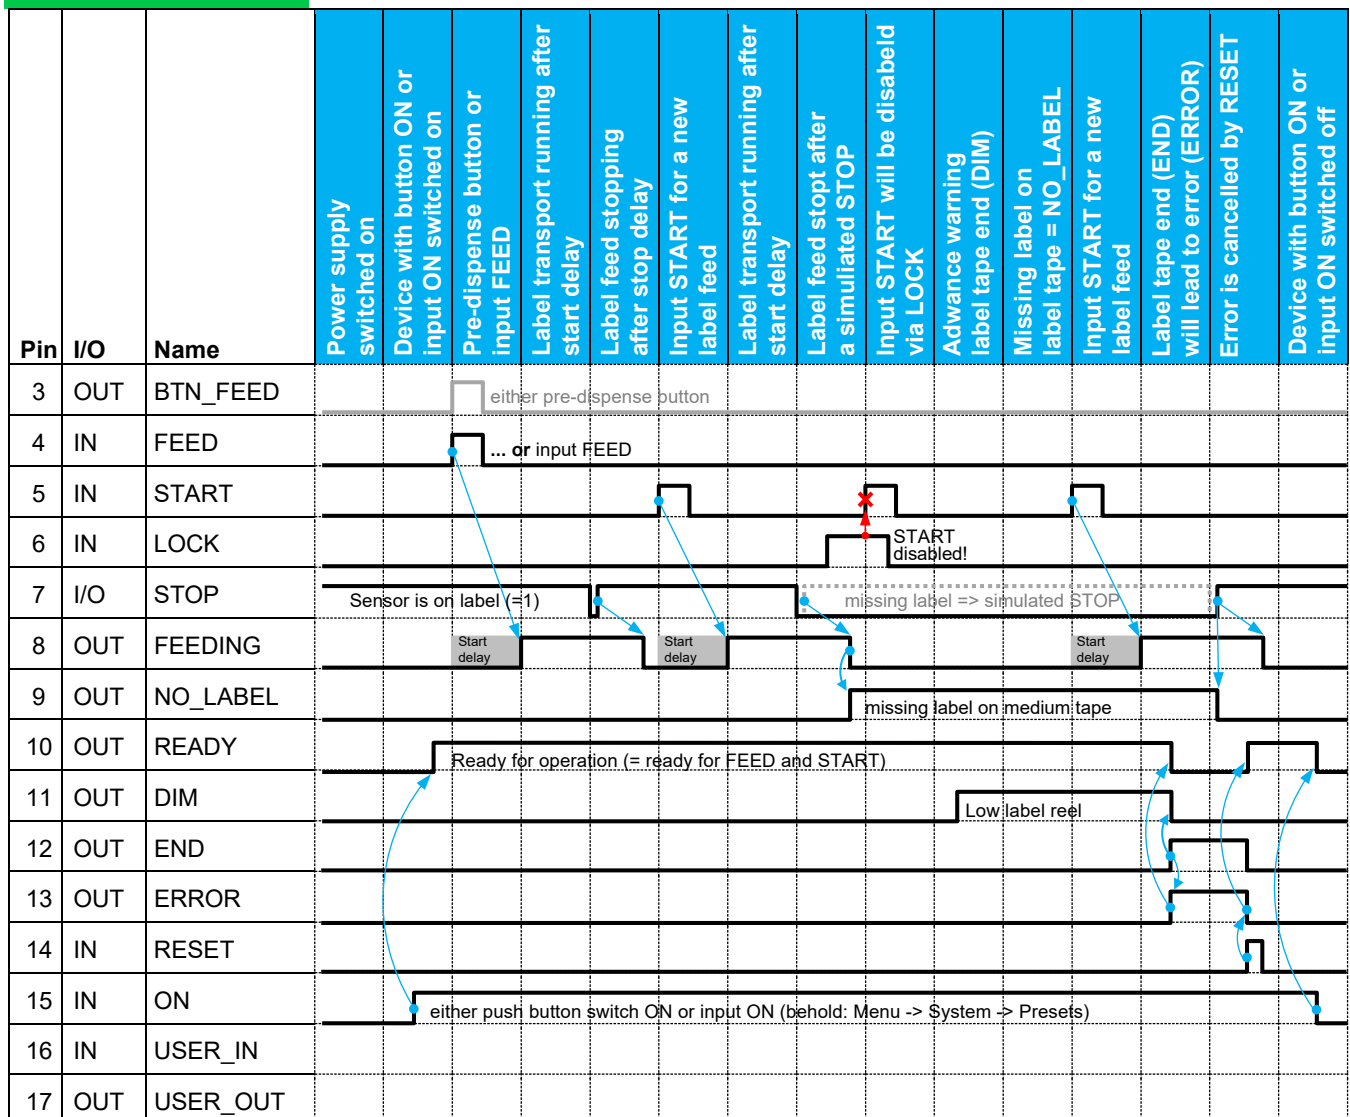

Width of a roll on IXOR+		mm max.	62	124	186
Label web speed when operating					
mechanical unwinder, rewinder	m/min max.		50		
mech. unwinder, motoric rewinder	m/min max.		75		
motoric unwinder, rewinder	m/min max.		120 (200 upon request)		
Cycle rate	labels/min		It is determined by the length of a label and the speed of an item running on a conveyor and can be simulated on the operation panel.		
Installation			vertical / horizontal		
Direction to which labels are provided			L = to the left, R = to the right		
Material ¹⁾					
Label	on a roll		paper, synthetics PET, PE, PP, PVC / booklets upon request		
	Width	mm	10 - 58	10 - 120	10 - 182
	Length at feeding	mm	10 - 6,000		
	Gap	mm at least	2		
	Thickness	mm	0.055 - 1.0		
Liner	Width	mm	15 - 62	15 - 124	15 - 186
Roll	Weight	kg max.	15		
Unwinder	Outside diameter	mm	mechanical 310, 410 / motoric 410 (510 upon request)		
	Core diameter	mm	76		
	Winding		outside or inside		
Rewinder	Outside diameter	mm	mechanical 210, 290 / motoric 310 (410 upon request)		
	Core diameter	mm	92		
Label sensor					
Distance to locating edge	Features		detection of label margins and materials ending		
	CEON	mm	9 - 30	9 - 60	9 - 90
	GAB 500-1	mm	7.5 - 17.5		
	GAB 500-2	mm	8 - 40		
Operating data					
Voltage			100 - 240 V~, 50 - 60 Hz		
Current consumption			100 VAC up to 5 A / 240 VAC 2,5 A		
Temperature / humidity	Operation		5° - 40 °C / 10 % - 85 %, not condensing		
	Stock		0° - 60 °C / 20 % - 85 %, not condensing		
Transport			-25° - 60 °C / 20 % - 85 %, not condensing		
Approvals			CE, FCC Class A, ICES-3, cULus, CB		
Protection class			IP 66		
Operation panel					
		LED	ON / OFF, FEED		
LCD graphics display		Width x Height mm	54 x 70		
Control					
			Prior warning to a label web ending, label web ending, broken liner torque, temperature, voltage		

¹⁾ Limitations can occur when processing small labels, thin materials or materials using a strong adhesive. Such applications require testing.

Table 17 Technical data

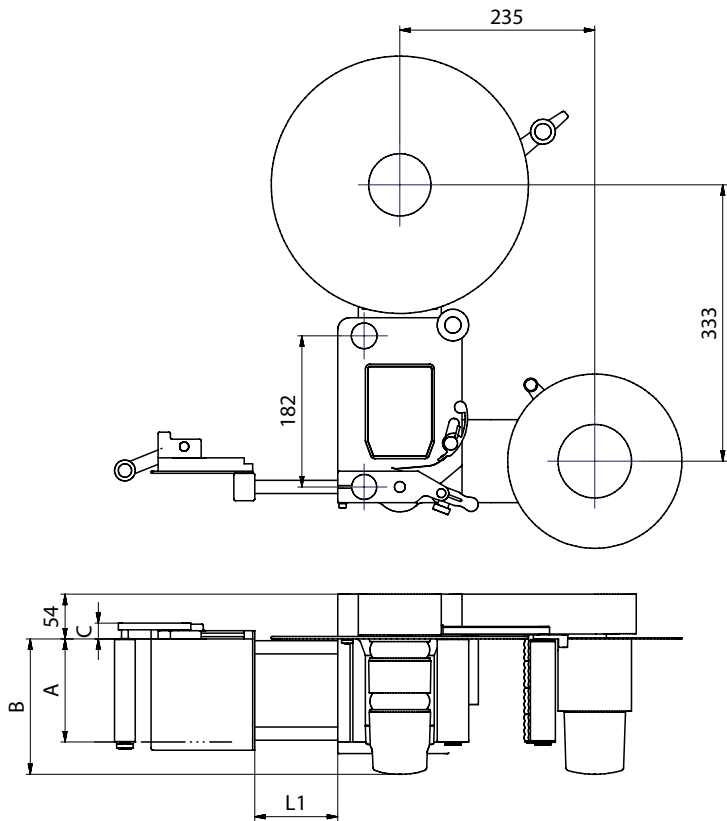


Figure 83 Device dimensions

	Dimensions A mm	Dimensions B mm	
		Installation	
Width of a roll	62	vertical	163
	124	horizontal	163
	186		225

Demand module	Dimensions C mm
SP	19
SPE	24
SPFA	19

Mounting rod	Dimensions L1 mm
MS 25	25
MS 100	100
MS 200	200
MS 300	300
MS 400	400

Table 18 Device dimensions

13.1 Declaration of Incorporation




cab Produkttechnik
GmbH & Co KG
Wilhelm-Schickard-Str. 14
D-76131 Karlsruhe
Germany

EC Declaration of Incorporation

We declare herewith that the following „partly completed machinery“ as a result of design, construction and the version put in circulation complies with the essential requirements of the Directive 2006/42/EC on machinery :

Annex I, Article 1.1.2, 1.1.3, 1.1.5, 1.1.6, 1.2.1, 1.2.4.1, 1.3.2, 1.5.1, 1.5.2, 1.5.8, 1.6.3, 1.7

In the event of any alteration which has not been approved by us being made to any device as designated below, this statement shall thereby be made invalid.

Device	Label dispenser
Type	IXOR, IXOR*
Applied EU Regulations	Applied Standards
Directive 2006/42/EC on machinery	EN ISO 12100:2010
	EN ISO 13854:2019
	EN 62368-1: 2014/AC:2015
Other Relevant Directives	
• Directive 2014/30/EU relating to electromagnetic compatibility • Directive 2011/65/EU on the restriction of the use of certain hazardous substances in electrical and electronic equipment	
Person authorised to compile the technical file	Marcel Michalski Am Unterwege 18/20 99610 Sömmerda
Signed for, and on behalf of the Manufacturer	Karlsruhe, 19.03.2026  Klaus Bardutzky Managing Director
cab Produkttechnik GmbH & Co KG Wilhelm-Schickard-Str. 14 D-76131 Karlsruhe	

The product must not be put into service until the final machinery into which it is to be incorporated has been declared in conformity with the provisions of the Directive on machinery.

The documents according annex VII part B from the incomplete machinery are created and will commit to state agencies on request in electronic kinds.


13.2 EU Declaration of Conformity



cab Produkttechnik
GmbH & Co KG
Wilhelm-Schickard-Str. 14
D-76131 Karlsruhe
Germany

EU Declaration of Conformity

We declare herewith that the following device as a result of design, construction and the version put in circulation complies with the relevant fundamental regulations of the EU Rules for Safety and Health. In the event of any alteration which has not been approved by us being made to any device as designated below, this statement shall thereby be made invalid.

Device	Label dispenser
Type	IXOR, IXOR ⁺
Applied EU Regulations	Applied Standards
Directive 2014/30/EU relating to electromagnetic compatibility	EN 55032:2015+A11:2020
	EN 55035:2017+A11:2020
	EN 61000-3-2:2014
	EN 61000-3-3:2013
	EN 61000-6-2:2005/AC:2005
Directive 2011/65/EU on the restriction of the use of certain hazardous substances in electrical and electronic equipment	EN IEC 63000:2018
Commission delegated directive (EU) 2015/863 amending Annex II to Directive 2011/65/EU of the European Parliament and of the Council as regards the list of restricted substances	
Signed for, and on behalf of the Manufacturer	Karlsruhe, 19.03.2026
cab Produkttechnik GmbH & Co KG Wilhelm-Schickard-Str. 14 D-76131 Karlsruhe	 Klaus Bardutzky Managing Director