


BTE13-010A: connection and programming map

Component side: serial header LEFT, crystal and reset button RIGHT (photos in docs/reference/).

Read the actual silkscreen before soldering. Diagram is not a footprint or regulator-removal template.

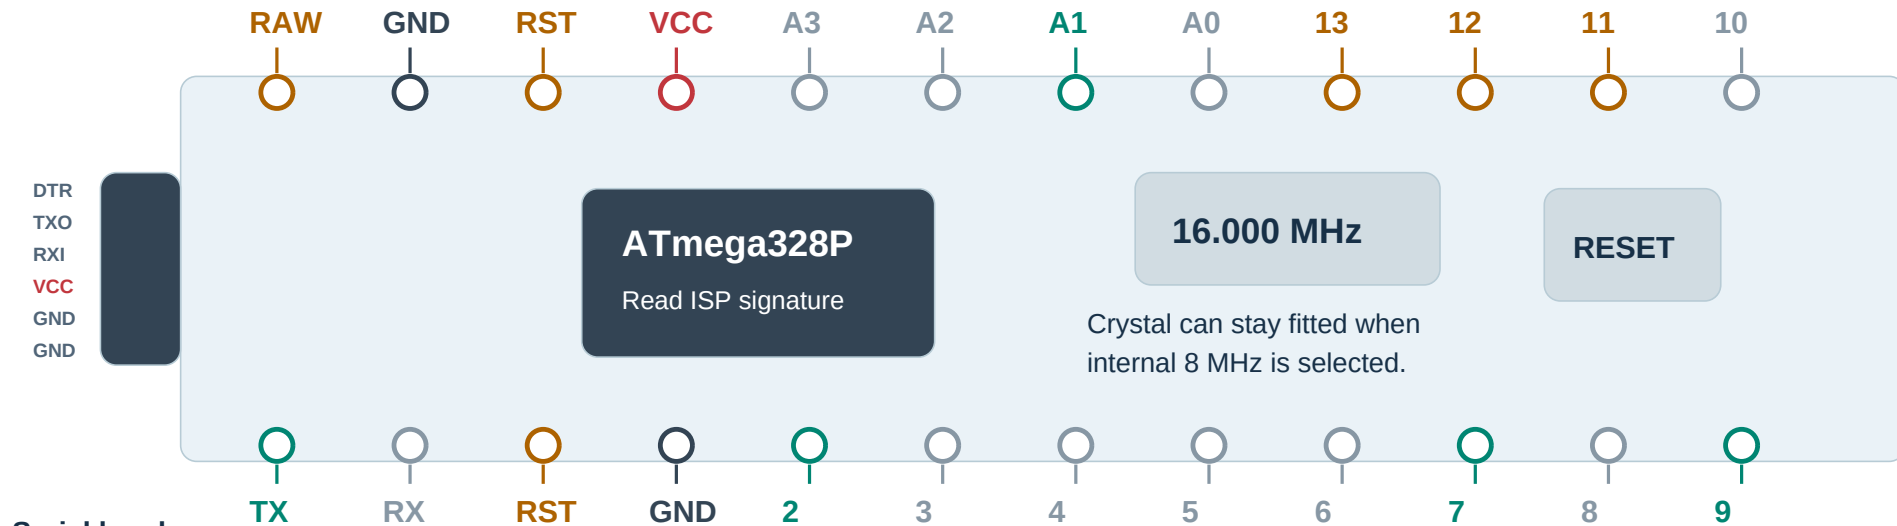

Serial header

Not the ISP connector

Its VCC = top-row VCC (same rail)

OPERATING CONNECTIONS

Power goes into VCC (top row or header); RAW = never
VCC = protected battery; GND = OUT-; A1 = LDR sense; 7 = LDR power
9 = LED PWM; TX = telemetry to Q2; 2 = test button to GND
Regulator / power LED removed only after trace identification.

ISP CONNECTIONS / BOARD DISCONNECTED FROM BUILD

MOSI -> 11 MISO -> 12 SCK -> 13 RESET -> RST
Also connect target VCC and GND; use compatible voltage.
Set fuses once: L 0xE2, H 0xD9, E 0xFD (8 MHz internal).
A USB-to-serial adapter alone cannot perform this conversion.