

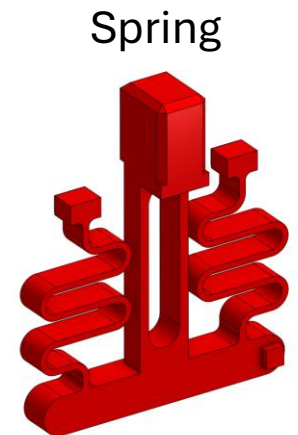
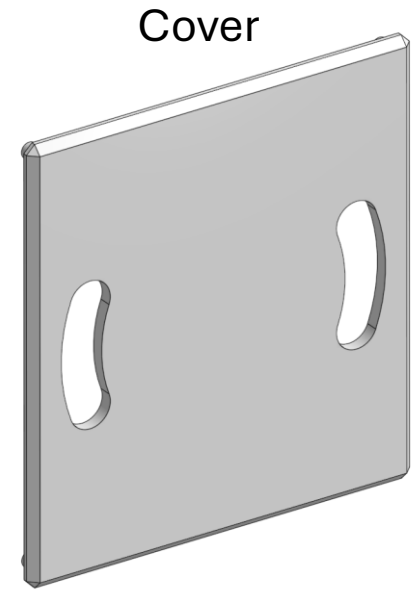
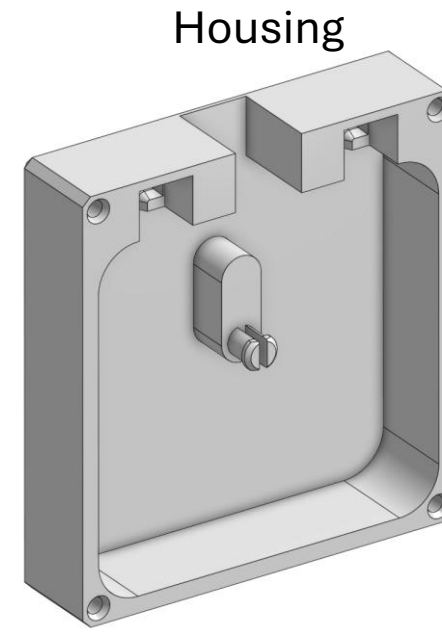
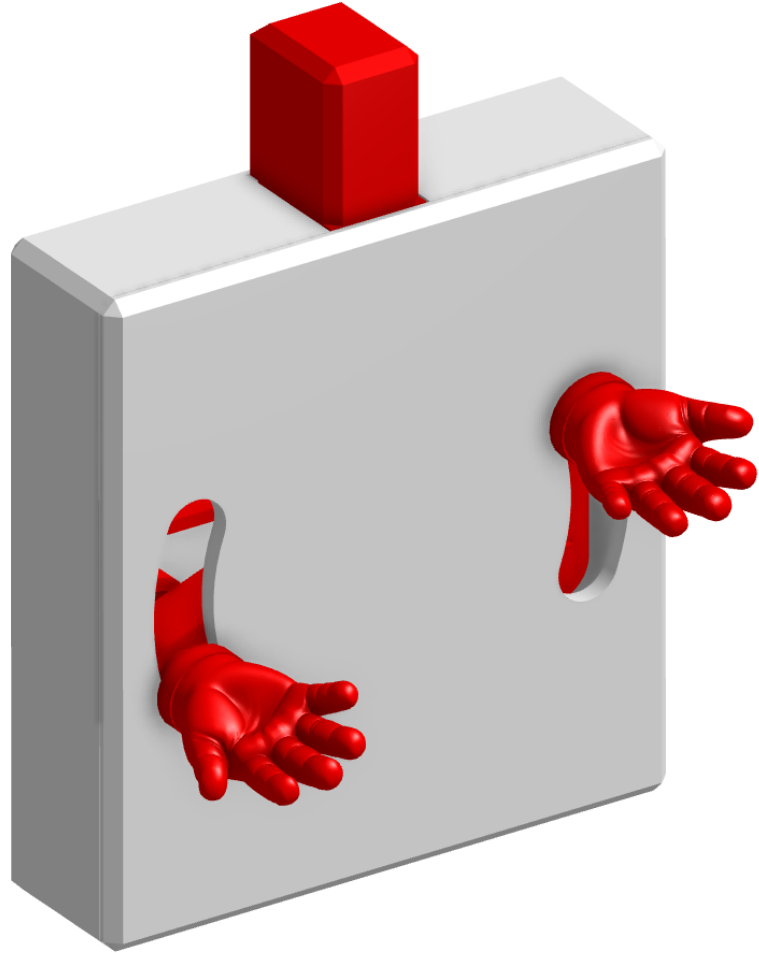


Components

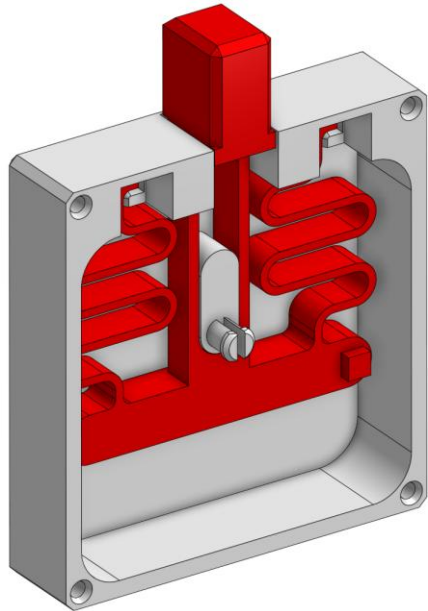



Step 1

Insert the spring into the housing using the T-slots.

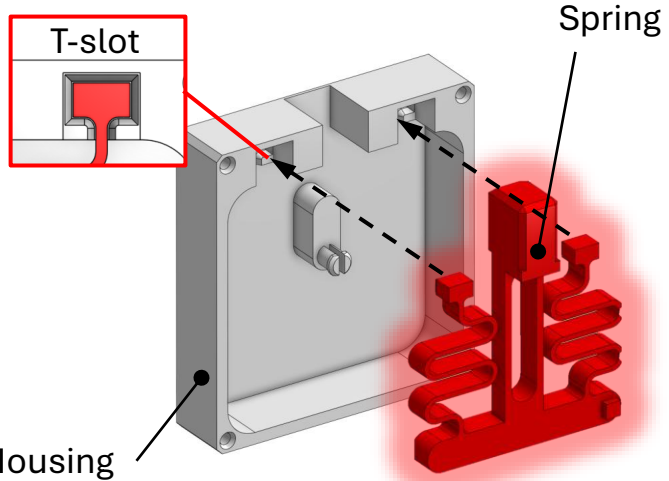



Step 2

Install the connector on the square pin of the spring.

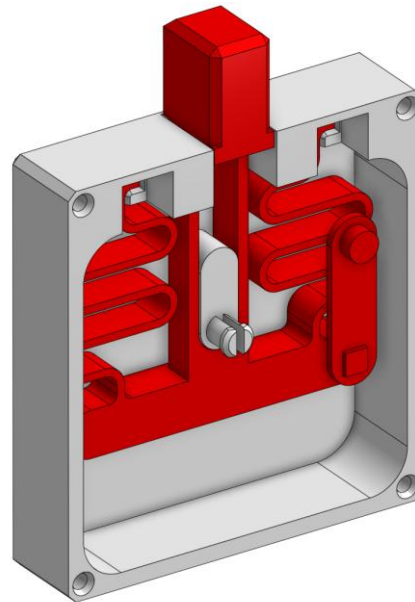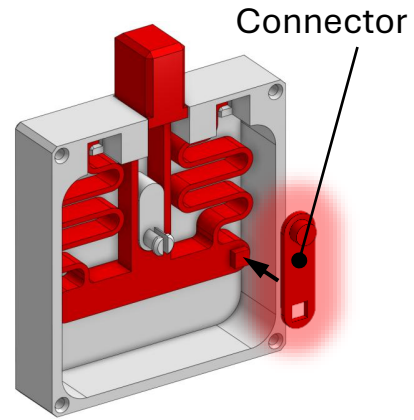



Step 3

Install the lever. Make sure the pivoting pin, as well as the actuation pin are connected.

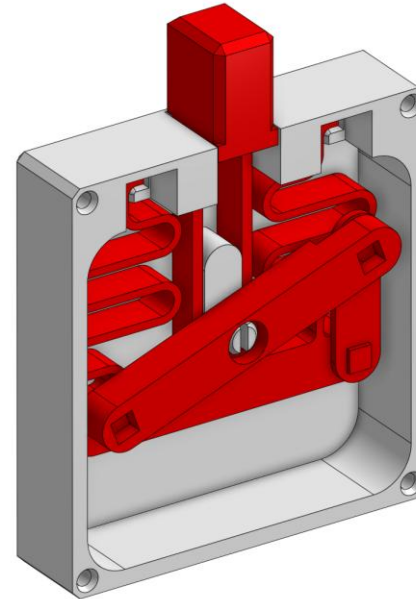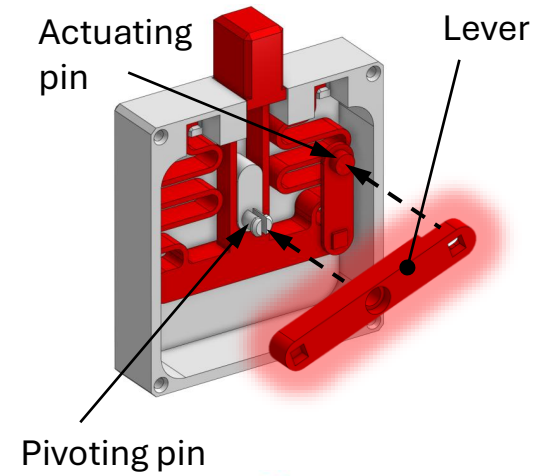


Step 4

Install the cover using the 4 pins on the edges.

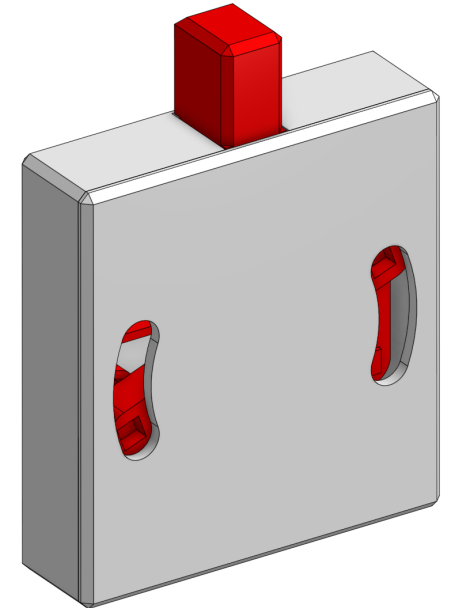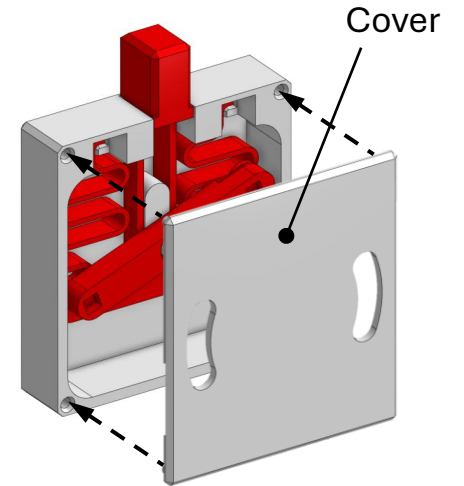

Step 5

Install the hands on the lever through the slots on the cover.

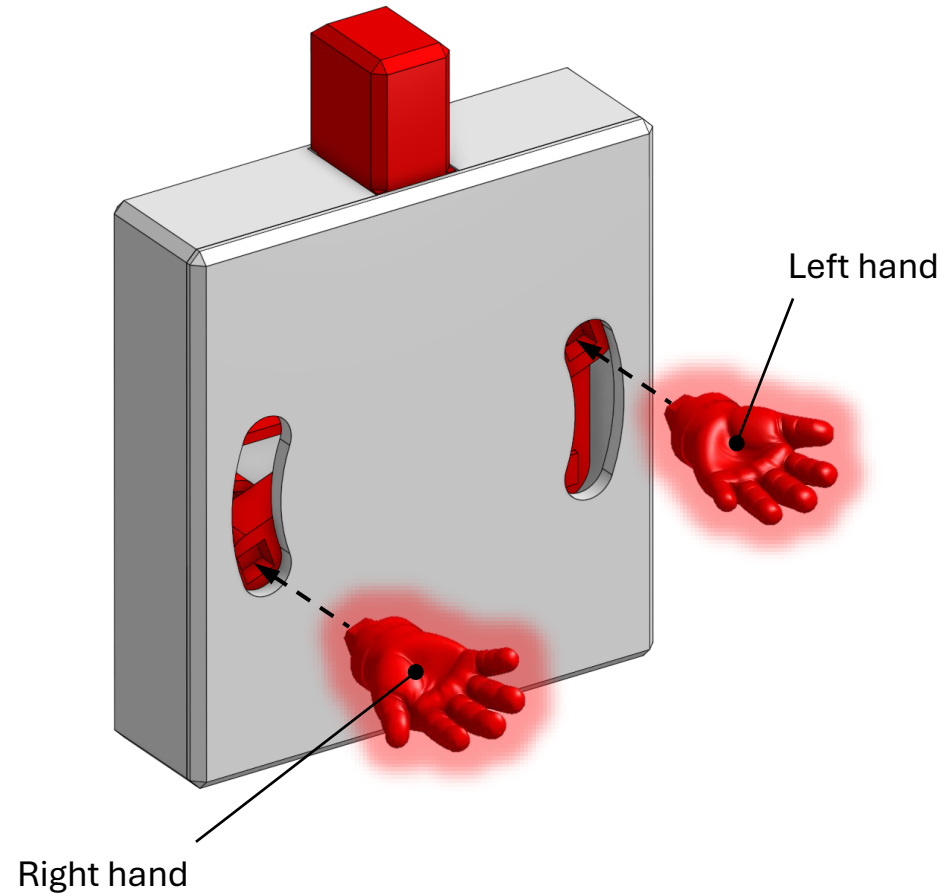

Step 6

Have Fun! 67!

