



AOS-CX 10.17.xxxx ACLs and Classifier Policies Guide (For 5420, 6200 Switch series)

AOS-CX 10.17.xxxx ACLs and Classifier Policies Guide (For 5420, 6200 Switch series)

Published: February 2026

© Copyright 2026 – Hewlett Packard Enterprise Development LP

Notices

The information provided here is subject to change without notice. Hewlett Packard Enterprise's products and services are covered only by the express warranty statements that come with them. This document does not constitute an additional warranty. Hewlett Packard Enterprise is not responsible for any technical or editorial errors or omissions in this document.

Confidential computer software. You must have a valid license from Hewlett Packard Enterprise to possess, use, or copy the software. In accordance with FAR 12.211 and 12.212, Commercial Computer Software, Computer Software Documentation, and Technical Data for Commercial Items are licensed to the U.S. Government under the vendor's standard commercial license.

Links to third-party websites will take you outside of the Hewlett Packard Enterprise website. Hewlett Packard Enterprise has no control over and is not responsible for the information outside the Hewlett Packard Enterprise website.

Open source code

This product includes code licensed under certain open source licenses which require source compliance. The corresponding source for these components is available upon request. This offer is valid to anyone in receipt of this information and shall expire three years following the date of the final distribution of this product version by Hewlett Packard Enterprise Company. To obtain such source code, please check if the code is available in the HPE Software Center at <https://myenterpriselicense.hpe.com/cwp-ui/software> but, if not, send a written request for specific software version and product for which you want the open source code. Along with the request, please send a check or money order in the amount of US \$10.00 to:

Hewlett Packard Enterprise Company

Attn: General Counsel

WW Corporate Headquarters

1701 E Mossy Oaks Rd, Spring, TX 77389

United States of America.



Legal disclaimer

The resource assets in this document may include abbreviated and/or legacy terminology for products. See [**www.arubanetworks.com**](http://www.arubanetworks.com) for current and complete product lines and names.

Table of contents

About this document.....	7
Applicable products.....	7
Latest version available online.....	7
Command syntax notation conventions.....	7
About the examples.....	9
Identifying switch ports and interfaces.....	9
Access Control Lists.....	10
ACL usage tips.....	11
About address and port object groups.....	13
VLAN ACLs and interaction with VXLAN traffic.....	14
ACL and ACE-related tasks.....	16
Object group-related tasks.....	18
Active ACL configuration versus user-specified configuration	19
ACL commands.....	21
access-list copy	22
access-list ip	28
access-list ipv6	43
access-list log-timer	54
access-list mac	57
access-list resequence	65
access-list reset	69
access-list secure-update	73
ACL application.....	75
apply access-list control-plane	75
apply access-list (to interface or LAG)	77
apply access-list (to interface VLAN)	79
apply access-list (to VLAN)	82
clear access-list hitcounts	84
clear access-list hitcounts control-plane	86
object-group address resequence	87
object-group address reset	88
object-group all reset	89
object-group ip address	90
object-group ipv6 address	93

object-group port	96
object-group port resequence	99
object-group port reset	100
show access-list	101
show access-list control-plane	108
show access-list hitcounts	111
show access-list hitcounts control-plane	115
show access-list secure-update	116
show capacities	117
show capacities-status	119
show object-group	123
Classifier policies.....	126
Traffic policing.....	127
Types of policy actions.....	128
How policy matching works.....	129
Active class configuration versus user-specified configuration	130
Active policy configuration versus user-specified configuration	131
Considerations for when a policy is applied per interface.....	132
Classifier policy application.....	134
Classifier policy commands.....	138
Classifier policy application.....	139
apply policy (config-if, config-lag-if, config-if-vlan, config-vlan)	142
class copy	146
class ip	149
class ipv6	160
class mac	168
class resequence	174
class reset	176
clear policy hitcounts	177
policy	180
policy copy	185
policy resequence	187
policy reset	188
show class	189
show policy	191
Classifier policies configuration example.....	200
Configuring the classifier policies example.....	201
ACL and Policy hardware resource considerations.....	203

Show Resources.....	204
Event Logs.....	204
Limitations and exclusions.....	205
TCAM resource consumption and lookups.....	205
For the 6200 and 5420 Switch series:.....	206
Matching precedence order.....	211
L4 port ranges.....	212
Context group selectors.....	213
ACL and Policy hardware resource commands.....	215
show resources	215
Support and Other Resources.....	222
Accessing HPE Aruba Networking Support.....	223
Accessing Updates.....	224
Warranty Information.....	224
Regulatory Information.....	225
Documentation Feedback.....	225

About this document

This document describes features of the AOS-CX network operating system. It is intended for administrators responsible for installing, configuring, and managing HPE Aruba Networking switches on a network.

Subtopics

Applicable products

Latest version available online

Command syntax notation conventions

About the examples

Identifying switch ports and interfaces

Applicable products

This document applies to the following products:

- HPE Aruba Networking 5420 Switch Series (S0U67A, S0U55A, S0U63A, S0U64A, S0U65A, S0U75A, S0U72A, S0U78A, S0U58A, S0U73A, S0U74A, S0U71A, S0U76A, S0U70A, S0U77A, S0U60A, S0U61A, S0U62A, S0U66A, S0U68A)
- HPE Aruba Networking 6200 Switch Series (JL724A, JL725A, JL726A, JL727A, JL728A, R8Q67A, R8Q68A, R8Q69A, R8Q70A, R8Q71A, R8V08A, R8V09A, R8V10A, R8V11A, R8V12A, R8Q72A, JL724B, JL725B, JL726B, JL727B, JL728B, S0M81A, S0M82A, S0M83A, S0M84A, S0M85A, S0M86A, S0M87A, S0M88A, S0M89A, S0M90A, S0G13A, S0G14A, S0G15A, S0G16A, S0G17A)

Latest version available online

Updates to this document can occur after initial publication. For the latest versions of product documentation, see the links provided in [Support and Other Resources](#).

Command syntax notation conventions

Convention

Usage

example - text	Identifies commands and their options and operands, code examples, filenames, pathnames, and output displayed in a command window. Items that appear like the example text in the previous column are to be entered exactly as shown and are required unless enclosed in brackets ([]).
example - text	In code and screen examples, indicates text entered by a user.
Any of the following: • <example - text> • <example - text> • example - text • example - text	Identifies a placeholder—such as a parameter or a variable—that you must substitute with an actual value in a command or in code: • For output formats where italic text cannot be displayed, variables are enclosed in angle brackets (< >). Substitute the text—including the enclosing angle brackets—with an actual value. • For output formats where italic text can be displayed, variables might or might not be enclosed in angle brackets. Substitute the text including the enclosing angle brackets, if any, with an actual value.
	Vertical bar. A logical OR that separates multiple items from which you can choose only one. Any spaces that are on either side of the vertical bar are included for readability and are not a required part of the command syntax.
{ }	Braces. Indicates that at least one of the enclosed items is required.
[]	Brackets. Indicates that the enclosed item or items are optional.
... or ...	Ellipsis: • In code and screen examples, a vertical or horizontal ellipsis indicates an omission of information. • In syntax using brackets and braces, an ellipsis indicates items that can be repeated. When an item followed by ellipses is enclosed in brackets, zero or more items can be specified.

About the examples

Examples in this document are representative and might not match your particular switch or environment.

The slot and port numbers in this document are for illustration only and might be unavailable on your switch.

Understanding the CLI prompts

When illustrating the prompts in the command line interface (CLI), this document uses the generic term **switch**, instead of the host name of the switch. For example:

```
switch>
```

The CLI prompt indicates the current command context. For example:

```
switch>
```

Indicates the operator command context.

```
switch#
```

Indicates the manager command context.

```
switch (CONTEXT-NAME) #
```

Indicates the configuration context for a feature. For example:

```
switch (config-if) #
```

Identifies the **interface** context.

Variable information in CLI prompts

In certain configuration contexts, the prompt may include variable information. For example, when in the VLAN configuration context, a VLAN number appears in the prompt:

```
switch (config-vlan-100) #
```

When referring to this context, this document uses the syntax:

```
switch (config-vlan-<VLAN-ID>) #
```

Where <VLAN-ID> is a variable representing the VLAN number.

Identifying switch ports and interfaces

Physical ports on the switch and their corresponding logical software interfaces are identified using the format: **member/slot/port**.

On the HPE Aruba Networking 6200 Switch Series

- member: Member number of the switch in a Virtual Switching Framework (VSF) stack. Range: 1 to 8. The primary switch is always member 1. If the switch is not a member of a VSF stack, then member is 1.

- slot: Always 1. This is not a modular switch, so there are no slots.
- port: Physical number of a port on the switch.

For example, the logical interface **1/1/4** in software is associated with physical port 4 in slot 1 on member 1.

On the HPE Aruba Networking 6400 and 5420 Switch Series

- member: Always 1. VSF is not supported on this switch.
- slot: Specifies physical location of a module in the switch chassis.
 - Management modules are on the front of the switch in slots 1/1 and 1/2.
 - Line modules are on the front of the switch starting in slot 1/3.
- port: Physical number of a port on a line module.

For example, the logical interface **1/3/4** in software is associated with physical port 4 in slot 3 on member 1.

Access Control Lists

Access Control Lists (ACLs) let a network administrator permit or deny passage of traffic based on network addresses, protocols, service ports, and other packet attributes. ACLs are composed of one or more Access Control Entries (called ACEs). Each ACE defines a filter criteria and an action, either **permit** or **deny**. If the traffic matches the filter criteria, the specified action is taken. The **permit** action permits the traffic to continue through the switch. The **deny** action causes the traffic to be discarded (dropped). ACEs can also log or count matching traffic.

Three ACL types are supported; IPv4, IPv6, and MAC. Each ACL type is focused on relevant frame or packet characteristics.

ACLs must be applied (using an **apply access-list** command) to take effect. ACLs can be applied to interfaces (including LAGs), VLANs, or the Control Plane.

Access Control Entries (ACEs) are listed according to priority by sequence number and processed in lowest to highest sequence number order. Each ACE attempts to match on one or more attributes of the particular traffic type. Attempted ACE matching ceases upon the first successful match. For a match to be considered successful, a packet must match all the criteria, qualifiers, and attributes of a particular ACE. Higher-numbered ACEs are only processed if no lower-numbered ACE matches. If the traffic matches no ACE in the entire ACL, the default action **deny** is taken, causing the traffic to be discarded (dropped).

When defining an ACE, if the sequence number is omitted, the ACE is auto-assigned a new sequence number that is 10 greater than the existing highest ACE sequence number. The first auto-assigned sequence number is 10. If you choose to include the ACE sequence numbers, you can use any number you like, however it is suggested that you follow the practice of entering them as 10, 20, 30, and so on. Regardless of the order in which ACEs are entered, they are stored in low-to-high sequence number order. If you enter three ACEs numbered 10, 30, 20, when creating an ACL, the ACEs are stored in the ACL as 10, 20, 30.

This simple ACL definition permits traffic passage for a particular address range and otherwise counts all nonmatching (dropped) traffic:

```
switch(config) # access-list ip network-A-udp-only
switch(config-acl-ip) # 10 permit udp any 172.16.1.0/24
switch(config-acl-ip) # 20 deny any any any count
switch(config-acl-ip) # exit
```

The main traffic characteristics that ACEs can filter on are as follows (see the full list in the ACE parameters list of the ACL commands):

- Protocol such as: ICMP, TCP, UDP
- Source and/or destination addresses (IPv4, IPv6, or MAC)
- Source and/or destination TCP/UDP ports (if applicable to the specified protocol)

A few real-world uses of ACLs are as follows:

- Restrict traffic arriving on a port, destined to a particular address or subnet by applying an ACL that matches on a destination IP address or an IP address and a mask.
- Prevent certain protocols from using a particular multicast MAC address (advertising through a port) by applying an ACL that matches on the destination MAC address.
- Prevent any IP host from accessing a particular IP port/application on a specific server by applying an ACL that matches on IP addresses and Layer 4 port.



NOTE

See also [ACL and Policy Hardware Resource Considerations](#).

Subtopics

[ACL usage tips](#)

[About address and port object groups](#)

[VLAN ACLs and interaction with VXLAN traffic](#)

[ACL and ACE-related tasks](#)

[Object group-related tasks](#)

[Active ACL configuration versus user-specified configuration](#)

[ACL commands](#)

ACL usage tips

When using the `access-list ip` or `access-list ipv6` commands, if you enter an existing `ACL-NAME`, the existing ACL is modified as follows:

- Any ACE entered with a new sequence-number creates an additional ACE.
- Any ACE entered with an existing sequence-number replaces the existing ACE.

If you modify an ACL that has already been applied, it is possible that packets, blocked by the previous ACL, will briefly pass through the switch during the ACL reconfiguration.



NOTE

In a highly secure environment, it is safest to first bring down interfaces and VLANs to which an ACL has been applied before modifying the ACL. Then bring the targets of ACL application back up after completing the ACL modification. Respecting this recommendation ensures that an ACL is never partially programmed while traffic is passing through the switch.

About applying ACLs to interfaces or LAGs

You can apply an ACL to an interface or LAG to affect or control the traffic arriving on that interface or LAG (inbound) or leaving the interface or LAG (outbound), or both. A given interface or LAG supports the application of a single ACL per type, per direction. ACLs can be applied to interfaces or LAGs as follows:

- One MAC ACL inbound
- One MAC ACL outbound
- One IPv4 ACL inbound
- One IPv4 ACL outbound
- One IPv6 ACL inbound
- One IPv6 ACL outbound

Different ACLs of the same type can be used in opposite directions for MAC, IPv4, and IPv6. If you apply an ACL of a particular type, in a direction that is already in use, the switch replaces the current ACL with the new ACL.

About applying ACLs to VLANs

ACLs can be applied to VLANs in the inbound (ingress) and outbound (egress) directions.

Sequence numbering

If no sequence number is specified, the software appends new ACEs to the end of the ACL with a sequence number equal to the highest ACE currently in the list plus 10.

The sequence numbers may be resequenced using the `access-list resequence` command.

ACL Logging

On the 6200, 6300, and 6300L Switch Series: From 10.17 release onwards, ACL Logging will function properly on a VSF stack for packets received on a member that is not the conductor. The ACL name, sequence number, action, and other relevant details for the matching ACE will be logged.

Deny ACLs

If multiple ACLs of different types are applied in the same direction, a deny ACE, whether explicit or implicit, in one ACL overrides a permit ACL in another. A deny ACE is an ACE within an ACL that uses the `deny` action keyword.

Denied ping requests

A ping request is denied when an ACL is applied on ingress or egress unless the request is explicitly permitted.

```
switch# ping 100.1.2.10
PING 100.1.2.10 (100.1.2.10) 100(128) bytes of data.
ping: sendmsg: Operation not permitted
ping: sendmsg: Operation not permitted
ping: sendmsg: Operation not permitted
ping: sendmsg: Operation not permitted
ping: sendmsg: Operation not permitted
```

ACL failure behaviors

- In the event of a failed ACL application to a VLAN or VLAN interface during a switch reboot, all of the ports will shut down. The switch must be restarted to recover from the failure. Modifying the VLAN, VLAN interface, or ACL configuration will not cause the switch to be restarted.

ACLs and VXLAN Traffic

ACLs applied to an SVI will not match on VxLAN traffic over a VNI.

About address and port object groups

Object groups are useful for defining groups of IP addresses and Layer 4 ports for use exclusively in the two ACL-defining commands `access-list ip` and `access-list ipv6`.

Often, common groups of addresses and ports or port ranges are used repeatedly in many ACL definitions. Without address and port object groups, the same addresses and ports must be repeated in each ACL definition that uses them.

With address and port object groups, the IP addresses and ports can be defined once, using any of these commands:

- `object-group ip address`
- `object-group ipv6 address`
- `object-group port`

Once an object group is defined, the group is available for inclusion by name as the `<ADDRESS-GROUP>` and `<PORT-GROUP>` parameters in the `access-list ip` and `access-list ipv6` ACL-definition commands.

Object groups simplify the ACL definition process and help ensure consistent address and port specification across many ACLs.



NOTE

Keep in mind that it is possible to consume many hardware resource entries when using the object group commands. For example, in a typical situation, an ACE that uses object groups with 3 source addresses, 3 source L4 ports, 3 destination addresses, and 3 destination L4 ports, a total of 81 hardware entries are consumed ($3 * 3 * 3 * 3 = 81$).

VLAN ACLs and interaction with VXLAN traffic



NOTE

This section applies to these AOS-CX platforms that support VXLAN and VXLAN ACLs: 5420, 6200, 6300, 6400, 8100, 8325, 8360, 9300/9300S, 10040, 10000. VLAN policies applied to an SVI will not match VXLAN traffic over a VNI.

Interactions with VXLAN traffic on an L2 VNI

About this task

The way VLAN ACLs interact with VLAN traffic carried by VXLAN tunnels depends on the AOS-CX platform.

For the purposes of this discussion, VLAN traffic is Ethernet traffic with an IP payload. VXLAN traffic includes a VXLAN header, encapsulating the Ethernet frame and IP header into the VXLAN UDP packet. VLAN traffic can be considered to be "normal" L2 traffic, and VXLAN traffic can be considered to be "tunneled" (encapsulated) L2 traffic.

VLAN ACL matching of VLAN traffic arriving through a VXLAN tunnel is available on the various AOS-CX platforms as follows:

- On the 5420, 6200, 6400, 6400, 8100, and 8360, VLAN ACLs are able to match decapsulated VLAN traffic arriving through a VXLAN tunnel, however, VLAN ACLs are unable to match VLAN traffic leaving the switch through a VXLAN tunnel.
- On the 8325, 9300/9300S, 10040, and 10000, ingress VLAN ACLs are able to match decapsulated VLAN traffic arriving through a VXLAN tunnel.

- On the 8325, 9300/9300S, 10040, and 10000, egress VLAN ACLs are not able to match decapsulated VLAN traffic arriving through a VXLAN tunnel. VLAN ACLs are able to match on the VXLAN IP in this case (packets egressing to the VXLAN tunnel).
- On the 8400, ingress VLAN ACLs are not able to match decapsulated VLAN traffic arriving through a VXLAN tunnel. The 8400 does not support egress VLAN ACLs. Instead they can match on the VXLAN IP.



NOTE

VLAN ACLs do not match on the inner VXLAN header (encapsulated packet).

Consider the following two-node VXLAN L2 bridging topology:

```
Host-1 <--> Switch-1 <--> Switch-2 <--> Host-2
```

Each switch has a single VLAN, connected with VXLAN VTEPs, and each host is connected to the VLAN on the respective switch. The four relevant control points for ACL application are as follows:

Procedure

1. Switch-1 Ingress
2. Switch-1 Egress
3. Switch-2 Ingress
4. Switch-2 Egress

Results

For traffic initiated from Host-1 to Host-2:

1. At Switch-1 (Ingress) the packet from Host-1 is still a normal VLAN packet, therefore Ingress VLAN ACLs can be applied here.
2. At Switch-1 (Egress) the packet from Host-1 has been encapsulated into a VXLAN UDP tunnel packet, and therefore Egress VLAN ACLs cannot be applied here.
3. At Switch-2 (Ingress) the packet from Host-1 is decapsulated from its VXLAN header so that it can be delivered to the local VLAN associated with the VXLAN VTEP. On AOS-CX platforms that support it, ingress VLAN ACLs can be applied here.
4. At Switch-2 (Egress) the packet which arrived from Switch-1 has been decapsulated and becomes a normal VLAN packet on egress, and therefore, on AOS-CX platforms that support it, Egress VLAN ACLs can be applied here.

Separately, consider this three-switch topology:

```
Host-1 <--> Switch-1 <--> Switch-M <--> Switch-2 <--> Host-2
```

In this topology, traffic from the hosts is never decapsulated on the middle switch, Switch-M. Therefore, Switch-M simply forwards the VXLAN UDP frames back and forth. Since the packet is not decapsulated, the VLAN ACLs cannot be applied on Switch-M.

ACL and ACE-related tasks

Common ACL and ACE-related tasks are as follows:

Task	Command name	Example
Creating an IPv4 ACL	<code>access-list ip</code>	<pre>access-list ip MY_IP_ACL 10 permit udp any 172.16.1.0/24 20 permit tcp 172.16.2.0/16 gt 1023 any 30 deny any any any count</pre>
Creating an IPv6 ACL	<code>access-list ipv6</code>	<pre>access-list ipv6 MY_IPV6_ACL 10 permit udp any 2001::1/64 20 permit tcp 2001:2011::1/64 any 30 deny any any any count</pre>
Creating a MAC ACL	<code>access-list mac</code>	<pre>access-list mac MY_MAC_ACL 10 permit any any appletalk vlan 40 20 deny any any any count</pre>
Applying an IPv6 ACL to an interface	<code>apply access-list</code> (to interface or LAG)	<pre>interface 1/1/1 apply access-list ipv6 MY_IPV6_ACL in</pre>
Applying an IPv4 ACL to a LAG	<code>apply access-list</code> (to interface or LAG)	<pre>interface lag 100 apply access-list ip MY_IP_ACL in</pre>

Task	Command name	Example
Applying an IPv4 ACL to a VLAN	<code>apply access-list (to VLAN)</code>	<code>vlan 10 apply access-list ip MY_IP_ACL in</code>
Applying a MAC ACL to a VLAN	<code>apply access-list (to VLAN)</code>	<code>vlan 40 apply access-list mac MY_MAC_ACL in</code>
Applying an IPv4 ACL to the Control Plane (OOBM)	<code>apply access-list control-plane</code>	<code>apply access-list ip MY_IP_ACL control-plane vrf mgmt</code>
Removing application of an ACL from an interface	<code>apply access-list (to interface or LAG)</code>	<code>interface 1/1/1 no apply access-list ipv6 MY_IPV6_ACL in</code>
Removing application of an ACL from a VLAN	<code>apply access-list (to VLAN)</code>	<code>vlan 40 no apply access-list mac MY_MAC_ACL in</code>
Removing application of an ACL from the Control Plane (OOBM)	<code>apply access-list control-plane</code>	<code>no apply access-list ip MY_IP_ACL control-plane vrf mgmt</code>
Showing all ACLs	<code>show access-list</code>	<code>show access-list</code>
Showing all IPv6 ACLs	<code>show access-list</code>	<code>show access-list ipv6</code>
Showing all ACLs applied to interface 1/1/1	<code>show access-list</code>	<code>show access-list interface 1/1/1</code>
Showing all ACLs applied to VLAN 10	<code>show access-list</code>	<code>show access-list vlan 10</code>
Showing all ACLs applied to the Control Plane	<code>show access-list control-plane</code>	<code>show access-list control-plane</code>
Showing a particular ACL	<code>show access-list</code>	<code>show access-list ip MY_ACL</code>
Showing an ACL as commands	<code>show access-list</code>	<code>show access-list ip MY_ACL commands</code>
Showing ACL hit counts for an ACL applied to an interface	<code>show access-list hitcounts</code>	<code>show access-list hitcounts ip MY_ACL interface 1/1/1</code>

Task	Command name	Example
Showing ACL hit counts for an ACL applied to a VLAN	<code>show access-list hitcounts</code>	<code>show access-list hitcounts ip MY_ACL vlan 10</code>
Showing ACL hit counts for an ACL applied to the Control Plane	<code>show access-list hitcounts control-plane</code>	<code>show access-list hitcounts ip MY_ACL control-plane vrf mgmt</code>
Clearing ACL hit counts	<code>clear access-list hitcounts</code>	<code>clear access-list hitcounts ip MY_ACL vlan 10</code>
Clearing ACL hit counts for Control Plane	<code>clear access-list hitcounts control-plane</code>	<code>clear access-list hitcounts control-plane vrf mgmt</code>
Copying an ACL	<code>access-list copy</code>	<code>access-list ipv6 MY_IPV6_ACL copy MY_IPV6_ACL2</code>
Resequencing the ACEs of an ACL	<code>access-list resequence</code>	<code>access-list ip MY_IP_ACL resequence 1 1</code>
Resetting an ACL	<code>access-list reset</code>	<code>access-list ip MY_IP_ACL reset</code>
Setting the ACL log timer frequency	<code>access-list log-timer</code>	<code>access-list log-timer 30</code>

Object group-related tasks

Object groups are useful for defining groups of addresses and ports for use exclusively in the two ACL-defining commands `access-list ip` and `access-list ipv6`.

Common object group-related tasks are as follows:

Task	Command name	Example
Creating an IPv4 address object group	<code>object-group ip address</code>	<code>object-group ip address my_ipv4_addr_group</code>

Task	Command name	Example
Creating an IPv6 address object group	<code>object-group ipv6 address</code>	<code>object-group ipv6 address my_ipv6_addr_group</code>
Creating a port object group	<code>object-group port</code>	<code>object-group port my_port_group</code>
Showing an IPv4 address object group	<code>show object-group</code>	<code>show object-group ip address my_ipv4_addr_group</code>
Showing all IPv6 address object groups	<code>show object-group</code>	<code>show object-group ipv6 address</code>
Showing a port object group	<code>show object-group</code>	<code>show object-group port my_port_group</code>
Showing all port object groups as commands	<code>show object-group</code>	<code>show object-group port commands</code>
Resequencing an IPv4 address object group	<code>object-group ip address</code>	<code>object-group ip address my_ipv4_addr_group resequence 100 10</code>
Resequencing a port object group	<code>object-group port</code>	<code>object-group port my_port_group resequence 200 5</code>
Resetting an IPv6 address object group	<code>object-group ipv6 address</code>	<code>object-group ipv6 address my_ipv6_addr_group reset</code>
Resetting a port object group	<code>object-group port</code>	<code>object-group port my_port_group reset</code>

Active ACL configuration versus user-specified configuration

The **show access-list** command shows the active configuration of the switch. The active configuration is the ACLs that have been configured and accepted by the system. The active configurations are the interfaces on which the ACLs have successfully been programmed in the hardware.

The output of the `show access-list` command with the **configuration** parameter shows the ACLs that have been configured. The output of this command may not be the same as what was programmed

in the hardware or what is active on the switch. The situation might occur because of one or more of the following:

- Unsupported command parameters might have been configured.
- Unsupported applications might have been specified.
- Applying an ACL might have been unsuccessful due to lack of hardware resources.

To determine if a discrepancy exists between what was configured and what is active, run the `show access-list` command with the `configuration` parameter.

If the active ACLs and configured ACLs are not the same, the switch shows a warning message in the output of the show command:

```
! access-list ip MY_IP_ACL user configuration does not match active
configuration.
! run 'access-list TYPE NAME reset' to reset access-list to match active
configuration.
```

If the configured ACL is processing, the switch shows an in-progress warning.

```
! access-list ip MY_IP_ACL user configuration currently being processed
! run 'access-list TYPE NAME reset' to reset access-list to match active
configuration.
```

If the switch shows a warning message or in-progress message, additional changes can be made until the error message is no longer shown in the show command, or you can run the `access-list {all|ip <ACL-NAME>|ipv6 <ACL-NAME>|mac <ACL-NAME>} reset` command. The `access-list reset` command changes the user-specified configuration to match the active configuration. For details, see [access-list reset](#).



NOTE

The `show running-config` command also shows a warning about ACLs that are in progress or failed.

Examples

Applying an ACL with TCP acknowledgments (ACKs) on ingress:

```
switch(config-acl)# 10 permit tcp 172.16.2.0/16 any ack
```

Showing the user-specified configuration:

```
switch(config)# do show access-list ip TEST_ACL
      10 permit tcp 172.16.2.0/16 any ack
interface 1/1/1
! access-list ip TEST_ACL user configuration does not match active
configuration.
! run 'show access-list [commands]' to display active access-list
configuration.
```

```

    apply access-list ip TEST_ACL in
switch(config)# do show access-list commands
access-list ip TEST_ACL
    10 permit tcp 172.16.2.0/16 any ack
! access-list ip TEST_ACL user configuration does not match active
configuration.
! run 'access-list all reset' to reset all access-lists to match active
configuration.
switch(config)# do show access-list commands configuration
access-list ip TEST_ACL
    10 permit tcp 172.16.2.0/16 any ack
! access-list ip TEST_ACL user configuration does not match active
configuration.
! run 'access-list all reset' to reset all access-lists to match active
configuration.
interface 1/1/1
    apply access-list ip TEST_ACL in
switch(config)# do show access-list
Type          Name
Sequence Comment
              Action                      L3 Protocol
              Source IP Address           Source L4 Port(s)
              Destination IP Address       Destination L4 Port(s)
              Additional Parameters
-----
---
IPv4          TEST_ACL
              10 permit                      tcp
              172.16.2.0/16
              any
              ack

```

Resetting the user-specified configuration to match the active configuration:

```
switch(config)# access-list all reset
```

Showing the updated user-specified configuration:

```

switch(config)# do show access-list commands configuration
access-list ip TEST_ACL
    10 permit tcp 172.16.2.0/16 any ack

```

ACL commands

Select a command from the list in the left navigation menu.

Subtopics

- [access-list copy](#)
- [access-list ip](#)
- [access-list ipv6](#)
- [access-list log-timer](#)
- [access-list mac](#)
- [access-list resequence](#)
- [access-list reset](#)
- [access-list secure-update](#)
- [ACL application](#)
- [apply access-list control-plane](#)
- [apply access-list \(to interface or LAG\)](#)
- [apply access-list \(to interface VLAN\)](#)
- [apply access-list \(to VLAN\)](#)
- [clear access-list hitcounts](#)
- [clear access-list hitcounts control-plane](#)
- [object-group address resequence](#)
- [object-group address reset](#)
- [object-group all reset](#)
- [object-group ip address](#)
- [object-group ipv6 address](#)
- [object-group port](#)
- [object-group port resequence](#)
- [object-group port reset](#)
- [show access-list](#)
- [show access-list control-plane](#)
- [show access-list hitcounts](#)
- [show access-list hitcounts control-plane](#)
- [show access-list secure-update](#)
- [show capacities](#)
- [show capacities-status](#)
- [show object-group](#)

access-list copy

Syntax

```
access-list {ip|ipv6|mac} <ACL-NAME> copy <DESTINATION-ACL>
```

Description

Copies an IPv4, IPv6, or MAC ACL to a new destination ACL or overwrites an existing ACL.

Parameter	Description
<code>{ip ipv6 mac}</code>	Specifies the type of ACL.
<code><ACL-NAME></code>	Specifies the name of the ACL to be copied.
<code><DESTINATION-ACL></code>	Specifies the name of the destination ACL.

Examples

Copying MY_IP_ACL to MY_IP_ACL2:

```
switch(config)# access-list ip MY_IP_ACL copy MY_IP_ACL2
switch(config-acl-ip)# exit
switch(config)# do show access-list
```

Type	Name	Sequence	Comment	Action	L3 Protocol	Source IP Address	Source L4 Port(s)	Destination IP Address	Destination L4 Port(s)	Additional Parameters

IPv4	MY_IP_ACL									
		1	permit		udp	any		172.16.1.0/255.255.255.0		
		2	permit		tcp	172.16.2.0/255.255.0.0	> 1023	any		
		3	permit		tcp	172.26.1.0/255.255.255.0		any		
				dscp: AF11						
				ack						
				syn						

```

4 deny                                any
  any
  any
  Hit-counts: enabled
-----
---
IPv4      MY_IP_ACL2
1 permit                                udp
  any
  172.16.1.0/255.255.255.0
2 permit                                tcp
  172.16.2.0/255.255.0.0          > 1023
  any
3 permit                                tcp
  172.26.1.0/255.255.255.0
  any
  dscp: AF11
  ack
  syn
4 deny                                any
  any
  any
  Hit-counts: enabled

```

Copying MY_IPV6_ACL to MY_IPV6_ACL2:

```

switch(config)# access-list ipv6 MY_IPV6_ACL copy MY_IPV6_ACL2
switch(config-acl-ip)# exit
switch(config)# do show access-list
Type      Name
Sequence  Comment
          Action          L3 Protocol
          Source IP Address Source L4 Port(s)
          Destination IP Address Destination L4 Port(s)
          Additional Parameters
-----
---
IPv6      MY_IPV6_ACL
1 permit                                udp
  any
  2001::1/64
2 Permit all TCP ephemeral ports
  permit                                tcp
  2001:2001::2:1          > 1023
  any

```



```

3 permit                                tcp
  2001:2011::1/64
  any
4 deny                                any
  any
  any
Hit-counts: enabled
-----
---
IPv6      MY_IPV6_ACL2
1 permit                                udp
  any
  2001::1/64
2 Permit all TCP ephemeral ports
  permit                                tcp
  2001:2001::2:1                        > 1023
  any
3 permit                                tcp
  2001:2011::1/64
  any
4 deny                                any
  any
  any
Hit-counts: enabled

```

Copying MY_MAC_ACL to MY_MAC_ACL2:

```

switch(config)# access-list mac MY_MAC_ACL copy MY_MAC_ACL2
switch(config-acl-mac)# exit
switch(config)# do show access-list
Type      Name
Sequence Comment
Action
Source MAC Address
Destination MAC Address
Additional Parameters
-----
---
MAC      MY_MAC_ACL
1 permit                                ipv6
  1122.3344.5566/ffff.ffff.0000
  any
2 permit                                any
  aaaa.bbbb.cccc
  1111.2222.3333

```

```

QoS Priority Code Point: 4
3 Permit all vlan-1 tagged Appletalk traffic
  permit                                appletalk
  any
  any
  VLAN: 1
4 deny                                any
  any
  any
Hit-counts: enabled

```

MAC

MY_MAC_ACL2

```

1 permit                                ipv6
  1122.3344.5566/ffff.ffff.0000
  any
2 permit                                any
  aaaa.bbbb.cccc
  1111.2222.3333
QoS Priority Code Point: 4
3 Permit all vlan-1 tagged Appletalk traffic
  permit                                appletalk
  any
  any
  VLAN: 1
4 deny                                any
  any
  any
Hit-counts: enabled

```

Type

Name

Sequence Comment

Action

EtherType

Source MAC Address

Destination MAC Address

Additional Parameters

MAC

MY_MAC_ACL

```

1 permit                                ipv6
  1122.3344.5566/ffff.ffff.0000
  any
2 permit                                any
  aaaa.bbbb.cccc

```

```

1111.2222.3333
QoS Priority Code Point: 4
3 Permit all vlan-1 tagged Appletalk traffic
  permit                                appletalk
  any
  any
  VLAN: 1
4 deny                                any
  any
  any
Hit-counts: enabled

```

```

MAC      MY_MAC_ACL2
1 permit                                ipv6
  1122.3344.5566/ffff.ffff.0000
  any
2 permit                                any
  aaaa.bbbb.cccc
  1111.2222.3333
  QoS Priority Code Point: 4
3 Permit all vlan-1 tagged Appletalk traffic
  permit                                appletalk
  any
  any
  VLAN: 1
4 deny                                any
  any
  any
Hit-counts: enabled

```

Command History

Release	Modification
---------	--------------

10.07 or earlier	- -
------------------	-----

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

access-list ip

Syntax

Syntax to create an IPv4 ACL and enter its context. Plus syntax to remove an ACL:

```
access-list ip <ACL-NAME>
no access-list ip <ACL-NAME>
```

Syntax (within the ACL context) for creating or removing ACEs for protocols **ah**, **eigrp**, **esp**, **gre**, **igmp**, **l2tp**, **ospf**, **pim**, **vrrp**, (**ip** is available as an alias for **any**):

```
[<SEQUENCE-NUMBER>]
{permit|deny}
{any|ah|eigrp|esp|gre|igmp|ip|l2tp|ospf|pim|vrrp|<IP-PROTOCOL-NUM>}
{any|<SRC-IP-ADDRESS>[/<PREFIX-LENGTH>|<SUBNET-MASK>]}|<ADDRESS-GROUP>}
{any|<DST-IP-ADDRESS>[/<PREFIX-LENGTH>|<SUBNET-MASK>]}|<ADDRESS-GROUP>}
[dscp <DSCP-SPECIFIER>] [ecn <ECN-VALUE>] [ip-precedence <IP-PRECEDENCE-VALUE>]
[tos <TOS-VALUE>] [fragment] [vlan <VLAN-ID>] [ttl <TTL-VALUE>]
[count] [log]
no <SEQUENCE-NUMBER>
```

Syntax (within the ACL context) for creating or removing ACEs for protocols **sctp**, **tcp**, **udp**:

```
[<SEQUENCE-NUMBER>]
{permit|deny}
{sctp|tcp|udp}
{any|<SRC-IP-ADDRESS>[/<PREFIX-LENGTH>|<SUBNET-MASK>]}|<ADDRESS-GROUP>}
[{eq|gt|lt} <PORT>|range <MIN-PORT>
    <MAX-PORT>|group <PORT-GROUP>]
{any|<DST-IP-ADDRESS>[/<PREFIX-LENGTH>|<SUBNET-MASK>]}|<ADDRESS-GROUP>}
[{eq|gt|lt} <PORT>|range <MIN-PORT>
    <MAX-PORT>|group <PORT-GROUP>]
[urg] [ack] [psh] [rst] [syn] [fin] [established]
```

```
[dscp <DSCP-SPECIFIER>] [ecn <ECN-VALUE>] [ip-precedence <IP-PRECEDENCE-VALUE>]
[tos <TOS-VALUE>] [fragment] [vlan <VLAN-ID>] [ttl <TTL-VALUE>]
[count] [log]
no <SEQUENCE-NUMBER>
```

Syntax (within the ACL context) for creating or removing ACEs for protocol `icmp`:

```
[<SEQUENCE-NUMBER>]
{permit|deny}
{icmp}
{any|<SRC-IP-ADDRESS>[/<PREFIX-LENGTH>|<SUBNET-MASK>]}|<ADDRESS-GROUP>}
{any|<DST-IP-ADDRESS>[/<PREFIX-LENGTH>|<SUBNET-MASK>]}|<ADDRESS-GROUP>}
[icmp-type {echo|echo-reply|<ICMP-TYPE-VALUE>}] [icmp-code <ICMP-CODE-VALUE>]
[dscp <DSCP-SPECIFIER>] [ecn <ECN-VALUE>] [ip-precedence <IP-PRECEDENCE-VALUE>]
[tos <TOS-VALUE>] [fragment] [vlan <VLAN-ID>] [ttl <TTL-VALUE>]
[count] [log]
no <SEQUENCE-NUMBER>
```

Syntax (within the ACL context) for ACE comments:

```
[<SEQUENCE-NUMBER>] comment <TEXT-STRING>
no <SEQUENCE-NUMBER> comment
```

Description

Creates an IPv4 Access Control List (ACL) comprised of one or more Access Control Entries (ACEs) ordered and prioritized by sequence number. The lowest sequence number is the highest prioritized ACE.

The **no** form of this command deletes the entire ACL, or deletes an ACE identified by sequence number, or deletes only the comment from the ACE identified by sequence number.

Parameter	Description
<code><ACL-NAME></code>	Specifies the name of this ACL.
<code><SEQUENCE-NUMBER></code>	Specifies a sequence number for the ACE. Range: 1 to 4294967295.
<code>{permit deny}</code>	Specifies whether to permit or deny traffic matching this ACE.

Parameter	Description
<code><IP-PROTOCOL-NUM></code>	Specifies the protocol as its Internet Protocol number. For example, 2 corresponds to the IGMP protocol. Range: 0 to 255.
<pre>{any <SRC-IP-ADDRESS>[/ <PREFIX-LENGTH> <SUBNET-MASK>}] <ADDRESS- GROUP> }</pre>	Specifies the source IPv4 address. • any - specifies any source IPv4 address. • <SRC - IP - ADDRESS> - specifies the source IPv4 host address. ◦ <PREFIX - LENGTH> - specifies the address bits to mask (CIDR subnet mask notation). Range: 1 to 32. ◦ <SUBNET - MASK> - specifies the address bits to mask (dotted decimal notation). • <ADDRESS - GROUP> - specifies an IPv4 address group defined with object - group ip address.
<pre>{any <DST-IP-ADDRESS>[/ <PREFIX-LENGTH> <SUBNET-MASK>}] <ADDRESS- GROUP> }</pre>	Specifies the destination IPv4 address. • any - specifies any destination IPv4 address. • <DST - IP - ADDRESS> - specifies the destination IPv4 host address. ◦ <PREFIX - LENGTH> - specifies the address bits to mask (CIDR subnet mask notation). Range: 1 to 32. ◦ <SUBNET - MASK> - specifies the address bits to mask (dotted decimal notation). • <ADDRESS - GROUP> - specifies an IPv4 address group that you defined earlier with <code>object-group ip address</code>.
<pre>[{eq gt lt} <PORT> range <MIN-PORT> <MAX-PORT> group <PORT-GROUP>]</pre>	Specifies the port, port range, or port group. Port numbers are in the range of 0 to 65535. • eq <PORT> - specifies the Layer 4 port. • gt <PORT> - specifies any Layer 4 port greater than the indicated port. • lt <PORT> - specifies any Layer 4 port less than the indicated port. • range <MIN - PORT> <MAX - PORT> - specifies the Layer 4 port range.

Parameter	Description
	group <PORT - GROUP> - specifies the Layer 4 port group that you defined earlier with <code>object-group port</code>.  NOTE Upon application of the ACL, ACEs with L4 port ranges may consume more than one hardware entry.
<code>urg</code>	Specifies matching on the TCP Flag: Urgent .
<code>ack</code>	Specifies matching on the TCP Flag: Acknowledgment .
<code>psh</code>	Specifies matching on the TCP Flag: Push buffered data to receiving application .
<code>rst</code>	Specifies matching on the TCP Flag: Reset the connection .
<code>syn</code>	Specifies matching on the TCP Flag: Synchronize sequence numbers .
<code>fin</code>	Specifies matching on the TCP Flag: Finish connection .
<code>established</code>	Specifies matching on the TCP Flag: Established connection.
<code>[icmp-type {echo echo-reply <ICMP-TYPE-VALUE>}]</code>	Specifies the ICMP type. echo - specifies an ICMP echo request packet. echo - reply - specifies an ICMP echo reply packet. <ICMP - TYPE - VALUE> - specifies an ICMP type value. Range: 0 to 255.
<code>[icmp-code <ICMP-CODE-VALUE>]</code>	Specifies the ICMP code value. Range: 0 to 255.
<code>dscp DSCP-SPECIFIER</code>	Specifies the Differentiated Services Code Point (DSCP), either a numeric <DSCP - VALUE> (0 to 63) or one of these keywords: AF11 - DSCP 10 (Assured Forwarding Class 1, low drop probability) AF12 - DSCP 12 (Assured Forwarding Class 1, medium drop probability) AF13 - DSCP 14 (Assured Forwarding Class 1, high drop probability)

Parameter	Description
	• AF21 - DSCP 18 (Assured Forwarding Class 2, low drop probability) • AF22 - DSCP 20 (Assured Forwarding Class 2, medium drop probability) • AF23 - DSCP 22 (Assured Forwarding Class 2, high drop probability) • AF31 - DSCP 26 (Assured Forwarding Class 3, low drop probability) • AF32 - DSCP 28 (Assured Forwarding Class 3, medium drop probability) • AF33 - DSCP 30 (Assured Forwarding Class 3, high drop probability) • AF41 - DSCP 34 (Assured Forwarding Class 4, low drop probability) • AF42 - DSCP 36 (Assured Forwarding Class 4, medium drop probability) • AF43 - DSCP 38 (Assured Forwarding Class 4, high drop probability) • CS0 - DSCP 0 (Class Selector 0: Default) • CS1 - DSCP 8 (Class Selector 1: Scavenger) • CS2 - DSCP 16 (Class Selector 2: OAM) • CS3 - DSCP 24 (Class Selector 3: Signaling) • CS4 - DSCP 32 (Class Selector 4: Real time) • CS5 - DSCP 40 (Class Selector 5: Broadcast video) • CS6 - DSCP 48 (Class Selector 6: Network control) • CS7 - DSCP 56 (Class Selector 7) • EF - DSCP 46 (Expedited Forwarding)
<code>ecn <ECN-VALUE></code>	Specifies an Explicit Congestion Notification value. Range: 0 to 3.
<code>ip-precedence <IP-PRECEDENCE-VALUE></code>	Specifies an IP precedence value. Range: 0 to 7.
<code>tos <TOS-VALUE></code>	Specifies the Type of Service value. Range: 0 to 31.
<code>fragment</code>	Specifies a fragment packet.
<code>vlan <VLAN-ID></code>	Specifies VLAN tag to match on. 802.1Q VLAN ID.



NOTE

Parameter	Description
	This parameter cannot be used in any ACL that will be applied to a VLAN.
<code>ttl <TTL-VALUE></code>	Specifies a time - to - live (hop limit) value. Range: 0 to 255. Not supported for ACLs.
<code>count</code>	Keeps the hit counts of the number of packets matching this ACE.
<code>log</code>	Keeps a log of the number of packets matching this ACE. Works with both <code>permit</code> and <code>deny</code> actions. Works with ACLs applied on ingress, egress, or Control Plane.
<code>[<SEQUENCE-NUMBER>] comment <TEXT-STRING></code>	Adds a comment to an ACE. The no form removes only the comment from the ACE.

Usage

- If the `<IP-PROTOCOL-NUM>` parameter is used instead of a protocol name, ensure that any needed ACE-definition parameters specific to the selected protocol are also provided.
- When using multiple ACL types (IPv4, IPv6, or MAC) with logging on the same interface, the first packet that matches an ACE with **log** option is logged. Until the log-timer wait-period is over, any packets matching other ACL types do not create a log. At the end of the wait-period, the switch creates a summary log for all the ACLs that were matched, regardless of type.

Examples

Creating an IPv4 ACL with four entries:

```
switch(config)# access-list ip MY_IP_ACL
switch(config-acl-ip)# 10 permit udp any 172.16.1.0/24
switch(config-acl-ip)# 20 permit tcp 172.16.2.0/16 gt 1023 any
switch(config-acl-ip)# 30 permit tcp 172.26.1.0/24 any syn ack dscp 10
switch(config-acl-ip)# 40 deny any any any count
switch(config-acl-ip)# exit
switch(config)# show access-list
```

Type	Name	
Sequence	Comment	
	Action	L3 Protocol
	Source IP Address	Source L4 Port(s)
	Destination IP Address	Destination L4 Port(s)
Additional	Parameters	

```

-----
---
IPv4      MY_IP_ACL
10 permit                                udp
    any
    172.16.1.0/255.255.255.0
20 permit                                tcp
    172.16.2.0/255.255.0.0          > 1023
    any
30 permit                                tcp
    172.26.1.0/255.255.255.0
    any
    dscp: AF11
    ack
    syn
40 deny                                    any
    any
    any
Hit-counts: enabled

```

Adding a comment to an existing IPv4 ACE:

```

switch(config)# access-list ip MY_IP_ACL
switch(config-acl-ip)# 20 comment Permit all TCP ephemeral ports
switch(config-acl-ip)# exit
switch(config)# show access-list

```

Type	Name	Sequence	Comment	Action	L3 Protocol	Source IP Address	Source L4 Port(s)	Destination IP Address	Destination L4 Port(s)	Additional Parameters
IPv4	MY_IP_ACL	10		permit	udp	any		172.16.1.0/255.255.255.0		
		20	Permit all TCP ephemeral ports	permit	tcp	172.16.2.0/255.255.0.0	> 1023	any		
		30		permit	tcp	172.26.1.0/255.255.255.0		any		

```

-----
---

```

```

        dscp: AF11
        ack
        syn
40 deny                                any
        any
        any
Hit-counts: enabled

```

Removing a comment from an existing IPv4 ACE:

```

switch(config)# access-list ip MY_IP_ACL
switch(config-acl-ip)# no 20 comment
switch(config-acl-ip)# exit
switch(config)# show access-list

```

Type	Name	Sequence	Comment	Action	L3 Protocol	Source IP Address	Source L4 Port(s)	Destination IP Address	Destination L4 Port(s)	Additional Parameters

IPv4	MY_IP_ACL	10	permit		udp	any		172.16.1.0/255.255.255.0		
		20	permit		tcp	172.16.2.0/255.255.0.0	> 1023	any		
		30	permit		tcp	172.26.1.0/255.255.255.0		any		
				dscp: AF11						
				ack						
				syn						
		40	deny		any	any		any		
										Hit-counts: enabled

Adding an ACE (insert line 25) to an existing IPv4 ACL:

```

switch(config)# access-list ip MY_IP_ACL
switch(config-acl-ip)# 25 permit icmp 172.16.2.0/16 any
switch(config-acl-ip)# exit
switch(config)# show access-list

```

Type	Name
------	------

Sequence	Comment	Action	L3 Protocol
		Source IP Address	Source L4 Port(s)
		Destination IP Address	Destination L4 Port(s)
		Additional Parameters	

IPv4	MY_IP_ACL		
10	permit		udp
	any		
	172.16.1.0/255.255.255.0		
20	permit		tcp
	172.16.2.0/255.255.0.0		> 1023
	any		
25	permit		icmp
	172.16.2.0/255.255.0.0 any		
30	permit		tcp
	172.26.1.0/255.255.255.0		
	any		
	dscp: AF11		
	ack		
	syn		
40	deny		any
	any		
	any		
	Hit-counts: enabled		

Replacing an ACE in an existing IPv4 ACL:

```
switch(config)# access-list ip MY_IP_ACL
switch(config-acl-ip)# 25 permit icmp 172.17.1.0/16 any
switch(config-acl-ip)# exit
switch(config)# show access-list
```

Type	Name	Sequence	Comment	Action	L3 Protocol
				Source IP Address	Source L4 Port(s)
				Destination IP Address	Destination L4 Port(s)
				Additional Parameters	

IPv4	MY_IP_ACL				
		10	permit		udp
			any		
			172.16.1.0/255.255.255.0		

```

20 permit
   172.16.2.0/255.255.0.0
   any
25 permit
   172.17.1.0/255.255.0.0
30 permit
   172.26.1.0/255.255.255.0
   any
   dscp: AF11
   ack
   syn
40 deny
   any
   any
   Hit-counts: enabled
Type      Name
Sequence  Comment
Action    L3 Protocol
Source IP Address  Source L4 Port(s)
Destination IP Address  Destination L4 Port(s)
Additional Parameters

-----
---
IPv4      MY_IP_ACL
10 permit
   any
   172.16.1.0/255.255.255.0
20 permit
   172.16.2.0/255.255.0.0
   any
25 permit
   172.17.1.0/255.255.0.0
30 permit
   172.26.1.0/255.255.255.0
   any
   dscp: AF11
   ack
   syn
40 deny
   any
   any
   Hit-counts: enabled

```

Removing an ACE from an IPv4 ACL:

```

switch(config)# access-list ip MY_IP_ACL
switch(config-acl-ip)# no 25
switch(config-acl-ip)# exit
switch(config)# show access-list

```

Type	Name	Sequence	Comment	Action	L3 Protocol	Source IP Address	Source L4 Port(s)	Destination IP Address	Destination L4 Port(s)	Additional Parameters
------	------	----------	---------	--------	-------------	-------------------	-------------------	------------------------	------------------------	-----------------------

IPv4	MY_IP_ACL	10	permit		udp	any		172.16.1.0/255.255.255.0		
		20	permit		tcp	172.16.2.0/255.255.0.0	> 1023			
		30	permit		tcp	172.26.1.0/255.255.255.0				
						any				
						dscp: AF11				
						ack				
						syn				
		40	deny		any	any				
						any				
						Hit-counts: enabled				

Type	Name	Sequence	Comment	Action	L3 Protocol	Source IP Address	Source L4 Port(s)	Destination IP Address	Destination L4 Port(s)	Additional Parameters
------	------	----------	---------	--------	-------------	-------------------	-------------------	------------------------	------------------------	-----------------------

IPv4	MY_IP_ACL	10	permit		udp	any		172.16.1.0/255.255.255.0		
		20	permit		tcp	172.16.2.0/255.255.0.0	> 1023			

```

    any
30 permit                                tcp
    172.26.1.0/255.255.255.0
    any
    dscp: AF11
    ack
    syn
40 deny                                any
    any
    any
Hit-counts: enabled

```

Copy an IPv4 ACL:

```
switch(config)# access-list ip MY_IP_ACL copy MY_IP_ACL2
```

```
switch(config)# show access-list
```

Type	Name	Sequence	Comment	Action	L3 Protocol	Source IP Address	Source L4 Port(s)	Destination IP Address	Destination L4 Port(s)	Additional Parameters

```

IPv4      MY_IP_ACL
10
    permit                                udp
    any
    172.16.1.0/255.255.255.0
20
    permit                                tcp
    172.16.2.0/255.255.0.0                > 1023
    any
30
    permit                                tcp
    172.26.1.0/255.255.255.0
    any
    dscp: AF11
    ack
    syn
40
    deny                                any
    any
    any
Hit-counts: enabled

```

```

-----
---
IPv4      MY_IP_ACL2
10
    permit                udp
    any
    172.16.1.0/255.255.255.0
20
    permit                tcp
    172.16.2.0/255.255.0.0    > 1023
    any
30
    permit                tcp
    172.26.1.0/255.255.255.0
    any
    dscp: AF11
    ack
    syn
40
    deny                  any
    any
    any
    Hit-counts: enabled switch(config)# access-list ip MY_IP_ACL
copy MY_IP_ACL2
switch(config)# show access-list
Type      Name
Sequence Comment
          Action                L3 Protocol
          Source IP Address      Source L4 Port(s)
          Destination IP Address Destination L4 Port(s)
          Additional Parameters
-----
---
IPv4      MY_IP_ACL
10
    permit                udp
    any
    172.16.1.0/255.255.255.0
20
    permit                tcp
    172.16.2.0/255.255.0.0    > 1023
    any
30

```



```

        permit                                tcp
        172.26.1.0/255.255.255.0
        any
        dscp: AF11
        ack
        syn
40
        deny                                any
        any
        any
        Hit-counts: enabled
-----
---
IPv4      MY_IP_ACL2
10
        permit                                udp
        any
        172.16.1.0/255.255.255.0
20
        permit                                tcp
        172.16.2.0/255.255.0.0                > 1023
        any
30
        permit                                tcp
        172.26.1.0/255.255.255.0
        any
        dscp: AF11
        ack
        syn
40
        deny                                any
        any
        any
        Hit-counts: enabled

```

Removing an IPv4 ACL:

```

switch(config)# no access-list ip MY_IP_ACL
switch(config)# show access-list
Type          Name
Sequence      Comment
Action                               L3 Protocol
Source IP Address                     Source L4 Port(s)
Destination IP Address                Destination L4 Port(s)
Additional Parameters

```

```

-----
---
IPv4      MY_IP_ACL2
1 permit                                udp
   any
   172.16.1.0/255.255.255.0
2 permit                                tcp
   172.16.2.0/255.255.0.0          > 1023
   any
3 permit                                tcp
   172.26.1.0/255.255.255.0
   any
   dscp: AF11
   ack
   syn
4 deny                                    any
   any
   any
Hit-counts: enabled
switch(config-acl-ip)# permit sctp any group my_port_group any ip-option ?
any Any IP option

```

Command History

Release	Modification
10.17.1000	Added support for EIGRP, L2TP and VRRP protocols.
10.12	Allow ACLs applied to the Control Plane to be logged.
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	config The access - list ip < ACL - NAME > command takes you into the named ACL context where you enter the ACEs.	Administrators or local user group members with execution rights for this command.

access-list ipv6

Syntax

Syntax to create an IPv6 ACL and enter its context. Plus syntax to remove an ACL:

```
access-list ipv6 <ACL-NAME>
no access-list ipv6 <ACL-NAME>
```

Syntax (within the ACL context) for creating or removing ACEs for protocols **ah**, **eigrp**, **esp**, **gre**, **l2tp**, **ospf**, **pim**, **vrrp** (**ipv6** is available as an alias for **any**):

```
[<SEQUENCE-NUMBER>]
{permit|deny}
{any|ah|eigrp|esp|gre|ipv6|l2tp|ospf|pim|vrrp|<IP-PROTOCOL-NUM>}
{any|<SRC-IP-ADDRESS>[/<PREFIX-LENGTH>]|<ADDRESS-GROUP>}
{any|<DST-IP-ADDRESS>[/<PREFIX-LENGTH>]|<ADDRESS-GROUP>}
[dscp <DSCP-SPECIFIER>] [ecn <ECN-VALUE>] [ip-precedence <IP-PRECEDENCE-VALUE>]
[tos <TOS-VALUE>] [fragment] [vlan <VLAN-ID>] [ttl <TTL-VALUE>] [count]
[log]
no <SEQUENCE-NUMBER>
```

Syntax (within the ACL context) for creating or removing ACEs for protocols **sctp**, **tcp**, **udp**:

```
[<SEQUENCE-NUMBER>]
{permit|deny}
{sctp|tcp|udp}
{any|<SRC-IP-ADDRESS>[/<PREFIX-LENGTH>]|<ADDRESS-GROUP>}
[{eq|gt|lt} <PORT>|range <MIN-PORT>
    <MAX-PORT>|group <PORT-GROUP>]
{any|<DST-IP-ADDRESS>[/<PREFIX-LENGTH>]|<ADDRESS-GROUP>}
[{eq|gt|lt} <PORT>|range <MIN-PORT>
    <MAX-PORT>|group <PORT-GROUP>]
[urg] [ack] [psh] [rst] [syn] [fin] [established]
[dscp <DSCP-SPECIFIER>] [ecn <ECN-VALUE>] [ip-precedence <IP-PRECEDENCE-VALUE>]
[tos <TOS-VALUE>] [fragment] [vlan <VLAN-ID>] [ttl <TTL-VALUE>] [count]
[log]
no <SEQUENCE-NUMBER>
```

Syntax (within the ACL context) for creating or removing ACEs for protocol **icmpv6**:

```

[<SEQUENCE-NUMBER>]
{permit|deny}
{icmpv6}
{any|<SRC-IP-ADDRESS>[/<PREFIX-LENGTH>]|<ADDRESS-GROUP>}
{any|<DST-IP-ADDRESS>[/<PREFIX-LENGTH>]|<ADDRESS-GROUP>}
[icmp-type {echo|echo-reply|<ICMP-TYPE-VALUE>}] [icmp-code <ICMP-CODE-VALUE>]
[dscp <DSCP-SPECIFIER>] [ecn <ECN-VALUE>] [ip-precedence <IP-PRECEDENCE-VALUE>]
[tos <TOS-VALUE>] [fragment] [vlan <VLAN-ID>] [ttl <TTL-VALUE>] [count]
[log]
no <SEQUENCE-NUMBER>

```

Syntax (within the ACL context) for ACE comments:

```

[<SEQUENCE-NUMBER>] comment <TEXT-STRING>
no <SEQUENCE-NUMBER> comment

```

Description

Creates an IPv6 Access Control List (ACL). The ACL is made of one or more Access Control Entries (ACEs) ordered and prioritized by sequence number. The lowest sequence number is the highest prioritized ACE.

The **no** form of this command deletes the entire ACL, or deletes an ACE identified by sequence number, or deletes only the comment from the ACE identified by sequence number.

Parameter	Description
<ACL-NAME>	Specifies the name of this ACL.
<SEQUENCE-NUMBER>	Specifies a sequence number for the ACE. Range: 1 to 4294967295.
{permit deny}	Specifies whether to permit or deny traffic matching this ACE.
<IP-PROTOCOL-NUM>	Specifies the protocol as its Internet Protocol number. For example, 2 corresponds to the IGMP protocol. Range: 0 to 255.

Parameter	Description
<code>{any <SRC-IP-ADDRESS>[/<PREFIX-LENGTH>] <ADDRESS-GROUP>}</code>	Specifies the source IPv6 address. any - specifies any source IPv6 address. <SRC - IP - ADDRESS> - specifies the source IPv6 host address. <PREFIX - LENGTH> - specifies the address bits to mask (CIDR subnet mask notation). Range: 1 to 128. <ADDRESS - GROUP> - specifies an IPv6 address group that you defined earlier with object - group ipv6 address.
<code>{any <DST-IP-ADDRESS>[/<PREFIX-LENGTH>] <ADDRESS-GROUP>}</code>	Specifies the destination IPv6 address. any - specifies any destination IPv6 address. <DST - IP - ADDRESS> - specifies the destination IPv6 host address. <PREFIX - LENGTH> - specifies the address bits to mask (CIDR subnet mask notation). Range: 1 to 128. <ADDRESS - GROUP> - specifies an IPv6 address group that you defined earlier with <code>object-group ipv6 address</code>.
<code>[{eq gt lt} <PORT> range <MIN-PORT> <MAX-PORT> group <PORT-GROUP>]</code>	Specifies the port, port range, or port group. Port numbers are in the range of 0 to 65535. eq <PORT> - specifies the Layer 4 port. gt <PORT> - specifies any Layer 4 port greater than the indicated port. lt <PORT> - specifies any Layer 4 port less than the indicated port. range <MIN - PORT> <MAX - PORT> - specifies the Layer 4 port range. group <PORT - GROUP> - specifies the Layer 4 port group that you defined earlier with <code>object-group port</code>.  NOTE Upon application of the ACL, ACEs with L4 port ranges may consume more than one hardware entry.
<code>urg, ack, psh, rst, syn, fin, established</code>	These TCP flag - matching parameters are supported for both ingress and egress.

Parameter	Description
<code>[icmp-type {echo echo-reply <ICMP-TYPE-VALUE>}]</code>	Specifies the ICMP type. • echo - specifies an ICMP echo request packet. • echo-reply - specifies an ICMP echo reply packet. • <ICMP - TYPE - VALUE> - specifies an ICMP type value. Range: 0 to 255.
<code>[icmp-code <ICMP-CODE-VALUE>]</code>	Specifies the ICMP code value. Range: 0 to 255.
<code>dscp DSCP-SPECIFIER></code>	Specifies the Differentiated Services Code Point (DSCP), either a numeric <DSCP - VALUE> (0 to 63) or one of these keywords : • AF11 - DSCP 10 (Assured Forwarding Class 1, low drop probability) • AF12 - DSCP 12 (Assured Forwarding Class 1, medium drop probability) • AF13 - DSCP 14 (Assured Forwarding Class 1, high drop probability) • AF21 - DSCP 18 (Assured Forwarding Class 2, low drop probability) • AF22 - DSCP 20 (Assured Forwarding Class 2, medium drop probability) • AF23 - DSCP 22 (Assured Forwarding Class 2, high drop probability) • AF31 - DSCP 26 (Assured Forwarding Class 3, low drop probability) • AF32 - DSCP 28 (Assured Forwarding Class 3, medium drop probability) • AF33 - DSCP 30 (Assured Forwarding Class 3, high drop probability) • AF41 - DSCP 34 (Assured Forwarding Class 4, low drop probability) • AF42 - DSCP 36 (Assured Forwarding Class 4, medium drop probability) • AF43 - DSCP 38 (Assured Forwarding Class 4, high drop probability) • CS0 - DSCP 0 (Class Selector 0: Default) • CS1 - DSCP 8 (Class Selector 1: Scavenger) • CS2 - DSCP 16 (Class Selector 2: OAM) • CS3 - DSCP 24 (Class Selector 3: Signaling)

Parameter	Description
	• CS4 - DSCP 32 (Class Selector 4: Real time) • CS5 - DSCP 40 (Class Selector 5: Broadcast video) • CS6 - DSCP 48 (Class Selector 6: Network control) • CS7 - DSCP 56 (Class Selector 7) • EF - DSCP 46 (Expedited Forwarding)
<code>ecn <ECN-VALUE></code>	Specifies an Explicit Congestion Notification value. Range: 0 - 3.
<code>ip-precedence <IP-PRECEDENCE-VALUE></code>	Specifies an IP precedence value. Range: 0 - 7.
<code>tos <TOS-VALUE></code>	Specifies the Type of Service value. Range: 0 - 31.
<code>fragment</code>	Specifies a fragment packet.
<code>vlan <VLAN-ID></code>	Specifies VLAN tag to match on. 802.1Q VLAN ID.
 NOTE This parameter cannot be used in any ACL that will be applied to a VLAN.	
<code>count</code>	Keeps the hit counts of the number of packets matching this ACE.
<code>log</code>	Keeps a log of the number of packets matching this ACE. Works with both <code>permit</code> and <code>deny</code> actions. Works with ACLs applied on ingress, egress, or Control Plane.
<code>[<SEQUENCE-NUMBER>] comment <TEXT-STRING></code>	Adds a comment to an ACE. The no form removes only the comment from the ACE.

Usage

- If the `<IP-PROTOCOL-NUM>` parameter is used instead of a protocol name, ensure that any needed ACE-definition parameters specific to the selected protocol are also provided.
- When using multiple ACL types (IPv4, IPv6, or MAC) with logging on the same interface, the first packet that matches an ACE with `log` option is logged. Until the log-timer wait-period is over, any packets matching other ACL types do not create a log. At the end of the wait-period, the switch creates a summary log all the ACLs that were matched, regardless of type.

Examples

Creating an IPv6 ACL with four entries:

```

switch(config)# access-list ipv6 MY_IPV6_ACL
switch(config-acl-ipv6)# 10 permit udp any 2001::1/64
switch(config-acl-ipv6)# 20 permit tcp 2001:2001::2:1/128 gt 1023 any
switch(config-acl-ipv6)# 30 permit tcp 2001:2011::1/64 any
switch(config-acl-ipv6)# 40 deny any any any count
switch(config-acl-ipv6)# exit
switch(config)# do show access-list

```

Type	Name	Sequence	Comment	Action	L3 Protocol	Source IP Address	Source L4 Port(s)	Destination IP Address	Destination L4 Port(s)	Additional Parameters
IPv6	MY_IPV6_ACL	10	permit	udp		any		2001::1/64		
		20	permit	tcp		2001:2001::2:1	> 1023	any		
		30	permit	tcp		2001:2011::1/64		any		
		40	deny	any		any		any		
										Hit-counts: enabled

Adding a comment to an existing IPv6 ACE:

```

switch(config)# access-list ipv6 MY_IPV6_ACL
switch(config-acl-ipv6)# 20 comment Permit all TCP ephemeral ports
switch(config-acl-ipv6)# exit
switch(config)# do show access-list

```

Type	Name	Sequence	Comment	Action	L3 Protocol	Source IP Address	Source L4 Port(s)	Destination IP Address	Destination L4 Port(s)	Additional Parameters
IPv6	MY_IPV6_ACL	20	comment Permit all TCP ephemeral ports							


```

10 permit                                udp
    any
    2001::1/64
20 Permit all TCP ephemeral ports
    permit                                tcp
    2001:2001::2:1                        > 1023
    any
30 permit                                tcp
    2001:2011::1/64
    any
40 deny                                  any
    any
    any
Hit-counts: enabled

```

Removing a comment from an existing IPv6 ACE:

```

switch(config)# access-list ipv6 MY_IPV6_ACL
switch(config-acl-ipv6)# no 20 comment
switch(config-acl-ipv6)# exit
switch(config)# do show access-list
Type          Name
Sequence Comment
Action                               L3 Protocol
Source IP Address                     Source L4 Port(s)
Destination IP Address                 Destination L4 Port(s)
Additional Parameters

-----
---
IPv6          MY_IPV6_ACL
10 permit                                udp
    any
    2001::1/64
20 permit                                tcp
    2001:2001::2:1                        > 1023
    any
30 permit                                tcp
    2001:2011::1/64
    any
40 deny                                  any
    any
    any
Hit-counts: enabled

```

Adding an ACE to an existing IPv6 ACL:

```

switch(config)# access-list ipv6 MY_IPV6_ACL
switch(config-acl-ipv6)# 25 permit icmpv6 2001::1/64 any
switch(config-acl-ipv6)# exit
switch(config)# do show access-list
Type          Name
Sequence Comment
Action                               L3 Protocol
Source IP Address                     Source L4 Port(s)
Destination IP Address                 Destination L4 Port(s)
Additional Parameters

-----
---
IPv6          MY_IPV6_ACL
10 permit                               udp
   any
   2001::1/64
20 permit                               tcp
   2001:2001::2:1                       > 1023
   any
25 permit                               icmpv6
   2001::1/64
   any
30 permit                               tcp
   2001:2011::1/64
   any
40 deny                               any
   any
   any
Hit-counts: enabled

```

Replacing an ACE in an existing IPv6 ACL:

```

switch(config)# access-list ipv6 MY_IPV6_ACL
switch(config-acl-ipv6)# 25 permit icmpv6 2001::2:1/64 any
switch(config-acl-ipv6)# exit
switch(config)# do show access-list
Type          Name
Sequence Comment
Action                               L3 Protocol
Source IP Address                     Source L4 Port(s)
Destination IP Address                 Destination L4 Port(s)
Additional Parameters

-----
---
IPv6          MY_IPV6_ACL

```

```

10 permit                                udp
    any
    2001::1/64
20 permit                                tcp
    2001:2001::2:1                      > 1023
    any
25 permit                                icmpv6
    2001::2:1/64
    any
30 permit                                tcp
    2001:2011::1/64
    any
40 deny                                  any
    any
    any
Hit-counts: enabled
Type      Name
Sequence Comment
Action    L3 Protocol
Source IP Address    Source L4 Port(s)
Destination IP Address    Destination L4 Port(s)
Additional Parameters

-----
---
IPv6      MY_IPV6_ACL
10 permit                                udp
    any
    2001::1/64
20 permit                                tcp
    2001:2001::2:1                      > 1023
    any
25 permit                                icmpv6
    2001::2:1/64
    any
30 permit                                tcp
    2001:2011::1/64
    any
40 deny                                  any
    any
    any
Hit-counts: enabled

```

Removing an ACE from an IPv6 ACL:

```

switch(config)# access-list ipv6 MY_IPV6_ACL
switch(config-acl-ipv6)# no 25
switch(config-acl-ipv6)# exit
switch(config)# do show access-list

```

Type	Name		
Sequence	Comment	Action	L3 Protocol
		Source IP Address	Source L4 Port(s)
		Destination IP Address	Destination L4 Port(s)
		Additional Parameters	

IPv6	MY_IPV6_ACL		
10	permit		udp
	any		
	2001::1/64		
20	permit		tcp
	2001:2001::2:1		> 1023
	any		
30	permit		tcp
	2001:2011::1/64		
	any		
40	deny		any
	any		
	any		
	Hit-counts: enabled		

Type	Name		
Sequence	Comment	Action	L3 Protocol
		Source IP Address	Source L4 Port(s)
		Destination IP Address	Destination L4 Port(s)
		Additional Parameters	

IPv6	MY_IPV6_ACL		
10	permit		udp
	any		
	2001::1/64		
20	permit		tcp
	2001:2001::2:1		> 1023
	any		
30	permit		tcp
	2001:2011::1/64		

```

any
40 deny any
any
any
Hit-counts: enabled

```

Removing an IPv6 ACL:

```

switch(config)# no access-list ipv6 MY_IPV6_ACL
switch(config)# do show access-list
Type      Name
Sequence Comment
          Action          L3 Protocol
          Source IP Address Source L4 Port(s)
          Destination IP Address Destination L4 Port(s)
          Additional Parameters
-----
---
IPv6      MY_IPV6_ACL2
1 permit          udp
  any
  2001::1/64
2 Permit all TCP ephemeral ports
  permit          tcp
  2001:2001::2:1  > 1023
  any
3 permit          tcp
  2001:2011::1/64
  any
4 deny          any
  any
  any
Hit-counts: enabled

```

Command History

Release	Modification
10.17.1000	Added support for EIGRP, L2TP and VRRP protocols.
10.12	Allow ACLs applied to the Control Plane to be logged.
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	<code>config</code> The access - list ipv6 < ACL - NAME> command takes you into the named ACL context where you enter the ACEs.	Administrators or local user group members with execution rights for this command.

access-list log-timer

Syntax

```
access-list log-timer {default|<INTERVAL>}
```

Description

Sets the log timer interval for all ACEs that have the **log** parameter configured.

Parameter	Description
<code>default</code>	Resets the log timer to its default 300 seconds.
<code><INTERVAL></code>	Specifies the log timer interval in seconds. Range: 5 to 300.

Usage

- ACL logging keeps a log of the number of packets matching this ACE. Works with both `permit` and `deny` actions. Works with ACLs applied on ingress, egress, or Control Plane.
- The first packet that matches an ACE with the **log** parameter within an ACL log timer window (configured with the **access-list log-timer** command) has its header contents extracted and sent to the configured logging destination, such as the console and syslog server. Each time the ACL log timer expires, a summary of all ACEs with **log** configured are sent to the logging destination. This capability allows throttling of logging ACL hits.

- If no further log messages are generated in the wait-period, the switch suspends the timer and resets itself to log as soon as a new match occurs.
- When using multiple ACL types (IPv4, IPv6, or MAC) with logging on the same interface, the first packet that matches an ACE with the `log` option is logged. Any packets, matching other ACL types, do not create a log until the log-timer wait-period is over. At the end of the wait-period, a summary log is made of all the ACLs that were matched, regardless of type.



NOTE

Remarkd ACL traffic may lose logging information when a QoS action or a classifier policy with remark is enabled. A classifier policy with remark takes precedence over QoS actions and QoS actions takes precedence over ACL remarked traffic.

- You may see a minor discrepancy between the ACL logging statistics and the hit counts statistics due to the time required to record the log message.

Examples



NOTE

Although these examples use debug logging, you can alternatively use event logging.

Enabling debug logging for the ACL logging module:

```
switch# debug acl log severity info
switch# show debug
-----
module sub_module severity vlan port ip mac instance vrf
-----
acl acl_log info -----
```

Setting the debug destination to console with the minimum security level of info:

```
switch# debug destination console severity info
switch# show debug destination
-----
show debug destination
-----
CONSOLE:info
```

Setting the access list log-timer to 30 seconds:

```
switch(config)# access-list log-timer 30
switch(config)# do show access-list log-timer
ACL log timer length (frequency): 30 seconds
```

Creating an IPv4 ACL with one entry with the log parameter:

```

switch(config)# access-list ip MY_IP_ACL
switch(config-acl-ip)# deny icmp 1.1.1.1 1.1.1.2 log
switch(config-acl-ip)# do show access-list

```

Type	Name	Sequence	Comment	Action	L3 Protocol	Source IP Address	Source L4 Port(s)	Destination IP Address	Destination L4 Port(s)	Additional Parameters
IPv4	MY_IP_ACL	10	deny		icmp	1.1.1.1		1.1.1.2		Logging: enabled Hit-counts: enabled

Enabling interface 1/1/1 and applying the ACL:

```

switch(config)# interface 1/1/1
switch(config-if)# no shutdown
switch(config-if)# no routing
switch(config-if)# apply access-list ip MY_IP_ACL in
switch(config-if)# do show running-config interface 1/1/1
interface 1/1/1
  no shutdown
  apply access-list ip MY_IP_ACL in
  no routing
  vlan access 1
  exit
switch(config)# interface 1/1/1
switch(config-if)# apply access-list ip MY_IP_ACL in
switch(config-if)# do show running-config interface 1/1/1
interface 1/1/1
  no shutdown
  apply access-list ip MY_IP_ACL in
  no routing
  vlan access 1
  exit

```

Sending packets that will match the ACE and observe the ACL logging message on the console:

```

2017-10-10T20:13:36.044+00:00 ops-switchd[875]: debug|LOG_INFO|AMM|1/5|ACL|
ACL_LOG|
List MY_IP_ACL, seq# 10 denied icmp 1.1.1.1 -> 1.1.1.2 type 8 code 0,
on vlan 1, port 1/1/1, direction in

```


When the access list log-timer expires, the summary message is printed on the console. The number 30 is the number of packets received during the last access list log-timer window.

```
2017-10-10T20:14:06.051+00:00 ops-switchd[875]: debug|LOG_INFO|AMM|1/5|ACL|
ACL_LOG|
MY_IP_ACL on 1/1/1 (in): 30 10 deny icmp 1.1.1.1 1.1.1.2 log count
```

Resetting the ACL log timer to the default value:

```
switch(config)# access-list log-timer default
```

Command History

Release	Modification
10.12	Allow ACLs applied to the Control Plane to be logged.
10.09	<INTERVAL> parameter range changed to 5 to 300 . Was 30 to 300.
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	<code>config</code>	Administrators or local user group members with execution rights for this command.

access-list mac

Syntax

```
access-list mac <ACL-NAME>
no access-list mac <ACL-NAME>
[<SEQUENCE-NUMBER>]
{permit|deny}
{any|<SRC-MAC-ADDRESS>[/<ETHERNET-MASK>]}
{any|<DST-MAC-ADDRESS>[/<ETHERNET-MASK>]}
{any|arp|appletalk|arp|fcoe|fcoe-init|ip|ipv6|
    ipx-arpa|ipx-non-arpa|is-is|lldp|mpls-multicast|mpls-unicast|q-in-q|
    rbridge|trill|wake-on-lan|<NUMERIC-ETHERTYPE>}
```

```
[pcp <PCP-VALUE>] [vlan <VLAN-ID>] [count] [log]
no <SEQUENCE-NUMBER>
[<SEQUENCE-NUMBER>] comment <TEXT-STRING>
no <SEQUENCE-NUMBER> comment
```

Description

Creates a MAC Access Control List (ACL). The ACL is made of one or more Access Control Entries (ACEs) ordered and prioritized by sequence numbers. The lowest sequence number is the highest prioritized ACE.

The **no** form of this command deletes the entire ACL, or deletes an ACE identified by sequence number, or deletes only the comment from the ACE identified by sequence number.

Parameter	Description
<ACL-NAME>	Specifies the name of this ACL.
<SEQUENCE-NUMBER>	Specifies a sequence number for the ACE. Range: 1 to 4294967295.
{permit deny}	Specifies whether to permit or deny traffic matching this ACE.
comment	Specifies storing the remaining entered text as an ACE comment.
{any <SRC-MAC-ADDRESS>[/<ETHERNET-MASK>]] }	Specifies the source host MAC address (xxxx.xxxx.xxxx), OUI, or the keyword <code>any</code> . You can optionally include the following: <ETHERNET-MASK> - The address bits to mask (xxxx.xxx.xxxx).
{any <DST-MAC-ADDRESS>[/<ETHERNET-MASK>]] }	Specifies the destination host MAC address (xxxx.xxxx.xxxx), OUI, or the keyword <code>any</code> . You can optionally include the following: <ETHERNET-MASK> - The address bits to mask (xxxx.xxx.xxxx).
{any arp appletalk ... wake-on-lan <NUMERIC-ETHERTYPE>}	Specifies the protocol encapsulated in the Ethernet frame. The encapsulated protocol is identified by the EtherType Ethernet field. The EtherType is specified in one of the following three ways: <code>any</code> - any EtherType. <NUMERIC-ETHERTYPE> - the numerical EtherType protocol number. Range: 0x600 to 0xffff. - One of these EtherType protocol name keywords: <code>arp</code>

Parameter	Description
	◦ <code>appletalk</code> ◦ <code>arp</code> ◦ <code>fcoe</code> ◦ <code>fcoe-init</code> ◦ <code>ip</code> ◦ <code>ipv6</code> ◦ <code>ipx-arp</code> ◦ <code>ipx-non-arp</code> ◦ <code>is-is</code> ◦ <code>lldp</code> ◦ <code>mpls-multicast</code> ◦ <code>mpls-unicast</code> ◦ <code>q-in-q</code> ◦ <code>rbridge</code> ◦ <code>trill</code> ◦ <code>wake-on-lan</code>
<code>pcp <PCP-VALUE></code>	Specifies 802.1Q QoS Priority Code Point value. Range: 0 to 7.
<code>vlan <VID></code>	Specifies a VLAN ID. The VLAN ID must exist.
 NOTE This parameter cannot be used in any ACL that will be applied to a VLAN.	
<code>count</code>	Keeps the hit counts of the number of packets matching this ACE.
<code>log</code>	Keeps a log of the number of packets matching this ACE. Works with both <code>permit</code> and <code>deny</code> actions. Works with ACLs applied on ingress or egress.

Usage

When using multiple ACL types (IPv4, IPv6, or MAC) with logging on the same interface, the first packet that matches an ACE with `log` option is logged. Until the log-timer wait-period is over, any packets matching other ACL types do not create a log. At the end of the wait-period, the switch creates a summary log all the ACLs that were matched, regardless of type.

Examples

Creating a MAC ACL with four entries:

```

switch(config)# access-list mac MY_MAC_ACL
switch(config-acl-ip)# 10 permit 1122.3344.5566/ffff.ffff.0000 any ipv6
switch(config-acl-ip)# 20 permit aaaa.bbbb.cccc 1111.2222.3333 any pcp 4
switch(config-acl-ip)# 30 permit any any appletalk vlan 40
switch(config-acl-ip)# 40 deny any any any count
switch(config-acl-ip)# exit
switch(config)# do show access-list

```

Type	Name	Sequence	Comment	Action	EtherType	Source MAC Address	Destination MAC Address	Additional Parameters

MAC	MY_MAC_ACL	10		permit	ipv6	1122.3344.5566/ffff.ffff.0000		
		20		permit	any	aaaa.bbbb.cccc	1111.2222.3333	QoS Priority Code Point: 4
		30		permit	appletalk	any	any	VLAN: 40
		40		deny	any	any	any	
								Hit-counts: enabled

Adding a comment to an existing MAC ACE:

```

switch(config)# access-list mac MY_MAC_ACL
switch(config-acl-ip)# 30 comment Permit all vlan-40 tagged Appletalk traffic
switch(config-acl-ip)# exit
switch(config)# do show access-list

```

Type	Name	Sequence	Comment	Action	EtherType	Source MAC Address	Destination MAC Address	Additional Parameters
		30	Permit all vlan-40 tagged Appletalk traffic					

```

-----
---
MAC          MY_MAC_ACL
10 permit                                ipv6
    1122.3344.5566/ffff.ffff.0000
    any
20 permit                                any
    aaaa.bbbb.cccc
    1111.2222.3333
    QoS Priority Code Point: 4
30 Permit all vlan-40 tagged Appletalk traffic
    permit                                appletalk
    any
    any
    VLAN: 40
40 deny                                    any
    any
    any
    Hit-counts: enabled

```

Removing a comment from an existing MAC ACE:

```

switch(config)# access-list mac MY_MAC_ACL
switch(config-acl-mac)# no 30 comment
switch(config-acl-mac)# exit
switch(config)# do show access-list
Type          Name
Sequence      Comment
              Action
              Source MAC Address
              Destination MAC Address
              Additional Parameters
-----
---
MAC          MY_MAC_ACL
10 permit                                ipv6
    1122.3344.5566/ffff.ffff.0000
    any
20 permit                                any
    aaaa.bbbb.cccc
    1111.2222.3333
    QoS Priority Code Point: 4
30 permit                                appletalk
    any
    any

```

```

VLAN: 1
40 deny                                any
    any
    any
Hit-counts: enabled

```

Adding an ACE to an existing MAC ACL:

```

switch(config)# access-list mac MY_MAC_ACL
switch(config-acl-ip)# 35 permit any aabb.cc11.1234 0xffee
switch(config-acl-ip)# exit
switch(config)# do show access-list

```

Type	Name		
Sequence	Comment	Action	EtherType
		Source MAC Address	
		Destination MAC Address	
		Additional Parameters	

```

-----
---
MAC      MY_MAC_ACL
10 permit                                ipv6
    1122.3344.5566/ffff.ffff.0000
    any
20 permit                                any
    aaaa.bbbb.cccc
    1111.2222.3333
    QoS Priority Code Point: 4
30 permit                                appletalk
    any
    any
    VLAN: 1
35 permit                                0xffee
    any
    aabb.cc11.1234
40 deny                                any
    any
    any
Hit-counts: enabled

```

Replacing an ACE in an existing MAC ACL:

```

switch(config)# access-list mac MY_MAC_ACL
switch(config-acl-ip)# 35 permit any aabb.cc11.1234 0xeeee
switch(config-acl-ip)# exit
switch(config)# do show access-list
Type      Name

```

Sequence	Comment		
	Action		EtherType
	Source MAC Address		
	Destination MAC Address		
	Additional Parameters		

MAC	MY_MAC_ACL		
10	permit		ipv6
	1122.3344.5566/ffff.ffff.0000		
	any		
20	permit		any
	aaaa.bbbb.cccc		
	1111.2222.3333		
	QoS Priority Code Point: 4		
30	permit		appletalk
	any		
	any		
	VLAN: 1		
35	permit		0xeeee
	any		
	aabb.cc11.1234		
40	deny		any
	any		
	any		
	Hit-counts: enabled		

Removing an ACE from an MAC ACL:

```

switch(config)# access-list mac MY_MAC_ACL
switch(config-acl-ip)# no 35
switch(config-acl-ip)# exit
switch(config)# do show access-list

```

Type	Name		
	Sequence	Comment	
	Action		EtherType
	Source MAC Address		
	Destination MAC Address		
	Additional Parameters		

MAC	MY_MAC_ACL		
10	permit		ipv6
	1122.3344.5566/ffff.ffff.0000		
	any		

```

20 permit                                any
    aaaa.bbbb.cccc
    1111.2222.3333
    QoS Priority Code Point: 4
30 permit                                appletalk
    any
    any
    VLAN: 1
40 deny                                  any
    any
    any
Hit-counts: enabled

```

Removing a MAC ACL:

```

switch(config)# no access-list mac MY_MAC_ACL
switch(config)# do show access-list
Type          Name
Sequence Comment
Action                               EtherType
Source MAC Address
Destination MAC Address
Additional Parameters
-----
---
MAC           MY_MAC_ACL2
1 permit                                ipv6
  1122.3344.5566/ffff.ffff.0000
  any
2 permit                                any
  aaaa.bbbb.cccc
  1111.2222.3333
  QoS Priority Code Point: 4
3 Permit all vlan-40 tagged Appletalk traffic
  permit                                appletalk
  any
  any
  VLAN: 1
4 deny                                  any
  any
  any
Hit-counts: enabled

```


Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	<code>config</code> The <code>access-list m</code> <code>ac <ACL-NAME> com</code> mand takes you into the named ACL context whe re you enter the ACEs.	Administrators or local user group members with execution rights for this command.

access-list resequence

Syntax

```
access-list {ip|ipv6|mac} <ACL-NAME> resequence <STARTING-SEQUENCE-NUMBER> <INCREMENT>
```

Description

Resequences the ACE sequence numbers in an ACL.

Parameter	Description
<code>{ip ipv6 mac}</code>	Specifies the ACL type.
<code><ACL-NAME></code>	Specifies the ACL name.
	Specifies the starting sequence number.

Parameter	Description
<code><STARTING-SEQUENCE-NUMBER></code>	
<code><INCREMENT></code>	Specifies the sequence number increment.

Examples

Resequencing an IPv4 ACL to start at 1 with an increment of 1:

```
switch(config)# access-list ip MY_IP_ACL resequence 1 1
switch(config-acl-ip)# exit
switch(config)# do show access-list
```

Type	Name	Sequence	Comment	Action	L3 Protocol	Source IP Address	Source L4 Port(s)	Destination IP Address	Destination L4 Port(s)	Additional Parameters

IPv4	MY_IP_ACL	1	permit		udp	any		172.16.1.0/255.255.255.0		
		2	permit		tcp	172.16.2.0/255.255.0.0	> 1023	any		
		3	permit		tcp	172.26.1.0/255.255.255.0		any		
				dscp: AF11						
				ack						
				syn						
		4	deny		any	any		any		
										Hit-counts: enabled

Resequencing an IPv6 ACL to start at 1 with an increment of 1:

```
switch(config)# access-list ipv6 MY_IPV6_ACL resequence 1 1
switch(config-acl-ip)# exit
```

```
switch(config)# do show access-list
```

Type	Name		
Sequence	Comment	Action	L3 Protocol
		Source IP Address	Source L4 Port(s)
		Destination IP Address	Destination L4 Port(s)
		Additional Parameters	

IPv6	MY_IPV6_ACL		
1	permit		udp
	any		
	2001::1/64		
2	Permit all TCP ephemeral ports		
	permit		tcp
	2001:2001::2:1		> 1023
	any		
3	permit		tcp
	2001:2011::1/64		
	any		
4	deny		any
	any		
	any		
	Hit-counts: enabled		

Type	Name		
Sequence	Comment	Action	L3 Protocol
		Source IP Address	Source L4 Port(s)
		Destination IP Address	Destination L4 Port(s)
		Additional Parameters	

IPv6	MY_IPV6_ACL		
1	permit		udp
	any		
	2001::1/64		
2	Permit all TCP ephemeral ports		
	permit		tcp
	2001:2001::2:1		> 1023
	any		
3	permit		tcp
	2001:2011::1/64		
	any		

```

4 deny
any
any
Hit-counts: enabled

```

Resequencing a MAC ACL to start at 1 with an increment of 1:

```

switch(config)# access-list mac MY_MAC_ACL resequence 1 1
switch(config-acl-mac)# exit
switch(config)# do show access-list

```

Type	Name	Sequence	Comment	Action	EtherType	Source MAC Address	Destination MAC Address	Additional Parameters

MAC	MY_MAC_ACL							
		1	permit		ipv6	1122.3344.5566/ffff.ffff.0000		
						any		
		2	permit		any	aaaa.bbbb.cccc		
						1111.2222.3333		
								QoS Priority Code Point: 4
		3	Permit all vlan-40 tagged Appletalk traffic					
			permit		appletalk			
						any		
						any		
								VLAN: 1
		4	deny		any			
						any		
						any		
								Hit-counts: enabled

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	<code>config</code>	Administrators or local user group members with execution rights for this command.

`access-list reset`

Syntax

```
access-list {all|ip <ACL-NAME>|ipv6 <ACL-NAME>|mac <ACL-NAME>} reset
```

Description

Changes the user-specified ACL configuration to match the active ACL configuration. Use this command when a discrepancy exists between what the user configured and what is active and accepted by the system.

Parameter	Description
<code>all ip <ACL-NAME> ipv6 <ACL-NAME> mac <ACL-NAME></code>	Specifies one of the following: • a reset of <code>all</code> ACLs. • a reset of a named IPv4 ACL. • a reset of a named IPv6 ACL. • a reset of a named MAC ACL.

Usage

The output of the **show access-list** command displays the active configuration of the product. The active configuration is the ACLs that have been configured and accepted by the system. The output of the **show access-list** command with the **configuration** parameter, displays the ACLs that have been configured. The output of this command may not be the same as what was programmed in hardware or what is active on the product.

If the active ACLs and user-configured ACLs are not the same, a warning message is displayed in the output of the show command. Modify the user-configured ACL until the warning message is no longer displayed or run the **access-list reset** command to change the user-specified configuration to match the active configuration.

Examples

Apply an ACL with TCP acknowledgments (ACKs) on ingress, which is unsupported by hardware:

```
switch(config-acl)# 10 permit tcp 172.16.2.0/16 any ack
```

Displaying the user-specified configuration:

```
switch(config)# do show access-list commands
! access-list ip TEST_ACL user configuration does not match active
configuration.
! run 'access-list TYPE NAME reset' to reset access-list to match active
configuration.
access-list ip TEST_ACL
! access-list ip TEST_ACL user configuration does not match active
configuration.
! run 'access-list TYPE NAME reset' to reset access-list to match active
configuration.
interface 1/1/1
    apply access-list ip TEST_ACL in
switch(config)# do show access-list commands configuration
! access-list ip TEST_ACL user configuration does not match active
configuration.
! run 'access-list TYPE NAME reset' to reset access-list to match active
configuration.
access-list ip TEST_ACL
    10 permit tcp 172.16.2.0/255.255.0.0 any ack
! access-list ip TEST_ACL user configuration does not match active
configuration.
! run 'access-list TYPE NAME reset' to reset access-list to match active
configuration.
interface 1/1/1
    apply access-list ip TEST_ACL in
switch(config)# do show access-list
Type          Name
Sequence Comment
              Action          L3 Protocol
              Source IP Address Source L4 Port(s)
              Destination IP Address Destination L4 Port(s)
              Additional Parameters
-----
---
% Warning: TEST_ACL user configuration does not match active configuration.
%          run 'access-list TYPE NAME reset' to reset access-list to match
active configuration.
IPv4          TEST_ACL
switch(config)# do show access-list configuration
Type          Name
```

Sequence	Comment	Action	L3 Protocol	Source IP Address	Source L4 Port(s)	Destination IP Address	Destination L4 Port(s)	Additional Parameters

% Warning: TEST_ACL user configuration does not match active configuration.								
% run 'access-list TYPE NAME reset' to reset access-list to match active configuration.								
IPv4	TEST_ACL							
	10	permit	tcp	172.16.2.0/255.255.0.0				
		any						
		ack						
! access-list ip TEST_ACL user configuration does not match active configuration.								
! run 'access-list TYPE NAME reset' to reset access-list to match active configuration.								
access-list ip TEST_ACL								
! access-list ip TEST_ACL user configuration does not match active configuration.								
! run 'access-list TYPE NAME reset' to reset access-list to match active configuration.								
interface 1/1/1								
apply access-list ip TEST_ACL in								
switch(config)# do show access-list commands configuration								
! access-list ip TEST_ACL user configuration does not match active configuration.								
! run 'access-list TYPE NAME reset' to reset access-list to match active configuration.								
access-list ip TEST_ACL								
	10	permit	tcp	172.16.2.0/255.255.0.0				any ack
! access-list ip TEST_ACL user configuration does not match active configuration.								
! run 'access-list TYPE NAME reset' to reset access-list to match active configuration.								
interface 1/1/1								
apply access-list ip TEST_ACL in								
switch(config)# do show access-list								
Type	Name							
	Sequence	Comment						

```

Action                               L3 Protocol
Source IP Address                    Source L4 Port(s)
Destination IP Address                Destination L4 Port(s)
Additional Parameters

-----
---
% Warning: TEST_ACL user configuration does not match active configuration.
%       run 'access-list TYPE NAME reset' to reset access-list to match
active configuration.
IPv4      TEST_ACL
switch(config)# do show access-list configuration
Type      Name
Sequence Comment
Action                               L3 Protocol
Source IP Address                    Source L4 Port(s)
Destination IP Address                Destination L4 Port(s)
Additional Parameters

-----
---
% Warning: TEST_ACL user configuration does not match active configuration.
%       run 'access-list TYPE NAME reset' to reset access-list to match
active configuration.
IPv4      TEST_ACL
          10
          permit                               tcp
          172.16.2.0/255.255.0.0
          any
          ack

```

Resetting the user-specified configuration to match the active configuration.

```
switch(config)# access-list ip TEST_ACL reset
```

Displaying the updated user-specified configuration.

```

switch(config)# do show access-list commands
access-list ip TEST_ACL
interface 1/1/1
    apply access-list ip TEST_ACL in
switch(config)# do show access-list commands configuration
access-list ip TEST_ACL
interface 1/1/1
    apply access-list ip TEST_ACL in
switch(config)# do show access-list
Type      Name
Sequence Comment

```


	Action	L3 Protocol
	Source IP Address	Source L4 Port(s)
	Destination IP Address	Destination L4 Port(s)
	Additional Parameters	

IPv4	TEST_ACL	
switch(config)# do show access-list configuration		
Type	Name	
Sequence	Comment	
	Action	L3 Protocol
	Source IP Address	Source L4 Port(s)
	Destination IP Address	Destination L4 Port(s)
	Additional Parameters	

IPv4	TEST_ACL	

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

access-list secure-update

Syntax

```
access-list secure-update
no access list secure-update
```

Description

This command determines if access lists are updated using the secure-update feature. Secure-update is enabled by default.

When secure update is enabled and an ACL is updated or replaced, one or more override entries are installed in the TCAM table(s) containing the ACL that is being modified. As a result, all traffic of the same type as the currently configured ACL will be denied on the interfaces to which the ACL is applied. This ensures that traffic is not temporarily allowed while modifying an ACL. Upon completion of the update, the TCAM override entries are uninstalled and traffic resumes ACL matching.

The **no** version of this command disables this feature. If secure-update is disabled, there will be no override entry installed. This results in the faster modification of an ACL and ensures that there is no interruption to previously permitted traffic, but may temporarily allow previously denied traffic to pass through the switch. Once the ACL has been modified, traffic will be processed by the updated ACL.

Examples

Disabling secure update:

```
switch(config)# no access-list secure-update
```

Reenabling secure update:

```
switch(config)# access-list secure-update
```

Related Commands

Command	Description
<code>vsx-sync acl-secure-update</code>	If this setting is enabled and the primary VSX node has configurations with the access list secure - update feature enabled, this configuration can synchronize to the secondary peer. This setting is disabled by default. Refer to the VSX Guide for details.

Command History

Release	Modification
10.13	Command introduced

Command Information

Platforms	Command context	Authority
All platforms	<code>config</code>	Administrators or local user group members with execution rights for this command.

ACL application

ACLs can be applied as follows:

ACL type Direction	IPv4+6 In	IPv4+6 Out	MAC In	MAC Out
L2 interface (port)	Yes	Yes	Yes	Yes
L2 LAG	Yes	Yes	Yes	Yes
L3 interface (port)	Yes	Yes	Yes	Yes
L3 LAG	Yes	Yes	Yes	Yes
VLAN	Yes	Yes	Yes	Yes
Interface VLAN	Yes (routed)	Yes (routed)		
Management interface	Yes			
Control Plane (per VRF)	Yes			



NOTE

The following match criteria is not supported. If this match criteria is attempted to be configured, an error message will be displayed and the action will not be completed.

TTL on IP ACLs

To apply IPv4 and/or IPv6 ACLs to the management interface, apply them to the Control Plane on the management VRF.

apply access-list control-plane

Syntax

```
apply access-list {ip|ipv6} <ACL-NAME> control-plane vrf <VRF-NAME>
no apply access-list {ip|ipv6} <ACL-NAME> control-plane vrf <VRF-NAME>
```

Description

Applies an ACL to the specified VRF.

The **no** form of this command removes application of the ACL from the specified VRF.

Parameter	Description
ip ipv6	Specifies the ACL type: <code>ip</code> for IPv4, or <code>ipv6</code> for IPv6.
<ACL-NAME>	Specifies the ACL name.
vrf <VRF-NAME>	Specifies the VRF name.

Usage

Only one ACL per type (**ip**, or **ipv6**) may be applied to a Control Plane VRF at a time. Therefore, using the **apply access-list control-plane** command on a VRF with an already-applied ACL of the same type, will replace the applied ACL.

Examples

Applying **My_ip_ACL** to Control Plane traffic on the default VRF:

```
switch(config)# apply access-list ip My_ip_ACL control-plane vrf default
```

Replacing **My_ip_ACL** with **My_Replacement_ACL** on the default VRF:

```
switch(config)# apply access-list ip My_Replacement_ACL control-plane vrf
default
```

Remove (unapply) the **My_Replacement_ACL** from the default VRF. Any other interfaces or VLANs with **My_Replacement_ACL** applied are unaffected.

```
switch(config)# no apply access-list ip My_Replacement_ACL control-plane
vrf default
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

apply access-list (to interface or LAG)

Syntax

```
no apply access-list {ip | ipv6 | mac} <ACL-NAME> {in | out}
```

Description

Applies an ACL to the interface (Individual front plane port) or Link Aggregation Group (LAG) identified by the current interface or LAG context.

The **no** form of this command removes application of the ACL from the current interface or LAG identified by the current interface or LAG context.

Parameter	Description
ip ipv6 mac	Specifies the ACL type: <code>ip</code> for IPv4, <code>ipv6</code> for IPv6, or <code>mac</code> for MAC ACL.
<code><ACL-NAME></code>	Specifies the ACL name.
in	Selects the inbound (ingress) traffic direction.
out	Selects the outbound (egress) traffic direction.

Usage

- Each ACL of a given type can be applied to the same interface or LAG once in each direction. Therefore, using the **apply access-list** command on an interface or LAG with an already-applied ACL of the same type will replace the currently applied ACL.
- An ACL can be applied to an individual front plane port or to a Link Aggregation Group (LAG).
- A port that is a member of a LAG with an applied ACL cannot have a different ACL applied to that member port.
- When the port membership of a LAG with an applied ACL is changed, the LAG ACL is automatically applied or removed from that port depending on the modification type.

Examples

Applying **My_IP_ACL** to ingress traffic on interface range 1/1/10 to 1/1/12:

```
switch(config)# int 1/1/10-1/1/12
switch(config-if-<1/1/10-1/1/12>)# apply access-list ip My_IP_ACL in
switch(config-if-<1/1/10-1/1/12>)# exit
```

Applying **MY_IP_ACL** to ingress traffic on LAG 100 and egress traffic on interface 1/1/2:

```
switch(config)# interface lag 100
switch(config-lag-if)# apply access-list ip MY_IP_ACL in
switch(config-lag-if)# exit
switch(config)# interface 1/1/2
switch(config-if)# apply access-list ip MY_IP_ACL out
switch(config-if)# exit
switch(config)#
```

Applying **MY_IPV6_ACL** to ingress traffic on interface 1/1/1 and to ingress traffic on LAG 100:

```
switch(config)# interface 1/1/1
switch(config-if)# apply access-list ipv6 MY_IPV6_ACL in
switch(config-if)# exit
switch(config)# interface lag 100
switch(config-lag-if)# apply access-list ipv6 MY_IPV6_ACL in
switch(config-lag-if)# exit
switch(config)#
```

Applying **MY_MAC_ACL** to ingress traffic on interface 1/1/1 and ingress traffic on interface 1/1/2:

```
switch(config)# interface 1/1/1
switch(config-if)# apply access-list mac MY_MAC_ACL in
switch(config-if)# exit
switch(config)# interface 1/1/2
switch(config-if)# apply access-list mac MY_MAC_ACL in
```

```

switch(config-if) # exit
switch(config) #
switch(config) # interface 1/1/1
switch(config-if) # apply access-list mac MY_MAC_ACL out
switch(config-if) # exit
switch(config) # interface 1/1/2
switch(config-if) # apply access-list mac MY_MAC_ACL out
switch(config-if) # exit
switch(config) #

```

Replacing **MY_IP_ACL** with **MY_REPLACEMENT_ACL** on interface 1/1/2:

```

switch(config) # interface 1/1/2
switch(config-if) # apply access-list ip MY_REPLACEMENT_ACL out
switch(config-if) # exit
switch(config) #

```

Unapplying **MY_REPLACEMENT_ACL** from interface 1/1/2 (out):

```

switch(config) # interface 1/1/2
switch(config-if) # no apply access-list ip MY_REPLACEMENT_ACL out
switch(config-if) # exit
switch(config) #

```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	config-if config-lag-if	Administrators or local user group members with execution rights for this command.

apply access-list (to interface VLAN)

Syntax

```

apply access-list {ip|ipv6} <ACL-NAME> {routed-in|routed-out}
no apply access-list {ip|ipv6} <ACL-NAME> {routed-in|routed-out}

```

Description

Applies an ACL to the interface VLAN (or range of interface VLANs) identified by the current interface VLAN context. Using the `apply access-list` command on an interface VLAN interface with an already-applied ACL of the same direction and type will replace the currently-applied ACL.

The **no** form of this command removes application of the ACL from the interface VLAN (or range of interface VLANs) identified by the current interface VLAN context.

Parameter	Description
<code>ip ipv6</code>	Specifies the ACL type: ip for IPv4, ipv6 for IPv6.
<code><ACL-NAME></code>	Specifies the ACL name.
<code>routed-in</code>	Selects the routed inbound (routed ingress) traffic direction.
<code>routed-out</code>	Selects the routed outbound (routed egress) traffic direction.

Usage

- Each ACL of a given type can be applied to the same interface VLAN once in each direction. Therefore, using the **apply access-list** command on an interface VLAN with an already-applied ACL of the same direction and type, will replace the applied ACL.
- When an ACL is applied to an interface VLAN, it will create hardware entries on all stack members regardless of whether an interface VLAN member exists on any specific stack member.

Examples

Creating an IPv4 ACL and applying it to routed ingress traffic on interface VLAN `vlan100`:

```
switch(config)# access-list ip test
switch(config-acl-ip)# 10 permit any 1.1.1.2 2.2.2.2 count
switch(config-acl-ip)# 20 permit any 1.1.1.2 2.2.2.1 count
switch(config-acl-ip)# 30 permit any 2.2.2.2 1.1.1.2 count
switch(config-acl-ip)# 40 permit any 2.2.2.2 1.1.1.1 count
switch(config-acl-ip)# 50 permit any any any count
switch(config-acl-ip)# exit
switch(config)#
switch(config)# interface vlan100
switch(config-if-vlan)# apply access-list ip test routed-in
```

Applying `My_ip_ACL` to routed ingress traffic on interface VLAN 10:


```
switch(config)# interface vlan 10  
switch(config-if-vlan)# apply access-list ip My_ip_ACL routed-in
```

Applying My_ipv6_ACL to routed ingress traffic on interface VLAN 10:

```
switch(config)# interface vlan 10  
switch(config-if-vlan)# apply access-list ipv6 My_ip_ACL routed-in
```

Applying My_ip_ACL to routed ingress traffic on interface VLANs 20 to 25:

```
switch(config)# interface vlan 20-25  
switch(config-if-vlan-<20-25># apply access-list ip My_ip_ACL routed-in
```

Replacing My_ipv6_ACL with My_Replacement_ACL on interface VLAN 10 (following the above examples):

```
switch(config)# interface vlan 10  
switch(config-if-vlan)# apply access-list ipv6 My_Replacement_ACL routed-in
```

Removing (unapplying) My_Replacement_ACL on interface VLAN 10. Any other interfaces or VLANs with My_Replacement_ACL applied are not affected:

```
switch(config)# interface vlan 10  
switch(config-if-vlan)# no apply access-list ipv6 My_Replacement_ACL routed-in
```

Removing (unapplying) My_ip_ACL on interface VLANs 20 to 25. Any other interfaces or VLANs with My_ip_ACL applied are not affected:

```
switch(config)# interface vlan 20-25  
switch(config-if-vlan-<20-25># no apply access-list ip My_ip_ACL routed-in
```

Applying My_ip_ACL to routed egress traffic on interface VLAN 30:

```
switch(config)# interface vlan 30  
switch(config-if-vlan)# apply access-list ip My_ip_ACL routed-out
```

Applying My_ip_ACL to routed egress traffic on interface VLANs 40 to 50:

```
switch(config)# interface vlan 40-50  
switch(config-if-vlan-<40-50># apply access-list ip My_ip_ACL routed-out
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
5420 6200	config-if-vlan	Administrators or local user group members with execution rights for this command.

apply access-list (to VLAN)

Syntax

```
apply access-list {ip|ipv6|mac} <ACL-NAME> {in|out}  
no apply access-list {ip|ipv6|mac} <ACL-NAME> {in|out}
```

Description

Applies an ACL to the VLAN identified by the current VLAN context.

The **no** form of this command removes application of the ACL from the VLAN identified by the current VLAN context.

Parameter	Description
ip ipv6 mac	Specifies the ACL type: ip for IPv4, ipv6 for IPv6, or mac for MAC ACL.
<ACL-NAME>	Specifies the ACL name.
in	Selects the inbound (ingress) traffic direction.
out	Selects the outbound (egress) traffic direction.



NOTE

For HPE Aruba Networking 6000 and 6100 Switch series, the outbound (egress) traffic direction is supported only for MAC ACLs.

Usage

- Each ACL of a given type can be applied to the same VLAN once in each direction. Therefore, using the **apply access-list** command on a VLAN with an already-applied ACL of the same direction and type, will replace the applied ACL.
- When an ACL is applied to a VLAN, it will create hardware entries on all stack members regardless of whether a VLAN member exists on any specific stack member.

Examples

Applying My_ip_ACL to ingress traffic on VLAN range 20 to 25:

```
switch(config) # vlan 20-25
switch(config-vlan-<20-25>) # apply access-list ip My_ip_ACL in
```

Applying My_ip_ACL to egress traffic on VLAN range 40 to 50:

```
switch(config) # vlan 40-50.
switch(config-vlan-<40-50>) # apply access-list ip My_ip_ACL out
```

Applying My_ip_ACL to ingress traffic on VLAN 10:

```
switch(config) # vlan 10
switch(config-vlan-10) # apply access-list ip My_ip_ACL in
```

Applying My_ipv6_ACL to ingress traffic on VLAN 10:

```
switch(config) # vlan 10
switch(config-vlan-10) # apply access-list ipv6 My_ipv6_ACL in
```

Applying My_mac_ACL to ingress traffic on VLAN 10:

```
switch(config) # vlan 10
switch(config-vlan-10) # apply access-list mac My_mac_ACL in
```

Replacing My_ipv6_ACL with My_Replacement_ACL on VLAN 10 (following the preceding examples):

```
switch(config) # vlan 10
switch(config-vlan-10) # apply access-list ipv6 My_Replacement_ACL in
```

Removing (unapplying, Specifies the ACL type: **ip** for IPv4, **ipv6** for IPv6, or **mac** for MAC ACL.) several ACLs on VLAN 10:

```
switch(config) # vlan 10
switch(config-vlan-10) # no apply access-list ipv6 My_Replacement_ACL in
switch(config-vlan-10) # no apply access-list mac My_mac_ACL in
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	config-vlan	Administrators or local user group members with execution rights for this command.

clear access-list hitcounts

Syntax

```
clear access-list hitcounts { all | [{ip|ipv6|mac} <ACL-NAME>]  
                             [interface <IF-NAME>| vlan <VLAN-ID>] [in|out|routed-in|  
routed-out] }
```

Description

Clears the hit counts for ACLs with ACEs that include the `count` keyword.

Parameter	Description
all	Selects all ACLs.
ip ipv6 mac	Specifies the ACL type: <code>ip</code> for IPv4, <code>ipv6</code> for IPv6, or <code>mac</code> for MAC.
<ACL-NAME>	Specifies the ACL name.
interface <IF-NAME>	Specifies the interface name (port or LAG).
vlan <VLAN-ID>	Specifies the VLAN.

Parameter	Description
in	Selects the inbound (ingress) traffic direction.
out	Selects the outbound (egress) traffic direction.
routed-in routed-out	Selects the routed traffic direction on which the ACL is applied.



NOTE

This is only available for IPv4 and IPv6 ACLs applied to interface VLANs.

- **routed - in** selects the routed inbound (routed ingress) traffic direction.
- **routed - out** selects the routed outbound (routed egress) traffic direction.

Examples

Clearing the hit counts for My_ip_ACL applied to port 1/1/2 (egress):

```
switch# clear access-list hitcounts ip My_ip_ACL interface 1/1/2 out
```

Clearing the hit counts for My_ip_ACL applied to VLAN 10 (ingress):

```
switch# clear access-list hitcounts ip My_ip_ACL vlan 10 in
```

Clearing the hit counts for all ACLs:

```
switch# clear access-list hitcounts all
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

clear access-list hitcounts control-plane

Syntax

```
clear access-list hitcounts [{ip|ipv6} <ACL-NAME>] control-plane vrf <VRF-NAME>
```

Description

Clears the hit counts for ACLs applied to the Control Plane VRF.

Parameter	Description
ip ipv6	Specifies the ACL type: ip for IPv4, or ipv6 for IPv6.
<ACL-NAME>	Specifies the ACL name.
vrf <VRF-NAME>	Specifies the VRF name.

Examples

Clearing the hit counts for an IPv4 ACL applied to the Control Plane `default` VRF:

```
switch# clear access-list hitcounts ip My_ipv4_ACL control-plane vrf default
```

Clearing the hit counts for an IPv6 ACL applied to the Control Plane `default` VRF:

```
switch# clear access-list hitcounts ipv6 My_ipv6_ACL control-plane vrf default
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

object-group address resequence

Syntax

```
object-group {ip|ipv6} address <OBJECT-GROUP-NAME> resequence <STARTING-SEQUENCE-NUMBER>
<INCREMENT>
```

Description

Reorders the sequence numbers in an address object group.

Parameter	Description
ip ipv6	Specifies the object group IP address type, either <code>ip</code> or <code>ipv6</code> .
<OBJECT-GROUP-NAME>	Specifies the address object group name.
<STARTING-SEQUENCE-NUMBER>	Specifies the starting sequence number.

Parameter	Description
<code><INCREMENT></code>	Specifies the sequence number increment.

Examples

Resequencing address object group my_ipv4_addr_group to use sequence numbers 5, 10, 15 and so on:

```
switch(config)# object-group address my_ipv4_addr_group resequence 5 5
switch(config)#
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

object-group address reset

Syntax

```
object-group {ip|ipv6} address <OBJECT-GROUP-NAME> reset
```

Description

Resets the user configuration back to the active configuration. This command takes immediate effect, it is not saved in the user configuration. Use this command if misconfiguration of an address object group has occurred.

Parameter	Description
<code>ip ipv6</code>	Specifies the object group IP address type, either <code>ip</code> or <code>ipv6</code> .
<code><OBJECT-GROUP-NAME></code>	Specifies the address object group name.

Examples

Resetting IPv4 address object group my_ipv4_group:

```
switch(config)# object-group ip address my_ip_group reset
switch(config)#
```

Resetting IPv6 address object group my_ipv6_group:

```
switch(config)# object-group ipv6 address my_ipv6_group reset
switch(config)#
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	<code>config</code>	Administrators or local user group members with execution rights for this command.

object-group all reset

Syntax

```
object-group all reset
```

Description

Resets the user configuration back to the active configuration for all object types (address and port). This command takes immediate effect, it is not saved in the user configuration. Use this command if misconfiguration of address object groups and port object groups has occurred. Individual address and port object groups can be reset respectively with the **object-group address reset** and **object-group port reset** commands.

Examples

Resetting the user configuration for all object types (address and port):

```
switch(config) # object-group all reset
switch(config) #
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

object-group ip address

Syntax

Syntax to create an IPv4 address object group and enter its context:

```
object-group ip address <OBJECT-GROUP-NAME>
no object-group ip address <OBJECT-GROUP-NAME>
```

Syntax (within the address object-group context) for creating or removing IPv4 address entries :

```
[ <SEQUENCE-NUMBER> ] <IP-ADDRESS> [ / { <PREFIX-LENGTH> | <SUBNET-MASK> } ]
```

```
no <SEQUENCE-NUMBER>
```

Description

Creates an IPv4 address object group comprised of one or more address entries. Address groups are used solely as a shorthand way of specifying groups of addresses in the ACEs that make up ACLs. IPv4 address groups can be used only in the **access-list ip** command. Entering **object-group ip address** with an existing address group name, enables you to modify an existing address group.

The **no** form of this command deletes the entire address group or deletes a particular address group entry identified by sequence number.

Parameter	Description
<pre><OBJECT-GROUP-NAME></pre>	Specifies the address object group name.
<pre><SEQUENCE-NUMBER></pre>	Specifies a sequence number for the address entry. Range: 1 to 4294967295. When omitted, a sequence number 10 larger than the current highest sequence number is auto - assigned. Default auto - assigned sequence numbers are 10, 20, 30, and so on.
<pre><IP-ADDRESS> [/{ <PREFIX-LENGTH> <SUBNET-MASK> }]</pre>	Specifies the IPv4 address. • <IP - ADDRESS> - specifies the IPv4 host address. • <PREFIX - LENGTH> - specifies the address bits to mask (CIDR subnet mask notation). Range: 1 to 32. • <SUBNET - MASK> - specifies the address bits to mask (dotted decimal notation).

Examples

Creating an IPv4 address group with two entries:

```
switch(config)# object-group ip address my_ipv4_addr_group  
switch(config-addrgroup-ip)# 10 192.168.0.1
```

```

switch(config-addrgroup-ip)# 20 192.168.0.2
switch(config-addrgroup-ip)# exit
switch(config)# show object-group
Type          Name
Sequence L4 Port(s)/IP Address
-----
---
IPv4          my_ipv4_addr_group
              10 192.168.0.1
              20 192.168.0.2

```

Adding an entry to an existing IPv4 address group:

```

switch(config)# object-group ip address my_ipv4_addr_group
switch(config-addrgroup-ip)# 30 192.168.0.3
switch(config-addrgroup-ip)# exit
switch(config)# show object-group
Type          Name
Sequence L4 Port(s)/IP Address
-----
---
IPv4          my_ipv4_addr_group
              10 192.168.0.1
              20 192.168.0.2
              30 192.168.0.3

switch(config)# object-group ip address net_group
switch(config-addrgroup-ip)# vrf red
switch(config-addrgroup-ip)# 10 7.7.7.0/24
switch(config-addrgroup-ip)# 20 8.8.8.0/24

```

```

object-group ip address obj1
vsx-sync
!
vrf VRF_1
!
10 5.5.5.5
20 6.6.6.0/255.255.255.0
30 7.7.0.0/255.255.0.0
40 20.0.0.10

```

Removing an entry (20) from an existing IPv4 address group:

```

switch(config)# object-group ip address my_ipv4_addr_group
switch(config-addrgroup-ip)# no 20
switch(config-addrgroup-ip)# exit
switch(config)# show object-group
Type          Name

```

Sequence	L4	Port(s)/IP Address

IPv4		my_ipv4_addr_group
	10	192.168.0.1
	30	192.168.0.3

Removing an IPv4 address group:

```
switch(config)# no object-group ip address my_ipv4_addr_group
switch(config)# show object-group
No object group found.
```

Command History

Release	Modification

10.07 or earlier	- -

Command Information

Platforms	Command context	Authority

All platforms	config The object - group ip address command takes you into the named address group context (with prompt switch (config - address group)#) where you enter the addresses.	Administrators or local user group members with execution rights for this command.

object-group ipv6 address

Syntax

Syntax to create an IPv6 address object group and enter its context:

```
object-group ipv6 address <OBJECT-GROUP-NAME>
no object-group ipv6 address <OBJECT-GROUP-NAME>
```

Syntax (within the address object-group context) for creating or removing IPv6 address entries :

```
[<SEQUENCE-NUMBER>] <IP-ADDRESS>[/{<PREFIX-LENGTH>|<SUBNET-  
MASK>}]  
no <SEQUENCE-NUMBER>
```

Description

Creates an IPv6 address object group comprised of one or more address entries. Address groups are used solely as a shorthand way of specifying groups of addresses in the ACEs that make up ACLs. IPv6 address groups can be used only in the `access-list ipv6` command. Entering `object-group ipv6 address` with an existing address group name, enables you to modify an existing address group.

The **no** form of this command deletes the entire address group or deletes a particular address group entry identified by sequence number.

Parameter	Description
<code><OBJECT-GROUP-NAME></code>	Specifies the address object group name.
<code><SEQUENCE-NUMBER></code>	Specifies a sequence number for the address entry. Range: 1 to 4294967295. When omitted, a sequence number 10 larger than the current highest sequence number is auto - assigned. Default auto - assigned sequence numbers are 10, 20, 30, and so on.
<code><IP-ADDRESS></code> <code>[/{</code> <code><PREFIX-LENGTH></code> <code> </code> <code><SUBNET-MASK></code> <code>}]</code>	Specifies the IPv6 address. • <code><IP-ADDRESS></code> - specifies the IPv6 host address. ◦ <code><PREFIX-LENGTH></code> - specifies the address bits to mask (CIDR subnet mask notation). Range: 1 to 128. ◦ <code><SUBNET-MASK></code> - specifies the address bits to mask (dotted decimal notation).

Examples

Creating an IPv6 address group with two entries:

```

switch(config)# object-group ipv6 address my_ipv6_addr_group
switch(config-addrgroup-ipv6)# 10 1000::1
switch(config-addrgroup-ipv6)# 20 1000::2
switch(config-addrgroup-ipv6)# exit
switch(config)# show object-group

```

```

Type          Name
Sequence L4 Port(s)/IP Address
-----

```

```

---
IPv6          my_ipv6_addr_group
              10 1000::1
              20 1000::2

```

Adding an entry to an existing IPv6 address group:

```

switch(config)# object-group ipv6 address my_ipv6_addr_group
switch(config-addrgroup-ipv6)#
switch(config-addrgroup-ipv6)# 30 1000::3
switch(config-addrgroup-ipv6)# exit
switch(config)# show object-group

```

```

Type          Name
Sequence L4 Port(s)/IP Address
-----

```

```

---
IPv6          my_ipv6_addr_group
              10 1000::1
              20 1000::2
              30 1000::3

```

```

switch(config)# object-group ipv6 address net_group
switch(config-addrgroup-ip)# vrf red
switch(config-addrgroup-ip)# 10 1000::1
switch(config-addrgroup-ip)# 20 1000::2

```

Removing an entry (20) from an existing IPv6 address group:

```

switch(config)# object-group ipv6 address my_ipv6_addr_group
switch(config-addrgroup-ipv6)# no 20
switch(config-addrgroup-ipv6)# exit
switch(config)# show object-group

```

```

Type          Name
Sequence L4 Port(s)/IP Address
-----

```

```

---
IPv6          my_ipv6_addr_group
              10 1000::1
              30 1000::3

```

Removing an IPv6 address group:

```
switch(config)# no object-group ipv6 address my_ipv6_addr_group
switch(config)# show object-group
No object group found.
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	<code>config</code> The object - group ipv6 address command takes you into the named address group context (with prompt switch(config - addrgroup - ipv6)#) where you enter the addresses.	Administrators or local user group members with execution rights for this command.

object-group port

Syntax

Syntax to create a Layer 4 port object group and enter its context:

```
object-group port <OBJECT-GROUP-NAME>
no object-group port <OBJECT-GROUP-NAME>
```

Syntax (within the port object-group context) for creating or removing Layer 4 port entries:

```
[<SEQUENCE-NUMBER>] { {eq|gt|lt} <PORT>|range <MIN-PORT>
                        <MAX-PORT> }
no <SEQUENCE-NUMBER>
```


Description

Creates a Layer 4 port object group comprised of one or more port entries. Port groups are used solely as a shorthand way of specifying groups of ports in the ACEs that make up ACLs. Layer 4 port groups can be used only in the **access-list ip** and **access-list ipv6** commands. Entering **object-group port** with an existing port group name, enables you to modify an existing port group.

The **no** form of this command deletes the entire port group or deletes a particular port group entry identified by sequence number.

Parameter	Description
<pre><OBJECT-GROUP-NAME></pre>	Specifies the port object group name.
<pre><SEQUENCE-NUMBER></pre>	Specifies a sequence number for the port entry. Range: 1 to 4294967295. When omitted, a sequence number 10 larger than the current highest sequence number is auto - assigned. Default auto - assigned sequence numbers are 10, 20, 30, and so on.
<pre>{ {eq gt lt} <PORT> range <MIN-PORT> <MAX-PORT> }</pre>	Specifies the port or port range. Port numbers are in the range of 0 to 65535. • eq <PORT> - specifies the Layer 4 port. • gt <PORT> - specifies any Layer 4 port greater than the indicated port. • lt <PORT> - specifies any Layer 4 port less than the indicated port. • range MIN - PORT> <MAX - PORT> - specifies the Layer 4 port range.  NOTE When ACLs using ACEs defined with port groups are applied, the same number of hardware resources are consumed as when the ports are specified directly in the ACEs and not in a group. Keep this in mind when creating port groups that include many ports. Although hardware resource consumption is the same, with or without port groups used, it may not be immediately obvious that some port groups that you have defined, include many ports. It is recommended that you name port groups in a manner that reminds you that a group includes many ports.

Examples

Creating a port group with two entries to cover port 80 plus ports 0 through 50:

```
switch(config)# object-group port my_port_group
switch(config-portgroup)# 10 eq 80
switch(config-portgroup)# 20 range 0 50
switch(config-portgroup)# exit
switch(config)# show object-group
```

Type	Name
Sequence	L4 Port(s)/IP Address

Port	my_port_group
10	eq 80
20	range 0 50

Adding an entry for ports greater than 65525 (covers ports 65526 through 65535):

```
switch(config)# object-group port my_port_group
switch(config-portgroup)# 30 gt 65525
switch(config-portgroup)# exit
switch(config)# show object-group
```

Type	Name
Sequence	L4 Port(s)/IP Address

Port	my_port_group
10	eq 80
20	range 0 50
30	gt 65525

Removing an entry (#20) from the port group:

```
switch(config)# object-group port my_port_group
switch(config-portgroup)# no 20
switch(config-portgroup)# exit
switch(config)# show object-group
```

Type	Name
Sequence	L4 Port(s)/IP Address

Port	my_port_group
10	eq 80
30	gt 65525

Removing the port group:

```
switch(config)# no object-group port my_port_group
switch(config)# show object-group
No object group found.
```

Command History

Release	Modification
---------	--------------

10.07 or earlier	- -
------------------	-----

Command Information

Platforms	Command context	Authority
All platforms	config The object - group ip port command takes you in to the named port group context (with prompt switch(config - portgroup)#) where you specify the ports.	Administrators or local user group members with execution rights for this command.

object-group port resequence

Syntax

```
object-group port <OBJECT-GROUP-NAME> resequence <STARTING-SEQUENCE-NUMBER>
<INCREMENT>
```

Description

Reorders the sequence numbers in a port object group.

Parameter	Description
	Specifies the port object group name.

Parameter	Description
<OBJECT-GROUP-NAME>	
<STARTING-SEQUENCE-NUMBER>	Specifies the starting sequence number.
<INCREMENT>	Specifies the sequence number increment.

Examples

Resequencing port object group my_port_group to use sequence numbers 110, 120, 130 and so on:

```
switch(config) # object-group port my_port_group resequence 110 10
switch(config) #
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

object-group port reset

Syntax

```
object-group port <OBJECT-GROUP-NAME> reset
```

Description

Resets the user configuration back to the active configuration. This command takes immediate effect, it is not saved in the user configuration. Use this command if misconfiguration of a port object group has occurred.

Parameter	Description
<code><OBJECT-GROUP-NAME></code>	Specifies the port object group name.

Examples

Resetting port object group my_port_group:

```
switch(config)# object-group port my_port_group reset
switch(config)#
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	<code>config</code>	Administrators or local user group members with execution rights for this command.

show access-list

Syntax

10.05 reviewer comment: Added routed-in and routed-out for FL, GL, ML, TL and routed-in only for XL. Removed exclusion of IPv4/IPv6 egress VLANs for GL and TL. 10.05 May 28 2020: SME Kyle Klockenbrink (Julie). Added routed-in for FL GL TL XL and routed-out for FL GL TL (NOT XL). ML gains NEITHER routed-in or routed-out.

```
show access-list [interface <IF-NAME> | vlan <VLAN-ID>] [ip|ipv6|mac] [in|
out|routed-in|routed-out] [commands] [configuration]
show access-list [ip|ipv6|mac] [<ACL-NAME>] control-plane [vrf <VRF-NAME>]
[commands] [configuration]
```

Description

Shows information about your defined ACLs and where they have been applied. When **show access-list** is entered without parameters, information for all ACLs is shown. The parameters filter the list of ACLs for which information is shown.

Available filtering includes:

- The content of a specific ACL.
- All ACLs of a specific type.
- The ACL applied in a particular direction.
- The ACL applied to a specific interface (port or split port or LAG).
- The ACL applied to a specific VLAN.
- The ACL applied to specific interface VLAN (routed-in or routed-out).
- The control-plane ACL applied to a specific VRF.

Parameter	Description
<code>interface <IF-NAME></code>	Specifies the interface name (port or LAG).
<code>vlan <VLAN-ID></code>	Specifies the VLAN.
<code>in</code>	Selects the inbound (ingress) traffic direction.
<code>out</code>	Selects the outbound (egress) traffic direction.
<code>routed-in</code>	Selects the routed inbound (routed ingress) traffic direction.
	 NOTE This is only available for IPv4 and IPv6 ACLs applied to interface VLANs.
<code>routed-out</code>	Selects the routed outbound (routed egress) traffic direction.



NOTE

Parameter	Description
	 This is only available for IPv4 and IPv6 ACLs applied to interface VLANs.
<code>ip ipv6 mac</code>	Specifies the ACL type: • ip for IPv4, • ipv6 for IPv6, or • mac for MAC.
<code><ACL-NAME></code>	Specifies the ACL name.
<code>commands</code>	Specifies that the ACL definition is to be shown as the commands and parameters used to create it rather than in tabular form.
<code>configuration</code>	Specifies that the user - configured ACLs be shown as entered, even if the ACLs are not active due to ACE - definition command issues or hardware issues. This parameter is useful if there is a mismatch between the entered configuration and the previous successfully programmed (active) ACLs configuration.

Examples

Creating an IPv4 ACL, applying it to an interface VLAN (routed in), and then showing ACL information filtered for that interface VLAN:

```
switch(config)# access-list ip test
switch(config-acl-ip)# 10 permit any 1.1.1.2 2.2.2.2 count
switch(config-acl-ip)# 20 permit any 1.1.1.2 2.2.2.1 count
switch(config-acl-ip)# 30 permit any 2.2.2.2 1.1.1.2 count
switch(config-acl-ip)# 40 permit any 2.2.2.2 1.1.1.1 count
switch(config-acl-ip)# 50 permit any any any count
switch(config-acl-ip)# exit
switch(config)#
switch(config)# interface vlan100
switch(config-if-vlan)# apply access-list ip test routed-in
switch(config-if-vlan)# exit
switch(config)# show access-list interface vlan100 ip routed-in
Direction
Type      Name
Sequence Comment
          Ac  L3 Protocol
          Source IP Address          Source L4 Port(s)
```

	Destination IP Address	Destination L4 Port(s)
	Additional Parameters	

Routed Inbound		
IPv4	test	
10	permit	any
	1.1.1.2	
	2.2.2.2	
	Hit-counts: enabled	
20	permit	any
	1.1.1.2	
	2.2.2.1	
	Hit-counts: enabled	
30	permit	any
	2.2.2.2	
	1.1.1.2	
	Hit-counts: enabled	
40	permit	any
	2.2.2.2	
	1.1.1.1	
	Hit-counts: enabled	
50	permit	any
	any	
	any	
	Hit-counts: enabled	

Showing an IPv4 ACL:

```
switch# show access-list ip MY_ACL
```

Type	Name		
Sequence	Comment	Action	L3 Protocol
		Source IP Address	Source L4 Port(s)
		Destination IP Address	Destination L4 Port(s)
		Additional Parameters	

--			


```

IPv4      MY_ACL
10 permit                                udp
    any
    172.16.1.0/255.255.255.0
20 permit                                tcp
    172.16.2.0/255.255.0.0          > 1023
    any
30 permit                                tcp
    172.26.1.0//255.255.255.0
    any
    syn
    ack
    dscp 10
40 deny                                    any
    any
    any
    Hit-counts: enabled
-----
--

```

Showing an IPv4 ACL as commands:

```

switch# show access-list ip MY_ACL commands
access-list ip MY_ACL
  10 permit udp any 172.16.1.0/255.255.255.0
  20 permit tcp 172.16.2.0/255.255.0.0 gt 1023 any
  30 permit tcp 172.26.1.0/255.255.255.0 any syn ack dscp 10
  40 deny any any any count

switch# show access-list interface 1/1/2.1 mac in
Direction
Type      Name
Sequence  Comment
          Action                      EtherType
          Source MAC Address
          Destination MAC Address
          Additional Parameters
-----
---
Inbound
MAC      My_mac_ACL
10
  permit                                ipv6
  1122.3344.5566/ffff.ffff.0000
  any
20

```

```

        permit                                any
        aaaa.bbbb.cccc
        1111.2222.3333
        QoS Priority Code Point: 4
30
        deny                                any
        any
        any
        Hit-counts: enabled
-----
---
```

Showing IPv4 ACLs applied to VLAN 10, inbound:

```
switch# show access-list vlan 10 ip in
```

Type	Name	Sequence	Comment	Action	L3 Protocol	Source IP Address	Source L4 Port(s)	Destination IP Address	Destination L4 Port(s)	Additional Parameters
IPv4	My_ip_ACL	10	permit		udp	172.16.1.0/255.255.255.0				
		20	permit		tcp	172.16.2.0/255.255.0.0	> 1023			
		30	permit		tcp	172.26.1.0//255.255.255.0				
		40	deny		any					

Hit-counts: enabled

Showing IPv6 ACLs applied to LAG 128, inbound:

```
switch# show access-list interface lag128 ipv6 in
```

Type	Name
------	------

```

Sequence Comment
Action                      L3 Protocol
Source IP Address          Source L4 Port(s)
Destination IP Address     Destination L4 Port(s)
Additional Parameters

-----
--
IPv6      MY_IPV6_ACL
10 permit                udp
    any
    2001::1/64
20 permit                tcp
    2001:2001::2:1/128    > 1023
    any
30 permit                tcp
    2001:2011::1/64
40 deny                  any
    any
    any
    Hit-counts: enabled
-----
--

```

Showing an IPv6 ACL as commands:

```

switch# show access-list ipv6 MY_IPV6_ACL commands
access-list ipv6 MY_IPV6_ACL
  10 permit udp any 2001::1/64
  20 permit tcp 2001:2001::2:1/128 gt 1023 any
  40 deny any any any count

```

Showing a MAC ACL:

```

switch# show access-list mac MY_MAC_ACL
Type      Name
Sequence Comment
Action                      EtherType
Source MAC Address
Destination MAC Address
Additional Parameters

-----
--
MAC      MY_MAC_ACL
10 permit                ipv6
    1122.3344.5566/ffff.ffff.0000
    any
20 permit                any

```

```

      aaaa.bbbb.cccc
      1111.2222.3333
      QoS Priority Code Point: 4
30 deny                                     any
      any
      any
      Hit-counts: enabled
-----
--

```

Showing a MAC ACL as commands:

```

switch# show access-list mac MY_MAC_ACL commands
access-list mac MY_MAC_ACL
  10 permit 1122.3344.5566/ffff.ffff.0000 any ipv6
  20 permit aaaa.bbbb.cccc 1111.2222.3333 any pc 4
  30 deny any any any count

```

Command History

Release	Modification
10.07 or earlier	Command introduced.

Command Information

Platforms	Command context	Authority
All platforms	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show access-list control-plane

Syntax

```

show access-list [ip|ipv6] [<ACL-NAME>] control-plane [vrf <VRF-NAME>]
                  [commands] [configuration]

```

Description

Shows information about your defined ACLs that have been applied to the Control Plane. When **show access-list control-plane** is entered without parameters, information for all ACLs applied to the Control Plane is shown. The parameters filter the list of ACLs for which information is shown.

Available filtering includes:

- The content of a specific ACL that has been applied to the Control Plane.
- All ACLs of a specific type that have been applied to the Control Plane.
- All ACLs applied to the Control Plane for a specific VRF.

Parameter	Description
<code>ip ipv6</code>	Specifies the ACL type: <code>ip</code> for IPv4, or <code>ipv6</code> for IPv6.
<code><ACL-NAME></code>	Specifies the ACL name.
<code>vrf <VRF-NAME></code>	Specifies the VRF name.
<code>[commands]</code>	Specifies that the ACL definition is to be shown as the commands and parameters used to create it rather than in tabular form.
<code>[configuration]</code>	Specifies that the user - configured ACLs be shown as entered, even if the ACLs are not active due to ACE - definition command issues or hardware issues. This parameter is useful if there is a mismatch between the entered configuration and the previous successfully programmed (active) ACLs configuration.

Examples

Showing an IPv4 ACL applied to the Control Plane `default` VRF:

```
switch# show access-list ip My_ipv4_ACL control-plane vrf default
Type      Name
Sequence  Comment
          Action                    L3 Protocol
          Source IP Address          Source L4 Port(s)
          Destination IP Address      Destination L4 Port(s)
          Additional Parameters
-----
--
IPv4      My_ipv4_ACL
```

```

10 permit                                udp
    any
    172.16.1.0/24
20 permit                                tcp
    172.16.2.0/16                        > 1023
    any
30 permit                                tcp
    172.26.1.0/24
    any
    syn
    ack
    dscp 10
40 deny                                  any
    any
    any
Hit-counts: enabled
-----
--

```

Showing an IPv6 ACL applied to the Control Plane `default` VRF:

```
switch# show access-list ipv6 My_ipv6_ACL control-plane vrf default
```

Type	Name	Sequence	Comment	Action	L3 Protocol	Source IP Address	Source L4 Port(s)	Destination IP Address	Destination L4 Port(s)	Additional Parameters
IPv6	My_ipv6_ACL	10	permit	udp		any		2001::1/64		
		20	permit	tcp		2001:2001::2:1/128	> 1023	any		
		30	permit	tcp		2001:2011::1/64				
		40	deny	any		any				
						any				
										Hit-counts: enabled

```

-----
--

```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show access-list hitcounts

Syntax

```
show access-list hitcounts { [{ip|ipv6|mac} <ACL-NAME>] [interface <IF-NAME> | vlan <VLAN-ID>] [in|out|routed-in|routed-out]] }
```

Description

Shows the hit count of the number of times an ACL has matched a packet or frame for ACEs with the **count** keyword. For ACEs without the **count** keyword, a dash is shown in place of a hit count.

Parameter	Description
ip ipv6 mac	Specifies the ACL type: ip for IPv4, ipv6 for IPv6, or mac for MAC.
<ACL-NAME>	Specifies the ACL name.
interface <IF-NAME>	Specifies the interface name (port or split port or LAG).
vlan <VLAN-ID>	Specifies the VLAN.

Parameter	Description
<code>in</code>	Selects the inbound (ingress) traffic direction.
<code>out</code>	Selects the outbound (egress) traffic direction.
<code>routed-in</code>	Selects the routed inbound (routed ingress) traffic direction.
<code>routed-out</code>	Selects the routed outbound (routed egress) traffic direction.

Usage

- ACL hit counts are aggregated across all:
 - Physical interfaces to which the ACL is applied to on ingress.
 - Physical interfaces to which the ACL is applied to on egress.
 - VLANs to which the ACL is applied to on ingress.
 - VLANs to which the ACL is applied to on egress.
 - Interface VLANs to which the IPv4 or IPv6 ACL is applied on routed ingress.
 - Interface VLANs to which the IPv4 or IPv6 ACL is applied on routed egress.
- If an ACL with an ACE with the **count** keyword is applied to multiple physical interfaces or VLANs, the hit counts are aggregated. There is one aggregation for physical interfaces and another for VLANs.
- Accumulated hit counts for an applied ACL are cleared upon any modification of the ACL.

Examples

Showing the hit counts for **My_ip_ACL** applied to port 1/1/2:

```
switch# show access-list hitcounts ip My_ip_ACL interface 1/1/2
Statistics for ACL My_ip_ACL (ipv4):
interface 1/1/1-1/1/2,lag1 (out):
    Matched Packets  Configuration
                    - 10 permit udp any 172.16.1.0/255.255.255.0
                    0 20 permit tcp 172.16.2.0/255.255.0.0 gt 1023 any count
                    - 30 permit tcp 172.26.1.0/255.255.255.0 any dscp AF11
ack syn
                    0 implicit deny any any any count
```

Showing the hit counts for **My_ip_ACL** applied to VLAN 10:

```
switch# show access-list hitcounts ip My_ip_ACL vlan 10
Statistics for ACL My_ip_ACL (ipv4):
vlan 10,20-100,300 (in):
```



```

    Matched Packets Configuration
      - 10 permit udp any 172.16.1.0/255.255.255.0
    0 20 permit tcp 172.16.2.0/255.255.0.0 gt 1023 any count
      - 30 permit tcp 172.26.1.0/255.255.255.0 any dscp AF11
ack syn
    0 implicit deny any any any count
switch# show access-list hitcounts ip My_ip_ACL interface 1/1/4.1
Statistics for ACL My_ip_ACL (ipv4):
interface 1/1/4.1,1/1/10.10 (in):
    Matched Packets Configuration
      - 10 permit udp any 172.16.1.0/255.255.255.0
    0 20 permit tcp 172.16.2.0/255.255.0.0 gt 1023 any count
      - 30 permit tcp 172.26.1.0/255.255.255.0 any dscp AF11
ack syn
    0 implicit deny any any any count
switch# show access-list hitcounts ip My_ip_ACL2 interface lag1.3
Statistics for ACL My_ip_ACL2 (ipv4):
interface lag1.3-lag1.4 (in):
    Matched Packets Configuration
      0 10 deny icmp any 192.168.42.1 count
    3884 100 permit any any any count
      0 implicit deny any any any count

```

Showing the hit counts for **My_ip_ACL** applied to interface VLAN 10:

```

switch# show access-list hitcounts ip My_ip_ACL vlan 10
Statistics for ACL My_ip_ACL (ipv4):
interface vlan 10,20,30 (routed-in):
    Matched Packets Configuration
      - 10 permit udp any 172.16.1.0/255.255.255.0
    0 20 permit tcp 172.16.2.0/255.255.0.0 gt 1023 any count
      - 30 permit tcp 172.26.1.0/255.255.255.0 any dscp AF11
ack syn
    0 implicit deny any any any count

```

Showing the hit counts for **My_ip_ACL** applied on any interface and direction:

```

switch# show access-list hitcounts ip My_ip_ACL vlan 10
switch# show access-list hitcounts ip My_ip_ACL
Statistics for ACL My_ip_ACL (ipv4):
interface 1/1/1 (in):
    Matched Packets Configuration
      - 10 permit udp any 172.16.1.0/255.255.255.0
    0 20 permit tcp 172.16.2.0/255.255.0.0 gt 1023 any count
      - 30 permit tcp 172.26.1.0/255.255.255.0 any dscp AF11
ack syn
    0 implicit deny any any any count

```

```

interface 1/1/4.1,1/1/10.10 (in):
    Matched Packets  Configuration
        - 10 permit udp any 172.16.1.0/255.255.255.0
        0 20 permit tcp 172.16.2.0/255.255.0.0 gt 1023 any count
        - 30 permit tcp 172.26.1.0/255.255.255.0 any dscp AF11
ack syn
    0 implicit deny any any any count

interface vlan 10,20,30 (routed-in):
    Matched Packets  Configuration
        - 10 permit udp any 172.16.1.0/255.255.255.0
        0 20 permit tcp 172.16.2.0/255.255.0.0 gt 1023 any count
        - 30 permit tcp 172.26.1.0/255.255.255.0 any dscp AF11
ack syn
    0 implicit deny any any any count

interface vlan 80-85 (routed-out):
    Matched Packets  Configuration
        - 10 permit udp any 172.16.1.0/255.255.255.0
        0 20 permit tcp 172.16.2.0/255.255.0.0 gt 1023 any count
        - 30 permit tcp 172.26.1.0/255.255.255.0 any dscp AF11
ack syn
    0 implicit deny any any any count

vlan 10,20-100,300 (in):
    Matched Packets  Configuration
        - 10 permit udp any 172.16.1.0/255.255.255.0
        0 20 permit tcp 172.16.2.0/255.255.0.0 gt 1023 any count
        - 30 permit tcp 172.26.1.0/255.255.255.0 any dscp AF11
ack syn
    0 implicit deny any any any count

vrf blue,default,red (control-plane):
    Matched Packets  Configuration
        - 10 permit udp any 172.16.1.0/255.255.255.0
        0 20 permit tcp 172.16.2.0/255.255.0.0 gt 1023 any count
        - 30 permit tcp 172.26.1.0/255.255.255.0 any dscp AF11
ack syn
    0 implicit deny any any any count

```

Command History

Release	Modification
10.08	Added subinterface information and examples.
10.07 or earlier	Updated command output to use interface and VLAN ranges to reflect aggregation.

Command Information

Platforms	Command context	Authority
All platforms	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show access-list hitcounts control-plane

Syntax

```
show access-list hitcounts [{ip|ipv6} <ACL-NAME>] control-plane vrf <VRF-NAME>
```

Description

Shows the hit count of the number of times an ACL (applied to the Control Plane) has matched a packet for ACEs with the **count** keyword. For ACEs without the **count** keyword, a dash is shown in place of a hit count.

Parameter	Description
ip ipv6	Specifies the ACL type: ip for IPv4, or ipv6 for IPv6.
<ACL-NAME>	Specifies the ACL name.

Parameter	Description
vrf <VRF-NAME>	Specifies the VRF name.

Usage

- ACL hit counts are aggregated across all VRFs to which the ACL is applied to on ingress.
- Accumulated hit counts for an applied ACL are cleared upon any modification of the ACL.

Examples

Showing the hit counts for an IPv4 ACL applied to the Control Plane default VRF:

```
switch# show access-list hitcounts ip My_ipv4_ACL control-plane vrf default
Statistics for ACL My_ip_ACL (ipv4):
vrf default (control-plane):
    Matched Packets  Configuration
                    - 10 permit udp any 172.16.1.0/255.255.255.0
                    0 20 permit tcp 172.16.2.0/255.255.0.0 gt 1023 any count
                    - 30 permit tcp 172.26.1.0/255.255.255.0 any dscp AF11
ack syn
                    0 implicit deny any any any count
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	Operator (>) or Manage r (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show access-list secure-update

Syntax

```
show access-list secure-update
```

Description

Use this command to determine if access lists are updated using the secure-update feature. Secure update is enabled by default.

Examples

Displaying the status of the access list secure-update feature when that feature is enabled:

```
switch(config)# show access-list secure-update
Access-list secure-update is enabled
```

Displaying the status of the access list secure-update feature when that feature is disabled:

```
switch(config)# show access-list secure-update
Access-list secure-update is disabled
```

Related Commands

Command	Description
<code>access-list secure-update</code>	This command determines if access lists are updated using the secure - update feature. Secure - update is enabled by default.

Command History

Release	Modification
10.13	Command introduced

Command Information

Platforms	Command context	Authority
All platforms	<code>config</code>	Administrators or local user group members with execution rights for this command.

```
show capacities
```

Syntax

```
show capacities <FEATURE>
```

Description

Shows system capacities and their values for all features or a specific feature.

Parameter

Description

<FEATURE>

Specifies a feature. For example, **aaa** .

Usage

Capacities are expressed in user-understandable terms. Thus they may not map to a specific hardware or software resource or component. They are not intended to define a feature exhaustively.

Examples

Showing all available capacities for mirroring:

```
switch# show capacities mirroring
System Capacities: Filter Mirroring
Capacities Name
Value
-----
Maximum number of Mirror Sessions configurable in a
system                                     4
Maximum number of enabled Mirror Sessions in a
system                                     4
```

Showing all available capacities for MSTP:

```
switch# show capacities mstp
System Capacities: Filter MSTP
Capacities Name
Value
-----
Maximum number of mstp instances configurable in a
system                                     64
```

Showing all available capacities for VLAN count:

```
switch# show capacities vlan-count
System Capacities: Filter VLAN Count
```

```

Capacities Name
Value
-----
-----
Maximum number of VLANs supported in the
system                               4094      /switch# show capacities
vlan-count
System Capacities: Filter VLAN Count
Capacities Name
Value
-----
-----
Maximum number of VLANs supported in the
system                               4094

```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

show capacities-status

Syntax

```
show capacities-status <FEATURE>
```

Description

Shows system capacities status and their values for all features or a specific feature.

Parameter	Description
<FEATURE>	Specifies the feature, for example aaa for which to display capacities, values, and status. Required.

Examples

Showing the system capacities status for all features:

```

switch# show capacities-status
System Capacities Status
Capacities Status Name
Value Maximum
-----
-----
Number of active gateway mac addresses in a
system                                0      16
Number of aspath-lists
configured                             0      64
Number of community-lists
configured                             0      64
...
switch# show capacities-status
System Capacities Status
Capacities Status Name
Value Maximum
-----
-----
Number of Access Control Entries currently configured
0      4096
Number of Access Control Lists currently configured
0      512
Number of class entries currently configured
0      4096
Number of classes currently configured
0      512
Number of policies currently configured
0      512
Number of policy entries currently configured
0      4096
Number of dynamic VLANs currently learnt using MVRP
0      256
Number of IP neighbor (IPv4+IPv6) entries

```



```

1      1024
Number of IPv4 neighbor(ARP) entries
1      1024
Number of IPv6 neighbor(ND) entries
0      512
Number of L3 Groups for IP Tunnels and ECMP Groups currently configured
0      1
Number of L3 Destinations for Routes, Nexthops in ECMP groups and Tunnels
currently configured
0      1024
Number of Mirror Sessions currently configured
0      4
Number of Mirror Sessions currently enabled
0      4
Number of mstp instances currently configured
0      16
Number of RPVST VLANs currently configured
0      16
Number of routes (IPv4+IPv6) currently configured
1      512
Number of IPv4 routes currently configured
1      512
Number of IPv6 routes currently configured with prefix 0-64
0      512
Number of IPv6 routes currently configured with prefix 65-127
0      512
Number of VLANs currently configured
1      512

```

Showing the system capacities status for BGP:

Showing the system capacities status for L3:

```

switch# show capacities-status l3
System Capacities Status: Filter L3 resources
Capacities Status Name
Value Maximum
-----
-----
Number of IP neighbor (IPv4+IPv6) entries
4      49152
Number of IP Directed Broadcast neighbor entries
0      4096
Number of IPv6 Long Prefix Routes currently configured
3      5000
Number of IPv6 neighbor(ND) entries

```

```

4      49152
Number of L3 Groups for IP Tunnels and ECMP Groups currently configured
1      2047
Number of L3 Destinations for Routes, Nexthops in ECMP groups and
      Tunnels currently configured
4      2045
Number of routes (IPv4+IPv6) currently configured
5      65536
Number of IPv4 routes currently configured
0      65536
Number of IPv6 routes currently configured with prefix 0-64
4      13312
Number of IPv6 routes currently configured with prefix 65-127
2      510

```

switch# **show capacities-status 13**

System Capacities Status: Filter L3 resources

Capacities Status Name

Value Maximum

```

-----
-----

```

```

Number of IP neighbor (IPv4+IPv6) entries
4      49152
Number of IP Directed Broadcast neighbor entries
0      4096
Number of IPv6 Long Prefix Routes currently configured
3      5000
Number of IPv6 neighbor(ND) entries
4      49152
Number of L3 Groups for IP Tunnels and ECMP Groups currently configured
1      2047
Number of L3 Destinations for Routes, Nexthops in ECMP groups and
      Tunnels currently configured
4      2045
Number of routes (IPv4+IPv6) currently configured
5      65536
Number of IPv4 routes currently configured
0      65536
Number of IPv6 routes currently configured with prefix 0-64
4      13312
Number of IPv6 routes currently configured with prefix 65-127
2      510

```

Command History

Release	Modification
10.13	Updated to show newly supported configuration of IPv6 routes on the ASIC.
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

show object-group

Syntax

```
show object-group [{ip|ipv6} address | port] [<OBJECT-GROUP-NAME>]  
[commands] [configuration]
```

Description

Shows information about your defined object groups. When **show object-group** is entered without parameters, information for all object groups is shown. The parameters filter the list of object groups for which information is shown.

Parameter	Description
[{ip ipv6} address port]	Specifies the object group type, either address for an IP address, or port .
<OBJECT-GROUP-NAME>	Specifies the object group name.
[commands]	Specifies that the object group definition is to be shown as the commands and parameters used to create it rather than in tabular form.

Parameter	Description
[configuration]	Specifies that the user - configured object groups be shown as configured. The output of the command with this parameter may not be the same as what is active on the switch due to a misconfigured object group. See Examples in this topic.

Examples

Showing configured object groups:

```
switch# show object-group
Type          Name
Sequence L4 Port(s)/IP Address
-----
---
IPv4          my_address_group
              10 192.168.0.1
              20 192.168.0.3
Port          my_port_group
              10 eq 80
              20 gt 65525
switch#
switch# show object-group commands
object-group ip address my_address_group
    10 192.168.0.1
    20 192.168.0.3
object-group port my_port_group
    10 eq 80
    20 gt 65525
```

Showing a misconfigured object group:

```
switch# show object-group
Type          Name
Sequence L4 Port(s)/IP Address
-----
---
! object-group ip address My_ip_object_group user configuration does not
match
! the active hardware configuration. Run 'object-group ip address NAME
reset'
! to reset the object group to match the active hardware configuration.
IPv4          my_address_group
switch#
switch#
```

```

Type          Name
Sequence L4 Port(s)/IP Address
-----
---
! object-group ip address My_ip_object_group user configuration does not
match
! the active hardware configuration. Run 'object-group ip address NAME
reset'
! to reset the object group to match the active hardware configuration.
IPv4          my_address_group
switch#
switch# show object-group configuration
Type          Name
Sequence L4 Port(s)/IP Address
-----
---
! object-group ip address My_ip_object_group user configuration does not
match
! the active hardware configuration. Run 'object-group ip address NAME
reset'
! to reset the object group to match the active hardware configuration.
IPv4          my_address_group
              10 192.168.0.1
              20 192.168.0.3
switch#
switch# show object-group commands
! object-group ip address My_ip_object_group user configuration does not
match
! the active hardware configuration. Run 'object-group ip address NAME
reset'
! to reset the object group to match the active hardware configuration.
switch#
switch# show object-group commands configuration
! object-group ip address My_ip_object_group user configuration does not
match
! the active hardware configuration. Run 'object-group ip address NAME
reset'
! to reset the object group to match the active hardware configuration.
object-group ip address my_address_group
              10 192.168.0.1
              20 192.168.0.3

```

Resetting a misconfigured object group:

```

switch(config)# object-group all reset
switch(config)# exit
switch# show object-group
Type          Name
Sequence L4 Port(s)/IP Address
-----
---
IPv4          my_address_group
switch#
switch# show object-group configuration
Type          Name
Sequence L4 Port(s)/IP Address
-----
---
IPv4          my_address_group

```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Classifier policies

Classifier policies let a network administrator define sets of rules based on network traffic addressing or other header content, and use these rules to restrict or alter the passage of traffic through the switch. Choosing the rule criteria is called Classification, and one such rule, or list, is called a policy. Classification is achieved by creating a traffic class. The types of classes (IPv4, and IPv6) are each focused on relevant frame/packet characteristics. Classes can be configured to match or ignore almost any frame or packet header field. Network traffic passing through a switch can be classified based on many different frame/packet characteristics including, but not limited to:

- Frame ingress VLAN ID

- Source and/or destination IPv4, or IPv6 address
- Layer 2 (EtherType) and Layer 3 (IP) protocol
- Layer 4 application ports

A policy contains one or more policy entries, which are listed according to priority by sequence number. A single policy entry contains a class and corresponding policy action. Policy action is taken on traffic matched by its corresponding class. A policy can be applied to an individual front plane port, a Link Aggregation Group (LAG) interface, or a VLAN.

**NOTE**

See also [ACL and Policy Hardware Resource Considerations](#).

Subtopics

Traffic policing

Types of policy actions

How policy matching works

Active class configuration versus user-specified configuration


Active policy configuration versus user-specified configuration

Classifier policy application

Classifier policy commands

Traffic policing

Traffic policing supports policing of the inbound traffic. A typical application of traffic policing is to supervise the specification of traffic entering a network and limit it within a reasonable range. Another application is to "discipline" the extra traffic to prevent aggressive use of network resources by an application. For example, you can limit bandwidth for HTTP packets to less than 50% of the total. If the traffic of a session exceeds the limit, traffic policing can drop the packets or reset the IP precedence of the packets. In the following illustrated example, outbound traffic is policed:

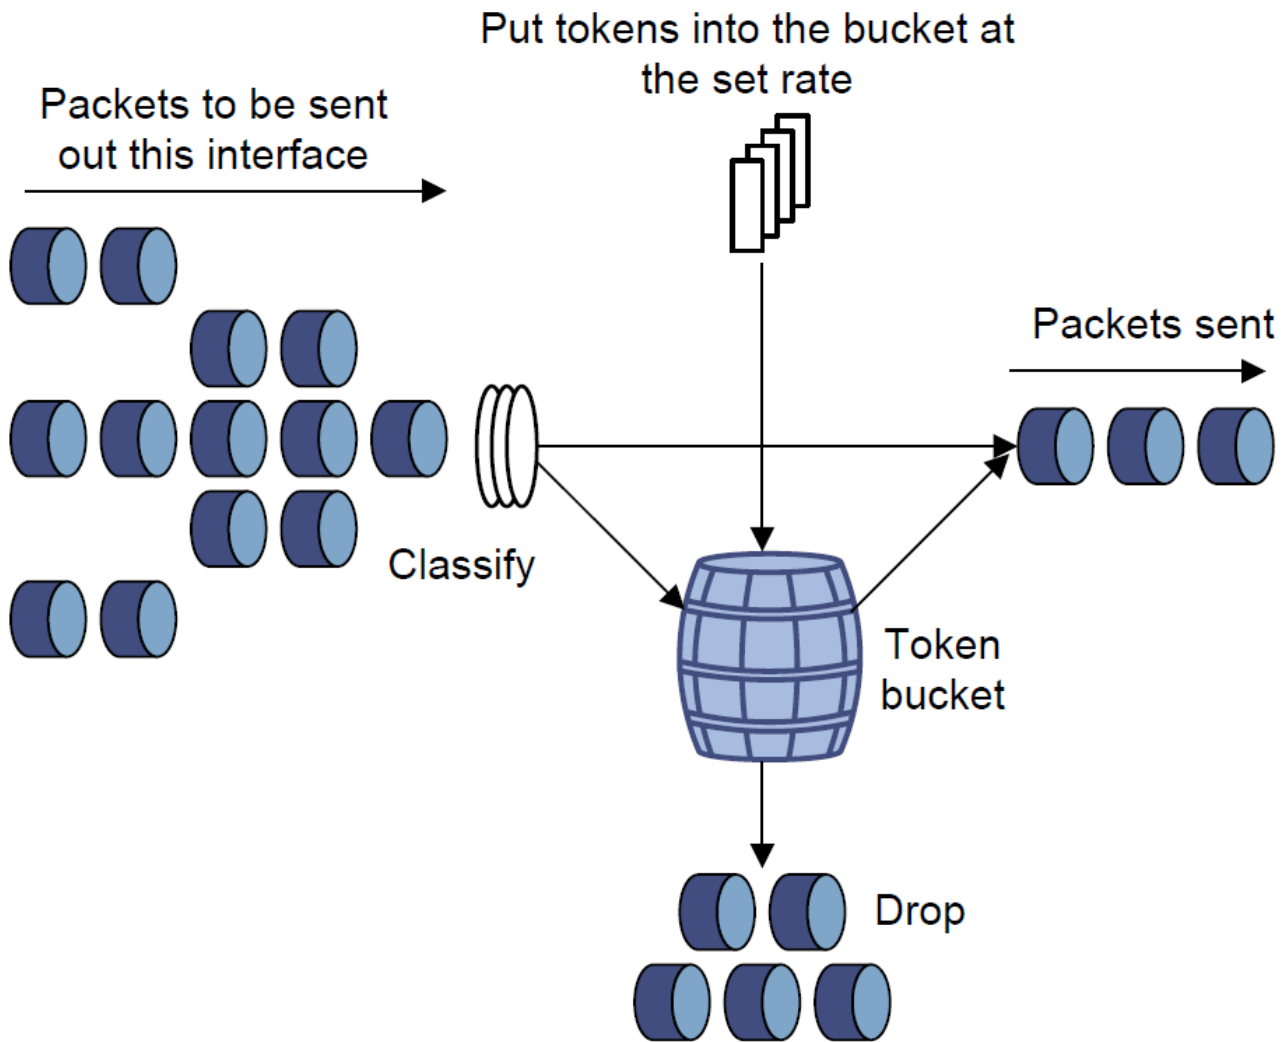

Traffic policing is widely used in policing traffic entering the ISP networks. It can classify the policed traffic and take predefined policing actions on each packet depending on the evaluation result:

- Forwarding the packet if the evaluation result is "conforming."
- Dropping the packet if the evaluation result is "excess."
- Forwarding the packet with its precedence remarked when the evaluation result is "conforming."

Types of policy actions

The policy actions are broadly classified in the following categories:

- Remark actions
- Police actions
- Other actions

Each policy entry can have a combination of policy actions from these multiple categories, which are executed in the order of configuration.

Remark actions

This category contains the following actions:

- **Priority Code Point (PCP):** 3-bit field in layer 2 802.1Q header refers to a class of service and maps to a frame priority level.
- **IP precedence:** 3-bit field in IP header which denotes the importance or priority of the datagram.
- **IP Differentiated Services Code Point (DSCP):** 6-bit field in IP header for packet classification.
- **Local Priority:** Change the internal priority used to queue the packets for transmission. Local priority can be used to rewrite the priority of traffic classes local to the system based on the QoS mapping settings without changing the IP header or the 802.1Q header. Remark actions other than local priority only change packets as they leave the switch. The local priority action can be combined with the other remark actions to remark packets and change the internal priority to reflect the new priority.

Police actions

Traffic policing meters inbound traffic on an interface or VLAN based on the following traffic parameters:

- Committed information rate (CIR): Bandwidth limit for guaranteed traffic.
- Committed burst size (CBS): Maximum packet size permitted for bursts of data that exceed the CIR.

Based on these parameters, packets are dropped when traffic exceeds the bandwidth limit (CIR) and the burst size for guaranteed traffic (CBS).

Other actions

Other actions include Drop: Drop the packet, and Mirror: Mirror the packets to a specified mirroring session. For details, see the Monitoring Guide .

How policy matching works

A policy can be applied to an interface or VLAN to affect/control traffic arriving on that interface or VLAN (inbound (ingress)). A single policy entry matches on one or more characteristics of the particular traffic type and has a configured action to continue through the switch. This matching occurs by beginning with the entry with the lowest sequence number. The entry is then compared against the incoming frame to its particular match characteristics. If there is a match, the action is taken.

If there is no match, the match characteristics of the next sequence are compared to the relevant frame/packet details. If there is a match, the specified actions are taken. This process continues until a match is found; otherwise, the packet is permitted to flow through the switch unaltered. The "implicit permit" behavior of policy matching differs from the "implicit deny" behavior of ACL matching.

Active class configuration versus user-specified configuration

Syntax

The output of the `show class` command displays the active class configurations. Active class configurations are the classes that have been configured and accepted by the system.

The output of the `show class` command with the `configuration` parameter, displays the classes that have been configured by the user.

Discrepancies might occur between the active class configurations and the user-specified configurations. In the user-specified class configurations, unsupported command parameters may have been configured, or class can be modified after policy application and may have been unsuccessful due to lack of hardware resources.

To determine if a discrepancy exists between what was configured and what is active, run any variant of the `show class` command. If the active classes and configured classes are not the same, a warning message is displayed.

```
! class MY_CLASS user configuration does not match active configuration.
! run 'class TYPE NAME reset' to reset class to match active configuration.
```

If the configured class is processing and you entered the `show class` command with parameters, the following in-progress message is displayed:

```
! class ip MY_CLASS user configuration currently being processed
! run 'class TYPE NAME reset' to reset class to match active configuration.
```

If the configured class is processing and you entered the `show class` command without parameters, the following in-progress message is displayed:

```
% Warning: MY_CLASS user configuration currently being processed
% run 'class TYPE NAME reset' to reset class to match active configuration.
```

If the warning message or in-progress message is displayed, additional changes may be made until the error message is no longer displayed. Or you can use the `class {all|ip <class-name>|ipv6 <class-name>|mac <class-name>} reset` command to change the user-specified configuration to match the active configuration.



NOTE

The `show running-config` command also shows a warning about classes that are in progress or failed.

Example

Resetting the user-specified class configuration to the active configuration:

```
switch(config)# class all reset
```

Active policy configuration versus user-specified configuration

Syntax

The output of the `show policy` command displays the active policy configurations. Active policy configurations are the policies that have been configured and accepted by the system. With applied policies, the active configuration displays the interfaces on which the policies have successfully been programmed in hardware.

The output of the `show policy` command with the `configuration` parameter, displays the policies that have been configured by the user.

Discrepancies might exist between the active policy configurations and the user-specified configurations. In the user-specified policy configurations, unsupported command parameters might have been configured, or an application of a policy might have been unsuccessful because of a lack of hardware resources.

To determine if a discrepancy exists between the configuration and what is active, run any variant of the `show policy` command. If the active policies and configured policies are not the same, a warning message is displayed in the output of the `show` command.

```
! policy MY_POLICY user configuration does not match active configuration.  
! run 'policy NAME reset' to reset policy to match active configuration.
```

The switch displays an `in progress` message while it processes the configured policy:

```
! policy MY_POLICY user configuration currently being processed  
! run 'policy NAME reset' to reset policy to match active configuration.
```

If the warning message or in progress message is displayed, additional changes may be made until the error message is no longer displayed. Or you can use the `policy <policy-name> reset` command to change the user-specified configuration to match the active configuration.

Example

Resetting `MY_POLICY`:

```
switch(config)# policy MY_POLICY reset
```

Subtopics

Considerations for when a policy is applied per interface

Considerations for when a policy is applied per interface



NOTE

This section is only applicable to policies applied to physical interfaces and LAGs using the `per-interface` parameter.

The `reset` command (mentioned in the previous section) is not useful if one or more unique instances of a policy created using the `per-interface` parameter fail to update in hardware even though the parent policy does update. If this occurs, you can make additional changes to the policy and its applications to correct the discrepancy until the error messages are no longer displayed. Alternatively consider using command `checkpoint-rollback` as described in the AOS-CX Fundamentals Guide.

Policies using the `per-interface` parameter have slightly different warning and in-progress messages due to unique instances of the policy being created and applied to individual physical interfaces and LAGs.

For example, this is how the warning messages will appear if the unique instances of the policy for interfaces 1/1/2-1/1/3 fail to update while the unique instances of the policy for interfaces 1/1/1,1/1/4 successfully update.

```
switch(config)# show policy commands
! policy my_policy user configuration does not match active configuration
on interface 1/1/2 for ingress.
! policy my_policy user configuration does not match active configuration
on interface 1/1/3 for ingress.
policy my_policy
  10 class ip my_ip_class action drop
interface 1/1/1
  apply policy my_policy in per-interface
! policy my_policy user configuration does not match active configuration.
interface 1/1/2
  apply policy my_policy in per-interface
! policy my_policy user configuration does not match active configuration.
interface 1/1/3
  apply policy my_policy in per-interface
interface 1/1/4
  apply policy my_policy in per-interface
switch(config)# show policy
      Name
Sequence Comment
      Class Type
              action
-----
---
% Warning: my_policy user configuration does not match active configuration
```

```

on interface 1/1/2 for ingress.
% Warning: my_policy user configuration does not match active configuration
on interface 1/1/3 for ingress.
    my_policy
    10
    my_ip_class ipv4
        drop

```

This is how the in-progress messages will appear if the child policies for interfaces 1/1/2-1/1/3 are currently updating while the child policies for interfaces 1/1/1,1/1/4 have successfully updated.

```

switch(config)# show policy commands
! policy my_policy user configuration currently being processed on
interface 1/1/2 for ingress.
! policy my_policy user configuration currently being processed on
interface 1/1/3 for ingress.
! run 'show policy [commands]' to display active policy configuration.
policy my_policy
    10 class ip my_ip_class action drop
interface 1/1/1
    apply policy my_policy in per-interface
! policy my_policy user configuration currently being processed
! run 'show policy [commands]' to display active policy configuration.
interface 1/1/2
    apply policy my_policy in per-interface
! policy my_policy user configuration currently being processed
! run 'show policy [commands]' to display active policy configuration.
interface 1/1/3
    apply policy my_policy in per-interface
interface 1/1/4
    apply policy my_policy in per-interface
switch(config)# show policy
      Name
Sequence Comment
      Class Type
              action
-----
---
% Warning: my_policy user configuration currently being processed on
interface 1/1/2 for ingress.
% Warning: my_policy user configuration currently being processed on
interface 1/1/3 for ingress.
%      run 'show policy [commands]' to display active policy
configuration.

```

```

    my_policy
10
    my_ip_class ipv4
        drop

```

This is how the warning messages will appear if the child policies for interfaces 1/1/2-1/1/3 failed to apply or replace while the child policies for interfaces 1/1/1,1/1/4 have successfully applied or replaced.

```

switch(config)# show policy commands
policy my_policy
    10 class ip my_ip_class action drop
interface 1/1/1
    apply policy my_policy in per-interface
! policy my_policy user configuration does not match active configuration.
! run 'policy NAME reset' to reset policy to match active configuration.
interface 1/1/2
    apply policy my_policy in per-interface
! policy my_policy user configuration does not match active configuration.
! run 'policy NAME reset' to reset policy to match active configuration.
interface 1/1/3
    apply policy my_policy in per-interface
interface 1/1/4
    apply policy my_policy in per-interface
switch(config)# show policy
      Name
Sequence Comment
      Class Type
              action
-----
---
      my_policy
10
      my_ip_class ipv4
          drop

```

Classifier policy application

Policy type Direction	IPv4+6 In	IPv4+6 Rt - In	IPv4+6 Out	MAC In	MAC Out
L2 interface (port)	Yes		Yes	Yes	Yes

Policy type Direction	IPv4+6 In	IPv4+6 Rt - In	IPv4+6 Out	MAC In	MAC Out
L2 LAG	Yes		Yes	Yes	Yes
L3 interface (port)	Yes	Yes	Yes	Yes	Yes
L3 LAG	Yes	Yes	Yes	Yes	Yes
L3 interface (port) subinterface	Yes		Yes		
L3 LAG subinterface	Yes		Yes		
VLAN	Yes		Yes	Yes	Yes
Interface VLAN		Yes (PBR)			



NOTE

The following match criteria is not supported. If this match criteria is attempted to be configured, an error message will be displayed and the action will not be completed.

PCP on MAC classes

Classifier policies can be applied as follows:

Policy type Direction	IPv4+6 In	IPv4+6 Rt - In	IPv4+6 Out	MAC In	MAC Out
L2 interface (port)	Yes		Yes	Yes	Yes
L2 LAG	Yes		Yes	Yes	Yes
L3 interface (port)	Yes	Yes	Yes	Yes	Yes
L3 LAG	Yes	Yes	Yes	Yes	Yes
VLAN	Yes		Yes	Yes	Yes

Policy type Direction	IPv4+6 In	IPv4+6 Rt - In	IPv4+6 Out	MAC In	MAC Out
Interface VLAN		Yes (PBR)			



NOTE

The following match criteria is not supported. If this match criteria is attempted to be configured, an error message will be displayed and the action will not be completed.

PCP on MAC classes

Policy type Direction	IPv4 In	IPv6 In
L2 interface (port)	Yes	Yes
L2 LAG	Yes	Yes
VLAN	Yes	Yes



NOTE

Port policies and port-access client policies cannot be configured at the same time.

Policy type Direction	IPv4 In	IPv6 In	MAC in
L2 interface (port)	Yes	Yes	Yes
L2 LAG	Yes	Yes	Yes
VLAN	Yes	Yes	Yes



NOTE

Port policies and port-access client policies cannot be configured at the same time.

Policy type Direction	IPv4+6 In	IPv4+6 Rt - In	MAC In
L2 interface (port)	Yes		Yes
L2 LAG	Yes		Yes
L3 interface (port)	Yes	Yes	Yes
L3 LAG	Yes	Yes	Yes
L3 interface (port) subin terface	Yes	Yes	Yes
L3 LAG subinterface	Yes	Yes	Yes
VLAN	Yes		Yes
Interface VLAN		Yes (PBR)	



NOTE

Policies cannot match multicast packets on the routed in direction.

The following match criteria are not supported. If any of these match criteria are attempted to be configured, an error message will be displayed and the action will not be completed.

HPE Aruba Networking 8320, 8325, 9300/9300S, 10000, 10040 Switch Series:

TCP flags CWR and ECE

TCP flags and TTL (hop limit) on IP classes

Fragment on IPv6 classes in VLAN policies

VLAN ID in VLAN policies

HPE Aruba Networking 8320 Switch Series only:

IPv4 AH on inbound classes

Policy type Direction	IPv4+6 In	IPv4+6 Rt - In	MAC In
L2 interface (port)	Yes		Yes
L2 LAG	Yes		Yes
L3 interface (port)	Yes	Yes	Yes
L3 LAG	Yes	Yes	Yes

Policy type Direction	IPv4+6 In	IPv4+6 Rt - In	MAC In
VLAN	Yes		Yes
Interface VLAN		Yes (PBR)	



NOTE

The following match criteria are not supported. If any of these match criteria are attempted to be configured, an error message will be displayed and the action will not be completed.

- TCP flags CWR and ECE
- TCP flags and TTL (hop limit) on IP classes
- Fragment on IPv6 classes in VLAN policies
- VLAN ID in VLAN policies

Classifier policy commands

Select a command from the list in the left navigation menu.

Subtopics

Classifier policy application

apply policy (config-if, config-lag-if, config-if-vlan, config-vlan)

class copy

class ip

class ipv6

class mac

class resequence

class reset

clear policy hitcounts

policy

policy copy

policy resequence

policy reset

show class

show policy

Classifier policy application

Policy type Direction	IPv4+6 In	IPv4+6 Rt - In	IPv4+6 Out	MAC In	MAC Out
L2 interface (port)	Yes		Yes	Yes	Yes
L2 LAG	Yes		Yes	Yes	Yes
L3 interface (port)	Yes	Yes	Yes	Yes	Yes
L3 LAG	Yes	Yes	Yes	Yes	Yes
L3 interface (port) subinterface	Yes		Yes		
L3 LAG subinterface	Yes		Yes		
VLAN	Yes		Yes	Yes	Yes
Interface VLAN		Yes (PBR)			



NOTE

The following match criteria is not supported. If this match criteria is attempted to be configured, an error message will be displayed and the action will not be completed.

PCP on MAC classes

Classifier policies can be applied as follows:

Policy type Direction	IPv4+6 In	IPv4+6 Rt - In	IPv4+6 Out	MAC In	MAC Out
L2 interface (port)	Yes		Yes	Yes	Yes
L2 LAG	Yes		Yes	Yes	Yes

Policy type Direction	IPv4+6 In	IPv4+6 Rt - In	IPv4+6 Out	MAC In	MAC Out
L3 interface (port)	Yes	Yes	Yes	Yes	Yes
L3 LAG	Yes	Yes	Yes	Yes	Yes
VLAN	Yes		Yes	Yes	Yes
Interface VLAN		Yes (PBR)			



NOTE

The following match criteria is not supported. If this match criteria is attempted to be configured, an error message will be displayed and the action will not be completed.

PCP on MAC classes

Policy type Direction	IPv4 In	IPv6 In
L2 interface (port)	Yes	Yes
L2 LAG	Yes	Yes
VLAN	Yes	Yes



NOTE

Port policies and port-access client policies cannot be configured at the same time.

Policy type Direction	IPv4 In	IPv6 In	MAC in
L2 interface (port)	Yes	Yes	Yes
L2 LAG	Yes	Yes	Yes

Policy type Direction	IPv4 In	IPv6 In	MAC in
VLAN	Yes	Yes	Yes



NOTE

Port policies and port-access client policies cannot be configured at the same time.

Policy type Direction	IPv4+6 In	IPv4+6 Rt - In	MAC In
L2 interface (port)	Yes		Yes
L2 LAG	Yes		Yes
L3 interface (port)	Yes	Yes	Yes
L3 LAG	Yes	Yes	Yes
L3 interface (port) subin terface	Yes	Yes	Yes
L3 LAG subinterface	Yes	Yes	Yes
VLAN	Yes		Yes
Interface VLAN		Yes (PBR)	



NOTE

Policies cannot match multicast packets on the routed in direction.

The following match criteria are not supported. If any of these match criteria are attempted to be configured, an error message will be displayed and the action will not be completed.

HPE Aruba Networking 8320, 8325, 9300/9300S, 10000, 10040 Switch Series:

TCP flags CWR and ECE

TCP flags and TTL (hop limit) on IP classes

Fragment on IPv6 classes in VLAN policies

VLAN ID in VLAN policies

HPE Aruba Networking 8320 Switch Series only:

IPv4 AH on inbound classes

Policy type Direction	IPv4+6 In	IPv4+6 Rt - In	MAC In
L2 interface (port)	Yes		Yes
L2 LAG	Yes		Yes
L3 interface (port)	Yes	Yes	Yes
L3 LAG	Yes	Yes	Yes
VLAN	Yes		Yes
Interface VLAN		Yes (PBR)	



NOTE

The following match criteria are not supported. If any of these match criteria are attempted to be configured, an error message will be displayed and the action will not be completed.

TCP flags CWR and ECE

TCP flags and TTL (hop limit) on IP classes

Fragment on IPv6 classes in VLAN policies

VLAN ID in VLAN policies

apply policy (config-if, config-lag-if, config-if-vlan, config-vlan)

Syntax

Context config-if, config-lag-if:

```
apply policy <POLICY-NAME> {in|out|routed-in} [per-interface]
no apply policy <POLICY-NAME> {in|out|routed-in} [per-interface]
```

Context config-vlan:

```
apply policy <POLICY-NAME> {in|out}
no apply policy <POLICY-NAME> {in|out}
```

Context config-if-vlan:

```
apply policy <POLICY-NAME> routed-in
no apply policy <POLICY-NAME> routed-in
```

Description

Applies a policy to the current physical interface port or LAG or VLAN context.

Only one direction of a policy can be applied to an interface or VLAN at a time, thus using the apply command on an interface or VLAN with an already-applied policy of the same direction will replace the currently applied policy.



NOTE

The VLAN context supports the **in** and **out** directions, which apply to both bridged and routed traffic. The Interface VLAN context only supports the **routed-in** direction which applies only to routed traffic.

The **no** form of this command removes a policy from the interface or VLAN specified by the current context.

Parameter	Description
<code><POLICY-NAME></code>	Specifies the policy to apply.
<code>in</code>	Selects the inbound (ingress) traffic direction.
<code>out</code>	Selects the outbound (egress) traffic direction.
<code>routed-in</code>	Selects routed in traffic.
<code>per-interface</code>	Specifies that unique instances of the policy be applied to each interface or LAG rather than the default of sharing the policy across all interfaces and LAGs.

Usage (applies to config-if, config-lag-if contexts)

- When **per-interface** is included, unique instances of the policy are applied to each physical interface port or LAG rather than the default of sharing the policy across all interfaces and LAGs. The unique instance of a policy has a parent-child relationship with the policy from which it was created. The **per-interface** option is useful when you want unique policers to be created for each interface or LAG rather than using shared policers. It is also useful when you want the statistics (hit counts and conform rate) to be specific to an interface or LAG rather than being aggregated. Because **per-interface** creates more hardware instances of a policy, resource consumption may increase significantly. It is recommended that you use **show resources** to monitor resource utilization as configuration is applied.

Usage (applies to config-vlan context)

- Only one policy type may be applied to a VLAN at a time. Therefore, using the **apply policy** command on a VLAN with an already-applied policy of the same type, will replace the applied policy.

Examples On the HPE Aruba Networking 6400 Switch Series, interface identification differs. Applying a policy to an interface (ingress):

```
switch(config) # interface 1/1/1
switch(config-if) # apply policy MY_POLICY1 in
```

Applying a policy to an interface (ingress) specifying **per-interface**:

```
switch(config) # interface 1/1/2
switch(config-if) # apply policy MY_POLICY1 in per-interface
```

Applying a policy to an interface (egress):

```
switch(config) # interface 1/1/2
switch(config-if) # apply policy MY_POLICY2 out
```

Applying a policy to an interface (egress) specifying **per-interface**:

```
switch(config) # interface 1/1/2
switch(config-if) # apply policy MY_POLICY2 out per-interface
```

Applying a policy to an interface range (ingress):

```
switch(config) # interface 1/1/3-1/1/6
switch(config-if-<1/1/2-1/1/5>) # apply policy MY_POLICY3 in
```

Applying a policy to an interface range (ingress) specifying **per-interface**:

```
switch(config) # interface 1/1/7-1/1/9
switch(config-if-<1/1/2-1/1/5>) # apply policy MY_POLICY4 in per-interface
```

Removing a policy from an interface (ingress):

```
switch(config) # interface 1/1/1
switch(config-if) # no apply policy MY_POLICY1 in
```

Removing a policy from an interface range (ingress):

```
switch(config) # interface 1/1/3-1/1/6
switch(config-if-<1/1/3-1/1/6>) # no apply policy MY_POLICY3 in
```

Applying a policy to a subinterface (ingress): Applying a policy to a subinterface (egress): Applying a policy to a LAG (ingress):

```
switch(config) # interface lag 100
switch(config-lag-if) # apply policy MY_POLICY5 in
```

Applying a policy to a LAG (ingress) specifying **per-interface**:

```
switch(config) # interface lag 200
```



```
switch(config-lag-if)# apply policy MY_POLICY5 in per-interface
```

Removing a policy from a LAG (ingress):

```
switch(config)# interface lag 100  
switch(config-lag-if)# no apply policy MY_POLICY5 in
```

Applying a policy to a LAG subinterface (ingress): Applying a policy to a LAG subinterface (egress): Applying a policy to a VLAN (ingress):

```
switch(config)# vlan 1  
switch(config-vlan)# apply policy MY_POLICY6 in
```

Applying a policy to a VLAN (egress):

```
switch(config)# vlan 1  
switch(config-vlan)# no apply policy my_policy out
```

Applying a policy to multiple VLANs (ingress):

```
switch(config)# vlan 10,20  
switch(config-vlan-<10,20>)# apply policy MY_POLICY7 in
```

Applying a policy to an interface VLAN routed (ingress):

```
switch(config)# vlan 1  
switch(config-if-vlan)# apply policy MY_POLICY8 routed-in
```

Applying a policy to an interface VLAN range routed (ingress):

```
switch(config)# vlan 2-5  
switch(config-if-vlan-<2-5>)# apply policy MY_POLICY8 routed-in
```

Removing a policy from a VLAN (ingress):

```
switch(config)# vlan 1  
switch(config-vlan)# no apply policy MY_POLICY6 in
```

Removing a policy from multiple VLANs (ingress):

```
switch(config)# vlan 10,20  
switch(config-vlan-<10,20>)# no apply policy MY_POLICY7 in
```

Removing a policy from an interface VLAN routed (ingress):

```
switch(config)# vlan 1  
switch(config-if-vlan)# no apply policy MY_POLICY8 routed-in
```

Removing a policy from an interface VLAN range routed (ingress):

```
switch(config)# vlan 2-5  
switch(config-if-vlan-<2-5>)# no apply policy MY_POLICY8 routed-in
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	config-if config-lag-if config-vlan config-if-vlan	Administrators or local user group members with execution rights for this command.

class copy

Syntax

```
class {ip|ipv6|mac} <CLASS-NAME> copy <DESTINATION-CLASS>
```

Description

Copies a class to a new destination class or overwrites an existing class. Copying a class copies all entries as well.

Parameter	Description
<pre>{ip ipv6 mac } <CLASS-NAME></pre>	Specifies the type and name of the class to be copied.

Parameter

Description

<DESTINATION-CLASS>

Specifies the name of the destination class.

Examples

Copying an IPv4 class. Copying a class with entries copies all its entries as well:

```
switch(config)# class ip MY_IP_CLASS copy MY_IP_CLASS2
switch(config)# do show class
Type          Name
Sequence      Comment
              Action          L3 Protocol
              Source IP Address Source L4 Port(s)
              Destination IP Address or FQDN Destination L4 Port(s)
              Additional Parameters
-----
---
IPv4          MY_IP_CLASS
11  ignore                    udp
    any
    any
21  match                      tcp
    192.168.0.1
    192.168.0.2
-----
---
IPv4          MY_IP_CLASS2
11  ignore                    udp
    any
    any
21  match                      tcp
    192.168.0.1
    192.168.0.2
```

Copying an IPv6 class:

```
switch(config)# class ipv6 MY_IPV6_CLASS copy MY_IPV6_CLASS2
switch(config)# do show class
Type          Name
Sequence      Comment
              Action          L3 Protocol
              Source IP Address Source L4 Port(s)
```

	Destination IP Address or FQDN	Destination L4 Port(s)	Additional Parameters

IPv6	MY_IPV6_CLASS		
	2 ignore	udp	
	any		
	any		

IPv6	MY_IPV6_CLASS2		
	2 ignore	udp	
	any		
	any		

Copying a MAC class:

switch(config)# class mac MY_MAC_CLASS copy MY_MAC_CLASS2			
switch(config)# do show class			
Type	Name		
Sequence	Comment		
	Action	EtherType	
	Source MAC Address		
	Destination MAC Address		
	Additional Parameters		

MAC	MY_MAC_CLASS		
	2 ignore	arp	
	any		
	any		

MAC	MY_MAC_CLASS2		
	2 ignore	arp	
	any		
	any		

Command History

Release	Modification
10.17.1000	Added support for FQDN.
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

class ip

Syntax

Syntax to create an IPv4 class and enter its context. Plus syntax to remove a class:

```
class ip <CLASS-NAME>
no class ip <CLASS-NAME>
```

Syntax (within the class context) for creating or removing class entries for protocols **ah**, **eigrp**, **esp**, **gre**, **igmp**, **l2tp**, **ospf**, **pim**, **vrrp** (**ip** is available as an alias for **any**):

```
[<SEQUENCE-NUMBER>]
{match|ignore}
{any|ah|eigrp|esp|gre|igmp|ip|l2tp|ospf|pim|vrrp|<IP-PROTOCOL-NUM>}
{any|<SRC-IP-ADDRESS>[/<PREFIX-LENGTH>|<SUBNET-MASK>]]}
{any|<DST-IP-ADDRESS>[/<PREFIX-LENGTH>|<SUBNET-MASK>]]|fqdn <fqdn>}
[dscp <DSCP-SPECIFIER>] [ecn <ECN-VALUE>] [ip-precedence <IP-PRECEDENCE-VALUE>]
[tos <TOS-VALUE>] [fragment] [vlan <VLAN-ID>] [ttl <TTL-VALUE>] [count]
no <SEQUENCE-NUMBER>
```

Syntax (within the class context) for creating or removing class entries for protocols **sctp**, **tcp**, **udp**:

```
[<SEQUENCE-NUMBER>]
{match|ignore}
{sctp|tcp|udp}
{any|<SRC-IP-ADDRESS>[/<PREFIX-LENGTH>|<SUBNET-MASK>]]}
[{eq|gt|lt} <PORT>|range <MIN-PORT> <MAX-PORT>]
{any|<DST-IP-ADDRESS>[/<PREFIX-LENGTH>|<SUBNET-MASK>]]|fqdn <fqdn>}
[{eq|gt|lt} <PORT>|range <MIN-PORT> <MAX-PORT>]
[cwr] [ece] [urg] [ack] [psh] [rst] [syn] [fin] [established]
[dscp <DSCP-SPECIFIER>] [ecn <ECN-VALUE>] [ip-precedence <IP-PRECEDENCE-VALUE>]
```

```

VALUE>]
[tos <TOS-VALUE>] [fragment] [vlan <VLAN-ID>] [ttl <TTL-VALUE>] [count]
no <SEQUENCE-NUMBER>

```

Syntax (within the class context) for creating or removing class entries for protocol **icmp**:

```

[<SEQUENCE-NUMBER>]
{match|ignore}
{icmp}
{any|<SRC-IP-ADDRESS>[/<PREFIX-LENGTH>|<SUBNET-MASK>]]}
{any|<DST-IP-ADDRESS>[/<PREFIX-LENGTH>|<SUBNET-MASK>]]|fqdn <fqdn>}
[icmp-type {echo|echo-reply|<ICMP-TYPE-VALUE>}] [icmp-code <ICMP-CODE-VALUE>]
[dscp <DSCP-SPECIFIER>] [ecn <ECN-VALUE>] [ip-precedence <IP-PRECEDENCE-VALUE>]
[tos <TOS-VALUE>] [fragment] [vlan <VLAN-ID>] [ttl <TTL-VALUE>] [count]
no <SEQUENCE-NUMBER>

```

Syntax (within the class context) for class entry comments:

```

[<SEQUENCE-NUMBER>] comment <TEXT-STRING>
no <SEQUENCE-NUMBER> comment

```

Description

Creates or modifies an IPv4 traffic class to match specified packets. Class is composed of one or more class entries ordered and prioritized by sequence numbers. With this command, the class can classify traffic based on IPv4 header information.

The **no** form of the command can be used to delete either an IPv4 traffic class (use **no** with the class command) or an individual IPv4 traffic class entry (use **no** with the sequence number).

Parameter	Description
ip	Specifies create or modify an IPv4 class.
<CLASS-NAME>	Specifies the name of this class.
<SEQUENCE-NUMBER>	Specifies a sequence number for the class entry. Optional. Range: 1 - 4294967295.
{match ignore}	Creates a rule to match or ignore specified packets.
<IP-PROTOCOL-NUM>	Specifies the protocol as its Internet Protocol number. For example, 2 corresponds to the IGMP protocol. Range: 0 to 255.

Parameter	Description
<pre>{any <SRC-IP-ADDRESS> [/ {<PREFIX-LENGTH> <SUBNET- MASK>}] }</pre>	Specifies the source IPv4 address. • any - specifies any source IPv4 address. • <SRC - IP - ADDRESS> - specifies the source IPv4 host address. ◦ <PREFIX - LENGTH> - specifies the address bits to mask (CIDR subnet mask notation). Range: 1 to 32. ◦ <SUBNET - MASK> - specifies the address bits to mask (dotted decimal notation).
<pre>{any <DST-IP-ADDRESS> [/ {<PREFIX-LENGTH> <SUBNET- MASK>}] }</pre>	Specifies the destination IPv4 address, network address, fqdn or any. • any - specifies any destination IPv4 address. • <DST - IP - ADDRESS> - specifies the destination IPv4 host address. ◦ <PREFIX - LENGTH> - specifies the address bits to mask (CIDR subnet mask notation). Range: 1 to 32. ◦ <SUBNET - MASK> - specifies the address bits to mask (dotted decimal notation).
<pre>[{eq gt lt} <PORT> range <MIN-PORT> <MAX-PORT>]</pre>	Specifies the port or port range. Port numbers are in the range of 0 to 65535. • eq <PORT> - specifies the Layer 4 port. • gt <PORT> - specifies any Layer 4 port greater than the indicated port. • lt <PORT> - specifies any Layer 4 port less than the indicated port. • range <MIN - PORT> <MAX - PORT> - specifies the Layer 4 port range.
cwr	Specifies matching on the TCP Flag CWR : Congestion Window Reduced
ece	Specifies matching on the TCP Flag ECE : Explicit Congestion Notification [ECN] - Echo
urg	Specifies matching on the TCP Flag: Urgent.
ack	Specifies matching on the TCP Flag: Acknowledgment.
psh	Specifies matching on the TCP Flag: Push buffered data to receiving application.

Parameter	Description
<code>rst</code>	Specifies matching on the TCP Flag: Reset the connection.
<code>syn</code>	Specifies matching on the TCP Flag: Synchronize sequence numbers.
<code>fin</code>	Specifies matching on the TCP Flag: Finish connection.
<code>established</code>	Specifies matching on the TCP Flag: Established connection.
<code>dscp <DSCP-SPECIFIER></code>	Specifies the Differentiated Services Code Point (DSCP), either a numeric <code><DSCP-VALUE></code> (0 to 63) or one of these keywords: • AF11 - DSCP 10 (Assured Forwarding Class 1, low drop probability) • AF12 - DSCP 12 (Assured Forwarding Class 1, medium drop probability) • AF13 - DSCP 14 (Assured Forwarding Class 1, high drop probability) • AF21 - DSCP 18 (Assured Forwarding Class 2, low drop probability) • AF22 - DSCP 20 (Assured Forwarding Class 2, medium drop probability) • AF23 - DSCP 22 (Assured Forwarding Class 2, high drop probability) • AF31 - DSCP 26 (Assured Forwarding Class 3, low drop probability) • AF32 - DSCP 28 (Assured Forwarding Class 3, medium drop probability) • AF33 - DSCP 30 (Assured Forwarding Class 3, high drop probability) • AF41 - DSCP 34 (Assured Forwarding Class 4, low drop probability) • AF42 - DSCP 36 (Assured Forwarding Class 4, medium drop probability) • AF43 - DSCP 38 (Assured Forwarding Class 4, high drop probability) • CS0 - DSCP 0 (Class Selector 0: Default) • CS1 - DSCP 8 (Class Selector 1: Scavenger) • CS2 - DSCP 16 (Class Selector 2: OAM) • CS3 - DSCP 24 (Class Selector 3: Signaling) • CS4 - DSCP 32 (Class Selector 4: Real time)

Parameter	Description
	• CS5 - DSCP 40 (Class Selector 5: Broadcast video) • CS6 - DSCP 48 (Class Selector 6: Network control) • CS7 - DSCP 56 (Class Selector 7) • EF - DSCP 46 (Expedited Forwarding)
ecn <ECN-VALUE>	Specifies an Explicit Congestion Notification value. Range: 0 to 3.
ip-precedence <IP-PRECEDENCE-VALUE>	Specifies an IP precedence value. Range: 0 to 7.
tos <TOS-VALUE>	Specifies the Type of Service value. Range: 0 to 31.
fragment	Specifies a fragment packet.
vlan <VLAN-ID>	Specifies VLAN tag to match on. 802.1Q VLAN ID.
	 NOTE This parameter cannot be used in any class that will be applied to a VLAN.
ttl <TTL-VALUE>	Specifies a time - to - live (hop limit) value. Range: 0 to 255.
count	Keeps the hit counts of the number of packets matching this class entry.
[<SEQUENCE-NUMBER> comment <TEXT-STRING>	Adds a comment to a class entry. The no form removes only the comment from the class entry.

Usage

- Entering an existing **<CLASS-NAME>** value will cause the existing class to be modified, with any new **<SEQUENCE-NUMBER>** value creating an additional class entry, and any existing **<SEQUENCE-NUMBER>** value replacing the existing class entry with the same sequence number.
- If no sequence number is specified, a new class entry will be appended to the end of the class with a sequence number equal to the highest class entry currently in the list plus 10.
- If the **<IP-PROTOCOL-NUM>** parameter is used instead of a protocol name, ensure that any needed class entry-definition parameters specific to the selected protocol are also provided.

Examples

Creating an IPv4 class with invalid fqdn:

```
switch(config)# class ip my_ip_class
switch(config-class-ip)# match any any fqdn-group abc
Invalid destination FQDN address.
```

Creating an IPv4 class with three entries:

```
switch(config)# class ip my_ip_class
switch(config-class-ip)# 1 match icmp any any
switch(config-class-ip)# 2 ignore udp any any
switch(config-class-ip)# 3 match tcp 192.168.0.1 192.168.0.2
switch(config-class-ip)# exit
switch(config)# show class ip my_ip_class
```

Type	Name	Sequence	Comment	Action	L3 Protocol	Source IP Address	Source L4 Port(s)	Destination IP Address or FQDN	Destination L4 Port(s)	Additional Parameters

IPv4	my_ip_class	1	match		icmp	any				
			any							
		2	ignore		udp	any				
			any							
		3	match		tcp	192.168.0.1		192.168.0.2		

Adding a comment to an existing IPv4 class entry:

```
switch(config)# class ip my_ip_class
switch(config-class-ip)# 3 comment myipClass
switch(config-class-ip)# exit
switch(config)# show class ip my_ip_class
```

Type	Name	Sequence	Comment	Action	L3 Protocol	Source IP Address	Source L4 Port(s)	Destination IP Address or FQDN	Destination L4 Port(s)	Additional Parameters

```

---
IPv4      my_ip_class
1 match                                     icmp
   any
   any
2 ignore                                     udp
   any
   any
3 myipClass
  match                                     tcp
  192.168.0.1
  192.168.0.2

```

Removing a comment from an existing IPv4 class entry:

```

switch(config)# class ip my_ip_class
switch(config-class-ip)# no 3 comment
switch(config-class-ip)# exit
switch(config)# show class ip my_ip_class

```

Type	Name		
Sequence	Comment	Action	L3 Protocol
		Source IP Address	Source L4 Port(s)
		Destination IP Address or FQDN	Destination L4 Port(s)
		Additional Parameters	

```

---
IPv4      my_ip_class
1 match                                     icmp
   any
   any
2 ignore                                     udp
   any
   any
3 match                                     tcp
  192.168.0.1
  192.168.0.2

```

Type	Name		
Sequence	Comment	Action	L3 Protocol
		Source IP Address	Source L4 Port(s)
		Destination IP Address	Destination L4 Port(s)
		Additional Parameters	

```

IPv4      my_ip_class
      1 match                      icmp
        any
        any
      2 ignore                      udp
        any
        any
      3 match                      tcp
        192.168.0.1
        192.168.0.2

```

Replacing an IPv4 class entry in an existing class:

```

switch(config)# class ip my_ip_class
switch(config-class-ip)# 10 match igmp any any
switch(config-class-ip)# exit
switch(config)# show class ip my_ip_class
Type      Name
Sequence Comment
Action                      L3 Protocol
Source IP Address           Source L4 Port(s)
Destination IP Address or FQDN Destination L4 Port(s)
Additional Parameters

-----
---
IPv4      my_ip_class
      10 match                      igmp
        any
        any
      20 ignore                      udp
        any
        any
      30 match                      tcp
        192.168.0.1
        192.168.0.2

```

Removing an IPv4 class entry:

```

switch(config)# class ip MY_IP_CLASS
switch(config-class-ip)# no 10
switch(config-class-ip)# exit
switch(config)# show class ip my_ip_class
Type      Name
Sequence Comment
Action                      L3 Protocol
Source IP Address           Source L4 Port(s)
Destination IP Address or FQDN Destination L4 Port(s)

```

Additional Parameters

```

---
IPv4      my_ip_class
          20  ignore                      udp
              any
              any
          30  match                      tcp
              192.168.0.1
              192.168.0.2

```

Removing an IPv4 class. Removing a class with entries removes all its entries as well. If a class associated with a policy entry (or multiple policy entries) is removed, the corresponding entries are also removed.



NOTE

The corresponding entries are only removed if the class is unused by all policy entries.

Creating an IPv4 class with FQDN:

```

switch(config)# class ip my_ip_class
switch(config-class-ip)# 1 match icmp any fqdn www.example.com
switch(config-class-ip)# exit
switch(config-class-ip)# show class ip my_ip_class
Type          Name
Sequence      Comment
              Action                      L3 Protocol
              Source IP Address          Source L4 Port(s)
              Destination IP Address or FQDN Destination L4
Port(s)
              Additional Entry Parameters
-----
---
IPv4          my_ip_class
              1  match                      icmp
                  any
                  www.example.com

```

Modifying an existing class to include FQDN:

```

switch(config)# class ip my_ip_class
switch(config-class-ip)# 2 match udp any fqdn www.anotherexample.com
switch(config-class-ip)# exit
switch(config-class-ip)# show class ip my_ip_class
Type          Name
Sequence      Comment

```

	Action	L3 Protocol
	Source IP Address	Source L4 Port(s)
	Destination IP Address or FQDN	Destination L4
Port(s)		
	Additional Parameters	

IPv4	my_ip_class	
1	match	icmp
	any	
	www.example.com	
2	match	udp
	any	
	www.anotherexample.com	

Creating an IPv4 class with a long FQDN:

```
switch(config)# class ip my_long_fqdn_class
switch(config-class-ip)# 1 match icmp any fqdn
www.longsubdomainnamefornetworkconfigurationandtestingpurposes
withadditionaldetailsincludedforexampleusage.com
switch(config-class-ip)# exit
switch(config-class-ip)# show class ip my_long_fqdn_class
```

Type	Name	
Sequence	Comment	
	Action	L3 Protocol
	Source IP Address	Source L4 Port(s)
	Destination IP Address or FQDN	Destination L4
Port(s)		
	Additional Entry Parameters	

IPv4	my_long_fqdn_class	
1	match	icmp
	any	
	www.longsubdomainnamefornetworkconfigurationandtestingpur...	

Creating an IPv6 class FQDN:

```
switch(config)# class ipv6 my_ipv6_class
switch(config-class-ip)# 1 match icmpv6 any fqdn www.example.com
switch(config-class-ip)# exit
switch(config-class-ip)# show class ipv6 my_ipv6_class
```

Type	Name	
Sequence	Comment	
	Action	L3 Protocol
	Source IP Address	Source L4 Port(s)
	Destination IP Address or FQDN	Destination L4

```

Port(s)
    Additional Entry Parameters
-----
---
IPv6      my_ipv6_class
1 match                                     icmpv6
    any
    www.example.com

```

Modifying an existing class to include FQDN (IPv6):

```

switch(config)# class ipv6 my_ipv6_class
switch(config-class-ip)# 2 match any any fqdn www.anotherexample.com
switch(config-class-ip)# exit
switch(config-class-ip)# show class ipv6 my_ipv6_class

```

Type	Name	Sequence	Comment	Action	L3 Protocol	Source IP Address	Source L4 Port(s)	Destination IP Address or FQDN	Destination L4
IPv6	my_ipv6_class	1	match		icmpv6	any		www.example.com	
		2	match		any	any		www.anotherexample.com	

```

Port(s)
    Additional Parameters
-----
---

```

Command History

Release	Modification
10.17.1000	Added support for FQDN.
	Added support for EIGRP, L2TP and VRRP protocols.
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	<code>config</code> The class <code>ip <CLASS - NAME></code> command takes you into the <code>config - class - ipconfig - class - ip</code> context where you enter the class entries.	Administrators or local user group members with execution rights for this command.

class ipv6

Syntax

Syntax to create an IPv6 class and enter its context. Plus syntax to remove a class:

```
class ipv6 <CLASS-NAME>
no class ipv6 <CLASS-NAME>
```

Syntax (within the class context) for creating or removing class entries for protocols **ah**, **eigrp**, **esp**, **gre**, **l2tp**, **ospf**, **pim**, **vrrp**, (**ipv6** is available as an alias for **any**):

```
[<SEQUENCE-NUMBER>]
{match|ignore}
{any|ah|eigrp|esp|gre|ipv6|l2tp|ospf|pim|vrrp|<IP-PROTOCOL-NUM>}
{any|<SRC-IP-ADDRESS>[/<PREFIX-LENGTH>|<SUBNET-MASK>]}
{any|<DST-IP-ADDRESS>[/<PREFIX-LENGTH>|<SUBNET-MASK>]}
[dscp <DSCP-SPECIFIER>] [ecn <ECN-VALUE>] [ip-precedence <IP-PRECEDENCE-VALUE>]
[tos <TOS-VALUE>] [fragment] [vlan <VLAN-ID>] [ttl <TTL-VALUE>] [count]
no <SEQUENCE-NUMBER>
```

Syntax (within the class context) for creating or removing class entries for protocols **sctp**, **tcp**, **udp**:

```
[<SEQUENCE-NUMBER>]
{match|ignore}
{sctp|tcp|udp}
{any|<SRC-IP-ADDRESS>[/<PREFIX-LENGTH>|<SUBNET-MASK>]}
[{eq|gt|lt} <PORT>|range <MIN-PORT> <MAX-PORT>]
{any|<DST-IP-ADDRESS>[/<PREFIX-LENGTH>|<SUBNET-MASK>]} }
```



```
[{eq|gt|lt} <PORT>|range <MIN-PORT>
    <MAX-PORT>]
[urg] [ack] [psh] [rst] [syn] [fin] [established]
[dscp <DSCP-SPECIFIER>] [ecn <ECN-VALUE>] [ip-precedence <IP-PRECEDENCE-
VALUE>]
[tos <TOS-VALUE>] [fragment] [vlan <VLAN-ID>] [ttl <TTL-VALUE>] [count]
no <SEQUENCE-NUMBER>
```

Syntax (within the class context) for creating or removing class entries for protocol **icmpv6**:

```
[<SEQUENCE-NUMBER>]
{permit|deny}
{icmpv6}
{any|<SRC-IP-ADDRESS>[/ {<PREFIX-LENGTH>|<SUBNET-MASK>}]}
{any|<DST-IP-ADDRESS>[/ {<PREFIX-LENGTH>|<SUBNET-MASK>}]}
[icmp-type {echo|echo-reply|<ICMP-TYPE-VALUE>}] [icmp-code <ICMP-CODE-
VALUE>]
[dscp <DSCP-SPECIFIER>] [ecn <ECN-VALUE>] [ip-precedence <IP-PRECEDENCE-
VALUE>]
[tos <TOS-VALUE>] [fragment] [vlan <VLAN-ID>] [ttl <TTL-VALUE>] [count]
no <SEQUENCE-NUMBER>
```

Syntax (within the class context) for class entry comments:

```
[<SEQUENCE-NUMBER>] comment <TEXT-STRING>
no <SEQUENCE-NUMBER> comment
```

Description

Creates or modifies an IPv6 traffic class to match specified packets. Class is composed of one or more class entries ordered and prioritized by sequence numbers. With this command, each class can classify traffic based on IPv6 header information.

The **no** form of the command deletes either an IPv6 traffic class (use **no** with the class command) or an individual IPv6 traffic class entry (use **no** with the sequence number).

Parameter	Description
ipv6	Specifies create or modify an IPv6 class.
<CLASS-NAME>	Specifies the name of this class.
<SEQUENCE-NUMBER>	Specifies a sequence number for the class entry. Optional. Range: 1 - 4294967295.

Parameter	Description
<code>{match ignore}</code>	Creates a rule to match or ignore specified packets.
<code><IP-PROTOCOL-NUM></code>	Specifies the protocol as its Internet Protocol number. For example, 2 corresponds to the IGMP protocol. Range: 0 to 255.
<code>{any <SRC-IP-ADDRESS>[/{<PREFIX-LENGTH> <SUBNET-MASK>}]}</code>	Specifies the source IPv6 address. • any - specifies any source IPv6 address. • <SRC - IP - ADDRESS> - specifies the source IPv4 host address. ◦ <PREFIX - LENGTH> - specifies the address bits to mask (CIDR subnet mask notation). Range: 1 to 32. ◦ <SUBNET - MASK> - specifies the address bits to mask (dotted decimal notation).
<code>{any <DST-IP-ADDRESS>[/{<PREFIX-LENGTH> <SUBNET-MASK>}]}</code>	Specifies the destination IPv4 address. • any - specifies any destination IPv6 address. • <DST - IP - ADDRESS> - specifies the destination IPv6 host address. ◦ <PREFIX - LENGTH> - specifies the address bits to mask (CIDR subnet mask notation). Range: 1 to 32. ◦ <SUBNET - MASK> - specifies the address bits to mask (dotted decimal notation).
<code>[{eq gt lt} <PORT> range <MIN-PORT><MAX-PORT>]</code>	Specifies the port or port range. Port numbers are in the range of 0 to 65535. • eq <PORT> - specifies the Layer 4 port. • gt <PORT> - specifies any Layer 4 port greater than the indicated port. • lt <PORT> - specifies any Layer 4 port less than the indicated port. • range <MIN - PORT> <MAX - PORT> - specifies the Layer 4 port range.
<code>cwr</code>	Specifies matching on the TCP Flag CWR : Congestion Window Reduced
<code>ece</code>	Specifies matching on the TCP Flag ECE : Explicit Congestion Notification [ECN] - Echo
<code>urg</code>	Specifies matching on the TCP Flag: Urgent.

Parameter	Description
ack	Specifies matching on the TCP Flag: Acknowledgment.
psh	Specifies matching on the TCP Flag: Push buffered data to receiving application.
rst	Specifies matching on the TCP Flag: Reset the connection.
syn	Specifies matching on the TCP Flag: Synchronize sequence numbers.
fin	Specifies matching on the TCP Flag: Finish connection.
established	Specifies matching on the TCP Flag: Established connection.
dscp <DSCP-SPECIFIER>	Specifies the Differentiated Services Code Point (DSCP), either a numeric <DSCP-VALUE> (0 to 63) or one of these keywords: • AF11 - DSCP 10 (Assured Forwarding Class 1, low drop probability) • AF12 - DSCP 12 (Assured Forwarding Class 1, medium drop probability) • AF13 - DSCP 14 (Assured Forwarding Class 1, high drop probability) • AF21 - DSCP 18 (Assured Forwarding Class 2, low drop probability) • AF22 - DSCP 20 (Assured Forwarding Class 2, medium drop probability) • AF23 - DSCP 22 (Assured Forwarding Class 2, high drop probability) • AF31 - DSCP 26 (Assured Forwarding Class 3, low drop probability) • AF32 - DSCP 28 (Assured Forwarding Class 3, medium drop probability) • AF33 - DSCP 30 (Assured Forwarding Class 3, high drop probability) • AF41 - DSCP 34 (Assured Forwarding Class 4, low drop probability) • AF42 - DSCP 36 (Assured Forwarding Class 4, medium drop probability) • AF43 - DSCP 38 (Assured Forwarding Class 4, high drop probability) • CS0 - DSCP 0 (Class Selector 0: Default)

Parameter	Description
	• CS1 - DSCP 8 (Class Selector 1: Scavenger) • CS2 - DSCP 16 (Class Selector 2: OAM) • CS3 - DSCP 24 (Class Selector 3: Signaling) • CS4 - DSCP 32 (Class Selector 4: Real time) • CS5 - DSCP 40 (Class Selector 5: Broadcast video) • CS6 - DSCP 48 (Class Selector 6: Network control) • CS7 - DSCP 56 (Class Selector 7) • EF - DSCP 46 (Expedited Forwarding)
ecn <ECN-VALUE>	Specifies an Explicit Congestion Notification value. Range: 0 to 3.
ip-precedence <IP-PRECEDENCE-VALUE>	Specifies an IP precedence value. Range: 0 to 7.
tos <TOS-VALUE>	Specifies the Type of Service value. Range: 0 to 31.
fragment	Specifies a fragment packet.
vlan <VLAN-ID>	Specifies VLAN tag to match on. 802.1Q VLAN ID.
 NOTE This parameter cannot be used in any class that will be applied to a VLAN.	
ttl <TTL-VALUE>	Specifies a time - to - live (hop limit) value. Range: 0 to 255.
count	Keeps the hit counts of the number of packets matching this class entry.
[<SEQUENCE-NUMBER> comment <TEXT-STRING>	Adds a comment to a class entry. The no form removes only the comment from the class entry.

Usage

- If you enter an existing **<CLASS-NAME>** value, the existing class is modified with any new **<SEQUENCE-NUMBER>** value. This action creates an additional class entry. Any existing **<SEQUENCE-NUMBER>** value replaces the existing class entry with the same sequence number.

- If no sequence number is specified, a new class entry is appended to the end of the class with a sequence number equal to the highest class entry currently in the list plus 10.
- If the **<IP-PROTOCOL-NUM>** parameter is used instead of a protocol name, ensure that any needed class entry-definition parameters specific to the selected protocol are also provided.

Examples

Creating an IPv6 class with two entries:

```
switch(config)# class ipv6 MY_IPV6_CLASS
switch(config-class-ipv6)# 10 match icmpv6 any any
switch(config-class-ipv6)# 20 ignore udp any any
switch(config-class-ipv6)# exit
switch(config)# do show class
```

Type	Name	Sequence	Comment	Action	L3 Protocol	Source IP Address	Source L4 Port(s)	Destination IP Address	Destination L4 Port(s)	Additional Parameters

IPv6	MY_IPV6_CLASS	10	match		icmpv6	any		any		
		20	ignore		udp	any		any		

Adding a comment to an existing IPv6 class entry:

```
switch(config)# class ipv6 MY_IPV6_CLASS
switch(config-class-ipv6)# 10 match icmpv6 any any
switch(config-class-ipv6)# 20 ignore udp any any
switch(config-class-ipv6)# 20 comment myipv6class
switch(config-class-ipv6)# exit
switch(config)# do show class
```

Type	Name	Sequence	Comment	Action	L3 Protocol	Source IP Address	Source L4 Port(s)	Destination IP Address	Destination L4 Port(s)	Additional Parameters


```

IPv6      MY_IPV6_CLASS
10 match
    any
    any
20 myipv6class
    ignore
    any
    any

```

Removing a comment from an existing IPv6 class entry:

```

switch(config)# class ipv6 MY_IPV6_CLASS
switch(config-class-ipv6)# no 20 comment
switch(config-class-ipv6)# exit
switch(config)# do show class

```

Type	Name	Sequence	Comment	Action	L3 Protocol	Source IP Address	Source L4 Port(s)	Destination IP Address	Destination L4 Port(s)	Additional Parameters
------	------	----------	---------	--------	-------------	-------------------	-------------------	------------------------	------------------------	-----------------------

```

IPv6      MY_IPV6_CLASS
10 match
    any
    any
20 ignore
    any
    any

```

Type	Name	Sequence	Comment	Action	L3 Protocol	Source IP Address	Source L4 Port(s)	Destination IP Address	Destination L4 Port(s)	Additional Parameters
------	------	----------	---------	--------	-------------	-------------------	-------------------	------------------------	------------------------	-----------------------

```

IPv6      MY_IPV6_CLASS
10 match
    any
    any
20 ignore
    any
    any

```

Replacing an IPv6 class entry in an existing IPv6 class:

```
switch(config)# class ipv6 MY_IPV6_CLASS
switch(config-class-ipv6)# 10 match any any 1020::
switch(config-class-ipv6)# exit
switch(config)# do show class
```

Type	Name	Sequence	Comment	Action	L3 Protocol	Source IP Address	Source L4 Port(s)	Destination IP Address	Destination L4 Port(s)	Additional Parameters

IPv6	MY_IPV6_CLASS									
		10	match				any			
				any						
				1020::						
		20	ignore				udp			
				any						
				any						

Removing an IPv6 class entry:

```
switch(config)# class ipv6 MY_IPV6_CLASS
switch(config-class-ipv6)# no 10
switch(config-class-ipv6)# exit
switch(config)# do show class
```

Type	Name	Sequence	Comment	Action	L3 Protocol	Source IP Address	Source L4 Port(s)	Destination IP Address	Destination L4 Port(s)	Additional Parameters

IPv6	MY_IPV6_CLASS									
		20	ignore				udp			
				any						
				any						

Removing an IPv6 class. Removing a class with entries removes all its entries as well. If a class associated with a policy entry (or multiple policy entries) is removed, the corresponding entries are also removed.



NOTE

The corresponding entries are only removed if the class is unused by all policy entries.

```
switch(config)# no class ipv6 MY_IPV6_CLASS
switch(config)# do show class
No Class found.
```

Command History

Release	Modification
10.17.1000	Added support for EIGRP, L2TP and VRRP protocols.
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	config The class ipv6 <CLASS - NAME> command takes you into the config - class - ipv6 command context where you enter the class entries.	Administrators or local user group members with execution rights for this command.

class mac

Syntax

```
class mac <CLASS-NAME>
  [<SEQUENCE-NUMBER>]
  {match|ignore}
  {any|<SRC-MAC-ADDRESS> [/<ETHERNET-MASK>] } }
  {any|<DST-MAC-ADDRESS> [/<ETHERNET-MASK>] } }
```



```

{any|aarp|appletalk|arp|fcoe|fcoe-init|ip|ipv6|ipx-arpa|ipx-non-arpa|is-
is|
    lldp|mpls-multicast|mpls-unicast|q-in-q|rbridge|trill|wake-on-lan|
    <NUMERIC-ETHERTYPE>}
[pcp <PCP-VALUE>] [vlan <VLAN-ID>] [count]
[<SEQUENCE-NUMBER>] comment <TEXT-STRING>

```

Description

Creates or modifies a MAC traffic class to match specified packets. Class is composed of one or more class entries ordered and prioritized by sequence numbers. With this command, each class can classify traffic based on MAC header information.

The **no** form of the command can be used to delete either a MAC traffic class (use **no** with the class command) or an individual MAC traffic class entry (use **no** with the sequence number).

Parameter	Description
mac	Specifies create or modify a MAC class.
<CLASS-NAME>	Specifies the name of this class.
<SEQUENCE-NUMBER>	Specifies a sequence number for the class entry. Optional. Range: 1 - 4294967295.
{match ignore}	Creates a rule to match or ignore specified packets.
comment	Stores the remaining entered text as a class comment.
{any <SRC-MAC-ADDRESS> [/<ETHERNET-MASK>] }	Specifies the source host MAC address (xxxx.xxxx.xxxx), OUI, or the keyword any . You can optionally include the following: <ETHERNET-MASK> - The address bits to mask (xxxx.xx.xx.xxxx).
{any <DST-MAC-ADDRESS> [/<ETHERNET-MASK>] }	Specifies the destination host MAC address (xxxx.xxxx.xxxx), OUI, or the keyword any . You can optionally include the following: <ETHERNET-MASK> - The address bits to mask (xxxx.xx.xx.xxxx).
Protocol	Select an ethertype protocol from the following (enter one only):

Parameter	Description
	• any - Any ethernet protocol • <NUMERIC-ETHERTYPE> - Enter an Ethernet protocol number. Range: 0x600 - 0xffff. • Or enter an Ethernet protocol name from the following list: ◦ aarp ◦ appletalk ◦ arp ◦ fcoe ◦ fcoe - init ◦ ip ◦ ipv6 ◦ ipx - arpa ◦ ipx - non - arpa ◦ is - is ◦ lldp ◦ mpls - multicast ◦ mpls - unicast ◦ q - in - q ◦ rbridge ◦ trill ◦ wake - on - lan
<code>pcp <PCP-VALUE></code>	Not supported.
<code>vlan <VLAN-ID></code>	Specifies matching on a VLAN ID. Enter a VLAN ID or the VLAN name, if configured.
 NOTE This parameter cannot be used in any class that will be applied to a VLAN.	
<code>count</code>	Keeps the hit counts of the number of packets matching this class entry.

Examples

Creating a MAC class:

```

switch(config)# class mac MY_MAC_CLASS
switch(config-class-mac)# match any any lldp
switch(config-class-mac)# ignore any any arp
switch(config-class-mac)# exit
switch(config)# do show class

```

Type	Name			
Sequence	Comment	Action		EtherType
		Source MAC Address		
		Destination MAC Address		
		Additional Parameters		

MAC	MY_MAC_CLASS			
10	match			lldp
	any			
	any			
20	ignore			arp
	any			
	any			

Adding a comment to an existing MAC class entry:

```

switch(config)# class mac MY_MAC_CLASS
switch(config-class-mac)# 10 comment MY_CLASS_ENTRY10 comment MY_CLASS_ENTRY
switch(config-class-mac)# exit
switch(config)# do show class

```

Type	Name			
Sequence	Comment	Action		EtherType
		Source MAC Address		
		Destination MAC Address		
		Additional Parameters		

MAC	MY_MAC_CLASS			
10	MY_CLASS_ENTRY			
	match			lldp
	any			
	any			
20	ignore			arp
	any			
	any			

Removing a comment from an existing MAC class entry:

```

switch(config)# class mac MY_MAC_CLASS
switch(config-class-mac)# no 10 comment MY_CLASS_ENTRY
switch(config-class-mac)# exit
switch(config)# do show class
Type          Name
Sequence      Comment
              Action                      EtherType
              Source MAC Address
              Destination MAC Address
              Additional Parameters
-----
---
MAC           MY_MAC_CLASS
              10 match                      lldp
                  any
                  any
              20 ignore                      arp
                  any
                  any

```

Replacing a MAC class entry in an existing MAC class:

```

switch(config)# class mac MY_MAC_CLASS
switch(config-class-mac)# 10 match any any any
switch(config-class-mac)# exit
switch(config)# do show class
Type          Name
Sequence      Comment
              Action                      EtherType
              Source MAC Address
              Destination MAC Address
              Additional Parameters
-----
---
MAC           MY_MAC_CLASS
              10 match                      any
                  any
                  any
              20 ignore                      arp
                  any
                  any

```

Removing a MAC class entry:

```

switch(config)# class mac MY_MAC_CLASS
switch(config-class-mac)# no 1
switch(config-class-mac)# exit

```

```

switch(config)# do show class
Type           Name
Sequence Comment
              Action                      EtherType
              Source MAC Address
              Destination MAC Address
              Additional Parameters
-----
---
MAC           MY_MAC_CLASS
              2 ignore                      arp
              any
              any

```

Removing a MAC class. Removing a class with entries removes all its entries as well. If a class associated with a policy entry (or multiple policy entries) is removed, the corresponding entries are also removed.



NOTE

The corresponding entries are only removed if the class is unused by all policy entries.

```

switch(config)# no class mac MY_MAC_CLASS
switch(config)# do show class
No Class found.

```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
5420	config	Administrators or local user group members with execution rights for this command.
6200	The class mac <CLASS - NAME> command takes you into the config - class - mac context where you enter the class entries.	

class resequence

Syntax

```
class {ip|ipv6|mac} <CLASS-NAME> resequence <STARTING-SEQUENCE-NUMBER>
                               <INCREMENT>
```

Description

Resequencing numbering in an IPv4, or IPv6, or MAC class.

Parameter	Description
<pre>{ip ipv6 mac } <CLASS-NAME></pre>	Specifies the class where you want to resequence class entries.
<pre><STARTING-SEQUENCE-NUMBER></pre>	Specifies the sequence number to start resequencing from.
<pre><INCREMENT></pre>	Specifies how much to increment the sequence numbers by.

Examples

Resequencing an IPv4 class:

```
switch(config)# class ip MY_IP_CLASS resequence 1 10
switch(config)# do show class
Type           Name
Sequence      Comment
              Action
              L3 Protocol
```

	Source IP Address	Source L4 Port(s)
	Destination IP Address	Destination L4 Port(s)
	Additional Parameters	

IPv4	MY_IP_CLASS	
1	match	igmp
	any	
	any	
11	ignore	udp
	any	
	any	
21	match	tcp
	192.168.0.1	
	192.168.0.2	

Resequencing an IPv6 class:

```
switch(config)# class ipv6 MY_IPV6_CLASS resequence 1 1
switch(config-class-ipv6)# exit
switch(config)# do show class
```

Type	Name		
	Sequence	Comment	
	Action		L3 Protocol
	Source IP Address		Source L4 Port(s)
	Destination IP Address		Destination L4 Port(s)
	Additional Parameters		

IPv6	MY_IPV6_CLASS		
1	match		any
	any		
	1020::		
2	ignore		udp
	any		
	any		

Resequencing a MAC class:

```
switch(config)# class mac MY_MAC_CLASS resequence 1 1
switch(config)# do show class
```

Type	Name		
	Sequence	Comment	
	Action		EtherType
	Source MAC Address		
	Destination MAC Address		
	Additional Parameters		

MAC	MY_MAC_CLASS	
1	match	any
	any	
	any	
2	ignore	arp
	any	
	any	

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

class reset

Syntax

```
class { all | ip <CLASS-NAME> | ipv6 <CLASS-NAME>
      |mac <CLASS-NAME>
      } reset
```

Description

Changes the user-specified class configuration to match the active class configuration. Use this command when there is a discrepancy between what the user configured and what is active and accepted by the system.

Parameter	Description
<pre>{ all ip <CLASS-NAME> ipv6 <CLASS-NAME> mac <CLASS-NAME> }</pre>	Specifies either all classes be reset or specifies the type (ip for IPv4, ipv6 for IPv6 or mac for MAC ACL) and name of the class to be reset.

Examples

Resetting the user-specified configuration to the active configuration:

```
switch(config)# class all reset
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

clear policy hitcounts

Syntax

```
clear policy hitcounts { all | [<POLICY-NAME>] [[interface <IF-NAME> [in|out]] | [vlan <VLAN-ID> [in|out]]] | global }
```

Description

Clears the policy hit count statistics.

Parameter	Description
all	Selects all policies.
<POLICY-NAME>	Specifies the policy name.
interface <IF-NAME>	Specifies the interface name.
vlan <VLAN-ID>	Specifies the VLAN.
in	Specifies the inbound (ingress) traffic direction.
out	Selects the outbound (egress) traffic direction.
global	Selects the globally applied policy.

Examples

```
switch#
```

```
clear policy hitcounts my_policy int 1/1/1 in
```

```
switch#
```

```
show policy hitcounts my_policy
```

Statistics for Policy my_policy: Interface 1/1/1* (in): Hit Count Configuration 10 class ipv6 my_class1 action dscp af21 action drop 0 10 match any any any count * policy statistics are shared among each context type (interface, VLAN). For routed ingress, they are only shared within the same VRF. Use 'policy NAME copy' to create a new policy for separate statistics.

Clearing policy hit counts and then showing the policy hit counts (statistics):

```
switch#
```

```
clear policy hitcounts my_policy int 1/1/1 in
```

```
switch#
```

```
show policy hitcounts my_policy
```

Statistics for Policy my_policy: Interface 1/1/1* (in): Hit Count Configuration 10 class ipv6 my_class1 action dscp af21 action drop 0 10 match any any any count * policy statistics are shared among each context type (interface, VLAN). Use 'policy NAME copy' to create a new policy for separate statistics.

```
switch#
```

```
clear policy hitcounts global
```

```
switch#
```

```
show policy hitcounts global
```

Statistics for Policy global1: Global Policy: Hit Count Configuration 10 class ipv6 my_class1 action mirror 0 10 match any any any count * policy statistics are shared among each context type (interface, VLAN). For routed ingress, they are only shared within the same VRF. Use 'policy NAME copy' to create a new policy for separate statistics.

switch#

clear policy hitcounts global

switch#

show policy hitcounts global

Statistics for Policy global1: Global Policy: Hit Count Configuration 10 class ipv6 my_class1 action mirror 0 10 match any any any count * policy statistics are shared among each context type (interface, VLAN). For routed ingress, they are only shared within the same VRF. Use 'policy NAME copy' to create a new policy for separate statistics.

Clearing the globally applied policy hit counts and then showing the global policy hit counts (statistics):

switch#

clear policy hitcounts global

switch#

show policy hitcounts global

Statistics for Policy global1: Global Policy: Hit Count Configuration 10 class ipv6 my_class1 action mirror 0 10 match any any any count * policy statistics are shared among each context type (interface, VLAN). Use 'policy NAME copy' to create a new policy for separate statistics.

Clearing hit counts for policy **MY_IPv6_Policy** applied to VLAN 10 (ingress):

```
switch# clear policy hitcounts My_IPv6_Policy vlan 10 in
```

Clearing hit counts for all policies:

```
switch# clear policy hitcounts all
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

policy

Syntax

```
policy <POLICY-NAME>
  [<SEQUENCE-NUMBER>]
  class {ip|ipv6|mac} <CLASS-NAME>
    action {<REMARK-ACTIONS> | <POLICE-ACTIONS> | <OTHER-ACTIONS>}
    [{<REMARK-ACTIONS> | <POLICE-ACTIONS> | <OTHER-ACTIONS>}]
  [<SEQUENCE-NUMBER>]
  comment ...
```

Description

Creates or modifies classifier policy and policy entries. A policy is made up of one or more policy entries ordered and prioritized by sequence numbers. Each entry has an IPv4/IPv6/MAC class and zero or more policy actions associated with it.

A policy must be applied using the **apply** command.

The **no** form of the command can be used to delete either a policy (use **no** with the policy command) or an individual policy entry (use **no** with the sequence number).

Parameter	Description
<code><POLICY-NAME></code>	Specifies the name of the policy.
<code><SEQUENCE-NUMBER></code>	Specifies a sequence number for the policy entry. Optional. Range: 1 to 4294967295.
<code>comment</code>	Stores the remaining entered text as a policy entry comment.
<code>class {ip ipv6 mac} <CLASS-NAME></code>	Specifies a type of class, ip for IPv4, ipv6 for IPv6 and mac for a MAC policy. And specifies a class name.
<code><REMARK-ACTIONS></code>	Remark actions can be any of the following options: { <code>pcp <PRIORITY> ip - precedence <IP - PRECEDENCE_VALUE> dscp <DSCP - VALUE> local - priority <LOCAL - PRIORITY - VALUE></code> } where:

Parameter	Description
pcp <PCP-VALUE>	Specifies the Priority Code Point (PCP) value. Range: 0 to 7.
ip-precedence <IP-PRECEDENCE-VALUE>	Specifies the numeric IP precedence value. Range: 0 to 7.
dscp <DSCP-VALUE>	Specifies a Differentiated Services Code Point (DSCP) value. Enter either a numeric value (0 to 63) or a keyword as follows: • AF11 - DSCP 10 (Assured Forwarding Class 1, low drop probability) • AF12 - DSCP 12 (Assured Forwarding Class 1, medium drop probability) • AF13 - DSCP 14 (Assured Forwarding Class 1, high drop probability) • AF21 - DSCP 18 (Assured Forwarding Class 2, low drop probability) • AF22 - DSCP 20 (Assured Forwarding Class 2, medium drop probability) • AF23 - DSCP 22 (Assured Forwarding Class 2, high drop probability) • AF31 - DSCP 26 (Assured Forwarding Class 3, low drop probability) • AF32 - DSCP 28 (Assured Forwarding Class 3, medium drop probability) • AF33 - DSCP 30 (Assured Forwarding Class 3, high drop probability) • AF41 - DSCP 34 (Assured Forwarding Class 4, low drop probability) • AF42 - DSCP 36 (Assured Forwarding Class 4, medium drop probability) • AF43 - DSCP 38 (Assured Forwarding Class 4, high drop probability) • CS0 - DSCP 0 (Class Selector 0: Default) • CS1 - DSCP 8 (Class Selector 1: Scavenger) • CS2 - DSCP 16 (Class Selector 2: OAM) • CS3 - DSCP 24 (Class Selector 3: Signaling) • CS4 - DSCP 32 (Class Selector 4: Real time) • CS5 - DSCP 40 (Class Selector 5: Broadcast video) • CS6 - DSCP 48 (Class Selector 6: Network control)

Parameter	Description
	• CS7 - DSCP 56 (Class Selector 7) • EF - DSCP 46 (Expedited Forwarding)
<code>local-priority <LOCAL-PRIORITY-VALUE></code>	Specifies a local priority value. Range: 0 to 7.
<code><POLICE-ACTIONS></code>	Police actions can be the following {cir <RATE - BPS> cbs <BYTES> exceed} where:
<code>cir kbps <RATE-KBPS></code>	Specifies a Committed Information Rate value in Kilobits per second. Range: 1 to 4294967295.
<code>cbs <BYTES></code>	Specifies a Committed Burst Size value in bytes. Range: 1 to 4294967295.
<code><OTHER-ACTIONS></code>	Other actions can be the following:
<code>drop</code>	Specifies drop traffic.

Usage

- An applied policy will process a packet sequentially against policy entries in the list until the last policy entry in the list has been evaluated or the packet matches an entry.
- Entering an existing `<POLICY-NAME>` value will cause the existing policy to be modified, with any new `<SEQUENCE-NUMBER>` value creating an additional policy entry, and any existing `<SEQUENCE-NUMBER>` value replacing the existing policy entry with the same sequence number.
- If no sequence number is specified, a new policy entry will be appended to the end of the entry list with a sequence number equal to the highest policy entry currently in the list plus 10.

Examples

Creating a policy with several entries:

```
switch(config)# policy MY_POLICY
switch(config-policy)# 10 class ipv6 MY_CLASS1 action dscp af21 action drop
switch(config-policy)# 20 class ip MY_CLASS3 action mirror 1
switch(config-policy)# exit
switch(config)# show policy
```

```

        Name
Sequence Comment
        Class Type
                action
-----
---
        MY_POLICY
10
        MY_CLASS1 ipv6
                drop
                dscp AF21
20
        MY_CLASS3 ipv4
                mirror 1

```

Adding a comment to an existing policy entry:

```

switch(config)# policy MY_POLICY
switch(config-policy)# 20 comment MY_TEST_POLICY
switch(config-policy)# exit
switch(config)# show policy

```

Name	Sequence	Comment	Class	Type	action

MY_POLICY	10		MY_CLASS1	ipv6	drop dscp AF21
	20	MY_TEST_POLICY	MY_CLASS3	ipv4	mirror 1

Removing a comment from an existing policy entry:

```

switch(config)# policy MY_POLICY
switch(config-policy)# no 20 comment
switch(config-policy)# exit
switch(config)# show policy

```

Name	Sequence	Comment	Class	Type	action

MY_POLICY	10		MY_CLASS1	ipv6	drop dscp AF21
	20		MY_CLASS3	ipv4	mirror 1

Adding/Replacing a policy entry in an existing policy:

```

switch(config)# policy MY_POLICY
switch(config-policy)# 10 class ip MY_CLASS3 action drop action dscp af21
switch(config-policy)# exit
switch(config)# show policy

```

Name	Sequence	Comment	Class	Type
------	----------	---------	-------	------

```

                                action
-----
---
    MY_POLICY
10
    MY_CLASS3 ipv4
        drop
        dscp AF21
20
    MY_CLASS3 ipv4
        mirror 1

```

Removing a policy entry:

```

switch(config)# policy MY_POLICY
switch(config-policy)# no 10
switch(config-policy)# exit
switch(config)# show policy
    Name
Sequence Comment
    Class Type
                                action
-----
---
    MY_POLICY
20
    MY_CLASS3 ipv4
        mirror 1

```

Removing a policy:

```

switch(config)# no policy MY_POLICY
switch(config)# show policy
Name          Sequence    Comment      Class      Type      action
-----
---
MY_POLICY     22                      MY_CLASS3   ipv4      mirror 1

```

The policer **exceed** DSCP action cannot be combined with other actions in the same policy entry, but other entries in the policy may use other actions.

For example, this configuration is valid:

```

switch(config)# policy my_policy
switch(config-policy)# 10 class ip my_class action cir kbps 1000 cbs 15625
exceed dscp EF

```

But this is not because it adds a secondary action within the same policy entry:


```
6300(config-policy)# 10 class ip my_class action cir kbps 1000 cbs 15625
exceed dscp EF action mirror 1
```

Invalid input: action

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	<code>config</code> The policy command takes you into the config - policy context where you enter the policy entries.	Administrators or local user group members with execution rights for this command.

policy copy

Syntax

```
policy <POLICY-NAME> copy <DESTINATION-POLICY>
```

Description

Copies a policy to a new destination policy or overwrites an existing policy. Copying a policy copies all its entries as well.

Parameter	Description
<code><POLICY-NAME></code>	Specifies the policy to be copied.
	Specifies the name of the destination policy.

Parameter	Description
<DESTINATION-POLICY>	

Examples

Copying a policy:

```
switch(config)# policy MY_POLICY copy MY_POLICY2
switch(config)# do show policy
      Name
Sequence Comment
      Class Type
              action
-----
---
      MY_POLICY
2
      my_class3 ipv4
              mirror 1
-----
---
      MY_POLICY2
2
      my_class3 ipv4
              mirror 1
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

policy resequence

Syntax

```
policy <POLICY-NAME> resequence <STARTING-SEQ-NUM>
                               <INCREMENT>
```

Description

Resequences numbering in a policy.

Parameter	Description
<POLICY-NAME>	Specifies the policy where you want to resequence policy entries.
<STARTING-SEQ-NUM>	Specifies the sequence number to start resequencing from.
<INCREMENT>	Specifies how much to increment the sequence numbers by.

Examples

Resequencing a policy:

```
switch(config)# policy MY_POLICY resequence 1 1
switch(config)# do show policy
      Name
Sequence Comment
      Class Type
              action
-----
---
      MY_POLICY
1
      MY_CLASS3 ipv4
              drop
              dscp AF21
```

```
2
MY_CLASS3 ipv4
mirror 1
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

policy reset

Syntax

```
policy <POLICY-NAME> reset
```

Description

Changes the user-specified policy configuration to match the active policy configuration. Use this command when a discrepancy exists between what the user configured and what is active and accepted by the system.

Parameter	Description
<POLICY-NAME>	Specifies the policy to be reset.

Examples

Resetting a policy:

```
switch(config)# policy MY_POLICY reset
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

show class

Syntax

```
show class [ip | ipv6 | mac] [<CLASS-NAME>] [commands] [configuration]
```

Description

Shows class configuration information.

All parameters are optional.

Parameter	Description
[ip ipv6 mac]	Selects the class type for the display: ip for IPv4, ipv6 for IPv6, or mac for MAC classes.
<CLASS-NAME>	Specifies the class name.
commands	Specifies whether to display output as the CLI commands showing the configured class entries.
configuration	Specifies whether to display classes that have been configured by the user, even if they are not active due to issues with the command parameters or hardware issues. This parameter is useful

Parameter

Description

l during a mismatch between the entered configuration and the previous successfully programmed (active) classes.

Examples

Showing all class configuration:

```
switch# show class
```

```
User Configured ipv4 classes:
```

```
=====
```

```
Type Name
```

```
Sequence Comment
```

```
action
```

```
L3 Protocol
```

```
Source IP address
```

```
Source L4 Port(s)
```

```
Destination IP address or FQDN
```

```
Destination L4 Port(s)
```

```
Additional Parameters
```

```
-----  
ipv4 MY_IPV4_CLASS
```

```
10 my first class entry comment
```

```
match
```

```
icmp
```

```
192.168.0.1/255.255.255.0
```

```
192.168.1.1/255.255.255.0
```

```
VLAN: 1
```

```
20 my second class entry comment
```

```
ignore
```

```
tcp
```

```
10.100.0.10/255.255.255.0 < 3000
```

```
10.100.1.10/255.255.255.0 > 2000
```

```
VLAN: 1  
-----
```

Showing class configuration for the IPv4 class MY_IPV4_CLASS as CLI commands:

```
switch# show class ip MY_IPV4_CLASS commands
```

```
class ip "MY_IPV4_CLASS"
```

```
10 match icmp 192.168.0.1/255.255.255.0 192.168.1.1/255.255.255.0 vlan 1
```

```
10 comment my first class entry comment
```

```
20 ignore tcp 10.100.0.10/255.255.255.0 lt 3000 10.100.1.10/255.255.255.0
```

```
gt 2000 vlan 1
```

```
20 comment my second class entry comment
```

Showing class configuration for my_ip_class

```
switch# show class ip my_ip_class
```

```
Type Name
```

```
Sequence Comment
```

	Action	L3 Protocol
	Source IP Address	Source L4 Port(s)
	Destination IP Address or FQDN	Destination L4
Port(s)		
	Additional Parameters	

IPv4	my_ip_class	
1	match	icmp
	any	
	www.example.com	
switch# show class ip my_ip_class commands		
class ip my_ip_class		
1 match icmp any fqdn www.example.com		

Command History

Release	Modification
10.17.1000	Added support for FQDN.
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show policy

Syntax

Syntax that shows information for all policies:

```
show policy [commands] [configuration]
```

Syntax that filters by policies applied to an interface or VLAN:

```
show policy [interface <IF-NAME> [in | out] | vlan <VLAN-ID> [in | out]]  
            [commands] [configuration]
```

Syntax that filters by the named policy:

```
show policy <POLICY-NAME> [commands] [configuration] [vsx-peer]
```

Syntax that filters by the globally applied policy:

```
show policy global [commands] [configuration] [vsx-peer]
```

Syntax that shows statistical information in the form of hit counts:

```
show policy hitcounts <POLICY-NAME> [interface <IF-NAME> [in | out] |  
            vlan <VLAN-ID> [in | out]]
```

Syntax that shows statistical information in the form of hit counts for the globally applied policy:

```
show policy hitcounts global
```

Description

Shows information about your defined policies and where they have been applied. When **show policy** is entered without parameters, information for all policies is shown. The parameters filter the list of policies for which information is shown.

Available filtering includes:

- The content of a specific policy.
- All policies applied to a specific interface.
- All policies applied to a specific VLAN.
- All policies applied to a specific VNI.
- The globally applied policy.
- The inbound (ingress) or outbound (egress) direction.

To display policy statistics, use the **show policy hitcounts** form of this command.



NOTE

When a policy is applied to a physical interface or lag using command **apply policy**, with the **per-interface** parameter included, unique instances of the policy are applied to each physical interface port or LAG. The unique instance of a policy has a parent-child relationship with the policy from which it was created. The **show policy** command shows information about the parent policy not the unique instances.



NOTE

If a policy contains any class entries with the count keyword and policy entries with the **clr** action, and the policy is applied to multiple physical or virtual interfaces in the same direction, except for the routed ingress direction, the statistics will be aggregated. In the routed ingress direction, the statistics will be aggregated in multiple physical or virtual interfaces in the same VRF. If separate statistics for different physical or virtual interfaces are required, then another policy should be created. Alternatively, in the case of physical interfaces or LAGs, a policy applied with **per-interface** set can be used.

Parameter	Description
interface <IF-NAME>	Specifies the interface name.
vlan <VLAN-ID>	Specifies the VLAN.
vni<VNI-ID>	Specifies the VNI.
in	Selects the inbound (ingress) traffic direction.
out	Selects the outbound (egress) traffic direction.
<POLICY-NAME>	Specifies the policy name.
commands	Causes the policy definition to be shown as the commands and parameters used to create it rather than in tabular form.
configuration	Causes the user - configured policies be shown as entered, even if the policies are not active due to policy - definition command issues or hardware issues. This parameter is useful if there is

Parameter	Description
	a mismatch between the entered configuration and the previous successfully programmed (active) policies configuration.
global	Selects the globally applied policy.
hitcounts	Selects the policy hit counts (statistics).

Examples

Showing information for all policies:

```
switch# show policy
      Name
Sequence Comment
      Class Type
              action
-----
---
      my_policy
10 QOS class
   class1 ipv4
              dscp af21
              drop
20 PBR policy.
   class2 ipv4
              pbr mypbr
-----
---
```

Showing a policy as commands:

```
switch# show policy commands
policy my_policy
      10 class ip class1 action dscp af21 action drop
      20 class ip class2 action pbr mypbr
```

Showing the globally applied policy:

```
switch# show policy global commands
policy global1
      10 class ip my_class1 action drop
apply policy my_policy in
```

Showing policy hit counts (statistics) for the globally applied policy:

```
switch# show policy hitcounts global
Statistics for Policy My_Policy:
global (in):
```

```

    Matched Packets  Configuration
10 class ip My_ip_Class
    0 10 match tcp any any ack count
    - 20 match udp any lt 8 any
    0 30 match icmp any 10.1.1.10 count
20 class ipv6 My_ipv6_Class action cir kbps 1000000 cbs 1000000 exceed
drop [ 0 kbps conform ]
    - 10 match tcp any any ack
    0 20 match icmpv6 1000::10 any count

switch# show policy hitcounts global
Statistics for Policy My_Policy:
global (in):
    Matched Packets  Configuration
10 class ip My_ip_Class
    0 10 match tcp any any ack count
    - 20 match udp any lt 8 any
    0 30 match icmp any 10.1.1.10 count
20 class ipv6 My_ipv6_Class action cir kbps 1000000 cbs 1000000 exceed drop
    0 10 match tcp any any count [ 0 kbps conform ]
    0 20 match icmpv6 1000::10 any count [ 0 kbps conform ]

```

Showing policy hit counts (statistics) for a policy applied everywhere (with 1/1/4 and 1/1/5 being applied per interface):

```

switch# show policy hitcounts My_Policy
Statistics for Policy My_Policy:
Interface 1/1/1,lag1 (in):
    Matched Packets  Configuration
10 class ip My_ip_Class
    0 10 match tcp any any ack count
    - 20 match udp any lt 8 any
    0 30 match icmp any 10.1.1.10 count
20 class ipv6 My_ipv6_Class action cir kbps 1000000 cbs 1000000 exceed
drop [ 0 kbps conform ]
    - 10 match tcp any any ack
    0 20 match icmpv6 1000::10 any count
Interface 1/1/4 (in):
    Matched Packets  Configuration
10 class ip My_ip_Class
    0 10 match tcp any any ack count
    - 20 match udp any lt 8 any
    0 30 match icmp any 10.1.1.10 count
20 class ipv6 My_ipv6_Class action cir kbps 1000000 cbs 1000000 exceed
drop [ 0 kbps conform ]
    - 10 match tcp any any ack

```

```

0 20 match icmpv6 1000::10 any count
Interface 1/1/5 (in):
    Matched Packets  Configuration
10 class ip My_ip_Class
    0 10 match tcp any any ack count
    - 20 match udp any lt 8 any
    0 30 match icmp any 10.1.1.10 count
20 class ipv6 My_ipv6_Class action cir kbps 1000000 cbs 1000000 exceed
drop [ 0 kbps conform ]
    - 10 match tcp any any ack
    0 20 match icmpv6 1000::10 any count
interface 1/1/2.10,1/1/3.10 (in):
    Matched Packets  Configuration
10 class ip My_ip_Class
    0 10 match tcp any any ack count
    - 20 match udp any lt 8 any
    0 30 match icmp any 10.1.1.10 count
20 class ipv6 My_ipv6_Class action cir kbps 1000000 cbs 1000000 exceed
drop [ 0 kbps conform ]
    - 10 match tcp any any ack
    0 20 match icmpv6 1000::10 any count
...

```

Showing policy hit counts (statistics) for a policy applied on physical interfaces and LAGs:

```

switch# show policy hitcounts My_Policy interface 1/1/1
Statistics for Policy My_Policy:
Interface 1/1/1,lag1 (in):
    Matched Packets  Configuration
10 class ip My_ip_Class
    0 10 match tcp any any ack count
    - 20 match udp any lt 8 any
    0 30 match icmp any 10.1.1.10 count
20 class ipv6 My_ipv6_Class action cir kbps 1000000 cbs 1000000 exceed
drop [ 0 kbps conform ]
    - 10 match tcp any any ack
    0 20 match icmpv6 1000::10 any count

switch# show policy hitcounts My_Policy interface 1/1/1
Statistics for Policy My_Policy:
Interface 1/1/1,lag1 (in):
    Matched Packets  Configuration
10 class ip My_ip_Class
    0 10 match tcp any any ack count
    - 20 match udp any lt 8 any
    0 30 match icmp any 10.1.1.10 count

```

```

20 class ipv6 My_ipv6_Class action cir kbps 1000000 cbs 1000000 exceed drop
    0 10 match tcp any any count [ 0 kbps conform ]
    0 20 match icmpv6 1000::10 any count [ 0 kbps conform ]

```

Showing policy hit counts (statistics) for a policy applied on VLANs:

```

switch# show policy hitcounts My_Policy vlan 10
Statistics for Policy My_Policy:
vlan 10,20-30 (in):
    Matched Packets  Configuration
10 class ip My_ip_Class
    0 10 match tcp any any ack count
    - 20 match udp any lt 8 any
    0 30 match icmp any 10.1.1.10 count
20 class ipv6 My_ipv6_Class action cir kbps 1000000 cbs 1000000 exceed
drop [ 0 kbps conform ]
    - 10 match tcp any any ack
    0 20 match icmpv6 1000::10 any count

```

```

Statistics for Policy My_Policy:
vlan 10,20-30 (in):
    Matched Packets  Configuration
10 class ip My_ip_Class
    0 10 match tcp any any ack count
    - 20 match udp any lt 8 any
    0 30 match icmp any 10.1.1.10 count
20 class ipv6 My_ipv6_Class action cir kbps 1000000 cbs 1000000 exceed
drop [ 0 kbps conform ]
    - 10 match tcp any any ack
    0 20 match icmpv6 1000::10 any count

```

```

switch# show policy hitcounts My_Policy vlan 30
Statistics for Policy My_Policy:
vlan 30 (in):
    Matched Packets  Configuration
10 class ip My_ip_Class
    0 10 match tcp any any ack count
    - 20 match udp any lt 8 any
    0 30 match icmp any 10.1.1.10 count
20 class ipv6 My_ipv6_Class action cir kbps 1000000 cbs 1000000 exceed drop
    0 10 match tcp any any count [ 0 kbps conform ]
    0 20 match icmpv6 1000::10 any count [ 0 kbps conform ]

```

Showing policy hit counts (statistics) for a policy applied on interface VLANs:

```

switch# show policy hitcounts My_Policy interface vlan10
Statistics for Policy My_Policy:
VRF red
interface vlan 10,30 (routed-in):

```

```

    Matched Packets  Configuration
10 class ip My_ip_Class
    0 10 match tcp any any ack count
    - 20 match udp any lt 8 any
    0 30 match icmp any 10.1.1.10 count
20 class ipv6 My_ipv6_Class action cir kbps 1000000 cbs 1000000 exceed
drop [ 0 kbps conform ]
    - 10 match tcp any any ack
    0 20 match icmpv6 1000::10 any count
show policy hitcounts My_Policy vni 1000
Statistics for Policy My_Policy:
vni 1000 (routed-in):
    Matched Packets  Configuration
10 class ip My_ip_Class
    0 10 match tcp any any ack count
    - 20 match udp any lt 8 any
    0 30 match icmp any 10.1.1.10 count
20 class ipv6 My_ipv6_Class action cir kbps 1000000 cbs 1000000 exceed drop
    0 10 match tcp any any count [ 0 kbps conform ]
    0 20 match icmpv6 1000::10 any count [ 0 kbps
conform ]show policy hitcounts My_Policy vni 1000
Statistics for Policy My_Policy:
vni 1000 (routed-in):
    Matched Packets  Configuration
10 class ip My_ip_Class
    0 10 match tcp any any ack count
    - 20 match udp any lt 8 any
    0 30 match icmp any 10.1.1.10 count
20 class ipv6 My_ipv6_Class action cir kbps 1000000 cbs 1000000 exceed drop
    0 10 match tcp any any count [ 0 kbps conform ]
    0 20 match icmpv6 1000::10 any count [ 0 kbps conform ]
switch# show policy hitcounts My_Policy interface vlan10
Statistics for Policy My_Policy:
VRF red
interface vlan 10 (routed-in):
    Matched Packets  Configuration
10 class ip My_ip_Class
    0 10 match tcp any any ack count
    - 20 match udp any lt 8 any
    0 30 match icmp any 10.1.1.10 count
20 class ipv6 My_ipv6_Class action cir kbps 1000000 cbs 1000000 exceed drop
    0 10 match tcp any any count [ 0 kbps conform ]
    0 20 match icmpv6 1000::10 any count [ 0 kbps conform ]

```

Showing policy hit counts (statistics) for a policy applied on interface VLANs for a specific VRF:

```

switch# show policy hitcounts My_Policy vrf green routed-in
Statistics for Policy My_Policy:
VRF green
interface vlan 20,25 (routed-in):
    Matched Packets  Configuration
10 class ip My_ip_Class
    0 10 match tcp any any ack count
    - 20 match udp any lt 8 any
    0 30 match icmp any 10.1.1.10 count
20 class ipv6 My_ipv6_Class action cir kbps 1000000 cbs 1000000 exceed
drop [ 0 kbps conform ]
    - 10 match tcp any any ack
    0 20 match icmpv6 1000::10 any count

switch# show policy hitcounts My_Policy vrf red routed-in
Statistics for Policy My_Policy:
VRF red
interface vlan 10 (routed-in):
    Matched Packets  Configuration
10 class ip My_ip_Class
    0 10 match tcp any any ack count
    - 20 match udp any lt 8 any
    0 30 match icmp any 10.1.1.10 count
20 class ipv6 My_ipv6_Class action cir kbps 1000000 cbs 1000000 exceed drop
    0 10 match tcp any any count [ 0 kbps conform ]
    0 20 match icmpv6 1000::10 any count [ 0 kbps conform ]
Statistics for Policy My_Policy:
VRF red
interface vlan 10 (routed-in):
    Matched Packets  Configuration
10 class ip My_ip_Class
    0 10 match tcp any any ack count
    - 20 match udp any lt 8 any
    0 30 match icmp any 10.1.1.10 count
20 class ipv6 My_ipv6_Class action cir kbps 1000000 cbs 1000000 exceed drop
    0 10 match tcp any any count [ 0 kbps conform ]
    0 20 match icmpv6 1000::10 any count [ 0 kbps conform ]

```

Command History

Release	Modification
10.08	Added [per - interface] information. Updated examples.

Release	Modification
10.07 or earlier	- -


Command Information

Platforms	Command context	Authority
All platforms	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Classifier policies configuration example

This example configures traffic policing on:

- A 10-Gbit Ethernet of Switch A meeting the following requirements:
 - Police the rate of packets from the server to 102,400 kbps. Traffic 102,400 kbps or less is forwarded. The traffic more than 102,400 kbps is dropped.
 - Police the rate of packets from Host A to 25,600 kbps. Traffic 25,600 kbps or less is forwarded. The traffic more than 25,600 kbps is dropped.
- A 10-Gbit Ethernet 1/2/1 of Switch B limiting the incoming traffic rate of HTTP packets on 10-Gbit Ethernet 1/1/1 to the data rate of 204,800 kbps and dropping excess packets.

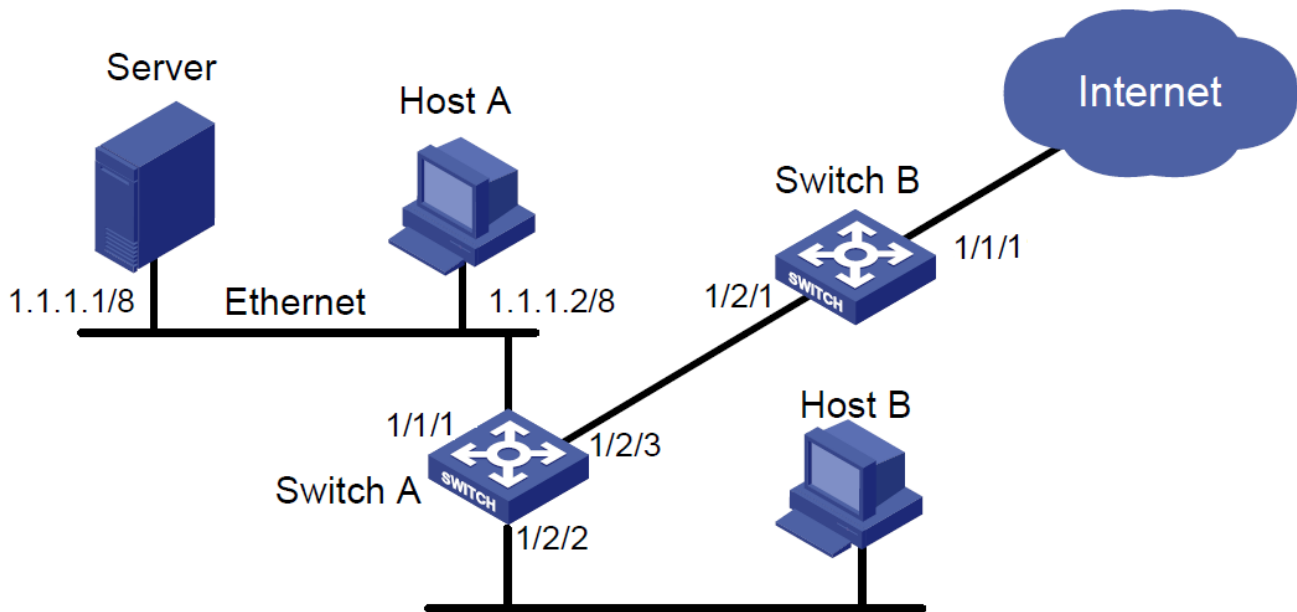

Subtopics

Configuring the classifier policies example

Configuring the classifier policies example

These steps are part of the classifier policies configuration example.

Procedure

1. Configure Switch A.

Create traffic classes named SERVER_TRAFFIC and HOST_A_TRAFFIC for matching the packets from the server and Host A:

```

switch# configure
switch(config)# class ip SERVER_TRAFFIC
switch(config-class-ip)# match any 1.1.1.1 any
switch(config-class-ip)# exit
switch(config)# class ip HOST_A_TRAFFIC
switch(config-class-ip)# match any 1.1.1.2 any
switch(config-class-ip)# exit

```

2. Create a classifier policy named RATE_LIMIT_POLICY:

```

switch(config)# policy RATE_LIMIT_POLICY

```

3. Configure the policy RATE_LIMIT_POLICY, so that 102,400 kbps of traffic, matching the class SERVER_TRAFFIC, is forwarded and the excess is dropped:

```
switch(config-policy)# class ip SERVER_TRAFFIC action cir kbps 102400  
exceed drop
```

4. Configure the policy RATE_LIMIT_POLICY so that 25,600 kbps of traffic, matching the class HOST_A_TRAFFIC, is forwarded and the excess is dropped:

```
switch(config-policy)# class ip HOST_A_TRAFFIC action cir kbps 25600  
exceed drop  
switch(config-policy)# exit
```

5. Apply RATE_LIMIT_POLICY to interface 1/1/1 for the inbound traffic:

```
switch(config)# int 1/1/1  
switch(config-if)# apply policy RATE_LIMIT_POLICY in  
switch(config-if)# exit
```

6. To view the configuration with the RATE_LIMIT_POLICY applied:

```
switch# show running-config  
Current configuration:  
!  
...  
class ip SERVER_TRAFFIC  
    10 match any 1.1.1.1 any  
class ip HOST_A_TRAFFIC  
    10 match any 1.1.1.2 any  
policy RATE_LIMIT_POLICY  
    10 class ip SERVER_TRAFFIC action cir kbps 102400 exceed drop  
    20 class ip HOST_A_TRAFFIC action cir kbps 25600 exceed drop  
interface 1/1/1  
    apply policy RATE_LIMIT_POLICY in
```

7. Configure Switch B.

Create a traffic class named HTTP_TRAFFIC and configure it to match traffic to port 80:

```
switch(config)# class ip HTTP_TRAFFIC  
switch(config-class-ip)# match tcp any any eq 80  
switch(config-class-ip)# exit
```

8. Create a classifier policy named RATE_LIMIT_HTTP:

```
switch(config)# policy RATE_LIMIT_HTTP
```

9. Configure the policy RATE_LIMIT_HTTP so that 204,800 kbps of traffic, matching the class HTTP_TRAFFIC, is forwarded and the excess is dropped:

```
switch(config-policy)# class ip HTTP_TRAFFIC action cir kbps 204800  
exceed drop  
switch(config-policy)# exit
```

- .0. Apply RATE_LIMIT_HTTP to interface 1/1/1 for inbound traffic:

```
switch(config)# int 1/1/1  
switch(config-if)# apply policy RATE_LIMIT_HTTP in  
switch(config-if)# exit
```

- .1. Show the running configuration with RATE_LIMIT_HTTP applied:

```
switch# show running-config  
Current configuration:  
!  
...  
class ip HTTP_TRAFFIC  
    10 match tcp any any eq 80  
policy RATE_LIMIT_HTTP  
    10 class ip HTTP_TRAFFIC action cir kbps 204800 exceed drop  
interface 1/1/1  
    apply policy RATE_LIMIT_HTTP in  
switch# show running-config  
Current configuration:  
!  
...  
class ip HTTP_TRAFFIC  
    10 match tcp any any eq 80  
policy RATE_LIMIT_HTTP  
    10 class ip HTTP_TRAFFIC action cir kbps 204800 exceed drop  
interface 1/1/1  
    apply policy RATE_LIMIT_HTTP in
```

ACL and Policy hardware resource considerations

Switches have finite (TCAM and other) hardware resources used in the application of ACLs and Classifier policies (including Port-Access policies) to packets being processed in switch hardware. ADC (analytics data collection) also consumes TCAM lookups. Take the considerations described in this chapter into account when deciding what ACL and classifier policy-related features to use at the same time.

Subtopics

Show Resources

TCAM resource consumption and lookups

Matching precedence order

L4 port ranges

Context group selectors

ACL and Policy hardware resource commands

Show Resources

The **show resources** command allows users to see hardware resource consumption in the switch.

These hardware resources include the following:

- TCAM entries
- High-Capacity TCAM entries

On the 6200 and 6300 switch series, these resources are only reported per VSF member.

The usage of high capacity TCAM can be viewed specifically using **show system high-capacity-tcam**. This command displays the feature that is currently configured, pending configuration, and the default feature present in high capacity TCAM.

Subtopics

Event Logs

Limitations and exclusions

Event Logs

The following event logs are displayed when the TCAM runs out of resources:

Daemon	Event ID	Severity	Message
ops - switchd	10214	ERROR	TCAM Context Group selectors have been exhausted
ops - switchd	10215	ERROR	TCAM Context Group IDs have been exhausted
ops - switchd	10216	ERROR	Policer resources have been exhausted

Daemon	Event ID	Severity	Message
ops - switchd	10217	ERROR	TCAM entries have been exhausted
ops - switchd	10218	ERROR	TCAM tables have been exhausted
ops - switchd	10219	ERROR	TCAM ranges have been exhausted
ops - switchd	10220	ERROR	TCAM counters have been exhausted

Limitations and exclusions

Resources reserved for one lookup cannot be shared or used by other lookups.

TCAM resource consumption and lookups

TCAM entries and lookups are consumed by features that deal with the classification of packets using the TCAM. TCAM lookups are a finite hardware resource used in the application of ACLs and policies (including port access policies) to packets processed in switch hardware. ADC (analytics data collection) also consumes TCAM lookups. A switch can support a limited number of ACL and policy features at the same time. Use the command **show resources** to monitor TCAM resources and lookups.

Certain platforms have additional resources that features may consume, such as L4 port range checkers, context group selectors, policers, and counters. Different platforms consume these resources at different rates. There are a limited number of features that use TCAM that can be enabled simultaneously on the same line card.



NOTE

In the following TCAM lookup lists, **IP** means both IPv4 and IPv6.

TCAM lookup behaviors vary by switch type.

Subtopics


For the 6200 and 5420 Switch series:

For the 6200 and 5420 Switch series:

The ingress TCAM is organized in a series of uniformly sized banks. Each feature uses one lookup and can reserve one or more banks to install entries. While certain sub-features may have different entry widths, this does not mean that they need to initially reserve multiple banks. The width of a feature affects how many TCAM entries a single software entry consumes. It is unlikely that a configuration runs out of ingress TCAM lookups first. Typically, TCAM entries or Context Group Selectors are exhausted before TCAM lookups. There are many slightly different SKUs of these platforms which all allocate resources in the same way, though the quantities of resources can vary. [Figure 21](#) provides a visual representation of ingress TCAM.

Platform	Bank Size	Number of banks	Total entries
5420	1024	10	10240
6200	512	10	5120

Figure 1. Ingress TCAM with no features installed



The following features compete with each other for ingress lookups:

- Audio Visual Bridging (AVB)
- Ingress Global Policy
- Ingress IP Analytics Data Collection (ADC)
- Ingress L2 Tunnel
- Ingress Port IP ACL
- Ingress Port MAC ACL
- Ingress Port Policy
- Ingress Role Based Policy (ABP and GBP)
- Ingress Routed Port Policy
- Ingress Routed Tunnel Policy
- Ingress Routed VLAN IP ACL
- Ingress Routed VLAN Policy
- Ingress Tunnel IP ACL

- Ingress Tunnel MAC ACL
- Ingress Tunnel Policy
- Ingress VLAN IP ACL
- Ingress VLAN MAC ACL
- Ingress VLAN Policy
- Ingress IPFIX
- Long Prefix IPv6 Unicast Routes
- Port Access Client
- QoS WRED



NOTE

There is one dedicated Flex lookup used only by Group Based Policy (GBP) and Audio/Visual Bridging (AVB). This lookup uses entries from the same set of shared banks as other TCAM lookups. Due to both AVB and GBP both competing for this Flex lookup, only one of these features may be installed in a configuration.

The following features compete with each other for egress lookups:

- Egress Port IP ACL
- Egress Port MAC ACL
- Egress Port Policy
- Egress Routed VLAN IP ACL
- Egress Tunnel IP ACL
- Egress Tunnel MAC ACL
- Egress VLAN IP ACL
- Egress VLAN MAC ACL
- Egress VLAN Policy

Use **show resources** to determine the total number of available ingress and egress lookups for each line card or stack member.

Subinterface applications share lookups with ingress and egress VLANs.

The IPFIX feature consumes all available TCAM entries and fills the TCAM in a very short amount of time, preventing other features, like ACLs from being applied. Should this condition occur, an event is logged


indicating that the TCAM is FULL. To avoid this scenario, ACLs, Policies and other static TCAM features should be configured first. After the static features have finished applying, IPFIX can be configured, which results in IPFIX only consuming TCAM resources which are not in use or reserved by other actively applied features.

The following is an example configuration:

```
access-list ip test
  10 deny any any any
interface 1/1/1
  apply access-list ip test in
```

In this example, a single feature is configured, IP Port ACLs. The resources consumed only require one bank to be reserved for the feature. This is displayed in [Figure 22](#).

Figure 2. One bank reservation

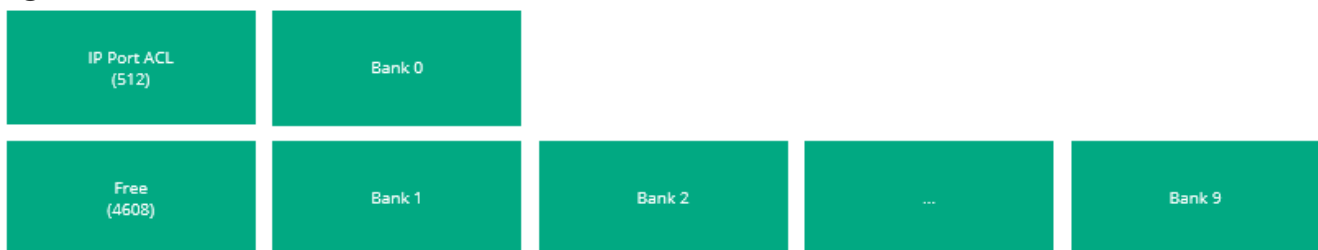


In this example, IPv4 and IPv6 ACLs are applied to ports. IPv4 and IPv6 entries share a lookup and may be installed in the same feature's reserved banks, though IPv6 entries consume four times as many TCAM entries.

```
access-list ip test
  10 deny any any any
access-list ipv6 v6_acl
  10 deny any any any
  20 deny any any any
  ...
  5090 deny any any any
  5100 deny any any any
interface 1/1/1
  apply access-list ip test in
interface 1/1/2
  apply access-list ipv6 v6_acl in
```

As a result, this single feature requires two banks to install all configured entries. This is displayed in [Figure 23](#).

Figure 3. IPv4 and IPv6 ACLs applied to ports

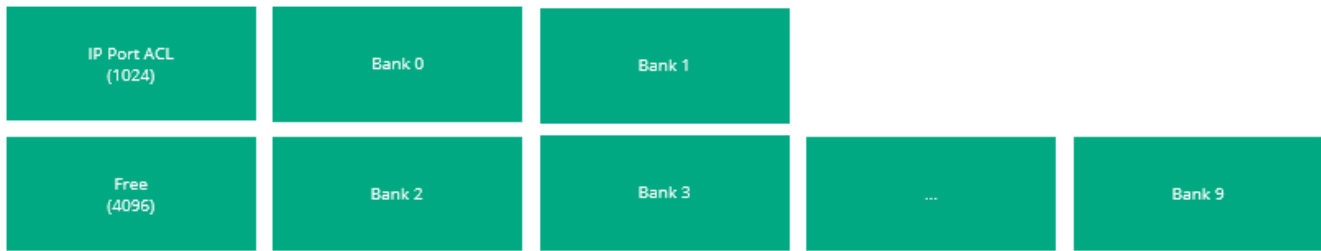

In this example, an IP Port ACL feature and a port policy with IPv4, IPv6, and MAC classes are configured.

```
access-list ip test
  10 deny any any any
access-list ipv6 v6_acl
  10 deny any any any
  20 deny any any any
  ...
  5090 deny any any any
  5100 deny any any any
class ip c
  10 match tcp any any count
class ipv6 v6
  10 match any any any count
class mac m
  10 match any any any count
policy p
  10 class ip c action drop
  20 class ipv6 v6 action drop
  30 class mac m action drop
interface 1/1/1
  apply access-list ip test in
interface 1/1/2
  apply access-list ipv6 v6_acl in
interface 1/1/3
  apply policy p in
```

The IP Port ACL feature continues to use two banks and the added port policy requires its own bank, as displayed in [Figure 24](#).

Figure 4. IP Port ACL and port policy configuration



The following example demonstrates that it is unlikely for a typical configuration to exhaust the maximum number of features that can be configured. This adds a configured VLAN Policy on VLAN 200, a routed VLAN policy on interface VLAN 100, and a global policy. Additionally, there is a configured MAC port ACL and a MAC VLAN ACL.

```
access-list ip test
  10 deny any any any
access-list ipv6 v6_acl
  10 deny any any any
  20 deny any any any
  ...
  5100 deny any any any
  5110 deny any any any
access-list mac m
  10 deny any any any
class ip c
  10 match tcp any any count
class ipv6 v6
  10 match any any any count
class mac m
  10 match any any any count
policy ip
  10 class ip c action drop
  20 class ipv6 v6 action drop
policy p
  10 class ip c action drop
  20 class ipv6 v6 action drop
  30 class mac m action drop
apply policy p in
vlan 1, 100
vlan 200
  apply policy p in
vlan 300
  apply access-list mac m in
```

```

interface 1/1/1
  apply access-list ip test in
  apply access-list ipv6 v6_acl in
  apply access-list mac m in
interface 1/1/2
  apply policy p in
interface vlan 100
  apply policy p ip routed-in

```

These seven features consume eight banks, leaving two free banks that may be used for additional features or to expand the resources available to one of the currently configured features. This is displayed in [Figure 25](#).

Figure 5. Eight banks consumed



Matching precedence order

When a packet is matched by multiple TCAM Lookups with the same action, a precedence order is followed.

For example, if a packet matches an IPv6 Policy with an action to change DSCP to AF11 and a MAC policy with an action to change DSCP to AF12, the MAC DSCP action takes precedence and the DSCP of the packet will change to AF12, given that the precedence of a IPv6 Policy is higher than the precedence of a MAC Policy. Count is an exception in that if a packet matches an IPv4 ACL, MAC ACL, and a policy with count actions, all the counters will increment.

The precedence order from highest to lowest is as follows:

```

    Meter Actions:
Port Access Client Policy
Port Policy
VLAN Policy
Ingress Global Policy
QoS Actions:
Port Access Client Policy Remark
Ingress/Egress Port Policy Remark
Ingress/Egress VLAN Policy Remark
Global Policy Remark
QoS DSCP Map Entry
QoS COS Map Entry
QoS Port Config
MAC Port ACL Logging
IP Port ACL Logging
MAC VLAN ACL Logging
IP VLAN ACL Logging
Redirect actions:
Policy L2 Tunnel
Port Access Client Policy Captive-portal

```

L4 port ranges

On platforms that support the use of dedicated resources called **L4 Port Ranges**, any ACE that uses **lt**, **gt**, **range**, or port groups attempts to use these dedicated hardware resources. L4 port ranges are used to reduce the number of TCAM entries needed to cover an L4 port range. For example, range 50000 50005 could be covered by a single L4 port range or by two TCAM entries using the following value/masks:

Entry number	L4 port range	Value/Mask
1	range 50000 50003	0xC350/0xFFFC
2	range 50004 50005	0xC354/0xFFFE

The problem gets multiplied when an ACE matches on two L4 port ranges. The TCAM entries used to cover a source and destination L4 port range must cover all possibilities. For example, for this ACE,

```
10 permit tcp any range 100 200 any range 50000 50005
```

The `range 100 200` needs six value masks. As a result, this ACE needs 12 ($6*2=12$) TCAM entries. However, if the TCAM group uses L4 port ranges then the ACE only needs one TCAM entry that matches on two L4 port ranges.

On the switch series, TCAM entries can share an L4 port range given the following conditions:

- The min and max of the L4 port range are the same
- The L4 port range type (either source or destination L4 ports) is the same
- The TCAM entries are on the same ingress packet processing pipeline

The TCAM entries do not need to be in the same TCAM group.

L4 port ranges are not allocated if the L4 port range can be covered by a single value/mask. For example, **eq 1** and **lt 1024** do not allocate an L4 port range. As a result, the L4 port range allocation can be reduced if the L4 port range is split into multiple ACEs that can each be covered by a single value/mask. For example, the following ACE:

```
10 permit tcp any any range 50000 50005
```

can be split into these two ACEs with L4 port ranges that can each be covered by a single value/mask:

```
10 permit tcp any any range 50000 50003
```

```
11 permit tcp any any range 50004 50005
```

Reducing the number of L4 port ranges needed by a config can be desirable if the config requires more L4 port ranges than are available in the hardware and there are available TCAM entries to absorb the additional ACEs.

On the 6200, 6300, 6400, 8100, 8360, 9300, and 9300S switch series, any ACE that uses **lt**, **gt**, **range**, or a port group, may use more than one hardware entry to represent the range of L4 ports. L4 port ranges are not supported on these platforms.

Context group selectors

On the 5420, 6200, 6300, 6400, 8100, and 8360 switch series, context group selectors are a limited hardware resource that are required for applying ACLs and Policies. They enable applying an ACL or Policy to multiple instances of the same context, for example ports on a line card and VLANs, without consuming additional resources. There are a limited number of available context group selectors for each context group type:

- Ingress ports
- Ingress VLANs

- Egress Ports
- Egress VLANs

There are a limited number of available context group selectors for each context group (Ingress Ports, Ingress VLANs, Egress Ports, Egress VLANs).

Context group selectors work on a first-come-first-served basis. IP ACLs and Classes require two selectors that are allocated together; one selector for each address family (IPv4 and IPv6). Once all the group selectors for a context group have been used, no new application type of ACL or classifier policy for the context group can be applied. For example, if an existing configuration has a MAC ACL, IP ACL, and classifier policy applied on ingress to ports, a policy cannot be applied to a port in the routed-in direction.

Context group selector consumption and availability is as follows:

Type	Selectors
Ingress Port MAC ACL	1
Ingress Port IP ACL	2
Ingress Port Policy	1
Ingress Routed Port Policy	1
Available Ingress Port Selectors	4
-	-
Ingress VLAN MAC ACL	1
Ingress VLAN IP ACL	2
Routed - Ingress VLAN IP ACL	2
Ingress VLAN Policy	1
Ingress Routed VLAN Policy	1
Available Ingress VLAN Selectors	4
-	-
Egress Port MAC ACL	1
Egress Port IP ACL	2
Egress Port Policy	1
Available Egress Port Selectors	5

Type	Selectors
-	-
Egress VLAN MAC ACL	1
Egress VLAN IP ACL	2
Routed - Egress VLAN IP ACL	2
Egress VLAN Policy	1
Available Egress VLAN Selectors	5

ACL and Policy hardware resource commands

Select a command from the list in the left navigation menu.

Subtopics

[show resources](#)

show resources

Syntax

```
show resources [<SLOT-ID>]
```

Description

Shows hardware resource consumption for the specified VSF member or for all VSF members. Resource data is updated every 10 seconds.

Hardware resource consumption information is shown for:

- TCAM entries
- TCAM lookups
- Policers

Parameter	Description
<SLOT-ID>	Specifies the VSF member.

Usage

The widths for show resources can have features combined (IPv4 + IPv6) into one TCAM lookup. Therefore, the table widths for each ACL/classifier policy type are variable depending on what is applied. For example:

```

    "Ingress IP Port ACL" = Ingress v4 Port ACLs + Ingress v6 Port ACLs
                          = 1 TCAM entry + 4 TCAM entries
                          = 5 TCAM entries/  "Ingress IP Port ACL" = Ingress
v4 Port ACLs + Ingress v6 Port ACLs
                          = 1 TCAM entry + 4 TCAM entries
                          = 5 TCAM entriC(v2) /  "Ingress IP Port ACL" =
Ingress v4 Port ACLs + Ingress v6 Port ACLs
                          = 1 TCAM entry + 4 TCAM entries
                          = 5 TCAM entries/  "Ingress IP Port ACL" = Ingress
v4 Port ACLs + Ingress v6 Port ACLs
                          = 1 TCAM entry + 4 TCAM entries
                          = 5 TCAM entriC(v2C(v2)) /  "Ingress IP Port ACL" =
Ingress v4 Port ACLs + Ingress v6 Port ACLs
                          = 1 TCAM entry + 4 TCAM entries
                          = 5 TCAM entries/  "Ingress IP Port ACL" = Ingress
v4 Port ACLs + Ingress v6 Port ACLs
                          = 1 TCAM entry + 4 TCAM entries
                          = 5 TCAM entriC(v2C(v2)) /  "Ingress IP Port ACL" =
Ingress v4 Port ACLs + Ingress v6 Port ACLs
                          = 1 TCAM entry + 4 TCAM entries
                          = 5 TCAM entries/  "Ingress IP Port ACL" = Ingress
v4 Port ACLs + Ingress v6 Port ACLs
                          = 1 TCAM entry + 4 TCAM entries
                          = 5 TCAM entriC(v2) /  "Ingress IP Port ACL" =
Ingress v4 Port ACLs + Ingress v6 Port ACLs
                          = 1 TCAM entry + 4 TCAM entries
                          = 5 TCAM entries/  "Ingress IP Port ACL" = Ingress
v4 Port ACLs + Ingress v6 Port ACLs
                          = 1 TCAM entry + 4 TCAM entries
                          = 5 TCAM entriC(v2C(v2)) /  "Ingress IP Port ACL" =
Ingress v4 Port ACLs + Ingress v6 Port ACLs
                          = 1 TCAM entry + 4 TCAM entries
                          = 5 TCAM entries/  "Ingress IP Port ACL" = Ingress
v4 Port ACLs + Ingress v6 Port ACLs

```



```

= 1 TCAM entry + 4 TCAM entries
= 5 TCAM entriC(v2C(v2C(v2)/ "Ingress IP Port ACL"
= Ingress v4 Port ACLs + Ingress v6 Port ACLs
= 1 TCAM entry + 4 TCAM entries
= 5 TCAM entries/ "Ingress IP Port ACL" = Ingress
v4 Port ACLs + Ingress v6 Port ACLs
= 1 TCAM entry + 4 TCAM entries
= 5 TCAM entriC(v2) / "Ingress IP Port ACL" =
Ingress v4 Port ACLs + Ingress v6 Port ACLs
= 1 TCAM entry + 4 TCAM entries
= 5 TCAM entries/ "Ingress IP Port ACL" = Ingress
v4 Port ACLs + Ingress v6 Port ACLs
= 1 TCAM entry + 4 TCAM entries
= 5 TCAM entriC(v2C(v2)/ "Ingress IP Port ACL" =
Ingress v4 Port ACLs + Ingress v6 Port ACLs
= 1 TCAM entry + 4 TCAM entries
= 5 TCAM entries/ "Ingress IP Port ACL" = Ingress
v4 Port ACLs + Ingress v6 Port ACLs
= 1 TCAM entry + 4 TCAM entries
= 5 TCAM entriC(v2C(v2C(v2)

```

Widths per feature are as follows:

MAC ACL	1
IPv4 ACL	1
IPv6 ACL	4
MAC Class	1
IPv4 Class	2
IPv6 Class	4

A MAC Class with an ethertype of "any" has a width of 7 because it uses one TCAM entry each for MAC, IPv4, and IPv6. Specifying the IPv4 (0x0800) or IPv6 (0x86DD) ethertypes in a MAC Class uses a TCAM entry equal to their respective size. IPv4 uses a width of 2 and IPv6 uses a width of 4.

```
"Ingress IP Port ACL" = Ingress v4 Port ACLs + Ingress v6 Port ACLs
                        = 1 TCAM entry + 4 TCAM entries
                        = 5 TCAM entries
```

```
IPv4 ACL      2
MAC ACL       2
IPv6 ACL      4
IPv4 Class    2
IPv6 Class    4
```

Examples

```
switch# show resources
Resource Usage:
Mod  Description
```

Resource	Used	Reserved	Free

1/1 Total			
Ingress TCAM Entries	0	0	20480
Egress TCAM Entries	0	0	8192
Ingress Lookups	0		9
Egress Lookups	0		4
Ingress Policers	0		2048
Egress Policers	0		2048

switch# **show resources 1/1**

Resource Usage:

Mod Description

Resource	Width	Used	Reserved	Free

1/1 Total				
Ingress TCAM Entries		0	0	20480
Egress TCAM Entries		0	0	8192
Ingress Lookups		0		9
Egress Lookups		0		4
Ingress Policers		0		2048
Egress Policers		0		2048

switch# **show resources**

Resource Usage:

Mod Description

Resource	Used	Reserved	Free

1/3 Total			
Ingress TCAM Entries	0	0	20480
Egress TCAM Entries	0	0	
8192 Ingress Lookups			
0 9			
Egress Lookups	0		4
Ingress Policers	0		2048
Egress Policers	0		2048

1/5 Total			
Ingress TCAM Entries	0	0	20480
Egress TCAM Entries	0	0	8192
Ingress Lookups	0		9
Egress Lookups	0		4
Ingress Policers	0		2048
Egress Policers	0		2048

switch# **show resources 1/3**

Resource Usage:

Mod	Description	Used	Reserved	Free
Resource				

1/3	Total			
	Ingress TCAM Entries	0	0	20480
	Egress TCAM Entries	0	0	
8192	Ingress Lookups			
0	9			
	Egress Lookups	0		4
	Ingress Policers	0		2048
	Egress Policers	0		2048

Showing hardware resource consumption on a 6200 or 5420 switch:

```
switch# show resources
```

Resource Usage:

Mod	Description	Used	Reserved	Free
Resource				

1	Total			
	Ingress TCAM Entries	0	0	18432
	Egress TCAM Entries	0	0	5120
	Ingress Lookups	0		10
	Ingress Flex Loopkups		0	1
	Egress Lookups	0		4
	Ingress Policers	0		5119
	Egress Policers	0		2047

```
switch# show resources
```

Resource Usage:

Mod	Description	Used	Reserved	Free
Resource				

1/1	Ingress IP CPURX Lookup			
	Ingress TCAM Entries	148	256	
	Ingress Policers	20		
	Total			
	Ingress TCAM Entries	148	256	3832
	Ingress Lookups	1		31
	Ingress Policers	20		2028

```
switch# show resources 1/1
```

Resource Usage:

Mod	Description	Used	Reserved	Free
Resource				

1/1	Ingress IP CPURX Lookup			

Ingress TCAM Entries	148	256	
Ingress Policers	20		
Total			
Ingress TCAM Entries	148	256	3832
Ingress Lookups	1		31
Ingress Policers	20		2028

switch# **show resources**

Resource Usage:

Mod Description

Resource	Width	Used	Reserved	Free

1/1 Ingress IPv4 Port ACL				
High-Capacity TCAM/LPM Entries	2	0	262144	
MAC Control Plane Policing				
TCAM Entries	2	16	256	
IPv4 Control Plane Policing				
TCAM Entries	2	70	256	
IPv6 Control Plane Policing				
TCAM Entries	2	72	*	
IPv4 Unicast Route				
High-Capacity TCAM/LPM Entries	1	0	131072	
IPv6 Unicast Route				
High-Capacity TCAM/LPM Entries	2	0	262144	
IPv4 Multicast Route				
High-Capacity TCAM/LPM Entries	2	0	65536	
IPv6 Multicast Route				
High-Capacity TCAM/LPM Entries	4	0	65536	
Total				
TCAM Entries		158	512	
49664				
High-Capacity TCAM/LPM Entries		0	786432	
258048				
Policers		0		
65536				
Ingress L4 Port Ranges		0		24

*This feaature shares reserved resources with the preceeding feature.

switch# **show resources 1/1**

Resource Usage:

Mod Description

Resource	Width	Used	Reserved	Free

1/1 Ingress IPv4 Port ACL				

High-Capacity TCAM/LPM Entries	2	0	262144
MAC Control Plane Policing			
TCAM Entries	2	16	256
IPv4 Control Plane Policing			
TCAM Entries	2	70	256
IPv6 Control Plane Policing			
TCAM Entries	2	72	*
IPv4 Unicast Route			
High-Capacity TCAM/LPM Entries	1	0	131072
IPv6 Unicast Route			
High-Capacity TCAM/LPM Entries	2	0	262144
IPv4 Multicast Route			
High-Capacity TCAM/LPM Entries	2	0	65536
IPv6 Multicast Route			
High-Capacity TCAM/LPM Entries	4	0	65536
Total			
TCAM Entries		158	512 49664
High-Capacity TCAM/LPM Entries		0	786432 258048
Policers		0	65536
Ingress L4 Port Ranges		0	24

* This feature shares reserved resources with the preceding feature.

switch# **show resources**

Resource Usage:

Mod Description

Resource	Width	Used	Reserved	Free

1/1 Global				
Total				
Destination Field Processor Entries		0	0	1024
1/1-0 Ports 9-12,21-24				
Ingress Control Plane Policing				
Ingress TCAM Entries		3	375	6144
Total				
Ingress TCAM Entries			375	6144 18432
VLAN Field Processor Entries		0	0	1024
1/1-1 Ports 1-8				
Ingress Control Plane Policing				
Ingress TCAM Entries		3	375	6144
Total				
Ingress TCAM Entries			375	6144
18432				
VLAN Field Processor Entries			0	0
1024				

```

1/1-2 Ports 13-20
    Ingress Control Plane Policing
        Ingress TCAM Entries          3      375      6144
    Total
        Ingress TCAM Entries          375      6144
18432
    VLAN Field Processor Entries          0          0
1024
1/1-3 Ports 25-32
    Ingress Control Plane Policing
        Ingress TCAM Entries          3      375      6144
    Total
        Ingress TCAM Entries          375      6144
18432
    VLAN Field Processor Entries          0          0
1024

```

Command History

Release	Modification
---------	--------------

10.07 or earlier	- -
------------------	-----

Command Information

Platforms	Command context	Authority
5420 6200	Operator (>) or Manage r (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Support and Other Resources

Access HPE Aruba Networking support and updates, and view warranty and regulatory information

Subtopics

[Accessing HPE Aruba Networking Support](#)

[Accessing Updates](#)

[Warranty Information](#)

Accessing HPE Aruba Networking Support

HPE Aruba Networking Support Services	https://www.hpe.com/us/en/networking/hpe - aruba - networking - support - services.html
AOS - CX Switch Software Documentation Portal	https://arubanetworking.hpe.com/techdocs/ArubaDocPortal/content/new-portal/aoscx.html
HPE Aruba Networking Support Portal	https://networkingsupport.hpe.com/home
North America telephone	1 - 800 - 943 - 4526 (US & Canada Toll - Free Number) +1 - 650 - 750 - 0350 (Backup—Toll Number)
International telephone	https://www.hpe.com/psnow/doc/a50011948enw

Be sure to collect the following information before contacting Support:

- Technical support registration number (if applicable)
- Product name, model or version, and serial number
- Operating system name and version
- Firmware version
- Error messages
- Product-specific reports and logs
- Add-on products or components
- Third-party products or components

Other useful sites

Other websites that can be used to find information:

HPE Aruba Networking Developer Hub	https://developer.arubanetworks.com/hpe - aruba - networking - aoscx/docs/about
Airheads social forums and Knowledge Base	https://community.arubanetworks.com/
AOS - CX Software Technical Update channel on YouTube.	Videos on new features introduced in this release : https://www.youtube.com/playlist?list=PLsYGHuNuBZcbWPEjjHuVMqP - Q_UL3CskS
HPE Aruba Networking Hardware Documentation and Translations Portal	
HPE Aruba Networking software	https://networkingsupport.hpe.com/downloads https://networkingsupport.hpe.com/downloads
Software licensing and Feature Packs	https://licensemanagement.hpe.com/
End - of - Life information	https://networkingsupport.hpe.com/end - of - life

Accessing Updates

You can access updates from the HPE Aruba Networking Support Portal at <https://networkingsupport.hpe.com>.

Some software products provide a mechanism for accessing software updates through the product interface. Review your product documentation to identify the recommended software update method.

To subscribe to eNewsletters and alerts:

<https://networkingsupport.hpe.com/notifications/subscriptions> (requires an active HPE Aruba Networking Support Portal account to manage subscriptions). Security notices are viewable without an HPE Aruba Networking Support Portal account.

Warranty Information

To view warranty information for your product, go to <https://www.arubanetworks.com/support-services/product-warranties/>.

Regulatory Information

To view the regulatory information for your product, view the Safety and Compliance Information for Server, Storage, Power, Networking, and Rack Products, available at [**https://www.hpe.com/support/Safety-Compliance-EnterpriseProducts**](https://www.hpe.com/support/Safety-Compliance-EnterpriseProducts)

Additional regulatory information

HPE Aruba Networking is committed to providing our customers with information about the chemical substances in our products as needed to comply with legal requirements, environmental data (company programs, product recycling, energy efficiency), and safety information and compliance data, (RoHS and WEEE). For more information, see [**https://www.arubanetworks.com/company/about-us/environmental-citizenship/**](https://www.arubanetworks.com/company/about-us/environmental-citizenship/).

Documentation Feedback

HPE Aruba Networking is committed to providing documentation that meets your needs. To help us improve the documentation, send any errors, suggestions, or comments to Documentation Feedback ([**docsfeedback-switching@hpe.com**](mailto:docsfeedback-switching@hpe.com)). When submitting your feedback, include the document title, part number, edition, and publication date located on the front cover of the document. For online help content, include the product name, product version, help edition, and publication date located on the legal notices page.