

AOS-CX 10.07 Link Aggregation Guide

**6100, 6200, 6300, 6400, 8320, 8325, 8360,
8400 Switch Series**



a Hewlett Packard
Enterprise company

Part Number: 5200-7869
Published: November 2021
Edition: 2

Copyright Information

© Copyright 2021 Hewlett Packard Enterprise Development LP.

Open Source Code

This product includes code licensed under the GNU General Public License, the GNU Lesser General Public License, and/or certain other open source licenses. A complete machine-readable copy of the source code corresponding to such code is available upon request. This offer is valid to anyone in receipt of this information and shall expire three years following the date of the final distribution of this product version by Hewlett Packard Enterprise Company. To obtain such source code, send a check or money order in the amount of US \$10.00 to:

Hewlett Packard Enterprise Company
6280 America Center Drive
San Jose, CA 95002
USA

Notices

The information contained herein is subject to change without notice. The only warranties for Hewlett Packard Enterprise products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. Hewlett Packard Enterprise shall not be liable for technical or editorial errors or omissions contained herein.

Confidential computer software. Valid license from Hewlett Packard Enterprise required for possession, use, or copying. Consistent with FAR 12.211 and 12.212, Commercial Computer Software, Computer Software Documentation, and Technical Data for Commercial Items are licensed to the U.S. Government under vendor's standard commercial license.

Links to third-party websites take you outside the Hewlett Packard Enterprise website. Hewlett Packard Enterprise has no control over and is not responsible for information outside the Hewlett Packard Enterprise website.

Contents	3
About this document	5
Applicable products	5
Latest version available online	5
Command syntax notation conventions	5
About the examples	6
Identifying switch ports and interfaces	7
Identifying modular switch components	8
Link Aggregation	9
Overview	9
Aggregation group, member port, and aggregate interface	9
Link aggregation modes	10
LACP	10
LACP operating modes	10
LAG interface states	10
How static link aggregation groups are built	11
Reference port selection process	11
Setting the aggregation state of each member port	12
Setting the aggregation state of a member port in a static aggregation group	12
How dynamic link aggregation groups are built	12
Choosing a reference port	12
Setting the aggregation state of each member port	13
LAG configuration guidelines	13
Aggregation member interface restrictions	13
Requirements for adding interfaces	13
Layer 2 aggregation groups	14
Configuring a Layer 2 static aggregation group	14
Configuring a Layer 2 dynamic aggregation group	17
Layer 3 aggregation groups	20
Configuring a Layer 3 static aggregation group	20
Configuring a Layer 3 dynamic aggregation group	23
Removing a LAG	26
Removing an interface from a LAG	27
Changing the LAG membership for an interface	28
Configuration of an aggregate Interface	31
Configuring the description of an aggregate interface	31
Setting the MTU for a Layer 2 member link interface	32
Setting the MTU for a Layer 3 aggregate interface	32
Impact of shutting down or bringing up an aggregate interface	33
Shutting down an aggregate interface	33
Supported hashing algorithms	33
LACP configuration settings	33
Interface LACP settings	34
Configuration verification	34
BFD reports a LAG as down even when healthy links are still available	35
LACP and LAG commands	36

description	36
hash	37
interface lag	37
ip address	38
ipv6 address	39
lacp hash	40
lacp mode	40
lacp port-id	41
lacp port-priority	42
lacp rate	42
lacp system-priority	43
lag	44
show interface	45
show lacp aggregates	46
show lacp configuration	47
show lacp interfaces	48
shutdown	51
vlan trunk native	51
Smartlink	53
Guidelines and limitations	53
Smartlink commands	54
Configuration commands	54
smartlink group	54
smartlink recv-control-vlan	54
Group context commands	55
description	55
primary-port	56
smartlink group secondary-port	56
control-vlan	57
protected-vlans	57
preemption	58
preemption-delay	58
Display commands	59
show smartlink group	59
show smartlink group all	60
show smartlink group detail	60
show smartlink flush-statistics	61
clear smartlink group statistics	62
clear smartlink flush-statistics	62
show running-config	63
Supportability commands	64
show capacities smartlink	64
Support and Other Resources	65
Accessing Aruba Support	65
Accessing Updates	65
Aruba Support Portal	65
My Networking	66
Warranty Information	66
Regulatory Information	66
Documentation Feedback	66

This document describes features of the AOS-CX network operating system. It is intended for administrators responsible for installing, configuring, and managing Aruba switches on a network.

Applicable products

This document applies to the following products:

- Aruba 6100 Switch Series (JL675A, JL676A, JL677A, JL678A, JL679A)
- Aruba 6200 Switch Series (JL724A, JL725A, JL726A, JL727A, JL728A)
- Aruba 6300 Switch Series (JL658A, JL659A, JL660A, JL661A, JL662A, JL663A, JL664A, JL665A, JL666A, JL667A, JL668A, JL762A)
- Aruba 6400 Switch Series (JL741A, R0X26A, R0X27A, R0X29A, R0X30A)
- Aruba 8320 Switch Series (JL479A, JL579A, JL581A)
- Aruba 8325 Switch Series (JL624A, JL625A, JL626A, JL627A)
- Aruba 8360 Switch Series (JL700A, JL701A, JL702A, JL703A, JL706A, JL707A, JL708A, JL709A, JL710A, JL711A)
- Aruba 8400 Switch Series (JL375A, JL376A)

Latest version available online

Updates to this document can occur after initial publication. For the latest versions of product documentation, see the links provided in [Support and Other Resources](#).

Command syntax notation conventions

Convention	Usage
<code>example-text</code>	Identifies commands and their options and operands, code examples, filenames, pathnames, and output displayed in a command window. Items that appear like the example text in the previous column are to be entered exactly as shown and are required unless enclosed in brackets ([]).
example-text	In code and screen examples, indicates text entered by a user.

Convention	Usage
Any of the following: ■ <code><example-text></code> ■ <code><example-text></code> ■ <i>example-text</i> ■ <i>example-text</i>	Identifies a placeholder—such as a parameter or a variable—that you must substitute with an actual value in a command or in code: ■ For output formats where italic text cannot be displayed, variables are enclosed in angle brackets (< >). Substitute the text—including the enclosing angle brackets—with an actual value. ■ For output formats where italic text can be displayed, variables might or might not be enclosed in angle brackets. Substitute the text including the enclosing angle brackets, if any, with an actual value.
	Vertical bar. A logical OR that separates multiple items from which you can choose only one. Any spaces that are on either side of the vertical bar are included for readability and are not a required part of the command syntax.
{ }	Braces. Indicates that at least one of the enclosed items is required.
[]	Brackets. Indicates that the enclosed item or items are optional.
... or ...	Ellipsis: ■ In code and screen examples, a vertical or horizontal ellipsis indicates an omission of information. ■ In syntax using brackets and braces, an ellipsis indicates items that can be repeated. When an item followed by ellipses is enclosed in brackets, zero or more items can be specified.

About the examples

Examples in this document are representative and might not match your particular switch or environment. The slot and port numbers in this document are for illustration only and might be unavailable on your switch.

Understanding the CLI prompts

When illustrating the prompts in the command line interface (CLI), this document uses the generic term `switch`, instead of the host name of the switch. For example:

```
switch>
```

The CLI prompt indicates the current command context. For example:

```
switch>
```

Indicates the operator command context.

```
switch#
```

Indicates the manager command context.

```
switch (CONTEXT-NAME)#
```

Indicates the configuration context for a feature. For example:

```
switch (config-if) #
```

Identifies the `interface` context.

Variable information in CLI prompts

In certain configuration contexts, the prompt may include variable information. For example, when in the VLAN configuration context, a VLAN number appears in the prompt:

```
switch(config-vlan-100) #
```

When referring to this context, this document uses the syntax:

```
switch(config-vlan-<VLAN-ID>) #
```

Where *<VLAN-ID>* is a variable representing the VLAN number.

Identifying switch ports and interfaces

Physical ports on the switch and their corresponding logical software interfaces are identified using the format:

member/slot/port

On the 6100 Switch Series

- *member*: Always 1. VSF is not supported on this switch.
- *slot*: Always 1. This is not a modular switch, so there are no slots.
- *port*: Physical number of a port on the switch.

For example, the logical interface 1/1/4 in software is associated with physical port 4 on the switch.

On the 6200 Switch Series

- *member*: Member number of the switch in a Virtual Switching Framework (VSF) stack. Range: 1 to 8. The primary switch is always member 1. If the switch is not a member of a VSF stack, then member is 1.
- *slot*: Always 1. This is not a modular switch, so there are no slots.
- *port*: Physical number of a port on the switch.

For example, the logical interface 1/1/4 in software is associated with physical port 4 in slot 1 on member 1.

On the 6300 Switch Series

- *member*: Member number of the switch in a Virtual Switching Framework (VSF) stack. Range: 1 to 10. The primary switch is always member 1. If the switch is not a member of a VSF stack, then member is 1.
- *slot*: Always 1. This is not a modular switch, so there are no slots.
- *port*: Physical number of a port on the switch.

For example, the logical interface 1/1/4 in software is associated with physical port 4 on member 1.

On the 6400 Switch Series

- *member*: Always 1. VSF is not supported on this switch.
- *slot*: Specifies physical location of a module in the switch chassis.
 - Management modules are on the front of the switch in slots 1/1 and 1/2.
 - Line modules are on the front of the switch starting in slot 1/3.
- *port*: Physical number of a port on a line module.

For example, the logical interface 1/3/4 in software is associated with physical port 4 in slot 3 on member 1.

On the 83xx Switch Series

- *member*: Always 1. VSF is not supported on this switch.
- *slot*: Always 1. This is not a modular switch, so there are no slots.
- *port*: Physical number of a port on the switch.

For example, the logical interface 1/1/4 in software is associated with physical port 4 on the switch.



If using breakout cables, the port designation changes to x:y, where x is the physical port and y is the lane when split to 4 x 10G or 4 x 25G. For example, the logical interface 1/1/4:2 in software is associated with lane 2 on physical port 4 in slot 1 on member 1.

On the 8400 Switch Series

- *member*: Always 1. VSF is not supported on this switch.
- *slot*: Specifies physical location of a module in the switch chassis.
 - Management modules are on the front of the switch in slots 1/5 and 1/6.
 - Line modules are on the front of the switch in slots 1/1 through 1/4, and 1/7 through 1/10.
- *port*: Physical number of a port on a line module

For example, the logical interface 1/1/4 in software is associated with physical port 4 in slot 1 on member 1.

Identifying modular switch components

- Power supplies are on the front of the switch behind the bezel above the management modules. Power supplies are labeled in software in the format: *member/power supply*:
 - *member*: 1.
 - *power supply*: 1 to 4.
- Fans are on the rear of the switch and are labeled in software as: *member/tray/fan*:
 - *member*: 1.
 - *tray*: 1 to 4.
 - *fan*: 1 to 4.
- Fabric modules are not labeled on the switch but are labeled in software in the format: *member/module*:
 - *member*: 1.
 - *member*: 1 or 2.
- The display module on the rear of the switch is not labeled with a member or slot number.


Overview

Ethernet link aggregation bundles multiple physical Ethernet links into one logical link, called a link aggregation group (LAG).

Link aggregation has the following benefits:

- Increased bandwidth beyond the limits of any single link. In an aggregate link, traffic is distributed across the member ports.
- Improved link reliability. The member ports dynamically back up one another. When a member port fails, its traffic is automatically switched to other member ports. As shown in the following figure Device A and Device B are connected by three physical Ethernet links. These physical Ethernet links are combined into an aggregate link called link aggregation 1. The bandwidth of this aggregate link can reach up to the total bandwidth of the three physical Ethernet links. At the same time, the three Ethernet links back up one another. When a physical Ethernet link fails, the traffic originally intended for the failed link is switched to the remaining active links.

Ethernet link aggregation diagram

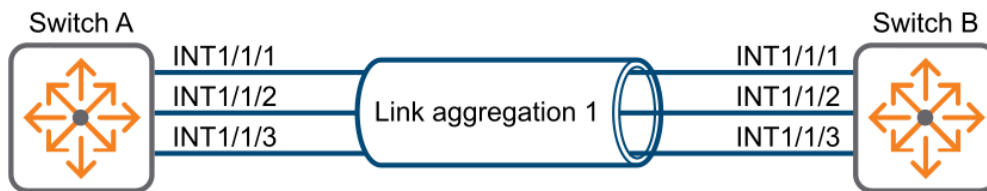

Aggregation group, member port, and aggregate interface

An aggregation group is a collection of physical interfaces that are bundled together for the purpose of load distribution and redundancy. These physical interfaces are called member ports. They are configured through a logical aggregate interface.

An aggregate interface can be one of the following types:

- **Layer 2:** The member ports of the corresponding Link Aggregation Group can only be Layer 2 Ethernet interfaces.
- **Layer 3:** The member ports of the corresponding Link Aggregation Group can only be Layer 3 interfaces.



Layer 3 aggregation groups are not supported on the 6100 and 6200 Switch Series.

The effective port rate of an aggregate interface equals the total rate of its member ports. Only full duplex mode members are eligible for aggregation.

Link aggregation modes

An aggregation group operates in one of the following modes:

- **Static LAG:** In the static LAG mode of operation, Link failure is not detected as there is no keep alive PDU communication between the devices. A misconfiguration on one side can cause much trouble and be difficult to troubleshoot, because no signaling takes place between the two peers.
- **Dynamic LAG or LACP:** The local device and the peer device automatically maintain the aggregation states of the member ports, resulting in link failure being quickly detected by exchanging the PDU. LACP reduces the workload of network administrators.

Dynamic LAG uses LACP packets to establish the association between two peers. This configuration results in the reduction of the misconfiguration probability. Also, link failures are intelligently handled by two participating devices through the LACP protocol, which is adaptive/dynamic to these network failures.

Layer 2 aggregation groups and Layer 3 aggregation groups support both the static and dynamic modes.

LACP

Dynamic aggregation is implemented through the IEEE 802.3ad Link Aggregation Control Protocol (LACP).

LACP uses LACPDUs to exchange aggregation information between LACP-enabled devices. Each member port in a dynamic aggregation group can exchange information with its peer. When a member port receives an LACPDU, it compares the received information with information received on the other member ports. In this way, the two systems agree on which ports are placed in Selected state.

The LACPDU fields convey data for the LACP functions, including:

- System LACP priority
- System MAC address
- Port priority
- Port number
- Operational key

LACP operating modes

LACP can operate in active or passive mode.

- **Active mode:** When the LACP is operating in active mode on either end of a link, both ports can send PDUs. The "active" LACP initiates an LACP connection by sending LACPDUs. The "passive" LACP will wait for the remote end to initiate the link.
- **Passive mode:** When the LACP is operating in passive mode on a local member port and as its peer port, both ports cannot send PDUs.



Two peer ports operating in "passive" mode will never establish an LACP link.

For an LACP LAG, one side must have LACP in active mode and the peer must have an LACP configuration of active or passive mode. If you do not enable LACP on a LAG, it is treated as a static LAG and the peer cannot negotiate LACP with the LAG.

LAG interface states

The output from the CLI commands `show lacp interfaces` and `show lacp interfaces multi-chassis` display the following interface states:

Interface state	Description
A - Active	An active LACP interface.
C - Collecting	Data frames are received through the aggregate link and sent onto the intended destination.
D - Distributing	Data frames are transmitted through the aggregate link to reach the intended destination.
F - Aggregable	The link can be used as part of an aggregate.
E - Default neighbor state	The link has the default state of the neighbor switch.
I - Individual	The link is used as an individual link.
L - Long-timeout	With the long timeout, an LACPDU is sent every 30 seconds. If no response comes from its partner after three LACPDU are sent (90 seconds), a timeout event occurs. The LACP state machine then transitions to the appropriate state based on its current state.
N - InSync	The physical port is connected to the aggregate port that was last chosen by the logical election. The state variable selected is still true.
O - OutofSync	The hardware might be out of sync with the modified protocol information. If the hardware also has a status of collecting, do not transmit frames because they will be misdelivered.
P - Passive	The port participates in the protocol, as long as it has an active partner.
S - Short-timeout	In the short timeout configuration, an LACPDU is sent every second. If no response comes from its partner after three LACPDU are sent, a timeout event occurs. The LACP state machine then transitions to the appropriate state based on its current state.
X - State m/c expired	The "current while" timer has expired. The "current while" timer then restarts with the short-timeout enabled. The term <code>State m/c</code> refers to a state machine.

How static link aggregation groups are built

Reference port selection process


When setting the aggregation states of the ports in an aggregation group, the system automatically chooses a member port as the reference port. A selected port must have the same operational key and attribute configurations as the reference port.

The system chooses a reference port from the member ports in the up state. The first member interface which is operationally up is selected as reference port.

Setting the aggregation state of each member port

After the reference port is chosen, the system sets the aggregation state of each member port in the static aggregation group.

Setting the aggregation state of a member port in a static aggregation group

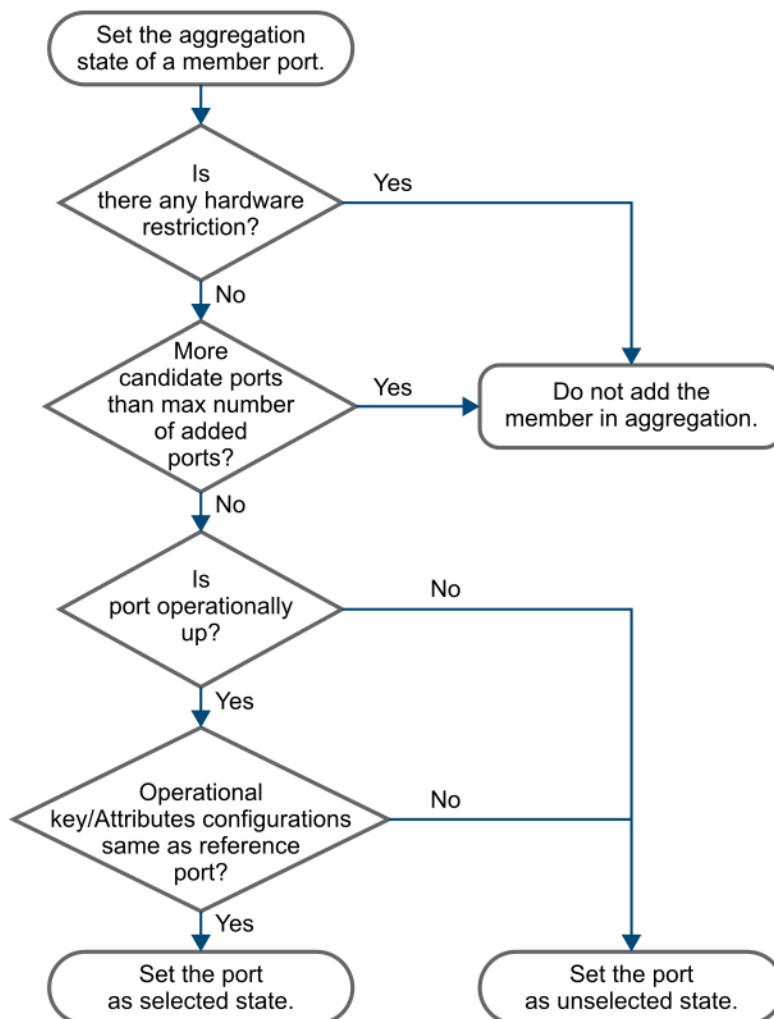

After the maximum limit of members is reached in a LAG, an additional port cannot be added to the aggregation group. If a port belongs to a card type with a different speed than the other aggregation members, the port can still be added to the aggregation group. If dynamic LAG is enabled, any port member with a speed different than other aggregation members is blocked or ineligible from the same aggregation group. Any operational keys/attributes or configuration changes might affect the aggregation states of the member ports.

How dynamic link aggregation groups are built

Choosing a reference port

The system chooses a reference port from the member ports in up state. A selected port must have the same operational key and attribute configurations as the reference port.

The process by which the local system (the actor) and the peer system (the partner) negotiate a reference port occurs as follows:

1. The two systems determine the system with the smaller system ID. A system ID contains the system LACP priority and the system MAC address.
 - a. The two systems compare their LACP priority values.

The lower the LACP priority, the smaller the system ID. If the LACP priority values are the same, the two systems proceed to step b.
 - b. The two systems compare their MAC addresses.

The lower the MAC address, the smaller the system ID.
2. The system with the smaller system ID chooses the first operationally up port as the reference port. A port ID contains a port priority and a port number. The lower the port priority, the smaller the port ID.

Setting the aggregation state of each member port

After the reference port is chosen, the system with the smaller system ID sets the state of each member port on its side.

The system with the greater system ID can detect the aggregation state changes on the peer system. The system with the greater system ID sets the aggregation state of local member ports the same as their peer ports.

When you aggregate interfaces in dynamic mode, follow these guidelines:

- A dynamic link aggregation group chooses only full-duplex ports as the selected ports.
- For stable aggregation and service continuity, do not change the operational key or attribute configurations on any member port.

LAG configuration guidelines

Aggregation member interface restrictions

- If any features in the following list are configured on the interface, you cannot assign an interface to a Layer 2 aggregation group:
 - MAC authentication
 - Port security
 - 802.1X
- Do not assign a reflector port for port mirroring to an aggregation group.

Requirements for adding interfaces

Keep in mind the following requirements when adding interfaces to a LAG:

- To determine the maximum number of LAG interfaces for your type of switch, look at the output from the `show capacities lag` command; however, the number of LAGs that can be created depends on the availability of the physical interface since each LAG interface needs at least one physical interface as a member link. After the maximum limit of members is reached in a LAG, an additional port cannot be added to the aggregation group. If a port belongs to a card type with a different speed than the other

aggregation members, the port can still be added to the aggregation group. If dynamic LAG is enabled, any port member with a speed different than other aggregation members is blocked or ineligible from the same aggregation group. Any operational keys/attributes or configuration changes might affect the aggregation states of the member ports.

- The nondefaults configuration on an interface is removed automatically when the interface is added to a link aggregation. For example: Assume that you remove a member interface from an existing LAG and add it to another LAG. The software removes the nondefault configurations on the interface when it is added to the new LAG.

Configuration consistency requirements

- Configure at least one active mode aggregation in two devices.
- For a successful static aggregation, make sure the ports at both ends of each link are in the same aggregation state.
- For a successful dynamic aggregation, make sure the peer ports of the ports aggregated at one end are also aggregated, and that one of the ends is configured as "active". The two ends can automatically negotiate the aggregation state of each member port.

Removing interfaces

- Deleting an aggregate interface also deletes its aggregation group and causes all member ports to leave the aggregation group.
- When a member interface is removed from a LAG:
 - **6100, 6200, 6300, and 6400 switches:** The interface goes to its default status of `unshut`.
 - **8320, 8325, 8360, or 8400 switches:** The interface becomes disabled.

Disabling an interface

When an interface LAG is disabled with the `shutdown` command, all its members also become operationally down.

Layer 2 aggregation groups

All switches support static and dynamic layer 2 aggregation groups.



On the 6400 Switch Series, port identification differs. Line card ports start at 1/3/1.

Configuring a Layer 2 static aggregation group

Prerequisites

You must be in the global configuration context: `switch(config)#`.

Procedure

1. Create a Layer 2 aggregate interface and access the Layer 2 aggregate interface view by entering:

```
switch(config)# interface lag <ID>
```

The range of the LAG interface ID is 1 to 256.

While creating the Layer 2 aggregate interface, the system automatically creates a Layer 2 static aggregation group numbered the same.

2. Set the operational state of every interface in the LAG to up by entering:

```
switch(config-lag-if) # no shutdown
```



This command does not impact the administrative state of the member interfaces because the command was entered at the level of the LAG. To change the administrative state of a member interface, enter the command at the interface level. For example:

```
switch(config) # interface 1/1/2  
switch(config-if) # no shutdown
```

3. On the 8320, 8325, 8360, and 8400, disable routing by entering:

```
switch(config-lag-if) # no routing
```

See the *Command-Line Interface Guide* for your switch and software version for more information about the `no routing` command.



On the 6100 and 6200 Switch Series, routing is not supported on physical interfaces.

On the 6300 and 6400 Switch Series, routing is disabled by default.

4. Assign a native VLAN ID to a trunk interface on the LAG by entering:

```
switch(config-lag-if) # vlan trunk native <VLAN-ID>
```

For example:

```
switch(config-lag-if) # vlan trunk native 1
```

5. Use the following steps to add a maximum of 16 interfaces to the LAG:
 - a. To assign an interface to the LAG:

```
switch(config-lag-if) # interface <PORT-ID>
```

To assign a range of interfaces to a LAG:

```
switch(config-lag-if) # interface <PORT-ID>-<PORT-ID>
```

For example:

```
switch(config-lag-if) # interface 1/1/1-1/1/4
```

See the *Command-Line Interface Guide* for your switch and software version for more information about the `interface <PORT-ID>` command.

- b. Assign an ID to the LAG:

```
switch(config-if) # lag <ID>
```

For example:

```
switch(config-if-<1/1/1-1/1/4>) # lag 100
```

- c. Set the administrative state of the member interface to up:

```
switch(config-if-<1/1/1-1/1/4>) # no shutdown
```

6. View the configuration by entering the following:

For 6100, 6200, 6300, and 6400 switch series:

```
switch(config-if-<1/1/1-1/1/4>) # show running-config

Current configuration:
!
vlan 1
interface lag 100
    no shutdown
    vlan trunk native 1
    vlan trunk allowed all
interface 1/1/1
    no shutdown
    lag 100
interface 1/1/2
    no shutdown
    lag 100
interface 1/1/3
    no shutdown
    lag 100
interface 1/1/4
    no shutdown
    lag 100

switch(config-if-<1/1/1-1/1/4>) # show lacp aggregates

Aggregate name      : lag100
Interfaces          : 1/1/3 1/1/1 1/1/4 1/1/2
Heartbeat rate      : N/A
Hash                : 13-src-dst
Aggregate mode      : Off
```


For 8320, 8325, 8360, and 8400 switch series:

```
switch(config-if-<1/1/1-1/1/4>)# show running-config

Current configuration:
!
vlan 1
interface lag 100
    no shutdown
    no routing
    vlan trunk native 1
    vlan trunk allowed all
interface 1/1/1
    no shutdown
    lag 100
interface 1/1/2
    no shutdown
    lag 100
interface 1/1/3
    no shutdown
    lag 100
interface 1/1/4
    no shutdown
    lag 100

switch(config-if-<1/1/1-1/1/4>)# show lacp aggregates

Aggregate name      : lag100
Interfaces          : 1/1/3 1/1/1 1/1/4 1/1/2
Heartbeat rate      : N/A
Hash                : l3-src-dst
Aggregate mode      : Off
```

Configuring a Layer 2 dynamic aggregation group

Prerequisites

You must be in the global configuration context: `switch(config)#`.

Procedure

1. Create a Layer 2 aggregate interface and access the Layer 2 aggregate interface view by entering:

```
switch(config)# interface lag <ID>
```

The range of the LAG interface ID is 1 to 256.

While creating the Layer 2 aggregate interface, the system automatically creates a Layer 2 dynamic aggregation group numbered the same.

2. Set the operational state of every interface in the LAG to up by entering:

```
switch(config-lag-if)# no shutdown
```



This command does not impact the administrative state of the member interfaces because the command was entered at the level of the LAG. To change the administrative state of a member interface, enter the command at the interface level. For example:

```
switch(config)# interface 1/1/2  
switch(config-if)# no shutdown
```

3. On the 8320, 8325, 8360, and 8400, disable routing by entering:

```
switch(config-lag-if)# no routing
```

See the *Command-Line Interface Guide* for your switch and software version for more information about the `no routing` command.



On the 6100 and 6200 Switch Series, routing is not supported on physical interfaces.

On the 6300 and 6400 Switch Series, routing is disabled by default.

4. Configure the aggregation group to operate in dynamic mode by entering:

```
switch(config-lag-if)# lACP mode {active | passive}
```

For example:

```
switch(config-lag-if)# lACP mode active
```

5. Configure the aggregation group to operate in fast or slow mode by entering:

```
switch(config-lag-if)# lACP rate {fast | slow}
```

For example:

```
switch(config-lag-if)# lACP rate fast
```

6. Assign a native VLAN ID to a trunk interface by entering:

```
switch(config-lag-if)# vlan trunk native <VLAN-ID>
```

For example:

```
switch(config-lag-if)# vlan trunk native 1
```

7. Use the following steps to add a maximum of 16 interfaces to the LAG:
 - a. To assign an interface to the LAG:

```
switch(config-lag-if) # interface <PORT-ID>
```

To assign a range of interfaces to a LAG:

```
switch(config-lag-if) # interface <PORT-ID>-<PORT-ID>
```

For example:

```
switch(config-lag-if) # interface 1/1/1-1/1/4
```

See the *Command-Line Interface Guide* for your switch and software version for more information about the `interface <PORT-ID>` command.

- b. Assign an ID to the LAG:

```
switch(config-if) # lag <ID>
```

For example:

```
switch(config-if-<1/1/1-1/1/4>) # lag 20
```

- c. Set the administrative state of the member interface to up:

```
switch(config-if-<1/1/1-1/1/4>) # no shutdown
```

8. View the configuration by entering:

For 6100, 6200, 6300, and 6400 switch series:

```
switch(config-if-<1/1/1-1/1/4>) # show running-config

Current configuration:
!
vlan 1
interface lag 20
    no shutdown
    vlan trunk native 1
    vlan trunk allowed all
    lacp mode active
    lacp rate fast
interface 1/1/1
    no shutdown
    lag 20

switch(config-if-<1/1/1-1/1/4>) # show lacp aggregates

Aggregate name      : lag100
Interfaces          : 1/1/3 1/1/1 1/1/4 1/1/2
```

```
Heartbeat rate   : Fast
Hash             : l3-src-dst
Aggregate mode   : Active
```

For 8320, 8325, 8360, and 8400 switch series:

```
switch(config-if-<1/1/1-1/1/4>)# show running-config

Current configuration:
!
vlan 1
interface lag 20
    no shutdown
    no routing
    vlan trunk native 1
    vlan trunk allowed all
    lacp mode active
    lacp rate fast
interface 1/1/1
    no shutdown
    lag 20

switch(config-if-<1/1/1-1/1/4>)# show lacp aggregates

Aggregate name   : lag100
Interfaces       : 1/1/3 1/1/1 1/1/4 1/1/2
Heartbeat rate   : Fast
Hash            : l3-src-dst
Aggregate mode    : Active
```

Layer 3 aggregation groups

Layer 3 aggregation groups are supported on all switch series except 6100 and 6200 Switch Series.

Configuring a Layer 3 static aggregation group

Prerequisites

You must be in the global configuration context: `switch(config)#`.

Procedure

1. Create a Layer 3 aggregate interface and access the Layer 3 aggregate interface view by entering:

```
switch(config)# interface lag <ID>
```

The range of the LAG interface ID is 1 to 256.

While creating the Layer 3 aggregate interface, the system automatically creates a Layer 3 static aggregation group numbered the same.

2. Set the operational state of every interface in the LAG to up by entering:

- For 6300 and 6400 switch series:

```
switch(config-lag-if) # no shutdown  
switch(config-lag-if) # routing
```

This command does not impact the administrative state of the member interfaces because the command was entered at the level of the LAG. To change the administrative state of a member interface, enter the command at the interface level. For example:



```
switch(config) # interface 1/1/2  
switch(config-if) # no shutdown  
switch(config-if) # routing
```

- For 8320, 8325, 8360, and 8400 switch series:

```
switch(config-lag-if) # no shutdown
```

This command does not impact the administrative state of the member interfaces because the command was entered at the level of the LAG. To change the administrative state of a member interface, enter the command at the interface level. For example:



```
switch(config) # interface 1/1/2  
switch(config-if) # no shutdown
```

3. Set the IP address on the LAG interface by entering:

```
switch(config-lag-if) # ip address <IPV4-ADDR>/<MASK>
```

For example:

```
switch(config-lag-if) # ip address 192.0.2.1/30
```

4. Use the following steps to add a maximum of 16 interfaces to the LAG:

- a. To assign an interface to the LAG:

```
switch(config-lag-if) # interface <PORT-ID>
```

To assign a range of interfaces to a LAG:

```
switch(config-lag-if) # interface <PORT-ID>-<PORT-ID>
```

For example:

```
switch(config-lag-if) # interface 1/1/1-1/1/4
```

See the *Command-Line Interface Guide* for your switch and software version for more information about the `interface <PORT-ID>` command.

- b. Assign an ID to the LAG:

```
switch(config-if) # lag <ID>
```

For example:

```
switch(config-if-<1/1/1-1/1/4>) # lag 100
```

- c. Set the administrative state of the member interface to up:

```
switch(config-if-<1/1/1-1/1/4>) # no shutdown
```

5. View the configuration by entering the following:

For 6300 and 6400 switch series:

```
switch(config-if-<1/1/1-1/1/4>) # show running-config

Current configuration:
!
vlan 1
interface lag 100
    no shutdown
    routing
    ip address 192.0.2.1/30
interface 1/1/1
    no shutdown
    lag 100
interface 1/1/2
    no shutdown
    lag 100
interface 1/1/3
    no shutdown
    lag 100
interface 1/1/4
    no shutdown
    lag 100

switch(config-if-<1/1/1-1/1/4>) # show lacp aggregates

Aggregate name      : lag100
Interfaces          : 1/1/3 1/1/1 1/1/4 1/1/2
Heartbeat rate      : N/A
Hash                : 13-src-dst
Aggregate mode      : Off
```

For 8320, 8325, 8360, and 8400 switch series:

```
switch(config-if-<1/1/1-1/1/4>)# show running-config

Current configuration:
!
vlan 1
interface lag 100
    no shutdown
    ip address 192.0.2.1/30
interface 1/1/1
    no shutdown
    lag 100
interface 1/1/2
    no shutdown
    lag 100
interface 1/1/3
    no shutdown
    lag 100
interface 1/1/4
    no shutdown
    lag 100

switch(config-if-<1/1/1-1/1/4>)# show lacp aggregates

Aggregate name      : lag100
Interfaces          : 1/1/3 1/1/1 1/1/4 1/1/2
Heartbeat rate      : N/A
Hash                : l3-src-dst
Aggregate mode      : Off
```

Configuring a Layer 3 dynamic aggregation group

Prerequisites

You must be in the global configuration context: `switch(config)#`.

Procedure

1. Create a Layer 3 aggregate interface and access the Layer 3 aggregate interface view by entering:

```
switch(config)# interface lag <ID>
```

The range of the LAG interface ID is 1 to 256.

While creating the Layer 3 aggregate interface, the system automatically creates a Layer 3 dynamic aggregation group numbered the same.

2. Set the operational state of every interface in the LAG to up by entering:
 - For 6300 and 6400 switch series:

```
switch(config-lag-if)# no shutdown
switch(config-lag-if)# routing
```

This command does not impact the administrative state of the member interfaces because the command was entered at the level of the LAG. To change the administrative state of a member interface, enter the command at the interface level. For example:



```
switch(config)# interface 1/1/2
switch(config-if)# no shutdown
switch(config-if)# routing
```

- For 8320, 8325, 8360, and 8400 switch series:

```
switch(config-lag-if)# no shutdown
```

This command does not impact the administrative state of the member interfaces because the command was entered at the level of the LAG. To change the administrative state of a member interface, enter the command at the interface level. For example:



```
switch(config)# interface 1/1/2
switch(config-if)# no shutdown
```

3. Configure the aggregation group to operate in dynamic mode by entering:

```
switch(config-lag-if)# lACP mode {active | passive}
```

For example:

```
switch(config-lag-if)# lACP mode active
```

4. Configure the aggregation group to operate in fast or slow mode by entering:

```
switch(config-lag-if)# lACP rate {fast | slow}
```

For example:

```
switch(config-lag-if)# lACP rate fast
```

5. Set the IP address on the LAG interface by entering:

```
switch(config-lag-if)# ip address <IPV4-ADDR>/<MASK>
```

For example:


```
switch(config-lag-if) # ip address 192.0.3.1/30
```

6. Use the following steps to add a maximum of 16 interfaces to the LAG:
 - a. To assign an interface to the LAG:

```
switch(config-lag-if) # interface <PORT-ID>
```

To assign a range of interfaces to a LAG:

```
switch(config-lag-if) # interface <PORT-ID>-<PORT-ID>
```

For example:

```
switch(config-lag-if) # interface 1/1/1-1/1/4
```

See the *Command-Line Interface Guide* for your switch and software version for more information about the `interface <PORT-ID>` command.

- b. Assign an ID to the LAG:

```
switch(config-if) # lag <ID>
```

For example:

```
switch(-<1/1/1-1/1/4>) # lag 100
```

- c. Set the administrative state of the member interface to up:

```
switch(-<1/1/1-1/1/4>) # no shutdown
```

7. View the configuration by entering:

For 6300 and 6400 switch series:

```
switch(config-if-<1/1/1-1/1/4>) # show running-config  
  
Current configuration:  
!  
vlan 1  
interface lag 100  
    no shutdown  
    routing  
    ip address 192.0.3.1/30  
    lacp mode active  
    lacp rate fast  
interface 1/1/1  
    no shutdown  
    lag 100  
interface 1/1/2
```

```

        no shutdown
        lag 100
interface 1/1/3
    no shutdown
    lag 100
interface 1/1/4
    no shutdown
    lag 100

switch(config-if-<1/1/1-1/1/4>)# show lacp aggregates

Aggregate name      : lag100
Interfaces          : 1/1/3 1/1/1 1/1/4 1/1/2
Heartbeat rate      : Fast
Hash                : l3-src-dst
Aggregate mode      : Active

```

For 8320, 8325, 8360, and 8400 switch series:

```

switch(config-if-<1/1/1-1/1/4>)# show running-config

Current configuration:
!
vlan 1
interface lag 100
    no shutdown
    ip address 192.0.3.1/30
    lacp mode active
    lacp rate fast
interface 1/1/1
    no shutdown
    lag 100
interface 1/1/2
    no shutdown
    lag 100
interface 1/1/3
    no shutdown
    lag 100
interface 1/1/4
    no shutdown
    lag 100

switch(config-if-<1/1/1-1/1/4>)# show lacp aggregates

Aggregate name      : lag100
Interfaces          : 1/1/3 1/1/1 1/1/4 1/1/2
Heartbeat rate      : Fast
Hash                : l3-src-dst
Aggregate mode      : Active

```

Removing a LAG

Prerequisites

You must be in the global configuration context: `switch(config)#`.

Procedure

Delete the LAG. Enter:

```
switch(config)# no interface lag <ID>
```

For example:

```
switch(config)# no interface lag 100
```

All interfaces assigned to the LAG are automatically removed from the LAG as part of the deletion process of the LAG. After removing a physical interface from a LAG,

- **6100, 6200, 6300, and 6400 switches:** The interface associated with the LAG becomes layer 2 ports with the default layer 2 configurations and `admin` status enabled.
- **8320, 8235, 8360, and 8400 switches:** The interface associated with the LAG becomes layer 3 ports with default layer 3 configurations and administrative down.

Removing an interface from a LAG

Prerequisites

You must be in the global configuration context: `switch(config)#`.

Procedure

Remove an interface from the LAG. Enter:

```
switch(config)# interface <PORT-NUM>  
switch(config-if)# no lag <ID>
```

For example:

```
switch(config)# interface 1/1/1  
switch(config-if)# no lag 100  
switch(config-if)# show running-config  
...  
!  
vlan 1  
interface lag 100  
interface 1/1/1  
interface 1/1/2  
    lag 100  
switch(config-if)#
```

To assign a range of interfaces to a LAG:

```
switch(config-lag-if)# interface <PORT-ID>-<PORT-ID>
```

For example:

```
switch(config-lag-if)# interface 1/1/1-1/1/4
```

After removing a physical interface from a LAG:

- **6100, 6200, 6300, and 6400 switches:** The interface associated with LAG becomes layer 2 ports with default layer 2 configurations and with admin status of `enabled`
- **8320, 8325, 8360, and 8400 switches:** The interface associated with the LAG becomes L3 ports with default L3 configurations and administrative down. For example, suppose interface 1/1/1 was part of LAG 3 and you had administratively enabled the interface. If you later remove interface 1/1/1 from LAG 3, the administrative status automatically changes to down. If you want to use the interface again, you must administratively enable it again.

Changing the LAG membership for an interface

Prerequisites

You must be in the global configuration context: `switch(config)#`.

Procedure

1. Remove an interface from the LAG. Enter:

```
switch(config)# interface <PORT-NUM>
switch(config-if)# no lag <ID>
```

For example:

For 6100, 6200, 6300, and 6400 switch series:

```
switch(config)# interface 1/1/1
switch(config-if)# no lag 100
switch(config-if)# show running-config
Current configuration:
!
...
!
vlan 1
interface lag 100
    no shutdown
    vlan trunk native 1
    vlan trunk allowed all
interface 1/1/1
interface 1/1/2
    no shutdown
    lag 100
switch(config-if)#
```

For 8320, 8325, 8360, and 8400 switch series:

```
switch(config)# interface 1/1/1
switch(config-if)# no lag 100
switch(config-if)# show running-config
Current configuration:
!
...
!
```

```
vlan 1
interface lag 100
    no shutdown
    no routing
    vlan trunk native 1
    vlan trunk allowed all
interface 1/1/1
interface 1/1/2
    no shutdown
    lag 100
switch(config-if) #
```

After removing a physical interface from a LAG, the interface associated with the LAG becomes L3 ports with default L3 configurations and administrative down. For example, suppose interface 1/1/1 was part of LAG 3 and you had administratively enabled the interface. If you later remove interface 1/1/1 from LAG 3, the administrative status automatically changes to down. If you want to use the interface again, you must administratively enable it again.

On 6100 and 6200 Switch Series, after removing a physical interface from a LAG, the interface associated with the LAG becomes layer 2 ports with default layer 2 configurations and `admin` status enabled.

2. Create the LAG to which you want to add the interface:

```
switch(config-if) # interface lag 10
```

For example:

For 6100, 6200, 6300, and 6400 switch series:

```
switch(config-if) # interface lag 10
switch(config-lag-if) # no shutdown
switch(config-lag-if) # vlan trunk native 1
```

For 8320, 8325, 8360, and 8400 switch series:

```
switch(config-if) # interface lag 10
switch(config-lag-if) # no shutdown
switch(config-lag-if) # no routing
switch(config-lag-if) # vlan trunk native 1
```

3. Add the interface from Step 1 to the newly created LAG:

```
switch(config) # interface 1/1/1
switch(config-if) # lag 10
```

For example:

For 6100, 6200, 6300, and 6400 switch series:

```
switch(config) # interface 1/1/1
switch(config-if) # lag 10
```

```

switch(config-if)# show running-config
Current configuration:
!
...
!
vlan 1
interface lag 10
    no shutdown
    vlan trunk native 1
    vlan trunk allowed all
interface lag 100
    no shutdown
    vlan trunk native 1
    vlan trunk allowed all
interface 1/1/1
    lag 10
interface 1/1/2
    no shutdown
    lag 100

```

For 8320, 8325, 8360, and 8400 switch series:

```

switch(config)# interface 1/1/1
switch(config-if)# lag 10
switch(config-if)# show running-config
Current configuration:
!
...
!
vlan 1
interface lag 10
    no shutdown
    no routing
    vlan trunk native 1
    vlan trunk allowed all
interface lag 100
    no shutdown
    no routing
    vlan trunk native 1
    vlan trunk allowed all
interface 1/1/1
    lag 10
interface 1/1/2
    no shutdown
    lag 100

```

Notice that interface 1/1/1 in the previous example is still not active, even though it has been added to LAG 10. To change the administrative state of the member interface, enter the `no shutdown` command at the interface level.

For example:

For 6100, 6200, 6300, and 6400 switch series:

```

switch(config-if)# interface 1/1/1
switch(config-if)# no shutdown
switch(config-if)# show running-config
Current configuration:

```

```

!
...
!
vlan 1
interface lag 10
    no shutdown
    vlan trunk native 1
    vlan trunk allowed all
interface lag 100
    no shutdown
    vlan trunk native 1
    vlan trunk allowed all
interface 1/1/1
    no shutdown
    lag 10
interface 1/1/2
    no shutdown
    lag 100

```

For 8320, 8325, 8360, and 8400 switch series:

```

switch(config-if)# interface 1/1/1
switch(config-if)# no shutdown
switch(config-if)# show running-config
Current configuration:
!
...
!
vlan 1
interface lag 10
    no shutdown
    no routing
    vlan trunk native 1
    vlan trunk allowed all
interface lag 100
    no shutdown
    no routing
    vlan trunk native 1
    vlan trunk allowed all
interface 1/1/1
    no shutdown
    lag 10
interface 1/1/2
    no shutdown
    lag 100

```

Configuration of an aggregate Interface

Configuring the description of an aggregate interface

You can configure the description of an aggregate interface for administration purposes, for example, describing the purpose of the interface.

Prerequisites

You must be in the global configuration context: `switch(config)#`.

Procedure

1. Create a Layer 3 aggregate interface and enter Layer 3 aggregate interface view by entering:

```
switch(config)# interface lag <ID>
```

2. Configure the description of the aggregate interface:

```
switch(config-if)# description <text>
```

Setting the MTU for a Layer 2 member link interface

Prerequisites

You must be in the global configuration context: `switch(config)#`.

Procedure

1. Enter a Layer 2 member link interface view by entering:

```
switch(config)# interface <INTERFACE-ID>
```

2. Set the MTU for the Layer 2 member link interface:

```
switch(config-if)# mtu <VALUE>
```

See the *Command-Line Interface Guide* for your switch and software version for more information about the `mtu <VALUE>` command. When allowing jumbo frames under a layer 2 aggregation interface, make sure that the MTU value is set appropriately under all member interfaces.

Setting the MTU for a Layer 3 aggregate interface



Layer 3 aggregation groups are not supported on the 6100 and 6200 Switch Series.

The MTU of an interface affects IP packets fragmentation and reassembly on the interface.

Prerequisites

You must be in the global configuration context: `switch(config)#`.

Procedure

1. Enter Layer 3 aggregate interface view by entering:

```
switch(config)# interface lag <INTERFACE-ID>
```

2. Set the MTU for the Layer 3 aggregate interface:

```
switch(config-lag-if)# ip mtu <VALUE>
```


See the *Command-Line Interface Guide* for your switch and software version for more information about the `ip mtu <VALUE>` command. When allowing jumbo frames under a layer 2 aggregation interface, make sure that the MTU value is set appropriately under all member interfaces.



If the IP MTU is configured as 9198, the MTU on the physical interfaces must also be configured as 9198.

Impact of shutting down or bringing up an aggregate interface

By default, an aggregate interface is down. Shutting down or bringing up an aggregate interface affects the aggregation states and link states of member ports in the corresponding aggregation group as follows:

- When an aggregate interface is shut down, all Selected ports in the corresponding aggregation group become Unselected ports and all member ports go to an operationally down state.
- When an aggregate interface is brought up, the aggregation states of member ports in the corresponding aggregation group are recalculated. LAG members, which are administratively up, will become operationally up. The members that are not administratively up will be in the same state and not made eligible for aggregation.

Shutting down an aggregate interface

Prerequisites

You must be in the global configuration context: `switch(config)#`.

Procedure

Enter the Layer 3 aggregate interface view by entering:

```
switch(config)# interface lag <ID>
```

Shut down the aggregate interface:

```
switch(config-lag-if)# shutdown
```

Supported hashing algorithms

- Source MAC and destination MAC
- Source IP and destination IP
- Source port and destination port.

LACP configuration settings

Task	Command	Example
Setting the LACP mode to active or passive.	<code>lacp mode {active passive}</code>	<code>switch(config-lag-if)# lacp mode active</code>

Task	Command	Example
Setting the LACP mode to off.	<code>no lacp mode {active passive}</code>	<code>switch(config-lag-if)# no lacp mode active</code>
Setting the hash type.	For 6100 and 8400 Switch Series: <pre>lacp hash [l2-src-dst l3-src-dst l4-src-dst]</pre> For 8320, 8325, 6200, 6300, and 6400 Switch Series: <pre>hash [l2-src-dst l3-src-dst l4-src-dst]</pre>	For 6100 and 8400 Switch Series: <pre>switch(config)# lacp hash l2-src-dst</pre> For 8320, 8325, 6200, 6300, and 6400 Switch Series: <pre>switch(config-lag-if)# hash l2-src-dst</pre>
Setting the LACP rate to fast.	<code>lacp rate fast</code>	<pre>switch(config)# interface lag 1</pre> <pre>switch(config-lag-if)# lacp rate fast</pre>
Setting the LACP rate to slow.	<code>lacp rate slow</code>	<pre>switch(config)# interface lag 1</pre> <pre>switch(config-lag-if)# lacp rate slow</pre>
Applying shutdown on the LAG port.	<code>shutdown</code>	<pre>switch(config)# interface lag 1</pre> <pre>switch(config-lag-if)# shutdown</pre>
Resetting every interface in the LAG to the default (up)	<code>no shutdown</code>	<code>switch(config-lag-if)# no shutdown</code>

Interface LACP settings

Task	Command	Example
Setting the LACP port ID.	<code>lacp port-id <ID></code>	<code>switch(config-if)# lacp port-id 100</code>
Setting the LACP port ID to the default.	<code>no lacp port-id</code>	<code>switch(config-if)# no lacp port-id</code>
Setting the LACP port priority.	<code>lacp port-priority <PORT-PRIORITY></code>	<code>switch(config-if)# lacp port-priority 100</code>
Setting the LACP port priority to the default	<code>no lacp port-priority</code>	<code>switch(config-if)# no lacp port-priority</code>

Configuration verification

Task	Command	Example
Viewing LACP global information	show lacp configuration	<pre>switch# show lacp configuration System-id : 70:72:cf:ef:fc:d9 System-priority : 65534 Hash : 13-src-dst</pre> The output displayed for the show lacp configuration is from the 8400 series switch.
Viewing LACP aggregate information	show lacp aggregates	<pre>switch# show lacp aggregates Aggregate-name : lag100 Aggregated-interfaces : 1/1/2 Heartbeat rate : N/A Hash : 13-src-dst Aggregate mode : off Aggregate-name : lag110 Aggregated-interfaces : 1/1/1, 1/1/3 Heartbeat rate : slow Hash : 13-src-dst Aggregate mode : active</pre>
Viewing LACP aggregate information for a LAG	show lacp aggregates lag100	<pre>switch# show lacp aggregates lag100 Aggregate-name : lag100 Aggregated-interfaces : Heartbeat rate : N/A Hash : 13-src-dst Aggregate mode : off</pre>
Viewing LACP interface details	show lacp interfaces	<pre>switch# show lacp interfaces</pre> The output is too wide to display in a column. The command output is provided in the CLI topic for the command.

BFD reports a LAG as down even when healthy links are still available

Symptom



BFD is not supported on the 6100 and 6200 Switch Series.

The Bidirectional Forward Detection (BFD) feature reports a Link Aggregation (LAG), as being down, even though there are healthy LAG links available. The LAG, containing the downed link, will eventually rebalance the traffic to its other links.

Cause

This notification occurs when the minimum BFD control packet reception interval is set at a faster rate than the Link Aggregation Control Protocol (LACP) rate and LAG rebalancing occurs. BFD assumes that the link is down without realizing that the LAG is rebalancing the traffic load.

Action

Set the minimum BFD control packet reception interval to a slower rate than the LACP rate or set the LACP rate to a faster rate than the minimum BFD control packet reception interval.

1. To find the current settings of the minimum BFD control packet reception interval, enter the `show running-config` command.
The minimum BFD control packet reception interval setting is listed as `bfd min-receive-interval` in the command output and the measurement is in ms.
2. To find the current rate of LACP, enter the `show lacp aggregates` command.
The LACP rate is listed as the `Heartbeat rate` in the command output.
3. To change the minimum BFD control packet reception interval, enter the `bfd min-receive-interval` command.
4. To change the LACP rate, enter the `lacp rate {fast | slow}` command.

LACP and LAG commands

description

Syntax

```
description <TEXT>
```

```
no description <TEXT>
```

Description

Provides a brief description of the LAG interface. The description text is saved in the configuration of the LAG. It is available even after a reboot.

The `no` form of this command removes the description of the LAG interface from the configuration.

Command context

```
config-lag-if
```

Parameters

<TEXT>

Specifies the description of the LAG interface.

Authority

Administrators or local user group members with execution rights for this command.

Example

```
switch(config)# interface lag 10
switch(config-lag-if)# description This LAG is used for an example.
switch(config-lag-if)# show running-config
...
```

```
vlan 1
interface lag 10
    description This LAG is used for an example.
interface lag 60
switch(config-lag-if)#
```

hash

Supported only on the 6200, 6300, 6400, 8320, and 8325 Switch Series.

Syntax

```
hash [l2-src-dst | l3-src-dst | l4-src-dst]
```

Description

This command controls the selection of an interface in a group of aggregate interfaces. The hash type value helps transmit a frame. This configuration must be done at the LAG interface level.

Command context

```
config-lag-if
```

Parameters

`l2-src-dst`

Specifies the load-balancing calculation to include only Layer 2 items, such as source and destination MAC addresses.

`l3-src-dst`

Specifies the load-balancing calculation to include only Layer 3 items, such as source and destination IP addresses. Default setting.

`l4-src-dst`

Specifies the load-balancing calculation to include only Layer 4 items, such as source and destination UDP/TCP ports.

Authority

Administrators or local user group members with execution rights for this command.

Example

```
switch(config-lag-if)# hash l2-src-dst
```

interface lag

Syntax

```
interface lag <ID>
no interface lag <ID>
```

Description

Creates a Link Aggregation Group (LAG) interface represented by an ID.

The `no` form of this command deletes a LAG interface represented by an ID.

Command context

```
config
```

Parameters

<ID>

Specifies a LAG interface ID.

Authority

Administrators or local user group members with execution rights for this command.

Usage

Keep in mind the following requirements when adding interfaces to a LAG:

- To determine the maximum number of LAG interfaces for your type of switch, look at the output from the `show capacities lag` command; however, the number of LAGs that can be created depends on the availability of the physical interface since each LAG interface needs at least one physical interface as a member link.
- After the maximum limit of members is reached in a LAG, an additional port cannot be added to the aggregation group. If a port belongs to a card type with a different speed than the other aggregation members, the port can still be added to the aggregation group. If dynamic LAG is enabled, any port member with a speed different than other aggregation members is blocked or ineligible from the same aggregation group. Any operational keys/attributes or configuration changes might affect the aggregation states of the member ports.
- The nondefaults configuration on an interface is removed automatically when the interface is added to a link aggregation. For example: Assume that you remove a member interface from an existing LAG and add it to another LAG. The software removes the nondefault configurations on the interface when it is added to the new LAG.

Examples

Creating a Link Aggregation Group (LAG) interface represented by an ID of 100:

```
switch(config)# interface lag 100
```

Deleting a Link Aggregation Group (LAG) interface represented by an ID of 100:

```
switch(config)# no interface lag 100
```

ip address

Not supported on the 6100 and 6200 Switch Series.

Syntax

```
ip address <IPv4-ADDR>/<MASK> [secondary]  
no ip address <IPv4-ADDR>/<MASK> [secondary]
```

Description

Sets an IPv4 address and subnet mask to a LAG interface. One primary and up to 31 secondary address can be configured per interface.

The `no` form of this command removes the IPv4 address from the interface.

Command context

config-lag-if

Parameters

<IPV4-ADDR>

Specifies an IP address in IPv4 format (x.x.x.x), where x is a decimal number from 0 to 255. You can remove leading zeros. For example, the address 192.169.005.100 becomes 192.168.5.100.

<MASK>

Specifies the number of bits in the address mask in CIDR format (x), where x is a decimal number from 0 to 32.

secondary

Specifies a secondary IP address.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Setting an IP address on the LAG interface 1 to 198.51.100.1 with a mask of 24 bits:

```
switch(config)# interface lag 1
switch(config-lag-if)# ip address 198.51.100.1/24
```

Removing the IP address 198.51.100.1 with a mask of 24 bits from LAG interface 1:

```
switch(config)# interface lag 1
switch(config-lag-if)# no ip address 198.51.100.1/24
```

ipv6 address

Not supported on the 6100 and 6200 Switch Series.

Syntax

ipv6 address <IPV6-ADDR>/<MASK>

no ipv6 address <IPV6-ADDR>/<MASK>

Description

Sets an IPv6 address and subnet mask to a LAG interface.

The no form of this command removes the IPv6 address from the interface.

Command context

config-lag-if

Parameters

<IPV6-ADDR>

Specifies the IP address in IPv6 format (xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx), where x is a hexadecimal number from 0 to F. You can use two colons (::) to represent consecutive zeros (but only once), remove leading zeros, and collapse a quartet of four zeros to a single 0. For example, this address 2222:0000:3333:0000:0000:4444:0055 becomes 2222:0:3333::4444:55.

<MASK>

Specifies the number of bits in the address mask in CIDR format (x), where x is a decimal number from 0 to 128.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Setting the IPv6 address on LAG interface 1 to 2001:0db8:85a3::8a2e:0370:7334 with a mask of 24 bits:

```
switch(config)# interface lag 1  
switch(config-lag-if)# ipv6 address 2001:0db8:85a3::8a2e:0370:7334/24
```

Removing the IP address 2001:0db8:85a3::8a2e:0370:7334 with mask of 24 bits with a mask of 24 bits from LAG interface 1:

```
switch(config)# interface lag 1  
switch(config-lag-if)# no ipv6 address 2001:0db8:85a3::8a2e:0370:7334/24
```

lacp hash

Supported only on the 6100 and 8400 Switch Series.

Syntax

```
lacp hash [l2-src-dst | l3-src-dst | l4-src-dst]
```

Description

Controls the selection of an interface in a group of aggregate interfaces. The hash type value helps transmit a frame. This configuration must be done at the global level.

Command context

config

Parameters

l2-src-dst

Specifies the load-balancing calculation to include only Layer 2 items, such as source and destination MAC addresses.

l3-src-dst

Specifies the load-balancing calculation to include only Layer 3 items, such as source and destination IP addresses.

l4-src-dst

Specifies the load-balancing calculation to include only Layer 4 items, such as source and destination UDP/TCP ports.

Authority

Administrators or local user group members with execution rights for this command.

Example

```
switch(config)# lacp hash l2-src-dst
```

lacp mode

Syntax


```
lacp mode {active | passive}
no lacp mode {active | passive}
```

Description

Sets an LACP mode to active or passive.

The `no` form of this command sets the LACP mode to `off`, returning the LAG to a static mode aggregation.

Command context

config-lag-if

Parameters

active

Specifies that the local switch will transmit LACP Data Units (LACPDUs) to attempt to negotiate with the remote device.

passive

Specifies that the local switch will listen for LACPDUs from the remote device for LACP negotiation.



A momentary traffic drop occurs because LACP partners reconverge when changing the mode from active to passive or from passive to active.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Setting the LACP mode to `active`:

```
switch(config)# interface lag 1
switch(config-lag-if)# lacp mode active
```

Setting the LACP mode to `off`:

```
switch(config)# interface lag 1
switch(config-lag-if)# no lacp mode active
```

lacp port-id

Syntax

```
lacp port-id <PORT-ID>
```

```
no lacp port-id
```

Description

Sets the LACP port ID value of the member interface of the LAG.

The `no` form of this command removes the LACP port ID value from the interface.

Command context

config-if

Parameters

<PORT-ID>

Specifies a port ID value. Range: 1 to 65535.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Setting an LACP port ID to a value of 10:

```
switch(config-if) # lacp port-id 10
```

Removing the LACP port ID value:

```
switch(config-if) # no lacp port-id
```

lacp port-priority

Syntax

```
lacp port-priority <PORT-PRIORITY>  
no lacp port-priority
```

Description

Sets an LACP port priority value for the member interface of the LAG.

The `no` form of this command reverts the LACP port priority to the default, which is 1.

Command context

config-if

Parameters

<PORT-PRIORITY>

Specifies a port priority value. Range: 1 to 65535.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Setting a LACP port priority value of 10:

```
switch(config-if) # lacp port-priority 10
```

Reverting the LACP port ID to the default:

```
switch(config-if) # no lacp port-priority
```

lacp rate

Syntax

```
lacp rate {fast | slow}
no lacp rate
```

Description

Sets an LACP heartbeat request time to fast or slow.

The `no` form of the command sets an LACP rate to `slow`.

Command context

config-lag-if

Parameters

`fast`

Specifies the heartbeat request to every second, and the timeout period is a three-consecutive heartbeat loss that is 3 seconds.

`slow`

Specifies the heartbeat request to every 30 seconds. The timeout period is three-consecutive heartbeat loss that is 90 seconds. Default setting.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Setting the LACP heartbeat request time to `fast`:

```
switch(config)# interface lag 1
switch(config-lag-if)# lacp rate fast
```

Resetting the LACP heartbeat request time to the default, which is `slow`:

```
switch(config)# interface lag 1
switch(config-lag-if)# no lacp rate
```

Another way to set the LACP heartbeat request time to the default, which is `slow`:

```
switch(config)# interface lag 1
switch(config-lag-if)# lacp rate slow
```

lacp system-priority

Syntax

```
lacp system-priority <SYSTEM-PRIORITY-VALUE>
no lacp system-priority
```

Description

Sets a Link Aggregation Control Protocol (LACP) system priority.

The `no` form of this command sets an LACP system priority to the default, which is 65534.

Command context

config

Parameters

<SYSTEM-PRIORITY-VALUE>

Specifies a system priority value. Range: 0 to 65535.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Setting a Link Aggregation Control Protocol (LACP) system priority to 100:

```
switch(config)# lacp system-priority 100
```

Setting an LACP system priority to the default (65534):

```
switch(config)# no lacp system-priority
```

A momentary traffic drop can be seen in case the LACP state machine must renegotiate.

lag

Syntax

```
lag <ID>  
no lag <ID>
```

Description

Adds an interface to a specified LAG interface ID.

The `no` form of this command removes an interface from a specified LAG interface ID. The member loses its LACP configuration when removed from the LAG. The member also reaches the default state with an administrative shutdown. For 6300 and 6400 series switches, the administrative state is enabled. Configurations, such as MTU and UDLD, are retained.

Command context

config-if

Parameters

<ID>

Specifies a LAG interface ID. Range: 1 to 256.

Authority

Administrators or local user group members with execution rights for this command.

Usage

- All members of the LAG must have the same speed. If a member comes up late with a different speed, it will not participate in the LAG/LACP. The hardware restriction is applied before adding an interface to LAG. The member belongs to the card type that has the same maximum speed as the reference port card type.

- To move an interface from LagA to LagB, first remove the interface from LagA and then add it to LagB. When a member is attached to a LAG, the nondefault configurations on the member are removed silently.
- After removing a physical interface from a LAG, the interface associated with the LAG becomes L3 ports with default L3 configurations and administrative down. For example, suppose interface 1/1/1 was part of LAG 3 and you had administratively enabled the interface. If you later remove interface 1/1/1 from LAG 3, the administrative status automatically changes to down. If you want to use the interface again, you must administratively enable it again.

Examples

Adding an interface to a Link Aggregation Group (LAG) represented by an ID of 100:

```
switch(config)# interface 1/1/1
switch(config-if)# lag 100
```

Deleting an interface from a Link Aggregation Group (LAG) represented by an ID of 100:

```
switch(config)# interface 1/1/1
switch(config-if)# no lag 100
```

show interface

Syntax

```
show interfaces <LAG-NAME> [vsx-peer]
```

Description

Displays information about a specific LAG.

Command context

Operator (>) or Manager (#)

Parameters

<LAG-NAME>

Specifies a LAG name.

[vsx-peer]

Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Examples

Displaying information about LAG 100:

```

switch# show interface lag100
Aggregate lag100 is up
Admin state is up
Description :
MAC Address      : 48:0f:cf:af:43:9c
Aggregated-interfaces : 1/1/2
Aggregation-key   : 100
Aggregate mode     : active
Speed             : 2000 Mb/s
L3 Counters: Rx Disabled, Tx Disabled
qos trust none
VLAN Mode: access
Access VLAN: 1

```

Statistics	RX	TX	Total
Packets	20	45	65
Unicast	5	5	10
Multicast	5	15	20
Broadcast	10	25	35
Bytes	5658	2584	8242
Jumbos	0	0	0
Dropped	0	0	0
Filtered	0	0	0
Pause Frames	0	0	0
Errors	0	0	0
CRC/FCS	0	n/a	0
Collision	n/a	0	0
Runts	0	n/a	0
Giants	0	n/a	0

show lacp aggregates

Syntax

```
show lacp aggregates [<LAG-NAME>] [vsx-peer]
```

Description

Displays all LACP aggregate information configured for all LAGs, or for a specific LAG.

Command context

Operator (>) or Manager (#)

Parameters

<LAG-NAME>

Optional: Specifies a lag name.

[vsx-peer]

Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Examples

Displaying LACP aggregate information configured for lag10:

```
switch# show lacp aggregates lag10

Aggregate-name       : lag10
Aggregated-interfaces : 1/1/1 1/1/2
Heartbeat rate       : slow
Hash                 : 13-src-dst
Aggregate mode       : active
```

Displaying LACP aggregates:

```
switch# show lacp aggregates

Aggregate-name       : lag1
Aggregated-interfaces : 1/1/27 1/1/28 1/1/29
Heartbeat rate       : slow
Hash                 : 13-src-dst
Aggregate mode       : active

Aggregate-name       : lag2
Aggregated-interfaces : 1/1/48
Heartbeat rate       : slow
Hash                 : 12-src-dst
Aggregate mode       : passive
```

show lacp configuration

Syntax

```
show lacp configuration [vsx-peer]
```

Description

Displays global LACP configuration.

Command context

Operator (>) or Manager (#)

Parameters

[vsx-peer]

Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Examples

Displaying global LACP configuration (output is applicable for 8400 series switches):

```
switch# show lacp configuration
System-id      : 70:72:cf:ef:fc:d9
System-priority : 65534
Hash           :13-src-dst
```

Displaying global LACP configuration (output is applicable for 8320, 6300, and 6400 series switches):

```
switch# show lacp configuration
System-id      : 98:f2:b3:68:40:a0
System-priority : 65534
```

show lacp interfaces

Syntax

```
show lacp interfaces [<IFNAME>] [vsx-peer]
```

Description

Displays an LACP configuration of the physical interfaces, including VSXs. If an interface name is passed as argument, it only displays an LACP configuration of a specified interface.

Command context

Operator (>) or Manager (#)

Parameters

<IFNAME>

Optional: Specifies an interface name.

[vsx-peer]

Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Examples

This example displays an LACP configuration of the physical interfaces. One of the interfaces has the `lacp-block` forwarding state. If a VSX switch has loop protect enabled on an interface and a loop occurs, VSX blocks the interface to stop the loop. The forwarding state of the blocked interface is set to `lacp-block`.

```
switch# show lacp interfaces
State abbreviations :
A - Active           P - Passive           F - Aggregable I - Individual
S - Short-timeout    L - Long-timeout    N - InSync      O - OutofSync
C - Collecting       D - Distributing
X - State m/c expired E - Default neighbor state

Actor details of all interfaces:
-----
Intf   Aggr   Port   Port   State   System-id           System   Aggr   Forwarding
```


	name	id	Pri			Pri	Key	State
1/1/1	lag10	17	1	ALFOE	70:72:cf:37:a3:5c	20	10	lACP-block
1/1/2	lag128	69	1	ALFNCD	70:72:cf:37:a3:5c	20	128	up
1/1/3	lag128	14	1	ALFNCD	70:72:cf:37:a3:5c	20	128	up
1/1/4	lag128							down
1/1/5	lag20							up

Partner details of all interfaces:

Intf	Aggr name	Partner Port-id	Port Pri	State	System-id	System Priority	Aggr Key
1/1/1	lag10	0	65534	PLFOEX	00:00:00:00:00:00	65534	0
1/1/2	lag128	69	1	PLFNCD	70:72:cf:8c:60:a7	65534	128
1/1/3	lag128	14	1	PLFNCD	70:72:cf:8c:60:a7	65534	128
1/1/4	lag128						
1/1/5	lag20						

Displaying static LAG:

```
switch# show lacp interfaces
State abbreviations :
A - Active          P - Passive          F - Aggregable I - Individual
S - Short-timeout  L - Long-timeout  N - InSync      O - OutofSync
C - Collecting     D - Distributing
X - State m/c expired      E - Default neighbor state

Actor details of all interfaces:
-----
Intf   Aggr   Port   Port   State   System-id           System   Aggr   Forwarding
      Name  Id     Pri
-----
1/1/1  lag10
1/1/2  lag10

Partner details of all interfaces:
-----
Intf   Aggr   Port   Port   State   System-id           System   Aggr
      Name  Id     Pri
-----
1/1/1  lag10
1/1/2  lag10
```

Displaying an LACP configuration of the 1/1/1 interface:

```
switch# show lacp interfaces 1/1/1

State abbreviations :
A - Active          P - Passive          F - Aggregable I - Individual
S - Short-timeout  L - Long-timeout  N - InSync      O - OutofSync
C - Collecting     D - Distributing
X - State m/c expired      E - Default neighbor state

Aggregate-name : lag1
-----
Actor              Partner
-----
```

Port-id	28	31
Port-priority	1	1
Key	1	1
State	ALFNCD	ALFNCD
System-id	98:f2:b3:68:40:a0	98:f2:b3:68:60:a6
System-priority	65534	65534

Displaying an LACP configuration after loop-protect is enabled on the primary VSX switch:

```
switch# show lacp interfaces
```

State abbreviations :

A - Active P - Passive F - Aggregable I - Individual
S - Short-timeout L - Long-timeout N - InSync O - OutofSync
C - Collecting D - Distributing
X - State m/c expired E - Default neighbor state

Actor details of all interfaces:

Intf	Aggr Name	Port Id	Port Pri	State	System-ID	System Pri	Aggr Key	Forwarding State
1/4/14	lag1 (mc)	206	1	ALFNCD	f8:60:f0:06:49:00	65534	1	up
1/5/15	lag2 (mc)							down

Partner details of all interfaces:

Intf	Aggr Name	Port Id	Port Pri	State	System-ID	System Pri	Aggr Key
1/4/14	lag1 (mc)	130	1	ALFNCD	f8:60:f0:06:87:00	65534	1
1/5/15	lag2 (mc)						

Displaying an LACP configuration after loop-protect is enabled on the secondary VSX switch:

```
switch# show lacp interfaces
```

State abbreviations :

A - Active P - Passive F - Aggregable I - Individual
S - Short-timeout L - Long-timeout N - InSync O - OutofSync
C - Collecting D - Distributing
X - State m/c expired E - Default neighbor state

Actor details of all interfaces:

Intf	Aggr Name	Port Id	Port Pri	State	System-ID	System Pri	Aggr Key	Forwarding State
1/3/2	lag1 (mc)	1130	1	ALFNCD	f8:60:f0:06:49:00	65534	1	up
1/9/3	lag2 (mc)							down

Partner details of all interfaces:

Intf	Aggr Name	Port Id	Port Pri	State	System-ID	System Pri	Aggr Key

```
1/3/2    lag1 (mc)    131    1    ALFNCD    f8:60:f0:06:87:00    65534    1
1/9/3    lag2 (mc)
```

shutdown

Syntax

```
shutdown
no shutdown
```

Description

Sets every interface in the LAG operationally down.

The `no` form of this command sets every interface operationally up.

Command context

```
config-lag-if
```

Authority

Administrators or local user group members with execution rights for this command.

Examples

Setting every interface in the LAG to shutdown:

```
switch(config)# interface lag 1
switch(config-lag-if)# shutdown
```

Resetting every interface in the LAG to the default (up):

```
switch(config)# interface lag 1
switch(config-lag-if)# no shutdown
```

vlan trunk native

Syntax

```
vlan trunk native <VLAN-ID>
no vlan trunk native [<VLAN-ID>]
```

Description

Assigns a native VLAN ID to a LAG interface.

The `no` form of this command removes a native VLAN from a LAG interface and assigns VLAN ID 1 as its native VLAN.

Command context

```
config-if
config-lag-if
```

Parameters

<VLAN-ID>

Specifies the number of the VLAN ID to assign. The VLAN ID must exist.

Maximum number of VLANs supported: 512 (6100); 2048 (6200); 4096 (6300, 6400, 8320, 8325, 8360, 8400).

VLAN ID range: 2 to 4094.

Authority

Administrators or local user group members with execution rights for this command.

Usage

By default, VLAN ID 1 is assigned as the LAG VLAN ID for all LAG interfaces. VLANs can only be assigned to a nonrouted (layer 2) interface or LAG interface.

Only one VLAN ID can be assigned as the native VLAN. For the interface to forward the native VLAN traffic, the interface has to be allowed explicitly by entering `vlan trunk allowed <ID>` where the ID is the native VLAN ID. This setting is also applicable to the physical interface.

Examples

Configuring a Layer 2 dynamic aggregation group with native VLAN ID **1** assigned to LAG **1**:

For 6100 and 6200 switch series:

```
switch(config)# interface lag 1
switch(config-lag-if)# no shutdown
switch(config-lag-if)# lacp mode active
switch(config-lag-if)# vlan trunk native 1
switch(config-lag-if)# vlan trunk allowed 1
```

For 6300, 6400, 8320, 8325, 8360, and 8400 switch series:

```
switch(config)# interface lag 1
switch(config-lag-if)# no shutdown
switch(config-lag-if)# no routing
switch(config-lag-if)# lacp mode active
switch(config-lag-if)# vlan trunk native 1
switch(config-lag-if)# vlan trunk allowed 1
```

Configuring a Layer 2 dynamic aggregation group with native VLAN ID **20** assigned to LAG **1**:

For 6100 and 6200 switch series:

```
switch(config)# interface lag 1
switch(config-lag-if)# no shutdown
switch(config-lag-if)# lacp mode active
switch(config-lag-if)# vlan trunk native 20
switch(config-lag-if)# vlan trunk allowed 20
```

For 6300, 6400, 8320, 8325, 8360, and 8400 switch series:

```
switch(config)# interface lag 1
switch(config-lag-if)# no shutdown
switch(config-lag-if)# no routing
switch(config-lag-if)# lacp mode active
switch(config-lag-if)# vlan trunk native 20
switch(config-lag-if)# vlan trunk allowed 20
```

Removing a native VLAN from LAG 1:

```
switch(config)# interface lag 1
switch(config-lag-if)# no vlan trunk native
```

Smartlink



This chapter applies to the Aruba 6300, 6400 and 8360 Switch Series.

Smartlink provides simple and fast-converging link redundancy in network topologies with dual uplink between different layers of the network. It requires an active (primary) and backup (secondary) link. The active link carries the traffic. If the active link fails, a switchover is triggered and the traffic is directed to the backup link.

The active interface forwards traffic for a group of VLANs (referred to as protected VLAN group). The secondary interface is in backup mode for this protected group. If the active port goes down, the backup port starts forwarding traffic for the protected VLAN group. If the active port recovers, it switches to backup mode and does not forward traffic. Secondary port continues forwarding traffic.

If preemption is enabled, a failed active port (that has recovered) becomes active after the configured "preemption-delay" time has elapsed.

Benefits:

Failover is faster compared to STP. If the active link fails, a Smartlink group contains configuration information that determines which port should be forwarding for a protected VLAN group.

Guidelines and limitations

- For faster convergence of routed traffic over Smartlink ports, ip neighbor-flood must be enabled on respective SVI interfaces.
- Smartlink uses ERPS copp class for flush packets.

Limitations:

- VSX, ISL and MLAGs cannot be included in Smartlink groups.
- Switches with both Smartlink and STP enabled exclude Smartlink ports from STP.
- On switches with both Smartlink and STP enabled, loops involving Smartlink and STP are not detected.
- On switches with both Smartlink and ERPS enabled, loops involving Smartlink and ERPS are not detected.
- ERPS and Smartlink cannot be enabled on the same port.
- Dynamic VLANs (MVRP) and Smartlink cannot be enabled on the same port.
- Loop Protect and Smartlink cannot be enabled on the same port.
- Multicast fast convergence is not supported.
- Uplink Failure Detection (UFD) is not supported.
- MIB and WebUI are not supported.



- VLANs that include Smartlink ports must be included in the protected VLAN list of at least one Smartlink group. If a VLAN includes Smartlink ports and is not included in the protected VLAN list, the VLAN-port combination will not be managed by Smartlink or STP, resulting in an undefined port state for the VLAN, which will cause a loop in the network.
- When using UDLD with Smartlinks, redundancy switchover is not hitless and will result in traffic loss.

Smartlink commands

Configuration commands

smartlink group

Syntax

```
smartlink group <GROUP-ID>  
no smartlink group <GROUP-ID>
```

Description

Creates a Smartlink group with specified ID.

The `no` form of this command removes the Smartlink group and all associated configurations for a specified ID.

Command context

config

Parameters

<GROUP-ID>

Specifies ID for the Smartlink group.

Authority

Administrators or local user group members with execution rights for this command.

Usage

The maximum number of Smartlink groups is 24.

Examples

Configuring a Smartlink group:

```
switch(config)# smartlink group 2  
switch(config-smartlink-2)#
```

smartlink recv-control-vlan

Syntax

```
smartlink recv-control-vlan <VID-LIST>  
no smartlink recv-control-vlan <VID-LIST>
```

Description

Configures control VLANs to receive flush messages.
The `no` form of this command disables VLANs from receiving flush messages.

Command context

`config`

Parameters

`<VID-LIST>`

Specifies VLAN ID.

Authority

Administrators or local user group members with execution rights for this command.

Usage

- Configure this command on uplink devices where MAC flush is required.
- A flush message clears stale MAC and ARP entries enabling fast traffic convergence.

Examples

Configuring control VLAN to receive flush messages:

```
switch(config)# smartlink recv-control-vlan 2,3
```

Group context commands

description

Syntax

`description <DESC>`
`no description`

Description

Adds description to a Smartlink group.
The `no` form of this command removes a description from a Smartlink group.

Command context

`config-smartlink-<GROUP>`

Parameters

`<DESC>`

Specifies description for a Smartlink group. 1 to 64 printable ASCII characters are allowed.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Adding a description to a Smartlink group:

```
switch(config)# smartlink group 3
switch(config-smartlink-3)# Description for group 3
```

primary-port

Syntax

```
primary-port <INTERFACE-NAME>
no primary-port
```

Description

Configures primary port for a Smartlink group.

The `no` form of this command removes primary port from a Smartlink group.

Command context

config-smartlink-<GROUP>

Parameters

<INTERFACE-NAME>

Specifies interface for primary port.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Configuring primary port for a Smartlink group:

```
switch(config)# smartlink group 3
switch(config-smartlink-3)# primary-port 1/1/1
```

smartlink group secondary-port

Syntax

```
secondary-port <INTERFACE-NAME>
no secondary-port
```

Description

Configures secondary port for a Smartlink group.

The `no` form of this command removes secondary port from a Smartlink group.

Command context

config-smartlink-<GROUP>

Parameters

<INTERFACE-NAME>

Specifies interface for secondary port.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Configuring secondary port for a Smartlink group:

```
switch(config)# smartlink group 3
switch(config-smartlink-3)# secondary-port 1/1/2
```

control-vlan

Syntax

```
control-vlan <VLAN-ID>
no control-vlan <VLAN-ID>
```

Description

Configures control VLAN in a Smartlink group.

The `no` form of this command removes control VLAN from a Smartlink group.

Command context

config-smartlink-<GROUP>

Parameters

<VLAN-ID>

Specifies VLAN ID for a Smartlink group.

Authority

Administrators or local user group members with execution rights for this command.

Usage

- In a Smartlink group, the control VLAN is used to send flush messages.
- Control VLAN is configured on the device intended to send flush messages.
- Each Smartlink group must use a unique control VLAN.
- Control VLAN is protected in the Smartlink group to avoid loops.

Examples

Configuring control VLAN in a Smartlink group:

```
switch(config)# smartlink group 3
switch(config-smartlink-3)# control-vlan 10
```

protected-vlans

Syntax

```
protected-vlans <VLAN-ID-LIST>
no protected-vlans <VLAN-ID-LIST>
```

Description

Specifies VLANs protected by a Smartlink group.

The `no` form of this command removes VLANs protected by a Smartlink group.

Command context

config-smartlink-<GROUP>

Parameters

<VLAN-ID-LIST>

Specifies list of VLAN IDs. Range is 1 to 4094.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Configuring protected VLANs for a Smartlink group.:

```
switch(config)# smartlink group 3
switch(config-smartlink-3)# protected-vlans 1, 10-50
```

preemption

Syntax

```
preemption
no preemption
```

Description

Configures preemption in a Smartlink group.

The `no` form of this command disables preemption in a Smartlink group.

Command context

config-smartlink-<GROUP>

Authority

Administrators or local user group members with execution rights for this command.

Usage

- If preemption is enabled, a recovered primary port preempts the active interface after the configured preemption delay.
- If preemption is disabled, a recovered primary port serves as a backup interface and does not forward traffic.

Examples

Configuring preemption in a Smartlink group:

```
switch(config)# smartlink group 3
switch(config-smartlink-3)# preemption
```

preemption-delay

Syntax

```
preemption-delay <SECONDS>
```

no preempton-delay

Description

Specifies preemption delay for a Smartlink group.

The **no** form of this command removes previously configured preemption delay from a Smartlink group and sets it to the default of 1 second.

Command context

config-smartlink-<GROUP>

Parameters

<SECONDS>

Specifies preemption delay in seconds. Range is 0 to 300 seconds.

Authority

Administrators or local user group members with execution rights for this command.

Usage

When preemption is enabled, a recovered primary port always preempts the active interface after the configured preemption delay.

Examples

Configuring preemption delay on a Smartlink group:

```
switch(config)# smartlink group 3
switch(config-smartlink-3)# preempton
switch(config-smartlink-3)# preempton-delay 10
```

Display commands

show smartlink group

Syntax

show smartlink group <GROUP-ID>

Description

Shows information for a specific Smartlink group.

Command context

Operator (>) or Manager (#)

Parameters

<GROUP-ID>

Specifies Smartlink group ID.

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Examples

Showing Smartlink group information:

```
switch# show smartlink group 1
Smartlink Group 1 Information:
=====
Group description      : Uplink1
Protected VLANs       : 20-30
Control VLAN          : 10
Preemption             : ON
Preemption Delay       : 10
Ports  Role            State      Flush Count  Last Flush Time
-----
1/1/1  Primary         Active      2             Sat Oct 17 19:09:10 2020
1/1/2  Secondary        Backup      0
```

show smartlink group all

Syntax

```
show smartlink group all
```

Description

Shows information for all configured Smartlink groups.

Command context

Operator (>) or Manager (#)

Authority

Operators or Administrators or local user group members with execution rights for this command.
Operators can execute this command from the operator context (>) only.

Examples

Showing information for all configured Smartlink groups:

```
switch# show smartlink group all
Smartlink Group Information:
=====
      Primary Secondary Active Backup Ctrl Preemption Preemption
Grp  Port   Port   Port   Port   Vlan      Delay
-----
1    1/1/1  1/1/2  1/1/1  1/1/2  10        OFF        1
2    1/1/5  1/1/6  1/1/5  1/1/6  11        OFF        1
```

show smartlink group detail

Syntax

```
show smartlink group detail
```

Description

Shows detailed information for all configured Smartlink groups.

Command context

Operator (>) or Manager (#)

Authority

Operators or Administrators or local user group members with execution rights for this command.
Operators can execute this command from the operator context (>) only.

Examples

Showing detailed information for all configured Smartlink groups:

```
switch# show smartlink group detail
Smartlink Group 1 Information:
=====
Protected VLAN       : 1-3
Control VLAN        : 1
Preemption           : OFF
Preemption Delay     : 1
Ports      Role      State      Flush Count  Last Flush Time
-----
1/3/1      Primary    Backup    0
1/3/2      Secondary   Active    0

Smartlink Group 2 Information:
=====
Protected VLAN       : 4-6
Control VLAN        : 4
Preemption           : OFF
Preemption Delay     : 1
Ports      Role      State      Flush Count  Last Flush Time
-----
1/3/2      Primary    Active    0
1/3/1      Secondary   Backup    0
```

show smartlink flush-statistics

Syntax

```
show smartlink flush-statistics
```

Description

Shows information for received flush messages.

Command context

Operator (>) or Manager (#)

Authority

Operators or Administrators or local user group members with execution rights for this command.
Operators can execute this command from the operator context (>) only.

Usage

This command must be executed on an uplink or peer device configured with `recv-control-vlan`.

Examples

Showing information for received flush messages:

```
switch# show smartlink flush-statistics
Last Flush Packet Detail:
=====

Flush Packets Received           : 2
Last Flush Packet Received On Interface : 1/1/1
Last Flush Packet Received On      : Sat Oct 17 19:09:10 2020
Device Id Of Last Flush Packet Received : 5065f3-127080
Control VLAN Of Last Flush Packet Received : 10
```

clear smartlink group statistics

Syntax

```
clear smartlink group [<GROUP-ID>] statistics
```

Description

Clears Smartlink statistics for the specified Smartlink group or all Smartlink groups.

Command context

Operator (>) or Manager (#)

Parameters

<GROUP-ID>

Specifies Smartlink group.

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Examples

Clearing Smartlink statistics for a specified Smartlink group:

```
switch# clear smartlink group 1 statistics
```

Clearing all Smartlink statistics for all Smartlink groups:

```
switch(config)# clear smartlink group statistics
```

clear smartlink flush-statistics

Syntax

```
clear smartlink flush-statistics
```

Description

Clears Smartlink flush statistics.

Command context

Operator (>) or Manager (#)

Authority

Operators or Administrators or local user group members with execution rights for this command.
Operators can execute this command from the operator context (>) only.

Usage

This command must be executed on the uplink device configured with `recv-control-vlan`.

Examples

Clearing Smartlink flush statistics:

```
switch# clear smartlink flush-statistics
```

show running-config

Syntax

```
show running-config
```

Description

Shows current running configuration.

Command context

Operator (>) or Manager (#)

Authority

Operators or Administrators or local user group members with execution rights for this command.
Operators can execute this command from the operator context (>) only.

Examples

Showing currently running configuration:

```
switch# configure terminal
switch(config)# smartlink group 1
switch(config-smartlink-1)# description Uplink1
switch(config-smartlink-1)# primary-port 1/1/1
switch(config-smartlink-1)# secondary-port 1/1/2
switch(config-smartlink-1)# control-vlan 10
switch(config-smartlink-1)# protected-vlans 20-30
switch(config-smartlink-1)# preemption
switch(config-smartlink-1)# preemption-delay 10
switch(config)# smartlink group 2
switch(config-smartlink-2)# primary-port 1/1/8
switch(config-smartlink-2)# secondary-port 1/1/9
switch(config-smartlink-2)# control-vlan 11
switch(config-smartlink-2)# protected-vlans 20-30
switch# show running-config
Current configuration:
!
!
!
smart-link group 1
 primary-port 1/1/1
 secondary-port 1/1/2
 control-vlan 10
 protected-vlans 20-30
```

```

preemption
preemption-delay 10
exit
smart-link group 2
primary-port 1/1/8
secondary-port 1/1/9
control-vlan 11
protected-vlans 20-30
exit

```

Supportability commands

show capacities smartlink

Syntax

show capacities smartlink | show capacities-status smartlink

Description

Shows Smartlink capacities or Smartlink capacities and status.

Command context

Operator (>) or Manager (#)

Authority

Operators or Administrators or local user group members with execution rights for this command.
Operators can execute this command from the operator context (>) only.

Examples

Showing Smartlink capacities:

```

switch# show capacities smartlink

System Capacities: Filter SMARTLINK
Capacities Name                                     Value
-----
Maximum number of SMARTLINK GROUPS configurable in a system 24

```

Showing Smartlink capacities and status:

```

switch# show capacities-status smartlink

System Capacities Status: Filter SMARTLINK
Capacities Status Name                               Value Maximum
-----
Number of SMARTLINK GROUPS currently configured      1          24

```


Accessing Aruba Support

Aruba Support Services	https://www.arubanetworks.com/support-services/
Aruba Support Portal	https://asp.arubanetworks.com/
North America telephone	1-800-943-4526 (US & Canada Toll-Free Number) +1-408-754-1200 (Primary - Toll Number) +1-650-385-6582 (Backup - Toll Number - Use only when all other numbers are not working)
International telephone	https://www.arubanetworks.com/support-services/contact-support/

Be sure to collect the following information before contacting Support:

- Technical support registration number (if applicable)
- Product name, model or version, and serial number
- Operating system name and version
- Firmware version
- Error messages
- Product-specific reports and logs
- Add-on products or components
- Third-party products or components

Other useful sites

Other websites that can be used to find information:

Airheads social forums and Knowledge Base	https://community.arubanetworks.com/
Software licensing	https://lms.arubanetworks.com/
End-of-Life information	https://www.arubanetworks.com/support-services/end-of-life/
Aruba software and documentation	https://asp.arubanetworks.com/downloads

Accessing Updates

You can access updates from the Aruba Support Portal or the HPE My Networking Website.

Aruba Support Portal

<https://asp.arubanetworks.com/downloads>

If you are unable to find your product in the Aruba Support Portal, you may need to search My Networking, where older networking products can be found:

My Networking

<https://www.hpe.com/networking/support>

To view and update your entitlements, and to link your contracts and warranties with your profile, go to the Hewlett Packard Enterprise Support Center **More Information on Access to Support Materials** page:

<https://support.hpe.com/portal/site/hpsc/aae/home/>

Access to some updates might require product entitlement when accessed through the Hewlett Packard Enterprise Support Center. You must have an HP Passport set up with relevant entitlements.

Some software products provide a mechanism for accessing software updates through the product interface. Review your product documentation to identify the recommended software update method.

To subscribe to eNewsletters and alerts:

<https://asp.arubanetworks.com/notifications/subscriptions> (requires an active Aruba Support Portal (ASP) account to manage subscriptions). Security notices are viewable without an ASP account.

Warranty Information

To view warranty information for your product, go to <https://www.arubanetworks.com/support-services/product-warranties/>.

Regulatory Information

To view the regulatory information for your product, view the *Safety and Compliance Information for Server, Storage, Power, Networking, and Rack Products*, available at <https://www.hpe.com/support/Safety-Compliance-EnterpriseProducts>

Additional regulatory information

Aruba is committed to providing our customers with information about the chemical substances in our products as needed to comply with legal requirements, environmental data (company programs, product recycling, energy efficiency), and safety information and compliance data, (RoHS and WEEE). For more information, see <https://www.arubanetworks.com/company/about-us/environmental-citizenship/>.

Documentation Feedback

Aruba is committed to providing documentation that meets your needs. To help us improve the documentation, send any errors, suggestions, or comments to Documentation Feedback (docsfeedback-switching@hpe.com). When submitting your feedback, include the document title, part number, edition, and publication date located on the front cover of the document. For online help content, include the product name, product version, help edition, and publication date located on the legal notices page.