

AOS-CX 10.12 Fundamentals Guide

**8100, 8320, 8325, 8360, 9300, 10000 Switch
Series**



Copyright Information

© Copyright 2023 Hewlett Packard Enterprise Development LP.

This product includes code licensed under certain open source licenses which require source compliance. The corresponding source for these components is available upon request. This offer is valid to anyone in receipt of this information and shall expire three years following the date of the final distribution of this product version by Hewlett Packard Enterprise Company. To obtain such source code, please check if the code is available in the HPE Software Center at <https://myenterpriselicense.hpe.com/cwp-ui/software> but, if not, send a written request for specific software version and product for which you want the open source code. Along with the request, please send a check or money order in the amount of US \$10.00 to:

Hewlett Packard Enterprise Company
Attn: General Counsel
WW Corporate Headquarters
1701 E Mossy Oaks Rd Spring, TX 77389
United States of America.

Notices

The information contained herein is subject to change without notice. The only warranties for Hewlett Packard Enterprise products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. Hewlett Packard Enterprise shall not be liable for technical or editorial errors or omissions contained herein.

Confidential computer software. Valid license from Hewlett Packard Enterprise required for possession, use, or copying. Consistent with FAR 12.211 and 12.212, Commercial Computer Software, Computer Software Documentation, and Technical Data for Commercial Items are licensed to the U.S. Government under vendor's standard commercial license.

Links to third-party websites take you outside the Hewlett Packard Enterprise website. Hewlett Packard Enterprise has no control over and is not responsible for information outside the Hewlett Packard Enterprise website.

Acknowledgments

Bluetooth is a trademark owned by its proprietor and used by Hewlett Packard Enterprise under license.

Contents	3
About this document	11
Applicable products	11
Latest version available online	11
Command syntax notation conventions	11
About the examples	12
Identifying switch ports and interfaces	12
About AOS-CX	14
AOS-CX system databases	14
Aruba Network Analytics Engine introduction	14
AOS-CX CLI	15
Aruba CX mobile app	15
Aruba NetEdit	15
Ansible modules	16
AOS-CX Web UI	16
AOS-CX REST API	16
In-band and out-of-band management	16
SNMP-based management support	17
User accounts	17
Initial Configuration	18
Initial configuration using ZTP	18
Initial configuration using the Aruba CX mobile app	18
Troubleshooting Bluetooth connections	20
Bluetooth connection IP addresses	20
Bluetooth is connected but the switch is not reachable	20
Bluetooth is not connected	21
Initial configuration using the CLI	24
Connecting to the console port	24
Connecting to the management port	25
Logging into the switch for the first time	26
Setting switch time using the NTP client	26
Configuring banners	27
Configuring in-band management on a data port	27
Using the Web UI	28
Configuring the management interface	28
IP prefix priority	29
System profiles and configurable IP prefix priority	29
IP prefix priority defaults	30
IP Prefix priority commands	30
ip prefix-priority	30
ipv6 prefix-priority	31
show ip prefix-priority	32
show ipv6 prefix-priority	33
Selecting the system profile	34
System profile commands	35
profile	35

show profiles available	36
show profile current	38
Restoring the switch to factory default settings	39
Management interface commands	41
default-gateway	41
ip static	42
nameserver	43
psm	44
show interface mgmt	45
show psm	46
NTP commands	47
ntp authentication	47
ntp authentication-key	48
ntp disable	49
ntp enable	49
ntp conductor	50
ntp server	51
ntp trusted-key	53
ntp vrf	54
show ntp associations	55
show ntp authentication-keys	56
show ntp servers	57
show ntp statistics	57
show ntp status	58
Telnet access	60
Telnet commands	60
show telnet server	60
show telnet server sessions	61
telnet server	62
Interface configuration	63
Configuring a layer 2 interface	63
Configuring a layer 3 interface	63
Single source IP address	64
Priority-based flow control (PFC)	64
(Applies to the 8325, 9300, 10000)	64
(Applies to the 8325, 9300, 10000) Asymmetric PFC	65
(Applies to the 8360)	65
Configurable flow control buffer thresholds	65
For the 8325, 9300, and 10000 series switch:	65
Flow control and lossless buffering	68
For the 8325, 9300, and 10000 series switch:	68
Requirements for proper lossless buffering:	68
For the 8360 series switch:	68
Requirements for proper lossless buffering	69
Forward error correction	70
Unsupported transceiver support	70
Configuring an interface persona	70
Modes	72
Predefined and custom persona names	72
Creating and configuring an interface persona	72
Examples	72
Monitor mode	73
Interface commands	73
allow-unsupported-transceiver	73

default interface	76
description	76
dsm uplink-to-uplink	77
error-control	78
flow-control	79
flow-control buffer headroom	84
flow-control buffer xoff dynamic	85
flow-control buffer xoff static	86
flow-control buffer xon	87
flow-control watchdog	88
flow-control watchdog timeout resume	90
interface	91
interface loopback	91
interface vlan	92
ip address	93
ip mtu	94
ipv6 address	95
l3-counters	96
mtu	98
persona	99
rate-interval	101
routing	102
show allow-unsupported-transceiver	103
show dsm uplink-to-uplink	104
show interface	104
show interface dom	110
show interface flow-control	111
show interface statistics	115
show interface transceiver	118
show interface utilization	121
show ip interface	122
show ip source-interface	124
show ipv6 interface	125
show ipv6 source-interface	127
shutdown	128
speed	128
system interface-group	131
Subinterfaces	134
Configuring subinterfaces	134
Subinterface in a router-on-a-stick deployment	135
Subinterface commands	135
encapsulation dot1q	135
interface	136
show capacities subinterface	138
show interface	139
Source interface selection	141
Source-interface selection commands	141
ip source-interface	141
ipv6 source-interface	144
show ip source-interface	146
show ipv6 source-interface	148
show running-config	149
VLANs	151

Precision time protocol (PTP)	152
PTP clocks	152
Best clock-source algorithm	153
PTP network diagram	153
Configuration examples	154
PTPv1 passthrough	155
PTP support over VSX	156
Hardware considerations	156
Configuration recommendations	156
PTP CoPP class configuration recommendations	156
Configuration recommendations for a boundary clock	156
QoS prioritization configuration recommendations for a transparent clock	157
General guidelines for PTP IPv4 multicast	157
Use cases	158
Use case: PTP – IPv4 over L2 spine leaf topology	158
Use case: PTP – L3 spine leaf topology	159
Use case: PTP-VSX Multicast	160
PTP commands	161
clear ptp statistics	161
clock-domain	161
clock-step	162
enable	163
mode	164
priority1	166
priority2	166
ptp announce-interval	167
ptp announce-timeout	168
ptp clock-source-only	169
ptp delay-req-interval	170
ptp enable	171
ptp lag-role	172
ptp pdelay-req-interval	173
ptp peer ip	174
ptp profile	175
ptp sync-interval	176
ptp vlan	177
show ptp clock	178
show ptp foreign-clock-sources	179
show ptp interface	180
show ptp parent	183
show ptp statistics	184
show ptp time-property	186
show running-config ptp	187
transport-protocol	187
vsx-sync ptp-global	188
Configuration and firmware management	190
Upgrade and downgrade scenarios	190
Upgrades	190
Downgrades	190
Limitations	190
Hot-patch software	191
Checkpoints	193
Checkpoint types	193
Maximum number of checkpoints	193
User generated checkpoints	193

System generated checkpoints	193
Supported remote file formats	193
Rollback	194
Checkpoint auto mode	194
Testing a switch configuration in checkpoint auto mode	194
Checkpoint commands	194
checkpoint auto	194
checkpoint auto confirm	195
checkpoint diff	196
checkpoint post-configuration	198
checkpoint post-configuration timeout	199
checkpoint rename	200
checkpoint rollback	200
copy checkpoint <CHECKPOINT-NAME> <REMOTE-URL>	201
copy checkpoint <CHECKPOINT-NAME> {running-config startup-config}	202
copy checkpoint <CHECKPOINT-NAME> <STORAGE-URL>	203
copy <REMOTE-URL> checkpoint <CHECKPOINT-NAME>	204
copy <REMOTE-URL> {running-config startup-config}	205
copy running-config {startup-config checkpoint <CHECKPOINT-NAME>}	206
copy {running-config startup-config} <REMOTE-URL>	207
copy {running-config startup-config} <STORAGE-URL>	209
copy startup-config running-config	210
copy <STORAGE-URL> running-config	210
erase	212
show checkpoint <CHECKPOINT-NAME>	213
show checkpoint <CHECKPOINT-NAME> hash	215
show checkpoint post-configuration	216
show checkpoint	216
show checkpoint date	217
show running-config hash	218
show startup-config hash	219
write memory	220
Boot commands	220
boot set-default	220
boot system	221
show boot-history	223
Firmware management commands	224
copy {primary secondary} <REMOTE-URL>	225
copy {primary secondary} <FIRMWARE-FILENAME>	226
copy primary secondary	226
copy <REMOTE-URL>	227
copy secondary primary	229
copy <STORAGE-URL>	230
copy hot-patch	231
hot-patch	232
show hot-patch	233
Dynamic Segmentation	235
SNMP	236
Configuring SNMP	236
Aruba Central integration	238
Connecting to Aruba Central	238
Custom CA certificate	238
Support mode in Aruba Central	239

Aruba Central commands	239
aruba-central	239
aruba-central support-mode	240
configuration-lockout central managed	241
disable	242
enable	242
location-override	243
location-override-alternative	244
show aruba-central	245
show running-config current-context	248
Port filtering	250
Port filtering commands	250
portfilter	250
show portfilter	251
DNS	254
DNS client	254
Configuring the DNS client	254
DNS client commands	255
ip dns domain-list	255
ip dns domain-name	256
ip dns host	257
ip dns server address	258
show ip dns	259
Device discovery and configuration	262
LLDP	262
LLDP agent	262
LLDP MED support	264
LLDP EEE	265
Configuring the LLDP agent	265
LLDP commands	266
clear lldp neighbors	266
clear lldp statistics	266
lldp	267
lldp dot3	268
lldp dot3 mfs	268
lldp holdtime-multiplier	269
lldp management-address vlan	270
lldp management-ipv4-address	271
lldp management-ipv6-address	272
lldp med	273
lldp med-location	274
lldp receive	275
lldp reinit	276
lldp select-tlv	277
lldp timer	278
lldp transmit	280
lldp txdelay	280
lldp trap enable	281
show lldp configuration	283
show lldp configuration mgmt	285
show lldp local-device	286
show lldp neighbor-info	288
show lldp neighbor-info detail	290

show lldp neighbor-info mgmt	293
show lldp statistics	295
show lldp statistics mgmt	296
show lldp tlv	297
Cisco Discovery Protocol (CDP)	298
CDP support	298
CDP commands	298
cdp	298
clear cdp counters	299
clear cdp neighbor-info	300
show cdp	300
show cdp neighbor-info	301
show cdp traffic	302
Zero Touch Provisioning	304
ZTP support	304
Setting up ZTP on a trusted network	305
ZTP process during switch boot	306
ZTP VSF switchover support	307
ZTP commands	307
show ztp information	307
ztp force provision	312
Switch system and hardware commands	314
bluetooth disable	314
bluetooth enable	314
clear events	315
clear ip errors	316
console baud-rate	317
domain-name	318
hostname	319
led locator	319
mtrace	320
show bluetooth	322
show boot-history	323
show capacities	325
show capacities-status	326
show console	328
show core-dump	328
show domain-name	330
show environment fan	331
show environment led	332
show environment power-supply	333
show environment temperature	334
show events	335
show hostname	338
show images	338
show ip errors	339
show module	341
show running-config	342
show running-config current-context	346
show startup-config	347
show system	348
show system resource-utilization	350
show tech	353
show usb	354

show usb file-system	355
show version	356
system resource-utilization poll-interval	357
top cpu	358
top memory	359
usb	359
usb mount unmount	360
Container management commands	362
container	362
env	362
container exec	363
image-download-vrf	364
image-location	365
restrict cpu	366
restrict memory	367
restrict storage	367
show container	368
show capacities containers	369
show capacities-status containers	370
show running-config container	371
vrf	371
Support and Other Resources	373
Accessing Aruba Support	373
Accessing Updates	374
Aruba Support Portal	374
My Networking	374
Warranty Information	374
Regulatory Information	374
Documentation Feedback	375

This document describes features of the AOS-CX network operating system. It is intended for administrators responsible for installing, configuring, and managing Aruba switches on a network.

Applicable products

This document applies to the following products:

- Aruba 8100 Switch Series (R9W94A, R9W95A, R9W96A, R9W97A)
- Aruba 8320 Switch Series (JL479A, JL579A, JL581A)
- Aruba 8325 Switch Series (JL624A, JL625A, JL626A, JL627A)
- Aruba 8360 Switch Series (JL700A, JL701A, JL702A, JL703A, JL706A, JL707A, JL708A, JL709A, JL710A, JL711A, JL700C, JL701C, JL702C, JL703C, JL706C, JL707C, JL708C, JL709C, JL710C, JL711C, JL704C, JL705C, JL719C, JL718C, JL717C, JL720C, JL722C, JL721C)
- Aruba 9300 Switch Series (R9A29A, R9A30A, R8Z96A)
- Aruba 10000 Switch Series (R8P13A, R8P14A)

Latest version available online

Updates to this document can occur after initial publication. For the latest versions of product documentation, see the links provided in [Support and Other Resources](#).

Command syntax notation conventions

Convention	Usage
example-text	Identifies commands and their options and operands, code examples, filenames, pathnames, and output displayed in a command window. Items that appear like the example text in the previous column are to be entered exactly as shown and are required unless enclosed in brackets ([]).
example-text	In code and screen examples, indicates text entered by a user.
Any of the following: ■ <i><example-text></i> ■ <code><example-text></code> ■ <i>example-text</i> ■ example-text	Identifies a placeholder—such as a parameter or a variable—that you must substitute with an actual value in a command or in code: ■ For output formats where italic text cannot be displayed, variables are enclosed in angle brackets (< >). Substitute the text—including the enclosing angle brackets—with an actual value. ■ For output formats where italic text can be displayed, variables might or might not be enclosed in angle brackets. Substitute the text including the enclosing angle brackets, if any, with an actual value.

Convention	Usage
	Vertical bar. A logical OR that separates multiple items from which you can choose only one. Any spaces that are on either side of the vertical bar are included for readability and are not a required part of the command syntax.
{ }	Braces. Indicates that at least one of the enclosed items is required.
[]	Brackets. Indicates that the enclosed item or items are optional.
... or ...	Ellipsis: ■ In code and screen examples, a vertical or horizontal ellipsis indicates an omission of information. ■ In syntax using brackets and braces, an ellipsis indicates items that can be repeated. When an item followed by ellipses is enclosed in brackets, zero or more items can be specified.

About the examples

Examples in this document are representative and might not match your particular switch or environment.

The slot and port numbers in this document are for illustration only and might be unavailable on your switch.

Understanding the CLI prompts

When illustrating the prompts in the command line interface (CLI), this document uses the generic term `switch`, instead of the host name of the switch. For example:

```
switch>
```

The CLI prompt indicates the current command context. For example:

```
switch>
```

Indicates the operator command context.

```
switch#
```

Indicates the manager command context.

```
switch(CONTEXT-NAME)#
```

Indicates the configuration context for a feature. For example:

```
switch(config-if) #
```

Identifies the `interface` context.

Variable information in CLI prompts

In certain configuration contexts, the prompt may include variable information. For example, when in the VLAN configuration context, a VLAN number appears in the prompt:

```
switch(config-vlan-100) #
```

When referring to this context, this document uses the syntax:

```
switch(config-vlan-<VLAN-ID>) #
```

Where `<VLAN-ID>` is a variable representing the VLAN number.

Identifying switch ports and interfaces

Physical ports on the switch and their corresponding logical software interfaces are identified using the format:

member/slot/port

On the 83xx, 9300, and 10000 Switch Series

- *member*: Always 1. VSF is not supported on this switch.
- *slot*: Always 1. This is not a modular switch, so there are no slots.
- *port*: Physical number of a port on the switch.

For example, the logical interface 1/1/4 in software is associated with physical port 4 on the switch.



If using breakout cables, the port designation changes to x:y, where x is the physical port and y is the lane when split to 4 x 10G or 4 x 25G. For example, the logical interface 1/1/4:2 in software is associated with lane 2 on physical port 4 in slot 1 on member 1.

AOS-CX is a new, modern, fully programmable operating system built using a database-centric design that ensures higher availability and dynamic software process changes for reduced downtime. In addition to robust hardware reliability, the AOS-CX operating system includes additional software elements not available with traditional systems, including:

- Automated visibility to help IT organizations scale: The Aruba Network Analytics Engine allows IT to monitor and troubleshoot network, system, application, and security-related issues easily through simple scripts. This engine comes with a built-in time series database that enables customers and developers to create software modules that allow historical troubleshooting, as well as analysis of historical trends to predict and avoid future problems due to scale, security, and performance bottlenecks.
- Programmability simplified: A switch that is running the AOS-CX operating system is fully programmable with a built-in Python interpreter as well as REST-based APIs, allowing easy integration with other devices both on premise and in the cloud. This programmability accelerates IT organization understanding of and response to network issues. The database holds all aspects of the configuration, statistics, and status information in a highly structured and fully defined form.
- Faster resolution with network insights: With legacy switches, IT organizations must troubleshoot problems after the fact, using traditional tools like CLI and SNMP, augmented by separate, expensive monitoring, analytics, and troubleshooting solutions. These capabilities are built in to the AOS-CX operating system and are extensible.
- High availability: For switches that support active and standby management modules, the AOS-CX database can synchronize data between active and standby modules and maintain current configuration and state information during a failover to the standby management module.
- Ease of roll-back to previous configurations: The built-in database acts as a network record, enabling support for multiple configuration checkpoints and the ability to roll back to a previous configuration checkpoint.

AOS-CX system databases

The AOS-CX operating system is a modular, database-centric operating system. Every aspect of the switch configuration and state information is modeled in the AOS-CX switch configuration and state database, including the following:

- Configuration information
- Status of all features
- Statistics

The AOS-CX operating system also includes a time series database, which acts as a built-in network record. The time series database makes the data seamlessly available to Aruba Network Analytics Engine agents that use rules that evaluate network conditions over time. Time-series data about the resources monitored by agents are automatically collected and presented in graphs in the switch Web UI.

Aruba Network Analytics Engine introduction

The Aruba Network Analytics Engine is a first-of-its-kind built-in framework for network assurance and remediation. Combining the full automation and deep visibility capabilities of the AOS-CX operating system, this unique framework enables monitoring, collecting network data, evaluating conditions, and taking corrective actions through simple scripting agents.

This engine is integrated with the AOS-CX system configuration and time series databases, enabling you to examine historical trends and predict future problems due to scale, security, and performance bottlenecks. With that information, you can create software modules that automatically detect such issues and take appropriate actions.

With the faster network insights and automation provided by the Aruba Network Analytics Engine, you can reduce the time spent on manual tasks and address current and future demands driven by Mobility and IoT.

AOS-CX CLI

The AOS-CX CLI is an industry standard text-based command-line interface with hierarchical structure designed to reduce training time and increase productivity in multivendor installations.

The CLI gives you access to the full set of commands for the switch while providing the same password protection that is used in the Web UI. You can use the CLI to configure, manage, and monitor devices running the AOS-CX operating system.

Aruba CX mobile app

The Aruba CX mobile app enables you to use a mobile device to configure or access a supported AOS-CX switch. You can connect to the switch through Bluetooth or Wi-Fi.

You can use this application to do the following:

- Connect to the switch for the first time and configure basic operational settings—all without requiring you to connect a terminal emulator to the console port.
- View and change the configuration of individual switch features or settings.
- Manage the running configuration and startup configuration of the switch, including the following:
 - Transferring files between the switch and your mobile device
 - Sharing configuration files from your mobile device
 - Copying the running configuration to the startup configuration
- Access the switch CLI.

For more information about the Aruba CX mobile app, see:

www.arubanetworks.com/products/networking/switches/cx-mobileapp.

Aruba NetEdit

Aruba NetEdit enables the automation of multidevice configuration change workflows without the overhead of programming.

The key capabilities of NetEdit include the following:

- Intelligent configuration with validation for consistency and compliance
- Time savings by simultaneously viewing and editing multiple configurations
- Customized validation tests for corporate compliance and network design
- Automated large-scale configuration deployment without programming

- Ability to track changes to hardware, software, and configurations (whether made through NetEdit or directly on the switch) with automated versioning

For more information about Aruba NetEdit, search for NetEdit at the following website:

www.hpe.com/support/hpesc

Ansible modules

Ansible is an open-source IT automation platform.

Aruba publishes a set of Ansible configuration management modules designed for switches running AOS-CX software. The modules are available from the following places:

- The `arubanetworks.aoscx_role` role in the Ansible Galaxy at: https://galaxy.ansible.com/arubanetworks/aoscx_role
- The `aoscx-ansible-role` at the following GitHub repository: <https://github.com/aruba/aoscx-ansible-role>

AOS-CX Web UI

The Web UI gives you quick and easy visibility into what is happening on your switch, providing faster problem detection, diagnosis, and resolution. The Web UI provides dashboards and views to monitor the status of the switch, including easy to read indicators for: power supply, temperature, fans, CPU use, memory use, log entries, system information, firmware, interfaces, VLANs, and LAGs. In addition, you use the Web UI to access the Network Analytics Engine, run certain diagnostics, and modify some aspects of the switch configuration.

AOS-CX REST API

Switches running the AOS-CX software are fully programmable with a REST (REpresentational State Transfer) API, allowing easy integration with other devices both on premises and in the cloud. This programmability—combined with the Aruba Network Analytics Engine—accelerates network administrator understanding of and response to network issues.

The AOS-CX REST API enables programmatic access to the AOS-CX configuration and state database at the heart of the switch. By using a structured model, changes to the content and formatting of the CLI output do not affect the programs you write. And because the configuration is stored in a structured database instead of a text file, rolling back changes is easier than ever, thus dramatically reducing a risk of downtime and performance issues.

The AOS-CX REST API is a web service that performs operations on switch resources using HTTPS `POST`, `GET`, `PUT`, and `DELETE` methods.

A switch resource is indicated by its Uniform Resource Identifier (URI). A URI can be made up of several components, including the host name or IP address, port number, the path, and an optional query string. The AOS-CX operating system includes the AOS-CX REST API Reference, which is a web interface based on the Swagger UI. The AOS-CX REST API Reference provides the reference documentation for the REST API, including resources URIs, models, methods, and errors. The AOS-CX REST API Reference shows most of the supported read and write methods for all switch resources.

In-band and out-of-band management

Management communications with a managed switch can be either of the following:

In band

In-band management communications occur through ports on the line modules of the switch, using common communications protocols such as SSH and SNMP.

When you use an in-band management connection, management traffic from that connection uses the same network infrastructure as user data. User data uses the `data plane`, which is responsible for moving data from source to destination. Management traffic that uses the data plane is more likely to be affected by traffic congestion and other issues affecting the user network.

Out of band

OOBM (out-of-band management) communications occur through a dedicated serial or USB console port or through a dedicated networked management port.

OOBM operates on a `management plane` that is separate from the `data plane` used by data traffic on the switch and by in-band management traffic. That separation means that OOBM can continue to function even during periods of traffic congestion, equipment malfunction, or attacks on the network. In addition, it can provide improved switch security: a properly configured switch can limit management access to the management port only, preventing malicious attempts to gain access through the data ports.

Networked OOBM typically occurs on a management network that connects multiple switches. It has the added advantage that it can be done from a central location and does not require an individual physical cable from the management station to the console port of each switch.

SNMP-based management support

The AOS-CX operating system provides SNMP read access to the switch. SNMP support includes support of industry-standard MIB (Management Information Base) plus private extensions, including SNMP events, alarms, history, statistics groups, and a private alarm extension group. SNMP access is disabled by default.

User accounts

To view or change configuration settings on the switch, users must log in with a valid account. Authentication of user accounts can be performed locally on the switch, or by using the services of an external TACACS+ or RADIUS server.

Two types of user accounts are supported:

- Operators: Operators can view configuration settings, but cannot change them. No operator accounts are created by default.
- Administrators: Administrators can view and change configuration settings. A default locally stored administrator account is created with username set to **admin** and no password. You set the administrator account password as part of the initial configuration procedure for the switch.

Perform the initial configuration of a factory default switch using one of the following methods:

- Load a switch configuration using zero-touch provisioning (ZTP). When ZTP is used, the configuration is loaded from a server automatically when the switch booted from the factory default configuration.
- Connect to the switch wirelessly with a mobile device through Bluetooth, and use the Aruba CX Mobile App to deploy an initial configuration from a provided template. The template you choose during the deployment process determines how the management interface is configured. Optionally, as the final deployment step, you can select to import the switch into NetEdit through a WiFi connection to the NetEdit server.

Alternatively, you can use the Aruba CX Mobile App to manually configure switch settings and features for a subset of the features you can configure using the CLI. You can also access the CLI through the mobile application.

- Connect the management port on the switch to your network, and then use SSH client software to reach the switch from a computer connected to the same network. This requires that a DHCP server is installed on the network. Configure switch settings and features by executing CLI commands.
- Connect a computer running terminal emulation software to the console port on the switch. Configure switch settings and features by executing CLI commands.

Initial configuration using ZTP

Zero Touch Provisioning (ZTP) configures a switch automatically from a remote server.

Prerequisites

- The switch must be in the factory default configuration.

Do not change the configuration of the switch from its factory default configuration in any way, including by setting the administrator password.

- Your network administrator or installation site coordinator must provide a Category 6 (Cat6) cable connected to the network that provides access to the servers used for Zero Touch Provisioning (ZTP) operations.

Procedure

1. Connect the network cable to the out-of-band management port on the switch.
See the *Installation Guide* for switch to determine the location of the switch ports.
2. If the switch is powered on, power off the switch.
3. Power on the switch. During the ZTP operation, the switch might reboot if a new firmware image is being installed. ZTP goes to "Failed" state if the switch receives DHCP IP for vlan1 and does not receive any ZTP options within 60 seconds.

Initial configuration using the Aruba CX mobile app

This procedure describes how to use your mobile device to connect to the Bluetooth interface of the switch to connect to the switch for the first time so that you can configure basic operational settings using the Aruba CX mobile app.

Prerequisites

- You have obtained the USB Bluetooth adapter that was shipped with the switch. Information about the make and model of the supported adapter is included in the information about the Aruba CX mobile app in the Apple Store or Google Play.
- The Aruba CX mobile app must be installed on your mobile device.
- Bluetooth must be enabled on your mobile device.
- Your mobile device must be within the communication range of the Bluetooth adapter.
- If you are planning to import the switch into NetEdit, your mobile device must be able to use a Wi-Fi connection—not Bluetooth—to access the NetEdit server.

If your mobile device does not support simultaneous Bluetooth and Wi-Fi connections, you must use the NetEdit interface to import the switch at a later time. You can use the **Devices** tab to display the IP address of the switches you configured using your mobile device.

- The switch must be installed and powered on, with the network operating system boot sequence complete.

For information about installing and powering on the switch, see the *Installation Guide* for the switch.

Because you are using this mobile application to configure the switch through the Bluetooth interface, it is not necessary to connect a console to the switch.

- Bluetooth and USB must be enabled on the switch. On switches shipped from the factory, Bluetooth and USB are enabled by default.

Procedure

1. Install the USB Bluetooth adapter in the USB port of the switch.

For switches that have multiple management modules, you must install the USB Bluetooth adapter in the USB port of the active management module. Typically, the active management module is the module in slot 5.

Switches shipped from the factory have both USB and Bluetooth enabled by default.

For information about the location of the USB port on the switch, see the *Installation Guide* for the switch.

2. Use the Bluetooth settings on your mobile device to pair and connect the switch to your mobile device.

If you are in range of multiple Bluetooth devices, more than one device is displayed on the list of available devices. Switches running the AOS-CX operating system are displayed in the following format:

Switch_model - Serial_number

For example: 8325-987654X1234567 or 8320-AB12CDE123

A switch supports one active Bluetooth connection at a time.

On some Android devices, you might need to change the settings of the paired device to specify that it be used for Internet access.

3. Open the Aruba CX mobile app on your mobile device.



The application attempts to connect to the switch using the switch Bluetooth IP address and the default switch login credentials. The **Home** screen of the application shows the status of the connection to the switch:

- If the login attempt was successful, the Bluetooth icon is displayed and the status message shows the Bluetooth IP address of the switch. In addition, the connection graphic is green. You can continue to the next step.
 - If the login attempt was not successful, but a response was received, the Bluetooth icon is displayed, but the status message is: `Login Required`. You can continue to the next step. When you tap one of the tiles, you will be prompted for login credentials.
 - If the login attempt did not receive a response, the Bluetooth icon is not displayed, and the status message is: `No Connection`.
4. Create the initial switch configuration:
- You can deploy an initial configuration to the switch. Through this process, you supply the information required by a configuration template that you choose from a list of templates provided by the application. Then you deploy the configuration to the switch and, optionally, import the switch into NetEdit.



When you deploy a switch configuration, it becomes the running configuration, replacing the entire existing configuration of the switch. All changes previously made to the factory default configuration are overwritten.

If you plan to both deploy a switch configuration and customize the configuration of switch features, deploy the initial configuration first.

To deploy an initial switch configuration, tap: **Initial Config** and follow the instructions in the application.

- Alternatively, you can complete the initial configuration of the switch by tapping **Modify Config** and then selecting the features and settings to configure.
- You can also use the **Modify Config** feature to configure some switch features after the initial configuration is complete. For more information about what you can configure using the Aruba CX mobile app, see the online help for the application.

Troubleshooting Bluetooth connections

Bluetooth connection IP addresses

The Bluetooth connection uses IP addresses in the 192.168.99.0/24 subnet.

Switch

192.168.99.1

Mobile device

192.168.99.10

Bluetooth is connected but the switch is not reachable

Symptom

The mobile device settings indicate that the device is connected to the switch through Bluetooth. However, the mobile application indicates that the switch is not reachable.

Solution 1

Cause

The mobile device is paired with a different nearby switch.

Action

1. Verify the model number and serial number of the switch to which you are attempting to connect.
2. Use the Bluetooth settings on your mobile device to pair and connect the switch to your mobile device.

If you are in range of multiple Bluetooth devices, more than one device is displayed on the list of available devices. Switches running the AOS-CX operating system are displayed in the following format:

Switch_model-Serial_number

For example: 8325-987654X1234567 or 8320-AB12CDE123

A switch supports one active Bluetooth connection at a time.

On some Android devices, you might need to change the settings of the paired device to specify that it be used for Internet access.

Solution 2

Cause

The mobile device is connected to a different network—such as through a Wi-Fi connection—that conflicts with the subnet used for the switch Bluetooth connection.

Action

Disconnect the mobile device from the network that is using the conflicting subnet.

For example, use the mobile device settings to turn off or disable Wi-Fi. If you choose to disable Wi-Fi on the mobile device, and you are not able to access cellular service, you will not be able to connect to the NetEdit server to import the switch, but you can still deploy a switch configuration.

Bluetooth is not connected

Symptom

Your mobile device cannot establish a Bluetooth connection to the switch.

Solution 1

Cause

Bluetooth is not enabled on your mobile device.

Action

- Use your mobile device settings application to enable Bluetooth.
- Use the Bluetooth settings on your mobile device to pair and connect the switch to your mobile device.

If you are in range of multiple Bluetooth devices, more than one device is displayed on the list of available devices. Switches running the AOS-CX operating system are displayed in the following format:

Switch_model-Serial_number

For example: 8325-987654X1234567 or 8320-AB12CDE123

A switch supports one active Bluetooth connection at a time.

On some Android devices, you might need to change the settings of the paired device to specify that it be used for Internet access.

Solution 2

Cause

Your mobile device is not within the broadcast range of the Bluetooth adapter.

Action

Move closer to the switch.

Devices can communicate through Bluetooth when they are close, typically within a few feet of each other.

Solution 3

Cause

Your mobile device is not paired with the switch.

Action

1. Use your mobile device settings application to enable Bluetooth.
2. Use the Bluetooth settings on your mobile device to pair and connect the switch to your mobile device.

If you are in range of multiple Bluetooth devices, more than one device is displayed on the list of available devices. Switches running the AOS-CX operating system are displayed in the following format:

Switch_model-Serial_number

For example: 8325-987654X1234567 or 8320-AB12CDE123

A switch supports one active Bluetooth connection at a time.

3. On some Android devices, you might need to change the settings of the paired device to specify that it be used for Internet access.

Solution 4

Cause

Bluetooth is not enabled on the switch.

New switches are shipped from the factory with the USB port and Bluetooth enabled. However, an installed switch might have been configured to disable Bluetooth or disable the USB port, which the USB Bluetooth adapter uses.

Action

Use a different CLI connection to enable Bluetooth on the switch.

- Use the `show bluetooth` CLI command to show the Bluetooth configuration and the status of the Bluetooth adapter.
- To enable the USB port, enter the CLI command: `usb`
- An inserted USB drive must be mounted each time the switch boots or fails over to a different management module. To mount the drive, enter the CLI command: `usb mount`
- To enable Bluetooth, enter the CLI command: `bluetooth enable`

Solution 5

Cause

Another mobile device has already connected to the switch through Bluetooth. This cause is likely if your device is repeatedly disconnected within 1-2 seconds of establishing a connection.

Action

1. Use a different CLI connection to see if there is another device connected:

Use the `show bluetooth` CLI command to show the Bluetooth configuration and the status of the Bluetooth adapter.

2. Either disconnect the other device or use that device to communicate with the switch.

A switch can use Bluetooth to connect to one mobile device at a time.

Solution 6

Cause

The switch has been restarted since the mobile device was last paired with the switch, and the device is having difficulty establishing the Bluetooth connection.

Action

1. Use the Bluetooth mobile device settings to forget the switch device.
2. Use your mobile device settings application to disable Bluetooth.

Use your mobile device settings application to enable Bluetooth.

If you are in range of multiple Bluetooth devices, more than one device is displayed on the list of available devices. Switches running the AOS-CX operating system are displayed in the following format:

Switch_model-Serial_number

For example: 8325-987654X1234567 or 8320-AB12CDE123

A switch supports one active Bluetooth connection at a time.

On some Android devices, you might need to change the settings of the paired device to specify that it be used for Internet access.

Solution 7

Cause

The USB Bluetooth adapter is not installed in the switch.

If the switch has multiple management modules, the USB Bluetooth adapter might be installed in the management module that is not the active management module.

Action

Install the USB Bluetooth adapter in the USB port of the switch.

For switches that have multiple management modules, you must install the USB Bluetooth adapter in the USB port of the active management module. Typically, for new switches, the active management module is the module in slot 5 (Aruba 8400 switches) or slot 1 (Aruba 6400 switches).

For information about the location of the USB port on the switch, see the *Installation Guide* for the switch.

Solution 8

Cause

A problem occurred with the Bluetooth feature on the switch. For example, the software daemon was stopped and then restarted.

Action

1. Use a different connection to the switch CLI to disable and then enable Bluetooth.

```
switch(config)# bluetooth disable  
switch(config)# bluetooth enable
```

2. Use the Bluetooth mobile device settings to forget the switch device.
3. Use your mobile device settings application to disable Bluetooth.
4. Use your mobile device settings application to enable Bluetooth.
5. Use your mobile device settings application to enable Bluetooth.

If you are in range of multiple Bluetooth devices, more than one device is displayed on the list of available devices. Switches running the AOS-CX operating system are displayed in the following format:

Switch_model-Serial_number

For example: 8325-987654X1234567 or 8320-AB12CDE123

A switch supports one active Bluetooth connection at a time.

On some Android devices, you might need to change the settings of the paired device to specify that it be used for Internet access.

Solution 9

Cause

A switch that is member of a stack (but is not the conductor switch), has a USB Bluetooth adapter installed, but mobile application has lost contact with that switch.

Action

Remove and then reinstall the USB Bluetooth adapter.

Do not remove the USB Bluetooth adapter from the conductor switch.

Initial configuration using the CLI

This procedure describes how to connect to the switch for the first time and configure basic operational settings using the CLI. In this procedure, you use a computer to connect to the switch using the either the console port or management port.

Procedure

1. Connect to the [console port](#) or the [management port](#).
2. [Log into the switch for the first time](#).
3. [Configure switch time using the NTP client](#).

Connecting to the console port

Prerequisites

- A switch installed as described in its hardware installation guide.
- A computer with terminal emulation software.
- A JL448A Aruba X2 C2 RJ45 to DB9 console cable.

Procedure

1. Connect the console port on the switch to the serial port on the computer using a console cable.
2. Start the terminal emulation software on the computer and configure a new serial session with the following settings:
 - Speed: 115200 bps
 - Data bits: 8
 - Stop bits: 1
 - Parity: None
 - Flow control: None
3. Start the terminal emulation session.
4. Press **Enter** once. If the connection is successful, you are prompted to login.

Optional console port speed setting

If desired, the console port speed can be set with the `console baud-rate` command. For example, setting the console port speed to 9600 bps:

```
switch(config)# console baud-rate 9600  
This command will configure the baud rate immediately for the active serial  
console session. After the command is executed the user will be prompted to  
re-login. The serial console will be inaccessible until the terminal client  
settings are updated to match the baud rate of the switch.  
Continue (y/n)? y
```

Showing the console port current speed:

```
switch# show console  
Baud Rate: 9600
```

For details on the `console baud-rate` and `show console` commands, see [Switch system and hardware commands](#).

Connecting to the management port

Prerequisites

- Two Ethernet cables
- SSH client software

Procedure

1. By default, the management interface is set to automatically obtain an IP address from a DHCP server, and SSH support is enabled. If there is no DHCP server on your network, you must configure a static address on the management interface:
 - a. Connect to the [console port](#)
 - b. Configure the [management interface](#).
2. Use an Ethernet cable to connect the management port to your network.
3. Use an Ethernet cable to connect your computer to the same network.
4. Start your SSH client software and configure a new session using the address assigned to the management interface. (If the management interface is set to operate as a DHCP client, retrieve

- the IP address assigned to the management interface from your DHCP server.)
5. Start the session. If the connection is successful, you are prompted to log in.

Logging into the switch for the first time

The first time you log in to the switch you must use the default administrator account. This account has no password, so you will be prompted on login to define one to safeguard the switch.

Procedure

1. When prompted to log in, specify **admin**. When prompted for the password, press **ENTER**. (By default, no password is defined.)

For example:

```
switch login: admin
password:
```

2. Define a password for the **admin** account. The password can contain up to 32 alphanumeric characters in the range ASCII 32 to 127, which includes special characters such as asterisk (*), ampersand (&), exclamation point (!), dash (-), underscore (_), and question mark (?).

For example:

```
Please configure the 'admin' user account password.
Enter new password: *****
Confirm new password: *****
switch#
```

3. You are placed into the manager command context, which is identified by the prompt: `switch#`, where `switch` is the model number of the switch. Enter the command `config` to change to the global configuration context `config`.

For example:

```
switch# config
switch(config)#
```

Setting switch time using the NTP client

Prerequisites

- The IP address or domain name of an NTP server.
- If the NTP server uses authentication, obtain the password required to communicate with the NTP server.

Procedure

1. If the NTP server requires authentication, define the authentication key for the NTP client with the command `ntp authentication`.

2. Configure an NTP server with the command `ntp server`. When configuring a time backward more than five minutes on the Aruba 8320, 8325, or 9300 Switch Series, a reboot is recommended to avoid unusual switch behavior.
3. By default, NTP traffic is sent on the default VRF. If you want to send NTP traffic on the management VRF, use the command `ntp vrf`.
4. Review your NTP configuration settings with the commands `show ntp servers` and `show ntp status`.
5. See the current switch time, date, and time zone with the command `show clock`.

Example

This example creates the following configuration:

- Defines the authentication key **1** with the password **myPassword**.
- Defines the NTP server **my-ntp.mydomain.com** and makes it the preferred server.
- Sets the switch to use the management VRF (**mgmt**) for all NTP traffic.

```
switch(config)# ntp authentication-key 1 md5 myPassword
switch(config)# ntp server my-ntp.mydomain.com key 10 prefer
switch(config)# ntp vrf mgmt
```

Configuring banners

1. Configure the banner that is displayed when a user connects to a management interface. Use the command `banner motd`. For example:

```
switch(config)# banner motd ^
Enter a new banner. Terminate the banner with the delimiter you have chosen.
>> This is an example of a banner text which a connecting user
>> will see before they are prompted for their password.
>>
>> As you can see it may span multiple lines and the input
>> will be terminated when the delimiter character is
>> encountered.^
Banner updated successfully!
```

2. Configure the banner that is displayed after a user is authenticated. Use the command `banner exec`. For example:

```
switch(config)# banner exec &
Enter a new banner. Terminate the banner with the delimiter you have chosen.
>> This is an example of a different banner text. This time
>> the banner entered will be displayed after a user has
>> authenticated.
>>
>> & This text will not be included because it comes after the '&'
Banner updated successfully!
```

Configuring in-band management on a data port

Prerequisites

- A connection to the CLI via either the console port or the management port
- Ethernet cable

Procedure

1. Use an Ethernet cable to connect a data port to your network.
2. [Configure a layer 3 interface](#) on the data port.
3. Enable SSH support on the interface (on the default VRF) with the command `ssh server vrf default`.

For example:

```
switch# config
switch(config)# ssh server vrf default
```

4. Enable the Web UI on the interface (on the default VRF) with the command `https-server vrf default`.

For example:

```
switch(config)# https-server vrf default
```

Using the Web UI

The Web UI is disabled by default. Follow these steps to enable it on the management port and log in. The Web UI is enabled by default on the default VRF.

Prerequisites

- A connection to the switch CLI.

Procedure

1. Log in to the CLI.
2. Switch to `config` context and enable the Web UI on the management port VRF with the command `https-server vrf mgmt`.

For example:

```
switch# config
switch(config)# https-server vrf mgmt
```

3. Start your web browser and enter the IP address of the management port in the address bar,
For example: **https://192.168.1.1**
4. The Web UI starts and you are prompted to log in.

Configuring the management interface

Prerequisites

A connection to the console port.

Procedure

1. Switch to the management interface context with the command `interface mgmt`.
2. By default, the management interface on the management port is enabled. If it was disabled, re-enable it with the command `no shutdown`.
3. Use the command `ip dhcp` to configure the management interface to automatically obtain an address from a DHCP server on the network (factory default setting). Or, assign a static IPv4 or IPv6 address, default gateway, and DNS server with the commands `ip address`, `ipv6 address`, `ip static`, `default-gateway`, and `nameserver`.
4. SSH is enabled by default on the management VRF. If disabled, enable SSH with the command `ssh server vrf mgmt`.

Examples

This example enables the management interface with dynamic addressing using DHCP:

```
switch(config)# interface mgmt
switch(config-if-mgmt)# no shutdown
switch(config-if-mgmt)# ip dhcp
```

This example enables the management interface with static addressing creating the following configuration:

- Sets a static IPv4 address of **198.168.100.10** with a mask of **24** bits.
- Sets the default gateway to **198.168.100.200**.
- Sets the DNS server to **198.168.100.201**.

```
switch(config)# interface mgmt
switch(config-if-mgmt)# no shutdown
switch(config-if-mgmt)# ip static 198.168.100.10/24
switch(config-if-mgmt)# default-gateway 198.168.100.200
switch(config-if-mgmt)# nameserver 198.168.100.201
```

IP prefix priority



IP prefix priority applies to the 8360 Switch Series.

IP prefix priority configuration is used to optimize route lookup based on the IP address prefix length, sometimes known as the IP subnet mask length. Switch models supporting IP prefix priority configuration have six lookup tables with the first five being configurable for specific prefix lengths and the last one being used for all other prefix lengths.

The default configuration of the five exact IP prefix tables use common lengths typical to many networks. For sites that make extensive use of atypical IP prefix lengths (lengths that differ from the defaults), the exact prefix tables can be customized by configuring IP prefix priority. Doing so avoids over filling the “other” table and keeps as many routes as possible in the fast-path.

Commands `show ip prefix-priority` and `show ipv6 prefix-priority` show the default, current, and any pending IP prefix priority configuration for a switch.

See also [IP Prefix priority commands](#).

System profiles and configurable IP prefix priority

System profiles set the overall capabilities and capacities of the switch (including IP prefix partitions), based on the selected profile used at boot time. Only certain profiles support configurable IP prefix priority.

To use configurable IP prefix priority, the switch must be booted into a capable profile. If a switch is booted into a profile that does not support configurable IP prefix priority, a warning is displayed before the reboot, and upon reboot, the default IP prefix tables are used and any configured IP prefix priority is discarded.

See also [Selecting the system profile](#).

IP prefix priority defaults



This default IP prefix priority information only applies to system profiles specifically named here. Any profile unnamed here does not support configurable IP prefix priority.

8360 Switch Series, profile: **Core-Spine** (five prefix values required):

- **IPv4:** 24, 23, 22, 21, 20
- **IPv6:** 64, 48, 44, 36, 32

IP Prefix priority commands

ip prefix-priority

```
ip prefix-priority <PREFIX-LENGTHS>
no ip prefix-priority [<PREFIX-LENGTHS>]
```

Description

Configures custom IPv4 route prefix lengths for the exact prefix match tables of the switch. The switch must be rebooted to apply the change.



Following the reboot, IPv4 prefix priorities will remain in a pending state until at least one route is learned. A connected route counts so this can be as simple as having an L3 interface with an IP address in the up state.

The no form of this command resets the prefix lengths to their default

Parameter	Description
<PREFIX-LENGTHS>>	Specifies a space-separated list of exactly five prefix lengths, in descending order. Range: 8 to 31.

Examples

Configuring custom IPv4 route prefix lengths:

```
switch(config)# ip prefix-priority 29 28 27 24 16
Save this config and reboot the switch for the changes to take effect
...
```

Resetting IPv4 route prefix lengths to their default:

```
switch(config)# no ip prefix-priority
Save this config and reboot the switch for the changes to take effect
...
```

Attempting to configure custom IPv4 route prefix lengths with some lengths not in descending order:

```
switch(config)# ip prefix-priority 28 29 27 23 16
Prefix lengths must be specified in descending order
```

Attempting to configure eight prefix lengths:

```
switch(config)# ip prefix-priority 29 28 27 24 23 16 12 8
Invalid input: 16
```

Attempting to configure three prefix lengths:

```
switch(config)# ip prefix-priority 29 28 27
% Command incomplete.
```

Command History

Release	Modification
10.10	Command introduced.

Command Information

Platforms	Command context	Authority
8100 8360	config	Administrators or local user group members with execution rights for this command.

ipv6 prefix-priority

```
ipv6 prefix-priority <PREFIX-LENGTHS>
no ipv6 prefix-priority [<PREFIX-LENGTHS>]
```

Description

Configures custom IPv6 route prefix lengths for the exact prefix match tables of the switch. The switch must be rebooted to apply the change.



Following the reboot, IPv6 prefix priorities will remain in a pending state until at least one route is learned. A connected route counts so this can be as simple as having an L3 interface with an IP address in the up state.

The no form of this command resets the prefix lengths to their default

Parameter	Description
<PREFIX-LENGTHS>>	Specifies a space-separated list of exactly five prefix lengths, in descending order. Range: 8 to 64.

Examples

Configuring custom IPv6 route prefix lengths:

```
switch(config)# ipv6 prefix-priority 64 63 62 32 28
Save this config and reboot the switch for the changes to take effect
...
```

Resetting IPv6 route prefix lengths to their default:

```
switch(config)# no ipv6 prefix-priority
Save this config and reboot the switch for the changes to take effect
...
```

Attempting to configure custom IPv6 route prefix lengths with some lengths not in descending order:

```
switch(config)# ipv6 prefix-priority 64 62 63 31 32
Prefix lengths must be specified in descending order
```

Attempting to configure eight prefix lengths:

```
switch(config)# ipv6 prefix-priority 64 63 62 32 31 28 24 23
Invalid input: 28
```

Attempting to configure three prefix lengths:

```
switch(config)# ipv6 prefix-priority 64 63 31
% Command incomplete.
```

Command History

Release	Modification
10.10	Command introduced.

Command Information

Platforms	Command context	Authority
8100 8360	config	Administrators or local user group members with execution rights for this command.

show ip prefix-priority

```
show ip prefix-priority
```


Description

Shows the configuration, status, and defaults of the IPv4 route prefix lengths for the exact prefix match tables of the switch.

Examples

Showing configured IPv4 route prefix lengths that are pending until the switch is rebooted and at least one route is learned:

```
switch# show ip prefix-priority

IP Exact-Prefix Table Information

Configuration Status: Ready to apply on next reboot

Table      Default Length  Current Length  Pending Length
-----
1           24             24             29*
2           23             23             28*
3           22             22             27*
4           21             21             24*
5           20             20             23*

* Pending values will be applied on the next reboot
```

Command History

Release	Modification
10.10	Command introduced.

Command Information

Platforms	Command context	Authority
8100 8360	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show ipv6 prefix-priority

```
show ipv6 prefix-priority
```

Description

Shows the configuration, status, and defaults of the IPv6 route prefix lengths for the exact prefix match tables of the switch.

Examples

Showing configured IPv6 route prefix lengths that are pending until the switch is rebooted and at least one route is learned:

```
switch# show ipv6 prefix-priority

IPv6 Exact-Prefix Table Information

Configuration Status: Ready to apply on next reboot
```

Table	Default Length	Current Length	Pending Length
1	64	64	64
2	48	48	63*
3	44	44	62*
4	36	36	32*
5	32	32	31*

* Pending values will be applied on the next reboot

Command History

Release	Modification
10.10	Command introduced.

Command Information

Platforms	Command context	Authority
8100 8360	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Selecting the system profile

System profiles set the overall capabilities and capacities of the switch, based on the selected profile used at boot time. System profiles set capacities such as that of the hardware forwarding table.

System profiles provide you with the flexibility to configure switches based on their location in the network (for example, core, spine, leaf). When a switch boots without a profile specifically configured, it boots with the default profile. When a switch is configured with a non-default profile, the switch requires a reboot for the profile to be applied.

Command `show profiles available` shows all profiles available on a particular switch.

See also [System profile commands](#).

Procedure

1. Set the system profile with the command `profile`.
2. Reboot the switch for the profile change to take effect with the command `boot system`.

Examples

(8320, 8325, 9300, 10000) Selecting the `13-agg` profile and then rebooting the system:

```
switch(config)# profile l3-agg
switch(config)# exit
switch# boot system
...
```

(8320, 8325, 9300, 10000) Selecting the **spine** profile and then rebooting the system:

```
switch(config)# profile Spine
switch(config)# exit
switch# boot system
...
```

(8360) Selecting the **Core-Spine** profile and then rebooting the system:

```
switch(config)# profile Core-Spine
switch(config)# exit
switch# boot system
...
```

System profile commands

profile

```
profile <PROFILE-NAME>
no profile [<PROFILE-NAME>]
```

Description

Selects the system profile. System profiles set the overall capabilities and capacities of the switch based on the selected profile used at boot time. Switch profiles set capacities such as that of the hardware forwarding table. Use command [show profiles available](#) to show the details of each available profile.



When a switch is configured with a non-default profile, the switch requires a reboot for the profile to be applied. You are prompted for the reboot.

The no form of this command resets the specified profile to its defaults.

8320, 8325, 9300, and 10000 Switch Series:

Profile names	Description
L3-agg	Optimizes for layer 3 forwarding with more table space allocated to host(ARP/ND) entries.
L3-core	(The default on the 8320 Switch Series.) Optimize for layer 3 forwarding with more table space allocated to route entries.
Leaf	(The default on the 8325, 9300, and 10000 Switch Series.) Optimizes for layer 2 forwarding with more table space allocated to overlay host entries (VXLAN).
spine	Optimizes for layer 3 forwarding with more table space allocated to route entries.

8360 Switch Series:

Profile names	Description
Aggregation-Leaf	(The default.) Optimizes for aggregation leaf.
Core-Spine	Optimizes for core spine.
Leaf-Extended	Optimizes for leaf extended.

Examples

(8320, 8325, 9300, 10000) Selecting the L3-agg profile and then rebooting the system:

```
switch(config)# profile l3-agg
switch(config)# exit
switch# boot system
...
```

(8320, 8325, 9300, 10000) Selecting the Spine profile and then rebooting the system:

```
switch(config)# profile Spine
switch(config)# exit
switch# boot system
...
```

(8360) Selecting the Core-Spine profile and then rebooting the system:

```
switch(config)# profile Core-Spine
switch(config)# exit
switch# boot system
...
```

Command History

Release	Modification
10.09	Command Introduced on the 10000.
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
8320 8325 8360 9300 10000	config	Administrators or local user group members with execution rights for this command.

show profiles available

```
show profiles available
```

Description

Shows all system profile names available and profile details.

Examples

Showing all available profiles for an 8320:

```
switch# show profiles available

Available profiles
-----
L3-agg    98304 L2 entries 120000 Host entries 16384  Route entries
L3-core   32768 L2 entries 14000  Host entries 131064 Route entries (Default)
Leaf      98304 L2 entries 120000 Host entries 16384  Route entries
Spine     32768 L2 entries 14000  Host entries 131064 Route entries
```

Showing all available profiles for an 8325 or 1000:

```
switch# show profiles available

Available profiles
-----
L3-agg    98304 L2 entries, 120000 Host entries (8190 unique overlay
          neighbors, 48638 unique underlay neighbors), 29696 Route entries
L3-core   32768 L2 entries, 28000 Host entries (16382 unique overlay
          neighbors, 32766 unique underlay neighbors), 163796 Route entries
Leaf      98304 L2 entries, 120000 Host entries (32766 unique overlay
          neighbors, 12286 unique underlay neighbors), 29696 Route entries
          (Default)
Spine     32768 L2 entries, 28000 Host entries (16382 unique overlay
          neighbors, 32766 unique underlay neighbors), 163796 Route entries
```

Showing all available profiles for a 9300:

```
switch# show profiles available

Available profiles
-----
L3-agg    98304 L2 entries, 120000 Host entries (8190 unique overlay
          neighbors, 48638 unique underlay neighbors), 29696 Route entries
L3-core   32768 L2 entries, 28000 Host entries (16382 unique overlay
          neighbors, 32766 unique underlay neighbors), 163796 Route entries
Leaf      98304 L2 entries, 120000 Host entries (32766 unique overlay
          neighbors, 12286 unique underlay neighbors), 29696 Route entries
          (Default)
Spine     32768 L2 entries, 28000 Host entries (16382 unique overlay
          neighbors, 32766 unique underlay neighbors), 163796 Route entries
```

Showing all available profiles for an 8360:

```
switch# show profiles available

Available profiles
-----
Aggregation-Leaf    114688 L2 entries, 163840 Host entries, 65536 Route entries
Core-Spine          32768 L2 entries, 65536 Host entries, 630784 Route entries
Leaf-Extended       212992 L2 entries, 16384 Host entries, 65536 Route entries
```

Showing all available profiles for a 10000:

```
switch# show profiles available

Available profiles
-----
L3-agg    98304 L2 entries, 120000 Host entries (8190 unique overlay
          neighbors, 48638 unique underlay neighbors), 29696 Route entries

L3-core   32768 L2 entries, 28000 Host entries (16382 unique overlay
          neighbors, 32764 unique underlay neighbors), 163796 Route entries

Leaf      98304 L2 entries, 120000 Host entries (32766 unique overlay
          neighbors, 12284 unique underlay neighbors), 29696 Route entries
          (Default)

Spine     32768 L2 entries, 28000 Host entries (16382 unique overlay
          neighbors, 32764 unique underlay neighbors), 163796 Route entries
```

Command History

Release	Modification
10.09	Command Introduced on the 10000.
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
8320 8325 8360 9300 10000	Manager (#)	Administrators or local user group members with execution rights for this command.

show profile current

```
show profile current
```

Description

Shows the current system profile.

Examples

Showing the current profile on the 8320, 8325, 9300, or 10000:

```
switch# show profile current

Current profile
-----
L3-core
```

Showing the current profile on the 8360:

```
switch# show profile current

Current profile
-----
Core-Spine
```

Command History

Release	Modification
10.09	Command Introduced on the 10000.
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
8320 8325 8360 9300 10000	Manager (#)	Administrators or local user group members with execution rights for this command.

Restoring the switch to factory default settings

Prerequisites

You are connected to the switch through its Console port.



This procedure erases all user information and configuration settings. Consider backing up your running configuration first.

1. Optionally, back up the running configuration with either `copy running-config <REMOTE-URL>` or `copy running-config <STORAGE-URL>`. The `json` storage format is required for later configuration restoration.
2. Switch to the configuration context with the command `config`.
3. Erase all user information and configuration, restoring the switch to its factory default state with the command `erase all zeroize`. Enter `Y` when prompted to continue. The switch automatically restarts.

4. Optionally restore your saved configuration (it must be in json format) with either `copy <REMOTE-URL> running-config` or `copy <STORAGE-URL> running-config` followed by `copy running-config startup-config`.

Example

Backing up the running configuration to a file on a remote server (using TFTP), resetting the switch to its factory default state, and then restoring the saved configuration.

```
switch# copy running-config tftp://192.168.1.10/backup_cfg json vrf mgmt

  % Total      % Received % Xferd  Average Speed   Time    Time       Time  Current
             %          0         0    100  10340      0   1329k --:--:-- --:--:-- --:--:--  1329k
 100 10340      0         0    100  10340      0   1313k --:--:-- --:--:-- --:--:--  1313k
switch#
switch#
switch# erase all zeroize
This will securely erase all customer data and reset the switch
to factory defaults. This will initiate a reboot and render the
switch unavailable until the zeroization is complete.
This should take several minutes to one hour to complete.
Continue (y/n)? y
The system is going down for zeroization.
[ OK ] Stopped PSPO Module Daemon.
[ OK ] Stopped AOS-CX Switch Daemon for BCM.
...
[ OK ] Stopped Remount Root and Kernel File Systems.
[ OK ] Reached target Shutdown.
reboot: Restarting system
Press Esc for boot options
ServiceOS Information:
  Version:          GT.01.03.0006
  Build Date:       2018-10-30 14:20:44 PDT
  Build ID:         ServiceOS:GT.01.03.0006:8ee0faaa52da:201810301420
  SHA:             xxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxx
...

##### Preparing for zeroization #####

##### Storage zeroization #####
##### WARNING: DO NOT POWER OFF UNTIL #####
##### ZEROIZATION IS COMPLETE #####
##### This should take several minutes #####
##### to one hour to complete #####

##### Restoring files #####

Boot Profiles:

0. Service OS Console
1. Primary Software Image [XL.10.02.0010]
2. Secondary Software Image [XL.10.02.0010]

Select profile(primary):

Bootting primary software image...
Verifying Image...

Image Info:
  Name: AOS-CX
  Version: XL.10.02.0010
```



```
Build Id: AOS-CX:XL.10.02.0010:feaf5b9b7f09:201901292014
Build Date: 2019-01-29 12:43:50 PST
```

```
Extracting Image...
Loading Image...
Done.
kexec_core: Starting new kernel
System is initializing
fips_post_check[5473]: FIPS_POST: Cryptographic selftest started...SUCCESS
[ OK ] Started Login banner readiness check.
...
8400X login: admin
Password:

switch#
switch#
switch# copy tftp://192.168.1.10/backup_cfg running-config json vrf mgmt
% Total      % Received % Xferd  Average Speed   Time    Time     Time  Current
           Dload  Upload   Total     Spent    Left  Speed
100 10340  100 10340    0     0  2858k      0 --:--:-- --:--:-- --:--:-- 2858k
100 10340  100 10340    0     0  2804k      0 --:--:-- --:--:-- --:--:-- 2804k
Large configuration changes will take time to process, please be patient.
switch#
switch#
switch# copy running-config startup-config
Large configuration changes will take time to process, please be patient.
switch#
```

Management interface commands

default-gateway

```
default-gateway <IP-ADDR>
no default-gateway <IP-ADDR>
```

Description

Assigns an IPv4 or IPv6 default gateway to the management interface. An IPv4 default gateway can only be configured if a static IPv4 address was assigned to the management interface. An IPv6 default gateway can only be configured if a static IPv6 address was assigned to the management interface. The default gateway should be on the same network segment.

The `no` form of this command removes the default gateway from the management interface.

Parameter	Description
<IP-ADDR>	Specifies an IP address in IPv4 format (x.x.x.x), where x is a decimal number from 0 to 255, or IPv6 format (xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx), where x is a hexadecimal number from 0 to F.

Examples

Setting a default gateway with the IPv4 address of **198.168.5.1**:

```
switch(config)# interface mgmt
switch(config-if-mgmt)# default-gateway 198.168.5.1
```

Setting an IPv6 address of **2001:DB8::1**:

```
switch(config)# interface mgmt
switch(config-if-mgmt)# default-gateway 2001:DB8::1
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
8100 8320 8325 8360 9300 10000	config-if-mgmt	Administrators or local user group members with execution rights for this command.

ip static

```
ip static <IP-ADDR>/<MASK>
no ip static <IP-ADDR>/<MASK>
```

Description

Assigns an IPv4 or IPv6 address to the management interface.

The `no` form of this command removes the IP address from the management interface and sets the interface to operate as a DHCP client.

Parameter	Description
<IP-ADDR>	Specifies an IP address in IPv4 format (x.x.x.x), where x is a decimal number from 0 to 255, or IPv6 format (xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx), where x is a hexadecimal number from 0 to F.
<MASK>	Specifies the number of bits in an IPv4 or IPv6 address mask in CIDR format (x), where x is a decimal number from 0 to 32 for IPv4, and 0 to 128 for IPv6.

Examples

Setting an IPv4 address of **198.51.100.1** with a mask of **24** bits:

```
switch(config)# interface mgmt
switch(config-if-mgmt)# ip static 198.51.100.1/24
```

Setting an IPv6 address of **2001:DB8::1** with a mask of **32** bits:

```
switch(config)# interface mgmt
switch(config-if-mgmt)# ip static 2001:DB8::1/32
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
8100 8320 8325 8360 9300 10000	config-if-mgmt	Administrators or local user group members with execution rights for this command.

nameserver

```
nameserver <PRIMARY-IP-ADDR> [ <SECONDARY-IP-ADDR> ]
no nameserver <PRIMARY-IP-ADDR> [ <SECONDARY-IP-ADDR> ]
```

Description

Assigns a primary or secondary IPv4 or IPv6 DNS server to the management interface. IPv4 DNS servers can only be configured if a static IPv4 address was assigned to the management interface. IPv6 DNS servers can only be configured if a static IPv6 address was assigned to the management interface. The default gateway should be on the same network segment.

The `no` form of this command removes the DNS servers from the management interface.

Parameter	Description
<PRIMARY-IP-ADDR>	Specifies the IP address of the primary DNS server. Specify the address in IPv4 format (x.x.x.x), where x is a decimal number from 0 to 255, or IPv6 format (xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx), where x is a hexadecimal number from 0 to F.
<SECONDARY-IP-ADDR>	Specifies the IP address of the secondary DNS server. Specify the address in IPv4 format (x.x.x.x), where x is a decimal number from 0 to 255, or IPv6 format (xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx), where x is a hexadecimal number from 0 to F.

Examples

Setting primary and secondary DNS servers with the IPv4 addresses of **198.168.5.1** and **198.168.5.2** :

```
switch(config)# interface mgmt
switch(config-if-mgmt)# nameserver 198.168.5.1 198.168.5.2
```

Setting primary and secondary DNS servers with the IPv6 addresses of **2001:DB8::1** and **2001:DB8::2**:

```
switch(config)# interface mgmt
switch(config-if-mgmt)# nameserver 2001:DB8::1 2001:DB8::2
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
8100 8320 8325 8360 9300 10000	config-if-mgmt	Administrators or local user group members with execution rights for this command.

psm

```
psm {host <psm-ip-addr-1> <psm-ip-addr-2> <psm-ip-addr-3> [vrf default|mgmt]}| list | no
```

Description

The Pensando Policy and Services Manager (PSM) is a programmable, secure, highly available, centralized system for managing infrastructure policy, with capabilities for:

- Deploying and controlling distributed firewall security
- Telemetry and analytics
- Troubleshooting
- Operations and maintenance: events, alerts, technical support
- Authentication, authorization, and accounting (AAA)

The PSM is designed to establish and manage consistent policies for each 10000 Switch Series Distributed Services Switch (DSS).

Parameter	Description
host <psm-ip-addr-1> <psm-ip-addr-2> <psm-ip-addr-3>	Provide the IP addresses for the cluster nodes of the PSM to which the DSS will associate. The maximum number of hosts is three, and best practices is to specify all three.
vrf default mgmt	Define the PSM connectivity type . ▪ default VRF connectivity is in-band to the PSM ▪ mgmt VRF connectivity is out-of-

Parameter	Description
	band via management VRF to the PSM
list	Print a command list
no	Negate a command or set its defaults.

Usage

Before associating a DSS with a PSM:

1. Ensure that there will be Layer 3 connectivity between the DSS and the PSM through the management or in-band interface.
2. Make sure that the DSS is not currently associated with another PSM.
3. Verify that the time is set correctly on the switch.

For complete information on the Pensando Policy and Services Manager, refer to the *Pensando Policy and Services Manager for Distributed Services Switches: User Guide*.

Examples

Configuring a DSS to associate with a PSM with three nodes with the IP addresses 192.168.68.49, 192.168.68.50, and 192.168.68.51

```
switch(config)# psm
switch(config-psm)# host 192.168.68.49 192.168.68.50 192.168.68.51 vrf default
```

Command History

Release	Modification
10.09.100	Command introduced

Command Information

Platforms	Command context	Authority
9300 10000	config	Administrators or local user group members with execution rights for this command.

show interface mgmt

```
show interface mgmt [vsx-peer]
```

Description

Shows status and configuration information for the management interface.

Parameter	Description
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Example

```
switch# show interface mgmt

Address Mode           : static
Admin State           : up
Mac Address            : 02:42:ac:11:00:02
IPv4 address/subnet-mask : 192.168.1.10/16
Default gateway IPv4    : 192.168.1.1
IPv6 address/prefix     : 2001:db8:0:1::129/64
IPv6 link local address/prefix: fe80::7272:cfff:fe485/64
Default gateway IPv6    : 2001:db8:0:1::1
Primary Nameserver      : 2001::1
Secondary Nameserver    : 2001::2
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
8100 8320 8325 8360 9300 10000	Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show psm

show psm

Description

Show configuring settings that associate a Pensando Policy and Services Manager (PSM) with a 10000 Switch series Distributed Services Switch (DSS).

Examples

The following example shows the PSM configuration on a DSS, where the DSS is associated with a PSM with three nodes with the IP addresses 192.168.68.49, 192.168.68.50, and 192.168.68.51

```
switch)# show psm

Policy and Services Manager Information

Operational Status   : admitted
Host Addresses       : 192.168.68.49, 192.168.68.50, 192.168.68.51
VRF                  : default
Source IP            : 18.127.1.1
```

Command History

Release	Modification
10.09.100	Command introduced

Command Information

Platforms	Command context	Authority
9300 10000	config	Administrators or local user group members with execution rights for this command.

NTP commands

ntp authentication

```
ntp authentication
no ntp authentication
```

Description

Enables support for authentication when communicating with an NTP server.
The `no` form of this command disables authentication support.

Examples

Enabling authentication support:

```
switch(config)# ntp authentication
```

Disabling authentication support:

```
switch(config)# no ntp authentication
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

ntp authentication-key

```
ntp authentication-key <KEY-ID> {md5 | sha1}
    [{ <PLAINTEXT-KEY> [trusted] | ciphertext <ENCRYPTED-KEY> }]
no ntp authentication-key <KEY-ID> {md5 | sha1}
    [{ <PLAINTEXT-KEY> [trusted] | ciphertext <ENCRYPTED-KEY> }]
```

Description

Defines an authentication key that is used to secure the exchange with an NTP time server. This command provides protection against accidentally synchronizing to a time source that is not trusted.

The `no` form of this command removes the authentication key.

Parameter	Description
<KEY-ID>	Specifies the authentication key ID. Range: 1 to 65534.
md5	Selects MD5 key encryption.
sha1	Specifies SHA1 key encryption.
<PLAINTEXT-KEY>	Specifies the plaintext authentication key. Range: 8 to 40 characters. The key may contain printable ASCII characters excluding "#" or be entered in hex. Keys longer than 20 characters are assumed to be hex. To use an ASCII key longer than 20 characters, convert it to hex.
trusted	Specifies that this is a trusted key. When NTP authentication is enabled, the switch only synchronizes with time servers that transmit packets containing a trusted key.
ciphertext <ENCRYPTED-KEY>	Specifies the ciphertext authentication key in Base64 format. This is used to restore the NTP authentication key when copying configuration files between switches or when uploading a previously saved configuration. NOTE: When the key is not provided on the command line, plaintext key prompting occurs upon pressing Enter, followed by prompting as to whether the key is to be trusted. The entered key characters are masked with asterisks.

Examples

Defining key 10 with MD5 encryption and a provided plaintext trusted key:

```
switch(config)# ntp authentication-key 10 md5 F82#450b trusted
```

Defining key 5 with SHA1 encryption and a prompted plaintext trusted key:


```
switch(config)# ntp authentication-key 5 sha1
Enter the NTP authentication key: *****
Re-Enter the NTP authentication key: *****

Configure the key as trusted (y/n)? y
```

Removing key 10:

```
switch(config)# no ntp authentication-key 10
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

ntp disable

ntp disable

Description

Disables the NTP client on the switch. The NTP client is disabled by default.

Examples

Disabling the NTP client.

```
switch(config)# ntp disable
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

ntp enable

```
ntp enable
no ntp enable
```

Description

Enables the NTP client on the switch to automatically adjust the local time and date on the switch. The NTP client is disabled by default.

The `no` form of this command disables the NTP client.

Examples

Enabling the NTP client.

```
switch(config)# ntp enable
```

Disabling the NTP client.

```
switch(config)# no ntp enable
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

ntp conductor

```
ntp conductor vrf <VRF-NAME> {stratum <NUMBER>}
no ntp conductor vrf <VRF-NAME> {stratum <NUMBER>}
```

Description

Sets the switch as the conductor time source for NTP clients on the specified VRF. By default, the switch operates at stratum level 8. The switch cannot function as both NTP conductor and client on the same VRF.

The `no` form of this command stops the switch from operating as the conductor time source on the specified VRF.

Parameter	Description
vrf <VRF-NAME>	Specifies the VRF on which to act as conductor time source.
stratum <NUMBER>	Specifies the stratum level at which the switch operates. Range: 1 - 15. Default: 8.

Examples

Setting the switch to act as conductor time source on VRF **primary-vrf** with a stratum level of **9**.

```
switch(config)# ntp conductor vrf primary-vry statum 9
```

Stops the switch from acting as conductor time source on VRF **primary-vrf**.

```
switch(config)# no ntp conductor vrf primary-vry
```

Command History

Release	Modification
10.08	Inclusive language.
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
8100 8320 8325 9300 10000	config	Administrators or local user group members with execution rights for this command.

ntp server

```
ntp server <IP-ADDR> [key <KEY-NUM>] [minpoll <MIN-NUM>] [maxpoll <MAX-NUM>] [burst |  
iburst] [prefer] [version <VER-NUM>]  
no ntp server <IP-ADDR> <IP-ADDR> [key <KEY-NUM>] [minpoll <MIN-NUM>] [maxpoll <MAX-NUM>]  
[burst | iburst] [prefer] [version <VER-NUM>]
```

Description

Defines an NTP server to use for time synchronization, or updates the settings of an existing server with new values. Up to eight servers can be defined.

The **no** form of this command removes a configured NTP server.



The default NTP version is 4; it is backwards compatible with version 3.

Parameter	Description
server <IP-ADDR>	Specifies the address of an NTP server as a DNS name, an IPv4 address (x.x.x.x), where x is a decimal number from 0 to 255, or an IPv6 address (xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx), where x is a hexadecimal number from 0 to F. When specifying an IPv4 address, you can remove leading zeros. For example, the address 192.169.005.100 becomes 192.168.5.100.

Parameter	Description
	When specifying an IPv6 address, you can use two colons (::) to represent consecutive zeros (but only once), remove leading zeros, and collapse a hextet of four zeros to a single 0. For example, this address 2222:0000:3333:0000:0000:0000:4444:0055 becomes 2222:0:3333::4444:55.
key <KEY-NUM>	Specifies the key to use when communicating with the server. A trusted key must be defined with the command <code>ntp authentication-key</code> and authentication must be enabled with the command <code>ntp authentication</code> . Range: 1 to 65534.
minpoll <MIN-NUM>	Specifies the minimum polling interval in seconds, as a power of 2. Range: 4 to 17. Default: 6 (64 seconds).
maxpoll <MAX-NUM>	Specifies the maximum polling interval in seconds, as a power of 2. Range: 4 to 17. Default: 10 (1024 seconds).
burst	Send a burst of packets instead of just one when connected to the server. Useful for reducing phase noise when the polling interval is long.
iburst	Send a burst of six packets when not connected to the server. Useful for reducing synchronization time at startup.
prefer	Make this the preferred server.
version <VER-NUM>	Specifies the version number to use for all outgoing NTP packets. Range: 3 or 4. Default: 4. NOTE: NTP is backwards compatible.

Usage

For features such as Activate and ZTP, a switch that has a factory default configuration will automatically be configured with pool.ntp.org. NTP server configurations via DHCP options are supported. The DHCP server can be configured with maximum of two NTP server addresses which will be supported on the switch. Only IPV4 addresses are supported.



When configuring a time backward more than five minutes on the Aruba 8320, 8325, or 9300 Switch Series, a reboot is recommended to avoid unusual switch behavior.

NTP uses a stratum to describe the distance between a network device and an authoritative time source:

- A stratum 1 time server is directly attached to an authoritative time source (such as a radio or atomic clock or a GPS time source).
- A stratum 2 NTP server receives its time through NTP from a stratum 1 time server.

When using multiple servers with same stratum setting, the best practice to configure a preferred server, so NTP will attempt to use the preferred server as the primary NTP connection. If a preferred server is not manually set when NTP is enabled, the configured server with the lowest stratum will automatically be set as the preferred server. If there are servers with the same stratum, this auto prefer status will prevent AOS-CX from toggling between different servers as the primary server. Auto prefer

selection of servers with same stratum (if not manually selected) may change after reconfiguring the switch, or after executing the `reboot` command.

Examples

Defining the ntp server pool.ntp.org, using iburst, and NTP version 4.

```
switch(config)# ntp server pool.ntp.org iburst version 4
```

Removing the ntp server pool.ntp.org.

```
switch(config)# no ntp server pool.ntp.org
```

Defining the ntp server my-ntp.mydomain.com and makes it the preferred server.

```
switch(config)# ntp server my-ntp.mydomain.com prefer
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

ntp trusted-key

```
ntp trusted-key <KEY-ID>  
no ntp trusted-key <KEY-ID>
```

Description

Sets a key as trusted. When NTP authentication is enabled, the switch only synchronizes with time servers that transmit packets containing a trusted key.

The `no` form of this command removes the trusted designation from a key.

Parameter	Description
<KEY-ID>	Specifies the identification number of the key to set as trusted. Range: 1 to 65534.

Examples

Defining key 10 as a trusted key.

```
switch(config)# ntp trusted-key 10
```

Removing trusted designation from key 10:

```
switch(config)# no ntp trusted-key 10
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

ntp vrf

```
ntp vrf <VRF-NAME>  
no ntp vrf <VRF-NAME>
```

Description

Specifies the VRF on which the NTP client communicates with an NTP server. The switch cannot function as both NTP conductor and client on the same VRF.

The `no` form of the command returns to default VRF.

Parameter	Description
<VRF-NAME>	Specifies the name of a VRF.

Example

Setting the switch to use the default VRF for NTP client traffic.

```
switch(config)# ntp vrf default
```

Setting the switch to use the default management VRF for NTP client traffic.

```
switch(config)# ntp vrf mgmt
```

Returning the switch to use the default VRF for NTP client traffic.

```
switch(config)# no ntp vrf
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

show ntp associations

show ntp associations [vsx-peer]

Description

Shows the status of the connection to each NTP server. The following information is displayed for each server:

- Tally code : The first character is the Tally code:
 - (blank): No state information available (e.g. non-responding server)
 - x : Out of tolerance (discarded by intersection algorithm)
 - . : Discarded by table overflow (not used)
 - - : Out of tolerance (discarded by the cluster algorithm)
 - + : Good and a preferred remote peer or server (included by the combine algorithm)
 - # : Good remote peer or server, but not utilized (ready as a backup source)
 - * : Remote peer or server presently used as a primary reference
 - o : PPS peer (when the prefer peer is valid)
- ID: Server number.
- NAME: NTP server FQDN/IP address (Only the first 24 characters of the name are displayed).
- REMOTE: Remote server IP address.
- REF_ID: Reference ID for the remote server (Can be an IP address).
- ST: (Stratum) Number of hops between the NTP client and the reference clock.
- LAST: Time since the last packet was received in seconds unless another unit is indicated.
- POLL: Interval (in seconds) between NTP poll packets. Maximum (1024) reached as server and client sync.
- REACH: 8-bit octal number that displays status of the last eight NTP messages (377 = all messages received).

Parameter	Description
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Example

```
switch# show ntp associations
```

```
-----  
ID          NAME          REMOTE          REF-ID ST LAST POLL REACH  
-----  
1          192.0.1.1          192.0.1.1          .INIT. 16  -   64    0  
* 2  time.apple.com      17.253.2.253          .GPSs.  2  70  128   377  
-----
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show ntp authentication-keys

```
show ntp authentication-keys [vsx-peer]
```

Description

Shows the currently defined authentication keys.

Parameter	Description
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Examples

```
switch# show ntp authentication-keys
```

```
-----  
Auth key  Trusted  MD5 password  
-----  
10        No      *****  
20        Yes     *****  
-----
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

show ntp servers

show ntp servers [vsx-peer]

Description

Shows all configured NTP servers, including any DHCP servers, default pool servers or any server with the status **auto prefer**.

Parameter	Description
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Example

```
switch# show ntp servers
-----
      NTP SERVER KEYID MINPOLL MAXPOLL OPTION VER
-----
      192.0.1.18      -        5      10 iburst   3
      192.0.1.19      -        6      10  none    4
      192.0.1.20      -        6       8  burst   3 prefer
-----
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show ntp statistics

show ntp statistics [vsx-peer]

Description

Shows global NTP statistics. The following information is displayed:

- Rx-pkts: Total NTP packets received.
- Current Version Rx-pkts: Number of NTP packets that match the current NTP version.
- Old Version Rx-pkts: Number of NTP packets that match the previous NTP version.
- Error pkts: Packets dropped due to all other error reasons.
- Auth-failed pkts: Packets dropped due to authentication failure.
- Declined pkts: Packets denied access for any reason.
- Restricted pkts: Packets dropped due to NTP access control.
- Rate-limited pkts: Number of packets discarded due to rate limitation.
- KOD pkts: Number of Kiss of Death packets sent.

Parameter	Description
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Examples

```
switch(config)# show ntp statistics
Rx-pkts 100
Current Version Rx-pkts 80
Old Version Rx-pkts 20
Err-pkts 2
Auth-failed-pkts 1
Declined-pkts 0
Restricted-pkts 0
Rate-limited-pkts 0
KoD-pkts 0
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show ntp status

```
show ntp status [vsx-peer]
```

Description

Shows the status of NTP on the switch.

Parameter	Description
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Examples

Displaying the status information when the switch is not synced to an NTP server:

```
switch# show ntp status
NTP is enabled.
NTP authentication is enabled.
NTP is using the default VRF for NTP server connections.

Wed Nov 23 23:29:10 PDT 2016
NTP uptime: 187 days, 1 hours, 37 minutes, 48 seconds

Not synchronized with an NTP server.
```

Displaying the status information when the switch is synced to an NTP server:

```
switch# show ntp status
NTP is enabled.
NTP authentication is enabled.
NTP is using the default VRF for NTP server connections.

Wed Nov 23 23:29:10 PDT 2016
NTP uptime: 187 days, 1 hours, 37 minutes, 48 seconds

Synchronized to NTP Server 17.253.2.253 at stratum 2.
Poll interval = 1024 seconds.
Time accuracy is within 0.994 seconds
Reference time: Thu Jan 28 2016 0:57:06.647 (UTC)
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Telnet server enables switches to accept Telnet connections from clients to manage the switch. The user authentication is password based authentication (RADIUS, TACACS+ or locally stored password). The Telnet server can be enabled on a desired VRF using the `telnet server` command. The maximum number of Telnet sessions per VRF is five.

In the default configuration, Telnet access is disabled.

Telnet commands

show telnet server

```
show telnet server
```

Description

Shows the Telnet server configuration.

Examples

Showing the Telnet server configuration:

```
switch(config)# show telnet server
TELNET Server Configuration:

IP Version           : IPv4
TCP Port             : 23
Enabled VRFs         : default, vrf1, vrf2,
                      red, green
```

Command History

Release	Modification
10.11	Command introduced on all other platforms.

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

show telnet server sessions

```
show telnet server sessions [vrf <VRF-NAME> | all-vrfs]
```

Description

Shows all active Telnet sessions for the specified VRF or all VRFs. If no VRF is provided, the Telnet sessions on the default VRF are shown.

Parameter	Description
vrf <VRF-NAME>	Specifies the Telnet sessions for a specific VRF.
all-vrfs	Specifies the Telnet sessions for all VRFs

Examples

Showing the Telnet session on the default VRF:

```
switch(config)# show telnet server sessions
TELNET sessions on VRF default:

IPv4 TELNET Sessions:
  Server IP      : 10.1.1.1
  Client IP      : 10.1.1.2
  Client Port    : 58835
```

Showing the Telnet sessions on all VRFs:

```
switch(config)# show telnet server sessions all-vrfs
TELNET sessions on VRF mgmt:

IPv4 TELNET Sessions:
  Server IP      : 10.1.1.1
  Client IP      : 10.1.1.2
  Client Port    : 58835

TELNET sessions on VRF default:

IPv4 TELNET Sessions:
  Server IP      : 20.1.1.1
  Client IP      : 20.1.1.2
  Client Port    : 58837
```

Command History

Release	Modification
10.11	Command introduced on all other platforms.

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

telnet server

```
telnet server vrf <VRF-NAME>  
no telnet server vrf <VRF-NAME>
```

Description

Enables the Telnet server on the desired VRF. Telnet server is disabled by default.

The `no` form of this command disables the Telnet server.

Parameter	Description
vrf <VRF-NAME>	Specifies the VRF on which the Telnet server will be enabled or disabled.

Examples

Configuring the Telnet server on the `mgmt` VRF:

```
switch(config)# telnet server vrf mgmt
```

Command History

Release	Modification
10.11	Command introduced on all other platforms.

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

Configuring a layer 2 interface

Procedure

1. Change to the interface configuration context for the interface with the command `interface`.
2. By default, interfaces are layer 3. To create a layer 2 interface, disable routing with the command `no routing`.
3. Set the interface MTU (maximum transmission unit) with the command `mtu`.
4. Review interface configuration settings with the command `show interface`.

Example

```
switch(config)# interface 1/1/1
switch(config-if)# no routing
switch(config-if)# mtu 1900
```

Configuring a layer 3 interface

Procedure

1. Change to the interface configuration context for the interface with the command `interface`.
2. Interfaces are layer 3 by default. If you previously set the interface to layer 2, then enable routing support with the command `routing`.
3. Assign an IPv4 address with the command `ip address`, or an IPv6 address with the command `ipv6 address`.
4. If required, enable support for layer 3 counters with the command `l3-counters`.
5. If required, set the IP MTU with the command `ip mtu`.
6. Review interface configuration settings with the command `show interface`.

Examples

This example creates the following configuration:

- Configures interface **1/1/1** as a layer 3 interface.
- Defines an IPv4 address of **10.10.20.209** with a 24-bit mask.

```
switch# config
switch(config)# interface 1/1/1
switch(config-if)# ip address 10.10.20.209/24
```

This example creates the following configuration:

- Configures interface **1/1/2** as a layer 3 interface.
- Defines an IPv6 address of **2001:0db8:85a3::8a2e:0370:7334** with a 24-bit mask.
- Enables layer 3 transmit and receive counters.

```
switch# config
switch(config)# interface 1/1/2
switch(config-if)# ipv6 address 2001:0db8:85a3::8a2e:0370:7334/24
switch(config-if)# 13-counters tx
switch(config-if)# 13-counters rx
```

Single source IP address

Certain IP-based protocols used by the switch (such as RADIUS, sFlow, TACACS, and TFTP), use a client-server model in which the client's source IP address uniquely identifies the client in packets sent to the server. By default, the source IP address is defined as the IP address of the outgoing switch interface on which the client is communicating with the server. Since the switch can have multiple routing interfaces, outgoing packets can potentially be sent on different paths at different times. This can result in different source IP addresses being used for a client, which can create a client identification problem on the server. For example, it can be difficult to interpret system logs and accounting data on the server when the same client is associated with multiple IP addresses.

To resolve this issue, you can use the commands `ip source-interface` and `ipv6 source-interface` to define a single source IP address that applies to all supported protocols (RADIUS, sFlow, TACACS, and TFTP), or an individual address for each protocol. This ensures that all traffic sent by a client to a server uses the same IP address.

Priority-based flow control (PFC)

Priority-based flow control (PFC) is defined in the IEEE 802.1Qbb standard. It is used to eliminate packet loss due to congestion on a network link.

For priority-based flow control, care must be taken when configuring quality of service.

1. Configure the global CoS map (`qos cos-map` command) and queue profile (`qos queue-profile` command) before configuring PFC on any interface.
 - Each code point in the CoS Map to be used for PFC must be assigned a unique local-priority value.
 - Each local-priority used for PFC must be the sole local-priority mapped to a queue in the queue profile.
2. CoS map or queue profile changes for non-PFC priorities can be modified without any impact on PFC functionality.
3. All interfaces with PFC enabled must also be configured with ``qos trust cos`` or ``qos trust dscp.``
4. For PFC to function properly with VSX and MCLAG, PFC must be configured on the inter-switch-link.

See also commands [flow-control](#) and [show interface flow-control](#).

Refer to the *Quality of Service Guide* for more information about buffering and queuing for flow-controlled traffic.

(Applies to the 8325, 9300, 10000)

On 8325 and 10000 series switches, a maximum of three unique PFC priority combinations can be configured for the entire switch. On 9300 series switches, a maximum of seven unique PFC priority combinations can be configured for the entire switch. Note that ports with a PFC configuration that cannot be applied can still link up, but will not have any flow control. For example, when ports 1 to 4 are configured for PFC priorities 3 and 4, ports 5 to 8 for PFC priority 4, and ports 9 to 12 for PFC priority 5, then any other ports can only be configured for priority combinations of 3, 4, or 5. If a fourth priority combination is configured the following error message will be displayed:

```
The number of unique priority-based flow control (PFC) configuration combinations
cannot be more than 3.
```

With PFC configured for TX, RXTX, or both, PFC cannot be enabled on an interface if the PFC priority is not mapped to a lossless pool. If you attempt to configure a PFC priority on an interface without mapping it to a lossless pool, the switch will display the following message:

```
All TX flow-controlled priorities must first be mapped to a lossless pool using
the 'qos pool' command.
```

Best practices is to configure priority-based flow control (PFC) or link-level flow control RXTX mode and pools only once on a running system. Changing the pool or flow control configuration on a running system will cause brief traffic disruption and packets may be lost in the data flow while the reconfiguration occurs. This may effect one, multiple, or all ports depending on the existing configuration and changes made to it.

(Applies to the 8325, 9300, 10000) Asymmetric PFC

Although PFC is typically symmetric in that it applies to both the receiving (RX) and sending (TX) of PFC pause frames, it can be configured (using the [flow-control](#) command) to only respond to received (RX) PFC pause frames or to only send (TX) PFC pause frames. This is referred to as asymmetric PFC. Asymmetric PFC can be useful to implement PFC in only one direction in parts of the network. For example, it could be desirable to have an uplink port that treats arriving traffic as lossless (respecting PFC pause frames) but not transmit PFC pause frames into the spine or core of the network. This capability can be used to deal with the unique requirements of some NICs which require asymmetric PFC configuration to ensure proper behavior.

(Applies to the 8360)

PFC cannot be enabled on an interface that also has a MACsec policy configured. If both PFC and MACsec are configured on an interface, it will remain down until one or the other is removed.

Reboot is required to split or unsplit a port that has had link up with PFC or RXTX enabled. Until reboot, the interface will remain down with a status of `Split in progress` or `Unsplit in progress`.

Configurable flow control buffer thresholds

For the 8325, 9300, and 10000 series switch:

The switch supports the configuration of XOFF limit, XON delta and headroom limit buffer thresholds on flow control enabled interfaces using flow-control buffer commands. QoS buffer configuration using flow-control buffer commands are only applicable to ports or priorities only when flow control is enabled. The flow control buffer configurations are optional. If the configurations are not done, defaults are used.

QoS buffer configuration for PFC priorities are not applicable to LLFC RXTX ports.

For information on this feature, see the related video on the [Aruba AirHeads Broadcasting Channel](#).

XOFF limit

XOFF limit defines the amount of shared buffer space flow-controlled packets allowed to consume before a pause is asserted to the link partner. The lossless buffer limits for traffic arriving on flow control enabled ports or priorities can be optionally configured using one of the following two modes:

- **Dynamic XOFF limit:** The dynamic limit scales as a function of available buffer resources and is configured by specifying an alpha value in the range between -7 and 3. The dynamic limit is based on the currently available free space, multiplied by 2 raised to the power of the specified alpha value. A value less than zero means that the limit is a fraction of the pool free space. For example, -1 corresponds to half. A value greater than zero means that the limit is a multiple of the free-space size. For example, an alpha value of 1 corresponds to double.

If the user-configured limit is not specified, the default limit of dynamic alpha 1 is configured.

- **Static XOFF limit:** The static limit sets a fixed size for the XOFF threshold.

XON delta

XON delta defines the offset value below the XOFF limit when a pause is de-asserted to the link partner. The delta value is relative to the XOFF limit and applies to both dynamic and static XOFF limit configurations. When the buffer in-use amount from a source port (LLFC RXTX) or source port with priority (PFC) reaches the XOFF limit, a pause is asserted to the link peer. At this point, the pause will remain asserted until the shared buffer in-use amount by the LLFC RXTX port or priority decreases by the XON delta amount. Once enough packets are transmitted to reduce in-use by this amount, the pause is de-asserted.



It is important to note that the XON delta value will impact the amount of flow control pause frames sent to the link peer and can have a negative impact on performance. A value that is too small can result in many more pause frames sent to the link peer as the buffer in-use amount reaches the XOFF limit, drops slightly, and meets the XON delta, then immediately jumps back to the XOFF limit. Conversely, a value that is too large can result in poor link bandwidth utilization due to insufficient buffered packets as the buffer drains too far before more packets arrive to utilize the link. The default XON Delta value is 12288 bytes.

Headroom limit

Headroom limit defines the amount of buffer space reserved to absorb any in-flight packets from the time that the XOFF message is transmitted by the local device until the time that the last packet is sent by the link partner and received by the local device. Headroom Limit for an LLFC RXTX port or PFC priority sets a fixed size of headroom pool buffer space for in-flight packets that arrive after XOFF is asserted.

Default buffer thresholds

By default, when the LLFC RXTX or PFC is enabled, the switch uses a dynamic buffer threshold for the XOFF limit, a delta value for XON, and a headroom buffer limit based on 350m cable length.

For many scenarios, these defaults are sufficient to provide good performance without any issues. However, in some situations it is useful to tune the XOFF limit, XON delta, and headroom parameters based on the unique requirements of a particular deployment. In those situations, the buffer tuning capabilities described in this section can be useful to optimize memory usage.



The flow control buffer configurations are optional. If the configurations are not done, defaults are used.

Flow control buffer tasks

The flow control buffer tasks are as follows:

Tasks	Command	Examples
Configuring dynamic XOFF limit	<pre>flow-control buffer priority <PRIORITY> xoff dynamic <ALPHA> flow-control buffer llfc xoff dynamic <ALPHA></pre>	<pre>switch(config)# interface 1/1/1 switch(config-if)# flow-control buffer priority 5 xoff dynamic -3</pre> <pre>switch(config)# interface 1/1/1 switch(config-if)# flow-control buffer llfc xoff dynamic -3</pre>
Configuring static XOFF limit	<pre>flow-control buffer priority <PRIORITY> xoff static <LIMIT> kbytes flow-control buffer llfc xoff static <LIMIT> kbytes</pre>	<pre>switch(config)# interface 1/1/1 switch(config-if)# flow-control buffer priority 6 xoff static 128 kbytes</pre> <pre>switch(config)# interface 1/1/1 switch(config-if)# flow-control buffer llfc xoff static 128 kbytes</pre>
Configuring XON delta	<pre>flow-control buffer priority <PRIORITY> xon <VALUE> kbytes flow-control buffer llfc xon <VALUE> kbytes</pre>	<pre>switch(config)# interface 1/1/1 switch(config-if)# flow-control buffer priority 4 xon 24 kbytes</pre> <pre>switch(config)# interface 1/1/1 switch(config-if)# flow-control buffer llfc xon 24 kbytes</pre>
Configuring headroom limit	<pre>flow-control buffer priority <PRIORITY> headroom <LIMIT> kbytes flow-control buffer llfc headroom <LIMIT> kbytes</pre>	<pre>switch(config)# interface 1/1/1 switch(config-if)# flow-control buffer priority 4 headroom 36 kbytes</pre> <pre>switch(config)# interface 1/1/1 switch(config-if)# flow-control buffer llfc headroom 36 kbytes</pre>

Flow control and lossless buffering

For the 8325, 9300, and 10000 series switch:

The switch supports IEEE 802.1Q Priority-based Flow Control (PFC). The PFC standard specifies additional frames exchanged between the Ethernet Media Access Controllers (MACs) on both sides of a link to pause and resume transmissions. The goal is to prevent packet loss despite congestion.

Prerequisites

1. A Priority Code Point (PCP) chosen for PFC must not share a local priority with any other PCP in the Class of Service (CoS) map.
2. A local priority mapped to the PCP via the CoS Map must be the only local priority assigned to its queue in the queue profile.



NOTE: These prerequisites should be configured during initial switch provisioning and only changed during maintenance periods where all ports are disabled and the switch is then rebooted.

Requirements for proper lossless buffering:

- Lossless buffering is only supported for single destination (i.e. unicast) traffic. Multi-destination traffic cannot be guaranteed to be lossless.
- All traffic with the specified PCP arriving on PFC-configured ports must be destined for another PFC-configured-port with an egress queue with the same PCP.
- All packets arriving on PFC-configured ports or arriving on non-PFC ports must not be destined for an egress port queue used by PFC traffic with a different PCP.
- If traffic path contains Layer 3 interface then ECN would also need to be added to the configuration.
- The switch has maximum of 3 PFC lossless priorities and does not support PFC below 10 Gbps.

By default, all switch buffering is in one pool shared by all ports called the Lossy pool. Any packet intending to use the Lossy pool can be dropped if the egress port queue is above its limit. Egress queue limits are dynamic based on the amount of free buffers available in the Lossy pool. The TX Drops columns displayed from the `show interface <IF-NAME>` command will display the number of drops that have occurred.

All traffic with the specified PCP arriving on PFC-configured ports will share the Lossless or Headroom pools. Any packets using these pools will never be dropped when an egress queue exceeds its limit. All other packets arriving on PFC-configured ports with different PCPs or on non-PFC ports will share the Lossy pool and be subject to dropping when an egress queue is over its limit.

Each PFC-configured port priority is given a limit for the amount of Lossless pool buffering its arriving packets can use. Once the limit is exceeded, the switch will transmit a priority pause frame from the port to stop further packets arriving. Due to link propagation time and processing time on the receiving switch additional packets may be received and stored in the Headroom pool.

When the switch receives a PFC pause frame for the configured PCP the port will cease transmitting further packets from that queue until the timeout specified in the Quanta field has expired or a resume frame is received.

For the 8360 series switch:

The switch supports IEEE 802.1Q Priority-based Flow Control (PFC) and 802.3x Link Level Flow Control (LLFC). These standards specify additional frames exchanged between the Ethernet Media Access

Controllers (MACs) on both sides of a link to pause and resume transmissions. The goal is to prevent packet loss despite congestion.

Prerequisites

1. A Priority Code Point (PCP) chosen for PFC must not share a local priority with any other PCP in the Class of Service (CoS) map.
2. A local priority mapped to the PCP via the CoS map must be the only local priority assigned to its queue in the queue profile.



NOTE: These prerequisites should be configured during initial switch provisioning and only changed during maintenance periods where all ports are disabled.

Requirements for proper lossless buffering

- Lossless buffering is only supported for single-destination (i.e. unicast) traffic. Multi-destination traffic is not guaranteed to be lossless.
- All arriving flow-controlled traffic must only be transmitted by flow-controlled ports or port queue(s):
 - For LLFC-operating ports all arriving traffic must be destined for another LLFC port.
 - For PFC-enabled ports all arriving packets with the configured PCP must be destined for another PFC-enabled port queue with the same PCP.
- All arriving non-flow-controlled traffic must only be transmitted by non-flow-controlled ports or port queue(s).
- For traffic arriving on non-LLFC ports and on PFC ports with different PCPs, packets must not be destined to be transmitted out an LLFC-operating port or a PFC-enabled port queue.
- PFC cannot be used on MACsec configured ports
- The switch can support 2 PCPs for per port

By default, all switch buffering is in one pool shared by all ports called the Lossy pool. Any packet attempting to use the Lossy pool can be dropped if the egress port queue is above its limit. Egress port queues have a limit of 2 MB divided equally among the number of queues in the applied queue profile. For example, when using the 8-queue factory-default profile the egress queue limit is 256 KB. The TX Drops columns of `show interface <IF-NAME>` command will display the number of drops that may have occurred.

Flow Control reconfigures buffering. After the first interface is configured for PFC the switch will segregate buffering into multiple pools:

- Lossy Pool (default)
- Lossless Pool
- Headroom Pool

Buffers are moved from the Lossy to the Lossless and Headroom pools depending on the number and maximum possible speed of the ports on the switch model. The Headroom pool size assumes that all port cables are 300 meters in length.



NOTE: Using slower port speeds or different cable lengths will not change the pool allocations.

All traffic with the specified PCP arriving on PFC-configured ports or on an LLFC-operating port will share the Lossless and Headroom pools. Any packets stored in these pools will never be dropped if an egress queue exceeds its limit. All other packets arriving on non-flow-control ports, or on PFC-enabled port(s)

with different PCPs will share the Lossy pool and be subject to drops when an egress queue exceeds its limit.

Each LLFC port and each PFC-port priority has a limited amount of Lossless pool buffer space that arriving packets are allowed to use. Once the limit is exceeded the switch will transmit a pause frame out the port to stop further packets from arriving. Due to link propagation time and processing time on the receiving switch, additional packets in flight may be received and will share the Headroom pool. The switch will periodically transmit priority pause frames until none of packets on the arriving port are in the Headroom pool and half of the port's shared buffer below the pause limit is available.

When the switch receives a PFC pause frame for the configured PCP, the port will cease transmitting further packets from that queue until the timeout specified in the Quanta field has expired or a resume frame is received.

Forward error correction

Forward error correction (FEC) is used to control errors in transmissions where the source sends redundant data and the destination only recognizes the data portion that contains no apparent errors. FEC does not require a handshake between the source and destination at the cost of a higher forward channel bandwidth. It is therefore best used in scenarios where re-transmissions are costly or impossible, such as using multicast one-way communication.

Unsupported transceiver support

Transceiver products (optical, DAC, AOCs) that are listed as supported by a switch model are detailed in the *Transceiver Guide*. Transceiver products that are not listed, are considered unsupported; this would include transceivers that are:

- Non-Aruba branded products
- HPE branded products that were designed for non-AOS-CX switch models (e.g. Comware)
- HPE branded products designated for use in HPE Compute Servers or Storage
- Transceivers originally designated for use in Aruba WLAN controllers or former Mobility Access Switch (MAS) products
- End-of-life Aruba Transceivers

The unsupported transceiver mode (UT-mode) is designed to allow the possible use of these unsupported products. Not all unsupported products can be recognized and enabled; they may be unable to be identified (do not follow the proper MSA standards for identification). These unsupported transceiver products are enabled only on a best-effort basis and there are no guarantees implied for their continued operation.

This feature is enabled by default. A periodic system log will be generated by default at an interval of 24 hours listing the ports on which unsupported transceivers are present. The log interval is configurable and can be disabled by setting the log-interval to `none`.

Configuring an interface persona

A persona is a template interface. It is a mechanism intended to ease the process of configuring one or multiple interfaces that behave in the same manner. For example, a persona could be an uplink interface with a well-known collection of VLANs to which it belongs. Instead of manually configuring each interface one-by-one, the persona collects the common configuration settings and allows them to be applied on the interface or a collection of interfaces.

Persona configuration is similar to configuring other interfaces. Most of the commands in the interface context are available. Because of the nature of the commands, several of them do not apply to the persona (for example, applying the same IP address configuration to several ports) and have been removed from the available list.

The following commands are not supported within the interface context when configuring a persona:

```
aaa authentication port-access dot1x authenticator macsec
arp ipv4 <IPV4_ADDR> mac <MAC_ADDR>
downshift-enable
energy-efficient-ethernet
error-control { auto | none | base-r-fec | rs-fec }
ip bootp-gateway <IPV4-ADDR>
ip forward-protocol udp <IPV4-ADDR> {<PORT-NUM> | <PROTOCOL>}
ip helper-address <IPV4-ADDR> [vrf <VRF-NAME>]
ip igmp router-alert-check [enable | disable]
ip igmp snooping [auto vlan <VLAN-LIST>]
ip igmp snooping [blocked vlan <VLAN-LIST>]
ip igmp snooping [fastleave vlan <VLAN-LIST>]
ip igmp snooping [forced-fastleave vlan <VLAN-LIST>]
ip igmp snooping [forward vlan <VLAN-LIST>]
ip ospf <PROCESS-ID> area <AREA-ID>
ip ospf passive
ip rip <PROCESS-ID> {all-ip | ip-address}
ip rip all-ip disable
ip rip all-ip enable
ip rip all-ip receive disable
ip rip all-ip send disable
ipv6 helper-address multicast {all-dhcp-servers | <MULTICAST-IPV6-ADDR>} egress <PORT-
NUM>
ipv6 mld snooping [auto vlan <VLAN-LIST>]
ipv6 mld snooping [blocked vlan <VLAN-LIST>]
ipv6 mld snooping [fastleave vlan <VLAN-LIST>]
ipv6 mld snooping [forced-fastleave vlan <VLAN-LIST>]
ipv6 mld snooping [forward vlan <VLAN-LIST>]
ipv6 neighbor <IPV6-ADDR> mac <MAC-ADDR>
ipv6 ospfv3 <PROCESS-ID> area <AREA-ID>
ipv6 ospfv3 passive
ipv6 ripng <PROCESS-ID>
lACP port-id <PORT-ID>
lACP port-priority <PORT-PRIORITY>
lag <ID>
link-poe
lldp dot3 eee
lldp dot3 poe
lldp med poe
lldp med poe [priority-override]
persona {access | uplink | custom <PERSONA-NAME>} [copy | attach]
port-access device-profile <DEVICE-PROFILE-NAME>
power-over-ethernet
power-over-ethernet allocate-by {usage | class}
power-over-ethernet assigned-class {3 | 4 | 6 | 8}
power-over-ethernet pd-class-override
power-over-ethernet power-pairs {alt-a|alt-a-and-alt-b}
power-over-ethernet pre-std-detect
power-over-ethernet priority {critical|high|low}
ptp lag-role {primary | secondary}
spanning-tree cost <PORT-COST>
spanning-tree instance <INSTANCE-ID> cost <PORT-COST>
spanning-tree instance <INSTANCE-ID> port-priority <PRIORITY-MULTIPLIER>
spanning-tree port-priority <PRIORITY-MULTIPLIER>
spanning-tree vlan <A:1-4094> cost <0-200000000>
```



```
spanning-tree vlan <A:1-4094> port-priority <0-15>
split [confirm]
track by <OBJECT-ID>
vsx-sync {access-lists | qos | rate-limits | vlans | policies | irdp}
```

Modes

There are two supported modes:

1. **Copy**—The `copy` mode is a one-step configuration that copies the persona configuration to an interface. Further changes to the persona will not be applied to the interfaces using that mode.
2. **Attach**—Unlike the `copy` mode, besides applying the configuration to the interface immediately, the `attach` mode also follows the persona configuration. It means that the subsequent changes to the persona will be applied to the interfaces attached to it.

Predefined and custom persona names

There are two predefined interface persona names:

- `uplink`
- `access`

These names have no predefined configuration. To use them, they must be manually configured as needed. You can also create personas with a custom name. These custom personas can be created and configured in the same manner as the predefined ones. The only difference is the command used to apply them to the interface. The procedure below provides the details.

Creating and configuring an interface persona

Follow these steps to create and configure an interface persona:

1. Create the interface **persona** with the command `interface persona <PERSONA-NAME>`.
2. Set the interface configuration as any other physical interface.
3. Review the configuration with the command `show running-configuration current-context`.
4. Switch to an interface context with the command `interface <PORT>`.
5. Apply the persona configuration to the interface and set the mode with the command `persona custom <PERSONA-NAME> <mode>`. Note that `<custom>` is an optional argument, required only if the persona is not one of the predefined names (neither **uplink** nor **access**).

For information on this feature, see the related video on the [Aruba AirHeads Broadcasting Channel](#).

Examples

To copy a predefined persona name configuration to an interface:

1. Configure the interface persona:

```
switch(config)# interface persona uplink
switch(config-if)# no shutdown
switch(config-if)# no routing
switch(config-if)# vlan access 100
switch(config-if)# exit
```

2. Apply the configuration with **copy** mode:


```
switch(config)# interface 1/1/1
switch(config-if)# persona custom mypersona copy
switch(config-if)# exit
```

To attach a custom persona name to several interfaces simultaneously:

1. Configure the interface persona:

```
switch(config)# interface persona mytemplate
switch(config-if)# no shutdown
switch(config-if)# vrf attach upstream
switch(config-if)# exit
```

2. Apply the configuration with **attach** mode:

```
switch(config)# interface 1/1/1-1/1/24
switch(config-if)# persona custom mypersona attach
switch(config-if)# exit
```

Monitor mode

Monitor mode displays interface statistics in real time, updating frequently. The update interval varies by product, number of visible ports, and display options in use. View the current update interval in the help menu.

Formatting options can be supplied either at command launch or while monitor mode is active. Press `?` to see the available formatting options available in the current command context. Exit the help menu with `q`.

Monitor mode detects terminal size to adjust the number of interfaces and statistics viewable on screen. Additional interfaces or statistics columns can be viewed with the navigation keys: Arrow keys, PageUp, PageDown, Home, and End. Serial console does not automatically detect terminal setting changes, resulting in unexpected output. Recommended recovery steps are to exit and restart.

Monitor mode refreshes data automatically until exited with `q`.

Interface commands

allow-unsupported-transceiver

```
allow-unsupported-transceiver [confirm | log-interval {none | <INTERVAL>}]
no allow-unsupported-transceiver
```

Description

Allows unsupported transceivers to be enabled or establish connections. Transceivers with speeds up to 100G are enabled by this command.



- The following models will enable unsupported transceivers for speeds up to 100G when running AOS-CX 10.09.0001 or later:
 - 8325 (Models 48Y8C and 32C)
 - 8360 (Models 48Y6C, 32Y4C, 16Y2C, 48XT4C, 24XF2C and 12C)
 - 9300 Series Switches
 - 10000 Series Switches
- The 8320 Series Switches will enable unsupported transceivers for speeds up to 40G when running AOS-CX 10.10 or later.



This command is enabled by default, allowing the use of third party transceiver products without adding the command in the configuration. Disabling this command with the `no` form will now disable the command in the running and stored configurations.

The `no` form of this command disallows using unsupported transceivers.

Parameter	Description
<code>confirm</code>	Specifies that unsupported transceiver warnings are to be automatically confirmed.
<code>log-interval none</code>	Disables unsupported transceiver logging.
<code>log-interval <INTERVAL></code>	Sets the unsupported transceiver logging interval in minutes. Default: 1440 minutes. Range: 1440 to 10080 minutes.

Usage

When none of the parameters are specified it will display a warning message to accept the warranty terms. With `confirm` option the warning message is displayed but the user is not prompted to `(y/n)` answering. Warranty terms must be agreed to as part of enablement and the support is on best effort basis.

Examples

Allowing unsupported transceivers with follow-up confirmation:

```
switch(config)# allow-unsupported-transceiver
Warning: The use of unsupported transceivers, DACs, and AOCs is at your
own risk and may void support and warranty. Please see HPE Warranty terms
and conditions.

Do you agree and do you want to continue (y/n)? y
```

Allowing unsupported transceivers with confirmation in command syntax:

```
switch(config)# allow-unsupported-transceiver confirm
```

Warning: The use of unsupported transceivers, DACs, and AOCs is at your own risk and may void support and warranty. Please see HPE Warranty terms and conditions.

Configuring unsupported transceiver logging with an interval of every 48 hours:

```
switch(config)# allow-unsupported-transceiver log-interval 2880
```

Disabling unsupported transceiver logging:

```
switch(config)# allow-unsupported-transceiver log-interval none
```

Disallowing unsupported transceivers with follow-up confirmation:

```
switch(config)# no allow-unsupported-transceivers  
Warning: Unsupported transceivers, DACs, and AOCs will be disabled,  
which could impact network connectivity. Use 'show allow-unsupported-transceiver'  
to identify unsupported transceivers, DACs, and AOCs.  
  
Continue (y/n)? y
```

Disallowing unsupported transceivers with confirmation in command syntax:

```
switch(config)# no allow-unsupported-transceiver confirm  
Warning: Unsupported transceivers, DACs, and AOCs will be disabled,  
which could impact network connectivity. Use 'show allow unsupported-transceiver'  
to identify unsupported transceivers, DACs, and AOCs.  
  
switch(config)#
```

Command History

Release	Modification
10.10	Up to 100G support enabled for unsupported transceivers on 8320 (Up to 40G) series switches in UT mode.
10.09	Up to 100G support enabled for unsupported transceivers on 8325, 8360 and 10000 series switches in UT mode.
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
8100 8320 8325 8360	config	Administrators or local user group members with execution rights for this command.

Platforms	Command context	Authority
9300 10000		

default interface

default interface <INTERFACE-ID>

Description

Sets an interface (or a range of interfaces) to factory default values.

Parameter	Description
<INTERFACE-ID>	Specifies the ID of a single interface or range of interfaces. Format: member/slot/port or member/slot/port-member/slot/port to specify a range.

Examples

Resetting an interface:

```
switch(config)# default default interface 1/1/1
```

Resetting an range of interfaces:

```
switch(config)# default default interface 1/1/1-1/1/10
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

description

description <DESCRIPTION>
no description

Description

Associates descriptive information with an interface to help administrators and operators identify the purpose or role of an interface.

The `no` form of this command removes a description from an interface.

Parameter	Description
<DESCRIPTION>	Specify a description for the interface. Range: 1 to 64 ASCII characters (including space, excluding question mark).

Examples

Setting the description for an interface to **DataLink 01**:

```
switch(config-if) # description DataLink 01
```

Removing the description for an interface.

```
switch(config-if) # no description
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config-if	Administrators or local user group members with execution rights for this command.

dsm uplink-to-uplink

```
dsm uplink-to-uplink
no dsm uplink-to-uplink
```

Description

For ports that are associated with an uplink type persona using the **persona uplink** command, use this command to bypass policy-enforcement for L3 and L3-VxLAN flows between these ports. thereby allowing the forwarding of traffic between them.

The **no** form of this command disables this feature.

Examples

Enabling the DSM uplink-to-uplink feature.

```
switch(config) # dsm
switch(config-dsm) # uplink-to-uplink
```

Command History

Release	Modification
10.11	Command introduced.

Command Information

Platforms	Command context	Authority
10000	config	Administrators or local user group members with execution rights for this command.

error-control

```
error-control {auto | none | base-r-fec | rs-fec}
no error-control {auto | none | base-r-fec | rs-fec}
```

Description

Configures the forward error correction (FEC) mode to use for an interface. When not configured, the system will automatically select the FEC mode based on the installed transceiver. In most cases, the standard FEC mode will work best, but certain link partners may require a non-standard mode.

The `no` and `auto` forms of this command configure the interface to automatically use the standard FEC mode of the currently installed transceiver.



FEC configuration only applies to transceivers, DACs, or AOCs running at 25G or 100G. 100G DACs are a special case. They can only set FEC to `none` when auto-negotiation is disabled through the `speed override` command. The default for the installed transceiver is used in all other cases.



Transceivers for which FEC is auto-negotiated will request the mode configured by this command, but may resolve to a different mode. The applied FEC mode is displayed as a commented line in the configuration shown with the `show run` command. It is also displayed with `show interface` command.

Parameter	Description
<code>auto</code>	Use the transceiver default.
<code>none</code>	Do not use any FEC.
<code>base-r-fec</code>	Use IEEE BASE-R (Firecode) FEC.
<code>rs-fec</code>	Use IEEE RS (Reed-Solomon) FEC.

Command History

Release	Modification
10.08.1021	Command introduced.

Command Information

Platforms	Command context	Authority
8100 8325 8360 9300 10000	config-if	Administrators or local user group members with execution rights for this command.

flow-control

On the 8320:

```
flow-control rx
no flow-control rx
```

On the 8325:

```
flow-control {rx | rxtx [pool <POOL-NUM>]}
no flow-control {rx | rxtx [pool <POOL-NUM>]}
flow-control priority {rxtx <PRIORITY-LIST> | rx <PRIORITY-LIST> | tx <PRIORITY-LIST>}
...
no flow-control priority {rxtx <PRIORITY-LIST> | rx <PRIORITY-LIST> | tx <PRIORITY-LIST>}
...
```

Note: Up to three priority lists in the same command are supported, one each for `rxtx`, `rx`, and `tx`.

On the 8100, 8360:

```
flow-control {rx | rxtx}
no flow-control {rx | rxtx}
flow-control priority rxtx <PRIORITY-LIST>
no flow-control priority rxtx <PRIORITY-LIST>
```

On the 9300:

```
flow-control {rx | rxtx [pool <POOL-NUM>]}
no flow-control {rx | rxtx [pool <POOL-NUM>]}
flow-control priority {rxtx <PRIORITY-LIST> | rx <PRIORITY-LIST> | tx <PRIORITY-LIST>}
...
no flow-control priority {rxtx <PRIORITY-LIST> | rx <PRIORITY-LIST> | tx <PRIORITY-LIST>}
...
```

Note: Up to three priority lists in the same command are supported, one each for `rxtx`, `rx`, and `tx`.

On the 10000:

```
flow-control {rx | rxtx [pool <POOL-NUM>]}
no flow-control {rx | rxtx [pool <POOL-NUM>]}
flow-control priority {rxtx <PRIORITY-LIST> | rx <PRIORITY-LIST> | tx <PRIORITY-LIST>}
...
no flow-control priority {rxtx <PRIORITY-LIST> | rx <PRIORITY-LIST> | tx <PRIORITY-LIST>}
...
```

Note: Up to three priority lists in the same command are supported, one each for `rxtx`, `rx`, and `tx`.

Description

On the 8320, `flow-control` enables negotiation of receive flow control on the current interface. The switch advertises RX support to the link partner.

On the 8100, 8325, 8360, 9300, and 10000, `flow-control` enables negotiation of either receive-only flow control or both receive and transmit flow control on the current interface. The switch advertises either RX or RXTX support to the link partner. The final configuration is determined based on the capabilities of both partners.

On the 8100, 8325, 8360, 9300, and 10000, `flow-control priority` enables priority-based flow control (PFC). Multiple priorities are supported. Bidirectional (symmetric) PFC is configured with parameter `priority rxtx`. Unidirectional (asymmetric) PFC is configured with either parameter `priority rx` or `priority tx`.

On the 8100, 8325, 8360, 9300, and 10000, when configuring PFC for multiple priority levels, the complete list of priorities must be specified in a single command. Priorities cannot be added or subtracted using separate commands.

Each invocation of this command replaces the previous configuration.

The `no` form of these commands disables any configured flow control on the selected interface.

Parameter	Description
<code>rx</code>	Enables the ability to cease and resume transmission when receiving IEEE 802.3x LLFC pause frames on this interface.
<code>rxtx</code>	(Applies to the 8100 and 8360.) Enables the ability to honor received and to transmit IEEE 802.3x LLFC pause frames to the remote device.
<code>rxtx [pool <POOL-NUM>]</code>	(Applies to the 8325, 9300, 10000.) <code>rxtx</code> enables the ability to honor received and to transmit IEEE 802.3x LLFC pause frames to the remote device. <code>pool <POOL-NUM></code> optionally selects the number of the lossless pool used for buffering packets arriving on this interface. Default: 1. Range: 1 to 3.
<code>priority rxtx</code>	(Applies to the 8100, 8325, 8360, 9300, 10000.) Enables the ability to honor received and to transmit IEEE 802.1Qbb PFC pause frames on the interface for the configured packet priority.
<code>priority rx</code>	(Applies to the 8325, 9300, 10000.) Enables the ability to honor received IEEE 802.1Qbb PFC pause frames on the interface for the configured packet priorities. This can be useful for implementing asymmetric PFC when it is desired to configure this only in the receive direction.
<code>priority tx</code>	(Applies to the 8325, 9300, 10000.) Enables the ability to transmit IEEE 802.1Qbb PFC pause frames on the interface for the configured packet priorities. This can be useful for implementing asymmetric PFC when it is desired to configure this only in the transmit direction.
<code><PRIORITY-LIST></code>	(Applies to the 8100, 8325, 8360, 9300, 10000.) Specifies a comma-separated list of packet priorities for which PFC will operate. Range: 0 to 7. Up to seven priorities (two on the 8100 and 8360) can be specified in the list.

Usage (flow control)

- For interfaces that auto-negotiate, link-level flow control is subject to negotiation, plus speed and other parameters. Both ends of the link must negotiate the same flow control mode for it to be applied.
- For interfaces that do not auto-negotiate, the configured link-level flow control mode is always applied and the user is responsible for ensuring that both ends of the link are configured for the same mode.
- All members of a LAG must have the same flow control configuration.

- Lossless flow control is only supported for single destination unicast traffic. Replicated traffic (for example, broadcast, multicast, mirroring) cannot be guaranteed to be lossless.
- Lossless behavior is not supported when operating in a VSF stack configuration.

Usage (priority-based flow control (PFC)) (Not applicable to the 8320)

- PFC will only operate correctly between interfaces with the same priority configuration. Traffic flow will not be lossless between interfaces with different priorities or between interfaces where one has PFC enabled and the other does not.
- On the 8325, 9300, and 10000, PFC takes effect after the configuration is saved and the switch is restarted.
- On the 8325, 9300, and 10000, lossless pools must be created before configuring flow control on any interface. For PFC (when the PFC mode includes TX), any priority to be configured for PFC must be mapped to a lossless pool before it can be enabled for PFC. For link-level flow control, lossless pool 1 will be used by default if no pool is specified when enabling flow control on the interface. If a pool is specified when enabling flow control on an interface, the specified pool must be created first before enabling flow control.
- Any queue used by protocol or control traffic must not be configured for lossless behavior. Routing protocols and VSX-synchronization messages use local-priority 7, therefore the CoS priority mapped to local-priority 7 should not be used in any lossless configuration.
For example, in a default configuration, the CoS map assigns local-priority 7 to packets arriving with VLAN priority 7. This means that lossless pools should not be configured to use priority 7, and that any `flow-control priority` mode should not be configured on priority 7, since that VLAN priority maps to local-priority 7.
- On the 8325, 9300, and 10000, whatever lossless pool(s) will be used for link-level flow control must be created before configuring link-level flow control RXTX mode on any interface. Otherwise, a message similar to the following will be displayed:

```
Lossless pool 1 must be configured using the 'qos pool' command before enabling
RXTX flow control.
```

- On the 8325, 9300, and 10000, link-level flow control RXTX mode is not subject to auto-negotiation. It is recommended to configure PFC or link-level flow control RXTX mode and pools only once on a running system. Changing the pool or flow control configuration on a running system will cause a brief disruption in traffic. The reconfiguration also results in packet loss in the data flow. This may affect one, multiple, or all ports depending on the existing configuration and changes made to it.
- On the 8360, PFC takes effect immediately after configuration.
- On the 8360 JL720A, PFC is not supported on any link speed below 10 Gbps.

On the 8325, 9300, and 10000:

You can only apply three unique combinations of PFC priority configuration across all ports of a switch.

For example:

```
flow-control priority 3
flow-control priority 4,5
flow-control priority 4
```

The first three unique combinations configured across all ports sorted in numerical order are accepted and applied. If you attempt to configure a fourth unique priority combination, the following error message is displayed:

The number of unique priority-based flow control (PFC) configuration combinations cannot be more than 3.

Note that ports with a PFC configuration that cannot be applied can still link up but they will not have any flow control.

Examples

Enabling support for RX flow control:

```
switch(config)# interface 1/1/1
switch(config-if)# flow-control rx
```

Disabling support for RX flow control:

```
switch(config)# interface 1/1/1
switch(config-if)# no flow-control rx
```

(Applies to the 8100, 8325, 8360, 9300, 10000.) Enabling support for RXTX flow control:

```
switch(config)# interface 1/1/1
switch(config-if)# flow-control txrx
```

(Applies to the 8100, 8325, 8360, 9300, 10000.) Disabling support for RXTX flow control:

```
switch(config)# interface 1/1/1
switch(config-if)# no flow-control txrx
```

(Applies to the 8325, 9300, 10000.) Enabling support for RXTX flow control with pool setting:

```
switch(config)# interface 1/1/1
switch(config-if)# flow-control rxtx pool 2
```

(Applies to the 8325, 9300, 10000.) Disabling support for RXTX with pool setting:

```
switch(config)# interface 1/1/1
```

```
switch(config-if) # no flow-control rxtx pool 2
```

(Applies to the 8325, 9300, 10000.) Enabling support for priority RX flow control:

```
switch(config) # interface 1/1/1  
switch(config-if) # flow-control priority rx 3,4
```

(Applies to the 8325, 9300, 10000.) Disabling support for priority RX flow control:

```
switch(config) # interface 1/1/1  
switch(config-if) # no flow-control priority rx 3,4
```

(Applies to the 8100, 8325, 8360, 9300, 10000.) Enabling support for priority RXTX and RX flow control:

```
switch(config) # interface 1/1/1  
switch(config-if) # flow-control priority rxtx 3 rx 1,2,4,5,6
```

(Applies to the 8100, 8325, 8360, 9300, 10000.) Disabling support for priority RXTX and RX flow control:

(Applies to the 8325, 9300, 10000.) Enabling support for priority TX flow control:

```
switch(config) # interface 1/1/1  
switch(config-if) # flow-control priority tx 3,4
```

(Applies to the 8325, 9300, 10000.) Disabling support for priority TX flow control:

```
switch(config) # interface 1/1/1  
switch(config-if) # no flow-control priority tx 3,4
```

(Applies to the 8100, 8325, 8360, 9300, 10000.) Enabling support for priority RXTX, RX, and TX flow control:

```
switch(config) # interface 1/1/1  
switch(config-if) # flow-control priority rxtx 3 rx 1,2,4 tx 5,6
```

(Applies to the 8100, 8325, 8360, 9300, 10000.) Disabling support for priority RXTX, RX, and TX flow control:

```
switch(config) # interface 1/1/1  
switch(config-if) # no flow-control priority rxtx 3 rx 1,2,4 tx 5,6
```

Command History

Release	Modification
10.10	Adjusted the priority syntax. Added separate RX and TX configuration for asymmetric PFC. Added the pool parameter.

Release	Modification
10.09	Support for <code>rxtx</code> added to 8325 Switch Series.
10.08	Command enhanced to configure two PFC priorities.
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	<code>config-if</code>	Administrators or local user group members with execution rights for this command.

flow-control buffer headroom

```

flow-control buffer priority <PRIORITY> headroom <LIMIT> kbytes
flow-control buffer llfc headroom <LIMIT> kbytes
no flow-control buffer priority <PRIORITY> headroom <LIMIT> kbytes
no flow-control buffer llfc headroom <LIMIT> kbytes

```

Description

Allows user configuration of per-priority or LLFC RXTX headroom limit on a physical interface. The `no` form of the command resets the limit to the default value.

Parameter	Description
<code>priority <PRIORITY></code>	Configures buffer parameters for priority flow control. Range: 0 to 7.
<code>llfc</code>	Configures buffer parameters for link-level flow control.
<code>headroom <LIMIT></code>	Specifies the maximum amount of headroom pool buffer space that is allowed to be used for in-flight packets that arrive after flow-control XOFF is asserted. Range: 18 to 10240 kilobytes.

Examples

Configuring a headroom limit of 36 kbytes for PFC priority 4 traffic:

```

switch(config)# interface 1/1/1
switch(config-if)# flow-control buffer priority 4 headroom 36 kbytes

```

Configuring a headroom limit of 36 kbytes for LLFC RXTX traffic:

```

switch(config)# interface 1/1/1
switch(config-if)# flow-control buffer llfc headroom 36 kbytes

```

Resetting the headroom limit to default value:

```
switch(config)# interface 1/1/1
switch(config-if)# flow-control buffer priority 4 headroom 36 kbytes
```

Command History

Release	Modification
10.11	Added support for 9300 series switches.
10.10	Command Introduced.

Command Information

Platforms	Command context	Authority
8325 9300 10000	config-if	Administrators or local user group members with execution rights for this command.

flow-control buffer xoff dynamic

```
flow-control buffer priority <PRIORITY> xoff dynamic <ALPHA>
flow-control buffer llfc xoff dynamic <ALPHA>
no flow-control buffer priority <PRIORITY> xoff dynamic <ALPHA>
no flow-control buffer llfc xoff dynamic <ALPHA>
```

Description

Allows user configuration of per-priority or LLFC RXTX dynamic XOFF limits on a physical interface. The `no` form of the command resets the threshold to the default value.

Parameter	Description
priority <PRIORITY>	Configures buffer parameters for priority flow control. Range: 0 to 7.
llfc	Configures buffer parameters for link-level flow control.
<ALPHA>	Specifies the scale factor used to compute the instantaneous buffer limit based on the instantaneous free space. Range: -7 to 3.

Examples

Configuring the dynamic XOFF limit of -3 for ingress PFC priority 5 traffic:

```
switch(config)# interface 1/1/1
switch(config-if)# flow-control buffer priority 5 xoff dynamic -3
```

Configuring the dynamic XOFF limit of -3 for ingress traffic on an LLFC RXTX port:

```
switch(config)# interface 1/1/1
switch(config-if)# flow-control buffer llfc xoff dynamic -3
```

Resetting the xoff dynamic limit to the default:

```
switch(config)# interface 1/1/1
switch(config-if)# no flow-control buffer priority 5 xoff dynamic
```

```
switch(config)# interface 1/1/1
switch(config-if)# no flow-control buffer llfc xoff dynamic
```

Command History

Release	Modification
10.11	Added support for 9300 series switches.
10.10	Command Introduced.

Command Information

Platforms	Command context	Authority
8325 9300 10000	config-if	Administrators or local user group members with execution rights for this command.

flow-control buffer xoff static

```
flow-control buffer priority <PRIORITY> xoff static <LIMIT> kbytes
flow-control buffer llfc xoff static <LIMIT> kbytes
no flow-control buffer priority <PRIORITY> xoff static <LIMIT> kbytes
no flow-control buffer llfc xoff static <LIMIT> kbytes
```

Description

Allows user configuration of per-priority or LLFC RXTX static XOFF limits on a physical interface.

The `no` form resets the threshold to the default value.

Parameter	Description
priority <PRIORITY>	Configures buffer parameters for priority flow control. Range: 0 to 7.
llfc	Configures buffer parameters for link-level flow control.
<LIMIT>	Specifies the absolute limit programmed for the port or priority. When the in-use amount reaches this limit, the XOFF is asserted. Range: 36 to 20000 kilobytes on 8325 and 10000 series switches. Range: 36 to 40000 kilobytes on 9300 series switches.

Examples

Configuring the XOFF static limit of 128 kbytes for PFC priority 6 traffic:

```
switch(config)# interface 1/1/1
switch(config-if)# flow-control buffer priority 6 xoff static 128 kbytes
```

Configuring the XOFF static limit of 128 kbytes for LLFC RXTX traffic:

```
switch(config)# interface 1/1/1
switch(config-if)# flow-control buffer llfc xoff static 128 kbytes
```

Resetting the xoff static limit to the default:

```
switch(config)# interface 1/1/1
switch(config-if)# no flow-control buffer priority 6 xoff static
```

```
switch(config)# interface 1/1/1
switch(config-if)# no flow-control buffer llfc xoff static
```

Command History

Release	Modification
10.11	Added support for 9300 series switches.
10.10	Command Introduced.

Command Information

Platforms	Command context	Authority
8325 9300 10000	config-if	Administrators or local user group members with execution rights for this command.

flow-control buffer xon

```
flow-control buffer priority <PRIORITY> xon <VALUE> kbytes
flow-control buffer llfc xon <VALUE> kbytes
no flow-control buffer priority <PRIORITY> xon <VALUE> kbytes
no flow-control buffer llfc xon <VALUE> kbytes
```

Description

Allows user configuration of per-priority or LLFC RXTX dynamic XON delta on a physical interface. The **no** form of the command resets the XON delta to the default value.

Parameter	Description
priority <PRIORITY>	Configures buffer parameters for priority flow control. Range: 0 to 7.

Parameter	Description
llfc	Configures buffer parameters for link-level flow control.
<VALUE>	Specifies the offset value below the XOFF limit where XON is asserted and packet transmission resumes. Range: 1 to 20000 kilobytes on 8325 and 10000 series switches. Range: 1 to 40000 kilobytes on 9300 series switches.

Examples

Configuring the XON delta of 24 kbytes for PFC priority 4 traffic:

```
switch(config)# interface 1/1/1
switch(config-if)# flow-control buffer priority 4 xon 24 kbytes
```

Configuring the XON delta of 24 kbytes for LLFC RXTX traffic:

```
switch(config)# interface 1/1/1
switch(config-if)# flow-control buffer llfc xon 24 kbytes
```

Resetting the xon delta to the default value:

```
switch(config)# interface 1/1/1
switch(config-if)# no flow-control buffer priority 4 xon 24 kbytes
```

```
switch(config)# interface 1/1/1
switch(config-if)# no flow-control buffer llfc xon 24 kbytes
```

Command History

Release	Modification
10.11	Added support for 9300 series switches.
10.10	Command Introduced.

Command Information

Platforms	Command context	Authority
8325 9300 10000	config-if	Administrators or local user group members with execution rights for this command.

flow-control watchdog

```
flow-control watchdog
no flow-control watchdog
```

Description

Enables flow control watchdog on a physical interface.

When an excessive amount of lossless traffic stops transmitting, problematic lossless buffer congestion occurs throughout the network. To prevent the situation, egress lossless queues are monitored to detect when no transmissions have occurred for a globally specified detection timeout. When the condition is detected, the flow control watchdog triggers on the affected queue resulting in the following actions:

- The watchdog timeout counter on the interface is incremented.
- All packets occupying the affected queue are discarded.
- New packet arrivals destined for the affected queue are discarded.

After the configured resume interval has elapsed since the trigger, the queue is returned to normal operation.

The `no` form of this command disables flow control watchdog on a physical interface.

Flow control watchdog is only supported on interfaces configured with PFC. Link-level flow control is not compatible with flow control watchdog.



When flow control watchdog is enabled, it is active on all lossless queues of the port.

To determine whether the flow control watchdog is enabled on an interface, or to see the number of times the watchdog has been triggered, use the `show interface flow-control` command.

The detection and resume intervals must be configured from the global configuration context.

Examples

Enabling flow control watch on an interface:

```
switch(config)# interface 1/1/1
switch(config-if)# flow-control watchdog
```

Disabling flow control watch on an interface:

```
switch(config)# interface 1/1/1
switch(config-if)# no flow-control watchdog
```

Command History

Release	Modification
10.08	Command introduced

Command Information

Platforms	Command context	Authority
8325 9300 10000	config-if	Administrators or local user group members with execution rights for this command.

flow-control watchdog timeout resume

flow-control watchdog timeout <MILLISECONDS> resume <MILLISECONDS>
no flow-control watchdog timeout <MILLISECONDS> resume <MILLISECONDS>

Description

Configures global flow control watchdog parameters, detection time and resume time. The parameters are applied to all interfaces that have flow control watchdog enabled with command `flow-control watchdog`.

The `no` form of this command clears the global configuration parameters for flow control watchdog, restoring timeout and resume time to the platform defaults.

Flow control watchdog must be enabled on specified interfaces.

The configured timing parameters are rounded to what the hardware supports. Use command `show flow control` to show the applied values.

Using fault monitor, an interface can be configured with additional actions such as `notify` or `notify-and-disable` when flow control watchdog triggers exceed the configured threshold. See *Excessive flow control watchdog triggers* in the *Fault monitor* section of the Security Guide (version 10.12 or higher) for your switch model.

Parameter	Description
<code>timeout <MILLISECONDS></code>	Specifies the amount of time in milliseconds, that a queue must be paused for watchdog to trigger. Range: 10 to 1500 milliseconds. Default: 100 milliseconds.
<code>resume <MILLISECONDS></code>	Specifies the duration of time in milliseconds, that a queue remains in the triggered state. Range: 1 to 100000 milliseconds. Default: 100 milliseconds.

Examples

Configuring flow control watchdog global parameters:

```
switch(config)# flow-control watchdog timeout 100 resume 60
```

Removing flow control watchdog global parameters:

```
switch(config)# no flow-control watchdog timeout 100 resume 60
```

Command History

Release	Modification
10.08	Command introduced

Command Information

Platforms	Command context	Authority
8325 9300 10000	config	Administrators or local user group members with execution rights for this command.

interface

interface <PORT-NUM>

Description

Switches to the `config-if` context for a physical port. This is where you define the configuration settings for the logical interface associated with the physical port.

Parameter	Description
<PORT-NUM>	Specifies a physical port number. Format: member/slot/port.

Examples

Configuring an interface:

```
switch(config)# interface 1/1/1
switch(config-if)#
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

interface loopback

interface loopback <ID>
no interface loopback <ID>

Description

Creates a loopback interface and changes to the `config-loopback-if` context. Loopback interfaces are layer 3.

The `no` form of this command deletes a loopback interface.

Parameter	Description
<INSTANCE>	Specifies the loopback interface ID. Range: 1 to 256

Examples

```
switch# config
switch(config)# interface loopback 1
switch(config-loopback-if)#
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
8100 8320 8325 8360 9300 10000	config	Administrators or local user group members with execution rights for this command.

interface vlan

```
interface vlan <VLAN-ID>
no interface vlan <VLAN-ID>
```

Description

Creates an interface VLAN also know as an SVI (switched virtual interface) and changes to the `config-if-vlan` context. The specified VLAN must already be defined on the switch.

The `no` form of this command deletes an interface VLAN.

Parameter	Description
<VLAN-ID>	Specifies the loopback interface ID.
none	Do not reserve any internal VLANs.

Examples

```
switch# config
switch(config)# vlan 10
switch(config-vlan-10)# exit
switch(config)# interface vlan 10
switch(config-if-vlan)#
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

ip address

```
ip address <IPv4-ADDR>/<MASK> [secondary]
no ip address <IPv4-ADDR>/<MASK> [secondary]
```

Description

Sets an IPv4 address for the current layer 3 interface.

The `no` form of this command removes the IPv4 address from the interface.

Parameter	Description
<IPv4-ADDR>	Specifies an IP address in IPv4 format (x.x.x.x), where x is a decimal number from 0 to 255. You can remove leading zeros. For example, the address 192.169.005.100 becomes 192.168.5.100.
<MASK>	Specifies the number of bits in the address mask in CIDR format (x), where x is a decimal number from 0 to 128.
secondary	Specifies a secondary IP address.

Examples

Setting the IP address on interface **1/1/1** to **192.168.100.1** with a mask of **24** bits:

```
switch(config)# interface 1/1/1
switch(config-if)# ip address 192.168.100.1/24
```

Removing the IP address **192.168.100.1** with a mask of **24** bits from interface **1/1/1**:

```
switch(config)# interface 1/1/1
switch(config-if)# No ip address 192.168.100.1/24
```

Assigning the IP address **192.168.20.1** with a mask of **24** bits to loopback interface **1**:

```
switch(config)# interface loopback 1
switch(config-loopback-if)# ip address 192.168.20.1/24
```

Assigning the IP address **192.168.199.1** with a mask of **24** bits to interface VLAN **10**:

```
switch(config)# interface vlan 10
switch(config-if-vlan)# ip address 192.168.199.1/24
```

Removing the IP address **192.168.199.1** with a mask of **24** bits from interface VLAN **10**:

```
switch(config)# interface vlan 10
switch(config-if-vlan)# no ip address 192.168.199.1/24
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config-if config-loopback-if config-if-vlan	Administrators or local user group members with execution rights for this command.

ip mtu

```
ip mtu <VALUE>
```

```
no ip mtu
```

Description

Sets the IP MTU (maximum transmission unit) for an interface. This defines the largest IP packet that can be sent or received by the interface. This value should be less than or equal to the overall MTU for the interface.

The `no` form of this command sets the IP MTU to the default value 1500. This command is only allowed when routing is enabled on the interface.

Parameter	Description
<VALUE>	Specifies the IP MTU in bytes. Range: 68 to 9198. Default: 1500.

Examples

Setting the IP MTU to 576 bytes:

```
switch(config-if)# ip mtu 576
```

Setting the IP MTU to the default value:

```
switch(config-if)# no ip mtu
```

Setting the IP MTU value on a subinterface:

```
switch(config)# interface 1/1/1.10
switch(config-subif)# ip mtu 6000
```

Usage

The IP MTU value for subinterface must be less than or equal to the parent MTU for the subinterface. The subinterface uses its IP MTU value and not the parent IP MTU value.

Command History

Release	Modification
10.08	Subinterface support added.
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config-if config-if-vlan config-subif	Administrators or local user group members with execution rights for this command.

ipv6 address

```
ipv6 address <IPv6-ADDR>/<MASK>{eui64 | [tag <ID>]}
no ipv6 address <IPv6-ADDR>/<MASK>
```

Description

Sets an IPv6 address on the interface.

The `no` form of this command removes the IPv6 address on the interface.



This command automatically creates an IPv6 link-local address on the interface. However, it does not add the `ipv6 address link-local` command to the running configuration. If you remove the IPv6 address, the link-local address is also removed. To maintain the link-local address, you must manually execute the `ipv6 address link-local` command.

Parameter	Description
<IPv6-ADDR>	Specifies the IP address in IPv6 format (xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx), where x is a hexadecimal number from 0 to F. You can use two colons (::) to represent consecutive zeros (but only once), remove leading zeros, and collapse a hextet of four zeros to a single 0. For example, this address 2222:0000:3333:0000:0000:0000:4444:0055 becomes 2222:0:3333::4444:55.

Parameter	Description
<MASK>	Specifies the number of bits in the address mask in CIDR format (x), where x is a decimal number from 0 to 128.
eui64	Configure the IPv6 address in the EUI-64 bit format.
tag <ID>	Configure route tag for connected routes. Range: 0 to 4294967295. Default: 0.

Examples

Setting the IPv6 address **2001:0db8:85a3::8a2e:0370:7334** with a mask of 24 bits:

```
switch(config-if)# ipv6 address 2001:0db8:85a3::8a2e:0370:7334/24
```

Removing the IP address 2001:0db8:85a3::8a2e:0370:7334 with mask of 24 bits:

```
switch(config-if)# no ipv6 address 2001:0db8:85a3::8a2e:0370:7334/24
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config-if	Administrators or local user group members with execution rights for this command.

l3-counters

```
l3-counters [rx | tx]
no l3-counters [rx | tx]
```

Description

Enables counters on a layer 3 interface. By default, all interfaces are layer 3. To change a layer 2 interface to layer 3, use the `routing` command.

The `no` form of this command, with no specification, disables both transmit and receive counters on a layer 3 interface. To disable transmit (tx) or receive (rx) counters only, specify the counter type you want to disable.

Parameter	Description
rx	Specifies receive counters.
tx	Specifies transmit counters.

Examples

Enabling layer 3 transmit counters on interface **1/1/1**:

```
switch(config)# interface 1/1/1  
switch(config-if)# l3-counters tx
```

Disabling layer 3 transmit and receive counters on interface **1/1/2**:

```
switch(config)# interface 1/1/2  
switch(config-if)# no l3-counters
```



Layer 3 counters on subinterfaces are only supported on the Aruba 8100 and 8360 switch series.

Enabling layer 3 counters on subinterface **1/1/1.10**:

```
switch(config)# interface 1/1/1.10  
switch(config-subif)# l3-counters
```

Disabling layer 3 counters on subinterface **1/1/1.10**:

```
switch(config)# interface 1/1/1.10  
switch(config-subif)# no l3-counters
```

Enabling layer 3 receive counters on subinterface **1/1/1.10**:

```
switch(config)# interface 1/1/1.10  
switch(config-subif)# l3-counters rx
```

Disabling layer 3 transmit counters on subinterface **1/1/1.10**:

```
switch(config)# interface 1/1/1.10  
switch(config-subif)# no l3-counters tx
```

Command History

Release	Modification
10.08	Added support for 13 counters on subinterfaces
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
8100 8320 8325 8360 9300 10000	config-if config-subif	Administrators or local user group members with execution rights for this command.

mtu

mtu <VALUE>
no mtu

Description

Sets the MTU (maximum transmission unit) for an interface. This defines the maximum size of a layer 2 (Ethernet) frame. Frames larger than the MTU (1500 bytes by default) are dropped and cause an ICMP fragmentation-needed message to be sent back to the originator.

To support jumbo frames (frames larger than 1522 bytes), increase the MTU as required by your network. A frame size of up to 9198 bytes is supported.

The largest possible layer 1 frame will be 18 bytes larger than the MTU value to allow for link layer headers and trailers.

The `no` form of this command sets the MTU to the default value 1500.

Parameter	Description
<VALUE>	Specifies the MTU in bytes. Range: 46 to 9198. Default: 1500.

Examples

Setting the MTU on interface **1/1/1** to 1000 bytes:

```
switch(config)# interface 1/1/1
switch(config-if)# no routing
switch(config-if)# mtu 1000
```

Setting the MTU on interface **1/1/1** to the default value:

```
switch(config)# interface 1/1/1
switch(config-if)# no routing
switch(config-if)# no mtu
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config-if	Administrators or local user group members with execution rights for this command.

persona

```
persona {access | uplink | custom <PERSONA-NAME>} [copy | attach]
no persona {access | uplink | custom <PERSONA-NAME>} [copy | attach]
```

Description

Associates one of three persona types with an interface to classify the purpose or role of an interface. On the 10000 Switch Series, “access” persona ports are typically connected to workloads / VMs, and the “uplink” (fabric) persona ports are connected to the core / spine.

The `no` form of this command removes the interface persona.

Parameter	Description
access	Selects the access persona type.
uplink	Selects the uplink persona type.
custom <PERSONA-NAME>	Selects the custom persona type with a user-provided name. Range: 1 to 64 printable ASCII characters including space.
copy	Specifies the mode: copies settings from the persona interface of the same name.
attach	Specifies the mode: attaches the specified interface to the persona interface of the same name.

Usage

- If the mode is specified, either copy or attach, the interface configuration is dependent on the interface template whose name is "access", "uplink", or "<PERSONA-NAME>". On the other hand, if the mode is not specified, then the persona is just a label in the interface, and its configuration is not modified even if the interface persona exists. When configuring the mode, one of the following options is possible:
 - The **copy** option performs a one-time copy of the template interface. Subsequent changes to the template are not copied and the 'persona' setting is just a label. If the mode is set to `copy` and the interface persona does not exist, then the CLI command fails with the message "Interface persona not found".
 - The **attach** option performs a copy of the template interface, and subsequent changes to the template interface configuration are immediately applied to all attached interfaces. The template interface does not need to exist before attaching other interfaces to it. After attaching a template,

the copied settings can be modified for an individual interface. However, any change in the attached template will overwrite the modified values with the new template values.

- When a mode is specified, it should match an interface created with the command `interface persona <PERSONA-NAME>`. The only exception to this rule is when the mode is set to `attach` and the persona does not already exist.
- The mode is only available to be configured for an interface that meets the following conditions:
 - IS a physical interface
 - IS NOT a LAG member
 - IS NOT a persona interface

Examples

Configuring an access persona:

```
switch(config)# interface 1/1/1  
switch(config-if)# persona access
```

Configuring an uplink persona:

```
switch(config)# interface 1/1/1  
switch(config-if)# persona uplink
```

Configuring a custom persona named "mypersona":

```
switch(config)# interface 1/1/1  
switch(config-if)#persona custom mypersona
```

Removing the persona setting.

```
switch(config-if)# no persona
```

Copying a predefined persona name configuration to an interface:

1. Configuring the interface persona:

```
switch(config)# interface persona uplink  
switch(config-if)# no shutdown  
switch(config-if)# no routing  
switch(config-if)# vlan access 100  
switch(config-if)# exit
```

2. Applying the configuration from the persona named "mypersona" with `copy` mode:

```
switch(config)# interface 1/1/1  
switch(config-if)# persona custom mypersona copy  
switch(config-if)# exit
```

Attaching a custom persona name named "mypersona" to several interfaces simultaneously:

1. Configuring an interface persona named "mypersona":

```
switch(config)# interface persona mypersona
switch(config-if)# no shutdown
switch(config-if)# vrf attach upstream
switch(config-if)# exit
```

2. Applying the "mypersona" configuration with **attach** mode:

```
switch(config)# interface 1/1/1-1/1/24
switch(config-if)# persona custom mypersona attach
switch(config-if)# exit
```

Command History

Release	Modification
10.10	Added optional parameters: attach, copy.
10.09	Command introduced.

Command Information

Platforms	Command context	Authority
All platforms	config-if	Administrators or local user group members with execution rights for this command.

rate-interval

```
rate-interval <VALUE>
```

```
no rate-interval
```

Description

This command sets the time interval to calculate interface rates. Lower intervals are more useful for detecting traffic bursts, but may increase computation load to the overall system. Intervals must be a multiple of five seconds. The command-line interface will not accept a rate interval value that is not a multiple of five.

The **no** form of this command sets the rate collection interval to the default value of 300 seconds.

Parameter	Description
<VALUE>	The statistics rate collection interval in seconds. The supported range is 5-300 seconds, where the number of seconds is a multiple of five.

Examples

Setting the rate collection interval to 50 seconds

```
switch(config)# interface 1/1/1
switch(config-if)# rate-interval 50
```

Setting the rate collection interval to the default value:

```
switch(config-if)# no rate-interval
```

The following example shows the command-line interface warning that appears while configuring an invalid rate-interval.

```
switch(config)# interface 1/1/1
switch(config-if)# rate interval 6
The interval must be a multiple of 5.
```

Usage

The rate collection interval must be configured in the multiples of 5. Any other value will be rejected and the CLI will display the error message,

The interval must be a multiple of 5.

Command History

Release	Modification
10.12.1000	Command supported on all platforms.
10.12	Command Introduced on 6300 and 8360 Switch series.

Command Information

Platforms	Command context	Authority
All platforms	config-if	Administrators or local user group members with execution rights for this command.

routing

```
routing
no routing
```

Description

Enables routing support on an interface, creating a L3 (layer 3) interface on which the switch can route IPv4/IPv6 traffic to other devices.

By default, routing is enabled on all interfaces.

The `no` form of this command disables routing support on an interface, creating a L2 (layer 2) interface.

Examples

Enabling routing support on an interface:

```
switch(config-if)# routing
```

Disabling routing support on an interface:

```
switch(config-if)# no routing
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
8100 8320 8325 8360 9300 10000	config-if	Administrators or local user group members with execution rights for this command.

show allow-unsupported-transceiver

```
show allow-unsupported-transceiver
```

Description

Displays configuration and status of unsupported transceivers.

Examples

Showing unallowed unsupported transceivers:

```
switch(config)# show allow-unsupported-transceiver
Allow unsupported transceivers : no
Logging interval               : 1440 minutes
-----
Port      Type      Status
-----
1/1/31    SFP-SX      unsupported
1/1/32    SFP-1G-BXD  unsupported
1/1/2     SFP28DAC3   unsupported
```

Showing allowed unsupported transceivers:

```
switch# show allow-unsupported-transceiver
Allow unsupported transceivers : yes
Logging interval               : 1440 minutes
-----
Port      Type      Status
-----
```

1/1/31	SFP-SX	unsupported-allowed
1/1/32	SFP-1G-BXD	unsupported-allowed
1/1/2	SFP28DAC3	unsupported

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config-if	Administrators or local user group members with execution rights for this command.

show dsm uplink-to-uplink

```
show dsm uplink-to-uplink
```

Description

Show whether the DSM uplink-to-uplink feature is enabled or disabled.

Examples

Showing the status of the DSM uplink-to-uplink feature

```
switch(config)# sh dsm uplink-to-uplink
Uplink to uplink is enabled
```

Command History

Release	Modification
10.11	Command introduced.

Command Information

Platforms	Command context	Authority
10000	config	Administrators or local user group members with execution rights for this command.

show interface

```
show interface [<IFNNAME>|<IFRANGE>] [brief | physical]
show interface [<IFNNAME>|<IFRANGE>] [extended [non-zero] | [human-readable]]
show interface [<IFNNAME>] monitor [human-readable]
show interface [lag | loopback | tunnel | vlan ] [<ID>] [brief]
show interface lag [<LAG-ID>] [extended [non-zero] | [human-readable]]
show interface lag [<LAG-ID>] monitor [human-readable]
```



```
show interface vxlan <VXLAN-ID> [brief | physical]
show interface vxlan <VXLAN-ID> [brief | physical]
```

Description

Shows active configurations and operational status information for interfaces.

Parameter	Description
<IFNAME>	Specifies a interface name.
<IFRANGE>	Specifies the port identifier range.
brief	Shows brief info in tabular format.
physical	Shows the physical connection info in tabular format.
extended	Shows additional statistics, including the tx filtered and rx filtered counters. - Rx filter packets are protocol packets received when the protocol is disabled on the switch and there is only one port in the VLAN. Protocols include OSPF, PIM, RIP, LACP, and LLDP. - An example of a Tx filtered packet would be a multicast packet being filtered from going out of the ingress port.
human-readable	Shows statistics rounded to the nearest power of 1000, for example, 1K, 345M, 2G. This is available only in the CLI interface output.
non-zero	Shows only non zero statistics.
LAG	Shows LAG interface information.
monitor	Continuously monitor interface statistics.
LOOPBACK	Shows loopback interface information.
TUNNEL	Shows tunnel interface information.
VLAN	Shows VLAN interface information.
<LAG-ID>	Specifies the LAG number. Range: 1-256
<LOOPBACK-ID>	Specifies the LOOPBACK number. Range: 0-255
<TUNNEL-ID>	Specifies the tunnel ID. Range: 1-255
<VLAN-ID>	Specifies the VLAN ID. Range: 1-4094
VXLAN	Shows the VXLAN interface information.
<VXLAN-ID>	Specifies the VXLAN interface identifier. Default: 1

Examples

Showing interface information when it is configured as a route-only port (the `persona` item is only available on the 10000 Switch Series):

```

switch# show interface 1/1/1
Interface 1/1/1 is up
Admin state is up
Link state: up for 2 days (since Sun Jun 21 05:30:22 UTC 2020)
Link transitions: 1
Description: backup data center link
  Persona: access
Hardware: Ethernet, MAC Address: 70:72:cf:fd:e7:b4
MTU 1500
Type 1GbT
Full-duplex
qos trust none
Speed 1000 Mb/s
Auto-negotiation is on
Flow-control: off
Error-control: off
MDI mode: MDIX
L3 Counters: Rx Enabled, Tx Enabled
Rate collection interval: 300 seconds

```

Rates	RX	TX	Total (RX+TX)
Mbits / sec	0.00	0.00	0.00
KPkts / sec	0.00	0.00	0.00
Unicast	0.00	0.00	0.00
Multicast	0.00	0.00	0.00
Broadcast	0.00	0.00	0.00
Utilization %	0.00	0.00	0.00

Statistics	RX	TX	Total
Packets	0	0	0
Unicast	0	0	0
Multicast	0	0	0
Broadcast	0	0	0
Bytes	0	0	0
Jumbos	0	0	0
Dropped	0	0	0
Filtered	0	0	0
Pause Frames	0	0	0
L3 Packets	0	0	0
L3 Bytes	0	0	0
Errors	0	0	0
CRC/FCS	0	n/a	0
Collision	n/a	0	0
Runts	0	n/a	0
Giants	0	n/a	0
Other	0	0	0

Showing information when the interface is currently linked at a downshifted speed:

```

switch(config-if)# show interface 1/1/1
Interface 1/1/1 is up
...
Auto-negotiation is on with downshift active

```

Showing information when the interface is shut down during a VSX split (the `persona` item is only available on the 10000 Switch Series):

```

switch(config-if)# show interface 1/1/1
Interface 1/1/1 is down
Admin state is up
State information: Disabled by VSX
Link state: down for 3 days (since Tue Mar 16 05:20:47 UTC 2021)
Link transitions: 0
Description:
  Persona: access
Hardware: Ethernet, MAC Address: 04:09:73:62:90:e7
MTU 1500
Type SFP+DAC3
Full-duplex
qos trust none
Speed 0 Mb/s
Auto-negotiation is off
Flow-control: off
Error-control: off
VLAN Mode: native-untagged
Native VLAN: 1
Allowed VLAN List: 1502-1505
Rate collection interval: 300 seconds

```

Rate	RX	TX	Total (RX+TX)
Mbits / sec	0.00	0.00	0.00
KPkts / sec	0.00	0.00	0.00
Unicast	0.00	0.00	0.00
Multicast	0.00	0.00	0.00
Broadcast	0.00	0.00	0.00
Utilization	0.00	0.00	0.00

Statistic	RX	TX	Total
Packets	0	0	0
Unicast	0	0	0
Multicast	0	0	0
Broadcast	0	0	0
Bytes	0	0	0
Jumbos	0	0	0
Dropped	0	0	0
Pause Frames	0	0	0
Errors	0	0	0
CRC/FCS	0	n/a	0
Collision	n/a	0	0
Runts	0	n/a	0
Giants	0	n/a	0

Showing the monitor information:



In monitor mode, the CLI refreshes data automatically until it is exited by entering `q`. Pressing `?` opens the help menu to display which options are available in this context.

```

Interface 1/1/1 is up

```

Rate	RX	TX	Total (RX+TX)
Mbits / sec	30196.43	30196.43	60392.85
MPkts / sec	58977.39	58977.40	117954.79
Unicast	0.00	0.00	0.00
Multicast	58977.39	58977.40	117954.79

Broadcast	0.00	0.00	0.00
Utilization %	75.49	75.49	150.98
Statistic	RX	TX	Total (RX+TX)
-----	-----	-----	-----
Packets	4756527649	4756527865	9513055514
Unicast	0	0	0
Multicast	4756527649	4756527865	9513055514
Broadcast	2	0	2
Bytes	304417778668	304417795428	608835574096
Jumbos	0	0	0
Dropped	0	19028847730	19028847730
Pause Frames	0	0	0
Errors	0	0	0
CRC/FCS	0	n/a	0
help: ?, quit: q			

```

Help for Interface Monitor
h  Toggle human-readable mode
c  Clear interface statistics
Does not apply to rates
Arrows, PgUp, PgDn, Home, End
Navigate interface statistics
Delay: 2
help: ?, quit: q

```

Showing the output for interface 1/1/1 in human-readable format:

In human-readable format, the < 1 symbol for Utilization indicates that the amount of packets is between zero and one. This is true in cases where the number of bytes increases but the number of packets and the Utilization value is not displayed even in the normal output, where the human-readable parameter is not included in the command.

```

switch(config-if)# show interface 1/1/1 human-readable
Interface 1/1/1 is up
Rate
-----
Bits / sec      3M          3M          6M
Pkts / sec      316         316         633
Unicast         319         319         638
Multicast        0           0           0
Broadcast        0           0           0
Utilization %   < 1         < 1         < 1
Statistic       RX          TX          Total
-----
Packets         577K        577K        1M
Unicast         577K        577K        1M
Multicast        0           51          51
Broadcast        0           15          15
Bytes          744M        745M        1G
Jumbos          0           0           0
Dropped         0           0           0
Filtered        0           0           0
Pause Frames    0           0           0
Errors          0           0           0
CRC/FCS         0           n/a         0
Collision       n/a         0           0
Runts           0           n/a         0

```

Showing information about extended counters:



The output of the `show interface extended` command varies depending on the switch model and configuration.

```
switch(config-if)# show interface 1/1/17 extended
-----
Interface 1/1/17
-----
Statistics                                         Value
-----
Dot1d Tp Port In Frames                          547
Dot1d Tp Port Out Frames                        608
Dot3 In Pause Frames                             0
Dot3 Out Pause Frames                           0
Ethernet Stats Broadcast Packets                 19
Ethernet Stats Bytes                            40162
Ethernet Stats Packets                          342
...
-----
Error-Statistics                                 Value
-----
Dot1d Base Port MTU Exceeded Discards            0
Dot3 Control In Unknown Opcodes                  0
Dot3 Stats Alignment Errors                      0
Dot3 Stats FCS Errors                            0
Dot3 Stats Frame Too Longs                       0
Dot3 Stats Internal Mac Transmit Errors          0
Ethernet RX Oversize Packets                     0
...
```

Command History

Release	Modification
10.11	Added <code>monitor</code> parameter.
10.10	Added <code>human-readable</code> parameter.
10.09	Added persona information for the 10000 Switch Series.
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show interface dom

```
show interface [<INTERFACE-ID>] dom [detail] [vsx-peer]
```

Description

Shows diagnostics information and alarm/warning flags for the optical transceivers (SFP, SFP+, QSFP+). This information is known as DOM (Digital Optical Monitoring). DOM information also consists of vendor determined thresholds which trigger high/low alarms and warning flags.

Parameter	Description
<INTERFACE-ID>	Specifies an interface. Format: member/slot/port.
detail	Show detailed information.
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Example

```
switch# show interface dom
```

Port	Type	Channel	Temperature (Celsius)	Voltage (Volts)	Tx Bias (mA)	Rx Power (mW/dBm)	Tx Power (mW/dBm)
1/1/1	SFP+SR		47.65	3.31	8.40	0.08, -10.96	0.63, -2.49
1/1/2	SFP+SR		n/a	n/a	n/a	n/a	n/a
1/1/3	SFP+DA3		42.10	3.24	n/a	n/a	n/a
1/1/4	QSFP+SR4	1	44.46	3.30	6.12	0.08, -10.96	0.63, -1.95
2			44.46	3.30	6.04	0.08, -10.96	0.63, -2.00
3			44.46	3.30	6.51	0.08, -10.96	0.60, -2.16
4			44.46	3.30	6.19	0.08, -10.96	0.63, -1.94

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show interface flow-control

show interface [<IFNAME>|<IFRANGE>] flow-control [detail]

Description

Shows the flow control configuration, status, and statistics of the specified interface for interfaces on which flow control is enabled.



If `detail` is not specified, this command shows a summary of all flow controlled interfaces with one interface per line. If `detail` is specified, this command shows flow control detailed statistics.



As of AOS-CX 10.10, the separate `show flow-control` command has been removed, with it being effectively replaced by this command.

Parameter	Description
<IFNAME> <IFRANGE>	Specifies the interface (port) name or range. When no interface range is specified, only interfaces with flow control enabled in the configuration or status are shown.
detail	Shows detailed information.

Examples

Showing summary flow control information:

```
switch# show interface flow-control
-----
Port      Flow
          Control
-----
1/1/1     config: llfc rx
          status: llfc rx
1/1/2     config: llfc rx
          status: none
```

Showing summary flow control information with PFC:

```
switch# show interface flow-control
-----
Port      Flow
          Control
-----
1/1/1     config: pfc rxtx-1,2
          status: pfc rxtx-1,2
1/1/2     config: pfc rxtx-5
          status: none
```

Showing summary flow control information with PFC:

```
switch# show interface flow-control
Flow Control Watchdog Settings
Trigger Timeout: 100 milliseconds
```

Resume Time:		100 milliseconds	
Port	Flow Control	Watchdog Status	Watchdog Timeouts
1/1/1	config: llfc rx status: llfc rx		
1/1/2	config: llfc rx status: llfc rx	incompatible	0
1/1/10	config: pfc rxtx-1,2 status: pfc rxtx-1,2	enabled	1234
1/1/12	config: pfc rxtx-1,2 status: pfc rxtx-1,2	error	0
1/1/32:4	config: pfc rxtx-5 status: pfc rxtx-5		

Showing summary flow control information where the configuration does not match status due to a reboot required to apply PFC configuration in hardware:

```
switch# show interface flow-control
```

Flow Control Watchdog Settings
 Trigger Timeout: 100 milliseconds (actual: not applied)
 Resume Time: 100 milliseconds (actual: not applied)

Port	Flow Control	Watchdog Status	Watchdog Timeouts
1/1/1	config: llfc rx status: llfc rx		
1/1/2	config: llfc rx status: llfc rx	incompatible	0
1/1/10	config: pfc rxtx-1,2 status: none	pending	1234
1/1/12	config: pfc rxtx-1,2 status: none	pending	0
1/1/32:4	config: pfc rxtx-5 status: none		

Showing detailed flow control information with RX flow control enabled:

```
switch# show interface 1/1/1 flow-control detail
```

Interface 1/1/1 is up
 Admin state is up
 Link state: up for 3 minutes (since Thu Apr 07 16:38:02 UTC 2022)
 Flow-control: llfc rx

Statistics	RX
Dot3 Pause Frames	0

Showing detailed flow control information with RX flow control enabled:


```

switch# show interface 1/1/1 flow-control detail
Interface 1/1/1 is up
Admin state is up
Link state: up for 3 minutes (since Thu Apr 07 16:38:02 UTC 2022)
Flow-control: llfc rx
Flow-control watchdog: disabled

Statistics
-----
Dot3 Pause Frames          0

```

Showing detailed flow control information with RXTX flow control enabled:

```

switch# show interface 1/1/1 flow-control detail
Interface 1/1/1 is up
Admin state is up
Link state: up for 3 minutes (since Thu Apr 07 16:38:02 UTC 2022)
Flow-control: llfc rxtx

Statistics
-----
Dot3 Pause Frames          0

```

Statistics	RX	TX
Dot3 Pause Frames	0	0

Showing detailed flow control information with PFC enabled:

```

switch# show interface 1/1/1 flow-control detail
Interface 1/1/1 is up
Admin state is up
Link state: up for 3 minutes (since Thu Apr 07 16:38:02 UTC 2022)
Flow-control: pfc rxtx-4,5

Statistics
-----
Priority 0 Pauses          0
Priority 1 Pauses          0
Priority 2 Pauses          0
Priority 3 Pauses          0
Priority 4 Pauses          0
Priority 5 Pauses          0
Priority 6 Pauses          0
Priority 7 Pauses          0
Total Pause Frames        0

```

Statistics	RX	TX
Priority 0 Pauses	0	0
Priority 1 Pauses	0	0
Priority 2 Pauses	0	0
Priority 3 Pauses	0	0
Priority 4 Pauses	0	0
Priority 5 Pauses	0	0
Priority 6 Pauses	0	0
Priority 7 Pauses	0	0
Total Pause Frames	0	0

Showing detailed flow control information with PFC enabled and flow control watchdog disabled:

```

switch# show interface 1/1/1 flow-control detail
Interface 1/1/1 is up
Admin state is up
Link state: up for 3 minutes (since Thu Apr 07 16:38:02 UTC 2022)
Flow-control: pfc rxtx-4,5
Flow-control watchdog: disabled

Statistics
-----

```

Statistics	RX	TX
------------	----	----

```

-----
Priority 0 Pauses          0          0
Priority 1 Pauses          0          0
Priority 2 Pauses          0          0
Priority 3 Pauses          0          0
Priority 4 Pauses          0          0
Priority 5 Pauses          0          0
Priority 6 Pauses          0          0
Priority 7 Pauses          0          0
Total Pause Frames        0          0

```

Showing detailed flow control information with both PFC and flow control watchdog enabled:

```

switch# show interface 1/1/1 flow-control detail
Interface 1/1/1 is up
Admin state is up
Link state: up for 3 minutes (since Thu Apr 07 16:38:02 UTC 2022)
Flow-control: pfc rxtx-4,5
Flow-control watchdog: enabled

Statistics                RX          TX
-----
Priority 0 Pauses          0          0
Priority 1 Pauses          0          0
Priority 2 Pauses          0          0
Priority 3 Pauses          0          0
Priority 4 Pauses          0          0
Priority 5 Pauses          0          0
Priority 6 Pauses          0          0
Priority 7 Pauses          0          0
Total Pause Frames        0          0

Queue      Watchdog Timeouts
-----
Queue 0          0
Queue 1          0
Queue 2          0
Queue 3          0
Queue 4          0
Queue 5          0
Queue 6          0
Queue 7          0

```

Showing detailed flow control information when flow control watchdog is enabled in the configuration but it could not be applied because the configured flow control mode is not compatible with watchdog:

```

switch# show interface 1/1/1 flow-control detail
Interface 1/1/1 is up
Admin state is up
Link state: up for 3 minutes (since Thu Apr 07 16:38:02 UTC 2022)
Flow-control: llfc rx
Flow-control watchdog: incompatible

```

Showing detailed flow control information when flow control watchdog is enabled in the configuration but could not be applied because a compatible flow control mode first requires a reboot:

```
switch# show interface 1/1/1 flow-control detail
Interface 1/1/1 is up
Admin state is up
Link state: up for 3 minutes (since Thu Apr 07 16:38:02 UTC 2022)
Flow-control: off
Flow-control watchdog: pending
```

Command History

Release	Modification
10.10	Examples updated with new and changed output elements.
10.08	Command introduced.

Command Information

Platforms	Command context	Authority
All platforms	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show interface statistics

```
show interface [<IFNAME>|<IFRANGE>] statistics [non-zero] [human-readable]
show interface [<IFNAME>|<IFRANGE>] statistics monitor [non-zero] [human-readable]
show interface [<IFNAME>|<IFRANGE>] error-statistics [non-zero] [human-readable]
show interface [<IFNAME>|<IFRANGE>] error-statistics monitor [non-zero] [human-readable]
show interface lag [<LAG-ID>] statistics [non-zero] [human-readable]
show interface lag [<LAG-ID>] statistics monitor [non-zero] [human-readable]
show interface lag [<LAG-ID>] error-statistics [non-zero] [human-readable]
show interface lag [<LAG-ID>] error-statistics monitor [non-zero] [human-readable]
show interface vxlan <VXLAN-ID> statistics [non-zero] [human-readable]
```

Description

Shows statistics for switch interfaces such as packets transmitted and received, bytes transmitted and received, broadcast and multicast packets.

Parameter	Description
<IFNAME>	Specifies a interface name.
<IFRANGE>	Specifies the port identifier range.
LAG	Shows LAG interface information.
<LAG-ID>	Specifies the LAG number. Range: 1-256
VXLAN	Shows the VXLAN interface information.
<VXLAN-ID>	Specifies the VXLAN interface identifier. Default: 1

Parameter	Description
monitor	Continuously monitor interface statistics.
human-readable	Shows statistics rounded to the nearest power of 1000, for example, 1K, 345M, 2G.
non-zero	Shows only non zero statistics.

Examples

Showing statistics of all interfaces:

```
show interface statistics
```

Interface	RX Bytes	RX Packets	RX Drops	TX Bytes	TX Packets	TX Drops	RX Broadcast	RX Multicast	TX Broadcast	TX Multicast	RX Pause	TX Pause
1/1/1	2727136	1975	0	17796	195	0	82	1788	96	54	0	0
1/1/10	0	0	0	0	0	0	0	0	0	0	0	0
1/1/11	0	0	0	0	0	0	0	0	0	0	0	0
1/1/12	0	0	0	0	0	0	0	0	0	0	0	0
...												
1/1/30 - lag1	0	0	0	11271	92	0	0	0	0	51	0	0
1/1/31 - lag2	2360	25	50	2732119	2040	0	0	0	178	1839	0	0
1/1/32 - lag2	0	0	0	11373	93	0	0	0	0	51	0	0
vlan1	0	0	0	0	0	0	0	0	0	0	0	0

Showing statistics of all interfaces with only non-zero statistics:

```
show interface statistics non-zero
```

Interface	RX Bytes	RX Packets	RX Drops	TX Bytes	TX Packets	TX Drops	RX Broadcast	RX Multicast	TX Broadcast	TX Multicast	RX Pause	TX Pause
1/1/1	2727136	1975	0	17796	195	0	82	1788	96	54	0	0
1/1/30 - lag1	0	0	0	11271	92	0	0	0	0	51	0	0
1/1/31 - lag2	2360	25	50	2732119	2040	0	0	0	178	1839	0	0
1/1/32 - lag2	0	0	0	11373	93	0	0	0	0	51	0	0

Showing statistics of all interfaces in the human-readable format:

```
show interface statistics human-readable
```

Interface	RX Bytes	RX Pkts	RX Drops	TX Bytes	TX Pkts	TX Drops	RX Bcast	RX Mcast	TX Bcast	TX Mcast	RX Pause	TX Pause
1/1/1	744M	577K	0	745M	578K	0	0	0	73	287	0	0
1/1/2	474M	367K	0	475M	369K	0	0	0	73	288	0	0
1/1/3	0	0	0	0	0	0	0	0	0	0	0	0

Showing statistics of a single interfaces:

```
show interface 1/1/2 statistics
```

Interface	RX Bytes	RX Packets	RX Drops	TX Bytes	TX Packets	TX Drops	RX Broadcast	RX Multicast	TX Broadcast	TX Multicast	RX Pause	TX Pause
1/1/2	2725080	1931	0	25877	253	0	21	1788	65	55	0	0

Showing statistics of all members of a LAG interface:

```
show interface lag1 statistics
```

Interface	RX Bytes	RX Packets	RX Drops	TX Bytes	TX Packets	TX Drops	RX Broadcast	RX Multicast	TX Broadcast	TX Multicast	RX Pause	TX Pause
1/1/3 - lag1	2424	26	0	2734082	2062	0	0	0	191	1848	0	0
1/1/30 - lag1	0	0	0	12383	100	0	0	0	0	59	0	0
lag1	2424	26	0	2746465	2162	0	0	0	191	1907	0	0

Showing error statistics of all interfaces:

```
show interface error-statistics
```

Interface	RX Errors	TX Errors	Giants	Runts	CRC/FCS	Collisions
1/1/1	190	20	100647	0	0	0
1/1/10	0	0	100	290	7165	949
1/1/11	0	0	0	0	0	0
1/1/12	0	0	0	0	0	0
...						
1/1/30 - lag1	1500	500	45800	0	0	0
1/1/31 - lag2	0	0	11	27	0	0
1/1/32 - lag2	0	0	0	0	6	18

Showing monitor statistics:



The rows and columns of show interface monitor statistics depends on the length of width of the client terminal. The CLI can be navigated using the arrow keys as well as the PageUp, PageDown, Home, and End keys.

```
show interface statistics monitor
```

```
-----  
Interface                RX Bytes          RX Packets >>  
-----  
1/1/1                    3440525421984      53758209526  
1/1/2                    3440526607008      53758228042  
1/1/3                    3440527785312      53758246453  
1/1/30                   3440559671264      53758744653  
1/1/31                   3440560851680      53758763098  
1/1/32                   3440562028704      53758781489
```

```
help: ?, quit: q
```

Help for Interface Monitor

```
f  Toggle full statistics  
h  Toggle human-readable mode  
n  Toggle non-zero mode  
r  Toggle rate display
```

```
c  Clear interface statistics  
    Does not apply to rates
```

```
Arrows, PgUp, PgDn, Home, End  
    Navigate interface statistics
```

Delay:2

```
help: ?, quit: q
```

Showing monitor error statistics in human-readable format:

```
show interface 1/1/1-1/1/3,1/1/30-1/1/32 error-statistics monitor human-readable
```

```
-----  
Interface      RX Errors  TX Errors  RX Giants  RX Runts  CRC/FCS  Collisions  
-----  
1/1/1          0          0          0          0          0          0  
1/1/2          0          0          0          0          0          0  
1/1/3          0          0          0          0          0          0  
1/1/30         0          0          0          0          0          0  
1/1/31         0          0          0          0          0          0  
1/1/32         0          0          0          0          0          0
```

Human-readable

```
help: ?, quit: q
```

Help for Interface Monitor

```
h  Toggle human-readable mode  
n  Toggle non-zero mode
```

```
c  Clear interface statistics  
    Does not apply to rates
```

```
Arrows, PgUp, PgDn, Home, End  
    Navigate interface statistics
```

Delay:2

```
help: ?, quit: q
```

Command History

Release	Modification
10.11	Added moitor parameter.

Release	Modification
10.10	Added <code>human-readable</code> parameter.
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show interface transceiver

`show interface [<INTERFACE-ID>] transceiver [detail | threshold-violations] [vsx-peer]`

Description

Displays information about transceivers present in the switch. The information shown varies for different transceiver types and manufacturers. Only basic information is shown for unsupported HPE and third-party transceivers installed in the switch and they are also identified with an asterisk in the output.

Parameter	Description
<INTERFACE-ID>	Specifies the name or range of an interface on the switch. Use the format <code>member/slot/port</code> (for example, <code>1/3/1</code>).
detail	Show detailed information for the interfaces.
threshold-violations	Show threshold violations for transceivers.
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Example

Showing summary transceiver information with identification of unsupported transceivers:

```
switch(config)# show interface transceiver
-----
Port      Type      Product  Serial    Part
Number    Number    Number
-----
1/1/1     SFP+SR    J9150A   MYxxxxxxx  1990-3657
1/1/2     SFP+ER*   --       --         --
1/2/1     QSFP+SR4  JH233A   MYxxxxxxx  2005-1234
1/2/2     QSFP+ER4* --       --         --
1/3/1     SFP28DAC3 844477-B21 MYxxxxxxx  77fc-7ce7
* unsupported transceiver
```

Showing detailed transceiver information:

```
switch(conf#) show interface transceiver detailing
Transceiver in 1/1/1
  Interface Name      : 1/1/1
  Type                : SFP+SR
  Connector Type      : LC
  Wavelength          : 850nm
  Transfer Distance   : 0m (SMF), 30m (OM1), 80m (OM2), 300m (OM3)
  Diagnostic Support   : DOM
  Product Number      : J9150A
  Serial Number       : MYxxxxxxx
  Part Number         : 1990-3657
```

Status

```
  Temperature : 47.65C
  Voltage      : 3.31V
  Tx Bias      : 8.40mA
  Rx Power     : 0.08mW, -10.96dBm
  Tx Power     : 0.56mW, -2.49dBm
```

Recent Alarms :

```
  Rx power low alarm
  Rx power low warning
  Recent Errors :
  Rx loss of signal
```

Transceiver in 1/1/2

```
  Interface Name      : 1/1/2
  Type                : unknown
  Connector Type      : ??
  Wavelength          : ??
  Transfer Distance   : ??
  Diagnostic Support   : ??
  Product Number      : ??
  Serial Number       : ??
  Part Number         : ??
```

Transceiver in 1/2/1

```
  Interface Name      : 1/2/1
  Type                : QSFP+SR4
  Connector Type      : MPO
  Wavelength          : 850nm
  Transfer Distance   : 0m (SMF), 0m (OM1), 0m (OM2), 100m (OM3)
  Diagnostic Support   : DOM
  Product Number      : JH233A
  Serial Number       : MYxxxxxxx
  Part Number         : 2005-1234
```

Status

```
  Temperature : 44.46C
  Voltage      : 3.30V
```

```
-----
Channel#    Tx Bias   Rx Power      Tx Power
            (mA)      (mW/dBm)      (mW/dBm)
-----
1           6.12      0.00, -inf    0.63, -1.95
2           6.04      0.00, -inf    0.63, -2.00
3           6.51      0.00, -inf    0.60, -2.16
4           6.19      0.00, -inf    0.63, -1.94
```

Recent Alarms :

```

Channel 1 :
  Rx power low alarm
  Rx power low warning
Channel 2 :
  Rx power low alarm
  Rx power low warning
Channel 3 :
  Rx power low alarm
  Rx power low warning
Channel 4 :
  Rx power low alarm
  Rx power low warning

Recent Errors :
Channel 1 :
  Rx Loss of Signal
Channel 2 :
  Rx Loss of Signal
Channel 3 :
  Rx Loss of Signal
Channel 4 :
  Rx Loss of Signal

Transceiver in 1/2/2
Interface Name      : 1/2/2
Type                : unknown
Connector Type      : ??
Wavelength          : ??
Transfer Distance   : ??
Diagnostic Support   : ??
Product Number      : ??
Serial Number       : ??
Part Number         : ??

Transceiver in 1/3/1
Interface Name      : 1/3/1
Type                : SFP28DAC3
Connector Type      : Copper Pigtail
Transfer Distance   : 0.00km (SMF), 0m (OM1), 0m (OM2), 0m (OM3)
Diagnostic Support   : None
Product Number      : 844477-B21
Serial Number       : MYxxxxxxx
Part Number         : 77fc-7ce7

```

Showing detailed transceiver information with identification of unsupported transceivers:

```

Transceiver in 1/1/2
Interface Name      : 1/1/2
Type                : SFP+ER (unsupported)
Connector Type      : LC
Wavelength          : 3590nm
Transfer Distance   : 80m (SMF), 0m (OM1), 0m (OM2), 0m (OM3)
Diagnostic Support   : DOM
Vendor Name         : INNOLIGHT
Vendor Part Number  : TR-PX15Z-NHP
Vendor Part Revision: 1A
Vendor Serial number: MYxxxxxxx

Status
Temperature : 28.88C
Voltage      : 3.30V

```



```
Tx Bias      : 65.53mA
Rx Power     : 0.00mW, -inf
Tx Power     : 1.47mW, 1.67dBm
```

```
Recent Alarms:
Rx Power low alarm
Rx Power low warning
Recent Errors:
```

Showing transceiver threshold-violations:

```
switch(config)# show interface transceiver threshold-violations
-----
Port      Type      Channel  Type(s) of Recent
              Threshold Violation(s)
-----
1/1/1     SFP+SR
1/1/2     SFP+ER*
1/2/1     QSFP+SR4    1      Tx power low alarm
              -17.00 dBm < -0.50 dBm
              2      Tx bias low warning
              3.12 mA < 4.00 mA
1/2/2     QSFP+ER4*
1/3/1     SFP28DAC3   n/a
* unsupported transceiver
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show interface utilization

```
show interface [<IFNAME>|<IFRANGE>] utilization [non-zero]
```

Description

Displays physical port throughput and utilization.

Parameter	Description
<IFNAME>	Specifies an interface name.
<IFRANGE>	Specifies the port identifier range.
utilization	Displays utilization statistics.
non-zero	Displays non-zero statistics

Examples

The following example shows port utilization of all interfaces:

```
switch# show interface utilization
-----|-----|-----|-----
Interval |          RX          |          TX          | Total (RX+TX) |
Interface  seconds |  Mbps  KPkt/s  Util % |  Mbps  KPkt/s  Util % |  Mbps
KPkt/s  Util % | Description
-----|-----|-----|-----
1/1/1      300  9578.02  788.70  95.78   25.70   45.89   0.26  9603.72
834.59    96.04  Aruba-AP
1/1/2      300   25.71   45.90   0.26  9581.09  788.96   95.81  9606.80
834.86    96.07  Aruba2530-AP-conce...
1/1/3 - lag123  300    0.00   0.00   0.00    0.00    0.00   0.00    0.00
0.00     0.00  ISL: SWRTS-0064-1
1/1/4      300  9261.79  804.52  92.62   9496.70  823.97   94.97  18758.50
1628.48  187.58  Backup data center...
1/1/5      300  9496.70  823.97  94.97   9261.79  804.52   92.62  18758.50
1628.48  187.58  --
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show ip interface

```
show ip interface <INTERFACE-ID> [vsx-peer]
```

Description

Shows status and configuration information for an IPv4 interface. Note the following caveats for the 8325, 10000 Series switches:

- When this command is issued for a subinterface, the output of the command displays only the aggregate packet count of L3 packets passing through the switch.
- When this command is issued for a subinterface, the output of this command does not display L3 counters .
- If the selected subinterface is shut, the L2 counter will be reset to 0. When the subinterface is reenabled, the L2 counter will be reset to 0.

Parameter	Description
<INTERFACE-ID>	Specifies the name of an interface. Format: member/slot/port.
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Example

```
switch# show ip interface 1/1/1
Interface 1/1/1 is up
Admin state is up
Hardware: Ethernet, MAC Address: 70:72:cf:fd:e7:b4
IPv4 address 192.168.1.1/24
MTU 1500
RX
    0 packets, 0 bytes
TX
    0 packets, 0 bytes
```

```
switch# show interface <intfid>.id
Interface 1/1/14.1 is up
Admin state is up
IP MTU 1500
Description:
Hardware: Ethernet, MAC Address: b8:6a:97:22:2f:42
Encapsulation dot1q ID: 20
IPv4 address 30.0.0.1/24
L3 Counters: Rx Disabled, Tx Disable
```

```
switch# show interface lag2.1
Interface lag2.1 is up
Admin state is up
IP MTU 1500
Description:
Hardware: Ethernet, MAC Address: b8:6a:97:22:2f:42
Encapsulation dot1q ID: 30
L3 Counters: Rx Disabled, Tx Disabled
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show ip source-interface

```
show ip source-interface {sflow | tftp | radius | tacacs | all} [vrf <VRF-NAME>]
[vsx-peer]
```

Description

Shows single source IP address configuration settings.

Parameter	Description
sflow tftp radius tacacs all	Shows single source IP address configuration settings for a specific protocol. The <code>all</code> option shows the global setting that applies to all protocols that do not have an address set.
vrf <VRF-NAME>	Specifies the name of a VRF.
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Examples

Showing single source IP address configuration settings for sFlow:

```
switch# show ip source-interface sflow
Source-interface Configuration Information
-----
Protocol      Source Interface
-----
sflow         10.10.10.1
```

Showing single source IP address configuration settings for all protocols:

```
switch# show ip source-interface all
Source-interface Configuration Information
-----
Protocol      Source Interface
-----
all           1/1/1
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

show ipv6 interface

show ipv6 interface <INTERFACE-ID> [vsx-peer]

Description

Shows status and configuration information for an IPv6 interface. Note the following caveats for the 8325, 10000 Series switches:

- When this command is issued for a subinterface, the output of the command displays only the aggregate packet count of L3 packets passing through the switch.
- When this command is issued for a subinterface, the output of this command does not display L3 counters .
- If the selected subinterface is shut, the L2 counter will be reset to 0. When the subinterface is reenabled, the L2 counter will be reset to 0.

Parameter	Description
<INTERFACE-ID>	Specifies an interface ID. Format: member/slot/port.
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Examples

```
switch#
switch# show ipv6 interface 1/1/1
Interface 1/1/1 is up
Admin state is up
IPv6 address:
  2001:0db8:85a3:0000:0000:8a2e:0370:7334/24 [VALID]
IPv6 link-local address: fe80::1e98:ecff:fee3:e800/64 (default) [VALID]
IPv6 virtual address configured: none
IPv6 multicast routing: disable
IPv6 Forwarding feature: enabled
IPv6 multicast groups locally joined:
  ff02::ff70:7334 ff02::ffe3:e800 ff02::1 ff02::1:ff00:0
  ff02::2
IPv6 multicast (S,G) entries joined: none
IPv6 MTU: 1524 (using link MTU)
IPv6 unicast reverse path forwarding: none
IPv6 load sharing: none
```

```
RX
    0 packets, 0 bytes
TX
    0 packets, 0 bytes
```

```
switch# show ipv6 interface <intfid>.id
Interface 1/1/14.1 is up
Admin state is up
IPv6 address:
    30::1/64 [VALID]
IPv6 link-local address: fe80::b86a:97c0:122:2f42/64 [VALID]
IPv6 virtual address configured: none
IPv6 multicast routing: disable
IPv6 Forwarding feature: enabled
IPv6 multicast groups locally joined:
    ff02::1 ff02::1:ff22:2f42 ff02::1:ff00:1 ff02::1:ff00:0
    ff02::2
IPv6 multicast (S,G) entries joined: none
IPv6 MTU 1500
IPv6 unicast reverse path forwarding: none
IPv6 load sharing: none
Encapsulation dot1q ID: 20
```

```
switch# show ipv6 interface lag2.1
Interface lag2.1 is up
Admin state is up
IPv6 address:
    40::1/64 [VALID]
IPv6 link-local address: fe80::b86a:97c0:122:2f42/64 [VALID]
IPv6 virtual address configured: none
IPv6 multicast routing: disable
IPv6 Forwarding feature: enabled
IPv6 multicast groups locally joined:
    ff02::1 ff02::1:ff22:2f42 ff02::1:ff00:1 ff02::1:ff00:0
    ff02::2
IPv6 multicast (S,G) entries joined: none
IPv6 MTU 1500
IPv6 unicast reverse path forwarding: none
IPv6 load sharing: none
Encapsulation dot1q ID: 30
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show ipv6 source-interface

```
show ipv6 source-interface {sflow | tftp | radius | tacacs | all} [vrf <VRF-NAME>]
[vsx-peer]
```

Description

Shows single source IP address configuration settings.

Parameter	Description
sflow tftp radius tacacs all	Shows single source IP address configuration settings for a specific protocol. The <code>all</code> option shows the global setting that applies to all protocols that do not have an address set.
vrf <VRF-NAME>	Specifies the name of a VRF.
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Examples

Showing single source IP address configuration settings for sFlow:

```
switch# show ipv6 source-interface sflow

Source-interface Configuration Information
-----
Protocol      Source Interface
-----
sflow         2001:DB8::1
```

Showing single source IP address configuration settings for all protocols:

```
switch# show ipv6 source-interface all

Source-interface Configuration Information
-----
Protocol      Source Interface
-----
all           1/1/1
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

shutdown

shutdown
no shutdown

Description

Disables an interface. Interfaces are disabled by default when created.
The `no` form of this command enables an interface.

Examples

Disabling an interface:

```
switch(config-if)# shutdown
```

Enabling an interface:

```
switch(config-if)# no shutdown
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

speed

speed {<SPEED> [override] | <SPEED-DUPLEX> | auto [<SPEED>] [override]}
no speed

Description

Configures the link speed, duplex, and auto-negotiation settings for an interface.
The `no` form of this command removes the configurations and returns to the defaults.

Parameter	Description
Speed	Configures interface speed, duplex, and auto-negotiation.
10-full	10 Mbps, full duplex, no auto-negotiation
10-half	10 Mbps, half duplex, no auto-negotiation
100-full	100 Mbps, full duplex, no auto-negotiation
100-half	100 Mbps, half duplex, no auto-negotiation
1000-full	1000 Mbps, full duplex, no auto-negotiation
10g	10 Gbps, full duplex, no auto-negotiation
25g	25 Gbps, full duplex, no auto-negotiation
40g	40 Gbps, full duplex, no auto-negotiation
50g	50 Gbps, full duplex, no auto-negotiation
100g	100 Gbps, full duplex, no auto-negotiation
200g	200 Gbps, full duplex, no auto-negotiation NOTE: Not applicable for override.
400g	400 Gbps, full duplex, no auto-negotiation NOTE: Not applicable for override.
auto	Auto-negotiate speed and duplex. More than one speed can be set at a time.
10m	Allow interface to link at 10 Mbps.
100m	Allow interface to link at 100 Mbps.
1g	Allow interface to link at 1 Gbps.
2.5g	Allow interface to link at 2.5 Gbps.
5g	Allow interface to link at 5 Gbps.
10g	Allow interface to link at 10 Gbps.
25g	Allow interface to link at 25 Gbps.
40g	Allow interface to link at 40 Gbps.
50g	Allow interface to link at 50 Gbps.
100g	Allow interface to link at 100 Gbps.

Parameter	Description
200g	Allow interface to link at 200 Gbps.
400g	Allow interface to link at 400 Gbps.
override	Override the detected transceiver speed and use the configured speed.

Usage

The following options can be configured for an interface. The option available is based on the interface type.

`speed <SPEED-DUPLEX>`

Uses a fixed speed and duplex mode with no auto-negotiation. Half-duplex is only supported for 10 Mbps and 100 Mbps link speeds.

`speed <SPEED>`

Uses a fixed speed with no auto-negotiation. If the currently installed transceiver does not support the speed, the setting is ignored and the port will use the highest speed that is supported.

`speed <SPEED> override`

Uses a fixed speed with no auto-negotiation. If the currently installed transceiver does not support the speed, attempt to use it anyway. This may or may not work, depending on the transceiver.

`speed auto`

Uses auto-negotiation and offers all speeds supported by the port and transceiver. This is the default. If the link technology does not support auto-negotiation this setting is ignored, and the port uses the highest possible fixed speed.

`speed auto <SPEED>`

Uses auto-negotiation and offers the specified speeds only. For ports that support pluggable transceivers, only speeds supported by the transceiver are offered and other speeds are ignored. If the link technology does not support auto-negotiation, this setting is ignored and the port uses the highest possible fixed speed.

`speed auto <SPEED> override`

Uses auto-negotiation and offers only the specified speed. If the currently installed transceiver does not support auto-negotiation, attempt to use it anyway. This may or may not work depending on the transceiver.



- Override support is not available on optical transceivers.
- Speed override and auto-negotiation override are not supported on split ports.
- Auto-negotiation cannot be enabled on a 10G-DAC .

Examples

Configuring an interface to operate at a fixed speed of 1000 Mbps with full duplex and no auto-negotiation:

```
switch(config) # interface 1/1/1
switch(config-if) # speed 1000-full
```

Configuring an interface to operate at a fixed speed of 10 Gbps with no auto-negotiation:

```
switch(config)# interface 1/1  
switch(config-if)# speed 10g
```

Configuring an interface to auto-negotiate and advertise only 1 Gbps and 2.5 Gbps speeds:

```
switch(config)# interface 1/1/1  
switch(config-if)# speed auto 1g 2.5g
```

Configuring an interface to override the detected transceiver speed and use the configured speed if the installed transceiver does not support auto-negotiation:

```
switch(config)# interface 1/1/1  
switch(config-if)# speed auto 50g override
```

Configuring an interface to use default settings for speed, duplex, and auto-negotiation:

```
switch(config)# interface 1/1/1  
switch(config-if)# no speed
```

Command History

Release	Modification
10.11	speed <SPEED> override and speed auto <SPEED> override are added. This is available only on 8100, 8360, 8325, and 10000 Switch Series.
10.09.0001	Speeds not supported by hardware hidden by CLI.
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
8100 8325 8360 10000	config-if	Administrators or local user group members with execution rights for this command.

system interface-group



This command is not available on the 8100 Switch Series.

```
system interface-group <GROUP> speed <SPEED>  
no system interface-group <GROUP> speed <SPEED>
```

Description

Configures the speed for an interface group. After changing group speed, only transceivers compatible with the new speed will be enabled.



- All speed-mismatched interfaces in the group will be disabled.
- This command can interrupt active network links, user confirmation is required to proceed.

The `no` form of this command resets the specified interface group to its default.

Parameter	Description
<code><GROUP></code>	Specifies the interface group to configure.
<code><SPEED></code>	Configures transceiver speed (10g, 25g or 50g) for a group. Default is 25g (see the Transceiver Guide for further detail). Configures transceiver speed (10g or 25g) for a group. Default is 25g (see the Transceiver Guide for further detail). On 8325 Switch Series: ■ 10g allows 1Gbps or 10Gbps transceivers only. ■ 25g allows 25Gbps transceivers only. On 9300 Switch Series: ■ 10g allows 1Gbps or 10Gbps transceivers only. ■ 25g allows 25Gbps transceivers only. For 8360 Switch Series: ■ For the latest information on supported speeds for each model of 8360 Switch, refer to the Network Ports section of the 8360 Hardware Installation Guide.

Examples

Configuring interface group 1 to allow 10Gbps and slower transceivers:

```
switch(config)# system interface-group 1 speed 10g  
Changing the group speed will disable all member interfaces that do not match the  
new speed.
```

```
Continue (y/n)? y
```

Command History

Release	Modification
10.10.1000	Command introduced on 9300 Switch series.
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
8100 8325 8360 9300	Operator (>) or Manager (#)	Administrators or local user group members with execution rights for this command.

A subinterface is a virtual interface created by dividing one physical interface into multiple logical interfaces. Subinterfaces use the parent physical interface for sending and receiving data.

Supported features

The following features are supported on L3 subinterfaces:

- RoP, L3 LAG and Hydra interface (split cable) support
- IPv4/IPv6 addressing
- ARP/ND
- Static unicast routing (IPv4/IPv6)
- Unicast routing (IPv4/IPv6) - OSPF and VRRP
- Unicast routing (IPv4/IPv6) - BGP and IVRL
- IPv4/IPv6 multicast routing (IGMP and PIM)
- Ingress ACLs and Ingress Policies
- MTU (maximum transmission unit)
- L3 counters
- VSX keep alive links
- SNMP read
- REST support



For the 8325 and 10000 Switch series, IVRL subinterfaces are not supported.

Configuring subinterfaces



- Subinterfaces can be configured for physical ports, split children of physical ports and L3 LAG interfaces.
- Subinterfaces on multiple ports can be assigned the same VLAN ID (there is no bridging between subinterfaces or between subinterfaces and SVIs) using `encapsulation vlan-id` `encapsulation vlan-id`. Each subinterface is considered to be in a separate bridge domain.
- The IP-MTU of a subinterface can be configured independent of the parent port's IP-MTU configuration.

Procedure


One router with one physical interface needs to be connected to two IP networks:

1. Create two subinterfaces within the physical interface.
2. Assign each subinterface an IP address within each subnet.
3. Route packets between the two subnets.


Limitations

- Subinterfaces can only be configured on L3 ports with routing enabled.
- A subinterface cannot be a member of a LAG.
- An L3 parent interface with subinterfaces cannot be a member of a LAG.
- An L3 parent interface with subinterfaces cannot be used for L3 services (for example IP address configuration is not supported on an L3 interface if the interface is configured with subinterfaces).
- On physical interfaces, each subinterface must have a unique encapsulation ID.
- BFD and IPDB are not supported on subinterfaces.

Subinterface in a router-on-a-stick deployment

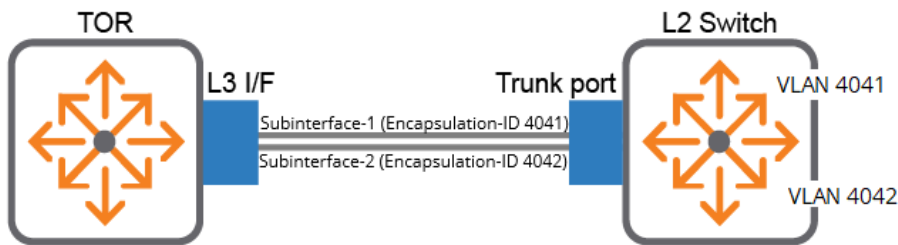

- Top-of-rack switch/router with an L3 interface connected to the trunk port of an L2 switch.
- Routing tables configured to forward outgoing traffic through a subinterface while applying a VLAN ID tag.
- All outgoing traffic from the L3 interface is tagged with a VLAN ID which enables the switch to forward traffic through different VLANs.

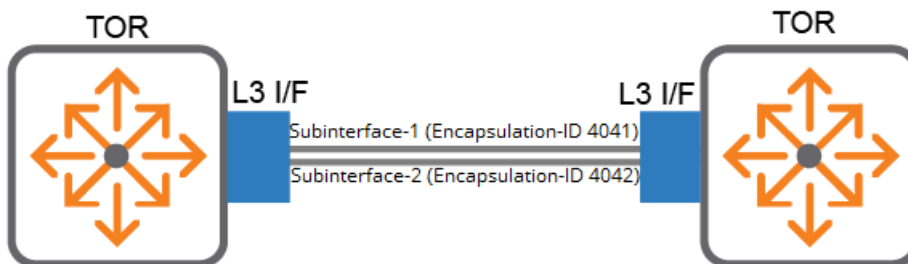

- Top-of-rack switch/router with an L3 interface connected to the trunk port of an L3 interface.
- Routing tables configured to forward outgoing traffic through a subinterface while applying a VLAN ID tag.
- All outgoing traffic from the L3 interface is tagged with a VLAN ID which enables the switch to forward traffic through different VLANs.

Subinterface commands



Configuration of `system internal-vlan-range` to 2000–3200 is required on the 8325 and 10000 switch series for scaled subinterfaces. Refer to the *L2 Bridging Guide* for more information on `system internal-vlan-range`.

encapsulation dot1q

```
encapsulation dot1q <VLAN-ID>
no encapsulation dot1q <VLAN-ID>
```

Description

Configures 802.1Q encapsulation on a subinterface.

The `no` form of this command removes 802.1Q encapsulation on a subinterface.

Parameter	Description
<VLAN-ID>	Specifies encapsulation VLAN ID. Range 1 to 4094. NOTE: The encapsulation VLAN ID should be unique within an L3 LAG subinterface. The same encapsulation VLAN ID can be configured among different parent interfaces, but the encapsulation VLAN ID should not be configured in the internal VLAN range. (Encapsulation VLAN IDs and static VLANs are entirely different and do not coincide.)

Usage

Associates an 802.1Q VLAN ID with a subinterface.

Examples

Configuring 802.1Q encapsulation on a subinterface:

```
switch(config)# interface 1/1/1.201
switch(config-subif)# encapsulation dot1q 10
```

Removing 802.1Q encapsulation on a subinterface:

```
switch(config-subif)# no encapsulation dot1q 10
```

Command History

Release	Modification
10.11	Command introduced for 8325, 10000 switch series.
10.08	Command introduced for the 8360 switch series.

Command Information

Platforms	Command context	Authority
8100 8325 8360 10000	config-subif	Administrators or local user group members with execution rights for this command.

interface


```
interface <IFNAME>.<ID>
no interface <IFNAME>.<ID>
```

```
interface lag <LAGNUM>.<ID>
no interface lag <LAGNUM>.<ID>
```

Description

Creates a subinterface on an L3 interface and enters subinterface configuration mode. The subinterface name consists of the parent interface name (for example, 1/1/1) followed by a period and a unique ID number.

The `no` form of these commands deletes a subinterface from an L3 interface.



8325 and 10000 Switch series require an internal VLAN for every subinterface, in addition to the internal VLANs used for other purposes. For example, to support 1024 subinterfaces, an internal VLAN range that is at least that large must be reserved using the `system internal-vlan-range` command. 8325 and 10000 Series switches support a maximum of 1024 subinterfaces resources.

BFD sessions are not supported on sub interfaces on 8325 and 10000 Switch series. Use switch virtual interfaces (SVIs) to configure a BFD session on these switch models.

Parameter	Description
<IFNAME>	Specifies L3 interface name.
<ID>	Specifies subinterface ID. Range 1 to 4094.
<LAGNUM>	Specifies L3 LAG interface number.

Usage

To create a LAG subinterface, the parent LAG must exist before creating the subinterface.

Each LAG subinterface requires four internal VLANs . You can configure a combination of L3 LAG subinterfaces and physical interface subinterfaces. Each L3 LAG consumes four sub-interface resources, and in this LAG there can be maximum of four LAG member interfaces. Each physical interface sub-interface consumes one sub-interface resource.

Examples

Creating a subinterface on L3 interface 1/1/1.201 and entering subinterface configuration mode:

```
switch(config)# interface 1/1/1.201
switch(config-subif)#
```

Deleting subinterface on L3 interface 1/1/1.201:

```
switch(config)# no interface 1/1/1.201
```

Creating a subinterface on an L3 LAG port and entering subinterface configuration mode:

```
switch(config)# interface lag 1
switch(config-if)# interface lag 1.201
switch(config-subif)#
```

Deleting subinterface on an L3 LAG port :

```
switch(config)# no interface lag 1.201
```

Command History

Release	Modification
10.11	Command introduced for 8325 and 10000 switch series.
10.08	Command introduced for the 8360 switch series.

Command Information

Platforms	Command context	Authority
8100 8325 8360 10000	config	Administrators or local user group members with execution rights for this command.

show capacities subinterface

show capacities subinterface

Description

Displays maximum subinterface capacity.

Examples

Showing maximum subinterface capacity:

```
switch# show capacities subinterface

System Capacities: Filter Subinterface
Capacities Name
Value
-----
-
Maximum number of LAG subinterfaces for the entire system
256
Maximum number of LAG members when the LAG has subinterfaces
4
Maximum number of normal subinterfaces for the entire system
1024
Maximum number of subinterface resources for the entire system (normal+(4*LAG)
1024
```

Command History

Release	Modification
10.11	Command introduced for 8325 and 10000 switch series.
10.08	Command introduced for the 8360 switch series.

Command Information

Platforms	Command context	Authority
8100 8325 8360 10000	Operator (>) or Manager (#)	Auditors or Administrators or local user group members with execution rights for this command. Auditors can execute this command from the auditor context (auditor>) only.

show interface

```
show interface <IFNAME>.<ID>
show interface lag <LAGNUM>.<ID>
```

Description

Displays a subinterface configuration.

Parameter	Description
<IFNAME>	Specifies L3 interface name.
<ID>	Specifies subinterface ID.
<LAGNUM>	Specifies L3 LAG interface number.

Examples

Showing subinterface configuration:

```
switch# show interface 1/1/1.201
Interface 1/1/1.201 is down
Admin state is up
State information: Waiting for link
Description:
Hardware: Ethernet, MAC Address: 38:21:c7:5a:80:80
Encapsulation dot1Q ID: 10
Statistic                RX                TX                Total
-----
L3 Packets                0                0                0
L3 Bytes                  0                0                0
```

Showing subinterface LAG configuration:

```
switch# show interface lag1.1
Interface lag1.1 is down
Admin state is up
Description:
Hardware: Ethernet, MAC Address: 38:21:c7:5a:80:80
```

Encapsulation dot1Q ID: 2

Statistic	RX	TX	Total
L3 Packets	0	0	0
L3 Bytes	0	0	0

Command History

Release	Modification
10.11	Command introduced for 8325 and 10000 switch series.
10.08	Command introduced for the 8360 switch series.

Command Information

Platforms	Command context	Authority
8100 8325 8360 10000	Operator (>) or Manager (#)	Auditors or Administrators or local user group members with execution rights for this command. Auditors can execute this command from the auditor context (auditor>) only.

The source IP address is determined by the system and is typically the IP address of the outgoing interface in the routing table. However, routing switches may have multiple routing interfaces and outgoing packets can potentially be sent by different paths at different times. This results in different source IP addresses.

AOS-CX provides a configuration model that allows the selection of an IP address to use as the source address for all outgoing traffic. This allows unique identification of the software application on the server site regardless of which local interface has been used to reach the destination server. The source interface selection supports selecting an IP address or interface name.



If the source interface and source IP are configured, Source IP will have priority.

Source-interface selection commands

ip source-interface

```
ip source-interface <PROTOCOL> {<IP-ADDR>|interface <IFNAME>} [vrf <VRF-NAME>]  
no ip source-interface <PROTOCOL> interface <IFNAME> [vrf <VRF-NAME>]
```

Description

Configures the IPv4 source-interface interface to use for the specified protocol. If a VRF is not given, the default VRF applies.

The `no` form of this command removes the specified configuration.

Parameter	Description
<PROTOCOL>	Specifies the protocol to configure. <code>all</code> Selects the source for all protocols covered by this command. <code>central</code> Selects Aruba Central. <code>dhcp_relay</code> Selects DHCP relay. <code>dns</code> Selects DNS. <code>erspan</code> Selects ERSPAN. Only supported on the Aruba 10000 Switch Series. <code>http</code> Selects HTTP. <code>ipfix</code>

Parameter	Description
	Selects ipfix. Only supported on the Aruba 10000 Switch Series. ntp Selects NTP. psm Selects PSM. Only supported on the Aruba 10000 Switch Series. ptp Selects PTP. radius Selects RADIUS. sflow Selects sFlow. sftp-scp Selects SFTP and SCP. ssh-client Selects SSH Client. syslog Selects the source for syslog packets. tacacs Selects the source for TACACS packets. tftp Selects TFTP. workload_migration Selects workload migration. Only supported on the Aruba 10000 Switch Series.
	Specifies the VRF name.
<IFNAME>	Specifies the interface name.
<IP-ADDR>	Specifies the IPv4 address.
vrf <VRF-NAME>	Specifies the VRF name.

Examples

Configuring IPv4 source-interface interface 1/1/1 to use for the TFTP protocol:

```
switch(config)# ip source-interface tftp interface 1/1/1
```

Configuring IPv4 source-interface interface 1/1/2 to use for the TFTP protocol on VRF green :

```
switch(config)# ip source-interface tftp interface 1/1/2 vrf green
```

Removing IPv4 source-interface 1/1/1 configuration for the TFTP protocol:

```
switch(config)# no ip source-interface tftp interface 1/1/1
```

Removing source-interface interface 1/1/2 configuration for TFTP protocol on VRF green:

```
switch(config)# no ip source-interface tftp interface 1/1/2 vrf green
```

Configuring source-interface IPv4 10.1.1.1 to use for the TFTP protocol:

```
switch(config)# ip source-interface tftp 10.1.1.1
```

Configuring source-interface IPv4 10.1.1.2 to use for the TFTP protocol on VRF green :

```
switch(config)# ip source-interface tftp 10.1.1.2 vrf green
```

Removing source-interface IPv4 10.1.1.1 configuration for the TFTP protocol:

```
switch(config)# no ip source-interface tftp 10.1.1.1
```

Removing source-interface IPv4 10.1.1.2 configuration for TFTP protocol on VRF green:

```
switch(config)# no ip source-interface tftp 10.1.1.2 vrf green
```

Configuring source-interface IPv4 10.1.1.1 to use for the DNS protocol:

```
switch(config)# ip source-interface dns 10.1.1.1
```

Configuring source-interface IPv4 10.1.1.2 to use for the DNS protocol on VRF green :

```
switch(config)# ip source-interface dns 10.1.1.2 vrf green
```

Removing source-interface IPv4 10.1.1.1 configuration for the DNS protocol:

```
switch(config)# no ip source-interface tftp 10.1.1.1
```

Removing source-interface IPv4 10.1.1.2 configuration for the DNS protocol on VRF green:

```
switch(config)# no ip source-interface dns 10.1.1.2 vrf green
```

Command History

Release	Modification
10.12.1000	Added <code>cental</code> , <code>sftp-scp</code> , and <code>ssh-client</code> parameters.
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

ipv6 source-interface

```
ipv6 source-interface <PROTOCOL> {<IPv6-ADDR>|interface <IFNAME>} [vrf <VRF-NAME>]
no ipv6 source-interface <PROTOCOL> {<IPv6-ADDR>|interface <IFNAME>} [vrf <VRF-NAME>]
```

Description

Configures the IPv6 source-interface interface to use for the specified protocol. If a VRF is not given, the default VRF applies.

The `no` form of this command removes all configurations.

Parameter	Description
<PROTOCOL>	Specifies the protocol to configure. <code>all</code> Selects all protocols supported by this command. <code>central</code> Selects Aruba Central. <code>dhcp_relay</code> Selects DHCP relay. <code>http</code> Selects HTTP. <code>ntp</code> Selects NTP. <code>radius</code> Selects radius. <code>sftp-scp</code> Selects SFTP and SCP. <code>sflow</code> Selects sFlow. <code>ssh-client</code> Selects SSH Client. <code>syslog</code> Selects syslog. <code>tacacs</code> Selects TACACS. <code>tftp</code> Selects TFTP.
<IPv6-ADDR>	Specifies the IPv6 address.
<IFNAME>	Specifies the interface name.
vrf <VRF-NAME>	Specifies the VRF name.

Examples

Configuring IPv6 source-interface interface 1/1/1 to use for the TFTP protocol :


```
switch(config)# ipv6 source-interface tftp interface 1/1/1
```

Configuring IPv6 source-interface interface 1/1/2 to use for the TFTP protocol on VRF green :

```
switch(config)# ipv6 source-interface tftp interface 1/1/2 vrf green
```

Removing IPv6 source-interface interface 1/1/1 configuration for the TFTP protocol:

```
switch(config)# no ipv6 source-interface tftp interface 1/1/1
```

Removing IPv6 source-interface interface 1/1/2 configuration for the TFTP protocol on VRF green:

```
switch(config)# no ipv6 source-interface tftp interface 1/1/2 vrf green
```

Configuring source-interface IPv6 1111:2222 to use for the TFTP protocol:

```
switch(config)# ipv6 source-interface tftp 1111:2222
```

Configuring source-interface IPv6 1111:3333 to use for TFTP protocol on VRF green :

```
switch(config)# ipv6 source-interface tftp 1111:3333 vrf green
```

Removing source-interface IPv6 1111:2222 configuration for TFTP protocol:

```
switch(config)# no ipv6 source-interface tftp 1111:2222
```

Removing source-interface IPv6 1111:3333 configuration for TFTP protocol on VRF green:

```
switch(config)# no ipv6 source-interface tftp 1111:3333 vrf green
```

Command History

Release	Modification
10.12.1000	Added <code>central</code> , <code>sftp-scp</code> and <code>ssh-client</code> parameters.
10.12.1000	<code>dhcp_relay</code> parameter added.
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	<code>config</code>	Administrators or local user group members with execution rights for this command.

show ip source-interface

```
show ip source-interface <PROTOCOL> [vrf <VRF-NAME> | all-vrfs]
```

Description

Displays the source interface information for all VRFs or a specific VRF.

If a VRF is not specified, the default is displayed.

Parameter	Description
<PROTOCOL>	Specifies the protocol to show. all Shows the source interface configuration for all other protocols. central Shows the source interface configuration for Aruba Central. dhcp relay Shows the source interface configuration for DHCP relay. dns Shows the source interface configuration for DNS. erspan Shows the source interface configuration for ERSPAN. Only supported on the Aruba 10000 Switch Series. http Shows the source interface configuration for HTTP. ipfix Shows the source interface configuration for IPFIX. Only supported on the Aruba 10000 Switch Series. ntp Shows the source interface configuration for NTP. psm Shows the source interface configuration for PSM. Only supported on the Aruba 10000 Switch Series. ptp Shows the source interface configuration for PTP. radius Shows the source interface configuration for radius. sflow Shows the source interface configuration for sFlow. sftp-scp Shows source interface configuration for SFTP and SCP. ssh-client Shows source interface configuration for SSH Client. syslog Shows the source interface configuration for syslog. tacacs Shows the source interface configuration for TACACS. tftp

Parameter	Description
	Shows the source interface configuration for TFTP. workload_migration Shows the source interface configuration for workload migration. Only supported on the Aruba 10000 Switch Series.
vrf <VRF-NAME>	Specifies the VRF name.
all-vrfs	Shows the source interface configuration for all VRFs.

Examples

Displaying all source-interface protocol configurations for VRF red:

```
switch# show ip source-interface all vrf red
Source-interface Configuration Information
-----
Protocol      Src-Interface      Src-IP      VRF
-----
all           1/1/1             red
switch#
```

Displaying all source-interface protocol configurations for default VRF:

```
switch# show ip source-interface all
Source-interface Configuration Information
-----
Protocol      Src-Interface      Src-IP      VRF
-----
all           1.1.1.1            default
switch#
```

Displaying all source-interface protocol configurations for all VRFs:

```
switch# show ip source-interface all all-vrfs
Source-interface Configuration Information
-----
Protocol      Src-Interface      Src-IP      VRF
-----
all           2.2.2.2            all-vrfs
all           1.1.1.1            default
all           1/1/1/1            red
switch#
```

Command History

Release	Modification
10.12.1000	Added <code>central</code> , <code>sftp-scp</code> , and <code>ssh-client</code> parameters.
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

show ipv6 source-interface

```
show ipv6 source-interface <PROTOCOL> [detail] [vrf <VRF-NAME> | all-vrfs]
```

Description

Displays the IPV6 source interface information configured in the router for all VRFs or a specific VRF. If a VRF is not specified, the default is displayed.

Parameter	Description
<code><PROTOCOL></code>	Specifies the protocol to show. <code>all</code> Shows the source interface configuration for all other protocols. <code>central</code> Shows the source interface configuration for Aruba Central. <code>dhcp_relay</code> Shows the source interface configuration for DHCP relay. <code>http</code> Shows the source interface configuration for HTTP. <code>ntp</code> Shows the source interface configuration for NTP. <code>radius</code> Shows the source interface configuration for radius. <code>sflow</code> Shows the source interface configuration for sFlow. <code>sftp-scp</code> Shows source interface configuration for SFTP and SCP. <code>ssh-client</code> Shows source interface configuration for SSH Client. <code>syslog</code> Shows the source interface configuration for syslog. <code>tacacs</code> Shows the source interface configuration for TACACS. <code>tftp</code> Shows the source interface configuration for TFTP.
<code>vrf <VRF-NAME></code>	Specifies the VRF name.
<code>all-vrfs</code>	Shows the source interface configuration for all VRF.

Examples

Displaying all IPv6 source-interface protocol configurations for default VRF:

```
switch# show ipv6 source-interface all
Source-interface Configuration Information
-----
Protocol      Src-Interface      Src-IP              VRF
-----
all           1111:2222          default
switch#
```

Displaying all IPv6 source-interface protocol configuration for VRF red:

```
switch# show ipv6 source-interface all vrf red
Source-interface Configuration Information
-----
Protocol      Src-Interface      Src-IP              VRF
-----
all           1/1/1              red
switch#
```

Displaying all IPv6 source-interface protocol configurations for all VRFs:

```
switch# show ipv6 source-interface all all-vrfs
Source-interface Configuration Information
-----
Protocol      Src-Interface      Src-IP              VRF
-----
all           2.2.2.2:3.3.3.3    all-vrfs
all           1.1.1.1:2.2.2.2    default
all           1/1/1              2::2                red
switch#
```

Command History

Release	Modification
10.12.1000	Added <code>central</code> , <code>sftp-scp</code> , and <code>ssh-client</code> parameters.
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

show running-config

show running-config

Description

Displays the current running configuration.

Examples

Displaying the running configuration (only items of interest to source interface selection are shown in this example output command):



Aruba Central is the priority agent. If no command is specified for ip source-interface, Central will choose the command automatically if it is reachable on any of the known ports.

```
switch# show running-config
vrf green
ip source-interface tftp interface 1/1/2 vrf green
ip source-interface radius interface 1/1/2 vrf green
ip source-interface ntp interface 1/1/2 vrf green
ip source-interface tacacs interface 1/1/2 vrf green
ip source-interface dns interface 1/1/2 vrf green
ip source-interface central interface 1/1/2 vrf green
ip source-interface all interface 1/1/2 vrf green
ipv6 source-interface tftp 2222::3333 vrf green
ipv6 source-interface radius 2222::3333 vrf green
ipv6 source-interface ntp 2222::3333 vrf green
ipv6 source-interface tacacs 2222::3333 vrf green
ipv6 source-interface central 2222::3333 vrf green
ipv6 source-interface all 2222::3333 vrf green
ip source-interface tftp 10.20.3.1
ip source-interface radius 10.20.3.1
ip source-interface ntp 10.20.3.1
ip source-interface tacacs 10.20.3.1
ip source-interface dns 10.20.3.1
ip source-interface central 10.20.3.1
ip source-interface all 10.20.3.1
interface 1/1/1
    no shutdown
    ip address 10.20.3.1/24
interface 1/1/2
    vrf attach green
    ip address 20.1.1.1/24
    ipv6 address 2222::3333/64
interface 1/1/45
    no shutdown
    ip address 100.1.0.1/24
    ipv6 address 1111::2222/64
ip route 100.2.0.0/24 10.20.3.2
switch#
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

VLANs are primarily used to provide network segmentation at layer 2. VLANs enable the grouping of users by logical function instead of physical location. They make managing bandwidth usage within networks possible by:

- Allowing grouping of high-bandwidth users on low-traffic segments
- Organizing users from different LAN segments according to their need for common resources and individual protocols
- Improving traffic control at the edge of networks by separating traffic of different protocol types.
- Enhancing network security by creating subnets to control in-band access to specific network resources

VLANs are generally assigned on an organizational basis rather than on a physical basis. For example, a network administrator could assign all workstations and servers used by a particular workgroup to the same VLAN, regardless of their physical locations.

Hosts in the same VLAN can directly communicate with one another. A router or a Layer 3 switch is required for hosts in different VLANs to communicate with one another.

VLANs help reduce bandwidth waste, improve LAN security, and enable network administrators to address issues such as scalability and network management.



Refer to the Layer 2 Bridging Guide for VLAN configuration and commands.



PTP is available on the Aruba 8360 Switch Series (excluding JL706A and JL707A).



PTP is not available on the Aruba 8100 Switch Series.



If PTP is configured on MACsec-supported ports, the switch can experience higher jitter or lower PTP accuracy.

Precision Time Protocol (PTP) is defined in the IEEE 1588 standard (Standard for a Precision Clock Synchronization Protocol for Networked Measurement and Control Systems). PTP synchronizes clocks in packet-based networks that include distributed device clocks of varying precision and stability. On a local area network, it achieves clock accuracy in the sub-microsecond range, making it suitable for measurement and control systems. PTP is currently employed to synchronize financial transactions, mobile phone tower transmissions, and networks that require precise timing but lack access to satellite navigation signals.

PTP clocks

A PTP network consists of PTP-enabled devices and devices that are not using PTP. The PTP-enabled devices typically consist of clock-aware devices such as ordinary clocks (which are usually single-port end-stations) and one or more grandsource clocks, transparent clocks, and boundary clocks (multi-port L2/L3 time-aware devices).

The basic clock node types include:

Grandsource clock—A grandsource clock is the primary source of time for the downstream devices. This is a device with greater clock quality which may have direct access to a reference clock.

Ordinary clock—An ordinary clock is a single port end-station (which can include a GM as the originating PTP time-aware device).

Transparent clock—A transparent clock can have multiple network port connections but it does not act as either a clock-source or a clock-sink. Rather, it updates the correction field within the PTP event messages (`SYNC/FOLLOW_UP`, `DELAY_REQUEST`) to compensate for the transit time delay. Transparent clocks compensate for switch latency and jitter, making network devices appear transparent to other PTP time-aware devices. They help in reducing the end-station time errors and improving synchronization quality. But a transparent clock itself does not synchronize its time.

There are two types of transparent clocks:

- **End-to-End (E2E) transparent clock**—Updates the `correctionField` field in the PTP messages with the total time the PTP packet was resident in the network device. This is called resident time correction.
- **Peer-to-Peer (P2P) transparent clock**—Updates the `correctionField` field in the PTP messages with the sum of upstream link delay and the resident time. The upstream link delay is the estimated packet propagation delay between the upstream neighbor P2P clock and the local transparent clock.

Boundary clock—A boundary clock implements a local PTP clock where one port acts as clock-sink which synchronizes itself with the clock-source while other ports act as clock-source ports to its downstream clock-aware devices. The clock-source port is used to redistribute the clock to another set of clock-sinks. Boundary clocks can also use E2E or P2P delay-mechanism, and can be configured based on the selected PTP profile. The best clock source algorithm is used by the boundary clock to select the best or most precise configured acceptable clock-source clock.

Based on hardware capability, the switch supports either boundary clock, transparent clock, or both modes.

Best clock-source algorithm

The best clock-source algorithm helps in choosing the source of timing on your network. It runs independently on each clock in a domain. This algorithm specifies the way that a local clock can determine which of all the clocks (including itself) is the best. Since it runs continuously, it continually re-adapts to changes in the network or the clocks.

Each clock sends a message to the network describing its own properties. The best clock-source algorithm running in the clock compares these properties to determine the best clock.

The comparisons of attributes happens with the following precedence :


1. Priority1: user configurable absolute priority
2. ClockClass: Attribute defining a clock's TAI traceability
3. Time Source: Attribute defining the accuracy of a clock
4. Variance: An attribute defining the precision of a clock
5. Priority2: This is a user configurable designation that provides finer grained ordering among otherwise equivalent clocks
6. Clock Identity : A tiebreaker consisting of the MAC address of the clock

In addition to this precedence order, the distance measured by the number of boundary clocks between the local clock and the best clock is used when two Announce messages reflect the same best clock. The distance is indicated in the stepsRemoved field of announce messages.

PTP network diagram

The following diagram illustrates how the various PTP clock nodes are connected and how the timing information flows from the origin to the end-stations to achieve the time synchronization. This diagram depicts the PTP clocks in a source-sink hierarchy.

Figure 1 Example PTP network with clocks in a source-sink hierarchy

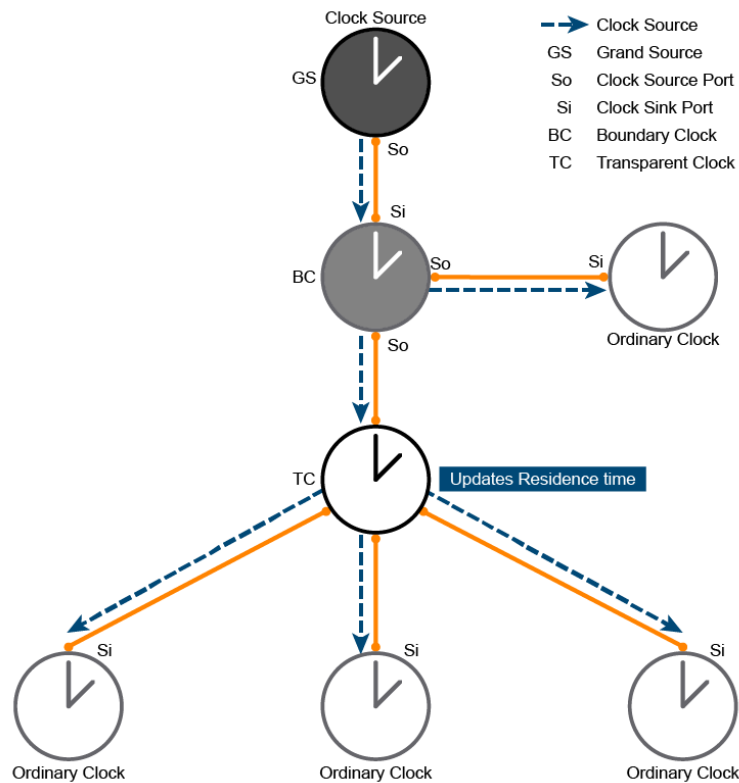

Configuration examples

Configuring an end-to-end transparent clock (TC E2E)

Follow these steps to configure the E2E transparent clock:

1. Configure the mandatory commands:
 - a. Configure the PTP mode and the delay mechanism.
 - b. Configure the PTP clock-step mode.
 - c. Configure the transport protocol.
 - d. Configure PTP globally.

```
Switch config:
switch(config)# ptp profile 1588v2
switch(config-ptp)# mode transparent end-to-end
switch(config-ptp)# clock-step one-step
switch(config-ptp)# transport-protocol ethernet
switch(config-ptp)# enable
```

2. Enable PTP on the connected interfaces :

```
switch(config)# int 1/1/1
switch(config-if)# ptp enable
switch(config-if)# int 1/1/2
switch(config-if)# ptp enable
```

Configuring an end-to-end boundary clock (BC E2E)

Follow these steps to configure the end-to-end boundary clock:

1. Create the PTP context using the specified profile.

```
switch(config)# ptp profile 1588v2  
switch(config-ptp)#
```

2. Configure the mandatory commands:
 - a. Configure the PTP mode.
 - b. Configure the PTP clock-step mode.
 - c. Configure the transport protocol.
 - d. Configure PTP globally.

```
switch(config-ptp)# mode boundary end-to-end  
switch(config-ptp)# clock-step one-step  
switch(config-ptp)# transport-protocol ethernet  
switch(config-ptp)# enable
```

3. Configure the optional commands which participate in the best clock source algorithm:
 - a. Configure priority1 value.
 - b. Configure priority2 value.

```
switch(config-ptp)# priority1 1  
switch(config-ptp)# priority2 10
```

4. Enable PTP on the connected interfaces:

```
switch(config)# int 1/1/1  
switch(config-if)# ptp enable  
switch(config-if)# int 1/1/2  
switch(config-if)# ptp enable
```

5. Optional: changing packet interval rate for various PTP parameters:

```
switch(config-if)# ptp sync-interval 1588v2 1  
switch(config-if)# ptp announce-interval 1588v2 -5  
switch(config-if)# ptp announce-timeout 1588v2 4  
switch(config-if)# ptp delay-req-interval 1588v2 -3
```

PTPv1 passthrough

As part of the PTPv1 passthrough feature, PTPv1 packets are allowed to pass through both PTP and non-PTP aware devices. PTPv1 traffic is forwarded based on the destination MAC address and the switches do not process or route the PTPv1 traffic.



As per the IEEE standard, PTPv1 packets are expected to have a TTL value of 0, which makes them operational only in LAN environment and non-routable.

PTP support over VSX

PTP Transparent Clock is supported on VSX and supports both P2P and E2E delay mechanisms. The PTP-TC clock configuration is synchronized between VSX peers.

- PTP must be enabled and configured on the Inter Switch Link (ISL) so that the PTP packets bridged through the ISL have the correction field (CF) updated. In case of peer-to-peer (P2P) delay mechanism, the link-delay for the ISL is also determined by the PTP protocol and compensated in the CF.
- PTP for a keepalive (KA) link depends on L3 configuration. If the routing protocol is configured to forward PTP packets through a KA link, then PTP must be enabled on the KA link. In general, it is not recommended to send L3 routed packets through a keepalive link.

Hardware considerations

PTP is supported on breakout cables. PTP connections through a QSA28 (QSFP28 to SFP adapter) transceivers are not supported. DACs are not supported for use through QSA28 adapters. (Refer to the [Transceiver Guide](#) for further information.)

PTP Clients connected to 1 Gbps XCVRs on an 8360 Switch acting as the PTP boundary clock or PTP transparent clock will have a slightly higher offset when there is background data traffic between clients. This is a known limitation specifically to Clients connected only on 1 Gbps links on the Aruba 8360 Switch Series. Clients connected on higher speed links (10/25/40/50/100) Gbps will not be impacted.



Use of third party transceivers may introduce unknown latency and have an effect on the accuracy of PTP deployments.

Configuration recommendations

PTP CoPP class configuration recommendations

Configuration recommendations for a boundary clock

The PTP CoPP class must be adjusted based on the number of clients associated with the boundary clock and the configured packet rate. For example, if there are 1000 clients with a configured packet rate of 2pps, and a default CoPP limit of 1000, packet drops will be observed. In such instances the CoPP limit should be increased to more than 2000.

The `show copp statistics class ptp` command can be used to monitor whether the CoPP policy must be adjusted. For example:

```
Statistics for CoPP policy 'default':
Class: ptp
Description: Precision Time Protocol (PTP) .
  priority          : 5
  rate (pps)        : 1000
```

```
burst size (pkts)      : 250
packets passed         : 611153           packets dropped      : 0
```



Increasing the PTP CoPP values may help in scaling the clients but needs to be planned and configured properly so as to not to impact other protocols.

QoS prioritization configuration recommendations for a transparent clock

```
class ip PTP
  10 match udp any any eq 319 count
policy PTP-POL
  10 class ip PTP action local-priority 6
policy test
interface lag 240
  apply policy PTP-POL in
interface 1/1/26
  apply policy PTP-POL in
interface 2/1/26
  apply policy PTP-POL in
```



PTP Event messages carrying a critical timestamp use UDP port 319.


General guidelines for PTP IPv4 multicast

- For IP multicast-based PTP time distribution, it is recommended to use PIM Sparse-Mode.
- When connecting transparent clock (TC) and boundary clock (BC), ensure that the TC becomes the DR by setting the DR priority.
- Ensure the mroutes are programmed on TCs so that there is reachability for PTP streams from the upstream.
- Configure static-igmp groups on TCs if the clients themselves cannot send IGMP joins for the PTP multicast group.
- The `QoS trust dscp` command needs to be explicitly configured on all non-BC switches in the network to ensure that the incoming DSCP value of PTP traffic is honored.
- If Peer-to-Peer (P2P) does not happen with the immediate peer (for example some configurations with Unicast mode that skip over intermediate-nodes, which could be one or more Transparent Clocks) the offsets may go high.
- Transparent clock peer-to-peer using IPv4 transport requires source IP configuration to send IPv4 PTP messages over L2 MCLAG.

Use cases

Use case: PTP – IPv4 over L2 spine leaf topology

Figure 2 Grand clock source connected to boundary clock (spines), followed by transparent clock leaves

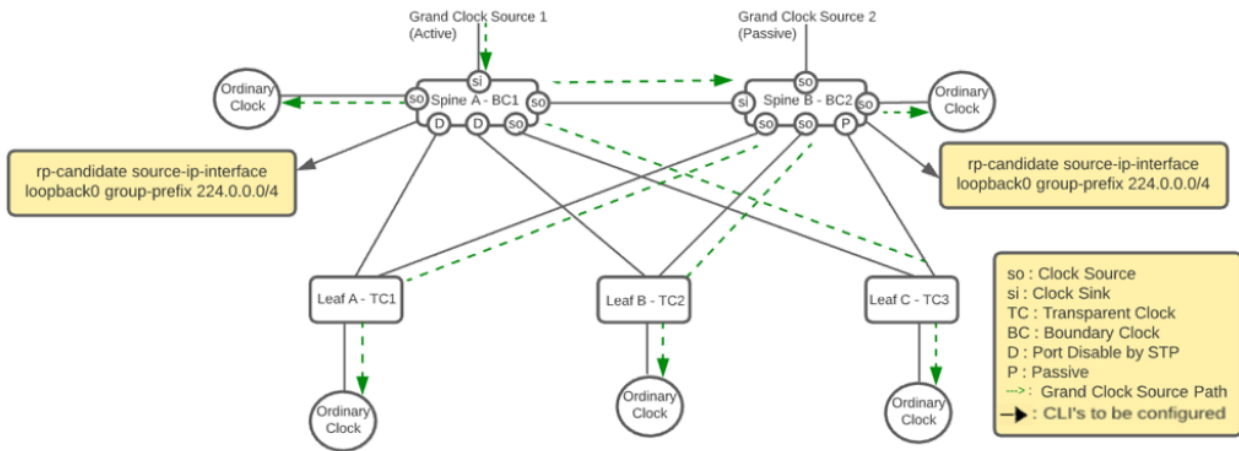

The following considerations and best practices apply to this use case illustrated in the above topology:

- Configure candidate-RP on switches that are connected to a grand clock source. The candidate-RP needs to be configured on the BC1 Spine A and BC2 Spine B.
- When the PTP clients are not capable of sending IGMP joins, be sure to configure `ip igmp static-group 224.0.1.129` on the VLAN interface of a TC, where PTP is configured.




In this case, it is an L2 switch in leaf so `ip igmp snooping enable` also needs to be configured on the transparent clock VLAN interface.

- Ensure that `ip source-interface ptp` is configured on both BC switches on the VLAN interface where PTP is configured.
- Ensure that `spanning tree` is enabled to avoid unwanted loops.
- In this use case topology, It is recommended to have VRRP on boundary clock switches to have L3 redundancy for PTP end clients.

Use case: PTP – L3 spine leaf topology

Figure 3 Grand clock source connected to transparent clock, followed by boundary clock spines and boundary clock leaves

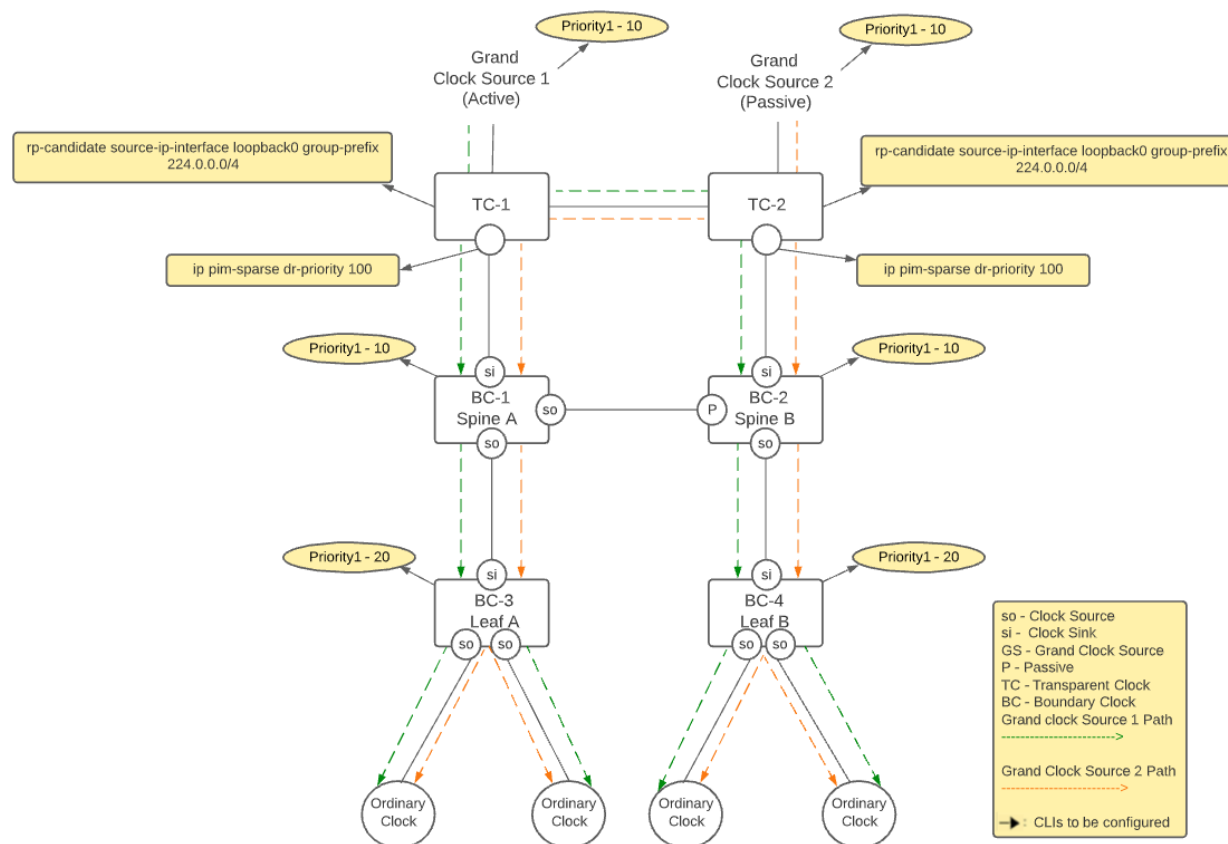


The following considerations and best practices apply to this use case illustrated in the above topology:

- Configure candidate-RP on switches which are connected to a grand clock source. Candidate-RP needs to be configured on TC1 and TC2. Each candidate-RP controls multicast traffic forwarding for one or more multicast groups.
- Configure higher DR priority on switches in which candidate-RP is configured. The DR priority needs to be configured on the TC1 and TC2 on the BC facing ports.
- When the PTP clients are not capable of sending IGMP joins, ensure that `ip igmp static-group 224.0.1.129` is configured on all PTP-enabled interfaces of a TC.
- The `igmp static-group` configuration is not needed on BC switches. In this case, it is an L3 network so `ip igmp enable` also needs to be configured on all PTP-enabled L3 interfaces of the TC.

Use case: PTP-VSX Multicast

Figure 4 Medium or Large campus solutions for PTP-VSX multicast

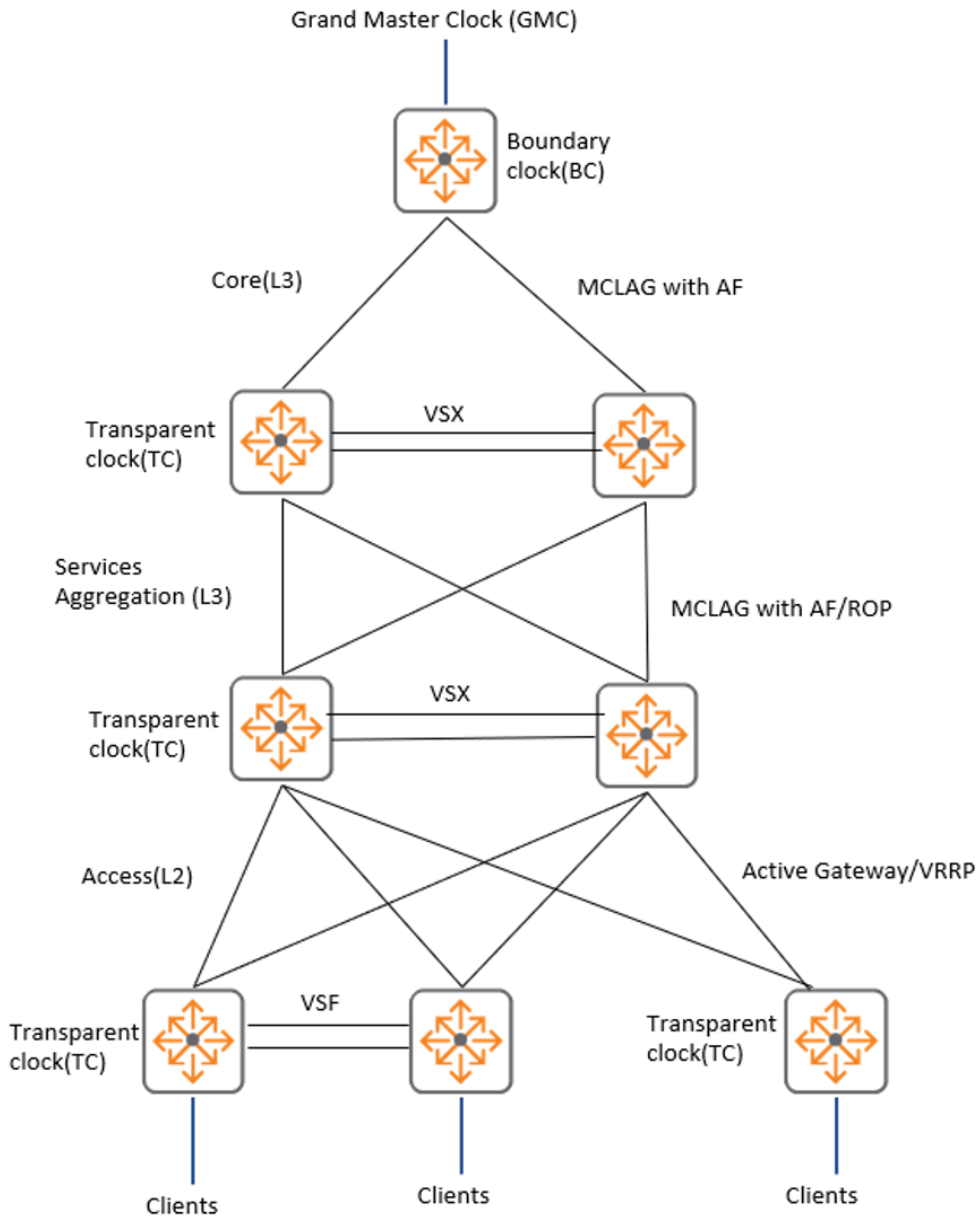

The following considerations and best practices apply to the use case illustrated in the above topology.

- If there are no dynamic IGMP joins for the PTP Group on the Grand Master Clock (GMC)/client-connected port on the core Boundary Clock (BC), use the command **igmp static group** to configure an IGMP static groups on those ports.
- When a core switch is acting as a Boundary Clock, it is always recommended to use Multi-Chassis Link Aggregation (MC-LAG) with active forwarding as an upstream solution.



In the above topology, if there is a requirement to use ECMP upstream solutions in VSX, the upstream switch should be configured as Transparent Clock (TC).

PTP commands

clear ptp statistics

```
clear ptp statistics [<IFNAME>]
```

Description

Clears PTP counters for the given interface.

Parameter	Description
<IFNAME>	Optional: Specifies the interface name.

Examples

Clearing PTP counters for the given interface:

```
switch# clear ptp statistics 1/1/8
switch# clear ptp statistics lag1
switch# clear ptp statistics
```

Command History

Release	Modification
10.08	Command introduced.

Command Information

Platforms	Command context	Authority
8360	Manager (#)	Administrators or local user group members with execution rights for this command.

clock-domain

```
clock-domain <DOMAIN-NUMBER>
no clock-domain
```

Description

Configures the PTP clock domain to a specified value.

The `no` form of this command removes the PTP domain configuration of the PTP clock.

Parameter	Description
<DOMAIN-NUMBER>	Sets the PTP clock domain. Range: 0 to 254. Value configurable subject to limits established by the PTP profile.

Usage

- The one-step end-to-end transparent clock works across domains.
- For boundary clocks, the clock-domain has to be identical with the domain used in the network.
- All PTP devices must be within same domain to be able to sync with each other.
- This command is only enabled in the PTP profile context.
- For PTP transparent clock, you must configure the same clock-domain as on clients and GM to synchronize.

Examples

Entering the PTP profile context and setting the PTP clock domain value:

```
switch(config)# ptp profile aes-r16
switch(config-ptp)#
switch(config-ptp)# clock-domain 4
switch(config-ptp)#
```

Removing the PTP clock domain value:

```
switch(config-ptp)# no clock-domain
switch(config-ptp)#
```

Command History

Release	Modification
10.08	Command introduced.

Command Information

Platforms	Command context	Authority
8360	config-ptp	Administrators or local user group members with execution rights for this command.

clock-step

```
clock-step {one-step|two-step}
no clock-step
```

Description

Configures the clock step mode that determines when the egress-time information is sent.

The 8360 Switch Series supports both one-step and two-step modes for boundary clocks. For transparent clocks, only one-step mode is supported.

The **no** form of this command removes the PTP clock-step configuration of the PTP clock.

Parameter	Description
one-step	Sets the PTP clock-step mode to one-step messaging in which egress-time information is sent along with the SYNC message.
two-step	Sets the PTP clock-step mode to two-step messaging in which egress-time information is sent a subsequent follow-up message with the egress timestamp of the previously sent SYNC message.

Usage

- Mandatory command to start the PTP clock.
- Boundary clocks can inter-operate with different step modes upstream or downstream.

Example

Setting the clock-step mode to one-step messaging:

```
switch(config-ptp)# clock-step one-step
```

Removing the clock-step mode configuration:

```
switch(config-ptp)# no clock-step
```

Setting the clock-step mode to two-step messaging:

```
switch(config-ptp)# clock-step two-step
```

Command History

Release	Modification
10.08	Command introduced.

Command Information

Platforms	Command context	Authority
8360	config-ptp	Administrators or local user group members with execution rights for this command.

enable

enable
no enable

Description

Enables the PTP profile globally. However, the PTP clock is started only when all the mandatory commands are set.

The **no** form of this command disables the PTP profile globally.

Usage

Mandatory command to start the PTP clock.

Examples

Enabling the PTP profile:

```
switch(config)# ptp profile 1588v2  
switch(config-ptp)# enable
```

Disabling the PTP profile:

```
switch(config)# ptp profile 1588v2  
switch(config-ptp)# no enable
```

Command History

Release	Modification
10.08	Command introduced.

Command Information

Platforms	Command context	Authority
8360	config-ptp	Administrators or local user group members with execution rights for this command.

mode

```
mode boundary {end-to-end | peer-to-peer}  
no mode boundary {end-to-end | peer-to-peer}  
mode transparent {end-to-end | peer-to-peer}  
no mode transparent {end-to-end | peer-to-peer}  
no mode
```

Description

Configures the switch PTP clock mode, either boundary or transparent, with a delay-request mechanism of either end-to-end or peer-to-peer. A device in transparent clock mode does not synchronize (syntonize) itself to a grandsource clock.

The **no** form of this command unconfigures the PTP clock mode and delay-request mechanism.

Parameter	Description
boundary	Selects boundary clock mode.
transparent	Selects transparent clock mode.
end-to-end	Selects the end-to-end delay-request mechanism.
peer-to-peer	Selects the peer-to-peer delay-request mechanism. Not supported with VSF.

Examples

Configuring PTP boundary clock mode with the end-to-end delay-request mechanism:

```
switch(config-ptp)# mode boundary end-to-end
```

Unconfiguring PTP boundary clock mode with the end-to-end delay-request mechanism:

```
switch(config-ptp)# no mode boundary end-to-end
```

Configuring PTP boundary clock mode with the peer-to-peer delay-request mechanism:

```
switch(config-ptp)# mode boundary peer-to-peer
```

Unconfiguring PTP boundary clock mode with the peer-to-peer delay-request mechanism:

```
switch(config-ptp)# no mode boundary peer-to-peer
```

Configuring PTP transparent with the end-to-end delay-request mechanism:

```
switch(config-ptp)# mode transparent end-to-end
```

Unconfiguring PTP transparent with the end-to-end delay-request mechanism:

```
switch(config-ptp)# no mode transparent end-to-end
```

Configuring PTP transparent with the peer-to-peer delay-request mechanism:

```
switch(config-ptp)# mode transparent peer-to-peer
```

Unconfiguring PTP transparent with the peer-to-peer delay-request mechanism:

```
switch(config-ptp)# no mode transparent peer-to-peer
```

Command History

Release	Modification
10.11	Added support for the peer-to-peer delay-request mechanism.
10.08	Command introduced.

Command Information

Platforms	Command context	Authority
8360	config-ptp	Administrators or local user group members with execution rights for this command.

priority1

```
priority1 <PRIORITY>
no priority1
```

Description

Configures the PTP clock `priority1` value of the device. This value is operational when the device is in boundary clock mode and participating in the Best Clock Source Algorithm (BMCA). This value is used to indicate priority to its downstream clock-aware devices.

The `no` form of this command removes the PTP `priority1` configuration of the PTP clock and sets it to the default value of 128.

Parameter	Description
<PRIORITY>	Sets the priority value. Default 128.

Usage

This value can be configured only for the boundary clock.

Examples

Configuring PTP priority1 value:

```
switch(config-ptp)# priority1 129
```

Removing PTP priority1 configuration:

```
switch(config-ptp)# no priority1
```

Command History

Release	Modification
10.08	Command introduced.

Command Information

Platforms	Command context	Authority
8360	config-ptp	Administrators or local user group members with execution rights for this command.

priority2

```
priority2 <PRIORITY>
no priority2 <PRIORITY>
```

Description

Configures the PTP clock `priority2` value of the device. This value is operational when the device is in boundary clock mode and participating in the Best Clock Source Algorithm (BMCA). This value is used to indicate priority to its downstream clock-aware devices.

The `no` form of this command removes the PTP `priority2` configuration of the PTP clock and sets it to the default value of 128.

Parameter	Description
<PRIORITY>	Sets the priority value. Default 128.

Usage

This value can be configured only for the boundary clock.

Examples

Configuring PTP `priority1` value:

```
switch(config-ptp)# priority2 129
```

Removing PTP `priority2` configuration:

```
switch(config-ptp)# no priority2
```

Command History

Release	Modification
10.08	Command introduced.

Command Information

Platforms	Command context	Authority
8360	config-ptp	Administrators or local user group members with execution rights for this command.

ptp announce-interval

```
ptp announce-interval {1588v2| aes67 | aes-r16 | smpte} <LOG-SECONDS>  
no ptp announce-interval {1588v2| aes67 | aes-r16 | smpte}
```

Description

Sets the announce message transmit interval on a PTP-enabled interface for a specific PTP profile.

The `no` form of this command removes the announce message transmit interval configuration on a PTP-enabled interface and sets a profile specific default value.

Parameter	Description
1588v2	Specifies the PTP 1588v2 profile timers. Default: 1.
aes67	Specifies the PTP AES67 profile timers. Default: 1.
aes-r16	Specifies the PTP AES-R16 profile timers. Default: 1.
smpte	Specifies the PTP SMTPE profile timers. Default: -2.
<LOG-SECONDS>	Sets the announce message interval in log seconds.

Usage

This value can be configured only for the boundary clock.

Examples

Setting the PTP AES67 profile timers:

```
switch(config)# interface 1/1/1
switch(config-if)# ptp announce-interval aes67 2
```

Removing the PTP AES67 profile timer configuration:

```
switch(config)# interface 1/1/1
switch(config-if)# no ptp announce-interval aes67
```

Command History

Release	Modification
10.08	Command introduced.

Command Information

Platforms	Command context	Authority
8360	config-if	Administrators or local user group members with execution rights for this command.

ptp announce-timeout

```
ptp announce-timeout {1588v2| aes67 | aes-r16 | smpte} <COUNT>
no ptp announce-timeout {1588v2| aes67 | aes-r16 | smpte}
```

Description

Sets the announce message receipt timeout on a PTP-enabled interface for a specific PTP profile.

The **no** form of this command resets the announce message receipt timeout configuration on a PTP-enabled interface and sets a profile-specific default value.

Parameter	Description
1588v2	Specifies the PTP 1588v2 profile timers. Default: 3.
aes67	Specifies the PTP AES67 profile timers. Default: 3.
aes-r16	Specifies the PTP AES-R16 profile timers. Default: 3.
smp-te	Specifies the PTP SMTPE profile timers. Default: 3.
<LOG-SECONDS>	Specifies the number of announcement intervals.

Usage

This value can be configured only for the boundary clock.

Examples

Setting the PTP AES67 profile timer:

```
switch(config)# interface 1/1/1
switch(config-if)# ptp announce-timeout aes67 4
```

Resetting the PTP AES67 profile timer:

```
switch(config)# interface 1/1/1
switch(config-if)#no ptp announce-timeout aes67
```

Command History

Release	Modification
10.08	Command introduced.

Command Information

Platforms	Command context	Authority
8360	config-if	Administrators or local user group members with execution rights for this command.

ptp clock-source-only

```
ptp clock-source-only
no ptp clock-source-only
```

Description

Configures the PTP port state to clock_source state. This prohibits the port from entering into a clock_sink or passive state.

The no form of this command removes the clock_source state configuration on the port and returns it to normal BMCA operation.

Usage

This can only be configured for the boundary clock.

Examples

Configuring the clock_source only role for the port:

```
switch(config)# interface 1/1/1
switch(config-if)# ptp clock-source-only
```

Removing the configuration of clock_source only role for the port:

```
switch(config)# interface 1/1/1
switch(config-if)# no ptp clock-source-only
```

Command History

Release	Modification
10.10	Command introduced.

Command Information

Platforms	Command context	Authority
8360	config-if	Administrators or local user group members with execution rights for this command.

ptp delay-req-interval

```
ptp delay-req-interval {1588v2 | aes67 | aes-r16 | smpte} <LOG-SECONDS>
no ptp delay-req-interval {1588v2 | aes67 | aes-r16 | smpte}
```

Description

Sets the `delay_req` message transmit interval on a PTP-enabled interface for a specific PTP profile.

The `no` form of this command removes the `delay_req` message transmit interval configuration on a PTP-enabled interface and sets a profile specific default value.

Parameter	Description
1588v2	Specifies the PTP 1588v2 profile timers. Default 0.
aes67	Specifies the PTP AES67 profile timers. Default 0.
aes-r16	Specifies the PTP AES-R16 profile timers. Default 0.
smpte	Specifies the PTP SMTPE profile timers. Default -3.
<LOG-SECONDS>	Sets the <code>delay_req</code> message interval in log seconds.

Usage

- Use this command for end-to-end (E2E) mode and use command `ptp pdelay-interval` for peer-to-peer mode.
- This command is only for boundary clock.

Examples

Setting the PTP AES67 profile timers:

```
switch(config)# interface 1/1/1
switch(config-if)# ptp delay-req-interval aes67 2
```

Removing the PTP AES67 profile timer configuration:

```
switch(config)# interface 1/1/1
switch(config-if)# no ptp delay-req-interval aes67
```

Command History

Release	Modification
10.08	Command introduced.

Command Information

Platforms	Command context	Authority
8360	config-if	Administrators or local user group members with execution rights for this command.

ptp enable

```
ptp enable
no ptp enable
```

Description

Enables PTP on the interface. The `no` form of this command disables PTP on the interface. PTP can be enabled only on physical L2 or L3 interfaces and LAG L2 or L3 interfaces.

Examples

Enabling PTP on a physical interface:

```
switch(config)# interface 1/1/1
switch(config-if)# ptp enable
```

Disabling PTP on the interface context:

```
switch(config)# interface 1/1/1
switch(config-if)# no ptp enable
```

Command History

Release	Modification
10.08	Command introduced.

Command Information

Platforms	Command context	Authority
8360	config-if	Administrators or local user group members with execution rights for this command.

ptp lag-role

```
ptp lag-role {primary | secondary}
no ptp lag-role
```

Description

Configures the PTP role for the member interfaces of a Link Aggregation (LAG) . When there are two or more member interfaces for a LAG, only one link can be configured as primary and only one other link can be configured as secondary. The primary member interface is used for transmitting the PTP packets generated by the boundary clock. When the primary member goes down, the secondary member is used for PTP packet transmission. If both primary and secondary members go down, PTP does not flip over to the other links of the LAG.

The `no` form of this command removes the PTP role configuration for the LAG member interface.



This command is not supported when configured as a transparent clock.

Parameter	Description
primary	Sets the primary PTP lag-role for the LAG member interface.
secondary	Sets the secondary PTP lag-role for the LAG member interface.

Usage

- LAG roles must be configured for boundary clock.
- For the primary or secondary LAG roles, ensure that the same link ports are configured on both ends of the LAG.

Examples

Setting the primary PTP lag-role for the LAG member interface:

```
switch(config)# interface 1/1/1
switch(config-if)# ptp lag-role primary
```

Setting the secondary PTP lag-role for the LAG member interface:

```
switch(config)# interface 1/1/2
switch(config-if)# ptp lag-role secondary
```

Removing the PTP lag-role configuration for the LAG member interface:

```
switch(config)# interface 1/1/1
switch(config-if)# no ptp lag-role
```

Command History

Release	Modification
10.08	Command introduced.

Command Information

Platforms	Command context	Authority
8360	config-if	Administrators or local user group members with execution rights for this command.

ptp pdelay-req-interval

```
ptp pdelay-req-interval {1588v2 | aes67 | aes-r16 | smpte} <LOG-SECONDS>
no ptp pdelay-req-interval {1588v2 | aes67 | aes-r16 | smpte}
```

Description

Sets the `pdelay_req` message transmit interval on a PTP-enabled interface for a specific PTP profile.

The `no` form of this command removes the `pdelay_req` message transmit interval configuration on a PTP-enabled interface and sets a profile specific default value.

Parameter	Description
1588v2	Specifies the PTP 1588v2 profile timers. Default 0.
aes67	Specifies the PTP AES67 profile timers. Default 0.
aes-r16	Specifies the PTP AES-R16 profile timers. Default 0.
smpte	Specifies the PTP SMTPE profile timers. Default -3.
<LOG-SECONDS>	Sets the <code>delay_req</code> message interval in log seconds.

Usage

- Use this command for peer-to-peer (P2P) mode and use command `ptp delay-interval` for end-to-end (E2E) mode.

Examples

Setting the PTP AES67 profile timers:

```
switch(config)# interface 1/1/1
switch(config-if)# ptp pdelay-req-interval aes67 1
```

Removing the PTP AES67 profile timer configuration:

```
switch(config)# interface 1/1/1
switch(config-if)# no ptp pdelay-req-interval aes67
```

Setting the PTP smpte profile timers:

```
switch(config)# interface 1/1/1
switch(config-if)# ptp pdelay-req-interval smpte 1
```

Removing the PTP smpte profile timer configuration:

```
switch(config)# interface 1/1/1
switch(config-if)# no ptp pdelay-req-interval smpte
```

Command History

Release	Modification
10.11	Command introduced.

Command Information

Platforms	Command context	Authority
8360	config-if	Administrators or local user group members with execution rights for this command.

ptp peer ip

```
ptp peer ip <IP-ADDRESS>
no ptp peer ip <IP-ADDRESS>
```

Description

Configures destination IP addresses for the interfaces in unicast transmission. The `no` form of this command removes the PTP destination IP address configuration for the interfaces in unicast transmission.

Parameter	Description
ip <IP-ADDRESS>	Specifies the peer IPv4 address. Syntax: A.B.C.D

Usage

- This command has no effect when configured as a transparent clock.

Example

Configuring `ptp peer ip` on the interface:

```
switch(config)# interface 1/1/1  
switch(config-if)# ptp peer ip 10.0.0.1
```

Removing `ptp peer ip` on the interface:

```
switch(config-if)# no ptp peer ip 10.0.0.1
```

Command History

Release	Modification
10.08	Command introduced.

Command Information

Platforms	Command context	Authority
8360	config-if	Administrators or local user group members with execution rights for this command.

ptp profile

```
ptp profile {<PROFILE NAME>}  
no PTP profile
```

Description

Enters the PTP context to configure the PTP profile in which the device will operate.

Configure PTP profile before configuring mode or other profile-specific parameters. The device can be operating in any one profile at a given point of time. The `no` form of this command removes the PTP profile configuration in which the device will operate. This command clears the PTP profile and all parameters related to that profile.

Parameter	Description
<PROFILE NAME>	Specifies the profile to be used. Profiles include: 1588v2: Specifies the IEEE 1588-2008 profile to be used. - aes-r16: Specifies the IEEE AES-R16-2016 profile to be used. - aes67: Specifies the IEEE AES67 profile to be used. - smpte: Specifies the IEEE SMPTE-ST-2059-2 profile to be used.

Usage

Configure PTP profile before configuring mode or other profile-specific parameters.

Example

Configuring PTP profiles:

```
switch(config)# ptp profile 1588v2
```

Configuring more than one PTP profile:

```
switch(config)# ptp profile 1588v2
switch(config-ptp)# exit
switch(config)# ptp profile smpte
switch(config-ptp)#
The existing profile must be removed using the 'no ptp profile' command before
configuring a different profile.
```

Removing the PTP profile:

```
switch(config-ptp)# no ptp profile
```

Command History

Release	Modification
10.08	Command introduced.

Command Information

Platforms	Command context	Authority
8360	config	Administrators or local user group members with execution rights for this command.

ptp sync-interval

```
ptp sync-interval {1588v2 | aes67 | smpte} <LOG-SECONDS>
no ptp sync-interval {1588v2 | aes67 | smpte}
```

Description

Sets the sync message transmit interval on a PTP-enabled interface for a specific PTP profile.

The `no` form of this command removes the sync message transmit interval configuration on a PTP enabled interface and sets it to a profile-specific default value.

Parameter	Description
1588v2	Specifies the PTP 1588v2 profile timers. Default 0.
aes67	Specifies the PTP AES67 profile timers. Default -3.
smpte	Specifies the PTP SMTPE profile timers. Default -3
<LOG-SECONDS>	Sets the sync message interval in log seconds.

Examples

Setting the PTP 1588v2 sync interval :


```
switch(config)# interface 1/1/1
switch(config-if)# ptp sync-interval 1588v2 2
```

Setting the PTP AES67 sync interval :

```
switch(config)# interface 1/1/1
switch(config-if)# ptp sync-interval aes67 -2
```

Removing the PTP AES67 sync interval:

```
switch(config)# interface 1/1/1
switch(config-if)# no ptp sync-interval aes67
```

Command History

Release	Modification
10.08	Command introduced.

Command Information

Platforms	Command context	Authority
8360	config-if	Administrators or local user group members with execution rights for this command.

ptp vlan

```
ptp vlan <VLAN-ID>
no ptp vlan
```

Description

Configures a VLAN for PTP messages. It is necessary when the boundary clock port is a VLAN trunk L2 interface (`no routing`). The `no` form of this command removes the VLAN configuration for PTP messages.

Parameter	Description
<VLAN-ID>	Specifies a VLAN. Range: 1-4094.

Usage

- This configuration has no bearing on the one-step transparent clock.
- In boundary clock mode, only PTP packets in PTP VLAN are processed; PTP packets from other VLANs are dropped.
- `ptp vlan` should be configured on interfaces only when the specific VLAN is a trunk/tagged member of that port. This configuration should not be performed on an access port.

Examples

Configuring a specific VLAN for PTP messages:

```
switch(config)# interface 1/1/1
switch(config-if)# ptp vlan 4
```

Removing the VLAN configuration for PTP messages:

```
switch(config)# interface 1/1/1
switch(config-if)# no ptp vlan
```

Command History

Release	Modification
10.08	Command introduced.

Command Information

Platforms	Command context	Authority
8360	config-if	Administrators or local user group members with execution rights for this command.

show ptp clock

```
show ptp clock [vsx-peer]
```

Parameter	Description
[vsx-peer]	Displays VSX peer switch information. (8360 Switches only).

Description

Shows PTP clock-related information.

Example

Showing PTP transparent clock information:

```
switch# show ptp clock
PTP Profile                : smpte
PTP Mode                   : transparent
Delay Mechanism            : end-to-end
Clock Identity             : NA
Network Transport Protocol : ipv4
Clock Step                 : One
Clock Domain              : NA
Number of PTP Ports       : 1
Priority1                  : NA
Priority2                  : NA
Clock Quality :
  Class                   : NA
  Accuracy                : NA
  Offset (log variance)   : NA
Offset From Clock-Source  : NA
```

Mean Delay	: NA
Steps Removed	: NA

Showing PTP boundary clock information :

```
switch# show ptp clock
PTP Profile                : aes67
PTP Mode                   : boundary
Delay Mechanism            : end-to-end
Clock Identity             : 00:fd:45:ff:fe:68:f3:00
Network Transport Protocol : ipv4
Clock Step                 : Two
Clock Domain               : 0
Number of PTP Ports        : 3
Priority1                   : 128
Priority2                   : 128

Clock Quality :
  Class        : 248
  Accuracy     : 49
  Offset (log variance) : 52592

Offset From Clock-Source : - 0.000000006 (s)
Mean Delay               : + 0.000000277 (s)
Steps Removed           : 1
```

Command History

Release	Modification
10.08	Command introduced.

Command Information

Platforms	Command context	Authority
8360	Manager (#)	Auditors or Administrators or local user group members with execution rights for this command. Auditors can execute this command from the auditor context (auditor>) only.

show ptp foreign-clock-sources

show ptp foreign-clock-sources [vsx-peer]

Description

Shows the priority1, priority2, class, accuracy, offset-scaled-log-variance (OSLV), and steps removed information for foreign clock-source nodes.

Parameter	Description
[vsx-peer]	Displays VSX peer switch information (8360 Switches only).

Example

Showing PTP foreign clock-source information:

```
switch(config-if)# show ptp foreign-clock-sources
Pl=Priority1, P2=Priority2, C=Class, A=Accuracy,
OSLV=Offset-scaled-log-variance, SR=Steps-removed
```

Interface	Foreign Port ID	Clock Source ID	P1	P2	C	A	OSLV	SR
1/1/4	00:00:00:00:00:00:00:01 (0x0001)	00:00:00:00:00:00:00:01	0	0	6	35	0	1
1/1/5	b4:99:ba:ff:fe:54:2b:00 (0x0002)	00:00:00:00:00:00:00:01	0	0	6	35	0	2

Command History

Release	Modification
10.12	vsx-peer parameter introduced on 8360 Switch Series.
10.08	Command introduced.

Command Information

Platforms	Command context	Authority
8360	Manager (#)	Auditors or Administrators or local user group members with execution rights for this command. Auditors can execute this command from the auditor context (auditor>) only.

show ptp interface

```
show ptp interface [<IFNAME> | [brief] [vsx-peer]
```

Description

Shows PTP port-related information.

Parameter	Description
<IFNAME>	Specifies the interface name.
brief	Shows information in a brief format.
[vsx-peer]	Displays VSX peer switch information. (8360 Switches only).

Examples

Showing PTP port information when the switch is acting as a transparent clock:

```
switch# show ptp interface 1/1/1
Port Identity           : 00:00:00:00:00:00:00:00 (0x0000)
Port Number             : 0
PTP Version             : 2
PTP Enable              : Enabled
PTP Transport           : ipv4
```

```

Port State : Disabled
Delay Mechanism : peer-to-peer
Announce Interval (log mean) : 0
Announce Receipt Timeout : 0
Sync Interval (log mean) : 0
Sync Timeout : NA
Delay Request Interval (log mean) : NA
Peer Delay Request Interval (log mean) : 0
Mean Path Delay : 0 (ns)
switch#

```

```

switch# show ptp interface lag20
Port Identity : NA
Port Number : NA
PTP Version : 2
PTP Enable : Enabled
Transport of PTP : ipv4
Port State : NA
Delay Mechanism : end-to-end
Announce Interval (log mean) : NA
Announce Receipt Timeout : NA
Sync Interval (log mean) : NA
Sync Timeout : NA
Delay Request Interval (log mean) : N
Peer Delay Request Interval (log mean) : 0
Mean Path Delay : 0 (ns)
switch#

```

Showing PTP port information when the switch is acting as a boundary clock:

```

switch# show ptp interface 1/1/1
Interface : 1/1/1
Port Identity : 88:3a:30:ff:fe:05:c9:80 (port: 0x0002)
Port Number : 2
PTP Version : 2
PTP Enable : Enabled
Transport of PTP : ethernet
Port State : Clock Source
Delay Mechanism : end-to-end
Announce Interval (log mean) : 0
Announce Receipt Timeout : 3
Sync Interval (log mean) : -3
Sync Timeout : NA
Delay Request Interval (log mean) : 0
Peer Delay Request Interval (log mean) : 0
Mean Path Delay : 0 (ns)

```

```

switch# show ptp interface lag1
Port Identity : 00:fd:45:ff:fe:68:f3:00 (port: 0x0002)
Port Number : 2
PTP Version : 2
PTP Enable : Enabled
Transport of PTP : ipv4
Port State : Clock Source
Delay Mechanism : end-to-end
Announce Interval (log mean) : 0
Announce Receipt Timeout : 3
Sync Interval (log mean) : -3
Sync Timeout : NA
Delay Request Interval (log mean) : -3
Peer Delay Request Interval (log mean) : 0

```

```

Mean Path Delay                : 0 (ns)
Primary Interface              : 1/1/5
Secondary Interface            : 1/1/6

switch# show ptp interface
Interface lag20:
Port Identity                  : 00:fd:45:ff:fe:68:f3:00 (port: 0x0002)
Port Number                    : 2
PTP Version                    : 2
PTP Enable                     : Enabled
Transport of PTP               : ipv4
Port State                     : Clock Source
Delay Mechanism                : end-to-end
Announce Interval (log mean)   : 0
Announce Receipt Timeout       : 3
Sync Interval (log mean)       : -3
Sync Timeout                   : NA
Delay Request Interval (log mean) : -3
Peer Delay Request Interval (log mean) : 0
Mean Path Delay                : 0 (ns)
Primary Interface              : 1/1/5
Secondary Interface            : 1/1/6

Member Interface 1/1/5:
Port Identity                  : 00:fd:45:ff:fe:68:f3:00 (port: 0x0002)
Port Number                    : 2
PTP Version                    : 2
PTP Enable                     : Enabled
Transport of PTP               : ipv4
Port State                     : Running
Delay Mechanism                : end-to-end
Announce Interval (log mean)   : 0
Announce Receipt Timeout       : 3
Sync Interval (log mean)       : -3
Sync Timeout                   : NA
Delay Request Interval (log mean) : -3
Peer Delay Request Interval (log mean) : 0
Mean Path Delay                : 0 (ns)

Member Interface 1/1/6:
Port Identity                  : 00:fd:45:ff:fe:68:f3:00 (port: 0x0003)
Port Number                    : 3
PTP Version                    : 2
PTP Enable                     : Enabled
Transport of PTP               : ipv4
Port State                     : Not Running
Delay Mechanism                : end-to-end
Announce Interval (log mean)   : 0
Announce Receipt Timeout       : 3
Sync Interval (log mean)       : -3
Sync Timeout                   : NA
Delay Request Interval (log mean) : -3
Peer Delay Request Interval (log mean) : 0
Mean Path Delay                : 0 (ns)

Interface 1/1/15:
Port Identity                  : 00:fd:45:ff:fe:68:f3:00 (port: 0x0001)
Port Number                    : 1
PTP Version                    : 2
PTP Enable                     : Enabled
Transport of PTP               : ipv4
Port State                     : Clock Sink

```

```

Delay Mechanism                : end-to-end
Announce Interval (log mean)   : 0
Announce Receipt Timeout       : 3
Sync Interval (log mean)       : -3
Sync Timeout                   : NA
Delay Request Interval (log mean) : -3
Peer Delay Request Interval (log mean) : 0
Mean Path Delay                : 0 (ns)

```

Showing PTP port information (in brief form) when the switch is acting as a boundary clock:

```

switch# show ptp interface brief
Interface      PTP State
-----
1/1/11         Clock Sink
1/1/12         Clock Source
1/1/15         Clock Source
1/1/16         Clock Source

```

Showing PTP port information in brief format:

```

switch# show ptp interface brief
Interface      PTP State
-----
1/1/11         Clock Source
1/1/12         Clock Sink
1/1/13         Passive

```

Command History

Release	Modification
10.12	vsx-peer parameter introduced on 8360 Switch Series.
10.08	Command introduced.

Command Information

Platforms	Command context	Authority
8360	Manager (#)	Auditors or Administrators or local user group members with execution rights for this command. Auditors can execute this command from the auditor context (auditor>) only.

show ptp parent

```
show ptp parent [vsx-peer]
```

Description

Shows parent node information for the PTP device.

Parameter	Description
[vsx-peer]	Displays VSX peer switch information (8360 Switches only).

Example

Showing PTP parent node information:

```
switch# show ptp parent
PTP Parent Properties

Parent Clock
-----
Parent Clock Identity           : 00:00:00:00:00:00:01
Parent Port Number              : 0x0001
Observed Parent Offset (log variance) : 65535
Observed Parent Clock Phase Change Rate: 2147483647

Grandsource Clock
-----
Grandsource Clock Identity      : 00:00:00:00:00:00:01
Grandsource Clock Quality
  Class                        : 6
  Accuracy                     : 35
  Offset (log variance)        : 0
Priority1                       : 0
Priority2                       : 0
```

Command History

Release	Modification
10.12	vsx-peer parameter introduced on 8360 Switch Series.
10.08	Command introduced.

Command Information

Platforms	Command context	Authority
8360	Manager (#)	Auditors or Administrators or local user group members with execution rights for this command. Auditors can execute this command from the auditor context (auditor>) only.

show ptp statistics

show ptp statistics [<IFNAME>] [vsx-peer]

Description

Shows PTP port statistics.

Parameter	Description
<IFNAME>	Optional. Specifies the interface name.

Parameter	Description
[vsx-peer]	Displays VSX peer switch information. (8360 Switches only).

Examples

Showing PTP port statistics:

```
switch# show ptp statistics
```

PTP Interface Statistics

	Received Packets	Sent Packets	Discarded Packets	Lost Packets
Interface: 1/1/15				
Announce	0	1019	0	0
Sync	0	2038	0	0
Signaling	0	0	0	0
DelayReq	0	0	0	0
DelayResp	0	0	0	0
FollowUp	0	0	0	0
PdelayReq	81957	655750	0	0
PdelayResp	655750	81957	0	0
PdelayRespFollowUp	655749	81957	0	0
Management	0	0	0	0

	Received Packets	Sent Packets	Discarded Packets	Lost Packets
Interface: 1/1/16				
Announce	0	1019	0	0
Sync	0	2038	0	0
Signaling	0	0	0	0
DelayReq	0	0	0	0
DelayResp	0	0	0	0
FollowUp	0	0	0	0
PdelayReq	81957	655750	0	0
PdelayResp	655750	81957	0	0
PdelayRespFollowUp	655749	81957	0	0
Management	0	0	0	0

Showing PTP port statistics for the specified interface:

```
switch# show ptp statistics 1/1/15
```

PTP Interface Statistics

	Received Packets	Sent Packets	Discarded Packets	Lost Packets
Interface: 1/1/15				
Announce	0	1024	0	0
Sync	0	2048	0	0
Signaling	0	0	0	0
DelayReq	0	0	0	0
DelayResp	0	0	0	0
FollowUp	0	0	0	0
PdelayReq	81957	655750	0	0
PdelayResp	655750	81957	0	0
PdelayRespFollowUp	655749	81957	0	0
Management	0	0	0	0

Command History

Release	Modification
10.12	vsx-peer parameter introduced on 8360 Switch Series.
10.08	Command introduced.

Command Information

Platforms	Command context	Authority
8360	Manager (#)	Administrators or local user group members with execution rights for this command.

show ptp time-property

show ptp time-property [vsx-peer]

Description

Shows PTP clock-time properties for the PTP device.

Parameter	Description
[vsx-peer]	Displays VSX peer switch information. (8360 Switches only).

Example

Showing PTP clock time properties:

```
switch # show ptp time-property
PTP Clock Time Property
-----
Current UTC Offset Valid   : FALSE
Current UTC Offset        : 37
Leap59                    : FALSE
Leap61                    : FALSE
Time Traceable            : FALSE
Frequency Traceable       : FALSE
PTP Timescale             : FALSE
Synchronization Uncertain : FALSE
Time Source               : 160
```

Command History

Release	Modification
10.12	vsx-peer parameter introduced on 8360 Switch Series.
10.08	Command introduced.

Command Information

Platforms	Command context	Authority
8360	Manager (#)	Auditors or Administrators or local user group members with execution rights for this command. Auditors can execute this command from the auditor context (auditor>) only.

show running-config ptp

show running-config ptp

Description

Shows PTP running configuration related information.

Example

Showing PTP running configuration information:

```
switch# show running-config ptp
ptp profile smpte
    enable
    clock-step two-step
    transport-protocol ipv4
    mode boundary peer-to-peer
interface 1/1/15
    no shutdown
    ip address 30.1.1.1/16
    ptp enable
```

Command History

Release	Modification
10.08 or later	Command introduced.

Command Information

Platforms	Command context	Authority
8360	Manager (#)	Auditors or Administrators or local user group members with execution rights for this command. Auditors can execute this command from the auditor context (auditor>) only.

transport-protocol

```
transport-protocol {ethernet | ipv4}
no transport-protocol
```

Description

Sets the transport protocol for PTP packets. In the case of IPv4, the UDP check-sum is reset. There is no default transport-protocol. The `no` form of this command disconnects the clock from its source.

Parameter	Description
ethernet	Specifies the Ethernet (Layer 2) transport protocol.
ipv4	Specifies the IPv4 transport protocol.

Usage

Mandatory command to start the PTP clock.

Example

Setting the Ethernet transport protocol for PTP packets:

```
switch(config-ptp) # transport-protocol ethernet
```

Removing the transport protocol for PTP packets:

```
switch(config-ptp) # no transport-protocol
```

Command History

Release	Modification
10.08	Command introduced.

Command Information

Platforms	Command context	Authority
8360	config-ptp	Administrators or local user group members with execution rights for this command.

vsx-sync ptp-global

```
vsx-sync ptp-global
no vsx-sync ptp-global
```

Description

Enables synchronization of Precision Time Protocol (PTP) configuration on the VSX peer switch.

The **no** form of this command disables the synchronization of PTP configuration on the VSX peer switch. However, this will not delete the existing PTP configuration on the peer switch.

Examples

Enabling VSX synchronization for PTP configuration:

```
switch(config) # ptp profile 1588v2
switch(config-ptp) # mode transparent end-to-end
switch(config-ptp) # exit
```

```
switch(config)# vsx  
switch(config-vsx)# vsx-sync ptp-global
```

Disabling VSX synchronization for PTP configuration:

```
switch(config)# vsx  
switch(config-vsx)# no vsx-sync ptp-global
```

Command History

Release	Modification
10.12	Command introduced.

Command Information

Platforms	Command context	Authority
8360	config-vsx	Administrators or local user group members with execution rights for this command.

Upgrade and downgrade scenarios

Upgrade and downgrade scenarios are provided by the Configuration Migration Framework (CMF).

Upgrades

All upgrade scenarios are supported and configuration is migrated.

Downgrades

The following scenario is supported:

1. Create a checkpoint before upgrading.
2. Upgrade.
3. Perform config changes.
4. Set the startup configuration to the checkpoint created in step 1.
5. Downgrade



Configuration changes that occur after the checkpoint in step 1 will be lost during the downgrade.

Limitations

The following are the limitations of upgrade and downgrade scenarios provided by CMF.

Table 1: Configuration from and to the same build

From/to	Checkpoint	Running	Startup
Checkpoint	N/A	Supported	Supported
Running	Supported	N/A	Supported
Startup	Supported	Supported	N/A
Config from URL in CLI Format	Supported	Supported	Supported
Config from URL in JSON Format	Supported	Supported	Supported

Table 2: Configuration from an older build to a newer build (upgrade)

From/to	Checkpoint	Running	Startup
Config from URL in CLI Format	Not supported	Not supported	Not supported

From/to	Checkpoint	Running	Startup
Config from URL in JSON Format	Not supported	Not supported	Not supported
Startup	Not supported	Supported	Supported

Table 3: Configuration from a newer build to an older build (downgrade)

From/to	Checkpoint	Running	Startup
Config from URL in CLI Format	Not supported	Not supported	Not supported
Config from URL in JSON Format	Not supported	Not supported	Not supported
Startup	Not supported	Not supported	Not supported

Hot-patch software

Overview

Hot-patching provides users of AOS-CX with a way to update running software without rebooting their system. Hot-patches are distributed as signed .patch files and are applied on top of an official AOS-CX image.

A hot-patch can be downloaded from a remote server onto an AOS-CX switch then applied without rebooting the switch. By default, the software patch remains on the switch after it is applied, and is automatically reapplied when the switch reboots. In order to revert an applied hot-patch update, the patch must be disabled. When the hot-patch is disabled, rebooting the box is not necessary, though the hot-patch will still remain on the system. The hot-patch can be removed from the system after disabling the hot-patch.

Once a downloaded hot-patch is removed, it must be downloaded again before it can be reapplied.



Hot-patches are cumulative, meaning that each subsequent patch is a superset of the previous patch(es) for a given software image. When multiple hot-patches are required, the first should be removed after the second has been applied.

Prerequisites

- AOS-CX hot-patch software can be obtained from Aruba customer support, and is identified with a **.patch** extension. The name of the patch indicates the version of AOS-CX to which it can be applied. For example, the patch **FL.10.12.XXXX-YYYY.patch** indicates that the patch can be applied on top of switch image **FL.10.12.XXXX.swi** and brings software up to date with the **FL.10.12.YYYY** release.
- Hot-patch software can be applied only after it has been downloaded to the switch.

Caveats and limitations

- Hot-patch files cannot be managed when the switch is loaded with a .swi image that does not support the hot-patch feature.
- Only restartable daemons can be updated with a hot-patch file.

- Each hot-patch applies to only one release image and each subsequent hot-patch for that release image is cumulative. This means that applying the most recent hot-patch provides all the same fixes included in previous hot-patches. As such, only one hot-patch can be applied at a time.
- incompatible and un-applied hot-patches are allowed to remain on the system and in the config to support rollback to the previous version of the software, and to automatically apply any hot-patches that have been previously applied.
- A maximum of ten hot-patches are allowed to be present or preconfigured on the system at a time.
- A daemon/service may restart if it has a hard dependency on another service that gets restarted by being hot-patched. Upon rebooting, hot-patches are reapplied after daemons have started.
- The **dpsed** and **hpe-cardd** daemon cannot have a hot-patch applied while a switchover or failover is in progress.

To apply a hot-patch update

1. Request a hot-patch from Aruba customer support, then place the hot-patch on an FTP-SFTP server.
2. Use the **copy** command to copy the hot-patch from the remote server to the standalone switch or VSF.
3. Use the **hot-patch apply** command to apply the patch.

To unapply hot-patch update

This option only unapplies the patch, but does not remove the patch from the device. The patch can be reapplied again since it is still on the device. If an unapplied patch needs to be removed/deleted from the switch, it can be removed with the command **hot-patch remove <patch>.patch**.

```
switch(config)# show hot-patch
Name                               Status
-----
FL_10_12_0001-0002.patch          Not applied
switch(config)# hot-patch apply FL_10_12_0001-0002.patch
switch(config)#
switch(config)# show hot-patch
Name                               Status
-----
FL_10_12_0001-0002.patch          Applied

switch(config)# no hot-patch apply FL_10_12_0001-0002.patch
switch(config)# show hot-patch
Name                               Status
-----
FL_10_12_0001-0002.patch          Not applied

switch(config)#
switch(config)# hot-patch remove FL_10_12_0001-0002.patch
Do you want to save the current configuration (y/n)? y
The running configuration was saved to the startup configuration.
switch(config)#
switch(config)# show hot-patch
No hot-patch found or configured
switch(config)#
```

To remove/delete a patch:

An applied hot-patch can be both unapplied and removed from the device with the command **hot-patch remove <patch-name>.patch**. The patch cannot be reapplied unless it is downloaded again.

Checkpoints

A checkpoint is a snapshot of the running configuration of a switch and its relevant metadata during the time of creation. Checkpoints can be used to apply the switch configuration stored within a checkpoint whenever needed, such as to revert to a previous, clean configuration. Checkpoints can be applied to other switches of the same platform. A switch is able to store multiple checkpoints.

Checkpoint types

The switch supports two types of checkpoints:

- **System generated checkpoints:** The switch automatically generates a system checkpoint whenever a configuration change occurs.
- **User generated checkpoints:** The administrator can manually generate a checkpoint whenever required.

Maximum number of checkpoints

- Maximum checkpoints: 64 (including the startup configuration)
- Maximum user checkpoints: 32
- Maximum system checkpoints: 32

User generated checkpoints

User checkpoints can be created at any time, as long as one configuration difference exists since the last checkpoint was created. Checkpoints can be applied to either the running or startup configurations on the switch.

All user generated checkpoints include a time stamp to identify when a checkpoint was created.

A maximum of 32 user generated checkpoints can be created.

System generated checkpoints

System generated checkpoints are automatically created by default. Whenever a configuration change occurs, the switch starts a timeout counter (300 seconds by default). For each additional configuration change, the timeout counter is restarted. If the timeout expires with no additional configuration changes being made, the switch generates a new checkpoint.

System generated checkpoints are named with the prefix `CPC` followed by a time stamp in the format `<YYYYMMDDHHMMSS>`. For example: `CPC20170630073127`.

System checkpoints can be applied using the checkpoint rollback feature or copy command.

A maximum of 32 system checkpoints can be created. Beyond this limit, the newest system checkpoint replaces the oldest system checkpoint.

Supported remote file formats

You can restore a switch configuration by copying a switch configuration stored on a USB drive or a remote network device through SFTP/TFTP. The remote file formats that the switch supports depends on where you plan to restore the checkpoint.

Restoring a checkpoint to a...	File type supported
Running configuration	- CLI - JSON - Checkpoint
Startup configuration	- JSON - Checkpoint
Specified checkpoint	Specified checkpoint

Rollback

The term rollback is used to refer to when a switch configuration is reverted to a pre-existing checkpoint.

For example, the following command applies the configuration from checkpoint `ckpt1`. All previous configurations are lost after the execution of this command: `checkpoint rollback ckpt1`

You can also specify the rollback of the running configuration or of the startup configuration with a specified checkpoint, as shown with the following command: `copy checkpoint <checkpoint-name> {running-config | startup-config}`

Checkpoint auto mode

Checkpoint auto mode configures the switch with failover support, causing it to automatically revert to a previous configuration if it becomes inoperable or inaccessible due to configuration changes that are being made.

After entering checkpoint auto mode, you have a set amount of time to add, remove, or modify the existing switch configuration. To save your changes, you must execute the `checkpoint auto confirm` command before the auto mode timer expires. If you do not execute the `checkpoint auto confirm` command within the specified time, all configuration changes you made are discarded and the running configuration reverts to the state it was before entering checkpoint auto mode.

Testing a switch configuration in checkpoint auto mode

Process overview:

1. Enable the checkpoint auto mode.
2. To save the configuration, enter the `checkpoint auto confirm` command before the specified time set in step 1.

Checkpoint commands

checkpoint auto

```
checkpoint auto <TIME-LAPSE-INTERVAL>
```

Description

Starts auto checkpoint mode. In auto checkpoint mode, the switch temporarily saves the runtime configuration as a checkpoint only for the specified time lapse interval. Configuration changes must be saved before the interval expires, otherwise the runtime configuration is restored from the temporary checkpoint.

Parameter	Description
<code><TIME-LAPSE-INTERVAL></code>	Specifies the time lapse interval in minutes. Range: 1 to 60.

Usage

To save the runtime checkpoint permanently, run the `checkpoint auto confirm` command during the time lapse interval. The filename for the saved checkpoint is named `AUTO<YYYYMMDDHHMMSS>`. If the `checkpoint auto confirm` command is not entered during the specified time lapse interval, the previous runtime configuration is restored.

Examples

Confirming the auto checkpoint:

```
switch# checkpoint auto 20
Auto checkpoint mode expires in 20 minute(s)
switch# WARNING Please "checkpoint auto confirm" within 2 minutes
switch# checkpoint auto confirm
checkpoint AUTO20170801011154 created
```

In this example, the runtime checkpoint was saved because the `checkpoint auto confirm` command was entered within the value set by the `time-lapse-interval` parameter, which was 20 minutes.

Not confirming the auto checkpoint:

```
switch# checkpoint auto 20
Auto checkpoint mode expires in 20 minute(s)
switch# WARNING Please "checkpoint auto confirm" within 2 minutes
WARNING: Restoring configuration. Do NOT add any new configuration.
Restoration successful
```

In this example, the runtime checkpoint was reverted because the `checkpoint auto confirm` command was not entered within the value set by the `time-lapse-interval` parameter, which was 20 minutes.

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

checkpoint auto confirm

`checkpoint auto confirm`

Description

Signals to the switch to save the running configuration used during the auto checkpoint mode. This command also ends the auto checkpoint mode.

Usage

To save the runtime checkpoint permanently, run the `checkpoint auto confirm` command during the time lapse value set by the `checkpoint auto <TIME-LAPSE-INTERVAL>` command. The generated checkpoint name will be in the format `AUTO<YYYYMMDDHHMMSS>`. If the `checkpoint auto confirm` command is not entered during the specified time lapse interval, the previous runtime configuration is restored.

Examples

Confirming the auto checkpoint:

```
switch# checkpoint auto confirm
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

checkpoint diff

```
checkpoint diff {<CHECKPOINT-NAME1> | running-config | startup-config}  
               {<CHECKPOINT-NAME2> | running-config | startup-config}
```

Description

Shows the difference in configuration between two configurations. Compare checkpoints, the running configuration, or the startup configuration.

Parameter	Description
{<CHECKPOINT-NAME1> running-config startup-config}	Selects either a checkpoint, the running configuration, or the startup configuration as the baseline.
{<CHECKPOINT-NAME2> running-config startup-config}	Selects either a checkpoint, the running configuration, or the startup configuration to compare.

Usability

The output of the `checkpoint diff` command has several symbols:

- The plus sign (+) at the beginning of a line indicates that the line exists in the comparison but not in the baseline.
- The minus sign (-) at the beginning of a line indicates that the line exists in the baseline but not in the comparison.

Examples

In the following example, the configurations of checkpoints `cp1` and `cp2` are displayed before the `checkpoint diff` command, so that you can see the context of the `checkpoint diff` command.

```
switch# show checkpoint cp1
Checkpoint configuration:
!
!Version AOS-CX XL.10.00.0002
!Schema version 0.1.8
module 1/1 product-number jl363a
!
!
!
!
!
!
!
vlan 1,200
interface 1/1/1
    no shutdown
    ip address 1.0.0.1/24
interface 1/1/2
    no shutdown
    ip address 2.0.0.1/24

switch# show checkpoint cp2
Checkpoint configuration:
!
!Version AOS-CX XL.10.00.0002
!Schema version 0.1.8
module 1/1 product-number jl363a
!
!
!
!
!
!
!
vlan 1,200,300
interface 1/1/1
    no shutdown
    ip address 1.0.0.1/24
interface 1/1/2
    no shutdown
    ip address 2.0.0.1/24

switch# checkpoint diff cp1 cp2
--- /tmp/chkpt11501550258421    2017-08-01 01:17:38.420514016 +0000
+++ /tmp/chkpt21501550258421    2017-08-01 01:17:38.420514016 +0000
@@ -9,7 +9,7 @@
!
!
!
-vlan 1,200
+vlan 1,200,300
```

```
interface 1/1/1
  no shutdown
  ip address 1.0.0.1/24
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

checkpoint post-configuration

checkpoint post-configuration

no checkpoint post-configuration

Description

Enables creation of system generated checkpoints when configuration changes occur. This feature is enabled by default.

The `no` form of this command disables system generated checkpoints.

Usage

System generated checkpoints are automatically created by default. Whenever a configuration change occurs, the switch starts a timeout counter (300 seconds by default). For each additional configuration change, the timeout counter is restarted. If the timeout expires with no additional configuration changes being made, the switch generates a new checkpoint.

System generated checkpoints are named with the prefix `CPC` followed by a time stamp in the format `<YYYYMMDDHHMMSS>`. For example: `CPC20170630073127`.

System checkpoints can be applied using the checkpoint rollback feature or copy command.

A maximum of 32 system checkpoints can be created. Beyond this limit, the newest system checkpoint replaces the oldest system checkpoint.

Examples

Enabling system checkpoints:

```
switch(config)# checkpoint post-configuration
```

Disabling system checkpoints:

```
switch(config)# no checkpoint post-configuration
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

checkpoint post-configuration timeout

`checkpoint post-configuration timeout <TIMEOUT>`

`no checkpoint post-configuration timeout <TIMEOUT>`

Description

Sets the timeout for the creation of system checkpoints. The timeout specifies the amount of time since the latest configuration for the switch to create a system checkpoint.

The `no` form of this command resets the timeout to 300 seconds, regardless of the value of the `<TIMEOUT>` parameter.

Parameter	Description
<code>timeout <TIMEOUT></code>	Specifies the timeout in seconds. Range: 5 to 600. Default: 300.

Examples

Setting the timeout for system checkpoints to 60 seconds:

```
switch(config)# checkpoint post-configuration timeout 60
```

Resetting the timeout for system checkpoints to 300 seconds:

```
switch(config)# no checkpoint post-configuration timeout 1
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

checkpoint rename

checkpoint rename <OLD-CHECKPOINT-NAME> <NEW-CHECKPOINT-NAME>

Description

Renames an existing checkpoint.

Parameter	Description
<OLD-CHECKPOINT-NAME>	Specifies the name of an existing checkpoint to be renamed.
<NEW-CHECKPOINT-NAME>	Specifies the new name for the checkpoint. The checkpoint name can be alphanumeric. It can also contain underscores (_) and dashes (-). NOTE: Do not start the checkpoint name with CPC because it is used for system-generated checkpoints.

Examples

Renaming checkpoint **ckpt1** to **cfg001**:

```
switch# checkpoint rename ckpt1 cfg001
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

checkpoint rollback

checkpoint rollback {<CHECKPOINT-NAME> | startup-config}

Description

Applies the configuration from a pre-existing checkpoint or the startup configuration to the running configuration.

Parameter	Description
<CHECKPOINT-NAME>	Specifies a checkpoint name.
startup-config	Specifies the startup configuration.

Examples

Applying a checkpoint named `ckpt1` to the running configuration:

```
switch# checkpoint rollback ckpt1
Success
```

Applying a startup checkpoint to the running configuration:

```
switch# checkpoint rollback startup-config
Success
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

copy checkpoint <CHECKPOINT-NAME> <REMOTE-URL>

```
copy checkpoint <CHECKPOINT-NAME> <REMOTE-URL> [vrf <VRF-NAME>]
```

Description

Copies a checkpoint configuration to a remote location as a file. The configuration is exported in checkpoint format, which includes switch configuration and relevant metadata.

Parameter	Description
<CHECKPOINT-NAME>	Specifies the name of a checkpoint.
<REMOTE-URL>	Specifies the remote destination and filename using the syntax: TFTP format: tftp://<IP-ADDR>[:<PORT-NUM>] [;blocksize=<Value>]/<FILENAME> SFTP format: sftp://<USERNAME>@<IP-ADDR> [:<PORT-NUM>]/<FILENAME> SCP format: scp://USER@{IP HOST}[:PORT]/FILE
vrf <VRF-NAME>	Specifies a VRF name.

Examples

Copying checkpoint configuration to remote file through TFTP:

```
switch# copy checkpoint ckpt1 tftp://192.168.1.10/ckptmeta vrf default
##### 100.0%
Success
```

Copying checkpoint configuration to remote file through SFTP:

```
switch# copy checkpoint ckpt1 sftp://root@192.168.1.10/ckptmeta vrf default
The authenticity of host '192.168.1.10 (192.168.1.10)' can't be established.
ECDSA key fingerprint is SHA256:FtOm6Uxuxumil7VCwLnhz92H9LkjY+eURbdddOETy50.
Are you sure you want to continue connecting (yes/no)? yes
root@192.168.1.10's password:
sftp> put /tmp/ckptmeta ckptmeta
Uploading /tmp/ckptmeta to /root/ckptmeta
Warning: Permanently added '192.168.1.10' (ECDSA) to the list of known hosts.
Connected to 192.168.1.10.
Success
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

copy checkpoint <CHECKPOINT-NAME> {running-config | startup-config}

copy checkpoint <CHECKPOINT-NAME> {running-config | startup-config}

Description

Copies an existing checkpoint configuration to the running configuration or to the startup configuration.

Parameter	Description
<CHECKPOINT-NAME>	Specifies the name of an existing checkpoint.
{running-config startup-config}	Selects whether the running configuration or the startup configuration receives the copied checkpoint configuration. If the startup configuration is already present, the command overwrites the startup configuration.

Examples

Copying **ckpt1** checkpoint to the running configuration:

```
switch# copy checkpoint ckpt1 running-config
Success
```

Copying **ckpt1** checkpoint to the startup configuration:

```
switch# copy checkpoint ckpt1 startup-config
Success
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

copy checkpoint <CHECKPOINT-NAME> <STORAGE-URL>

copy checkpoint <CHECKPOINT-NAME> <STORAGE-URL>

Description

Copies an existing checkpoint configuration to a USB drive. The file format is defined when the checkpoint was created.

Parameter	Description
<CHECKPOINT-NAME>	Specifies the name of the checkpoint to copy. The checkpoint name can be alphanumeric. It can also contain underscores (_) and dashes (-).
<STORAGE-URL>>	Specifies the name of the target file on the USB drive using the following syntax: <code>usb: /<FILE></code> The USB drive must be formatted with the FAT file system.

Examples

Copying the `test` checkpoint to the `testCheck` file on the USB drive:

```
switch# copy checkpoint test usb:/testCheck
Success
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

copy <REMOTE-URL> checkpoint <CHECKPOINT-NAME>

copy <REMOTE-URL> checkpoint <CHECKPOINT-NAME> [vrf <VRF-NAME>]

Description

Copies a remote configuration file to a checkpoint. The remote configuration file must be in checkpoint format.

Parameter	Description
<REMOTE-URL>	Specifies a remote file using the following syntax: TFTP format: tftp://<IP-ADDR>[:<PORT-NUM>] [;blocksize=<Value>]/<FILENAME> SFTP format: sftp://<USERNAME>@<IP-ADDR> [:<PORT-NUM>]/<FILENAME> SCP format: scp://USER@{IP HOST}[:PORT]/FILE
<CHECKPOINT-NAME>	Specifies the name of the target checkpoint. The checkpoint name can be alphanumeric. It can also contain underscores (_) and dashes (-). Required. NOTE: Do not start the checkpoint name with <code>CPC</code> because it is used for system-generated checkpoints.
vrf <VRF-NAME>	Specifies a VRF name. Default: default.

Examples

Copying a checkpoint format file to checkpoint **ckpt5** on the default VRF:

```
switch# copy tftp://192.168.1.10/ckptmeta checkpoint ckpt5
##### 100.0%
100.0%
Success
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

copy <REMOTE-URL> {running-config | startup-config}

copy <REMOTE-URL> {running-config | startup-config } [vrf <VRF-NAME>]

Description

Copies a remote file containing a switch configuration to the running configuration or to the startup configuration.

Parameter	Description
<REMOTE-URL>	Specifies a remote file with the following syntax: TFTP format: tftp://<IP-ADDR>[:<PORT-NUM>] [;blocksize=<Value>]/<FILENAME> SFTP format: sftp://<USERNAME>@<IP-ADDR> [:<PORT-NUM>]/<FILENAME> SCP format: scp://USER@{IP HOST}[:PORT]/FILE
{running-config startup-config}	Selects whether the running configuration or the startup configuration receives the copied checkpoint configuration. If the startup configuration is already present, the command overwrites the startup configuration.
vrf <VRF-NAME>	Specifies the name of a VRF. Default: default.

Usage

The switch copies only certain file types. The format of the file is automatically detected from contents of the file. The `startup-config` option only supports the JSON file format and checkpoints, but the `running-config` option supports the JSON and CLI file formats and checkpoints.

When a file of the CLI format is copied, it overwrites the running configuration. The CLI command does not clear the running configuration before applying the CLI commands. All of the CLI commands in the file are applied line-by-line. If a particular CLI command fails, the switch logs the failure and it continues to the next line in the CLI configuration. The event log (`show events -d hpe-config`) provides information as to which command failed.

Examples

Copying a JSON format file to the running configuration:

```
switch# copy tftp://192.168.1.10/runjson running-config
##### 100.0%
Configuration may take several minutes to complete according to configuration file
size
--0%----10%----20%----30%----40%----50%----60%----70%----80%----90%----100%--
Success
```

Copying a CLI format file to the running configuration with an error in the file:

```
switch# copy tftp://192.168.1.10/runcli running-config
##### 100.0%
Configuration may take several minutes to complete according to configuration file
size
--0%----10%----20%----30%----40%----50%----60%----70%----80%----90%----100%--
Some of the configuration lines from the file were NOT applied. Use 'show
events -d hpe-config' for more info.
```

Copying a CLI format file to the startup configuration:

```
switch# copy tftp://192.168.1.10/startjson startup-config
##### 100.0%
100.0%
Success
```

Copying an unsupported file format to the startup configuration:

```
switch# copy tftp://192.168.1.10/startfile startup-config
##### 100.0%
100.0%
unsupported file format
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

copy running-config {startup-config | checkpoint <CHECKPOINT-NAME>}

copy running-config {startup-config | checkpoint <CHECKPOINT-NAME>}

Description

Copies the running configuration to the startup configuration or to a new checkpoint. If the startup configuration is already present, the command overwrites the existing startup configuration.

Parameter	Description
startup-config	Specifies that the startup configuration receives a copy of the running configuration.

Parameter	Description
checkpoint <CHECKPOINT-NAME>	Specifies the name of a new checkpoint to receive a copy of the running configuration. The checkpoint name can be comprised of alphanumeric character, underscores (_) and dashes (-), and must be 32 characters or fewer. NOTE: Do not start the checkpoint name with CPC because it is used for system-generated checkpoints.

Examples

Copying the running configuration to the startup configuration:

```
switch# copy running-config startup-config
Success
```

Copying the running configuration to a new checkpoint named **ckpt1**:

```
switch# copy running-config checkpoint ckpt1
Success
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

copy {running-config | startup-config} <REMOTE-URL>

copy {running-config | startup-config} <REMOTE-URL> {cli | json} [vrf <VRF-NAME>]

Description

Copies the running configuration or the startup configuration to a remote file in either CLI or JSON format.

Parameter	Description
{running-config startup-config}	Selects whether the running configuration or the startup configuration is copied to a remote file.
<REMOTE-URL>	Specifies the remote file using the syntax: TFTP format: tftp://<IP-ADDR>[:<PORT-NUM>]

Parameter	Description
	<pre>[;blocksize=<Value>] / <FILENAME></pre> SFTP format: <pre>sftp://<USERNAME>@<IP-ADDR> [:<PORT-NUM>] / <FILENAME></pre> SCP format: <pre>scp://USER@{IP HOST}[:PORT]/FILE</pre>
{cli json}	Selects the remote file format: P: CLI or JSON.
vrf <VRF-NAME>	Specifies the name of a VRF. Default: default.

Examples

Copying a running configuration to a remote file in CLI format:

```
switch# copy running-config tftp://192.168.1.10/runcli cli
##### 100.0%
Success
```

Copying a running configuration to a remote file in JSON format:

```
switch# copy running-config tftp://192.168.1.10/runjson json
##### 100.0%
Success
```

Copying a startup configuration to a remote file in CLI format:

```
switch# copy startup-config sftp://root@192.168.1.10/startcli cli
root@192.168.1.10's password:
sftp> put /tmp/startcli startcli
Uploading /tmp/startcli to /root/startcli
Connected to 192.168.1.10.
Success
```

Copying a startup configuration to a remote file in JSON format:

```
switch# copy startup-config sftp://root@192.168.1.10/startjson json
root@192.168.1.10's password:
sftp> put /tmp/startjson startjson
Uploading /tmp/startjson to /root/startjson
Connected to 192.168.1.10.
Success
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

copy {running-config | startup-config} <STORAGE-URL>

copy {running-config | startup-config} <STORAGE-URL> {cli | json}

Description

Copies the running configuration or a startup configuration to a USB drive.

Parameter	Description
{running-config startup-config}	Selects the running configuration or the startup configuration to be copied to the switch USB drive.
<STORAGE-URL>	Specifies a remote file with the following syntax: <code>usb:/<file></code>
{cli json}	Selects the format of the remote file: CLI or JSON.

Usage

The switch supports JSON and CLI file formats when copying the running or starting configuration to the USB drive. The USB drive must be formatted with the FAT file system.

The USB drive must be enabled and mounted with the following commands:

```
switch(config)# usb
switch(config)# end
switch# usb mount
```

Examples

Copying a running configuration to a file named `runCLI` on the USB drive:

```
switch# copy running-config usb:/runCLI cli
Success
```

Copying a startup configuration to a file named `startCLI` on the USB drive:

```
switch# copy startup-config usb:/startCLI cli
Success
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

copy startup-config running-config

copy startup-config running-config

Description

Copies the startup configuration to the running configuration.

Examples

```
switch# copy startup-config running-config
Success
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

copy <STORAGE-URL> running-config

copy <STORAGE-URL> {running-config | startup-config | checkpoint <CHECKPOINT-NAME>}

Description

This command copies a specified configuration from the USB drive to the running configuration, to a startup configuration, or to a checkpoint.

Parameter	Description
<STORAGE-URL>	Specifies the name of a configuration file on the USB drive with the syntax: usb: / <FILE>
running-config	Specifies that the configuration file is copied to the running configuration. The file must be in CLI, JSON, or checkpoint format or the copy will fail. the copy will not work.

Parameter	Description
<code>startup-config</code>	Specifies that the configuration file is copied to the startup configuration. The switch stores this configuration between reboots. The startup configuration is used as the operating configuration following a reboot of the switch. The file must be in JSON or checkpoint format or the copy will fail.
<code>checkpoint <CHECKPOINT-NAME></code>	Specifies the name of a new checkpoint file to receive a copy of the configuration. The configuration file on the USB drive must be in checkpoint format. NOTE: Do not start the checkpoint name with CPC because it is used for system-generated checkpoints.

Usage

This command requires that the USB drive is formatted with the FAT file system and that the file be in the appropriate format as follows:

- `running-config`: This option requires the file on the USB drive be in CLI, JSON, or checkpoint format.
- `startup-config`: This option requires the file on the USB drive be in JSON or checkpoint format.
- `checkpoint <checkpoint-name>`: This option requires the file on the USB drive be in checkpoint format.

Examples

Copying the file **runCli** from the USB drive to the running configuration:

```
switch# copy usb:/runCli running-config
Configuration may take several minutes to complete according to configuration
file size
--0%----10%----20%----30%----40%----50%----60%----70%----80%----90%----100%--
Success
```

Copying the file **startUp** from the USB drive to the startup configuration:

```
switch# copy usb:/startUp startup-config
Success
```

Copying the file **testCheck** from the USB drive to the **abc** checkpoint:

```
switch# copy usb:/testCheck checkpoint abc
Success
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

erase

```
erase
  checkpoint <checkpoint-name>
  core-dump all|daemon|dsm|kernel
  startup-config
  all
```

Description

Deletes an existing checkpoint, startup configuration, or core-dump.

Parameter	Description
<code>checkpoint <CHECKPOINT-NAME></code>	Specifies the name of a checkpoint.
<code>core-dump</code> <code>all daemon <daemon-name></code> <code> dsm kernel</code>	Erase one of the following sets of core-dump files: - all: Erase all core-dump files. - daemon <daemon-name>: Erase daemon core-dump files. - dsm: Erase cord-dump files for the Distributed-services-module. - kernel: Erase the kernel core-dump.
<code>startup-config</code>	Specifies the startup configuration.
<code>all</code>	Specifies all checkpoints.

Examples

Erasing checkpoint **ckpt1**:

```
switch# erase checkpoint ckpt1
```

Erasing the startup configuration:

```
switch# erase startup-config
```

Erasing all checkpoints:

```
switch# erase checkpoint all
```

Command History

Release	Modification
10.09.0020	The <code>dsm</code> parameter is introduced.
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

show checkpoint <CHECKPOINT-NAME>

`show checkpoint <CHECKPOINT-NAME> [json]`

Description

Shows the configuration of a checkpoint.

Parameter	Description
<CHECKPOINT-NAME>	Specifies the name of a checkpoint.
[json]	Specifies that the output is displayed in JSON format.

Examples

Showing the configuration of the `ckpt1` checkpoint in CLI format:

```
switch# show checkpoint ckpt1
Checkpoint configuration:
!
!Version AOS-CX PL.10.07.0000K-75-g55e5193
!export-password: default
lacp system-priority 65535
user admin group administrators password ciphertext
AQBapQjwipebv36io0jFfde7ZzrHckncal1D+3n8XFTZKQdmYgAAADetYOeHSme93xzdD0uz6Vr9K1+XBz
B+2GB0UBxSF7rvGN2x8KSgkqv7iqXVQ0Te6LkSMnH4BdNaT3Bf25qyvOqmr4YakO1V3rg8zAOADkPktQD8
joTHXflzwomoIzcmv/uX
cli-session
    timeout 0
!
!
!
!
ssh server vrf default
vlan 1
spanning-tree
interface lag 1
    no shutdown
    vlan access 1
interface lag 128
    no shutdown
    vlan access 1
interface lag 129
```

```

    shutdown
    vlan access 1
    lacp mode active
interface 1/1/1
    no shutdown
    lag 128
    lacp port-id 65535
interface 1/1/2
    no shutdown
    vlan access 1
interface 1/1/3
    no shutdown
    vlan access 1
interface 1/1/4
    no shutdown
    vlan access 1
interface 1/1/5
    no shutdown
    vlan access 1
interface 1/1/6
    no shutdown
    vlan access 1
interface 1/1/7
    no shutdown
    vlan access 1
interface 1/1/8
    no shutdown
    vlan access 1
interface 1/1/9
    no shutdown
    vlan access 1
interface 1/1/10
    no shutdown
    vlan access 1
interface 1/1/11
    no shutdown
    vlan access 1
interface 1/1/12
    no shutdown
    vlan access 1
interface 1/1/13
    no shutdown
    vlan access 1
interface 1/1/14
    no shutdown
    vlan access 1
interface 1/1/15
    no shutdown
    vlan access 1
interface 1/1/16
    no shutdown
    vlan access 1
interface vlan 1
    ip dhcp
snmp-server vrf default
!
!
!
!
!
https-server vrf default

```

Showing the configuration of the `ckpt1` checkpoint in JSON format:

```
switch# show checkpoint ckpt1 json
Checkpoint configuration:
{
  "AAA_Server_Group": {
    "local": {
      "group_name": "local"
    },
    "none": {
      "group_name": "none"
    }
  },
  ...
  ...
  ...
  ...
}
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

show checkpoint <CHECKPOINT-NAME> hash

show checkpoint <CHECKPOINT-NAME> hash [cli | json]

Description

Shows a configuration checkpoint hash calculated with the SHA-256 algorithm. When the output format is not specified, the CLI format is used. This enables you to determine whether there has been a configuration change since a previous hash was calculated.

Parameter	Description
<CHECKPOINT-NAME>	Specifies an existing checkpoint name.
[cli json]	Selects either the CLI or JSON format.

Examples

Showing a checkpoint SHA-256 hash in JSON format:

```
switch# show checkpoint ckpt1 hash json
Calculating the hash: [Success]

The SHA-256 hash of the checkpoint in JSON format, created in image XX.10.08.xxxx:
cc7a57a9bbb4e6600d3b4180296a35f6af9e797ce9c439955dfe5de58b06da9e
```

This hash is only valid for comparison to a baseline hash if the configuration has not been explicitly changed (such as with a CLI command, REST operation, etc.) or implicitly changed (such as by changing a hardware module, upgrading the SW version, etc.).

Command History

Release	Modification
10.08	Command introduced

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

show checkpoint post-configuration

show checkpoint post-configuration

Description

Shows the configuration settings for creating system checkpoints.

Examples

```
switch# show checkpoint post-configuration

Checkpoint Post-Configuration feature
-----

Status           : enabled
Timeout (sec)    : 300
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

show checkpoint

show checkpoint

Description

Shows a detailed list of all saved checkpoints.

Examples

Showing a detailed list of all saved checkpoints:

```
switch# show checkpoint
```

NAME	TYPE	WRITER	DATE (YYYY/MM/DD)	IMAGE VERSION
ckpt1	checkpoint	User	2017-02-23T00:10:02Z	XX.01.01.000X
ckpt2	checkpoint	User	2017-03-08T18:10:01Z	XX.01.01.000X
ckpt3	checkpoint	User	2017-03-09T23:11:02Z	XX.01.01.000X
ckpt4	checkpoint	User	2017-03-11T00:00:03Z	XX.01.01.000X
ckpt5	latest	User	2017-03-14T01:12:27Z	XX.01.01.000X

Command History

Release	Modification
10.08	Command syntax show checkpoint list all is replaced with show checkpoint.
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

show checkpoint date

```
show checkpoint date <START-DATE> <END-DATE>
```

Description

Shows detailed list of all saved checkpoints created within the specified date range.

Parameter	Description
<START-DATE>	Specifies the starting date for the range of saved checkpoints to show. Format: YYYY-MM-DD.
<END-DATE>	Specifies the ending date for the range of saved checkpoints to show. Format: YYYY-MM-DD.

Examples

Showing a detailed list of saved checkpoints for a specific date range:

```
switch# show checkpoint date 2017-03-08 2017-03-12
```

NAME	TYPE	WRITER	DATE (YYYY/MM/DD)	IMAGE VERSION
ckpt2	checkpoint	User	2017-03-08T18:10:01Z	XX.01.01.000X
ckpt3	checkpoint	User	2017-03-09T23:11:02Z	XX.01.01.000X
ckpt4	checkpoint	User	2017-03-11T00:00:03Z	XX.01.01.000X

Command History

Release	Modification
10.08	Command syntax <code>show checkpoint list date <START-DATE> <END-DATE></code> is replaced with <code>show checkpoint date <START-DATE> <END-DATE></code>
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

show running-config hash

`show running-config hash [cli | json]`

Description

Shows the running-config checkpoint hash, calculated with the SHA-256 algorithm. When the output format is not specified, the CLI format is used. This enables you to determine whether there has been a configuration change since a previous hash was calculated.

Parameter	Description
[cli json]	Selects either the CLI or JSON format.

Examples

Showing the running-config checkpoint SHA-256 hash in CLI format:

```
switch# show running-config hash cli
Calculating the hash: [Success]

SHA-256 hash of the config in CLI format:

8db4e7e10f4b7f1a6ab17ad2b4efe0e72f1849103eaf43da62aa1d715075b89e

This hash is only valid for comparison to a baseline hash if the configuration has
not been explicitly changed (such as with a CLI command, REST operation, etc.)
or implicitly changed (such as by changing a hardware module, upgrading the
SW version, etc.).
```

Command History

Release	Modification
10.08	Command introduced

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

show startup-config hash

`show startup-config hash [cli | json]`

Description

Shows the startup-config checkpoint hash, calculated with the SHA-256 algorithm. When the output format is not specified, the CLI format is used. This enables you to determine whether there has been a configuration change since a previous hash was calculated.

Parameter	Description
[cli json]	Selects either the CLI or JSON format.

Examples

Showing the startup-config checkpoint SHA-256 hash in CLI format:

```
switch# show startup-config hash cli
Calculating the hash: [Success]

SHA-256 hash of the config in CLI format:

8db4e7e10f4b7f1a6ab17ad2b4efe0e72f1849103eaf43da62aa1d715075b89e

This hash is only valid for comparison to a baseline hash if the configuration has
not been explicitly changed (such as with a CLI command, REST operation, etc.)
or implicitly changed (such as by changing a hardware module, upgrading the
SW version, etc.).
```

Command History

Release	Modification
10.08	Command introduced

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

write memory

write memory

Description

Saves the running configuration to the startup configuration. It is an alias of the command `copy running-config startup-config`. If the startup configuration is already present, this command overwrites the startup configuration.

Examples

```
switch# write memory
Success
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

Boot commands

boot set-default

`boot set-default {primary | secondary}`

Description

Sets the default operating system image to use when the system is booted.

Parameter	Description
primary	Selects the primary network operating system image.
secondary	Selects the secondary network operating system image.

Example

Selecting the primary image as the default boot image:

```
switch# boot set-default primary
Default boot image set to primary.
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

boot system

`boot system [primary | secondary | serviceos]`

Description

Reboots all modules on the switch. By default, the configured default operating system image is used. Optional parameters enable you to specify which system image to use for the reboot operation and for future reboot operations.

Parameter	Description
<code>primary</code>	Selects the primary operating system image for this reboot and sets the configured default operating system image to <code>primary</code> for future reboots.
<code>secondary</code>	Selects the secondary operating system image for this reboot and sets the configured default operating system image to <code>secondary</code> for future reboots.
<code>serviceos</code>	Selects the service operating system for this reboot. Does not change the configured default operating system image. The service operating system acts as a standalone bootloader and recovery OS for switches running the AOS-CX operating system and is used in rare cases when troubleshooting a switch.

Usage

This command reboots the entire system. If you do not select one of the optional parameters, the system reboots from the configured default boot image.

You can use the `show images` command to show information about the primary and secondary system images.

Choosing one of the optional parameters affects the setting for the default boot image:

- If you select the `primary` or `secondary` optional parameter, that image becomes the configured default boot image for future system reboots. The command fails if the switch is not able to set the operating system image to the image you selected.

You can use the `boot set-default` command to change the configured default operating system image.

- If you select `serviceos` as the optional parameter, the configured default boot image remains the same, and the system reboots all management modules with the service operating system.

If the configuration of the switch has changed since the last reboot, when you execute the `boot system` command you are prompted to save the configuration and you are prompted to confirm the reboot operation.

Saving the configuration is not required. However, if you attempt to save the configuration and there is an error during the save operation, the `boot system` command is aborted.

Examples

Rebooting the system from the configured default operating system image:

```
switch# boot system
Do you want to save the current configuration (y/n)? y
The running configuration was saved to the startup configuration.

This will reboot the entire switch and render it unavailable
until the process is complete.
Continue (y/n)? y
The system is going down for reboot.
```

Rebooting the system from the secondary operating system image, setting the secondary operating system image as the configured default boot image:

```
switch# boot system secondary
Default boot image set to secondary.

Do you want to save the current configuration (y/n)? n

This will reboot the entire switch and render it unavailable
until the process is complete.
Continue (y/n)? y
The system is going down for reboot.
```

Canceling a system reboot:

```
switch# boot system

Do you want to save the current configuration (y/n)? n

This will reboot the entire switch and render it unavailable
until the process is complete.
Continue (y/n)? n
Reboot aborted.
switch#
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

show boot-history

`show boot-history [all]`

Description

Shows boot information. When no parameters are specified, shows the most recent information about the boot operation, and the three previous boot operations for the active management module. When the `all` parameter is specified, shows the boot information for the active management module and all available line modules. To view boot-history on the standby, the command must be sent on the standby console.

Parameter	Description
<code>all</code>	Shows boot information for the active management module and all available line modules.

Usage

This command displays the boot-index, boot-ID, and up time in seconds for the current boot. If there is a previous boot, it displays boot-index, boot-ID, reboot time (based on the time zone configured in the system) and reboot reasons. Previous boot information is displayed in reverse chronological order.

Index

The position of the boot in the history file. Range: 0 to 3.

Boot ID

A unique ID for the boot . A system-generated 128-bit string.

Current Boot, up for <SECONDS> seconds

For the current boot, the `show boot-history` command shows the number of seconds the module has been running on the current software.

Timestamp boot reason

For previous boot operations, the `show boot-history` command shows the time at which the operation occurred and the reason for the boot. The reason for the boot is one of the following values:

<DAEMON-NAME> crash

The daemon identified by <DAEMON-NAME> caused the module to boot.

Kernel crash

The operating system software associated with the module caused the module to boot.

Reboot requested through database

The reboot occurred because of a request made through the CLI or other API.

Uncontrolled reboot

The reason for the reboot is not known.

Examples

Showing the boot history of the active management module:

```
switch# show boot-history
Management module
=====

Index : 3
Boot ID : f1bf071bdd04492bbf8439c6e479d612
```

```

Current Boot, up for 22 hrs 12 mins 22 secs

Index : 2
Boot ID : edfa2d6598d24e989668306c4a56a06d
07 Aug 18 16:28:01 : Reboot requested through database

Index : 1
Boot ID : 0bda8d0361df4a7e8e3acdc1dba5caad
07 Aug 18 14:08:46 : Reboot requested through database

Index : 0
Boot ID : 23da2b0e26d048d7b3f4b6721b69c110
07 Aug 18 13:00:46 : Reboot requested through database
switch#

```

Showing the boot history of the active management module and all line modules:

```

switch# show boot-history all
Management module
=====

Index : 3
Boot ID : f1bf071bdd04492bbf8439c6e479d612
Current Boot, up for 22 hrs 12 mins 22 secs

Index : 2
Boot ID : edfa2d6598d24e989668306c4a56a06d
07 Aug 18 16:28:01 : Reboot requested through database

Index : 1
Boot ID : 0bda8d0361df4a7e8e3acdc1dba5caad
07 Aug 18 14:08:46 : Reboot requested through database

Index : 0
Boot ID : 23da2b0e26d048d7b3f4b6721b69c110
07 Aug 18 13:00:46 : Reboot requested through database

Line module 1/1
=====
Index : 3
10 Aug 17 12:45:46 : dune_agent crashed
...

```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

Firmware management commands

copy {primary | secondary} <REMOTE-URL>

copy {primary | secondary} <REMOTE-URL> [vrf <VRF-NAME>]

Description

Uploads a firmware image to a TFTP or SFTP server.

Parameter	Description
{primary secondary}	Selects the primary or secondary image profile to upload. Required
<REMOTE-URL>	Specifies the URL to receive the uploaded firmware using SFTP , TFTP or SCP. TFTP format: tftp://<IP-ADDR>[:<PORT-NUM>] [;blocksize=<Value>]/<FILENAME> SFTP format: sftp://<USERNAME>@<IP-ADDR> [:<PORT-NUM>]/<FILENAME> SCP format: scp://USER@{IP HOST}[:PORT]/FILE
vrf <VRF-NAME>	Specifies a VRF name. Default: default.

Examples

TFTP upload:

```
switch# copy primary tftp://192.0.2.0/00_10_00_0002.swi
##### 100.0%
Verifying and writing system firmware...
```

SFTP upload:

```
switch# copy primary sftp://swuser@192.0.2.0/00_10_00_0002.swi
swuser@192.0.2.0's password:
Connected to 192.0.2.0.
sftp> put primary.swi XL_10_00_0002.swi
Uploading primary.swi to /users/swuser/00_10_00_0002.swi
primary.swi 100% 179MB 35.8MB/s 00:05
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

copy {primary | secondary} <FIRMWARE-FILENAME>

copy {primary | secondary} <FIRMWARE-FILENAME>

Description

Copies a firmware image to USB storage.

Parameter	Description
{primary secondary}	Selects the primary or secondary image from which to copy the firmware. Required
<FIRMWARE-FILENAME>	Specifies the name of the firmware file to create on the USB storage device. Prefix the filename with <code>usb:/</code> . For example: <code>usb:/firmware_v1.2.3.swi</code> For information on how to format the path to a firmware file on a USB drive, see USB URL.

Examples

```
switch# copy primary usb:/11.10.00.0002.swi
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

copy primary secondary

copy primary secondary

Description

Copies the firmware image from the primary to the secondary location.

Examples

```
switch# copy primary secondary
The secondary image will be deleted.

Continue (y/n)? y
Verifying and writing system firmware...
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

copy <REMOTE-URL>

copy <REMOTE-URL> {hot-patch|primary|secondary} [vrf <VRF-NAME>]

Description

Downloads a hot-patch or firmware image from a TFTP or SFTP server.

Parameter	Description
<REMOTE-URL>	Specifies the URL from which to download the firmware using SFTP or TFTP. TFTP format: tftp://<IP-ADDR>[:<PORT-NUM>] [;blocksize=<Value>]/<FILENAME> SFTP format: sftp://<USERNAME>@<IP-ADDR> [:<PORT-NUM>]/<FILENAME> SCP format: scp://USER@{IP HOST}[:PORT]/FILE
{hot-patch primary secondary}	Select a hot-patch or a primary or secondary image profile for receiving the downloaded firmware. Required. NOTE: For more information about hot-patch, see hot-patch .
vrf <VRF-NAME>	Specifies the name of a VRF. Default: default.

TFTP usage

To specify a URL with:

- an IPv4 address: tftp://192.0.2.1/a.txt
- an IPv6 address: tftp://[2000::2]/a.txt
- a hostname: tftp://hpe.com/a.txt

To specify TFTP with:

- the port number of the server in the URL: tftp://192.0.2.1:12/a.txt
- the blocksize in the URL: tftp://192.0.2.1;blocksize=1462/a.txt
The valid blocksize range is 8 to 65464.
- the port number of the server and blocksize in the URL:
tftp://192.0.2.1:12;blocksize=1462/a.txt

To specify a file in a directory of URL: `tftp://192.0.2.1/dir/a.txt`

SFTP usage

To specify:

- A URL with an IPv4 address: `sftp://user@192.0.2.1/a.txt`
- A URL with an IPv6 address: `sftp://user@[2000::2]/a.txt`
- A URL with a hostname: `sftp://user@hpe.com/a.txt`
- SFTP port number of a server in the URL: `sftp://user@192.0.2.1:12/a.txt`
- A file in a directory of URL: `sftp://user@192.0.2.1/dir/a.txt`
- To specify a file with absolute path in the URL: `sftp://user@192.0.2.1//home/user/a.txt`

SCP Usage

To specify:

- A username with an IP address: `scp://user@192.0.2.1:12/a.txt`
- A username with a remote host: `scp://user@hpe.com/a.txt`

Examples

TFTP download for a hot-patch:

```
switch# copy tftp://192.168.1.1/FL.10.12.0001-0002.patch hot-patch vrf vrf1

Fetching /users/swuser/FL.10.10.0001-0002.patch to hotpatch.dnld.uE2YT1
FL.10.12.0001-0002.patch                               100%   62KB  12.4MB/s   00:00

Verifying and writing hot-patch...
```

TFTP download for primary software image:

```
switch# copy tftp://192.10.12.0/FL_10_12_0001.swi primary
The primary image will be deleted.

Continue (y/n)? y
##### 100.0%
Verifying and writing system firmware...
```

SFTP download:

```
switch# copy sftp://swuser@192.10.12.0/FL_10_12_0001.swi primary
The primary image will be deleted.

Continue (y/n)? y
The authenticity of host '192.10.12.0 (192.10.12.0)' can't be established.
ECDSA key fingerprint is SHA256:L64khLwlyLgXlARKRMiwcAAK8oRaQ8C0oWP+PkGBXHY.
Are you sure you want to continue connecting (yes/no)? yes
Warning: Permanently added '192.10.12.0' (ECDSA) to the list of known hosts.
swuser@192.10.12.0's password:
Connected to 192.10.12.0.
Fetching /users/swuser/ss.10.00.0002.swi to ss.10.00.0002.swi.dnld
/users/swuser/ss.10.00.0002.swi                100% 179MB 25.6MB/s   00:07
Verifying and writing system firmware...
```

Command History

Release	Modification
10.12	The <code>hot-patch</code> parameter is supported on all platforms.
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

copy secondary primary

copy secondary primary

Description

Copies the firmware image from the secondary to the primary location.

Examples

```
switch# copy secondary primary
The primary image will be deleted.

Continue (y/n)? y
Verifying and writing system firmware...
```

```
switch# copy sftp://stor@192.22.1.0/im-switch.swi primary vrf mgmt
The primary image will be deleted.

Continue (y/n)? y
The authenticity of host '192.22.1.0 (192.22.1.0)' can't be established.
ECDSA key fingerprint is SHA256:MyIlxbdKnehYut0NLfL69gDpNzCmZqBVvBaRR46m7o8.
Are you sure you want to continue connecting (yes/no)? yes
Warning: Permanently added '192.22.1.0' (ECDSA) to the list of known hosts.
stor@192.22.1.0's password:
Connected to 192.22.1.0.
sftp> get c8d5b9f-topflite.swi c8d5b9f-topflite.swi.dnld
Fetching /home/dr/im-switch.swi to c8d5b9f-topflite.swi.dnld
/home/dr/im-switch.swi          100% 226MB 56.6MB/s 00:04

Verifying and writing system firmware...
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

copy <STORAGE-URL>

copy <STORAGE-URL> {hot-patch|primary|secondary}

Description

Copies, verifies, and installs a hot-patch or firmware image from a USB storage device connected to the active management module.

Parameter	Description
<STORAGE-URL>	Specifies the name of the firmware file to copy from the storage device. Required. USB format: usb:/<FILENAME>
{hot-patch primary secondary}	Select a hot-patch image or a primary or secondary profile for receiving the copied firmware. NOTE: For more information about hot-patch, see hot-patch .

USB usage

To specify a file:

- In a USB storage device: usb:/a.txt
- In a directory of a USB storage device: usb:/dir/a.txt

Examples

```
switch# copy usb:/FL.10.12.0001-0002.patch
```

```
switch# copy usb:/FL.10.12.0001.swi primary
The primary image will be deleted.

Continue (y/n)? y

Verifying and writing system firmware...
```

Command History

Release	Modification
10.12	The hot-patch parameter is supported on all platforms.
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

copy hot-patch

```
copy hot-patch <Word> {<REMOTE-URL>|<Storage-URL>} [vrf <VRF-NAME>]
```

Description

Copies a hot-patch from a switch to the specified remote URL or storage URL.

Parameter	Description
<Word>	Name of the hot-patch software to upload.
<REMOTE-URL>	Specifies the URL to receive the uploaded patch using SFTP or TFTP. For information on how to format the remote URL, see URL formatting for copy commands.
vrf <VRF-NAME>	[Optional] specify the VRF instance to use for upload.
<STORAGE-URL>	Specifies the name of the patch file to create on the USB storage device. Prefix the filename with <code>usb:/</code> , for example, <code>usb:/firmware_FL_10_12_0001-0002.patch</code> .

Examples

```
switch# copy hot-patch FL_10_12_0001-0002.patch tftp:172.21.18.170/FL_10_12_0001-0002.patch vrf vrf1
```

Related Commands

Command	Description
copy <REMOTE-URL>	Downloads a hot-patch image from a TFTP or SFTP server.
hot-patch	Apply a hot-patch image or remove it from the switch.

Command History

Release	Modification
10.12	Hot-patch is now supported on all platforms.
10.10	Command introduced

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

hot-patch

```
hot-patch apply|remove <name.patch>
no hot-patch apply <name.patch>
```

Description

Apply hot-patch software or remove it from the switch. The `no` form of the `hot-patch apply` command disables the hot-patch image, but does not remove it from the switch. Rebooting the system after disabling or removing the patch is not required.

Profile names	Description
<code>apply <name.patch></code>	Apply the specified hot-patch image to a standalone switch or VSF stack. AOS-CX hot-patch software images can be obtained from Aruba customer support, and are identified with a .patch extension.
<code>remove <name.patch></code>	Disables the hot-patch image and removes the patch from the switch. This removal will also disable the patch. Once removed, a hot-patch must be downloaded again in order to be applied.

Usage

A hot-patch can be downloaded from a remote server onto a switch then applied without rebooting the switch. When the hot-patch is disabled, the hot-patch will still remain on the system. The disabled hot-patch can be removed from the system without the need for a reboot of the system.

If a checkpoint configuration that does not contain a hot-patch is restored to a running configuration that does have a hot-patch, the patch is not deleted, it remains as not applied but is present in the device memory.

Examples

```
switch(config)# hot-patch apply FL_10_12_0001-0002.patch
```

Related Commands

Command	Description
<code>copy <REMOTE-URL></code>	Downloads and installs a hot-patch image from a TFTP or SFTP server.
<code>copy hot-patch</code>	Copies a hot-patch software image from a switch to a specified remote URL or storage URL.

Command History

Release	Modification
10.12	Hot-patch is now supported on all platforms.
10.10	Command introduced.

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

show hot-patch

show hot-patch [detail]

Parameter	Description
detail	Displays the detailed status of all hot-patches present on the system.

Description

the `show hot-patch` command displays the status of all hot-patches present on the system. The `show hot-patch detail` command displays detailed information for all hot patches present on the system.

Examples

```
switch# show hot-patch

Name                               Status
-----
FL_10_12_0001-0002.patch          Applied

switch# show hot-patch detail

Name           : FL_10_12_0001-0002.patch
Status          : Applied
Version         : FL_10_12_0001-0002.patch
Compatible Version : FL.10.12.0001
Issues Fixed    : CR1234, CR2345
Patch Date      : 2022-03-29 20:46:15 UTC
Patch ID        : ArubaOS-CX:FL.10.12.0001-sp1-256-gd457e868d39:202204142009
Patch SHA       : a40438d06a82e5fe7e30d457e868d39e8526185b
```

Related Commands

Command	Description
copy <REMOTE-URL>	Downloads a hot-patch image from a TFTP or SFTP server.
hot-patch	Apply a hot-patch image or remove it from the switch.

Command History

Release	Modification
10.12	Command supported on all platforms.
10.10	Command introduced on 6300 Switch series.

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

For information on dynamic segmentation, view the *Security Guide*.

Simple Network Management Protocol (SNMP) is an Internet-standard protocol used for managing and monitoring the devices connected to a network by collecting, organizing and modifying information about managed devices on IP networks.

Configuring SNMP

(The SNMP agent provides read-only access.)

Procedure

1. Enable SNMP on a VRF using the command `snmp-server vrf`.
2. Set the system contact, location, and description for the switch with the following commands:
 - `snmp-server system-contact`
 - `snmp-server system-location`
 - `snmp-server system-description`
3. If required, change the default SNMP port on which the agent listens for requests with the command `snmp-server agent-port`.
4. By default, the agent uses the community string **public** to protect access through SNMPv1/v2c. Set a new community string with the command `snmp-server community`.
5. Configure the trap receivers to which the SNMP agent will send trap notifications with the command `snmp-server host`.
6. Create an SNMPv3 context and associate it with any available SNMPv3 user to perform context specific v3 MIB polling using the command `snmpv3 user`.
7. Create an SNMPv3 context and associate it with an available SNMPv1/v2c community string to perform context specific v1/v2c MIB polling using the command `snmpv3 context`.
8. Review your SNMP configuration settings with the following commands:
 - `show snmp agent-port`
 - `show snmp community`
 - `show snmp system`
 - `show snmpv3 context`
 - `show snmp trap`
 - `show snmp vrf`
 - `show snmpv3 users`
 - `show tech snmp`

Example 1

This example creates the following configuration:

- Enables SNMP on the out-of-band management interface (VRF **mgmt**).
- Sets the contact, location, and description for the switch to: **JaniceM, Building2, LabSwitch**.
- Sets the community string to **Lab8899X**.

```
switch(config)# snmp-server vrf mgmt
switch(config)# snmp-server system-contact JaniceM
switch(config)# snmp-server system-location Building2
switch(config)# snmp-server system-description LabSwitch
switch(config)# snmp-server community Lab8899X
```

Example 2

This example creates the following configuration:

- Creates an SNMPv3 user named **Admin** using **sha** authentication with the plaintext password **mypassword** and using **des** security with the plaintext password **myprivpass**.
- Associates the SNMPv3 user `Admin` with a context named `newContext`.

```
switch(config)# snmpv3 user Admin auth sha auth-pass plaintext mypassword priv des
priv-pass plaintext myprivpass
switch(config)# snmpv3 user Admin context newContext
```



Refer to the SNMP Guide for SNMP Commands.

The Aruba Central network management solution, a software-as-a-service subscription in the cloud, provides streamlined management of multiple network devices. AOS-CX switches are able to talk to Aruba Central and utilize cloud-based management functionality. Cloud-based management functionality allows for the deployment of network devices at sites with no or few dedicated IT personnel (branch offices, retail stores, and so forth). AOS-CX switches utilize secure communication protocols to connect to the Aruba Central cloud portal, and can coexist with corporate security standards, such as those mandating the use of firewalls.



When Aruba Central manages AOS-CX switches, it functions as the single source of truth and the Web UI operates in read-only mode.

This feature provides:

- Zero-touch provisioning
- Network Management/Remote monitoring
- Events/alerts notification
- Switch Configuration using templates
- Firmware management

Connecting to Aruba Central

AOS-CX switch downloads the location of Aruba Central server using:

- Command-line interface (CLI).
- Aruba Activate server.
- DHCP options provided during ZTP.

DHCP servers are used to connect to Central on-premise management.

If switch is unable to connect to Activate server, it retries to establish connection in exponential back off of 1s, 2s, 8s, 16s, 32s, 64s, 128s, and 256s. After the maximum back off of 256s, switch retries happen for every 5 minutes.



If the Network Time Protocol (NTP) is not enabled on the switch, it will synchronize the system time with the Activate server.

Custom CA certificate

To use custom CA certificate to connect to Aruba Central, AOS-CX switch downloads the certificate from Aruba Activate server.



-
- If there is no custom CA provided by Aruba Activate, the CA certificate present in the device is used.
 - Duplicate CA certificates from Aruba Activate server will be ignored.
 - If CA certificate is absent in consecutive responses from Aruba Activate server, the installed custom CA certificate in device will be removed.
 - Switch will have only one custom CA certificate installed from Aruba Activate Server.
 - The certificate installed from Aruba Activate server will not be displayed in the show commands.
-

Support mode in Aruba Central

When the AOS-CX switch is managed by Aruba Central, the switch configuration cannot be modified using other interfaces such as CLI or Web UI. The following command categories are blocked:

- auto-confirm
- boot
- checkpoint
- copy-in commands
- erase
- erps
- https-server
- mfgread
- mfgwrite
- port-access
- All configuration commands except the aruba-central command

In cases where a maintenance or troubleshooting activity requires configuration updates, aruba-central support-mode can be enabled to allow these operations.



The aruba-central support-mode enable or disable operation is effective only in the CLI session where it is executed and does not impact the other CLI sessions.

If the user tries to execute any command that is not allowed, an **Invalid input:** error message is displayed.

Aruba Central commands

aruba-central

```
aruba-central
no aruba-central
```

Description

Creates or enters the Aruba Central configuration context (`config-aruba-central`).

Example

Administrators or local user group members with execution rights for this command.

Creating the Aruba Central configuration context:

```
switch(config)# aruba-central
switch(config-aruba-central)#
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
8100 8320 8325 8360 9300 10000	config	Administrators or local user group members with execution rights for this command.

aruba-central support-mode

```
aruba-central support-mode
no aruba-central support-mode
```

Description

Allows the device to be writable for all operations in Aruba Central lockout mode for troubleshooting. The no form of this command disables this activity.



Support-mode is disabled by default when the switch is managed by Aruba Central. This command is only effective in the CLI session where it is executed.

Examples

Configuring the device to be writable for all operations in Aruba Central lockout mode:

```
switch# aruba-central support-mode
switch#
```

Removing the configuration that allows the device to be writable for all operations in Aruba Central lockout mode:

```
switch# no aruba-central support-mode
switch#
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
8100 8320 8325 8360 9300 10000	Manager (#)	Administrators or local user group members with execution rights for this command.

configuration-lockout central managed

configuration-lockout central managed
no configuration-lockout central managed

Description

Configures the device to only be writable from Aruba Central. Aruba Central will be the only agent that can add, modify, or delete configurations on the device. The no form of this command disables this feature.



The no form of this command is only available when the device is disconnected from Aruba Central.

Usage

The AOS-CX switch connects to Aruba Central in either of two modes: monitor or managed. When the device is connected in monitor mode, Aruba Central monitors the configurations on the switch. When the device is connected in managed mode, the `configuration-lockout central managed` command does not allow configuration changes from other interfaces such as CLI or Web UI.

Examples

Configuring the device to only be writable from Aruba Central :

```
switch(config)# configuration-lockout central managed
switch# show configuration-lockout
configuration lockout
-----
central: managed
switch# sh aruba-central
Central admin state           :enable
Central location              :20.0.0.2:8083
VRF for connection           :default
Central connection status     :connected

Central source                :cli
Central source connection status :connected
Central source last connected on :Tue Feb 9 17:53:13 UTC 2021

Activate Server URL           :devices-v2.arubanetworks.com
CLI location                  :20.0.2:8083
CLI VRF                       :default
switch(config)# end
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
8100 8320 8325 8360 9300 10000	config	Administrators or local user group members with execution rights for this command.

disable

disable

Description

Disables connection to Aruba Central server.

When the connection is disabled, the switch does not attempt to connect to the Aruba Central server or fetch central location from any of the three sources (CLI/Aruba Activate/DHCP). It also disconnects any active connection to the Aruba Central server.

Example

```
switch(config-aruba-central) # disable
switch(config-aruba-central) #
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
8100 8320 8325 8360 9300 10000	config-aruba-central	Administrators or local user group members with execution rights for this command.

enable

enable

Description

Enables connection to Aruba Central server. When the connection is enabled, the switch attempts to download the location of the Aruba Central server in one of the following ways at startup and after the connection is lost:

- Using command-line interface (CLI).
- Connecting to Aruba Activate server.
- Using DHCP options provided during ZTP.

DHCP servers provide the options requested by the device to connect to Central, Central On-premise management, or the TFTP server.

Examples

```
switch(config-aruba-central)# enable
switch(config-aruba-central)#
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
8100 8320 8325 8360 9300 10000	config-aruba-central	Administrators or local user group members with execution rights for this command.

location-override

```
location-override <location> [vrf <VRF-NAME>]
no location-override
```

Description

When `location` and `vrf` are configured, the switch overrides existing connections to Aruba Central. The switch attempts to establish connection to Aruba Central with the specified location and VRF with highest priority.

The `no` form of this command removes location override values from the Aruba Central configuration context.

Parameter	Description
<location>	Specifies one of these values: ■ <FQDN>: a fully qualified domain name. ■ <IPv4>: an IPv4 address. ■ <IPv6>: an IPv6 address.

Parameter	Description
vrf <VRF-NAME>	Specifies the VRF name to be used for communicating with the server. If no VRF name is provided, the default VRF named default is used.

Examples

Configuring location override with location and VRF:

```
switch(config-aruba-central)# location-override aruba-central.com vrf default
switch(config-aruba-central)#
```

Configuring location override with location only:

```
switch(config-aruba-central)# location-override aruba-central.com
switch(config-aruba-central)#
```

Removing location override values from the Aruba Central configuration context:

```
switch(config-aruba-central)# no location-override
switch(config-aruba-central)#
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
8100 8320 8325 8360 9300 10000	config-aruba-central	Administrators or local user group members with execution rights for this command.

location-override-alternative

```
location-override-alternative <LOCATION> [vrf <VRF>]
no location-override-alternative <LOCATION> [vrf <VRF>]
```

Description

Configures information about Aruba Central connection when the alternative location is used.

The no form of this command removes the location-override-alternative configuration.

Parameter	Description
<LOCATION>	Specifies the Aruba-Central location.
vrf <VRF>	Specifies the VRF used to connect to Aruba-Central.

Usage

When the main and alternative Aruba Central server locations are specified, the switch attempts to connect to the main Aruba Central server. If there is connectivity failure with the main Aruba Central server location, it attempts to establish a connection with the alternative server location.

If the alternative location is configured without a main location, the user is prompted for confirmation. In this case, there is no redundancy and the switch attempts to connect to the alternative location.

An Aruba Central server location can only be a fully qualified domain name (FQDN) or a valid IP address. If the command is entered without the VRF parameter, the switch uses the default VRF.

Examples

Example of configuring with the aruba-central.com location and VRF red:

```
switch(config-aruba-central)# location-override-alternative aruba-central.com vrf
red
switch(config-aruba-central)#
```

Example of a configuration with location only:

```
switch(config-aruba-central)# location-override-alternative aruba-central.com
switch(config-aruba-central)#
```

Example of removing the override configuration:

```
switch(config-aruba-central)# no location-override-alternative
switch(config-aruba-central)#
```

Command History

Release	Modification
10.12.1000	Command introduced.

Command Information

Platforms	Command context	Authority
All platforms	config-aruba-central	Administrators or local user group members with execution rights for this command.

show aruba-central

```
show aruba-central
```

Description

Shows information about Aruba Central connection and the status of the Activate server connection.

Examples

Example of a switch that has the Aruba Central connection:

```
switch# show aruba-central
Central admin state           : enabled
Central location              : 10.0.0.1
VRF for connection            : mgmt
Shared Token                   : N/A
Central connection status     : connected
Central source                 : activate
Central source connection status : connected
Central source last connected on : Wed Jun 28 23:07:25 UTC 2023
Main location                  : 10.0.0.1
Main VRF                       : mgmt
Alternative location           : N/A
Alternative VRF                : N/A
Activate Server URL            : devices-v2.arubanetworks.com
System time synchronized from Activate : N/A
Source IP                     : N/A
Source IP Overridden           : False
Central support mode           : disabled
```

Example of a switch when the main CLI location is used:

```
switch# show aruba-central
Central admin state           : enabled
Central location              : 10.0.0.1
VRF for connection            : mgmt
Shared secret                  : N/A
Central connection status     : connected
Central source                 : cli
Central source connection status : connected
Central source last connected on : Wed Jun 28 23:07:25 UTC 2023
Main location                  : 10.0.0.1
Main VRF                       : mgmt
Alternative location           : 20.0.0.1
Alternative VRF                : default
Activate server URL            : devices-v2.arubanetworks.com
System time synchronized from Activate : N/A
Source IP                     : N/A
Source IP Overridden           : False
Central support mode           : disabled
```

Example of a switch when the alternative CLI location is used:

```
switch# show aruba-central
Central admin state           : enabled
Central location              : 20.0.0.1
VRF for connection            : default
Shared secret                  : N/A
Central connection status     : connected
Central source                 : cli
Central source connection status : connected
Central source last connected on : Wed Jun 28 23:07:25 UTC 2023
Main location                  : 10.0.0.1
Main VRF                       : mgmt
```

```
Alternative location      : 20.0.0.1
Alternative VRF           : default
Activate server URL       : devices-v2.arubanetworks.com
System time synchronized from Activate : N/A
Source IP                : N/A
Source IP Overridden     : False
Central support mode      : disabled
```

Example of a switch when the location is obtained from DHCP options:

```
switch# show aruba-central
Central admin state      : enabled
Central location         : central-western-us.arubanetworks.com
VRF for connection       : RED
Shared secret            : N/A
Central connection status : connected
Central source           : DHCP
Central source connection status : connected
Central source last connected on : Fri Jun 30 20:22:33 UTC 2023
Main location            : central-western-us.arubanetworks.com
Main VRF                 : mgmt
Alternative location     : N/A
Alternative VRF          : N/A
Activate server URL      : devices-v2.arubanetworks.com
System time synchronized from Activate : N/A
Source IP                : 100.0.0.1
Source IP Overridden     : False
Central support mode      : disabled
```

Example of a switch when Aruba Central is disabled:

```
switch# show aruba-central
Central admin state      : disabled
Central location         : N/A
VRF for connection       : N/A
Shared secret            : N/A
Central connection status : N/A
Central source           : none
Central source connection status : N/A
Central source last connected on : N/A
Main location            : N/A
Main VRF                 : N/A
Alternative location     : N/A
Alternative VRF          : N/A
Activate server URL      : devices-v2.arubanetworks.com
System time synchronized from Activate : N/A
Source IP                : N/A
Source IP Overridden     : False
Central support mode      : disabled
```

Example of a switch when Aruba Central is not reachable:

```
switch# show aruba-central
Central admin state      : enabled
Central location         : N/A
VRF for connection       : N/A
Shared secret            : N/A
```

```
Central connection status      : not-reachable
Central source                 : activate
Central source connection status : connected
Central source last connected on : Fri Jun 30 20:22:33 UTC 2023
Main location                  : N/A
Main VRF                       : N/A
Alternative location           : N/A
Alternative VRF                : N/A
Activate server URL            : devices-v2.arubanetworks.com
System time synchronized from Activate : N/A
Source IP                      : N/A
Source IP Overridden           : False
Central support mode           : disabled
```

Command History

Release	Modification
10.12.1000	Enhanced to support more scenarios
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Operator (>) or Manager (#)	Administrators or local user group members with execution rights for this command.

show running-config current-context

```
show running-config current-context
```

Description

Shows the running configuration for the current-context. If user is in the context of Aruba-Central (config-aruba-central), then Aruba Central running configuration is displayed.

Examples

Shows the running configuration of Aruba Central:

```
switch(config-aruba-central)# show running-config current-context
aruba-central
    disable
```

Command History


Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
8100 8320 8325 8360 9300 10000	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Port filtering is a feature in which packets that are ingressed through a source port can be blocked for egressing on a specific set of ports.

Figure 5 Port Filter Application

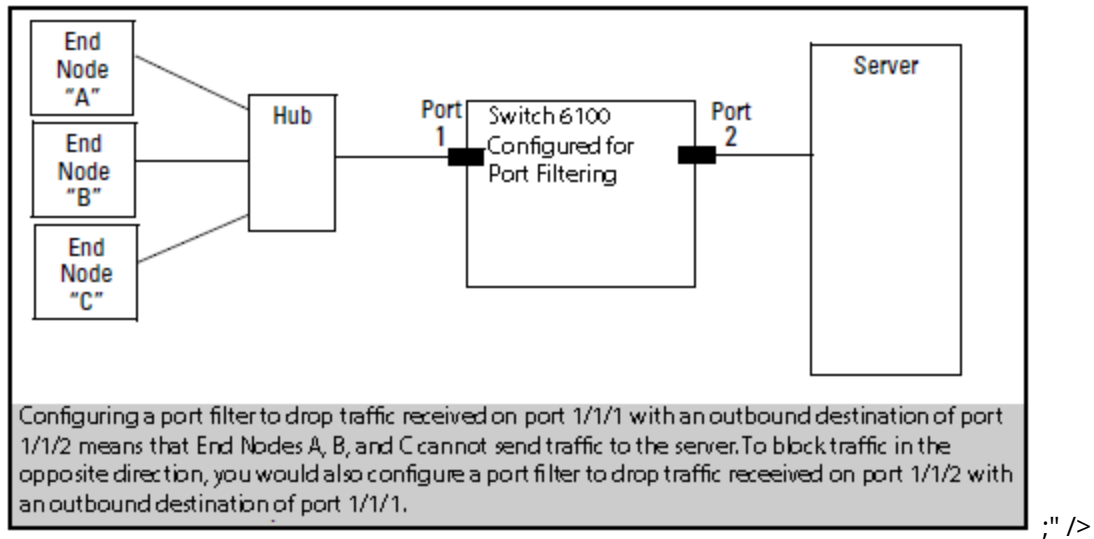

Port filtering commands

portfilter

```
portfilter <INTERFACE-LIST>  
no portfilter [<INTERFACE-LIST>]
```

Description

Configures the specified ports so they do not egress any packets that were received on the source port specified in interface context.

The `no` form of this command removes the port filter setting from one or more ingress ports/LAGs.

Parameter	Description
<INTERFACE-LIST>	Specifies a list of ports/LAGs to be blocked for egressing. Specify a single interface or LAG, or a range as a comma-separated list, or both. For example: 1/1/1, 1/1/3-1/1/6, lag2, lag1-lag4.

Usage

When a port filter configuration is applied on the same ingress physical port/LAG, the configuration is updated with the new sets of egress ports/LAGs that are to be blocked for egressing and that are not a part of its previous configuration. Duplicate updates on an existing port filter configuration are ignored.

When egress ports/LAGs are removed from the existing port filter configuration of an ingress port/LAG, egressing is allowed again on those egress ports/LAGs for all packets originating from the ingress port/LAG.

The `no portfilter [<IF-NAME-LIST>]` command removes port filter configurations from the egress ports/LAGs listed in the `<IF-NAME-LIST>` parameter only. All other egress ports/LAGs in the port filter configuration of the ingress port/LAG remain intact.

If no physical ports or LAGs are provided for the `no portfilter` command, the command removes the entire port filter configuration for the ingress port/LAG.

Examples

Creating a filter that prevents packets received on port **1/1/1** from forwarding to ports **1/1/3-1/1/6** and to LAGs **1** through **4**:

```
switch(config)# interface 1/1/1
switch(config-if)# portfilter 1/1/3-1/1/6,lag1-lag4
```

Creating a filter that prevents packets received on LAG **1** from forwarding to ports **1/1/6** and LAGs **2** and **4**:

```
switch(config)# interface lag 1
switch(config-lag-if)# portfilter 1/1/6,lag2,lag4
```

Removing filters from an existing configuration that allows back packets received on port **1/1/1** to forward to ports **1/1/6** and LAGs **3** and **4**:

```
switch(config)# interface 1/1/1
switch(config-if)# no portfilter 1/1/6,lag3,lag4
```

Removing all filters from an existing configuration that allows back packets received on LAG **1** to forward to all the ports and LAGs:

```
switch(config)# interface lag 1
switch(config-lag-if)# no portfilter
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config-if config-lag-if	Administrators or local user group members with execution rights for this command.

show portfilter

```
show portfilter [<IFNAME>] [vsx-peer]
```

Description

Displays filter settings for all interfaces or a specific interface.

Parameter	Description
<IFNAME>	Specifies the ingress interface name. Specifies one of these values: ▪ <FQDN>: a fully qualified domain name. ▪ <IPv4>: an IPv4 address. ▪ <IPv6>: an IPv6 address.
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Examples

Displaying all port filter settings on the switch:

```
switch# show portfilter
Incoming   Blocked
Interface  Outgoing Interfaces
-----
1/1/1      1/1/3-1/1/6, lag1-lag2
1/1/3      1/1/1, 1/1/5, 1/1/7, 1/1/9, 1/1/11, 1/1/13, 1/1/15, 1/1/17, 1/1/19, 1/1/21,
          1/1/23, 1/1/25, 1/1/27, 1/1/29, 1/1/31, 1/1/33, 1/1/35
lag2       1/1/1, 1/1/3-1/1/6
```

Displaying the port filter settings for port **1/1/1**:

```
switch# show portfilter 1/1/1
Incoming   Blocked
Interface  Outgoing Interfaces
-----
1/1/1      1/1/3-1/1/6, lag1-lag2
```

Displaying the port filter settings for **LAG2**:

```
switch# show portfilter lag2
Incoming   Blocked
Interface  Outgoing Interfaces
-----
lag2       1/1/1, 1/1/3-1/1/6
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

The Domain Name System (DNS) is the Internet protocol for mapping a hostname to its IP address. DNS allows users to enter more readily memorable and intuitive hostnames, rather than IP addresses, to identify devices connected to a network. It also allows a host to keep the same hostname even if it changes its IP address.

Hostname resolution can be either static or dynamic.

- In static resolution, a local table is defined on the switch that associates hostnames with their IP addresses. Static tables can be used to speed up the resolution of frequently queried hosts.
- Dynamic resolution requires that the switch query a DNS server located elsewhere on the network. Dynamic name resolution takes more time than static name resolution, but requires far less configuration and management.

DNS client

The DNS client resolves hostnames to IP addresses for protocols that are running on the switch. When the DNS client receives a request to resolve a hostname, it can do so in one of two ways:

- Forward the request to a DNS name server for resolution.
- Reply to the request without using a DNS name server, by resolving the name using a statically defined table of hostnames and their associated IP addresses.

Configuring the DNS client

Procedure

1. Configure one or more DNS name servers with the command `ip dns server`.
2. To resolve DNS requests by appending a domain name to the requests, either configure a single domain name with the command `ip dns domain-name`, or configure a list of up to six domain names with the command `ip dns domain-list`.
3. To use static name resolution for certain hosts, associate an IP address to a host with the command `ip dns host`.
4. Review your DNS configuration settings with the command `show ip dns`.

Examples

This example creates the following configuration:

- Defines the domain **switch.com** to append to all requests.
- Defines a DNS server with IPv4 address of **1.1.1.1**.
- Defines a static DNS host named **myhost1** with an IPv4 address of **3.3.3.3**.
- DNS client traffic is sent on the default VRF (named **default**).

```

switch(config)# ip dns domain-name switch.com
switch(config)# ip dns server-address 1.1.1.1
switch(config)# ip dns host myhost1 3.3.3.3
switch(config)# exit
switch# show ip dns

```

```

VRF Name : vrf_mgmt

```

Host Name	Address

```

VRF Name : vrf_default
Domain Name : switch.com
DNS Domain list :
Name Server(s) : 1.1.1.1

```

Host Name	Address

myhost1	

This example creates the following configuration:

- Defines three domains to append to DNS requests **domain1.com**, **domain2.com**, **domain3.com** with traffic forwarding on VRF **mainvrf**.
- Defines a DNS server with an IPv6 address of **c::13**.
- Defines a DNS host named **myhost** with an IPv4 address of **3.3.3.3**.

```

switch(config)# ip dns domain-list domain1.com vrf mainvrf
switch(config)# ip dns domain-list domain2.com vrf mainvrf
switch(config)# ip dns domain-list domain3.com vrf mainvrf
switch(config)# ip dns server-address c::13
switch(config)# ip dns host myhost 3.3.3.3 vrf mainvrf
switch(config)# quit
switch# show ip dns mainvrf

```

```

VRF Name : mainvrf
Domain Name :
DNS Domain list : domain1.com, domain2.com, domain3.com
Name Server(s) : c::13

```

Host Name	Address

myhost	3.3.3.3

DNS client commands

ip dns domain-list

```

ip dns domain-list <DOMAIN-NAME> [vrf <VRF-NAME>]
no ip dns domain-list <DOMAIN-NAME> [vrf <VRF-NAME>]

```

Description

Configures one or more domain names that are appended to the DNS request. The DNS client appends each name in succession until the DNS server replies. Domains can be either IPv4 or IPv6. By default, requests are forwarded on the default VRF.

The **no** form of this command removes a domain from the list.

Parameter	Description
<code>list <DOMAIN-NAME></code>	Specifies a domain name. Up to six domains can be added to the list. Length: 1 to 256 characters.
<code>vrf <VRF-NAME></code>	Specifies a VRF name. Default: default.

Examples

This example defines a list with two entries: **domain1.com** and **domain2.com**.

```
switch(config)# ip dns domain-list domain1.com
switch(config)# ip dns domain-list domain2.com
```

This example defines a list with two entries, **domain2.com** and **domain5.com**, with requests being sent on **mainvrf**.

```
switch(config)# ip dns domain-list domain2.com vrf mainvrf
switch(config)# ip dns domain-list domain5.com vrf mainvrf
```

This example removes the entry **domain1.com**.

```
switch(config)# no ip dns domain-list domain1.com
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

ip dns domain-name

```
ip dns domain-name <DOMAIN-NAME> [ vrf <VRF-NAME> ]
no ip dns domain-name <DOMAIN-NAME> [ vrf <VRF-NAME> ]
```

Description

Configures a domain name that is appended to the DNS request. The domain can be either IPv4 or IPv6. By default, requests are forwarded on the default VRF. If a domain list is defined with the command `ip dns domain-list`, the domain name defined with this command is ignored.

The **no** form of this command removes the domain name.

Parameter	Description
<DOMAIN-NAME>	Specifies the domain name to append to DNS requests. Length: 1 to 256 characters.
vrf <VRF-NAME>	Specifies a VRF name. Default: default.

Examples

Setting the default domain name to `domain.com`:

```
switch(config)# ip dns domain-name domain.com
```

Removing the default domain name `domain.com`:

```
switch(config)# no ip dns domain-name domain.com
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

ip dns host

```
ip dns host <HOST-NAME> <IP-ADDR> [ vrf <VRF-NAME> ]
no ip dns host <HOST-NAME> <IP-ADDR> [ vrf <VRF-NAME> ]
```

Description

Associates a static IP address with a hostname. The DNS client returns this IP address instead of querying a DNS server for an IP address for the hostname. Up to six hosts can be defined. If no VRF is defined, the default VRF is used.

The `no` form of this command removes a static IP address associated with a hostname.

Parameter	Description
host <HOST-NAME>	Specifies the name of a host. Length: 1 to 256 characters.
<IP-ADDR>	Specifies an IP address in IPv4 format (<code>x.x.x.x</code>), where <code>x</code> is a decimal number from 0 to 255, or IPv6 format (<code>xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx</code>), where <code>x</code> is a hexadecimal number from 0 to F.
vrf <VRF-NAME>	Specifies a VRF name. Default: default.

Examples

This example defines an IPv4 address of **3.3.3.3** for **host1**.

```
switch(config)# ip dns host host1 3.3.3.3
```

This example defines an IPv6 address of **b::5** for **host 1**.

```
switch(config)# ip dns host host1 b::5
```

This example defines removes the entry for **host 1** with address **b::5**.

```
switch(config)# no ip dns host host1 b::5
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

ip dns server address

```
ip dns server-address <IP-ADDR> [ vrf <VRF-NAME> ]  
no ip dns server-address <IP-ADDR> [ vrf <VRF-NAME> ]
```

Description

Configures the DNS name servers that the DNS client queries to resolve DNS queries. Up to six name servers can be defined. The DNS client queries the servers in the order that they are defined. If no VRF is defined, the default VRF is used.

The **no** form of this command removes a name server from the list.

Parameter	Description
<IP-ADDR>	Specifies an IP address in IPv4 format (x.x.x.x), where x is a decimal number from 0 to 255, or IPv6 format (xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx), where x is a hexadecimal number from 0 to F.
vrf <VRF-NAME>	Specifies a VRF name. Default: default.

Examples

This example defines a name server at **1.1.1.1**.

```
switch(config)# ip dns server-address 1.1.1.1
```

This example defines a name server at **a::1**.

```
switch(config)# ip dns server-address a::1
```

This example removes a name server at **a::1**.

```
switch(config)# no ip dns server-address a::1
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

show ip dns

```
show ip dns [vrf <VRF-NAME>] [vsx-peer]
```

Description

Shows all DNS client configuration settings or the settings for a specific VRF.

Parameter	Description
vrf <VRF-NAME>	Specifies the VRF for which to show information. If no VRF is defined, the default VRF is used.
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Examples

These examples define DNS settings and then show how they are displayed with the `show ip dns` command.

```
switch(config)# ip dns domain-name domain.com
switch(config)# ip dns domain-list domain5.com
switch(config)# ip dns domain-list domain8.com
switch(config)# ip dns server-address 4.4.4.4
switch(config)# ip dns server-address 6.6.6.6
```

```

switch(config)# ip dns host host3 5.5.5.5
switch(config)# ip dns host host2 2.2.2.2
switch(config)# ip dns host host3 c::12
switch(config)# ip dns domain-name reddomain.com vrf red
switch(config)# ip dns domain-list reddomain5.com vrf red
switch(config)# ip dns domain-list reddomain8.com vrf red
switch(config)# ip dns server-address 4.4.4.5 vrf red
switch(config)# ip dns server-address 6.6.6.7 vrf red
switch(config)# ip dns host host3 5.5.5.6 vrf red
switch(config)# ip dns host host2 2.2.2.3 vrf red
switch(config)# ip dns host host3 c::13 vrf red
switch# show ip dns
VRF Name : default

```

```

Domain Name : domain.com
DNS Domain list : domain5.com, domain8.com
Name Server(s) : 4.4.4.4, 6.6.6.6

```

Host Name	Address
host2	2.2.2.2
host3	5.5.5.5
host3	c::12

VRF Name : red

```

Domain Name : reddomain.com
DNS Domain list : reddomain5.com, reddomain8.com
Name Server(s) : 4.4.4.5, 6.6.6.7

```

Host Name	Address
host2	2.2.2.3
host3	5.5.5.6
host3	c::13

```

switch(config)# ip dns domain-name domain.com vrf red
switch(config)# ip dns domain-list domain5.com vrf red
switch(config)# ip dns domain-list domain8.com vrf red
switch(config)# ip dns server-address 4.4.4.4 vrf red
switch(config)# ip dns server-address 6.6.6.6 vrf red
switch(config)# ip dns host host3 5.5.5.5 vrf red
switch(config)# no ip dns host host2 2.2.2.2 vrf red
switch(config)# ip dns host host3 c::12 vrf red

```

```

switch# show ip dns vrf red
VRF Name : red

```

```

Domain Name : domain.com
DNS Domain list : domain5.com, domain8.com
Name Server(s) : 4.4.4.4, 6.6.6.6

```

Host Name	Address
host3	5.5.5.5
host3	c::12

DNS client arbitration on the MGMT interface on a MGMT VRF can be updated via three different methods.

1. Using the **domain-name** <name> or **nameservers** <servers> commands in the command-line interface.
2. Using the **ip dns domain-name** <DOMAIN-NAME> **vrf MGMT** or **ip dns server-address** <SERVER> **vrf MGMT** commands in the command-line interface.
3. Using the **ip dhcp** command in the command-line interface (dynamic enties).



AOS-CX gives the following priority levels to the these three update mothods.

- Priority 1 - standalone CLI configuration
- Priority 2 - static ip dns configuration
- Priority 3 - Dynamic config

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

The switch provides support for LLDP and CDP to enable automatic discovery and configuration of other devices on the network.

LLDP

The IEEE 802.1AB Link Layer Discovery Protocol (LLDP) provides a standards-based method for network devices to discover each other and exchange information about their capabilities. An LLDP device advertises itself to adjacent (neighbor) devices by transmitting LLDP data packets on all interfaces on which outbound LLDP is enabled, and reading LLDP advertisements from neighbor devices on ports on which inbound LLDP is enabled. Inbound packets from neighbor devices are stored in a special LLDP MIB (management information base). This information can then be queried by other devices through SNMP.

LLDP information is used by network management tools to create accurate physical network topologies by determining which devices are neighbors and through which interfaces they connect. LLDP operates at layer 2 and requires an LLDP agent to be active on each interface that sends and receives LLDP advertisements. LLDP advertisements can contain a variable number of TLV (type, length, value) information elements. Each TLV describes a single attribute of a device such as: system capabilities, management IP address, device ID, port ID.

Packet boundaries

When multiple LLDP devices are directly connected, an outbound LLDP packet travels only to the next LLDP device. An LLDP-capable device does not forward LLDP packets to any other devices, regardless of whether they are LLDP-enabled.

An intervening hub or repeater forwards the LLDP packets it receives in the same manner as any other multicast packets it receives. Therefore, two LLDP switches joined by a hub or repeater handle LLDP traffic in the same way that they would if directly connected.

Any intervening 802.1D device or Layer-3 device that is either LLDP-unaware or has disabled LLDP operation drops the packet.

LLDP-MED

LLDP-MED (ANSI/TIA-1057/D6) extends the LLDP (IEEE 802.1AB) industry standard to support advanced features on the network edge for Voice Over IP (VoIP) endpoint devices with specialized capabilities and LLDP-MED standards-based functionality. LLDP-MED in the switches uses the standard LLDP commands described earlier in this section, with some extensions, and also introduces new commands unique to LLDP-MED operation. The show commands described elsewhere in this section are applicable to both LLDP and LLDP-MED operation. LLDP-MED enables:

- Configure Voice VLAN and advertise it to connected MED endpoint devices.
- Power over Ethernet (PoE) status and troubleshooting support via SNMP.

LLDP agent

When you enable LLDP on the switch, it is automatically enabled on all data plane interfaces. You can customize this behavior by manually enabling/disabling support on each interface.

Supported standards

The LLDP agent supports the following standards: IEEE 802.1AB-2005, Station, and Media Access Control Connectivity Discovery.

Supported interfaces

LLDP is supported on interfaces mapped to a physical port, and the Out-Of-Band Management (OOBM) port. It is not supported on logical interfaces, such as loopback, tunnels, and SVIs.

Operating modes

When LLDP is enabled, the switch periodically transmits an LLDP advertisement (packet) out each active port enabled for outbound LLDP transmissions and receives LLDP advertisements on each active port enabled to receive LLDP traffic.

The LLDP agent can operate in one of the following modes:

- **Transmit and receive (TxRx):** This is the default setting on all ports. It enables a given port to both transmit and receive LLDP packets and to store the data from received (inbound) LLDP packets in the switch's MIB.
- **Transmit only (Tx):** Enables a port to transmit LLDP packets that can be read by LLDP neighbors. However, the port drops inbound LLDP packets from LLDP neighbors without reading them. This prevents the switch from learning about LLDP neighbors on that port.
- **Receive only (Rx):** Enables a port to receive and read LLDP packets from LLDP neighbors and to store the packet data in the switch's MIB. However, the port does not transmit outbound LLDP packets. This prevents LLDP neighbors from learning about the switch through that port.
- **Disabled:** Disables LLDP packet transmissions and reception on a port. In this state, the switch does not use the port for either learning about LLDP neighbors or informing LLDP neighbors of its presence.

An LLDP agent operating in TxRx mode or Tx mode sends LLDP frames to its directly connected devices both periodically and when the local configuration changes.

Sending LLDP frames

Each time the LLDP operating mode of an LLDP agent changes, its LLDP protocol state machine reinitializes. A configurable reinitialization delay prevents frequent initializations caused by frequent changes to the operating mode. If you configure the reinitialization delay, an LLDP agent must wait the specified amount of time to initialize LLDP after the LLDP operating mode changes.

Receiving LLDP frames

An LLDP agent operating in TxRx mode or Rx mode confirms the validity of TLVs carried in every received LLDP frame. If the TLVs are valid, the LLDP agent saves the information and starts an aging timer. The initial value of the aging timer is equal to the TTL value in the Time To Live TLV carried in the LLDP frame. When the LLDP agent receives a new LLDP frame, the aging timer restarts. When the aging timer decreases to zero, all saved information ages out.

TLV support

By default, the agent sends and receives the following mandatory TLVs on each interface:

- Port ID
- Chassis ID
- TTL

By default, the following ANSI/TIA-1057 TLVs for LLDP Media Endpoint Discovery (MED) are enabled on an agent. Sending them depends on the configuration and reception of any MED TLVs:

- MAC/PHY status. Includes the bit rate and auto negotiation status of the link.
- Power Via MDI: Includes Power Over Ethernet related information for supported interfaces.
- Port description
- System name
- System description
- Management address
- System capabilities
- Port VLAN ID

By default, the agent sends and receives the following ANSI/TIA-1057 TLVs for LLDP Media Endpoint Discovery (MED):

- Capabilities: Indicates MED TLV capability.
- Power Via MDI: Includes Power Over Ethernet related information.
- Network Policy: Includes the VLAN configuration for voice application.
- Location: Location identification information.
- Extended Power Via MDI: Power Over Ethernet related information

TLV advertisements

The LLDP agent transmits the following:

- Chassis-ID: Base MAC address of the switch.
- Port-ID: Port number of the physical port.
- Time-to-Live (TTL): Length of time an LLDP neighbor retains advertised data before discarding it.
- System capabilities: Identifies the primary switch capabilities (bridge, router). Identifies the primary switch functions that are enabled, such as routing.
- System description: Includes switch model name and running software version, and ROM version.
- System name: Name assigned to the switch.
- Management address: Default address selection method unless an optional address is configured.
- Port description: Physical port identifier.
- Port VLAN ID: On an L2 port, contains access or native VLAN ID. On an L3 port, contains a value of 0. Trunk allowed VLANs information are not advertised as part of the Port VLAN ID TLV. (Not supported on the OOBM interface)
- Port VLAN Name: Access or native VLAN name. Enabled by default.
- Port MFS: Maximum Frame Size. Enabled by default.

LLDP MED support

LLDP-MED interoperates with directly connected IP telephony (endpoint) clients and provides the following features:

- Advertisement of the voice VLAN configured on the interface which is used by connected IP telephony (endpoint) clients.
- Advertisement of the configured location on the switch that can be used by the connected endpoint.
- Support for the fast-start capability



LLDP-MED is intended for use with VoIP endpoints and is not designed to support links between network infrastructure devices (such as switch-to-switch or switch-to-router links).

LLDP EEE

Energy Efficient Ethernet (EEE) is a mechanism defined by IEEE 802.3az, which is an extension of 802.3 IEEE standards. EEE defines support for the device to operate in the Low Power Idle (LPI) mode during low link utilization. This allows both sides of a link to disable or turn off respective transmit/receive circuitry to save power. EEE uses LLDP for exchanging optimal set of parameters for both devices.

Guidelines

- An LLDP must not contain more than one EEE TLV.
- LLDP may or may not be enabled on the interfaces supporting EEE. If LLDP is not enabled, it might not be in the optimal operational mode.
- EEE TLV should not be exchanged until it negotiates from L1 and it detects peer EEE capabilities.
- EEE TLV is disabled by default and enabled only when EEE is active.
- EEE and EEE TLV exchange can be enabled or disabled at the interface level.

Configuring the LLDP agent

Procedure

1. By default, the LLDP agent is enabled on all active interfaces. If LLDP was disabled, enable it with the command `lldp`.
2. By default, the LLDP agent transmits and receive on all interfaces. To customize LLDP behavior on a specific interface, use the commands `lldp transmit` and `lldp receive`.
3. By default, the LLDP agent sets the management address in all TLVs in the following order:
 - a. LLDP management IP address.
 - b. Loopback interface IP.
 - c. ROP (L3 ports) or SVI (L2 ports).
 - d. OOBM (Management interface IP).
 - e. Base MAC.

On the OOBM port, the following order is used:

- a. LLDP management IP address,
- b. IP address of the management interface (OOBM port).
- c. IP address of the loopback interface.
- d. Base MAC address of the switch.

To specify a different address, use the commands `lldp management-ipv4-address` and `lldp management-ipv6-address`

4. By default, all supported TLVs are sent and received. To customize the list, use the command `lldp select-tlv`.

5. By default, support for the LLDP-MED TLV is enabled. To customize settings, use the commands `lldp med` and `lldp med-location`.
6. If required, adjust LLDP timer, holdtime, reinitialization delay, and transmit delay from their default values with the commands `lldp timer`, `lldp holdtime`, `lldp reinit`, and `lldp txdelay`.

Example

This example creates the following configuration:

- Enables LLDP support.
- Disables LLDP transmission on interface **1/1/1**.

```
switch(config)# lldp
switch(config)# interface 1/1/1
switch(config-copp)# no lldp transmit
```

LLDP commands

clear lldp neighbors

```
clear lldp neighbors
```

Description

Clears all LLDP neighbor details.

Examples

Clearing all LLDP neighbor details:

```
switch# clear lldp neighbors
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

clear lldp statistics

```
clear lldp statistics
```

Description

Clears all LLDP neighbor statistics.

Examples

Clearing all LLDP neighbor statistics:

```
switch# clear lldp statistics
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

lldp

```
lldp  
no lldp
```

Description

Enables LLDP support globally on all active interfaces. By default, LLDP is enabled.

The `no` form of this command disables LLDP support globally on all active interfaces. It does not remove any LLDP configuration settings.

Examples

Enabling LLDP:

```
switch(config)# lldp
```

Disabling LLDP:

```
switch(config)# no lldp
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

lldp dot3

```
lldp dot3 {poe | macphy}
no lldp dot3 {poe | macphy}
```

Description

Sets the 802.3 TLVs to be advertised. By default, advertisement of both POE and MAC/PHY TLVs is enabled. Not supported on the OOBM interface.

The `no` form of this command disables advertisement of 802.3 TLVs.

Parameter	Description
poe	Specifies advertisement of power over Ethernet data link classification.
macphy	Specifies advertisement of media access control and physical layer information.

Examples

Enabling advertisement of the POE TLV:

```
switch(config-if)# lldp dot3 poe
```

Disabling advertisement of the POE TLV:

```
switch(config-if)# no lldp dot3 poe
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config-if	Administrators or local user group members with execution rights for this command.

lldp dot3 mfs

```
lldp dot3 mfs
no lldp dot3 mfs
```

Description

Enables the 802.3 TLV list in LLDP to advertise for maximum frame size (MFS). Enabled by default.

The `no` form of this command disables the advertisement of maximum frame size TLVs.

Examples

Enabling advertisement of maximum frame size TLVs:

```
switch(config)# interface 1/1/1
switch(config-if)# lldp dot3 mfs
```

Disabling advertisement of maximum frame size TLVs:

```
switch(config)# interface 1/1/1
switch(config-if)# no lldp dot3 mfs
```

Command History

Release	Modification
10.11	Command introduced

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

lldp holdtime-multiplier

```
lldp holdtime-multiplier <multiplier>
no lldp holdtime-multiplier
```

Description

Sets the holdtime TTL multiplier value that is used to calculate the LLDP Time-to-Live value. Time-to-Live defines the length of time that neighbors consider LLDP information sent by this agent as valid. When Time-to-Live expires, the information is deleted by the neighbor. Time-to-live is calculated by multiplying holdtime by the value of `lldp timer`.

The `no` form of this command sets the holdtime TTL multiplier to its default value of 4.

Parameter	Description
<code><multiplier></code>	Specifies the TTL multiplier in the range of 2 to 10. Default: 4.

Formula

$TTL = Holdtime-multiplier \times lldp\ timer$

where:

TTL = Time-to-Live

Holdtime-multiplier = Multiplying holdtime value

lldp timer = Message transmission interval

Examples

Setting the holdtime to 8 times of the value of lldp timer:

```
switch(config)# lldp holdtime-multiplier 8
```

Setting the holdtime to the default value of 4 times of the value of lldp timer:

```
switch(config)# no lldp holdtime-multiplier
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

lldp management-address vlan

```
lldp management-address vlan <VLAN-ID>  
no lldp management-address vlan <VLAN-ID>
```

Description

Sets the VLAN whose IPv4 or IPv6 address is advertised as the LLDP management authority.

The `no` form of this command removes the VLAN whose IPv4 or IPv6 address is advertised as the LLDP management authority.

The following is the precedence for the management IP address TLV in the LLDP packet (in order):

- LLDP management-IPv4-address and management-ipv6-address, if configured.
- LLDP management VLAN's Ipv4 and IPv6 address, if configured.
- Loopback IP address from the smallest configured loopback interface identifier.
- Route-only-port IP address (Layer-3 interface) or IP address of the SVI (Layer-2 interface).
- OOBM IP address.
- Base MAC address of the switch.

Parameter	Description
<VLAN-ID>	Specifies the VLAN ID.

Examples

Setting the management authority for VLAN 10:

```
switch(config)# lldp management-address vlan 10
```

Removing the management authority for VLAN 10:

```
switch(config)# no lldp management-address vlan 10
```

Command History

Release	Modification
10.12	Command introduced.

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

lldp management-ipv4-address

```
lldp management-ipv4-address <IPv4-ADDR>  
no lldp management-ipv4-address
```

Description

Defines the IPv4 management address of the switch which is sent in the management address TLV. One IPv4 and one IPv6 management address can be configured.

If you do not define an LLDP management address, then LLDP uses one of the following (in order):

- IP address of the port
- IP address of the management interface
- Base MAC address of the switch

The `no` form of this command removes the IPv4 management address of the switch.

Parameter	Description
<IPv4-ADDR>	Specifies the management address of the switch as an IPv4 format (x.x.x.x), where x is a decimal value from 0 to 255.

Examples

Setting the management address to **10.10.10.2**:

```
switch(config)# lldp management-ipv4-address 10.10.10.2
```

Removing the management address:

```
switch(config)# no lldp management-ipv4-address
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

lldp management-ipv6-address

```
lldp management-ipv6-address <IPv6-ADDR>
no lldp management-ipv6-address
```

Description

Defines the IPv6 management address of the switch. The management address is encapsulated in the management address TLV.

If you do not define an LLDP management address, then LLDP uses one of the following (in order):

- IP address of the port
- IP address of the management interface
- Base MAC address of the switch

The `no` form of this command removes the IPv6 management address of the switch.

Parameter	Description
<IPv6-ADDR>	Specifies an IP address in IPv6 format (xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx), where x is a hexadecimal number from 0 to F.

Examples

Setting the management address to 2001:db8:85a3::8a2e:370:7334:

```
switch(config)# lldp management-ipv6-address 2001:0db8:85a3::8a2e:0370:7334
```

Removing the management address:

```
switch(config)# no lldp management-ipv6-address
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

lldp med

```
lldp med [poe [priority-override] | capability | network-policy]
no med [poe [priority-override] | capability | network-policy]
```

Description

Configures support for the LLDP-MED TLV. LLDP-MED (media endpoint devices) is an extension to LLDP developed by TIA to support interoperability between VoIP endpoint devices and other networking end-devices. The switch only sends the LLDP MED TLV after receiving a MED TLV from and connected endpoint device.

Not supported on the OOBM interface.

The `no` form of this command disables support for the LLDP MED TLV.

Parameter	Description
<code>poe [priority-override]</code>	Specifies advertisement of power over Ethernet data link classification. The <code>priority-override</code> option overrides user-configured port priority for Power over Ethernet. When both <code>lldp dot3 poe</code> and <code>lldp med poe</code> are enabled, the <code>lldp dot3 poe3</code> setting takes precedence. Default: enabled.
<code>capability</code>	Specifies advertisement of supported LLDP MED TLVs. The capability TLV is always sent with other MED TLVs, therefore it cannot be disabled when other MED TLVs are enabled. Default: enabled.
<code>network-policy</code>	Network policy discovery lets endpoints and network devices advertise their VLAN IDs, and IEEE 802.1p (PCP and DSCP) values for voice applications. This TLV is only sent when a voice VLAN policy is present. Default: enabled.

Examples

Enabling advertisement of the network policy TLV:

```
switch(config-if)# lldp med network-policy
```

Disabling advertisement of the network policy TLV:

```
switch(config-if)# no lldp med network-policy
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config-if	Administrators or local user group members with execution rights for this command.

lldp med-location

```
lldp med-location {civic-addr elin-addr }
no med-location {civic-addr elin-addr }
```

Description

Configures support for the LLDP-MED TLV. Supports only civic address and emergency location information number (ELIN). Coordinate-based location is not supported.

The `no` form of this command disables support for the LLDP MED TLV.

Parameter	Description
civic-addr	Configures the LLDP MED civic location TLV.
elin-addr	Configures support for the LLDP MED emergency location TLV.

The following LLDP-MED TLV values are supported. For details on these value types, refer to [RFC 4776](#)

- 1: national subdivisions (state, canton, region, province, prefecture)
- 2: county, parish, gun (JP), district (IN)
- 3: city, township, shi (JP)
- 4: city division, borough, city district, ward, chou (JP)
- 5: neighborhood, block
- 6: group of streets below the neighborhood level
- 16: leading street direction N
- 17: trailing street suffix SW
- 18: street suffix or type
- 19: house number
- 20: house number suffix
- 21: landmark or vanity
- 22: location
- 23: name
- 24: postal/zip code
- 25: building (structure)
- 26: unit (apartment, suite)
- 27: floor
- 28: room
- 29: type of place
- 30: postal community name
- 31: post office box
- 32: additional code 13203000003
- 33: seat (desk, cubicle workstation)

- 34: primary road name 35 road section
- 36: branch road name
- 37: sub-branch road name
- 38: street name pre-modifier
- 39: street name post-modifier

Examples

Enabling support for the LLDP MED emergency location TLV:

```
switch(config-if)# lldp med-location elin-addr gher
```

Disabling support for the LLDP MED emergency location TLV:

```
switch(config-if)# no lldp med-location elin-addr gher
```

Enabling support for the LLDP MED civic address TLV:

```
switch(config-if)# lldp med-location civic-addr US 1 4 ret 6 tyu 7 tiyuo
```

Disabling support for the LLDP MED civic address TLV:

```
switch(config-if)# no lldp med-location civic-addr US 1 4 ret 6 tyu 7 tiyuo
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config-if	Administrators or local user group members with execution rights for this command.

lldp receive

```
lldp receive
no lldp receive
```

Description

Enables reception of LLDP information on an interface. By default, LLDP reception is enabled on all active interfaces, including the OOBM interface.

The `no` form of this command disables reception of LLDP information on an interface.

Examples

Enabling LLDP reception on interface **1/1/1**:

```
switch(config)# interface 1/1/1
switch(config-if)# lldp receive
```

Disabling LLDP reception on interface **1/1/1**:

```
switch(config)# interface 1/1/1
switch(config-if)# no lldp receive
```

Enabling LLDP reception on the OOBM interface:

```
switch(config)# interface mgmt
switch(config-if)# lldp receive
```

Disabling LLDP reception on the OOBM interface:

```
switch(config)# interface mgmt
switch(config-if)# no lldp receive
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config-if	Administrators or local user group members with execution rights for this command.

lldp reinit

```
lldp reinit <TIME>
no lldp reinit
```

Description

Sets the amount of time (in seconds) to wait before performing LLDP initialization on an interface. The **no** form of this command sets the reinitialization time to its default value of 2 seconds.

Parameter	Description
<TIME>	Specifies the reinitialization time in seconds. Range: 1 to 10. Default: 2 seconds.

Examples

Setting the reinitialization time to 5 seconds:

```
switch(config)# lldp reinit 5
```

Setting the reinitialization time to the default value of 2 seconds:

```
switch(config)# no lldp reinit
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

lldp select-tlv

```
lldp select-tlv <TLV-NAME>  
no lldp select-tlv <TLV-NAME>
```

Description

Selects a TLV that the LLDP agent will send and receive. By default, all supported TLVs are sent and received.

The `no` form of this command stops the LLDP agent from sending and receiving a specific TLV.

LLDP supports Organization Unique Identifiers (OUI) with the following Organization-specific TLVs:



- IEEE 802.1 (DOT1) (oui:0x00, 0x80, 0xc2)
- IEEE 802.3 (DOT3) (oui:0x00, 0x12, 0x0f)
- Aruba, a Hewlett Packard Enterprise Company (oui:0x88, 0x3a, 0x30)

Parameter	Description
<code>select-tlv <TLV-NAME></code>	Specifies the TLV name to send. The following TLV names are supported: ■ <code>management-address</code>: Selection is based on priority in the following list (for example if first TLV name isn't selected, the next will be, progressing through this list until a selection is made): 1. IPv4 or IPV6 management address. 2. IP address of the lowest configured loopback interface. 3. If layer 3, then the route-only port IP address. If

Parameter	Description
	layer 2, the IP address of the SVI. 4. OOBM interface IP address. 5. Base MAC address of the switch. ▪ <code>port-description</code>: Select port-description TLV. ▪ <code>port-vlan-id</code>: Select port-vlan-id TLV. ▪ <code>port-vlan-name</code>: Select port-vlan-name TLV. ▪ <code>system-capabilities</code>: Select system-capabilities TLV. ▪ <code>system-description</code>: Select system-description TLV. ▪ <code>system-name</code>: Select system-name TLV.

Examples

Stopping the LLDP agent from sending the **port-description** TLV:

```
switch(config)# no lldp select-tlv port-description
```

Enabling the LLDP agent to send the **port-description** TLV:

```
switch(config)# lldp select-tlv oui
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	<code>config</code>	Administrators or local user group members with execution rights for this command.

lldp timer

```
lldp timer <TIME>
no lldp timer
```

Description

Sets the interval (in seconds) at which local LLDP information is updated and TLVs are sent to neighboring network devices by the LLDP agent. The minimum setting for this timer must be four times the value of `lldp txdelay`.

For example, this is a valid configuration:

- `lldp timer = 16`
- `lldp txdelay = 4`

And, this is an invalid configuration:

- `lldp timer = 5`
- `lldp txdelay = 2`

When copying a saved configuration to the running configuration, the value for `lldp timer` is applied before the value of `lldp txdelay`. This can result in a configuration error if the saved configuration has a value of `lldp timer` that is not four times the value of `lldp txdelay` in the running configuration.

For example, if the saved configuration has the settings:

- `lldp timer = 16`
- `lldp txdelay = 4`

And the running configuration has the settings:

- `lldp timer = 30`
- `lldp txdelay = 7`

Then you will see an error indicating that certain configuration settings could not be applied, and you will have to manually adjust the value of `lldp txdelay` in the running configuration.

The `no` form of this command sets the update interval to its default value of 30 seconds.

Parameter	Description
<code><TIME></code>	Specifies the update interval (in seconds). Range: 5 to 32768. Default: 30.

Examples

Setting the update interval to 7 seconds:

```
switch(config)# lldp timer 7
```

Setting the update interval to the default value of 30 seconds:

```
switch(config)# no lldp timer
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	<code>config</code>	Administrators or local user group members with execution rights for this command.

lldp transmit

```
lldp transmit
no lldp transmit
```

Description

Enables transmission of LLDP information on specific interface. By default, LLDP transmission is enabled on all active interfaces, including the OOBM interface.

The `no` form of this command disables transmission of LLDP information on an interface.

Examples

Enabling LLDP transmission on interface **1/1/1**:

```
switch(config)# interface 1/1/1
switch(config-if)# lldp transmit
```

Disabling LLDP transmission on interface **1/1/1**:

```
switch(config)# interface 1/1/1
switch(config-if)# no lldp transmit
```

Enabling LLDP transmission on the OOBM interface:

```
switch(config)# interface mgmt
switch(config-if)# lldp transmit
```

Disabling LLDP transmission on the OOBM interface:

```
switch(config)# interface mgmt
switch(config-if)# no lldp transmit
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config-if	Administrators or local user group members with execution rights for this command.

lldp txdelay

```
lldp txdelay <TIME>
no lldp txdelay
```

Description

Sets the amount of time (in seconds) to wait before sending LLDP information from any interface. The maximum value for `txdelay` is 25% of the value of `lldp tx timer`.

The `no` form of this command sets the delay time to its default value of 2 seconds.

Parameter	Description
<code><TIME></code>	Specifies the delay time in seconds. Range: 0 to 10. Default: 2.

Examples

Setting the delay time to 8 seconds:

```
switch(config)# lldp txdelay 8
```

Setting the delay time to the default value of 2 seconds:

```
switch(config)# no lldp txdelay
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	<code>config</code>	Administrators or local user group members with execution rights for this command.

lldp trap enable

```
lldp trap enable  
no lldp trap enable
```

Description

Enables sending SNMP traps for LLDP related events from a particular interface. LLDP trap generation is enabled by default on all the interfaces and has to be disabled for interfaces on which traps are not required to be generated.

The `no` form of this command disables the LLDP trap generation.



LLDP trap generation is disabled by default at the global level and must be enabled before any LLDP traps are sent.

Examples

Enabling LLDP trap generation on global level:

```
switch(config)# lldp trap enable
```

Enabling LLDP trap generation on interface level:

```
switch(config-if)# lldp trap enable
```

Disabling LLDP trap generation on global level:

```
switch(config)# no lldp trap enable
```

Disabling LLDP trap generation on interface level:

```
switch(config-if)# no lldp trap enable
```

Displaying LLDP global configuration:

```
switch# show lldp configuration
```

LLDP Global Configuration

=====

```
LLDP Enabled           : No
LLDP Transmit Interval : 30
LLDP Hold Time Multiplier : 4
LLDP Transmit Delay Interval : 2
LLDP Reinit Timer Interval : 2
LLDP Trap Enabled      : No
```

TLVs Advertised

=====

```
Management Address
Port Description
Port VLAN-ID
System Description
System Name
```

LLDP Port Configuration

=====

PORT	TX-ENABLED	RX-ENABLED	INTF-TRAP-ENABLED
1/1/1	Yes	Yes	Yes
1/1/2	Yes	Yes	Yes
1/1/3	Yes	Yes	Yes
1/1/4	Yes	Yes	Yes
1/1/5	Yes	Yes	Yes
1/1/6	Yes	Yes	Yes
.....			
.....			
mgmt	Yes	Yes	Yes

Displaying LLDP Configuration for the interface:

```
switch# show lldp configuration 1/1/1
```

LLDP Global Configuration

```
=====
LLDP Enabled           : Yes
LLDP Transmit Interval : 30
LLDP Hold Time Multiplier : 4
LLDP Transmit Delay Interval : 2
LLDP Reinit Timer Interval : 2
LLDP Trap Enabled      : No
```

LLDP Port Configuration

```
=====
PORT          TX-ENABLED    RX-ENABLED    INTF-TRAP-ENABLED
-----
1/1/1         Yes           Yes           Yes
```

Displaying LLDP Configuration for the management interface:

```
switch# show lldp configuration mgmt
```

LLDP Global Configuration

```
=====
LLDP Enabled           : Yes
LLDP Transmit Interval : 30
LLDP Hold Time Multiplier : 4
LLDP Transmit Delay Interval : 2
LLDP Reinit Timer Interval : 2
LLDP Trap Enabled      : Yes
```

LLDP Port Configuration

```
=====
PORT          TX-ENABLED    RX-ENABLED    INTF-TRAP-ENABLED
-----
mgmt          Yes           Yes           Yes
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config and config-if	Administrators or local user group members with execution rights for this command.

show lldp configuration

```
show lldp configuration [<INTERFACE-ID>][vsx-peer]
```

Description

Shows LLDP configuration settings for all interfaces or a specific interface.

Parameter	Description
<INTERFACE-ID>	Specifies an interface. Format: member/slot/port.
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Example

Showing configuration settings for all interfaces:

```
switch# show lldp configuration

LLDP Global Configuration
=====
LLDP Enabled                : No
LLDP Transmit Interval     : 30
LLDP Hold Time Multiplier  : 4
LLDP Transmit Delay Interval : 2
LLDP Reinit Timer Interval : 2
LLDP Trap Enabled          : No

TLVs Advertised
=====
Management Address
Port Description
Port VLAN-ID
System Description
System Name

LLDP Port Configuration
=====
PORT          TX-ENABLED      RX-ENABLED      INTF-TRAP-ENABLED
-----
1/1/1         Yes             Yes             Yes
1/1/2         Yes             Yes             Yes
1/1/3         Yes             Yes             Yes
1/1/4         Yes             Yes             Yes
1/1/5         Yes             Yes             Yes
1/1/6         Yes             Yes             Yes
.....
.....
mgmt          Yes             Yes             Yes
```

This example shows configuration settings for interface **1/1/1**.

```
switch# show lldp configuration 1/1/1

LLDP Global Configuration
=====
LLDP Enabled                : Yes
LLDP Transmit Interval     : 30
LLDP Hold Time Multiplier  : 4
LLDP Transmit Delay Interval : 2
LLDP Reinit Timer Interval : 2
LLDP Trap Enabled          : No
```

LLDP Port Configuration

PORT	TX-ENABLED	RX-ENABLED	INTF-TRAP-ENABLED
1/1/1	Yes	Yes	Yes

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show lldp configuration mgmt

show lldp configuration mgmt

Description

Shows LLDP configuration settings for the OOBM interface.

Example

Showing configuration settings for all interfaces:

```
switch# show lldp configuration mgmt
```

LLDP Global Configuration

```
=====
LLDP Enabled           : Yes
LLDP Transmit Interval : 30
LLDP Hold Time Multiplier : 4
LLDP Transmit Delay Interval : 2
LLDP Reinit Timer Interval : 2
LLDP Trap Enabled      : Yes
```

LLDP Port Configuration

PORT	TX-ENABLED	RX-ENABLED	INTF-TRAP-ENABLED
mgmt	Yes	Yes	Yes

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
8100 8320 8325 8360 9300 10000	Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show lldp local-device

```
show lldp local-device[vsx-peer]
```

Description

Shows global LLDP information advertised by the switch, as well as port-based data. If VLANs are configured on any active interfaces, the VLAN ID is only shown for trunk native or untagged VLAN IDs on access interfaces.

Parameter	Description
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Example

Showing global LLDP information only (all ports including OOBM port are administratively down):

```
switch# show lldp local-device

Global Data
=====

Chassis-ID           : 1c:98:ec:e3:45:00
System Name          : switch
System Description    : Aruba JL375A 8400X XL.01.01.0001
Management Address   : 192.168.10.1
Capabilities Available : Bridge, Router
Capabilities Enabled  : Bridge, Router
TTL                   : 120
```

Showing all ports except **1/1/11** and OOBM as administratively down:

```
switch# show lldp local-device

Global Data
=====
```

```

Chassis-ID          : 1c:98:ec:e3:45:00
System Name         : switch
System Description   : Aruba
Management Address   : 192.168.10.1
Capabilities Available : Bridge, Router
Capabilities Enabled  : Bridge, Router
TTL                  : 120

```

Port Based Data
=====

```

Port-ID             : 1/1/11
Port-Desc            : "1/1/11"
Port Mgmt-Address    : 164.254.21.220
Port VLAN ID         : 1

```

```

Port-ID             : mgmt
Port-Desc            : "mgmt"
Port Mgmt-Address    : 164.254.21.220

```

In this example, all the ports except **1/1/11** are administratively down, and VLAN ID 100 is configured on this access interface.

```
switch# show lldp local-device
```

Global Data
=====

```

Chassis-ID          : 1c:98:ec:e3:45:00
System Name         : switch
System Description   : Aruba
Management Address   : 192.168.10.1
Capabilities Available : Bridge, Router
Capabilities Enabled  : Bridge, Router
TTL                  : 120

```

Port Based Data
=====

```

Port-ID             : 1/1/11
Port-Desc            : "1/1/11"
Port VLAN ID         : 100
Parent Interface     : interface 1/1/11

```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show lldp neighbor-info

show lldp neighbor-info [<INTERFACE-NAME>] [vsx-peer]

Description

Displays information about neighboring devices for all interfaces or for a specific interface. The information displayed varies depending on the type of neighbor connected and the type of TLVs sent by the neighbor.

Parameter	Description
<INTERFACE-NAME>	Specifies the interface for which to show information for neighboring devices. Use the format member/slot/port (for example, 1/3/1).
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Examples

Showing LLDP information for all interfaces:

```
switch# show lldp neighbor-info
```

```
LLDP Neighbor Information
```

```
=====
```

```
Total Neighbor Entries      : 3
Total Neighbor Entries Deleted : 0
Total Neighbor Entries Dropped : 0
Total Neighbor Entries Aged-Out : 0
```

LOCAL-PORT	CHASSIS-ID	PORT-ID	PORT-DESC	TTL	SYS-NAME
1/1/1	70:72:cf:a4:7d:50	1/1/1	1/1/1	32	switch
1/1/2	48:0f:cf:af:73:80	1/1/2	1/1/2	120	switch
1/1/46	48:0f:cf:af:73:80	1/1/46	1/1/46	120	switch
mgmt	48:0f:cf:af:73:80	mgmt	mgmt	120	switch

Showing information for interface **1/3/1** when it has only one switch connected as a neighbor:

```
switch# show lldp neighbor-info 1/3/1
```

```
Port : 1/1/1
Neighbor Entries : 1
Neighbor Entries Deleted : 0
Neighbor Entries Dropped : 0
Neighbor Entries Aged-Out : 0
Neighbor Chassis-Name : HP-3800-24G-PoEP-2XG
Neighbor Chassis-Description : HP J9587A 3800-24G-PoE+-2XG Switch, revision...
Neighbor Chassis-ID : 10:60:4b:39:3e:80
Neighbor Management-Address : 192.168.1.1
Chassis Capabilities Available : Bridge, Router
Chassis Capabilities Enabled : Bridge
Neighbor Port-ID : 1/1/1
Neighbor Port-Desc : 1/1/1
```



```
Neighbor Port VLAN ID      : 1
Neighbor Port VLAN Name    : DEFAULT_VLAN_1
Neighbor Port MFS          : 1500
TTL                        : 120
```

Showing information for interface **1/3/10** when the neighbor sends a DOT3 power TLV:

```
switch# show lldp neighbor-info 1/3/10
Port                        : 1/3/10
Neighbor Entries            : 1
Neighbor Entries Deleted    : 0
Neighbor Entries Dropped    : 0
Neighbor Entries Aged-Out   : 0
Neighbor Chassis-Name       : 84:d4:7e:ce:5d:68
Neighbor Chassis-Description : ArubaOS (MODEL: 325), Version Aruba IAP
Neighbor Chassis-ID         : 84:d4:7e:ce:5d:68
Neighbor Management-Address : 169.254.41.250
Chassis Capabilities Available : Bridge, WLAN
Chassis Capabilities Enabled  : WLAN
Neighbor Port-ID            : 84:d4:7e:ce:5d:68
Neighbor Port-Desc          : eth0
TTL                         : 120
Neighbor Port VLAN ID      : 1
Neighbor Port VLAN Name    : DEFAULT_VLAN_1
Neighbor Port MFS          : 1500
Neighbor PoE information    : DOT3
Neighbor Power Type         : TYPE2 PD
Neighbor Power Priority      : Unkown
Neighbor Power Source       : Primary
PD Requested Power Value    : 25.0 W
PSE Allocated Power Value: 25.0 W
Neighbor Power Supported    : Yes
Neighbor Power Enabled      : Yes
Neighbor Power Class        : 5
Neighbor Power Paircontrol   : No
PSE Power Pairs             : Signal
```

Showing information for interface **1/1/1** when it has multiple neighbors (displays a maximum of four):

```
switch# show lldp neighbor-info 1/1/1
Port                        : 1/1/1
Neighbor Entries            : 4
Neighbor Entries Deleted    : 0
Neighbor Entries Dropped    : 0
Neighbor Entries Aged-Out   : 0
Neighbor Chassis-Name       : switch
Neighbor Chassis-Description : Aruba JL375A 8400X XL.01.01.0001
Neighbor Chassis-ID         : 1c:98:ec:fe:25:00
Neighbor Management-Address : 10.1.1.2
Chassis Capabilities Available : Bridge, Router
Chassis Capabilities Enabled  : Bridge, Router
Neighbor Port-ID            : 1/1/1
Neighbor Port-Desc          : 1/1/1
Neighbor Port VLAN ID      : 1
Neighbor Port VLAN Name    : DEFAULT_VLAN_1
Neighbor Port MFS          : 1500
TTL                         : 120
Neighbor Chassis-Name       : switch
```

```

Neighbor Chassis-Description : Aruba JL375A 8400X XL.01.01.0001
Neighbor Chassis-ID         : 1c:98:ec:fe:25:01
Neighbor Management-Address : 10.1.1.3
Chassis Capabilities Available : Bridge, Router
Chassis Capabilities Enabled  : Bridge, Router
Neighbor Port-ID             : 1/1/1
Neighbor Port-Desc           : 1/1/1
Neighbor Port VLAN ID        : 1
Neighbor Port VLAN Name      : DEFAULT_VLAN_1
Neighbor Port MFS            : 1500
TTL                           : 120
Neighbor Chassis-Name        : switch
Neighbor Chassis-Description : Aruba JL375A 8400X XL.01.01.0001
Neighbor Chassis-ID         : 1c:98:ec:fe:25:02
Neighbor Management-Address : 10.1.1.4
Chassis Capabilities Available : Bridge, Router
Chassis Capabilities Enabled  : Bridge, Router
Neighbor Port-ID             : 1/1/1
Neighbor Port-Desc           : 1/1/1
Neighbor Port VLAN ID        : 50
Neighbor Port VLAN Name      : VLAN_50
Neighbor Port MFS            : 1500
TTL                           : 120
Neighbor Chassis-Name        : switch
Neighbor Chassis-Description : Aruba JL375A 8400X XL.01.01.0001
Neighbor Chassis-ID         : 1c:98:ec:fe:25:03
Neighbor Management-Address : 10.1.1.5
Chassis Capabilities Available : Bridge, Router
Chassis Capabilities Enabled  : Bridge, Router
Neighbor Port-ID             : 1/1/1
Neighbor Port-Desc           : 1/1/1
Neighbor Port VLAN ID        : 100
Neighbor Port VLAN Name      : VLAN_100
Neighbor Port MFS            : 1500
TTL                           : 120

```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show lldp neighbor-info detail

show lldp neighbor-info detail [vsx-peer]

Description

Shows detailed LLDP neighbor information for all LLDP neighbor connected interfaces.

Parameter	Description
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Examples

Showing detailed LLDP information for all interfaces:

```
switch# show lldp neighbor-info detail
```

```
LLDP Neighbor Information
=====
```

```
Total Neighbor Entries      : 6
Total Neighbor Entries Deleted : 2
Total Neighbor Entries Dropped : 0
Total Neighbor Entries Aged-Out : 2
```

```
-----

Port                : 1/1/1
Neighbor Entries    : 1
Neighbor Entries Deleted : 0
Neighbor Entries Dropped : 0
Neighbor Entries Aged-Out : 0
Neighbor Chassis-Name : 6300
Neighbor Chassis-Description : Aruba ...
Neighbor Chassis-ID : 38:11:17:1a:d5:00
Neighbor Management-Address : 38:11:17:1a:d5:00
Chassis Capabilities Available : Bridge, Router
Chassis Capabilities Enabled : Bridge, Router
Neighbor Port-ID : 1/1/4
Neighbor Port-Desc : 1/1/4
Neighbor Port VLAN ID : 1
Neighbor Port VLAN Name : DEFAULT_VLAN_1
Neighbor Port MFS : 1500
TTL : 120

Neighbor Mac-Phy details
Neighbor Auto-neg Supported : true
Neighbor Auto-Neg Enabled : true
Neighbor Auto-Neg Advertised : 1000 BASE_TFD, 100 BASE_T4, 10 BASE_TFD
Neighbor MAU type : 1000 BASE_TFD
```

```
-----

Port                : 1/1/2
Neighbor Entries    : 1
Neighbor Entries Deleted : 0
Neighbor Entries Dropped : 0
Neighbor Entries Aged-Out : 0
Neighbor Chassis-Name : 6300
Neighbor Chassis-Description : Aruba ...
Neighbor Chassis-ID : 38:11:17:1a:d5:00
Neighbor Management-Address : 38:11:17:1a:d5:00
Chassis Capabilities Available : Bridge, Router
Chassis Capabilities Enabled : Bridge, Router
Neighbor Port-ID : 1/1/5
Neighbor Port-Desc : 1/1/5
```

```

Neighbor Port VLAN ID      : 1
Neighbor Port VLAN Name    : DEFAULT_VLAN_1
Neighbor Port MFS          : 1500
TTL                        : 120

Neighbor Mac-Phy details
Neighbor Auto-neg Supported : true
Neighbor Auto-Neg Enabled   : true
Neighbor Auto-Neg Advertised : 1000 BASE_TFD, 100 BASE_T4, 10 BASET_FD
Neighbor MAU type           : 1000 BASETFD

```

```

-----
Port                        : 1/1/3
Neighbor Entries           : 1
Neighbor Entries Deleted   : 0
Neighbor Entries Dropped   : 0
Neighbor Entries Aged-Out  : 0
Neighbor Chassis-Name      : 6300
Neighbor Chassis-Description : Aruba ...
Neighbor Chassis-ID        : 38:11:17:1a:d5:00
Neighbor Management-Address : 38:11:17:1a:d5:00
Chassis Capabilities Available : Bridge, Router
Chassis Capabilities Enabled : Bridge, Router
Neighbor Port-ID           : 1/1/6
Neighbor Port-Desc         : 1/1/6
Neighbor Port VLAN ID      : 1
Neighbor Port VLAN Name    : DEFAULT_VLAN_1
Neighbor Port MFS          : 1500
TTL                        : 120

```

```

Neighbor Mac-Phy details
Neighbor Auto-neg Supported : true
Neighbor Auto-Neg Enabled   : true
Neighbor Auto-Neg Advertised : 1000 BASE_TFD, 100 BASE_T4, 10 BASET_FD
Neighbor MAU type           : 1000 BASETFD

```

```

-----
Port                        : 1/1/46
Neighbor Entries           : 1
Neighbor Entries Deleted   : 0
Neighbor Entries Dropped   : 0
Neighbor Entries Aged-Out  : 0
Neighbor Chassis-Name      : 6300
Neighbor Chassis-Description : Aruba ...
Neighbor Chassis-ID        : 38:11:17:1a:d5:00
Neighbor Management-Address : 38:11:17:1a:d5:00
Chassis Capabilities Available : Bridge, Router
Chassis Capabilities Enabled : Bridge, Router
Neighbor Port-ID           : 1/1/19
Neighbor Port-Desc         : 1/1/19
Neighbor Port VLAN ID      : 1
Neighbor Port VLAN Name    : DEFAULT_VLAN_1
Neighbor Port MFS          : 1500
TTL                        : 120

```

```

Neighbor Mac-Phy details
Neighbor Auto-neg Supported : true
Neighbor Auto-Neg Enabled   : true
Neighbor Auto-Neg Advertised : 1000 BASE_TFD, 100 BASE_T4, 10 BASET_FD
Neighbor MAU type           : 1000 BASETFD

```

```

-----
Port                               : 1/1/47
Neighbor Entries                   : 1
Neighbor Entries Deleted           : 0
Neighbor Entries Dropped           : 0
Neighbor Entries Aged-Out          : 0
Neighbor Chassis-Name              : 6300
Neighbor Chassis-Description       : Aruba ...
Neighbor Chassis-ID                : 38:11:17:1a:d5:00
Neighbor Management-Address        : 38:11:17:1a:d5:00
Chassis Cap

```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show lldp neighbor-info mgmt

show lldp neighbor-info mgmt

Description

Displays information about neighboring devices connected to the OOBM interface.

Examples

Showing LLDP information for the OOBM interface:

```

switch# show lldp neighbor-info mgmt

Port                               : mgmt
Neighbor Entries                   : 1
Neighbor Entries Deleted           : 0
Neighbor Entries Dropped           : 0
Neighbor Entries Aged-Out          : 0
Neighbor Chassis-Name              : HP-3800-24G-PoEP-2XG
Neighbor Chassis-Description       : HP J9587A 3800-24G-PoE+-2XG Switch, revision...
Neighbor Chassis-ID                : 10:60:4b:39:3e:80
Neighbor Management-Address        : 192.168.1.1
Chassis Capabilities Available     : Bridge, Router
Chassis Capabilities Enabled       : Bridge
Neighbor Port-ID                   : mgmt
Neighbor Port-Desc                  : mgmt
TTL                                : 120

```

Showing LLDP information for the OOBM interface when there are four neighbors:

```

switch# show lldp neighbor-info mgmt

Port : mgmt
Neighbor Entries : 4
Neighbor Entries Deleted : 0
Neighbor Entries Dropped : 0
Neighbor Entries Aged-Out : 0
Neighbor Chassis-Name : switch
Neighbor Chassis-Description : Aruba JL375A 8400X XL.01.01.0001
Neighbor Chassis-ID : 1c:98:ec:fe:25:00
Neighbor Management-Address : 10.1.1.2
Chassis Capabilities Available : Bridge, Router
Chassis Capabilities Enabled : Bridge, Router
Neighbor Port-ID : 1/1/1
Neighbor Port-Desc : 1/1/1
TTL : 120

Neighbor Chassis-Name : switch
Neighbor Chassis-Description : Aruba JL375A 8400X XL.01.01.0001
Neighbor Chassis-ID : 1c:98:ec:fe:25:01
Neighbor Management-Address : 10.1.1.3
Chassis Capabilities Available : Bridge, Router
Chassis Capabilities Enabled : Bridge, Router
Neighbor Port-ID : 1/1/1
Neighbor Port-Desc : 1/1/1
TTL : 120

Neighbor Chassis-Name : switch
Neighbor Chassis-Description : Aruba JL375A 8400X XL.01.01.0001
Neighbor Chassis-ID : 1c:98:ec:fe:25:02
Neighbor Management-Address : 10.1.1.4
Chassis Capabilities Available : Bridge, Router
Chassis Capabilities Enabled : Bridge, Router
Neighbor Port-ID : 1/1/1
Neighbor Port-Desc : 1/1/1
TTL : 120

Neighbor Chassis-Name : switch
Neighbor Chassis-Description : Aruba JL375A 8400X XL.01.01.0001
Neighbor Chassis-ID : 1c:98:ec:fe:25:03
Neighbor Management-Address : 10.1.1.5
Chassis Capabilities Available : Bridge, Router
Chassis Capabilities Enabled : Bridge, Router
Neighbor Port-ID : 1/1/1
Neighbor Port-Desc : 1/1/1
TTL : 120

```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
8100 8320 8325 8360 9300 10000	Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show lldp statistics

show lldp statistics [<INTERFACE-ID>] [vsx-peer]

Description

Shows global LLDP statistics or statistics for a specific interface.

Parameter	Description
<INTERFACE-ID>	Specifies an interface. Format: member/slot/port.
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Example

Showing global statistics for all interfaces:

```
switch# show lldp statistics
```

```
LLDP Global Statistics
```

```
=====
```

```
Total Packets Transmitted      : 19
Total Packets Received         : 19
Total Packets Received And Discarded : 0
Total TLVs Unrecognized       : 0
```

```
LLDP Port Statistics
```

```
=====
```

PORT-ID	TX-PACKETS	RX-PACKETS	RX-DISCARDED	TLVS-UNKNOWN
1/1/1	7	7	0	0
1/1/2	7	7	0	0
1/1/3	0	0	0	0
1/1/4	0	0	0	0
1/1/5	0	0	0	0
...				
mgmt	5	5	0	0
...				

Showing statistics for interface **1/1/1**:

```
switch# show lldp statistics 1/1/1

LLDP Statistics
=====

Port Name                : 1/1/1
Packets Transmitted      : 159
Packets Received         : 163
Packets Received And Discarded : 0
Packets Received And Unrecognized : 0
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show lldp statistics mgmt

show lldp statistics mgmt

Description

Shows LLDP statistics for the OOBM interface.

Example

Showing LLDP statistics for the OOBM interface:

```
switch# show lldp statistics mgmt

LLDP Statistics
=====

Port Name                : mgmt
Packets Transmitted      : 20
Packets Received         : 23
Packets Received And Discarded : 0
Packets Received And Unrecognized : 0
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
8100 8320 8325 8360 9300 10000	Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show lldp tlv

show lldp tlv[vsx-peer]

Description

Shows the LLDP TLVs that are configured for send and receive.

Parameter	Description
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Example

```
switch# show lldp tlv

TLVs Advertised
=====

Management Address
Port Description
Port VLAN-ID
System Capabilities
System Description
System Name
VLAN Name
MFS
OUI
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Cisco Discovery Protocol (CDP)

Cisco Discovery Protocol (CDP) is a proprietary layer 2 protocol supported by most Cisco devices. It is used to exchange information, such as software version, device capabilities, and voice VLAN information, between directly connected devices, such as a VoIP phone and a switch.

CDP support

By default, CDP is enabled on each active switch port. This is a read-only capability, which means the switch can receive and store information about adjacent CDP devices, but does not generate CDP packets (except when communicating with Cisco IP phones.)

The switch supports CDPv2 only and does not support SNMP MIB traps.

When a CDP-enabled port receives a CDP packet from another CDP device, it enters data for that device into the CDP Neighbors table, along with the port number on which the data was received. It does not forward the packet. The switch also periodically purges the table of any entries that have expired. (The holdtime for any data entry in the switch CDP Neighbors table is configured in the device transmitting the CDP packet and cannot be controlled in the switch receiving the packet.) A switch reviews the list of CDP neighbor entries every three seconds and purges any expired entries.

Support for legacy Cisco IP phones

Autoconfiguration of legacy Cisco IP phones for tagged voice VLAN support requires CDPv2.

On initial boot-up, and sometimes periodically, a Cisco phone queries the switch and advertises information about itself using CDPv2. When the switch receives the VoIP VLAN Query TLV (type 0x0f) from the phone, the switch immediately responds with the voice VLAN ID in a reply packet using the VoIP VLAN Reply TLV (type 0x0e). This enables the Cisco phone to boot properly and send traffic on the advertised voice VLAN ID.

The switch CDP packet includes these TLVs:

- CDP Version: 2
- CDP TTL: 180 seconds
- Checksum
- Capabilities (type 0x04): 0x0008 (is a switch)
- Native VLAN: The PVID of the port
- VoIP VLAN Reply (type 0xe): voice VLAN ID (same as advertised by LLDP-MED)
- Trust Bitmap (type 0x12): 0x00
- Untrusted port CoS (type 0x13): 0x00

CDP commands

cdp

cdp

Description

Configures CDP support globally on all active interfaces or on a specific interface. By default, CDP is enabled on all active interfaces.

When CDP is enabled, the switch adds entries to its CDP Neighbors table for any CDP packets it receives from neighboring CDP devices.

When CDP is disabled, the CDP Neighbors table is cleared and the switch drops all inbound CDP packets without entering the data in the CDP Neighbors table.

The `no` form of this command disables CDP support globally on all active interfaces or on a specific interface.

Examples

Enabling CDP globally:

```
switch(config)# cdp
```

Disabling CDP globally:

```
switch(config)# no cdp
```

Enabling CDP on interface **1/1/1**:

```
switch(config)# interface 1/1/1  
switch(config-if)# cdp
```

Disabling CDP on interface **1/1/1**:

```
switch(config)# interface 1/1/1  
switch(config-if)# no cdp
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config config-if	Administrators or local user group members with execution rights for this command.

clear cdp counters

```
clear cdp counters
```

Description

Clears CDP counters.

Examples

Clearing CDP counters:

```
switch(config) clear cdp counters
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

clear cdp neighbor-info

clear cdp neighbor-info

Description

Clears CDP neighbor information.

Examples

Clearing CDP neighbor information:

```
switch(config) clear neighbor-info
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

show cdp

show cdp

Description

Shows CDP information for all interfaces.

Examples

Showing CDP information:

```
switch(config)# show cdp
CDP Global Information
=====
CDP                : Enabled
```

```
CDP Mode      : Rx only
CDP Hold Time : 180 seconds
```

Port	CDP
1/1/1	Enabled
1/1/2	Enabled
1/1/3	Enabled
1/1/4	Enabled
1/1/5	Enabled
1/1/6	Enabled
1/1/7	Enabled
1/1/8	Enabled
1/1/9	Enabled
1/1/10	Enabled

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

show cdp neighbor-info

```
show cdp neighbor-info <INTERFACE-ID>
```

Description

Shows CDP information for all neighbors or for CDP information on a specific interface.

Parameter	Description
<INTERFACE-ID>	Specifies an interface. Format: member/slot/port.

Examples

Showing all CDP neighbor information:

```
switch(config)# show cdp neighbor-info
Port      Device ID      Platform      Capability
-----
1/1/1     myswitch       cisco WS-C2950-12  SI
```

Showing CDP information for interface **1/1/1**:

```
switch(config)# show cdp neighbor-info 1/1/1
Local Port : 1/1/1
```

```
MAC           : 3c:a8:2a:7b:6b:2b
Device ID     : SEPd4adbd2a30d6
Address       : 2.71.0.230
Platform      : Cisco IP Phone 3905
Duplex        : full
Capability     : host
Voice VLAN Support : Yes
Neighbor Port-ID : Port 1
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

show cdp traffic

show cdp neighbor-info

Description

Shows CDP statistics for each interface.

Examples

Showing CDP traffic statistics:

```
switch(config)# show cdp traffic
CDP Statistics
=====
Port          Transmitted Frames    Received Frames    Discarded Frames
-----
1/1/1         0                     4                 0
1/1/2         0                     0                 0
1/1/3         0                     2                 0
1/1/4         0                     0                 0
1/1/5         0                     0                 0
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	<code>config</code>	Administrators or local user group members with execution rights for this command.

Zero Touch Provisioning (ZTP) enables the auto-configuration of factory default switches without a network administrator onsite.

When a switch is booted from its factory default configuration, ZTP autoprovisions the switch by automatically downloading and installing a firmware file, a configuration file, or both. With ZTP, even a nontechnical user (for example: a store manager in a retail chain or a teacher in a school) can deploy devices at a site.

ZTP support

The switch supports standards-based Zero Touch Provisioning (ZTP) operations as follows:

- The switch must be running the factory default configuration.
- The switch can connect to the DHCP server from the OOBM management port.
- ZTP operations are supported over IPv4 connections only. IPv6 connections are not supported for ZTP operations.
- You must configure the DHCP server to provide a standards-based ZTP server solution. Options and features that are specific to Network Management Solution (NMS) tools, such as AirWave, are not supported.
 - Aruba Central on-premise can manage AOS-CX switches on supported models through DHCP ZTP using two approaches:
 - On the DHCP server, configure DHCP option-60 as "ArubaInstantAP" 90 and provide the value in option-43 in the format `<group-details>, <aruba-central-on-prem-ip-or-fqdn>, <shared-token>`.
 - On the DHCP server, configure DHCP option-60 as HPE vendor VCI and provide the value in option-43 in the tag-length-value (TLV) format. Next, enter the Aruba Central on-premise fully qualified domain name (FQDN) or IPv4 address as the value for sub-option code 146 using the format: `<group-details>, <aruba-central-on-prem-ip-or-fqdn>, <shared-token>`.
 - Supported DHCP options are:

DHCP option	Description
43	Vendor Specific Information
43 suboption 144	Name of the configuration file
43 suboption 145	Name of the firmware image file
43 suboption 146	FQDN or IPv4 address of the Aruba Central on-premise server
43 suboption 148	FQDN or IPv4 address of the HTTP Proxy
60	Vendor Class Identifier (VCI)

DHCP option	Description
66	IPv4 address of the TFTP server (Specifying a host name instead of an IP address is not supported.)
67	Name of the configuration file (Option 43 suboption 144 takes precedence over this option.)

- The configuration file is a text file or JSON file that becomes the startup and running configuration on the switch after the ZTP operation is complete. The configuration can be in CLI or in JSON format.
- When the switch is started using the factory default configuration, the ZTP operation is started automatically and is active until any running configuration of the switch is modified. There is no CLI command required to start the operation.

The switch supports the following standards:

- [RFC 2131](#), *Dynamic Host Configuration Protocol*.
- [RFC 2132](#), *DHCP Options and BOOTP Vendor Extensions*. Support is limited to the options listed in the table "Supported DHCP options for ZTP on AOS-CX."

Hewlett Packard Enterprise recommends that you implement ZTP in a secure and private environment. Any public access can compromise the security of the switch, as follows:

- ZTP is enabled only in the factory default configuration of the switch, DHCP snooping is not enabled. The Rogue DHCP server must be manually managed.
- The DHCP offer is in plain data without encryption.

Setting up ZTP on a trusted network

The following procedure is an overview of setting up a Zero Touch Provisioning (ZTP) environment to provision newly installed switches automatically. The procedure is intended for network administrators who are familiar with automatically provisioning switches in a network, and does not provide detailed information about configuring or managing switches.

Procedure

1. For each switch model to be provisioned using ZTP, do the following:
 - a. Obtain the switch firmware image file.
 - b. Prepare the switch configuration file. The configuration file becomes the running configuration and the startup configuration on the switch.
2. Set up a TFTP server and record its IP address. The address is required when you set up the DHCP server. The switch must be able to reach the TFTP server and DHCP server, either on the same subnet, or on a remote subnet via DHCP relay.

For switches that do not support ZTP connections through a data port, use the management port and management network.

3. Publish the configuration files and image files to the TFTP server. You need to know the locations of the files and the IP address of the TFTP server when you set up the vendor class options on the DHCP server.
4. On the DHCP server, set up vendor classes for each switch model you plan to provision. To do this you need the following information:

- The IP address of the TFTP server. Using a host name is not supported.
- The path to the switch configuration and firmware image files on the TFTP server.
- The vendor class identifier (VCI) for each switch model.

You can obtain the VCI by entering the `show dhcp client vendor-class-identifier` command from a switch CLI command prompt in the manager context. The VCI is the text string in the response that starts with `Aruba`.

For example:

```
switch# show dhcp client vendor-class-identifier
Vendor Class Identifier:  Aruba xxxxx xxxxx
```

Where x indicates the switch model number.

5. At the installation site, provide the switch installer with a Cat6 network cable connected to the network that includes the DHCP and TFTP servers, and information about the switch port to use. The switch installer plugs the cable into the data port you specify.

The ZTP operation begins when power is applied to the switch after the network cable is installed.

6. Assuming the downloaded configuration includes a way to access the CLI of the switch, you can enter the following command to show the options offered by the DHCP server and the status of the ZTP operation:

```
show ztp information
```

ZTP process during switch boot

1. The switch boots up with the factory default configuration.

If the ZTP operation detects that the switch configuration is different from the factory default configuration, the ZTP operation ends. The switch must be configured at the installation site.

2. The switch sends out a DHCP discovery from the management port.

The switch waits to receive DHCP options indefinitely or until the running configuration is modified. If a DHCP IP address is received but no DHCP options are received, the switch waits an additional minute before ending the ZTP operation.

After the ZTP operation ends, there is no automatic retry. You can either attempt to boot the switch with the factory default configuration again, configure the switch at the installation site, or use the ZTP force-provision CLI to trigger the ZTP process, ignoring the present running configuration of the switch.

- Once force-provision is enabled, new DHCP requests are sent from the switch. Disabling force-provision does not stop the DHCP already in progress, but only changes the switch configuration status of force-provision.
- If ZTP fails while force-provision is enabled, there is no automatic retry. To retry, `ztp force-provision` should be disabled and re-enabled to clear the current ZTP state and send a new DHCP request. When `ztp force-provision` is already enabled on the switch, re-enabling it results in no operation.
- If the DHCP server is configured to provide both ZTP image and configuration options and there is a non-default startup configuration present on the switch, clearing the non-default startup configuration before triggering `ztp force-provision` is recommended. If an image is downloaded via ZTP, the switch reboots once the image download is complete and ZTP force-

provision configuration is lost, causing ZTP to enter into a failed state. ZTP force-provision will need to be enabled again to continue the process.

3. The DHCP server responds with an offer containing the following:
 - The IPv4 address of the TFTP server
 - One or both of the following:
 - The name of the firmware image file
 - The name of the configuration file
 - Aruba Central Location (optional) including the shared token value for the on-premise server
 - HTTP Proxy Location (optional)
4. If a firmware image file is offered, the ZTP operation downloads the image file from the TFTP server to the switch. If the current switch image and downloaded firmware image version do not match, then the switch boots with the downloaded image:
 - If the image upgrade fails, the switch retains its original firmware image and the ZTP operation ends with a failed status.
 - If the image upgrade succeeds, the ZTP operation is started again after the switch reboots. Because the downloaded image file matches the image file installed on the switch, the ZTP operation continues, and checks if a configuration file is offered.
5. If a configuration file is offered, the ZTP operation downloads the configuration file copies the file to the running-config and then to the startup-config of the switch:
 - If the startup configuration update fails, the switch retains its factory-default running configuration and the ZTP operation ends with a failed status.
 - If the copy operation fails, the ZTP operation ends with a failed status.
 - If the copy operation succeeds, the ZTP operation ends successfully.

ZTP VSF switchover support

ZTP status is not synced in the VSF stack. When the VSF stack is formed, configuration changes are applied on the conductor switch, which is then synced to standby switch. When the switchover is performed on the VSF stack, the standby becomes the new conductor switch.

As part of the switchover process, the ZTP daemon starts on the new conductor. The status of the ZTP is failed because there are configuration changes present.

ZTP commands

show ztp information

```
show ztp information
```

Description

Shows information about Zero Touch Provisioning (ZTP) operations performed on the switch.

Usage

When a switch configured to use ZTP is booted from a factory default configuration, the switch contacts a DHCP server, which offers options for obtaining files used to provision the switch:

- The IP address of the TFTP server
- The name of the image file

- The name of the configuration file
- The Aruba Central FQDN or IPv4 address
- The HTTP proxy FQDN or IPv4 address

The `show ztp information` command shows the options offered by the DHCP server and the status of the ZTP operation.

The status of the ZTP operation is one of the following:

Success

The ZTP operation succeeded.

One of the following is true:

- Both the running configuration and the startup configuration were updated.
- The IP address of the TFTP server was received, but the offer did not include a configuration file or a firmware image file.
- Any combination of vendor encapsulated DHCP options are received as configured, along with the firmware image and switch configuration file.
- Only vendor encapsulated DHCP options are configured and are received accordingly.

Failed - Custom startup configuration detected

The switch was booted from a configuration that is not the factory default configuration. For example, the administrator password has been set.

Failed - Timed out while waiting to receive ZTP options

Either the switch received the DHCP IPv4 address but no ZTP options were received within 1 minute or ZTP force-provision is triggered and no ZTP options are received within 3 minutes.

Failed - Detected change in running configuration

The running configuration was modified by a user while the ZTP operation was in progress.

Failed - TFTP server unreachable

The TFTP server is not reachable at the specified IP address.

Failed - TFTP server information unavailable

The image file name or config file name is provided without the TFTP server location to fetch the files from and ZTP enters failed state.

Failed - Invalid configuration file received

Either the file transfer of the configuration file failed, or the configuration file is invalid (an error occurred while attempting to apply the configuration).

Failed - Invalid image file received

Either the file transfer of the firmware image file failed, or the firmware image file is invalid (an error occurred while verifying the image).

In the case of reconnection, connect with a main or alternative location to the COP instance as a user. The current connection is shown in the **Central location** field.

Scenario 1: If the location the device is currently connected on is updated, the system reconnects in order to connect with the new location.

Scenario 2: If the location in which the device is not currently connected on is updated, the DUT does not go through the reconnection process.



Examples

Showing switch image download in progress after receiving ZTP options:

```
switch# show ztp information
TFTP Server           : 10.0.0.2
Image File            : TL_10_02_0001.swi
Configuration File    : config_file
ZTP Status            : In-progress - Image download and verification
Aruba Central Location : secure.arubanetworks.com
Alternative Aruba Central Location: NA
Aruba Central Shared Token : aruba123
Force-Provision       : Disabled
HTTP Proxy Location   : http.proxy.arubanetworks.com
```

Showing switch image download failure after receiving ZTP options:

```
switch# show ztp information
TFTP Server           : 10.0.0.2
Image File            : TL_10_02_0001.swi
Configuration File    : config_file
ZTP Status            : Failed - Unable to download image
Aruba Central Location : secure.arubanetworks.com
Alternative Aruba Central Location: NA
Aruba Central Shared Token : aruba123
Force-Provision       : Disabled
HTTP Proxy Location   : http.proxy.arubanetworks.com
```

Showing switch configuration download in progress after receiving ZTP options:

```
switch# show ztp information
TFTP Server           : 10.0.0.2
Image File            : TL_10_02_0001.swi
Configuration File    : config_file
ZTP Status            : In-progress - Configuration download
Aruba Central Location : secure.arubanetworks.com
Alternative Aruba Central Location: NA
Aruba Central Shared Token : aruba123
Force-Provision       : Disabled
HTTP Proxy Location   : http.proxy.arubanetworks.com
```

Showing switch configuration download failure after receiving ZTP options:

```
switch# show ztp information
TFTP Server           : 10.0.0.2
Image File            : TL_10_02_0001.swi
Configuration File    : config_file
ZTP Status            : Failed - Unable to download configuration
Aruba Central Location : secure.arubanetworks.com
Alternative Aruba Central Location: NA
Aruba Central Shared Token : aruba123
Force-Provision       : Disabled
HTTP Proxy Location   : http.proxy.arubanetworks.com
```

Showing switch failure to update start-up configuration after downloading configuration received from ZTP options:

```
switch# show ztp information
TFTP Server           : 10.0.0.2
Image File            : TL_10_02_0001.swi
Configuration File     : config_file
ZTP Status            : Failed - Could not copy to start-up configuration
Aruba Central Location : secure.arubanetworks.com
Alternative Aruba Central Location: NA
Aruba Central Shared Token : aruba123
Force-Provision       : Disabled
HTTP Proxy Location   : http.proxy.arubanetworks.com
```

In the following example, the ZTP operation succeeded, and both an image file and a configuration file were provided.

```
VSF-10-Mbr# show ztp information
TFTP Server           : 10.1.84.160
Image File            : FL_10_06_0001CK.swi
Configuration File     : 102720-new-setup-config-updated.txt
Status               : Success
Aruba Central Location : NA
Alternative Aruba Central Location : NA
Aruba Central Shared Token : aruba123
Force-Provision       : Disabled
HTTP Proxy Location   : NA
VSF-10-Mbr#
```

In the following example, the ZTP option succeeded. A configuration file was not provided, but an image file was provided.

```
VSF-10-Mbr# show ztp information
TFTP Server           : 10.1.84.160
Image File            : TL_10_02_0001.swi
Configuration File     : NA
Status               : Success
Aruba Central Location : NA
Alternative Aruba Central Location: NA
Aruba Central Shared Token : aruba123
Force-Provision       : Disabled
HTTP Proxy Location   : NA
VSF-10-Mbr#
```

In the following example, the ZTP operation failed because the TFTP server was unreachable.

```
VSF-10-Mbr# show ztp information
TFTP Server           : 10.1.84.160
Image File            : TL_10_02_0001.swi
Configuration File     : 102720-new-setup-config-updated.txt
Status               : Failed - TFTP server unreachable
Aruba Central Location : NA
Alternative Aruba Central Location: NA
Aruba Central Shared Token : NA
Force-Provision       : Disabled
HTTP Proxy Location   : NA
VSF-10-Mbr#
```

In the following example, the ZTP operation was stopped because the switch did not receive any options from the DHCP server for ZTP within 1 minute of receiving the IP address from the server.

```
VSF-10-Mbr## show ztp information
TFTP Server           : NA
Image File            : NA
Configuration File     : NA
Status                : Failed - Timed out while waiting to receive ZTP
options
Aruba Central Location : NA
Alternative Aruba Central Location: NA
Aruba Central Shared Token : NA
Force-Provision        : Disabled
HTTP Proxy Location    : NA
VSF-10-Mbr#
```

In the following example, the ZTP operation was stopped because the switch was booted from a configuration that was not the factory default configuration.

```
switch# show ztp information
TFTP Server           : 10.0.0.2
Image File            : TL_10_02_0001.swi
Configuration File     : ztp.cfg
Status                : Failed - Custom startup configuration detected
Aruba Central Location : NA
Alternative Aruba Central Location: NA
Aruba Central Shared Token : NA
Force-Provision        : Disabled
HTTP Proxy Location    : NA
```

In the following example, the switch received the image file and the TFTP-server and config file from the DHCP server for ZTP was successful:

```
switch# show ztp information
TFTP Server           : 10.0.0.2
Image File            : TL_10_02_0001.swi
Configuration File     : ztp.cfg
ZTP Status            : Success
Aruba Central Location : NA
Alternative Aruba Central Location: NA
Aruba Central Shared Token : NA
Force-Provision        : Disabled
HTTP Proxy Location    : NA
```

In the following example, the switch received the image file and the TFTP-server and config file from the DHCP server entered the failed state as the TFTP server was not reachable:

```
switch# show ztp information
TFTP Server           : 10.0.0.2
Image File            : TL_10_02_0001.swi
Configuration File     : ztp.cfg
ZTP Status            : Failed - TFTP server unreachable
Aruba Central Location : NA
Alternative Aruba Central Location: NA
Aruba Central Shared Token : NA
Force-Provision        : Disabled
```

HTTP Proxy Location : NA

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

ztp force provision

```
ztp force-provision
no ztp force-provision
```

Description

Starts on-demand ZTP.

Usage

DHCP options received are processed independent of the current state of configuration on the switch. Previous ZTP TFTP Server, Image File, Configuration File, Aruba Central Location, and HTTP Proxy location options are cleared and the switch sends a DHCP request.

Examples

In the following example, force-provision is enabled.

```
switch# configure terminal
switch(config)# ztp force-provision
```

In the following example, force-provision status is checked while enabled.

```
switch# show ztp information
TFTP Server           : 10.0.0.2
Image File            : TL_10_02_0001.swi
Configuration File     : ztp.cfg
Status                : Success
Aruba Central Location : NA
Aruba Central Shared Token : NA
Force-Provision        : Enabled
HTTP Proxy Location    : NA
```

In the following example, force-provision is disabled.


```
switch# configure terminal
switch(config)# no ztp force-provision
```

In the following example, force-provision status is checked while disabled.

```
switch# show ztp information
TFTP Server           : 10.0.0.2
Image File            : TL_10_02_0001.swi
Configuration File     : ztp.cfg
Status                : Success
Aruba Central Location : NA
Aruba Central Shared Token : NA
Force-Provision        : Disabled
HTTP Proxy Location    : NA
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Operator (>) or Manager (#)	Administrators or local user group members with execution rights for this command.

bluetooth disable

```
bluetooth disable
no bluetooth disable
```

Description

Disables the Bluetooth feature on the switch. The Bluetooth feature includes both Bluetooth Classic and Bluetooth Low Energy (BLE). Bluetooth is enabled by default.

The `no` form of this command enables the Bluetooth feature on the switch.

Example

Disabling Bluetooth on the switch. `<XXXX>` is the switch platform and `<NNNNNNNNNN>` is the device identifier.

```
switch(config)# bluetooth disable
switch# show bluetooth
Enabled          : No
Device name      : <XXXX>-<NNNNNNNNNN>

switch(config)# show running-config
...
bluetooth disabled
...
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
8100 8320 8325 8360 9300 10000	config	Administrators or local user group members with execution rights for this command.

bluetooth enable

```
bluetooth enable
```

no bluetooth enable

Description

This command enables the Bluetooth feature on the switch. The Bluetooth feature includes both Bluetooth Classic and Bluetooth Low Energy (BLE).

Default: Bluetooth is enabled by default.

The `no` form of this command disables the Bluetooth feature on the switch.

Usage

The default configuration of the Bluetooth feature is `enabled`. The output of the `show running-config` command includes Bluetooth information only if the Bluetooth feature is disabled.

The Bluetooth feature includes both Bluetooth Classic and Bluetooth Low Energy (BLE).

The Bluetooth feature requires the USB feature to be enabled. If the USB feature has been disabled, you must enable the USB feature before you can enable the Bluetooth feature.

Examples

```
switch(config)# bluetooth enable
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
8100 8320 8325 8360 9300 10000	config	Administrators or local user group members with execution rights for this command.

clear events

clear events

Description

Clears up event logs. Using the `show events` command will only display the logs generated after the `clear events` command.

Examples

Clearing all generated event logs:

```

switch# show events
-----
show event logs
-----
2018-10-14:06:57:53.534384|hpe-sysmond|6301|LOG_INFO|MSTR|1|System resource
utilization poll interval is changed to 27
2018-10-14:06:58:30.805504|lldpd|103|LOG_INFO|MSTR|1|Configured LLDP tx-timer to
36
2018-10-14:07:01:01.577564|hpe-sysmond|6301|LOG_INFO|MSTR|1|System resource
utilization poll interval is changed to 49

switch# clear events

switch# show events
-----
show event logs
-----
2018-10-14:07:03:05.637544|hpe-sysmond|6301|LOG_INFO|MSTR|1|System resource
utilization poll interval is changed to 34

```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

clear ip errors

clear ip errors

Description

Clears all IP error statistics.

Example

Clearing and showing ip errors:

```

switch# clear ip errors
switch# show ip errors
-----
Drop reason                Packets
-----
Malformed packets          0
IP address errors          0
...

```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
8100 8320 8325 8360 9300 10000	Manager (#)	Administrators or local user group members with execution rights for this command.

console baud-rate

console baud-rate <SPEED>
no console baud-rate <SPEED>

Description

Sets the console serial port speed.

The no form of this command resets the console port speed to its default of 115200 bps.

Parameter	Description
<SPEED>	Selects the console port speed in bps, either 9600 or 115200.

Usage

The speed change occurs immediately for the active console session. The console will be inaccessible until the client terminal settings are updated to match the console port speed that you set. After the command is executed you will be prompted to log in again.

Examples

Setting the console port speed to 9600 bps:

```
switch(config)# console baud-rate 9600
This command will configure the baud rate immediately for the active serial
console session. After the command is executed the user will be prompted to
re-login. The serial console will be inaccessible until the terminal client
settings are updated to match the baud rate of the switch.
Continue (y/n)? y
```

Resetting the console port to its default speed 115200 bps:

```
switch(config)# no console baud-rate
```

Command History

Release	Modification
10.08	Command introduced

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

domain-name

domain-name <NAME>
no domain-name [<NAME>]

Description

Specifies the domain name of the switch.

The **no** form of this command sets the domain name to the default, which is no domain name.

Parameter	Description
<NAME>	Specifies the domain name to be assigned to the switch. The first character of the name must be a letter or a number. Length: 1 to 32 characters.

Examples

Setting and showing the domain name:

```
switch# show domain-name

switch# config
switch(config)# domain-name example.com
switch(config)# show domain-name
example.com
switch(config)#
```

Setting the domain name to the default value:

```
switch(config)# no domain-name
switch(config)# show domain-name

switch(config)#
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

hostname

```
hostname <HOSTNAME>
no hostname [<HOSTNAME>]
```

Description

Sets the host name of the switch.

The `no` form of this command sets the host name to the default value, which is `switch`.

Parameter	Description
<HOSTNAME>	Specifies the host name. The first character of the host name must be a letter or a number. Length: 1 to 32 characters. Default: <code>switch</code>

Examples

Setting and showing the host name:

```
switch# show hostname
switch
switch# config
switch(config)# hostname myswitch
myswitch(config)# show hostname
myswitch
```

Setting the host name to the default value:

```
myswitch(config)# no hostname
switch(config)#
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

led locator

```
led locator {on | off | flashing | slow_blink | fast_blink | half_bright}
no led locator {on | off | flashing |slow_blink | fast_blink | half_bright}
```

Description

Sets the state of the locator LED.

Parameter	Description
on	Turns on the LED.
off	Turns off the LED, which is the default value.
flashing	Sets the LED to blink on and off repeatedly.
slow_blink	Sets the LED to slow blink on and off.
fast_blink	Sets the LED to fast blink on and off.
half_bright	Sets the LED intensity to half bright.

Example

Setting the state of the locator LED:

```
switch# led locator flashing
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
8100 8320 8325 8360 9300 10000	Manager (#)	Administrators or local user group members with execution rights for this command.

mtrace

```
mtrace <IPV4-SRC-ADDR> <IPV4-GROUP-ADDR> [lhr <IPV4-LHR-ADDR>] [ttl <HOPS>]
[vrf <VRF-NAME>]
```

Description

Traces the specified IPv4 source and group addresses.

Parameter	Description
<i>IPV4-SRC-ADDR</i>	Specifies the source IPv4 address to trace.
<i>IPV4-GROUP-ADDR</i>	Specifies the group IPv4 address to trace.
lhr < <i>IPV4-LHR-ADDR</i> >	Specifies the last hop router address from which to start the trace.
ttl < <i>HOPS</i> >	Specifies the Time-To-Live duration in hops. Range: 1 to 255 hops. Default: 8 hops.
vrf < <i>VRF-NAME</i> >	Specifies the name of the VRF. If a name is not specified the default VRF will be used.

Examples

Tracing with source, group, and LHR addresses and TTL:

```
(switch)# mtrace 20.0.0.1 239.1.1.1 lhr 10.1.1.1 ttl 10

Type escape sequence to abort.
Mtrace from 10.0.0.1 for Source 20.0.0.1 via Group 239.1.1.1
From destination(?) to source (?)...
Querying ful reverse path...
0 10.0.0.1
-1 30.0.0.1 PIM 0 ms
-2 40.0.0.1 PIM 2 ms
-3 50.0.0.1 PIM 100 ms
-4 60.0.0.1 PIM 156 ms
-5 20.0.0.1 PIM 123 ms
```

Tracing with source and group addresses:

```
(switch)# mtrace 200.0.0.1 239.1.1.1

Type escape sequence to abort.
Mtrace from self for Source 200.0.0.1 via Group 239.1.1.1
From destination(?) to source (?)...
Querying ful reverse path...
0 10.0.0.1
-1 30.0.0.1 PIM 0 ms
-2 40.0.0.1 PIM 2 ms
-3 50.0.0.1 PIM 100 ms
-4 60.0.0.1 PIM 156 ms
-5 200.0.0.1 PIM 123 ms
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
8100 8320 8325 8360 9300 10000	Manager (#)	Administrators or local user group members with execution rights for this command.

show bluetooth

show bluetooth

Description

Shows general status information about the Bluetooth wireless management feature on the switch.

Usage

This command shows status information about the following:

- The USB Bluetooth adapter
- Clients connected using Bluetooth
- The switch Bluetooth feature.

The output of the `show running-config` command includes Bluetooth information only if the Bluetooth feature is disabled.

The device name given to the switch includes the switch serial number to uniquely identify the switch while pairing with a mobile device.

The management IP address is a private network address created for managing the switch through a Bluetooth connection.

Examples

Example output when Bluetooth is enabled but no Bluetooth adapter is connected. <XXXX> is the switch platform and <NNNNNNNNNN> is the device identifier.

```
switch# show bluetooth
Enabled           : Yes
Device name       : <XXXX>--<NNNNNNNNNN>
Adapter State     : Absent
```

Example output when Bluetooth is enabled and there is a Bluetooth adapter connected:

```
switch# show bluetooth
Enabled           : Yes
Device name       : <XXXX>--<NNNNNNNNNN>
Adapter State     : Ready
Adapter IP address : 192.168.99.1
Adapter MAC address : 480fcf-af153a

Connected Clients
-----
Name                MAC Address      IP Address      Connected Since
```

```
-----  
Mark's iPhone    089734-b12000    192.168.99.10    2018-07-09 08:47:22 PDT
```

Example output when Bluetooth is disabled:

```
switch# show bluetooth  
Enabled          : No  
Device name      : <XXXX>--<NNNNNNNNNN>
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
8100 8320 8325 8360 9300 10000	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show boot-history

```
show boot-history [all]
```

Description

Shows boot information. When no parameters are specified, shows the most recent information about the boot operation, and the three previous boot operations for the active management module. When the `all` parameter is specified, shows the boot information for the active management module and all available line modules. To view boot-history on the standby, the command must be sent on the standby console.

Parameter	Description
<code>all</code>	Shows boot information for the active management module and all available line modules.

Usage

This command displays the boot-index, boot-ID, and up time in seconds for the current boot. If there is a previous boot, it displays boot-index, boot-ID, reboot time (based on the time zone configured in the system) and reboot reasons. Previous boot information is displayed in reverse chronological order.

Index

The position of the boot in the history file. Range: 0 to 3.

Boot ID

A unique ID for the boot . A system-generated 128-bit string.

Current Boot, up for <SECONDS> seconds

For the current boot, the `show boot-history` command shows the number of seconds the module has been running on the current software.

Timestamp boot reason

For previous boot operations, the `show boot-history` command shows the time at which the operation occurred and the reason for the boot. The reason for the boot is one of the following values:

<DAEMON-NAME> crash

The daemon identified by <DAEMON-NAME> caused the module to boot.

Kernel crash

The operating system software associated with the module caused the module to boot.

Reboot requested through database

The reboot occurred because of a request made through the CLI or other API.

Uncontrolled reboot

The reason for the reboot is not known.

Examples

Showing the boot history of the active management module:

```
switch# show boot-history
Management module
=====

Index : 3
Boot ID : f1bf071bdd04492bbf8439c6e479d612
Current Boot, up for 22 hrs 12 mins 22 secs

Index : 2
Boot ID : edfa2d6598d24e989668306c4a56a06d
07 Aug 18 16:28:01 : Reboot requested through database

Index : 1
Boot ID : 0bda8d0361df4a7e8e3acdc1dba5caad
07 Aug 18 14:08:46 : Reboot requested through database

Index : 0
Boot ID : 23da2b0e26d048d7b3f4b6721b69c110
07 Aug 18 13:00:46 : Reboot requested through database
switch#
```

Showing the boot history of the active management module and all line modules:

```
switch# show boot-history all
Management module
=====

Index : 3
Boot ID : f1bf071bdd04492bbf8439c6e479d612
Current Boot, up for 22 hrs 12 mins 22 secs

Index : 2
Boot ID : edfa2d6598d24e989668306c4a56a06d
07 Aug 18 16:28:01 : Reboot requested through database

Index : 1
Boot ID : 0bda8d0361df4a7e8e3acdc1dba5caad
07 Aug 18 14:08:46 : Reboot requested through database

Index : 0
Boot ID : 23da2b0e26d048d7b3f4b6721b69c110
07 Aug 18 13:00:46 : Reboot requested through database
```

```
Line module 1/1
=====
Index : 3
10 Aug 17 12:45:46 : dune_agent crashed
...
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

show capacities

`show capacities <FEATURE> [vsx-peer]`

Description

Shows system capacities and their values for all features or a specific feature.

Parameter	Description
<FEATURE>	Specifies a feature. For example, <code>aaa</code> or <code>vrrp</code> .
<code>vsx-peer</code>	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Usage

Capacities are expressed in user-understandable terms. Thus they may not map to a specific hardware or software resource or component. They are not intended to define a feature exhaustively.

Examples

Showing all available capacities for BGP:

```
switch# show capacities bgp

System Capacities: Filter BGP
Capacities Name                                     Value
-----
-
Maximum number of AS numbers in as-path attribute
```

32
...

Showing all available capacities for mirroring:

```
switch# show capacities mirroring

System Capacities: Filter Mirroring
Capacities Name                                     Value
-----
-
Maximum number of Mirror Sessions configurable in a system
4
Maximum number of enabled Mirror Sessions in a system
4
```

Showing all available capacities for MSTP:

```
switch# show capacities mstp

System Capacities: Filter MSTP
Capacities Name                                     Value
-----
-
Maximum number of mstp instances configurable in a system
64
```

Showing all available capacities for VLAN count:

```
switch# show capacities vlan-count

System Capacities: Filter VLAN Count
Capacities Name                                     Value
-----
-
Maximum number of VLANs supported in the system
4094
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

show capacities-status

```
show capacities-status <FEATURE> [vsx-peer]
```

Description

Shows system capacities status and their values for all features or a specific feature.

Parameter	Description
<FEATURE>	Specifies the feature, for example <code>aaa</code> or <code>vrrp</code> for which to display capacities, values, and status. Required.
<code>vsx-peer</code>	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Examples

Showing the system capacities status for all features:

```
switch# show capacities-status

System Capacities Status
Capacities Status Name                                     Value Maximum
-----
Number of active gateway mac addresses in a system         0           16
Number of aspath-lists configured                          0           64
Number of community-lists configured                       0           64
...
```

Showing the system capacities status for BGP:

```
switch# show capacities-status bgp

System Capacities Status: Filter BGP
Capacities Status Name                                     Value Maximum
-----
Number of aspath-lists configured                          0           64
Number of community-lists configured                      0           64
Number of neighbors configured across all VRFs            0           50
Number of peer groups configured across all VRFs          0           25
Number of prefix-lists configured                         0           64
Number of route-maps configured                           0           64
Number of routes in BGP RIB                               0      256000
Number of route reflector clients configured across all VRFs 0           16
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

show console

show console

Description

Shows the serial console port current speed.

Examples

Showing the console port current speed:

```
switch# show console
Baud Rate: 9600
```

Command History

Release	Modification
10.08	Command introduced

Command Information

Platforms	Command context	Authority
All platforms	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show core-dump

show core-dump all

Description

Shows core dump information about the specified module. When no parameters are specified, shows only the core dumps generated in the current boot of the management module. When the `all` parameter is specified, shows all available core dumps.

Parameter	Description
<code>all</code>	Shows all available core dumps.

Usage

When no parameters are specified, the `show core-dump` command shows only the core dumps generated in the current boot of the management module. You can use this command to determine when any crashes are occurring in the current boot.

If no core dumps have occurred, the following message is displayed: No core dumps are present
To show core dump information for the standby management module, you must use the `standby` command to switch to the standby management module and then execute the `show core-dump` command.

In the output, the meaning of the information is the following:

Daemon Name

Identifies name of the daemon for which there is dump information.

Instance ID

Identifies the specific instance of the daemon shown in the Daemon Name column.

Present

Indicates the status of the core dump:

Yes

The core dump has completed and available for copying.

In Progress

Core dump generation is in progress. Do not attempt to copy this core dump.

Timestamp

Indicates the time the daemon crash occurred. The time is the local time using the time zone configured on the switch.

Build ID

Identifies additional information about the software image associated with the daemon.

Examples

Showing core dump information for the current boot of the active management module only:

```
switch# show core-dump
=====
Daemon Name      | Instance ID | Present      | Timestamp                | Build ID
=====
hpe-fand         | 1399        | Yes          | 2017-08-04 19:05:34      | 1246d2a
hpe-sysmond      | 957         | Yes          | 2017-08-04 19:05:29      | 1246d2a
=====
Total number of core dumps : 2
=====
```

Showing all core dumps:

```
switch# show core-dump all
=====
Management Module core-dumps
=====
Daemon Name      | Instance ID | Present      | Timestamp                | Build ID
=====
hpe-sysmond      | 513         | Yes          | 2017-07-31 13:58:05      | e70f101
hpe-tempd        | 1048        | Yes          | 2017-08-13 13:31:53      | e70f101
hpe-tempd        | 1052        | Yes          | 2017-08-13 13:41:44      | e70f101

Line Module core-dumps
=====
Line Module : 1/1
=====
dune_agent_0     | 18958       | Yes          | 2017-08-12 11:50:17      | e70f101
dune_agent_0     | 18842       | Yes          | 2017-08-12 11:50:09      | e70f101
=====
Total number of core dumps : 5
=====
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

show domain-name

show domain-name [vsx-peer]

Description

Shows the current domain name.

Parameter	Description
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Usage

If there is no domain name configured, the CLI displays a blank line.

Example

Setting and showing the domain name:

```
switch# show domain-name

switch# config
switch(config)# domain-name example.com
switch(config)# show domain-name
example.com
switch(config)#
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

show environment fan

show environment fan [vsx-peer]

Description

Shows the status information for all fans and fan trays (if present) in the system.

Parameter	Description
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Usage

For fan trays, `Status` is one of the following values:

`ready`

The fan tray is operating normally.

`fault`

The fan tray is in a fault event. The status of the fan tray does not indicate the status of fans.

`empty`

The fan tray is not installed in the system.

For fans:

`Speed`

Indicates the relative speed of the fan based on the nominal speed range of the fan. Values are:

`Slow`

The fan is running at less than 25% of its maximum speed.

`Normal`

The fan is running at 25-49% of its maximum speed.

`Medium`

The fan is running at 50-74% of its maximum speed.

`Fast`

The fan is running at 75-99% of its maximum speed.

`Max`

The fan is running at 100% of its maximum speed.

`N/A`

The fan is not installed.

`Direction`

The direction of airflow through the fan. Values are:

`front-to-back`

Air flows from the front of the system to the back of the system.

`N/A`

The fan is not installed.

`Status`

Fan status. Values are:

`uninitialized`

The fan has not completed initialization.

`ok`

The fan is operating normally.

`fault`

The fan is in a fault state.

`empty`

The fan is not installed.

Examples

Showing output for a system without a fan tray:

```
switch# show environment fan

Fan information
-----
Fan      Serial Number  Speed   Direction   Status   RPM
-----
1        SGXXXXXXXXXX    slow   front-to-back  ok       6000
2        SGXXXXXXXXXX    normal front-to-back  ok       8000
3        SGXXXXXXXXXX    medium front-to-back  ok       11000
4        SGXXXXXXXXXX    fast   front-to-back  ok       14000
5        SGXXXXXXXXXX    max    front-to-back  fault    16500
6        N/A             N/A    N/A           empty
...

```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show environment led

```
show environment led [vsx-peer]
```

Description

Shows state and status information for all the configurable LEDs in the system.

Parameter	Description
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Example

Showing state and status for LED:

```
switch# show environment led
Name      State    Status
-----
locator   flashing ok

```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show environment power-supply

show environment power-supply [vsx-peer]

Description

Shows status information about all power supplies in the switch.

Parameter	Description
vsf	Shows output from the VSF member-id on switches that support VSF.
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Usage

The following information is provided for each power supply:

Mbr/PSU

Shows the member and slot number of the power supply.

Product Number

Shows the product number of the power supply.

Serial Number

Shows the serial number of the power supply, which uniquely identifies the power supply.

PSU Status

The status of the power supply. Values are:

OK

Power supply is operating normally.

OK*

Power supply is operating normally, but it is the only power supply in the chassis. One power supply is not sufficient to supply full power to the switch. When this value is shown, the output of the command also shows a message at the end of the displayed data.

Absent

No power supply is installed in the specified slot.

Input fault

The power supply has a fault condition on its input.

Output fault

The power supply has a fault condition on its output.

Warning

The power supply is not operating normally.

Wattage Maximum

Shows the maximum amount of wattage that the power supply can provide.

Example

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show environment temperature

```
show environment temperature [detail] [vsx-peer]
```

Description

Shows the temperature information from sensors in the switch that affect fan control.

Parameter	Description
detail	Shows detailed information from each temperature sensor.
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Usage

Temperatures are shown in Celsius.

Valid values for status are the following:

normal

Sensor is within nominal temperature range.

min

Lowest temperature from this sensor.

max

Highest temperature from this sensor.

low_critical

Lowest threshold temperature for this sensor.

critical

Highest threshold temperature for this sensor.

fault

Fault event for this sensor.

emergency

Over temperature event for this sensor.

Examples

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show events

```
show events [ -e <EVENT-ID> |  
  -s {emergency | alert | critical | error | warning | notice | info | debug} |  
  -r |  
  -a |  
  -n <COUNT> |  
  -i <MEMBER-SLOT> |  
  -m {active | standby} |  
  -c {lldp | ospf | ...} |  
  -d {lldpd | bgpd | fand | ...}]
```

Description

Shows event logs generated by the switch modules since the last reboot.

Parameter	Description
-e <EVENT-ID>	Shows the event logs for the specified event ID. Event ID range: 101 through 99999.
-s {emergency alert critical error warning notice info debug}	Shows the event logs for the specified severity. Select the severity from the following list: ■ emergency: Displays event logs with severity emergency only. ■ alert: Displays event logs with severity alert and above. ■ critical: Displays event logs with severity critical and above. ■ error: Displays event logs with severity error and above. ■ warning: Displays event logs with severity warning and above. ■ notice: Displays event logs with severity notice and above. ■ info: Displays event logs with severity info and above. ■ debug: Displays event logs with all severities.
-r	Shows the most recent event logs first.

Parameter	Description
-a	Shows all event logs, including those events from previous boots.
-n <COUNT>	Displays the specified number of event logs.
-c {lldp ospf ...}	Shows the event logs for the specified event category. Enter <code>show event -c</code> for a full listing of supported categories with descriptions.
-d {lldpd bgpd fand ...}	Shows the event logs for the specified process. Enter <code>show event -d</code> for a full listing of supported daemons with descriptions.

Examples

Showing event logs:

```
switch# show events
-----
show event logs
-----
2016-12-01:12:37:31.733551|lacpd|15007|INFO|AMM|1|LACP system ID set to
70:72:cf:51:50:7c
2016-12-01:12:37:31.734541|intfd|4001|INFO|AMM|1|Interface port_admin set to
up for bridge_normal interface
2016-12-01:12:37:32.583256|switchd|24002|ERR|AMM|1|Failed to create VLAN 1
in Hardware
```

Showing the most recent event logs first:

```
switch# show events -r
-----
show event logs
-----
2016-12-01:12:37:32.583256|switchd|24002|ERR|AMM|1|Failed to create VLAN 1
in Hardware
2016-12-01:12:37:31.734541|intfd|4001|INFO|AMM|1|Interface port_admin set to
up for bridge_normal interface
2016-12-01:12:37:31.733551|lacpd|15007|INFO|AMM|1|LACP system ID set to
70:72:cf:51:50:7c
```

Showing all event logs:

```
switch# show events -a
-----
show event logs
-----
2016-12-01:12:37:31.733551|lacpd|15007|INFO|AMM|1|LACP system ID set to
70:72:cf:51:50:7c
2016-12-01:12:37:31.734541|intfd|4001|INFO|AMM|1|Interface port_admin set to
up for bridge_normal interface
2016-12-01:12:37:32.583256|switchd|24002|ERR|AMM|1|Failed to create VLAN 1
in Hardware
```

Showing event logs related to LACP:


```
switch# show events -c lacp
-----
show event logs
-----
2016-12-01:12:37:31.733551|lacpd|15007|INFO|AMM|1|LACP system ID set to
70:72:cf:51:50:7c
```

Showing event logs as per the specified member/slot ID:

```
switch# show events -i 1/1
-----
show event logs
-----
2017-08-17:22:32:25.743991|hpe-sysmond|6301|LOG_INFO|LC|1/1|System resource
utilization poll interval is changed to 313
2017-08-17:22:33:01.692860|hpe-sysmond|6301|LOG_INFO|LC|1/1|System resource
utilization poll interval is changed to 23
2017-08-17:22:33:06.181436|hpe-sysmond|6301|LOG_INFO|LC|1/1|System resource
utilization poll interval is changed to 512
2017-08-17:22:33:06.181436|systemd-coredump|1201|LOG_CRIT|LC|1/1|hpe-sysmond
crashed due to signal:11
```

Showing event logs as per the specified process:

```
switch# show events -d lacpd
-----
show event logs
-----
2016-12-01:12:37:31.733551|lacpd|15007|INFO|AMM|1|LACP system ID set to
70:72:cf:51:50:7c
```

Displaying the specified number of event logs:

```
switch# show events -n 5
-----
show event logs
-----
2018-03-21:06:12:15.500603|arpd|6101|LOG_INFO|AMM|-|ARPMGRD daemon has started
2018-03-21:06:12:17.734405|lldpd|109|LOG_INFO|AMM|-|Configured LLDP tx-delay to 2
2018-03-21:06:12:17.740517|lacpd|1307|LOG_INFO|AMM|-|LACP system ID set to
70:72:cf:d4:34:42
2018-03-21:06:12:17.743491|vrfmgrd|5401|LOG_INFO|AMM|-|Created a vrf entity
42cc3df7-1113-412f-b5cb-e8227b8c22f2
2018-03-21:06:12:17.904008|vrfmgrd|5401|LOG_INFO|AMM|-|Created a vrf entity
4409133e-2071-4ab8-adfe-f9662c06b889
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Auditors or Administrators or local user group members with execution rights for this command. Auditors can execute this command from the auditor context (auditor>) only.

show hostname

show hostname [vsx-peer]

Description

Shows the current host name.

Parameter	Description
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Example

Setting and showing the host name:

```
switch# show hostname
switch
switch# config
switch(config)# hostname myswitch
myswitch(config)# show hostname
myswitch
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

show images

show images [vsx-peer]

Description

Shows information about the software in the primary and secondary images.

Parameter	Description
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Example

Showing the primary and secondary images on a 8320 switch:

```
switch# show images
-----
AOS-CX Primary Image
-----
Version : TL.10.05.0001I
Size    : 405 MB
Date    : 2020-04-23 02:49:04 PDT
SHA-256 : 7efe86a445e87e40f47de156add25720b7277cae1a8db2f9c4ea5f49e74f2a5a
-----
AOS-CX Secondary Image
-----
Version : TL.10.05.0001I
Size    : 405 MB
Date    : 2020-04-23 02:49:04 PDT
SHA-256 : 7efe86a445e87e40f47de156add25720b7277cae1a8db2f9c4ea5f49e74f2a5a

Default Image : primary

-----
Management Module 1/1 (Active)
-----
Active Image      : primary
Service OS Version : TL.01.05.0002-internal
BIOS Version      : TL-01-0013
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show ip errors

show ip errors [vsx-peer]

Description

Shows IP error statistics for packets received by the switch since the switch was last booted.

Parameter	Description
<code>vsx-peer</code>	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Usage

IP error info about received packets is collected from each active line card on the switch and is preserved during failover events. Error counts are cleared when the switch is rebooted.

Drop reasons are the following:

■ Malformed packet

The packet does not conform to TCP/IP protocol standards such as packet length or internet header length. A large number of malformed packets can indicate that there are hardware malfunctions such as loose cables, network card malfunctions, or that a DOS (denial of service) attack is occurring.

■ IP address error

The packet has an error in the destination or source IP address. Examples of IP address errors include the following:

- The source IP address and destination IP address are the same.
- There is no destination IP address.
- The source IP address is a multicast IP address.
- The forwarding header of an IPv6 address is empty.
- There is no source IP address for an IPv6 packet.

■ Invalid TTLs

The TTL (time to live) value of the packet reached zero. The packet was discarded because it traversed the maximum number of hops permitted by the TTL value.

TTLs are used to prevent packets from being circulated on the network endlessly.

Example

Showing ip error statistics for packets received by the switch:

```
switch# show ip errors
-----
Drop reason                Packets
-----
Malformed packets          1
IP address errors          10
...
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
8100 8320 8325 8360 9300 10000	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show module

show module [vsx-peer]

Description

Shows information about installed line modules and management modules.



Although this switch does not have removable modules, this command will still return information about the switch, referring to management modules and line modules.

Parameter	Description
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Usage

Identifies and shows status information about the line modules and management modules that are installed in the switch.

To show the configuration information—if any—associated with that line module slot, use the `show running-configuration` command.

Status is one of the following values:

Active

This switch is the active management module.

Standby

This switch is the standby management module.

Deinitializing

The switch is being deinitialized.

Diagnostic

The switch is in a state used for troubleshooting.

Down

The switch is physically present but is powered down.

Empty

The switch hardware is not installed in the chassis.

Failed

The switch has experienced an error and failed.

Failover

This switch is a fabric module or a line module, and it is in the process of connecting to the new active management module during a management module failover event.

Initializing

The switch is being initialized.

Present

The switch hardware is installed in the chassis.
Ready
The switch is available for use.
Updating
A firmware update is being applied to the switch.

Examples

Showing all installed modules:

```
switch(config)# show module
```

```
Management Modules
=====
```

	Product			Serial	
Name	Number	Description		Number	Status
1/1	JL581A	8320 Mgmt Mod		TW87KCW00X	Ready

```
Line Modules
=====
```

	Product			Serial	
Name	Number	Description		Number	Status
1/1	JL581A	8320		TW87KCW00X	Ready

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show running-config

```
show running-config [<FEATURE>] [all] [vsx-peer]
```

Description

Shows the current nondefault configuration running on the switch. No user information is displayed.

Parameter	Description
<FEATURE>	Specifies the name of a feature. For a list of feature names, enter the <code>show running-config</code> command, followed by a space, followed by a question mark (?). When the <code>json</code> parameter is used, the <code>vsx-peer</code> parameter is not applicable.
<i>all</i>	Shows all default values for the current running configuration.
<i>vsx-peer</i>	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Examples

Showing the current running configuration:

```
switch> show running-config
Current configuration:
!
!Version AOS-CX 10.0X.XXXX
!
lldp enable
linecard-module LC1 part-number JL363A
vrf green
!
!
!
!
!
!
aaa authentication login default local
aaa authorization commands default none
!
!
!
!
vlan 1
    no shutdown
vlan 20
    no shutdown
vlan 30
    no shutdown
interface 1/1/1
    no shutdown
    no routing
    vlan access 30
interface 1/1/32
    no shutdown
    no routing
    vlan access 20
interface bridge_normal-1
    no shutdown
interface bridge_normal-2
    no shutdown
interface vlan20
    no shutdown
    vrf attach green
    ip address 20.0.0.44/24
    ip ospf 1 area 0.0.0.0
```

```

ip pim-sparse enable

interface vlan30
  no shutdown
  vrf attach green
  ip address 30.0.0.44/24
  ip ospf 1 area 0.0.0.0
  ip pim-sparse enable

ip pim-sparse hello-interval 100

```

Showing the current running configuration in json format:

```

switch> show running-config json
Running-configuration in JSON:
{
  "Monitoring_Policy_Script": {
    "system_resource_monitor_mm1.1.0": {
      "Monitoring_Policy_Instance": {
        "system_resource_monitor_mm1.1.0/system_resource_monitor_
mm1.1.0.default": {
          "name": "system_resource_monitor_mm1.1.0.default",
          "origin": "system",
          "parameters_values": {
            "long_term_high_threshold": "70",
            "long_term_normal_threshold": "60",
            "long_term_time_period": "480",
            "medium_term_high_threshold": "80",
            "medium_term_normal_threshold": "60",
            "medium_term_time_period": "120",
            "short_term_high_threshold": "90",
            "short_term_normal_threshold": "80",
            "short_term_time_period": "5"
          }
        }
      }
    },
    ...
    ...
    ...
    ...

```

Show the current running configuration without default values:

```

switch(config)# show running-config
Current configuration:
!
!Version AOS-CX Virtual.10.04.0000-6523-gbb15c03~dirty
led locator on
!
!
!
!
!
!
!
!
!
vlan 1
switch(config)# show running-config all

```



```

Current configuration:
!
!Version AOS-CX Virtual.10.04.0000-6523-gbb15c03~dirty
led locator on
!
!
!
!
!
!
!
!
!
!
vlan 1
switch(config)#

```

Show the current running configuration with default values:

```

switch(config)# snmp-server vrf mgmt
switch(config)# show running-config
Current configuration:
!
!Version AOS-CX Virtual.10.04.0000-6523-gbb15c03~dirty
led locator on
!
!
!
!
!
snmp-server vrf mgmt
!
!
!
!
!
vlan 1
switch(config)#
switch(config)#
switch(config)# show running-config all
Current configuration:
!
!Version AOS-CX Virtual.10.04.0000-6523-gbb15c03~dirty
led locator on
!
!
!
!
!
snmp-server vrf mgmt
snmp-server agent-port 161
snmp-server community public
!
!
!
!
!
vlan 1
switch(config)#

```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

show running-config current-context

show running-config current-context

Description

Shows the current non-default configuration running on the switch in the current command context.

Usage

You can enter this command from the following configuration contexts:

- Any child of the global configuration (`config`) context. If the child context has instances—such as interfaces—you can enter the command in the context of a specific instance. Support for this command is provided for one level below the `config` context. For example, entering this command for a child of a child of the `config` context not supported. If you enter the command on a child of the `config` context, the current configuration of that context and the children of that context are displayed.
- The global configuration (`config`) context. If you enter this command in the global configuration (`config`) context, it shows the running configuration of the entire switch. Use the `show running-configuration` command instead.

Examples

Showing the running configuration for the current interface:

```
switch(config-if)# show running-config current-context
interface 1/1/1
vsx-sync qos vlans
    no shutdown
    description Example interface
    no routing
vlan access 1
exit
```

Showing the current running configuration for the management interface:

```
switch(config-if-mgmt)# show running-config current-context
interface mgmt
    no shutdown
    ip static 10.0.0.1/24
    default-gateway 10.0.0.8
    nameserver 10.0.0.1
```

Showing the running configuration for the external storage share named `nasfiles`:

```
switch(config-external-storage-nasfiles)# show running-config current-context
external-storage nasfiles
  address 192.168.0.1
  vrf default
  username nasuser
  password ciphertext
AQBBapalKj+XMsZumHEwIc9OR6YcOw5Z6Bh9rV+9ZtKDKzvbaBAAAAB1CTrM=
  type scp
  directory /home/nas
  enable
switch(config-external-storage-nasfiles)#
```

Showing the running configuration for a context that does not have instances:

```
switch(config-vsx)# show run current-context
vsx
  inter-switch-link 1/1/1
  role secondary
  vsx-sync sflow time
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	<code>config</code> or a child of <code>config</code> . See Usage.	Administrators or local user group members with execution rights for this command.

show startup-config

`show startup-config [json]`

Description

Shows the contents of the startup configuration.



Switches in the `factory-default` configuration do not have a startup configuration to display.

Parameter	Description
<code>json</code>	Display output in JSON format.

Examples

Showing the startup-configuration in non-JSON format for an 8320 switch:

```

Leaf2(config)# show startup-config
Startup configuration:
!
!Version AOS-CX TL.xx.xx.xxxx
hostname Leaf2
user admin group administrators password ciphertext

AQBapaGi+KZp4g8gw63UqK+zCtv05zigFLv2DFBEH+lztqjdYgAAABwrJ+5GayUWArgv9tVFo9AzMY6gmI
7x/

KBekGBJDXjpFson2qM83CXBUI673qWHDQ0pEIZXeuig0XogCVuId4oZiQVZlOe2MfxnqZL+E9hXaMNVowB
wbD0
cli-session
    timeout 0
!
!
!
ssh server vrf mgmt

```

Showing the startup-configuration in JSON format:

```

switch# show startup-config json
Startup configuration:
{
  "AAA_Server_Group": {
    "local": {
      "group_name": "local"
    },
    "none": {
      "group_name": "none"
    }
  },
  ...

```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

show system

```
show system [serviceos password-prompt] [vsx-peer]
```

Description

Shows general status information about the system.

Parameter	Description
serviceos password-prompt	Shows the Service OS password prompt status.
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Usage

CPU utilization represents the average utilization across all the CPU cores.

System Description, System Contact, and System Location can be set with the `snmp-server` command.

When `vsx-peer` is specified, the Up Time value is not shown because it is not synchronized between VSX peers.

Examples

Showing system information:

```
switch# show system
Hostname           : switch
System Description : switch description
System Contact     : contact
System Location    : location

Vendor             : Aruba
Product Name       : XXXXXX ...
Chassis Serial Nbr : XXXXXXXXXXXX
Base MAC Address   : xxxxxx-xxxxxx
AOS-CX Version     : XX.99.99.9999

Time Zone          : UTC

Up Time            : 1 week, 5 hours, 28 minutes
CPU Util (%)       : 5
CPU Util (% avg 1 min) : 11
CPU Util (% avg 5 min) : 10
Memory Usage (%)   : 35
```

Showing the Service OS password prompt status:

```
switch# show system serviceos password-prompt
password-prompt: disabled
```

Showing system information for a VSX primary and secondary (peer) switch:

```
switch# show system
Hostname           : vsx-primary
System Description : switch description
System Contact     : contact
System Location    : location

Vendor             : Aruba
Product Name       : XXXXXX ...
Chassis Serial Nbr : XXXXXXXXXXXX
```

```

Base MAC Address      : xxxxxx-xxxxxx
AOS-CX Version       : XX.99.99.9999

Time Zone            : UTC

Up Time              : 1 week, 2 hours, 15 minutes
CPU Util (%)         : 15
CPU Util (% avg 1 min) : 12
CPU Util (% avg 5 min) : 8
Memory Usage (%)     : 37

switch# show system vsx-peer
Hostname             : vsx-secondary
System Description    : switch description
System Contact        : contact
System Location       : location

Vendor               : Aruba
Product Name          : XXXXXX ...
Chassis Serial Nbr    : XXXXXXXXXXXX
Base MAC Address      : xxxxxx-xxxxxx
AOS-CX Version       : XX.99.99.9999

Time Zone            : UTC

CPU Util (%)         : 7
CPU Util (% avg 1 min) : 13
CPU Util (% avg 5 min) : 9
Memory Usage (%)     : 32

```

Command History

Release	Modification
10.12	Added CPU Util (% avg 1 min) and CPU Util (% avg 5 min).
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show system resource-utilization

show system resource-utilization [all | daemon <DAEMON-NAME>] [vsx-peer]

Description

Shows the system resource utilization data.

Parameter	Description
all	Shows the resource utilization data for the entire switch.
daemon <DAEMON-NAME>	Shows only the resource utilization data for the process identified by <DAEMON-NAME>.
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Usage

For a list of daemons that log events, enter `show events -d ?` from a switch prompt in the manager (#) context.

Examples

Showing system resource utilization data:

```
switch# show system resource-utilization
System Resources:
Processes                : 144
CPU usage(%)             : 10
CPU usage(% average over 1 minute) : 11
CPU usage(% average over 5 minute) : 15
Memory usage(%)          : 22
Open FD's                : 1358
Storage 1: Endurance utilization = 10-20% (mmc-type-a), 0-10% (mmc-type-b),
Health = normal

Data written to various partitions since boot
Nos      : 5 MB
Log      : 1 MB
Coredump : 23 MB
Security : 2 MB
Selftest : 405 KB
Swap     : 14 MB

Storage partition usage(%)
Nos      : 5
Log      : 60
Coredump : 23
Security : 2
Selftest : 1
Swap     : 0

Process                CPU Usage(%)    Memory Usage(%)    Open FD's
-----
hpe-sysmond            1              2                  11
hpe-mgmdd              0              1                   5
...
```

Attempting to show resource utilization data when system resource utilization polling is disabled:

```
switch# show system resource-utilization
System resource utilization data poll is currently disabled
```

Showing the resource utilization data for a particular process:

```
switch# show system resource-utilization daemon hpe-sysmond
Process                CPU Usage(%)    Memory Usage(%)  Open FD's
-----
hpe-sysmond            1                2                11
```

Showing system resource utilization data for all:

```
switch# show system resource-utilization all
-----
Resource utilization data for Management Module
-----

System Resources:
Processes                : 244
CPU usage(%)             : 10
CPU usage(% average over 1 minute) : 11
CPU usage(% average over 5 minute) : 15
Memory usage(%)          : 11
Open FD's                : 1854
Storage 1: Endurance utilization = 0-10% (mmc-type-a), 0-10% (mmc-type-b),
Health = normal

Data written to various partitions since boot
Nos      : 15 MB
Log      : 1 MB
Coredump : 23 MB
Security : 2 MB
Selftest : 405 KB
Swap     : 0 KB

Storage partition usage(%)
Nos      : 5
Log      : 60
Coredump : 23
Security : 2
Selftest : 1
Swap     : 0

Process                CPU Usage(%)    Memory Usage(%)  Open FD's
-----
(sd-pam)               0                0                7
aautilspamcfg          0                1                10
...
```

Command History

Release	Modification
10.12	The output of this command includes CPU usage(% average over 1 minute) and CPU usage(% average over 5 minute).
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

show tech

```
show tech [basic | <FEATURE>] [local-file]
```

Description

Shows detailed information about switch features by automatically running the `show` commands associated with the feature. If no parameters are specified, the `show tech` command shows information about all switch features. Technical support personnel use the output from this command for troubleshooting.

Parameter	Description
<code>basic</code>	Specifies showing a basic set of information.
<code><FEATURE></code>	Specifies the name of a feature. For a list of feature names, enter the <code>show tech</code> command, followed by a space, followed by a question mark (?).
<code>local-file</code>	Shows the output of the <code>show tech</code> command to a local text file.

Usage

To terminate the output of the `show tech` command, enter **Ctrl+C**.

If the command was not terminated with **Ctrl+C**, at the end of the output, the `show tech` command shows the following:

- The time consumed to execute the command.
- The list of failed `show` commands, if any.

To get a copy of the local text file content created with the `show tech` command that is used with the `local-file` parameter, use the `copy show-tech local-file` command.

Example

Showing the basic set of system information:

```
switch# show tech basic
=====
Show Tech executed on Wed Sep  6 16:50:37 2017
=====
[Begin] Feature basic
=====

*****
Command : show core-dump all
*****
no core dumps are present
```

```

...
=====
[End] Feature basic
=====

=====
1 show tech command failed
=====
Failed command:
  1. show boot-history
=====
Show tech took 3.000000 seconds for execution

```

Directing the output of the **show tech basic** command to the local text file:

```

switch# show tech basic local-file
Show Tech output stored in local-file. Please use 'copy show-tech local-file'
to copy-out this file.

```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

show usb

show usb [vsx-peer]

Description

Shows the USB port configuration and mount settings.

Parameter	Description
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Examples

If USB has not been enabled:

```
switch> show usb
Enabled: No
Mounted: No
```

If USB has been enabled, but no device has been mounted:

```
switch> show usb
Enabled: Yes
Mounted: No
```

If USB has been enabled and a device mounted:

```
switch> show usb
Enabled: Yes
Mounted: Yes
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show usb file-system

```
show usb file-system [<PATH>]
```

Description

Shows directory listings for a mounted USB device. When entered without the <PATH> parameter the top level directory tree is shown.

Parameter	Description
<PATH>	Specifies the file path to show. A leading "/" in the path is optional.

Usage

Adding a leading "/" as the first character of the <PATH> parameter is optional.

Attempting to enter '..' as any part of the <PATH> will generate an invalid path argument error. Only fully-qualified path names are supported.

Examples

Showing the top level directory tree:

```
switch# show usb file-system
/mnt/usb:
'System Volume Information'  dir1'

/mnt/usb/System Volume Information':
IndexerVolumeGuid  WPSettings.dat

/mnt/usb/dir1:
dir2  test1

/mnt/usb/dir1/dir2:
test2
```

Showing available path options from the top level:

```
switch# show usb file-system /
total 64
drwxrwxrwx 2 32768 Jan 22 16:27 'System Volume Information'
drwxrwxrwx 3 32768 Mar  5 15:26 dir1
```

Showing the contents of a specific folder:

```
switch# show usb file-system /dir1
total 32
drwxrwxrwx 2 32768 Mar  5 15:26 dir2
-rwxrwxrwx 1      0 Feb  5 18:08 test1

switch# show usb file-system dir1/dir2
total 0
-rwxrwxrwx 1 0 Feb  6 05:35 test2
```

Attempting to enter an invalid character in the path:

```
switch# show usb file-system dir1/../../
Invalid path argument
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show version

```
show version [vsx-peer]
```

Description

Shows version information about the network operating system software, service operating system software, and BIOS.

Parameter	Description
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Example

Showing version information for an 8320 switch:

```
switch(config)# show version
-----
AOS-CX
(c) Copyright 2017-2022 Hewlett Packard Enterprise Development LP
-----
Version       : TL.xx.xx.xxxx
Build Date    : 2022-05-27 17:00:46 PDT
Build ID      : AOS-CX:xx.xx.xxxx:feb590a400a5:201908201736
Build SHA     : feb590a400a57ed818b01614f92010d74fbc9a4b
Active Image  : secondary

Service OS Version : TL.01.03.0008
BIOS Version      : TL-01-0013
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

system resource-utilization poll-interval

system resource-utilization poll-interval <SECONDS>

Description

Configures the polling interval for system resource information collection and recording such as CPU and memory usage.

Parameter	Description
<SECONDS>	Specifies the poll interval in seconds. Range: 10-3600. Default: 10.

Example

Configuring the system resource utilization poll interval:

```
switch(config)# system resource-utilization poll-interval 20
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

top cpu

top cpu

Description

Shows CPU utilization information.

Example

Showing top CPU information:

```
switch# top cpu
top - 09:42:55 up 3 min, 3 users, load average: 3.44, 3.78, 1.70
Tasks: 76 total, 2 running, 74 sleeping, 0 stopped, 0 zombie
%Cpu(s): 31.4 us, 32.7 sy, 0.5 ni, 34.4 id, 04. wa, 0.0 hi, 0.6 si, 0.0 st
KiB Mem : 4046496 total, 2487508 free, 897040 used, 661948 buff/cache
KiB Swap:      0 total,      0 free,      0 used, 2859196 avail Mem

  PID USER      PRI  NI   VIRT   RES   SHR S  %CPU  %MEM     TIME+ COMMAND
...
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

top memory

top memory

Description

Shows memory utilization information.

Example

Showing top memory:

```
switch> top memory
top - 09:42:55 up 3 min, 3 users, load average: 3.44, 3.78, 1.70
Tasks: 76 total, 2 running, 74 sleeping, 0 stopped, 0 zombie
%Cpu(s): 31.4 us, 32.7 sy, 0.5 ni, 34.4 id, 04. wa, 0.0 hi, 0.6 si, 0.0 st
KiB Mem : 4046496 total, 2487508 free, 897040 used, 661948 buff/cache
KiB Swap: 0 total, 0 free, 0 used, 2859196 avail Mem

  PID USER      PRI  NI   VIRT   RES   SHR S  %CPU  %MEM     TIME+ COMMAND
...
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

usb

usb
no usb

Description

Enables the USB ports on the switch. This setting is persistent across switch reboots and management module failovers. Both active and standby management modules are affected by this setting.

The `no` form of this command disables the USB ports.

Example

Enabling USB ports:

```
switch(config)# usb
```

Disabling USB ports when a USB drive is mounted:

```
switch(config)# no usb
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

usb mount | unmount

usb {mount | unmount}

Description

Enables or disables the inserted USB drive.

Parameter	Description
mount	Enables the inserted USB drive.
unmount	Disables the inserted USB drive in preparation for removal.

Usage

If USB has been enabled in the configuration, the USB port on the active management module is available for mounting a USB drive. The USB port on the standby management module is not available. An inserted USB drive must be mounted each time the switch boots or fails over to a different management module.

A USB drive must be unmounted before removal.

The supported USB file systems are FAT16 and FAT32.

Examples

Mounting a USB drive in the USB port:

```
switch# usb mount
```

Unmounting a USB drive:


```
switch# usb unmount
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

container

```
container <CONTAINER-NAME>
no container <CONTAINER-NAME>
```

Description

Enters into the container configuration context.

The `no` form of this command removes the existing configurations of the specified container.

Example

Configures a new container:

```
switch(config)# container app
The feature being used requires a AOS-CX Advanced Software License.
For more information, refer to the HPE Aruba Networking CX Switch License
Subscription Ordering Guide.
```

This warning message is displayed only during creation, subsequent calls to the container context will not display the message.

Command History

Release	Modification
10.10	Command introduced

Command Information

Platforms	Command context	Authority
8100 8320 8325 8360 9300 10000	config config-container-<CONTAINER-NAME>	Administrators or local user group members with execution rights for this command.

env

```
env <NAME> value <VALUE>
env <NAME> encrypted {plaintext|ciphertext} <VALUE>
no env <NAME> value <VALUE>
no env <NAME> encrypted {plaintext|ciphertext} <VALUE>
```

Description

Configures an environment variable for a container that is composed of a key and a value pair. The key-value pair defines the behavior of the environment in a container and is used by the container processes. The value of the environment variable can be stored in the host system as an encrypted value. The container manager infrastructure provides the decrypted value to the container.

The **no** form of this command removes the configured environment variable from a container.



Configuring the **env** variable for an already operational container causes the container to restart.

Parameter	Description
<NAME>	Specifies the name of the container environment variables.
<VALUE>	Specifies the variable value.
encrypted	Encrypts the environment variable value.
plaintext	Specifies the variable value in plain text.
ciphertext	Specifies the variable value as previously encrypted text.

Command History

Release	Modification
10.10	Command introduced

Command Information

Platforms	Command context	Authority
8100 8320 8325 8360 9300 10000	config-container-<CONTAINER-NAME>	Administrators or local user group members with execution rights for this command.

container exec

```
container <NAME> exec <PARAMS>
```

Description

Allows the execution of an endpoint script in the container. The location of this endpoint is provided to the container manager infrastructure through a manifest file in the image file system of the container. This manifest file provides metadata related to the container application. When the exec command runs, the manifest information is used to determine the endpoint to execute and the user parameters are passed directly to the endpoint. The output of such execution is provided directly to the user through the CLI. In case the manifest information or the endpoint file are missing an error is presented to the user. User can interrupt the execution by using Ctrl+C.



If the container is not operational when the command is executed, the following error message is returned:
Failed to execute endpoint - The container is not operational.

Parameter	Description
<NAME>	Specifies a container name up to 64 characters long.
exec	Runs a container application command.
<PARAMS>	Specifies container command parameters.

Command History

Release	Modification
10.10	Command introduced

Command Information

Platforms	Command context	Authority
8100 8320 8325 8360 9300 10000	config-container-<CONTAINER-NAME>	Administrators or local user group members with execution rights for this command.

image-download-vrf

```
image-download-vrf <VRF-NAME>  
no image-download-vrf <VRF-NAME>
```

Description

Reserved for future use.

Command History

Release	Modification
10.10	Command introduced

Command Information

Platforms	Command context	Authority
8100 8320 8325 8360 9300 10000	config-container-<CONTAINER-NAME>	Administrators or local user group members with execution rights for this command.

image-location

image-location <URL> [vrf <VRF-NAME>]
no image-location <URL> [<VRF-NAME>]

Description

Configures the image location for a container. Modifying image location prompts an image upgrade. The `no` form of this command removes the configured location of a container.



- If the user sets a location value which does not follow the standard URL format, the following error message is returned: Failure to configure image location: Invalid URL
- If the user tries to use a VRF value that doesn't exist on the switch, the following error message is returned: Failure to configure image location: Invalid VRF

Parameter	Description
image-location	Configures the URL of the container application.
URL	Specifies the URL of the container application. URL supports HTTP protocol. The image-location URL can either be IPv4 or IPv6 address. The IPv6 address must be provided within square brackets.
vrf <VRF-NAME>	Specifies the VRF of the image URL.

Examples

Configures the image location for the IPv4 setting:

```
switch(config)# image-location http://10.0.0.1/container.img vrf mgmt
```

Appends the port to the address if the image server is running on a port other than HTTP for an IPv4 setting:

```
switch(config)# image-location http://10.0.0.1:9050/container.img vrf mgmt
```

Configures image location for IPv6 setting by wrapping IP address between square brackets:

```
switch(config)# image-location http://[2001::2]/container.img vrf mgmt
```

Specifies port number by appending it with the IPv6 address:

```
switch(config)# image-location http://[2001::2]:9050/container.img vrf mgmt
```

Release	Modification
10.10	Command introduced.

Command Information

Platforms	Command context	Authority
8100 8320 8325 8360 9300 10000	config-container- <i><CONTAINER-NAME></i>	Administrators or local user group members with execution rights for this command.

restrict cpu

```
restrict cpu <PERCENTAGE>  
no restrict cpu
```

Description

Configures limitations for the container CPU usage. The CPU constraint is set as a percentage of the total switch CPUs. A container can use up to 20% of the total CPU capacity of the device.



Configuring the CPU constraint for an already operational container will cause the container to restart.

The `no` form of this command removes restrictions on the CPU usage.

Parameter	Description
<i><PERCENTAGE></i>	Specifies percentage for the container CPU usage, The default value is 10%.

Command History

Release	Modification
10.10	Command introduced

Command Information

Platforms	Command context	Authority
8100 8320 8325 8360 9300 10000	config-container-<CONTAINER-NAME>	Administrators or local user group members with execution rights for this command.

restrict memory

```
restrict memory <MB>
no restrict memory
```

Description

Configures limitations for memory usage of the container. The memory constraint is set in MB, and the maximum 20% of the capacity of the device can be configured. Configuring the memory constraint for an already operational container restarts the container.

The `no` form of this command removes restrictions on the memory usage.

Parameter	Description
<MB>	Specifies the maximum memory usage in MB. The default value is 256 MB.

Command History

Release	Modification
10.10	Command introduced

Command Information

Platforms	Command context	Authority
8100 8320 8325 8360 9300 10000	config-container-<CONTAINER-NAME>	Administrators or local user group members with execution rights for this command.

restrict storage

```
restrict storage <MB>
no restrict storage
```

Description

Configures limitations of container storage usage specified in MB. The range is 1 MB-4096 MB. Default value is 512 MB.

The `no` form of this command removes restrictions on the usage of storage.

Parameter	Description
<MB>	Configures the maximum storage usage in MB. The default value is 512 MB.

Command History

Release	Modification
10.10	Command introduced

Command Information

Platforms	Command context	Authority
8100 8320 8325 8360 9300 10000	config-container-<CONTAINER-NAME>	Administrators or local user group members with execution rights for this command.

show container

show container [<CONTAINER-NAME>]

Description

Shows the configuration and status information of the containers running in the system. If the container name is not specified, displays information of all the containers. When a container name is specified, displays information specific to the container.

Parameter	Description
<CONTAINER-NAME>	Specifies the name of the container for which information need to be specified.

Examples

Shows configured container information:

```
switch# show container
Container          : app
Container status   : operational
Manifest status    : success
Image status       : verified
Image version      : 1.0.0
Image location VRF : mgmt
Image location URL  : http://30.0.0.2:8000/container.img
CPU limit          : 10%
Memory limit       : 512 MB
VRFs               : mgmt
Environment variables:
```



```
PYP=/usr/bin/python3
Encrypted environment variables:
  encryptedVar1
  encryptedVar2
```

Shows additional error messages:

```
switch#show container
Container      : app
Container status : configuration failed
Config failure reason : Multiple definitions of environment variable PYP
Manifest status : error
Manifest status reason : 'exec' file not found in container
Image status    : verified
Image version   : 1.0.0
Image location VRF : mgmt
Image location URL : http://30.0.0.2:8000/container.img
CPU limit      : 10%
Memory limit   : 512 MB
VRFs           : mgmt
Environment variables :
  PYP=/usr/bin/python3
Encrypted environment variables:
  PYP
  encryptedVar2
```

Shows details when there are no configured containers:

```
switch# show container
No containers configured
```

Command History

Release	Modification
10.10	Command introduced

Command Information

Platforms	Command context	Authority
8100 8320 8325 8360 9300 10000	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show capacities containers

```
show capacities containers
```

Description

Shows the maximum number of containerized applications that can be configured in the system.

Examples

Shows maximum number of containerized applications that can be configured:

```
switch# show capacities containers
System Capacities: Filter CONTAINERS
Capacities Name                                     Value
-----
Maximum number of containerized applications configurable in the system 2
2
```

Command History

Release	Modification
10.10	Command introduced

Command Information

Platforms	Command context	Authority
8100 8320 8325 8360 9300 10000	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show capacities-status containers

show capacities-status containers

Description

Reserved for future use.

Command History

Release	Modification
10.10	Command introduced

Command Information

Platforms	Command context	Authority
8100 8320 8325 8360 9300 10000	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show running-config container

show running-config container

Description

Shows the running configuration of all the containers.

Parameter	Description
container	Specifies that container running configuration must be displayed.

Examples

Shows the running configuration for the container:

```
container app1
  image-location http://30.0.0.2:8000/container.img vrf mgmt
  restrict cpu 10
  restrict memory 512
  vrf attach mgmt
  env PYP value /usr/bin/python3
  env encryptedVar1 encrypted ciphertext
  AQBapcmUTCvdagTGkLA3m6NsslLgN0dxqUP0j+CCaCxVdz7oEwAAAOmmBmgPHGavS+6GkgmtwE4NU1Y=

container app2
  image-location http://[2001::2]:8000/changeValidation_x86_t.img vrf mgmt
  restrict cpu 5
  restrict memory 256
  vrf attach mgmt
  env PYP value /usr/bin/python3
  env encryptedVar1 encrypted ciphertext
  AQBapcmUTCvdagTGkLA3m6NsslLgN0dxqUP0j+CCaCxVdz7oEwAAAOmmBmgPHGavS+6GkgmtwE4NU1Y=
  env encryptedVar2 encrypted ciphertext
  AQBapY4V4v9UtDaazZaaJMeROhUizlVYVrTKKpa1N1bABTYICQAAACiXj/d3ZtBSYg==
```

Command History

Release	Modification
10.10	Command introduced

Command Information

Platforms	Command context	Authority
8100 8320 8325 8360 9300 10000	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

vrf

vrf <VRF-NAME>

Description

Allows container L3 connectivity using the given VRF. The container network namespace is connected to the VRF using the source NAT.

Parameter	Description
<VRF-NAME>	Specifies the <i>VRF-NAME</i> used by the container application.

Command History

Release	Modification
10.10	Command introduced

Command Information

Platforms	Command context	Authority
8100 8320 8325 8360 9300 10000	config-container-<CONTAINER-NAME>	Administrators or local user group members with execution rights for this command.

Accessing Aruba Support

Aruba Support Services	https://www.arubanetworks.com/support-services/
AOS-CX Switch Software Documentation Portal	https://www.arubanetworks.com/techdocs/AOS-CX/help_portal/Content/home.htm
Aruba Support Portal	https://asp.arubanetworks.com/
North America telephone	1-800-943-4526 (US & Canada Toll-Free Number) +1-408-754-1200 (Primary - Toll Number) +1-650-385-6582 (Backup - Toll Number - Use only when all other numbers are not working)
International telephone	https://www.arubanetworks.com/support-services/contact-support/

Be sure to collect the following information before contacting Support:

- Technical support registration number (if applicable)
- Product name, model or version, and serial number
- Operating system name and version
- Firmware version
- Error messages
- Product-specific reports and logs
- Add-on products or components
- Third-party products or components

Other useful sites

Other websites that can be used to find information:

Airheads social forums and Knowledge Base	https://community.arubanetworks.com/
AOS-CX Switch Software Documentation Portal	https://www.arubanetworks.com/techdocs/AOS-CX/help_portal/Content/home.htm

Aruba Hardware Documentation and Translations Portal	https://www.arubanetworks.com/techdocs/hardware/DocumentationPortal/Content/home.htm
Aruba software	https://asp.arubanetworks.com/downloads
Software licensing	https://lms.arubanetworks.com/
End-of-Life information	https://www.arubanetworks.com/support-services/end-of-life/
Aruba Developer Hub	https://developer.arubanetworks.com/

Accessing Updates

You can access updates from the Aruba Support Portal or the HPE My Networking Website.

Aruba Support Portal

<https://asp.arubanetworks.com/downloads>

If you are unable to find your product in the Aruba Support Portal, you may need to search My Networking, where older networking products can be found:

My Networking

<https://www.hpe.com/networking/support>

To view and update your entitlements, and to link your contracts and warranties with your profile, go to the Hewlett Packard Enterprise Support Center **More Information on Access to Support Materials** page:

<https://support.hpe.com/portal/site/hpsc/aae/home/>

Access to some updates might require product entitlement when accessed through the Hewlett Packard Enterprise Support Center. You must have an HP Passport set up with relevant entitlements.

Some software products provide a mechanism for accessing software updates through the product interface. Review your product documentation to identify the recommended software update method.

To subscribe to eNewsletters and alerts:

<https://asp.arubanetworks.com/notifications/subscriptions> (requires an active Aruba Support Portal (ASP) account to manage subscriptions). Security notices are viewable without an ASP account.

Warranty Information

To view warranty information for your product, go to <https://www.arubanetworks.com/support-services/product-warranties/>.

Regulatory Information

To view the regulatory information for your product, view the *Safety and Compliance Information for Server, Storage, Power, Networking, and Rack Products*, available at <https://www.hpe.com/support/Safety-Compliance-EnterpriseProducts>

Additional regulatory information

Aruba is committed to providing our customers with information about the chemical substances in our products as needed to comply with legal requirements, environmental data (company programs, product recycling, energy efficiency), and safety information and compliance data, (RoHS and WEEE). For more information, see <https://www.arubanetworks.com/company/about-us/environmental-citizenship/>.

Documentation Feedback

Aruba is committed to providing documentation that meets your needs. To help us improve the documentation, send any errors, suggestions, or comments to Documentation Feedback (docsfeedback-switching@hpe.com). When submitting your feedback, include the document title, part number, edition, and publication date located on the front cover of the document. For online help content, include the product name, product version, help edition, and publication date located on the legal notices page.