



AOS-CX IP Services Guide (8400 Switch series)

AOS-CX IP Services Guide (8400 Switch series)

Published: February 2026

© Copyright 2026 – Hewlett Packard Enterprise Development LP

Notices

The information provided here is subject to change without notice. Hewlett Packard Enterprise's products and services are covered only by the express warranty statements that come with them. This document does not constitute an additional warranty. Hewlett Packard Enterprise is not responsible for any technical or editorial errors or omissions in this document.

Confidential computer software. You must have a valid license from Hewlett Packard Enterprise to possess, use, or copy the software. In accordance with FAR 12.211 and 12.212, Commercial Computer Software, Computer Software Documentation, and Technical Data for Commercial Items are licensed to the U.S. Government under the vendor's standard commercial license.

Links to third-party websites will take you outside of the Hewlett Packard Enterprise website. Hewlett Packard Enterprise has no control over and is not responsible for the information outside the Hewlett Packard Enterprise website.

Acknowledgments

Adobe, the Adobe logo, Acrobat, and the Adobe PDF logo are either registered trademarks or trademarks of Adobe in the United States and/or other countries.

AMD, the AMD Arrow symbol, ATI, and the ATI logo are trademarks of Advanced Micro Devices, Inc.

Ampere®, Altra®, and the A®, and Ampere® logos are registered trademarks or trademarks of Ampere Computing.

Arm® is a registered trademark of Arm Limited (or its subsidiaries) in the U.S. and/or elsewhere.

Bluetooth is a trademark owned by its proprietor and used by Hewlett Packard Enterprise under license.

DLTape logo and SDLTape logo are trademarks of Quantum Corporation in the U.S. and other countries.

Docker and the Docker logo are trademarks or registered trademarks of Docker, Inc. in the United States and/or other countries.

ENERGY STAR® and the ENERGY STAR® mark are registered U.S. marks.

Google™ and the Google Logo are registered trademarks of Google LLC.

Graphcore®, the Graphcore wordmark and Poplar® are registered trademarks of Graphcore Ltd.

Intel Inside®, the Intel Inside logo, Intel®, the Intel logo, Itanium®, Itanium® 2-based, and Xeon® are trademarks of Intel Corporation in the U.S. and other countries.

Linux® is the registered trademark of Linus Torvalds in the U.S. and other countries.

McAfee® and the M-shield logo are trademarks or registered trademarks of McAfee, LLC or its subsidiaries in the United States and other countries.

Microsoft® and Windows® are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

MLCommons™, MLPerf™, and MLCube™ are trademarks and service marks of MLCommons Association in the United States and other countries.

NVIDIA® and NVIDIA logos are trademarks and/or registered trademarks of NVIDIA Corporation in the U.S. and other countries.

Oracle®, Java, and MySQL are registered trademarks of Oracle and/or its affiliates.

Qualcomm® and the Qualcomm logo are trademarks of Qualcomm Incorporated, registered in the United States and other countries, used with permission.

Red Hat® is a registered trademark of Red Hat, Inc. in the United States and other countries.

SAP®, SAP HANA®, and SAP S/4HANA® are the trademarks or registered trademarks of SAP SE or its affiliates in Germany and in other countries.

SAS®, the SAS® logo, EVAAS®, JMP®, the JMP® logo, IDaaS™, SAS/ACCESS®, SAS/ASSIST®, SAS/ETS®, SAS/FSP®, SAS/GRAPH®, SAS/IML®, SAS/OR®, SAS/QC®, SAS/SHARE®, THE POWER TO KNOW®, and VIYA® are registered trademarks or trademarks of SAS Institute, Inc.

sFlow® is a registered trademark of InMon Corp.

TOGAF® is a registered trademark of The Open Group. IT4IT™ is a trademark of The Open Group.

UNIX® is a registered trademark of The Open Group.

VMware®, VMware NSX®, VMware vCenter®, and VMware vSphere® are registered trademarks or trademarks of VMware, Inc. and its subsidiaries in the United States and other jurisdictions.

X/Open® is a registered trademark, and the X device is a trademark of X/Open Company Ltd. in the UK and other countries.

All third-party marks are property of their respective owners.

Open source code

This product includes code licensed under certain open source licenses which require source compliance. The corresponding source for these components is available upon request. This offer is valid to anyone in receipt of this information and shall expire three years following the date of the final distribution of this product version by Hewlett Packard Enterprise Company. To obtain such source code, please check if the code is available in the HPE Software Center at <https://myenterpriselicense.hpe.com/cwp-ui/software> but, if not, send a written request for specific software version and product for which you want the open source code. Along with the request, please send a check or money order in the amount of US \$10.00 to:

Hewlett Packard Enterprise Company

Attn: General Counsel

WW Corporate Headquarters

1701 E Mossy Oaks Rd, Spring, TX 77389

United States of America.



Legal disclaimer

The resource assets in this document may include abbreviated and/or legacy terminology for products. See www.arubanetworks.com for current and complete product lines and names.

Table of contents

About this document.....	14
Applicable products.....	14
Latest version available online.....	14
Command syntax notation conventions.....	14
About the examples.....	15
Identifying switch ports and interfaces.....	16
Identifying modular switch components.....	17
IRDP.....	17
Configuring IRDP	19
IRDP commands.....	20
IRDP commands.....	20
diag-dump irdp basic	20
ip irdp	22
ip irdp holdtime	23
ip irdp maxadvertinterval	25
ip irdp minadvertinterval	26
ip irdp preference	27
show ip irdp	28
IPv6 Router Advertisement.....	30
Configuring IPv6 RA	31
IPv6 RA scenario.....	33
IPv6 RA commands.....	34
IPv6 RA commands.....	34
ipv6 address <global-unicast-address>	35
ipv6 address autoconfig	36
ipv6 address link-local	38
ipv6 nd cache-limit	39
ipv6 nd dad attempts	40
ipv6 nd hop-limit	41
ipv6 nd mtu	42
ipv6 nd ns-interval	43
ipv6 nd prefix	44
ipv6 nd ra dns search-list	46
ipv6 nd ra dns server	48

ipv6 nd ra lifetime	49
ipv6 nd ra managed-config-flag	50
ipv6 nd ra max-interval	52
ipv6 nd ra min-interval	53
ipv6 nd ra other-config-flag	54
ipv6 nd ra reachable-time	55
ipv6 nd ra retrans-timer	56
ipv6 nd route	57
ipv6 nd router-preference	59
ipv6 nd suppress-ra	60
show ipv6 nd global traffic	61
show ipv6 nd interface	62
show ipv6 nd interface prefix	68
show ipv6 nd interface route	70
show ipv6 nd ra dns search-list	72
show ipv6 nd ra dns server	73
sFlow.....	74
sFlow agent.....	74
Configuring the sFlow agent	76
sFlow scenario.....	77
sFlow scenario 2.....	80
sFlow agent commands.....	84
sFlow agent commands.....	84
clear sflow statistics	84
sflow	85
sflow agent-ip	87
sflow collector	88
sflow disable	89
sflow header-size	90
sflow max-datagram-size	91
sflow mode	92
sflow polling	94
sflow sampling	95
show sflow	96
DHCP.....	99
DHCP client.....	100
Protocol and feature details.....	100
Supported platform and standards.....	101

Configuration task list.....	101
Considerations and best practices.....	102
Use case.....	102
DHCP client commands.....	104
DHCP client commands.....	104
ip dhcp	104
ipv6 dhcp	106
ip dhcp option	108
ip dhcp preferred-vlan	110
show ip dhcp	111
show ipv6 dhcp	112
show ip dhcp preferred-vlan	113
DHCP relay agent.....	114
Supported platform and standards.....	115
Protocol and feature details.....	116
DHCPv4 relay agent.....	117
Configuring the DHCPv4 relay agent	119
Use Case.....	121
DHCPv4 relay scenario 1.....	121
DHCPv4 relay scenario 2.....	122
DHCPv4 relay scenario 3	124
DHCPv4 relay scenario 4	126
DHCPv4 relay commands.....	129
DHCPv4 relay commands.....	129
dhcp-relay	129
dhcp-relay hop-count-increment	130
dhcp-relay l2vpn-clients	131
dhcp-smart-relay	132
diag-dump dhcp-relay basic	133
ip bootp-gateway	137
ip helper-address	138
show dhcp-relay	139
show dhcp-relay bootp-gateway	141
show ip helper-address	142
DHCPv6 relay agent.....	143
Configuring the DHCPv6 relay agent	144
Use Case.....	145
DHCPv6 relay scenario 1.....	146

DHCPv6 relay scenario 2.....	149
DHCP relay (IPv6) commands.....	150
DHCP relay (IPv6) commands.....	150
dhcpv6-relay	151
dhcpv6-relay option 79	152
diag-dump dhcpv6-relay basic	153
ipv6 helper-address	154
show dhcpv6-relay	156
show ipv6 helper-address	157
Troubleshooting.....	158
DHCP server.....	160
Protocol and feature details.....	161
Supported platform and standards.....	162
Configuring a DHCPv4 server on a VRF	162
Configuring the DHCPv6 server on a VRF	164
DHCP server IPv4 commands.....	166
DHCP server IPv4 commands.....	166
authoritative	167
bootp	168
clear dhcp-server leases	169
default-router	171
dhcp-server external-storage	172
dhcp-server vrf	173
disable	174
dns-server	175
domain-name	176
enable	177
lease	178
netbios-name-server	179
netbios-node-type	181
option	182
pool	184
range	185
show dhcp-server	187
static-bind	189
DHCP server IPv6 commands.....	191
DHCP server IPv6 commands.....	191
authoritative	192

clear dhcpv6-server leases	193
dhcpv6-server external-storage	194
dhcpv6-server vrf	196
disable	197
dns-server	198
enable	199
lease	200
option	201
pool	203
range	204
show dhcpv6-server	205
static-bind	208
Troubleshooting.....	209
FAQ.....	210
DHCP snooping.....	212
Protocol details.....	214
Supported platform and standards.....	215
DHCPv4 Snooping Use case.....	216
DHCPv4 snooping commands.....	219
DHCP snooping commands.....	220
clear dhcp-snooping binding	220
clear dhcp-snooping statistics	222
dhcp-snooping	223
dhcp-snooping (in config-vlan context)	224
dhcp-snooping allow-overwrite-binding	225
dhcp-snooping authorized-server	226
dhcp-snooping event-log client	228
dhcp-snooping external-storage	229
dhcp-snooping flash-storage	230
dhcp-snooping max-bindings	232
dhcp-snooping option 82	233
dhcp-snooping static-attributes	235
dhcp-snooping trust	236
dhcp-snooping verify mac	237
show dhcp-snooping	238
show dhcp-snooping binding	240
show dhcp-snooping statistics	242
DHCPv6 snooping commands.....	244

DHCPv6 snooping commands.....	244
clear dhcpv6-snooping binding	245
clear dhcpv6-snooping guard-policy statistics	246
clear dhcpv6-snooping statistics	247
dhcpv6-snooping	248
dhcpv6-snooping guard-policy	249
dhcpv6-snooping (in config-vlan context)	251
dhcpv6-snooping authorized-server	252
dhcpv6-snooping event-log client	253
dhcpv6-snooping external-storage	254
dhcpv6-snooping flash-storage	256
dhcpv6-snooping max-bindings	258
dhcpv6-snooping trust	259
match client prefix-list	260
match server access-list	261
preference	262
show dhcpv6-snooping guard-policy	264
show dhcpv6-snooping guard-policy interface	266
show dhcpv6-snooping guard-policy vlan	267
show dhcpv6-snooping	268
show dhcpv6-snooping binding	270
show dhcpv6-snooping statistics	271
Troubleshooting.....	272
DHCP Options.....	274
DHCP Options commands.....	275
DHCP options commands.....	275
http-proxy	276
IP Tunnels.....	278
Configuring an IP tunnel	279
Creating a GRE tunnel for traversing a public network.....	280
Creating two GRE tunnels to different destination addresses.....	282
Creating an IPv6 in IPv4 tunnel for traversing a public network.....	286
Creating an IPv6 in IPv6 tunnel for traversing a public network.....	288
IP tunnels commands.....	290
IP tunnels commands.....	290
description	291
destination ip	292
destination ipv6	294

interface tunnel	295
ip address	297
ipv6 address	298
ip mtu	300
show interface tunnel	302
show running-config interface tunnel	304
shutdown	306
source ip	307
source ipv6	309
ttl	310
vrf attach	311
IP Source Lockdown.....	313
IP source lockdown commands.....	314
IPv4 source lockdown commands.....	314
IPv4 source lockdown commands.....	314
ipv4 source-binding	314
ipv4 source-lockdown	316
ipv4 source-lockdown hardware retry	317
show ipv4 source-binding	319
show ipv4 source-lockdown	320
IPv6 source lockdown commands.....	323
IPv6 source lockdown commands.....	324
ipv6 source-binding	324
ipv6 source-lockdown	326
ipv6 source-lockdown hardware retry	327
show ipv6 source-binding	328
show ipv6 source-lockdown	329
Internet Control Message Protocol (ICMP).....	333
ICMP message types.....	333
When ICMP messages are sent.....	334
ICMP redirect messages.....	335
When ICMP redirect messages are sent.....	335
ICMP commands.....	335
ICMP commands.....	335
ip icmp redirect	336
ip icmp throttle	336
ip icmp unreachable	338
DNS.....	338

DNS client.....	339
Configuring the DNS client	339
Fully Qualified Domain Name Resolver.....	341
DNS client commands.....	342
DNS client commands.....	342
ip dns domain-list	343
ip dns domain-name	344
ip dns host	345
ip dns server address	347
ip dns fqdn-resolver refresh-interval	348
ip dns fqdn-resolver force-refresh	349
show ip dns	351
Show FQDN Resolver	354
Show IP DNS FQDN Resolver Detail	355
Show IP DNS FQDN Resolver Refresh Interval	358
ARP.....	358
Configuring proxy ARP	363
Configuring local proxy ARP	363
ARP commands.....	364
ARP commands.....	364
arp inspection	365
arp inspection trust	366
arp ip	367
arp process-grat-arp	368
clear arp	370
debug arp-security	371
ip proxy-arp	373
ipv6 local-proxy-nd	374
ipv6 neighbor mac	376
show arp	377
show arp inspection interface	378
show arp inspection statistics	380
show arp inspection vlan	381
show arp state	383
show arp summary	385
show arp timeout	386
show arp vrf	388
show ipv6 neighbors	389

show ipv6 neighbors state	391
show tech arp-security	392
Network Load Balancing (NLB).....	394
NLB commands.....	395
NLB commands.....	395
arp ip mac	395
show arp	396
show ip igmp snooping vlan group	397
Support and Other Resources.....	399
Accessing HPE Aruba Networking Support.....	399
Accessing Updates.....	400
Warranty Information.....	401
Regulatory Information.....	401
Documentation Feedback.....	401

About this document

This document describes features of the AOS-CX network operating system. It is intended for administrators responsible for installing, configuring, and managing HPE Aruba Networking switches on a network.

Subtopics

Applicable products

Latest version available online

Command syntax notation conventions

About the examples

Identifying switch ports and interfaces

Identifying modular switch components

Applicable products

This document applies to the following products:

- HPE Aruba Networking 8400 Switch Series (JL366A, JL363A, JL687A)

Latest version available online

Updates to this document can occur after initial publication. For the latest versions of product documentation, see the links provided in [Support and Other Resources](#).

Command syntax notation conventions

Convention	Usage
example - text	Identifies commands and their options and operands , code examples, filenames, pathnames, and output displayed in a command window. Items that appear like the example text in the previous column are to be entered exactly as shown and are required unless enclosed in brackets ([]).

Convention	Usage
example - text	In code and screen examples, indicates text entered by a user.
Any of the following: • <code><example - text></code> • <code><example - text></code> • <code>example - text</code> • <code>example - text</code>	Identifies a placeholder—such as a parameter or a variable—that you must substitute with an actual value in a command or in code: • For output formats where italic text cannot be displayed, variables are enclosed in angle brackets (<code>< ></code>). Substitute the text—including the enclosing angle brackets—with an actual value. • For output formats where italic text can be displayed, variables might or might not be enclosed in angle brackets. Substitute the text including the enclosing angle brackets, if any, with an actual value.
	Vertical bar. A logical OR that separates multiple items from which you can choose only one. Any spaces that are on either side of the vertical bar are included for readability and are not a required part of the command syntax.
{ }	Braces. Indicates that at least one of the enclosed items is required.
[]	Brackets. Indicates that the enclosed item or items are optional.
... or	Ellipsis:
...	• In code and screen examples, a vertical or horizontal ellipsis indicates an omission of information. • In syntax using brackets and braces, an ellipsis indicates items that can be repeated. When an item followed by ellipses is enclosed in brackets, zero or more items can be specified.

About the examples

Examples in this document are representative and might not match your particular switch or environment.

The slot and port numbers in this document are for illustration only and might be unavailable on your switch.

Understanding the CLI prompts

When illustrating the prompts in the command line interface (CLI), this document uses the generic term **switch**, instead of the host name of the switch. For example:

```
switch>
```

The CLI prompt indicates the current command context. For example:

```
switch>
```

Indicates the operator command context.

```
switch#
```

Indicates the manager command context.

```
switch(CONTEXT-NAME) #
```

Indicates the configuration context for a feature. For example:

```
switch(config-if) #
```

Identifies the **interface** context.

Variable information in CLI prompts

In certain configuration contexts, the prompt may include variable information. For example, when in the VLAN configuration context, a VLAN number appears in the prompt:

```
switch(config-vlan-100) #
```

When referring to this context, this document uses the syntax:

```
switch(config-vlan-<VLAN-ID>) #
```

Where <VLAN-ID> is a variable representing the VLAN number.

Identifying switch ports and interfaces

Physical ports on the switch and their corresponding logical software interfaces are identified using the format: **member/slot/port**.

On the HPE Aruba Networking 8400 Switch Series

- member: Always 1. VSF is not supported on this switch.
- slot: Specifies physical location of a module in the switch chassis.
 - Management modules are on the front of the switch in slots 1/5 and 1/6.
 - Line modules are on the front of the switch in slots 1/1 through 1/4, and 1/7 through 1/10.
- port: Physical number of a port on a line module

For example, the logical interface **1/1/4** in software is associated with physical port 4 in slot 1 on member 1.

Identifying modular switch components

- Power supplies are on the front of the switch behind the bezel above the management modules. Power supplies are labeled in software in the format: member/power supply:
 - member: 1.
 - power supply: 1 to 4.
- Fans are on the rear of the switch and are labeled in software as: member/tray/fan:
 - member: 1.
 - tray: 1 to 4.
 - fan: 1 to 4.
- Fabric modules are not labeled on the switch but are labeled in software in the format: member/module:
 - member: 1.
 - member: 1 or 2.
- The display module on the rear of the switch is not labeled with a member or slot number.

IRDP

ICMP Router Discovery Protocol (IRDP), an extension of the ICMP, is independent of any routing protocol. It allows hosts to discover the IP addresses of neighboring routers that can act as default gateways to reach devices on other IP networks.

IRDP operation

IRDP uses the following types of ICMP messages:

- Router advertisement (RA): Sent by a router to advertise IP addresses (including the primary and secondary IP addresses) and preference.
- Router solicitation (RS): Sent by a host to request the IP addresses of routers on the subnet.

An interface with IRDP enabled periodically broadcasts or multicasts an RA message to advertise its IP addresses. A receiving host adds the IP addresses to its routing table, and selects the IP address with the highest preference as the default gateway.

When a host attached to the subnet starts up, the host multicasts an RS message to request immediate advertisements. If the host does not receive any advertisements, it retransmits the RS several times. If the host does not discover the IP addresses of neighboring routers because of network problems, the host can still discover them from periodic RAs.

IRDP allows hosts to discover neighboring routers, but it does not suggest the best route to a destination. If a host sends a packet to a router that is not the best next hop, the host will receive an ICMP redirect message from the router.

IP address preference

Every IP address advertised in RAs has a preference value. A larger preference value represents a higher preference. The IP address with the highest preference is selected as the default gateway address.

You can specify the preference for IP addresses to be advertised on a router interface.

An address with the minimum preference value (-2147483648) will not be used as a default gateway address.

Lifetime of an IP address

An RA contains a lifetime field that specifies the lifetime of advertised IP addresses. If the host does not receive a new RA for an IP address within the address lifetime, the host removes the route entry.

All the IP addresses advertised by an interface have the same lifetime.

Advertising interval

A router interface with IRDP enabled sends out RAs randomly between the minimum and maximum advertising intervals. This mechanism prevents the local link from being overloaded by a large number of RAs sent simultaneously from routers.

As a best practice, shorten the advertising interval on a link that suffers high packet loss rates

Destination address of RA

An RA uses either of the following destination IP addresses:

- Broadcast address 255.255.255.255.
- Multicast address 224.0.0.1, which identifies all hosts on the local link.

By default, the destination IP address of an RA is the multicast address. If all listening hosts in a local area network support IP multicast, specify 224.0.0.1 as the destination IP address.

Proxy-advertised IP addresses

By default, an interface advertises its primary and secondary IP addresses. You can specify IP addresses of other gateways for an interface to proxy-advertise.

VRF support

In IP-based computer networks, virtual routing and forwarding (VRF) is a technology that allows multiple instances of a routing table to co-exist within the same router at the same time. Because the routing instances are independent, the same or overlapping IP addresses can be used without conflicting with each other.

IRDP is VRF aware. As the router advertisements and solicit processing occurs on the interface, packet is through the interface and corresponding VRF.

VSX synchronization

IRDP supports VSX synchronization. For more information on using VSX, see the Virtual Switching Extension (VSX) Guide for your switch and software version

Subtopics

Configuring IRDP

IRDP commands

Configuring IRDP

Prerequisites

A layer 3 interface.

Procedure

1. Enable IRDP on an interface with the command `ip irdp`.
2. Set the maximum hold time with the command `ip irdp holdtime`.
3. Set the maximum router advertisement interval with the command `ip irdp maxadvertinterval`.
4. Set the minimum router advertisement interval with the command `ip irdp minadvertinterval`.
5. Set the IRDP preference level with the command `ip irdp preference`.
6. Review IRDP configuration settings with the command `show ip irdp`.

Example

This example creates the following configuration:

- Enables IRDP on the layer 3 interface 1/1/1 with packet type set to broadcast.
- Sets the hold time to 5000 seconds.

- Sets the advertisement interval to 30 seconds.
- Sets the minimum advertisement interval to 25 seconds.
- Sets the IRDP preference level to 25.

```
switch(config)# interface 1/1/1

switch(config-if)# ip irdp broadcast
switch(config-if)# ip irdp holdtime 5000
switch(config-if)# ip irdp maxadvertinterval 30
switch(config-if)# ip irdp minadvertinterval 25
switch(config-if)# ip irdp preference 25
```

IRDP commands

Subtopics

IRDP commands

IRDP commands

Select a command from the list in the left navigation menu.

Subtopics

diag-dump irdp basic

ip irdp

ip irdp holdtime

ip irdp maxadvertinterval

ip irdp minadvertinterval

ip irdp preference

show ip irdp

diag-dump irdp basic

Syntax

```
diag-dump irdp basic
```

Description

Displays diagnostic information for IRDP.

Example

```
switch# diag-dump irdp basic
=====
[Start] Feature irdp Time : Thu Jun  8 09:50:28 2017
=====
-----
[Start] Daemon hpe-rdiscd
-----
Interface: 1/1/1 (state : Up)
rdisc ipv4 (enabled: 0, max:600, min:450, hold:1800, pref:0, isBcast:0)
Router IPs - 192.168.1.2,
Interface: 1/1/2 (state : Up)
rdisc ipv4 (enabled: 0, max:600, min:450, hold:1800, pref:0, isBcast:0)
Router IPs - 192.168.2.2,
-----
[End] Daemon hpe-rdiscd
-----
=====
[End] Feature irdp
=====
Diagnostic dump captured for feature irdp
switch# diag-dump irdp basic
=====
[Start] Feature irdp Time : Thu Jan  7 04:46:25 2021
=====
-----
[Start] Daemon hpe-rdiscd
-----
Interface: vlan2 (state : Down)
rdisc ipv4 (enabled: 1, max:600, min:450, hold:1800, pref:0, isBcast:0)
No advertisable IPv4 addresses on the interface
Interface: vlan1 (state : Down)
rdisc ipv4 (enabled: 0, max:600, min:450, hold:1800, pref:0, isBcast:0)
No advertisable IPv4 addresses on the interface
-----
[End] Daemon hpe-rdiscd
-----
=====
[End] Feature irdp
```

=====

Diagnostic-dump captured for feature irdp

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

ip irdp

Syntax

```
ip irdp [broadcast | multicast]
no ip irdp
```

Description

Enables IRDP on an interface and specifies the packet type that is used to send advertisements. By default, the packet type is set to `multicast`. IRDP is only supported on layer 3 interfaces.

The **no** form of this command disables IRDP on an interface.

Parameter	Description
<code>broadcast</code>	Advertisements are sent as broadcast packets to IP address 255.255.255.255.
<code>multicast</code>	Advertisements are sent as multicast packets to the multicast group with IP address 24.0.0.1. Default.

Examples

Enabling IRDP on interface 1/1/1 with packet type set to the default value (multicast).

```
switch(config)# interface 1/1/1

switch(config-if)# ip irdp
```

Enabling IRDP on interface 1/1/1 with packet type set to broadcast.

```
switch(config)# interface 1/1/1

switch(config-if)# ip irdp broadcast
```

Disabling IRDP.

```
switch(config)# interface 1/1/1

switch(config-if)# no ip irdp
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	config-if	Administrators or local user group members with execution rights for this command.

ip irdp holdtime

Syntax

```
ip irdp holdtime <TIME>
no ip irdp holdtime <TIME>
```

Description

Specifies the maximum amount of time the host will consider an advertisement to be valid until a newer advertisement arrives. When a new advertisement arrives, hold time is reset. Hold time must be greater than or equal to the maximum advertisement interval. Therefore, if the hold time for an advertisement expires, the host can reasonably conclude that the router interface that sent the advertisement is no longer available. The default hold time is three times the maximum advertisement interval.

The **no** form of this command removes the specified maximum amount of time the host will consider an advertisement to be valid until a newer advertisement arrives and update it to the default value.

Parameter	Description
<code><TIME></code>	Specifies the lifetime of router advertisements sent from this interface. Range: 4 to 9000 seconds. Default: 1800 seconds.

Example

Setting the hold time for interface 1/1/1 to 5000 seconds:

```
switch(config) # interface 1/1/1
switch(config-if) # ip irdp holdtime 5000
```

Removing the the hold time for interface 1/1/1 to 5000 seconds:

```
switch(config) # interface 1/1/1
switch(config-if) # no ip irdp holdtime 5000
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	<code>config-if</code>	Administrators or local user group members with execution rights for this command.

ip irdp maxadvertinterval

Syntax

```
ip irdp maxadvertinterval <TIME>
no ip irdp maxadvertinterval <TIME>
```

Description

Specifies the maximum router advertisement interval.

The **no** form of this command removes the specified maximum router advertisement interval and reverts to the default value.

Parameter	Description
<TIME>	Specifies the maximum time allowed between the sending of unsolicited router advertisements. Range: 4 to 1800 seconds. Default: 600 seconds.

Example

Setting the advertisement interval for interface 1/1/1 to 30 seconds:

```
switch(config) # interface 1/1/1
switch(config-if) # ip irdp maxadvertinterval 30
```

Removing the advertisement interval for interface 1/1/1 to 30 seconds:

```
switch(config) # interface 1/1/1
switch(config-if) # no ip irdp maxadvertinterval 30
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	<code>config-if</code>	Administrators or local user group members with execution rights for this command.

ip irdp minadvertinterval

Syntax

```
ip irdp minadvertinterval <TIME>
no ip irdp minadvertinterval <TIME>
```

Description

Specifies the minimum amount of time the switch waits between sending router advertisements. By default, this value is automatically set by the switch to be 75% of the value configured for maximum router advertisement interval. Use this command to override the automatically configured value.

The **no** form of this command removes the specified minimum amount of time the switch waits between sending router advertisements and reverts to the default value.

Parameter	Description
<code><TIME></code>	Specifies the minimum time allowed between the sending of unsolicited router advertisements. Range: 3 to 1800 seconds. Default: 450 seconds (75% of the default value for maximum router advertisement interval).

Example

Setting the minimum advertisement interval for interface 1/1/1 to 25 seconds:

```
switch(config) # interface 1/1/1
switch(config-if) # ip irdp minadvertinterval 25
```

Removing the minimum advertisement interval for interface 1/1/1 to 25 seconds:

```
switch(config) # interface 1/1/1
```

```
switch(config-if)# no ip irdp minadvertinterval 25
```

Command History

Release	Modification
---------	--------------

10.07 or earlier	- -
------------------	-----

Command Information

Platforms	Command context	Authority
-----------	-----------------	-----------

All platforms	config-if	Administrators or local user group members with execution rights for this command.
---------------	-----------	--

ip irdp preference

Syntax

```
ip irdp preference <LEVEL>
no ip irdp preference <LEVEL>
```

Description

Specifies the IRDP preference level. If a host receives multiple router advertisement messages from different routers, the host selects the router that sent the message with the highest preference as the default gateway.

The **no** form of this command removes the specified IRDP preference level and reverts to the default value.

Parameter	Description
-----------	-------------

<LEVEL>	Specifies the IRDP preference level. Range: - 2147483648 to 2147483647. Default: 0.
---------	---

Example

Setting the IRDP preference level for interface 1/1/1 to 25.

```
switch(config)# interface 1/1/1

switch(config-if)# ip irdp preference 25
```

Removing the IRDP preference level for interface 1/1/1 to 25.

```
switch(config)# interface 1/1/1

switch(config-if)# no ip irdp preference 25
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	config-if	Administrators or local user group members with execution rights for this command.

show ip irdp

Syntax

```
show ip irdp [vsx-peer]
```

Description

Displays IRDP configuration settings.

Parameter	Description
<code><location></code>	Specifies one of these values: <code><FQDN></code> : a fully qualified domain name. <code><IPV4></code> : an IPv4 address. <code><IPV6></code> : an IPv6 address.

vsx-peer

Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Example

```
switch# show ip irdp
ICMP Router Discovery Protocol
Interface Status   Advertising Minimum Maximum Holdtime Preference
          Address   Interval Interval
-----
1/1/1     Enabled  multicast    6        8        10        10
1/1/2     Disabled multicast    450      600     1800      0
1/1/3     Enabled  broadcast    450      600     1800     115

switch# sh ip irdp
ICMP Router Discovery Protocol
Interface      Status   Advertising Minimum Maximum Holdtime Preference
              Address   Interval Interval
-----
vlan1          Disabled multicast    450      600     1800      0
bridge_normal  Disabled multicast    450      600     1800      0
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

IPv6 Router Advertisement

IPv6 RA provides a method for local IPv6 hosts to automatically configure their own IP address (and other settings such as a preferred DNS server) based on information advertised by switches/routers operating on the network.

IPv6 flags

Behavior of IPv6 hosts to IPv6 RA messages is controlled by the managed address configuration flag (M flag), and other stateful configuration flag (O flag).

M flag	O flag	Description
0	0	Indicates that no information is available via DHCPv6.
0	1	Indicates that other configuration information is available via DHCPv6. Examples of such information are DNS - related information or information on other servers within the network.
1	0	Indicates that addresses are available via Dynamic Host Configuration Protocol (DHCPv6).
1	1	If the M flag is set, the O flag is redundant and can be ignored because DHCPv6 will return all available configuration information.

Subtopics

[Configuring IPv6 RA](#)
[IPv6 RA scenario](#)

Configuring IPv6 RA

Syntax

Procedure

1. Enable transmission of IPv6 router advertisements with the command `no ipv6 nd suppress-ra`.
2. Optionally, configure IPv6 unicast address prefixes with the command `ipv6 nd prefix`.
3. Optionally, configure support for DNS name resolution with the commands `ipv6 nd ra dns server` and `ipv6 nd ra dns search-list`.
4. For most deployments, the default values for the following features do not need to be changed. If your deployment requires different settings, change the default values with the indicated command:

IPv6 RA setting	Default value	Command to change it
Number of neighbor solicitations to be sent when performing DAD.	1	<code>ipv6 nd dad attempts</code>
Number of neighbor entries in the ND cache.	131072	<code>ipv6 nd cache-limit</code>
Hop limit to be sent in the RA messages.	64	<code>ipv6 nd hop-limit</code>
MTU value to be sent in the RA messages.	1500 bytes	<code>ipv6 nd mtu</code>
Neighbor solicitation interval	1000 milliseconds	<code>ipv6 nd ns-interval</code>
Lifetime of a default router.	1800 seconds	<code>ipv6 nd ra lifetime</code>
Retrieval of an IPv6 address by devices.	Disabled	<code>ipv6 nd ra managed-config-flag</code>

IPv6 RA setting	Default value	Command to change it
Maximum interval between transmissions of IPv6 RAs.	600 seconds	<code>ipv6 nd ra max-interval</code>
Minimum interval between transmissions of IPv6 RAs.	200 seconds	<code>ipv6 nd ra min-interval</code>
Time that an interface considers a device to be reachable.	0 milliseconds (no limit)	<code>ipv6 nd ra reachable-time</code>
Retry period between ND solicitations.	0 (Use locally configured NS - interval)	<code>ipv6 nd ra retrans-timer</code>
Default routing preference for an interface.	Medium	<code>ipv6 nd router-preference</code>

- Review IPv6 RA configuration settings with the commands `show ipv6 nd interface`, `show ipv6 nd interface prefix`, `show ipv6 nd ra dns server`, and `show ipv6 nd ra dns search-list`.

Example

This example creates the following configuration:

- Enables IPV6 RA on interface 1/1/3 .
- Sets the recursive DNS server address to `4001::1` with a lifetime of `400` seconds.
- Sets the minimum interval between transmissions to `3` seconds.
- Sets the maximum interval between transmissions to `13` seconds.
- Sets the lifetime of a default router to `1900` seconds.

```
switch(config)# interface 1/1/3
switch(config-if)# no ipv6 nd suppress-ra
switch(config-if)# ipv6 nd ra dns server 4001::1 lifetime 400
switch(config-if)# ipv6 nd ra min-interval 3
switch(config-if)# ipv6 nd ra max-interval 13
switch(config-if)# ipv6 nd ra lifetime 1900
switch(config-if)# end
switch# show ipv6 nd interface 1/1/3
Interface 1/1/3 is up
Admin state is up
```




```

IPv6 address:
  2006::1/64 [VALID]
IPv6 link-local address: fe80::98f2:b321:368:6dc6/64 [VALID]
ICMPv6 active timers:
  Last Router-Advertisement sent: 0 Secs
  Next Router-Advertisement sent in: 13 Secs
Router-Advertisement parameters:
  Periodic interval: 3 to 13 secs
  Router Preference: medium
  Send "Managed Address Configuration" flag: false
  Send "Other Stateful Configuration" flag: false
  Send "Current Hop Limit" field: 64
  Send "MTU" option value: 1500
  Send "Router Lifetime" field: 1900
  Send "Reachable Time" field: 0
  Send "Retrans Timer" field: 0
  Suppress RA: false
  Suppress MTU in RA: true
ICMPv6 error message parameters:
  Send redirects: false
ICMPv6 DAD parameters:
  Current DAD attempt: 1
switch# show ipv6 nd ra dns server
Recursive DNS Server List on: 1/1/3
  Suppress DNS Server List: No
  DNS Server 1: 2001::1    lifetime 400

```

IPv6 RA scenario

In this scenario, two host computers are auto-configured with IP addresses using IPv6 RA. In addition, the switch provides the hosts with an address of a recursive DNS server. The physical topology of the network looks like this:

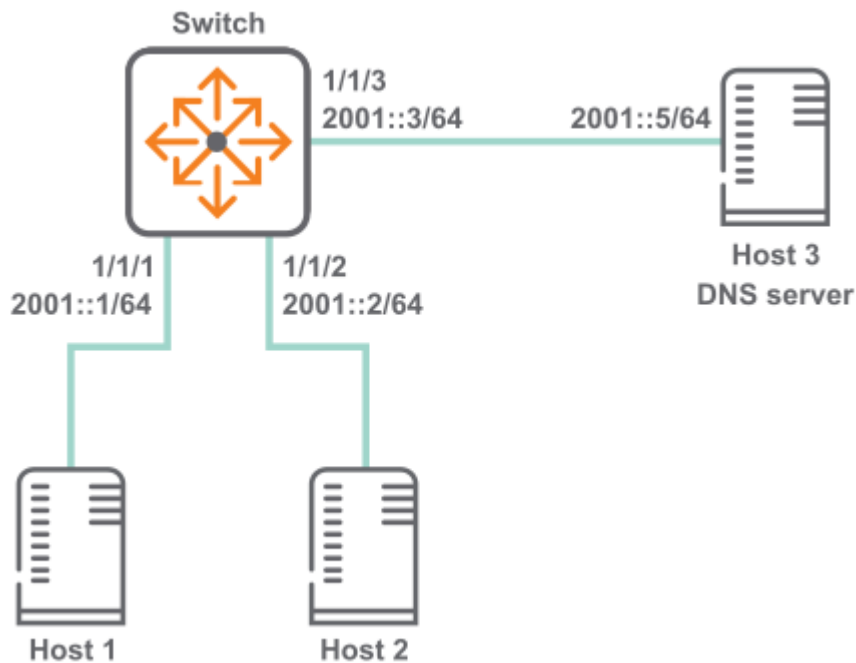

Procedure

1. Configure the interfaces with IPv6 addresses.
 switch# **config** switch(config)# **interface 1/1/1** switch(config-if)# **ipv6 address 2001::1/64**
 switch(config)# **interface 1/1/2** switch(config-if)# **ipv6 address 3001::1/64** switch(config)# **interface 1/1/3** switch(config-if)# **ipv6 address 4001::1/64**
2. Enable transmission of all IPv6 RA messages.
 switch(config-if)# **no ipv6 nd suppress-ra**

IPv6 RA commands

Subtopics

IPv6 RA commands

IPv6 RA commands

Select a command from the list in the left navigation menu.

Subtopics

ipv6 address <global-unicast-address>

ipv6 address autoconfig

ipv6 address link-local
ipv6 nd cache-limit
ipv6 nd dad attempts
ipv6 nd hop-limit
ipv6 nd mtu
ipv6 nd ns-interval
ipv6 nd prefix
ipv6 nd ra dns search-list
ipv6 nd ra dns server
ipv6 nd ra lifetime
ipv6 nd ra managed-config-flag
ipv6 nd ra max-interval
ipv6 nd ra min-interval
ipv6 nd ra other-config-flag
ipv6 nd ra reachable-time
ipv6 nd ra retrans-timer
ipv6 nd route
ipv6 nd router-preference
ipv6 nd suppress-ra
show ipv6 nd global traffic
show ipv6 nd interface
show ipv6 nd interface prefix
show ipv6 nd interface route
show ipv6 nd ra dns search-list
show ipv6 nd ra dns server

ipv6 address <global-unicast-address>

Syntax

```
ipv6 address <global-unicast-address>  
no ipv6 address <global-unicast-address>
```

Description

Sets a global unicast address on the interface.

The **no** form of this command removes the global unicast address on the interface.



NOTE

This command automatically creates an IPv6 link-local address on the interface. However, it does not add the **ipv6 address link-local command** to the running configuration. If you remove the IPv6 address, the link-local address is also removed. To maintain the link-local address, you must manually execute the **ipv6 address link-local** command.

Example

Enabling a global unicast address:

```
switch(config) # interface 1/1/1  
  
switch(config-if) # ipv6 address 3731:54:65fe:2::a7
```

Disabling a global unicast address:

```
switch(config) # interface 1/1/1  
  
switch(config-if) # no ipv6 address 3731:54:65fe:2::a7
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	config-if	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

ipv6 address autoconfig

Syntax

```
ipv6 address autoconfig  
no ipv6 address autoconfig
```

Description

Enables the interface to automatically obtain an IPv6 address using router advertisement information and the EUI-64 identifier.

The **no** form of this command disables address auto-configuration.



NOTE

- A maximum of 15 autoconfigured addresses are supported.
- This command automatically creates an IPv6 link-local address on the interface. However, it does not add the `ipv6 address link-local` command to the running configuration. If you remove the IPv6 address, the link-local address is also removed. To maintain the link-local address, you must manually execute the `ipv6 address link-local` command.

Usage

The IPv6 SLAAC feature lets the router obtain the IPv6 address for the interface it is configured through the SLAAC method. This feature is not available on the `mgmt` VRF.

Example

Enabling unicast autoconfiguring:

```
switch(config) # interface 1/1/1  
  
switch(config-if) # ipv6 address autoconfig
```

Disabling unicast autoconfiguring:

```
switch(config) # interface 1/1/1  
  
switch(config-if) # no ipv6 address autoconfig
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	config-if	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

ipv6 address link-local

Syntax

```
ipv6 address link-local [<IPv6-ADDR>/<MASK>]
```

Description

Enables IPv6 on the current interface. If no address is specified, an IPv6 link-local address is auto-generated for the interface. If an address is specified, auto-configuration is disabled and the specified address/mask is assigned to the interface.

To disable IPv6 link-local on the interface, remove **ipv6 address link-local**, **ipv6 address <global-ipv6-address>**, and **ipv6 address autoconfig** from the interface.



NOTE

This feature is not available on the management VRF.

Parameter	Description
<IPv6-ADDR>	Specifies the IP address in IPv6 format (xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx), where x is a hexadecimal number from 0 to F. You can use two colons (::) to represent consecutive zeros (but only once), remove leading zeros, and collapse a hextet of four zeros to a single 0. For example, this address 2222:0000:

Parameter	Description
	3333:0000:0000:0000:4444:0055 becomes 2222:0:3333::4444:55 .
<code><MASK></code>	Specifies the number of bits in the address mask in CIDR format (x), where x is a decimal number from 0 to 128.

Example

Enabling IPv6 link-local on the interface:

```
switch(config) # interface 1/1/1

switch(config-if) # ipv6 address link-local
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	<code>config-if</code>	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

ipv6 nd cache-limit

Syntax

```
ipv6 nd cache-limit <CACHELIMIT>
no ipv6 nd cache-limit [<CACHELIMIT>]
```

Description

Configures the limit on the number of neighbor entries in the ND cache.

The **no** form of this command sets the cache limit to the default value.

Parameter	Description
<code><CACHELIMIT></code>	Specifies the neighbor cache entries limit. Range: 1 - 131072. Default: 131072.

Examples

Setting the cache limit to 20.

```
switch(config)# ipv6 nd cache-limit 20
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	<code>config</code>	Administrators or local user group members with execution rights for this command.

ipv6 nd dad attempts

Syntax

```
ipv6 nd dad attempts <NUM-ATTEMPTS>  
no ipv6 nd dad attempts [<NUM-ATTEMPTS>]
```


Description

Configures the number of neighbor solicitations to be sent when performing duplicate address detection (DAD) for a unicast address configured on an interface. If the active gateway is configured with the same IP as an SVI IP, then IPv6 DAD cannot be configured.

The **no** form of this command sets the number of attempts to the default value.

Parameter	Description
<code>dad attempts <NUM-ATTEMPTS></code>	Specifies the number of neighbor solicitations to send. Range: 0 - 15. Default: 1.

Examples

```
switch(config) # interface 1/1/1

switch(config-if) # ipv6 nd dad attempts 5
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	<code>config-if</code>	Administrators or local user group members with execution rights for this command.

ipv6 nd hop-limit

Syntax

```
ipv6 nd hop-limit <HOPLIMIT>
no ipv6 nd hop-limit [<HOPLIMIT>]
```

Description

Configures the hop limit to be sent in RAs.

The **no** form of this command resets the hop limit to 0. This reset eliminates the hop limit from the RAs that originate on the interface, so the host determines the hop limit.

Parameter	Description
<code>hop-limit <HOPLIMIT></code>	Specifies the hop limit. Range: 0 - 255. Default: 64.

Examples

```
switch(config) # interface 1/1/1

switch(config-if) # ipv6 nd hop-limit 64
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	<code>config-if</code>	Administrators or local user group members with execution rights for this command.

ipv6 nd mtu

Syntax

```
ipv6 nd mtu <MTU-VALUE>
no ipv6 nd mtu [<MTU-VALUE>]
```

Description

Configures the MTU size to be sent in the RA messages.

The **no** form of this command sets hop limit to the default value.

Parameter	Description
<code><MTU-VALUE></code>	Specifies the MTU size. Range: 1280 - 65535 bytes. Default: 1500 bytes.

Examples

```
switch(config)# interface 1/1/1

switch(config-if)# ipv6 nd mtu 1300
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	config-if	Administrators or local user group members with execution rights for this command.

ipv6 nd ns-interval

Syntax

```
ipv6 nd ns-interval <TIME>
no ipv6 nd ns-interval [<TIME>]
```

Description

Configures the ND time in milliseconds between DAD neighbor solicitations sent for an unresolved destination. Increase the ns-interval time if the network is slow or if there are persistent retry failures. If the active gateway is configured with the same IP as an SVI IP, then IPv6 DAD cannot be configured

The **no** form of this command sets the ns-interval to the default value.

Parameter	Description
<code><TIME></code>	Specifies the neighbor solicitation interval. Range: 1000 - 3600 000 milliseconds. Default: 1000 milliseconds.

Examples

```
switch(config)# interface 1/1/1

switch(config-if)# ipv6 nd ns-interval 1200
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	config-if	Administrators or local user group members with execution rights for this command.

ipv6 nd prefix

Syntax

```
ipv6 nd prefix <IPV6-ADDR>/<PREFIX-LEN>
    [no-advertise | [valid <LIFETIME-VALUE> preferred
    <LIFETIME-VALUE>] | no-autoconfig | no-onlink]
no ipv6 nd prefix <IPV6-ADDR>/<PREFIX-LEN> [no-advertise
    | [valid <LIFETIME-VALUE> preferred <LIFETIME-VALUE>
    ] | no-autoconfig | no-onlink]
ipv6 nd prefix default [no-advertise | [valid <LIFETIME-VALUE>
```

```

    preferred <LIFETIME-VALUE>] | no-autoconfig | no-onlink]}
no ipv6 nd prefix default [no-advertise | [valid <LIFETIME-VALUE>
    preferred <LIFETIME-VALUE>] | no-autoconfig | no-onlink]}

```

Description

Specifies prefixes for the routing switch to include in RAs transmitted on the interface. IPv6 hosts use the prefixes in RAs to autoconfigure themselves with global unicast addresses. The autoconfigured address of a host is composed of the advertised prefix and the interface identifier in the current link-local address of the host.

By default, advertise, autoconfig, and onlink are set.

The **no** form of this command removes the configuration on the interface.

Parameter	Description
<code><IPV6-ADDR>/<PREFIX-LEN></code>	Specifies the IPv6 prefix to advertise in RA. Format: X:X::X:X/M
<code>default</code>	Specifies apply configuration to all on - link prefixes that are not individually set by the ipv6 ra prefix <IPV6 - ADDR>/<PREFIX - LEN> command. It applies the same valid and preferred lifetimes, link state, autoconfiguration state, and advertise options to the advertisements sent for all on - link prefixes that are not individually configured with a unique lifetime. This also applies to the prefixes for any global unicast addresses configured later on the same interface. Using default once, and then using it again with any new parameter values results in the new values replacing the former values in advertisements. If default is used without the no-advertise, no-autoconfig, or no - onlink parameter, the advertisement setting for the absent parameter is returned to its default setting.
<code>no-advertise</code>	Specifies do not advertise prefix in RA.
<code>valid <LIFETIME-VALUE></code>	Specifies the total time, in seconds, the prefix remains available before becoming unusable. After preferred - lifetime expiration, any autoconfigured address is deprecated and used only for transactions only before preferred - lifetime expires. If the valid lifetime expires, the address becomes invalid. You can enter a value in seconds or enter valid infinite which sets infinite lifetime. Default: 2,592,000 seconds which is 30 days. Range: 0-4294967294 seconds.

Parameter	Description
<code>preferred <LIFETIME-VALUE></code>	Specifies the span of time during which the address can be freely used as a source and destination for traffic. This setting must be less than or equal to the corresponding valid-lifetime setting. You can enter a value in seconds or enter preferred infinite which sets infinite lifetime. Default: 604,800 seconds which is seven days. Range: 0–4294967294 seconds.
<code>no-autoconfig</code>	Specifies do not use prefix for autoconfiguration.
<code>no-onlink</code>	Specifies do not use prefix for onlink determination.

Examples

```
switch(config)# interface 1/1/1

switch(config-if)# ipv6 nd prefix 4001::1/64 valid 30 preferred 10 no-
autoconfig no-onlink
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	<code>config-if</code>	Administrators or local user group members with execution rights for this command.

ipv6 nd ra dns search-list

Syntax

```
ipv6 nd ra dns search-list <DOMAIN-NAME> [lifetime <TIME>]  
no ipv6 nd ra dns search-list <DOMAIN-NAME>
```

Description

Configures the DNS Search List (DNSSL) to include in Router Advertisements (RAs) transmitted on the interface.

The **no** form of this command removes the DNS Search List from the RAs transmitted on the interface.

Parameter	Description
<DOMAIN-NAME>	Specifies the domain names for DNS queries.
lifetime <TIME>	Specifies lifetime in seconds. Range: 4 - 4294967295 seconds. Default: 1800 seconds.

Usage

- DNSSL contains the domain names of DNS suffixes or IPv6 hosts to append to short, unqualified domain names for DNS queries.
- Multiple DNS domain names can be added to the DNSSL by using the command repeatedly.
- A maximum of eight server addresses are allowed.

Examples

```
switch(config)# interface 1/1/1  
  
switch(config-if)# ipv6 nd ra dns search-list test.com lifetime 500
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	<code>config-if</code>	Administrators or local user group members with execution rights for this command.

`ipv6 nd ra dns server`

Syntax

```
ipv6 nd ra dns server <IPv6-ADDR> [lifetime <TIME>]  
no ipv6 nd ra dns server <IPv6-ADDR>
```

Description

Configures the IPv6 address of a preferred Recursive DNS Server (RDNSS) to be included in Router Advertisements (RAs) transmitted on the interface.

The **no** form of this command removes the configured DNS server from the RAs transmitted on the interface.

Parameter	Description
<code><IPv6-ADDR></code>	Specifies the RDNSS address in IPv6 format (xxxx:xxxx:xxxx:xxx:xxx:xxxx:xxxx:xxxx), where x is a hexadecimal number from 0 to F. You can use two colons (::) to represent consecutive zeros (but only once), remove leading zeros, and collapse a hex tet of four zeros to a single 0. For example, this address 2222:0000:3333:0000:0000:4444:0055 becomes 2222:0:333:0::4444:55 .
<code>lifetime <TIME></code>	Specifies IPv6 DNS server lifetime in seconds. Range: 4 - 4294 967295 seconds. Default: 1800 seconds.

Usage

- Including RDNSS information in RAs provides DNS server configuration for connected IPv6 hosts without requiring DHCPv6.
- Multiple servers can be configured on the interface by using the command repeatedly.
- A maximum of eight server addresses are allowed.

Examples

```
switch(config)# interface 1/1/1

switch(config-if)# ipv6 nd ra dns server 2001::1 lifetime 400
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	config-if	Administrators or local user group members with execution rights for this command.

ipv6 nd ra lifetime

Syntax

```
ipv6 nd ra lifetime <TIME>
no ipv6 nd ra lifetime [<TIME>]
```

Description

Configures the lifetime, in seconds, for the routing switch to be used as a default router by hosts on the current interface.

The **no** form of this command sets lifetime to the default of 1800 seconds.

Parameter	Description
<TIME>	Specifies lifetime in seconds of a default router. A setting of 0 for default router lifetime in an RA indicates that the routing switch is not a default router on the interface. Range: 0 - 9000 seconds. Default: 1800 seconds.

Usage

- A given host on an interface refreshes the default router lifetime for a specific router each time the host receives an RA from that router.
- A specific router ceases to be a default router candidate for a given host if the default router lifetime expires before the host is updated with a new RA from the router.

Examples

```
switch(config)# interface 1/1/1

switch(config-if)# ipv6 nd ra lifetime 1200
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	config-if	Administrators or local user group members with execution rights for this command.

ipv6 nd ra managed-config-flag

Syntax

```
ipv6 nd ra managed-config-flag
no ipv6 nd ra managed-config-flag
```

Description

Controls the M flag setting in RAs the router transmits on the current interface. Enable the M flag to indicate that hosts can obtain IP address through DHCPv6. The M flag is disabled by default.

The **no** form of this command turns off (disables) the M flag.

Usage

- Enabling the M flag directs hosts to acquire their IPv6 addressing for the current interface from a DHCPv6 server.
- When the M-bit is enabled, receiving hosts ignore the O flag setting, which is configured using the command **ipv6 nd ra other-config-flag**.
- When the M-bit is disabled (the default), receiving hosts expect to receive their IPv6 addresses from RA.

M flag	O flag	Description
0	0	Indicates that no information is available via DHCPv6.
0	1	Indicates that other configuration information is available via DHCPv6. Examples of such information are DNS - related information or information on other servers within the network.
1	0	Indicates that addresses are available via Dynamic Host Configuration Protocol (DHCPv6).
1	1	If the M flag is set, the O flag is redundant and can be ignored because DHCPv6 will return all available configuration information.

Examples

```
switch(config) # interface 1/1/1

switch(config-if) # ipv6 nd ra managed-config-flag
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	<code>config-if</code>	Administrators or local user group members with execution rights for this command.

ipv6 nd ra max-interval

Syntax

```
ipv6 nd ra max-interval <TIME>
no ipv6 nd ra max-interval [<TIME>]
```

Description

Configures the maximum interval between transmissions of IPv6 RAs on the interface. The interval between RA transmissions on an interface is a random value that changes every time an RA is sent. The interval is calculated to be a value between the current max-interval and min-interval settings.

The **no** form of this command returns the setting to its default, provided the default value is less than the default lifetime value.

Parameter	Description
<code><TIME></code>	Specifies the maximum advertisement time in seconds. Range: 4 - 1800. Default: 600 seconds.

Usage

- This value has one setting per interface. The setting does not apply to RAs sent in response to a router solicitation received from another device.
- Attempting to set max-interval to a value that is not sufficiently larger than the current min-interval also results in an error message.

Examples

```
switch(config) # interface 1/1/1
```

```
switch(config-if)# ipv6 nd ra max-interval 30
```

Command History

Release	Modification
---------	--------------

10.07 or earlier	- -
------------------	-----

Command Information

Platforms	Command context	Authority
-----------	-----------------	-----------

All platforms	config-if	Administrators or local user group members with execution rights for this command.
---------------	-----------	--

ipv6 nd ra min-interval

Syntax

```
ipv6 nd ra min-interval <TIME>  
no ipv6 nd ra min-interval [<TIME>]
```

Description

Configures the minimum interval between transmissions of IPv6 RAs on the interface. The interval between RA transmissions on an interface is a random value that changes every time an RA is sent. The interval is calculated to be a value between the current max-interval and min-interval settings.

The **no** form of this command returns the setting to its default, provided the default value is less than the current max-interval setting.

Parameter	Description
-----------	-------------

<TIME>	Specifies a minimum advertisement time in seconds. Range: 3 - 1350. Default: 200 seconds.
--------	---

Usage

- This value has one setting per interface and does not apply to RAs sent in response to a router solicitation received from another device.
- The min-interval must be less than the max-interval. Attempting to set min-interval to a higher value results in an error message.

Examples

```
switch(config)# interface 1/1/1

switch(config-if)# ipv6 nd ra min-interval 25
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	config-if	Administrators or local user group members with execution rights for this command.

ipv6 nd ra other-config-flag

Syntax

```
ipv6 nd ra other-config-flag
no ipv6 nd ra other-config-flag
```

Description

Controls the O-bit in RAs the router transmits on the current interface; but is ignored unless the M-bit is disabled in RAs. Configure to set the O-bit in RA messages for host to obtain network parameters through DHCPv6. The other-config-flag is disabled by default.

For more information on configuring the M-bit, see **ipv6 nd ra managed-config-flag**.

The **no** form of this command turns off (disables) the setting for this command in RAs.

Usage

Enabling the O-bit while the M-bit is disabled directs hosts on the interface to acquire their other configuration information from DHCPv6. Examples of such information are DNS-related information or information on other servers within the network.

Examples

```
switch(config)# interface 1/1/1

switch(config-if)# ipv6 nd ra other-config-flag
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	config-if	Administrators or local user group members with execution rights for this command.

ipv6 nd ra reachable-time

Syntax

```
ipv6 nd ra reachable-time <TIME>
no ipv6 nd ra reachable-time [<TIME>]
```

Description

Sets the amount of time that the interface considers a device to be reachable after receiving a reachability confirmation from the device.

The **no** form of this command sets the reachable time to the default value of 0. (no limit).

Parameter	Description
<code><TIME></code>	Specifies the reachable time in milliseconds. Range: 1000 - 36 00000. Default: 0 (no limit).

Examples

```
switch(config)# interface 1/1/1

switch(config-if)# ipv6 nd ra reachable-time 2000
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	config-if	Administrators or local user group members with execution rights for this command.

ipv6 nd ra retrans-timer

Syntax

```
ipv6 nd ra retrans-timer <TIME>
no ipv6 nd ra retrans-timer [<TIME>]
```

Description

Configures the period (retransmit timer) between ND solicitations sent by a host for an unresolved destination, or between DAD neighbor solicitation requests. By default, hosts on the interface use their own locally configured NS-interval settings instead of using the value received in the RAs.

Increase this timer when neighbor solicitation retries or failures are occur, or in a "slow" (WAN) network.

The **no** form of this command sets the value to the default of 0.

Parameter	Description
<code><TIME></code>	Specifies the retransmit timer value in milliseconds. Range: 0 - 4294967295 milliseconds. Default: 0 (Use locally configured N S - interval).

Examples

```
switch(config)# interface 1/1/1

switch(config-if)# ipv6 nd ra retrans-timer 400
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	config-if	Administrators or local user group members with execution rights for this command.

ipv6 nd route

Syntax

```
ipv6 nd route <IPV6-ADDR>/<PREFIX-LEN> [no-advertise | lifetime {<SECONDS> | infinite} | preference {low | medium | high}]
no ipv6 nd route <IPV6-ADDR>/<PREFIX-LEN> [no-advertise | lifetime {<SECONDS> | infinite} | preference {low | medium | high}]
```

Description

Configures the routing switch to include the routing information in the RAs transmitted on the interface. The routing switch includes the route information in the RA packets only if the configured routes are present in the routing table. After receiving the RA packets carrying the route information, the IPv6 host updates its routing table. The hosts lookup their routing table and selects the best possible route to forward packets.

The **no** form of this command removes the settings for including the routing information in the RA packets.

Parameter	Description
<code><IPV6-ADDR>/<PREFIX-LEN></code>	Specifies the IPv6 route prefix to advertise in RA. Format: X:X::X:X/M
<code>no-advertise</code>	Specifies to not advertise the route information.
<code>lifetime {<SECONDS> infinite}</code>	Specifies the duration in seconds that the route is valid for the route determination. If this parameter is configured with 0 , the route becomes invalid. Default: 1800 . Range: 0 - 4294967295.
<code>preference {low medium high}</code>	Specifies the preference for the hosts to choose the router associated with the route over other routers when multiple identical route prefixes from different routers are received. Default: medium

Examples

Configuring routing information on interface **1/1/1**.

```
switch(config)# int 1/1/1
switch(config-if)# ipv6 nd route 1::1/64 lifetime 200 preference high
```

Command History

Release	Modification
10.10	Command introduced

Command Information

Platforms	Command context	Authority
All platforms	config-if	Administrators or local user group members with execution rights for this command.

ipv6 nd router-preference

Syntax

```
ipv6 nd router-preference {high | medium | low}  
no ipv6 nd router-preference [high | medium | low]
```

Description

Specifies the value that is set in the Default Router Preference (DRP) field of Router Advertisements (RAs) that the switch sends from an interface. An interface with a DRP value of high will be preferred by other devices on the network over interfaces with an RA value of medium or low.

The **no** form of this command set the value to the default of medium.

Parameter	Description
high	Sets DRP to high.
medium	Sets DRP to medium. Default.
low	Sets DRP to low.

Examples

```
switch(config)# interface 1/1/1  
  
switch(config-if)# ipv6 nd router-preference high
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	config-if	Administrators or local user group members with execution rights for this command.

ipv6 nd suppress-ra

Syntax

```
ipv6 nd suppress-ra [<SUPPRESS-OPTION>]
no ipv6 nd ra supress-ra [<SUPPRESS-OPTION>]
```

Description

Configures suppression of IPv6 Router Advertisement transmissions on an interface.

The **no** form of this command restores transmission of IPv6 Router Advertisement and options.

Parameter	Description
suppress-ra [<SUPPRESS-OPTION>]	Specifies suppressing RA transmissions. Entering suppress - ra without any options, suppresses all RA messages (default). Or you can enter one of the following options.
dnssl	Specifies suppressing DNSSL options in RA messages.
mtu	Specifies suppressing MTU options in RA messages.
rdnss	Specifies suppressing RDNSS options in RA messages.

Examples

```
switch(config) # interface 1/1/1
```

```
switch(config-if)# ipv6 nd suppress-ra mtu dnssl rdns
switch(config-if)# no ipv6 nd suppress-ra mtu dnssl rdns
```

Command History

Release	Modification
---------	--------------

10.07 or earlier	- -
------------------	-----

Command Information

Platforms	Command context	Authority
-----------	-----------------	-----------

All platforms	config-if	Administrators or local user group members with execution rights for this command.
---------------	-----------	--

show ipv6 nd global traffic

Syntax

```
show ipv6 nd global traffic [vsx-peer]
```

Description

Displays IPV6 Neighbor Discovery traffic details on a device.

Parameter	Description
-----------	-------------

vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.
----------	--

Examples

```
switch# show ipv6 nd global traffic
ICMPv6 packet Statistics (sent/received)
Total Messages           :          18/0
```

```

Error Messages           :      0/0
Destination Unreachables :      0/0
Time Exceeded           :      0/0
Parameter Problems      :      0/0
Echo Request            :      0/0
Echo Replies            :      0/0
Redirects                :      0/0
Packet Too Big          :      0/0
Router Advertisements   :      4/0
Router Solicitations    :      0/0
Neighbor Advertisements :      0/0
Neighbor Solicitations  :      3/0
Duplicate router RA received :      0/0
ICMPv6 MLD Statistics (sent/received)
V1 Queries :      0/0
V2 Queries :      0/0
V1 Reports :      0/0
V2 Reports :     11/0
V1 Leaves  :      0/0

```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show ipv6 nd interface

Syntax

```
show ipv6 nd interface [<IF-NAME> | all-vrfs | vrf <VRF-NAME>] [vsx-peer]
```

Description

Displays neighbor discovery information for an interface. If no options are specified, displays information for the default VRF.

Parameter	Description
<code><IF-NAME></code>	Displays information about the specified IPv6 enabled interface .
<code>all-vrfs</code>	Displays information about interfaces in all VRFs.
<code>vrf <VRF-NAME></code>	Displays information about interfaces in a particular VRF. Or, if <VRF - NAME> is not specified, information for the default VRF is displayed.
<code>vsx-peer</code>	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Examples

Showing information for all VRFs:

```
switch# show ipv6 nd interface all-vrfs
List of IPv6 Interfaces for VRF default
Interface 1/1/1 is up
Admin state is up
IPv6 address:
IPv6 link-local address: fe80::7272:cfff:fee7:a8b9/64 [VALID]
ICMPv6 active timers:
    Last Router-Advertisement sent:
    Next Router-Advertisement sent in:
Router-Advertisement parameters:
    Periodic interval: 200 to 600 secs
    Router Preference: medium
    Send "Managed Address Configuration" flag: false
    Send "Other Stateful Configuration" flag: false
    Send "Current Hop Limit" field: 64
    Send "MTU" option value: 1500
    Send "Router Lifetime" field: 1800
    Send "Reachable Time" field: 0
    Send "Retrans Timer" field: 0
```

```

    Suppress RA: true
    Suppress MTU in RA: true
ICMPv6 error message parameters:
    Send redirects: false
ICMPv6 DAD parameters:
    Current DAD attempt: 1
List of IPv6 Interfaces for VRF red
Interface 1/1/2 is up
    Admin state is up
    IPv6 address:
        2001::1/64 [VALID]
    IPv6 link-local address: fe80::7272:cfff:fee7:a8b9/64 [VALID]
    ICMPv6 active timers:
        Last Router-Advertisement sent:
        Next Router-Advertisement sent in:
Router-Advertisement parameters:
    Periodic interval: 200 to 600 secs
    Router Preference: medium
    Send "Managed Address Configuration" flag: false
    Send "Other Stateful Configuration" flag: false
    Send "Current Hop Limit" field: 64
    Send "MTU" option value: 1500
    Send "Router Lifetime" field: 1800
    Send "Reachable Time" field: 0
    Send "Retrans Timer" field: 0
    Suppress RA: true
    Suppress MTU in RA: true
ICMPv6 error message parameters:
    Send redirects: false
ICMPv6 DAD parameters:
    Current DAD attempt: 1
switch# show ipv6 nd interface all-vrfs
List of IPv6 Interfaces for VRF default
Interface vlan2 is up
    Admin state is up
    IPv6 address:
    IPv6 link-local address: fe80::7272:cfff:fee7:a8b9/64 [VALID]
    ICMPv6 active timers:
        Last Router-Advertisement sent:
        Next Router-Advertisement sent in:
Router-Advertisement parameters:
    Periodic interval: 200 to 600 secs
    Router Preference: medium

```



```

    Send "Managed Address Configuration" flag: false
    Send "Other Stateful Configuration" flag: false
    Send "Current Hop Limit" field: 64
    Send "MTU" option value: 1500
    Send "Router Lifetime" field: 1800
    Send "Reachable Time" field: 0
    Send "Retrans Timer" field: 0
    Suppress RA: true
    Suppress MTU in RA: true
ICMPv6 error message parameters:
    Send redirects: false
ICMPv6 DAD parameters:
    Current DAD attempt: 1
List of IPv6 Interfaces for VRF red
Interface vlan3 is up
  Admin state is up
  IPv6 address:
    2001::1/64 [VALID]
  IPv6 link-local address: fe80::7272:cfff:fee7:a8b9/64 [VALID]
  ICMPv6 active timers:
    Last Router-Advertisement sent:
    Next Router-Advertisement sent in:
  Router-Advertisement parameters:
    Periodic interval: 200 to 600 secs
    Router Preference: medium
    Send "Managed Address Configuration" flag: false
    Send "Other Stateful Configuration" flag: false
    Send "Current Hop Limit" field: 64
    Send "MTU" option value: 1500
    Send "Router Lifetime" field: 1800
    Send "Reachable Time" field: 0
    Send "Retrans Timer" field: 0
    Suppress RA: true
    Suppress MTU in RA: true
  ICMPv6 error message parameters:
    Send redirects: false
  ICMPv6 DAD parameters:
    Current DAD attempt: 1

```

Showing information for interface 1/1/1:

```

switch# show ipv6 nd interface 1/1/1
Interface 1/1/1 is up
  Admin state is up
  IPv6 address:

```

```

IPv6 link-local address: fe80::7272:cfff:fee7:a8b9/64 [VALID]
ICMPv6 active timers:
    Last Router-Advertisement sent:
    Next Router-Advertisement sent in:
Router-Advertisement parameters:
    Periodic interval: 200 to 600 secs
    Router Preference: high
    Send "Managed Address Configuration" flag: false
    Send "Other Stateful Configuration" flag: false
    Send "Current Hop Limit" field: 64
    Send "MTU" option value: 1500
    Send "Router Lifetime" field: 1800
    Send "Reachable Time" field: 0
    Send "Retrans Timer" field: 0
    Suppress RA: true
    Suppress MTU in RA: true
ICMPv6 error message parameters:
    Send redirects: false
ICMPv6 DAD parameters:
    Current DAD attempt: 1
switch# show ipv6 nd interface vlan 2
Interface vlan2 is up
Admin state is up
IPv6 address:
IPv6 link-local address: fe80::7272:cfff:fee7:a8b9/64 [VALID]
ICMPv6 active timers:
    Last Router-Advertisement sent:
    Next Router-Advertisement sent in:
Router-Advertisement parameters:
    Periodic interval: 200 to 600 secs
    Router Preference: high
    Send "Managed Address Configuration" flag: false
    Send "Other Stateful Configuration" flag: false
    Send "Current Hop Limit" field: 64
    Send "MTU" option value: 1500
    Send "Router Lifetime" field: 1800
    Send "Reachable Time" field: 0
    Send "Retrans Timer" field: 0
    Suppress RA: true
    Suppress MTU in RA: true
ICMPv6 error message parameters:
    Send redirects: false

```

```
ICMPv6 DAD parameters:
  Current DAD attempt: 1
```

Showing information for the default VRF:

```
switch# show ipv6 nd interface
List of IPv6 Interfaces for VRF default
Interface 1/1/1 is up
  Admin state is up
  IPv6 address:
    2001::1/64 [VALID]
  IPv6 link-local address: fe80::7272:cfff:fee7:a8b9/64 [VALID]
  ICMPv6 active timers:
    Last Router-Advertisement sent: 6 Secs
    Next Router-Advertisement sent in: 7 Secs
  Router-Advertisement parameters:
    Periodic interval: 3 to 13 secs
    Router Preference: medium
    Send "Managed Address Configuration" flag: false
    Send "Other Stateful Configuration" flag: false
    Send "Current Hop Limit" field: 64
    Send "MTU" option value: 1500
    Send "Router Lifetime" field: 1900
    Send "Reachable Time" field: 0
    Send "Retrans Timer" field: 0
    Suppress RA: true
    Suppress MTU in RA: true
  ICMPv6 error message parameters:
    Send redirects: false
  ICMPv6 DAD parameters:
    Current DAD attempt: 1

switch# show ipv6 nd interface
List of IPv6 Interfaces for VRF default
Interface vlan2 is up
  Admin state is up
  IPv6 address:
    2001::1/64 [VALID]
  IPv6 link-local address: fe80::7272:cfff:fee7:a8b9/64 [VALID]
  ICMPv6 active timers:
    Last Router-Advertisement sent: 6 Secs
    Next Router-Advertisement sent in: 7 Secs
  Router-Advertisement parameters:
    Periodic interval: 3 to 13 secs
    Router Preference: medium
    Send "Managed Address Configuration" flag: false
```

```

Send "Other Stateful Configuration" flag: false
Send "Current Hop Limit" field: 64
Send "MTU" option value: 1500
Send "Router Lifetime" field: 1900
Send "Reachable Time" field: 0
Send "Retrans Timer" field: 0
Suppress RA: true
Suppress MTU in RA: true
ICMPv6 error message parameters:
    Send redirects: false
ICMPv6 DAD parameters:
    Current DAD attempt: 1

```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show ipv6 nd interface prefix

Syntax

```
show ipv6 nd interface prefix [all-vrfs | vrf <VRF-NAME>] [vsx-peer]
```

Description

Shows IPv6 prefix information for all VRFs or a specific VRF. If no options are specified, shows information for the default VRF.

Parameter	Description
all-vrfs	Shows prefix information for all VRFs.
vrf <VRF-NAME>	Name of a VRF.
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Examples

Showing prefix information for the default VRF:

```
switch# show ipv6 nd interface prefix
List of IPv6 Interfaces for VRF default
List of IPv6 Prefix advertised on 1/1/1
  Prefix : 4545::/65
  Enabled : Yes
  Validlife time : 2592000
  Preferred lifetime : 604800
  On-link : Yes
  Autonomous : Yes
switch# show ipv6 nd interface prefix
List of IPv6 Interfaces for VRF default
List of IPv6 Prefix advertised on vlan2
  Prefix : 4545::/65
  Enabled : Yes
  Validlife time : 2592000
  Preferred lifetime : 604800
  On-link : Yes
  Autonomous : Yes
```

Showing information for VRF red:

```
switch# show ipv6 nd interface prefix vrf red
List of IPv6 Interfaces for VRF red
List of IPv6 Prefix advertised on 1/1/2
  Prefix : 2001::/64
  Enabled : Yes
  Validlife time : 2592000
  Preferred lifetime : 604800
  On-link : Yes
  Autonomous : Yes
```

```
switch# show ipv6 nd interface prefix vrf red
List of IPv6 Interfaces for VRF red
List of IPv6 Prefix advertised on vlan3
  Prefix : 2001::/64
  Enabled : Yes
  Validlife time : 2592000
  Preferred lifetime : 604800
  On-link : Yes
  Autonomous : Yes
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show ipv6 nd interface route

Syntax

```
show ipv6 nd interface route [all-vrfs | vrf <VRF-NAME>]
```

Description

Displays route information of all interfaces in the default VRF.

Parameter	Description
all-vrfs	Displays information about interfaces in all VRFs.

Parameter	Description
vrf <VRF-NAME>	Displays information about interfaces in a particular VRF. Or, if <VRF - NAME> is not specified, displays information for the default VRF.

Examples

Showing routing information for interface **1/1/1** in the default VRF:

```
switch# show ipv6 nd interface route
List of IPv6 Interfaces for VRF default
List of IPv6 Routes advertised on 1/1/1
  Route : 1::/64
  Enabled : Yes
  Route lifetime : 200
  Route preference : high
```

Showing routing information for interface **1/1/1** in VRF red:

```
switch# show ipv6 nd interface route vrf red
List of IPv6 Interfaces for VRF red
List of IPv6 Routes advertised on 1/1/2
  Route : 2::/64
  Enabled : No
  Route lifetime : 1800
  Route preference : low
```

Command History

Release	Modification
10.10	Command introduced

Command Information

Platforms	Command context	Authority
All platforms	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show ipv6 nd ra dns search-list

Syntax

```
show ipv6 nd ra dns search-list [vsx-peer]
```

Description

Displays domain name information on all interfaces.

Parameter	Description
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Examples

```
switch(config)# interface 1/1/1

switch(config-if)# ipv6 nd ra dns search-list test.com
switch# show ipv6 nd ra dns search-list
Recursive DNS Search List on: 1
    Suppress DNS Search List: Yes
    DNS Search 1: test.com      lifetime 1800
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show ipv6 nd ra dns server

Syntax

```
show ipv6 nd ra dns server [vsx-peer]
```

Description

Displays DNS server information on all interfaces.

Parameter	Description
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Examples

```
switch(config)# interface 1/1/1

switch(config-if)# ipv6 nd ra dns server 2001::1
switch# show ipv6 nd ra dns server
Recursive DNS Server List on: 1
    Suppress DNS Server List: Yes
    DNS Server 1: 2001::1      lifetime 1800
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

sFlow

sFlow is a technology for monitoring traffic in switched or routed networks. The sFlow monitoring system is comprised of:

- An sFlow Agent that runs on a network device, such as a switch. The agent uses sampling techniques to capture information about the data traffic flowing through the device and forwards this information to an sFlow collector.
- An sFlow Collector that receives monitoring information from sFlow agents. The collector stores this information so that a network administrator can analyze it to understand network data flow patterns.



NOTE

The sFlow UDP datagrams sent to a collector are not encrypted, therefore any sensitive information contained in an sFlow sample is exposed.

Subtopics

sFlow agent

Configuring the sFlow agent

sFlow scenario

sFlow scenario 2

sFlow agent commands

sFlow agent

The sFlow agent on the switch provides ingress sampling of all forwarded layer 2 and layer 3 traffic on LAG and Ethernet ports. High-availability is supported (packet sampling continues to work after switch-over).

The sFlow agent can communicate with up to three sFlow collectors at the same time. The agent communicates with collectors on the default VRF and non-default VRF.

Although you can configure very high sampling rates, the switch may drop samples if it cannot handle the rate of sampled packets. High sampling rates may also cause high CPU usage resulting in control plane performance issues.

A single sFlow datagram sent to a collector contains multiple flow and counter samples. The total number of samples an sFlow datagram can contain varies depending on the settings for header size and maximum datagram size.

Default settings

- sFlow is disabled on all interfaces.
- Collector port: UDP port 6343.

- sflow sampling mode: Ingress
- Sampling rate: 4096.
- Polling interval: 30 seconds.
- Header size: 128 bytes.
- Max datagram size: 1400 bytes.

Supported features

- Global sampling rate
- Global sampling mode (Ingress, Egress, and Both)
- Interface counters polling
- Agent IP configuration for IPv4 and IPv6
- Header size configuration
- Max datagram size configuration
- Ingress sampling for all forwarded traffic (L2, L3)
- Egress sampling for all forwarded traffic (L2, L3)
- Enable/Disable sFlow per interface
- Support for three remote collectors
- A collector can be defined on the default and non-default VRF
- Sampling on Ethernet and LAG interfaces
- High availability support (sampling continues to work after switch-over)
- Source IP support (setting source IP for sFlow datagrams sent to a remote collector)

Limitations

- Sampling rate cannot be set per interface (global only)
- sFlow is not configurable through SNMP.
- sFlow ingress is mutually exclusive with mirroring of rx traffic and sFlow egress is mutually exclusive with mirroring of tx traffic.
- When rx mirroring and sFlow ingress or tx mirroring and sFlow egress sampling are configured on the same interface, after the boot, hot-swap, or fail-over, either sFlow or mirroring feature will be active on

that interface depending on the timing. If you want to have any one of the features to be active, do the following:

1. Disable the feature that you do not want to be active.
 2. Disable and re-enable the feature that you want to be active.
- When sFlow is enabled and a classifier policy is applied to a port to drop packets, packets matching the policy will be dropped and will not be sent to the sFlow collector. The packets that do not match the policy will be sampled as per the sampling rate.
 - Policy mirroring on a port takes higher priority over sFlow. This means that if samples from a port matches with a policy mirror on the same port, the packet will be consumed by the policy mirror and will not be sent to sFlow collector.
 - sFlow egress global counters will increase for broadcast, unknown-unicast, & multicast (BUM) traffic. However, the interface counters will not increase because it is flooded traffic. The output port in the sFlow sampled packet for BUM traffic will be 0x80000000.
 - When the sampling mode is configured as both, the ingress and egress packets may not be sampled in equal proportions.
 - The sampled packet count will not match the configured value when sFlow is configured but it will converge after sampling around 500 packets.
 - sFlow egress sampling is supported only on certain types of CPU generated traffic.

Configuring the sFlow agent

Procedure

1. Configure one or more sFlow collectors with the command `sflow collector`. This determines where the sFlow agent sends sFlow information.
2. Enable the sFlow agent on all interfaces, or on a specific interface, with the command `sflow`.
3. Define the address of the sFlow agent with the command `sflow agent-ip`.
4. By default, the source IP address for sFlow datagrams is set to the IP address of the outgoing switch interface on which the sFlow client is communicating with a collector. Since the switch can have multiple routing interfaces, datagrams can potentially be sent on different paths at different times, resulting in different source IP addresses for the same client. To resolve this issue, define a single source IP address. For details, see Single source IP address in the Fundamentals Guide.
5. For most deployments, the default values for the following settings do not need to be changed. If your deployment requires different settings, change the default values with the indicated commands:

sFlow setting	Default value	Command to change it
Rate at which packets are sampled.	1 in every 4096 packets	<code>sflow sampling</code>
Rate at which the switch sends data to an sFlow collector.	30 seconds	<code>sflow polling</code>
Size of the sFlow header.	128 bytes	<code>sflow header-size</code>
Maximum size of an sFlow datagram.	1400 bytes	<code>sflow max-datagram-size</code>

6. Review sFlow configuration settings with the command `show sflow`.

Example


This example creates the following configuration:

- Configures an sFlow collector with the IP address **10.10.20.209**.
- Enables the sFlow agent on all interfaces.
- Defines the sFlow agent IP address to be **10.10.1.5**.

```
switch(config)# sflow collector 10.10.20.209
switch(config)# sflow
switch(config)# sflow agent-ip 10.0.0.1
```

sFlow scenario

In this scenario, two hosts send sFlow traffic through a switch to an sFlow collector. The physical topology of the network looks like this:

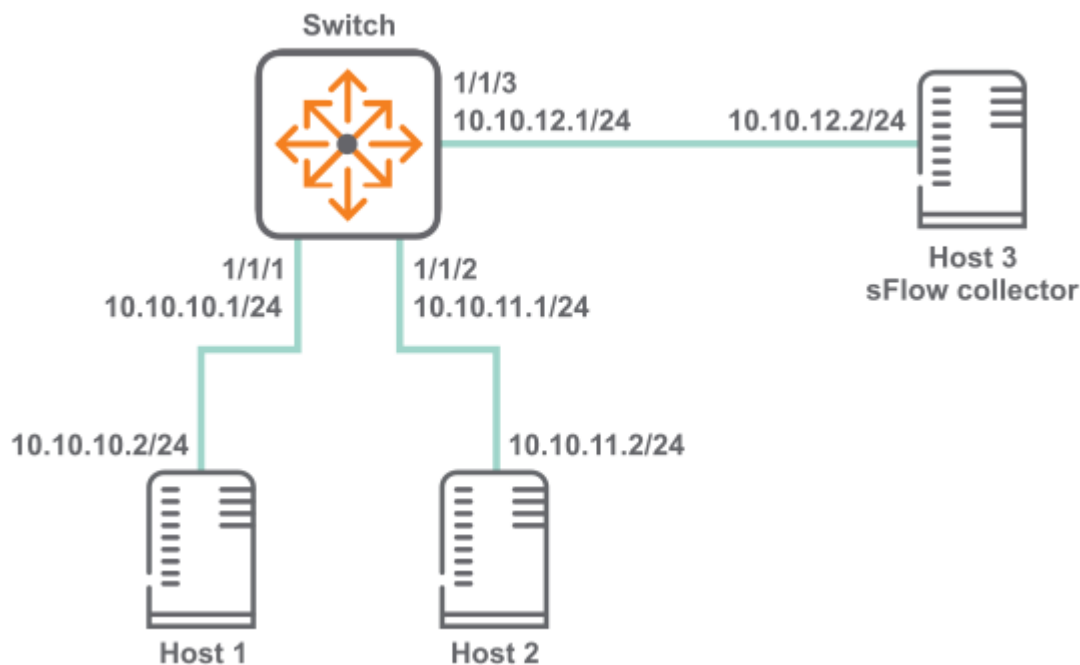

Procedure

1. Enable sFlow globally.
switch# **config** switch(config)# **sflow**
2. Set the sFlow agent IP address to **10.10.12.1**.
switch(config)# **sflow agent-ip 10.10.12.1**
3. Set the sFlow collector IP address to **10.10.12.2**.
switch(config)# **sflow collector 18.2.2.2**
4. Configure sFlow sampling rate and polling interval.
switch(config)# **sflow sampling 5000** switch(config)# **sflow polling 20**
5. Configure interface **1/1/1** with IP address **10.10.10.1/24**.
switch(config)# **interface 1/1/1** switch(config-if)# **no shutdown** switch(config-if)# **ip address 10.10.10.1/24** switch(config)# **quit**
6. Configure interface **1/1/2** with IP address **10.10.11.1/24**.
switch(config)# **interface 1/1/2** switch(config-if)# **no shutdown** switch(config-if)# **ip address 10.10.11.1/24** switch(config)# **quit**
7. Configure interface **1/1/3** with IP address **10.10.12.1/24**.
switch(config)# **interface 1/1/3** switch(config-if)# **no shutdown** switch(config-if)# **ip address 10.10.12.1/24** switch(config)# **quit**
8. Verify sFlow configuration

```

switch# show sflow
sFlow Global Configuration
-----
sFlow                                enabled
Collector IP/Port/Vrf                10.10.10.2/6343/default
Agent Address                        10.0.0.1
Sampling Rate                        1024
Polling Interval                     30
Header Size                          128
Max Datagram Size                    1400
sFlow Status
-----
Running - Yes
sFlow enabled on Interfaces:
-----
lag100
sFlow Statistics
-----
Number of Samples                    200

```


```

switch# show sflow
sFlow Global Configuration
-----
sFlow                                enabled
Collector IP/Port/Vrf                10.10.10.2/6343/default
Agent Address                        10.0.0.1
Sampling Rate                        1024
Polling Interval                     30
Header Size                          128
Max Datagram Size                    1400
Sampling Mode                        both
sFlow Status
-----
Running - Yes
sFlow enabled on Interfaces:
-----
lag100
sFlow Statistics
-----
Number of Ingress Samples            200
Number of Egress Samples              0

```

sFlow scenario 2

In this scenario, two hosts connected to different switches send sFlow traffic to a collector. A LAG is used to connect the two switches. The physical topology of the network looks like this:

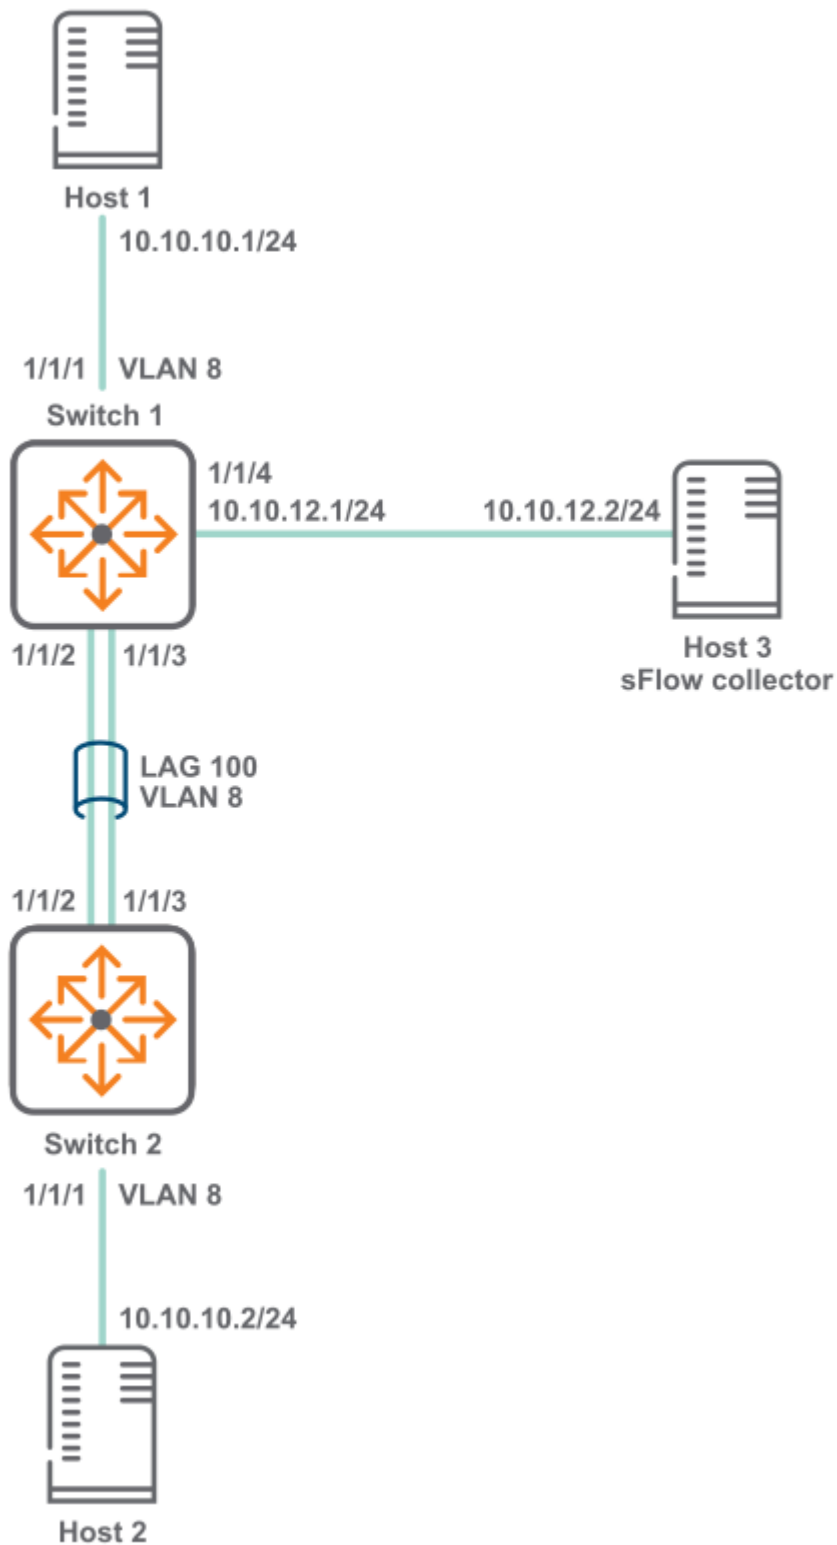

Procedure

1. Configure switch 1.

a. Enable sFlow globally.

```
switch# config  
switch(config)# sflow
```

b. Set the sFlow agent IP address to **10.10.12.1**.

```
switch(config)# sflow agent-ip 10.10.12.1
```

c. Set the sFlow collector IP address to **10.10.12.2**.

```
switch(config)# sflow collector 10.10.12.2
```

d. Configure sFlow sampling rate and polling interval.

```
switch(config)# sflow sampling 5000  
switch(config)# sflow polling 10
```

e. Create VLAN **8**.

```
switch(config)# vlan 8  
switch(config-vlan-8)# no shutdown  
switch(config)# exit
```

f. Define LAG **100** and assign VLAN **vlan 8** to it.

```
switch(config)# interface lag 100  
switch(config-lag-if)# no shutdown  
  
switch(config-lag-if)# no routing  
  
switch(config-lag-if)# vlan access 8  
switch(config-lag-if)# lacp mode active
```

g. Configure interface **1/1/1**.

```
switch(config)# interface 1/1/1  
  
switch(config-if)# no shutdown  
switch(config-lag-if)# no routing  
switch(config-if)# vlan access 8
```

h. Configure interface **1/1/2** and **1/1/3** as members of LAG **100**.

```
switch# (config)#interface 1/1/2
```

```
switch(config-if)# no shutdown
```

```
switch(config-if)# lag 100
```

```
switch(config-if)# exit
```

```
switch(config)# interface 1/1/3
```

```
switch(config-if)# no shutdown
```

```
switch(config-if)# lag 100
```

```
switch(config-if)# exit
```

- i. Configure interface **1/1/4** with IP address **10.10.12.1/24**.

```
switch# (config)#interface 1/1/4
```

```
switch(config-if)# no shutdown
```

```
switch(config-if)# ip address 10.10.12.1/24
```

```
switch(config-if)# quit
```

- j. Verify sFlow configuration.

```
switch# show sflow
```

```
sFlow Global Configuration
```

```
-----  
sFlow                      enabled  
Collector IP/Port/Vrf      10.10.10.2/6343/default  
Agent Address              10.0.0.1  
Sampling Rate              1024  
Polling Interval           30  
Header Size                128  
Max Datagram Size          1400  
sFlow Status  
-----
```

```
Running - Yes  
sFlow enabled on Interfaces:
```

```
-----  
lag100  
sFlow Statistics  
-----
```

```
Number of Samples          200
```

```
switch# show sflow
```

```
sFlow Global Configuration
```

```
-----  
sFlow                      enabled
```

```

Collector IP/Port/Vrf      10.10.10.2/6343/default
Agent Address             10.0.0.1
Sampling Rate             1024
Polling Interval          30
Header Size               128
Max Datagram Size         1400
Sampling Mode             both
sFlow Status
-----
Running - Yes
sFlow enabled on Interfaces:
-----
lag100
sFlow Statistics
-----
Number of Ingress Samples    200
Number of Egress Samples    0

```

2. Configure switch 2.

a. Create VLAN **8**.

```

switch(config)# vlan 8
switch(config-vlan-8)# no shutdown
switch(config)# exit

```

b. Define LAG **100** and assign VLAN **vlan 8** to it.

```

switch(config)# interface lag 100
switch(config-lag-if)# no shutdown

switch(config-lag-if)# no routing

switch(config-lag-if)# vlan access 8
switch(config-lag-if)# lacp mode active

```

c. Configure interface **1/1/1**.

```

switch(config)# interface 1/1/1
switch(config-if)# no shutdown

switch(config-lag-if)# no routing

switch(config-if)# vlan access 8

```

- d. Configure interface **1/1/2** and **1/1/3** as members of LAG **100**.

```
switch# (config)#interface 1/1/2
switch(config-if)# no shutdown
switch(config-if)# lag 100
switch(config-if)# exit
switch(config)-if# interface 1/1/3
switch(config-if)# no shutdown
switch(config-if)# lag 100
switch(config-if)# exit
```

sFlow agent commands

Subtopics

[sFlow agent commands](#)

sFlow agent commands

Select a command from the list in the left navigation menu.

Subtopics

[clear sflow statistics](#)

[sflow](#)

[sflow agent-ip](#)

[sflow collector](#)

[sflow disable](#)

[sflow header-size](#)

[sflow max-datagram-size](#)

[sflow mode](#)

[sflow polling](#)

[sflow sampling](#)

[show sflow](#)

clear sflow statistics

Syntax

```
clear sflow statistics {global | interface <INTERFACE-NAME>}
```

Description

This command clears the sFlow sample statistics counter to 0 either globally or for a specific interface.

Parameter	Description
global	Specifies all interfaces on the switch.
interface <INTERFACE-NAME>	Specifies the name of an interface on the switch.

Examples

Clearing the global sFlow sample statistics counter to 0 globally:

```
switch(config)# clear sflow statistics global
```

Clearing the global sFlow sample statistics counter to 0 for interface 1/1/1:

```
switch(config)# clear sflow statistics interface 1/1/1
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

sflow

Syntax

```
sflow  
no sflow
```

Description

Enables the sFlow agent.

- In the **config** context, this command enables the sFlow agent globally on all interfaces.
- In an **config-if** context, this command enables the sFlow agent on a specific interface. sFlow cannot be enabled on a member of a LAG, only on the LAG.

The sFlow agent is disabled by default.

The **no** form of this command disables the sFlow agent and deletes all sFlow configuration settings, either globally, or for a specific interface.

Examples

Enabling sFlow globally on all interfaces:

```
switch(config) # sflow
```

Disabling sFlow globally on all interfaces:

```
switch(config) # no sflow
```

Enabling sFlow on interface **1/1/1**:

```
switch(config) # interface 1/1/1  
switch(config-if) # sflow
```

Disabling sFlow on interface **1/1/1**:

```
switch(config) # interface 1/1/1  
switch(config-if) # no sflow
```

Enabling sFlow on interface **lag100**:

```
switch(config) # interface lag100  
switch(config-if) # sflow
```

Disabling sFlow on interface **lag100**:

```
switch(config) # interface lag100  
switch(config-if) # no sflow
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	config config-if	Administrators or local user group members with execution rights for this command.

sflow agent-ip

Syntax

```
sflow agent-ip <IP-ADDR>  
no sflow agent-ip [<IP-ADDR>]
```

Description

Defines the IP address of the sFlow agent to use in sFlow datagrams. This address must be defined for sFlow to function. HPE recommends that the address:

- can uniquely identify the switch
- is reachable by the sFlow collector
- does not change with time

The **no** form of this command deletes the IP address of the sFlow agent. This causes sFlow to stop working and no datagrams will be sent to the sFlow collector.

Parameter	Description
<IP-ADDR>	Specifies an IP address in IPv4 format (x.x.x.x), where x is a decimal number from 0 to 255, or IPv6 format (xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx), where x is a hexadecimal number from 0 to F. The agent address is used to identify the switch in all sFlow datagrams sent to sFlow collectors. It is usually set to a

Parameter	Description
	n IP address on the switch that is reachable from an sFlow collector.

Examples

Setting the agent address to **10.10.10.100**:

```
switch(config)# sflow agent-ip 10.0.0.100
```

Setting the agent address to **2001:0db8:85a3:0000:0000:8a2e:0370:7334**:

```
switch(config)# sflow agent-ip 2001:0db8:85a3:0000:0000:8a2e:0370:7334
```

Removing the address configuration from the switch, which results in sFlow being disabled:

```
switch(config)# no sflow agent-ip
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

sflow collector

Syntax

```
sflow collector <IP-ADDR> [port <PORT>] [vrf <VRF>]
no sflow collector <IP-ADDR> [port <PORT>] [vrf <VRF>]
```


Description

Defines a collector to which the sFlow agent sends data. Up to three collectors can be defined. At least one collector should be defined, and it must be reachable from the switch for sFlow to work.

Parameter	Description
<code>collector <IP-ADDR></code>	Specifies the IP address of a collector in IPv4 format (x.x.x.x), where x is a decimal number from 0 to 255, or IPv6 format (xx:xx:xx:xx:xx:xx:xx:xx:xx:xx:xx:xx:xx:xx:xx:xx), where x is a hexadecimal number from 0 to F.
<code>port <PORT></code>	Specifies the UDP port on which to send information to the sFlow collector. Range: 0 to 65536. Default: 6343.
<code>vrf <VRF></code>	Specifies the VRF on which to send information to the sFlow collector. The VRF must be defined on the switch. If no VRF is specified, the default VRF (default) is used.

Example

Defining a collector with IP address **10.10.10.100** on UDP port **6400**:

```
switch(config)# sflow collector 10.0.0.1 port 6400
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	<code>config</code>	Administrators or local user group members with execution rights for this command.

sflow disable

Syntax

```
sflow disable
```

Description

Disables the sFlow agent, but retains any existing sFlow configuration settings. The settings become active if the sFlow agent is re-enabled.

Example

Disabling sFlow support:

```
switch(config)# sflow disable
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

sflow header-size

Syntax

```
sflow header-size <SIZE>  
no sflow header-size [<SIZE>]
```

Description

Sets the sFlow header size in bytes.

The **no** form of this command sets the header size to the default value of 128.

Parameter	Description
header-size <SIZE>	Specifies the sFlow header size in bytes. Range: 64 to 256. Default: 128.

Examples

Setting the header size to **64** bytes:

```
switch(config) # sflow header-size 64
```

Setting the header size to the default value of **128** bytes:

```
switch(config) # no sflow header-size
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

sf flow max-datagram-size

Syntax

```
sf flow max-datagram-size <SIZE>
no sf flow max-datagram-size [<SIZE>]
```

Description

Sets the maximum number of bytes that are sent in one sFlow datagram.

The **no** form of this command sets maximum number of bytes to the default value of 1400.

Parameter	Description
<code>max-datagram-size <SIZE></code>	Specifies the maximum datagram size in bytes. Range: 1 to 9000. Default: 1400.

Examples

Setting the datagram size to **1000** bytes:

```
switch(config) # sflow max-datagram-size 1000
```

Setting the header size to the default value of **1400** bytes:

```
switch(config) # no sflow max-datagram-size
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	<code>config</code>	Administrators or local user group members with execution rights for this command.

sflow mode

Syntax

```
sflow mode {ingress | egress | both}
no sflow mode {ingress | egress | both}
```

Description

Sets the sFlow sampling mode. The default mode is ingress.

The no form of the command sets the sampling mode to ingress. Executing the no form of the command with the ingress option will have no impact as ingress is the default mode.

Parameter	Description
ingress	Samples only ingress traffic.
egress	Samples only egress traffic.
both	Samples both ingress and egress traffic.

Examples

Setting the sFlow mode to only sample egress traffic:

```
switch# configure terminal
switch(config)# sflow mode egress
```

Setting the sFlow mode to only sample ingress traffic:

```
switch# configure terminal
switch(config)# sflow mode ingress
```

Setting the sFlow mode to sample both sample ingress and egress traffic:

```
switch# configure terminal
switch(config)# sflow mode both
```

Resetting the sFlow sampling mode to the default of ingress from previously configured mode of egress:

```
switch# configure terminal
switch(config)# no sflow mode egress
```

Command History

Release	Modification
10.11	Command enabled on the 8400 Switch Series.
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8400	config	Administrators or local user group members with execution rights for this command.

sflow polling

Syntax

```
sflow polling <INTERVAL>  
no sflow polling [<INTERVAL>]
```

Description

Defines the global polling interval for sFlow in seconds.

The **no** form of this command sets the polling interval to the default value of 30 seconds.

Parameter	Description
<INTERVAL>	Specifies the polling interval in seconds. Range: 10 to 3600. Default: 30.

Examples

Setting the polling interval to 10:

```
switch(config)# sflow polling 10
```

Setting the polling interval to the default value.

```
switch(config)# no sflow polling
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

sflow sampling

Syntax

```
sflow sampling <RATE>
no sflow sampling [<RATE>]
```

Description

Defines the global sampling rate for sFlow in number of packets. The default sampling rate is 4096, which means that one in every 4096 packets is sampled. A warning message is displayed when the sampling rate is set to less than 4096 and proceeds only after user confirmation.

The **no** form of this command sets the sampling rate to the default value of 4096.

Parameter	Description
sampling <RATE>	Specifies the sampling rate. Range: 1 to 1000000000. Default: 4096.

Examples

Setting the sampling rate to **5000**:

```
switch(config)# sflow sampling 5000
```

Setting the sampling rate to the default:

```
switch(config)# no sflow sampling
```

Setting the sampling rate to **1000**:

```
switch(config)# sflow sampling 1000
```

Setting the sFlow sampling rate lower than 4096 is not recommended and might affect system performance.

Do you want to continue [y/n]? **y**

```
switch(config)#
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

show sflow

Syntax

```
show sflow [interface <INTERFACE-NAME>] [vsx-peer]
```

Description

Shows sFlow configuration settings and statistics for all interfaces, or for a specific interface. It also displays the current status of sFlow on the device and reports any errors that require attention.



NOTE

If sFlow is enabled on the interfaces associated with a lag interface, then the interfaces will not be shown as separate entries under `sFlow enabled on Interface` in the output. Only the associated lag interface will have an entry in the column.

Parameter	Description
<code>interface <INTERFACE-NAME></code>	Specifies the name of an interface on the switch.
<code>vsx-peer</code>	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Examples

Showing sFlow information for all interfaces:

```
switch# show sflow
sFlow Global Configuration
-----
sFlow                enabled
Collector IP/Port/Vrf 10.0.0.2/6343/default
                     10.0.0.3/6400/default
Agent Address         10.0.0.1
Sampling Rate         1024
Polling Interval      30
Header Size           128
Max Datagram Size     1400
Sampling Mode         ingress
sFlow Status
-----
Running - Yes
sFlow enabled on Interfaces:
-----
1/1/2
1/1/3
lag100
sFlow Statistics
-----
Number of Ingress Samples 200
Number of Egress Samples  120
switch# show sflow
sFlow Global Configuration
-----
sFlow                enabled
Collector IP/Port/Vrf 10.10.10.2/6343/default
Agent Address         10.0.0.1
```

```

Sampling Rate          1024
Polling Interval       30
Header Size           128
Max Datagram Size     1400
sFlow Status
-----

```

```

Running - Yes
sFlow enabled on Interfaces:
-----

```

```

lag100
sFlow Statistics
-----

```

```

Number of Samples      200

```

Showing sFlow information for interface **1/1/1**:

```

switch# show sflow interface 1/1/1
sFlow configuration - Interface 1/1/1
-----
sFlow          enabled
Sampling Rate   1024
Sampling Mode   both
Number of Ingress Samples  81
Number of Egress Samples  20
sFlow Sampling Status  success

```

```

switch# show sflow interface 1/1/1
sFlow configuration - Interface 1/1/1
-----
sFlow          enabled
Sampling Rate   1024
Number of Samples  30
sFlow Sampling Status  success

```

Showing sFlow information for interface **lag 10**:

```

switch# show sflow interface lag 10
sFlow Configuration - Interface lag10
-----
sFlow          enabled
Sampling Rate   4096
Sampling Mode   both
Number of Ingress Samples  0
Number of Egress Samples  0
sFlow Sampling Status  error
Sampling Status on LAG members
-----

```

```

Intf 1/1/2          no agent
Intf 1/1/3          no agent
switch# show sflow interface lag 10
sFlow Configuration - Interface lag10
-----
sFlow                enabled
Sampling Rate        4096
Number of Samples    0
sFlow Sampling Status error
Sampling Status on LAG members
-----
Intf 1/1/2          no agent
Intf 1/1/3          no agent

```

Command History

Release	Modification
10.11	Command output updated to display Sampling Mode , Number of Ingress Samples , and Number of Egress Samples for 8400 Switch Series.
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

DHCP

The Dynamic Host Configuration Protocol (DHCP) enables the automatic assignment of IP addresses and other configuration settings to network devices.

DHCP is composed of three components: DHCP server, DHCP client, and DHCP relay agent.

The DHCP server contains the IP addresses and configuration settings for a network as defined by a network administrator. It responds to DHCP requests issued by DHCP clients, returning the requested network configuration settings.

The DHCP client runs on a network device. It issues a request to a DHCP server to obtain an IP address for the network device, and other network settings.

The DHCP relay agent acts as an intermediary, forwarding DHCP requests/response between DHCP clients/servers on different networks. This enables DHCP clients to use the services of DHCP servers that are not on the same subnet on which they are located.

```
switch(config)# interface 1/1/1
switch(config-if)# no shutdown
switch(config-if)# vlan access 100
switch(config-if)# exit
switch(config-if)# interface vlan 100
switch(config-if-vlan)# <DHCP feature CLI>
```

Subtopics

[**DHCP client**](#)

[**DHCP relay agent**](#)

[**DHCP server**](#)

[**FAQ**](#)

DHCP client

By default, the switch operates as a DHCP client on the management interface allowing it to automatically obtain an IP address from a DHCP server on the network to which it is connected.

Subtopics

[**Protocol and feature details**](#)

[**Supported platform and standards**](#)

[**Configuration task list**](#)

[**Considerations and best practices**](#)

[**Use case**](#)

[**DHCP client commands**](#)

Protocol and feature details

DHCP Client is supported on IPv4 and IPv6 (for IPV6 it is supported only on management VRF).

The IP DHCP assignment with HPE Aruba Networking AOS-CX switch is to allow the following:

- IP switch assignment.
- Managing the initial IP access to the switch.

- Prepare for Zero Touch Provisioning (ZTP) with HPE Aruba Networking Central.



NOTE

Zero Touch Provisioning (ZTP) is only supported for IPV4 in HPE Aruba Networking Central

- Prepare for Zero Touch Provisioning (ZTP) by using DHCP options along with a TFTP server.

Supported platform and standards

The following table list the supported VLANs and ports for the AOS-CX Switch.

Table 1. Supported VLAN and Ports for DHCP

Platform	VLAN 1
----------	--------

8400	No
------	----

Configuration task list

To run the DHCP Client do the following:

- Enter the interface VLAN or Management VRF context

- Enable DHCP

Considerations and best practices

The IP DHCP can only be configured on one VLAN per switch.

If an OOB Management port is available, you can configure the DHCP service simultaneously for the VLAN IN Band and the OOB Management port. When both the IN Band data port and the OOB Management port receive a DHCP address, then the DHCP address received on the OOBM port is preferred over the IN Band data port for ZTP.


Use case

About this task

IP DHCP assignment with HPE Aruba Networking AOS-CX switches is to allow IP switch assignment and Zero Touch Provisioning using HPE Aruba Networking Central, as shown below.

In the following DHCP client scenario the OOB Management port is in use. The IN Band data ports can also be used for Zero Touch Provisioning (ZTP).

For more information related to the supported ports for the different switches, see [Table 1, Supported VLAN and Ports for DHCP](#).

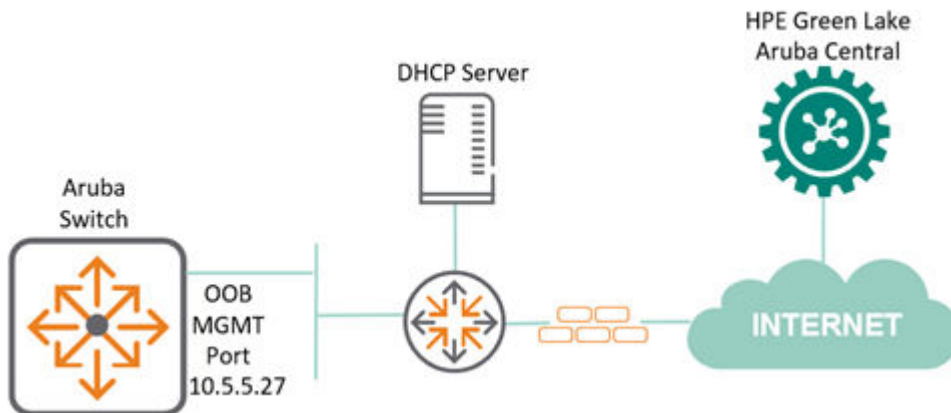

Procedure

1. Switch configuration from factory on OOB Management port.

```
switch#  
!  
interface mgmt  
    no shutdown
```

```
ip dhcp
!
```

2. OOB Management port gets assigned with an IPv4 address 10.5.5.27 from DHCP server.

```
switch# show interface mgmt
Address Mode                : dhcp
Admin State                 : up
Link State                  : up
Mac Address                 : 88:3a:30:9a:39:01
IPv4 address/subnet-mask    : 10.5.5.27/24
Default gateway IPv4        : 10.5.5.254
IPv6 address/prefix         :
2a00:23c5:ac8a:3e01:8a3a:30ff:fe9a:3901/64
IPv6 link local address/prefix: fe80::8a3a:30ff:fe9a:3901/64
Default gateway IPv6        : fe80::f286:20ff:fe0b:fe5
Primary Nameserver          : 10.5.19.69
Secondary Nameserver        : 10.5.19.79
Tertiary Nameserver         : 8.8.4.4
```

Results

The following output shows a switch connected to HPE Aruba Networking Central allocated with an IP address of 10.5.5.27 on its OOB MGMT port by a DHCP server. Based on its designated configuration in the public cloud, the switch can get its configuration parameters directly from HPE Aruba Networking Central.

```
switch# show hpe_anw-central
Central admin state          : enabled
Central location             : device-prod2-
d2.central.arubanetworks.com
VRF for connection           : mgmt
Central connection status    : connected
Central source               : activate
Central source connection status : connected
Central source last connected on : Wed Sep 22 18:39:05 UTC 2021
System time synchronized from Activate : True
Activate Server URL          : devices-v2.arubanetworks.com
CLI location                 : N/A
CLI VRF                      : N/A
Source IP                    : 10.5.5.27
Source IP Overridden         : False
Central support mode         : disabled
```

DHCP client commands

Subtopics

DHCP client commands

DHCP client commands

Select a command from the list in the left navigation menu.

Subtopics

ip dhcp

ipv6 dhcp

ip dhcp option

ip dhcp preferred-vlan

show ip dhcp

show ipv6 dhcp

show ip dhcp preferred-vlan

ip dhcp

Syntax

```
ip dhcp
no ip dhcp
```

Description

Enables the DHCP client on the management interface or any interface VLAN to automatically obtain an IP address from a DHCP server on the network. By default, the DHCP client is enabled on the management interface and VLAN 1.

The **no** form of the command disables DHCP mode and is supported only on interface VLANs; it is not supported on the management interface.

Examples

Enabling the DHCP client on the management interface:

```
switch(config)# interface mgmt
switch(config-if-mgmt)# ip dhcp
```



```
switch(config-if-mgmt) # no shutdown
```

Enabling the DHCP client on the interface vlan 1:

```
switch(config) # interface vlan 1
switch(config-if-vlan) # ip dhcp
switch(config-if-vlan) # no shutdown
```

Disabling the DHCP client on the interface vlan 1:

```
switch(config) # interface vlan 1
switch(config-if-vlan) # no ip dhcp
```

Enabling the DHCP client on the interface vlan 4 under non-default VRF:

```
switch(config) # interface vlan 4
switch(config-if-vlan) # vrf attach red
switch(config-if-vlan) # ip dhcp
```

If the interface is not enabled, you can enable it by entering the `no shutdown` command.



NOTE

DHCP client can be enabled on one or more user VLANs.

General Limitations

1. ZTP (Zero Touch Provisioning) options from a DHCP server are only supported on VLAN 1. These options will be ignored if received on any other VLAN.
2. CoP and HTTPS-proxy DHCP options should be received on only one DHCP client-enabled VLAN. If multiple VLANs receive the same option, the selection of the VLAN from which the options are applied is non-deterministic. Therefore, configuring multiple VLANs to receive these options is not recommended.
3. It is recommended to limit the number of DHCP client VLANs in a system to 32. This total includes both DHCPv4 and DHCPv6 client instances.
4. The `ip dhcp` option `broadcast-flag` configuration must be enabled to successfully obtain DHCP IP addresses across multiple VLANs when the default gateway route is present.

Command History

Release	Modification
10.17	Support enabled on one or more user VLANs.

Release	Modification
10.16.1000	Support added for the 8100, 832x, 8360, 8400, 9300, 9300S, and 10000 Switch Series.
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	config-if-mgmt config-if-vlan	Administrators or local user group members with execution rights for this command.

ipv6 dhcp

Syntax

```
ipv6 dhcp
no ipv6 dhcp
```

Description

Configure to enable DHCPv6 mode on a VLAN. In DHCPv6 Mode, the VLAN will get a DHCP-Server allocated IPv6 address along with DNS and NTP attributes.

The **no** form of the command disables DHCP mode and is supported only on interface VLANs; it is not supported on the management interface.



NOTE

ZTPv6 attributes are included in the request packet, but they are not utilized by ZTP on the data port. Currently, ZTPv6 attributes are only supported on the management port. Also, IPv6 addresses assigned through DHCPv6 only support a /64 prefix.

Examples

Enabling the DHCPv6 client on the interface vlan 1:

```
switch(config)# interface vlan 1
switch(config-if-vlan)# ipv6 dhcp
```

Enabling the DHCPv6 on two VLANs:

```
switch(config)# interface vlan 1
switch(config-if-vlan)# ipv6 dhcp
switch(config)# interface vlan 2
switch(config-if-vlan)# ipv6 dhcp
```

Enabling the DHCPv6 client on the interface vlan 4 under non-default VRF:

```
switch(config)# interface vlan 4
switch(config-if-vlan)# vrf attach red
switch(config-if-vlan)# ipv6 dhcp
```

Disabling the DHCPv6 client on the interface vlan 1:

```
switch(config)# interface vlan 1
switch(config-if-vlan)# no ipv6 dhcp
```

If the interface is not enabled, you can enable it by entering the `no shutdown` command.

General Limitations

1. ZTP (Zero Touch Provisioning) options from a DHCP server are only supported on VLAN 1. These options will be ignored if received on any other VLAN.
2. CoP and HTTPS-proxy DHCP options should be received on only one DHCP client-enabled VLAN. If multiple VLANs receive the same option, the selection of the VLAN from which the options are applied is non-deterministic. Therefore, configuring multiple VLANs to receive these options is not recommended.
3. It is recommended to limit the number of DHCP client VLANs in a system to 32. This total includes both DHCPv4 and DHCPv6 client instances.
4. The `ip dhcp option broadcast-flag` configuration must be enabled to successfully obtain DHCP IP addresses across multiple VLANs when the default gateway route is present.

Command History

Release	Modification
10.17	Support added for DHCPv6 on multiple VLANs.
10.16.1000	Support added for the 8100, 832x, 8360, 8400, 9300, 9300S, and 10000 Switch Series.
10.15	Command was introduced.

Command Information

Platforms	Command context	Authority
All platforms	config-if-mgmt config-if-vlan	Administrators or local user group members with execution rights for this command.

ip dhcp option

Syntax

```
ip dhcp option [host-name | broadcast-flag]
no ip dhcp option[host-name | broadcast-flag]
```

Description

This command enables the DHCP client host name and broadcast flag globally.

If the **ip dhcp option broadcast-flag** command is enabled, then the DHCP offer and ack packets in the DHCP requests will be treated as broadcast packets. These packets will not be forwarded due to the presence of a default static route.

The **no** form of this command globally disables the host name and DHCP client broadcast flag options.



NOTE

The **ip dhcp option broadcast-flag** command should be configured before configuring the **ip dhcp** command.

Example

Enabling the DHCP client broadcast flag globally:

```
switch(config)# ip dhcp option
broadcast-flag DHCP Client broadcast-flag option (Default:disabled)
host-name DHCP Client hostname option
switch(config)# ip dhcp option
% Command incomplete.
switch(config)# interface vlan 1
switch(config-if-vlan)# ip dhcp
switch(config-if-vlan)# ip dhcp op
% There is no matched command.
switch(config-if-vlan)# ip dhcp op
```

```
Invalid input: ip
switch(config-if-vlan) #
```

Enabling the DHCP client host name globally:

```
switch(config) # interface vlan 1
switch(config-if-vlan) # ip dhcp option host-name
```

Disabling the DHCP client broadcast flag globally:

```
switch(config) # interface vlan 1
switch(config-if-vlan) # no ip dhcp option broadcast-flag
```

Disabling the DHCP client host name globally:

```
switch(config) # ip dhcp option
broadcast-flag  DHCP Client broadcast-flag option (Default:disabled)
host-name       DHCP Client hostname option
switch(config) # ip dhcp option
% Command incomplete.
switch(config) # interface vlan 1
switch(config-if-vlan) # ip dhcp
switch(config-if-vlan) # no ip dhcp option host-name
% There is no matched command.
switch(config-if-vlan) # ip dhcp op
Invalid input: ip
switch(config-if-vlan) #
```

Command History

Release	Modification
10.16.1000	Support added for the 8100, 832x, 8360, 8400, 9300, 9300S, and 10000 Switch Series.
10.13.1000	Command Introduced

Command Information

Platforms	Command context	Authority
All platforms	config-if-mgmt config-if-vlan	Administrators or local user group members with execution rights for this command.

ip dhcp preferred-vlan

Syntax

```
ip dhcp preferred-vlan <VLAN-ID> [vrf <VRF-NAME>]  
no ip dhcp preferred-vlan vlan <VLAN-ID> [vrf <VRF-NAME>]
```

Description

Specifies the preferred VLAN for DHCP client options, including DNS, NTP, and Default Gateway. The preferred VLAN is the VLAN used to select DHCP client options within a specified VRF when multiple VLANs have DHCP client enabled in the same VRF. If no VRF is specified, the configuration applies to the default VRF. In cases where the preferred VLAN is not explicitly configured, the lowest VLAN with DHCP client enabled will be automatically selected.

The **no** form of the command removes the preferred VLAN configuration and restores the default behavior.

Parameter	Description
<VLAN-ID>	VLAN ID to set as preferred VLAN. VLAN identifier range: 1 to 4094.
<VRF-NAME>	Specifies the VRF in which the preferred VLAN should be configured.

General Considerations

1. If the preferred VLAN configuration status is not success, the DHCP client-enabled VLAN with the lowest VLAN ID will be used for DHCP attribute selection.

Use the command `show ip dhcp preferred-vlan` to check the configuration status.

2. The preferred or lowest VLAN will be inactive in the following scenarios:
 - a. When the DHCP interface is in a shutdown state and corresponds to the preferred or lowest VLAN ID.
 - b. When a static IP is configured on an interface that also has DHCP enabled — the static IP takes precedence over DHCP.
 - c. When DHCP attributes are not received from the server on the preferred or lowest VLAN.

Examples

Selecting VLAN 1 as the preferred VLAN:

```
switch(config)# ip dhcp preferred-vlan 1
```

Selecting VLAN 10 as the preferred VLAN with VRF name:

```
switch(config)# ip dhcp preferred-vlan 10 vrf red
```

Command History

Release	Modification
10.17	Command introduced.

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

show ip dhcp

Syntax

```
show ip dhcp
```

Description

Displays DHCP IPv4 information on the ports.

Examples

Displaying the DHCP IPv4 information on the ports:

```
switch# show ip dhcp
DHCP Options: Broadcast-flag, Hostname
INTERFACE-NAME  ADDRESS                DEFAULT_GATEWAY  DOMAIN_NAME  VRF
DNS-SERVERS
-----
vlan1           10.254.239.10/27      domain.com       default
50.0.0.2, 50.0.0.3, 50.0.0.4
```

Command History

Release	Modification
10.16.1000	Support added for the 8100, 832x, 8360, 8400, 9300, 9300S, and 10000 Switch Series.
10.13.1000	The output parameters, Broadcast - flag and Hostname were introduced.
10.09 or earlier	Command introduced.

Command Information

Platforms	Command context	Authority
All platforms	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show ipv6 dhcp

Syntax

```
show ipv6 dhcp
```

Description

This command displays DHCP IPv6 information on the ports.

Examples

Displaying the DHCP IPv6 information on the ports:

```
6410(config)# show ipv6 dhcp
VRF default
-----
Interface vlan1
-----
IPv6 address      : 3013::1050/64
Domain search     : paramv6.org, test1.in, test2.in, test3.in, test4.in,
test5.in
```



```
DNS servers      : 3013::100, 3013::101, 3013::102
NTP servers      : 3013::201, 3013::202
```

Command History

Release	Modification
10.16.1000	Support added for the 8100, 832x, 8360, 8400, 9300, 9300S, and 10000 Switch Series.
10.15	Command was introduced.

Command Information

Platforms	Command context	Authority
All platforms	config-if-mgmt config-if-vlan	Administrators or local user group members with execution rights for this command.

show ip dhcp preferred-vlan

Syntax

```
show ip dhcp preferred-vlan [{vrf <VRF-NAME> | all-vrfs}]
```

Description

Displays the preferred DHCP client VLANs configured on the system.

Parameter	Description
vrf <VRF-NAME>	Show information for a specified VRF.
all-vrf	Show information for all VRFs.

Examples

Displaying the DHCP information for the preferred VLAN and VRF red:

```
switch# show ip dhcp preferred-vlan vrf red
VRF          Preferred-VLAN      Config-status
```

red	10	L3 interface not found
-----	----	------------------------

Displaying the DHCP information for the all VRFs:

```
switch# show ip dhcp preferred-vlan all-vrfs
```

VRF	Preferred-VLAN	Config-status
default	1	Success
red	9	VRF Mismatch

Command History

Release	Modification
10.17	Command introduced.

Command Information

Platforms	Command context	Authority
All platforms	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

DHCP relay agent

The function of the DHCP relay agent is to forward the DHCP messages to other subnets so that the DHCP server does not have to be on the same subnet as the DHCP clients. The DHCP relay agent transfers DHCP messages from the DHCP clients located on a subnet without a DHCP server, to other subnets. It also relays answers from DHCP servers to DHCP clients.

Subtopics

[**Supported platform and standards**](#)

[**Protocol and feature details**](#)

[**DHCPv4 relay agent**](#)

[**DHCPv6 relay agent**](#)

[**Troubleshooting**](#)

Supported platform and standards

The following table list the supported platforms for DHCPv4 relay and DHCPv6 relay.

Table 1. Support platforms for DHCPv4 relay and DHCPv6 relay

Platform	DHCPv4 Relay
----------	--------------

8400	Yes
------	-----

Table 2. Scale
Platform

DHCP v4/v6 enabled SVI

8400	4094
------	------

DHCP relay behaviors are as follows:

- DHCPv6 relay is disabled by default.
- DHCPv4 Smart relay is disabled by default.
- DHCP relay hop count is enabled by default.
- In DHCPv4 relay the option 82 policy is replace by default.
- The MAC address of the switch is used as the option 82 remote ID by default.
- In DHCPv6 relay the option 79 policy is disabled by default.
- In DHCPv4 relay the source-interface is disabled by default.

Protocol and feature details

Supported interfaces

The DHCP relay agent is supported on layer 3 interfaces, layer 3 VLAN interfaces, and LAG interfaces. DHCP relay is not supported on the management interface.

VRF support

The DHCP relay agent is VRF aware and behaves as follows when VRFs are defined on the switch:

- DHCP client requests received on an interface are forwarded to the configured servers via the VRF that the interface is part of.
- DHCP server responses received on an interface are forwarded to the client that is reachable via the VRF that the interface is part of.

DHCP server interoperation

Both DHCP relay and DHCP server can be configured on the same VRF.

DHCP Relay VxLAN support

DHCPv4 Relay is supported on VXLAN with IPv4 underlay .



NOTE

DHCPv6 Relay requires the egress interface to be configured for the IPv6 multicast helper address. DHCPv6 relay multicast helper configuration is not allowed over VxLAN tunnels.

DHCPv4 relay agent

Hop count in DHCP requests

When a DHCP client broadcasts request, the DHCP relay agent in the switch receives the packets and forwards them to the DHCP server as unicast requests. During this process, the DHCP relay agent increments the hop count before forwarding DHCP packets to the server. The DHCP server, in turn, includes the hop count in the DHCP header in the response sent back to a DHCP client.

DHCP relay option 82

Option 82 is called the relay agent information option. When a DHCP relay agent forwards client-originated DHCP packets to a DHCP server, the option 82 field is inserted/replaced, or the packet with this option is dropped. Servers recognizing the relay agent information option may use the information to implement policies for the assignment of IP addresses and other parameters. The relay agent relays the server-to-client replies to the client.

If a second relay agent is configured to add its own option 82 information, it can encapsulate option 82 information in messages from a first relay agent. The DHCP server uses the option 82 information from both relay agents to decide the IP address for the client.



NOTE

A DHCP relay option 82 source-interface needs to be enabled when a source interface is used for an Intra-VRF deployment. In this deployment type, the client and DHCP server are in same VRF, but the relay will use the source interface.

Inter-VRF DHCP relay

The DHCP relay agent supports anycast gateway using option 82 sub-option 5 (RFC 3527). The DHCP relay discovery packet is filled with the client's gateway IP address in sub-option 5 (discovery packet). The DHCP server uses this information to offer an IP address from the right pool. Pool selection occurs by matching the default gateway configuration settings on the DHCP server with the requested gateway IP address in sub-option 5 in the discovery packet.

The switch uses DHCP relay sub-option 151 to enable DHCP relay to forward discovery and reply packets between VXLAN DHCP clients and DHCP servers even when they are on different overlay or underlay VRFs and the DHCP-server is reachable on the default VRF or one of the overlay VRFs.

In general deployments, a renewal of a DHCP client's IP occurs when the client sends a request to the DHCP server directly. In the case of EVPN VXLAN clients, the DHCP server is not directly reachable. Instead, the renewal request is sent to the DHCP relay. DHCP relay agent fills the option 82 sub-option 11 field in the DHCP discovery packet with the client's gateway IP on the VTEP (which is the relay interface IP address of the VTEP) and the DHCP server returns a DHCP offer reply packet with option 54 set to the DHCP server Identifier. When the reply packet is received by the client, the client uses the IP in option 54 to sent subsequent renewal requests to this IP (VTEP's Relay Interface IP) using sub-option 11 (also known as the Server ID Override Sub-option). Refer to RFC 5107 for more details.

Sub-options 5,11,151,152 are filled in the discover packet, only if a source IP address is defined (using the command `ip source-address`) for the given DHCP server's source VRF. If the server does not understand sub-option 151, then the server will add sub-option 152 in offer packet.

In an inter-VRF situation, when both DHCP relay and DHCP snooping are enabled on the switch with option 82, DHCPv4 clients will not receive an IP address.

Configuring a BOOTP/DHCP relay gateway

The DHCP relay agent selects the lowest-numbered IP address on the interface to use for DHCP messages. The DHCP server then uses this IP address when it assigns client addresses. However, this IP address may not be the same subnet as the one on which the client needs the DHCP service. This feature provides a way to configure a gateway address for the DHCP relay agent to use for relayed DHCP requests, rather than the DHCP relay agent automatically assigning the lowest-numbered IP address.



NOTE

On configuring a bootp-gateway the dhcp-smart-relay is disabled. This can occur with dhcp-relay as well.

DHCP smart relay

The DHCP Smart Relay feature first attempts to use the primary IP address from the client-connected interfaces as a gateway IP address (giaddr) and as an IP address for pool selection. If the DHCP server does not reply to the DHCP discover messages with the primary IP address, the feature attempts to use secondary IP addresses in sequential order from the lowest to the highest. The DHCP Smart Relay forwards three client discover messages with every IP address configured on the client interface until it receives a response from the server. If the list of IP addresses from the client-connected interface is exhausted or the client times out, the DHCP Smart Relay uses the primary IP address. If the DHCP Smart Relay is not configured, the giaddr is the lowest IP address on the interface.

The DHCP Smart Relay maintains the client cache which includes the information about the client, giaddr, retry count for giaddr, port, the total number of processed discovery messages the timestamp of the discover packets. This client cache is rebuilt upon high availability and VSF switchover, VSX-MM (redundancy) switchover, and when the switch reboots.



NOTE

DHCP Smart Relay is only supported for IPv4.

Subtopics

Configuring the DHCPv4 relay agent

Use Case

DHCPv4 relay commands

Configuring the DHCPv4 relay agent

Prerequisites

- An enabled layer 3 interface.

Procedure

1. The DHCPv4 relay agent is enabled by default. If it was previously disabled, enable it with the command `dhcp-relay`.
2. Configure one or more IP helper addresses with the command `ip helper-address`. This determines where the DHCPv4 relay agent forwards DHCP requests. IP helper addresses can be configured on layer 3 interfaces, layer 3 VLAN interfaces, and LAG interfaces.
3. If you want to modify the content of forwarded DHCP packets or drop DHCP packets, configure option 82 support with the command `dhcp-relay option 82`.
4. Define the gateway address that the DHCPv4 relay agent will use with the command `ip bootp-gateway`.

5. If required, enable the hop count increment feature with the command `dhcp-relay hop-count -increment`.
6. Review DHCPv4 relay agent configuration settings with the commands `show dhcp-relay`, `show ip helper-address`, and `show dhcp-relay bootp-gateway`.

Example

This example creates the following configuration:

- Enables the DHCPv4 relay agent.
- Enables interface **1/1/1** and assigns an IPv4 address to it. (By default, all interfaces are layer 3 and disabled.)
- Defines an IP helper address of **10.10.20.209** on the interface.
- Enables DHCP option 82 support and replaces all option 82 information with the values from the switch with the switch MAC address as the remote ID.

```
switch(config)# dhcp-relay
switch(config)# interface 1/1/1
switch(config-if)# no shutdown
switch(config-if)# ip address 198.51.100.1/24
switch(config-if)# ip helper-address 10.10.20.209
switch(config-if)# exit
switch(config)# dhcp-relay option 82 replace mac
switch# show dhcp-relay
```

DHCP Relay Agent		: enabled	
DHCP Request Hop Count Increment		: enabled	
Option 82		: disabled	
Response Validation		: disabled	
Option 82 Handle Policy		: replace	
Remote ID		: mac	
DHCP Relay Statistics:			
Valid Requests	Dropped Requests	Valid Responses	Dropped Responses
-----	-----	-----	-----
60	10	60	10
DHCP Relay Option 82 Statistics:			
Valid Requests	Dropped Requests	Valid Responses	Dropped Responses
-----	-----	-----	-----
50	8	50	8

Use Case

This section explain the use cases for DHCPv4 relay agent.

Subtopics

DHCPv4 relay scenario 1


DHCPv4 relay scenario 2

DHCPv4 relay scenario 3

DHCPv4 relay scenario 4

DHCPv4 relay scenario 1

In this scenario, DHCP relay on the switch enables two hosts to obtain their IP addresses from a DHCP server on a different subnet. The physical topology of the network looks like this:

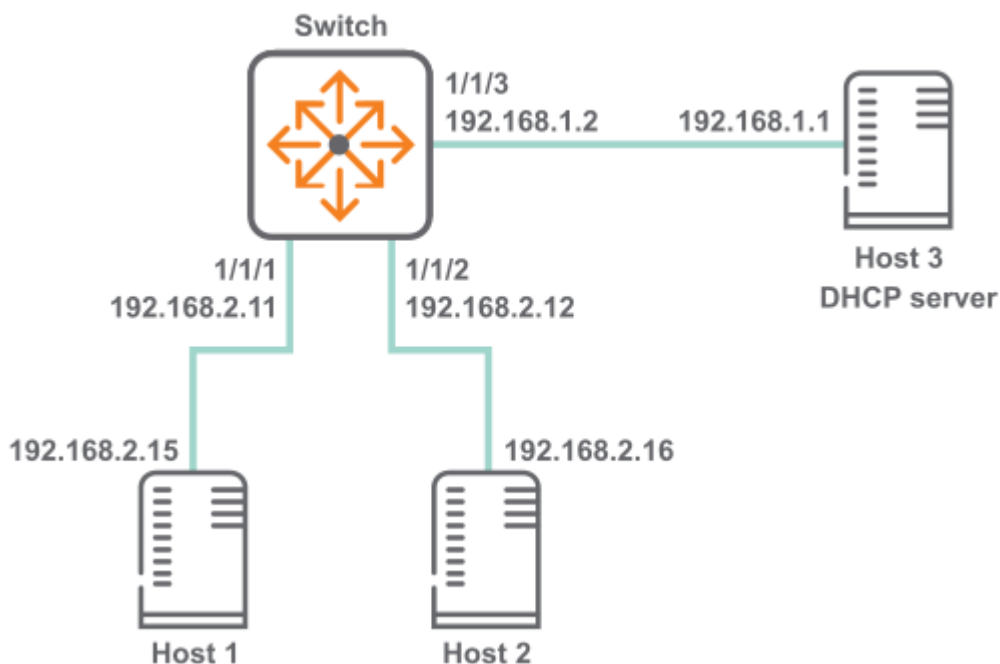

Procedure

1. DHCP relay is enabled by default. If it was previously disabled, enable it.

```
switch# config
switch(config)# dhcp-relay
```

2. Define an IPv4 helper address on interfaces 1/1/1 and 1/1/2.

```
switch(config)# interface 1/1/1
switch(config-if)# ip address 192.168.2.11/24
```

```

switch(config-if)# ip helper-address 192.168.1.1
switch(config-if)# interface 1/1/2
switch(config-if)# ip address 192.168.2.12/24
switch(config-if)# ip helper-address 192.168.1.1

```

3. Verify DHCP relay configuration.


```

switch# show dhcp-relay
DHCP Relay Agent           : enabled
DHCP Request Hop Count Increment : enabled
Option 82                  : disabled
Source-Interface           : disabled
Response Validation        : disabled
Option 82 Handle Policy    : replace
Remote ID                  : mac
DHCP Relay Statistics:
Valid Requests Dropped Requests Valid Responses Dropped Responses
-----
60          10          60          10
DHCP Relay Option 82 Statistics:
Valid Requests Dropped Requests Valid Responses Dropped Responses
-----
50          8          50          8
switch# show ip helper-address
IP Helper Addresses
Interface: 1/1/1
IP Helper Address      VRF
-----
192.168.1.1           default
Interface: 1/1/2
IP Helper Address      VRF
-----
192.168.1.1           default

```

DHCPv4 relay scenario 2

In this scenario, the two host computers communicate with two different DHCP servers. Each server is reached on a different VRF. The physical topology of the network looks like this:

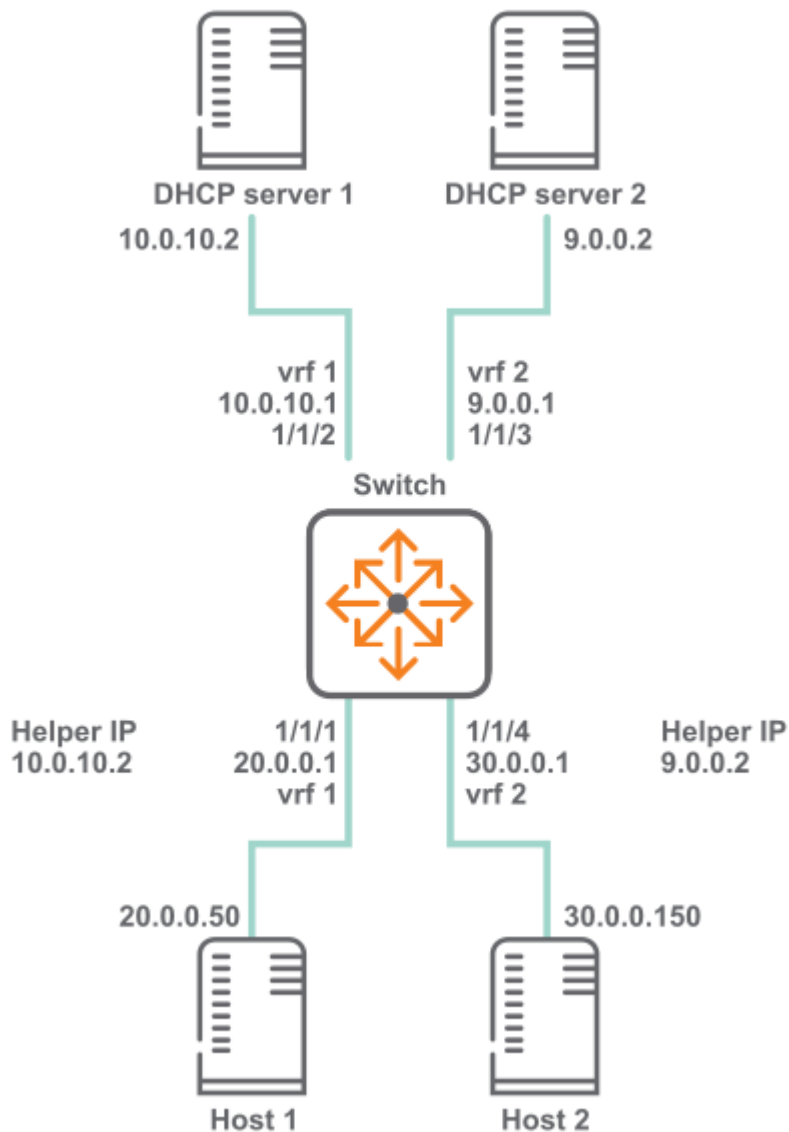

Procedure

- Create the two VRFs.


```
switch# config
```

```
switch(config)# vrf vrf 1
```

```
switch(config)# vrf vrf 2
```
- Configure interface **1/1/1**. Set its IP address, associate it with VRF 1, and define the helper IP address to reach DHCP server 1.


```
switch(config)# interface 1/1/1
```

```
switch(config)# vrf attach vrf1
```

```
switch(config)# ip address 20.0.0.1/8
```

```
switch(config)# ip helper-address 10.0.10.2
```

3. Configure interface **1/1/2**. Set its IP address and associate it with VRF 1.

```
switch(config)# interface 1/1/2
```

```
switch(config)# vrf attach vrf1
```

```
switch(config)# ip address 10.0.10.1/24
```
4. Configure interface **1/1/3**. Set its IP address and associate it with VRF 2.

```
switch(config)# interface 1/1/3
```

```
switch(config)# vrf attach vrf2
```

```
switch(config)# ip address 9.0.0.1/24
```
5. Configure interface **1/1/4**. Set its IP address, associate it with VRF 2, and define the helper IP address to reach DHCP server 2.

```
switch(config)# interface 1/1/4
```


```
switch(config)# vrf attach vrf2
```

```
switch(config)# ip address 30.0.0.1/8
```

```
switch(config)# ip helper-address 9.0.0.2
```

DHCPv4 relay scenario 3

In this scenario, host on switch 1 reaches the DHCP server on switch two via a LAG. The physical topology of the network looks like this:

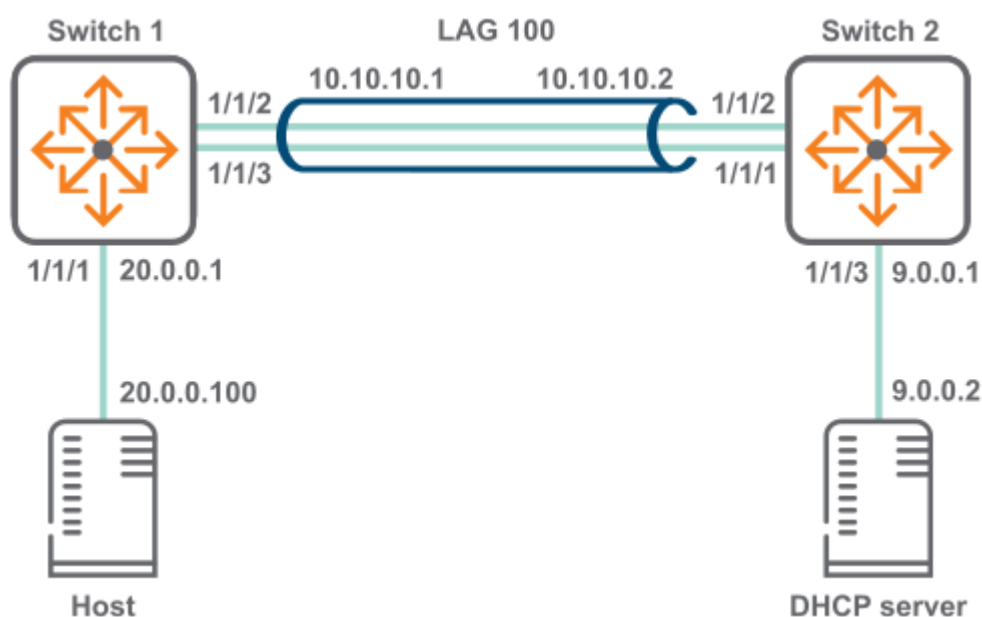

Procedure

1. On switch 1:

Create LAG 100 and assign an IP address to it.

```
switch# config
switch(config)# interface lag 100
switch(config-lag-if)# no shutdown
switch(config-lag-if)# ip address 10.0.10.1/24
switch(config-lag-if)# lACP mode active
switch(config-lag-if)# exit
```

Assign an IP address to interface 1/1/1 and an IP helper address to reach the DHCP server.

```
switch(config)# interface 1/1/1
switch(config-if)# ip address 20.0.0.1/8
switch(config-if)# ip helper-address 9.0.0.2
```

Assign an IP address to interface vlan 100 and an IP helper address to reach the DHCP server.

Assign interfaces 1/1/2 and 1/1/3 to LAG 100.

```
switch(config-if)# interface 1/1/2
switch(config-if)# lag 100
switch(config-if)# interface 1/1/3
switch(config-if)# lag 100
```

Create a route between 10.0.10.2 and 9.0.0.0.

```
switch(config)# ip route 9.0.0.0/24 10.0.10.2
```

2. On switch 2:

Create LAG 100 and assign an IP address to it.

```
switch# config
switch(config)# interface lag 100
switch(config-lag-if)# no shutdown
switch(config-lag-if)# ip address 10.0.10.2/24
switch(config-lag-if)# lACP mode active
switch(config-lag-if)# exit
```

Assign an IP address to interface vlan 300.

Assign an IP address to interface 1/1/3.

```
switch(config)# interface 1/1/3
switch(config-if)# ip address 9.0.0.1/24
```

Assign interfaces 1/1/1 and 1/1/2 to LAG 100.

```
switch(config-if)# interface 1/1/1
switch(config-if)# lag 100
switch(config-if)# interface 1/1/2
switch(config-if)# lag 100
```

Create a route between 20.0.0.0 and 10.0.10.1.

```
switch(config)# ip route 20.0.0.0/8 10.0.10.1
```


DHCPv4 relay scenario 4

About this task

In the following scenario of the DHCP smart relay, the primary address is used as the GIADDR; if the server is unavailable, then the secondary address is used. From AOS-CX 10.10.1000 and later releases, the GIADDR use the secondary address in an ascending order when there is more than one secondary address.


Procedure

1. If DHCP scope exhaustion happens at a site, an additional scope can be added to increase the IP address capacity while keeping the existing IP scope and subnet. The physical topology of the network looks like

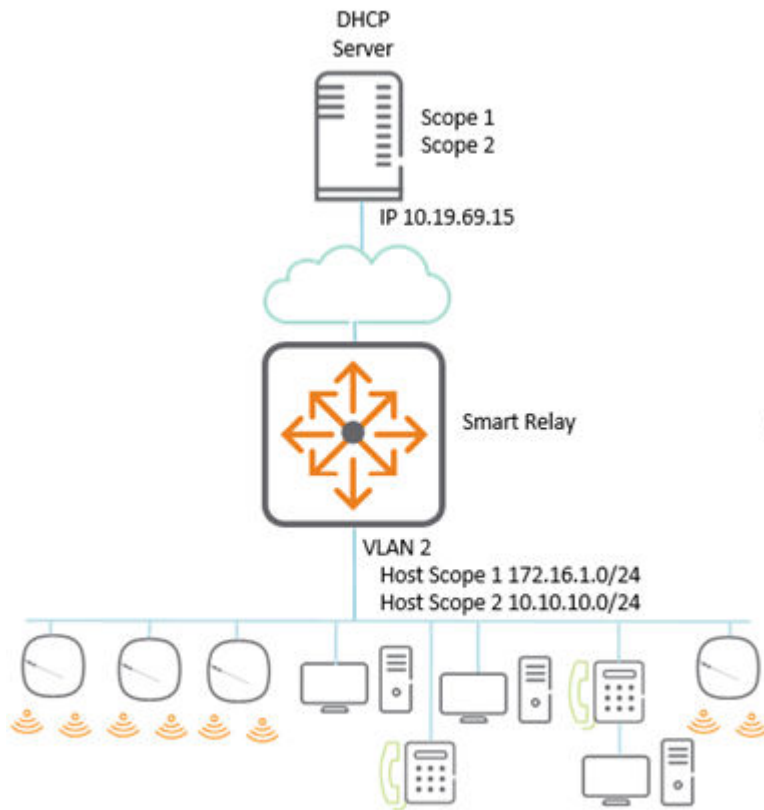

this:

2. If the DHCP server is resilient or scope is required, then whole scopes can be placed on separate servers. If a server or scope becomes unavailable, then for address assignment, the next available scope is

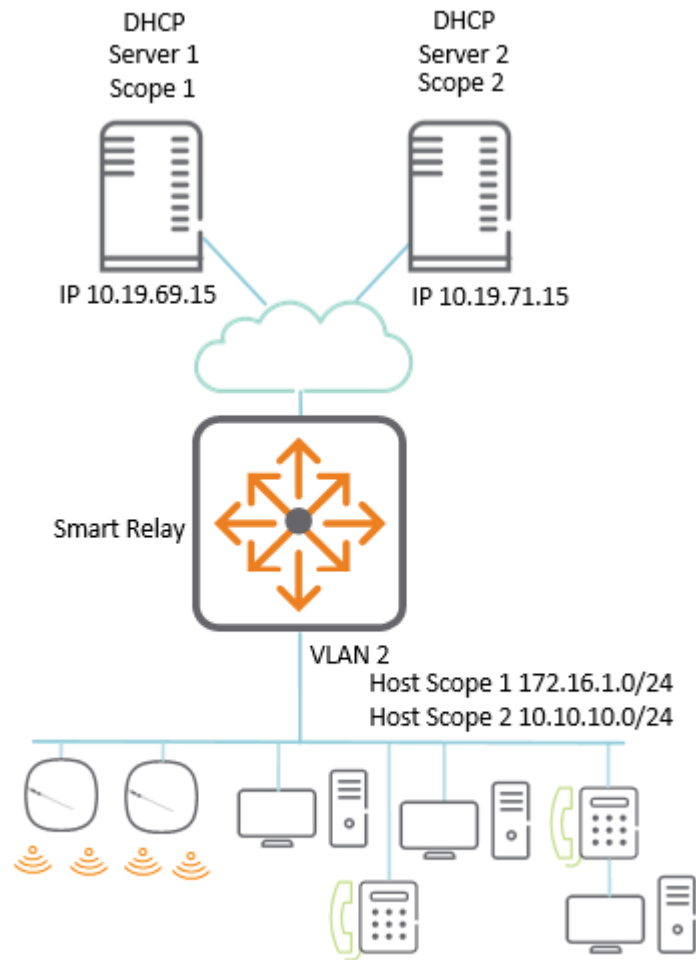

attempted.

Results

In both the above topology, the access switch is set up the same way. The only difference is in the server which is used for helper addresses.

```
!  
dhcp-smart-relay                                <-- Enable DHCP smart relay  
!  
interface vlan 2  
    ip address 172.16.1.254/24                    <-- Add the local IPS which  
will act as GIADDR  
    ip address 10.10.610.254/24 secondary  
    ip helper-address 10.19.69.15                 <-- Add the IP helpers to  
reach the required DHCP servers  
    ip helper-address 10.19.71.15
```


DHCPv4 relay commands

Subtopics

DHCPv4 relay commands

DHCPv4 relay commands

Select a command from the list in the left navigation menu.

Subtopics

dhcp-relay
dhcp-relay hop-count-increment
dhcp-relay l2vpn-clients
dhcp-smart-relay
diag-dump dhcp-relay basic
ip bootp-gateway
ip helper-address
show dhcp-relay
show dhcp-relay bootp-gateway
show ip helper-address

dhcp-relay

Syntax

```
dhcp-relay  
no dhcp-relay
```

Description

Enables DHCP relay support. DHCP relay is enabled by default. DHCP relay is not supported on the management interface.

The **no** form of this command disables DHCP relay (and DHCP relay option 82) support.

Examples

This example enables DHCP relay support.

```
switch(config) # dhcp-relay
```

This example removes DHCP relay support.

```
switch(config) # no dhcp-relay
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8400	config	Administrators or local user group members with execution rights for this command.

dhcp-relay hop-count-increment

Syntax

```
dhcp-relay hop-count-increment  
no dhcp-relay hop-count-increment
```

Description

Enables the DHCP relay hop count increment feature, which causes the DHCP relay agent to increment the hop count in all relayed DHCP packets. Hop count is enabled by default.

The **no** form of this command disables the hop count increment feature.

Examples

Enabling the hop count increment feature.

```
switch(config) # dhcp-relay hop-count-increment
```

Disabling the hop count increment feature.

```
switch(config) # no dhcp-relay hop-count-increment
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8400	config	Administrators or local user group members with execution rights for this command.

dhcp-relay l2vpn-clients

Syntax

```
dhcp-relay l2vpn-clients
no dhcp-relay l2vpn-clients
```

Description

Enables forwarding of packets from L2 VPN clients. Forwarding is enabled by default. Best practices is to disable this configuration on all the VXLAN tunnel endpoints (VTEPs), to avoid forwarding duplicate DHCP requests to the server.

The **no** form of this command disables forwarding of packets from L2 VPN clients.

Usage

In Asymmetric/Symmetric Integrated Routing and Bridging (IRB) VXLAN deployments with a VLAN extension in subset of VTEPs, client DHCP broadcast requests are received by all the VTEPs where a client VLAN is configured. A DHCP-Relay agent on those VTEPs forward DHCP packets to configured DHCP server(s). As DHCP requests are forwarded by multiple DHCP relay agents, the DHCP server receives duplicate copies of the same packet.

When a VLAN is mapped to an L2VNI, any client requests that are received from that VLAN are considered as L2VPN clients.

When **dhcp-relay l2vpn-clients** is configured, MAC check validation is not performed on the VLAN.

All requests are being sent to the DHCP server. This can increase the load on the DHCP Server

When **no dhcp-relay l2vpn-clients** is configured, MAC check validation is performed on the VLAN.

When clients request an IP, a MAC check is performed and fails for the first packet as there is no MAC in DB by that time. The requests are dropped until the MAC Address is programmed learned . Once it is programmed learned, requests from the client are successful because the MAC entry is already present.

It is recommended to enable **dhcp-relay l2vpn-clients** on a few switches in the network topology if there are client systems that is sensitive to DHCP packet loss.

Example

Enabling forwarding of packets from L2 VPN clients.

```
switch(config)# dhcp-relay l2vpn-clients
switch(config)# no dhcp-relay l2vpn-clients
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8400	config	Administrators or local user group members with execution rights for this command.

dhcp-smart-relay

Syntax

```
dhcp-smart-relay
no dhcp-smart-relay
```

Description

Enables DHCP Smart Relay on the device and on all the interfaces where IP helper addresses are configured. Disabled by default at the device level. Not supported on the management interface.

The **no** form of this command disables DHCP Smart Relay.



NOTE

Prior to enabling DHCP Smart Relay, enable IP helper address configuration and configure secondary IP addresses on the interface.

Examples

Enabling DHCP Smart Relay:

```
switch(config) # dhcp-smart-relay
```

Disabling DHCP Smart Relay support:

```
switch(config) # no dhcp-smart-relay
```

Command History

Release	Modification
10.10	Command introduced.

Command Information

Platforms	Command context	Authority
8400	config	Administrators or local user group members with execution rights for this command.

diag-dump dhcp-relay basic

Syntax

```
diag-dump dhcp-relay basic
```

Description

Dumps DHCP relay configurations for all interfaces.

Examples

This example enables DHCP relay support.

```
switch# diag-dump dhcp-relay basic
=====
[Start] Feature dhcp-relay Time : Sun Apr 26 06:38:10 2020
=====
-----
[Start] Daemon hpe-relay
-----

DHCP Relay : 1
DHCP Relay hop-count-increment : 1
DHCP Relay Option82 : 1
DHCP Relay Option82 validate : 0
DHCP Relay Option82 policy : keep
DHCP Relay Option82 remote-id : mac
DHCP Relay Option82 Source Intf : Disable
DHCP Smart Relay : Enable
System Mac [f4:03:43:80:27:00]
VRF :BLUE, Source Ip:200.0.0.10


Interface vlan2: 1
  Client Packet Statistics:
    Valid      Dropped      O82_Valid      O82_Dropped      vsx_drops
    -----
    0           0           0             0               0
  Server Packet Statistics:
    Valid      Dropped      O82_Valid      O82_Dropped      Invalid_IP_Drops
    To_Dsnoop
    -----
    0           0           0             0               0
  client request dropped packets with extn option 82 = 0
  client request valid packets with extn option 82 = 0
  server request dropped packets with extn option 82 = 0
  server request valid packets with extn option 82 = 0
  Port 67 - 200.0.0.100,2
  source vrf-BLUE.

Interface vlan3: 1
  Client Packet Statistics:
    Valid      Dropped      O82_Valid      O82_Dropped      vsx_drops
    -----
```

```

0          0          0          0          0
Server Packet Statistics:
Valid      Dropped      O82_Valid      O82_Dropped      Invalid_IP_Drops
To_Dsnoop
-----
-----
0          0          0          0          0          0
client request dropped packets with extn option 82 = 0
client request valid packets with extn option 82 = 0
server request dropped packets with extn option 82 = 0
server request valid packets with extn option 82 = 0
Port 67 - 200.0.0.100,2
source vrf-BLUE.
DHCP Smart Relay Client Cache:
Total Number of entries: 2
-----
Client-MAC      PortIndex      Timestamp      RetryCount      DiscCount      GWIP
-----
00:50:56:bd:6a:7a  20          1636105218      1          4          30.0.0.1
00:50:56:bd:71:17  20          1636105214      1          4          30.0.0.1
-----
[End] Daemon hpe-relay
-----
=====
[End] Feature dhcp-relay
=====
Diagnostic-dump captured for feature dhcp-relay
switch# diag-dump dhcp-relay basic
=====
[Start] Feature dhcp-relay Time : Sun Apr 26 06:38:10 2020
=====
-----
[Start] Daemon hpe-relay
-----
DHCP Relay : 1
DHCP Relay hop-count-increment : 1
DHCP Relay Option82 : 1
DHCP Relay Option82 validate : 0
DHCP Relay Option82 policy : keep
DHCP Relay Option82 remote-id : mac
DHCP Relay Option82 Source Intf : Disable
System Mac [f4:03:43:80:27:00]
VRF :BLUE, Source Ip:200.0.0.10

```

```

vsx: Not Present
Interface vlan2: 1
Client Packet Statistics:
Valid Dropped O82_Valid O82_Dropped vsx_drops
-----
0 0 0 0 0
Server Packet Statistics:
Valid Dropped O82_Valid O82_Dropped Invalid_IP_Drops To_Dsnoop
-----
0 0 0 0 0 0
client request dropped packets with extn option 82 = 0
client request valid packets with extn option 82 = 0
server request dropped packets with extn option 82 = 0
server request valid packets with extn option 82 = 0
Port 67 - 200.0.0.100,2
source vrf-BLUE.
Interface vlan3: 1
Client Packet Statistics:
Valid Dropped O82_Valid O82_Dropped vsx_drops
-----
0 0 0 0 0
Server Packet Statistics:
Valid Dropped O82_Valid O82_Dropped Invalid_IP_Drops To_Dsnoop
-----
0 0 0 0 0 0
client request dropped packets with extn option 82 = 0
client request valid packets with extn option 82 = 0
server request dropped packets with extn option 82 = 0
server request valid packets with extn option 82 = 0
Port 67 - 200.0.0.100,2
source vrf-BLUE.
[End] Daemon hpe-relay
=====
[End] Feature dhcp-relay
=====
Diagnostic-dump captured for feature dhcp-relay

```

Command History

Release	Modification
---------	--------------

10.07 or earlier	- -
------------------	-----

Command Information

Platforms	Command context	Authority
8400	config	Administrators or local user group members with execution rights for this command.

ip bootp-gateway

Syntax

```
ip bootp-gateway <IPV4-ADDR>
no ip bootp-gateway <IPV4-ADDR>
```

Description

Configures a gateway address for the DHCP relay agent to use for DHCP requests. By default DHCP relay agent picks the lowest-numbered IP address on the interface.

The **no** form of this command removes the gateway address.

Parameter	Description
<IPV4-ADDR>	Specifies the IP address of the gateway in IPv4 format (x.x.x.x), where x is a decimal number from 0 to 255.

Examples

Setting the IP address of the gateway for interface 1/1/1 to **10.10.10.10**:

```
switch(config)# interface 1/1/1
switch(config-if)# ip bootp-gateway 10.10.10.10

switch(config)# interface vlan100
switch(config-if)# ip bootp-gateway 10.10.10.10
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8400	config-if	Administrators or local user group members with execution rights for this command.

ip helper-address

Syntax

```
ip helper-address <IPv4-ADDR> [vrf <VRF-NAME>]  
no ip helper-address <IPv4-ADDR> [vrf <VRF-NAME>]
```

Description

Defines the address of a remote DHCP server or DHCP relay agent. Up to eight addresses can be defined. The DHCP relay agent forwards DHCP client requests to all defined servers.

If IP helper address is defined with VRF argument then this command requires you define a source IP address for DHCP relay with the command `ip source-interface`. The configured source IP on the VRF is used to forward DHCP packets to the server.

A helper address cannot be defined on the OOBM interface.

The **no** form of this command removes an IP helper address.

Parameter	Description
helper-address <IPv4-ADDR>	Specifies the helper IP address in IPv4 format (x.x.x.x), where x is a decimal number from 0 to 255.
vrf <VRF-NAME>	Specifies the name of a VRF. Default: default .

Examples

Defining the IP helper address 10.10.10.209 on interface 1/1/1:

```
switch(config)# interface 1/1/1
switch(config-if)# ip helper-address 10.10.10.209
```

Removing the IP helper address 10.10.10.209 on interface 1/1/1:

```
switch(config-if)# no ip helper-address 10.10.10.209
```

Defining the IP helper address 10.10.10.209 on interface 1/1/2 on VRF myvrf:

```
switch(config)# interface 1/1/2
switch(config-if)# ip helper-address 10.10.10.209 vrf myvrf
```

Removing the IP helper address **10.10.10.209** on interface **1/1/2** on VRF **myvrf**:

```
switch(config-if)# no ip helper-address 10.10.10.209 vrf myvrf
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8400	config-if	Administrators or local user group members with execution rights for this command.

show dhcp-relay

Syntax

```
show dhcp-relay [vsx-peer]
```

Description

Shows DHCP relay configuration settings.

Parameter	Description
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Example

Showing DHCP relay settings:

```
switch# show dhcp-relay
DHCP Relay Agent           : enabled
DHCP Request Hop Count Increment : enabled
L2VPN Clients              : disabled
Option 82                  : disabled
Source-Interface           : disabled
Response Validation        : disabled
Option 82 Handle Policy    : replace
Remote ID                  : mac
DHCP Reply Overwrite Source IP : enabled

DHCP Relay Statistics:
Valid Requests Dropped Requests Valid Responses Dropped Responses
-----
60          10          60          10

DHCP Relay Option 82 Statistics:
Valid Requests Dropped Requests Valid Responses Dropped Responses
-----
50          8          50          8
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8400	Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show dhcp-relay bootp-gateway

Syntax

```
show dhcp-relay bootp-gateway [interface <INTERFACE-NAME>] [vsx-peer]
```

Description

Shows the bootp gateway defined for all interfaces or a specific interface.

Parameter	Description
<code><INTERFACE-NAME></code>	Specifies an interface. Format: <code>member/slot/port</code> .
<code>vsx-peer</code>	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Examples

Showing the designated bootp gateway for all interfaces:

```
switch# show dhcp-relay bootp-gateway
BOOTP Gateway Entries
Interface          Source IP
-----
1/1/1              1.1.1.1
1/1/2              1.1.1.2
```

Command History

Release	Modification
---------	--------------

10.07 or earlier	- -
------------------	-----

Command Information

Platforms	Command context	Authority
8400	Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show ip helper-address

Syntax

```
show ip helper-address [interface <INTERFACE-ID>] [vsx-peer]
```

Description

Shows the IP helper addresses defined for all interfaces or a specific interface.

Parameter	Description
interface <INTERFACE-ID>	Specifies an interface. Format: <code>member/slot/port</code> .
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Examples

Showing the IP helper addresses for all interfaces:

```
switch# show ip helper-address
IP Helper Addresses
Interface: 1/1/1
```

```

IP Helper Address      VRF
-----
192.168.20.1          default
192.168.10.1          default
Interface: 1/1/2
IP Helper Address      VRF
-----
192.168.30.1          RED

```

Showing the IP helper addresses for interface 1/1/1:

```

switch# show ip helper-address interface 1/1/1
IP Helper Addresses
Interface: 1/1/1
IP Helper Address      VRF
-----
192.168.20.1          default
192.168.10.1          default

```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8400	Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

DHCPv6 relay agent

DHCPv6 relay VRF support

DHCPv6 relay is VRF aware. DHCPv6 client requests received on an interface are forwarded to the configured servers via that interface's VRF. DHCPv6 server responses received on an interface are forwarded to the client which is reachable via that interface's VRF.



NOTE

DHCPv6 relay does not have inter-VRF support.

Limitations

DHCPv6 Relay requires an egress interface to be configured for the IPv6 multicast helper address. DHCPv6-Relay multicast helper configuration is not allowed over VxLAN tunnels. The following configuration is required in order to use source interface for DHCPv6 relay.

Configuring the IPv6 source-interface interface to use for DHCPv6 relay:

```
switch(config)# ipv6 source-interface dhcp_relay interface loopback3 vrf test1
```

Enabling DHCPv6 relay to use the configured source interface:

```
switch(config)# dhcpv6-relay source-interface
```

Subtopics

Configuring the DHCPv6 relay agent

Use Case

DHCP relay (IPv6) commands

Configuring the DHCPv6 relay agent

Prerequisites

- An enabled layer 3 interface.

Procedure

1. Enable the DHCPv6 relay agent with the command `dhcpv6-relay`.
2. Configure one or more IP helper addresses with the command `ipv6 helper-address`. This determines where the DHCPv6 agent forward DHCP requests.
3. If you want to enable DHCP option 79 support to forward client link-layer addresses, use the command `dhcpv6-relay option 79`.

4. Review DHCPv6 relay agent configuration settings with the commands `show dhcpv6-relay` and `show ipv6 helper-address`.

Example

This example creates the following configuration:

- Enables the DHCPv6 relay agent.
- Enables interface **1/1/2** and assigns an IPv6 address to it. (By default, all interfaces are layer 3 and disabled.)
- Defines an IP helper address of **FF01::1:1000** on interface **1/1/2**.
- Enables DHCP option 79.

```
switch(config)# dhcpv6-relay
switch(config)# interface 1/1/1
switch(config-if)# no shutdown
switch(config-if)# ipv6 address 2002::22/64
switch(config-if)# ipv6 helper-address unicast 2001::1
switch(config-if)# ipv6 helper-address multicast ff01::1:1000 egress 1/1/1
switch(config-if)# ipv6 helper-address multicast all-dhcp-servers egress
1/1/1
switch(config-if)# exit
switch(config)# interface 1/1/2
switch(config-if)# no shutdown
switch(config-if)# ipv6 address 2002::21/64
switch(config-if)# ipv6 helper-address unicast 2001::1
switch(config-if)# ipv6 helper-address multicast ff01::1:1000 egress 1/1/1
switch(config-if)# ipv6 helper-address multicast all-dhcp-servers egress
1/1/1
switch(config-if)# exit
switch(config)# end
```

Use Case

This section explain the use cases for DHCPv6 relay agent.


Subtopics

DHCPv6 relay scenario 1

DHCPv6 relay scenario 2

DHCPv6 relay scenario 1

In this scenario, DHCP relay on the switch enables two hosts to obtain their IP addresses from a DHCP server on a different subnet. The physical topology of the network looks like this:

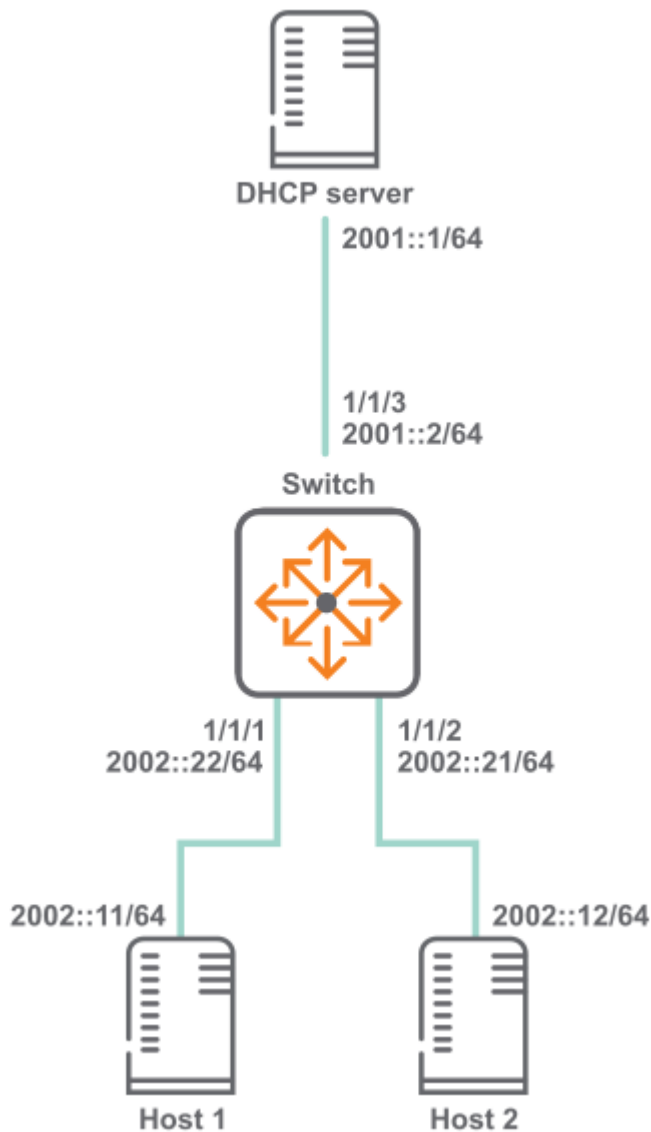

Procedure

1. Enable DHCP relay.

```
switch# config
switch(config)# dhcpv6-relay
```

2. Define an IPv6 helper address.

- On interface `vlan 10` and `vlan 20`.

```
switch(config)# dhcpv6-relay
switch(config)# interface 1/1/1
```

```

switch(config)# no shutdown
switch(config-if)# vlan access 10
switch(config-if)# exit
switch(config)# interface 1/1/2
switch(config)# no shutdown
switch(config-if)# vlan access 20
switch(config-if)# exit
switch(config)# interface vlan 10
switch(config-if-vlan)# no shutdown
switch(config-if-vlan)# ipv6 address 2002::22/64
switch(config-if-vlan)# ipv6 helper-address unicast 2001::1
switch(config-if-vlan)# ipv6 helper-address multicast ff01::1:1000
egress vlan30
switch(config-if-vlan)# ipv6 helper-address multicast all-dhcp-
servers egress vlan50
switch(config-if-vlan)# exit
switch(config)# interface vlan 20
switch(config-if-vlan)# no shutdown
switch(config-if-vlan)# ipv6 address 2002::21/64
switch(config-if-vlan)# ipv6 helper-address unicast 2001::1
switch(config-if-vlan)# ipv6 helper-address multicast ff01::1:1000
egress vlan30
switch(config-if-vlan)# ipv6 helper-address multicast all-dhcp-
servers egress vlan50
switch(config-if-vlan)# exit
switch(config)# end

```

- On interface `1/1/1` and `1/1/2`.

```

switch(config)# dhcpv6-relay
switch(config)# interface 1/1/1
switch(config)# no shutdown
switch(config-if)# ipv6 address 2002::22/64
switch(config-if)# ipv6 helper-address unicast 2001::1
switch(config-if)# ipv6 helper-address multicast ff01::1:1000 egress
1/1/3
switch(config-if)# ipv6 helper-address multicast all-dhcp-servers
egress 1/1/3
switch(config-if)# exit
switch(config)# interface 1/1/2
switch(config)# no shutdown
switch(config-if)# ipv6 address 2002::21/64
switch(config-if)# ipv6 helper-address unicast 2001::1
switch(config-if)# ipv6 helper-address multicast ff01::1:1000 egress
1/1/3

```

```
switch(config-if)# ipv6 helper-address multicast all-dhcp-servers
egress 1/1/3
switch(config-if)# exit
switch(config)# end
```

3. Verify DHCP relay configuration.

- When interface `vlan 10` and `vlan 20` is configured as relay.


```
switch# show dhcpv6-relay
  DHCPv6 Relay Agent : enabled
  Option 79          : disabled
switch# show ipv6 helper-address
IP Helper Addresses
Interface: vlan10
IP Helper Address          Egress Port
-----
all-dhcp-servers          vlan50
ff01::1:1000              vlan30
2001::1                   -
Interface: vlan20
IP Helper Address          Egress Port
-----
all-dhcp-servers          vlan50
ff01::1:1000              vlan30
2001::1                   -
```

- When interface `1/1/1` and `1/1/2` is configured as relay.

```
switch# show dhcpv6-relay
  DHCPv6 Relay Agent : enabled
  Option 79 : disabled
switch# show ipv6 helper-address
Interface: 1/1/1
IPv6 Helper Address          Egress Port
-----
all-dhcp-servers            1/1/3
ff01::1:1000                1/1/3
2001::1                     -
Interface: 1/1/2
IPv6 Helper Address          Egress Port
-----
all-dhcp-servers            1/1/3
ff01::1:1000                1/1/3
2001::1                     -
```

DHCPv6 relay scenario 2

In this scenario, the two host computers communicate with two different DHCP servers. Each server is reached on a different VRF. The physical topology of the network looks like this:

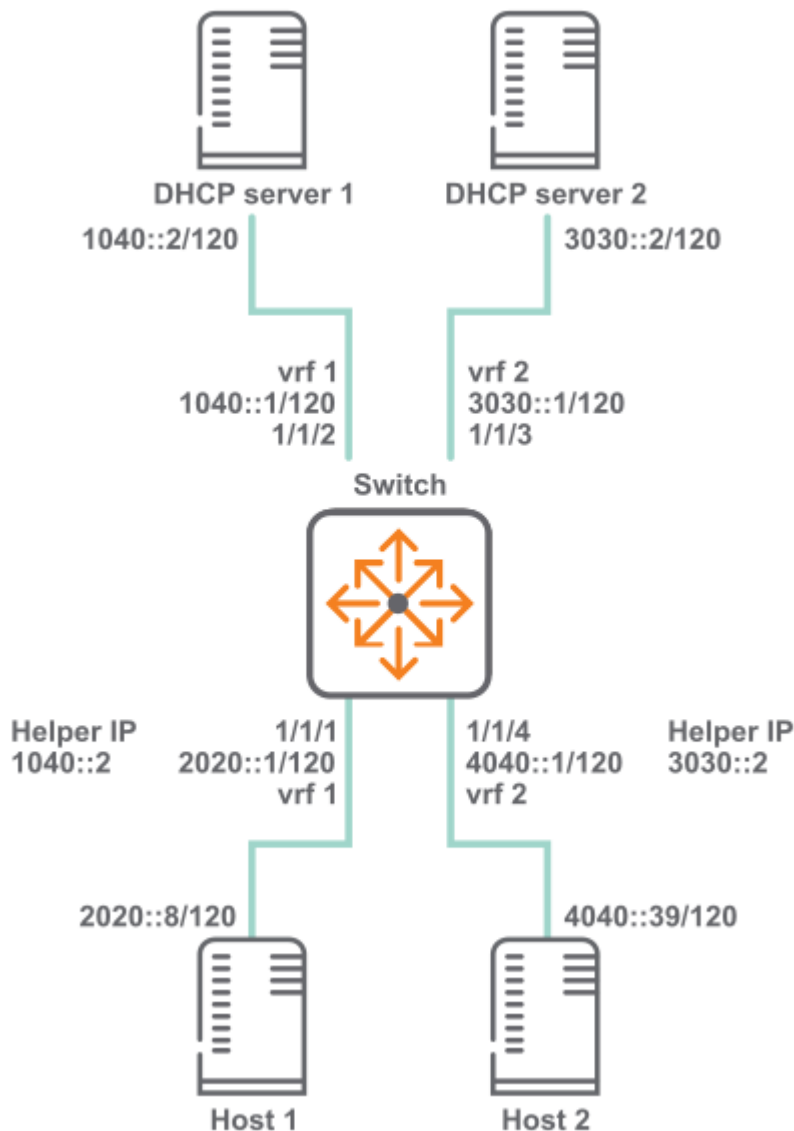

Procedure

1. Create the two VRFs.

```
switch# config
switch(config)# vrf vrf 1
switch(config)# vrf vrf 2
```

2. Configure interface **1/1/1**. Set its IP address, associate it with VRF 1, and define the helper IP address to reach DHCP server 1.

```
switch(configif)# interface 1/1/1
switch(configif)# vrf attach vrf1
switch(configif)# ipv6 address 20.0.0.1/8
switch(configif)# ipv6 helper-address unicast 1040::2
```

3. Configure interface **1/1/2**. Set its IP address and associate it with VRF 1.

```
switch(configif)# interface 1/1/2
switch(configif)# vrf attach vrf1
switch(configif)# ipv6 address 1040::1/120
```

4. Configure interface **1/1/3**. Set its IP address and associate it with VRF 2.

```
switch(configif)# interface 1/1/3
switch(configif)# vrf attach vrf2
switch(configif)# ipv6 address 3030::1/120
```

5. Configure interface **1/1/4**. Set its IP address, associate it with VRF 2, and define the helper IP address to reach DHCP server 2.

```
switch(configif)# interface 1/1/4
switch(configif)# vrf attach vrf2
switch(configif)# ipv6 address 4040::1/120
switch(configif)# ipv6 helper-address unicast 3030::2
```

DHCP relay (IPv6) commands

Subtopics

DHCP relay (IPv6) commands

DHCP relay (IPv6) commands

Select a command from the list in the left navigation menu.

Subtopics

dhcpv6-relay

dhcpv6-relay option 79

diag-dump dhcpv6-relay basic

ipv6 helper-address

show dhcpv6-relay
show ipv6 helper-address

dhcpv6-relay

Syntax

```
dhcpv6-relay [l2vpn-clients | source-interface]  
no dhcpv6-relay [l2vpn-clients | source-interface]
```

Description

Enables DHCPv6 relay support. DHCPv6 relay is disabled by default. DHCP relay is not supported on the management interface. Best practices is to disable this configuration on all the VXLAN tunnel endpoints (VTEPs), to avoid forwarding duplicate DHCPv6 requests to the server.

The **no** form of this command disables DHCP relay support.

DHCPv6 Relay requires that you configure the egress interface using the **ipv6 helper-address** command. The egress interface of a VTEP is used as an underlay, so a DHCPv6 Relay Multicast ipv6 address is not supported in a VXLAN topology.

Parameter	Description
l2vpn-clients	Enables packets from l2vpn clients to be forwarded to configured servers. Enabled by default.
source-interface	Enables DHCPv6 relay to use the configured source interface.

Usage

In Asymmetric/Symmetric Integrated Routing and Bridging (IRB) VXLAN deployments with a VLAN extension in subset of VTEPs, client DHCPv6 broadcast requests are received by all the VTEPs where a client VLAN is configured. A DHCPv6 relay agent on those VTEPs forward DHCPv6 packets to configured DHCPv6 server(s). As DHCPv6 requests are forwarded by multiple DHCPv6 relay agents, the DHCPv6 server receives duplicate copies of the same packet. When this configuration is disabled, the DHCPv6 relay agent on VTEPs ignores DHCPv6 request packets that are received from client MACs addresses learned via EVPN.

Examples

Enables DHCPv6 relay support.

```
switch(config) # dhcpv6-relay
```

Removes DHCPv6 relay support.

```
switch(config) # no dhcpv6-relay
```

Command History

Release	Modification
10.12.1000	l2vpn - clients and source - interface added.
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8400	config	Administrators or local user group members with execution rights for this command.

dhcpv6-relay option 79

Syntax

```
dhcpv6-relay option 79  
no dhcpv6-relay option 79
```

Description

Enables support for DHCP relay option 79. When enabled, the DHCPv6 relay agent forwards the link-layer address of the client. This option is disabled by default.

The **no** form of this command disables support for DHCP relay option 79.

Examples

Enables DHCP option 79 support.

```
switch(config) # dhcpv6-relay option 79
```

Disables DHCP option 79 support.

```
switch(config) # no dhcpv6-relay option 79
```


Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8400	config	Administrators or local user group members with execution rights for this command.

diag-dump dhcpv6-relay basic

Syntax

```
diag-dump dhcpv6-relay basic
```

Description

Dumps DHCPv6 relay configurations for all interfaces.

Examples

This example enables DHCP relay support.

```
switch# diag-dump dhcpv6-relay basic
=====
[Start] Feature dhcpv6-relay Time : Thu Jun  8 09:55:11 2017
=====
-----
[Start] Daemon hpe-relay
-----

DHCP Relay : 1
DHCPv6 Relay Option79 : 0

System Mac [02:02:02:02:0a:0a]
Interface vlan10: 1
Intf selected IP -  ifindex - 10 kernel ifindex - 1701::1, 1, egress =
(null), Server vrf = default
Client Packet Statistics:
```

```
Valid      Dropped      vsx_drops
-----
0          0            0
Server Packet Statistics:
Valid      Dropped      To_Dsnoop
-----
0          0            0
Total VRF source-ip entrie: 0
-----
[End] Daemon hpe-relay
-----
=====
[End] Feature dhcpv6-relay
=====
Diagnostic-dump captured for feature dhcpv6-relay
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8400	config	Administrators or local user group members with execution rights for this command.

ipv6 helper-address

Syntax

```
ipv6 helper-address unicast <UNICAST-IPV6-ADDR>
no ipv6 helper-address unicast <UNICAST-IPV6-ADDR>
ipv6 helper-address multicast {all-dhcp-servers | <MULTICAST-IPV6-ADDR>}
egress <PORT-NUM>
no ipv6 helper-address multicast {all-dhcp-servers | <MULTICAST-IPV6-ADDR>}
egress <PORT-NUM>
```

Description

Defines the address of a remote DHCPv6 server or DHCPv6 relay agent. Up to eight addresses can be defined. The DHCPv6 agent forwards DHCPv6 client requests to all defined servers.

Not supported on the OOBM interface.

The **no** form of this command removes an IP helper address.

Parameter	Description
<code><UNICAST-IPV6-ADDR></code>	Specifies the unicast helper IP address in IPv6 format (<code>xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx</code>), where x is a hexadecimal number from 0 to F.
<code><MULTICAST-IPV6-ADDR></code>	Specifies the multicast helper IP address in IPv6 format (<code>xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx</code>), where x is a hexadecimal number from 0 to F.
<code>all-dhcp-servers</code>	Specifies all the DHCP server IPv6 addresses for the interface.
<code>egress <PORT-NUM></code>	Specifies the port number on which DHCPv6 service requests are relayed to a multicast destination. The egress port must be different than the one on which the multicast helper address is configured. Format: <code>member/slot/port</code> .
<code>vrf <VRF-NAME></code>	Specifies the name of the VRF from which the specified protocol sets its source IP address.

Examples

Defining a multicast IPv6 helper address of **2001:DB8::1** on port **1/1/2**:

```
switch(config-if) # ipv6 helper-address multicast 2001:DB8:0:0:0:0:0:1
egress 1/1/2
```

Removing the IP helper address of **2001:DB8::1** on port **1/1/2**:

```
switch(config-if) # no ipv6 helper-address multicast 2001:DB8:0:0:0:0:0:1
egress 1/1/2
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8400	config-if	Administrators or local user group members with execution rights for this command.

show dhcpv6-relay

Syntax

```
show dhcpv6-relay [vsx-peer]
```

Description

Shows DHCP relay configuration settings.

Parameter	Description
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Example

```
switch(config)# show dhcpv6-relay
DHCPv6 Relay Agent : enabled
Option 79          : disabled
L2vpn-clients      : enabled
Source-interface    : enabled
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8400	Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show ipv6 helper-address

Syntax

```
show ipv6 helper-address [interface <INTERFACE-ID>] [vsx-peer]
```

Description

Shows the helper IP addresses defined for all interfaces or a specific interface.

Parameter	Description
interface <INTERFACE-ID>	Specifies an interface. Format: member/slot/port .
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Examples

```
switch# show ipv6 helper-address
Interface: 1/1/1
IPv6 Helper Address                               Egress Port
-----
```

```
2001:db8:0:1:: -
FF01::1:1000 1/1/2
Interface: 1/1/2
IPv6 Helper Address Egress Port
-----
2001:db8:0:1:: -
switch# show ipv6 helper-address interface 1/1/1
Interface: 1/1/1
IPv6 Helper Address Egress Port
-----
2001:db8:0:1:: -
FF01::1:1000 1/1/2
switch# show ipv6 helper-address interface vlan20
Interface: vlan20
IP Helper Address Egress Port
-----
2001::1 -
ff01::1:1000 vlan30 default
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8400	Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Troubleshooting

One or more DHCP clients not getting IP address

Reachability between relay and server(s)

About this task

Server reachability is required for DHCP Relay function to work.

Procedure

1. Ping to check IP reachability between switch and the server(s).
2. Confirm the ping test is made in the appropriate VRF and with the correct gateway IP. By default, DHCP Relay picks the lowest IP address on the client-connected interface as the gateway IP address. When configured, the bootp-gateway IP address is used as the gateway IP.

Source-ip configuration

About this task

With the source-ip configuration in the VRF, DHCP relay uses it as a gateway IP address to communicate with the DHCP server.

Procedure

1. It requires `dhcp_relay source-interface` configuration for `ip source-interface` relay to work.
2. Ping the server with `source-ip` as the configured `source-interface IP`. The same test is applicable for the Inter-VRF route leak (IVRL) configuration.
3. If the client and server are in different VRFs, test server reachability in server-VRF by using configured source-interface IP.

Option-82 conflict with DHCP snooping and Relay [DHCPv4 Specific]

AOS-CX supports configuring DHCP snooping and DHCP relay on the same VLAN. In cases where DHCP relay is configured to use `source-interface` along with `inter-vrf` server, Option 82 is added to the packet sent to the server.

If Option 82 is enabled for both DHCP snooping and DHCP relay, DHCP snooping gets the priority. In this scenario for DHCP relay to work, disable Option-82 for DHCP snooping.

- Check if the helper-address is configured to the correct VRF where the DHCP server is reachable
- CoPP drop checks—In case of excessive DHCP traffic, CoPP does the rate limit by dropping some of the packets.

Client packets are dropped

Check if client packets are getting dropped by CoPP using `show copp statistics class dhcp -ipv4` or `show copp statistics class dhcp-ipv6` commands.

Server pool configuration and exhaustion

Procedure

1. Check the server side configuration to see if IP lease criteria is being met for the client.
2. Check if the right VRF selection is happening for the lease allocation.

Results

DHCP Smart - Relay

It allows the DHCP relay agent to use non - lower IP addresses from the client - connected interfaces as giaddr and for pool selection when the DHCP server does not reply to the DHCP discover messages with the lowest IP address. More than one IP address and helper address must be configured on the client - connected interfaces. The server must be configured with the DHCPv4 pools for the client - connected IP addresses

- **Server Reachability**
Ensure the ping test is made in the appropriate VRF and with the correct gateway IP (IPs from the client - connected interfaces).
- **Bootp gateway IP configuration**
When a bootp gateway IP is configured, it gets the highest priority and is used as a gateway IP.
- **Source - ip configuration**
When a source IP is configured, Option 82 needs to be enabled. The Source IP is used as a gateway IP, and Option 82 is used as sub - option 5 contains the IP used for the pool selection.
- **Client Cache and timeout**
For debugging, a client cache is built, which contains information on the gateway IP for every client.

The entry is added to the client cache for the client which does not have an existing entry. The client entries are deleted if the client is idle for 360 seconds. In other cases, a particular client entry might get deleted if it is the oldest entry in time and if the client cache is full. The client cache is deleted completely if the functionality is disabled.

It uses the lowest IP address as giaddr or for pool selection when all client - connected IPs are exhausted or the client retries after an idle timeout. The client cache is rebuilt upon HA and VSF switchover, VSX - MM (redundancy) switchover, and reboot of the switch.

DHCP server

The dynamic host configuration protocol (DHCP) enables a server to automate the assignment of IP addresses, and other networking settings, to host computers. The DHCP server on the switch provides both IPv4 and IPv6 support and is independently configurable on each VRF.

Subtopics

Protocol and feature details

Supported platform and standards

Configuring a DHCPv4 server on a VRF

Configuring the DHCPv6 server on a VRF

DHCP server IPv4 commands

DHCP server IPv6 commands

Troubleshooting

Protocol and feature details

Key features

- Supports multiple address pools and static address bindings.
- Supports DHCP options, enabling the server to provide additional information about the network when DHCP clients request an address.
- Supports BOOTP to distribute boot image files using an external TFTP server.
- VRF aware, meaning that DHCP client requests received on an interface are processed by the DHCP server instance configured for a VRF. DHCP server responses are forwarded to clients on the VRF.
- Supports external storage of lease information on a remote host. This enables the DHCP server to restore lease information after a reboot or a failure. Lease information is stored in a flat file on the configured external device. It is important that the external device provide persistent external storage to allow restoration of lease information. If external storage is not configured, then after a failure or reboot, all existing lease information is lost.
- Supports VSX. In a VSX setup, one switch acts as primary and the other switch acts as secondary. The DHCP server is active only on the primary switch. After a failover, the DHCP server is enabled based on the state and role of the switch. The state of the DHCP server indicates the operational state of the server. VSX synchronization supports DHCPv4 and DHCPv6 server, including external storage configurations. For more information on VSX support, see the Virtual Switching Extension (VSX) Guide .

DHCP relay interoperation

Both DHCP relay and DHCP server can be configured on the same VRF.

DHCP snooping interoperation

DHCP snooping can not be configured with DHCP server.

Supported platform and standards

The following table list the supported platforms for DHCPv4 server and DHCPv6 server.

Table 1. Support platforms for DHCPv4 server and DHCPv6 server

Platform	DHCPv4 server
8400	Yes

The below limit is based on system stability.

- Single VRF
 - Maximum pools—64
 - Maximum range —64 (Every pool having one range)
 - One static host per pool
 - Maximum clients - 8192 (Every range providing 128 leases)
- Across 32 VRF's
 - Maximum pools - 64 (Every VRF having 2 pools)
 - Maximum range - 64 (Every pool having one range)
 - One static host per pool
 - Maximum clients - 8192 (Every range providing 128 leases)

Configuring a DHCPv4 server on a VRF

Prerequisites

- An enabled layer 3 interface.
- A VRF.
- An external TFTP server to host BOOTP image files (optional).
- An external storage device installed and configured (optional).

Procedure

1. Assign the DHCPv4 server to a VRF with the command **dhcp-server vrf**. This switches to the DHCPv4 server configuration context.
2. If you want the DHCPv4 server to be the sole authority for IP addresses on the VRF, enable authoritative mode with the command **authoritative**.
3. Define an address pool for the VRF with the command **pool**. This switches to the DHCPv4 server pool context. Customize pool settings as follows:
 - a. Define the range of addresses in the pool with the command **range**.
 - b. Set the lease time for addresses in the pool with the command **lease**.
 - c. Set the domain name for the pool with the command **domain-name**.
 - d. Define up to four default routers with the command **default-router**.
 - e. Define up to four DNS servers with the command **dns-server**.
 - f. Create static bindings for specific addresses in the pool with the command **static-bind**.
 - g. Configure custom DHCPv4 options for the pool with the command **option**.
 - h. Configure NetBIOS support with the commands **netbios-name-server** and **netbios-node-type**.
 - i. Configure BOOTP options with the command **bootp**.
 - j. Exit the DHCPv4 server pool context with the command **exit**.
4. Enable the DHCP server on the VRF with the command **enable**.
5. Configure support for persistent external storage of DHCP settings with the command **dhcp-server external-storage**.
6. View DHCPv4 server configuration settings with the command **show dhcp-server all-vrfs**.

Example

This example creates the following configuration:

- Configures the DHCPv4 server on VRF **primary-vrf**.
- Enables authoritative mode.
- Defines the pool **primary-pool** with the following settings:
 - Address range: **10.0.0.1** to **10.0.0.100**.
 - Lease time: 12 hours.
 - Domain name: **example.org.in**.
 - Default routers: **10.30.30.1** and **10.30.30.2**.
 - DNS servers: **125.0.0.1** and **125.0.0.2**.
 - Static binding of **10.0.0.11** for MAC address **24:be:05:24:75:73**.
 - DHCP custom option **3** with IP address **10.30.30.3**.
- Enables the DHCPv4 server.

```
switch(config)# dhcp-server vrf primary
switch(config-dhcp-server)# pool primary-pool
switch(config-dhcp-server-pool)# range 10.0.0.1 10.0.0.100
switch(config-dhcp-server-pool)# lease 12:00:00
switch(config-dhcp-server-pool)# domain-name example.org.in
switch(config-dhcp-server-pool)# default-router ip 10.30.30.1 10.30.30.2
switch(config-dhcp-server-pool)# dns-server 125.0.0.1 125.0.0.2
switch(config-dhcp-server-pool)# static-bind ip 10.0.0.11 mac
24:be:05:24:75:73
switch(config-dhcp-server-pool)# option 3 ip 10.30.30.3
switch(config-dhcp-server-pool)# exit
switch(config-dhcp-server)# enable
```

Configuring the DHCPv6 server on a VRF

Prerequisites

- An enabled layer 3 interface.
- A VRF.
- An external storage device installed and configured (optional).

Procedure

1. Assign the DHCPv6 server to a VRF with the command **dhcpv6-server vrf**. This switches to the DHCPv6 server configuration context.
2. If you want the DHCP server to be the sole authority for IP addresses on the VRF, enable authoritative mode with the command **authoritative**.
3. Define an address pool for the VRF with the command **pool**. This switches to the DHCPv6 server pool context. Customize pool settings as follows:
 - a. Define the range of addresses in the pool with the command **range**.
 - b. Set the DHCP lease time for addresses in the pool with the command **lease**.
 - c. Define up to four DNS servers with the command **dns-server**.
 - d. Create static bindings for specific addresses in the pool with the command **static-bind**.
 - e. Configure custom DHCP options for the pool with the command **option**.
 - f. Exit the DHCP server pool context with the command **exit**.
4. Enable the DHCPv6 server on the VRF with the command **enable**.
5. Configure support for persistent external storage of DHCP settings with the command **dhcpv6-server external-storage**.
6. View DHCPv6 server configuration settings with the command **show dhcpv6-server all-vrfs**.

Example

This example creates the following configuration:

- Configures a DHCPv6 server on VRF **primary-vrf**.
- Enables authoritative mode.
- Defines the pool **primary-pool** with the following settings:
 - Address range: **2001::1** to **2001::100**.
 - Lease time: 12 hours.
 - DNS servers: **2101::14** and **2101::14**.
 - Static binding of **2001::101** for client ID **1:0:a0:24:ab:fb:9c**.
 - DHCP custom option: **22** with IP address **2101::15**.
- Enables the DHCPv6 server.

```
switch(config)# dhcpv6-server vrf primary
switch(config-dhcpv6-server)# pool primary-pool
switch(config-dhcpv6-server-pool)# range 2001::1 2001::100 prefix-len 64
switch(config-dhcpv6-server-pool)# lease 12:00:00
switch(config-dhcpv6-server-pool)# dns-server 2101::13 2101::14
switch(config-dhcpv6-server-pool)# static-bind ipv6 2001::10 client-id
1:0:a0:24:ab:fb:9c
switch(config-dhcpv6-server-pool)# option 22 ipv6 2101::15
switch(config-dhcpv6-server-pool)# exit
switch(config-dhcpv6-server)# enable
```

DHCP server IPv4 commands

Subtopics

DHCP server IPv4 commands

DHCP server IPv4 commands

Select a command from the list in the left navigation menu.

Subtopics

- [authoritative](#)
- [bootp](#)
- [clear dhcp-server leases](#)
- [default-router](#)
- [dhcp-server external-storage](#)
- [dhcp-server vrf](#)
- [disable](#)
- [dns-server](#)
- [domain-name](#)
- [enable](#)
- [lease](#)
- [netbios-name-server](#)
- [netbios-node-type](#)
- [option](#)
- [pool](#)
- [range](#)
- [show dhcp-server](#)

authoritative

Syntax

```
authoritative
no authoritative
```

Description

Configures the DHCPv4 server as authoritative on the current VRF. This means that the server is the sole authority for the network on the VRF. Therefore, if a client requests an IP address lease for which the server has no record, the server responds with DHCPNAK, indicating that the client must no longer use that IP address. If the server is not authoritative, then it will ignore DHCPv4 requests received for unknown leases from unknown hosts.

The **no** form of this command disables authoritative mode on the current VRF.

Example

Configures DHCPv4 server authoritative mode on VRF **primary**.

```
switch(config) # dhcp-server vrf primary
switch(config-dhcp-server) # authoritative
```

Removes the DHCPv4 server authoritative mode on VRF **primary**.

```
switch(config) # dhcp-server vrf primary
switch(config-dhcp-server) # no authoritative
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8400	config-dhcp-server	Administrators or local user group members with execution rights for this command.

bootp

Syntax

```
bootp <REMOTE-URL>
no bootp <REMOTE-URL>
```

Description

Sets the BOOTP options that are returned by the DHCPv4 server for the current pool. BOOTP provides a way to distribute an IP address and boot image file to client stations. The DHCPv4 server returns the IP address and the location of the boot image file, which must be stored on an external TFTP server.

The **no** form of this command disables support for BOOTP.

Parameter	Description
<code><REMOTE-URL></code>	Specifies the name and location of a BOOTP file on a TFTP server in the format: <pre>tftp://{<IP> <HOST>}/<FILE></pre> <code><IP></code> : Specifies the IP address of the TFTP server hosting the file in IPv4 format (x.x.x.x), where x is a decimal number from 0 to 255. You can remove leading zeros. For example, the address <code>192.169.005.100</code> becomes <code>192.168.5.100</code>. <code><HOST></code> : Specifies the fully - qualified domain name of the TFTP server hosting the file. Range: 1 to 64 printable ASCII characters. <code><FILE></code> : Specifies the name of the BOOTP file. Range: 1 to 64 printable ASCII characters.

Example

Defines BOOTP support on the DHCPv4 server pool **primary-pool** on VRF **primary**.

```
switch(config)# dhcp-server vrf primary
switch(config-dhcp-server)# pool primary-pool
switch(config-dhcp-server-pool)# bootp tftp://10.0.0.1/mybootfile
```

Deletes BOOTP support on the DHCPv4 server pool **primary-pool** on VRF **primary**.


```
switch(config)# dhcp-server vrf primary
switch(config-dhcp-server)# pool primary-pool
switch(config-dhcp-server-pool)# no bootp tftp://10.0.0.1/mybootfile
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8400	config-dhcp-server-pool	Administrators or local user group members with execution rights for this command.

clear dhcp-server leases

Syntax

```
clear dhcp-server leases [all-vrfs | <IPV4-ADDR> vrf <VRF-NAME>] | vrf <VRF-NAME>]
```

Description

Clears DHCPv4 server lease information. The DHCPv4 server must be disabled before clearing lease information.

Parameter	Description
all-vrfs	Clears leases for all VRFs.
<IPV4-ADDR> vrf <VRF-NAME>	Clears the lease for a specific client on a specific VRF. Specify the client address in IPv4 format (x.x.x.x), where x is a decimal number from 0 to 255. You can remove leading zeros. For example, the address 192.169.005.100 becomes 192.168.5.100.

Parameter	Description
vrf <VRF-NAME>	Clears leases for a specific VRF.

Examples

Clearing all DHCPv4 server leases.

```
switch(config)# dhcp-server vrf primary
switch(config-dhcp-server)# disable
switch(config-dhcp-server)# exit
switch(config)# exit
switch# clear dhcp-server leases
```

Clearing all DHCPv4 server leases for VRF **primary-vrf**.

```
switch(config)# dhcp-server vrf primary
switch(config-dhcp-server)# disable
switch(config-dhcp-server)# exit
switch(config)# exit
switch# clear dhcp-server leases vrf primary-vrf
```

Clear the DHCPv4 server lease for IP address **10.10.10.1** on VRF **primary-vrf**.

```
switch(config)# dhcp-server vrf primary
switch(config-dhcp-server)# disable
switch(config-dhcp-server)# exit
switch(config)# exit
switch# clear dhcp-server leases 10.10.10.1 vrf primary-vrf
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8400	Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

default-router

Syntax

```
default-router <IPV4-ADDR-LIST>
no default-router <IPV4-ADDR-LIST>
```

Description

Defines up to four default routers for the current DHCPv4 server pool.

The **no** form of this command removes the specified default routers from the pool.

Parameter	Description
<code><IPV4-ADDR-LIST></code>	Specifies the IP addresses of the default routers in IPv4 format (x.x.x.x), where x is a decimal number from 0 to 255. You can remove leading zeros. For example, the address <code>192.169.005.100</code> becomes <code>192.168.5.100</code> . Separate addresses with a space. A maximum of four IP addresses can be defined.

Example

Defines two default routers, **10.0.0.1** and **10.0.0.10**, for the server pool **primary-pool** on VRF **primary**.

```
switch(config)# dhcp-server vrf primary
switch(config-dhcp-server)# pool primary-pool
switch(config-dhcp-server-pool)# default-router ip 10.0.0.1 10.0.0.10
```

Deletes the default router **10.0.0.1** from the server pool **primary-pool** on VRF **primary**.

```
switch(config)# dhcp-server vrf primary
switch(config-dhcp-server)# pool primary-pool
switch(config-dhcp-server-pool)# no default-router ip 10.0.0.1
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8400	config-dhcp-server-pool	Administrators or local user group members with execution rights for this command.

dhcp-server external-storage

Syntax

```
dhcp-server external-storage <VOLUME-NAME> file <LEASE-FILENAME> [delay <DELAY>]
no dhcp-server external-storage <VOLUME-NAME> file <LEASE-FILENAME> [delay <DELAY>]
```

Description

Configures the external storage file location for DHCPv4 server lease information. This file provides persistent storage, enabling DHCPv4 server settings to be restored when the switch is restarted. Lease information is stored in a flat file on the configured external device.

If external storage is not configured, then after a failure or reboot, all existing lease information is lost.

Lease information is saved to external storage each time the delay timer expires, which by default is every 300 seconds.

Lease information is not restored when issuing the command `dhcp-server enable`.

The **no** form of this command removes external storage support for the DHCPv4 server.

Parameter	Description
<VOLUME-NAME>	Specifies the external storage volume name. Range: 1 to 64 printable ASCII characters.
file <LEASE-FILENAME>	Specifies the external storage filename. Range: 1 to 255 printable ASCII characters.
delay <DELAY>	Specifies the interval in seconds between updates to the external storage file. Range: 15 to 86400. Default: 300.

Example

Stores the lease file on external storage volume **Storage1** in file **LeaseFile** at an interval of 600 seconds.

```
switch(config) # dhcp-server external-storage Storage1 file LeaseFile delay 600
```

Disables storage of the lease file on external storage volume **Storage1** in file **LeaseFile**.

```
switch(config) # no dhcp-server external-storage Storage1 file LeaseFile delay 600
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8400	config	Administrators or local user group members with execution rights for this command.

dhcp-server vrf

Syntax

```
dhcp-server vrf <VRF-NAME>  
no dhcp-server vrf <VRF-NAME>
```

Description

Configures the DHCPv4 server to support a VRF and changes to the `config-dhcp-server` context for that VRF.

The **no** form of this command removes DHCPv4 server support on a VRF.

Parameter	Description
<code><VRF-NAME></code>	Name of a VRF.

Example

Configures DHCPv4 server support on VRF **primary**.

```
switch(config) # dhcp-server vrf primary
```

Removes DHCPv4 server support on VRF **primary**.

```
switch(config) # no dhcp-server vrf primary
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8400	config	Administrators or local user group members with execution rights for this command.

disable

Syntax

```
disable
```

Description

Disables the DHCPv4 server on the current VRF. The DHCPv4 server is disabled by default when configured on a VRF.

Example

Disables the DHCPv4 server on VRF **primary**.

```
switch(config)# dhcp-server vrf primary  
switch(config-dhcp-server)# disable
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8400	config-dhcp-server	Administrators or local user group members with execution rights for this command.

dns-server

Syntax

```
dns-server <IPV4-ADDR-LIST>  
no dns-server <IPV4-ADDR-LIST>
```

Description

Defines up to four DNS servers for the current DHCPv4 server pool.

The **no** form of this command removes the specified DNS servers from the pool.

Parameter	Description
<IPV4-ADDR-LIST>	Specifies the IP addresses of the DNS servers in IPv4 format (x.x.x.x), where x is a decimal number from 0 to 255. Separate addresses with a space.

Example

Defines DNS servers for the server pool **primary-pool** on VRF **primary**.

```
switch(config)# dhcp-server vrf primary
switch(config-dhcp-server)# pool primary-pool
switch(config-dhcp-server-pool)# dns-server 10.0.20.1
```

Deletes a DNS server from the server pool **primary-pool** on VRF **primary**.

```
switch(config)# dhcp-server vrf primary
switch(config-dhcp-server)# pool primary-pool
switch(config-dhcp-server-pool)# no dns-server 10.0.20.1
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8400	config-dhcp-server-pool	Administrators or local user group members with execution rights for this command.

domain-name

Syntax

```
domain-name <DOMAIN-NAME>
no domain-name <DOMAIN-NAME>
```

Description

Defines a domain name for the current DHCPv4 server pool.

The **no** form of this command removes the specified domain name from the pool.

Parameter	Description
<code><DOMAIN-NAME></code>	Specifies a domain name. Range: 1 to 255 printable ASCII characters.

Example

Defines a domain name for the server pool **primary-pool** on VRF **primary**.

```
switch(config)# dhcp-server vrf primary
switch(config-dhcp-server)# pool primary-pool
switch(config-dhcp-server-pool)# domain-name example.org.in
```

Deletes a domain name from the server pool **primary-pool** on VRF **primary**.

```
switch(config)# dhcp-server vrf primary
switch(config-dhcp-server)# pool primary-pool
switch(config-dhcp-server-pool)# no domain-name example.org.in
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8400	config-dhcp-server-pool	Administrators or local user group members with execution rights for this command.

enable

Syntax

```
enable
```

Description

Enables the DHCPv4 server on the current VRF. The DHCPv4 server is disabled by default when configured on a VRF.

Example

Enables the DHCPv4 server on VRF **primary**.

```
switch(config)# dhcp-server vrf primary  
switch(config-dhcp-server)# enable
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8400	config-dhcp-server	Administrators or local user group members with execution rights for this command.

lease

Syntax

```
lease {<TIME> | infinite}  
no lease
```

Description

Sets the length of the DHCPv4 lease time for the current pool. The lease time determines how long an IP address is valid before a DHCPv4 client must request that it be renewed.

The **no** form of this command returns the DHCPv4 lease time to its default value 1 hour.

Parameter	Description
<code><TIME></code>	Sets the DHCPv4 lease time. Format: DD:HH:MM. Default: 01:00:00.
<code>infinite</code>	Sets the DHCPv4 lease time to infinite. This means that addresses do not need to be renewed.

Example

Sets the lease time for DHCPv4 server pool **primary-pool** on VRF **primary** to **12** hours.

```
switch(config)# dhcp-server vrf primary
switch(config-dhcp-server)# pool primary-pool
switch(config-dhcp-server-pool)# lease 00:12:00
```

Deletes the lease time for DHCPv4 server pool **primary-pool** on VRF **primary**.

```
switch(config)# dhcp-server vrf primary
switch(config-dhcp-server)# pool primary-pool
switch(config-dhcp-server-pool)# no lease 00:12:00
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8400	config-dhcp-server-pool	Administrators or local user group members with execution rights for this command.

netbios-name-server

Syntax

```
netbios-name-server <IPV4-ADDR-LIST>
no netbios-name-server <IPV4-ADDR-LIST>
```

Description

Defines up to four NetBIOS WINS servers for the current DHCPv4 server pool. WINS is used by Microsoft DHCP clients to match host names with IP addresses.

The **no** form of this command removes the specified WINS servers from the pool.

Parameter	Description
<code><IPV4-ADDR-LIST></code>	Specifies the IP addresses of NetBIOS (WINS) servers in IPv4 format (x.x.x.x), where x is a decimal number from 0 to 255. Separate addresses with a space. A maximum of four IP addresses can be defined.

Example

Defines two WINS servers for the server pool **primary-pool** on VRF **primary**.

```
switch(config)# dhcp-server vrf primary
switch(config-dhcp-server)# pool primary-pool
switch(config-dhcp-server-pool)# netbios-name-server ip 10.0.20.1 10.0.30.10
```

Deletes a WINS server from the server pool **primary-pool** on VRF **primary**.

```
switch(config)# dhcp-server vrf primary
switch(config-dhcp-server)# pool primary-pool
switch(config-dhcp-server-pool)# no netbios-name-server ip 10.0.20.1
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8400	config-dhcp-server-pool	Administrators or local user group members with execution rights for this command.

netbios-node-type

Syntax

```
netbios-node-type <TYPE>
no netbios-node-type <TYPE>
```

Description

Defines the NetBIOS node type for the current DHCPv4 server pool.

The **no** form of this command removes the NetBIOS node type for the current pool.

Parameter	Description
<TYPE>	Specifies the NetBIOS node type: <code>broadcast</code> , <code>hybrid</code> , <code>mixed</code> , or <code>peer-to-peer</code> .

Examples

Defines the NetBIOS node type **broadcast** for the DHCPv4 server pool **primary-pool** on VRF **primary**.

```
switch(config)# dhcp-server vrf primary
switch(config-dhcp-server)# pool primary-pool
switch(config-dhcp-server-pool)# netbios-node-type broadcast
```

Deletes the NetBIOS node type **broadcast** from the DHCPv4 server pool **primary-pool** on VRF **primary**.

```
switch(config)# dhcp-server vrf primary
switch(config-dhcp-server)# pool primary-pool
switch(config-dhcp-server-pool)# no netbios-node-type broadcast
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8400	config-dhcp-server-pool	Administrators or local user group members with execution rights for this command.

option

Syntax

```
option <OPTION-NUM> {ascii "<ASCII-STR>" | hex <HEX-STR> | ip <IPV4-ADDR-LIST>}  
no option <OPTION-NUM> {ascii <ASCII-STR> | hex <HEX-STR> | ip <IPV4-ADDR-LIST>}
```

Description

Defines custom DHCPv4 options for the current DHCPv4 server pool. DHCPv4 options enable the DHCPv4 server to provide additional information about the network when DHCPv4 clients request an address.

The **no** form of this command removes custom DHCPv4 options from the pool.

Parameter	Description
<OPTION-NUM>	Specifies a DHCPv4 option number. For a list of DHCPv4 option numbers, see https://www.iana.org/assignments/bootp-dhcp-parameters/bootp-dhcp-parameters.xhtml . Range: 2 to 254.
ascii <ASCII-STR>	Specifies a value for the selected option as an ASCII string. Range: 1 to 255 ASCII characters.



NOTE

Parameter	Description
	 If you specify 18 as the <OPTION - NUM> parameter, the ASCII string must be enclosed within quotation marks ("").
hex <i><HEX-STR></i>	Specifies a value for the selected option as a hexadecimal string . Range: 1 to 255 hexadecimal characters.
ip <i><IPv4-ADDR-LIST></i>	Specifies a list of IP addresses in IPv4 format (x.x.x.x), where x is a decimal number from 0 to 255. Separate addresses with a space. A maximum of four IP addresses can be defined.

Example

Defines DHCPv4 option **3** for the server pool **primary-pool** on VRF **primary**.

```
switch(config)# dhcp-server vrf primary
switch(config-dhcp-server)# pool primary-pool
switch(config-dhcp-server-pool)# option 3 ip 192.168.1.1
```

Deletes DHCPv4 option **3** for the server pool **primary-pool** on VRF **primary**.

```
switch(config)# dhcp-server vrf primary
switch(config-dhcp-server)# pool primary-pool
switch(config-dhcp-server-pool)# no option 3 ip 192.168.1.1
```

Defines DHCPv4 option 18 for the server pool **mgmt-test** on VRF **mgmt**.

```
switch(config)# dhcp-server vrf mgmt
switch(config-dhcp-server)# pool mgmt-test
switch(config-dhcp-server-pool)# option 18 ascii "aswed"
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8400	config-dhcp-server-pool	Administrators or local user group members with execution rights for this command.

pool

Syntax

```
pool <POOL-NAME>
no pool <POOL-NAME>
```

Description

Creates a DHCPv4 server pool for the current VRF and switches to the `config-dhcp-server-pool` context for it. Multiple pools, each with a distinct range, can be assigned to a VRF. A maximum of 64 pools (IPv4 and IPv6), 64 address ranges, and 8182 clients are supported on the switch across all VRFs.

The **no** form of this command deletes the specified DHCPv4 server pool.

Parameter	Description
<POOL-NAME>	Specifies the DHCPv4 pool name. A maximum of 64 pools (IPv4 and IPv6) are supported across VRFs on the switch. Range: 1 to 32 printable ASCII characters. First character must be a letter or number.

Example

Creates the DHCPv4 server pool **primary-pool** on VRF **primary**.

```
switch(config)# dhcp-server vrf primary
switch(config-dhcp-server)# pool primary-pool
switch(config-dhcp-server-pool)#
```

Deletes the DHCPv4 server pool **primary-pool** on VRF **primary**.

```
switch(config)# dhcp-server vrf primary
switch(config-dhcp-server)# no pool primary-pool
```


Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8400	config-dhcp-server	Administrators or local user group members with execution rights for this command.

range

Syntax

```
range <LOW-IPV4-ADDR> <HIGH-IPV4-ADDR> [prefix-len <MASK>]
no range <LOW-IPV4-ADDR> <HIGH-IPV4-ADDR> [prefix-len <MASK>]
```

Description

Defines the range of IP addresses supported by the current DHCPv4 server pool. A maximum of 64 ranges are supported per switch across all VRFs.

The **no** form of this command deletes the address range for the current pool.

Parameter	Description
<LOW-IPV4-ADDR>	Specifies the lowest IP address in the pool in IPv4 format (x.x.x.x), where x is a decimal number from 0 to 255.
<HIGH-IPV4-ADDR>	Specifies the highest IP address in the pool in IPv4 format (x.x.x.x), where x is a decimal number from 0 to 255.

Parameter	Description
<code>prefix-len <MASK></code>	Specifies the number of bits in the address mask in CIDR format (x), where x is a decimal number from 0 to 32.



NOTE

When active gateway is configured on the interface serviced by the pool, you must specify a prefix length that matches the mask on the IP address assigned to the interface. Otherwise, client stations will get a prefix length from active gateway that may not be consistent with the configured range, and a DHCP error will occur. In the following example, the DHCP range prefix is set to 16 to match the mask on the IP address assigned to interface VLAN 2.

```
switch(config)# interface vlan 2
switch(config-if-vlan)# ip address
200.1.1.1/16
switch(config-if-vlan)# active-gateway ip
200.1.1.3
    mac 00:aa:aa:aa:aa:aa
switch(config-if-vlan)# exit
switch(config)# dhcp-server vrf primary
switch(config-dhcp-server)# pool primary-
pool
switch(config-dhcp-server-pool)# range
192.168.1.1
    192.168.1.100 prefix-len 16
```

Examples

Defines the address range **192.168.1.1** to **192.168.1.100** with a mask of **24** bits for the DHCPv4 server pool **primary-pool** on VRF **primary**.

```
switch(config)# dhcp-server vrf primary
switch(config-dhcp-server)# pool primary-pool
switch(config-dhcp-server-pool)# 192.168.1.1 192.168.1.100 prefix-len 24
```

Deletes the address range **192.168.1.1** to **192.168.1.100** with a mask of **24** bits from the DHCPv4 server pool **primary-pool** on VRF **primary**.

```
switch(config)# dhcp-server vrf primary
switch(config-dhcp-server)# pool primary-pool
```

```
switch(config-dhcp-server-pool)# no 192.168.1.1 192.168.1.100 prefix-len 24
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8400	config-dhcp-server-pool	Administrators or local user group members with execution rights for this command.

show dhcp-server

Syntax

```
show dhcp-server [all-vrfs]
show dhcp-server leases {all-vrfs | vrf <VRF-NAME>}
show dhcp-server pool <POOL-NAME> [vrf <VRF-NAME>]
```

Description

Shows configuration settings for the DHCPv4 server.

Parameter	Description
all-vrfs	Shows DHCPv4 server configuration settings for all VRFs.
leases {all-vrfs vrf <VRF-NAME>}	Shows DHCPv4 server lease provided by the server for all VRFs or a specific VRF.
pool <POOL-NAME> [vrf <VRF-NAME>]	Shows DHCPv4 server pool configuration settings for all VRFs or a specific VRF.

Examples

Showing all DHCPv4 server configuration settings.

```

switch# show dhcp-server
VRF Name           : default
DHCP Server        : enabled
Operational State  : operational
Authoritative Mode : false
Config_status      : Applied
Pool Name          : test
Lease Duration     : 00:01:00
DHCP dynamic IP allocation
-----
Start-IP-Address   End-IP-Address   Prefix-Length
-----
192.168.1.1        192.168.1.20     24
DHCP Server options
-----
Option-Number      Option-Type      Option-Value
-----
6                  ip              10.0.0.3 10.0.0.4 10.0.0.5 10.0.0.6
DHCP Server static IP allocation
-----
IP-Address         Client-Hostname   State             MAC-Address
-----
10.0.0.3           *                OPERATIONAL      aa:aa:aa:aa:aa:aa
BOOTP Options
-----
Boot-File-Name      TFTP-Server-Name  TFTP-Server-Address
-----
boot.txt            *                10.0.0.10

```

Showing DHCP server configuration settings for VRF **primary-vrf**.

```

switch# show dhcp-server vrf primary-vrf
VRF Name           : primary-vrf
DHCP Server        : disabled
Operational State  : disabled
Authoritative Mode : false
Config_status      : Applied
Pool Name          : test
Lease Duration     : 00:01:00
DHCP dynamic IP allocation
-----
Start-IP-Address   End-IP-Address   Prefix-Length
-----
10.0.0.1           10.0.0.30       *
192.168.1.1        192.168.1.20     24

```

```

192.168.10.30      192.168.10.60      16
DHCP Server options
-----
Option-Number      Option-Type      Option-Value
-----
6                  ip          10.0.0.3 10.0.0.4 10.0.0.5 10.0.0.6
18                 ascii       aswed
DHCP Server static IP allocation
-----
IP-Address          Client-Hostname  MAC-Address
-----
10.0.0.1            *               aa:bb:cc:11:12:a4
20.0.0.1            *               11:22:11:22:aa:dd
BOOTP Options
-----
Boot-File-Name      TFTP-Server-Name  State              TFTP-Server-Address
-----
boot.txt            *                OPERATIONAL        10.0.0.10

```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8400	Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

static-bind

Syntax

```
static-bind {ip <IPV4-ADDR>}{ mac <MAC-ADDR>} [hostname <HOST>]  
no static-bind <IPV4-ADDR-LIST>
```

Description

Creates a static binding that associates an IP address in the current pool with a specific MAC address. This causes the DHCPv4 server to only assign the specified IP address to a client station with the specified MAC address.

The **no** form of this command removes the specified binding.

Parameter	Description
<code><IPV4-ADDR></code>	Specifies an IP address in IPv4 format (x.x.x.x), where x is a decimal number from 0 to 255. The IP address must be within the address range defined for the current pool.
<code>mac <MAC-ADDR></code>	Specifies a client station MAC address (xx:xx:xx:xx:xx:xx), where x is a hexadecimal number from 0 to F.
<code>hostname <HOST></code>	Specifies the host name of the client station. Range: 1 to 255 printable ASCII characters

Examples

Defines a static address for the server pool **primary-pool** on VRF **primary**.

```
switch(config)# dhcp-server vrf primary  
switch(config-dhcp-server)# pool primary-pool  
switch(config-dhcp-server-pool)# static-bind ip 10.0.0.1 mac  
24:be:05:24:75:73
```

Deletes a static address from the server pool **primary-pool** on VRF **primary**.

```
switch(config)# dhcp-server vrf primary  
switch(config-dhcp-server)# pool primary-pool  
switch(config-dhcp-server-pool)# no static-bind ip 10.0.0.1 mac  
24:be:05:24:75:73
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8400	config-dhcp-server-pool	Administrators or local user group members with execution rights for this command.

DHCP server IPv6 commands

Subtopics

[DHCP server IPv6 commands](#)

DHCP server IPv6 commands

Select a command from the list in the left navigation menu.

Subtopics

- [authoritative](#)
- [clear dhcpv6-server leases](#)
- [dhcpv6-server external-storage](#)
- [dhcpv6-server vrf](#)
- [disable](#)
- [dns-server](#)
- [enable](#)
- [lease](#)
- [option](#)
- [pool](#)
- [range](#)
- [show dhcpv6-server](#)
- [static-bind](#)

authoritative

Syntax

```
authoritative
no authoritative
```

Description

Configures the DHCPv6 server as authoritative on the current VRF. This means that the server is the sole authority for the network on the VRF. It responds to client solicit messages with advertise messages having a priority/preference value set to 255 (the maximum), instead of 0 (the minimum). Clients always choose the DHCPv6 server with the highest priority/preference value. If two DHCPv6 servers send an advertise message with the same priority/preference value, then the client picks one and discards the other.

The **no** form of this command disables authoritative mode on the current VRF.

Example

Configures DHCPv6 server authoritative mode on VRF **primary**.

```
switch(config) # dhcpv6-server vrf primary
switch(config-dhcpv6-server) # authoritative
```

Removes DHCPv6 server authoritative mode on VRF **primary**.

```
switch(config) # dhcpv6-server vrf primary
switch(config-dhcpv6-server) # no authoritative
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8400	config-dhcpv6-server	Administrators or local user group members with execution rights for this command.

clear dhcpv6-server leases

Syntax

```
clear dhcpv6-server leases [all-vrfs | <IPV6-ADDR> vrf <VRF-NAME>] | vrf  
<VRF-NAME>]
```

Description

Clears DHCPv6 server lease information. The DHCPv6 server must be disabled before clearing lease information.

Parameter	Description
all-vrfs	Clears leases for all VRFs.
<IPV6-ADDR> vrf <VRF-NAME>	Clears the lease for a specific client on a specific VRF. Specify the client address in IPv6 format (xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx), where x is a hexadecimal number from 0 to F. You can use two colons (::) to represent consecutive zeros (but only once), remove leading zeros, and collapse a hextet of four zeros to a single 0. For example, this address 2222:0000:3333:0000:0000:0000:4444:0055 becomes 2222:0:3333::4444:55 .
vrf <VRF-NAME>	Clears leases for a specific VRF.

Examples

Clearing all DHCPv6 server leases.

```
switch(config)# dhcpv6-server vrf primary  
switch(config-dhcpv6-server)# disable  
switch(config-dhcpv6-server)# exit  
switch(config)# exit  
switch# clear dhcpv6-server leases
```

Clearing all DHCPv6 server leases for VRF **primary-vrf**.

```
switch(config)# dhcpv6-server vrf primary  
switch(config-dhcpv6-server)# disable  
switch(config-dhcpv6-server)# exit  
switch(config)# exit
```

```
switch# clear dhcpv6-server leases vrf primary-vrf
```

Clear the DHCPv6 server lease for IP address **2001::1** on VRF **primary-vrf**.

```
switch(config)# dhcpv6-server vrf primary
switch(config-dhcpv6-server)# disable
switch(config-dhcpv6-server)# exit
switch(config)# exit
switch# clear dhcpv6-server leases 2001::1 vrf primary-vrf
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8400	Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

dhcpv6-server external-storage

Syntax

```
dhcpv6-server external-storage <VOLUME-NAME> file <LEASE-FILENAME> [delay <DELAY>]
no dhcpv6-server external-storage <VOLUME-NAME> file <LEASE-FILENAME> [delay <DELAY>]
```

Description

Configures the external storage file location for DHCPv6 server lease information. This file provides persistent storage, enabling DHCPv6 server settings to be restored when the switch is restarted. Lease information is stored in a flat file on the configured external device.

If external storage is not configured, then after a failure or reboot, all existing lease information is lost.

Lease information is saved to external storage each time the delay timer expires, which by default is every 300 seconds.

Lease information is not restored when issuing the command **dhcp-server enable**.

The **no** form of this command removes external storage support for the DHCPv6 server.

Parameter	Description
<code><VOLUME-NAME></code>	Specifies the external storage volume name. Range: 1 to 64 printable ASCII characters.
<code>file <LEASE-FILENAME></code>	Specifies the external storage filename. Range: 1 to 255 printable ASCII characters.
<code>delay <DELAY></code>	Specifies the interval in seconds between updates to the external storage file. Range: 15 to 86400. Default: 300.

Example

Stores the lease file on external storage volume **Storage1** in file **LeaseFile** at an interval of 600 seconds.

```
switch(config)# dhcpv6-server external-storage Storage1 file LeaseFile  
delay 600
```

Disables storage of the lease file on external storage volume **Storage1** in file **LeaseFile**.

```
switch(config)# no dhcpv6-server external-storage Storage1 file LeaseFile  
delay 600
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8400	config	Administrators or local user group members with execution rights for this command.

dhcpv6-server vrf

Syntax

```
dhcpv6-server vrf VRF-NAME  
no dhcpv6-server vrf VRF-NAME
```

Description

Configures the DHCPv6 server to support a VRF and changes to the **config-dhcpv6-server** context for that VRF.

The **no** form of this command removes DHCPv6 server support on a VRF.

Parameter	Description
<i>VRF-NAME</i>	Name of a VRF.

Example

Configures DHCPv6 server support on VRF **primary**.

```
switch(config)# dhcpv6-server vrf primary
```

Removes the DHCPv6 server support on VRF **primary**.

```
switch(config)# no dhcpv6-server vrf primary
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8400	config	Administrators or local user group members with execution rights for this command.

disable

Syntax

```
disable
```

Description

Disables the DHCPv6 server on the current VRF. The DHCPv6 server is disabled by default when configured on a VRF.

Example

Disables the DHCPv6 server on VRF **primary**.

```
switch(config)# dhcpv6-server vrf primary  
switch(config-dhcpv6-server)# disable
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8400	config-dhcpv6-server	Administrators or local user group members with execution rights for this command.

dns-server

Syntax

```
dns-server <IPv6-ADDR-LIST>
no dns-server <IPv6-ADDR-LIST>
```

Description

Defines up to four DNS servers for the current DHCPv6 server pool.

The **no** form of this command removes the specified DNS servers from the pool.

Parameter	Description
<code><IPv6-ADDR-LIST></code>	Specifies the IP addresses of the DNS servers in IPv6 format (x xxx:xxx:xxx:xxx:xxx:xxx:xxx:xxx), where x is a hexadecimal number from 0 to F. Separate addresses with a space. A maximum of four IP addresses can be defined.

Example

Defines DNS server **2001::13** for the server pool **primary-pool** on VRF **primary**.

```
switch(config)# dhcpv6-server vrf primary
switch(config-dhcpv6-server)# pool primary-pool
switch(config-dhcpv6-server-pool)# dns-server 2001::13
```

Deletes DNS server **2001::13** from the server pool **primary-pool** on VRF **primary**.

```
switch(config)# dhcpv6-server vrf primary
switch(config-dhcpv6-server)# pool primary-pool
switch(config-dhcpv6-server-pool)# no dns-server 2001::13
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8400	config-dhcpv6-server-pool	Administrators or local user group members with execution rights for this command.

enable

Syntax

```
enable
```

Description

Enables the DHCPv6 server on the current VRF. The DHCPv6 server is disabled by default when configured on a VRF.

Example

Enables the DHCPv6 server on VRF **primary**.

```
switch(config)# dhcpv6-server vrf primary  
switch(config-dhcpv6-server)# enable
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8400	config-dhcpv6-server	Administrators or local user group members with execution rights for this command.

lease

Syntax

```
lease {<TIME> | infinite}  
no lease
```

Description

Sets the length of the DHCPv6 lease time for the current pool. The lease time determines how long an IP address is valid before a DHCPv6 client must request that it be renewed.

The **no** form of this command returns the DHCPv6 lease time to the default value 1 hour.

Parameter	Description
<TIME>	Sets the DHCPv6 lease time. Format: DD:HH:MM. Default: 01:00:00.
infinite	Sets the DHCPv6 lease time to infinite. This means that addresses do not need to be renewed.

Example

Sets the lease time for DHCPv6 server pool **primary-pool** on VRF **primary** to **12** hours.

```
switch(config)# dhcpv6-server vrf primary  
switch(config-dhcpv6-server)# pool primary-pool  
switch(config-dhcpv6-server-pool)# lease 00:12:00
```

Sets the lease time for DHCP server pool **primary-pool** on VRF **primary** to the default value.

```
switch(config)# dhcpv6-server vrf primary  
switch(config-dhcpv6-server)# pool primary-pool
```



```
switch(config-dhcpv6-server-pool)# no lease 00:12:00
```

Command History

Release	Modification
---------	--------------

10.07 or earlier	- -
------------------	-----

Command Information

Platforms	Command context	Authority
8400	config-dhcpv6-server-pool	Administrators or local user group members with execution rights for this command.

option

Syntax

```
option <OPTION-NUM> {ascii <ASCII-STR> | hex <HEX-STR> | ip <IPV6-ADDR-LIST>}  
no option <OPTION-NUM> {ascii <ASCII-STR> | hex <HEX-STR> | ip <IPV6-ADDR-LIST>}
```

Description

Defines custom DHCPv6 options for the current DHCPv6 server pool.

The **no** form of this command removes custom DHCPv6 options from the pool.

Parameter	Description
<OPTION-NUM>	Specifies a DHCPv6 option number. Range: 2 to 254.
ascii <ASCII-STR>	Specifies a value for the selected option as an ASCII string. Range: 1 to 255 ASCII characters.
hex <HEX-STR>	Specifies a value for the selected option as a hexadecimal string. Range: 1 to 255 hexadecimal characters.

Parameter	Description
<code>ip <IPv6-ADDR-LIST></code>	Specifies a list of IP addresses for the option in IPv6 format (xx xx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx), where x is a hexadecimal number from 0 to F.

Example

Defines DHCPv6 option **22** for the server pool **primary-pool** on VRF **primary**.

```
switch(config)# dhcpv6-server vrf primary
switch(config-dhcpv6-server)# pool primary-pool
switch(config-dhcpv6-server-pool)# option 22 ipv6 2001::12
```

Deletes DHCPv6 option 22 for the server pool **primary-pool** on VRF **primary**.

```
switch(config)# dhcpv6-server vrf primary
switch(config-dhcpv6-server)# pool primary-pool
switch(config-dhcpv6-server-pool)# no option 22 ipv6 2001::12
```

Defines DHCPv6 option **18** for the server pool **mgmt-test** on VRF **mgmt**.

```
switch(config)# dhcpv6-server vrf mgmt
switch(config-dhcpv6-server)# pool mgmt-test
switch(config-dhcpv6-server-pool)# option 18 ascii "aswed"
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8400	config-dhcpv6-server-pool	Administrators or local user group members with execution rights for this command.

pool

Syntax

```
pool <POOL-NAME>
no pool <POOL-NAME>
```

Description

Creates a DHCPv6 server pool for the current VRF and switches to the `config-dhcpv6-server-pool` context for it. Multiple pools, each with a distinct range, can be assigned to a VRF. A maximum of 64 pools (IPv4 and IPv6), 64 address ranges, and 8182 clients are supported on the switch across all VRFs.

The **no** form of this command deletes the specified DHCPv6 server pool.

Parameter	Description
<code><POOL-NAME></code>	Specifies the DHCPv6 pool name. A maximum of 64 pools (IPv4 and IPv6) are supported across VRFs on the switch. Range: 1 to 32 printable ASCII characters. First character must be a letter or number.

Example

Creates the DHCPv6 server pool **primary-pool** on VRF **primary**.

```
switch(config)# dhcpv6-server vrf primary
switch(config-dhcpv6-server)# pool primary-pool
switch(config-dhcpv6-server-pool)#
```

Deletes the DHCPv6 server pool **primary-pool** on VRF **primary**.

```
switch(config)# dhcpv6-server vrf primary
switch(config-dhcpv6-server)# no pool primary-pool
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8400	config-dhcpv6-server	Administrators or local user group members with execution rights for this command.

range

Syntax

```
range <LOW-IPV6-ADDR> <HIGH-IPV6-ADDR> [prefix-len <MASK>]
no range <LOW-IPV6-ADDR> <HIGH-IPV6-ADDR> [prefix-len <MASK>]
```

Description

Defines the range of IP addresses supported by the current DHCPv6 server pool. A maximum of 64 ranges are supported per switch across all VRFs.

The **no** form of this command deletes the address range for the current pool.

Parameter	Description
<LOW-IPV6-ADDR>	Specifies the lowest IP address in the pool in IPv6 format (xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx), where x is a hexadecimal number from 0 to F.
<HIGH-IPV6-ADDR>	Specifies the highest IP address in the pool in IPv6 format (xxx x:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx), where x is a hexadecimal number from 0 to F.
prefix-len <MASK>	Specifies the number of bits in the address mask in CIDR format (x), where x is a decimal number from 64 to 128.

Example

Defines an address range for the DHCPv6 server pool **primary-pool** on VRF **primary**.

```
switch(config)# dhcpv6-server vrf primary
switch(config-dhcpv6-server)# pool primary-pool
```

```
switch(config-dhcpv6-server-pool)# range 2001::1 2001::10 prefix-len 64
```

Deletes an address range for the DHCPv6 server pool **primary-pool** on VRF **primary**.

```
switch(config)# dhcpv6-server vrf primary
switch(config-dhcpv6-server)# pool primary-pool
switch(config-dhcpv6-server-pool)# no range 2001::1 2001::10 prefix-len 64
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8400	config-dhcpv6-server-pool	Administrators or local user group members with execution rights for this command.

show dhcpv6-server

Syntax

```
show dhcpv6-server [all-vrfs]
show dhcpv6-server leases {all-vrfs | vrf <VRF-NAME>}
show dhcpv6-server pool <POOL-NAME> [vrf <VRF-NAME>]
```

Description

Shows configuration settings for the DHCPv6 server.

Parameter	Description
all-vrfs	Shows DHCPv6 server configuration settings for all VRFs.
leases {all-vrfs vrf <VRF-NAME>}	Shows DHCPv6 server lease provided by the server for all VRFs or a specific VRF.

Parameter	Description
<code>pool <POOL-NAME> [vrf <VRF-NAME>]</code>	Shows DHCPv6 server pool configuration settings for all VRFs or a specific VRF.

Examples

Showing all DHCPv6 server configuration settings.

```
switch# show dhcpv6-server
VRF Name           : default
DHCPv6 Server      : enabled
Operational State  : operational
Authoritative Mode : true
Config_status      : Applied
Pool Name          : test
Lease Duration     : 00:01:00
DHCPV6 dynamic IP allocation
-----
Start-IPv6-Address End-IPv6-Address Prefix-Length
-----
2001::2            2001::10        64
DHCPv6 Server options
-----
Option-Number      Option-Type      Option-Value
-----
7                  ipv6             2001::15
DHCPv6 Server static IP allocation
-----
DHCPv6 Server static host is not configured.
```

Showing DHCPv6 server configuration settings for VRF **primary-vrf**.

```
switch# show dhcpv6-server vrf primary-vrf
VRF Name           : primary-vrf
DHCPv6 Server      : disabled
Operational State  : standby
Authoritative Mode : false
Config_status      : Applied
Pool Name          : test
Lease Duration     : 00:01:00
DHCPV6 dynamic IP allocation
-----
Start-IPv6-Address End-IPv6-Address Prefix-Length
-----
2000::1            2000::20        *
```

```

2001::20          2001::50          *
2001::2           2001::10          64
2010::20          2010::40          *
DHCPv6 Server options
-----
Option-Number      Option-Type      Option-Value
-----
7                  ipv6            2001::15
23                 ipv6            2001::30
30                 ipv6            2001::10
DHCPv6 Server static IP allocation
-----
DHCPv6 Server static host is not configured.
Pool Name          : v6test
Lease Duration     : 00:01:00
DHCPv6 dynamic IP allocation
-----
Start-IPv6-Address  End-IPv6-Address  Prefix-Length
-----
2001::1             2001::20          64
2010::10            2010::30          *
2020::20            2020::60          *
DHCPv6 Server options
-----
Option-Number      Option-Type      Option-Value
-----
7                  ipv6            2001::20
23                 ipv6            2001:0db8:85a3:0000:0000:8a2e:0370:7334
2001:0db8:85a3:0000:0000:8a2e:0370:7335
2001:0db8:85a3:0000:0000:8a2e:0370:7336
2001:0db8:85a3:0000:0000:8a2e:0370:7337
DHCPv6 Server static IP allocation
-----
IPv6-Address       Client-Hostname   State             Client-Id
-----
2100::4            *                 OPERATIONAL       1:0:a0:24:ab:fb:9c

```

Command History

Release

Modification

10.07 or earlier

- -

Command Information

Platforms	Command context	Authority
8400	Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

static-bind

Syntax

```
static-bind ipv6 <IPv6-ADDR> client-id <ID> [hostname <HOST>]  
no static-bind ipv6 <IPv6-ADDR-LIST>
```

Description

Creates a static binding that associates an IP address in the current pool with a client identifier or DUID. This causes the DHCPv6 server to only assign the specified IP address to a client station with the specified client identifier or DUID.

The **no** form of this command removes the specified static binding from the pool.

Parameter	Description
<IPv6-ADDR>	Specifies the IP address to assign in IPv6 format (xxxx:xxxx:xx xx:xxxx:xxxx:xxxx:xxxx:xxxx), where x is a hexadecimal number from 0 to F. For example, this address 2222:0000:3333:0000:0000:0000:4444:0055 becomes 2222:0:3333::4444:55 .
client-id <ID>	Specifies the client identifier or DUID.
hostname <HOST>	Specifies the host name of the client station. Range: 1 to 255 printable ASCII characters

Example

Defines a static address for the DHCPv6 server pool **primary-pool** on VRF **primary**.

```
switch(config) # dhcpv6-server vrf primary  
switch(config-dhcpv6-server) # pool primary-pool
```



```
switch(config-dhcpv6-server-pool)# static-bind ipv6 2001::10 client-id
1:0:a0:24:ab:fb:9c
```

Deletes a static address from the DHCPv6 server pool **primary-pool** on VRF **primary**.

```
switch(config)# dhcpv6-server vrf primary
switch(config-dhcpv6-server)# pool primary-pool
switch(config-dhcpv6-server-pool)# no static-bind ipv6 2001::10 client-id
1:0:a0:24:ab:fb:9c
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8400	config-dhcpv6-server-pool	Administrators or local user group members with execution rights for this command.

Troubleshooting

Client not getting IP address

- CoPP drop

In case of excessive DHCP traffic, CoPP does the rate limit by dropping some of the packets.

Check if client packets are getting dropped by CoPP using `show copp statistics class dhcp-ipv4` or `show copp statistics class dhcp-ipv6` commands.

- Configuration issues
 1. IP range within the pool should match the client connected interface IP subnet.

```
dhcp-server vrf default
  pool pool1
    range 172.16.10.1 172.16.10.20
  exit
enable
```

Check the scale numbers supported on the platform. For example the maximum number of VRFs, and pools supported on the platform.

2. Check if the DHCP Server is configured in client VRF and is in enabled state.

3. Check for server pool exhaustion.

- DHCP Relay co-existence

From AOS-CX 10.07 onwards, you can configure DHCP Relay and DHCP Server simultaneously. If both are enabled for an earlier release, then either the DHCP relay or the DHCP server will fail to start.

DHCP Server daemon taking up high CPU [`dhcp-server-adapter`]

- Due to architectural limitations, the DHCP Server on boot up the CPU utilization is high for about 2 minutes; this is expected behavior.
- In the VSX setup, when the number of clients in the lease table is more, the server daemon will have high CPU usage while syncing leases between primary and secondary VSX peers. Once syncing is complete, then the CPU utilization comes back to normal.

Check point restore

DHCP-Server configuration changes are not allowed when it is enabled. However, through check-point restore or TFTP configuration download or REST, you can change the configuration in the management VRF. This configuration change gets applied when the server is disabled and enabled.

From 10.10 onwards, a configuration flag icon is displayed in `show dhcp-server` command to indicate if there is any configuration that is not applied.

FAQ

1. What ports use DHCP for switch assignments?

You can set up a DHCP switch with a management VRF port; if the management VRF port is unavailable, use an IN-Band data port.

2. Is DHCP assignment available on boot up from the factory?

Yes, DHCP assignment is available on boot up from the factory. This assists Zero Touch depending on the platform; this can be a management VRF or an IN-Band data port on the default VLAN 1.

3. Is DHCP assignment available on both management VRF and IN-Band data ports simultaneously?

Yes, DHCP assignment is possible on both management VRF and IN Band data ports, but it depends on the platform.

If both ports can get a DHCP address, the DHCP address from the management VRF port is used for Zero Touch Provisioning instead of the one from the IN-Band data port. The data ports will wait 30 seconds before taking ownership of Zero Touch Provisioning (ZTP).

4. Which VLAN is assigned a DHCP address?

The factory default VLAN to which the DHCP address is assigned is VLAN1.

Users can configure the VLAN for DHCP allocation on platforms supporting multiple VLAN configurations. Only a single VLAN can support DHCP assignments.

5. Can DHCP assignments be disabled in an HPE Aruba Networking AOS-CX switch?

Use the **no ip dhcp** command on the required VLAN interface or management VRF port you can disable the DHCP assignments in an HPE Aruba Networking AOS-CX switch.

A static configuration option is available on both ports.

6. Can IP DHCP switch assignment be carried out on a Routed only Port (RoP)?

No, RoP is not supported. Only VLAN and OOBM ports can be allocated an address with DHCP.

7. Can an HPE Aruba Networking AOS-CX switch support DHCP IPv6 Allocation?

Yes, an HPE Aruba Networking AOS-CX switch can support DHCP IPv6 allocation. However, for Zero Touch Provisioning (ZTP), IPv4 is required.

8. Do HPE Aruba Networking AOS-CX switches support DHCP server?

Since the software release of AOS-CX 10.10, all platforms support DHCP server, except for 6100, 6000, and 4100i.

9. Can HPE Aruba Networking AOS-CX switches support DHCP address exclusion from a subnet?

Not formally; however, you can use static bindings to unused MAC addresses as a workaround on a smaller scale.

10. Do all HPE Aruba Networking AOS-CX switches support DHCP helper?

Since the software release of AOS-CX 10.10, all platforms support DHCP helper for IPv4 and IPv6.

11. Can DHCP Server and Relay simultaneously be supported on a switch?

Yes, since the software release AOS-CX 10.08, the platforms that support DHCP Server and Relay both can be set up simultaneously.

12. How many helper addresses can be used?

The Switched Virtual Interface can use up to eight helper addresses for IPv4 and IPv6.

13. Is DHCP Relay supported for multi-netted addresses?

Yes, for both IPv4 and IPv6 DHCP Relay supports multi-netted addresses. The Gateway IP Address (GIADDR) used in the DHCP request will be the lowest IP address configured on the interface.

You can override the lowest IP address using the `bootp-gateway` command. IPv6 does not support bootp.

14. Can a multi-netted address support GIADDR from a different address?

Yes, for IPv4 only. For more information, see [DHCP relay agent](#).

15. Can the binding of DHCP and IP remain after a switch reboot?

Yes, the binding of DHCP and IP remains by using an external storage option `dhcpv4-snooping external-storage`.

16. If multiple 'ip-helper' IPs are configured for DHCP relay on an interface or SVI, which switch will forward the DHCP requests?

In case of multiple 'ip-helper' IPs configured for DHCP relay on an interface or SVI, the client will receive multiple offers from different DHCP servers, and the client will choose which one to accept.

17. What happens when global *dhcp-smart-relay* is enabled in an interface or SVI with multiple IP addresses (multi-netting) that services DHCP clients in different subnets?

On enabling global **dhcp-smart-relay** in an interface or SVI with multiple IP addresses (multi-netting) that services DHCP clients in different subnets, the AOS-CX device will first use the primary interface or SVI IP address as the unicast source to the DHCP server. If no response is received the AOS-CX device will use the secondary IPs from the lowest-numbered IP to the highest until a DHCP response is received.

18. What are the troubleshooting commands for DHCP relay agent?

The initial troubleshooting for DHCP relay agent can be done using the following commands:

- `show dhcp-relay`
- `show dhcp-relay bootp-gateway`
- `show ip helper-address`

Next level of troubleshooting can be done by taking packets captured at the DHCP server side and AOS-CX side. For more information about AOS-CX packet capture, see Mirroring chapter of AOS-CX Monitoring Guide.

Perform additional AOS-CX side DHCP debugging using **debug dhcprelay** and **debug dhcpv6relay** commands. For more information, see Debug logging chapter of AOS-CX Diagnostics and Supportability Guide.

DHCP snooping

DHCP is a protocol used by DHCP servers in IP networks to dynamically allocate network configuration data to client devices (DHCP clients). Possible network configuration data includes user IP address, subnet mask, default gateway IP address, DNS server IP address, and lease duration. The DHCP protocol enables

DHCP clients to be dynamically configured with such network configuration data without any manual setup process.

DHCP snooping is a security feature that helps avoid problems caused by an unauthorized DHCP server on the network that provides invalid configuration data to DHCP clients. A user without malicious intent may cause this problem by unknowingly adding to the network a switch or other device that includes a DHCP server enabled by default. In some cases, a user with malicious intent adds a DHCP server to the network as part of their Denial of Service or Man in the Middle attack.

DHCP snooping helps prevent such problems by distinguishing between trusted ports connected to legitimate DHCP servers and untrusted ports connected to general users. DHCP packets are forwarded between trusted ports without inspection. DHCP packets received on other switch ports are inspected before being forwarded. DHCP Packets from untrusted sources are dropped.

In support of the separate IP source lockdown feature, DHCP snooping dynamically collects client information (VLAN, IPv4 address, MAC address, interface) and adds it to the switch IP binding database. Alternatively, the IP binding database can be statically updated using the `ipv4 source-binding` or `ipv6 source-binding` commands. Statically configured IP binding information supersedes any dynamically collected information for the same client.



NOTE

DHCP Snooping and DHCP relay can be configured on the same switch.

When DHCP snooping and DHCP relay are both enabled on a VLAN, the following actions occur:

- Received packet: DHCP snooping processes the DHCP packet before (possibly) handing it to DHCP relay.
- Transmitted packet: DHCP packets sent by DHCP relay are intercepted by DHCP snooping to learn IP bindings.



NOTE

For even more rigorous security that is applied in hardware on a packet-by-packet basis, you can use IP source lockdown feature as described in `IP source lockdown`.

DHCPv6 guard

The DHCPv6 guard feature is an extension of DHCPv6 snooping. When the DHCPv6 snooping feature is configured globally and on the VLAN, the ports are configured as trusted and untrusted ports on the VLAN. DHCPv6 guard enhances this feature by creating a policy and applying it on a port and VLAN. This policy contains multiple attributes which are compared against the packet that is received on trusted ports. If the packet complies with the attributes of the policy, it is forwarded to the destination port; otherwise the packet is dropped.

DHCP server interoperation

DHCP server can not be configured with DHCP snooping.

DHCPv4 snooping conditions for dropping DHCPv4 packets

Applies only to DHCPv4 snooping.

Packet types that are dropped	Conditions for dropping the packets
DHCPOFFER, DHCPACK, DHCPNACK	• A packet from a DHCP server is received on an untrusted port. • The switch is configured with a list of authorized DHCP server addresses and a DHCP response received on a trusted port, but the source IP address is not an authorized DHCP server.
DHCPRELEASE, DHCPDECLINE	• A broadcast packet that has a MAC address in the DHCP binding database, but the port in the DHCP binding database does not match the port on which the packet is received.
All DHCP packet types	• A DHCP packet received on an untrusted port in which the DHCP client hardware MAC address does not match the source MAC address in the packet. • A DHCP packet containing DHCP relay information (option 82) is received on an untrusted port.

Subtopics

[Protocol details](#)

[Supported platform and standards](#)

[DHCPv4 Snooping Use case](#)

[DHCPv4 snooping commands](#)

[DHCPv6 snooping commands](#)

[Troubleshooting](#)

Protocol details

Procedure

1. In a VSX setup, the configured VSX Primary switch writes IP binding entries to an external storage file. If the VSX Primary switch reboots, the IP Binding entries will not be synced to the external storage file until the VSX Primary switch comes back up. Once the VSX Primary switch comes up, it will sync entries from the VSX secondary switch and write the consolidated bindings to external storage.
2. In a VSX setup, external storage should be configured only after the VSX role is configured.
3. In a VSX setup, once external storage is configured, the VSX switch role should not be changed. If there is a need to change the role, do so using these steps:
 - a. Remove DHCPv4-Snooping external storage.
 - b. Change the VSX role.
 - c. Configure DHCPv4-Snooping external storage
4. When a port is configured as a trusted port, all the dynamic IP binding entries learned on that port will be deleted.
5. When a client is connected on a trusted port, the dynamic IP binding entries will not be learned on the switch, even though the client gets an IP address.
6. If DHCPv4 snooping is enabled on two back-to-back access switches, DHCP packets will be dropped, Since by default option 82 is enabled on DHCPv4 snooping and the default policy is drop. The second switch with DHCPv4 snooping enabled drops the packets. In this scenario the user should enable DHCPv4 snooping option 82 on one switch, or else you can disable on both.

Supported platform and standards

The following table list the supported platforms for DHCP snooping.

Table 1. Support platforms for DHCP snooping

Platform	DHCP snooping
8400	Yes

Table 2. Scale
Platform

IP Bindings per port


8400	4096
------	------

DHCPv4 Snooping Use case

DHCP Snooping is used to protect from rogue or unwanted attacks from posing DHCP services.

In the following use case:

- Set the switch for DHCPv4 snooping.
- Allow DHCP communication from the uplinks in the Enterprise network port 1/1/51 and 1/1/52.
- For communication to occur, identify the authorized DHCP servers 10.19.69.15 and 10.19.71.15.
- LAN facing user ports 1/1/1 to 1/1/15 is not configured as trusted.

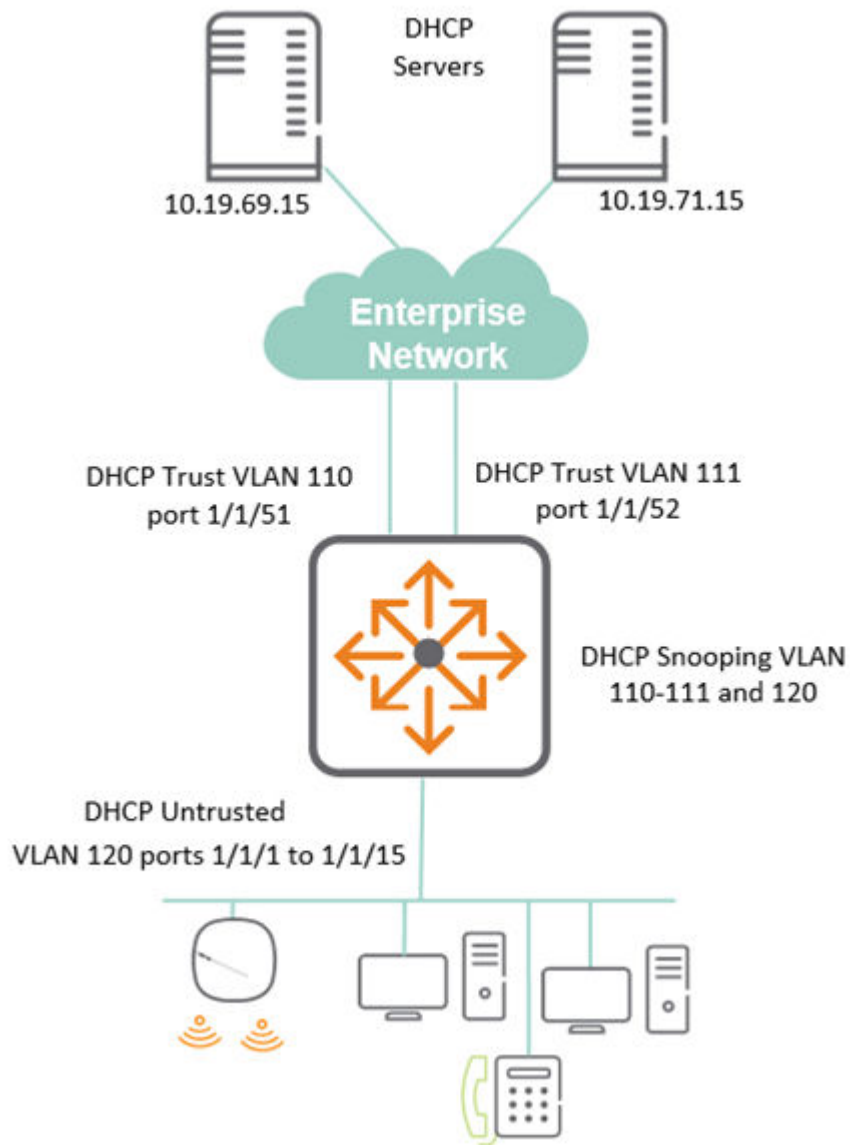

Key configuration portion for above set up is shown with the relevant DHCPv4 snooping parameters:

```

dhcpv4-snooping                                <--enable DHCPv4 snooping
dhcpv4-snooping authorized-server 10.19.69.15    <--allow authorized
servers
dhcpv4-snooping authorized-server 10.19.71.15
vlan 110
    description uplink
    dhcpv4-snooping                                <--enable DHCPv4
snooping on required VLANs
vlan 111
    description uplink
    dhcpv4-snooping
vlan 120
    description User

```

```

    dhcpv4-snooping
interface 1/1/1
    no shutdown
    description User
    vlan access 120
...
interface 1/1/15
    no shutdown
    description User
    vlan access 120
interface 1/1/51                                <--Unlinks on 1/1/51 and 52 trusted
    no shutdown
    vlan trunk native 1
    vlan trunk allowed 110
    dhcpv4-snooping trust
interface 1/1/52
    vlan trunk native 1
    vlan trunk allowed 111
    dhcpv4-snooping trust
interface vlan 110
    description uplink
    ip address 172.16.69.1/30
interface vlan 111
    description uplink
    ip address 172.16.71.1/30
interface vlan 120
    description User
    ip address 172.16.10.1/254
    ip helper-address 10.19.69.15
    ip helper-address 10.19.71.15
...
ip route 0.0.0.0/0 172.16.69.2 distance 10
ip route 0.0.0.0/0 172.16.71.2 distance 20
...

```

Using the show dhcpv4-snooping command, you can see some of the following DHCPv4 information:

- Applied VLANs for snooping, 110-112 and 120
- The untrusted policy is set to drop packets
- The list of authorized DHCP servers are set to 10.19.69.15 and 10.19.71.15
- Set the trusted or untrusted ports and any DHCP bindings for those ports. Port 1/1/1 and 1/1/2 offer DHCP.

```

show dhcpv4-snooping
DHCPv4-Snooping Information
  DHCPv4-Snooping           : Yes           Verify MAC Address   : Yes
  Allow Overwrite Binding   : No             Enabled VLANs        : 110-111,120
  IP Binding Disabled VLANs :
  Static Attributes         : No
  Client Event Logs         : No
Option 82 Configurations
  Untrusted Policy          : drop            Insertion             : Yes
  Option 82 Remote-id       : mac
External Storage Information
  Volume Name               : --
  File Name                 : --
  Inactive Since            : --
  Error                     : --
Flash Storage Information
  File Write Delay          : --
  Active Storage            : --
Authorized Server Configurations
  VRF                       Authorized Servers
  -----
default                     10.19.69.15
default                     10.19.71.15
Port Information
  Port      Trust  Max      Static   Dynamic
  -----
1/1/51     Yes    0         0         0
1/1/52     Yes    0         0         0
1/1/1      No     1024      0         1
1/1/2      No     1024      0         1
!
!output omitted
!
1/1/14     No     1024      0         0
1/1/15     No     1024      0         0

```

DHCPv4 snooping commands

Subtopics

DHCP snooping commands

DHCP snooping commands

Select a command from the list in the left navigation menu.

Subtopics

- [clear dhcp-snooping binding](#)
- [clear dhcp-snooping statistics](#)
- [dhcp-snooping](#)
- [dhcp-snooping \(in config-vlan context\)](#)
- [dhcp-snooping allow-overwrite-binding](#)
- [dhcp-snooping authorized-server](#)
- [dhcp-snooping event-log client](#)
- [dhcp-snooping external-storage](#)
- [dhcp-snooping flash-storage](#)
- [dhcp-snooping max-bindings](#)
- [dhcp-snooping option 82](#)
- [dhcp-snooping static-attributes](#)
- [dhcp-snooping trust](#)
- [dhcp-snooping verify mac](#)
- [show dhcp-snooping](#)
- [show dhcp-snooping binding](#)
- [show dhcp-snooping statistics](#)

clear dhcp-snooping binding

Syntax

```
clear dhcp-snooping binding {all | ip <IP-ADDR> vlan <VLAN-ID> | port <PORT-  
NUM> | vlan <VLAN-ID>}
```

Description

Clears DHCP snooping binding entries.

Parameter	Description
all	Specifies that all DHCP binding information is to be cleared.
ip <IP-ADDR> vlan <VLAN-ID>	Specifies the IP address and VLAN for which all DHCP binding information is to be cleared.

Parameter	Description
<code>port <PORT-NUM></code>	Specifies the port number for which all DHCP binding information is to be cleared.
<code>vlan <VLAN-ID></code>	Specifies the VLAN for which all DHCP binding information is to be cleared.

Examples

Clearing all DHCP binding information for IP address 192.168.2.4 and VLAN 5:

```
switch(config)# clear dhcp-snooping binding ip 192.168.2.4 vlan 5
```

Clearing all DHCP binding information for port 1/1/1:

```
switch(config)# clear dhcp-snooping binding port 1/1/1
```

Clearing all DHCP binding information for VLAN 10:

```
switch(config)# clear dhcp-snooping binding vlan 10
```

Clearing all DHCP binding information:

```
switch(config)# clear dhcp-snooping binding all
```

Command History

Release	Modification
10.14	The dhcpv4 - snooping keyword is deprecated and replaced with dhcp - snooping . The ipv4 parameter is deprecated and replaced with ip .
10.09.1000	Command introduced for the 8360 Switch Series.
10.09	Command introduced for the 6000 and 6100 Switch Series.
10.07 or earlier	

Command Information

Platforms	Command context	Authority
8400	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

clear dhcp-snooping statistics

Syntax

```
clear dhcp-snooping statistics
```

Description

Clears all DHCP snooping statistics.

Examples

Clear all DHCP snooping statistics:

```
switch# clear dhcp-snooping statistics
```

Command History

Release	Modification
10.14	The dhcpv4 - snooping keyword is deprecated and replaced with dhcp - snooping .
10.09.1000	Command introduced for the 8360 Switch Series.
10.09	Command introduced for the 6000 and 6100 Switch Series.
10.07 or earlier	

Command Information

Platforms	Command context	Authority
8400	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

dhcp-snooping

Syntax

```
dhcp-snooping
no dhcp-snooping
```

Description

Enables DHCP snooping. DHCP snooping is disabled by default. DHCP snooping is not supported on the management interface.

The **no** form of the command disables DHCP snooping, flushing all the IP bindings learned since DHCP snooping was enabled.

Examples

Enabling DHCP snooping:

```
switch(config) # dhcp-snooping
```

Disabling DHCP snooping:

```
switch(config) # no dhcp-snooping
```

Command History

Release	Modification
10.14	The dhcipv4 - snooping keyword is deprecated and replaced with dhcp - snooping .
10.09.1000	Command introduced for the 8360 Switch Series.
10.09	Command introduced for the 6000 and 6100 Switch Series.

Release	Modification
10.07 or earlier	

Command Information

Platforms	Command context	Authority
8400	config	Administrators or local user group members with execution rights for this command.

dhcp-snooping (in config-vlan context)

Syntax

```
dhcp-snooping
no dhcp-snooping
```

Description

Enables DHCP snooping for the specified VLAN in the **config-vlan** context. DHCP snooping is disabled by default for all VLANs.

The no form of the command disables DHCP snooping on the specified VLAN, flushing all the IP bindings learned for this VLAN since DHCP snooping was enabled for this VLAN.

Examples

Enabling DHCP snooping on VLAN 100:

```
switch(config)# vlan 100
switch(config-vlan-100)# dhcp-snooping
switch(config-vlan-100)# exit
switch(config)#
```

Disabling DHCP snooping on VLAN 100:

```
switch(config)# vlan 100
switch(config-vlan-100)# no dhcp-snooping
switch(config-vlan-100)# exit
switch(config)#
```


Command History

Release	Modification
10.14	The dhcpv4 - snooping keyword is deprecated and replaced with dhcp - snooping .
10.09.1000	Command introduced for the 8360 Switch Series.
10.09	Command introduced for the 6000 and 6100 Switch Series.
10.07 or earlier	

Command Information

Platforms	Command context	Authority
8400	config-vlan	Administrators or local user group members with execution rights for this command.

dhcp-snooping allow-overwrite-binding

Syntax

```
dhcp-snooping allow-overwrite-binding  
no dhcp-snooping allow-overwrite-binding
```

Description

Allows binding to be overwritten for the same IP address. When enabled, and a DHCP server offers a host an IP address that is already bound to an existing host in the binding table, the existing binding is overwritten for the new host if the new host is successfully able to acquire the same IP address. This overwriting is disabled by default, causing the DHCP server offers to be dropped.

The **no** form of the command disables DHCP snooping overwrite binding.

Examples

Enabling DHCP snooping overwrite binding:

```
switch(config) # dhcp-snooping allow-overwrite-binding
```

Disabling DHCP snooping overwrite binding:

```
switch(config)# no dhcp-snooping allow-overwrite-binding
```

Command History

Release	Modification
10.14	The dhcpv4 - snooping keyword is deprecated and replaced with dhcp - snooping .
10.09.1000	Command introduced for the 8360 Switch Series.
10.09	Command introduced for the 6000 and 6100 Switch Series.
10.07 or earlier	

Command Information

Platforms	Command context	Authority
8400	config	Administrators or local user group members with execution rights for this command.

dhcp-snooping authorized-server

Syntax

```
dhcp-snooping authorized-server <IP-ADDR> [vrf <VRF-NAME>]  
no dhcp-snooping authorized-server <IP-ADDR> [vrf <VRF-NAME>]
```

Description

Adds an authorized (trusted) DHCP server to a list of authorized servers for use by DHCP snooping. This command can be issued multiple times, adding a maximum of 20 authorized servers per VRF. By default, with an empty list of authorized servers, all DHCP servers are considered to be trusted for DHCP snooping purposes.



NOTE

The **mgmt** VRF cannot be used with this command.

The no form of this command deletes the specified DHCP server from the authorized list.

Parameter	Description
<code><IP-ADDR></code>	Specifies the IP address of the trusted DHCP server.
<code>vrf <VRF-NAME></code>	Specifies the VRF name. The name can be default or a configured VRF instance but it cannot be mgmt .

Usage

For authorized server lookup, the VRF is derived from the Switch Virtual Interface (SVI) configured for the incoming VLAN. If the SVI is not configured, the `default` VRF is assumed.

Examples

Adding DHCP servers 192.168.2.2, 192.168.2.3, and 192.168.2.10 to the authorized server list:

```
switch(config)# dhcp-snooping authorized-server 192.168.2.2
switch(config)# dhcp-snooping authorized-server 192.168.2.3 vrf default
switch(config)# dhcp-snooping authorized-server 192.168.2.10 vrf default
```

Removing DHCP server 192.168.2.3 from the authorized server list:

```
switch(config)# no dhcp-snooping authorized-server 192.168.2.3 vrf default
```

Command History

Release	Modification
10.14	The dhcpv4 - snooping keyword is deprecated and replaced with dhcp - snooping .
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8400	<code>config</code>	Administrators or local user group members with execution rights for this command.

dhcp-snooping event-log client

Syntax

```
dhcp-snooping event-log client
no dhcp-snooping event-log client
```

Description

This command enables or disables dhcp-snooping client level event logs that help with client telemetry on a remote management station such as HPE Aruba Networking Central. By default, client level event logs are disabled. The **no** form of this command disables client-level event logs for DHCP snooping after they are enabled. View these logged DHCP snooping events by issuing the command **show events -c dhcp-snooping**.



NOTE

For additional information on DHCP-related event logging, please refer to the Event Log Message Reference Guide.

Examples

Enabling DHCP client level event logs:

```
switch(config)# dhcp-snooping event-log client
```

Disabling external storage:

```
switch(config)# no dhcp-snooping event-log client
```

Command History

Release	Modification
10.14	The dhcpv4 - snooping keyword is deprecated and replaced with dhcp - snooping .
10.10	Command introduced.

Command Information

Platforms	Command context	Authority
8400	config	Administrators or local user group members with execution rights for this command.

dhcp-snooping external-storage

Syntax

```
dhcp-snooping external-storage volume <VOL-NAME> file <FILE-NAME>  
no dhcp-snooping external-storage volume <VOL-NAME> file <FILE-NAME>
```

Description

Configures external storage to be used for backing up IP bindings (used by DHCP snooping) to a file. When configured, the switch stores all the IP bindings in an external storage file so that they are retained after the switch restarts. When the switch restarts, it reads the IP bindings from the configured external storage file to populate its local cache.



NOTE

When both external storage and flash storage are configured to store DHCP snooping IP bindings, the external storage takes priority, and is used exclusively until it becomes unconfigured, at which time flash storage (if configured) is used. Later, if external storage is configured again, flash storage stops and external storage resumes.

The no form of this command disables the saving of IP bindings in an external storage file.

Parameter	Description
volume <VOL-NAME>	Specifies the name of the existing external storage volume where the IP bindings file will be saved. Before running the dhcp - snooping external - storage volume command, first create the external storage volume using command external - storage <VOLUME - NAME> . See External storage commands in the Command-Line Interface Guide .
file <FILE-NAME>	Specifies the file name to use for storing IP bindings. Maximum 255 characters.

Configuring IP bindings storage in file **dsnoop_ipbindings** on existing volume **dhcp_snoop**:

```
switch(config)# dhcp-snooping external-storage volume dhcp_snoop file  
dsnoop_ipbindings
```

Disabling external storage:

```
switch(config)# no dhcp-snooping external-storage volume dhcp_snoop
```

Disabling external storage when flash storage is also configured (note the message indicating that flash storage will be used):

```
switch(config)# no dhcp-snooping external-storage volume dhcp_snoop
dhcp-snooping will use flash storage to store IP Binding database
switch(config)#
```

Command History

Release	Modification
10.14	The dhcpx4 - snooping keyword is deprecated and replaced with dhcp - snooping .
10.08	Updated example with flash storage information.
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8400	config	Administrators or local user group members with execution rights for this command.

dhcp-snooping flash-storage

Syntax

```
dhcp-snooping flash-storage [delay <DELAY>]
no dhcp-snooping flash-storage [delay <DELAY>]
```

Description

Configures switch flash storage to be used for backing up client IP bindings (used by DHCP snooping). When flash storage is configured (and external storage is not already configured for this purpose), the switch stores the IP bindings in switch flash storage. When the switch restarts, it reads the IP bindings from the switch flash storage to populate its local cache.

Writing the IP bindings to flash storage only occurs after the configured delay and if there has been a change in client IP bindings. Writing is skipped when client IP bindings have not changed since the previous write.

Omitting **delay <DELAY>** sets the default delay of 900 seconds.



CAUTION

To reduce switch flash aging it is recommended that you use external storage (command **dhcp-snooping external-storage**) to backup DHCP snooping IP bindings. Alternatively, consider configuring flash storage with a substantial delay between writes.



NOTE

When both external storage and flash storage are configured to store DHCP snooping IP bindings, the external storage takes priority, and is used exclusively until it becomes unconfigured, at which time flash storage (if configured) is used. Later, if external storage is configured again, flash storage stops and external storage resumes.

The no form of this command disables the saving of IP bindings in flash storage.

Parameter	Description
<code>delay <DELAY></code>	Specifies the delay in seconds between writes (when necessary) to the flash storage, Default: 900. Range: 300 to 86400.

Examples

Configuring switch flash storage for DHCP snooping IP binding storage with a write delay of 1200 seconds:

```
switch(config)# dhcp-snooping flash-storage delay 1200
Warning: Using flash storage reduces switch lifetime. It is recommended to
use an external-storage.
Do you want to continue (y/n)? y
switch(config)#
```

Unconfiguring usage of switch flash storage for IP bindings :

```
switch(config)# no dhcp-snooping flash-storage
```

Command History

Release	Modification
10.14	The dhcpv4 - snooping keyword is deprecated and replaced with dhcp - snooping .
10.09.1000	Command introduced for the 8360 Switch Series.

Release	Modification
10.09	Command introduced for the 6000 and 6100 Switch Series.

Command Information

Platforms	Command context	Authority
8400	config	Administrators or local user group members with execution rights for this command.

dhcp-snooping max-bindings

Syntax

```
dhcp-snooping max-bindings <MAX-BINDINGS>
no dhcp-snooping max-bindings <MAX-BINDINGS>
```

Description

Sets the maximum number of DHCP bindings allowed on the selected interface. For all interfaces on which this command is not run, the default max binding is the maximum value of the range.

The no form of the command reverts max bindings for the selected interface to its default.

Parameter	Description
<MAX-BINDINGS>	Specifies the maximum number of DHCP bindings. Range: 1 to 4096.

Examples

Set the DHCP max bindings to 256 on interface 1/1/1:

```
switch(config)# interface 1/1/1
switch(config-if)# dhcp-snooping max-bindings 256
switch(config-if)# exit
switch(config)#
```

Revert DHCP max bindings to its default on interface 1/1/1:


```
switch(config)# interface 1/1/1
switch(config-if)# no dhcp-snooping max-bindings 256
switch(config-if)# exit
switch(config)#
```

Command History

Release	Modification
10.14	The dhcpv4 - snooping keyword is deprecated and replaced with dhcp - snooping .
10.09.1000	Command introduced for the 8360 Switch Series.
10.09	Command introduced for the 6000 and 6100 Switch Series.

Command Information

Platforms	Command context	Authority
8400	config-if	Administrators or local user group members with execution rights for this command.

dhcp-snooping option 82

Syntax

```
dhcp-snooping option 82 [remote-id {mac | subnet-ip | mgmt-ip}][untrusted-policy {drop | keep | replace}]
no dhcp-snooping option 82 [remote-id {mac | subnet-ip | mgmt-ip}][untrusted-policy {drop | keep | replace}]
```

Description

Configures the addition of option 82 DHCP relay information to DHCP client packets that are being forwarded on trusted ports. DHCP relay is enabled by default.

In the switch default state and when this command is entered without parameters (**dhcp-snooping option 82**), this default configuration is used:

```
dhcp-snooping option 82 remote-id mac untrusted-policy drop
```

When **remote-id** is omitted, its default (**mac**) is used. When **untrusted-policy** is omitted, its default (**drop**) is used.

The no form of this command disables DHCP snooping option 82.

Parameter	Description
<code>remote-id</code>	Specifies what address to use as the remote ID for the <code>replace</code> option of <code>untrusted-policy</code> . Specify one of these address types:
<code>mac</code>	The default. Uses the switch MAC address as the remote ID.
<code>subnet-ip</code>	Uses the IP address of the client VLAN as the remote ID.
<code>untrusted-policy</code>	Specifies what action to take for DHCP packets (with option 82) that are received on untrusted ports. Specify one of these actions:
<code>drop</code>	The default. Drop DHCP packets (with option 82) without forwarding them.
<code>keep</code>	Forward DHCP packets (with option 82).
<code>replace</code>	Replace the option 82 information in the DHCP packets with whatever is set for remote - id (one of: mac , subnet - ip , or mgmt - ip) and forward the packets.

Examples

Configuring DHCP snooping option 82 with the keep action:

```
switch(config)# dhcp-snooping option 82 untrusted-policy keep
```

Configuring DHCP snooping option 82 with `mgmt-ip` as the `remote-id` and the `replace` action:

```
switch(config)# dhcp-snooping option 82 remote-id mgmt-ip untrusted-policy replace
```

Disabling DHCP snooping option 82:

```
switch(config)# no dhcp-snooping option 82 untrusted-policy keep
```

Command History

Release	Modification
10.14	The dhcpv4 - snooping keyword is deprecated and replaced with dhcp - snooping .
10.09.1000	Command introduced for the 8360 Switch Series.
10.09	Command introduced for the 6000 and 6100 Switch Series.
10.07 or earlier	Command introduced

Command Information

Platforms	Command context	Authority
8400	config	Administrators or local user group members with execution rights for this command.

dhcp-snooping static-attributes

Syntax

```
dhcp-snooping static-attributes  
no dhcp-snooping static-attributes
```

Description

Enables storage of static attributes provided to the DHCP client by DHCP server during DHCP packet exchange. Disabled by default. When enabled, the following attributes are stored in OVSDB along with the client IP binding entry:

1. Name server IP addresses: DNS server IPs provided by the DHCP server to the client. Maximum: 3 per client.
2. Default gateway IP address: Router IP addresses provided by DHCP server to the client. Maximum: 3 per client.
3. Server IP address: IP address of the DHCP server that leased the IP to the client.

The **no** form of the command disables storing of client static attributes. After disabling, existing client static attributes will be flushed.

Examples

Enabling the storage of DHCP snooping static attributes:

```
switch(config) # dhcp-snooping static-attributes
```

Disabling the storage of DHCP snooping static attributes:

```
switch(config) # no dhcp-snooping static-attributes
```

Command History

Release	Modification
10.14	The dhcpx4 - snooping keyword is deprecated and replaced with dhcp - snooping .
10.10	Command introduced.

Command Information

Platforms	Command context	Authority
8400	config	Administrators or local user group members with execution rights for this command.

dhcp-snooping trust

Syntax

```
dhcp-snooping trust  
no dhcp-snooping trust
```

Description

Enables DHCP snooping trust on the selected port. Only server packets received on trusted ports are forwarded. All the ports are untrusted by default.

The **no** form of the command disables DHCP snooping trust on the selected port.

Examples

Enabling DHCP snooping trust on interface 2/2/1:

```
switch(config)# interface 2/2/1
switch(config-if)# dhcp-snooping trust
switch(config-if)# exit
switch(config)#
```

Disabling DHCP snooping trust on interface 2/2/1:

```
switch(config)# interface 2/2/1
switch(config-if)# no dhcp-snooping trust
switch(config-if)# exit
switch(config)#
```

Command History

Release	Modification
10.14	The dhcpv4 - snooping keyword is deprecated and replaced with dhcp - snooping .
10.09.1000	Command introduced for the 8360 Switch Series.
10.09	Command introduced for the 6000 and 6100 Switch Series.
10.07 or earlier	

Command Information

Platforms	Command context	Authority
8400	config-if	Administrators or local user group members with execution rights for this command.

dhcp-snooping verify mac

Syntax

```
dhcp-snooping verify mac
no dhcp-snooping verify mac
```

Description

This command enables verification of the hardware address field in DHCP client packets. When enabled, the DHCP client hardware address field and the source MAC address must be the same for packets received on untrusted ports or else the packet is dropped. This DHCP snooping MAC verification is enabled by default.

The **no** form of the command disables DHCP snooping MAC verification.

Examples

Enabling DHCP snooping MAC verification:

```
switch(config) # dhcp-snooping verify mac
```

Disabling DHCP snooping MAC verification:

```
switch(config) # no dhcp-snooping verify mac
```

Command History

Release	Modification
10.14	The dhcpv4 - snooping keyword is deprecated and replaced with dhcp - snooping .
10.09.1000	Command introduced for the 8360 Switch Series.
10.09	Command introduced for the 6000 and 6100 Switch Series.
10.07 or earlier	

Command Information

Platforms	Command context	Authority
8400	config	Administrators or local user group members with execution rights for this command.

show dhcp-snooping

Syntax

```
show dhcp-snooping [vsx-peer]
```

Description

Shows the DHCP snooping configuration.

Parameter	Description
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Examples

Showing the DHCP snooping configuration:

```
switch# show dhcp-snooping
dhcp-snooping Information
dhcp-snooping                : Yes          Verify MAC Address      : Yes
Allow Overwrite Binding      : No           Enabled VLANs           :
1-100
Static Attributes            : Yes
Client Event Logs            : Yes
Option 82 Configurations
Untrusted Policy              : replace      Insertion                : Yes
Option 82 Remote-id          : mac
External Storage Information
Volume Name                   : ipbinding
File Name                     : ipv4Bindings
Inactive Since                : 01:23:20 09/10/2021
Error                         : File Write Failure
Flash Storage Information
File Write Delay              : 300 seconds
Active Storage                : External
Authorized Server Configurations
VRF                            Authorized Servers
-----
default                        1.1.10.3
default                        10.10.10.1
default                        10.10.10.56
default                        200.10.10.3
green                          1.1.10.3
```

```

green          1.10.10.3
green          10.10.100.3
red            192.168.122.53
red            192.168.122.121

```

Port Information

Port	Trust	Max Bindings	Static Bindings	Dynamic Bindings
-----	-----	-----	-----	-----
1/1/2	Yes	5000	50	0
1/1/3	Yes	8192	0	0
1/1/5	Yes	8192	0	22
1/1/16	No	100	0	0
10/10/10	No	8100	320	200
lag120	No	512	0	0

Command History

Release	Modification
10.14	The dhcpv4 - snooping keyword is deprecated and replaced with dhcp - snooping .
10.09.1000	Command introduced for the 8360 Switch Series.
10.09	Command introduced for the 6000 and 6100 Switch Series.
10.08	Updated example with flash storage information.
10.07 or earlier	

Command Information

Platforms	Command context	Authority
8400	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

```
show dhcp-snooping binding
```


Syntax

```
show dhcp-snooping binding [vsx-peer][detail]
```

Description

Shows the DHCP snooping binding configuration.

Parameter	Description
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.
detail	Shows detailed information for active IP bindings on the system.

Examples

Showing the DHCP snooping binding configuration:

```
switch(config)# show dhcp-snooping binding
  MacAddress          IP          VLAN  Interface  Time-Left
  -----
aa:b1:c1:dd:ee:ff    10.2.3.4      1     1/1/2      582
aa:b2:c2:dd:ee:ff    10.2.3.5      1     1/1/2      584
```

Showing detailed information for active IP bindings:

```
switch(config)# show dhcp-snooping binding detail
VLAN Id : 2, MAC : 00:50:56:96:74:46
  IP          Interface  Time-Left
  -----
100.1.2.100   1/1/23      194
Static Attributes:
Default Router : 100.1.2.1, 192.1.1.1, 1.1.1.2
Server IP     : 10.1.84.2
Name Servers   : 192.1.1.2, 2.2.2.2, 1.1.1.1
VLAN Id : 3, MAC : 00:50:56:96:e5:8e
  IP          Interface  Time-Left
  -----
100.1.3.100   2/1/22      145
Static Attributes:
Default Router : 100.1.3.1, 192.1.1.1, 1.1.1.2
Server IP     : 10.1.84.2
```

```

Name Servers      : 192.1.1.2, 2.2.2.2, 1.1.1.1
VLAN Id : 3, MAC : 00:11:01:00:00:03
IP                Interface  Time-Left
-----
100.1.3.99        2/1/24      137
Static Attributes:
Default Router    : 100.1.3.1, 192.1.1.1, 1.1.1.2
Server IP         : 10.1.84.2
Name Servers      :192.168.0.1, 192.168.1.1, 192.168.2.1

```

Command History

Release	Modification
10.14	The dhcipv4 - snooping keyword is deprecated and replaced with dhcp - snooping .
10.10	Detail parameter added.
10.09.1000	Command introduced for the 8360 Switch Series.
10.09	Command introduced for the 6000 and 6100 Switch Series.
10.07 or earlier	

Command Information

Platforms	Command context	Authority
8400	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show dhcp-snooping statistics

Syntax

```
show dhcp-snooping statistics [vsx-peer]
```

Description

Shows the DHCP snooping statistics.

Parameter	Description
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Examples

Showing the DHCP snooping statistics:

```
switch(config)# show dhcp-snooping statistics
```

Packet-Type	Action	Reason	Count
server	forward	from trusted port	5425
client	forward	to trusted port	3895
server	drop	received on untrusted port	117
server	drop	unauthorized server	214
client	drop	destination on untrusted port	78
client	drop	untrusted option 82 field	85
client	drop	bad DHCP release request	0
client	drop	failed verify MAC check	5
client	drop	failed on max-binding limit	15

Command History

Release	Modification
10.14	The dhcpv4 - snooping keyword is deprecated and replaced with dhcp - snooping .
10.09.1000	Command introduced for the 8360 Switch Series.
10.09	Command introduced for the 6000 and 6100 Switch Series.
10.07 or earlier	

Command Information

Platforms	Command context	Authority
8400	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

DHCPv6 snooping commands

Subtopics

DHCPv6 snooping commands

DHCPv6 snooping commands

Select a command from the list in the left navigation menu.

Subtopics

- clear dhcpv6-snooping binding
- clear dhcpv6-snooping guard-policy statistics
- clear dhcpv6-snooping statistics
- dhcpv6-snooping
- dhcpv6-snooping guard-policy
- dhcpv6-snooping (in config-vlan context)
- dhcpv6-snooping authorized-server
- dhcpv6-snooping event-log client
- dhcpv6-snooping external-storage
- dhcpv6-snooping flash-storage
- dhcpv6-snooping max-bindings
- dhcpv6-snooping trust
- match client prefix-list
- match server access-list
- preference
- show dhcpv6-snooping guard-policy
- show dhcpv6-snooping guard-policy interface
- show dhcpv6-snooping guard-policy vlan
- show dhcpv6-snooping

show dhcpv6-snooping binding
show dhcpv6-snooping statistics

clear dhcpv6-snooping binding

Syntax

```
clear dhcpv6-snooping binding {all | ip <IPV6-ADDR> vlan <VLAN-ID> |  
interface <IFNAME> | vlan <VLAN-ID>}
```

Description

Clears DHCPv6 snooping binding entries.

Parameter	Description
all	Specifies that all DHCPv6 binding information is to be cleared.
ip <IPV6-ADDR> vlan <VLAN-ID>	Specifies the IPv6 address and VLAN for which all DHCPv6 binding information is to be cleared.
interface <IFNAME>	Specifies the interface for which all DHCPv6 binding information is to be cleared.
vlan <VLAN-ID>	Specifies the VLAN for which all DHCPv6 binding information is to be cleared. Range: 1 to 4094.

Examples

Clearing all DHCPv6 binding information for 5000::1 vlan 1:

```
switch(config)# clear dhcpv6-snooping binding ip 5000::1 vlan 1
```

Clearing all DHCPv6 binding information for interface 1/1/10:

```
switch(config)# clear dhcpv6-snooping binding interface 1/1/10
```

Clearing all DHCPv6 binding information for VLAN 10:

```
switch(config)# clear dhcpv6-snooping binding vlan 10
```

Clearing all DHCPv6 binding information:

```
switch(config)# clear dhcpv6-snooping binding all
```

Command History

Release	Modification
10.09.1000	Command introduced for the 8360 Switch Series.
10.09	Command introduced for the 6000 and 6100 Switch Series.
10.07 or earlier	

Command Information

Platforms	Command context	Authority
8400	Operator (<code>></code>) or Manager (<code>#</code>)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (<code>></code>) only.

clear dhcpv6-snooping guard-policy statistics

Syntax

```
clear dhcpv6-snooping guard-policy statistics [vlan <VLAN-ID> | interface <INTERFACE-NAME>]
```

Description

Clears all DHCPv6 snooping guard policy statistics from the specified VLAN or interface.

Parameter	Description
<code><VLAN-ID></code>	Specifies the VLAN ID. Range: 1 - 4094.
<code><INTERFACE-NAME></code>	Specifies the interface name.

Examples

Clearing all DHCPv6 snooping guard policy statistics from VLAN 100:

```
switch# clear dhcpv6-snooping guard-policy statistics vlan 100
```

Clearing all DHCPv6 snooping guard policy statistics from interface 1/1/10:

```
switch# clear dhcpv6-snooping guard-policy statistics interface 1/1/10
```

Command History

Release	Modification
10.10	Command introduced.

Command Information

Platforms	Command context	Authority
8400	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

clear dhcpv6-snooping statistics

Syntax

```
clear dhcpv6-snooping statistics
```

Description

Clears all DHCPv6 snooping statistics.

Examples

Clear all DHCPv6 snooping statistics:

```
switch# clear dhcpv6-snooping statistics
```

Command History

Release	Modification
10.09.1000	Command introduced for the 8360 Switch Series.
10.09	Command introduced for the 6000 and 6100 Switch Series.
10.07 or earlier	

Command Information

Platforms	Command context	Authority
8400	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

dhcpv6-snooping

Syntax

```
dhcpv6-snooping  
no dhcpv6-snooping
```

Description

Enables DHCPv6 snooping. DHCPv6 snooping is disabled by default. DHCPv6 snooping is not supported on the management interface.

The no form of the command disables DHCPv6 snooping, flushing all the IP bindings learned since DHCPv6 snooping was enabled.

Examples

Enabling DHCPv6 snooping:

```
switch(config) # dhcpv6-snooping
```

Disabling DHCPv6 snooping:

```
switch(config) # no dhcpv6-snooping
```


Command History

Release	Modification
10.09.1000	Command introduced for the 8360 Switch Series.
10.09	Command introduced for the 6000 and 6100 Switch Series.
10.07 or earlier	

Command Information

Platforms	Command context	Authority
8400	config	Administrators or local user group members with execution rights for this command.

dhcpv6-snooping guard-policy

Syntax

```
dhcpv6-snooping guard-policy <POLICY-NAME>  
no dhcpv6-snooping guard-policy <POLICY-NAME>
```

Description

Configures a DHCPv6 snooping guard policy with the given name and enters the guard policy configuration context.

The no form of the command disables the specified guard policy.

Parameter	Description
<POLICY-NAME>	Specifies the name of the DHCPv6 snooping guard policy. Maximum length: 64.

Examples

Creating the DHCPv6 snooping guard policy name pol1:

```
switch(config)# dhcpv6-snooping guard-policy pol1  
switch(config-guard-policy-pol1)#
```

Deleting the DHCPv6 snooping guard policy named pol1:

```
switch(config)# no dhcpv6-snooping guard-policy pol1
```

Creating the DHCPv6 snooping guard policy name pol1 on interface 1/1/1:



NOTE

The DHCPv6 snooping guard policy applied on the port takes priority over the policy applied over VLAN.

```
switch(config)# interface 1/1/1  
switch(config-if)# dhcpv6-snooping guard-policy pol1
```

Creating the DHCPv6 snooping guard policy name pol1 on a VLAN:

```
switch(config)# vlan 100  
switch(config-vlan-100)# dhcpv6-snooping guard-policy pol1
```

Command History

Release	Modification
10.10	Command introduced.

Command Information

Platforms	Command context	Authority
8400	config config-if config-dhcpv6-guard-policy config-vlan-<VLAN-ID>	Administrators or local user group members with execution rights for this command.

dhcpv6-snooping (in config-vlan context)

Syntax

```
dhcpv6-snooping
no dhcpv6-snooping
```

Description

Enables DHCPv6 snooping in the `config-vlan` context. DHCPv6 snooping is disabled by default for all VLANs.

The `no` form of the command disables DHCPv6 snooping on the specified VLAN, flushing all the IPv6 bindings learned for this VLAN since DHCPv6 snooping was enabled for this VLAN.

Examples

Enabling DHCPv6 snooping on VLAN 100:

```
switch(config)# vlan 100
switch(config-vlan-100)# dhcpv6-snooping
switch(config-vlan-100)# exit
switch(config)#
```

Disabling DHCPv6 snooping on VLAN 100:

```
switch(config)# vlan 100
switch(config-vlan-100)# no dhcpv6-snooping
switch(config-vlan-100)# exit
switch(config)#
```

Command History

Release	Modification
10.09.1000	Command introduced for the 8360 Switch Series.
10.09	Command introduced for the 6000 and 6100 Switch Series.
10.07 or earlier	

Command Information

Platforms	Command context	Authority
8400	<code>config-vlan</code>	Administrators or local user group members with execution rights for this command.

dhcpv6-snooping authorized-server

Syntax

```
dhcpv6-snooping authorized-server <IPv6-ADDR> [vrf <VRF-NAME>]  
no dhcpv6-snooping authorized-server <IPv6-ADDR> [vrf <VRF-NAME>]
```

Description

Adds an authorized (trusted) DHCPv6 server to a list of authorized servers for use by DHCPv6 snooping. This command can be issued multiple times, adding a maximum of 20 authorized servers per VRF. By default, with an empty list of authorized servers, all DHCPv6 servers are considered to be trusted for DHCPv6 snooping purposes.



NOTE

The `mgmt` VRF cannot be used with this command.



NOTE

Configure the link local IPv6 address instead of global IPv6 address of the DHCPv6 server as the authorized-server. For example:

```
switch(config)# dhcpv6-snooping authorized-server  
fe80::2ca4:fa40:d4cd:bc2f
```

The `no` form of this command deletes the specified DHCPv6 server from the authorized list.

Parameter	Description
<code><IPv6-ADDR></code>	Specifies the IPv6 address of the trusted DHCPv6 server.
<code>vrf <VRF-NAME></code>	Specifies the VRF name. The name can be <code>default</code> or a configured VRF instance but it cannot be <code>mgmt</code> .

Usage

For authorized server lookup, the VRF is derived from the Switch Virtual Interface (SVI) configured for the incoming VLAN. If the SVI is not configured, the `default` VRF is assumed.

Examples

Adding DHCP servers ABCD:5ACD::2000, and ABCD:5ACD::2010 to the authorized server list:

```
switch(config)# dhcpv6-snooping authorized-server ABCD:5ACD::2000 vrf
default
switch(config)# dhcpv6-snooping authorized-server ABCD:5ACD::2010 vrf
default
```

Removing DHCP server ABCD:5ACD::2000 from the authorized server list:

```
switch(config)# no dhcpv6-snooping authorized-server ABCD:5ACD::2000 vrf
default
```

Command History

Release	Modification
10.07 or earlier	Command introduced

Command Information

Platforms	Command context	Authority
8400	config	Administrators or local user group members with execution rights for this command.

dhcpv6-snooping event-log client

Syntax

```
dhcpv6-snooping event-log client
no dhcpv6-snooping event-log client
```

Description

This command enables or disables DHCPv6 snooping client level event logs that help with client telemetry on a remote management station such as HPE Aruba Networking Central. By default, client level event logs are disabled. The **no** form of this command disables client-level event logs for DHCPv6 snooping after they

are enabled. View these logged DHCPv6 snooping events by issuing the command `show events -c dhcpv6-snooping`.



NOTE

For additional information on DHCP-related event logging, please refer to the Event Log Message Reference Guide.

Examples

Enabling DHCPv6 client level event logs:

```
switch(config)# # dhcpv6-snooping event-log client
```

Disabling external storage:

```
witch(config)# # no dhcpv6-snooping event-log client
```

Command History

Release	Modification
10.10	Command introduced.

Command Information

Platforms	Command context	Authority
8400	config	Administrators or local user group members with execution rights for this command.

dhcpv6-snooping external-storage

Syntax

```
dhcpv6-snooping external-storage volume <VOL-NAME> file <FILE-NAME>
no dhcpv6-snooping external-storage volume <VOL-NAME> file <FILE-NAME>
```

Description

Configures external storage to be used for backing up IPv6 bindings (used by DHCPv6 snooping) to a file. When configured, the switch stores all the IP bindings in an external storage file so that they are retained

after the switch restarts. When the switch restarts, it reads the IPv6 bindings from the configured external storage file to populate its local cache.



NOTE

When both external storage and flash storage are configured to store DHCP snooping IP bindings, the external storage takes priority, and is used exclusively until it becomes unconfigured, at which time flash storage (if configured) is used. Later, if external storage is configured again, flash storage stops and external storage resumes.

The no form of this command disables the saving of IPv6 bindings in an external storage file.

Parameter	Description
<code>volume <VOL-NAME></code>	Specifies the name of the existing external storage volume where the IPv6 bindings file will be saved. Before running the <code>dhcpv6-snooping external-storage volume</code> command, first create the external storage volume using command <code>external-storage <VOLUME-NAME></code> . See External storage commands in the Command-Line Interface Guide.
<code>file <FILE-NAME></code>	Specifies the file name to use for storing IPv6 bindings. Maximum 255 characters.

Examples

Configuring IPv6 bindings storage in file `ipv6Bindings` on existing volume `dhcp_snoop`:

```
switch(config)# dhcpv6-snooping external-storage volume dhcp_snoop file
ipv6Bindings
```

Disabling external storage:

```
switch(config)# no dhcpv6-snooping external-storage volume dhcp_snoop
```

Disabling external storage when flash storage is also configured (note the message indicating that flash storage will be used):

```
switch(config)# no dhcpv6-snooping external-storage volume dhcp_snoop
DHCPv6-Snooping will use flash storage to store IP Binding database
switch(config)#
```

Command History

Release	Modification
10.08	Updated example with flash storage information.
10.07 or earlier	Command introduced

Command Information

Platforms	Command context	Authority
8400	config	Administrators or local user group members with execution rights for this command.

dhcpv6-snooping flash-storage

Syntax

```
dhcpv6-snooping flash-storage [delay <DELAY>]  
no dhcpv6-snooping flash-storage [delay <DELAY>]
```

Description

Configures switch flash storage to be used for backing up client IP bindings (used by DHCPv6 snooping). When flash storage is configured (and external storage is not already configured for this purpose), the switch stores the IP bindings in switch flash storage. When the switch restarts, it reads the IP bindings from the switch flash storage to populate its local cache.

Writing the IP bindings to flash storage only occurs after the configured delay and if there has been a change in client IP bindings. Writing is skipped when client IP bindings have not changed since the previous write.

Omitting `delay <DELAY>` sets the default delay of 900 seconds.



CAUTION

To reduce switch flash aging it is recommended that you use external storage (command `dhcpv6-snooping external-storage`) to backup DHCP snooping IP bindings. Alternatively, consider configuring flash storage with a substantial delay between writes.



NOTE

When both external storage and flash storage are configured to store DHCP snooping IP bindings, the external storage takes priority, and is used exclusively until it becomes unconfigured, at which time flash storage (if configured) is used. Later, if external storage is configured again, flash storage stops and external storage resumes.

The no form of this command disables the saving of IP bindings in flash storage.

Parameter	Description
<code>delay <DELAY></code>	Specifies the delay in seconds between writes (when necessary) to the flash storage, Default: 900. Range: 300 to 86400.

Examples

Configuring switch flash storage for DHCP snooping IP binding storage with a write delay of 1200 seconds:

```
switch(config)# dhcpv6-snooping flash-storage delay 1200
Warning: Using flash storage reduces switch lifetime. It is recommended to
use an external-storage.
Do you want to continue (y/n)? y
switch(config)#
```

Unconfiguring usage of switch flash storage for IP bindings :

```
switch(config)# no dhcpv6-snooping flash-storage
```

Command History

Release	Modification
10.07	Command introduced

Command Information

Platforms	Command context	Authority
8400	config	Administrators or local user group members with execution rights for this command.

dhcpv6-snooping max-bindings

Syntax

```
dhcpv6-snooping max-bindings <MAX-BINDINGS>
no dhcpv6-snooping max-bindings <MAX-BINDINGS>
```

Description

Sets the maximum number of DHCPv6 bindings allowed on the selected interface. For all interfaces on which this command is not run, the default max binding is the maximum value of the range.

The no form of the command reverts max bindings for the selected interface to its default.

Parameter	Description
<MAX-BINDINGS>	Specifies the maximum number of DHCP bindings. Range: 1 to 4096.

Examples

Set the DHCPv6 max bindings to 256 on interface 1/1/1:

```
switch(config)# interface 1/1/1
switch(config-if)# dhcpv6-snooping max-bindings 256
switch(config-if)# exit
switch(config)#
```

Revert DHCPv6 max bindings to its default on interface 1/1/1:

```
switch(config)# interface 1/1/1
switch(config-if)# no dhcpv6-snooping max-bindings 256
switch(config-if)# exit
switch(config)#
```

Command History

Release	Modification
10.07	Command introduced

Command Information

Platforms	Command context	Authority
8400	config-if	Administrators or local user group members with execution rights for this command.

dhcpv6-snooping trust

Syntax

```
dhcpv6-snooping trust
no dhcpv6-snooping trust
```

Description

Enables DHCPv6 snooping trust on the selected interface. Only server packets received on trusted interfaces are forwarded. All the interfaces are untrusted by default.

The no form of the command disables DHCPv6 snooping trust on the selected interface.

```
config-if
```

Examples

Enabling DHCPv6 snooping trust on interface 2/2/1:

```
switch(config)# interface 2/2/1
switch(config-if)# dhcpv6-snooping trust
switch(config-if)# exit
switch(config)#
```

Disabling DHCPv6 snooping trust on interface 2/2/1:

```
switch(config)# interface 2/2/1
switch(config-if)# no dhcpv6-snooping trust
switch(config-if)# exit
switch(config)#
```

Command History

Release	Modification
10.07	Command introduced

Command Information

Platforms	Command context	Authority
8400	config	Administrators or local user group members with execution rights for this command.

match client prefix-list

Syntax

```
match client prefix-list <PREFIX-LIST-NAME>
no match client prefix-list <PREFIX-LIST-NAME>
```

Description

Configures a prefix-list for the DHCPv6 snooping guard policy enabling the policy to allow the assigned IPv6 addresses within a specific prefix range.

The **no** form of the command removes a prefix list from the DHCPv6 snooping guard policy.

Parameter	Description
<PREFIX-LIST-NAME>	Specifies the name of the IPv6 prefix list.

Examples

Adding a prefix list named pref1 to the pol1 DHCPv6 snooping guard policy:

```
switch(config)# ipv6 prefix-list pref1 permit 2001:db8::/64 le 128
switch(config)# dhcpv6-snooping guard-policy pol1
switch(config-dhcpv6-guard-policy)# match client prefix-list pref1
```

Deleting the prefix list named pref1 from the pol1 DHCPv6 snooping guard policy:

```
switch(config)# dhcpv6-snooping guard-policy pol1
switch(config-dhcpv6-guard-policy)# no match client prefix-list <ipv6-
prefix-list-name>
```

Command History

Release	Modification
10.10	Command introduced.

Command Information

Platforms	Command context	Authority
8400	config-dhcpv6-guard-policy	Administrators or local user group members with execution rights for this command.

match server access-list

Syntax

```
match server access-list <ACL-NAME>
no match server access-list <ACL-NAME>
```

Description

Configures an access list to a DHCPv6 snooping guard policy, enabling the DHCPv6 snooping guard policy to allow or deny the specific DHCP server to assign an IPv6 address. If no filters are applied, DHCP server traffic from any source IP address is allowed in the trusted port.

The **no** form of the command removes the specified access list from the DHCPv6 snooping guard policy.

Parameter	Description
<ACL-NAME>	Specifies the name of the IPv6 access list to be matched.

Examples

Creating an access-list acl1 on DHCPv6 snooping guard policy pol1 :

```
switch(config) # dhcpv6-snooping guard-policy pol1
switch(config-dhcpv6-guard-policy) # match server access-list acl1
```

Deleting the access list acl1 from the DHCPv6 snooping guard policy pol1:

```
switch(config) # dhcpv6-snooping guard-policy pol1
switch(config-dhcpv6-guard-policy) # no match server access-list acl1
```

Command History

Release	Modification
10.10	Command introduced.

Command Information

Platforms	Command context	Authority
8400	config-dhcpv6-guard-policy	Administrators or local user group members with execution rights for this command.

preference

Syntax

```
preference [minimum | maximum ] <VALUE>
no preference
```

Description

Enables a DHCPv6 snooping guard policy to allow or deny the DHCPv6 servers in the specified server preference range. If not configured the minimum preference is set to 0 and maximum preference is set to 255.

The **no** form of the command removes the server preference limits on the specified DHCPv6 snooping guard policy.

Parameter	Description
<code>minimum <VALUE></code>	Specifies the minimum value for the server preference range. Range: 1-255.
<code>maximum <VALUE></code>	Specifies the maximum value for the server preference range. Range: 1-255.

Examples

Setting the minimum and maximum server preference range to 6-250 on DHCPv6 snooping guard policy pol1:

```
switch(config)# dhcpv6-snooping guard-policy pol1
switch(config-dhcpv6-guard-policy)# preference min 6
switch(config-dhcpv6-guard-policy)# preference max 250
```

Disabling the server preference range on DHCPv6 snooping guard policy pol1:

```
switch(config)# dhcpv6-snooping guard-policy pol1
switch(config-dhcpv6-guard-policy)# no preference
```

Command History

Release	Modification
10.10	Command introduced.

Command Information

Platforms	Command context	Authority
8400	config-dhcpv6-guard-policy	Administrators or local user group members with execution rights for this command.

show dhcpv6-snooping guard-policy

Syntax

```
show dhcpv6-snooping guard-policy[<POLICY_NAME>] [vsx-peer]
```

Description

Shows the DHCPv6 snooping guard policy configuration.

Parameter	Description
<POLICY-NAME>	Specifies the DHCPv6 snooping guard policy for which the information is displayed.
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Examples

Showing the DHCPv6 snooping guard policy configuration:

```
switch# show dhcpv6-snooping guard-policy
DHCPv6-Snooping guard-policy Information
  DHCPV6 Guard Policy name      : POL1
  Attached Access List          : ACL1
  Attached Prefix List          : PRF1
  Preference Range              : 0-255
  Applied on VLAN               : 5,7
  Applied on Port
```



```

DHCPV6 Guard Policy name      : POL2
Attached Access List          : ACL2
Attached Prefix List          : PRF2
Preference Range              : 2-20
Applied on VLAN
Applied on Port                : 1/1/1, 1/1/2
DHCPV6 Guard Policy name      : POL3
Attached Access List          : ACL3
Attached Prefix List          : PRF3
Preference Range              : 3-60
Applied on VLAN                : 4,6
Applied on Port

```

Showing the DHCPv6 snooping guard policy configuration for the policy named POLICY_NAME1:

```

switch# show dhcpv6-snooping guard-policy POLICY_NAME1
DHCPv6-Snooping guard-policy Information
=====
DHCPV6 Guard Policy name      : POLICY_NAME1
Attached Access List          : ACL1
Attached Prefix List          : PRF1
Preference Range              : 0-255
    vsx-sync
Applied on VLAN                : 5,7
Applied on Port                : 1/1/1, 1/1/2

```

Command History

Release	Modification
10.10	Command introduced.

Command Information

Platforms	Command context	Authority
8400	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show dhcpv6-snooping guard-policy interface

Syntax

```
show dhcpv6-snooping guard-policy [interface <INTERFACE-NAME>] [vsx-peer]
```

Description

Shows the DHCPv6 snooping guard policy configuration and statistics for the specified interface.

Parameter	Description
<INTERFACE-NAME>	Specifies the interface name for which the DHCPv6 guard counter information is displayed.
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Examples

Showing the DHCPv6 snooping guard policy configuration and statistics for interface 1/1/1:

```
switch# show dhcpv6-snooping guard-policy int 1/1/1
DHCPv6 Guard Policy Applied      : poll
DHCPv6 Guard Policy Counters
=====
DHCPv6 Packets Received          : 20
DHCPv6 Packets Forwarded         : 5
DHCPv6 Packets Dropped           : 15 [Total]
                                Access list error      [7]
                                Prefix list error      [8]
                                Server preference error [0]
```

Command History

Release	Modification
10.10	Command introduced.

Command Information

Platforms	Command context	Authority
8400	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show dhcpv6-snooping guard-policy vlan

Syntax

```
show dhcpv6-snooping guard-policy [vlan <VLAN-ID>] [vsx-peer]
```

Description

Shows the DHCPv6 snooping guard policy configuration and statistics for the specified VLAN.

Parameter	Description
<VLAN-ID>	Specifies the VLAN ID for which the DHCPv6 guard counter information is displayed.
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Examples

Showing the DHCPv6 snooping guard policy configuration and statistics for VLAN 100:

```
switch# show dhcpv6-snooping guard-policy vlan 2
DHCPv6 Guard Policy Applied      : poll
DHCPv6 Guard Policy Counters
=====
DHCPv6 Packets Received          : 20
DHCPv6 Packets Forwarded         : 5
DHCPv6 Packets Dropped           : 15 [Total]
Access list error                 [0]
```

Prefix list error	[8]
Server preference error	[7]

Command History

Release	Modification
10.10	Command introduced.

Command Information

Platforms	Command context	Authority
8400	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show dhcpv6-snooping

Syntax

```
show dhcpv6-snooping [vsx-peer]
```

Description

Shows the DHCPv6 snooping configuration.

Parameter	Description
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Examples

Showing the DHCPv6 snooping configuration:

```
switch# show dhcpv6-snooping
DHCPv6-Snooping Information
```

```

DHCPv6-Snooping      : Yes    Enabled VLANs      : 1,5,7,100-110
Trusted Port Bindings Enabled VLANs :
Client Event Logs      : Yes
External Storage Information
  Volume Name          : dhcp_snoop
  File Name             : ip_binding
  Inactive Since        : 01:23:20 09/10/2021
  Error                 : Failed to write external storage
Flash Storage Information
  File Write Delay      : 300 seconds
  Active Storage        : External
Authorized Server Configurations
VRF                      Authorized Servers
-----
default
2001:0db8:85a3:0000:0000:8a2e:0370:7334
default                  2002::2
default                  2004::1
red                      2002::1
red                      2002::2
red                      2002::9
green                    5000::1
green                    5000::2
green                    5000::3
green                    5000::7
green                    5000::8
Port Information

```

Port	Trust	Max Bindings	Static Bindings	Dynamic Bindings
1/1/2	Yes	0	0	0
1/1/3	Yes	0	3	0
1/1/5	Yes	0	22	0
1/1/16	No	256	0	20
10/10/10	No	256	12	7
lag120	No	256	3	0

Command History

Release

Modification

10.08	Updated example with flash storage information.
-------	---

Release	Modification
10.07 or earlier	Command introduced

Command Information

Platforms	Command context	Authority
8400	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show dhcpv6-snooping binding

Syntax

```
show dhcpv6-snooping binding [vsx-peer]
```

Description

Shows the DHCPv6 snooping binding configuration.

Parameter	Description
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Examples

Showing the DHCPv6 snooping binding configuration:

```
switch# show dhcpv6-snooping binding
IP Binding Information
=====
MAC-ADDRESS          IPV6-ADDRESS          VLAN
INTERFACE    TIME-LEFT
-----
00:50:56:96:e4:cf  aaaa:bbbb:cccc:dddd:eeee:1234:5678:abcd  1
```

1/1/1	584	
00:50:56:96:04:4d	1000::3	134
1/1/2	435	
00:50:56:96:d8:3d	2000:1000::4	2002
lag123	21234	

Command History

Release	Modification
10.09.1000	Command introduced for the 8360 Switch Series.
10.09	Command introduced for the 6000 and 6100 Switch Series.
10.07 or earlier	

Command Information

Platforms	Command context	Authority
8400	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show dhcpv6-snooping statistics

Syntax

```
show dhcpv6-snooping statistics [vsx-peer]
```

Description

Shows the DHCPv6 snooping statistics.

Parameter	Description
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Examples

Showing the DHCPv6 snooping statistics:

```
switch(config)# show dhcpv6-snooping statistics
```

Packet-Type	Action	Reason	Count
server	forward	from trusted port	12
client	forward	to trusted port	20
server	drop	received on untrusted port	5
server	drop	unauthorized server	4
client	drop	destination on untrusted port	2
client	drop	bad DHCP release request	5
server	drop	relay reply on untrusted port	2
client	drop	failed on max-binding limit	5

Command History

Release	Modification
10.09.1000	Command introduced for the 8360 Switch Series.
10.09	Command introduced for the 6000 and 6100 Switch Series.
10.07 or earlier	

Command Information

Platforms	Command context	Authority
8400	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Troubleshooting

DHCP client not receiving IP

1. Trusted port configuration
Check if the server reachable port is configured as trusted.
2. Validate Packet drop counters

Use `show dhcpv4-snooping statistics` and `show dhcpv6-snooping statistics` commands to view the packet drop counters. This helps to identify a possible reason for the termination of DHCP packet exchange between client and server. A few possible reasons are listed below:

- Maximum binding limit reached
 - System-wide limit—The maximum binding limit is shared between DHCPv4-Snooping, DHCPv6-Snooping, ND-Snooping, and IP-Source-Bindings. On reaching the limit, DHCP client requests get dropped. To check the limit, use the `show capacities ip-bindings` command.
 - Per port limit: This is a per port configurable value for a protocol. On reaching the limit, the subsequent client requests are dropped.
- Conflicts with IP-Source-Bindings—User-configured IP-Source-Bindings are given priority over dynamically learned bindings. Validate if the dynamic client is conflicting with any of the existing IP-Source-Binding.
- Authorized server check failures—Authorized server configuration is global. When one or more authorized servers are set up, all server replies should come from one of the authorized server IP addresses.
- CoPP packet drops—If the rate of the DHCP packets entering is higher than the configured value, excessive packets are dropped by CoPP. Check CoPP statistics for the DHCP class and configure the value accordingly. Higher CoPP values could cause other protocols to misbehave depending on the platform.

3. Server configuration and reachability

Validate the following to ensure that the DHCP Server is reachable and configured correctly.

- a. Check that the server is reachable over one of the trusted ports.
- b. Check the server logs to understand the DHCP exchange status between client and server.
- c. Check if DHCP Server pools are exhausted.

4. Option-82 configuration issues (Specific to DHCP Snooping IPv4)

- a. This configuration usually arises when DHCP Snooping and Relay are configured on the same VLAN. Option 82 at DHCP Snooping IPv4 should be disabled when configured for Inter-VRF DHCP-Relay. Use `no dhcpv4-snooping option 82` command to disable the functionality.
- b. Option 82 is enabled by default, and the drop policy is set. If client packets are received with option 82, then they are dropped with this configuration.

5. Server and client are connected to same the VLAN

- a. Check if the server is reachable on the same VLAN as the client.

- b. If the server is on a different L3 network, configure DHCP-Relay to forward the packets between the client and server.
6. Authorized server configurations—When configured, the server assigning IP address should be one of the IP addresses from the authorized server list.
In DHCP snooping IPv6, if DHCP Relay is between a test device and a server, the authorised server configuration should include a link to the local IP address of the relay interface. This is because, while forwarding the server's response to the client, it will stamp a link to the local IP address as the source IP of the packet.

IP-Binding mismatch in VSX topologies

1. Both primary and secondary VSX peers should have the same clock value. If not, there is a possibility of inconsistent ip-bindings that could result in ip-binding sync in a loop. There is no straight-forward way to check the inconsistencies but by looking at the number of bindings and debug log analysis
2. Ensure the ISL state is up and operational.

DHCP client IP traffic is dropped at data path

1. This can happen when IP-Source-Lockdown is used along with DHCP snooping. Ensure IP-Bindings are learned for clients that are experiencing traffic failure issues
2. Check the hardware programming state of the IP-Binding entry by IP-Source-Lockdown. Use `show ipv4 source-lockdown bindings` or `show ipv6 source-lockdown bindings` commands.

DHCP Options

A number of deployments provide access to WAN or public network only through a proxy server for the network security. This section provides information about the various methods of HTTP proxy configuration on the switch. The HTTP proxy configured is used to connect to HPE Aruba Networking Central as per the zero-touch provisioning requirement.

HTTP proxy location can be configured using the CLI or REST interface or auto-configured through the DHCP server connected to the switch.

- There are three sources for HTTP proxy location:
 - User configured HTTP proxy via CLI or REST interface.
 - DHCP options received via management VRF port.
 - DHCP options received via VLAN 1 on supported switch platforms.
-

- Operational configuration for HTTP proxy location is determined by the source with the highest priority.
Source priority:
 1. User configured.
 2. DHCP options received via management VRF port.
 3. DHCP options received via VLAN 1.



NOTE

- HTTP proxy location can only be a FQDN or an IPV4 address.
- When HTTP proxy location and VRF are configured, they override any existing HTTP proxy location and VRF.
- If this command is executed without the VRF parameter, the default VRF will be used.
- Port number may need to be specified at the end of the IP address for FQDN to connect via HTTP proxy.
 - For example, 8088 is the TCP port number: http-proxy 192.168.248.248:**8088**

Subtopics

DHCP Options commands

DHCP Options commands

Subtopics

DHCP options commands

DHCP options commands

Select a command from the list in the left navigation menu.

Subtopics

http-proxy

http-proxy

Syntax

```
http-proxy {<FQDN | IPV4-ADDR> | IPV6-ADDR[:PORT]} [vrf <VRF-NAME>]  
no http-proxy [<FQDN | IPV4-ADDR>] [vrf <VRF-NAME>]
```

Description

Specifies HTTP proxy location and VRF.

When HTTP proxy location and VRF are configured on the switch, it overrides any existing HTTP proxy location and VRF as this has the highest priority over the values obtained from other sources.

Following locations can be used for the HTTP proxy location:

- A fully qualified domain name (FQDN).
- An IPv4 address with colon separated port number
- An IPv6 address with colon separated port number



NOTE

When configuring an IPv6 address with a port number, the address must be specified inside square brackets. An example - [2001:0db8:85a3:0000:0000:8a2e:0370:7334]:8080.

If the command is entered without the VRF parameter, then the VRF used will be 'default' VRF.

The **no** form of this command removes a specified HTTP proxy location.

Parameter	Description
<FQDN>	Specifies FQDN for HTTP proxy location.
<IPV4-ADDR>	Specifies IPV4 address for HTTP proxy location.
	Specifies IPV6 address for HTTP proxy location.

Parameter	Description
<IPV6-ADDR>	
<VRF-NAME>	Specifies VRF for HTTP proxy.



NOTE

A FQDN or IPV4 address are optional in the **no** form of the command.

Examples

Specifying a FQDN for HTTP proxy location and **MGMT** VRF with an IPv6 address:

```
switch(config) # http-proxy http-proxy.example.com vrf mgmt
switch(config) # http-proxy [2000::100]:8080 vrf mgmt
```

Specifying a FQDN for HTTP proxy location and **MGMT** VRF with an IPv4 address:

```
switch(config) # http-proxy http-proxy.example.com vrf mgmt
switch(config) # http-proxy 192.168.1.3:8080 vrf mgmt
```

Removing HTTP proxy location

```
switch(config) # no http-proxy
```

Command History

Release	Modification
10.13.1000	Command updated to reflect OTP scenario.
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

IP Tunnels


True point-to-point networks are not always possible in corporate networking environment. Many networks deploy nontraditional methods of connection (for example, DSL or broadband) at remote sites or branch offices. The branch office, telecommuter, or business traveler then becomes separated from the corporate network. Some method of tunneling becomes imperative to connect all the network sites together.

Virtual Private Networking (VPN) is often deployed to create private tunnels through the public network system for passing data to remote sites. While VPN is sufficient for the average business traveler, it is not a good solution for branch site connectivity. VPN configurations must include statically maintained access lists to identify traffic through the tunnel. These access lists are often tedious to configure for larger networks and are prone to errors.

VPNs do not permit multicast traffic to pass; therefore routing protocols such as Routing Information Protocol (RIP) and Open Shortest Path First (OSPF) are no longer options for dynamic routing updates. All new additions to the network topology must be manually added to the various configured access lists. Without dynamic routing from one site to another, network management is severely hampered. Network managers need their non-heterogeneous networks to function like traditional point-to-point networks so that traditional management methods (once available only on point-to-point circuits) can apply to the entire network.

The solution to these challenges is to use IP tunnels. An IP tunnel provides a virtual link between endpoints on two different networks enabling data to be exchanged as if the endpoints were directly connected on the same network. Traffic between the devices is isolated from the intervening networks that the tunnel spans.

For example, the following diagram shows an IP tunnel (using GRE) that connects two IPv4 networks over an IPv4 network.

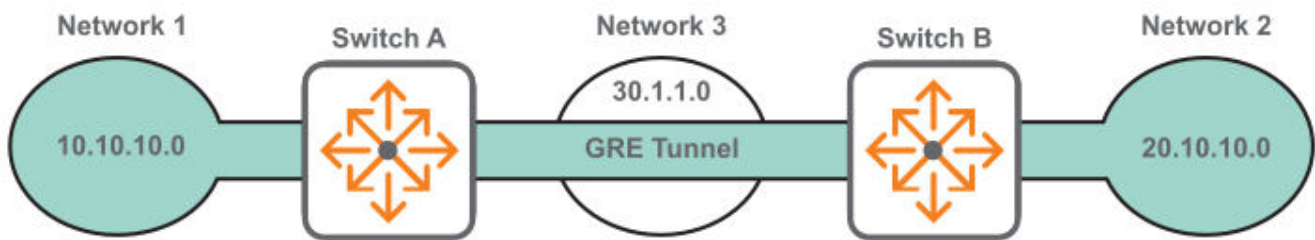

If network 1 and network 3 are using IPv6 addressing, the tunnel connects them by encapsulating the IPv6 traffic in IPv4 packets to traverse network 2. The intermediate network devices do not know about Network 1 and Network 2 because the packets are encapsulated.

An IP tunnel can also be used to create a point-to-point link for IPv6 traffic over an IPv6 network.

IP tunnels supported features

- Up to 127 tunnels can be defined on a switch shared between different tunnel types: GRE, IPv6 in IPv4, and IPv6 in IPv6.

- A maximum of 16 source IP addresses are supported. Tunnels can have the same source IP address and different destination IP addresses. The source IP, destination IP, and VRF combine to uniquely identify a tunnel.
- Up to 127 tunnels can be defined on a switch shared between different tunnel types.

Unsupported features

- GRE IPv4 over IPv6.
- QoS cannot be applied to a GRE tunnel interface.
- Key support can be added for security and identification purposes when there are multiple applications.
- VPN across public IP network.
- MPLS over GRE.
- Multipoint GRE for scalable network to reach multiple remote sites.

Subtopics

Configuring an IP tunnel

Creating a GRE tunnel for traversing a public network

Creating two GRE tunnels to different destination addresses

Creating an IPv6 in IPv4 tunnel for traversing a public network

Creating an IPv6 in IPv6 tunnel for traversing a public network

IP tunnels commands

Configuring an IP tunnel

Syntax

Prerequisites

An enabled layer 3 interface with an IP address assigned to it, created with the command `interface`.

Procedure

1. Create an IP tunnel with the command `interface tunnel`.
2. Set the IP address for the tunnel. For a GRE tunnel, enter the command `ip address`. For an IPv6 in IPv4 or an IPv6 in IPv6 tunnel, enter the command `ipv6 address`.
3. Set the source IP address for the tunnel. For a GRE or an IPv6 in IPv4 tunnel, enter the command `source ip`. For an IPv6 in IPv6 tunnel, enter the command `source ipv6`.

4. Set the destination IP address for the tunnel. For a GRE or an IPv6 in IPv4 tunnel, enter the command `destination ip` . For an IPv6 in IPv6 tunnel, enter the command `destination ipv6` .
5. Optionally, set the TTL (hop count) for the tunnel with the command `ttl` .
6. Optionally, set the MTU for the tunnel with the command `ip mtu` .
7. Optionally, add a description to the tunnel with the command `description` .
8. By default, the tunnel is attached to the default VRF. Attach it to a different VRF with the command `vrf attach` .
9. Enable the tunnel with the command `no shutdown` .
10. Review tunnel settings with the command `show interface tunnel` .

Example

This example creates the following configuration:

- Creates GRE tunnel **33**.
- Set the tunnel IP address to **10.10.20.209/24**.
- Sets the tunnel source IP address to **10.10.10.1**.
- Sets the tunnel destination IP address to **10.10.10.2**.
- Enables the tunnel.

```
switch(config)# interface tunnel 33 mode gre ipv4
switch(config-gre-if)# ip address 10.10.20.209/24
switch(config-gre-if)# source ip address 10.10.10.1
switch(config-gre-if)# destination ip address 10.10.10.2
switch(config-gre-if)# no shutdown
```

Creating a GRE tunnel for traversing a public network

This example creates a GRE tunnel between two switches, enabling traffic from two networks to traverse a public network.

Procedure

1. On switch 1:

- a. Enable interface **1/1/1** and assign the IP address **10.1.1.1/24** to it.

```
switch# config
switch(config)# interface 1/1/1

switch(config-if)# ip address 10.1.1.1/24
switch(config-if)# no shutdown
```

- b. Enable interface **1/1/2** and assign the IP address **180.1.10.2/24** to it.

```
switch# config
switch(config)# interface 1/1/2

switch(config-if)# ip address 180.1.10.2/24
switch(config-if)# no shutdown
switch(config-if)# exit
```

- c. Create GRE tunnel **10** and assign the IP address **192.168.10.1/24**, source address **10.1.1.1**, and destination address **20.1.1.1** to it.

```
switch(config)# interface tunnel 10 mode gre ipv4
switch(config-gre-if)# ip address 192.168.10.1/24
switch(config-gre-if)# source ip 10.1.1.1
switch(config-gre-if)# destination ip 20.1.1.1
switch(config-gre-if)# no shutdown
switch(config-gre-if)# exit
```

- d. Defines routes so that traffic from network 1 can reach network 2 through the tunnel.

```
switch(config)# ip route 20.1.1.0/24 10.1.1.2
switch(config)# ip route 190.1.10.0/24 tunnel10
```

2. On switch 2:

- a. Enable interface **1/1/1** and assign the IP address **20.1.1.1/24** to it.

```
switch# config
switch(config)# interface 1/1/1

switch(config-if)# ip address 20.1.1.1/24
switch(config-if)# no shutdown
```

- b. Enable interface **1/1/2** and assign the IP address **190.1.10.2/24** to it.

```
switch(config)# interface 1/1/2
```

```
switch(config-if)# ip address 190.1.10.2/24
```

```
switch(config-if)# no shutdown
```

```
switch(config-if)# exit
```

- c. Create GRE tunnel **10** and assign the IP address **192.168.10.2/24**, source address **20.1.1.1**, and destination address **10.1.1.1** to it.

```
switch(config)# interface tunnel 10 mode gre ipv4
```

```
switch(config-gre-if)# ip address 192.168.10.2/24
```

```
switch(config-gre-if)# source ip 20.1.1.1
```

```
switch(config-gre-if)# destination ip 10.1.1.1
```

```
switch(config-gre-if)# no shutdown
```

```
switch(config-gre-if)# exit
```


- d. Defines routes so that traffic from network 2 can reach network 1 through the tunnel.

```
switch(config)# ip route 10.1.1.0/24 20.1.1.2
```

```
switch(config)# ip route 180.1.10.0/24 tunnel10
```

Creating two GRE tunnels to different destination addresses

This example creates two GRE tunnels to different destination addresses. Traffic from network 1 can reach either network 2 or network 3 using the appropriate tunnel.

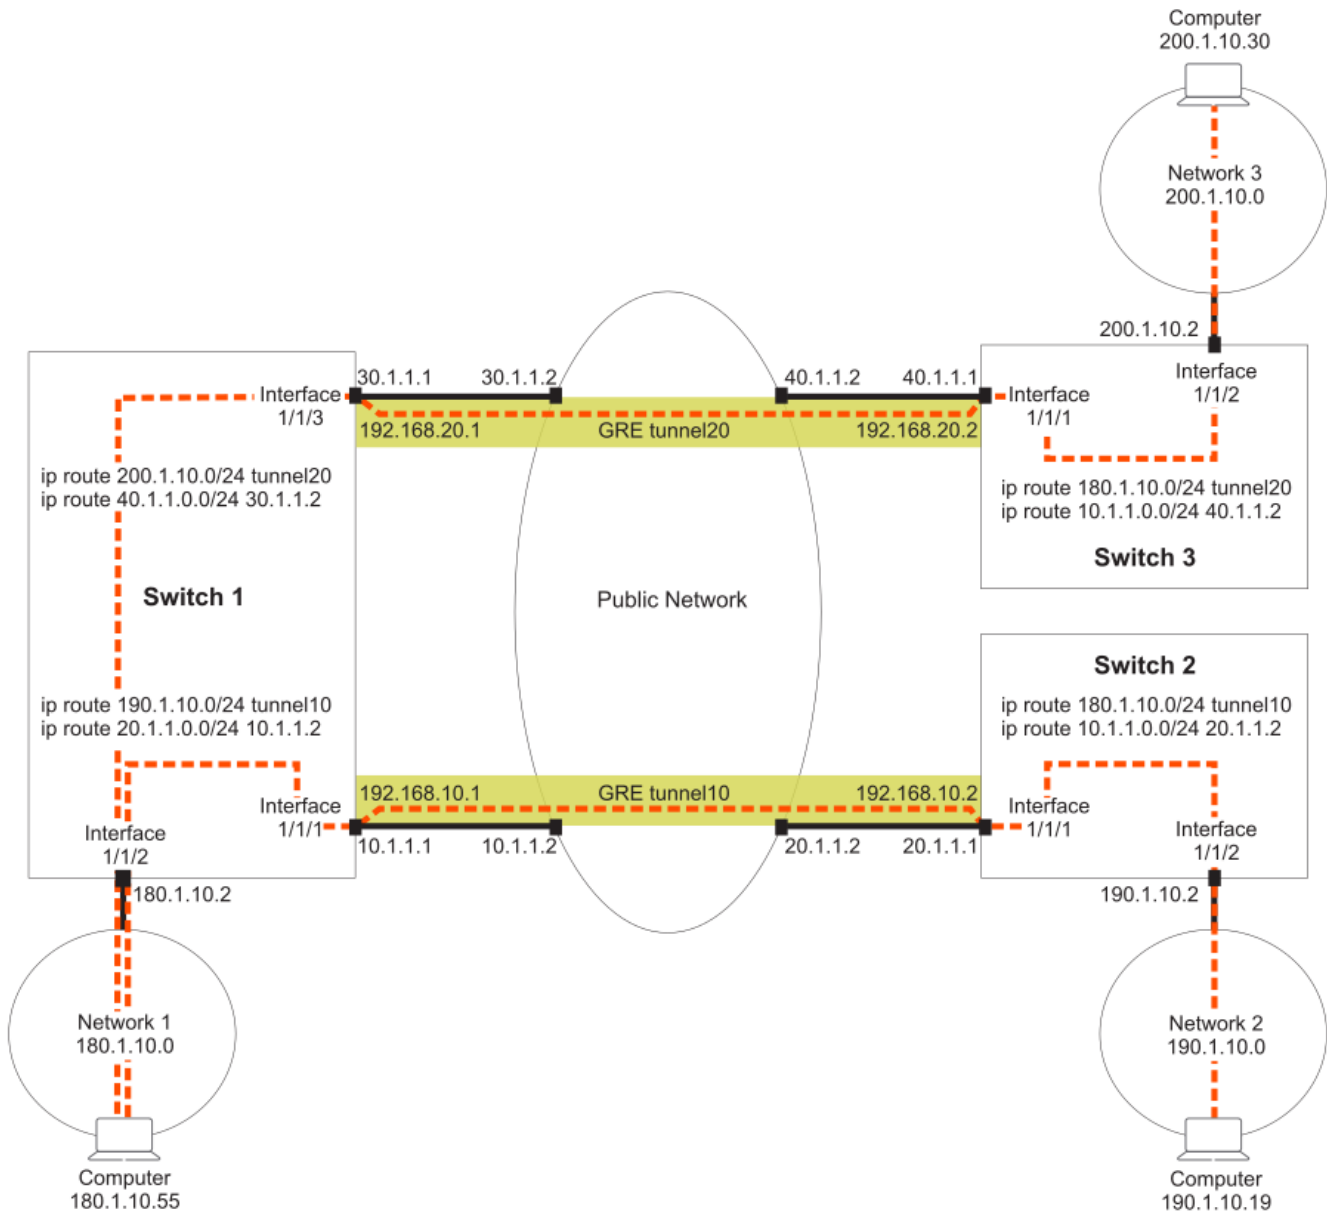

Procedure

1. On switch 1:

- Enable interface **1/1/1** and assign the IP address **10.1.1.1/24** to it.

```

switch# config
switch(config) # interface 1/1/1

switch(config-if) # ip address 10.1.1.1/24
switch(config-if) # no shutdown

```

- Enable interface **1/1/2** and assign the IP address **180.1.10.2/24** to it.

```
switch# config  
switch(config)# interface 1/1/2  
  
switch(config-if)# ip address 180.1.10.2/24  
switch(config-if)# no shutdown  
switch(config-if)# exit
```

- c. Enable interface **1/1/3** and assign the IP address **30.1.1.1/24** to it.

```
switch# config  
switch(config)# interface 1/1/3  
  
switch(config-if)# 30.1.1.1/24  
switch(config-if)# no shutdown  
switch(config-if)# exit
```

- d. Create GRE tunnel **10** and assign the IP address **192.168.10.1/24**, source address **10.1.1.1**, and destination address **20.1.1.1** to it.

```
switch(config)# interface tunnel 10 mode gre ipv4  
switch(config-gre-if)# ip address 192.168.10.1/24  
switch(config-gre-if)# source ip 10.1.1.1  
switch(config-gre-if)# destination ip 20.1.1.1  
switch(config-gre-if)# no shutdown  
switch(config-gre-if)# exit
```

- e. Create GRE tunnel **20** and assign the IP address **192.168.20.1/24**, source address **30.1.1.1**, and destination address **40.1.1.1** to it.

```
switch(config)# interface tunnel 20 mode gre ipv4  
switch(config-gre-if)# ip address 192.168.20.1/24  
switch(config-gre-if)# source ip 30.1.1.1  
switch(config-gre-if)# destination ip 40.1.1.1  
switch(config-gre-if)# no shutdown  
switch(config-gre-if)# exit
```

- f. Defines routes so that traffic from network 1 can reach network 2 through tunnel 10.

```
switch(config)# ip route 20.1.1.0/24 10.1.1.2  
switch(config)# ip route 190.1.10.0/24 tunnel10
```

- g. Defines routes so that traffic from network 1 can reach network 3 through the tunnel 20.

```
switch(config)# ip route 40.1.1.0/24 30.1.1.2
switch(config)# ip route 200.1.10.0/24 tunnel20
```

2. On switch 2:

- a. Enable interface **1/1/1** and assign the IP address **20.1.1.1/24** to it.

```
switch# config
switch(config)# interface 1/1/1

switch(config-if)# ip address 20.1.1.1/24
switch(config-if)# no shutdown
```

- b. Enable interface **1/1/2** and assign the IP address **190.1.10.2/24** to it.

```
switch(config)# interface 1/1/2

switch(config-if)# ip address 190.1.10.2/24
switch(config-if)# no shutdown
switch(config-if)# exit
```

- c. Create GRE tunnel **10** and assign the IP address **192.168.10.2/24**, source address **20.1.1.1**, and destination address **10.1.1.1** to it.

```
switch(config)# interface tunnel 10 mode gre ipv4
switch(config-gre-if)# ip address 192.168.10.2/24
switch(config-gre-if)# source ip 20.1.1.1
switch(config-gre-if)# destination ip 10.1.1.1
switch(config-gre-if)# no shutdown
switch(config-gre-if)# exit
```

- d. Defines routes so that traffic from network 2 can reach network 1 through tunnel 10.

```
switch(config)# ip route 10.1.1.0/24 20.1.1.2
switch(config)# ip route 180.1.10.0/24 tunnel10
```

3. On switch 3:

- a. Enable interface **1/1/1** and assign the IP address **40.1.1.1/24** to it.

```
switch# config
switch(config)# interface 1/1/1

switch(config-if)# ip address 40.1.1.1/24
switch(config-if)# no shutdown
```

- b. Enable interface **1/1/2** and assign the IP address **200.1.10.2/24** to it.

```
switch(config)# interface 1/1/2
```

```
switch(config-if)# ip address 200.1.10.2/24
```

```
switch(config-if)# no shutdown
```

```
switch(config-if)# exit
```

- c. Create GRE tunnel **20** and assign the IP address **192.168.20.2/24**, source address **40.1.1.1**, and destination address **30.1.1.1** to it.

```
switch(config)# interface tunnel 10 mode gre ipv4
```

```
switch(config-gre-if)# ip address 192.168.20.2/24
```

```
switch(config-gre-if)# source ip 40.1.1.1
```

```
switch(config-gre-if)# destination ip 30.1.1.1
```

```
switch(config-gre-if)# no shutdown
```

```
switch(config-gre-if)# exit
```


- d. Defines routes so that traffic from network 3 can reach network 1 through tunnel 20.

```
switch(config)# ip route 30.1.1.0/24 40.1.1.2
```

```
switch(config)# ip route 180.1.10.0/24 tunnel20
```

Creating an IPv6 in IPv4 tunnel for traversing a public network

This example creates an IPv6 in IPv4 tunnel between two switches, enabling traffic from two networks to traverse a public network.

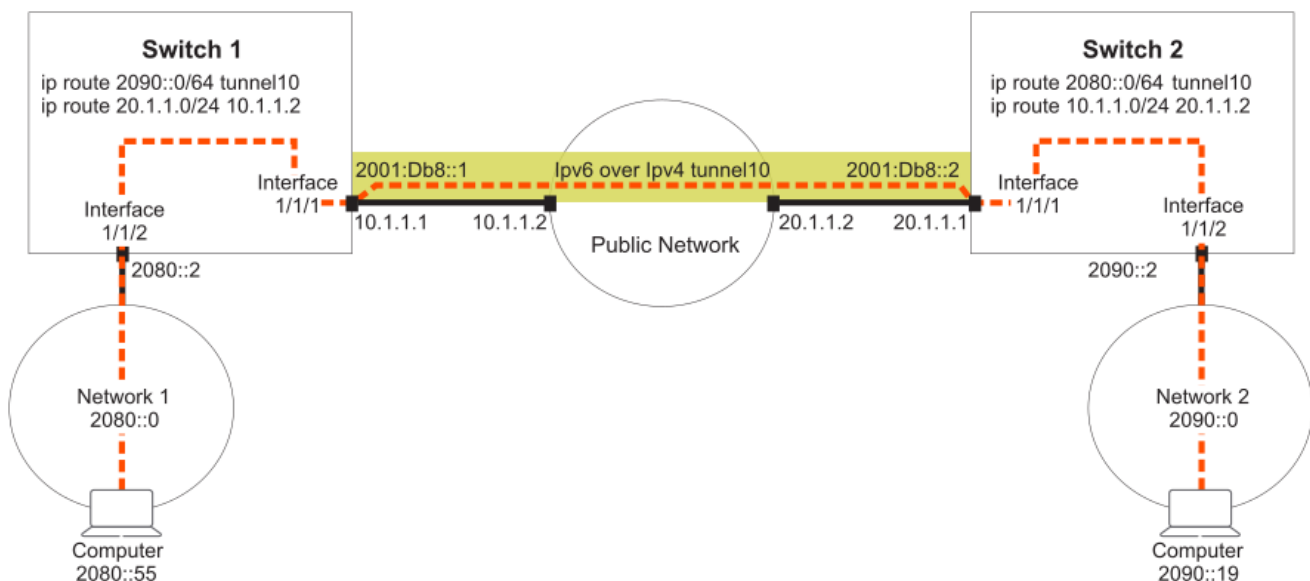

Procedure

1. On switch 1:

- a. Enable interface **1/1/1** and assign the IP address **10.1.1.1/24** to it.

```
switch# config
switch(config)# interface 1/1/1

switch(config-if)# ip address 10.1.1.1/24
switch(config-if)# no shutdown
```

- b. Enable interface **1/1/2** and assign the IP address **2080::2/64** to it.

```
switch# config
switch(config)# interface 1/1/2

switch(config-if)# ipv6 address 2080::2/64
switch(config-if)# no shutdown
switch(config-if)# exit
```

- c. Create IPv6 in IPv4 tunnel **10** and assign the IP address **2001:DB8::1/32**, source address **10.1.1.1**, and destination address **20.1.1.1** to it.

```
switch(config)# interface tunnel 10 mode ip 6in4
switch(config-ip-if)# ipv6 address 2001:DB8::1/62
switch(config-ip-if)# source ip 10.1.1.1
switch(config-ip-if)# destination ip 20.1.1.1
switch(config-ip-if)# no shutdown
switch(config-ip-if)# exit
```

- d. Defines routes so that traffic from network 1 can reach network 2 through the tunnel.

```
switch(config)# ip route 20.1.1.0/24 10.1.1.2
switch(config)# ipv6 route 290::0/64 tunnel10
```

2. On switch 2:

- a. Enable interface **1/1/1** and assign the IP address **20.1.1.1/24** to it.

```
switch# config
switch(config)# interface 1/1/1

switch(config-if)# ip address 20.1.1.1/24
switch(config-if)# no shutdown
```

- b. Enable interface **1/1/2** and assign the IP address **2090::2/64** to it.

```
switch(config)# interface 1/1/2
```

```
switch(config-if)# ipv6 address 2090::2/64
```

```
switch(config-if)# no shutdown
```

```
switch(config-if)# exit
```

- c. Create IPv6 in IPv4 tunnel **10** and assign the IP address **2001:DB8::2/32**, source address **10.1.1.1**, and destination address **20.1.1.1** to it.

```
switch(config)# interface tunnel 10 mode ip 6in4
```

```
switch(config-ip-if)# ipv6 address 2001:DB8::2/62
```

```
switch(config-ip-if)# source ip 20.1.1.1
```

```
switch(config-ip-if)# destination ip 10.1.1.1
```

```
switch(config-ip-if)# no shutdown
```

```
switch(config-ip-if)# exit
```


- d. Defines routes so that traffic from network 2 can reach network 1 through the tunnel.

```
switch(config)# ip route 10.1.1.0/24 20.1.1.2
```

```
switch(config)# ip route 2080::0/64 tunnel10
```

Creating an IPv6 in IPv6 tunnel for traversing a public network

This example creates an IPv6 in IPv6 tunnel between two switches, enabling traffic from two networks to traverse a public network.

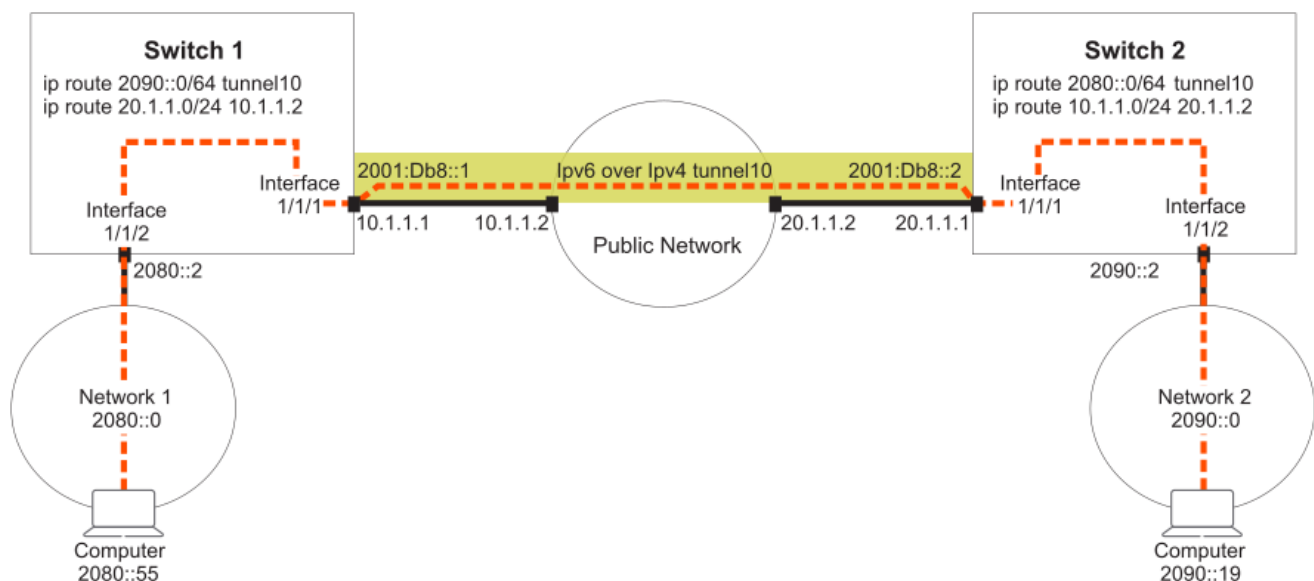

Procedure

1. On switch 1:

- a. Enable interface **1/1/1** and assign the IP address **2001:DB8:5::1/64** to it.

```
switch# config
switch(config)# interface 1/1/1

switch(config-if)# ipv6 address 2001:DB8:5::1/64
switch(config-if)# no shutdown
```

- b. Enable interface **1/1/2** and assign the IP address **2080::2/64** to it.

```
switch# config
switch(config)# interface 1/1/2

switch(config-if)# ipv6 address 2080::2/64
switch(config-if)# no shutdown
switch(config-if)# exit
```

- c. Create IPv6 in IPv6 tunnel **10** and assign the IP address **2001:DB8::1/32**, source address **2001:DB8:5::1**, and destination address **2001:DB8:9::1** to it. (Optional) Set the MTU and TTL parameters for this tunnel interface.

```
switch(config)# interface tunnel 10 mode ip 6in6
switch(config-ip-if)# ipv6 address 2001:DB8::1/62
switch(config-ip-if)# source ipv6 2001:DB8:5::1
switch(config-ip-if)# destination ipv6 2001:DB8:9::1
switch(config-ip-if)# no shutdown
switch(config-ip-if)# exit
```

- d. Defines routes so that traffic from network 1 can reach network 2 through the tunnel.

```
switch(config)# ipv6 route 2001:DB8:9::0/64 2001:DB8:5::2
switch(config)# ipv6 route 2090::0/64 tunnel10
```

2. On switch 2:

- a. Enable interface **1/1/1** and assign the IP address **2001:DB8:9::1/64** to it.

```
switch# config
switch(config)# interface 1/1/1

switch(config-if)# ipv6 address 2001:DB8:9::1/64
switch(config-if)# no shutdown
```

- b. Enable interface **1/1/2** and assign the IP address **2090::2/64** to it.

```
switch(config)# interface 1/1/2  
  
switch(config-if)# ipv6 address 2090::2/64  
switch(config-if)# no shutdown  
switch(config-if)# exit
```

- c. Create IPv6 in IPv6 tunnel **10** and assign the IP address **2001:DB8::2/32**, source address **2001:DB8:5::1**, and destination address **2001:DB8:9::1** to it. (Optional) Set the MTU and TTL parameters for this tunnel interface.

```
switch(config)# interface tunnel 10 mode ip 6in6  
switch(config-ip-if)# ipv6 address 2001:DB8::2/62  
switch(config-ip-if)# source ipv6 2001:DB8:9::1  
switch(config-ip-if)# destination ipv6 2001:DB8:5::1  
switch(config-ip-if)# no shutdown  
switch(config-ip-if)# exit
```

- d. Defines routes so that traffic from network 2 can reach network 1 through the tunnel.

```
switch(config)# ipv6 route 2001:DB8:5::0/64 2001:DB8:9::2  
switch(config)# ipv6 route 2080::0/64 tunnel10
```

IP tunnels commands

Subtopics

IP tunnels commands

IP tunnels commands

Select a command from the list in the left navigation menu.

Subtopics

description

destination ip

destination ipv6

interface tunnel

ip address

ipv6 address
ip mtu
show interface tunnel
show running-config interface tunnel
shutdown
source ip
source ipv6
ttl
vrf attach

description

Syntax

```
description <DESC>  
no description
```

Description

Associates a text description with an IP tunnel for identification purposes.

The **no** form of this command removes the description from an IP tunnel.

Parameter	Description
<DESC>	Specifies the descriptive text to associate with the IP tunnel. Range: 1 to 64 printable ASCII characters.

Examples

Defines a description for GRE tunnel **33**.

```
switch(config)# interface tunnel 33 mode gre ipv4  
switch(config-gre-if)# description Network A Tunnel C
```

Removes the description for GRE tunnel **33**.

```
switch(config)# interface tunnel 33  
switch(config-gre-if)# no description
```

Defines a description for IPv6 in IPv4 tunnel **27**.

```
switch(config)# interface tunnel 27 mode ip 6in4
switch(config-ip-if)# description Network 3 Tunnel 27
```

Removes the description for IPv6 in IPv4 tunnel **27**.

```
switch(config)# interface tunnel 27
switch(config-ip-if)# no description
```

Defines a description for IPv6 in IPv6 tunnel **8**.

```
switch(config)# interface tunnel 8 mode ip 6in6
switch(config-ip-if)# description Network 4 Tunnel 8
```

Removes the description for IPv6 in IPv6 tunnel **8**.

```
switch(config)# interface tunnel 8
switch(config-ip-if)# no description
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8400	config-gre-if config-ip-if	Administrators or local user group members with execution rights for this command.

destination ip

Syntax

```
destination ip <IPV4-ADDR>
no destination ip <IPV4-ADDR>
```

Description

Sets the destination IP address for an IP tunnel. Specify the address of the interface on the remote device to which the tunnel will be established.

The **no** form of this command deletes the destination IP address from an IP tunnel.

Parameter	Description
<code><IPV4-ADDR></code>	Specifies the destination IP address in IPv4 format (x.x.x.x), where x is a decimal number from 0 to 255.

Examples

Defines the destination IP address to be **10.10.10.1** for GRE tunnel **33**.

```
switch(config)# interface tunnel 33 mode gre ipv4
switch(config-gre-if)# destination ip 10.10.10.1
```

Deletes the destination IP address **10.10.10.1** from GRE tunnel **33**.

```
switch(config)# interface tunnel 33 mode gre ipv4
switch(config-gre-if)# no destination ip 10.10.10.1
```

Defines the destination IP address to be **10.10.20.1** for IPv6 in IPv4 tunnel **27**.

```
switch(config)# interface tunnel 27 mode ip 6in4
switch(config-ip-if)# destination ip 10.10.20.1
```

Deletes the destination IP address **10.10.20.1** from IPv6 in IPv4 tunnel **27**.

```
switch(config)# interface tunnel 27
switch(config-ip-if)# no destination ip 10.10.20.1
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8400	config-gre-if config-ip-if	Administrators or local user group members with execution rights for this command.

destination ipv6

Syntax

```
destination ipv6 <IPv6-ADDR>  
no destination ipv6 [IPv6-ADDR]
```

Description

Sets the destination IPv6 address for an IP tunnel. Specify the address of the interface on the remote device to which the tunnel will be established.

The **no** form of this command deletes the destination IPv6 address from an IP tunnel.

Parameter	Description
<IPv6-ADDR>	Specifies the tunnel IP address in IPv6 format (xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx), where x is a hexadecimal number from 0 to F. This is optional in the no form of the command.

Examples

Defines the destination IPv6 address to be **2001:DB8::1** for IPv6 in IPv6 tunnel

```
switch(config)# interface tunnel 8 mode ip 6in6  
switch(config-ip-if)# destination ipv6 2001:DB8::1
```

Deletes the destination IPv6 address **2001:DB8::1** from IPv6 in IPv6 tunnel **8**.

```
switch(config)# interface tunnel 8  
switch(config-ip-if)# no destination ipv6 2001:DB8::1
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8400	config-ip-if	Administrators or local user group members with execution rights for this command.

interface tunnel

Syntax

```
interface tunnel <TUNNEL-NUMBER> mode {gre ip | ip 6in4 | ip 6in6 | ipsec  
ipv4}  
interface tunnel <EXISTING-TUNNEL-NUMBER>  
no interface tunnel <EXISTING-TUNNEL-NUMBER> [mode {gre ipv4 | ip 6in4 | ip  
6in6}]
```

Description

Creates or updates an IP tunnel. After you enter the command, the firmware switches to the configuration context for the tunnel.

If the specified tunnel exists, this command switches to the context for the tunnel.

By default, all tunnels are automatically assigned to the default VRF when they are created.

The **no** form of this command deletes an existing IP tunnel. It is optional to include a mode in the **no** form, but if a mode has been entered, selecting a mode is required.



NOTE

The option **ipv4** is deprecated and it is advised to use **ip** instead. Execute **show deprecated-commands** to view a list of deprecated commands.

Parameter	Description
<pre>mode {gre ip ip 6in4 ip 6in6}</pre>	Creates an IP tunnel. Choose one of the following options: gre ip: Creates a GRE tunnel. ip 6in4: Creates an IPv4 tunnel for IPv6 traffic. ip 6in6: Creates an IPv6 tunnel for IPv6 traffic. This is optional in the no form, unless a mode has already been entered.
<pre><TUNNEL-NUMBER></pre>	Specifies the number for a new tunnel. Numbering is shared between all tunnels, so the same tunnel number cannot be used for an IPv6 in IPv4 tunnel and a GRE tunnel.
<pre><EXISTING-TUNNEL-NUMBER></pre>	Specifies the number for an existing IP tunnel. Numbering is shared between all tunnels, so the same tunnel number cannot be used for an IPv6 in IPv4 tunnel and a GRE tunnel.

Examples

Defines a new GRE tunnel with number **27**.

```
switch(config)# interface tunnel 33 mode gre ipv4
switch(config-gre-if)#
```

Switches to the **config-gre-if** context for existing tunnel **33**.

```
switch(config)# interface tunnel 33
switch(config-gre-if)#
```

Deletes GRE tunnel **33**.

```
switch(config)# no interface tunnel 33
```

Defines a new IPv6 in IPv4 tunnel with number **27**.

```
switch(config)# interface tunnel 27 mode ip 6in4
switch(config-ip-if)#
```

Switches to the **config-ip-if** context for existing tunnel **27**.

```
switch(config)# interface tunnel 27
switch(config-ip-if)#
```

Deletes IPv6 in IPv4 tunnel **27**.

```
switch(config)# no interface tunnel 27
```


Defines a new IPv6 in IPv6 tunnel with number **8**.

```
switch(config) # interface tunnel 8 mode ip 6in6
switch(config-ip-if) #
```

Deletes IPv6 in IPv6 tunnel with number **3**.

```
switch(config) # no interface tunnel 33 mode gre ipv4
```

Command History

Release	Modification
10.14	The ipv4 parameter is deprecated and replaced with ip .
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8400	config-gre-if config-ip-if config	Administrators or local user group members with execution rights for this command.

ip address

Syntax

```
ip address <IPV4-ADDR>/<MASK>
no ip address <IPV4-ADDR>/<MASK>
```

Description

Sets the local IP address of a GRE tunnel. This address identifies the tunnel interface for routing. It must be on the same subnet as the tunnel address assigned on the remote device.

The **no** form of this command deletes the local IP address assigned to a GRE tunnel.

Parameter	Description
<code><IPV4-ADDR></code>	Specifies the tunnel IP address in IPv4 format (x.x.x.x), where x is a decimal number from 0 to 255. You can remove leading zeros. For example, the address 192.169.005.100 becomes 192.168.5.100 .
<code><MASK></code>	Specifies the number of bits in the address mask in CIDR format (x), where x is a decimal number from 0 to 32.

Examples

Defines the local IP address **10.10.10.1** for GRE tunnel **33**.

```
switch(config)# interface tunnel 33 mode gre ipv4
switch(config-gre-if)# ip address 10.10.10.1/24
```

Deletes the local IP address **10.10.10.1** for GRE tunnel **33**.

```
switch(config)# interface tunnel 33
switch(config-gre-if)# no ip address 10.10.10.1/24
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8400	<code>config-gre-if</code>	Administrators or local user group members with execution rights for this command.

ipv6 address

Syntax

```
ipv6 address <IPv6-ADDR>/<MASK>
no ipv6 address <IPv6-ADDR>/<MASK>
```

Description

Sets the local IP address of an IPv6 to IPv4 tunnel or of an IPv6 to IPv6 tunnel. This address identifies the tunnel interface for routing. It must be on the same subnet as the tunnel address assigned on the remote device.

The **no** form of this command deletes the local IP address assigned to an IPv6 to IPv4 tunnel.

Parameter	Description
<code><IPv6-ADDR></code>	Specifies the tunnel IP address in IPv6 format (xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx), where x is a hexadecimal number from 0 to F.
<code><MASK></code>	Specifies the number of bits in the address mask in CIDR format (x), where x is a decimal number from 0 to 32.

Examples

Defines the local IP address **2001:DB8:5::1/64** for tunnel **8** for an IPv6 to IPv6 tunnel.

```
switch(config)# interface tunnel 8 mode ip 6in6
switch(config-ip-if)# ipv6 address 2001:DB8:5::1/64
```

Deletes the local IP address **2001:DB8::1/32** for tunnel **8**.

```
switch(config)# interface tunnel 8
switch(config-ip-if)# no ipv6 address 2001:DB8:5::1/64
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8400	config-ip-if config-if	Administrators or local user group members with execution rights for this command.

ip mtu

Syntax

```
ip mtu <VALUE>
```

Description

Sets the MTU (maximum transmission unit) for an IP interface. The default value is 1500 bytes.

The **no** form of this command sets the MTU to the default value of 1500 bytes.

Parameter	Description
<VALUE>	Specifies the MTU in bytes. Range: 1,280 bytes to 9,192 bytes.

Usage

The IP MTU is the largest IP packet that can be sent or received by the interface. For a tunnel, the IP MTU is the maximum size of the IP payload. To enable jumbo packet forwarding through the tunnel, set the IP MTU of the tunnel to a value greater than 1500. Also set the MTU and the IP MTU values for the underlying physical interface that the tunnel is using to a value greater than 1,500 bytes. The IP MTU of the tunnel must also be greater than or equal to the MTU of the ingress interface on the switch. The IP MTU value of the tunnel must also be less than or equal to the IP MT of the underlying interface that the tunnel is using.

When defining a GRE tunnel, the MTU has to account for 28 bytes of IP layer overhead, plus a GRE header. It must be larger than the MTU of the interface that the tunnel is using. Packets larger than the MTU are dropped.

Examples

Sets the MTU on GRE interface **33** to **1300** bytes.

```
switch(config)# interface tunnel 33 mode gre ipv4
switch(config-gre-if)# mtu 1300
```

Sets the MTU on GRE interface **33** to the default value.

```
switch(config)# interface tunnel 33 mode gre ipv4
switch(config-gre-if)# ip mtu
```

Sets the MTU on IPv6 in IPv4 tunnel **27** to **1000** bytes.

```
switch(config)# interface tunnel 27 mode ip 6in4
switch(config-ip-if)# mtu 1000
```

Sets the MTU on IPv6 in IPv4 tunnel **27** to the default value.

```
switch(config)# interface tunnel 27 mode ip 6in4
switch(config-ip-if)# ip mtu
```

Sets the MTU on IPv6 in IPv6 tunnel **8** to **900** bytes.

```
switch(config)# interface tunnel 8 mode ip 6in6
switch(config-ip-if)# ip mtu 9000
```

Sets the MTU on IPv6 in IPv6 tunnel **8** to the default value.

```
switch(config)# interface tunnel 8 mode ip 6in6
switch(config-ip-if)# ip mtu
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8400	config-gre-if config-ip-if	Administrators or local user group members with execution rights for this command.

show interface tunnel

Syntax

```
show interface tunnel[<TUNNEL-NUMBER>] [vsx-peer]
```

Description

Shows configuration settings for all IP tunnels, or a specific tunnel.

Parameter	Description
<TUNNEL-NUMBER>	Specifies the number of an IP tunnel. Range: 1 to 127.
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Examples

Shows configuration settings for tunnel **10**, which is a GRE tunnel in the following example.

```
switch# show interface tunnel10
Interface tunnel10 is up
Admin state is up
tunnel type GRE IP
tunnel interface IP address 192.0.2.0/24
tunnel source IP address 1.1.1.1
tunnel destination IP address 2.2.2.2
tunnel ttl 60
tunnel transport vrf red
Statistics                RX                TX                Total
-----
L3 Packets                0                0
0
L3 Bytes                  0                0
0
```

Shows configuration settings for tunnel **12**, which is an IPv6 in IPv6 tunnel in the following example.

```
switch# show interface tunnel12
```

```
Interface tunnel12 is up
```

```
Admin state is up
```

```
tunnel type IPv6 in IPv6
```

```
tunnel interface IPv6 address 4::1/64
```

```
tunnel source IPv6 address 2::1
```

```
tunnel destination IPv6 address 2::2
```

```
tunnel ttl 60
```

```
Description: Network2 Tunnel
```

Statistics	RX	TX	Total
L3 Packets	0	0	
L3 Bytes	0	0	

Shows configuration settings for all tunnels.

```
switch# show interface tunnel
```

```
Interface tunnel10 is up
```

```
Admin state is up
```

```
tunnel type GRE IP
```

```
tunnel interface IP address 192.0.2.0/24
```

```
tunnel source IP address 1.1.1.1
```

```
tunnel destination IP address 2.2.2.2
```

```
tunnel ttl 60
```

```
tunnel transport vrf BBlue
```

Statistics	RX	TX	Total
L3 Packets	0	0	
L3 Bytes	0	0	

```
Interface tunnel11 is up
```

```
Admin state is up
```

```
tunnel type IPv6 in IPv4
```

```
tunnel source IPv4 address 198.51.100.0
```

```
tunnel destination IPv4 address 198.51.200.5
```

```
tunnel ttl 80
```

```
Description: Network11
```

Statistics	RX	TX	Total
------------	----	----	-------

```

L3 Packets          0          0
0
L3 Bytes            0          0
0
Interface tunnel12 is up
Admin state is up
tunnel type IPv6 in IPv6
tunnel interface IPv6 address 4::1/64
tunnel source IPv6 address 2::1
tunnel destination IPv6 address 2::2
tunnel ttl 60
Description: Network2 Tunnel
Statistics          RX          TX          Total
-----
L3 Packets          0          0
0
L3 Bytes            0          0
0

```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8400	Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show running-config interface tunnel

Syntax

```
show running-config interface tunnel<TUNNEL-NUMBER>
[vsx-peer]
```

Description

Shows the commands used to configure a tunnel.

Parameter	Description
<code><TUNNEL-NUMBER></code>	Specifies the number of an IP tunnel. Range: 1 to 127.
<code>vsx-peer</code>	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Examples

Shows the configuration for a GRE tunnel.

```
switch# show running-config interface tunnel2
interface tunnel 2 mode gre ipv4
source ip 10.10.20.11
destination ip 10.20.1.2
ip address 10.10.10.1/24
ttl 60
```

Shows the configuration for IPv6 in IPv4 tunnel.

```
switch# show running-config interface tunnel5
interface tunnel5 mode ip 6in4
source ip 10.10.10.12
destination ip 22.20.20.20
ip6 address 2001:DB8:5::1/64
ttl 60
no shutdown
description Network10
```

Shows the configuration for IPv6 in IPv6 tunnel.

```
switch# show running-config interface tunnel1
interface tunnel 1 mode ip 6in6
description Network2 Tunnel
```

```

source ipv6 2::1
destination ipv6 2::2
ipv6 address 4::1/64
ttl 60
switch# show running-config interface tunnel 1
interface tunnel 1 mode ipsec ipv4
description Network1-Tunnel
source ip 1.1.1.1
destination ip 2.2.2.2
switch#(config-gre-if)# show running-config interface tunnel2
interface tunnel 2 mode gre ipv4
source ip 10.10.20.11
destination ip 10.20.1.2
transport vrf VRF1
ip address 10.10.10.1/24
ttl 60

```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8400	Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

shutdown

Syntax

```

shutdown
no shutdown

```

Description

This command disables an IP interface. IP interfaces are disabled by default when created.

The **no** form of this command enables an IP interface.

Examples

Enables GRE interface **33**.

```
switch(config)# interface tunnel 33 mode gre ipv4
switch(config-gre-if)# no shutdown
```

Disables GRE interface **33**.

```
switch(config)# interface tunnel 33 mode gre ipv4
switch(config-gre-if)# shutdown
```

Enables IPv6 in IPv4 interface **27**.

```
switch(config)# interface tunnel 27 mode ip 6in4
switch(config-ip-if)# no shutdown
```

Disables IPv6 in IPv4 interface **27**.

```
switch(config)# interface tunnel 27 mode ip 6in4
switch(config-ip-if)# shutdown
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8400	config-gre-if config-ip-if	Administrators or local user group members with execution rights for this command.

source ip

Syntax

```
source ip <IPV4-ADDR>
no source ip <IPV4-ADDR>
```

Description

Sets the source IP address for an IP tunnel. Specify the IP address of a layer 3 interface on the switch. Tunnels can have the same source IP address and different destination IP addresses.

The **no** form of this command deletes the source IP address for an IP tunnel.

Parameter	Description
<code><IPV4-ADDR></code>	Specifies the source IP address in IPv4 format (x.x.x.x), where x is a decimal number from 0 to 255.

Examples

Defines the source IP address to be **10.10.20.1** for GRE tunnel **33**.

```
switch(config)# interface tunnel 33 mode gre ipv4
switch(config-gre-if)# source ip 10.10.20.1
```

Deletes the source IP address **10.1.20.1** from GRE tunnel **33**.

```
switch(config)# interface tunnel 33
switch(config-gre-if)# no source ip 10.10.20.1
```

Defines the source IP address to be **10.10.10.1** for IPv6 in IPv4 tunnel **27**.

```
switch(config)# interface tunnel 27 mode ip 6in4
switch(config-ip-if)# source ip 10.10.10.1
```

Deletes the source IP address **10.1.10.1** from IPv6 in IPv4 tunnel **27**.

```
switch(config)# interface tunnel 27
switch(config-ip-if)# no source ip 10.10.10.1
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8400	config-gre-if config-ip-if	Administrators or local user group members with execution rights for this command.

source ipv6

Syntax

```
source ipv6 <IPV6-ADDR>  
no source ipv6 [IPV6-ADDR]
```

Description

Sets the source IPv6 address to be used for the encapsulation.

The **no** form of this command deletes the source IPv6 address for an IP tunnel.

Parameter	Description
<IPV6-ADDR>	Specifies the tunnel IP address in IPv6 format (xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx), where x is a hexadecimal number from 0 to F. This is optional in the no form of the command.

Examples

Defines the source IPv6 address to be **2001:DB8::1** for IPv6 in IPv6 tunnel **8**.

```
switch(config)# interface tunnel 8 mode ip 6in6  
switch(config-ip-if)# source ipv6 2001:DB8::1
```

Deletes the source IP address **2001:DB8::1** from IPv6 in IPv6 tunnel **8**.

```
switch(config)# interface tunnel 8  
switch(config-ip-if)# no source ipv6 2001:DB8::1
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8400	config-ip-if	Administrators or local user group members with execution rights for this command.

ttl

Syntax

```
ttl <COUNT>
no ttl
```

Description

Sets the TTL (time-to-live), also known as the hop count, for tunneled packets. If not configured, the default value of 64 is used for the tunnel. (The hop count of the original packets is not changed.) A maximum of four different TTL values can be used at the same time by all tunnels on the switch. For example, if tunnel-1 has TTL 10, tunnel-2 has TTL 20, tunnel-3 has TTL 30, and tunnel-4 has TTL 40, then tunnel-5 cannot have a unique TTL value, it must reuse one of the values assigned to the other tunnels (10, 20, 30, 40).

The **no** form of this command sets TTL to the default value of 64.

Parameter	Description
<COUNT>	Specifies the hop count. Range: 1 to 255. Default: 64.

Examples

Defines a TTL of **99** for GRE tunnel **33**.

```
switch(config)# interface tunnel 33 mode gre ipv4
switch(config-gre-if)# ttl 99
```

Sets the TTL for GRE tunnel **33** to the default value of 64.

```
switch(config)# interface tunnel 33
switch(config-gre-if)# no ttl
```

Defines a TTL of **55** for IPv6 in IPv4 tunnel **27**.

```
switch(config)# interface tunnel 27 mode ip 6in4
switch(config-ip-if)# ttl 55
```

Sets the TTL for IPv6 in IPv4 tunnel **27** to the default value of 64.

```
switch(config)# interface tunnel 27
switch(config-ip-if)# no ttl
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8400	config-gre-if config-ip-if	Administrators or local user group members with execution rights for this command.

vrf attach

Syntax

```
vrf attach <VRF-NAME>
no vrf attach <VRF-NAME>
```

Description

Assigns an IP tunnel to a VRF. By default, all tunnels are automatically assigned to the default VRF when they are created.

The **no** form of this command assigns a tunnel to the default VRF (**default**).

Parameter	Description
<code><VRF-NAME></code>	Specifies the VRF name to which to assign the tunnel.

Examples

Assigns GRE tunnel **33** to **vrf1**.

```
switch(config)# interface tunnel 33 mode gre ipv4
switch(config-gre-if)# vrf attach vrf1
```

Reassigns GRE tunnel **33** to the default VRF.

```
switch(config)# interface tunnel 33
switch(config-gre-if)# no vrf attach vrf1
```

Assigns IPv6 in IPv4 tunnel **27** to **vrf2**.

```
switch(config)# interface tunnel 27 mode gre ipv4
switch(config-ip-if)# vrf attach vrf2
```

Reassigns IPv6 in IPv4 tunnel **27** to the default VRF.

```
switch(config)# interface tunnel 27
switch(config-ip-if)# no vrf attach vrf2
```

Assigns IPv6 in IPv6 tunnel **8** to **vrf3**.

```
switch(config)# interface tunnel 8 mode ip 6in6
switch(config-ip-if)# vrf attach vrf3
```

Reassigns IPv6 in IPv6 tunnel **8** to the default VRF.

```
switch(config)# interface tunnel 8
switch(config-ip-if)# no vrf attach vrf3
```


Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8400	<code>config-gre-if</code> <code>config-ip-if</code>	Administrators or local user group members with execution rights for this command.

IP Source Lockdown

IP source lockdown provides added security by preventing IP source address spoofing on a per-port basis. Every packet is inspected for this purpose in hardware. When IP source lockdown is enabled, IP traffic received on an interface (port) is forwarded only if the VLAN, IP address, MAC address, interface (port) matches the IP binding database entry.



NOTE

It is best to configure IP source lockdown during a switch maintenance period as enabling it may cause client traffic to be dropped for 10 to 15 seconds.

To use IPv4 source lockdown, the IPv4 binding database must be populated. The binding database is typically dynamically populated by DHCPv4 snooping that learns and saves the binding information. Alternatively, the IPv4 binding database can be statically populated with the `ipv4 source-binding` command described in this chapter. Often DHCPv4 snooping is used to dynamically populate most of the IP binding database along with the `ipv4 source-binding` command that is used to add the binding information for several known and trusted clients, typically administrators. For dynamic IP binding database population with DHCPv4 snooping, see [DHCP snooping](#).

To use IPv6 source lockdown, the IPv6 binding database must be populated. The binding database is typically dynamically populated by DHCPv6 snooping that learns and saves the binding information. Alternatively, the IPv6 binding database can be statically populated with the `ipv6 source-binding` command described in this chapter. Often DHCPv6 snooping is used to dynamically populate most of the IPv6 binding database along with the `ipv6 source-binding` command that is used to add the

binding information for several known and trusted clients, typically administrators. For dynamic IPv6 binding database population with DHCPv6 snooping, see [DHCP snooping](#).



NOTE

IP source lockdown should not be configured on ISL (inter-switch link) ports.

Subtopics

[IP source lockdown commands](#)

[IPv4 source lockdown commands](#)

[IPv6 source lockdown commands](#)

IP source lockdown commands

IPv4 source lockdown commands

Subtopics

[IPv4 source lockdown commands](#)

IPv4 source lockdown commands

Select a command from the list in the left navigation menu.

Subtopics

[ipv4 source-binding](#)

[ipv4 source-lockdown](#)

[ipv4 source-lockdown hardware retry](#)

[show ipv4 source-binding](#)

[show ipv4 source-lockdown](#)

ipv4 source-binding

Syntax

```
ipv4 source-binding <VLAN-ID>
    <IPV4-ADDR>
    <MAC-ADDR>
    <IFNAME>
no ipv4 source-binding <VLAN-ID>
    <IPV4-ADDR>
    <MAC-ADDR>
    <IFNAME>
```

Description

Adds static IPv4 client source binding information to the switch IP binding database. Although DHCPv4 snooping is often used to dynamically populate the binding database, this command is available for manually adding entries to the switch IP binding database.



NOTE

Statically configured IP binding information supersedes any dynamically collected binding information for the same client.

The no form of this command removes the specified binding that was statically configured with the **ipv4 source-binding** command. The no form has no effect on bindings that were dynamically configured with DHCPv4 snooping.

Parameter	Description
<VLAN-ID>	Specifies the ID of an existing VLAN on which the client is connected. Range: 1 to 4094.
<IPV4-ADDR>	Specifies the client IPv4 unicast address.
<MAC-ADDR>	Specifies the client MAC address.
	Specifies the interface on which the client is connected.

Parameter	Description
<IFNAME>	

Examples

Adding a static IPv4 binding:

```
switch(config) # ipv4 source-binding 1 10.2.1.4 00:50:56:96:e4:cf 1/1/1
```

Removing a IPv4 binding:

```
switch(config) # no ipv4 source-binding 1 10.2.1.4 00:50:56:96:e4:cf 1/1/1
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8400	config	Administrators or local user group members with execution rights for this command.

ipv4 source-lockdown

Syntax

```
ipv4 source-lockdown
no ipv4 source-lockdown
```

Description

Enables IPv4 source lockdown for all VLANs on the selected interface (port).

The no form of this command disables IPv4 source lockdown for the selected interface (port).



CAUTION

This configuration will disable flow tracking statistics collection.

Examples

Enabling IPv4 source lockdown on interface 1/1/1:

```
switch(config) # interface 1/1/1  
switch(config-if) # ipv4 source-lockdown
```

Enabling IPv4 source lockdown on interface lag112:

```
switch(config) # interface lag112  
switch(config-if) # ipv4 source-lockdown
```

Disabling IPv4 source lockdown on interface 1/1/1:

```
switch(config) # interface 1/1/1  
switch(config-if) # no ipv4 source-lockdown
```

Command History

Release	Modification
10.14	Added information related to role based IPFIX.
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8400	config-if	Administrators or local user group members with execution rights for this command.

ipv4 source-lockdown hardware retry

Syntax

```
ipv4 source-lockdown hardware retry <VLAN-ID>  
                                <IPV4-ADDR>
```

Description

Retries the IPv4 source lockdown hardware programming for a client identified by VLAN and IPv4 address.

Parameter	Description
<VLAN-ID>	Specifies the ID of an existing VLAN on which the client is connected. Range: 1 to 4094.
<IPV4-ADDR>	Specifies the client IPv4 unicast address.

Example

Configure IPv4 source lockdown hardware retry for the client on VLAN 10.

```
switch(config) # ipv4 source-lockdown hardware retry 10 1.1.2.1
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8400	config	Administrators or local user group members with execution rights for this command.

show ipv4 source-binding

Syntax

```
show ipv4 source-binding [vsx-peer]
```

Description

Shows all IPv4 static source binding information irrespective of source lockdown configuration..

Parameter	Description
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Examples

Showing all IPv4 source binding information:

```
switch# show ipv4 source-binding
```

PORT ADDRESS	VLAN	MAC-ADDRESS	HW-STATUS	FROM	IPv4-
-----	-----	-----	-----	-----	
1/1/1	2	aa:bb:cc:dd:ee:ff	Yes	static	1.2.3.4
1/1/2	12	aa:ab:cc:dd:ee:ff	Yes	static	
10.20.30.40					

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8400	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show ipv4 source-lockdown

Syntax

```
show ipv4 source-lockdown [binding [interface <IFNAME> | ip <IPV4-ADDR> |  
mac <MAC-ADDR> | vlan <VLAN-ID>] | interface <IFNAME>] [vsx-peer]
```

Description

Shows summary or detailed IPv4 source lockdown information. When entered without parameters, summary status information for all interfaces (ports) in the binding database is shown.

Parameter	Description
binding	Specifies that detailed lockdown binding record information is to be displayed. The binding database record can be identified by any one of interface (port), ip , mac , or vlan .
interface <IFNAME>	Specifies the client interface (port). When entered without the binding parameter, the summary status information is displayed for the specified interface.
ip <IPV4-ADDR>	Specifies the client IPv4 unicast address.
mac <MAC-ADDR>	Specifies the client MAC address.
vlan <VLAN-ID>	Specifies the ID of an existing VLAN on which the client is connected. Range: 1 to 4094.
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Examples

Showing the summary status information for all interfaces in the binding database:

```
switch# show ipv4 source-lockdown  
INTERFACE  LOCKDOWN  HW-STATUS  
-----  
1/1/1      Yes       Yes
```


1/1/2	Yes	No
lag112	Yes	Yes

Showing the summary status information for the specified interface in the binding database:

```
switch# show ipv4 source-lockdown interface 1/1/2
```

INTERFACE	LOCKDOWN	HW-STATUS
-----	-----	-----
1/1/2	Yes	No

Showing the detailed binding record and related information for all interfaces in the binding database:

```
switch# show ipv4 source-lockdown binding
```

```
Interface Name      : 1/1/1
VLAN Id             : 2000
MAC Address         : 00:50:56:96:e4:cf
IP Address          : 192.168.142.113
Time Remaining      : static
Lockdown Status     : Yes
Hardware Status     : Yes
Hardware Error Reason : --
Interface Name      : 1/1/2
VLAN Id             : 100
MAC Address         : 00:50:56:96:04:4d
IP Address          : 120.168.43.52
Time Remaining      : 115 seconds
Lockdown Status     : Yes
Hardware Status     : No
Hardware Error Reason : Resource unavailable
Interface Name      : lag112
VLAN Id             : 12
MAC Address         : 00:50:56:96:d8:3d
IP Address          : 120.168.76.182
Time Remaining      : static
Lockdown Status     : Yes
Hardware Status     : Yes
Hardware Error Reason : --
Interface Name      : 1/1/1
VLAN Id             : 2000
MAC Address         : 00:50:56:96:e4:cf
IP Address          : 192.168.142.113
Time Remaining      : static
Lockdown Status     : Yes
Hardware Status     : Yes
Hardware Error Reason : --
Interface Name      : 1/1/2
VLAN Id             : 100
```

```
MAC Address      : 00:50:56:96:04:4d
IP Address       : 120.168.43.52
Time Remaining   : 115 seconds
Lockdown Status  : Yes
Hardware Status   : No
Hardware Error Reason : Resource unavailable
Interface Name    : lag112
VLAN Id          : 12
MAC Address      : 00:50:56:96:d8:3d
IP Address       : 120.168.76.182
Time Remaining   : static
Lockdown Status  : Yes
Hardware Status   : Yes
Hardware Error Reason : --
```

Showing the detailed binding record and related information for interface 1/1/2:

```
switch# show ipv4 source-lockdown binding interface 1/1/2
```

```
Interface Name    : 1/1/2
VLAN Id          : 100
MAC Address      : 00:50:56:96:04:4d
IP Address       : 120.168.43.52
Time Remaining   : 115 seconds
Lockdown Status  : Yes
Hardware Status   : No
Hardware Error Reason : Resource unavailable
Interface Name    : 1/1/2
VLAN Id          : 100
MAC Address      : 00:50:56:96:04:4d
IP Address       : 120.168.43.52
Time Remaining   : 115 seconds
Lockdown Status  : Yes
Hardware Status   : No
Hardware Error Reason : Resource unavailable
```

Showing the detailed binding record and related information for interface lag112 (identified in this example command by the IP address):

```
switch# show ipv4 source-lockdown binding ip 120.168.76.182
```

```
Interface Name    : lag112
VLAN Id          : 12
MAC Address      : 00:50:56:96:d8:3d
IP Address       : 120.168.76.182
Time Remaining   : static
Lockdown Status  : Yes
Hardware Status   : Yes
Hardware Error Reason : --
```

Showing the detailed binding record and related information for interface 1/1/1 (identified in this example command by the MAC address):

```
switch# show ipv4 source-lockdown binding mac 00:50:56:96:e4:cf
Interface Name      : 1/1/1
VLAN Id             : 2000
MAC Address         : 00:50:56:96:e4:cf
IP Address          : 192.168.142.113
Time Remaining      : static
Lockdown Status     : Yes
Hardware Status     : Yes
Hardware Error Reason : --
```

Showing the detailed binding record and related information for interface 1/1/2 (identified in this example command by the VLAN):

```
switch# show ipv4 source-lockdown binding vlan 100
Interface Name      : 1/1/2
VLAN Id             : 100
MAC Address         : 00:50:56:96:04:4d
IP Address          : 120.168.43.52
Time Remaining      : 115 seconds
Lockdown Status     : Yes
Hardware Status     : No
Hardware Error Reason : Resource unavailable
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8400	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

IPv6 source lockdown commands

Subtopics

IPv6 source lockdown commands

IPv6 source lockdown commands

Select a command from the list in the left navigation menu.

Subtopics

ipv6 source-binding

ipv6 source-lockdown

ipv6 source-lockdown hardware retry

show ipv6 source-binding

show ipv6 source-lockdown

ipv6 source-binding

Syntax

```
ipv6 source-binding <VLAN-ID>
    <IPV6-ADDR>
    <MAC-ADDR>
    <IFNAME>
no ipv6 source-binding <VLAN-ID>
    <IPV6-ADDR>
    <MAC-ADDR>
    <IFNAME>
```

Description

Adds static IPv6 client source binding information to the switch IPv6 binding database. Although DHCPv6 snooping is often used to dynamically populate the binding database, this command is available for manually adding entries to the switch IPv6 binding database.



NOTE

Statically configured IPv6 binding information supersedes any dynamically collected binding information for the same client.

The no form of this command removes the specified binding that was statically configured with the **ipv6 source-binding** command. The no form has no effect on bindings that were dynamically configured with DHCPv6 snooping.

Parameter	Description
<VLAN-ID>	Specifies the ID of an existing VLAN on which the client is connected. Range: 1 to 4094.
<IPv6-ADDR>	Specifies the client IPv6 address.
<MAC-ADDR>	Specifies the client MAC address.
<IFNAME>	Specifies the interface on which the client is connected.

Examples

Adding a static IPv6 binding:

```
switch(config) # ipv6 source-binding 2 2000::2 00:12:11:44:55:12 1/1/28
```

Removing a IPv6 binding:

```
switch(config) # no ipv6 source-binding 2 2000::2 00:12:11:44:55:12 1/1/28
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8400	config	Administrators or local user group members with execution rights for this command.

ipv6 source-lockdown

Syntax

```
ipv6 source-lockdown
no ipv6 source-lockdown
```

Description

Enables IPv6 source lockdown for all VLANs on the selected interface (port).

The no form of this command disables IPv6 source lockdown for the selected interface (port).



CAUTION

This configuration will disable flow tracking statistics collection.

Examples

Enabling IPv6 source lockdown on interface 1/1/1:

```
switch(config) # interface 1/1/1
switch(config-if) # ipv6 source-lockdown
```

Enabling IPv6 source lockdown on interface lag112:

```
switch(config) # interface lag112
switch(config-if) # ipv6 source-lockdown
```

Disabling IPv6 source lockdown on interface 1/1/1:

```
switch(config) # interface 1/1/1
switch(config-if) # no ipv6 source-lockdown
```

Command History

Release	Modification
10.14	Added information related to role based IPFIX.
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8400	config-if	Administrators or local user group members with execution rights for this command.

ipv6 source-lockdown hardware retry

Syntax

```
ipv6 source-lockdown hardware retry <VLAN-ID>  
                                <IPV6-ADDR>
```

Description

Retries the IPV6 source lockdown hardware programming for a client identified by VLAN and IPv6 address.

Parameter	Description
<VLAN-ID>	Specifies the ID of an existing VLAN on which the client is connected. Range: 1 to 4094.
<IPV6-ADDR>	Specifies the client IPv6 address.

Example

Configure IPv6 source lockdown hardware retry for the client on VLAN 1.

```
switch(config)# ipv6 source-lockdown hardware retry 1 2000::2
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8400	config	Administrators or local user group members with execution rights for this command.

show ipv6 source-binding

Syntax

```
show ipv6 source-binding [vsx-peer]
```

Description

Shows all IPv6 static source binding information irrespective of source lockdown configuration.

Parameter	Description
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Examples

Showing all IPv6 source binding information:

switch#

show ipv6 source-binding

```
PORT VLAN MAC-ADDRESS HW-STATUS FROM IPv6-ADDRESS -----
----- 1/1/1 1234 00:50:56:96:e4:cf Yes/No static 3000::1 1/1/1 1 00:50:56:96:04:4d Yes/No
static 3000::2 1/1/24 1 00:01:01:00:00:01 Yes static 1001::1
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8400	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show ipv6 source-lockdown

Syntax

```
show ipv6 source-lockdown [binding [interface <IFNAME> | ip <IPV6-ADDR> |
mac <MAC-ADDR> | vlan <VLAN-ID>] | interface <IFNAME>] [vsx-peer]
```

Description

Shows summary or detailed IPv6 source lockdown information. When entered without parameters, summary status information for all interfaces (ports) in the binding database is shown.

Parameter	Description
binding	Specifies that detailed lockdown binding record information is to be displayed. The binding database record can be identified by any one of interface (port), ip , mac , or vlan .

Parameter	Description
<code>interface <IFNAME></code>	Specifies the client interface (port). When entered without the binding parameter, the summary status information is displayed for the specified interface.
<code>ip <IPV6-ADDR></code>	Specifies the client IPv6 address.
<code>mac <MAC-ADDR></code>	Specifies the client MAC address.
<code>vlan <VLAN-ID></code>	Specifies the ID of an existing VLAN on which the client is connected. Range: 1 to 4094.
<code>vsx-peer</code>	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Examples

Showing the summary status information for all interfaces in the binding database:

```
switch# show ipv6 source-lockdown
  INTERFACE  LOCKDOWN  HW-STATUS
  -----
  1/1/1      Yes      Yes
  1/1/2      Yes      Yes
  lag112     Yes      Yes
```

Showing the summary status information for the specified interface in the binding database:

```
switch# show ipv6 source-lockdown interface 1/1/2
  INTERFACE  LOCKDOWN  HW-STATUS
  -----
  1/1/2      Yes      No
```

Showing the detailed binding record and related information for all interfaces in the binding database:

```
switch# show ipv6 source-lockdown binding
Interface Name      : 1/1/1
VLAN Id             : 1234
MAC Address         : 00:50:56:96:e4:cf
IP Address          : aaaa:bbbb:cccc:dddd:eeee:1234
Time Remaining      : static
Lockdown Status     : Yes
Hardware Status     : Yes
Hardware Error Reason : --
Interface Name      : 1/1/2
```

```

VLAN Id           : 1234
MAC Address       : 00:50:56:96:04:4d
IP Address        : 4000::1
Time Remaining    : 3290 seconds
Lockdown Status   : Yes
Hardware Status    : No
Hardware Error Reason : Resource unavailable
Interface Name     : lag112
VLAN Id           : 151
MAC Address       : 00:50:56:96:d8:3d
IP Address        : 1001::5
Time Remaining    : 1200 seconds
Lockdown Status   : No
Hardware Status    : Yes
Hardware Error Reason : --
Interface Name     : 1/1/1
VLAN Id           : 1234
MAC Address       : 00:50:56:96:e4:cf
IP Address        : aaaa:bbbb:cccc:dddd:eeee:1234
Time Remaining    : static
Lockdown Status   : Yes
Hardware Status    : Yes
Hardware Error Reason : --
Interface Name     : 1/1/2
VLAN Id           : 1234
MAC Address       : 00:50:56:96:04:4d
IP Address        : 4000::1
Time Remaining    : 3290 seconds
Lockdown Status   : Yes
Hardware Status    : No
Hardware Error Reason : Resource unavailable
Interface Name     : lag112
VLAN Id           : 151
MAC Address       : 00:50:56:96:d8:3d
IP Address        : 1001::5
Time Remaining    : 1200 seconds
Lockdown Status   : No
Hardware Status    : Yes
Hardware Error Reason : --

```

Showing the detailed binding record and related information for interface 1/1/2:

```

switch# show ipv6 source-lockdown binding interface 1/1/2
Interface Name      : 1/1/2
VLAN Id            : 1234

```

```
MAC Address      : 00:50:56:96:04:4d
IP Address       : 4000::1
Time Remaining   : 3290 seconds
Lockdown Status  : Yes
Hardware Status   : No
Hardware Error Reason : Resource unavailable
Interface Name    : 1/1/2
VLAN Id          : 1234
MAC Address      : 00:50:56:96:04:4d
IP Address       : 4000::1
Time Remaining   : 3290 seconds
Lockdown Status  : Yes
Hardware Status   : No
Hardware Error Reason : Resource unavailable
```

Showing the detailed binding record and related information for interface 1/1/2 (identified in this example command by the IP address):

```
switch# show ipv6 source-lockdown binding ip 4000::1
Interface Name    : 1/1/2
VLAN Id          : 1234
MAC Address      : 00:50:56:96:04:4d
IP Address       : 4000::1
Time Remaining   : 515 seconds
Lockdown Status  : No
Hardware Status   : Yes
Hardware Error Reason : --
```

Showing the detailed binding record and related information for interface 1/1/1 (identified in this example command by the MAC address):

```
switch# show ipv6 source-lockdown binding mac 00:50:56:96:e4:cf
Interface Name    : 1/1/1
VLAN Id          : 1234
MAC Address      : 00:50:56:96:e4:cf
IP Address       : aaaa:bbbb:cccc:dddd:eeee:1234
Time Remaining   : static
Lockdown Status  : Yes
Hardware Status   : Yes
Hardware Error Reason : --
```

Showing the detailed binding record and related information for interface lag112 (identified in this example command by the VLAN):

```
switch# show ipv6 source-lockdown binding vlan 151
Interface Name    : lag112
VLAN Id          : 151
MAC Address      : 00:50:56:96:d8:3d
IP Address       : 1001::5
```

```
Time Remaining      : 1200 seconds
Lockdown Status     : No
Hardware Status      : Yes
Hardware Error Reason : --
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8400	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Internet Control Message Protocol (ICMP)

The Internet Control Message Protocol (ICMP) is a supporting protocol in the Internet protocol suite. The protocol is used by network devices, including routers, to send error messages and operational information. For example, an ICMP message might indicate that a requested service is not available. Another example of an ICMP message might be that a host or router could not be reached.

Subtopics

[ICMP message types](#)

[When ICMP messages are sent](#)

[ICMP redirect messages](#)

[When ICMP redirect messages are sent](#)

[ICMP commands](#)

ICMP message types

The type field identifies the type of message sent by the host or gateway.

Type	ICMP messages
0	Echo Reply (Ping Reply, used with Type 8, Ping Request)
3	Destination Unreachable
4	Source Quench
5	Redirect
8	Echo Request (Ping Request, used with Type 0, Ping Reply)
9	Router Advertisement (Used with Type 9)
10	Router Solicitation (Used with Type 10)
11	Time Exceeded
12	Parameter Problem
13	Timestamp Request (Used with Type 14)
14	Timestamp Reply (Used with Type 13)
15	Information Request (obsolete) (Used with Type 16)
16	Information Reply (obsolete) (Used with Type 15)
17	Address Mask Request (Used with Type 17)
18	Address Mask Reply (Used with Type 18)

When ICMP messages are sent

ICMP messages are sent when one or more of the following scenarios occur:

- A datagram cannot reach its destination.
- The gateway does not have the buffering capacity to forward a datagram.
- The gateway can direct the host to send traffic on a shorter route.

ICMP redirect messages

ICMP redirect messages are used by routers to notify the hosts on the data link that a better route is available for a particular destination.

When ICMP redirect messages are sent

The switch is configured to send redirects by default. ICMP redirect messages are sent when one or more of the following scenarios occur:

- The interface on which the packet comes into the router is the same interface on which the packet gets routed out.
- The subnet or network of the source IP address is on the same subnet or network of the next-hop IP address of the routed packet.
- The datagram is not source-routed.
- The destination unicast address is unreachable. In this case, the router generates the ICMP destination unreachable message to inform the source host about the situation.

ICMP commands

Subtopics

[ICMP commands](#)

ICMP commands

Select a command from the list in the left navigation menu.

Subtopics

[ip icmp redirect](#)

[ip icmp throttle](#)

[ip icmp unreachable](#)

ip icmp redirect

Syntax

```
ip icmp redirect
no ip icmp redirect
```

Description

Enables the sending of ICMPv4 and ICMPv6 redirect messages to the source host. Enabled by default.

The **no** form of this command disables ICMPv4 and ICMPv6 redirect messages to the source host.

Examples

Enabling ICMP redirect messages:

```
switch(config)# ip icmp redirect
```

Disabling ICMP redirect messages:

```
switch(config)# no ip icmp redirect
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

ip icmp throttle

Syntax

```
ip icmp throttle <PACKET-INTERVAL>
no ip icmp throttle [<PACKET-INTERVAL>]
```


Description

Used to configure the throttle parameter for both ICMPv4 and ICMPv6 error messages and redirect messages.

The **no** form of this command disables the throttle parameter for both ICMPv4 and ICMPv6 error messages and redirect messages.

Parameter	Description
<code><PACKET-INTERVAL></code>	Specifies the ICMPv4/v6 packet interval in seconds. Default: 1 s econd. Range: 1 - 86400.

Examples

Enabling the throttle parameter for both ICMPv4 and ICMPv6 error messages and redirect messages:

```
switch(config)# ip icmp throttle 3000
```

Disabling the throttle parameter for both ICMPv4 and ICMPv6 error messages and redirect messages:

```
switch(config)# no ip icmp throttle
```

Command History

Release	Modification
10.8	Added the optional <code><PACKET-INTERVAL></code> parameter to the no form of the command.
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	<code>config</code>	Administrators or local user group members with execution rights for this command.

ip icmp unreachable

Syntax

```
ip icmp unreachable
no ip icmp unreachable
```

Description

Enables the sending of ICMPv4 and ICMPv6 destination unreachable messages on the switch to a source host when a specific host is unreachable. The unreachable host address originates from the failed packet. Default setting.

The **no** form of this command disables the sending of ICMPv4 and ICMPv6 destination unreachable messages from the switch to a source host when a specific host is unreachable. This command does not prevent other hosts from sending an ICMP unreachable message.

Examples

Enabling ICMPv4 and ICMPv6 destination unreachable messages to a source host:

```
switch(config)# ip icmp unreachable
```

Disabling ICMPv4 and ICMPv6 destination unreachable messages to a source host:

```
switch(config)# no ip icmp unreachable
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

DNS

The Domain Name System (DNS) is the Internet protocol for mapping a hostname to its IP address. DNS allows users to enter more readily memorable and intuitive hostnames, rather than IP addresses, to identify devices connected to a network. It also allows a host to keep the same hostname even if it changes its IP address.

Hostname resolution can be either static or dynamic.

- In static resolution, a local table is defined on the switch that associates hostnames with their IP addresses. Static tables can be used to speed up the resolution of frequently queried hosts.
- Dynamic resolution requires that the switch query a DNS server located elsewhere on the network. Dynamic name resolution takes more time than static name resolution, but requires far less configuration and management.

Subtopics

DNS client

Configuring the DNS client

Fully Qualified Domain Name Resolver

DNS client commands

DNS client

The DNS client resolves hostnames to IP addresses for protocols that are running on the switch. When the DNS client receives a request to resolve a hostname, it can do so in one of two ways:

- Forward the request to a DNS name server for resolution.
- Reply to the request without using a DNS name server, by resolving the name using a statically defined table of hostnames and their associated IP addresses.

Configuring the DNS client

Syntax

Procedure

1. Configure one or more DNS name servers with the command `ip dns server`.
2. To resolve DNS requests by appending a domain name to the requests, either configure a single domain name with the command `ip dns domain-name`, or configure a list of up to six domain names with the command `ip dns domain-list`.

3. To use static name resolution for certain hosts, associate an IP address to a host with the command `ip dns host`.
4. Review your DNS configuration settings with the command `show ip dns`.

Examples

This example creates the following configuration:

- Defines the domain **switch.com** to append to all requests.
- Defines a DNS server with IPv4 address of **1.1.1.1**.
- Defines a static DNS host named **myhost1** with an IPv4 address of **3.3.3.3**.
- DNS client traffic is sent on the default VRF (named **default**).

```
switch(config)# ip dns domain-name switch.com
switch(config)# ip dns server-address 1.1.1.1
switch(config)# ip dns host myhost1 3.3.3.3
switch(config)# exit
switch# show ip dns
VRF Name : default
Mode : static
Domain Name : switch.com
Name Server(s) : 1.1.1.1
Host configuration: Active
Host Name                                           Address
-----
myhost1                                           3.3.3.3
```

This example creates the following configuration:

- Defines three domains to append to DNS requests **domain1.com**, **domain2.com**, **domain3.com** with traffic forwarding on VRF **mainvrf**.
- Defines a DNS server with an IPv6 address of **c::13**.
- Defines a DNS host named **myhost** with an IPv4 address of **3.3.3.3**.

```
switch(config)# ip dns domain-list domain1.com vrf mainvrf
switch(config)# ip dns domain-list domain2.com vrf mainvrf
switch(config)# ip dns domain-list domain3.com vrf mainvrf
switch(config)# ip dns server-address c::13 vrf mainvrf
switch(config)# ip dns host myhost 3.3.3.3 vrf mainvrf
switch(config)# quit
switch# show ip dns vrf mainvrf
VRF Name : mainvrf
```

```

Mode : static
DNS Domain list : domain1.com, domain2.com, domain3.com
Name Server(s) : c::13
Host Name                                             Address
-----
-----
myhost                                              3.3.3.3

```

Fully Qualified Domain Name Resolver

The FQDN (Fully Qualified Domain Name) resolver is a subsystem within the DNS client that enables dynamic resolution of domain names to their corresponding IP addresses (IPv4 and/or IPv6). The task of name resolutions can be offloaded to **FQDN Resolver** by the applications. **FQDN Resolver** performs the name resolution and updates the status back to the interested applications. Periodic refresh for name resolution will be carried by this service.

With the command line interface it's possible to configure refresh Interval and force refresh for FQDN resolver entries. The following show commands are also available:

Show FQDN Resolver

Field	Description
Total FQDN	Total count of FQDN resolver entries in the database.
Refresh Time.	Refresh interval for FQDN resolver entries in second s.
Source	Source of the resolution requests.
VRF	Virtual Routing and Forwarding instance.
FQDN	Fully Qualified Domain Name being resolved.
Status	Resolution status (resolved, unresolved or stale).
Addr - Family	Address family requested for resolution (IPv4, IPv6, or both).
ip - address	Resolved IP addresses.

Show FQDN Resolver Detail

Field	Description
Source	Source of the resolution requests.
VRF	Virtual Routing and Forwarding instance.
FQDN	Fully Qualified Domain Name being resolved.
Status	Resolution status (resolved, unresolved or stale).
Requested Address Family	Address family requested for resolution (IPv4, IPv6, or both).
IPv4 Addresses	Resolved IPv4 addresses.
IPv6 Addresses	Resolved IPv6 addresses.

Show FQDN Resolver Refresh Interval

Field	Description
Refresh Interval	Current refresh interval for FQDN resolvers in seconds.

DNS client commands

Subtopics

[DNS client commands](#)

DNS client commands

Select a command from the list in the left navigation menu.

Subtopics

[ip dns domain-list](#)

[ip dns domain-name](#)

[ip dns host](#)

- [ip dns server address](#)
- [ip dns fqdn-resolver refresh-interval](#)
- [ip dns fqdn-resolver force-refresh](#)
- [show ip dns](#)
- [Show FQDN Resolver](#)
- [Show IP DNS FQDN Resolver Detail](#)
- [Show IP DNS FQDN Resolver Refresh Interval](#)

ip dns domain-list

Syntax

```
ip dns domain-list <DOMAIN-NAME> [vrf
                                <VRF-NAME>

                                ]
no ip dns domain-list <DOMAIN-NAME> [vrf
                                <VRF-NAME>

                                ]
```

Description

Configures one or more domain names that are appended to the DNS request. The DNS client appends each name in succession until the DNS server replies. Domains can be either IPv4 or IPv6. By default, requests are forwarded on the default VRF.

The **no** form of this command removes a domain from the list.

Parameter	Description
list <DOMAIN-NAME>	Specifies a domain name. Up to six domains can be added to the list. Length: 1 to 256 characters.

Examples

This example defines a list with two entries: **domain1.com** and **domain2.com**.

```
switch(config)# ip dns domain-list domain1.com
switch(config)# ip dns domain-list domain2.com
```

This example defines a list with two entries, **domain2.com** and **domain5.com**, with requests being sent on **mainvrf**.

```
switch(config)# ip dns domain-list domain2.com vrf mainvrf
switch(config)# ip dns domain-list domain5.com vrf mainvrf
```

This example removes the entry **domain1.com**.

```
switch(config)# no ip dns domain-list domain1.com
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

ip dns domain-name

Syntax

```
ip dns domain-name <DOMAIN-NAME> [ vrf <VRF-NAME> ]
no ip dns domain-name <DOMAIN-NAME> [ vrf <VRF-NAME> ]
```

Description

Configures a domain name that is appended to the DNS request. The domain can be either IPv4 or IPv6. By default, requests are forwarded on the default VRF. If a domain list is defined with the command `ip dns domain-list`, the domain name defined with this command is ignored.

The **no** form of this command removes the domain name.

Parameter	Description
	Specifies the domain name to append to DNS requests. Length: 1 to 256 characters.

Parameter	Description
<code><DOMAIN-NAME></code>	
<code>vrf <VRF-NAME></code>	Specifies a VRF name. Default: default.

Examples

Setting the default domain name to `domain.com`:

```
switch(config)# ip dns domain-name domain.com
```

Removing the default domain name `domain.com`:

```
switch(config)# no ip dns domain-name domain.com
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	<code>config</code>	Administrators or local user group members with execution rights for this command.

ip dns host

Syntax

```
ip dns host <HOST-NAME>
               <IP-ADDR> [ vrf <VRF-NAME> ]
no ip dns host <HOST-NAME>
               <IP-ADDR> [ vrf <VRF-NAME> ]
```

Description

Associates a static IP address with a hostname. The DNS client returns this IP address instead of querying a DNS server for an IP address for the hostname. Up to six hosts can be defined. If no VRF is defined, the default VRF is used.

The **no** form of this command removes a static IP address associated with a hostname.

Parameter	Description
host <HOST-NAME>	Specifies the name of a host. Length: 1 to 256 characters.
<IP-ADDR>	Specifies an IP address in IPv4 format (x.x.x.x), where x is a decimal number from 0 to 255, or IPv6 format (xxxx:xxxx:x xxx:xxxx:xxxx:xxxx:xxxx:xxxx), where x is a hexa decimal number from 0 to F.
vrf <VRF-NAME>	Specifies a VRF name. Default: default.

Examples

This example defines an IPv4 address of **3.3.3.3** for **host1**.

```
switch(config)# ip dns host host1 3.3.3.3
```

This example defines an IPv6 address of **b::5** for **host 1**.

```
switch(config)# ip dns host host1 b::5
```

This example defines removes the entry for **host 1** with address **b::5**.

```
switch(config)# no ip dns host host1 b::5
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	<code>config</code>	Administrators or local user group members with execution rights for this command.

ip dns server address

Syntax

```
ip dns server-address <IP-ADDR> [ vrf <VRF-NAME> ]  
no ip dns server-address <IP-ADDR> [ vrf <VRF-NAME> ]
```

Description

Configures the DNS name servers that the DNS client queries to resolve DNS queries. Up to six name servers can be defined. The DNS client queries the servers in the order that they are defined. If no VRF is defined, the default VRF is used.

The **no** form of this command removes a name server from the list.

Parameter	Description
<code><IP-ADDR></code>	Specifies an IP address in IPv4 format (x.x.x.x), where x is a decimal number from 0 to 255, or IPv6 format (xxxx:xxxx:x xxx:xxxx:xxxx:xxxx:xxxx:xxxx), where x is a hexadecimal number from 0 to F.
<code>vrf <VRF-NAME></code>	Specifies a VRF name. Default: default.

Examples

This example defines a name server at **1.1.1.1**.

```
switch(config)# ip dns server-address 1.1.1.1
```

This example defines a name server at **a::1**.

```
switch(config)# ip dns server-address a::1
```

This example removes a name server at **a::1**.

```
switch(config)# no ip dns server-address a::1
```

Command History

Release	Modification
---------	--------------

10.07 or earlier	- -
------------------	-----

Command Information

Platforms	Command context	Authority
-----------	-----------------	-----------

All platforms	config	Administrators or local user group members with execution rights for this command.
---------------	--------	--

ip dns fqdn-resolver refresh-interval

Syntax

```
[no] ip dns fqdn-resolver refresh-interval <3600-86400>
```

Description

Sets the refresh interval for FQDN resolvers. The interval specifies the time in seconds after which the FQDN resolver entries are refreshed. The valid range for the interval is between 3600 seconds (1 hour) to 86400 seconds (1 day). For each FQDN entry refresh timer is applicable from the time entry is installed.

The **no** form of this command removes the refresh interval and sets it back to default value which is 1 day.

Parameter	Description
-----------	-------------

<3600-86400>	Refresh interval in seconds (default: 86400 seconds). Required
--------------	---

Examples

This example sets a custom refresh interval.

```
switch(config)# ip dns fqdn-resolver refresh-interval 6000
```

```
switch(config)# ip dns fqdn-resolver refresh-interval 85400
```

Resetting the refresh interval to the default value.

```
switch(config)# no ip dns fqdn-resolver refresh-interval
```

Attempting to set an invalid interval:

```
switch(config)# ip dns fqdn-resolver refresh-interval 20
Invalid interval. Valid range: 3600-86400 seconds.
```

Command History

Release	Modification
10.17	Command introduced.

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

ip dns fqdn-resolver force-refresh

Syntax

```
ip dns fqdn-resolver force-refresh { fqdn WORD | source port-access | vrf WORD | status (resolved | stale | unresolved) }
```

Description

This command initiates a force refresh for FQDN resolver entry/entries. It can refresh all FQDN entries, or entries filtered by FQDN, source, VRF or status. If no FQDN is specified, all entries are refreshed.

Parameter	Description
fqdn	Refresh entries associated with specific FQDN.

Parameter	Description
	Optional
source	Refresh entries based on the source of the resolution request. Optional
vrf	Refresh entries associated with a specific VRF. Optional
status	Refresh entries associated with a specific resolution status. Optional

Examples

Refreshing all FQDN entries:

```
switch(config)# ip dns fqdn-resolver force-refresh
```

Refreshing a specific FQDN:

```
switch(config)# ip dns fqdn-resolver force-refresh fqdn www.example.com
```

Refreshing all FQDNs from specific source:

```
switch(config)# ip dns fqdn-resolver force-refresh source port-access
```

Refreshing FQDN in a specific VRF:

```
switch(config)# ip dns fqdn-resolver force-refresh fqdn www.example.com vrf
red
```

Refreshing FQDN for a specific source and vrf:

```
switch(config)# ip dns fqdn-resolver force-refresh source classifier vrf red
```

When a FQDN entry is not found:

```
switch(config)# ip dns fqdn-resolver force-refresh fqdn www.nonexistent.com
No FQDN entries matching the given criteria.
```

Command History

Release	Modification
10.17	Command introduced.

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

show ip dns

Syntax

```
show ip dns [vrf <VRF-NAME>] [vsx-peer]
```

Description

Shows all DNS client configuration settings or the settings for a specific VRF.

Parameter	Description
vrf <VRF-NAME>	Specifies the VRF for which to show information. If no VRF is defined, the default VRF is used.

Usage

DNS client arbitration on the MGMT interface on a MGMT VRF can be updated via three different methods.

1. Using the **domain-name** <name> or **nameservers** <servers> commands in the command-line interface.
2. Using the **ip dns domain-name** <DOMAIN-NAME> **vrf** MGMT or **ip dns server-address** <SERVER> **vrf** MGMT commands in the command-line interface.
3. Using the **ip dhcp** command in the command-line interface (dynamic entries).

AOS-CX gives the following priority levels to these three update methods.

- Priority 1 - standalone CLI configuration
- Priority 2 - static ip dns configuration
- Priority 3 - Dynamic config

Examples

These examples define DNS settings and then show how they are displayed with the **show ip dns** command.

```

switch(config)# ip dns domain-name domain.com
switch(config)# ip dns domain-list domain5.com
switch(config)# ip dns domain-list domain8.com
switch(config)# ip dns server-address 4.4.4.4
switch(config)# ip dns server-address 6.6.6.6
switch(config)# ip dns host host3 5.5.5.5
switch(config)# ip dns host host2 2.2.2.2
switch(config)# ip dns host host3 c::12
switch(config)# ip dns domain-name reddomain.com vrf
                    red
                    default
switch(config)# ip dns domain-list reddomain5.com vrf
                    red
                    default
switch(config)# ip dns domain-list reddomain8.com vrf
                    red
                    default
switch(config)# ip dns server-address 4.4.4.5 vrf
                    red
                    default
switch(config)# ip dns server-address 6.6.6.7 vrf
                    red
                    default
switch(config)# ip dns host host3 5.5.5.6 vrf
                    red
                    default
switch(config)# ip dns host host2 2.2.2.3 vrf
                    red
                    default
switch(config)# ip dns host host3 c::13 vrf

                    red

```

```

switch# show ip dns
VRF Name : default
Domain Name : domain.com
DNS Domain list : domain5.com, domain8.com
Name Server(s) : 4.4.4.4, 6.6.6.6
Host Name      Address
-----
host2          2.2.2.2
host3          5.5.5.5

```



```

host3          c::12

VRF Name : red
Domain Name : reddomain.com
DNS Domain list : reddomain5.com, reddomain8.com
Name Server(s) : 4.4.4.5, 6.6.6.7
Host Name      Address
-----
host2          2.2.2.3
host3          5.5.5.6
host3          c::13

switch(config)# ip dns domain-name domain.com vrf red
switch(config)# ip dns domain-list domain5.com vrf red
switch(config)# ip dns domain-list domain8.com vrf red
switch(config)# ip dns server-address 4.4.4.4 vrf red
switch(config)# ip dns server-address 6.6.6.6 vrf red
switch(config)# ip dns host host3 5.5.5.5 vrf red
switch(config)# no ip dns host host2 2.2.2.2 vrf red
switch(config)# ip dns host host3 c::12 vrf red
switch# show ip dns vrf red
VRF Name : red
Domain Name : domain.com
DNS Domain list : domain5.com, domain8.com
Name Server(s) : 4.4.4.4, 6.6.6.6
Host Name      Address
-----
host3          5.5.5.5
host3          c::12

switch(config)# ip dns domain-name domain.com
switch(config)# ip dns domain-list domain5.com
switch(config)# ip dns domain-list domain8.com
switch(config)# ip dns server-address 4.4.4.4
switch(config)# ip dns server-address 6.6.6.6
switch(config)# ip dns host host3 5.5.5.5
switch(config)# ip dns host host3 c::12
switch# show ip dns
VRF Name : default
Domain Name : domain.com
DNS Domain list : domain5.com, domain8.com
Name Server(s) : 4.4.4.4, 6.6.6.6
Host Name      Address
-----

```

host3	5.5.5.5
host3	c::12

Command History

Release	Modification
---------	--------------

10.07 or earlier	- -
------------------	-----

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Show FQDN Resolver

Syntax

```
show ip dns fqdn-resolver
```

Description

This command displays a summary table of all FQDN resolver entries, including the total count of FQDN entries, refresh time, source information, and a tabular display of all entries.

Examples

Show unresolved FQDN entries with ipv4 requested:

```
switch# show ip dns fqdn-resolver
Total FQDN: 1
Refresh Time: 86400 seconds
Source: port-access
VRF      FQDN      Status      Addr-Family  ip-
address
-----
default  host1.search.com unresolved   ipv4         -
```

Show resolved FQDN entries:

```

switch# show ip dns fqdn-resolver
Total FQDN: 2
Refresh Time: 7200 seconds
Source: port-access
VRF          FQDN          Status          Addr-Family
ip-address
-----
default      www.example.com      resolved      ipv4
192.168.1.1, 192.168.1.2
default      api.test.com         resolved      ipv4
10.0.0.1
2001:db8::1, 2001:db8::2
long_vrf_na  a_very_long_fqdn_name resolved      ipv4
10.0.0.2

```

When no FQDN entries exist:

```

switch(config)# show ip dns fqdn-resolver
No FQDN resolver entries found.

```

Command History

Release	Modification
10.17	Command introduced.

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

Show IP DNS FQDN Resolver Detail

Syntax

```

show ip dns fqdn-resolver detail {fqdn WORD | source (port-access) | vrf
WORD | requested-address-family (ipv4|ipv6|both)}

```

Description

Displays detailed hierarchical information for FQDN resolver entries, including the FQDN, VRF, requested address family, resolved IPv4 and IPv6 addresses, resolution status, and remaining refresh timer. The command supports filtering by FQDN, source, VRF, and address family. If no filters are provided, all entries are displayed.

Examples

Show detailed view with unresolved entry:

```
switch# show ip dns fqdn-resolver detail
```

```
-----  
----  
Source: port-access  
-----  
----
```

```
FQDN: host1.search.com  
VRF: default  
Requested Address Family: ipv4  
Status: unresolved  
-----  
----
```

Show detailed view with resolved entries:

```
switch# show ip dns fqdn-resolver detail
```

```
Source: port-access
```

```
  FQDN: www.example.com
```

```
  VRF: default
```

```
  Status: resolved
```

```
  Requested Address Family: both
```

```
    IPv4 Addresses:
```

```
      192.168.1.1
```

```
      192.168.1.2
```

```
    IPv6 Addresses:
```

```
      2001:db8::1
```

```
      2001:db8::2  
-----  
----
```

```
FQDN: www.hpe.com
```

```
VRF: default
```

```
Status: resolved
```

```
Requested Address Family: ipv4
```

```
  IPv4 Addresses:
```

```
    10.0.0.1
```


Show detailed view with filter:

```
switch# show ip dns fqdn-resolver detail fqdn www.example.com
Source: port-access
  FQDN: www.example.com
  VRF: default
  Status: resolved
  Requested Address Family: both
  IPv4 Addresses:
    192.168.1.1
    192.168.1.2
  IPv6 Addresses:
    2001:db8::1
    2001:db8::2
-----
-----
```

Show detailed view when no entries exist:

```
switch# show ip dns fqdn-resolver detail
No FQDN resolver entries found
```



NOTE
The **source** parameter is not supported in 8320, 8400 or 9300 switch series.



NOTE
For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

Release	Modification
10.17	Command introduced.

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

Show IP DNS FQDN Resolver Refresh Interval

Syntax

```
show ip dns fqdn-resolver refresh-interval
```

Description

Displays the current refresh interval for FQDN resolvers.

Examples

Show current refresh interval (default):

```
switch# show ip dns fqdn-resolver refresh-interval
Refresh Interval: 86400 seconds
```

Show refresh interval after configuration change:

```
switch(config)# ip dns fqdn-resolver refresh-interval 7200
switch(config)# exit
switch# show ip dns fqdn-resolver refresh-interval
Refresh Interval: 7200 seconds
```

Command History

Release	Modification
10.17	Command introduced.

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

ARP

ARP (Address Resolution Protocol) is used to map the network address assigned to a device to its physical address. For example, on an Ethernet network, ARP maps layer 3 IPv4 network addresses to layer 2 MAC addresses. (ARP does not work with IPv6 addresses. Instead, the Neighbor discovery protocol is used.)

ARP operates at layer 2. ARP requests are broadcast to all devices on the local network segment and are not forwarded by routers. ARP is enabled by default and cannot be disabled.

Proxy ARP

Proxy ARP allows a routing switch to answer ARP requests from devices on one network on behalf of devices on another network. The ARP proxy is aware of the location of the traffic destination, and offers its own MAC address as the final destination.

For example, if Proxy ARP is enabled on a routing switch connected to two subnets (10.10.10.0/24 and 20.20.20.0/24), the routing switch can respond to an ARP request from 10.10.10.69 for the MAC address of the device with IP address 20.20.20.69.

Typically, the host that sent the ARP request then sends its packets to the switch that has the ARP proxy. This switch then forwards the packets to the intended host through a mechanism such as a tunnel.


Proxy ARP is supported on L3 physical and VLAN interfaces. It is disabled by default. To enable proxy ARP, routing must be enabled on the interface.

Local proxy ARP

Local proxy ARP is a technique by which a device on a given network answers the ARP queries for a host address that is on the same network. It is primarily used to enable layer 3 communication between hosts within a common subnet that are separated by layer 2 boundaries (Example: PVLAN). Local proxy ARP is supported on L3 physical and VLAN interfaces and is disabled by default. Routing must be enabled on the interface to enable local proxy ARP.

Local proxy ARP can be used along with private VLAN deployments to allow layer 3 communication where clients are isolated at layer 2.

Figure 1. Local Proxy ARP Use Case Example

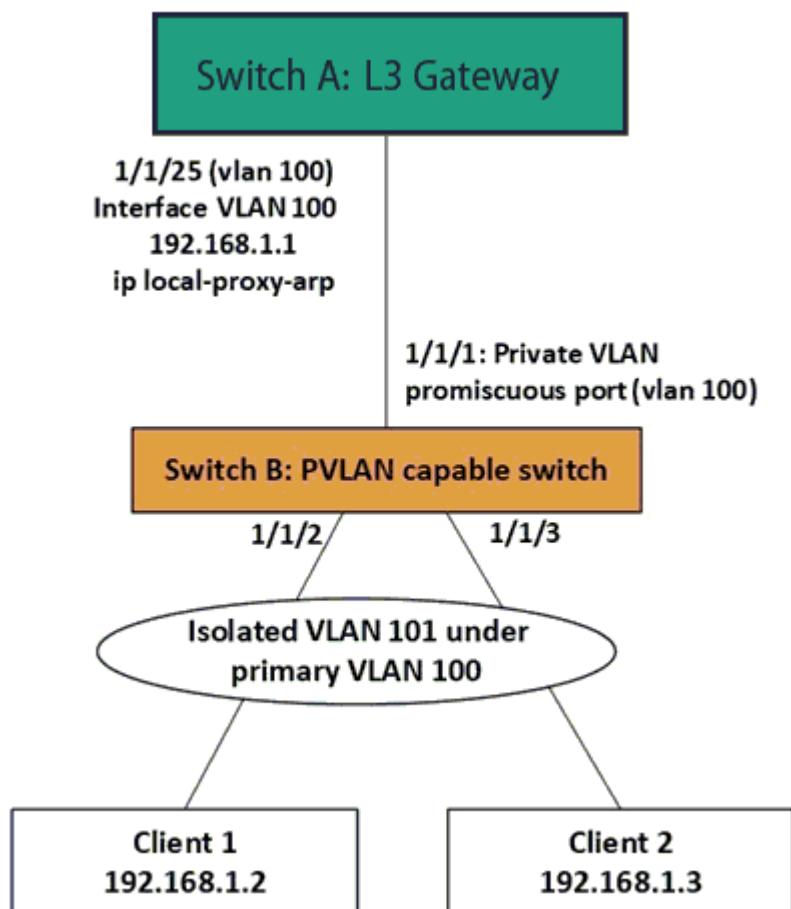

NOTE

The local proxy ARP feature is to be configured only if there is a need for the clients to communicate while still maintaining layer 2 isolation.

The following steps configure the local ARP proxy deployment shown in [Figure 1, Local Proxy ARP Use Case Example](#).

Step 1: Configuring private VLAN in switch B

1. Configure the primary and isolated VLAN first

```

PVLAN-Switch(config)# vlan 100
PVLAN-Switch(config-vlan-100)# private-vlan primary
PVLAN-Switch(config-vlan-100)# vlan 101
PVLAN-Switch(config-vlan-101)# private-vlan isolated primary-vlan 100
  
```

2. Configure the PVLAN secondary ports to which clients are connected

```

PVLAN-Switch(config)# interface 1/1/2,1/1/3
PVLAN-Switch(config-if-<1/1/1,1/1/2>)# vlan trunk allowed 101
  
```



```
PVLAN-Switch(config-if-<1/1/1,1/1/2>) # private-vlan port-type secondary
```

3. Configure the PVLAN promiscuous port on the uplink which connects to the L3 gateway

```
PVLAN-Switch(config) # interface 1/1/1  
PVLAN-Switch(config-if) # vlan trunk allowed 100  
PVLAN-Switch(config-if) # private-vlan port-type promiscuous  
PVLAN-Switch(config-if) # no shutdown
```

For details about private VLAN configuration, refer to the AOS-CX Layer-2 Bridging guide.

Step 2: Configuring L3 gateway in switch A

```
L3-GW(config) # vlan 100  
L3-GW(config-vlan-100) # exit  
L3-GW(config) # interface 1/1/25  
L3-GW(config-if) # vlan trunk allowed 100  
L3-GW(config-if) # no shutdown  
L3-GW(config-if) # exit  
L3-GW(config) # interface vlan 100  
L3-GW(config-if-vlan) # ip address 192.168.1.1/24
```

Now the clients will be able to ping the gateway IP; but will not be able to communicate with each other due to the isolation enforced with private VLAN. As expected, the ping from client 1 to client 2 will fail in the above example, although the clients are in the same subnet.

Step 3: Configuring local proxy ARP in switch A

If local proxy ARP is enabled in the L3 gateway, the L3 gateway responds to ARP requests for addresses in the same subnet. In other words, the L3 gateway will be doing proxy for ARP resolution.

```
L3-GW(config) # no ip icmp redirect  
L3-GW(config) # interface vlan 100  
L3-GW(config-if-vlan) # ip local-proxy-arp
```

With this, the L3 communication will be enabled between client 1 and client 2. Now the ping from client 1 to client 2 will be successful in the above example. The ARP table in client 1 will be populated with the MAC of L3 gateway; not the MAC of client 2. Similar ARP table entry for client 2 as well. In other words, the L3 gateway is doing proxy for ARP resolution for the local network where clients are isolated at layer 2.

Dynamic ARP inspection

Dynamic arp inspection is provided as a mechanism for making ARP more secure.

ARP is used for resolving IP against MAC addresses on a broadcast network segment like the Ethernet and was originally defined by Internet Standard RFC 826. ARP does not support any inherent security mechanism and as such depends on simple datagram exchanges for the resolution, with many of these being broadcast.

Because it is an unreliable and non-secure protocol, ARP is vulnerable to attacks. Some attacks may be targeted toward the networks whereas other attacks may be targeted toward the switch itself. The attacks primarily intend to create denial of service (DoS) for the other entities present in the network.

Most of the attacks are carried out in one of the following three forms:

- Overwhelming the switch control plane with too many ARP packets.
- Overwhelming the switch control plane with too many unresolved data packets.
- Masquerading as a trusted gateway/server by wrongly advertising ARPs.

Several defense mechanisms can be put in place on a switch to protect against attacks:

- Limit the amount of ARP activity allowed from a host or on a port.
- Ensure that all ARP packets are consistent with one or more binding databases, which can be created through various means.
- Enforce integrity checks on the ARP packets to check against different MAC or IP addresses in the Ethernet or IP header and ARP header.

The following is supported:

- Enabling and disabling of Dynamic ARP Inspection on a VLAN level (it does not have to be SVI).
- Defining the member ports of a VLAN as either trusted or untrusted.
- Only ARP traffic on untrusted ports subjected to checks.
- Routed ports (RoPs) always treated as trusted.
- Listening to the DHCP Bindings table and check every ARP packet to match against the binding.

ARP ACLs are not supported and the DHCP snooping table is the only source of binding.

Subtopics

Configuring proxy ARP

Configuring local proxy ARP

ARP commands

Configuring proxy ARP

Syntax

Procedure

1. Switch to configuration context with the command `config`.
2. Switch to an interface with the command `interface`, or to an interface VLAN with the command `interface vlan`, or to a LAG with the command `interface lag`.
3. Enable local proxy ARP with the command `ip proxy-arp`.

Examples

This example configures proxy ARP on interface **1/1/2**

```
switch# config
switch(config)# interface 1/1/2
switch(config-if)# ip proxy-arp
```

```
switch# config
switch(config)# interface 1/1/2
switch(config)# routing
switch(config-if)# ip proxy-arp
```

This example configures proxy ARP on interface VLAN **30**.

```
switch# config
switch(config)# interface vlan 30
switch(config-vlan-30)# ip proxy-arp
```

Configuring local proxy ARP

Syntax

Procedure

1. Switch to configuration context with the command `config`.

2. Switch to an interface with the command `interface`, or to an interface VLAN with the command `interface vlan`, or to a LAG with the command `interface lag`.
3. Enable local proxy ARP with the command `ip local-proxy-arp`.

Examples

This example configures local proxy ARP on interface **1/1/2**

```
switch# config
switch(config)# interface 1/1/2
switch(config-if)# ip local-proxy-arp
```

```
switch# config
switch(config)# interface 1/1/2
switch(config)# routing
switch(config-if)# ip local-proxy-arp
```

This example configures local proxy ARP on interface VLAN **30**.

```
switch# config
switch(config)# interface vlan 30
switch(config-vlan-30)# ip local-proxy-arp
```

ARP commands

Subtopics

ARP commands

ARP commands

Select a command from the list in the left navigation menu.

Subtopics

arp inspection

arp inspection trust

arp ip

arp process-grat-arp

clear arp
debug arp-security
ip proxy-arp
ipv6 local-proxy-nd
ipv6 neighbor mac
show arp
show arp inspection interface
show arp inspection statistics
show arp inspection vlan
show arp state
show arp summary
show arp timeout
show arp vrf
show ipv6 neighbors
show ipv6 neighbors state
show tech arp-security

arp inspection

Syntax

```
arp inspection
```

Description

Enables Dynamic ARP inspection on the current VLAN, which means that ARP packets received from untrusted interfaces are discarded if they have an Invalid IP-to-MAC address binding.

The **no** form of this command disables Dynamic ARP Inspection on the VLAN.

Examples

Enabling dynamic ARP inspection:

```
switch# configure terminal  
switch(config)# vlan 1  
switch(config-vlan)# arp inspection
```

Disabling dynamic ARP inspection:

```
switch# configure terminal  
switch(config)# vlan 1  
switch(config-vlan)# no arp inspection
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8400	config-vlan- <VLAN-ID>	Administrators or local user group members with execution rights for this command.

arp inspection trust

Syntax

```
arp inspection trust
no arp inspection trust
```

Description

Configures the interface as a trusted. All interfaces are untrusted by default.

The **no** form of this command returns the interface to the default state (untrusted).

Example

Setting an interface as trusted:

```
switch(config-if) # arp inspection trust
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8400	config-if	Administrators or local user group members with execution rights for this command.

arp ip

Syntax

```
arp ip <IP_ADDR> mac <MAC_ADDR>
no arp ip <IP_ADDR> mac <MAC_ADDR>
```

Description

Specifies a permanent static neighbor entry in the ARP table (for IPv4 neighbors).

The no form of this command deletes a permanent static neighbor entry from the ARP table.

Parameter	Description
ip <IP-ADDR>	Specifies the IP address of the neighbor or the virtual IP address of the cluster in IP format (x.x.x.x), where x is a decimal number from 0 to 255. . Range: 4096 to 131072. Default: 131072.
mac <MAC-ADDR>	Specifies the MAC address of the neighbor or the multicast MAC address in IANA format (xx:xx:xx:xx:xx:xx), where x is a hexadecimal number from 0 to F. Range: 4096 to 131072. Default: 131072.

Example

Configuring a static ARP entry on a interface VLAN **10**:

```
switch(config)# interface vlan 10
switch(config-if-vlan)# arp ip 2.2.2.2 mac 01:00:5e:00:00:01
```

Removing a static ARP entry on interface VLAN**10**:

```
switch(config)# interface vlan 10
switch(config-if-vlan)# no arp ip 2.2.2.2 mac 01:00:5e:00:00:01
```

Command History

Release	Modification
10.14	Replaced the ipv4 parameter with the ip parameter. The ipv4 parameter is deprecated.
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	config-if config-if-vlan	Administrators or local user group members with execution rights for this command.

arp process-grat-arp

Syntax

```
arp process-grat-arp
no arp process-grat-arp
```

Description

Enables the processing of gratuitous ARP packets on the individual port or group of L3 ports together.

By default, the gratuitous ARP processing is enabled. When gratuitous ARP (GARP) processing is enabled, a switch that is advertising any changes in its MAC through the GARP will reflect in the neighbor table of the switch. However, the switch will not be able to learn the neighbor through the GARP. This configuration is applicable only on L3 interfaces such as ROPs, subinterfaces, and SVIs.

The **no** form of this command disables the processing of gratuitous ARP packets.

Example

Enabling the processing of gratuitous ARP packets on the interface **1/1/1**:

```
switch(config)# interface 1/1/1
switch(config-if)# no shutdown
```



```
switch(config-if) # arp process-grat-arp
```

Enabling the processing of gratuitous ARP packets on interfaces **1/1/1** to **1/1/5**:

```
switch(config) # interface 1/1/1-1/1/5
switch(config-if<1/1/1-1/1/5>) # no shutdown
switch(config-if<1/1/1-1/1/5>) # arp process-grat-arp
```

Enabling the processing of gratuitous ARP packets on sub-interface **1/1/1.10**:



NOTE

Applies only to the HPE Aruba Networking 6300, 6400, 8100, and 8360 Switch Series.

```
switch(config) # interface 1/1/1.10
switch(config-subif) # no shutdown
switch(config-subif) # arp process-grat-arp
```

Disabling the processing of gratuitous ARP packets on VLANs **2** to **100**:

```
switch(config) # interface vlan 2-100
switch(config-if-vlan<2-100>) # no shutdown
switch(config-if-vlan<2-100>) # no arp process-grat-arp
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	config-if config-if-vlan config-subif	Administrators or local user group members with execution rights for this command.

clear arp

Syntax

```
clear arp
  port <PORT-ID> [ip <A.B.C.D>|all] [[ipv6 <X:X::X:X>|all]vla
  vrf [all-vrfs|{<VRF-NAME> [ip <A.B.C.D>] [[ipv6 <X:X::X:X>]]]
```

Description

Clears IPv4 and IPv6 neighbor entries from the ARP table. If you do not specify any VRF or port parameters, ARP table entries are cleared for the **default** VRF.

Parameter	Description
port <PORT-ID>	Specifies a port on the switch. For example: 1/1/1 .
ip <A.B.C.D> all]	(Optional) Include an IP address to clear neighbor entries for th at specific address, or use the all parameter to clear entries for all IP addresses.
ipv6 <X:X::X:X> all	(Optional) Include an IPv6 address to clear neighbor entries for that specific address, or use the all parameter to clear entries fo r all IPv6 addresses.
vrf	Clears IPv4 and IPv6 neighbor entries for the specified VRF or for all VRFs. If no VRF is specified he default VRF is cleared.
all-vrfs	Clear neighbor entries for all VRFs
<VRF-NAME>	Clear neighbor entries for the specified VRF.
ip <A.B.C.D>	(Optional) Include an IP address to clear just the neighbor entri es for the specified IP address.
ipv6 <X:X::X:	(Optional) Include an IPv6 address to clear the neighbor entries for the specified IPv6 address.

Examples

Clearing all IPv4 and IPv6 neighbor ARP entries for the default VRF:

```
switch# clear arp
```

Clearing all ARP neighbor entries for a port:

```
switch# clear arp 1/1/35
```

Clearing all IPv4 and IPv6 neighbor ARP entries for all VRFs:

```
switch# clear arp vrf all-vrfs
```

Clearing all IPv4 and IPv6 neighbor ARP entries for a specific VRF instance:

```
switch# clear arp vrf RED
```

Command History

Release	Modification
10.14	Replaced the ipv4 parameter with the ip parameter. The ipv4 parameter is deprecated.
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

debug arp-security

Syntax

```
debug arp-security <LOG-CATEGORY> [severity <LEVEL>]  
no debug arp-security [<LOG-CATEGORY>] [severity <LEVEL>]
```

Description

Enables ARP security debug logs. If <SEVERITY> is omitted, all severities are logged.

The **no** form of this command disables ARP security debug logs.

Parameter	Description
<code><LOG-CATEGORY></code>	Selects the ARP security debug log category. Available categories are: • all: Selects all ARP security debug log categories. • config: Selects the ARP security config debug log category. • inspection: Selects the ARP security inspection debug log category. • packet: Selects the ARP security packet debug log category.
<code>severity <LEVEL></code>	Specifies how to filter the ARP security debug logging by setting the minimum severity level for which debug logging will be performed. The selected severity level and all severities above (more severe) will be included in the logging. • emerg: Sets ARP security debug log filtering to Emergency only. • alert: Sets ARP security debug log filtering to Alert and above. • critical: Sets ARP security debug log filtering to Critical and above. • error: Sets ARP security debug log filtering to Error and above. • warning: Sets ARP security debug log filtering to Warning and above. • notice: Sets ARP security debug log filtering to Notice and above. • info: Sets ARP security debug log filtering to Info and above. • debug: Sets ARP security debug log filtering to all severities.

Examples

Enable ARP security debug logging for all categories and all severities:

```
switch# debug arp-security all
```

Enable ARP security config debug log for severity level Error and above:

```
switch# debug arp-security config severity error
```

Enable ARP security inspection debug log for severity level Notice and above:

```
switch# debug arp-security inspection severity notice
```

Enable ARP security debug packet for severity level Critical and above:

```
switch# debug arp-security packet severity critical
```

Enable ARP security debug logging for all categories and severity level Alert and above:

```
switch# debug arp-security all severity alert
```

Disable ARP security debug logging:

```
switch# no debug arp-security
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8400	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

ip proxy-arp

Syntax

```
ip proxy-arp
no ip proxy-arp
```

Description

Enables proxy ARP for the specified Layer 3 interface. Proxy ARP is supported on Layer 3 physical interfaces, LAG interfaces, and VLAN interfaces. It is disabled by default. To enable proxy ARP on an interface, routing must be enabled on that interface.

The **no** form of this command disables proxy ARP for the specified interface.

Examples

Enabling proxy ARP on interface **1/1/1**:

```
switch# interface 1/1/1  
switch(config-if)# ip proxy-arp
```

Enabling proxy ARP on VLAN **3**:

```
switch# interface vlan 3  
switch(config-if-vlan)# ip proxy-arp
```

Enabling proxy ARP on a LAG **11**:

```
switch(config)# int lag 11  
switch(config-lag-if)# ip proxy-arp
```

Disabling proxy ARP on interface 1/1/1:

```
switch# interface 1/1/1  
switch(config-if)# no ip proxy-arp
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	config-if config-if-vlan config-lag-vlan	Administrators or local user group members with execution rights for this command.

ipv6 local-proxy-nd

Syntax

```
ipv6 local-proxy-nd  
no ipv6 local-proxy-nd
```

Description

Enables local proxy ND for the specified interface.

The **noipv6 local-proxy-nd** command disables local proxy ND for the specified interface.

Usage

Before enabling local proxy ND, disable Internet Control Message Protocol (ICMP) redirect messages. Disabling the ICMP redirect ensures that hosts don't communicate through other gateways which could possibly have better routes and thereby skip the proxy.

Example

Enable local proxy ND on a L3 physical interface.

```
switch(config)# interface 1/1/1
switch(config-if)# ipv6 local-proxy-nd
```

Enable local proxy ND on a VLAN interface.

```
switch(config)# interface vlan 2
switch(config-if-vlan)# ipv6 local-proxy-nd
```

```
.
```

```
switch(config)# interface 1/1/1.10
switch(config-subif)# ipv6 local-proxy-nd
```

Disable local proxy ND for the specified interface.

```
switch(config-if)# no ipv6 local-proxy-nd
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	config-if	Administrators or local user group members with execution rights for this command.

ipv6 neighbor mac

Syntax

```
ipv6 neighbor <IPV6-ADDR> mac <MAC-ADDR>
no ipv6 neighbor <IPV6-ADDR> mac <MAC-ADDR>
```

Description

Specifies a permanent static neighbor entry in the ARP table (for IPv6 neighbors).

The **no** form of this command deletes a permanent static neighbor entry from the ARP table.

Parameter	Description
<code><IPV6-ADDR></code>	Specifies an IP address in IPv6 format (xxxx:xxxx:xxxx:xxxx:x xxx:xxxx:xxxx:xxxx), where x is a hexadecimal number from 0 to F. Range: 4096 to 131072. Default: 131072.
<code>mac <MAC-ADDR></code>	Specifies the MAC address of the neighbor (xx:xx:xx:xx:xx:xx), where x is a hexadecimal number from 0 to F. Range: 4096 to 131072. Default: 131072.

Example

Creates a static ARP entry on interface **1/1/1**.

```
switch(config)# interface 1/1/1

switch(config-if)# arp ipv6 neighbor 2001:0db8:85a3::8a2e:0370:7334 mac
00:50:56:96:df:c8
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	config-if	Administrators or local user group members with execution rights for this command.

show arp

Syntax

```
show arp [vsx-peer]
```

Description

Shows the entries in the ARP (Address Resolution Protocol) table.

Parameter	Description
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Usage

This command displays information about ARP entries, including the IP address, MAC address, port, and state.

When no parameters are specified, the `show arp` command shows all ARP entries for the default VRF (Virtual Router Forwarding) instance.

Examples

```
switch# show arp
IPv4 Address      MAC                Port              Physical Port    State
-----
192.168.1.2       00:50:56:96:7b:e0  vlan10           1/1/29           stale
192.168.1.3       00:50:56:96:7b:ac  vlan10           1/1/1
reachable
```

Total Number Of ARP Entries Listed- 2.

Command History

Release	Modification
---------	--------------

10.07 or earlier	- -
------------------	-----

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

show arp inspection interface

Syntax

```
show arp inspection interface [<IFNAME>] [vlan <VLAN-ID>] [vsx-peer]
```

Description

Shows the current configuration of dynamic ARP inspection on an interface.

Parameter	Description
<code><IFNAME></code>	Specifies the interface.
<code><VLAN-ID></code>	Specifies the VLAN ID. Range: 1 to 4094.
<code>vsx-peer</code>	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output f

Parameter

Description

rom the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Examples

Showing current configuration of dynamic ARP inspection on all interfaces:

```
switch# show arp inspection interface
```

```
-----  
Interface          Trust-State  
-----  
1/1/1              Untrusted  
-----
```

Showing current configuration of dynamic ARP inspection on all interfaces with VSX peer:

```
switch# show arp inspection interface vsx-peer
```

```
-----  
Interface          Trust-State  
-----  
1/1/1              Untrusted  
lag100             Trusted  
-----
```

Showing current configuration of dynamic ARP inspection on a particular interface:

```
switch# show arp inspection interface 1/1/1
```

```
-----  
Interface          Trust-State  
-----  
1/1/1              Untrusted  
-----
```

Showing current configuration of dynamic ARP inspection on interface VLAN 2:

```
switch# show arp inspection interface vlan 2
```

```
-----  
Interface          Trust-State  
-----  
vlan2              Trusted  
-----
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8400	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show arp inspection statistics

Syntax

```
show arp inspection statistics vlan [<VLAN-ID>] [vsx-peer]
```

Description

Shows statistics about forwarded and dropped ARP packets. When <VLAN-ID> is not specified, information is shown for all configured VLANs.

Parameter	Description
<VLAN-ID>	Specifies the VLAN ID or range of IDs separated by a dash "-". Range: 1 to 4094.
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Examples

Showing ARP packet statistics for a range of VLANs:

```
switch# show arp inspection statistics vlan 1-100
```

VLAN	Name	Forwarded	Dropped
1	DEFAULT_VLAN_1	0	0

Showing ARP packet statistics for VLANs with VSX peer:

```
switch# show arp inspection statistics vlan vsx-peer
```

VLAN	Name	Forwarded	Dropped
1	DEFAULT_VLAN_1	0	0
200	VLAN200	0	0

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8400	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show arp inspection vlan

Syntax

```
show arp inspection vlan [<VLAN-ID>] [vsx-peer]
```

Description

Shows the current configuration of dynamic ARP inspection on a VLAN. When <VLAN-ID> is not specified, information is shown for all configured VLANs.

Parameter	Description
<VLAN-ID>	Specifies the VLAN ID or range of IDs separated by a dash "-". Range: 1 to 4094.
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Examples

Showing dynamic ARP configuration for all VLANs:

```
switch# show arp inspection vlan
```

```
-----
VLAN   Name                ARP Inspection
-----
1      DEFAULT_VLAN_1    -
100    VLAN100            -
200    VLAN200            Enabled
-----
```

Showing dynamic ARP configuration for a particular VLAN:

```
switch# show arp inspection vlan 1
```

```
-----
VLAN   Name                ARP Inspection
-----
1      DEFAULT_VLAN_1    -
-----
```

Showing dynamic ARP configuration for VLANs with VSX peer:

```
switch# show arp inspection vlan vsx-peer
```

```
-----
VLAN   Name                ARP Inspection
-----
1      DEFAULT_VLAN_1    -
-----
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8400	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show arp state

Syntax

```
show arp state {all | failed | incomplete | permanent | reachable | stale}
[vsx-peer]
```

Description

Shows ARP (Address Resolution Protocol) cache entries that are in the specified state.

Parameter	Description
all	Shows the ARP cache entries for all VRF (Virtual Router Forwarding) instances.
failed	Shows the ARP cache entries that are in <code>failed</code> state. The neighbor might have been deleted.
incomplete	Shows the ARP cache entries that are in <code>incomplete</code> state. An incomplete state means that address resolution is in progress and the link-layer address of the neighbor has not yet been determined. A solicitation request was sent, and the switch is waiting for a solicitation reply or a timeout.

Parameter	Description
permanent	Shows the ARP cache entries that are in <code>permanent</code> state. ARP entries that are in a permanent state can be removed by a administrative action only.
reachable	Shows the ARP cache entries that are in <code>reachable</code> state, meaning that the neighbor is known to have been reachable recently.
stale	Shows ARP cache entries that are in <code>stale</code> state. ARP cache entries are in the <code>stale</code> state if the elapsed time is in excess of the ARP timeout in seconds since the last positive confirmation that the forwarding path was functioning properly.
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Examples

```
switch# show arp state failed
```

IPv4 Address	MAC	Port	Physical Port	State
192.168.1.4		vlan10		failed

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	Operator (<code>></code>) or Manager (<code>#</code>)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (<code>></code>) only.

show arp summary

Syntax

```
show arp summary [all-vrfs | vrf <VRF-NAME>] [vsx-peer]
```

Description

Shows a summary of the IPv4 and IPv6 neighbor entries on the switch for all VRFs or a specific VRF.

Parameter	Description
all-vrfs	Selects all VRFs.
vrf <VRF-NAME>	Specifies the name of a VRF.
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Examples

Showing summary ARP information for all VRFs:

```
switch# show arp summary all-vrfs
ARP Entry's State           : IPv4      IPv6
-----
Number of Reachable ARP entries : 2        0
Number of Stale ARP entries   : 0        0
Number of Failed ARP entries  : 2        2
Number of Incomplete ARP entries : 0        0
Number of Permanent ARP entries : 0        0
-----
Total ARP Entries: 6         : 4        2
-----
```

Showing a summary of all IPv4 and IPv6 neighbor entries on the primary and secondary (peer) switches:

```
vsx-primary# show arp summary
ARP Entry's State           IPv4      IPv6
-----
Number of Reachable ARP entries 25858    32231
Number of Stale ARP entries      0        1
Number of Failed ARP entries     0       257
```

```

Number of Incomplete ARP entries  0          0
Number of Permanent ARP entries  0          0
-----
Total ARP Entries- 58347          25858      32489
vsx-primary# show arp summary vsx-peer
ARP Entry's State                  IPv4          IPv6
-----
Number of Reachable ARP entries    25858         32168
Number of Stale ARP entries        0             3
Number of Failed ARP entries       0            317
Number of Incomplete ARP entries  0             0
Number of Permanent ARP entries    0             0
-----
Total ARP Entries- 58346          25858      32488
-----

```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show arp timeout

Syntax

```
show arp timeout [<INTERFACE>] [vsx-peer]
```

Description

Shows the age-out period for each ARP (Address Resolution Protocol) entry for a port, LAG, or VLAN interface.

Parameter	Description
<INTERFACE>	Specifies a physical port, VLAN, or LAG on the switch. For physical ports, use the format member/slot/port (for example, 1/3/1).
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Examples

```
switch# show arp timeout vlan2
```

Port	VRF	Timeout

vlan2	default	1800

Showing ARP timeout information for a port:

```
switch# show arp timeout 1/1/1
```

ARP Timeout:

Port	VRF	Timeout

1/1/1	default	600

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show arp vrf

Syntax

```
show arp {all-vrfs | vrf <VRF-NAME>} [vsx-peer]
```

Description

Shows the ARP table for all VRF instances, or for the named VRF.

Parameter	Description
all-vrfs	Specifies all VRFs.
vrf <VRF-NAME>	Specifies the name of a VRF. Length: 1 to 32 alphanumeric characters.
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Examples

Showing ARP entries for VRF **vrf1**.

```
switch# show arp vrf vrf1
IPv4 Address      MAC                Port      Physical Port
State            VRF
-----
-----
100.1.250.50      00:50:56:8d:44:13  vlan1001  1/1/2
reachable vrf1
100.2.250.60      00:50:56:8d:45:63  vlan1002  vxlan1(1920:1680:1:1::2)
permanent vrf1
Total Number Of ARP Entries Listed: 2.
-----
-----
```

This example from a different network shows ARP entries for all VRFs.

```
switch# show arp all-vrfs
ARP IPv4 Entries:
-----
IPv4 Address      MAC                Port      Physical Port  State      VRF
192.168.120.10    00:50:56:bd:10:be  1/1/32    1/1/32         reachable  red
```

```

10.20.30.40      00:50:56:bd:6a:c5  1/1/29  1/1/29      reachable  test
-----
Total Number Of ARP Entries Listed: 2.
-----

```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show ipv6 neighbors

Syntax

```
show ipv6 neighbors {all-vrfs | vrf <VRF-NAME>} [vsx-peer]
```

Description

Shows entries in the ARP table for all IPv6 neighbors for all VRFs or for a specific VRF.

When no parameters are specified, this command shows all ARP entries for the default VRF, and state information for `reachable` and `stale` entries only.

Parameter	Description
<code>all-vrfs</code>	Specifies all VRFs.
<code>vrf <VRF-NAME></code>	Specifies the name of a VRF. Length: 1 to 32 alphanumeric characters.
<code>vsx-peer</code>	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output f

Parameter	Description
	rom the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Examples

```
switch# show ipv6 neighbors
IPv6 Entries:
-----
IPv6 Address          MAC                Port      Physical Port
State
fe80::a21d:48ff:fe8f:2700  a0:1d:48:8f:27:00  vlan2300  1/1/31
reachable
fe80::f603:43ff:fe80:a600  f4:03:43:80:a6:00  vlan2300  1/1/30
reachable
-----
Total Number Of IPv6 Neighbors Entries Listed: 2.
-----

switch# show ipv6 neighbors vrf vrf1
IPv6 Address          MAC
Port      Physical Port  State      VRF
-----
-----
1000:2:1:1::250:60    00:50:56:8d:45:63  vlan1002
vxlan1(1920:1680:1:1::2)  permanent  vrf1
1000:1:1:1::250:50    00:50:56:8d:44:13  vlan1001
1/1/2                  reachable  vrf1
Total Number Of IPv6 Neighbors Entries Listed: 2.
-----
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	Operator (>) or Manager (#)	Administrators or local user group members with execution rights for this command.

show ipv6 neighbors state

Syntax

```
show ipv6 neighbors state {all | failed | incomplete | permanent |  
reachable | stale} [vsx-peer]
```

Description

Shows all IPv6 neighbor ARP (Address Resolution Protocol) cache entries, or those cache entries that are in the specified state.

Parameter	Description
all	Shows all ARP cache entries.
failed	Shows ARP cache entries that are in <code>failed</code> state. The neighbor might have been deleted. Set the neighbor to be unreachable.
incomplete	Shows ARP cache entries that are in <code>incomplete</code> state. An incomplete state means that address resolution is in progress and the link - layer address of the neighbor has not yet been determined. This means that a solicitation request was sent, and you are waiting for a solicitation reply or a timeout.
permanent	Shows ARP cache entries that are in <code>permanent</code> state.
reachable	Shows ARP cache entries that are in <code>reachable</code> state, meaning that the neighbor is known to have been reachable recently.
stale	Shows ARP cache entries that are in <code>stale</code> state. ARP cache entries are in the <code>stale</code> state if the elapsed time is in excess of the ARP timeout in seconds since the last positive confirmation that the forwarding path was functioning properly.
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Example

```
switch# show ipv6 neighbors state all
IPv6 Address          MAC          Port      Physical Port
State
-----
----
100::2                48:0f:cf:af:f1:cc lag1       lag1
reachable
300::3                48:0f:cf:af:33:be vlan3      1/4/20
reachable
fe80::4a0f:cfff:feaf:f1cc 48:0f:cf:af:f1:cc lag1       lag1
reachable
200::3                48:0f:cf:af:33:be 1/4/11    1/4/11
reachable
fe80::4a0f:cfff:feaf:33be 48:0f:cf:af:33:be vlan3      1/4/20
reachable
Total Number Of IPv6 Neighbors Entries Listed- 5.
-----
-----
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show tech arp-security

Syntax

```
show tech arp-security
```


Description

Shows the output of these three commands:

- `show arp inspection statistics vlan`
- `show arp inspection vlan`
- `show arp inspection interface`

Examples

Showing the output of the three ARP security show commands:

```
switch(config-if)# show tech arp-security
```

```
=====
Show Tech executed on Mon Nov 28 09:53:54 2019
=====
```

```
[Begin] Feature arp-security
=====
```

```
*****
Command : show arp inspection statistics vlan
*****
```

```
-----
VLAN    Name                Forwarded      Dropped
-----
1       DEFAULT_VLAN_1      0             0
200     VLAN200              0             0
-----
```

```
*****
Command : show arp inspection vlan
*****
```

```
-----
VLAN    Name                ARP-Inspection
-----
1       DEFAULT_VLAN_1      -
200     VLAN200              Enabled
-----
```

```
*****
Command : show arp inspection interface
*****
```

```
-----
Interface      Trust-State
-----
1/1/1          Untrusted
-----
```

```

lag100                Trusted
-----
=====
[End] Feature arp-security
=====
=====
Show Tech commands executed successfully
=====

```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8400	Manager (#)	Administrators or local user group members with execution rights for this command.

Network Load Balancing (NLB)

Network Load Balancing (NLB) is a load balancing technology for server clustering. NLB supports load sharing and redundancy among servers within a cluster. To implement fast failover, NLB requires that the switch forwards network traffic to one or all servers in the cluster. Each server filters out the unexpected traffic. For more information, see [Configuring network infrastructure to support the NLB operation mode](#)

NLB is used to spread incoming requests across as many as 32 servers. Currently, NLB in AOS-CX supports only IGMP multicast mode. The IGMP multicast mode sends the packets out of the ports which connect to the cluster members. Assign a static multicast MAC address within the Internet Assigned Numbers Authority (IANA) range to the cluster's virtual unicast IP address. The clustered servers send IGMP joins to the configured multicast cluster group. If IGMP snooping is enabled, the switch dynamically populates the IGMP snooping table with the clustered servers, which prevents unicast flooding.

Subtopics

[NLB commands](#)

NLB commands

Subtopics

NLB commands

NLB commands

Select a command from the list in the left navigation menu.

Subtopics

- arp ip mac
- show arp
- show ip igmp snooping vlan group

arp ip mac

Syntax

```
arp ip <IP-ADDR> mac <MAC-ADDR>
no arp ip <IP-ADDR> mac <MAC-ADDR>
```

Description

Configures static ARP multicast on the interface.

The **no** form of this command removes the static ARP multicast configuration.

Parameter	Description
<IP-ADDR>	Specifies cluster's virtual IPv4 address.
<MAC-ADDR>	Specifies multicast MAC address in IANA format (xx:xx:xx:xx:xx:xx) and non IANA format (xxxx.xxxx.xxxx).

Examples

Configuring static ARP multicast on an interface:

```
switch(config)# vlan 10
switch(config-vlan-10)# no shutdown
switch(config-vlan-10)# ip igmp snooping enable
switch(config-vlan-10)# exit
switch(config)# interface vlan10
switch(config-if-vlan)# ip igmp enable
switch(config-if-vlan)# arp ip 10.1.30.254 mac 01:00:5e:7f:1e:fe
```



NOTE

If your NLB Virtual IP address is 10.1.30.254, then the server will join the 239.255.30.254 IGMP group. This IGMP group is mapped to the destination MAC address of 01:00:5e:7f:1e:fe.

The clusters sends the IGMP join to any valid multicast group IP address that is within the range from 224.0.0.0 to 239.255.255.255 except reserved group IP addresses.

Command History

Release	Modification
10.14	Replaced the ipv4 parameter with the ip parameter. The ipv4 parameter is deprecated.
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8400	<code>config-if</code> and <code>config-if-vlan</code>	Administrators or local user group members with execution rights for this command.

show arp

Syntax

```
show arp
```

Description

Displays the static ARP multicast information.

Examples

Displaying the static ARP multicast information:

```
switch# show arp
IPv4 Address      MAC                Port      Physical Port  State
-----
3.3.3.3          01:00:5e:00:00:02          1/1/1      permanent
2.2.2.2          01:00:5e:00:00:01  vlan10      permanent
Total Number Of ARP Entries Listed- 2.
-----
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8400	Operator (>) or Manager (#)	Administrators or local user group members with execution rights for this command.

show ip igmp snooping vlan group

Syntax

```
show ip igmp snooping vlan <VLAN-ID> group IGMP-Group
```

Description

Displays multicast joins (members of the cluster) participating in the IGMP group.

Examples

Displaying multicast joins participating in the IGMP group:

```
switch# show ip igmp snooping vlan 10 group 239.255.30.254
VLAN ID      : 10
VLAN Name    : VLAN10
Group Address : 239.255.30.254
Last Reporter : 10.1.30.254
Group Type    : Filter
```

				V1	V2	Sources	
Sources							
Port	Vers	Mode	Uptime	Expires	Timer	Timer	Forwarded
Blocked							

1/1/6	2	EXC	0m 21s	1m 12s		2m 48s	0 0

Displaying multicast joins participating in the IGMP group:

```
switch# show ip igmp snooping vlan 2 group 232.0.0.1
IGMP ports and group information for group 232.0.0.1
VLAN ID      : 2
VLAN Name    : VLAN2
Group Address : 232.0.0.1
Last Reporter : 30.1.1.1
Group Type    : Filter
```

				V1	V2	Sources	
Sources							
Port	Vers	Mode	Uptime	Expires	Timer	Timer	Forwarded
Blocked							

vxlان(5.5.5.5)	3	INC	14m 52s	0m 0s			1 0
Group Address: 232.0.0.1							
Source Address: 30.1.1.30							
Source Type: Filter							
Port	Mode	Uptime	Expires	Configured Mode			

vxlان1(5.5.5.5)	ING	14m 52s		Auto			

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8400	Operator (>) or Manager (#)	Administrators or local user group members with execution rights for this command.

Support and Other Resources

Access HPE Aruba Networking support and updates, and view warranty and regulatory information

Subtopics

[Accessing HPE Aruba Networking Support](#)

[Accessing Updates](#)

[Warranty Information](#)

[Regulatory Information](#)

[Documentation Feedback](#)

Accessing HPE Aruba Networking Support

HPE Aruba Networking Support Services	<u>https://www.hpe.com/us/en/networking/hpe - aruba - networking - support - services.html</u>
AOS - CX Switch Software Documentation Portal	<u>https://arubanetworking.hpe.com/techdocs/ArubaDocPortal/content/new-portal/aoscx.html</u>
HPE Aruba Networking Support Portal	<u>https://networkingsupport.hpe.com/home</u>
North America telephone	1 - 800 - 943 - 4526 (US & Canada Toll - Free Number) +1 - 650 - 750 - 0350 (Backup—Toll Number)
International telephone	<u>https://www.hpe.com/psnow/doc/a50011948enw</u>

Be sure to collect the following information before contacting Support:

- Technical support registration number (if applicable)
- Product name, model or version, and serial number
- Operating system name and version
- Firmware version
- Error messages
- Product-specific reports and logs
- Add-on products or components
- Third-party products or components

Other useful sites

Other websites that can be used to find information:

HPE Aruba Networking Developer Hub	https://developer.arubanetworks.com/hpe - aruba - networking - aoscx/docs/about
Airheads social forums and Knowledge Base	https://community.arubanetworks.com/
AOS - CX Software Technical Update channel on YouTube.	Videos on new features introduced in this release : https://www.youtube.com/playlist?list=PLsYGHuNuBZcbWPEjjHuVMqP - Q_UL3CskS
HPE Aruba Networking Hardware Documentation and Translations Portal	
HPE Aruba Networking software	https://networkingsupport.hpe.com/downloads https://networkingsupport.hpe.com/downloads
Software licensing and Feature Packs	https://licensemanagement.hpe.com/
End - of - Life information	https://networkingsupport.hpe.com/end - of - life

Accessing Updates

You can access updates from the HPE Aruba Networking Support Portal at <https://networkingsupport.hpe.com>.

Some software products provide a mechanism for accessing software updates through the product interface. Review your product documentation to identify the recommended software update method.

To subscribe to eNewsletters and alerts:

<https://networkingsupport.hpe.com/notifications/subscriptions> (requires an active HPE Aruba Networking Support Portal account to manage subscriptions). Security notices are viewable without an HPE Aruba Networking Support Portal account.

Warranty Information

To view warranty information for your product, go to **<https://www.arubanetworks.com/support-services/product-warranties/>**.

Regulatory Information

To view the regulatory information for your product, view the Safety and Compliance Information for Server, Storage, Power, Networking, and Rack Products, available at **<https://www.hpe.com/support/Safety-Compliance-EnterpriseProducts>**

Additional regulatory information

HPE Aruba Networking is committed to providing our customers with information about the chemical substances in our products as needed to comply with legal requirements, environmental data (company programs, product recycling, energy efficiency), and safety information and compliance data, (RoHS and WEEE). For more information, see **<https://www.arubanetworks.com/company/about-us/environmental-citizenship/>**.

Documentation Feedback

HPE Aruba Networking is committed to providing documentation that meets your needs. To help us improve the documentation, send any errors, suggestions, or comments to Documentation Feedback (**docsfeedback-switching@hpe.com**). When submitting your feedback, include the document title, part number, edition, and publication date located on the front cover of the document. For online help content, include the product name, product version, help edition, and publication date located on the legal notices page.