

AOS-CX 10.06 Monitoring Guide

6100 Switch Series



Hewlett Packard
Enterprise

Part Number: 5200-7818
Published: January 2021
Edition: 1

Notices

The information contained herein is subject to change without notice. The only warranties for Hewlett Packard Enterprise products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. Hewlett Packard Enterprise shall not be liable for technical or editorial errors or omissions contained herein.

Confidential computer software. Valid license from Hewlett Packard Enterprise required for possession, use, or copying. Consistent with FAR 12.211 and 12.212, Commercial Computer Software, Computer Software Documentation, and Technical Data for Commercial Items are licensed to the U.S. Government under vendor's standard commercial license.

Links to third-party websites take you outside the Hewlett Packard Enterprise website. Hewlett Packard Enterprise has no control over and is not responsible for information outside the Hewlett Packard Enterprise website.

Acknowledgments

Intel®, Itanium®, Optane™, Pentium®, Xeon®, Intel Inside®, and the Intel Inside logo are trademarks of Intel Corporation in the U.S. and other countries.

Microsoft® and Windows® are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

Adobe® and Acrobat® are trademarks of Adobe Systems Incorporated.

Java® and Oracle® are registered trademarks of Oracle and/or its affiliates.

UNIX® is a registered trademark of The Open Group.

All third-party marks are property of their respective owners.



Chapter 1 About this document.....	6
Applicable products.....	6
Latest version available online.....	6
Command syntax notation conventions.....	6
About the examples.....	7
Identifying switch ports and interfaces	7
 Chapter 2 Monitoring hardware through visual observation.....	 9
Confirming normal operation of the switch by reading LEDs.....	9
Detecting if the switch is not ready for a failover event.....	10
Finding faulted components using the switch LEDs.....	11
 Chapter 3 Switch and port LEDs for 6100 switch series.....	 12
 Chapter 4 Boot commands.....	 14
boot set-default.....	14
boot system.....	14
show boot-history.....	16
 Chapter 5 Switch system and hardware commands.....	 18
clear events.....	18
domain-name.....	18
hostname.....	19
led locator.....	20
show capacities.....	20
show capacities-status.....	22
show core-dump.....	23
show domain-name.....	25
show environment fan.....	25
show environment led.....	27
show environment power-supply.....	27
show environment temperature.....	28
show events.....	30
show hostname.....	32
show images.....	32
show module.....	33
show running-config.....	34
show running-config current-context.....	38
show startup-config.....	39
show system.....	40
show system resource-utilization.....	40
show tech.....	41
show usb.....	43
show usb file-system.....	43

show version.....	45
system resource-utilization poll-interval.....	45
top cpu.....	46
top memory.....	46
usb.....	47
usb mount unmount	47
Chapter 6 IP-SLA.....	49
IP-SLA guidelines.....	49
Limitations with VoIP SLAs.....	50
IP-SLA commands.....	50
ip-sla responder.....	50
show ip-sla responder.....	51
show ip-sla responder results.....	52
Chapter 7 L1-100Mbps downshift.....	53
Limitations with speed downshift.....	53
L1-100Mbps downshift commands.....	53
downshift enable.....	53
show interface.....	54
show interface downshift-enable.....	56
show running-config interface.....	57
Chapter 8 Mirroring.....	60
Mirror statistics.....	60
Classifier policies and mirroring sessions.....	60
VLAN as a source.....	61
Mirroring commands.....	61
clear mirror.....	61
comment.....	62
copy tshark-pcap.....	63
destination cpu.....	63
destination interface.....	64
destination tunnel.....	65
diagnostic.....	66
disable.....	67
enable.....	68
mirror session.....	68
show mirror.....	69
source interface.....	71
Chapter 9 Monitoring a device by using SNMP.....	73
Chapter 10 Power-over-Ethernet (PoE).....	74
PoE commands.....	75
lldp dot3 poe.....	75
lldp med poe.....	76
power-over-ethernet.....	76
power-over-ethernet allocate-by.....	77
power-over-ethernet always-on.....	78

power-over-ethernet assigned-class	78
power-over-ethernet pre-std-detect.....	79
power-over-ethernet priority.....	80
power-over-ethernet quick-poe	80
power-over-ethernet threshold.....	81
power-over-ethernet priority.....	82
show lldp local.....	82
show lldp neighbor.....	83
show power-over-ethernet.....	84

Chapter 11 Aruba AirWave..... 88

SNMP support and AirWave.....	88
Supported features with AirWave and the AOS-CX switch.....	89
Configuring the AOS-CX switch to be monitored by AirWave.....	89
logging.....	90
snmp-server community.....	92
snmp-server host.....	92
snmp-server vrf.....	94
snmpv3 context.....	95
snmpv3 user.....	95

Chapter 12 Support and other resources..... 98

Accessing Aruba Support.....	98
Accessing updates.....	98
Warranty information.....	99
Regulatory information.....	99
Documentation feedback.....	99

This document describes features of the AOS-CX network operating system. It is intended for administrators responsible for installing, configuring, and managing Aruba switches on a network.

Applicable products

This document applies to the following products:

Aruba 6100 Switch Series (JL675A, JL676A, JL677A, JL678A, JL679A)

Latest version available online

Updates to this document can occur after initial publication. For the latest versions of product documentation, see the links provided in **Support and other resources**.

Command syntax notation conventions

Convention	Usage
example-text	Identifies commands and their options and operands, code examples, filenames, pathnames, and output displayed in a command window. Items that appear like the example text in the previous column are to be entered exactly as shown and are required unless enclosed in brackets ([]).
example-text	In code and screen examples, indicates text entered by a user.
Any of the following: <example-text> <example-text> - example-text - example-text	Identifies a placeholder—such as a parameter or a variable—that you must substitute with an actual value in a command or in code: - For output formats where italic text cannot be displayed, variables are enclosed in angle brackets (< >). Substitute the text—including the enclosing angle brackets—with an actual value. - For output formats where italic text can be displayed, variables might or might not be enclosed in angle brackets. Substitute the text including the enclosing angle brackets, if any, with an actual value.
	Vertical bar. A logical OR that separates multiple items from which you can choose only one. Any spaces that are on either side of the vertical bar are included for readability and are not a required part of the command syntax.
{ }	Braces. Indicates that at least one of the enclosed items is required.

Table Continued

Convention	Usage
[]	Brackets. Indicates that the enclosed item or items are optional.
... or	Ellipsis:
...	- In code and screen examples, a vertical or horizontal ellipsis indicates an omission of information. - In syntax using brackets and braces, an ellipsis indicates items that can be repeated. When an item followed by ellipses is enclosed in brackets, zero or more items can be specified.

About the examples

Examples in this document are representative and might not match your particular switch or environment. The slot and port numbers in this document are for illustration only and might be unavailable on your switch.

Understanding the CLI prompts

When illustrating the prompts in the command line interface (CLI), this document uses the generic term `switch`, instead of the host name of the switch. For example:

```
switch>
```

The CLI prompt indicates the current command context. For example:

```
switch>
```

Indicates the operator command context.

```
switch#
```

Indicates the manager command context.

```
switch(CONTEXT-NAME)#
```

Indicates the configuration context for a feature. For example:

```
switch(config-if) #
```

Identifies the interface context.

Variable information in CLI prompts

In certain configuration contexts, the prompt may include variable information. For example, when in the VLAN configuration context, a VLAN number appears in the prompt:

```
switch(config-vlan-100) #
```

When referring to this context, this document uses the syntax:

```
switch(config-vlan-<VLAN-ID>) #
```

Where `<VLAN-ID>` is a variable representing the VLAN number.

Identifying switch ports and interfaces

Physical ports on the switch and their corresponding logical software interfaces are identified using the format:

```
member/slot/port
```

On the 6100 Switch Series

- *member*: Always 1. VSF is not supported on this switch.
- *slot*: Always 1. This is not a modular switch, so there are no slots.
- *port*: Physical number of a port on the switch.

For example, the logical interface 1/1/4 in software is associated with physical port 4 on the switch.

Confirming normal operation of the switch by reading LEDs

This task describes using the switch LEDs to confirm that the switch is operating normally.

Procedure

1. Quick check: Verify that the chassis has power and there are no fault conditions.
On the front of the switch, verify that the states of the following LEDs are On Green:
 - Power
 - Health
2. Verify that the Health LEDs of all installed line modules are On Green.
3. Verify that the Health LEDs of all installed management modules are On Green.
4. Verify that the network ports are operating normally.
 - a. On the active management module, check the Status Front section. Verify that each LED that indicates a line module is in one of the following states:
 - On Green (normal operation)
 - Off (no line module installed)
 - b. On each line module, verify that each port LED is in one of the following states:
 - On Green, Half-Bright Green, or Flickering Green (normal operation)
 - Off (no cable connected or port off by default in config)
5. Verify that the power supplies are operating normally.
 - a. On the active management module, check the Status Front section. Verify that each LED that indicates a power supply is in one of the following states:
 - On Green (normal operation)
 - Off (no power supply installed)
 - b. On each power supply, verify that LEDs are in the following states:
 - Power LED: On Green
 - Fault LED: Off

6. Verify that the rear components are operating normally by checking the Status Rear section of the active management module:
 - a. Verify that the LEDs for the fabric modules are in one of the following states:
 - On Green (normal operation)
 - Off (component not installed)
 - b. Verify that the LEDs for the fan trays and fans are On Green.
7. Verify that the standby management module is ready to take over as the active management module.
On the standby management module, verify the states of the following LEDs:
 - Health LED is On Green.
 - Management state standby (Stby) LED is On Green.

Detecting if the switch is not ready for a failover event

This task describes using the switch LEDs to detect if the switch is not ready for the loss of a fabric module or for a failover from the active management module to the standby management module.



NOTE: Although you can detect power supply failures by viewing the LEDs, you must use software commands to determine if the power supply redundancy is sufficient to power the chassis if a power supply fails.

Procedure

1. Detect if the standby management module is shut down.

If the standby management module is shut down, the LED states are as follows:

- The standby management module health LED is Off.
- The standby management state active (Actv) LED is Off.
- The standby management state standby (Stby) LED is Off.
- On the active management module in the Status Front Management Modules section, the LED for the standby management module is Off. For example, if the active management module is Management Module LED 5, Management Modules LED 6 is Off.

2. Detect if the standby management module is in a transient state.

If the standby management module is booting, updating, or in another transient state, the LED states are as follows:

- The standby management module health LED is Slow Flash Green when the service operating system is running or during an operating system update.
- The standby management module Booting LED is Slow Flash Green when the ArubaOS-CX operating system is booting.

- The standby management state active (Actv) LED is Off.
- The standby management state standby (Stby) LED is Off.
- On the active management module in the Status Front Management Modules section, the LED for the standby management module is Slow Flash Green.

3. Detect if a fabric module is shut down or not present.

If a fabric module is shut down or not present, the LED states are as follows:

- On the active management module, in the Status Rear section, the LED for the fabric module is Off.
- On the rear display module, the LED for the fabric module is Off.
- On the fabric module, the health LED is Off. However, the fabric module is behind fan 1 and is not directly visible.

Finding faulted components using the switch LEDs

This task describes using the switch LEDs to find components that are in a fault condition.



NOTE: All green LEDs—except for chassis power LEDs and the Usrc1 LED—are off when the LED mode is set to Light Faults (The Usrc1 LED of the LED Mode section of the active management module is On Green and the default behavior for the Usrc1 LED is being used.).

Procedure

1. Find the switch that has the fault condition, which is indicated by a chassis health LED in the state of Slow Flash Orange.

The chassis health LED is located on the front of the switch and on the rear panel of the switch.

2. If you are at the back of the switch, on the rear panel, look for LEDs that are in the Slow Flash Orange state:

The Status Rear area has LEDs for power supplies, fabric modules, fan trays, and fans. The number on the LED represents the unit number of the component.

If the only LED in a state of Slow Flash Orange is the Chassis health LED, go to the front of the switch.

3. At the front of the switch, on the active management module, look for LEDs that are in the Slow Flash Orange state:

- The Status Front area has LEDs for power supplies, line and fabric modules, and management modules. The number on the LED indicates the slot number of the component.
- The Status Rear area has LEDs for fabric modules and fan trays, with a single LED for all the fans in the fan tray. The number on the LED represents the slot or bay number of the component.

4. Use the number indicated by the LED that is flashing to locate the slot that contains the faulted component.

The fabric modules are located behind the fan trays, and the fabric module number corresponds to the fan tray number.

5. At the front of the switch, on line modules, look for LEDs that are in the Slow Flash Orange state:

Module LEDs and Port LEDs indicate faults if their states are Slow Flash Orange.

Figure 1: Switch and port LEDs

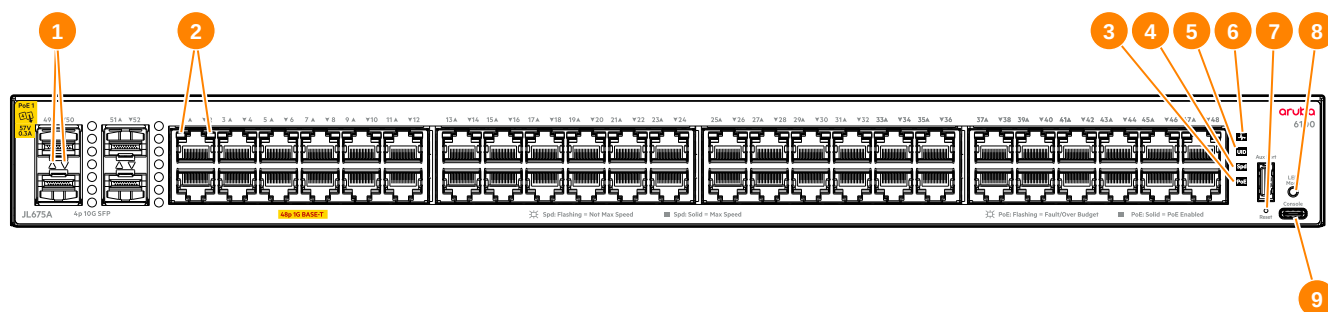


Table 1: Switch and port LEDs: Labels and description

Label	Description
1	Management Console LED
2	Switch port LEDs Back Module status LED
3	PoE mode selected
4	Speed mode selected LED
5	UID (Unit Identification) Reset button Usr mode selected LED
6	Global Status LED
7	Reset button
8	LED Mode status LED
9	USB-C Console port

Table 2: Front panel LED behavior

Switch LEDs	Function	State	Meaning
Back LED	Status of modular components installed in the back of the chassis (not applicable for 6200F/6300F switches)	On - Green	Normal
		Slow Flash - Amber	Fault in one of the modules in the back of the chassis
PoE LED	Indicates Port LEDs are showing PoE information (not	Off	PoE mode not selected
		On - Green	PoE mode selected

Table Continued

Switch LEDs	Function	State	Meaning
	applicable for non PoE switches)	Slow Flash - Amber	Hardware failure PoE enabled port, PoE mode not selected
		On - Amber	Hardware failure PoE enabled port, PoE mode selected
Spd LED	Indicates Port LEDs are showing speed information	Off	Speed mode not selected
		On - Green	Speed mode selected
UID LED	User-configurable LED	Off	User defined the located LED : OFF
		On/Flash Blue (for 30 min)	User defined the locator LED: On/Flash
Global Status Indicator LED	Overall status of the product	Flash - Green	Self-test in progress during UBOOT, SVOS and ArubaOS-CV
		On - Green	Successfully initialized ArubaOS-CX
		Flash - Amber	Recoverable faults (e.g. fans, PSU fault)
		On - Amber	Critical faults (e.g. exceed temperature limit)
* Press the Mode Select button to switch between User(default), PoE, or Spd.			

Table 3: Rear Panel LED behavior

Switch LEDs	Function	State/Mode	Meaning
Fan health LED	Status of fan	On - Green	Normal
		Slow flash - Amber	Fan fault
UID LED	User-configurable LED	Off	User define the locator LED : OFF
		On/Flash (30 min) - blue	User define the locator LED: On/Flash
PSU Status Indicator LED	Status of power supply	On Green	Normal
		Off	No power, PSU has invalid AC input of invalid DC outputs
		Slow Flash - Green	Power supply has faulted or warning

boot set-default

Syntax

```
boot set-default {primary | secondary}
```

Description

Sets the default operating system image to use when the system is booted.

Command context

Manager (#)

Parameters

primary

Selects the primary network operating system image.

secondary

Selects the secondary network operating system image.

Authority

Administrators or local user group members with execution rights for this command.

Example

Selecting the primary image as the default boot image:

```
switch# boot set-default primary  
Default boot image set to primary.
```

boot system

Syntax

```
boot system [primary | secondary | serviceos]
```

Description

Reboots all modules on the switch. By default, the configured default operating system image is used. Optional parameters enable you to specify which system image to use for the reboot operation and for future reboot operations.

Command context

Manager (#)

Parameters

primary

Selects the primary operating system image for this reboot and sets the configured default operating system image to `primary` for future reboots.

secondary

Selects the secondary operating system image for this reboot and sets the configured default operating system image to `secondary` for future reboots.

serviceos

Selects the service operating system for this reboot. Does not change the configured default operating system image. The service operating system acts as a standalone bootloader and recovery OS for switches running the ArubaOS-CX operating system and is used in rare cases when troubleshooting a switch.

Authority

Administrators or local user group members with execution rights for this command.

Usage

This command reboots the entire system. If you do not select one of the optional parameters, the system reboots from the configured default boot image.

You can use the `show images` command to show information about the primary and secondary system images.

Choosing one of the optional parameters affects the setting for the default boot image:

- If you select the `primary` or `secondary` optional parameter, that image becomes the configured default boot image for future system reboots. The command fails if the switch is not able to set the operating system image to the image you selected.

You can use the `boot set-default` command to change the configured default operating system image.

- If you select `serviceos` as the optional parameter, the configured default boot image remains the same, and the system reboots all management modules with the service operating system.

If the configuration of the switch has changed since the last reboot, when you execute the `boot system` command you are prompted to save the configuration and you are prompted to confirm the reboot operation.

Saving the configuration is not required. However, if you attempt to save the configuration and there is an error during the save operation, the `boot system` command is aborted.

Examples

Rebooting the system from the configured default operating system image:

```
switch# boot system
Do you want to save the current configuration (y/n)? y
The running configuration was saved to the startup configuration.
```

```
This will reboot the entire switch and render it unavailable
until the process is complete.
Continue (y/n)? y
The system is going down for reboot.
```

Rebooting the system from the secondary operating system image, setting the secondary operating system image as the configured default boot image:

```
switch# boot system secondary  
Default boot image set to secondary.  
  
Do you want to save the current configuration (y/n)? n  
  
This will reboot the entire switch and render it unavailable  
until the process is complete.  
Continue (y/n)? y  
The system is going down for reboot.
```

Canceling a system reboot:

```
switch# boot system  
  
Do you want to save the current configuration (y/n)? n  
  
This will reboot the entire switch and render it unavailable  
until the process is complete.  
Continue (y/n)? n  
Reboot aborted.  
switch#
```

show boot-history

Syntax

```
show boot-history [all]
```

Description

Shows boot information. When no parameters are specified, shows the most recent information about the boot operation, and the three previous boot operations for the active management module. When the `all` parameter is specified, shows the boot information for the active management module.

Command context

Manager (#)

Parameters

all

Shows boot information for the active management module and all available line modules.

Authority

Administrators or local user group members with execution rights for this command.

Usage

This command displays the boot-index, boot-ID, and up time in seconds for the current boot. If there is a previous boot, it displays boot-index, boot-ID, reboot time (based on the time zone configured in the system) and reboot reasons. Previous boot information is displayed in reverse chronological order.

Index

The position of the boot in the history file. Range: 0 to3.

Boot ID

A unique ID for the boot . A system-generated 128-bit string.

Current Boot, up for *<SECONDS>* seconds

For the current boot, the `show boot-history` command shows the number of seconds the module has been running on the current software.

Timestamp boot reason

For previous boot operations, the `show boot-history` command shows the time at which the operation occurred and the reason for the boot. The reason for the boot is one of the following values:

<DAEMON-NAME> crash

The daemon identified by *<DAEMON-NAME>* caused the module to boot.

Kernel crash

The operating system software associated with the module caused the module to boot.

Reboot requested through database

The reboot occurred because of a request made through the CLI or other API.

Uncontrolled reboot

The reason for the reboot is not known.

Examples

Showing the boot history of the active management module:

```
switch# show boot-history
Management module
=====

Index : 3
Boot ID : f1bf071bdd04492bbf8439c6e479d612
Current Boot, up for 22 hrs 12 mins 22 secs

Index : 2
Boot ID : edfa2d6598d24e989668306c4a56a06d
07 Aug 18 16:28:01 : Reboot requested through database

Index : 1
Boot ID : 0bda8d0361df4a7e8e3acdc1dba5caad
07 Aug 18 14:08:46 : Reboot requested through database

Index : 0
Boot ID : 23da2b0e26d048d7b3f4b6721b69c110
07 Aug 18 13:00:46 : Reboot requested through database
switch#
```

clear events

Syntax

```
clear events
```

Description

Clears up event logs. Using the `show events` command will only display the logs generated after the `clear events` command.

Command context

Manager (#)

Authority

Administrators or local user group members with execution rights for this command.

Examples

Clearing all generated event logs:

```
switch# show events
-----
show event logs
-----
2018-10-14:06:57:53.534384|hpe-sysmond|6301|LOG_INFO|MSTR|1|System resource utilization poll interval is changed to 27
2018-10-14:06:58:30.805504|lldpd|103|LOG_INFO|MSTR|1|Configured LLDP tx-timer to 36
2018-10-14:07:01:01.577564|hpe-sysmond|6301|LOG_INFO|MSTR|1|System resource utilization poll interval is changed to 49

switch# clear events

switch# show events
-----
show event logs
-----
2018-10-14:07:03:05.637544|hpe-sysmond|6301|LOG_INFO|MSTR|1|System resource utilization poll interval is changed to 34
```

domain-name

Syntax

```
domain-name <NAME>
```

```
no domain-name [<NAME>]
```

Description

Specifies the domain name of the switch.

The `no` form of this command sets the domain name to the default, which is no domain name.

Command context

```
config
```

Parameters

<NAME>

Specifies the domain name to be assigned to the switch. The first character of the name must be a letter or a number. Length: 1 to 32 characters.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Setting and showing the domain name:

```
switch# show domain-name

switch# config
switch(config)# domain-name example.com
switch(config)# show domain-name
example.com
switch(config)#
```

Setting the domain name to the default value:

```
switch(config)# no domain-name
switch(config)# show domain-name

switch(config)#
```

hostname

Syntax

hostname <HOSTNAME>

no hostname [<HOSTNAME>]

Description

Sets the host name of the switch.

The `no` form of this command sets the host name to the default value, which is `switch`.

Command context

config

Parameters

<HOSTNAME>

Specifies the host name. The first character of the host name must be a letter or a number. Length: 1 to 32 characters. Default: `switch`

Authority

Administrators or local user group members with execution rights for this command.

Examples

Setting and showing the host name:

```
switch# show hostname
switch
switch# config
switch(config)# hostname myswitch
myswitch(config)# show hostname
myswitch
```

Setting the host name to the default value:

```
myswitch(config)# no hostname
switch(config)#
```

led locator

Syntax

```
led locator {on | off | flashing}
```

Description

Sets the state of the locator LED to *on*, *off* (default), or *flashing*.

Command context

Manager (#)

Parameters

on

Turns on the LED.

off

Turns off the LED, which is the default value.

flashing

Sets the LED to blink on and off repeatedly.

Authority

Administrators or local user group members with execution rights for this command.

Example

Setting the state of the locator LED:

```
switch# led locator flashing
```

show capacities

Syntax

```
show capacities <FEATURE>
```

Description

Shows system capacities and their values for all features or a specific feature.

Command context

Manager (#)

Parameters

<FEATURE>

Specifies a feature. For example, aaa.

Authority

Administrators or local user group members with execution rights for this command.

Usage

Capacities are expressed in user-understandable terms. Thus they may not map to a specific hardware or software resource or component. They are not intended to define a feature exhaustively.

Examples

Showing classifier-related capacities on the 6100:

```
switch# show capacities classifier
```

System Capacities: Filter Classifier

Capacities Name	Value
Maximum number of Access Control Entries configurable in a system	4096
Maximum number of Access Control Lists configurable in a system	512
Maximum number of class entries configurable in a system	4096
Maximum number of classes configurable in a system	512
Maximum number of entries in an Access Control List	1024
Maximum number of entries in a class	1024
Maximum number of entries in a policy	64
Maximum number of classifier policies configurable in a system	512
Maximum number of policy entries configurable in a system	4096

Showing all available capacities on the 6100:

```
switch# show capacities
```

System Capacities:

Capacities Name	Value
Maximum number of Access Control Entries configurable in a system	4096
Maximum number of Access Control Lists configurable in a system	512
Maximum number of class entries configurable in a system	4096
Maximum number of classes configurable in a system	512
Maximum number of entries in an Access Control List	1024
Maximum number of entries in a class	1024
Maximum number of entries in a policy	64
Maximum number of classifier policies configurable in a system	512
Maximum number of policy entries configurable in a system	4096
Maximum number of clients supported for tracking the IP address in the system	128
Maximum number of dynamic VLANs that can be allowed using MVRP	256
Maximum number of nexthops per IP ECMP group	1
Maximum number of IP neighbors (IPv4+IPv6) supported in the system	1024
Maximum number of IPv4 neighbors(# of ARP entries) supported in the system	1024
Maximum number of IPv6 neighbors(# of ND entries) supported in the system	512
Maximum number of L2 MAC addresses supported in the system	8192
Maximum number of L3 Groups for IP Tunnels and ECMP Groups	1
Maximum number of L3 Destinations for Routes, Nexthops in Tunnels and ECMP groups	1024
Maximum number of configurable LAG ports	8
Maximum number of members supported by a LAG port	8
Maximum number of VLANs across ports allowed in loop-protect	3328
Maximum number of IGMP/MLD groups supported	512
Maximum number of IGMP/MLD snooping groups supported	512

Maximum number of Mirror Sessions configurable in a system	4
Maximum number of enabled Mirror Sessions in a system	4
Maximum number of mstp instances configurable in a system	16
Maximum number of Clients that can be authenticated on a port	32
Maximum number of Device Profiles allowed to be created on the system	8
Maximum number of Port Access Roles allowed to be created on the system	32
Maximum number of MAC Address that can be authorized on a port	32
Maximum number of Port Access Role VLAN IDs allowed to be created on the system	50
Maximum number of Port Access Role VLAN names allowed to be created on the system	50
Maximum number of RBAC rules per user group	1024
Maximum number of RPVST VLANs configurable on the system	16
Maximum number of RPVST VPORTs supported in a system	512
Maximum number of SVIs supported in the system	16
Maximum number of routes (IPv4+IPv6) on the system	512
Maximum number of IPv4 routes on the system	512
Maximum number of IPv6 routes on the system	512
Maximum number of VLANs supported in the system	512

Showing all available capacities for mirroring:

```
switch# show capacities mirroring
```

System Capacities: Filter Mirroring	
Capacities Name	Value

Maximum number of Mirror Sessions configurable in a system	4
Maximum number of enabled Mirror Sessions in a system	4

Showing all available capacities for MSTP:

```
switch# show capacities mstp
```

System Capacities: Filter MSTP	
Capacities Name	Value

Maximum number of mstp instances configurable in a system	64

Showing all available capacities for VLAN count:

```
switch# show capacities vlan-count
```

System Capacities: Filter VLAN Count	
Capacities Name	Value

Maximum number of VLANs supported in the system	4094

show capacities-status

Syntax

```
show capacities-status <FEATURE>
```

Description

Shows system capacities status and their values for all features or a specific feature.

Command context

Manager (#)

Parameters

<FEATURE>

Specifies the feature, for example `aaa` for which to display capacities, values, and status. Required.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Showing the system capacities status for all features:

```
switch# show capacities-status
```

System Capacities Status			
Capacities	Status Name	Value	Maximum
Number of Access Control Entries currently configured		0	4096
Number of Access Control Lists currently configured		0	512
Number of class entries currently configured		0	4096
Number of classes currently configured		0	512
Number of policies currently configured		0	512
Number of policy entries currently configured		0	4096
Number of dynamic VLANs currently learnt using MVRP		0	256
Number of IP neighbor (IPv4+IPv6) entries		1	1024
Number of IPv4 neighbor(ARP) entries		1	1024
Number of IPv6 neighbor(ND) entries		0	512
Number of L3 Groups for IP Tunnels and ECMP Groups currently configured		0	1
Number of L3 Destinations for Routes, Nexthops in ECMP groups and Tunnels currently configured		0	1024
Number of Mirror Sessions currently configured		0	4
Number of Mirror Sessions currently enabled		0	4
Number of mstp instances currently configured		0	16
Number of RPVST VLANs currently configured		0	16
Number of routes (IPv4+IPv6) currently configured		1	512
Number of IPv4 routes currently configured		1	512
Number of IPv6 routes currently configured		0	512
Number of VLANs currently configured		1	512

show core-dump

Syntax

```
show core-dump [all | <SLOT-ID>]
```

Description

Shows core dump information about the specified module. When no parameters are specified, shows only the core dumps generated in the current boot of the management module. When the `all` parameter is specified, shows all available core dumps.

Command context

Manager (#)

Parameters

all

Shows all available core dumps.

<SLOT-ID>

Shows the core dumps for the management module or line module in `<SLOT-ID>`. `<SLOT-ID>` specifies a physical location on the switch. Use the format `member/slot/port` (for example, `1/3/1`) for line modules. Use the format `member/slot` for management modules.

You must specify the slot ID for either the active management module, or the line module.

Authority

Administrators or local user group members with execution rights for this command.

Usage

When no parameters are specified, the `show core-dump` command shows only the core dumps generated in the current boot of the management module. You can use this command to determine when any crashes are occurring in the current boot.

If no core dumps have occurred, the following message is displayed: `No core dumps are present`

To show core dump information for the standby management module, you must use the `standby` command to switch to the standby management module and then execute the `show core-dump` command.

In the output, the meaning of the information is the following:

Daemon Name

Identifies name of the daemon for which there is dump information.

Instance ID

Identifies the specific instance of the daemon shown in the `Daemon Name` column.

Present

Indicates the status of the core dump:

Yes

The core dump has completed and available for copying.

In Progress

Core dump generation is in progress. Do not attempt to copy this core dump.

Timestamp

Indicates the time the daemon crash occurred. The time is the local time using the time zone configured on the switch.

Build ID

Identifies additional information about the software image associated with the daemon.

Examples

Showing core dump information for the current boot of the active management module only:

```
switch# show core-dump
=====
Daemon Name      | Instance ID | Present   | Timestamp                | Build ID
=====
hpe-fand         | 1399        | Yes       | 2017-08-04 19:05:34      | 1246d2a
hpe-sysmond      | 957         | Yes       | 2017-08-04 19:05:29      | 1246d2a
=====
Total number of core dumps : 2
=====
```

Showing all core dumps:

```
switch# show core-dump all
=====
Management Module core-dumps
=====
Daemon Name      | Instance ID | Present   | Timestamp                | Build ID
=====
hpe-sysmond      | 513         | Yes       | 2017-07-31 13:58:05      | e70f101
hpe-tempd        | 1048        | Yes       | 2017-08-13 13:31:53      | e70f101
hpe-tempd        | 1052        | Yes       | 2017-08-13 13:41:44      | e70f101
```



```

Line Module core-dumps
=====
Line Module : 1/1
=====
dune_agent_0      18958      Yes      2017-08-12 11:50:17    e70f101
dune_agent_0      18842      Yes      2017-08-12 11:50:09    e70f101
=====
Total number of core dumps : 5
=====

```

show domain-name

Syntax

```
show domain-name
```

Description

Shows the current domain name.

Command context

Manager (#)

Authority

Administrators or local user group members with execution rights for this command.

Usage

If there is no domain name configured, the CLI displays a blank line.

Example

Setting and showing the domain name:

```

switch# show domain-name

switch# config
switch(config)# domain-name example.com
switch(config)# show domain-name
example.com
switch(config)#

```

show environment fan



NOTE: `show environment fan` is not available for JL679A.

Syntax

```
show environment fan
```

Description

Shows the status information for all fans and fan trays (if present) in the system.

Command context

Manager (#)

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Usage

For fan trays, *Status* is one of the following values:

ready

The fan tray is operating normally.

fault

The fan tray is in a fault event. The status of the fan tray does not indicate the status of fans.

empty

The fan tray is not installed in the system.

For fans:

Speed

Indicates the relative speed of the fan based on the nominal speed range of the fan.

N/A

This value is not applicable to the 6100.

Direction

The direction of airflow through the fan. Values are:

left-to-right

Air flows from the left of the system to the right of the system.

N/A

The fan is not installed.

Status

Fan status. Values are:

uninitialized

The fan has not completed initialization.

ok

The fan is operating normally.

fault

The fan is in a fault state.

empty

The fan is not installed.

Examples

Showing output for systems with fan trays for 6100 switch series:

```
switch# show environment fan
```

```
Fan information
```

Mbr/Fan	Product Name	Serial Number	Speed	Direction	Status	RPM
1/1	N/A	N/A	N/A	left-to-right	ok	N/A

show environment led

Syntax

```
show environment led
```

Description

Shows state and status information for all the configurable LEDs in the system.

Command context

Operator (>) or Manager (#)

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Example

Show state and status for the environment LED:

```
switch# show environment led
```

Mbr/Name	State	Status
1/locator	off	ok

show environment power-supply

Syntax

```
show environment power-supply
```

Description

Shows status information about all power supplies in the switch.

Command context

Operator (>) or Manager (#)

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Usage

The following information is provided for each power supply:

Mgr/PSU

Shows the member and slot number of the power supply.

Product Number

Shows the product number of the power supply.

Serial Number

Shows the serial number of the power supply, which uniquely identifies the power supply.

PSU Status

The status of the power supply. Values are:

OK

Power supply is operating normally.

OK*

Power supply is operating normally, but it is the only power supply in the chassis. One power supply is not sufficient to supply full power to the switch. When this value is shown, the output of the command also shows a message at the end of the displayed data.

Absent

No power supply is installed in the specified slot.

Input fault

The power supply has a fault condition on its input.

Output fault

The power supply has a fault condition on its output.

Warning

The power supply is not operating normally.

Wattage Maximum

Shows the maximum amount of wattage that the power supply can provide.

Example

Showing the output when only one power supply is installed in the switch:

switch# show environment power-supply				
Mbr/PSU	Product Number	Serial Number	PSU Status	Wattage Maximum
1/1	N/A	N/A	OK	500

show environment temperature

Syntax

```
show environment temperature [detail]
```

Description

Shows the temperature information from sensors in the switch that affect fan control.

Command context

Operator (>) or Manager (#)

Parameters

detail

Shows detailed information from each temperature sensor.

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Usage

Temperatures are shown in Celsius.

Valid values for status are the following:

normal

Sensor is within nominal temperature range.

min

Lowest temperature from this sensor.

max

Highest temperature from this sensor.

low_critical

Lowest threshold temperature for this sensor.

critical

Highest threshold temperature for this sensor.

fault

Fault event for this sensor.

emergency

Over temperature event for this sensor.

Examples

Showing current temperature information for a 6100 switch:

```
switch# show environment temperature
Temperature information
```

Mbr/Slot-Sensor	Module Type	Current temperature	Status
1/1-COMe-Daughter-Boar	line-card-module	66.45 C	normal
1/1-PCIE-Switch	line-card-module	95.82 C	normal
1/1-Processor	line-card-module	00.00 C	fault
1/1-Switch-ASIC	line-card-module	116.36 C	emergency
1/1-Switch-ASIC-Internal	line-card-module	108.25 C	critical
1/2-COMe-Daughter-Boar	line-card-module	67.29 C	normal
1/2-PCIE-Switch	line-card-module	95.82 C	normal
1/2-Processor-1	line-card-module	72.92 C	normal
1/2-Processor-2	line-card-module	73.05 C	normal
1/2-Switch-ASIC	line-card-module	97.41 C	normal

show events

Syntax

```
show events [ -e <EVENT-ID> |  
    -s {alert | crit | debug | emer | err | info | notice | warn} |  
    -r | -a | -i <MEMBER-ID> | -n <count> |  
    -c {lldp | ospf | ... | } |  
    -d {lldpd | hpe-fand | ... |}]
```

Description

Shows event logs generated by the switch modules since the last reboot.

Command context

Manager (#)

Parameters

-e <EVENT-ID>

Shows the event logs for the specified event ID. Event ID range: 101 through 99999.

-s {alert | crit | debug | emer | err | info | notice | warn}

Shows the event logs for the specified severity. Select the severity from the following list:

- **alert:** Displays event logs with severity alert and above.
- **crit:** Displays event logs with severity critical and above.
- **debug:** Displays event logs with all severities.
- **emer:** Displays event logs with severity emergency only.
- **err:** Displays event logs with severity error and above.
- **info:** Displays event logs with severity info and above.
- **notice:** Displays event logs with severity notice and above.
- **warn:** Displays event logs with severity warning and above.

-r

Shows the most recent event logs first.

-a

Shows all event logs, including those events from previous boots.

-n <count>

Displays the specified number of event logs.

-c {lldp | ospf | ... | }

Shows the event logs for the specified event category. Enter `show event -c` for a full listing of supported categories with descriptions.

```
-d {lldpd | hpe-fand | ... |}
```

Shows the event logs for the specified process. Enter `show event -d` for a full listing of supported daemons with descriptions.

Authority

Auditors or Administrators or local user group members with execution rights for this command. Auditors can execute this command from the auditor context (auditor>) only.

Examples

Showing event logs:

```
switch# show events
-----
show event logs
-----
2016-12-01:12:37:31.733551|lacpd|15007|INFO|AMM|1|LACP system ID set to 70:72:cf:51:50:7c
2016-12-01:12:37:31.734541|intfd|4001|INFO|AMM|1|Interface port_admin set to up for bridge_normal interface
2016-12-01:12:37:32.583256|switchd|24002|ERR|AMM|1|Failed to create VLAN 1 in Hardware
```

Showing the most recent event logs first:

```
switch# show events -r
-----
show event logs
-----
2016-12-01:12:37:32.583256|switchd|24002|ERR|AMM|1|Failed to create VLAN 1 in Hardware
2016-12-01:12:37:31.734541|intfd|4001|INFO|AMM|1|Interface port_admin set to up for bridge_normal interface
2016-12-01:12:37:31.733551|lacpd|15007|INFO|AMM|1|LACP system ID set to 70:72:cf:51:50:7c
```

Showing all event logs:

```
switch# show events -a
-----
show event logs
-----
2016-12-01:12:37:31.733551|lacpd|15007|INFO|AMM|1|LACP system ID set to 70:72:cf:51:50:7c
2016-12-01:12:37:31.734541|intfd|4001|INFO|AMM|1|Interface port_admin set to up for bridge_normal interface
2016-12-01:12:37:32.583256|switchd|24002|ERR|AMM|1|Failed to create VLAN 1 in Hardware
```

Showing event logs related to IRDP:

```
switch# switch# show events -c irdp
2016-05-31:06:26:27.363923|hpe-rdiscd|111001|LOG_INFO|IRDP enabled on interface %s
2016-05-31:07:08:51.351755|hpe-rdiscd|111002|LOG_INFO|IRDP disabled on interface %s
```

Showing event logs related to LACP:

```
switch# show events -c lacp
-----
show event logs
-----
2016-12-01:12:37:31.733551|lacpd|15007|INFO|AMM|1|LACP system ID set to 70:72:cf:51:50:7c
```

Showing event logs as per the specified slot ID:

```
switch# show events -i 1
-----
Event logs from current boot
-----
2020-04-22T05:36:14.430166+00:00 6300 vrfmgrd[3053]: Event[5401|LOG_INFO|MSTR|1|Created a vrf entity b1721d27-41c2-485d-9bae-2cfcbc9bd13d
2020-04-22T05:36:14.942597+00:00 6300 vrfmgrd[3053]: Event[5401|LOG_INFO|MSTR|1|Created a vrf entity 5eb532c9-5b4d-4d83-b34a-db24ae542d4e
2020-04-22T05:36:15.886252+00:00 6300 vsfd[710]: Event[9903|LOG_INFO|MSTR|1|Master 1 boot complete
```

Showing event logs as per the specified process:

```
switch# show events -d lacpd
-----
show event logs
-----
2016-12-01:12:37:31.733551|lacpd|15007|INFO|AMM|1|LACP system ID set to 70:72:cf:51:50:7c
```

Displaying the specified number of event logs:

```
switch# show events -n 5
-----
show event logs
-----
2018-03-21:06:12:15.500603|arpmgrd|6101|LOG_INFO|AMM|-|ARPMGRD daemon has started
2018-03-21:06:12:17.734405|lldpd|109|LOG_INFO|AMM|-|Configured LLDP tx-delay to 2
2018-03-21:06:12:17.740517|lacpd|1307|LOG_INFO|AMM|-|LACP system ID set to 70:72:cf:d4:34:42
2018-03-21:06:12:17.743491|vrfmgrd|5401|LOG_INFO|AMM|-|Created a vrf entity 42cc3df7-1113-412f-b5cb-e8227b8c22f2
2018-03-21:06:12:17.904008|vrfmgrd|5401|LOG_INFO|AMM|-|Created a vrf entity 4409133e-2071-4ab8-adfe-f9662c06b889
```

show hostname

Syntax

```
show hostname
```

Description

Shows the current host name.

Command context

Manager (#)

Authority

Administrators or local user group members with execution rights for this command.

Example

Setting and showing the host name:

```
switch# show hostname
switch
switch# config
switch(config)# hostname myswitch
myswitch(config)# show hostname
myswitch
```

show images

Syntax

```
show images
```

Description

Shows information about the software in the primary and secondary images.

Command context

Operator (>) or Manager (#)

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Example

Showing the primary and secondary images on a 6100 switch:


```

switch(config)# show images
-----
ArubaOS-CX Primary Image
-----
Version  : PL.10.06.0002E
Size     : 243 MB
Date     : 2020-11-25 22:00:47 PST
SHA-256  : 61fe9233b2c842e8ac1731ad46949bd63e269c5c72d69290932ef19c1ebb0730
-----

ArubaOS-CX Secondary Image
-----
Version  : PL.10.07.0000E-201-gba0c336
Size     : 271 MB
Date     : 2020-11-25 21:09:08 UTC
SHA-256  : 2fdfc646a8013efcca75729584bbb0fa54604086bad3f46e1c5d4e706b8b30ee

Default Image : primary
Boot Profile Timeout : 2 seconds
-----

Management Module 1/1 (Active)
-----
Active Image      : primary
Service OS Version : PL.01.07.0003-internal
BIOS Version      : PL.01.0001

```

show module

Syntax

show module

Description

Shows information about installed line modules and management modules.



NOTE: Although this switch does not have removable modules, this command will still return information about the switch, referring to management modules and line modules.

Command context

Operator (>) or Manager (#)

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Usage

Identifies and shows status information about the line modules and management modules that are installed in the switch.

To show the configuration information—if any—associated with that line module slot, use the `show running-configuration` command.

Status is one of the following values:

Active

This is the active management module.

Deinitializing

The switch is being deinitialized.

Diagnostic

The switch is in a state used for troubleshooting.

Down

The switch is physically present but is powered down.

Failed

The moduleswitch has experienced an error and failed.

Initializing

The switch is being initialized.

Present

The switch hardware is installed in the chassis.

Ready

The switch is available for use.

Updating

A firmware update is being applied to the switch.

Examples

Showing all installed modules:

```
switch# show module
```

```
Management Modules
```

```
=====
```

	Product		Serial	
Name	Number	Description	Number	Status
1/1	JL678A	6100F 24G 4SFP+ Swch	SG0ZKW600P	Active (local)

```
Line Modules
```

```
=====
```

	Product		Serial	
Name	Number	Description	Number	Status
1/1	JL678A	6100F 24G 4SFP+ Swch	SG0ZKW600P	Ready

show running-config

Syntax

```
show running-config [<FEATURE>] [all]
```

Description

Shows the current nondefault configuration running on the switch. No user information is displayed.

Command context

Manager (#)

Parameters

<FEATURE>

Specifies the name of a feature. For a list of feature names, enter the `show running-config` command, followed by a space, followed by a question mark (?).

all

Shows all default values for the current running configuration.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Showing the current running configuration:

```
switch> show running-config
Current configuration:
!
!Version ArubaOS-CX PL.10.06.0001-346-g56a12a8f4cf15
!export-password: default
ntp enable
!
!
!
!
ssh server vrf default
vlan 1
spanning-tree
spanning-tree instance 1 vlan 1,2,4-10
interface 1/1/1
    no shutdown
    vlan access 1
    portfilter 1/1/2-1/1/3

interface 1/1/2
    no shutdown
    vlan access 1
interface 1/1/3
    no shutdown
    vlan access 1
interface 1/1/4
    no shutdown
    vlan access 1
interface 1/1/5
    no shutdown
    vlan access 1
interface 1/1/6
    no shutdown
    vlan access 1
interface 1/1/7
    no shutdown
    vlan access 1
interface 1/1/8
    no shutdown
    vlan access 1
interface 1/1/9
    no shutdown
```

```

    vlan access 1
interface 1/1/10
    no shutdown
    vlan access 1
interface 1/1/11
    no shutdown
    vlan access 1
interface 1/1/12
    no shutdown
    vlan access 1
interface 1/1/13
    no shutdown
    vlan access 1
interface 1/1/14
    no shutdown
    vlan access 1
interface 1/1/15
    no shutdown
    vlan access 1
interface 1/1/16
    no shutdown
    vlan access 1
interface vlan 1
    ip dhcp
snmp-server vrf default
snmp-server community public
snmp-server host 1.1.1.1 inform version v2c
snmp-server host 1.1.1.1 trap version v2c
snmpv3 context A vrf default
!
!
!
!
!
https-server vrf default

```

Showing the current running configuration in json format:

```

switch> show running-config json
Running-configuration in JSON:
{
  "Monitoring_Policy_Script": {
    "system_resource_monitor_mm1.1.0": {
      "Monitoring_Policy_Instance": {
        "system_resource_monitor_mm1.1.0/system_resource_monitor_mm1.1.0.default": {
          "name": "system_resource_monitor_mm1.1.0.default",
          "origin": "system",
          "parameters_values": {
            "long_term_high_threshold": "70",
            "long_term_normal_threshold": "60",
            "long_term_time_period": "480",
            "medium_term_high_threshold": "80",
            "medium_term_normal_threshold": "60",
            "medium_term_time_period": "120",
            "short_term_high_threshold": "90",
            "short_term_normal_threshold": "80",
            "short_term_time_period": "5"
          }
        }
      }
    },
    ...
    ...
    ...
    ...
  }
}

```

Show the current running configuration without default values:

```
switch(config)# show running-config
Current configuration:
!
!Version ArubaOS-CX PL.10.06.0001-346-g56a12a8f4cf15
!export-password: default
!
!
!
ssh server vrf default
vlan 1
spanning-tree
interface 1/1/1
    no shutdown
    vlan access 1
interface 1/1/2
    no shutdown
    vlan access 1
interface 1/1/3
    no shutdown
    vlan access 1
interface 1/1/4
    no shutdown
    vlan access 1
interface 1/1/5
    no shutdown
    vlan access 1
interface 1/1/6
    no shutdown
    vlan access 1
interface 1/1/7
    no shutdown
    vlan access 1
interface 1/1/8
    no shutdown
    vlan access 1
interface 1/1/9
    no shutdown
    vlan access 1
interface 1/1/10
    no shutdown
    vlan access 1
interface 1/1/11
    no shutdown
    vlan access 1
interface 1/1/12
    no shutdown
    vlan access 1
interface 1/1/13
    no shutdown
    vlan access 1
interface 1/1/14
    no shutdown
    vlan access 1
interface 1/1/15
    no shutdown
    vlan access 1
interface 1/1/16
    no shutdown
    vlan access 1
interface vlan 1
    ip dhcp
!
!
```

```
!  
!  
!  
https-server vrf default  
switch#  
switch#
```

show running-config current-context

Syntax

```
show running-config current-context
```

Description

Shows the current non-default configuration running on the switch in the current command context.

Command context

`config` or a child of `config`. See Usage.

Authority

Administrators or local user group members with execution rights for this command.

Usage

You can enter this command from the following configuration contexts:

- Any child of the global configuration (`config`) context. If the child context has instances—such as interfaces—you can enter the command in the context of a specific instance.
Support for this command is provided for one level below the `config` context. For example, entering this command for a child of a child of the `config` context not supported.
If you enter the command on a child of the `config` context, the current configuration of that context and the children of that context are displayed.
- The global configuration (`config`) context.
If you enter this command in the global configuration (`config`) context, it shows the running configuration of the entire switch. Use the `show running-configuration` command instead.

Examples

Showing the running configuration for the current interface:

```
switch(config-if)# show running-config current-context  
interface 1/1/1  
  
    no shutdown  
    description Example interface  
vlan access 1  
    exit
```

Showing the current running configuration for the in-band management interface:

```
switch(config)# interface vlan 1  
Switch(config-if-vlan)#description IN-BAND Management Interface  
Switch(config-if-vlan)#ip dhcp  
Switch(config-if-vlan)#no shutdown
```

```
Switch(config-if-vlan)#end
Switch#
```

Showing the current running configuration for the in-band management interface without DHCP:

```
switch(config)# interface vlan 1
Switch(config-if-vlan)#description IN-BAND Management Interface
Switch(config-if-vlan)#no ip dhcp
Switch(config-if-vlan)#ip address 192.168.10.1/24
Switch(config-if-vlan)#no shutdown
Switch(config-if-vlan)#end
Switch#
```

Showing the running configuration for the external storage share named `nasfiles`:

```
switch(config-external-storage-nasfiles)# show running-config current-context
external-storage nasfiles
  address 192.168.0.1
  vrf default
  username nasuser
  password ciphertext AQBapalKj+XMsZumHEwIc9OR6YcOw5Z6Bh9rV+9ZtKDKzvbaBAAAAB1CTrM=
  type scp
  directory /home/nas
  enable
switch(config-external-storage-nasfiles)#
```

show startup-config

Syntax

```
show startup-config [json]
```

Description

Shows the contents of the startup configuration.



NOTE: Switches in the `factory-default` configuration do not have a startup configuration to display.

Command context

Manager (#)

Parameters

json

Display output in JSON format.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Showing the startup-configuration in JSON format:

```
switch# show startup-config json
Startup configuration:
{
  "AAA_Server_Group": {
    "local": {
```

```

        "group_name": "local"
    },
    "none": {
        "group_name": "none"
    }
},
...

```

show system

Syntax

```
show system
```

Description

Shows general status information about the system.

Command context

Operator (>) or Manager (#)

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Usage

CPU utilization represents the average utilization across all the CPU cores.

System Contact, System Location, and System Description can be set with the `snmp-server` command.

Examples

Showing system information:

```

switch(config)# show system
Hostname           : switch
System Description : PL.10.xx.xxxxx
System Contact     :
System Location    :

Vendor             : Aruba
Product Name       : JL678A 6100 24G 4SFP+ Swch
Chassis Serial Nbr : CN9ZKRD058
Base MAC Address   : f860f0-c91160
ArubaOS-CX Version : PL.10.xx.xxxxx

Time Zone          : UTC

Up Time            : 9 hours, 10 minutes
CPU Util (%)       : 3
Memory Usage (%)   : 15

```

show system resource-utilization

Syntax

```
show system resource-utilization [daemon <DAEMON-NAME> | module <SLOT-ID>]
```


Description

Shows information about the usage of system resources such as CPU, memory, and open file descriptors.

Command context

Manager (#)

Parameters

daemon <DAEMON-NAME>

Shows the filtered resource utilization data for the process specified by <DAEMON-NAME> only.



NOTE: For a list of daemons that log events, enter `show events -d ?` from a switch prompt in the manager (#) context.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Showing all system resource utilization data:

```
switch# show system resource-utilization
System Resources:
Processes: 147
CPU usage(%): 12
Memory usage(%): 13
Open FD's: 4128
mmc-type-a: Endurance utilization = 0-10%, Health = normal
mmc-type-b: Endurance utilization = 0-10%, Health = normal
switch#
```

Showing the resource utilization data for the pmd process:

```
switch# show system resource-utilization daemon pmd
Process          CPU Usage      Memory Usage    Open FD's
-----
pmd                2                1              14
```

Showing resource utilization data when system resource utilization polling is disabled:

```
switch# show system resource-utilization
System resource utilization data poll is currently disabled
```

Showing resource utilization data for a line module:

```
switch# show system resource-utilization module 1/1
System Resource utilization for line card module: 1/1
CPU usage(%): 0
Memory usage(%): 35
Open FD's: 512
```

show tech

Syntax

`show tech [basic | <FEATURE>] [local-file]`

Description

Shows detailed information about switch features by automatically running the `show` commands associated with the feature. If no parameters are specified, the `show tech` command shows information about all switch features. Technical support personnel use the output from this command for troubleshooting.

Command context

Manager (#)

Parameters

basic

Specifies showing a basic set of information.

<FEATURE>

Specifies the name of a feature. For a list of feature names, enter the `show tech` command, followed by a space, followed by a question mark (?).

local-file

Shows the output of the `show tech` command to a local text file.

Authority

Administrators or local user group members with execution rights for this command.

Usage

To terminate the output of the `show tech` command, enter **Ctrl+C**.

If the command was not terminated with **Ctrl+C**, at the end of the output, the `show tech` command shows the following:

- The time consumed to execute the command.
- The list of failed `show` commands, if any.

To get a copy of the local text file content created with the `show tech` command that is used with the `local-file` parameter, use the `copy show-tech local-file` command.

Example

Showing the basic set of system information:

```
switch# show tech basic
=====
Show Tech executed on Wed Sep  6 16:50:37 2017
=====
[Begin] Feature basic
=====

*****
Command : show core-dump all
*****
no core dumps are present

...
=====
[End] Feature basic
=====
```

```
=====
1 show tech command failed
=====
```

Failed command:

```
1. show boot-history
```

```
=====
Show tech took 3.000000 seconds for execution
```

Directing the output of the **show tech basic** command to the local text file:

```
switch# show tech basic local-file
```

```
Show Tech output stored in local-file. Please use 'copy show-tech local-file'
to copy-out this file.
```

show usb

Syntax

```
show usb
```

Description

Shows the USB port configuration and mount settings.

Command context

Operator (>) or Manager (#)

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Examples

If USB has not been enabled:

```
switch> show usb
Enabled: No
Mounted: No
```

If USB has been enabled, but no device has been mounted:

```
switch> show usb
Enabled: Yes
Mounted: No
```

If USB has been enabled and a device mounted:

```
switch> show usb
Enabled: Yes
Mounted: Yes
```

show usb file-system

Syntax

```
show usb file-system [<PATH>]
```

Description

Shows directory listings for a mounted USB device. When entered without the <PATH> parameter the top level directory tree is shown.

Command context

Operator (>) or Manager (#)

Parameters

<PATH>

Specifies the file path to show. A leading "/" in the path is optional.

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Usage

Adding a leading "/" as the first character of the <PATH> parameter is optional.

Attempting to enter '.' as any part of the <PATH> will generate an invalid path argument error. Only fully-qualified path names are supported.

Examples

Showing the top level directory tree:

```
switch# show usb file-system
/mnt/usb:
'System Volume Information'  dir1'

/mnt/usb/System Volume Information':
IndexerVolumeGuid  WPSettings.dat

/mnt/usb/dir1:
dir2  test1

/mnt/usb/dir1/dir2:
test2
```

Showing available path options from the top level:

```
switch# show usb file-system /
total 64
drwxrwxrwx 2 32768 Jan 22 16:27 'System Volume Information'
drwxrwxrwx 3 32768 Mar  5 15:26 dir1
```

Showing the contents of a specific folder:

```
switch# show usb file-system /dir1
total 32
drwxrwxrwx 2 32768 Mar  5 15:26 dir2
-rwxrwxrwx 1      0 Feb  5 18:08 test1

switch# show usb file-system dir1/dir2
total 0
-rwxrwxrwx 1 0 Feb  6 05:35 test2
```

Attempting to enter an invalid character in the path:

```
switch# show usb file-system dir1/../../..  
Invalid path argument
```

show version

Syntax

```
show version
```

Description

Shows version information about the network operating system software, service operating system software, and BIOS.

Command context

Operator (>) or Manager (#)

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Example

Showing version information:

```
switch(config)# show version  
-----  
ArubaOS-CX  
(c) Copyright 2017-2020 Hewlett Packard Enterprise Development LP  
-----  
Version       : PL.10.xx.xxxxx  
Build Date    : 2020-12-06 22:13:46 UTC  
Build ID      : ArubaOS-CX:PL.10.xx.xxxxx:9e8bf51170a6:202012062115  
Build SHA     : 9e8bf51170a602370f12e0bde814e8d8f49bf706  
Active Image  : secondary  
  
Service OS Version : PL.10.xx.xxxxx-internal  
BIOS Version      : PL.01.0002
```

system resource-utilization poll-interval

Syntax

```
system resource-utilization poll-interval <SECONDS>
```

Description

Configures the polling interval for system resource information collection and recording such as CPU and memory usage.

Command context

```
config
```

Parameters

<SECONDS>

Specifies the poll interval in seconds. Range: 10-3600. Default: 10.

Authority

Administrators or local user group members with execution rights for this command.

Example

Configuring the system resource utilization poll interval:

```
switch(config)# system resource-utilization poll-interval 20
```

top cpu

Syntax

top cpu

Description

Shows CPU utilization information.

Command context

Manager (#)

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Example

Showing top CPU information:

```
switch# top cpu
top - 09:42:55 up 3 min, 3 users, load average: 3.44, 3.78, 1.70
Tasks: 76 total, 2 running, 74 sleeping, 0 stopped, 0 zombie
%Cpu(s): 31.4 us, 32.7 sy, 0.5 ni, 34.4 id, 04. wa, 0.0 hi, 0.6 si, 0.0 st
KiB Mem : 4046496 total, 2487508 free, 897040 used, 661948 buff/cache
KiB Swap: 0 total, 0 free, 0 used, 2859196 avail Mem

  PID USER      PRI  NI   VIRT   RES   SHR S  %CPU  %MEM     TIME+ COMMAND
...
```

top memory

Syntax

top memory

Description

Shows memory utilization information.

Command context

Manager (#)

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Example

Showing top memory:

```
switch> top memory
top - 09:42:55 up 3 min, 3 users, load average: 3.44, 3.78, 1.70
Tasks: 76 total, 2 running, 74 sleeping, 0 stopped, 0 zombie
%Cpu(s): 31.4 us, 32.7 sy, 0.5 ni, 34.4 id, 04. wa, 0.0 hi, 0.6 si, 0.0 st
KiB Mem : 4046496 total, 2487508 free, 897040 used, 661948 buff/cache
KiB Swap: 0 total, 0 free, 0 used, 2859196 avail Mem

  PID USER      PRI  NI   VIRT   RES   SHR S  %CPU  %MEM     TIME+ COMMAND
...
```

usb

Syntax

usb

no usb

Description

Enables the USB ports on the switch. This setting is persistent across switch reboots and management module failovers. Both active and standby management modules are affected by this setting.

The `no` form of this command disables the USB ports.

Command context

config

Authority

Administrators or local user group members with execution rights for this command.

Example

Enabling USB ports:

```
switch(config)# usb
```

Disabling USB ports when a USB drive is mounted:

```
switch(config)# no usb
```

usb mount | unmount

Syntax

usb {mount | unmount}

Description

Enables or disables the inserted USB drive.

Command context

Manager (#)

Parameters

mount

Enables the inserted USB drive.

unmount

Disables the inserted USB drive in preparation for removal.

Authority

Administrators or local user group members with execution rights for this command.

Usage

A USB drive must be unmounted before removal.

The supported USB file systems are FAT16 and FAT32.

Examples

Mounting a USB drive in the USB port:

```
switch# usb mount
```

Unmounting a USB drive:

```
switch# usb unmount
```


The IP Service Level Agreement (IP-SLA) is a feature that enables the measuring of network performance between two nodes in a network for different service level agreement parameters such as round-trip time (RTT), one-way delay, jitter, reachability, packet loss, and voice quality scores. These two nodes can span across area in access, distribution or core inside a LAN as well as across WAN between core to core or core to Data Centre switches. This feature helps you measure the SLA for different protocols or applications such as UDP echo, UDP jitter (for voice and video), TCP connect, HTTP, and ICMP echo. This guide provides details for managing and monitoring different types of IP-SLAs.

IP-SLA guidelines

- ArubaOS-CX supports only SLA configuration through CLI and thresholds can be configured using NAE agents using WebUI/REST.
- ArubaOS-CX supports only forever tests. On-demand tests are not supported.
- Maximum sessions: IP-SLA source 500, IP-SLA responder 100.
- NAE can effectively monitor a maximum of 300 parameters, reducing the maximum supported session by 300.
- NAE supports only syslog.
- NAE agents must be triggered for each IP-SLA test on every switch.
- If multiple IP addresses are received for a DNS query, DNS works with the first resolved IP.
- When the DNS server IP is not configured, the first DNS server in `resolve.conf` is used.
- The source interface/IP option is not applicable for SLAs configured on 'mgmt' VRF, as it has only one interface.
- A system time change because of NTP or a manual change causes an incorrect calculation.
- There is no interoperability of UDP echo SLA between ArubaOS-CX and FlexFabric switches.
- Source IP and source port combination must be unique across SLA sessions in a same switch.
- Do not use the same source port across the source and responder sessions in a switch.
- NTP synchronization is a must for SLA types involving one-way delay such as UDP jitter VoIP.
- It is mandatory to set default CoPP to the max value when UDP jitter SLA is enabled otherwise 100% packet loss can be seen and `UDP-Jitter sla` probe will result in failure as seen in the following example.

```
copp-policy default
  class hypertext priority 6 rate 50000 burst 64
  default-class priority 6 rate 99999 burst 9999
```

- Deviations with respect to PVOS results: The packet losses due to internal switch-related issues like interface shutdown or interface flaps will not be considered as 'Probes Timed-out error', as the IP-SLA

solution is to measure network performance and anomalies. Rather, this kind of packet loss will be counted in internal counters like 'Destination address unreachable'.

Limitations with VoIP SLAs

- A maximum of 80 concurrent VoIP SLAs can be scheduled in a 20 second slot.
- A single VoIP probe takes 20 seconds to complete.
- The default and minimum probe interval for VoIP SLA is 120 seconds.
- SLAs scheduled in the same slot, periodically sends 1000 probe packets for 120 seconds in 20 second intervals.
- Default 120 second probe interval is divided in to 6 slots of 20 seconds to avoid synchronization of all configured VoIP SLAs sending probes at the same time.
- SLAs started at the same time exceeding the concurrent limit of 80 must wait for the next 20 second VoIP slot to open before moving to 'running' state.
- The maximum number of VoIP SLAs supported is 80 X 6 slots = 480 SLAs.
- SLAs exceeding 480 will continue to remain in the 'waiting for VoIP slot' until any slot is freed by stopping the running SLA.
- To avoid high RTT, a single switch with more than 20 SLAs should not have single responder SLA.
- When IP is received dynamically (e.g. using DHCP) for interfaces other than management interface, IPSLA source or responder has to be configured only using interface name.

IP-SLA commands

ip-sla responder

Syntax

```
ip-sla responder <SLA-NAME> {udp-echo | tcp-connect | udp-jitter-voip} <PORT-NUM>  
    [source {<SOURCE-IPV4-ADDR> | <IFNAME>}] [vrf <VRF-NAME>]  
no ip-sla responder <SLA-NAME>
```

Description

Selects the IP-SLA responder. The responder can be configured for udp-echo, tcp-connect, udp-jitter-voip type. It requires the SLA name, SLA type, and port number as arguments. Source IP/interface ID is a must for type udp-jitter-voip and optional for other types.

The `no` form of this command removes the IP-SLA responder.

Command context

config

Parameters

<SLA-NAME>

Specifies the SLA name.

udp-echo

Enables responder for udp-echo probes.

tcp-connect

Selects TCP connect as the IP-SLA test mechanism.

vrf <VRF-NAME>

Specifies the name of the VRF to use.

udp-jitter-voip

Selects VOIP jitter as the IP-SLA test mechanism.

<PORT-NUM>

Specifies the port number to listen for IP-SLA probes. Range: 1 to 65535.

[source {<SOURCE-IPV4-ADDR> | <IFNAME>}]

Selects the source IPv4 address for SLA probes or the source interface to use for sending IP-SLA probes.

Authority

Administrators or local user group members with execution rights for this command.

Examples

```
switch(config)# ip-sla responder SLA1 udp-echo 8000 source 2.2.2.2
switch(config)# ip-sla responder SLA1 udp-echo 8000 source 1/1/1
```

```
switch(config)# no ip-sla responder <SLA-NAME>
```

show ip-sla responder

Syntax

```
show ip-sla responder <SLA-NAME>
```

Description

Shows the given IP-SLA responder configuration and operation status.

Command context

config

Parameters

<SLA-NAME>

Specifies the SLA name.

Authority

Administrators or local user group members with execution rights for this command.

Examples

```
switch(config)# show ip-sla responder SLA3
```

```
SLA Name          : SLA3
```

```
IP-SLA Type       : Udp-echo
VRF                : Default
Responder Port     : 8000
Responder IP       : 2.2.2.3
Responder Interface : 1/1/1
Responder Status   : Running
```

show ip-sla responder results

Syntax

```
show ip-sla responder <SLA-NAME> <SOURCE-IPV4-ADDR> <PORT-NUM> results
```

Description

Shows the given ip-sla responder statistics for a given source IP and port. This command is only applicable for the sources where source IP and port are configured.

Command context

config

Parameters

<SLA-NAME>

Specifies the SLA name.

<SOURCE-IPV4-ADDR>

Specifies the source IPV4 address.

<PORT-NUM>

Specifies the port number. Range: 1 to 65535.

Authority

Administrators or local user group members with execution rights for this command.

Examples

```
switch# show ip-sla responder SLA1 2.2.2.1 8000 results
```

```
IP-SLA Type       : Udp-echo
VRF Name          : Default
Source IP         : 2.2.2.1
Source Port       : 8000
Responder Port     : 8888
Responder IP       : 2.2.2.3
Responder Interface : 
Responder Status   : Running
Packets Received   : 2
Packets Sent       : 2
```

The speed downshift feature allows the user to link-up at sub-optimal speeds when failing to link-up at the highest advertised speed. There are fixed number of link attempts made to establish link at highest advertised speed and when all of them fail and attempt is made to link-up at a lower possible speed.

This feature requires underlying PHY to have support for the same and hence capability is only added to select set of ports. If a link cannot be established at the highest common denominator within a set number of link attempts, the PHY advertises the next highest speed using auto-negotiation.

Limitations with speed downshift

- Link up may be delayed as certain number of retries are done to establish the link at highest advertise speeds by both link partners before downshifting.
- Link may be established at sub-optimal speed.

L1-100Mbps downshift commands

downshift enable

Syntax

```
downshift-enable
```

```
no downshift-enable
```

Description

Enables/disables automatic speed downshift on an interface that supports downshift, generally 1GBASE-T ports. When enabled, downshift allows an interface to link at a lower advertised speed when unable to establish a stable link at the maximum speed. Downshifting only applies to physical interfaces that are not members of a LAG and is only available when auto-negotiation is enabled. When only one speed is advertised, downshift will not be triggered.

Command context

```
config-if
```

Authority

Administrators or local user group members with execution rights for this command.

Examples

```
switch(config-if)# interface 1/1/1  
switch(config-if)# downshift-enable
```

Warning: this is a non-standard mode for use only when standards-based auto-negotiation is not able to establish a stable link. Enabling this may cause the port to link at a lower than expected speed and should

not be used on ports that are members of a LAG. Support calls may require this feature to be disabled

Continue (y/n)?

```
switch(config-if)#
```

When automatic downshift is enabled:

```
switch(config-if)# show running-config interface  
interface 1/1/1  
    downshift-enable
```

Disabling automatic speed downshift:

```
switch(config-if)# interface 1/1/1  
switch(config-if)# no downshift-enable
```

show interface

Syntax

```
show interface [<IFNAME>|<IFRANGE>] [brief | physical | extended [non-zero]]  
show interface [lag | loopback | tunnel | vlan ] [<ID>] [brief | physical]  
show interface [lag | loopback | tunnel | vlan ] [<ID>] [extended | non-zero]
```

Description

Displays active configurations and operational status information for interfaces.

Command context

config

Parameters

<IFNAME>

Specifies a interface name.

<IFRANGE>

Specifies the port identifier range.

brief

Displays brief info in tabular format.

extended

Displays the physical connection info in tabular format.

non-zero

Displays only non zero statistics.

LAG

Displays LAG interface information

LOOPBACK

Displays loopback interface information.

TUNNEL

Displays tunnel interface information.

VLAN

Displays VLAN interface information.

<LAG-ID>

Specifies the LAG number. Range: 1-256

<LOOPBACK-ID>

Specifies the LOOPBACK number. Range: 0-255

<TUNNEL-ID>

Specifies the tunnel ID. Range: 1-255

<VLAN-ID>

Specifies the VLAN ID. Range: 1-4094

VXLAN

Displays the VXLAN interface information.

<VXLAN-ID>

Specifies the VXLAN interface identifier. Default: 1

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Examples

Showing interfaces configured for L2 forwarding:

```
switch(config-if)# show interface
Interface 1/1/1 is down (Administratively down)
Admin state is down
State information: Administratively down
Link transitions: 2
Description: Backup data center link
Hardware: Ethernet, MAC Address: 70:72:cf:fd:e7:b4
MTU 9198
Type SFP-SX
Full-duplex
qos trust none
Speed 0 Mb/s
Auto-negotiation is on
Flow-control: off
Error-control: off
VLAN Mode: access
Access VLAN: 1
Rx
    1386055 total packets          586397526 total bytes
    1374287 unicast packets
    11764   multicast packets
    4       broadcast packets
    0 errors
    0 CRC/FCS                      0 dropped
```

```

Tx
  2475612 total packets          1003506711 total bytes
  2311806 unicast packets
  100369  multicast packets
  63437   broadcast packets
    0 errors                      2462773 dropped
    0 collision

Interface 1/2/1 is down (Administratively down)
Admin state is down
State information: Administratively down
Link transitions: 0
Description:
Hardware: Ethernet, MAC Address: 70:72:cf:fd:e7:b4
MTU 9198
Type QSFP+SR4
Full-duplex
qos trust none
Speed 0 Mb/s
Auto-negotiation is off
Flow-control: off
Error-control: off
VLAN Mode: access
Access VLAN: 1
Rx
    0 total packets              0 total bytes
    0 unicast packets
    0 multicast packets
    0 broadcast packets
    0 errors                      0 dropped
    0 CRC/FCS

Tx
    0 total packets              0 total bytes
    0 unicast packets
    0 multicast packets
    0 broadcast packets
    0 errors                      0 dropped
    0 collision

```

When the interface is currently linked at a downshifted speed:

```

switch(config-if)# show interface 1/1/1

Interface 1/1/1 is up
...
Auto-negotiation is on with downshift active

```

show interface downshift-enable

Syntax

```
show interface [<IFNAME>|<IFRANGE>] downshift-enable
```

Description

Displays speed downshift information, including the interface speed status and configuration.

Command context

```
config
```


Parameters

<IFNAME>

Specifies a interface name.

<IFRANGE>

Specifies the port identifier range.

Authority

Operators or Administrators or local user group members with execution rights for this command.
Operators can execute this command from the operator context (>) only.

Examples

Showing automatic downshift information:

```
switch(config-if)# show interface downshift-enable
```

Port	Downshift		Speed	
	Enabled	Active	Status	Config
1/1/1	yes	yes	100M-FDx	auto
1/1/2	yes	no	1G	auto
1/1/3	yes	no	100M-FDx	100M-FDx
1/1/4	no	no	--	auto

Showing automatic downshift information on per interface:

```
switch(config-if)# show interface 1/1/2 downshift-enable
```

Port	Downshift		Speed	
	Enabled	Active	Status	Config
1/1/2	yes	no	1G	auto

show running-config interface

Syntax

```
show running-config interface [<IFNAME>|<IFRANGE>]
```

```
show running-config interface [lag | loopback | tunnel | vlan ] [<ID>]
```

Description

Displays active configurations of various switch interfaces.

Command context

config

Parameters

<IFNAME>

Specifies a interface name.

<IFRANGE>

Specifies the port identifier range.

LAG

Specifies LAG interface information

LOOPBACK

Specifies loopback interface information.

TUNNEL

Specifies tunnel interface information.

VLAN

Specifies VLAN interface information.

<LAG-ID>

Specifies the LAG number. Range: 1-256.

<LOOPBACK-ID>

Specifies the LOOPBACK number. Range: 0-255.

<TUNNEL-ID>

Specifies the tunnel ID. Range: 1-255.

<VLAN-ID>

Specifies the VLAN ID. Range: 1-4094.

VXLAN

Specifies the VXLAN interface information.

<VXLAN-ID>

Specifies the VXLAN interface identifier. Default: 1.

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Examples

Showing 1/1/2 interface configuration:

```
switch(config-if)# show running-config interface 1/1/2

interface 1/1/2
  no shutdown
  description DC-23
  exit
```

Showing loopback interfaces configured:

```
switch(config-if)# show running-config interface loopback

interface loopback 1
  description lb interface 1
  exit
interface loopback 2
  description lb interface 2
  exit
```

Showing loopback interfaces not configured:

```
switch(config-if)# show running-config interface loopback
```

```
No loopback interfaces configured.
```

Mirroring allows you to replicate all traffic arriving and/or leaving the selected system interfaces. This data can be used for collection or analysis.

The traffic replicated using mirroring can be sent to a separate interface on the same switch as the traffic source for analysis or inspection. Such a collection of interfaces and settings is called a mirror session.

A mirror session can be configured with many traffic sources but only a single output, or destination. In the initial configuration, the mirror session is disabled. You have enable the feature to start the replication.



CAUTION: Care must be taken in choosing the number and rates of sources to avoid over-saturating a session destination. A mirror session with multiple 10G sources can overwhelm a single 10G destination and important data may be lost.

Mirror statistics

Mirror statistics are reset for a Mirror-to-CPU session when an interface is added or removed from a LAG that is a source interface in the Mirror session and during a failover.

Classifier policies and mirroring sessions

Network traffic can be mirrored to a destination interface in two ways:

- Using a mirroring session alone.
- Using Classifier Policies with mirror actions in conjunction with a mirroring session.

Basic mirroring sessions provide coarse control over the type of traffic mirrored from a source: all received, all transmitted, or both. However, a traffic class within a Classifier Policy applied to a source can provide much finer grained control of mirrored traffic. For example, a policy can match on many different aspects of the Ethernet or IPv4 or IPv6 header information in each frame or packet received or transmitted on an interface.

The steps to configure a policy and class with a mirror action are the following:

1. Configuring a mirroring session with a destination interface.
2. Enabling the mirroring session.
3. Configuring the Classifier Policy, specifying the mirroring session ID in the mirror action.

If the packets being mirrored are received from a VLAN that is not allowed on the mirror destination, the mirrored packets would be dropped at the mirror destination interface. When the mirrored packets are dropped at the destination, the mirror output packet and byte count will increment, however the packets will not be received at the mirror destination.

The mirror destination port among the active mirror sessions must be unique. That is, if an interface is configured as a source or destination in an active mirror session, the same port cannot be used as a destination in another active mirror session.

VLAN as a source

ArubaOS-CX allows configuration of VLAN as a mirroring source. When a VLAN source is configured in the 'rx' direction, all packets are mirrored as they are received in the switch. When a VLAN source is configured in 'tx' direction, all packets are mirrored as they are transmitted out of the switch.

More than one source VLAN can be configured in a mirror session. Each such VLAN may specify its own direction.

There is a limit of 1024 source VLANs in each direction of a given mirror session.

Same VLANs can be configured as a mirror source for multiple sessions.

Note: When changing a source VLAN in an enabled mirror session (that is, adding, changing direction, or removing), mirrored packets being transmitted out the mirror destination port from other mirror sources may be briefly interrupted during the reconfiguration.

Direction of an existing source VLAN can be updated in one of two ways:

1. Reenter the `source vlan` command with the new preferred direction.
2. Use the `no` form of the command with a direction (rx or tx) to selectively remove the specified direction. Specifying the last remaining direction for that VLAN will remove the VLAN from the configuration entirely.

For packets bridged through the switch:

If the mirror is configured in 'both' direction, two copies of packets are mirrored, otherwise one copy of the packet will be mirrored.

For routed packets:

- If the mirror is configured in the 'rx' direction, packets are mirrored in the pre-routed form with the destination MAC address as the switch address.
- If the mirror is configured in the 'tx' direction, packets are mirrored in the post-routed form with the source MAC as the switch address. Destination MAC is the nexthop gateway or station.
- If the mirror is configured in the 'both' direction, one copy of the packet will be mirrored.

Control plane packets generated by the switch's CPU are processed both in the ingress and the egress packet processing pipeline. The following are the behaviors for mirroring with VLAN as source:

- If the mirror is configured in the 'rx' or 'tx' direction, the packets are mirrored to the mirror destination.
- If the mirror is configured in the 'both' direction, two copies of the packets are mirrored to the mirror destination.

Mirroring commands

`clear mirror`

Syntax

```
clear mirror [all | <SESSION-ID>]
```

Description

Clears the mirror statistics for all configured mirror sessions or a specified session

Command context

Manager (#)

Parameters

all

Specifies all configured sessions.

<SESSION-ID>

Specifies a numeric identifier for the session. Range: 1 to 4

Authority

Administrators or local user group members with execution rights for this command.

Examples

Clearing mirror statistics for all configured mirror sessions:

```
switch# clear mirror all
```

Clearing mirror statistics for mirror session 1:

```
switch# clear mirror 1
```

comment

Syntax

```
comment <COMMENT>
```

```
no comment
```

Description

Specifies a descriptive comment for the mirroring session.

The **no** form of this command removes the comment.

Command context

```
config-mirror-<SESSION-ID>
```

Parameters

<COMMENT>

A comment string of up to 64 characters composed of letters, numbers, underscores, dashes, spaces, and periods.

Authority

Administrators or local user group members with execution rights for this command.

Usage

Comments are optional and can be added or removed at any time without affecting the state of the mirroring session.

Adding a comment to a session that already has a comment replaces the existing comment.

Examples

Adding a comment:

```
switch(config-mirror-3)# comment This Mirror will be removed during next maintenance window
```

Removing the comment for mirroring session 3:

```
switch(config-mirror-3)# no comment
```

copy tshark-pcap

Syntax

```
copy tshark-pcap <REMOTE-URL> [vrf <VRF-NAME>]
```

Description

Copies the tshark capture data to a file on a TFTP or SFTP server.

Command context

Manager (#)

Parameters

<REMOTE-URL>

Specifies the capture file on a remote TFTP or SFTP server. The URL syntax is:

```
{tftp:// | sftp://<USER>@} {<IP>|<HOST>} [:<PORT>] [;blocksize=<SIZE>]/<FILE>
```

vrf <VRF-NAME>

Specifies the name of a VRF. Default: default.

Authority

Administrators or local user group members with execution rights for this command.

Example

Copying the capture data to a file on SFTP server 10.0.0.2:

```
switch# copy tshark-pcap sftp://root@10.0.0.2/file.pcap

root@10.0.0.2's password:
Connected to 10.0.0.2.
sftp> put packets.pcap file.pcap
Uploading packets.pcap to /root/file.pcap
packets.pcap                               100% 156    219.8KB/s   00:00
Copied successfully.
```

destination cpu

Syntax

```
destination cpu
```

```
no destination cpu
```

Description

The command causes the mirror session to transmit mirrored packets to the switch CPU. This destination may be configured for multiple sessions, however only one such configured session may be active at a given time.

The diagnostic utility Tshark may be used to view and capture packets transmitted to the CPU through this route. Ctrl+C must be entered to terminate a Tshark capture session. More details can be found in the *Supportability Guide*.

The `no` form of this command will immediately stops mirroring traffic to the CPU, but will not remove any sources from the mirror configuration.

Command context

```
config-mirror-<SESSION-ID>
```

Authority

Administrators or local user group members with execution rights for this command.

Examples

Configuring a mirror session with CPU as the destination.

```
switch# config  
switch(config)# mirror session 1  
switch(config-mirror-1)# destination cpu
```

Removing the destination entirely.

```
switch(config-mirror-1)# no destination cpu
```

destination interface

Syntax

```
destination interface {<INTERFACE-ID>|<LAG-NAME>}
```

```
no destination interface
```

Description

Configures the specified interface as the destination of the mirrored traffic.

The `no` form of this command immediately disables the mirroring session and removes the specified destination interface from the configuration.

Command context

```
config-mirror-<SESSION-ID>
```

Parameters

<INTERFACE-ID>

Specifies a interface. Format: member/slot/port.

<LAG-NAME>

Specifies a LAG (link aggregation group) identifier.

Authority

Administrators or local user group members with execution rights for this command.

Usage

Only one destination is allowed per session.

Configuring a different destination interface in an enabled mirroring session causes all mirrored traffic to use the new destination interface. This action might cause a temporary suspension of mirrored source traffic during the reconfiguration.

Examples

Configuring a mirroring session and adding an interface as a destination:

```
switch(config)# mirror session 1  
switch(config-mirror-1)# destination interface 1/1/1
```

Replacing the existing destination with different interface:

```
switch(config-mirror-1)# destination interface 1/1/12
```

Removing a destination:

```
switch(config-mirror-1)# no destination interface
```

destination tunnel

Syntax

Description

Specifies the tunnel where all mirrored traffic for the session is transmitted. Only one tunnel destination is allowed per session.

You may configure multiple mirror sessions with the same source/destination IP address pair, however, only one of those sessions sharing the same source/destination IP address pair can be enabled at a given time.

ERSPAN is not supported leaving the switch by the OOB port. If VRF management is configured for an ERSPAN session, the session will be in "mirror_err_tunnel_oob_port_not_supported" operation status.

ERSPAN is not supported leaving the switch encapsulated within another tunnel (e.g. GRE IPv4). When the path to the destination IP address will leave via a tunnel, the session will be in "tunnel_route_resolution_not_populated" operation status.



NOTE: The interface/LAG used to transmit ERSPAN packets should not be a source in the same mirror session.

The `no` form of this command will cease the use of the tunnel and disable the session.

Command context

```
config-mirror-<SESSION-ID>
```

Authority

Administrators or local user group members with execution rights for this command.

Parameters

<TUNNEL-IPv4-ADDR>

Specifies the tunnel address in IPv4 format (x.x.x.x), where x is a decimal number from 0 to 255.

<SOURCE-IPv4-ADDR>

Specifies the source address in IPv4 format (x.x.x.x), where x is a decimal number from 0 to 255.

<DSCP-VALUE>

Specifies the DSCP value to be carried within the DS field of ERSPAN packet header. Range: 0 to 63.
Default: 0.

<VRF-NAME>

Specifies a VRF name. Default: default.

Examples

Creating a Mirror Session and adding tunnel destination, source, dscp, and VRF:

```
switch# config
switch(config)# mirror session 1
switch(config-mirror-1)# destination tunnel 1.1.1.1 source 2.2.2.2 dscp 10 vrf default
```

Replacing the existing tunnel destination:

```
switch(config-mirror-1)# destination tunnel 11.12.13.14 source 2.2.2.2 dscp 10 vrf default
```

Replacing the existing destination with a different DSCP value:

```
switch(config-mirror-1)# destination tunnel 11.12.13.14 source 2.2.2.2 dscp 2 vrf default
```

Replacing the existing destination with a different VRF:

```
switch(config-mirror-1)# destination tunnel 11.12.13.14 source 2.2.2.2 dscp 2 vrf newvrf
```

Removing the destination:

```
switch(config-mirror-1)# no destination tunnel
```

diagnostic

Syntax

diagnostic

```
diag utilities tshark [file]
diag utilities tshark [delete-file]
```

Description

Captures packets from a mirror-to-cpu session, and save the most recent 32MB to pcap file which can then be copied and analyzed. When capturing a mirror-to-cpu session to a file, packets will not be dumped to the console.



NOTE: The diagnostic command must be entered prior to the `diag utilities tshark` command.

Use the `delete-file` form of this command to delete the most recent capture file.

Since `file` and `delete-file` are optional, the behavior of the base command `diag utilities tshark` does **not** save anything to a file, and instead dumps the tshark session to the console until **CTRL + c** is entered.

Command context

Manager (#)

Parameters

file

Saves captured packets to a temporary file.

delete-file

Deletes the most recent captured file.

Authority

Administrators or local user group members with execution rights for this command.

Example

Performing diagnostic:

```
switch# diagnostic

switch# diagnostic utilities tshark file
Inspecting traffic mirrored to the CPU until Ctrl-C is entered
^CEnding traffic inspection.
```

disable

Syntax

`disable`

Description

Disables the mirroring session specified by the current command context.

Command context

`config-mirror-<SESSION-ID>`

Authority

Administrators or local user group members with execution rights for this command.

Usage

By default, mirroring sessions are disabled.

When a mirroring session is disabled, the `show mirror` command for that session ID shows an Admin Status of `disable` and an Operation Status of `disabled`.

Example

Disabling a mirroring session:

```
switch(config)# mirror session 3
switch(config-mirror-3)# disable
```

enable

Syntax

enable

Description

Enables the mirroring session for the current command context.

Command context

config-mirror-<SESSION-ID>

Authority

Administrators or local user group members with execution rights for this command.

Usage

By default, mirroring sessions are disabled.

When a mirroring session is enabled, the `show mirror` command for that session ID shows an `Admin Status of enable` and an `Operation Status of enabled`.

If sFlow is enabled on an interface and a mirroring session specifies the same interface as the source of received traffic (the source is configured with a direction of `rx` or `both`):

The attempt to enable the mirroring session fails and an error is returned.



NOTE: When adding, removing, or changing the configuration of a source interface in an enabled mirroring session, packets from other mirror sources using the same destination interface might be interrupted.

Example

Configuring and enabling a mirroring session:

```
switch(config)# mirror session 3
switch(config-mirror-3)# source interface 1/1/2 rx
switch(config-mirror-3)# destination interface 1/1/3
switch(config-mirror-3)# comment Monitor router port ingress-only traffic
switch(config-mirror-3)# enable
```

mirror session

Syntax

mirror session <SESSION-ID>

no mirror session <SESSION-ID>

Description

Creates a mirroring session configuration context or enters an existing mirroring session configuration context.

From this context, you can enter commands to configure and enable or disable the mirroring session.

The `no` form of this command removes an existing mirroring session from the configuration.

Command context

config

Parameters

<SESSION-ID>

Specifies the session identifier. Range: 1 to 4

Authority

Administrators or local user group members with execution rights for this command.

Examples

```
switch(config)# mirror session 1
switch(config-mirror-1)#

switch(config)# mirror session 3
switch(config-mirror-3)#

switch(config)# no mirror session 1
switch(config)#
```

show mirror

Syntax

show mirror [**<SESSION-ID>**]

Description

Shows information about mirroring sessions. If **<SESSION-ID>** is not specified, then the command shows a summary of all configured mirroring sessions. If **<SESSION-ID>** is specified, then the command shows detailed information about the specified mirroring session.

Command context

Operator (>) or Manager (#)

Parameters

<SESSION-ID>

Specifies the session identifier. Range: 1 to 4

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Usage

Admin Status indicates the configured status. Admin Status is one of the following values:

enable

The mirroring session is enabled.

disable

The mirroring session has been configured but not yet enabled, or has been disabled.

Operation Status indicates the status of the mirroring session. Operation Status is one of the following values:

dest_doesnt_exist

The configured destination interface is not found in the system. The mirroring session cannot be enabled.

destination_shutdown

The mirroring session is enabled, but the destination interface is shut down. No traffic can be monitored.

disabled

The mirroring session is disabled and is not in an error condition.

enabled

The mirroring session is enabled.

external/driver_error

An internal ASIC hardware error occurred.

hit_active_sessions_capacity

The mirroring session could not be enabled because the maximum number of supported mirroring sessions are already enabled.

internal_error

An invalid parameter was passed to the ASIC software layer.

no_dest_configured

The mirroring session does not have a destination interface configured.

no_name_configured

A software error occurred. The mirroring session does not have a session ID in its configuration.

null_mirror

A software error occurred. The session object reference is invalid.

out_of_memory

The system is out of memory, reboot recommended.

tunnel_route_resolution_not_populated

If the destination tunnel IP address is not reachable.

unknown_error

An unexpected error occurred.

Examples

Showing summary information about all configured mirroring sessions:

```
switch# show mirror
```

ID	Admin	Status	Operation	Status
----	-------	--------	-----------	--------

1	enable		enabled	
2	disable		disabled	
3	disable		disabled	
4	enable		internal_error	

Showing detailed information about a single mirroring session:

```
switch# show mirror 3
Mirror Session: 3
Admin Status: disable
Operation Status: disabled
Comment: Monitor router port ingress-only traffic
Source: interface 1/1/2 rx
Destination: interface 1/1/3
Output Packets: 0
Output Bytes: 0
switch#
```

source interface

Syntax

```
source interface {<PORT-NUM> | <LAG-NAME>} [<DIRECTION>]
```

```
no source interface {<PORT-NUM> | <LAG-NAME>} [<DIRECTION>]
```

Description

Configures the specified interface (either an Ethernet port or a LAG) as a source of traffic to be mirrored.

The `no` form of this command ceases mirroring traffic from the specified source interface and removes the source interface from the mirroring session configuration.

Command context

```
config-mirror-<SESSION-ID>
```

Parameters

<PORT-NUM>

Specifies a physical port on the switch. Use the format `member/slot/port` (for example, 1/3/1).

<LAG-NAME>

Specifies the identifier for the LAG (link aggregation group).

<DIRECTION>

Selects the direction of traffic to be mirrored from this source interface. There is no default for this parameter. Valid values are the following:

both

Mirror both transmitted and received packets.

rx

Mirror only received packets.

tx

Mirror only transmitted packets.

Authority

Administrators or local user group members with execution rights for this command.

Usage

There is a limit of four source interfaces in each direction of a given mirror session. However, there is a practical limit to the amount of traffic that a mirror destination can transmit. For example, mirroring session with multiple 10G sources can overwhelm a single 10G destination.



NOTE: When adding, removing, or changing the configuration of a source port in an enabled mirroring session, packets from other mirror sources using the same destination port might be interrupted.

Examples

Configuring a mirrored traffic source interface:

```
switch(config-mirror-1)# source interface  
LAG-NAME      Enter a LAG name. For example, lag10  
PORT-NUM      Enter a port number
```

Creating a mirroring session and configuring a source interface to mirror both transmitted and received packets:

```
switch(config)# mirror session 1  
switch(config-mirror-1)# source interface 1/1/1 both
```

Creating a second mirroring session and configuring two source interfaces. One port mirroring only transmitted packets and the other mirroring both transmitted and received packets:

```
switch(config)# mirror session 2  
switch(config-mirror-2)# source interface 1/1/3 tx  
switch(config-mirror-2)# source interface 1/2/1 both
```

Removing the first source interface:

```
switch(config-mirror-2)# no source interface 1/2/3
```

Configuring a source interface to mirror received packets only:

```
switch(config-mirror-3)# source interface 1/1/2 rx
```

Configuring a source interface to mirror both transmitted and received packets:

```
switch(config-mirror-1)# source interface 1/1/1 both
```

Configuring a LAG as source interface to mirror both transmitted and received packets:

```
switch(config-mirror-4)# source interface lag1 both
```

Stopping the mirroring of received packets from a configured source interface:

```
switch(config-mirror-4)# no source interface lag1 rx
```


Configuring SNMP: Refer to the *ArubaOS-CX SNMP/MIB Guide* for information on how to add SNMP so a device can be monitored from a network management system (NMS).

Configuring an SNMP trap receiver: Refer to the *ArubaOS-CX SNMP/MIB Guide* and specific information about the `show snmp trap` command to enable SNMP traps.

- The Power-over-Ethernet (PoE) subsystem manages power supplied to devices using standard Ethernet data cables. A Power Sourcing Equipment (PSE) supplies DC power as well as Ethernet connectivity to a Powered Device (PD) using a standard Ethernet cable. The maximum current depends on the PD Requested Class.
- A PoE subsystem contains two parts : a PSE and PD. A Power Sourcing Equipment (PSE) is a device that provides power through a standard Ethernet cable. A PoE capable switch functions as PSE. All Aruba PoE switches are considered as PSEs. A PD is a device powered by a PSE. Examples of PD are VoIP phones, Wireless APs, and IP cameras.
- When a PD or any network cable is connected to a PSE port, the PSE applies a detection voltage and measures the resistance value of the PD. If resistance is within IEEE 802.3 standard values (23 - 26k ohm), the connected device is treated as PD and classification begins. For legacy devices to be detected, you must enable prestandard detection on the switch.
- PDs are divided into different types and classes based on PD power requirements. The power supplied by the PSE is higher than the power PD draws to accommodate for the line losses that can result with the use of the standard maximum length cable(100m).
 - Type 1: PSE can supply minimum of 15.4W, and PD can draw a maximum of 13W.
 - Type 2: PSE can supply minimum of 30W, and PD can draw a maximum of 25.5W.
 - Type 3: PSE can supply minimum of 60W, and PD can draw a maximum of 51W.
 - Type 4: PSE can supply minimum of 90W, and PD can draw a maximum of 71W.
- Classes of PD:
 - Class 0: Type1 PD, it can draw a maximum of 13W.
 - Class 1: Type1 PD, it can draw a maximum of 3.84W.
 - Class 2: Type1 PD, it can draw a maximum of 6.49W.
 - Class 3: Type1 PD, it can draw a maximum of 13W.
 - Class 4: Type2 PD, it can draw a maximum of 25.5W.
 - Class 5: Type3 PD, it can draw a maximum of 40W.
 - Class 6: Type3 PD, it can draw a maximum of 51W.
 - Class 7: Type4 PD, it can draw a maximum of 62W.
 - Class 8: Type4 PD, it can draw a maximum of 71.3W.
- IEEE 802.3bt introduced 4-Pair PoE as a means of supplying higher power to PDs that need more than the current 25.5W supplied by IEEE 802.3at. To increase the available power without damaging the Ethernet cable, the standard introduced the ability to use all four pairs within the Ethernet cable instead of the two pairs used by previous standards (802.3at, 802.3af).
- Supported protocols:
 - Compatibility with IEEE 802.3af, 802.3at, 802.3bt and prestandard.
 - Long first class event supported on Type 3-4 PSE.

- Support for Single Signature (SS) Type 0-6 and Dual Signature (DS) Type 0-4 PDs.
 - Multi-Event classification permits mutual ID of SS Class 0-6 and DS Class 0-4.
 - Support LLDP Data Link Layer (DLL) Type 1-2 extension 12-octet TLV and Type 3-4 extension 29-octet TLV.
 - Default PSE assigned class delivers the maximum PSE capable power at initial power up based on PD requested class.
- Always-on PoE is a feature that provides the ability for a switch to continue to provide power across user initiated reboots through software. Always-on PoE is enabled by default and no additional configuration is needed.



NOTE: PDs only remain powered, no data transfer or PoE power negotiation can occur until the switch has completely booted up and in normal operation. PD faults occurring prior to full switch boot up will result in PoE power removal and restart the detection process only after switch returns to normal operation.

PoE commands

All PoE configuration commands except `threshold` configuration and `always-on poe` configuration are entered at the `config-if` context. The PoE threshold command is used at the system level whereas the `always-on poe` command is set at the slot level. These commands can only be configured in the global configuration context.

lldp dot3 poe

Syntax

```
lldp dot3 poe
```

```
no lldp dot3 poe
```

Description

Enables 802.3 TLV list in LLDP to advertise for Power over Ethernet Data Link Layer Classification. LLDP dot3 TLV is by default enabled for PoE.

The `no` form of this command disables 802.3 TLV list in LLDP.

Command context

```
config-if
```

Authority

Administrators or local user group members with execution rights for this command.

Examples

Enabling 802.3 TLV list in LLDP:

```
switch(config)# interface 1/1/1
switch(config-if)# lldp dot3 poe
```

Disabling 802.3 TLV list in LLDP:

```
switch(config-if)# no lldp dot3 poe
```

lldp med poe

Syntax

```
lldp med poe [priority-override]
```

```
no lldp med poe [priority-override]
```

Description

Enables MED TLV list in LLDP to advertise for Power over Ethernet Data Link Layer Classification. Also enables the lldp-MED TLV priority to override user configured port priority for Power over Ethernet. When both dot3 and MED are enabled, dot 3 will take precedence. MED TLV is by default enabled for PoE. Priority over-ride is by default disabled.

The `no` form of this command disables MED TLV list in LLDP.

Command context

```
config-if
```

Parameters

[priority-override]

System defined name of the interface.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Enabling and disabling LLDP MED PoE:

```
switch(config)# interface 1/1/1
switch(config-if)# lldp med poe
switch(config-if)# no lldp med poe
```

Enabling and disabling LLDP MED PoE priority override:

```
switch(config-if)# lldp med poe priority-override
```

power-over-ethernet

Syntax

```
power-over-ethernet
```

```
no power-over-ethernet
```

Description

Enables per-interface power distribution. Per-port power is enabled by default with priority low. PoE cannot be disabled for individual ports when Quick PoE is enabled for the entire switch or line module.

The `no` form of this command disables per-interface power distribution.

Command context

config-if

Authority

Administrators or local user group members with execution rights for this command.

Examples

Enabling per-interface power distribution:

```
switch(config)# interface 1/1/1  
switch(config-if)# power-over-ethernet
```

Disabling per-interface power distribution:

```
switch(config-if)# no power-over-ethernet
```

Showing Quick PoE enabled:

```
switch(config-if)# power-over-ethernet quick-poe 1/1  
switch(config-if)# interface 1/1/1  
switch(config-if)# no power-over-ethernet  
Interface PoE cannot be disabled when Quick PoE is enabled.
```

power-over-ethernet allocate-by

Syntax

```
power-over-ethernet allocate-by {usage | class}
```

```
no power-over-ethernet allocate-by {usage | class}
```

Description

Configures the power allocation method. Power allocation method is initially based on usage. PSE Allocated power value will change to LLDP negotiated power if and when LLDP exchange takes place between PSE and PD. When there is no LLDP negotiation, PSE Allocated Power Value will be the actual instantaneous power draw and reserve power based on actual consumption. In allocate-by class, power allocation is based on PD requested class and PSE allocated power value will be the LLDP negotiated power when LLDP exchange takes place between PSE and PD. . When there is no LLDP negotiation, PSE Allocate Power will be based on PD class. Reserve power is based on PD Class. By default, power allocation is by usage.

The `no` form of this command resets the action to default.

Command context

config-if

Authority

Administrators or local user group members with execution rights for this command.

Examples

Configuring the power allocation method:

```
switch(config)# interface 1/1/1  
switch(config-if)# power-over-ethernet allocate-by usage  
switch(config-if)# power-over-ethernet allocate-by class
```

Resetting power allocation method:

```
switch(config-if)# no power-over-ethernet allocate-by class
```

power-over-ethernet always-on

Syntax

```
power-over-ethernet always-on <MODULE-ID>
```

```
no power-over-ethernet always-on <MODULE-ID>
```



NOTE: This command is not available on the 6100 Switch Series.

Description

Always-on PoE is a feature that provides the ability to the switch to continue to provide power across a soft reboot. It is applicable only to the interfaces which were connected and delivering before the soft reboot. Also, power will not be delivered if power to the switch is interrupted. This command enables or disables the always-on PoE feature at the switch or the slot level. By default, always-on PoE is enabled at the switch or the slot level.

The `no` form of this command disables power distribution on soft reboot.

Command context

`config`

Parameters

<MODULE-ID>

Module number to apply always-on PoE configuration.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Enabling per-interface power distribution:

```
switch(config)# power-over-ethernet always-on 1/1
```

Disabling per-interface power distribution:

```
switch(config)# no power-over-ethernet always-on 1/1
```

power-over-ethernet assigned-class

Syntax

```
power-over-ethernet assigned-class {3 | 4 | 6}
```

```
no power-over-ethernet assigned-class
```

Description

Limit PoE power based on the assigned class. When an user assigns a maximum class to an interface, the PSE will limit the maximum power delivered to the PD up to a total power draw not exceeding the PSE

assigned-class power. Power demotion occurs when a PD requested class is higher than the PSE assigned class, permitting the PD to receive power and operate in a reduced power mode. PoE ports cannot set an assigned class when Quick PoE is enabled on the sybsystem. The default assigned class is 4 for 2-pair capable PSE and 6 for 4-pair capable PSE.

The `no` form of this command resets the action to default.

Command context

`config-if`

Authority

Administrators or local user group members with execution rights for this command.

Examples

Setting PoE assigned class:

```
switch(config)# interface 1/1/1  
switch(config-if)# power-over-ethernet assigned-class 4
```

Resetting PoE assigned class to default:

```
switch(config-if)# no power-over-ethernet assigned-class 4
```

Showing Quick PoE enabled:

```
switch(config)# power-over-ethernet quick-poe 1/1  
switch(config)# interface 1/1/1  
switch(config)# power-over-ethernet assigned-class 4  
Interface assigned class cannot be configured when Quick PoE is enabled.
```

power-over-ethernet pre-std-detect

Syntax

```
power-over-ethernet pre-std-detect
```

```
no power-over-ethernet pre-std-detect
```

Description

Before IEEE 802.3 released the first Power over Ethernet standard (802.3af), vendors had shipped PoE capable switches and PD's. As we are backward compatible Aruba will support both IEEE standard and pre-standard 802.3af Power over Ethernet PD's concurrently. This CLI allows the user to enable or disable pre-802.3af-standard device detection and powering on the specific port. When pre-std-detect is enabled, power will be delivered on PairA only. Default is disabled.

The `no` form of this command resets the action to default.

Command context

`config-if`

Authority

Administrators or local user group members with execution rights for this command.

Examples

Enabling standard device detection:

```
switch(config)# interface 1/1/1  
switch(config-if)# power-over-ethernet pre-std-detect
```

Disabling standard device detection:

```
switch(config-if)# no power-over-ethernet pre-std-detect
```

power-over-ethernet priority

Syntax

```
power-over-ethernet priority {critical | high | low}
```

```
no power-over-ethernet priority {critical | high | low}
```

Description

Sets PoE priority for an interface. Specifying critical, high, or low indicates the priority of the interface in the event of power over-subscription. Within the same priority level, higher power-priority line-module ports have higher precedence. With same PoE priority and same line-module priority, lower numbered line-module ports have higher precedence. Per-interface PoE priority is low by default.

The `no` form of this command resets the priority to default PoE priority "low".

Command context

config-if

Authority

Administrators or local user group members with execution rights for this command.

Examples

Configuring PoE priority:

```
switch(config)# interface 1/1/1  
switch(config-if)# power-over-ethernet priority critical  
switch(config-if)# power-over-ethernet priority high
```

Resetting the PoE priority to default:

```
switch(config-if)# no power-over-ethernet priority high
```

power-over-ethernet quick-poe

Syntax

```
power-over-ethernet quick-poe <MODULE-ID>
```

```
no power-over-ethernet
```

Description

Quick PoE is a feature that provides the ability for the switch to provide power to the connected powered device as soon as switch goes through cold reboot. When quick PoE is enabled on the subsystem PoE port disablement and PD demotion is not allowed. Also quick PoE enablement is not allowed if any of the port is disabled on the subsystem. User should not over-subscribe the PoE power when quick PoE is enabled. Quick PoE saved configuration will work irrespective of the configuration change at reboot.

Enables quick PoE feature on the switch or the subsystem level. By default, quick-PoE is disabled for the subsystem.

The `no` form of this command disables quick PoE.

Command context

`config-if`

Parameters

<MODULE-ID>

Specifies module number for quick PoE configuration .

Authority

Administrators or local user group members with execution rights for this command.

Examples

Enabling and disabling quick PoE:

```
switch(config)# power-over-ethernet quick-poe 1/2
switch(config)# no power-over-ethernet quick-poe 1/1
```

```
switch(config-if)# power-over-ethernet quick-poe 1/1
PoE must be enabled on all interfaces before enabling Quick PoE
```

```
switch(config-if)# power-over-ethernet quick-poe 1/3
All interfaces must use the default assigned class before enabling Quick PoE
```

power-over-ethernet threshold

Syntax

`power-over-ethernet threshold <PERCENTAGE>`

`no power-over-ethernet threshold <PERCENTAGE>`

Description

Sets the threshold at which the system will send an excess power consumption notification trap. Default value is 80 percentage.

The `no` form of this command resets the action to default.

Command context

`config`

Parameters

<PERCENTAGE>

Excess power consumption trap threshold. Range 1-99.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Setting the power-over-ethernet threshold:

```
switch(config)# power-over-ethernet threshold 75
```

Resetting the power-over-ethernet threshold to default:

```
switch(config-if)# no power-over-ethernet threshold 75
```

power-over-ethernet priority

Syntax

```
power-over-ethernet trap
```

```
no power-over-ethernet trap
```

Description

This command enables/disables the SNMP trap generation for PoE related events at system level. PoE trap generation is enabled by default.

The `no` form of this command resets the priority to default PoE priority "low".

Command context

```
config-if
```

Authority

Administrators or local user group members with execution rights for this command.

Examples

Enabling SNMP trap generation for PoE:

```
switch(config)# power-over-ethernet trap
```

Disabling SNMP trap generation for PoE:

```
switch(config-if)# no power-over-ethernet trap
```

show lldp local

Syntax

```
show lldp local-device [<INTERFACE-ID>]
```

Description

Displays information advertised by the switch if the LLDP feature is enabled by user.

Command context

Operator (>) or Manager (#)

Parameters

<INTERFACE-ID>

Specifies an interface. Format: member/slot/port

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Examples

Showing LLDP local device:

```
switch# show lldp local-device 1/1/10
Local Port Data
=====

Port-ID           : 1/1/10
Port-Desc         : "1/1/10"
Port VLAN ID      : 0

PoE Plus Information

PoE Device Type   : Type 2 PSE
Power Source      : Primary
Power Priority     : low
PSE Allocated Power: 25.0 W
PD Requested Power : 25.0 W
```

show lldp neighbor

Syntax

```
show lldp neighbor [<INTERFACE-ID>]
```

Description

Displays detailed information about a particular neighbor connected to a particular interface.

Command context

Operator (>) or Manager (#)

Parameters

<INTERFACE-ID>

Specifies an interface. Format: member/slot/port

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Examples

Showing LLDP neighbor information when there is only one neighbor:

```
switch# show lldp neighbor-info 1/1/10

Port                : 1/1/10
Neighbor Entries    : 1
Neighbor Entries Deleted : 0
Neighbor Entries Dropped : 0
Neighbor Entries Aged-Out : 0
Neighbor Chassis-Name : 84:d4:7e:ce:5d:68
Neighbor Chassis-Description : ArubaOS (MODEL: 325), Version Aruba IAP
Neighbor Chassis-ID : 84:d4:7e:ce:5d:68
Neighbor Management-Address : 169.254.41.250
Chassis Capabilities Available : Bridge, WLAN
Chassis Capabilities Enabled :
Neighbor Port-ID : 84:d4:7e:ce:5d:68
```

```

Neighbor Port-Desc      : eth0
TTL                     : 120
Neighbor Port VLAN ID   :
Neighbor PoEplus information : DOT3
Neighbor Device Type    : TYPE2 PD
Neighbor Power Priority  : Unkown
Neighbor Power Source    : Primary
Neighbor Power Requested : 25.0 W
Neighbor Power Allocated : 0.0 W
Neighbor Power Supported : No
Neighbor Power Enabled   : No
Neighbor Power Class     : 5
Neighbor Power Paircontrol : No
Neighbor Power Pairs     : SIGNAL

```

show power-over-ethernet

Syntax

```
show power-over-ethernet [<IFRANGE> [brief]
```

Description

Displays the status information of the full system. Displays the brief status of all port or given port if parameter brief is used. Displays the detailed status of given port.

Command context

Operator (>) or Manager (#)

Parameters

<IFNAME>

Display the detailed status of given port.

brief

Display the brief status of all ports or the given port.

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Examples

```
switch# show power-over-ethernet
```

System Power Status for member 1

```

Configured Power Status      : No redundancy
Operational Power Status     : No redundancy
Total Available Power        : 740 W
Total Failover Pwr Avl       : 0 W
Total Redundancy Power       : 0 W
Total Power Drawn            : 0 W +/- 6W
Total Power Reserved         : 0 W
Total Remaining Power        : 740 W
Trap Threshold               : 80 %
Trap Enabled                 : Yes
Always-on PoE Enabled        : 1/1
Quick PoE Enabled            : None

```

```
Internal Power
      Total Power
PS      (Watts)      Status
-----
1        0            Absent
2       740           Ok
```

System Power Status for member 2

```
Configured Power Status      : No redundancy
Operational Power Status     : No redundancy
Total Available Power        : 600 W
Total Failover Pwr Avl      : 0 W
Total Redundancy Power       : 0 W
Total Power Drawn            : 0 W +/- 6W
Total Power Reserved         : 0 W
Total Remaining Power        : 600 W
Trap Threshold               : 80 %
Trap Enabled                 : Yes
Always-on PoE Enabled        : None
Quick PoE Enabled            : None
```

```
Internal Power
      Total Power
PS      (Watts)      Status
-----
1        0            Absent
2       600           Ok
```

switch# **show power-over-ethernet member 1**

System Power Status for member 1

```
Configured Power Status      : No redundancy
Operational Power Status     : No redundancy
Total Available Power        : 740 W
Total Failover Pwr Avl      : 0 W
Total Redundancy Power       : 0 W
Total Power Drawn            : 0 W +/- 6W
Total Power Reserved         : 0 W
Total Remaining Power        : 740 W
Trap Threshold               : 80 %
Trap Enabled                 : No
Always-on PoE Enabled        : 1/1
Quick PoE Enabled            : 1/1
```

```
Internal Power
      Total Power
PS      (Watts)      Status
-----
1        0            Absent
2       740           Ok
```

switch# **show power-over-ethernet brief**

Status and Configuration Information for PoE

```
Member 1 Power Status
  Available: 370 W  Reserved: 55.60 W  Remaining: 314.40 W
  Always-on PoE Enabled: 1/1
  Quick PoE Enabled: None
```

PoE Port	Pwr En	Power Priority	Pre-std Detect	Alloc Act	PSE Pwr Rsrvd	PD Pwr Draw	PoE Port Status	PD Sign	Cls	Type
-----	---	-----	-----	-----	-----	-----	-----	-----	---	-----
1/1/1	Yes	Low	Off	Class	0.0 W	0.0 W	Denied	None	4	2
1/1/2	Yes	Critical	Off	Usage	1.6 W	1.5 W	Delivering*	Single	0	1
1/1/3	Yes	High	Off	Class	54.0 W	25.5 W	Delivering*^	Dual	1/3	3
1/1/4	No	Low	On	Usage	0.0 W	0.0 W	Disabled	None	N/A	N/A

Member 2 Power Status

Available: 600 W Reserved: 0.00 W Remaining: 600 W

Always-on PoE Enabled: None

Quick PoE Enabled: None

PoE Port	Pwr En	Power Priority	Pre-std Detect	Alloc Act	PSE Pwr Rsrvd	PD Pwr Draw	PoE Port Status	PD Sign	Cls	Type
-----	---	-----	-----	-----	-----	-----	-----	-----	---	-----
2/1/1	Yes	Low	Off	Class	0.0 W	0.0 W	Searching	None	N/A	N/A
2/1/2	Yes	Critical	Off	Usage	0.0 W	0.0 W	Searching	None	N/A	N/A
2/1/3	Yes	High	Off	Class	0.0 W	0.0 W	Searching	None	N/A	N/A
2/1/4	No	Low	On	Usage	0.0 W	0.0 W	Disabled	None	N/A	N/A

*This port may go down in the event of a PSU failure.

^This port is power demoted due to user config or power availability.

switch# **show power-over-ethernet brief**

Status and Configuration Information for PoE

Power Status

Available: 370 W Reserved: 55.60 W Remaining: 314.40 W

Always-on PoE Enabled: 1/1,1/3,1/4,1/7

Quick PoE Enabled: None

PoE Port	Pwr En	Power Priority	Pre-std Detect	Alloc Act	PSE Pwr Rsrvd	PD Pwr Draw	PoE Port Status	PD Sign	Cls	Type
-----	---	-----	-----	-----	-----	-----	-----	-----	---	-----
1/1/1	Yes	Low	Off	Class	0.0 W	0.0 W	Denied	None	4	2
1/1/2	Yes	Critical	Off	Usage	1.6 W	1.5 W	Delivering*	Single	0	1
1/1/3	Yes	High	Off	Class	54.0 W	25.5 W	Delivering^	Dual	1/3	3
1/1/4	No	Low	On	Usage	0.0 W	0.0 W	Disabled	None	N/A	N/A

*This port may go down in the event of a PSU failure.

^This port is power demoted due to user config or power availability.

Showing sample output for power-over-ethernet brief per-port:

switch# **show power-over-ethernet 1/1/1 brief**

Status and Configuration Information for port 1/1/1

Member 1Power Status

Available: 370 W Reserved: 55.60 W Remaining: 314.40 W

Always-on PoE Enabled: 1/1

PoE Port	Pwr En	Power Priority	Pre-std Detect	Alloc Act	PSE Pwr Rsrvd	PD Pwr Draw	PoE Port Status	PD Sign	Cls	Type
-----	---	-----	-----	-----	-----	-----	-----	-----	---	-----
1/1/1	Yes	Low	Off	Class	0.0 W	0.0 W	Denied	None	4	2

Showing sample output for power-over-ethernet brief for interface range:

switch# **show power-over-ethernet 1/1/1-1/1/2 brief**

Status and Configuration Information for port 1/1/1-1/1/2

```

Member 1Power Status
  Available: 370 W   Reserved: 55.60 W   Remaining: 314.40 W
  Always-on PoE Enabled: 1/1
PoE      Pwr Power      Pre-std Alloc PSE Pwr PD Pwr PoE Port      PD      Cls Type
Port     En  Priority Detect  Act  Rsrvd Draw  Status Sign          --- ----
-----
1/1/1    Yes Low          Off    Class 0.0 W  0.0 W Denied      None    4    2
1/1/2    Yes Critical Off    Usage 1.6 W  1.5 W Delivering* Single 0    1

```

Showing sample output for power-over-ethernet for a missing line card:

```
switch# show power-over-ethernet 1/3 brief
```

```
Module 1/3 is not physically present.
```

Showing sample output for power-over-ethernet brief for a missing member:

```
switch# show power-over-ethernet member 3 brief
```

```
Member 3 is not physically present.
```

Showing sample output for power-over-ethernet port when physical interface is not present:

```
switch# show power-over-ethernet 2/1/1
```

```
Interface 2/1/1 is not present.
```

You can manage and monitor the AOS-CX switch through Aruba AirWave. The following benefits and functions include:

- Configuration (partial configuration)
- Device topology
- Immediate and historical trend reports
- Monitoring of the device and user connected to the network.
- Network discovery
- Syslogs and trap receiver

For information about which versions of Aruba AirWave support AOS-CX, see the *ArubaOS-CX Release Notes*.

SNMP support and AirWave

For AirWave to discover and monitor the switch, you must:

- Enable the SNMP services on the switch.
- Configure the SNMP agent to use the SNMP version supported by the management station.

SNMP on the switch

The switch provides SNMP services through the management channel and the data interfaces. Functionality, such as device discovery from NMS, syslog and trap forwarding, can be any channel configured by you.

Although the SNMP server can be enabled on both VRFs (`mgmt` and `default`), only one instance of SNMP can be running. The highest priority is on the `default` VRF.

For example, assume that SNMP is first enabled on the `mgmt` VRF (`snmp-server vrf mgmt`). Then, SNMP is enabled on the `default` VRF (`snmp-server vrf default`) without disabling SNMP on the `mgmt` (using an equivalent `no` form of the command). The `show running-config` command displays both `snmp-server vrf` commands; however, the SNMP instance is running only on the `default` VRF (highest priority).

```
switch# config
switch(config)# snmp-server vrf mgmt
switch(config)# snmp-server vrf default
switch(config)# show running-config
Current configuration:
!
!Version ArubaOS-CX Virtual.10.01.
led locator on
!
!
!
snmp-server vrf default
snmp-server vrf mgmt
!
...
```


Supported features with AirWave and the AOS-CX switch

AirWave supports the following features with the AOS-CX switch:

Device management	Device discovery using SNMPv2C and SNMPv3
	Device dashboards
Monitoring management	Device health attributes (device status/reachability)
	Interface and VLAN management
	Initiates an SSH connection from Aruba AirWave to AOS-CX so that the device outputs from the AOS-CX CLI can be displayed in the Aruba AirWave user interface.
	Firmware versions
	Displays neighbor devices connected to AOS-CX switches
	Device topology
Configuration management	Partial configuration
Alarm management	Alarm triggers (device and interface up/down, new device discoveries, custom event triggers)
	Syslogs and traps
Report management	Device inventory, interface utilization, and device reachability reports
	Summary report of device model, firmware, and boot loader version

Configuring the AOS-CX switch to be monitored by AirWave

Prerequisites

Aruba AirWave is active on the network.

Procedure

1. Enable SNMP on the ArubaOS-CX switch by entering the **snmp-server vrf** command.

```
switch(config)# snmp-server vrf mgmt  
switch(config)# snmp-server vrf default
```

2. Configure the SNMPv2C community to public by entering the **snmp-server community public** command. In this instance, `public` is a read-only community string.

```
switch(config)# snmp-server community public
```

3. The community-string is used by SNMPv1 and SNMPv2C for unencrypted authentication. SNMPv3 lets you encrypt the authentication mechanism. To enable SNMPv3, enter the **snmpv3 user** and **snmpv3 context** commands.

```
switch(config)# snmpv3 user Admin auth sha auth-pass ciphertext
AQBapZHf2d20GYr/xcGUzYzm0zjNf/4VKHtSqbNImqtFYbJYCgAAALkGFJVcSp3nZ3o=
priv des priv-pass ciphertext AQBapb0H2poBQKXPoVsC9L9qzZyfJQnzR7hmTr7LGsOsI7K3CgAAAKP98Rq2jfTrFwQ=
switch(config)# snmpv3 context Admin
```

For discovering devices in AirWave through the SNMPv3 community, the SNMPv3 context name is not mandatory. Devices can still be discovered in Aruba AirWave without the SNMPv3 context name.

4. Enter the **logging** command for enabling syslog forwarding to a remote syslog server, such as AirWave:

```
switch(config)# logging 10.0.10.2 severity debug
```

5. SNMP traps enable an agent to notify the management station of significant events by way of an unsolicited SNMP message. Enable SNMP traps by entering the **snmp-server host** command:

```
switch(config)# snmp-server host 10.10.10.10 trap version v2c vrf default
```

SNMP traps cannot be forwarded from AOS-CX 10.00 switches that have the VRF configured as `mgmt`. Later versions of AOS-CX support SNMP trap forwarding even when the VRF is configured as `default` or `mgmt`.

6. For information on how to add a device for monitoring in the Aruba AirWave user interface, see the documentation for Aruba AirWave.

logging

Syntax

```
logging {<IPv4-ADDR> | <IPv6-ADDR> | <HOSTNAME>}
    [udp [<PORT-NUM>] | tcp [<PORT-NUM>] | tls [<PORT-NUM>]]
    [include-auditable-events] [severity <LEVEL>] [vrf <VRF-NAME>]

logging {<IPv4-ADDR> | <IPv6-ADDR> | <HOSTNAME>}
    [tls [<PORT-NUM>]] [auth-mode {certificate | subject-name}]
    [legay-tls-renegotiation] [include-auditable-events] [severity <LEVEL>]
    [vrf <VRF-NAME>]

no logging {<IPv4-ADDR> | <IPv6-ADDR> | <HOSTNAME>}
```

Description

Enables syslog forwarding to a remote syslog server.

The `no` form of this command disables syslog forwarding to a remote syslog server.

Command context

config

Parameters

{<IPv4-ADDR> | <IPv6-ADDR> | <HOSTNAME>}

Selects the IPv4 address, IPv6 address, or host name of the remote syslog server. Required.

[udp [<PORT-NUM>] | tcp [<PORT-NUM>]]

Specifies the UDP port or TCP port of the remote syslog server to receive the forwarded syslog messages.

udp [<PORT-NUM>]

Range: 1 to 65535. Default: 514

tcp [<PORT-NUM>]

Range: 1 to 65535. Default: 1470

tls [<PORT-NUM>]

Range: 1 to 65535. Default: 6514

include-auditable-events

Specifies that auditable messages are also logged to the remote syslog server.

severity <LEVEL>

Specifies the severity of the syslog messages:

- **alert**: Forwards syslog messages with the severity of **alert** (6) and **emergency** (7).
- **crit**: Forwards syslog messages with the severity of **critical** (5) and above.
- **debug**: Forwards syslog messages with the severity of **debug** (0) and above.
- **emerg**: Forwards syslog messages with the severity of **emergency** (7) only.
- **err**: Forwards syslog messages with the severity of **err** (4) and above
- **info**: Forwards syslog messages with the severity of **info** (1) and above. Default.
- **notice**: Forwards syslog messages with the severity of **notice** (2) and above.
- **warning**: Forwards syslog messages with the severity of **warning** (3) and above.

auth-mode

Specifies the TLS authentication mode used to validate the certificate.

- **certificate**: Validates the peer using trust anchor certificate based authentication. Default.
- **subject-name**: Validates the peer using trust anchor certificates as well as subject-name based authentication.

legacy-tls-renegotiation

Enables the TLS connection with a remote syslog server supporting legacy renegotiation.

vrf <VRF-NAME>

Specifies the VRF used to connect to the syslog server. Optional. Default: **default**

Authority

Administrators or local user group members with execution rights for this command.

Examples

Enabling the syslog forwarding to remote syslog server 10.0.10.2:

```
switch(config)# logging 10.0.10.2
```

Enabling the syslog forwarding of messages with a severity of `err` (4) and above to TCP port 4242 on remote syslog server 10.0.10.9 with VRF `lab_vrf`:

```
switch(config)# logging 10.0.10.9 tcp 4242 severity err vrf lab_vrf
```

Disabling syslog forwarding to a remote syslog server:

```
switch(config)# no logging
```

Enabling syslog forwarding over TLS to a remote syslog server using subject-name authentication mode:

```
switch(config)# logging example.com tls auth-mode subject name
```

snmp-server community

Syntax

```
snmp-server community <STRING>
```

```
no snmp-server community <STRING>
```

Description

Adds an SNMPv1/SNMPv2c community string. A community string is a password that controls read access to the SNMP agent. A network management program must supply this name when attempting to get SNMP information from the switch. A maximum of 10 community strings are supported. Once you create your own community string, the default community string (`public`) is deleted.

The `no` form of this command removes the specified SNMPv1/SNMPv2c community string. When no community string exists, a default community string with the value `public` is automatically defined.

Command context

```
config
```

Parameters

<STRING>

Specifies the SNMPv1/SNMPv2c community string. Range: 1 to 32 printable ASCII characters, excluding space and question mark.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Setting the SNMPv1/SNMPv2c community string to **private**:

```
switch(config)# snmp-server community private
```

Removing SNMPv1/SNMPv2c community string **private**:

```
switch(config)# no snmp-server community private
```

snmp-server host

Syntax

```
snmp-server host <IPv4-ADDR> trap version <VERSION> [community <STRING>]  
[port <UDP-PORT>] [vrf <VRF-NAME>]
```

```

no snmp-server host <IPv4-ADDR> trap version <VERSION> [community <STRING>]
[port <UDP-PORT>] [vrf <VRF-NAME>]

snmp-server host <IPv4-ADDR> inform version v2c [community <STRING>]
[port <UDP-PORT>] [vrf <VRF-NAME>]

no snmp-server host <IPv4-ADDR> inform version v2c [community <STRING>]
[port <UDP-PORT>] [vrf <VRF-NAME>]

snmp-server host <IPv4-ADDR> [trap version v3 | inform version v3] user <NAME>
[port <UDP-PORT>] [vrf <VRF-NAME>]

no snmp-server host <IPv4-ADDR> [trap version v3 | inform version v3] user <NAME>
[port <UDP-PORT>] [vrf <VRF-NAME>]

```

Description

Configures a trap/informs receiver to which the SNMP agent can send SNMP v1/v2c/v3 traps or v2c informs. A maximum of 30 SNMP traps/informs receivers can be configured.

The **no** form of this command removes the specified trap/inform receiver.



NOTE: Configuring `snmpv3 informs` is not supported.

Command context

config

Parameters

<IPv4-ADDR>

Specifies the IP address of a trap receiver in IPv4 format (x.x.x.x), where x is a decimal number from 0 to 255. You can remove leading zeros. For example, the address 192.169.005.100 becomes 192.168.5.100.

trap version <VERSION>

Specifies the trap notification type for SNMPv1 or v2c. Available options are: v1 or v2c.

inform version v2c

Specifies the inform notification type for SNMPv2c.

trap version v3

Specifies the trap notification type for SNMPv3.

user <NAME>

Specifies the SNMPv3 user name to be used in the SNMP trap notifications.

community <STRING>

Specifies the name of the community string to use when sending trap notifications. Range: 1 - 32 printable ASCII characters, excluding space and question mark. Default: public.

<UDP-PORT>

Specifies the UDP port on which notifications are sent. Range: 1 - 65535. Default: 162.

vrf <VRF-NAME>

Specifies the name of the VRF on which to send the notifications.

Authority

Administrators or local user group members with execution rights for this command.

Examples

```
switch(config)# snmp-server host 10.10.10.10 trap version v1
switch(config)# no snmp-server host 10.10.10.10 trap version v1

switch(config)# snmp-server host 10.10.10.10 trap version v2c community public
switch(config)# no snmp-server host 10.10.10.10 trap version v2c community public

switch(config)# snmp-server host 10.10.10.10 trap version v2c community public port 5000
switch(config)# no snmp-server host 10.10.10.10 trap version v2c community public port 5000

switch(config)# snmp-server host 10.10.10.10 trap version v2c community public port 5000 vrf default
switch(config)# no snmp-server host 10.10.10.10 trap version v2c community public port 5000 vrf default

switch(config)# snmp-server host 10.10.10.10 inform version v2c community public
switch(config)# no snmp-server host 10.10.10.10 inform version v2c community public

switch(config)# snmp-server host 10.10.10.10 inform version v2c community public port 5000
switch(config)# no snmp-server host 10.10.10.10 inform version v2c community public port 5000

switch(config)# snmp-server host 10.10.10.10 inform version v2c community public port 5000 vrf default
switch(config)# no snmp-server host 10.10.10.10 inform version v2c community public port 5000 vrf default

switch(config)# snmp-server host 10.10.10.10 trap version v3 user Admin
switch(config)# no snmp-server host 10.10.10.10 trap version v3 user Admin

switch(config)# snmp-server host 10.10.10.10 trap version v3 user Admin port 2000
switch(config)# no snmp-server host 10.10.10.10 trap version v3 user Admin port 2000
```

snmp-server vrf

Syntax

snmp-server vrf <VRF-NAME>

no snmp-server vrf <VRF-NAME>

Description

Configures the VRF on which the SNMP agent listens for incoming requests. By default, the SNMP agent does not listen on any VRF.

The **no** form of this command stops the SNMP agent from listening for incoming requests on the specified VRF.

Command context

config

Parameters

<VRF-NAME>

Specifies the VRF on which the SNMP agent listens for incoming requests. The SNMP agent can listen on either the **mgmt** or **default** VRF. If configured for both, the SNMP agent listens on **default**, which has a higher priority.

Authority

Administrators or local user group members with execution rights for this command.

Example

```
switch(config)# snmp-server vrf default
```

```
switch(config)# no snmp-server vrf default
```

snmpv3 context

Syntax

```
snmpv3 context <NAME> vrf <VRF-NAME> [community <STRING>]
```

```
no snmpv3 context <NAME> [vrf <VRF-NAME>]
```

Description

Creates an SNMPv3 context on the specified VRF.

The **no** form of this command removes the specified SNMP context.

Command context

config

Parameters

<NAME>

Specifies the name of the context. Range: 1 to 32 printable ASCII characters, excluding space and question mark (?).

vrf <VRF-NAME>

Specifies the VRF associated with the context. Default: default.

community <STRING>

Specifies the SNMP community string associated with the context. Range: 1 to 32 printable ASCII characters, excluding space and question mark. Default: public.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Creating an SNMPv3 context named **newContext**:

```
switch(config)# snmpv3 context newContext
```

snmpv3 user

Syntax

```
snmpv3 user <NAME> [auth <AUTH-PROTOCOL> auth-pass {plaintext | ciphertext}  
<AUTH-PWORD> [priv <PRIV-PROTOCOL> priv-pass {plaintext | ciphertext} <PRIV-PWORD>] ]
```

```
no snmpv3 user <NAME> [auth <AUTH-PROTOCOL> auth-pass  
<AUTH-PWORD> [priv <PRIV-PROTOCOL> priv-pass <PRIV-PWORD>] ]
```

Description

Creates an SNMPv3 user and adds it to an SNMPv3 context.

The **no** form of this command removes the specified SNMPv3 user.

Command context

config

Parameters

<NAME>

Specifies the SNMPv3 username. Range 1 - 32 printable ASCII characters, excluding space and question mark.

auth <AUTH-PROTOCOL>

Specifies the authentication protocol used to validate user logins. Available options are: **md5** or **sha**.

auth-pass {plaintext | ciphertext} <AUTH-PWORD>

Specifies the SNMPv3 user password. Range for **plaintext** is 8 - 32 printable ASCII characters, excluding space and question mark.

Range for **ciphertext** is 1 - 120 printable ASCII characters. This option is only used when copying user configuration settings between switches. It enables you to duplicate a user's configuration on another switch without having to know their password.

priv <PRIV-PROTOCOL>

Specifies the SNMPv3 security protocol (encryption method). Available options are: **aes** or **des**.

priv-pass {plaintext | ciphertext} <PRIV-PWORD>

Specifies the SNMPv3 user privacy passphrase. Range for **plaintext** is 8 - 32 printable ASCII characters, excluding space and question mark.

Range for **ciphertext** is 1 - 120 printable ASCII characters. This option is only used when copying user configuration settings between switches. It enables you to duplicate a user's configuration on another switch without having to know their password.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Defining an SNMPv3 user named **Admin** using **sha** authentication with the plaintext password **mypassword** and using **des** security with the plaintext password **myprivpass**:

```
switch(config)# snmpv3 user Admin auth sha auth-pass plaintext mypassword priv des priv-pass plaintext myprivpass
```

Removing an SNMPv3 user named **Admin**:

```
switch(config)# no snmpv3 user Admin
```

Defining an SNMPv3 user named **Admin** using **sha** authentication with the plaintext password **mypassword** and using **des** security with the plaintext password **myprivpass**:

```
switch(config)# snmpv3 user Admin auth sha auth-pass plaintext mypassword priv des priv-pass plaintext myprivpass
```

Copying an SNMP user from switch 1 to switch 2.

On switch 1, configure a user called **Admin**, then issue the **show running-config** command to display switch configuration settings. The **snmpv3 user** command uses the **ciphertext** option to protect the users's passwords.

```
switch1(config)# snmpv3 user Admin auth sha auth-pass ciphertext mypassword  
priv des priv-pass ciphertext myprivpass  
switch1(config)# exit
```



```

switch1# show running-config
Current configuration:
!
!Version ArubaOS-CX TL.10.00.0003-8017-gdeb0606~dirty
!
!
snmpv3 user Admin auth sha auth-pass ciphertext
AQBapZHf2d20GYr/xcGUzYzm0zjNf/4VKHtSqbNImqtfYbJYCgAAALkGFJVcSp3nZ3o=
priv des priv-pass ciphertext AQBapb0H2poBQKXPoVsC9L9qzZyfJQnzR7hmTr7LGsOsI7K3CgAAAKP98Rq2jfTrFwQ=
ssh server vrf mgmt
!
!
!
interface mgmt
    no shutdown
    ip dhcp
vlan 1

```

On switch 2, execute the snmpv3 user command that was displayed by show running-config on switch 1. This creates the user on switch 2 with the same configuration settings.

```

switch1(config)# snmpv3 user Admin auth sha auth-pass ciphertext
AQBapZHf2d20GYr/xcGUzYzm0zjNf/4VKHtSqbNImqtfYbJYCgAAALkGFJVcSp3nZ3o=
priv des priv-pass ciphertext AQBapb0H2poBQKXPoVsC9L9qzZyfJQnzR7hmTr7LGsOsI7K3CgAAAKP98Rq2jfTrFwQ=

```

Accessing Aruba Support

Aruba Support Services	https://www.arubanetworks.com/support-services/
Aruba Support Portal	https://asp.arubanetworks.com/
North America telephone	1-800-943-4526 (US & Canada Toll-Free Number) +1-408-754-1200 (Primary - Toll Number) +1-650-385-6582 (Backup - Toll Number - Use only when all other numbers are not working)
International telephone	https://www.arubanetworks.com/support-services/contact-support/

Be sure to collect the following information before contacting Support:

- Technical support registration number (if applicable)
- Product name, model or version, and serial number
- Operating system name and version
- Firmware version
- Error messages
- Product-specific reports and logs
- Add-on products or components
- Third-party products or components

Other useful sites

Other websites that can be used to find information:

Airheads social forums and Knowledge Base	https://community.arubanetworks.com/
Software licensing	https://lms.arubanetworks.com/
End-of-Life information	https://www.arubanetworks.com/support-services/end-of-life/
Aruba software and documentation	https://asp.arubanetworks.com/downloads

Accessing updates

To download product updates:

Aruba Support Portal

<https://asp.arubanetworks.com/downloads>

If you are unable to find your product in the Aruba Support Portal, you may need to search My Networking, where older networking products can be found:

My Networking

<https://www.hpe.com/networking/support>

To view and update your entitlements, and to link your contracts and warranties with your profile, go to the Hewlett Packard Enterprise Support Center **More Information on Access to Support Materials** page:

<https://support.hpe.com/portal/site/hpsc/aae/home/>



IMPORTANT: Access to some updates might require product entitlement when accessed through the Hewlett Packard Enterprise Support Center. You must have an HP Passport set up with relevant entitlements.

Some software products provide a mechanism for accessing software updates through the product interface. Review your product documentation to identify the recommended software update method.

To subscribe to eNewsletters and alerts:

<https://asp.arubanetworks.com/notifications/subscriptions> (requires an active Aruba Support Portal (ASP) account to manage subscriptions). Security notices are viewable without an ASP account.

Warranty information

To view warranty information for your product, go to <https://www.arubanetworks.com/support-services/product-warranties/>.

Regulatory information

To view the regulatory information for your product, view the *Safety and Compliance Information for Server, Storage, Power, Networking, and Rack Products*, available at <https://www.hpe.com/support/Safety-Compliance-EnterpriseProducts>

Additional regulatory information

Aruba is committed to providing our customers with information about the chemical substances in our products as needed to comply with legal requirements, environmental data (company programs, product recycling, energy efficiency), and safety information and compliance data, (RoHS and WEEE). For more information, see <https://www.arubanetworks.com/company/about-us/environmental-citizenship/>.

Documentation feedback

Aruba is committed to providing documentation that meets your needs. To help us improve the documentation, send any errors, suggestions, or comments to Documentation Feedback (docsfeedback-switching@hpe.com). When submitting your feedback, include the document title, part number, edition, and publication date located on the front cover of the document. For online help content, include the product name, product version, help edition, and publication date located on the legal notices page.