

AOS-CX 10.09 Fundamentals Guide

8320, 8325, 8360 Switch Series



Copyright Information

© Copyright 2022 Hewlett Packard Enterprise Development LP.

Open Source Code

This product includes code licensed under the GNU General Public License, the GNU Lesser General Public License, and/or certain other open source licenses. A complete machine-readable copy of the source code corresponding to such code is available upon request. This offer is valid to anyone in receipt of this information and shall expire three years following the date of the final distribution of this product version by Hewlett Packard Enterprise Company. To obtain such source code, send a check or money order in the amount of US \$10.00 to:

Hewlett Packard Enterprise Company
6280 America Center Drive
San Jose, CA 95002
USA

Notices

The information contained herein is subject to change without notice. The only warranties for Hewlett Packard Enterprise products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. Hewlett Packard Enterprise shall not be liable for technical or editorial errors or omissions contained herein.

Confidential computer software. Valid license from Hewlett Packard Enterprise required for possession, use, or copying. Consistent with FAR 12.211 and 12.212, Commercial Computer Software, Computer Software Documentation, and Technical Data for Commercial Items are licensed to the U.S. Government under vendor's standard commercial license.

Links to third-party websites take you outside the Hewlett Packard Enterprise website. Hewlett Packard Enterprise has no control over and is not responsible for information outside the Hewlett Packard Enterprise website.

Acknowledgments

Bluetooth is a trademark owned by its proprietor and used by Hewlett Packard Enterprise under license.

Contents	3
About this document	11
Applicable products	11
Latest version available online	11
Command syntax notation conventions	11
About the examples	12
Identifying switch ports and interfaces	12
Identifying modular switch components	13
About AOS-CX	14
AOS-CX system databases	14
Aruba Network Analytics Engine introduction	14
AOS-CX CLI	15
Aruba CX mobile app	15
Aruba NetEdit	15
Ansible modules	16
AOS-CX Web UI	16
AOS-CX REST API	16
In-band and out-of-band management	16
SNMP-based management support	17
User accounts	17
Initial Configuration	18
Initial configuration using ZTP	18
Initial configuration using the Aruba CX mobile app	18
Troubleshooting Bluetooth connections	20
Bluetooth connection IP addresses	20
Bluetooth is connected but the switch is not reachable	20
Bluetooth is not connected	21
Initial configuration using the CLI	24
Connecting to the console port	24
Connecting to the management port	25
Logging into the switch for the first time	26
Setting switch time using the NTP client	26
Configuring banners	27
Configuring in-band management on a data port	27
Using the Web UI	28
Configuring the management interface	28
Selecting the system profile	29
Restoring the switch to factory default settings	30
Management interface commands	32
default-gateway	32
ip static	33
nameserver	34
show interface mgmt	34
NTP commands	35
ntp authentication	35
ntp authentication-key	36

ntp disable	37
ntp enable	38
ntp conductor	39
ntp server	39
ntp trusted-key	41
ntp vrf	42
show ntp associations	43
show ntp authentication-keys	44
show ntp servers	45
show ntp statistics	46
show ntp status	47
System profile commands	48
profile	48
show profiles available	49
show profile current	50
Telnet commands	51
show telnet server	51
show telnet server sessions	52
telnet server	53
Interface configuration	55
Configuring a layer 2 interface	55
Configuring a layer 3 interface	55
Single source IP address	56
Priority-based flow control	56
Forward error correction	57
Unsupported transceiver support	57
Interface commands	58
allow-unsupported-transceiver	58
default interface	60
description	61
energy-efficient-ethernet	61
error-control	62
flow-control	63
flow-control watchdog	66
flow-control watchdog timeout resume	67
interface	68
interface loopback	68
interface vlan	69
ip address	70
ip mtu	71
ip source-interface	72
ipv6 address	74
ipv6 source-interface	75
l3-counters	76
mtu	78
persona	79
routing	79
show allow-unsupported-transceiver	80
show flow-control	81
show interface	82
show interface dom	85
show interface energy-efficient ethernet	86
show interface flow-control	86
show interface transceiver	89
show ip interface	93

show ip source-interface	94
show ipv6 interface	95
show ipv6 source-interface	96
shutdown	97
system interface-group	98
Subinterfaces	100
Configuring subinterfaces	100
Subinterface in a router-on-a-stick deployment	101
Subinterface commands	101
encapsulation dot1q	101
interface	102
show capacities subinterface	103
show interface	104
Source interface selection	106
Source-interface selection commands	106
ip source-interface (protocol <ip-addr>)	106
ip source-interface	108
ipv6 source-interface	109
ipv6 source-interface	111
show ip source-interface	112
show ipv6 source-interface	113
show running-config	115
VLANs	117
Precision time protocol	118
PTP clocks	118
Best clock-source algorithm	118
PTP network diagram	119
Configuration examples	120
Hardware considerations	121
PTP commands	121
clock-domain	121
clock-step	122
clear ptp statistics	123
enable	124
ip source-interface	124
mode	125
priority1	127
priority2	127
ptp profile	128
ptp announce-interval	129
ptp announce-timeout	131
ptp delay-req-interval	132
ptp enable	133
ptp peer ip	133
ptp lag-role	134
ptp sync-interval	135
ptp vlan	136
show ptp clock	137
show ptp foreign-clock-sources	138
show ptp interface	139
show ptp parent	142
show ptp statistics	143

show ptp time-property	144
transport-protocol	145
Recommendations for configuration	146
PTP CoPP class configuration recommendations	146
Configuration recommendations for a boundary clock	146
QoS prioritization configuration recommendation for transparent clock	146
General guidelines for PTP IPv4 multicast	147
Use cases	147
Use case 1: PTP – IPv4 over L2 – Spine Leaf Topology	147
Use case 2: PTP – BC and TC (VSF) topology connected via LAG	148
Use case 3: PTP – L3 spine leaf topology	148
Configuration and firmware management	150
Checkpoints	150
Checkpoint types	150
Maximum number of checkpoints	150
User generated checkpoints	150
System generated checkpoints	150
Supported remote file formats	150
Rollback	151
Checkpoint auto mode	151
Testing a switch configuration in checkpoint auto mode	151
Checkpoint commands	151
checkpoint auto	151
checkpoint auto confirm	152
checkpoint diff	153
checkpoint post-configuration	155
checkpoint post-configuration timeout	156
checkpoint rename	156
checkpoint rollback	157
copy checkpoint <CHECKPOINT-NAME> <REMOTE-URL>	158
copy checkpoint <CHECKPOINT-NAME> {running-config startup-config}	159
copy checkpoint <CHECKPOINT-NAME> <STORAGE-URL>	160
copy <REMOTE-URL> checkpoint <CHECKPOINT-NAME>	160
copy <REMOTE-URL> {running-config startup-config}	161
copy running-config {startup-config checkpoint <CHECKPOINT-NAME>}	163
copy {running-config startup-config} <REMOTE-URL>	164
copy {running-config startup-config} <STORAGE-URL>	165
copy startup-config running-config	166
copy <STORAGE-URL> running-config	166
erase	168
show checkpoint <CHECKPOINT-NAME>	169
show checkpoint <CHECKPOINT-NAME> hash	171
show checkpoint post-configuration	172
show checkpoint	173
show checkpoint date	173
show running-config hash	174
show startup-config hash	175
write memory	176
Boot commands	176
boot fabric-module	176
boot line-module	177
boot management-module	178
boot set-default	180
boot system	180
show boot-history	182

Firmware management commands	184
copy {primary secondary} <REMOTE-URL>	184
copy {primary secondary} <FIRMWARE-FILENAME>	185
copy primary secondary	186
copy <REMOTE-URL>	187
copy secondary primary	188
copy <STORAGE-URL>	189
User-based tunneling commands	190
backup-controller ip	190
enable	191
ip source-interface	192
papi-security-key	193
primary-controller ip	194
sac-heartbeat-interval	195
show ip source-interface ubt	195
show capacities ubt	196
show ubt	196
show ubt information	199
show ubt state	201
show ubt statistics	203
show ubt users	208
uac-keepalive-interval	210
ubt	211
ubt-client-vlan	212
ubt mode vlan-extend	213
SNMP	214
Configuring SNMP	214
Aruba Central integration	216
Connecting to Aruba Central	216
Custom CA certificate	216
Support mode in Aruba Central	217
Aruba Central commands	217
aruba-central	217
aruba-central support-mode	218
configuration-lockout central managed	219
disable	220
enable	220
location-override	221
show aruba-central	222
show running-config current-context	223
Port filtering	224
Port filtering commands	224
portfilter	224
show portfilter	225
DNS	228
DNS client	228
Configuring the DNS client	228
DNS client commands	229
ip dns domain-list	229
ip dns domain-name	230
ip dns host	231
ip dns server address	232

show ip dns	233
Device discovery and configuration	236
Device profile commands	236
aaa authentication port-access allow-cdp-bpdu	236
aaa authentication port-access allow-cdp-proxy-logoff	237
aaa authentication port-access allow-ldp-bpdu	238
associate cdp-group	239
associate lldp-group	240
associate mac-group	241
associate role	242
disable	243
enable	243
ignore (for CDP groups)	244
ignore (for LLDP groups)	245
ignore (for MAC groups)	246
mac-group	250
match (for CDP groups)	251
match (for LLDP groups)	252
match (for MAC groups)	254
port-access cdp-group	258
port-access device-profile	259
port-access device-profile mode block-until-profile-applied	260
port-access lldp-group	260
show port-access device-profile	261
LLDP	263
LLDP agent	263
LLDP MED support	265
Configuring the LLDP agent	266
LLDP commands	266
clear lldp neighbors	266
clear lldp statistics	267
lldp	268
lldp dot3	268
lldp holdtime	269
lldp management-ipv4-address	270
lldp management-ipv6-address	271
lldp med	271
lldp med-location	273
lldp receive	273
lldp reinit	274
lldp select-tlv	275
lldp timer	276
lldp transmit	277
lldp txdelay	278
lldp trap enable	279
show lldp configuration	281
show lldp configuration mgmt	283
show lldp local-device	284
show lldp neighbor-info	285
show lldp neighbor-info detail	288
show lldp neighbor-info mgmt	291
show lldp statistics	292
show lldp statistics mgmt	294
show lldp tlv	294
Cisco Discovery Protocol (CDP)	295

CDP support	295
CDP commands	296
cdp	296
clear cdp counters	297
clear cdp neighbor-info	297
show cdp	298
show cdp neighbor-info	299
show cdp traffic	299
DCBx	301
DCBx guidelines	301
DCBx commands	302
lldp dcbx	302
lldp dcbx (per interface)	302
dcbx application	304
show dcbx interface	305
Zero Touch Provisioning	310
ZTP support	310
Setting up ZTP on a trusted network	311
ZTP process during switch boot	312
ZTP VSF switchover support	313
ZTP commands	313
show ztp information	313
ztp force provision	317
Switch system and hardware commands	319
bluetooth disable	319
bluetooth enable	319
clear events	320
clear ip errors	321
console baud-rate	322
domain-name	323
fabric admin-state	324
hostname	324
led locator	325
module admin-state	326
module product-number	327
mtrace	329
show bluetooth	330
show boot-history	332
show capacities	334
show capacities-status	335
show console	336
show core-dump	337
show domain-name	338
show environment fan	339
show environment led	341
show environment power-consumption	341
show environment power-supply	342
show environment rear-display-module	344
show environment temperature	344
show events	345
show fabric	348
show hostname	349
show images	349

show ip errors	350
show module	351
show running-config	353
show running-config current-context	356
show startup-config	358
show system error-counter-monitor	359
show system	360
show system resource-utilization	362
show tech	363
show usb	365
show usb file-system	365
show version	367
system error-counter-monitor	368
system error-counter-monitor poll-interval	368
system resource-utilization poll-interval	369
top cpu	369
top memory	370
usb	371
usb mount unmount	371
Support and Other Resources	373
Accessing Aruba Support	373
Accessing Updates	374
Aruba Support Portal	374
My Networking	374
Warranty Information	374
Regulatory Information	374
Documentation Feedback	375

This document describes features of the AOS-CX network operating system. It is intended for administrators responsible for installing, configuring, and managing Aruba switches on a network.

Applicable products

This document applies to the following products:

- Aruba 8320 Switch Series (JL479A, JL579A, JL581A)
- Aruba 8325 Switch Series (JL624A, JL625A, JL626A, JL627A)
- Aruba 8360 Switch Series (JL700A, JL701A, JL702A, JL703A, JL704C, JL705C, JL706A, JL707A, JL708A, JL709A, JL710A, JL711A, JL717C, JL718C)

Latest version available online

Updates to this document can occur after initial publication. For the latest versions of product documentation, see the links provided in [Support and Other Resources](#).

Command syntax notation conventions

Convention	Usage
<code>example-text</code>	Identifies commands and their options and operands, code examples, filenames, pathnames, and output displayed in a command window. Items that appear like the example text in the previous column are to be entered exactly as shown and are required unless enclosed in brackets ([]).
example-text	In code and screen examples, indicates text entered by a user.
Any of the following: ■ <code><example-text></code> ■ <code><example-text></code> ■ <i>example-text</i> ■ <i>example-text</i>	Identifies a placeholder—such as a parameter or a variable—that you must substitute with an actual value in a command or in code: ■ For output formats where italic text cannot be displayed, variables are enclosed in angle brackets (< >). Substitute the text—including the enclosing angle brackets—with an actual value. ■ For output formats where italic text can be displayed, variables might or might not be enclosed in angle brackets. Substitute the text including the enclosing angle brackets, if any, with an actual value.
	Vertical bar. A logical OR that separates multiple items from which you can choose only one. Any spaces that are on either side of the vertical bar are included for readability and are not a required part of the command syntax.

Convention	Usage
{ }	Braces. Indicates that at least one of the enclosed items is required.
[]	Brackets. Indicates that the enclosed item or items are optional.
... or ...	Ellipsis: ■ In code and screen examples, a vertical or horizontal ellipsis indicates an omission of information. ■ In syntax using brackets and braces, an ellipsis indicates items that can be repeated. When an item followed by ellipses is enclosed in brackets, zero or more items can be specified.

About the examples

Examples in this document are representative and might not match your particular switch or environment. The slot and port numbers in this document are for illustration only and might be unavailable on your switch.

Understanding the CLI prompts

When illustrating the prompts in the command line interface (CLI), this document uses the generic term `switch`, instead of the host name of the switch. For example:

```
switch>
```

The CLI prompt indicates the current command context. For example:

```
switch>
```

Indicates the operator command context.

```
switch#
```

Indicates the manager command context.

```
switch (CONTEXT-NAME)#
```

Indicates the configuration context for a feature. For example:

```
switch(config-if) #
```

Identifies the `interface` context.

Variable information in CLI prompts

In certain configuration contexts, the prompt may include variable information. For example, when in the VLAN configuration context, a VLAN number appears in the prompt:

```
switch(config-vlan-100) #
```

When referring to this context, this document uses the syntax:

```
switch(config-vlan-<VLAN-ID>) #
```

Where `<VLAN-ID>` is a variable representing the VLAN number.

Identifying switch ports and interfaces

Physical ports on the switch and their corresponding logical software interfaces are identified using the format:

```
member/slot/port
```

On the 83xx Switch Series

- *member*: Always 1. VSF is not supported on this switch.
- *slot*: Always 1. This is not a modular switch, so there are no slots.
- *port*: Physical number of a port on the switch.

For example, the logical interface 1/1/4 in software is associated with physical port 4 on the switch.



If using breakout cables, the port designation changes to x:y, where x is the physical port and y is the lane when split to 4 x 10G or 4 x 25G. For example, the logical interface 1/1/4:2 in software is associated with lane 2 on physical port 4 in slot 1 on member 1.

Identifying modular switch components

- Power supplies are on the front of the switch behind the bezel above the management modules. Power supplies are labeled in software in the format: *member/power supply*:
 - *member*: 1.
 - *power supply*: 1 to 4.
- Fans are on the rear of the switch and are labeled in software as: *member/tray/fan*:
 - *member*: 1.
 - *tray*: 1 to 4.
 - *fan*: 1 to 4.
- Fabric modules are not labeled on the switch but are labeled in software in the format: *member/module*:
 - *member*: 1.
 - *member*: 1 or 2.
- The display module on the rear of the switch is not labeled with a member or slot number.

AOS-CX is a new, modern, fully programmable operating system built using a database-centric design that ensures higher availability and dynamic software process changes for reduced downtime. In addition to robust hardware reliability, the AOS-CX operating system includes additional software elements not available with traditional systems, including:

- **Automated visibility to help IT organizations scale:** The Aruba Network Analytics Engine allows IT to monitor and troubleshoot network, system, application, and security-related issues easily through simple scripts. This engine comes with a built-in time series database that enables customers and developers to create software modules that allow historical troubleshooting, as well as analysis of historical trends to predict and avoid future problems due to scale, security, and performance bottlenecks.
- **Programmability simplified:** A switch that is running the AOS-CX operating system is fully programmable with a built-in Python interpreter as well as REST-based APIs, allowing easy integration with other devices both on premise and in the cloud. This programmability accelerates IT organization understanding of and response to network issues. The database holds all aspects of the configuration, statistics, and status information in a highly structured and fully defined form.
- **Faster resolution with network insights:** With legacy switches, IT organizations must troubleshoot problems after the fact, using traditional tools like CLI and SNMP, augmented by separate, expensive monitoring, analytics, and troubleshooting solutions. These capabilities are built in to the AOS-CX operating system and are extensible.
- **High availability:** For switches that support active and standby management modules, the AOS-CX database can synchronize data between active and standby modules and maintain current configuration and state information during a failover to the standby management module.
- **Ease of roll-back to previous configurations:** The built-in database acts as a network record, enabling support for multiple configuration checkpoints and the ability to roll back to a previous configuration checkpoint.

AOS-CX system databases

The AOS-CX operating system is a modular, database-centric operating system. Every aspect of the switch configuration and state information is modeled in the AOS-CX switch configuration and state database, including the following:

- Configuration information
- Status of all features
- Statistics

The AOS-CX operating system also includes a time series database, which acts as a built-in network record. The time series database makes the data seamlessly available to Aruba Network Analytics Engine agents that use rules that evaluate network conditions over time. Time-series data about the resources monitored by agents are automatically collected and presented in graphs in the switch Web UI.

Aruba Network Analytics Engine introduction

The Aruba Network Analytics Engine is a first-of-its-kind built-in framework for network assurance and remediation. Combining the full automation and deep visibility capabilities of the AOS-CX operating system, this unique framework enables monitoring, collecting network data, evaluating conditions, and taking corrective actions through simple scripting agents.

This engine is integrated with the AOS-CX system configuration and time series databases, enabling you to examine historical trends and predict future problems due to scale, security, and performance bottlenecks. With that information, you can create software modules that automatically detect such issues and take appropriate actions.

With the faster network insights and automation provided by the Aruba Network Analytics Engine, you can reduce the time spent on manual tasks and address current and future demands driven by Mobility and IoT.

AOS-CX CLI

The AOS-CX CLI is an industry standard text-based command-line interface with hierarchical structure designed to reduce training time and increase productivity in multivendor installations.

The CLI gives you access to the full set of commands for the switch while providing the same password protection that is used in the Web UI. You can use the CLI to configure, manage, and monitor devices running the AOS-CX operating system.

Aruba CX mobile app

The Aruba CX mobile app enables you to use a mobile device to configure or access a supported AOS-CX switch. You can connect to the switch through Bluetooth or Wi-Fi.

You can use this application to do the following:

- Connect to the switch for the first time and configure basic operational settings—all without requiring you to connect a terminal emulator to the console port.
- View and change the configuration of individual switch features or settings.
- Manage the running configuration and startup configuration of the switch, including the following:
 - Transferring files between the switch and your mobile device
 - Sharing configuration files from your mobile device
 - Copying the running configuration to the startup configuration
- Access the switch CLI.

For more information about the Aruba CX mobile app, see:

www.arubanetworks.com/products/networking/switches/cx-mobileapp.

Aruba NetEdit

Aruba NetEdit enables the automation of multidevice configuration change workflows without the overhead of programming.

The key capabilities of NetEdit include the following:

- Intelligent configuration with validation for consistency and compliance
- Time savings by simultaneously viewing and editing multiple configurations
- Customized validation tests for corporate compliance and network design
- Automated large-scale configuration deployment without programming

- Ability to track changes to hardware, software, and configurations (whether made through NetEdit or directly on the switch) with automated versioning

For more information about Aruba NetEdit, search for NetEdit at the following website:

www.hpe.com/support/hpesc

Ansible modules

Ansible is an open-source IT automation platform.

Aruba publishes a set of Ansible configuration management modules designed for switches running AOS-CX software. The modules are available from the following places:

- The `arubanetworks.aoscx_role` role in the Ansible Galaxy at: https://galaxy.ansible.com/arubanetworks/aoscx_role
- The `aoscx-ansible-role` at the following GitHub repository: <https://github.com/aruba/aoscx-ansible-role>

AOS-CX Web UI

The Web UI gives you quick and easy visibility into what is happening on your switch, providing faster problem detection, diagnosis, and resolution. The Web UI provides dashboards and views to monitor the status of the switch, including easy to read indicators for: power supply, temperature, fans, CPU use, memory use, log entries, system information, firmware, interfaces, VLANs, and LAGs. In addition, you use the Web UI to access the Network Analytics Engine, run certain diagnostics, and modify some aspects of the switch configuration.

AOS-CX REST API

Switches running the AOS-CX software are fully programmable with a REST (REpresentational State Transfer) API, allowing easy integration with other devices both on premises and in the cloud. This programmability—combined with the Aruba Network Analytics Engine—accelerates network administrator understanding of and response to network issues.

The AOS-CX REST API enables programmatic access to the AOS-CX configuration and state database at the heart of the switch. By using a structured model, changes to the content and formatting of the CLI output do not affect the programs you write. And because the configuration is stored in a structured database instead of a text file, rolling back changes is easier than ever, thus dramatically reducing a risk of downtime and performance issues.

The AOS-CX REST API is a web service that performs operations on switch resources using HTTPS `POST`, `GET`, `PUT`, and `DELETE` methods.

A switch resource is indicated by its Uniform Resource Identifier (URI). A URI can be made up of several components, including the host name or IP address, port number, the path, and an optional query string. The AOS-CX operating system includes the AOS-CX REST API Reference, which is a web interface based on the Swagger UI. The AOS-CX REST API Reference provides the reference documentation for the REST API, including resources URIs, models, methods, and errors. The AOS-CX REST API Reference shows most of the supported read and write methods for all switch resources.

In-band and out-of-band management

Management communications with a managed switch can be either of the following:

In band

In-band management communications occur through ports on the line modules of the switch, using common communications protocols such as SSH and SNMP.

When you use an in-band management connection, management traffic from that connection uses the same network infrastructure as user data. User data uses the `data plane`, which is responsible for moving data from source to destination. Management traffic that uses the data plane is more likely to be affected by traffic congestion and other issues affecting the user network.

Out of band

OOBM (out-of-band management) communications occur through a dedicated serial or USB console port or through a dedicated networked management port.

OOBM operates on a `management plane` that is separate from the `data plane` used by data traffic on the switch and by in-band management traffic. That separation means that OOBM can continue to function even during periods of traffic congestion, equipment malfunction, or attacks on the network. In addition, it can provide improved switch security: a properly configured switch can limit management access to the management port only, preventing malicious attempts to gain access through the data ports.

Networked OOBM typically occurs on a management network that connects multiple switches. It has the added advantage that it can be done from a central location and does not require an individual physical cable from the management station to the console port of each switch.

SNMP-based management support

The AOS-CX operating system provides SNMP read access to the switch. SNMP support includes support of industry-standard MIB (Management Information Base) plus private extensions, including SNMP events, alarms, history, statistics groups, and a private alarm extension group. SNMP access is disabled by default.

User accounts

To view or change configuration settings on the switch, users must log in with a valid account. Authentication of user accounts can be performed locally on the switch, or by using the services of an external TACACS+ or RADIUS server.

Two types of user accounts are supported:

- **Operators:** Operators can view configuration settings, but cannot change them. No operator accounts are created by default.
- **Administrators:** Administrators can view and change configuration settings. A default locally stored administrator account is created with username set to **admin** and no password. You set the administrator account password as part of the initial configuration procedure for the switch.

Perform the initial configuration of a factory default switch using one of the following methods:

- Load a switch configuration using zero-touch provisioning (ZTP). When ZTP is used, the configuration is loaded from a server automatically when the switch booted from the factory default configuration.
- Connect to the switch wirelessly with a mobile device through Bluetooth, and use the Aruba CX Mobile App to deploy an initial configuration from a provided template. The template you choose during the deployment process determines how the management interface is configured. Optionally, as the final deployment step, you can select to import the switch into NetEdit through a WiFi connection to the NetEdit server.

Alternatively, you can use the Aruba CX Mobile App to manually configure switch settings and features for a subset of the features you can configure using the CLI. You can also access the CLI through the mobile application.

- Connect the management port on the switch to your network, and then use SSH client software to reach the switch from a computer connected to the same network. This requires that a DHCP server is installed on the network. Configure switch settings and features by executing CLI commands.
- Connect a computer running terminal emulation software to the console port on the switch. Configure switch settings and features by executing CLI commands.

Initial configuration using ZTP

Zero Touch Provisioning (ZTP) configures a switch automatically from a remote server.

Prerequisites

- The switch must be in the factory default configuration.

Do not change the configuration of the switch from its factory default configuration in any way, including by setting the administrator password.

- Your network administrator or installation site coordinator must provide a Category 6 (Cat6) cable connected to the network that provides access to the servers used for Zero Touch Provisioning (ZTP) operations.

Procedure

1. Connect the network cable to the out-of-band management port on the switch.
See the *Installation Guide* for switch to determine the location of the switch ports.
2. If the switch is powered on, power off the switch.
3. Power on the switch. During the ZTP operation, the switch might reboot if a new firmware image is being installed. ZTP goes to "Failed" state if the switch receives DHCP IP for vlan1 and does not receive any ZTP options within 60 seconds.

Initial configuration using the Aruba CX mobile app

This procedure describes how to use your mobile device to connect to the Bluetooth interface of the switch to connect to the switch for the first time so that you can configure basic operational settings using the Aruba CX mobile app.

Prerequisites

- You have obtained the USB Bluetooth adapter that was shipped with the switch. Information about the make and model of the supported adapter is included in the information about the Aruba CX mobile app in the Apple Store or Google Play.
- The Aruba CX mobile app must be installed on your mobile device.
- Bluetooth must be enabled on your mobile device.
- Your mobile device must be within the communication range of the Bluetooth adapter.
- If you are planning to import the switch into NetEdit, your mobile device must be able to use a Wi-Fi connection—not Bluetooth—to access the NetEdit server.

If your mobile device does not support simultaneous Bluetooth and Wi-Fi connections, you must use the NetEdit interface to import the switch at a later time. You can use the **Devices** tab to display the IP address of the switches you configured using your mobile device.

- The switch must be installed and powered on, with the network operating system boot sequence complete.

For information about installing and powering on the switch, see the *Installation Guide* for the switch.

Because you are using this mobile application to configure the switch through the Bluetooth interface, it is not necessary to connect a console to the switch.

- Bluetooth and USB must be enabled on the switch. On switches shipped from the factory, Bluetooth and USB are enabled by default.

Procedure

1. Install the USB Bluetooth adapter in the USB port of the switch.

For switches that have multiple management modules, you must install the USB Bluetooth adapter in the USB port of the active management module. Typically, the active management module is the module in slot 5.

Switches shipped from the factory have both USB and Bluetooth enabled by default.

For information about the location of the USB port on the switch, see the *Installation Guide* for the switch.

2. Use the Bluetooth settings on your mobile device to pair and connect the switch to your mobile device.

If you are in range of multiple Bluetooth devices, more than one device is displayed on the list of available devices. Switches running the AOS-CX operating system are displayed in the following format:

Switch_model - Serial_number

For example: 8325-987654X1234567 or 8320-AB12CDE123

A switch supports one active Bluetooth connection at a time.

On some Android devices, you might need to change the settings of the paired device to specify that it be used for Internet access.

3. Open the Aruba CX mobile app on your mobile device.



;" />

The application attempts to connect to the switch using the switch Bluetooth IP address and the default switch login credentials. The **Home** screen of the application shows the status of the connection to the switch:

- If the login attempt was successful, the Bluetooth icon is displayed and the status message shows the Bluetooth IP address of the switch. In addition, the connection graphic is green. You can continue to the next step.
 - If the login attempt was not successful, but a response was received, the Bluetooth icon is displayed, but the status message is: `Login Required`. You can continue to the next step. When you tap one of the tiles, you will be prompted for login credentials.
 - If the login attempt did not receive a response, the Bluetooth icon is not displayed, and the status message is: `No Connection`.
4. Create the initial switch configuration:
- You can deploy an initial configuration to the switch. Through this process, you supply the information required by a configuration template that you choose from a list of templates provided by the application. Then you deploy the configuration to the switch and, optionally, import the switch into NetEdit.



When you deploy a switch configuration, it becomes the running configuration, replacing the entire existing configuration of the switch. All changes previously made to the factory default configuration are overwritten.

If you plan to both deploy a switch configuration and customize the configuration of switch features, deploy the initial configuration first.

To deploy an initial switch configuration, tap: **Initial Config** and follow the instructions in the application.

- Alternatively, you can complete the initial configuration of the switch by tapping **Modify Config** and then selecting the features and settings to configure.
- You can also use the **Modify Config** feature to configure some switch features after the initial configuration is complete. For more information about what you can configure using the Aruba CX mobile app, see the online help for the application.

Troubleshooting Bluetooth connections

Bluetooth connection IP addresses

The Bluetooth connection uses IP addresses in the 192.168.99.0/24 subnet.

Switch

192.168.99.1

Mobile device

192.168.99.10

Bluetooth is connected but the switch is not reachable

Symptom

The mobile device settings indicate that the device is connected to the switch through Bluetooth. However, the mobile application indicates that the switch is not reachable.

Solution 1

Cause

The mobile device is paired with a different nearby switch.

Action

1. Verify the model number and serial number of the switch to which you are attempting to connect.
2. Use the Bluetooth settings on your mobile device to pair and connect the switch to your mobile device.

If you are in range of multiple Bluetooth devices, more than one device is displayed on the list of available devices. Switches running the AOS-CX operating system are displayed in the following format:

Switch_model-Serial_number

For example: 8325-987654X1234567 or 8320-AB12CDE123

A switch supports one active Bluetooth connection at a time.

On some Android devices, you might need to change the settings of the paired device to specify that it be used for Internet access.

Solution 2

Cause

The mobile device is connected to a different network—such as through a Wi-Fi connection—that conflicts with the subnet used for the switch Bluetooth connection.

Action

Disconnect the mobile device from the network that is using the conflicting subnet.

For example, use the mobile device settings to turn off or disable Wi-Fi. If you choose to disable Wi-Fi on the mobile device, and you are not able to access cellular service, you will not be able to connect to the NetEdit server to import the switch, but you can still deploy a switch configuration.

Bluetooth is not connected

Symptom

Your mobile device cannot establish a Bluetooth connection to the switch.

Solution 1

Cause

Bluetooth is not enabled on your mobile device.

Action

- Use your mobile device settings application to enable Bluetooth.
- Use the Bluetooth settings on your mobile device to pair and connect the switch to your mobile device.

If you are in range of multiple Bluetooth devices, more than one device is displayed on the list of available devices. Switches running the AOS-CX operating system are displayed in the following format:

Switch_model-Serial_number

For example: 8325-987654X1234567 or 8320-AB12CDE123

A switch supports one active Bluetooth connection at a time.

On some Android devices, you might need to change the settings of the paired device to specify that it be used for Internet access.

Solution 2

Cause

Your mobile device is not within the broadcast range of the Bluetooth adapter.

Action

Move closer to the switch.

Devices can communicate through Bluetooth when they are close, typically within a few feet of each other.

Solution 3

Cause

Your mobile device is not paired with the switch.

Action

1. Use your mobile device settings application to enable Bluetooth.
2. Use the Bluetooth settings on your mobile device to pair and connect the switch to your mobile device.

If you are in range of multiple Bluetooth devices, more than one device is displayed on the list of available devices. Switches running the AOS-CX operating system are displayed in the following format:

Switch_model-Serial_number

For example: 8325-987654X1234567 or 8320-AB12CDE123

A switch supports one active Bluetooth connection at a time.

3. On some Android devices, you might need to change the settings of the paired device to specify that it be used for Internet access.

Solution 4

Cause

Bluetooth is not enabled on the switch.

New switches are shipped from the factory with the USB port and Bluetooth enabled. However, an installed switch might have been configured to disable Bluetooth or disable the USB port, which the USB Bluetooth adapter uses.

Action

Use a different CLI connection to enable Bluetooth on the switch.

- Use the `show bluetooth` CLI command to show the Bluetooth configuration and the status of the Bluetooth adapter.
- To enable the USB port, enter the CLI command: `usb`
- An inserted USB drive must be mounted each time the switch boots or fails over to a different management module. To mount the drive, enter the CLI command: `usb mount`
- To enable Bluetooth, enter the CLI command: `bluetooth enable`

Solution 5

Cause

Another mobile device has already connected to the switch through Bluetooth. This cause is likely if your device is repeatedly disconnected within 1-2 seconds of establishing a connection.

Action

1. Use a different CLI connection to see if there is another device connected:
Use the `show bluetooth` CLI command to show the Bluetooth configuration and the status of the Bluetooth adapter.
2. Either disconnect the other device or use that device to communicate with the switch.
A switch can use Bluetooth to connect to one mobile device at a time.

Solution 6

Cause

The switch has been restarted since the mobile device was last paired with the switch, and the device is having difficulty establishing the Bluetooth connection.

Action

1. Use the Bluetooth mobile device settings to forget the switch device.
2. Use your mobile device settings application to disable Bluetooth.
Use your mobile device settings application to enable Bluetooth.

If you are in range of multiple Bluetooth devices, more than one device is displayed on the list of available devices. Switches running the AOS-CX operating system are displayed in the following format:

Switch_model-Serial_number

For example: 8325-987654X1234567 or 8320-AB12CDE123

A switch supports one active Bluetooth connection at a time.

On some Android devices, you might need to change the settings of the paired device to specify that it be used for Internet access.

Solution 7

Cause

The USB Bluetooth adapter is not installed in the switch.

If the switch has multiple management modules, the USB Bluetooth adapter might be installed in the management module that is not the active management module.

Action

Install the USB Bluetooth adapter in the USB port of the switch.

For switches that have multiple management modules, you must install the USB Bluetooth adapter in the USB port of the active management module. Typically, for new switches, the active management module is the module in slot 5 (Aruba 8400 switches) or slot 1 (Aruba 6400 switches).

For information about the location of the USB port on the switch, see the *Installation Guide* for the switch.

Solution 8

Cause

A problem occurred with the Bluetooth feature on the switch. For example, the software daemon was stopped and then restarted.

Action

1. Use a different connection to the switch CLI to disable and then enable Bluetooth.

```
switch(config)# bluetooth disable  
switch(config)# bluetooth enable
```

2. Use the Bluetooth mobile device settings to forget the switch device.
3. Use your mobile device settings application to disable Bluetooth.
4. Use your mobile device settings application to enable Bluetooth.
5. Use your mobile device settings application to enable Bluetooth.

If you are in range of multiple Bluetooth devices, more than one device is displayed on the list of available devices. Switches running the AOS-CX operating system are displayed in the following format:

Switch_model-Serial_number

For example: 8325-987654X1234567 or 8320-AB12CDE123

A switch supports one active Bluetooth connection at a time.

On some Android devices, you might need to change the settings of the paired device to specify that it be used for Internet access.

Solution 9

Cause

A switch that is member of a stack (but is not the conductor switch), has a USB Bluetooth adapter installed, but mobile application has lost contact with that switch.

Action

Remove and then reinstall the USB Bluetooth adapter.

Do not remove the USB Bluetooth adapter from the conductor switch.

Initial configuration using the CLI

This procedure describes how to connect to the switch for the first time and configure basic operational settings using the CLI. In this procedure, you use a computer to connect to the switch using either the console port or management port.

Procedure

1. Connect to the [console port](#) or the [management port](#).
2. [Log into the switch for the first time](#).
3. [Configure switch time using the NTP client](#).

Connecting to the console port

Prerequisites

- A switch installed as described in its hardware installation guide.
- A computer with terminal emulation software.
- AJL448A Aruba X2 C2 RJ45 to DB9 console cable.

Procedure

1. Connect the console port on the switch to the serial port on the computer using a console cable.
2. Start the terminal emulation software on the computer and configure a new serial session with the following settings:
 - Speed: 115200 bps
 - Data bits: 8
 - Stop bits: 1
 - Parity: None
 - Flow control: None
3. Start the terminal emulation session.
4. Press **Enter** once. If the connection is successful, you are prompted to login.

Optional console port speed setting

If desired, the console port speed can be set with the `console baud-rate` command. For example, setting the console port speed to 9600 bps:

```
switch(config)# console baud-rate 9600
This command will configure the baud rate immediately for the active serial
console session. After the command is executed the user will be prompted to
re-login. The serial console will be inaccessible until the terminal client
settings are updated to match the baud rate of the switch.
Continue (y/n)? y
```

Showing the console port current speed:

```
switch# show console
Baud Rate: 9600
```

For details on the `console baud-rate` and `show console` commands, see [Switch system and hardware commands](#).

Connecting to the management port

Prerequisites

- Two Ethernet cables
- SSH client software

Procedure

1. By default, the management interface is set to automatically obtain an IP address from a DHCP server, and SSH support is enabled. If there is no DHCP server on your network, you must configure a static address on the management interface:
 - a. Connect to the [console port](#)
 - b. Configure the [management interface](#).
2. Use an Ethernet cable to connect the management port to your network.
3. Use an Ethernet cable to connect your computer to the same network.
4. Start your SSH client software and configure a new session using the address assigned to the management interface. (If the management interface is set to operate as a DHCP client, retrieve the

- IP address assigned to the management interface from your DHCP server.)
5. Start the session. If the connection is successful, you are prompted to log in.

Logging into the switch for the first time

The first time you log in to the switch you must use the default administrator account. This account has no password, so you will be prompted on login to define one to safeguard the switch.

Procedure

1. When prompted to log in, specify **admin**. When prompted for the password, press **ENTER**. (By default, no password is defined.)

For example:

```
switch login: admin
password:
```

2. Define a password for the **admin** account. The password can contain up to 32 alphanumeric characters in the range ASCII 32 to 127, which includes special characters such as asterisk (*), ampersand (&), exclamation point (!), dash (-), underscore (_), and question mark (?).

For example:

```
Please configure the 'admin' user account password.
Enter new password: *****
Confirm new password: *****
switch#
```

3. You are placed into the manager command context, which is identified by the prompt: `switch#`, where `switch` is the model number of the switch. Enter the command `config` to change to the global configuration context `config`.

For example:

```
switch# config
switch(config)#
```

Setting switch time using the NTP client

Prerequisites

- The IP address or domain name of an NTP server.
- If the NTP server uses authentication, obtain the password required to communicate with the NTP server.

Procedure

1. If the NTP server requires authentication, define the authentication key for the NTP client with the command `ntp authentication`.

2. Configure an NTP server with the command `ntp server`. When configuring a time backward more than five minutes on the Aruba 8320 or 8325 Switch Series, a reboot is recommended to avoid unusual switch behavior.
3. By default, NTP traffic is sent on the default VRF. If you want to send NTP traffic on the management VRF, use the command `ntp vrf`.
4. Review your NTP configuration settings with the commands `show ntp servers` and `show ntp status`.
5. See the current switch time, date, and time zone with the command `show clock`.

Example

This example creates the following configuration:

- Defines the authentication key **1** with the password **myPassword**.
- Defines the NTP server **my-ntp.mydomain.com** and makes it the preferred server.
- Sets the switch to use the management VRF (**mgmt**) for all NTP traffic.

```
switch(config)# ntp authentication-key 1 md5 myPassword
switch(config)# ntp server my-ntp.mydomain.com key 10 prefer
switch(config)# ntp vrf mgmt
```

Configuring banners

1. Configure the banner that is displayed when a user connects to a management interface. Use the command `banner motd`. For example:

```
switch(config)# banner motd ^
Enter a new banner. Terminate the banner with the delimiter you have chosen.
>> This is an example of a banner text which a connecting user
>> will see before they are prompted for their password.
>>
>> As you can see it may span multiple lines and the input
>> will be terminated when the delimiter character is
>> encountered.^
Banner updated successfully!
```

2. Configure the banner that is displayed after a user is authenticated. Use the command `banner exec`. For example:

```
switch(config)# banner exec &
Enter a new banner. Terminate the banner with the delimiter you have chosen.
>> This is an example of a different banner text. This time
>> the banner entered will be displayed after a user has
>> authenticated.
>>
>> & This text will not be included because it comes after the '&'
Banner updated successfully!
```

Configuring in-band management on a data port

Prerequisites

- A connection to the CLI via either the console port or the management port
- Ethernet cable

Procedure

1. Use an Ethernet cable to connect a data port to your network.
2. [Configure a layer 3 interface](#) on the data port.
3. Enable SSH support on the interface (on the default VRF) with the command `ssh server vrf default`.

For example:

```
switch# config
switch(config)# ssh server vrf default
```

4. Enable the Web UI on the interface (on the default VRF) with the command `https-server vrf default`.

For example:

```
switch(config)# https-server vrf default
```

Using the Web UI

The Web UI is disabled by default. Follow these steps to enable it on the management port and log in. The Web UI is enabled by default on the default VRF.

Prerequisites

- A connection to the switch CLI.

Procedure

1. Log in to the CLI.
2. Switch to `config` context and enable the Web UI on the management port VRF with the command `https-server vrf mgmt`.

For example:

```
switch# config
switch(config)# https-server vrf mgmt
```

3. Start your web browser and enter the IP address of the management port in the address bar.
For example: **https://192.168.1.1**
4. The Web UI starts and you are prompted to log in.

Configuring the management interface

Prerequisites

A connection to the console port.

Procedure

1. Switch to the management interface context with the command `interface mgmt`.
2. By default, the management interface on the management port is enabled. If it was disabled, re-enable it with the command `no shutdown`.
3. Use the command `ip dhcp` to configure the management interface to automatically obtain an address from a DHCP server on the network (factory default setting). Or, assign a static IPv4 or IPv6 address, default gateway, and DNS server with the commands `ip address`, `ipv6 address`, `ip static`, `default-gateway`, and `nameserver`.
4. SSH is enabled by default on the management VRF. If disabled, enable SSH with the command `ssh server vrf mgmt`.

Examples

This example enables the management interface with dynamic addressing using DHCP:

```
switch(config)# interface mgmt
switch(config-if-mgmt)# no shutdown
switch(config-if-mgmt)# ip dhcp
```

This example enables the management interface with static addressing creating the following configuration:

- Sets a static IPv4 address of **198.168.100.10** with a mask of **24** bits.
- Sets the default gateway to **198.168.100.200**.
- Sets the DNS server to **198.168.100.201**.

```
switch(config)# interface mgmt
switch(config-if-mgmt)# no shutdown
switch(config-if-mgmt)# ip static 198.168.100.10/24
switch(config-if-mgmt)# default-gateway 198.168.100.200
switch(config-if-mgmt)# nameserver 198.168.100.201
```

Selecting the system profile

System profiles set the overall capabilities and capacities of the switch, based on the selected profile used at boot time. System profiles set capacities such as that of the hardware forwarding table.

System profiles provide you with the flexibility to configure switches based on their location in the network (for example, core, spine, leaf). When a switch boots without a profile specifically configured, it boots with the default profile. When a switch is configured with a non-default profile, the switch requires a reboot for the profile to be applied.

Procedure

1. Set the system profile with the command `profile`.
2. Reboot the switch for the profile change to take effect with the command `boot system`.

Examples

(8320, 8325) Selecting the **13-agg** profile and then rebooting the system:

```
switch(config)# profile 13-agg
switch(config)# exit
```

```
switch# boot system
...
```

(8320, 8325) Selecting the **spine** profile and then rebooting the system:

```
switch(config)# profile Spine
switch(config)# exit
switch# boot system
...
```

(8360) Selecting the **core-Spine** profile and then rebooting the system:

```
switch(config)# profile Core-Spine
switch(config)# exit
switch# boot system
...
```

Restoring the switch to factory default settings

Prerequisites

You are connected to the switch through its Console port.



This procedure erases all user information and configuration settings. Consider backing up your running configuration first.

1. Optionally, back up the running configuration with either `copy running-config <REMOTE-URL>` or `copy running-config <STORAGE-URL>`. The `json` storage format is required for later configuration restoration.
2. Switch to the configuration context with the command `config`.
3. Erase all user information and configuration, restoring the switch to its factory default state with the command `erase all zeroize`. Enter `Y` when prompted to continue. The switch automatically restarts.
4. Optionally restore your saved configuration (it must be in `json` format) with either `copy <REMOTE-URL> running-config` or `copy <STORAGE-URL> running-config` followed by `copy running-config startup-config`.

Example

Backing up the running configuration to a file on a remote server (using TFTP), resetting the switch to its factory default state, and then restoring the saved configuration.

```
switch# copy running-config tftp://192.168.1.10/backup_cfg json vrf mgmt

  % Total    % Received % Xferd  Average Speed   Time    Time       Time  Current
   Dload  Upload   Total     Spent    Left     Speed
100 10340    0     0  100 10340      0   1329k  --:--:--  --:--:--  --:--:--  1329k
100 10340    0     0  100 10340      0   1313k  --:--:--  --:--:--  --:--:--  1313k
switch#
switch#
```

```

switch# erase all zeroize
This will securely erase all customer data and reset the switch
to factory defaults. This will initiate a reboot and render the
switch unavailable until the zeroization is complete.
This should take several minutes to one hour to complete.
Continue (y/n)? y
The system is going down for zeroization.
[ OK ] Stopped PSPO Module Daemon.
[ OK ] Stopped AOS-CX Switch Daemon for BCM.
...
[ OK ] Stopped Remount Root and Kernel File Systems.
[ OK ] Reached target Shutdown.
reboot: Restarting system
Press Esc for boot options
ServiceOS Information:
    Version:          GT.01.03.0006
    Build Date:       2018-10-30 14:20:44 PDT
    Build ID:         ServiceOS:GT.01.03.0006:8ee0faaa52da:201810301420
    SHA:              xxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxx
...

##### Preparing for zeroization #####

##### Storage zeroization #####
##### WARNING: DO NOT POWER OFF UNTIL #####
##### ZEROIZATION IS COMPLETE #####
##### This should take several minutes #####
##### to one hour to complete #####

##### Restoring files #####

Boot Profiles:

0. Service OS Console
1. Primary Software Image [XL.10.02.0010]
2. Secondary Software Image [XL.10.02.0010]

Select profile(primary):

Booting primary software image...
Verifying Image...

Image Info:
    Name: AOS-CX
    Version: XL.10.02.0010
    Build Id: AOS-CX:XL.10.02.0010:feaf5b9b7f09:201901292014
    Build Date: 2019-01-29 12:43:50 PST

Extracting Image...
Loading Image...
Done.
kexec_core: Starting new kernel
System is initializing
fips_post_check[5473]: FIPS_POST: Cryptographic selftest started...SUCCESS
[ OK ] Started Login banner readiness check.
...
8400X login: admin
Password:

switch#
switch#
switch# copy tftp://192.168.1.10/backup_cfg running-config json vrf mgmt

```

```

% Total      % Received % Xferd  Average Speed   Time    Time       Time  Current
   Dload  Upload   Total             Spent    Left     Speed
100 10340  100 10340    0     0  2858k      0  --:--:--  --:--:--  --:--:--  2858k
100 10340  100 10340    0     0  2804k      0  --:--:--  --:--:--  --:--:--  2804k
Large configuration changes will take time to process, please be patient.
switch#
switch#
switch# copy running-config startup-config
Large configuration changes will take time to process, please be patient.
switch#

```

Management interface commands

default-gateway

```

default-gateway <IP-ADDR>
no default-gateway <IP-ADDR>

```

Description

Assigns an IPv4 or IPv6 default gateway to the management interface. An IPv4 default gateway can only be configured if a static IPv4 address was assigned to the management interface. An IPv6 default gateway can only be configured if a static IPv6 address was assigned to the management interface. The default gateway should be on the same network segment.

The `no` form of this command removes the default gateway from the management interface.

Parameter	Description
<IP-ADDR>	Specifies an IP address in IPv4 format (x.x.x.x), where x is a decimal number from 0 to 255, or IPv6 format (xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx), where x is a hexadecimal number from 0 to F.

Examples

Setting a default gateway with the IPv4 address of **198.168.5.1**:

```

switch(config)# interface mgmt
switch(config-if-mgmt)# default-gateway 198.168.5.1

```

Setting an IPv6 address of **2001:DB8::1**:

```

switch(config)# interface mgmt
switch(config-if-mgmt)# default-gateway 2001:DB8::1

```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
8320 8325 8360	config-if-mgmt	Administrators or local user group members with execution rights for this command.

ip static

```
ip static <IP-ADDR>/<MASK>
no ip static <IP-ADDR>/<MASK>
```

Description

Assigns an IPv4 or IPv6 address to the management interface.

The `no` form of this command removes the IP address from the management interface and sets the interface to operate as a DHCP client.

Parameter	Description
<IP-ADDR>	Specifies an IP address in IPv4 format (x.x.x.x), where x is a decimal number from 0 to 255, or IPv6 format (xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx), where x is a hexadecimal number from 0 to F.
<MASK>	Specifies the number of bits in an IPv4 or IPv6 address mask in CIDR format (x), where x is a decimal number from 0 to 32 for IPv4, and 0 to 128 for IPv6.

Examples

Setting an IPv4 address of **198.51.100.1** with a mask of **24** bits:

```
switch(config)# interface mgmt
switch(config-if-mgmt)# ip static 198.51.100.1/24
```

Setting an IPv6 address of **2001:DB8::1** with a mask of **32** bits:

```
switch(config)# interface mgmt
switch(config-if-mgmt)# ip static 2001:DB8::1/32
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
8320 8325 8360	config-if-mgmt	Administrators or local user group members with execution rights for this command.

nameserver

```
nameserver <PRIMARY-IP-ADDR> [ <SECONDARY-IP-ADDR> ]  
no nameserver <PRIMARY-IP-ADDR> [ <SECONDARY-IP-ADDR> ]
```

Description

Assigns a primary or secondary IPv4 or IPv6 DNS server to the management interface. IPv4 DNS servers can only be configured if a static IPv4 address was assigned to the management interface. IPv6 DNS servers can only be configured if a static IPv6 address was assigned to the management interface. The default gateway should be on the same network segment.

The `no` form of this command removes the DNS servers from the management interface.

Parameter	Description
<PRIMARY-IP-ADDR>	Specifies the IP address of the primary DNS server. Specify the address in IPv4 format (x.x.x.x), where x is a decimal number from 0 to 255, or IPv6 format (xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx), where x is a hexadecimal number from 0 to F.
<SECONDARY-IP-ADDR>	Specifies the IP address of the secondary DNS server. Specify the address in IPv4 format (x.x.x.x), where x is a decimal number from 0 to 255, or IPv6 format (xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx), where x is a hexadecimal number from 0 to F.

Examples

Setting primary and secondary DNS servers with the IPv4 addresses of **198.168.5.1** and **198.168.5.2**:

```
switch(config)# interface mgmt  
switch(config-if-mgmt)# nameserver 198.168.5.1 198.168.5.2
```

Setting primary and secondary DNS servers with the IPv6 addresses of **2001:DB8::1** and **2001:DB8::2**:

```
switch(config)# interface mgmt  
switch(config-if-mgmt)# nameserver 2001:DB8::1 2001:DB8::2
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
8320 8325 8360	config-if-mgmt	Administrators or local user group members with execution rights for this command.

show interface mgmt

```
show interface mgmt [vsx-peer]
```

Description

Shows status and configuration information for the management interface.

Parameter	Description
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Example

```
switch# show interface mgmt

Address Mode           : static
Admin State            : up
Mac Address            : 02:42:ac:11:00:02
IPv4 address/subnet-mask : 192.168.1.10/16
Default gateway IPv4    : 192.168.1.1
IPv6 address/prefix     : 2001:db8:0:1::129/64
IPv6 link local address/prefix: fe80::7272:cfff:fe8d:e485/64
Default gateway IPv6    : 2001:db8:0:1::1
Primary Nameserver      : 2001::1
Secondary Nameserver    : 2001::2
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
8320 8325 8360	Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

NTP commands

ntp authentication

```
ntp authentication
no ntp authentication
```

Description

Enables support for authentication when communicating with an NTP server.

The `no` form of this command disables authentication support.

Examples

Enabling authentication support:

```
switch(config)# ntp authentication
```

Disabling authentication support:

```
switch(config)# no ntp authentication
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

ntp authentication-key

```
ntp authentication-key <KEY-ID> {md5 | sha1}
  [{ <PLAINTEXT-KEY> [trusted] | ciphertext <ENCRYPTED-KEY> }]
no ntp authentication-key <KEY-ID> {md5 | sha1}
  [{ <PLAINTEXT-KEY> [trusted] | ciphertext <ENCRYPTED-KEY> }]
```

Description

Defines an authentication key that is used to secure the exchange with an NTP time server. This command provides protection against accidentally synchronizing to a time source that is not trusted.

The `no` form of this command removes the authentication key.

Parameter	Description
<KEY-ID>	Specifies the authentication key ID. Range: 1 to 65534.
md5	Selects MD5 key encryption.
sha1	Specifies SHA1 key encryption.
<PLAINTEXT-KEY>	Specifies the plaintext authentication key. Range: 8 to 40 characters. The key may contain printable ASCII characters excluding "#" or be entered in hex. Keys longer than 20 characters are assumed to be hex. To use an ASCII key longer than 20 characters, convert it to hex.
trusted	Specifies that this is a trusted key. When NTP authentication is enabled, the switch only synchronizes with time servers that transmit packets containing a trusted key.

Parameter	Description
ciphertext <ENCRYPTED-KEY>	Specifies the ciphertext authentication key in Base64 format. This is used to restore the NTP authentication key when copying configuration files between switches or when uploading a previously saved configuration. NOTE: When the key is not provided on the command line, plaintext key prompting occurs upon pressing Enter, followed by prompting as to whether the key is to be trusted. The entered key characters are masked with asterisks.

Examples

Defining key 10 with MD5 encryption and a provided plaintext trusted key:

```
switch(config)# ntp authentication-key 10 md5 F82#450b trusted
```

Defining key 5 with SHA1 encryption and a prompted plaintext trusted key:

```
switch(config)# ntp authentication-key 5 sha1
Enter the NTP authentication key: *****
Re-Enter the NTP authentication key: *****

Configure the key as trusted (y/n)? y
```

Removing key 10:

```
switch(config)# no ntp authentication-key 10
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

ntp disable

ntp disable

Description

Disables the NTP client on the switch. The NTP client is disabled by default.

Examples

Disabling the NTP client.

```
switch(config)# ntp disable
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

ntp enable

```
ntp enable  
no ntp enable
```

Description

Enables the NTP client on the switch to automatically adjust the local time and date on the switch. The NTP client is disabled by default.

The `no` form of this command disables the NTP client.

Examples

Enabling the NTP client.

```
switch(config)# ntp enable
```

Disabling the NTP client.

```
switch(config)# no ntp enable
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

ntp conductor

```
ntp conductor vrf <VRF-NAME> {stratum <NUMBER>}
no ntp conductor vrf <VRF-NAME> {stratum <NUMBER>}
```

Description

Sets the switch as the conductor time source for NTP clients on the specified VRF. By default, the switch operates at stratum level 8. The switch cannot function as both NTP conductor and client on the same VRF.

The `no` form of this command stops the switch from operating as the conductor time source on the specified VRF.

Parameter	Description
vrf <VRF-NAME>	Specifies the VRF on which to act as conductor time source.
stratum <NUMBER>	Specifies the stratum level at which the switch operates. Range: 1 - 15. Default: 8.

Examples

Setting the switch to act as conductor time source on VRF **primary-vrf** with a stratum level of **9**.

```
switch(config)# ntp conductor vrf primary-vry stratum 9
```

Stops the switch from acting as conductor time source on VRF **primary-vrf**.

```
switch(config)# no ntp conductor vrf primary-vry
```

Command History

Release	Modification
10.08	Inclusive language.
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
8320 8325	config	Administrators or local user group members with execution rights for this command.

ntp server

```
ntp server <IP-ADDR> [key <KEY-NUM>] [minpoll <MIN-NUM>] [maxpoll <MAX-NUM>] [burst | iburst]
[prefer] [version <VER-NUM>]
```

```
no ntp server <IP-ADDR> <IP-ADDR> [key <KEY-NUM>] [minpoll <MIN-NUM>] [maxpoll <MAX-NUM>]
[burst | iburst] [prefer] [version <VER-NUM>]
```

Description

Defines an NTP server to use for time synchronization, or updates the settings of an existing server with new values. Up to eight servers can be defined.

The `no` form of this command removes a configured NTP server.



The default NTP version is 4; it is backwards compatible with version 3.

Parameter	Description
<code>server <IP-ADDR></code>	Specifies the address of an NTP server as a DNS name, an IPv4 address (x.x.x.x), where x is a decimal number from 0 to 255, or an IPv6 address (xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx), where x is a hexadecimal number from 0 to F. When specifying an IPv4 address, you can remove leading zeros. For example, the address 192.169.005.100 becomes 192.168.5.100. When specifying an IPv6 address, you can use two colons (::) to represent consecutive zeros (but only once), remove leading zeros, and collapse a hextet of four zeros to a single 0. For example, this address 2222:0000:3333:0000:0000:0000:4444:0055 becomes 2222:0:3333::4444:55.
<code>key <KEY-NUM></code>	Specifies the key to use when communicating with the server. A trusted key must be defined with the command <code>ntp authentication-key</code> and authentication must be enabled with the command <code>ntp authentication</code> . Range: 1 to 65534.
<code>minpoll <MIN-NUM></code>	Specifies the minimum polling interval in seconds, as a power of 2. Range: 4 to 17. Default: 6 (64 seconds).
<code>maxpoll <MAX-NUM></code>	Specifies the maximum polling interval in seconds, as a power of 2. Range: 4 to 17. Default: 10 (1024 seconds).
<code>burst</code>	Send a burst of packets instead of just one when connected to the server. Useful for reducing phase noise when the polling interval is long.
<code>iburst</code>	Send a burst of six packets when not connected to the server. Useful for reducing synchronization time at startup.
<code>prefer</code>	Make this the preferred server.
<code>version <VER-NUM></code>	Specifies the version number to use for all outgoing NTP packets. Range: 3 or 4. Default: 4. NOTE: NTP is backwards compatible.

Usage

For features such as Activate and ZTP, a switch that has a factory default configuration will automatically be configured with pool.ntp.org. NTP server configurations via DHCP options are supported. The DHCP server

can be configured with maximum of two NTP server addresses which will be supported on the switch. Only IPV4 addresses are supported.



When configuring a time backward more than five minutes on the Aruba 8320 or 8325 Switch Series, a reboot is recommended to avoid unusual switch behavior.

NTP uses a stratum to describe the distance between a network device and an authoritative time source:

- A stratum 1 time server is directly attached to an authoritative time source (such as a radio or atomic clock or a GPS time source).
- A stratum 2 NTP server receives its time through NTP from a stratum 1 time server.

When using multiple servers with same stratum setting, the best practice to configure a preferred server, so NTP will attempt to use the preferred server as the primary NTP connection. If a preferred server is not manually set when NTP is enabled, the configured server with the lowest stratum will automatically be set as the preferred server. If there are servers with the same stratum, this auto prefer status will prevent AOS-CX from toggling between different servers as the primary server. Auto prefer selection of servers with same stratum (if not manually selected) may change after reconfiguring the switch, or after executing the `reboot` command.

Examples

Defining the ntp server pool.ntp.org, using iburst, and NTP version 4.

```
switch(config)# ntp server pool.ntp.org iburst version 4
```

Removing the ntp server pool.ntp.org.

```
switch(config)# no ntp server pool.ntp.org
```

Defining the ntp server my-ntp.mydomain.com and makes it the preferred server.

```
switch(config)# ntp server my-ntp.mydomain.com prefer
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

ntp trusted-key

```
ntp trusted-key <KEY-ID>  
no ntp trusted-key <KEY-ID>
```

Description

Sets a key as trusted. When NTP authentication is enabled, the switch only synchronizes with time servers that transmit packets containing a trusted key.

The `no` form of this command removes the trusted designation from a key.

Parameter	Description
<code><KEY-ID></code>	Specifies the identification number of the key to set as trusted. Range: 1 to 65534.

Examples

Defining key 10 as a trusted key.

```
switch(config)# ntp trusted-key 10
```

Removing trusted designation from key 10:

```
switch(config)# no ntp trusted-key 10
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	<code>config</code>	Administrators or local user group members with execution rights for this command.

ntp vrf

```
ntp vrf <VRF-NAME>  
no ntp vrf <VRF-NAME>
```

Description

Specifies the VRF on which the NTP client communicates with an NTP server. The switch cannot function as both NTP conductor and client on the same VRF.

The `no` form of the command returns to default VRF.

Parameter	Description
<code><VRF-NAME></code>	Specifies the name of a VRF.

Example

Setting the switch to use the default VRF for NTP client traffic.

```
switch(config)# ntp vrf default
```

Setting the switch to use the default management VRF for NTP client traffic.

```
switch(config)# ntp vrf mgmt
```

Returning the switch to use the default VRF for NTP client traffic.

```
switch(config)# no ntp vrf
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

show ntp associations

```
show ntp associations [vsx-peer]
```

Description

Shows the status of the connection to each NTP server. The following information is displayed for each server:

- Tally code : The first character is the Tally code:
 - (blank): No state information available (e.g. non-responding server)
 - x : Out of tolerance (discarded by intersection algorithm)
 - . : Discarded by table overflow (not used)
 - - : Out of tolerance (discarded by the cluster algorithm)
 - + : Good and a preferred remote peer or server (included by the combine algorithm)
 - # : Good remote peer or server, but not utilized (ready as a backup source)
 - * : Remote peer or server presently used as a primary reference
 - o : PPS peer (when the prefer peer is valid)
- ID: Server number.
- NAME: NTP server FQDN/IP address (Only the first 24 characters of the name are displayed).
- REMOTE: Remote server IP address.
- REF_ID: Reference ID for the remote server (Can be an IP address).
- ST: (Stratum) Number of hops between the NTP client and the reference clock.
- LAST: Time since the last packet was received in seconds unless another unit is indicated.

- POLL: Interval (in seconds) between NTP poll packets. Maximum (1024) reached as server and client sync.
- REACH: 8-bit octal number that displays status of the last eight NTP messages (377 = all messages received).

Parameter	Description
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Example

```
switch# show ntp associations
-----
ID          NAME          REMOTE          REF-ID ST LAST POLL REACH
-----
1          192.0.1.1          192.0.1.1          .INIT. 16  -   64    0
* 2  time.apple.com    17.253.2.253       .GPSs.  2  70  128   377
-----
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show ntp authentication-keys

```
show ntp authentication-keys [vsx-peer]
```

Description

Shows the currently defined authentication keys.

Parameter	Description
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Examples

```
switch# show ntp authentication-keys
```

```
-----  
Auth key  Trusted  MD5 password  
-----  
10        No      *****  
20        Yes     *****
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

show ntp servers

```
show ntp servers [vsx-peer]
```

Description

Shows all configured NTP servers, including any DHCP servers, default pool servers or any server with the status **auto prefer**.

Parameter	Description
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Example

```
switch# show ntp servers  
-----  
NTP SERVER KEYID MINPOLL MAXPOLL OPTION VER  
-----  
192.0.1.18      -      5      10 iburst  3  
192.0.1.19      -      6      10  none   4  
192.0.1.20      -      6      8  burst   3 prefer  
-----
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show ntp statistics

```
show ntp statistics [vsx-peer]
```

Description

Shows global NTP statistics. The following information is displayed:

- Rx-pkts: Total NTP packets received.
- Current Version Rx-pkts: Number of NTP packets that match the current NTP version.
- Old Version Rx-pkts: Number of NTP packets that match the previous NTP version.
- Error pkts: Packets dropped due to all other error reasons.
- Auth-failed pkts: Packets dropped due to authentication failure.
- Declined pkts: Packets denied access for any reason.
- Restricted pkts: Packets dropped due to NTP access control.
- Rate-limited pkts: Number of packets discarded due to rate limitation.
- KOD pkts: Number of Kiss of Death packets sent.

Parameter	Description
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Examples

```
switch(config)# show ntp statistics
Rx-pkts 100
Current Version Rx-pkts 80
Old Version Rx-pkts 20
Err-pkts 2
Auth-failed-pkts 1
Declined-pkts 0
Restricted-pkts 0
Rate-limited-pkts 0
KoD-pkts 0
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show ntp status

show ntp status [vsx-peer]

Description

Shows the status of NTP on the switch.

Parameter	Description
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Examples

Displaying the status information when the switch is not synced to an NTP server:

```
switch# show ntp status
NTP is enabled.
NTP authentication is enabled.
NTP is using the default VRF for NTP server connections.

Wed Nov 23 23:29:10 PDT 2016
NTP uptime: 187 days, 1 hours, 37 minutes, 48 seconds

Not synchronized with an NTP server.
```

Displaying the status information when the switch is synced to an NTP server:

```
switch# show ntp status
NTP is enabled.
NTP authentication is enabled.
NTP is using the default VRF for NTP server connections.

Wed Nov 23 23:29:10 PDT 2016
NTP uptime: 187 days, 1 hours, 37 minutes, 48 seconds

Synchronized to NTP Server 17.253.2.253 at stratum 2.
Poll interval = 1024 seconds.
Time accuracy is within 0.994 seconds
Reference time: Thu Jan 28 2016 0:57:06.647 (UTC)
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

System profile commands

profile

```
profile <PROFILE-NAME>
no profile [<PROFILE-NAME>]
```

Description

Selects the system profile. System profiles set the overall capabilities and capacities of the switch based on the selected profile used at boot time. Switch profiles set capacities such as that of the hardware forwarding table. Use command [show profiles available](#) to show the details of each available profile.



When a switch is configured with a non-default profile, the switch requires a reboot for the profile to be applied. You are prompted for the reboot.

The no form of this command resets the specified profile to its defaults.

8320, 8325 Switch Series:

Profile names	Description
L3-agg	Optimizes for layer 3 forwarding with more table space allocated to host(ARP/ND) entries.
L3-core	(The default on the 8320 Switch Series.) Optimize for layer 3 forwarding with more table space allocated to route entries.
Leaf	(The default on the 8325 Switch Series.) Optimizes for layer 2 forwarding with more table space allocated to overlay host entries (VXLAN).
spine	Optimizes for layer 3 forwarding with more table space allocated to route entries.

8360 Switch Series:

Profile names	Description
Aggregation-Leaf	(The default.) Optimizes for aggregation leaf.
Core-Spine	Optimizes for core spine.
Leaf-Extended	Optimizes for leaf extended.

Examples

(8320, 8325) Selecting the L3-agg profile and then rebooting the system:


```
switch(config)# profile l3-agg
switch(config)# exit
switch# boot system
...
```

(8320, 8325) Selecting the Spine profile and then rebooting the system:

```
switch(config)# profile Spine
switch(config)# exit
switch# boot system
...
```

(8360) Selecting the Core-Spine profile and then rebooting the system:

```
switch(config)# profile Core-Spine
switch(config)# exit
switch# boot system
...
```

Command History

Release	Modification
10.09	General updates.
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
8320 8325 8360	config	Administrators or local user group members with execution rights for this command.

show profiles available

show profiles available

Description

Shows all system profile names available and profile details.

Examples

Showing all available profiles for an 8320:

```
switch# show profiles available

Available profiles
-----
L3-agg    98304 L2 entries 120000 Host entries 16384  Route entries
```

```
L3-core  32768 L2 entries 14000  Host entries 131064 Route entries (Default)

Leaf     98304 L2 entries 120000 Host entries 16384  Route entries

Spine    32768 L2 entries 14000  Host entries 131064 Route entries
```

Showing all available profiles for an 8325:

```
switch# show profiles available

Available profiles
-----
L3-agg    98304 L2 entries, 120000 Host entries (8190 unique overlay
         neighbors, 48638 unique underlay neighbors), 29696 Route entries

L3-core   32768 L2 entries, 28000 Host entries (16382 unique overlay
         neighbors, 32766 unique underlay neighbors), 163796 Route entries

Leaf      98304 L2 entries, 120000 Host entries (32766 unique overlay
         neighbors, 12286 unique underlay neighbors), 29696 Route entries
         (Default)

Spine     32768 L2 entries, 28000 Host entries (16382 unique overlay
         neighbors, 32766 unique underlay neighbors), 163796 Route entries
```

Showing all available profiles for an 8360:

```
switch# show profiles available

Available profiles
-----
Aggregation-Leaf  114688 L2 entries, 163840 Host entries, 65536 Route entries

Core-Spine        32768 L2 entries, 65536 Host entries, 630784 Route entries

Leaf-Extended     212992 L2 entries, 16384 Host entries, 65536 Route entries
```

Command History

Release	Modification
10.09	General updates.
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
8320 8325 8360	Manager (#)	Administrators or local user group members with execution rights for this command.

show profile current

```
show profile current
```

Description

Shows the current system profile.

Examples

Showing the current profile on the 8320, 8325:

```
switch# show profile current

Current profile
-----
L3-core
```

Showing the current profile on the 8360:

```
switch# show profile current

Current profile
-----
Core-Spine
```

Command History

Release	Modification
10.09	General updates.
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
8320 8325 8360	Manager (#)	Administrators or local user group members with execution rights for this command.

Telnet commands

show telnet server

```
show telnet server
```

Description

Displays the Telnet server configuration.

Examples

Display the Telnet server configuration on the switch:

```
switch(config)# show telnet server
```

TELNET Server Configuration:

```
IP Version      : IPv4
TCP Port       : 23
Enabled VRFs   : default, vrf1, vrf2,
                  red, green
```

Command History

Release	Modification
10.08.1021	Command introduced

Command Information

Platforms	Command context	Authority
	config	Administrators or local user group members with execution rights for this command.

show telnet server sessions

```
show telnet server sessions [vrf <VRF-NAME> | all-vrfs]
```

Description

Displays all active Telnet sessions for the specified VRF or all VRFs. If no VRF is provided, the session on the default VRF is shown.

Parameter	Description
vrf <VRF-NAME>	Specifies the Telnet sessions for a specific VRF.
all-vrfs	Specifies the Telnet sessions for all VRFs

Examples

Display the Telnet session on the default VRF:

```
switch(config)# show telnet server sessions

TELNET sessions on VRF default:

IPv4 TELNET Sessions:
  Server IP      : 10.1.1.1
  Client IP     : 10.1.1.2
  Client Port    : 58835
```

Display the Telnet session on all VRFs:

```
switch(config)# show telnet server sessions all-vrfs
```

```
TELNET sessions on VRF mgmt:

  IPv4 TELNET Sessions:
    Server IP      : 10.1.1.1
    Client IP      : 10.1.1.2
    Client Port    : 58835

TELNET sessions on VRF default:
  IPv4 TELNET Sessions:
    Server IP      : 20.1.1.1
    Client IP      : 20.1.1.2
    Client Port    : 58837
```

Command History

Release	Modification
10.08.1021	Command introduced

Command Information

Platforms	Command context	Authority
	config	Administrators or local user group members with execution rights for this command.

telnet server

```
telnet server vrf <VRF-NAME>
no telnet server vrf <VRF-NAME>
```

Description

Enables the Telnet server on the desired VRF. Telnet is disabled by default.

The `no` form of this command disables the Telnet server.

Parameter	Description
vrf <VRF-NAME>	Specifies the VRF on which the Telnet server will be enabled.

Examples

Configuring the Telnet server on the `mgmt` VRF:

```
switch(config)# telnet server vrf mgmt
```

Command History

Release	Modification
10.08.1021	Command introduced

Command Information

Platforms	Command context	Authority
	<code>config</code>	Administrators or local user group members with execution rights for this command.

Configuring a layer 2 interface

Procedure

1. Change to the interface configuration context for the interface with the command `interface`.
2. By default, interfaces are layer 3. To create a layer 2 interface, disable routing with the command `no routing`.
3. Set the interface MTU (maximum transmission unit) with the command `mtu`.
4. Review interface configuration settings with the command `show interface`.

Example

```
switch(config)# interface 1/1/1
switch(config-if)# no routing
switch(config-if)# mtu 1900
```

Configuring a layer 3 interface

Procedure

1. Change to the interface configuration context for the interface with the command `interface`.
2. Interfaces are layer 3 by default. If you previously set the interface to layer 2, then enable routing support with the command `routing`.
3. Assign an IPv4 address with the command `ip address`, or an IPv6 address with the command `ipv6 address`.
4. If required, enable support for layer 3 counters with the command `l3-counters`.
5. If required, set the IP MTU with the command `ip mtu`.
6. Review interface configuration settings with the command `show interface`.

Examples

This example creates the following configuration:

- Configures interface **1/1/1** as a layer 3 interface.
- Defines an IPv4 address of **10.10.20.209** with a 24-bit mask.

```
switch# config
switch(config)# interface 1/1/1
switch(config-if)# ip address 10.10.20.209/24
```

This example creates the following configuration:

- Configures interface **1/1/2** as a layer 3 interface.
- Defines an IPv6 address of **2001:0db8:85a3::8a2e:0370:7334** with a 24-bit mask.
- Enables layer 3 transmit and receive counters.

```
switch# config
switch(config)# interface 1/1/2
switch(config-if)# ipv6 address 2001:0db8:85a3::8a2e:0370:7334/24
switch(config-if)# 13-counters tx
switch(config-if)# 13-counters rx
```

Single source IP address

Certain IP-based protocols used by the switch (such as RADIUS, sFlow, TACACS, and TFTP), use a client-server model in which the client's source IP address uniquely identifies the client in packets sent to the server. By default, the source IP address is defined as the IP address of the outgoing switch interface on which the client is communicating with the server. Since the switch can have multiple routing interfaces, outgoing packets can potentially be sent on different paths at different times. This can result in different source IP addresses being used for a client, which can create a client identification problem on the server. For example, it can be difficult to interpret system logs and accounting data on the server when the same client is associated with multiple IP addresses.

To resolve this issue, you can use the commands `ip source-interface` and `ipv6 source-interface` to define a single source IP address that applies to all supported protocols (RADIUS, sFlow, TACACS, and TFTP), or an individual address for each protocol. This ensures that all traffic sent by a client to a server uses the same IP address.

Priority-based flow control

Priority-based flow control (PFC) is defined in the IEEE 802.1Qbb standard. It is a link-level flow control mechanism intended to eliminate packet loss due to congestion on a network link.

For priority-based flow control, care must be taken when configuring quality of service.

1. Configure the global CoS map (`qos cos-map` command) and queue profile (`qos queue-profile` command) before configuring PFC on any interface.
 - Each code point in the CoS Map to be used for PFC must be assigned a unique local-priority value.
 - Each local-priority used for PFC must be the sole local-priority mapped to a queue in the queue profile.
2. CoS map or queue profile changes for non-PFC priorities can be modified without any impact on PFC functionality.
3. All interfaces with PFC enabled must also be configured with ``qos trust cos``.
4. For PFC to function properly with VSX and MLAG, PFC must be configured on the inter-switch-link.

Refer to the *Quality of Service Guide* for more information about buffering and queueing for flow-controlled traffic.

For interfaces that auto-negotiate, link-level flow control is subject to negotiation, along with speed and other parameters. Both ends of the link must negotiate the same flow control mode for it to be applied.

For interfaces that do not auto-negotiate, the configured link-level flow control mode is always applied and the user is responsible for ensuring that both ends of the link are configured for the same mode.

Priority-based flow control only applies to tagged packets. Untagged packets will not be flow controlled. Configuring PFC or link-level flow control RXTX mode may not take effect until the switch has been rebooted. When a reboot is required, the switch will display the following message:

```
The setting will not be applied until configuration is saved to startup-config and the switch is rebooted.
```

Reboot is required to

- Change global pool configuration.
- Enable PFC on an interface that has had link up.
- Enable RXTX on an interface that has had link up.
- Reconfigure PFC or RXTX for a port that has had link up with a different flow control mode.

Reboot is also required to split or unsplit a port that has had link up with PFC or RXTX enabled. Until reboot, the interface will remain down with a status of `Split in progress` or `Unsplit in progress`.

PFC cannot be enabled on an interface that also has a MACsec policy configured. If both PFC and MACsec are configured on an interface, it will remain down until one or the other is removed.

No more than 3 unique PFC priority combinations can be configured for the entire switch. Note that ports with a PFC configuration that cannot be applied can still link up, but will not have any flow control. For example, when ports 1-4 are configured for PFC priorities 3 and 4, ports 5-8 for PFC 4, and ports 9-12 for PFC 5, then any other ports can only be configured for priority combinations of 3 and 4, 4 or 5. If a fourth priority combination is configured the following error message will be displayed:

```
The number of unique priority-based flow control (PFC) configuration combinations cannot be more than 3.
```

PFC cannot be enabled on an interface if the PFC priority is not mapped to a lossless pool. If the user attempts to configure a PFC priority on an interface without mapping it to a lossless pool, the switch will display the following message:

```
All flow-controlled priorities must first be mapped to a lossless pool using the 'qos pool' command.
```

Any CoS map or Queue Profile change of a priority configured for PFC on an interface will affect lossless behavior for that interface. When changing QoS configuration for an interface with PFC enabled, it should be shut down while the changes are made.

Forward error correction

Forward error correction (FEC) is used to control errors in transmissions where the source sends redundant data and the destination only recognizes the data portion that contains no apparent errors. FEC does not require a handshake between the source and destination at the cost of a higher forward channel bandwidth. It is therefore best used in scenarios where re-transmissions are costly or impossible, such as using multicast one-way communication.

Unsupported transceiver support

Transceiver products (optical, DAC, AOCs) that are listed as supported by a switch model are detailed in the *Transceiver Guide*. Transceiver products that are not listed, are considered unsupported; this would include transceivers that are:

- Non-Aruba branded products
- HPE branded products that were designed for non-AOS-CX switch models (e.g. Comware)
- HPE branded products designated for use in HPE Compute Servers or Storage
- Transceivers originally designated for use in Aruba WLAN controllers or former Mobility Access Switch (MAS) products
- End-of-life Aruba Transceivers

The unsupported transceiver mode (UT-mode) is designed to allow the possible use of these unsupported products. Not all unsupported products can be recognized and enabled; they may be unable to be identified (do not follow the proper MSA standards for identification). These unsupported transceiver products are enabled only on a best-effort basis and there are no guarantees implied for their continued operation.

This feature is enabled by default. A periodic system log will be generated by default at an interval of 24 hours listing the ports on which unsupported transceivers are present. The log interval is configurable and can be disabled by setting the log-interval to `none`.

Interface commands

allow-unsupported-transceiver

```
allow-unsupported-transceiver [confirm | log-interval {none | <INTERVAL>}]  
no allow-unsupported-transceiver
```

Description

Allows unsupported transceivers to be enabled or establish connections. Only 1G and 10G transceivers are enabled by this command, unsupported transceivers of other speeds will remain disabled.



The following models will enable unsupported transceivers for speeds up to 100G when running AOS-CX 10.09.0001 or later:

- 8325 (Models 48Y8C and 32C)
- 8360 (Models 48Y6C, 32Y4C, 16Y2C, 48XT4C, 24XF2C and 12C)



As of AOS-CX 10.06.0100, this command is enabled by default, allowing the use of third party transceiver products without adding the command in the config. Disabling this command with the `no` form will now display the command in the running and stored configurations.

The `no` form of this command disallows using unsupported transceivers.

Parameter	Description
<code>confirm</code>	Specifies that unsupported transceiver warnings are to be automatically confirmed.

Parameter	Description
log-interval none	Disables unsupported transceiver logging.
log-interval <INTERVAL>	Sets the unsupported transceiver logging interval in minutes. Default: 1440 minutes. Range: 1440 to 10080 minutes.

Usage

When none of the parameters are specified it will display a warning message to accept the warranty terms. With `confirm` option the warning message is displayed but the user is not prompted to (y/n) answering. Warranty terms must be agreed to as part of enablement and the support is on best effort basis.

Examples

Allowing unsupported transceivers with follow-up confirmation:

```
switch(config)# allow-unsupported-transceiver
Warning: The use of unsupported transceivers, DACs, and AOCs is at your
own risk and may void support and warranty. Please see HPE Warranty terms
and conditions.

Do you agree and do you want to continue (y/n)? y
```

Allowing unsupported transceivers with confirmation in command syntax:

```
switch(config)# allow-unsupported-transceiver confirm
Warning: The use of unsupported transceivers, DACs, and AOCs is at your
own risk and may void support and warranty. Please see HPE Warranty terms
and conditions.
```

Configuring unsupported transceiver logging with an interval of every 48 hours:

```
switch(config)# allow-unsupported-transceiver log-interval 2880
```

Disabling unsupported transceiver logging:

```
switch(config)# allow-unsupported-transceiver log-interval none
```

Disallowing unsupported transceivers with follow-up confirmation:

```
switch(config)# no allow-unsupported-transceiver
Warning: Unsupported transceivers, DACs, and AOCs will be disabled,
which could impact network connectivity. Use 'show allow-unsupported-transceiver'
to identify unsupported transceivers, DACs, and AOCs.

Continue (y/n)? y
```

Disallowing unsupported transceivers with confirmation in command syntax:

```
switch(config)# no allow-unsupported-transceiver confirm  
Warning: Unsupported transceivers, DACs, and AOCs will be disabled,  
which could impact network connectivity. Use 'show allow unsupported-transceiver'  
to identify unsupported transceivers, DACs, and AOCs.  
  
switch(config)#
```

Command History

Release	Modification
10.09	Up to 100G support enabled for unsupported transceivers on 8325, and 8360 series switches in UT mode.
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
8320 8325 8360	config	Administrators or local user group members with execution rights for this command.

default interface

default interface <INTERFACE-ID>

Description

Sets an interface (or a range of interfaces) to factory default values.

Parameter	Description
<INTERFACE-ID>	Specifies the ID of a single interface or range of interfaces. Format: member/slot/port or member/slot/port-member/slot/port to specify a range.

Examples

Resetting an interface:

```
switch(config)# default default interface 1/1/1
```

Resetting an range of interfaces:

```
switch(config)# default default interface 1/1/1-1/1/10
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

description

```
description <DESCRIPTION>
no description
```

Description

Associates descriptive information with an interface to help administrators and operators identify the purpose or role of an interface.

The `no` form of this command removes a description from an interface.

Parameter	Description
<DESCRIPTION>	Specify a description for the interface. Range: 1 to 64 ASCII characters (including space, excluding question mark).

Examples

Setting the description for an interface to **DataLink 01**:

```
switch(config-if)# description DataLink 01
```

Removing the description for an interface.

```
switch(config-if)# no description
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config-if	Administrators or local user group members with execution rights for this command.

energy-efficient-ethernet

Description

Enables auto-negotiation of Energy-Efficient Ethernet (EEE) on an interface. EEE Negotiation is established only on auto-link negotiation with supported link partners.

Examples

Configuring an interface:

```
switch(config)# interface 1/1/1
switch(config-if)# energy-efficient-ethernet
```

Disabling Energy Efficient Ethernet on an interface:

```
switch(config)# interface 1/1/1
switch(config-if)# no energy-efficient-ethernet
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
	config	Administrators or local user group members with execution rights for this command.

error-control

```
error-control {auto | none | base-r-fec | rs-fec}
no error-control {auto | none | base-r-fec | rs-fec}
```

Description

Configures the forward error correction (FEC) mode to use for an interface. When not configured, the system will automatically select the FEC mode based on the installed transceiver. In most cases, the standard FEC mode will work best, but certain link partners may require a non-standard mode.

The `no` and `auto` forms of this command configure the interface to automatically use the standard FEC mode of the currently installed transceiver.



FEC configuration only applies to 25G and 100G transceivers. The default for the installed transceiver is used in all other cases.



Transceivers for which FEC is auto-negotiated will request the mode configured by this command, but may resolve to a different mode. FEC mode is presented as a commented line in the configuration shown with the `show run` command.

Parameter	Description
auto	Use the transceiver default.
none	Do not use any FEC.
base-r-fec	Use IEEE Clause 74 BASE-R (Firecode) FEC.
rs-fec	Use IEEE Clause 91 RS (Reed-Solomon) FEC.

Command History

Release	Modification
10.08.1021	Command introduced

Command Information

Platforms	Command context	Authority
8325 8360	config-if	Administrators or local user group members with execution rights for this command.

flow-control

On the 8320:

```
flow-control rx
no flow-control rx
```

On the 8325:

```
flow-control {rx | rxtx | [priority <PRIORITY> | <PRIORITY-1, PRIORITY-2>]}
no flow-control {rx | rxtx | [priority <PRIORITY> | <PRIORITY-1, PRIORITY-2>]}
```

On the 8360:

```
flow-control {rx | rxtx | [priority <PRIORITY> | <PRIORITY-1, PRIORITY-2>]}
no flow-control {rx | rxtx | [priority <PRIORITY> | <PRIORITY-1, PRIORITY-2>]}
```

Description

On 8320, enables negotiation of receive flow control on the current interface. The switch advertises RX support to the link partner.

Priority-based flow control (PFC) on the 8325 takes effect after the configuration is saved to startup-config and the switch is restarted.

On 8325 and 8360, enables negotiation of either receive-only flow control or both receive and transmit flow control on the current interface. The switch advertises either RX or RXTX support to the link partner. The final configuration is determined based on the capabilities of both partners.

Priority-based flow control (PFC) on the 8360 takes effect immediately after configuration. On the JL720A, PFC is not supported on any link speed below 10 Gbps.

A maximum of two PFC priorities can be configured per interface.

On the 8325:

You can only apply three unique combinations of PFC priority configuration across all ports of the device. A unique PFC priority combination is one or two PFC priorities configured on a port.

For example:

```
flow-control priority 3
flow-control priority 4, 5
flow-control priority 4
```

The first three unique combinations configured across all ports sorted in numerical order are accepted and applied. If you attempt to configure a fourth unique priority combination, the following error message is displayed:

```
The number of unique priority-based flow control (PFC) configuration combinations cannot be more than 3.
```

The `no` form disables flow control support on the current interface.

Parameter	Description
<code>rx</code>	Honors received IEEE 802.3x link-level flow control requests.
<code>rxtx</code>	Enables the ability to respect and generate IEEE 802.3x link-level pause frames on the current interface.
<code>priority <PRIORITY> <PRIORITY-1, PRIORITY-2></code>	On the 8325 and 8360, enables IEEE 802.3Q priority-based flow control on the current interface for up to two packet priorities. Range: 0 to 7.

Usage

Care must be taken to ensure proper lossless flow control operation:

- Priority-based flow control will only operate correctly between interfaces with the same priority configuration. Traffic should not flow between interfaces with different priorities or between interfaces where one has PFC enabled and one does not.
- All members of a LAG must have the same flow control configuration.
- Lossless flow control is only supported for single destination unicast traffic. Replicated traffic (e.g. broadcast, multicast, mirroring) cannot be guaranteed to be lossless.
- Lossless behavior is not supported when operating in a VSF stack configuration.
- Any queue used by protocol or control traffic must not be configured for lossless behavior. Routing protocols and VSX-synchronization messages use local-priority 7, therefore the CoS priority mapped to local-priority 7 should not be used in any lossless configuration.
For example, in a default configuration, the CoS map assigns local-priority 7 to packets arriving with VLAN priority 7. This means that lossless pools should not be configured to use priority 7, and that interfaces should not be configured with 'flow-control priority 7', since that VLAN priority maps to local-priority 7.
- On the 8325: Lossless pools must be created before configuring priority-based flow control (PFC) on any interface. Any priority to be configured for PFC must be mapped to a lossless pool before it can be enabled for PFC.

- On the 8325: Lossless pool 1 must be created before configuring link-level flow control RXTX mode on any interface. If it is not, the following message will be displayed:
Lossless pool 1 must be configured using the 'qos pool' command before enabling RXTX flow control.

Examples

Enable support for RX flow control:

```
switch(config)# interface 1/1/1  
switch(config-if)# flow-control rx
```

Disable support for RX flow control:

```
switch(config)# interface 1/1/1  
switch(config-if)# no flow-control rx
```

Enable support for priority flow control:

```
switch(config)# interface 1/1/1  
switch(config-if)# flow-control priority 2  
switch(config-if)# flow-control priority 3,4
```

Disable support for priority flow control:

```
switch(config)# interface 1/1/1  
switch(config-if)# no flow-control priority 2  
switch(config-if)# no flow-control priority 3,4
```

On the 8325:

Enable priority flow control on an interface that requires a reboot before it can be applied in hardware:

```
switch(config)# interface 1/1/1  
switch(config-if)# flow-control priority 2
```

The setting will not be applied until configuration is saved to startup-config and the switch is rebooted.

Enable support for RX and TX flow control:

```
switch(config)# interface 1/1/1  
switch(config-if)# flow-control rxtx
```

Disable support for RX and TX flow control:

```
switch(config)# interface 1/1/1  
switch(config-if)# no flow-control rxtx
```

Command History

Release	Modification
10.09	Support for <code>rxtx</code> added to 8325 Switch Series.
10.08	Command enhanced to configure two PFC priorities.
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	<code>config-if</code>	Administrators or local user group members with execution rights for this command.

flow-control watchdog

```
flow-control watchdog
no flow-control watchdog
```

Description

Enables flow control watchdog on a physical interface.

When an excessive amount of lossless traffic stops transmitting, problematic lossless buffer congestion occurs throughout the network. To prevent the situation, egress lossless queues are monitored to detect when no transmissions have occurred for a globally specified detection timeout. When the condition is detected, the flow control watchdog triggers on the affected queue resulting in the following actions:

- The watchdog timeout counter on the interface is incremented.
- All packets occupying the affected queue are discarded.
- New packet arrivals destined for the affected queue are discarded.

After the configured resume interval has elapsed since the trigger, the queue is returned to normal operation.

The `no` form of this command disables flow control watchdog on a physical interface.

Flow control watchdog is only supported on interfaces configured with PFC. Link-level flow control is not compatible with flow control watchdog.



When flow control watchdog is enabled, it is active on all lossless queues of the port.

To determine whether the flow control watchdog is enabled on an interface, or to see the number of times the watchdog has been triggered, use the `show interface flow-control` command.

The detection and resume intervals must be configured from the global configuration context.

Examples

Enabling flow control watch on an interface:

```
switch(config)# interface 1/1/1
switch(config-if)# flow-control watchdog
```

Disabling flow control watchdog on an interface:

```
switch(config)# interface 1/1/1
switch(config-if)# no flow-control watchdog
```

Command History

Release	Modification
10.08	Command introduced

Command Information

Platforms	Command context	Authority
8325	config-if	Administrators or local user group members with execution rights for this command.

flow-control watchdog timeout resume

```
flow-control watchdog timeout <MILLISECONDS> resume <MILLISECONDS>
no flow-control watchdog timeout <MILLISECONDS> resume <MILLISECONDS>
```

Description

Configures global flow control watchdog parameters, detection time and resume time. The parameters are applied to all interfaces that have flow control watchdog enabled. Refer [flow-control watchdog](#) for more information.

The `no` form of this command clears the global configuration parameters for flow control watchdog, restoring timeout and resume time to the platform defaults.



Flow control watchdog must be enabled on specified interfaces.

The configured timing parameters can be rounded to what the hardware can support. See [show flow-control](#) to check the applied values.

Parameter	Description
timeout <MILLISECONDS>	Specifies the amount of time in milliseconds, that a queue must be paused for watchdog to trigger. Range: 10 to 1500 milliseconds. Default: 100 milliseconds.
resume <MILLISECONDS>	Specifies the duration of time in milliseconds, that a queue remains in the triggered state. Range: 1 to 100000 milliseconds. Default: 100 milliseconds.

Examples

Configuring flow control watchdog global parameters:

```
switch(config)# flow-control watchdog timeout 100 resume 60
```

Removing flow control watchdog global parameters:

```
switch(config)# no flow-control watchdog timeout 100 resume 60
```

Command History

Release	Modification
10.08	Command introduced

Command Information

Platforms	Command context	Authority
8325	config	Administrators or local user group members with execution rights for this command.

interface

interface <PORT-NUM>

Description

Switches to the `config-if` context for a physical port. This is where you define the configuration settings for the logical interface associated with the physical port.

Parameter	Description
<PORT-NUM>	Specifies a physical port number. Format: member/slot/port.

Examples

Configuring an interface:

```
switch(config)# interface 1/1/1
switch(config-if)#
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

interface loopback

```
interface loopback <ID>
no interface loopback <ID>
```

Description

Creates a loopback interface and changes to the `config-loopback-if` context. Loopback interfaces are layer 3.

The `no` form of this command deletes a loopback interface.

Parameter	Description
<INSTANCE>	Specifies the loopback interface ID. Range: 1 to 256

Examples

```
switch# config
switch(config)# interface loopback 1
switch(config-loopback-if)#
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
8320 8325 8360	config	Administrators or local user group members with execution rights for this command.

interface vlan

```
interface vlan <VLAN-ID>
no interface vlan <VLAN-ID>
```

Description

Creates an interface VLAN also know as an SVI (switched virtual interface) and changes to the `config-if-vlan` context. The specified VLAN must already be defined on the switch.

The `no` form of this command deletes an interface VLAN.

Parameter	Description
<VLAN-ID>	Specifies the loopback interface ID. Range: 1 to 4040

Examples

```
switch# config
switch(config)# vlan 10
switch(config-vlan-10)# exit
switch(config)# interface vlan 10
switch(config-if-vlan)#
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

ip address

```
ip address <IPv4-ADDR>/<MASK> [secondary]
no ip address <IPv4-ADDR>/<MASK> [secondary]
```

Description

Sets an IPv4 address for the current layer 3 interface.

The `no` form of this command removes the IPv4 address from the interface.

Parameter	Description
<IPv4-ADDR>	Specifies an IP address in IPv4 format (x.x.x.x), where x is a decimal number from 0 to 255. You can remove leading zeros. For example, the address 192.169.005.100 becomes 192.168.5.100.
<MASK>	Specifies the number of bits in the address mask in CIDR format (x), where x is a decimal number from 0 to 128.
secondary	Specifies a secondary IP address.

Examples

Setting the IP address on interface **1/1/1** to **192.168.100.1** with a mask of **24** bits:

```
switch(config)# interface 1/1/1
switch(config-if)# ip address 192.168.100.1/24
```

Removing the IP address **192.168.100.1** with a mask of **24** bits from interface **1/1/1**:

```
switch(config)# interface 1/1/1
switch(config-if)# no ip address 192.168.100.1/24
```

Assigning the IP address **192.168.20.1** with a mask of **24** bits to loopback interface **1**:

```
switch(config)# interface loopback 1
switch(config-loopback-if)# ip address 192.168.20.1/24
```

Assigning the IP address **192.168.199.1** with a mask of **24** bits to interface VLAN **10**:

```
switch(config)# interface vlan 10
switch(config-if-vlan)# ip address 192.168.199.1/24
```

Removing the IP address **192.168.199.1** with a mask of **24** bits from interface VLAN **10**:

```
switch(config)# interface vlan 10
switch(config-if-vlan)# no ip address 192.168.199.1/24
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config-if config-loopback-if config-if-vlan	Administrators or local user group members with execution rights for this command.

ip mtu

ip mtu <VALUE>

no ip mtu

Description

Sets the IP MTU (maximum transmission unit) for an interface. This defines the largest IP packet that can be sent or received by the interface.

The **no** form of this command sets the IP MTU to the default value 1500. This command is only allowed when routing is enabled on the interface.

Parameter	Description
<VALUE>	Specifies the IP MTU in bytes. Range: 68 to 9198. Default: 1500.

Examples

Setting the IP MTU to 576 bytes:

```
switch(config-if)# ip mtu 576
```

Setting the IP MTU to the default value:

```
switch(config-if)# no ip mtu
```

Setting the IP MTU value on a subinterface:

```
switch(config)# interface 1/1/1.10
switch(config-subif)# ip mtu 6000
```

Usage

The IP MTU value for subinterface must be less than or equal to the parent MTU for the subinterface. The subinterface uses its IP MTU value and not the parent IP MTU value.

Command History

Release	Modification
10.08	Subinterface support added.
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config-if config-if-vlan config-subif	Administrators or local user group members with execution rights for this command.

ip source-interface

```
ip source-interface {sflow | tftp | radius | tacacs | ntp | syslog | ubt | dhcp-relay |
simplivity | dns | all} {interface <IFNAME> | <IPV4-ADDR>} [vrf <VRF-NAME>]
no ip source-interface {sflow | tftp | radius | tacacs | ntp | syslog | ubt | dhcp-relay |
simplivity | dns | all} [interface <IFNAME> | <IPV4-ADDR>] [vrf <VRF-NAME>]
```

Description

Sets a single source IP address for a feature on the switch. This ensures that all traffic sent the feature has the same source IP address regardless of how it egresses the switch. You can define a single global address that applies to all supported features, or an individual address for each feature.

This command provides two ways to set the source IP addresses: either by specifying a static IP address, or by using the address assigned to a switch interface. If you define both options, then the static IP address takes precedence.

The `no` form of this command deletes the single source IP address for all supported services, or a specific service.

Parameter	Description
sflow tftp radius tacacs ntp syslog ubt dhcp-relay simplivity dns all	Sets a single source IP address for a specific service. The <code>all</code> option sets a global address that applies to all protocols that do not have an address set. For DHCP relay, the address is used as both the source IP and GIADDR.
interface <IFNAME>	Specifies the name of the interface from which the specified service obtains its source IP address. The interface must have a valid IP address assigned to it. If the interface has both a primary and secondary IP address, the primary IP address is used.
<IPv4-ADDR>	Specifies the source IP address to use for the specified service. The IP address must be defined on the switch, and it must exist on the specified VRF (which is the <code>default</code> VRF, if the <code>vrf</code> option is not used). Specify the address in IPv4 format (x.x.x.x), where x is a decimal number from 0 to 255.
vrf <VRF-NAME>	Specifies the name of a VRF.

Examples

Setting the IPv4 address 10.10.10.5 as the global single source address:

```
switch# config
switch(config)# ip source-interface all 10.10.10.5
```

Setting the secondary IPv4 address 10.10.10.5 on interface 1/1/1 as the global single source address:

```
switch# config
switch(config)# interface 1/1/1
switch(config-if)# ip address 10.10.10.1/24
switch(config-if)# ip address 10.10.10.5/24 secondary
switch(config)# exit
switch(config)# ip source-interface all 10.10.10.5
```

Setting the address 10.10.10.25 on VRF `sflow-vrf` on interface 1/1/2 as the single source address for sFlow:

```
switch(config)# vrf sflow-vrf
switch(config-vrf)# exit
switch(config)# interface 1/1/2
switch(config-if)# no shutdown
switch(config-if)# vrf attach sflow-vrf
switch(config-if)# ip address 10.10.10.25/24
switch(config-if)# exit
switch(config)# ip source-interface sflow interface 1/1/2 vrf sflow-vrf
```

Clearing the global single source IP address **10.10.10.5**:

```
switch(config)# no ip source-interface all 10.10.10.5
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

ipv6 address

```
ipv6 address <IPV6-ADDR>/<MASK>{eui64 | [tag <ID>]}
no ipv6 address <IPV6-ADDR>/<MASK>
```

Description

Sets an IPv6 address on the interface.

The `no` form of this command removes the IPv6 address on the interface.



This command automatically creates an IPv6 link-local address on the interface. However, it does not add the `ipv6 address link-local` command to the running configuration. If you remove the IPv6 address, the link-local address is also removed. To maintain the link-local address, you must manually execute the `ipv6 address link-local` command.

Parameter	Description
<IPV6-ADDR>	Specifies the IP address in IPv6 format (xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx), where x is a hexadecimal number from 0 to F. You can use two colons (::) to represent consecutive zeros (but only once), remove leading zeros, and collapse a hextet of four zeros to a single 0. For example, this address 2222:0000:3333:0000:0000:0000:4444:0055 becomes 2222:0:3333::4444:55.
<MASK>	Specifies the number of bits in the address mask in CIDR format (x), where x is a decimal number from 0 to 128.
eui64	Configure the IPv6 address in the EUI-64 bit format.
tag <ID>	Configure route tag for connected routes. Range: 0 to 4294967295. Default: 0.

Examples

Setting the IPv6 address **2001:0db8:85a3::8a2e:0370:7334** with a mask of 24 bits:

```
switch(config-if)# ipv6 address 2001:0db8:85a3::8a2e:0370:7334/24
```

Removing the IP address 2001:0db8:85a3::8a2e:0370:7334 with mask of 24 bits:

```
switch(config-if)# no ipv6 address 2001:0db8:85a3::8a2e:0370:7334/24
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config-if	Administrators or local user group members with execution rights for this command.

ipv6 source-interface

```
ipv6 source-interface {sflow | tftp | radius | tacacs | ntp | syslog | ubt | dhcp-relay |  
simplivity | dns | all} [interface <IFNAME> | <IPV6-ADDR>] [vrf <VRF-NAME>]  
no ipv6 source-interface {sflow | tftp | radius | tacacs | ntp | syslog | ubt | dhcp-relay  
| simplivity | dns | all} [interface <IFNAME> | <IPV6-ADDR>] [vrf <VRF-NAME>]
```

Description

Sets a single source IP address for a feature on the switch. This ensures that all traffic sent the feature has the same source IP address regardless of how it egresses the switch. You can define a single global address that applies to all supported features, or an individual address for each feature.

This command provides two ways to set the source IP addresses: either by specifying a static IP address, or by using the address assigned to a switch interface. If you define both options, then the static IP address takes precedence.

The **no** form of this command deletes the single source IP address for all supported protocols, or a specific protocol.

Parameter	Description
sflow tftp radius tacacs ntp syslog ubt dhcp-relay simplivity dns all	Sets a single source IP address for a specific protocol. The all option sets a global address that applies to all protocols that do not have an address set.
interface <IFNAME>	Specifies the name of the interface from which the specified protocol obtains its source IP address.
<IPV6-ADDR>	Specifies the source IP address to use for the specified protocol. The IP address must be defined on the switch, and it must exist on the specified VRF (which is the default VRF, if the vrf option is not used). Specify the IP address in IPv6 format (xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx), where x is a hexadecimal number from 0 to F.
vrf <VRF-NAME>	Specifies the name of the VRF from which the specified protocol sets its source IP address.

Examples

Configuring the IPv6 address 2001:DB8::1 as the global single source address:

```
switch# config
switch(config)# ip source-interface all 2001:DB8::1/32
```

Configuring the IPv6 address 2001:DB8::1 on VRF `sflow-vrf` on interface 1/1/2 as the single source address for sFlow:

```
switch(config)# vrf sflow-vrf
switch(config-vrf)# exit
switch(config)# interface 1/1/2
switch(config-if)# no shutdown
switch(config-if)# vrf attach sflow-vrf
switch(config-if)# ipv6 address 2001:DB8::1/32
switch(config-if)# exit
switch(config)# ip source-interface sflow interface 1/1/2 vrf sflow-vrf
```

Stop the source IP address from using the IP address on interface **1/1/1** on VRF `one`.

```
switch(config)# no ip source-interface all interface 1/1/1 vrf one
```

Clear the source IP address 2001:DB8::1.

```
switch(config)# no ip source-interface all 2001:DB8::1
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

l3-counters

```
l3-counters [rx | tx]
no l3-counters [rx | tx]
```

Description

Enables counters on a layer 3 interface. By default, all interfaces are layer 3. To change a layer 2 interface to layer 3, use the `routing` command.

The `no` form of this command, with no specification, disables both transmit and receive counters on a layer 3 interface. To disable transmit (`tx`) or receive (`rx`) counters only, specify the counter type you want to disable.

Parameter	Description
rx	Specifies receive counters.
tx	Specifies transmit counters.

Examples

Enabling layer 3 transmit counters on interface **1/1/1**:

```
switch(config)# interface 1/1/1
switch(config-if)# 13-counters tx
```

Disabling layer 3 transmit and receive counters on interface **1/1/2**:

```
switch(config)# interface 1/1/2
switch(config-if)# no 13-counters
```



Layer 3 counters on subinterfaces are only supported on the Aruba 8360 switch series.

Enabling layer 3 counters on subinterface **1/1/1.10**:

```
switch(config)# interface 1/1/1.10
switch(config-subif)# 13-counters
```

Disabling layer 3 counters on subinterface **1/1/1.10**:

```
switch(config)# interface 1/1/1.10
switch(config-subif)# no 13-counters
```

Enabling layer 3 receive counters on subinterface **1/1/1.10**:

```
switch(config)# interface 1/1/1.10
switch(config-subif)# 13-counters rx
```

Disabling layer 3 transmit counters on subinterface **1/1/1.10**:

```
switch(config)# interface 1/1/1.10
switch(config-subif)# no 13-counters tx
```

Command History

Release	Modification
10.08	Added support for 13 counters on subinterfaces
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
8320 8325 8360	config-if config-subif	Administrators or local user group members with execution rights for this command.

mtu

mtu <VALUE>

no mtu

Description

Sets the MTU (maximum transmission unit) for an interface. This defines the maximum size of a layer 2 (Ethernet) frame. Frames larger than the MTU (1500 bytes by default) are dropped and cause an ICMP fragmentation-needed message to be sent back to the originator.

To support jumbo frames (frames larger than 1522 bytes), increase the MTU as required by your network. A frame size of up to 9198 bytes is supported.

The largest possible layer 1 frame will be 18 bytes larger than the MTU value to allow for link layer headers and trailers.

The `no` form of this command sets the MTU to the default value 1500.

Parameter	Description
<VALUE>	Specifies the MTU in bytes. Range: 46 to 9198. Default: 1500.

Examples

Setting the MTU on interface **1/1/1** to 1000 bytes:

```
switch(config)# interface 1/1/1
switch(config-if)# no routing
switch(config-if)# mtu 1000
```

Setting the MTU on interface **1/1/1** to the default value:

```
switch(config)# interface 1/1/1
switch(config-if)# no routing
switch(config-if)# no mtu
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config-if	Administrators or local user group members with execution rights for this command.

persona

```
persona {access | uplink | custom <PERSONA>}  
no persona
```

Description

Associates one of three persona types with an interface to classify the purpose or role of an interface. The `no` form of this command removes the interface persona.

Parameter	Description
access	Selects the access persona type.
uplink	Selects the uplink persona type.
custom <PERSONA>	Selects the custom persona type with a user-provided name. Range: 1 to 64 printable ASCII characters including space.

Examples

Configuring an access persona:

```
switch(config-if) # persona access
```

Configuring an uplink persona:

```
switch(config-if) # persona uplink
```

Configuring a custom persona:

```
switch(config-if) # persona custom special
```

Removing the persona setting.

```
switch(config-if) # no persona
```

Command History

Release	Modification
10.09	Command introduced.

Command Information

Platforms	Command context	Authority
All platforms	config-if	Administrators or local user group members with execution rights for this command.

routing

```
routing
no routing
```

Description

Enables routing support on an interface, creating a L3 (layer 3) interface on which the switch can route IPv4/IPv6 traffic to other devices.

By default, routing is enabled on all interfaces.

The `no` form of this command disables routing support on an interface, creating a L2 (layer 2) interface.

Examples

Enabling routing support on an interface:

```
switch(config-if)# routing
```

Disabling routing support on an interface:

```
switch(config-if)# no routing
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
8320 8325 8360	config-if	Administrators or local user group members with execution rights for this command.

show allow-unsupported-transceiver

```
show allow-unsupported-transceiver
```

Description

Displays configuration and status of unsupported transceivers.

Examples

Showing unallowed unsupported transceivers:

```
switch(config)# show allow-unsupported-transceiver

Allow unsupported transceivers : no
Logging interval               : 1440 minutes

-----
Port      Type      Status
```



```

-----
1/1/31      SFP-SX      unsupported
1/1/32      SFP-1G-BXD  unsupported
1/1/2       SFP28DAC3   unsupported

```

Showing allowed unsupported transceivers:

```

switch# show allow-unsupported-transceiver

Allow unsupported transceivers : yes
Logging interval               : 1440 minutes

-----
Port      Type      Status
-----
1/1/31    SFP-SX      unsupported-allowed
1/1/32    SFP-1G-BXD  unsupported-allowed
1/1/2     SFP28DAC3   unsupported

```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

show flow-control

```
show flow-control
```

Description

Displays globally configured flow control parameters.

Examples

Showing flow control system wide summary:

```

switch# show flow-control

Flow Control Watchdog Settings
  Trigger Timeout:  57 milliseconds (actual: 60)
  Resume Time:     450 milliseconds

```

Command History

Release	Modification
10.08	Command introduced.

Command Information

Platforms	Command context	Authority
8325	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show interface

```
show interface [<IFNAME>|<IFRANGE>] [brief | physical | extended [non-zero]]
show interface [lag | loopback | tunnel | vlan ] [<ID>] [brief | physical]
show interface [lag | loopback | tunnel | vlan ] [<ID>] [extended [non-zero]]
show interface vxlan <ID> [brief | physical]
show interface vxlan <ID> [brief | physical]
```

Description

Shows active configurations and operational status information for interfaces.

Parameter	Description
<IFNAME>	Specifies a interface name.
<IFRANGE>	Specifies the port identifier range.
brief	Shows brief info in tabular format.
physical	Shows the physical connection info in tabular format.
extended	Shows additional statistics.
non-zero	Shows only non zero statistics.
LAG	Shows LAG interface information.
LOOPBACK	Shows loopback interface information.
TUNNEL	Shows tunnel interface information.
VLAN	Shows VLAN interface information.
<LAG-ID>	Specifies the LAG number. Range: 1-256
<LOOPBACK-ID>	Specifies the LOOPBACK number. Range: 0-255
<TUNNEL-ID>	Specifies the tunnel ID. Range: 1-255
<VLAN-ID>	Specifies the VLAN ID. Range: 1-4094
VXLAN	Shows the VXLAN interface information.
<VXLAN-ID>	Specifies the VXLAN interface identifier. Default: 1

Examples

The following example shows when the interface is configured as a route-only port:

```
switch# show interface 1/1/1
```

```
Interface 1/1/1 is up
Admin state is up
Link state: up for 2 days (since Sun Jun 21 05:30:22 UTC 2020)
Link transitions: 1
Description: backup data center link
```

```
Hardware: Ethernet, MAC Address: 70:72:cf:fd:e7:b4
MTU 1500
Type 1GbT
Full-duplex
qos trust none
Speed 1000 Mb/s
Auto-negotiation is on
Flow-control: off
Error-control: off
MDI mode: MDIX
L3 Counters: Rx Enabled, Tx Enabled
Rate collection interval: 300 seconds
```

Rates	RX	TX	Total (RX+TX)
Mbits / sec	0.00	0.00	0.00
KPkts / sec	0.00	0.00	0.00
Unicast	0.00	0.00	0.00
Multicast	0.00	0.00	0.00
Broadcast	0.00	0.00	0.00
Utilization %	0.00	0.00	0.00

Statistics	RX	TX	Total
Packets	0	0	0
Unicast	0	0	0
Multicast	0	0	0
Broadcast	0	0	0
Bytes	0	0	0
Jumbos	0	0	0
Dropped	0	0	0
Filtered	0	0	0
Pause Frames	0	0	0
L3 Packets	0	0	0
L3 Bytes	0	0	0
Errors	0	0	0
CRC/FCS	0	n/a	0
Collision	n/a	0	0
Runts	0	n/a	0
Giants	0	n/a	0
Other	0	0	0

When the interface is currently linked at a downshifted speed:

```
switch(config-if)# show interface 1/1/1
```

```
Interface 1/1/1 is up
...
Auto-negotiation is on with downshift active
```

When the interface is shut down during a VSX split:

```
switch(config-if)# show interface 1/1/1
```

```
Interface 1/1/1 is down
Admin state is up
State information: Disabled by VSX
Link state: down for 3 days (since Tue Mar 16 05:20:47 UTC 2021)
Link transitions: 0
Description:
```

```
Hardware: Ethernet, MAC Address: 04:09:73:62:90:e7
MTU 1500
Type SFP+DAC3
Full-duplex
qos trust none
Speed 0 Mb/s
Auto-negotiation is off
Flow-control: off
Error-control: off
VLAN Mode: native-untagged
Native VLAN: 1
Allowed VLAN List: 1502-1505
Rate collection interval: 300 seconds
```

Rate	RX	TX	Total (RX+TX)
Mbits / sec	0.00	0.00	0.00
KPkts / sec	0.00	0.00	0.00
Unicast	0.00	0.00	0.00
Multicast	0.00	0.00	0.00
Broadcast	0.00	0.00	0.00
Utilization	0.00	0.00	0.00

Statistic	RX	TX	Total
Packets	0	0	0
Unicast	0	0	0
Multicast	0	0	0
Broadcast	0	0	0
Bytes	0	0	0
Jumbos	0	0	0
Dropped	0	0	0
Pause Frames	0	0	0
Errors	0	0	0
CRC/FCS	0	n/a	0
Collision	n/a	0	0
Runts	0	n/a	0
Giants	0	n/a	0

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show interface dom

```
show interface [<INTERFACE-ID>] dom [detail] [vsx-peer]
```

Description

Shows diagnostics information and alarm/warning flags for the optical transceivers (SFP, SFP+, QSFP+). This information is known as DOM (Digital Optical Monitoring). DOM information also consists of vendor determined thresholds which trigger high/low alarms and warning flags.

Parameter	Description
<INTERFACE-ID>	Specifies an interface. Format: member/slot/port.
detail	Show detailed information.
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Example

```
switch# show interface dom
```

```
-----
Port      Type      Channel  Temperature Voltage  Tx Bias  Rx Power  Tx Power
          (Celsius) (Volts)  (mA)     (mW/dBm) (mW/dBm)
-----
1/1/1     SFP+SR              47.65      3.31      8.40     0.08, -10.96 0.63, -2.49
1/1/2     SFP+SR              n/a         n/a       n/a      n/a         n/a
1/1/3     SFP+DA3             42.10      3.24      n/a      n/a         n/a
1/1/4     QSFP+SR4  1          44.46      3.30      6.12     0.08, -10.96 0.63, -1.95
          2          44.46      3.30      6.04     0.08, -10.96 0.63, -2.00
          3          44.46      3.30      6.51     0.08, -10.96 0.60, -2.16
          4          44.46      3.30      6.19     0.08, -10.96 0.63, -1.94
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show interface energy-efficient ethernet

show interface [<IFNAME>|<IFRANGE>] energy-efficient-ethernet

Description

Displays Energy-Efficient Ethernet information for the interface.

Parameter	Description
<IFNAME>	Specifies the name of an interface on the switch. Use the format member/slot/port (for example, 1/1/1).
<IFRANGE>	Specifies the port identifier range of an interface on the switch. Use the format member/slot/port (for example, 1/1/1).

Example

The following example shows when the interfaces are Energy-Efficient Ethernet capable

```
switch# show interface energy-efficient-ethernet
```

```
-----
Port      Enabled    Negotiated  Speed      TX Wake    RX Wake
           (MB/s)     Time (us)   Time (us)
-----
1/1/1     no         no          --         --         --
1/1/2     yes        yes         100        36         36
1/1/3     yes        yes         1000       17         17
1/1/4     no         no          --         --         --
1/1/5     yes        no          1000       --         --
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
	config	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show interface flow-control

show interface [<IFNAME>|<IFRANGE>] flow-control [detail]

Description

Displays the flow control configuration, status, and statistics of the specified interface.



If `detail` is not specified, the command displays a summary of all flow controlled interfaces with one interface per line. If `detail` is specified, the command displays details and statistics about flow control in a long form on the specified interfaces.

Parameter	Description
<IFNAME>	Specifies an interface name.
<IFRANGE>	Specifies the port identifier range.
detail	Show details and statistics of flow control.

Examples

Showing interfaces with flow control enabled in config or status or with a non-zero watchdog timeout count:
On 8320 and 8360:

```
switch# show interface flow-control
-----
Port          Flow Control  Flow Control
              Config    Status
-----
1/1/1         rx           rx
1/1/2         rx           off
```

On 8360:

```
switch# show interface flow-control
-----
Port          Flow Control  Flow Control
              Config    Status
-----
1/1/1         rxtx
1/1/2         priority 3,4  priority 3,4
1/1/10        priority 5     off
```

On 8325:

```
switch# show interface flow-control
-----
Port          Flow Control  Flow Control  Watchdog      Watchdog
              Config    Status      Status        Timeouts
-----
1/1/1         rx           rx
1/1/2         rx           rx           incompatible  0
1/1/10        priority 3,4  priority 3,4  enabled       1234
1/1/12        priority 3,4  priority 3,4  error         0
1/1/32:4      priority 5     priority 5
```

Showing all interfaces in detail form:

```

switch# show interface flow-control detail
Interface 1/1/1 is up
Admin state is up
Flow-control: off
Flow-control watchdog: disabled

Interface 1/1/2 is up
Admin state is up
Flow-control: off
Flow-control watchdog: disabled

...

```

Showing RX enabled flow control:

On 8320 and 8360:

```

switch# show interface 1/1/1 flow-control detail
Interface 1/1/1 is up
Admin state is up
Flow-control: rx

Statistics                                RX
-----
Dot3 Pause Frames                        0

```

On the 8325:

```

switch# show interface 1/1/1 flow-control detail
Interface 1/1/1 is up
Admin state is up
Flow-control: rx
Flow-control watchdog: disabled

Statistics                                RX
-----
Dot3 Pause Frames                        0

```

Showing RXTX enabled flow control:

On 8360:

```

switch# show interface 1/1/1 flow-control detail
Interface 1/1/1 is up
Admin state is up
Flow-control: rxtx

Statistics                                RX                                TX
-----
Dot3 Pause Frames                        0                                0

```

Showing PFC enabled information:

On 8360:

```

switch# show interface 1/1/1 flow-control detail
Interface 1/1/1 is up

```



```
Admin state is up
Flow-control: priority 4,5
```

Statistics	RX	TX	
Priority 0 Pauses	0	0	
Priority 1 Pauses	0	0	
Priority 2 Pauses	0	0	
Priority 3 Pauses	0	0	
Priority 4 Pauses	0	0	
Priority 5 Pauses	0	0	
Priority 6 Pauses	0	0	
Priority 7 Pauses	0	0	
Total Pause Frames	0	0	--

On 8325:

```
switch# show interface 1/1/1 flow-control detail
Interface 1/1/1 is up
Admin state is up
Flow-control: priority 4,5
Flow-control watchdog: disabled
```

Statistics	RX	TX
Priority 0 Pauses	0	0
Priority 1 Pauses	0	0
Priority 2 Pauses	0	0
Priority 3 Pauses	0	0
Priority 4 Pauses	0	0
Priority 5 Pauses	0	0
Priority 6 Pauses	0	0
Priority 7 Pauses	0	0
Total Pause Frames	0	0

Command History

Release	Modification
10.08	Command introduced.

Command Information

Platforms	Command context	Authority
8320 8325 8360	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show interface transceiver

```
show interface [<INTERFACE-ID>] transceiver [detail | threshold-violations] [vsx-peer]
```

Description

Displays information about transceivers present in the switch. The information shown varies for different transceiver types and manufacturers. Only basic information is shown for unsupported HPE and third-party transceivers installed in the switch and they are also identified with an asterisk in the output.

Parameter	Description
<INTERFACE-ID>	Specifies the name or range of an interface on the switch. Use the format member/slot/port (for example, 1/3/1).
detail	Show detailed information for the interfaces.
threshold-violations	Show threshold violations for transceivers.
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Example

Showing summary transceiver information with identification of unsupported transceivers:

```
switch(config)# show interface transceiver
-----
Port      Type      Product   Serial    Part
Number    Number    Number
-----
1/1/1     SFP+SR    J9150A    MYxxxxxxx 1990-3657
1/1/2     SFP+ER*   --        --         --
1/2/1     QSFP+SR4  JH233A    MYxxxxxxx 2005-1234
1/2/2     QSFP+ER4* --        --         --
1/3/1     SFP28DAC3 844477-B21 MYxxxxxxx 77fc-7ce7

* unsupported transceiver
```

Showing detailed transceiver information:

```
switch(config)# show interface transceiver detail
Transceiver in 1/1/1
  Interface Name      : 1/1/1
  Type                : SFP+SR
  Connector Type      : LC
  Wavelength          : 850nm
  Transfer Distance   : 0m (SMF), 30m (OM1), 80m (OM2), 300m (OM3)
  Diagnostic Support  : DOM
  Product Number      : J9150A
  Serial Number       : MYxxxxxxx
  Part Number         : 1990-3657

Status
  Temperature        : 47.65C
  Voltage             : 3.31V
  Tx Bias             : 8.40mA
  Rx Power            : 0.08mW, -10.96dBm
  Tx Power            : 0.56mW, -2.49dBm

Recent Alarms :
  Rx power low alarm
```

Rx power low warning

Recent Errors :

Rx loss of signal

Transceiver in 1/1/2

Interface Name : 1/1/2
Type : unknown
Connector Type : ??
Wavelength : ??
Transfer Distance : ??
Diagnostic Support : ??
Product Number : ??
Serial Number : ??
Part Number : ??

Transceiver in 1/2/1

Interface Name : 1/2/1
Type : QSFP+SR4
Connector Type : MPO
Wavelength : 850nm
Transfer Distance : 0m (SMF), 0m (OM1), 0m (OM2), 100m (OM3)
Diagnostic Support : DOM
Product Number : JH233A
Serial Number : MYxxxxxxx
Part Number : 2005-1234

Status

Temperature : 44.46C
Voltage : 3.30V

Channel#	Tx Bias (mA)	Rx Power (mW/dBm)	Tx Power (mW/dBm)

1	6.12	0.00, -inf	0.63, -1.95
2	6.04	0.00, -inf	0.63, -2.00
3	6.51	0.00, -inf	0.60, -2.16
4	6.19	0.00, -inf	0.63, -1.94

Recent Alarms :

Channel 1 :
Rx power low alarm
Rx power low warning
Channel 2 :
Rx power low alarm
Rx power low warning
Channel 3 :
Rx power low alarm
Rx power low warning
Channel 4 :
Rx power low alarm
Rx power low warning

Recent Errors :

Channel 1 :
Rx Loss of Signal
Channel 2 :
Rx Loss of Signal
Channel 3 :
Rx Loss of Signal
Channel 4 :

```

Rx Loss of Signal

Transceiver in 1/2/2
  Interface Name      : 1/2/2
  Type                : unknown
  Connector Type      : ??
  Wavelength          : ??
  Transfer Distance   : ??
  Diagnostic Support   : ??
  Product Number      : ??
  Serial Number       : ??
  Part Number         : ??

Transceiver in 1/3/1
  Interface Name      : 1/3/1
  Type                : SFP28DAC3
  Connector Type      : Copper Pigtail
  Transfer Distance   : 0.00km (SMF), 0m (OM1), 0m (OM2), 0m (OM3)
  Diagnostic Support   : None
  Product Number      : 844477-B21
  Serial Number       : MYxxxxxxx
  Part Number         : 77fc-7ce7

```

Showing detailed transceiver information with identification of unsupported transceivers:

```

switch# show interface transceiver detail
Transceiver in 1/1/2
  Interface Name      : 1/1/2
  Type                : SFP+ER (unsupported)
  Connector Type      : LC
  Wavelength          : 3590nm
  Transfer Distance   : 80m (SMF), 0m (OM1), 0m (OM2), 0m (OM3)
  Diagnostic Support   : DOM
  Vendor Name         : INNOLIGHT
  Vendor Part Number  : TR-PX15Z-NHP
  Vendor Part Revision: 1A
  Vendor Serial number: MYxxxxxxx

Status
  Temperature : 28.88C
  Voltage      : 3.30V
  Tx Bias      : 65.53mA
  Rx Power     : 0.00mW, -inf
  Tx Power     : 1.47mW, 1.67dBm

Recent Alarms:
  Rx Power low alarm
  Rx Power low warning

Recent Errors:
  Rx loss of signal

```

Showing transceiver threshold-violations:

```

switch(config)# show interface transceiver threshold-violations
-----
Port      Type      Channel  Type(s) of Recent
              Threshold Violation(s)
-----

```

```

1/1/1      SFP+SR      Tx bias high warning
              50.52 mA > 40.00 mA
1/1/2      SFP+ER*      ??
1/2/1      QSFP+SR4      1      Tx power low alarm
                              -17.00 dBm < -0.50 dBm
                              2      Tx bias low warning
                              3.12 mA < 4.00 mA
1/2/2      QSFP+ER4*      ??
1/3/1      SFP28DAC3      n/a

```

* unsupported transceiver

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show ip interface

show ip interface <INTERFACE-ID> [vsx-peer]

Description

Shows status and configuration information for an IPv4 interface.

Parameter	Description
<INTERFACE-ID>	Specifies the name of an interface. Format: member/slot/port.
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Example

```

switch# show ip interface 1/1/1

Interface 1/1/1 is up
Admin state is up
Hardware: Ethernet, MAC Address: 70:72:cf:fd:e7:b4
IPv4 address 192.168.1.1/24
MTU 1500
RX
    0 packets, 0 bytes

```

TX

0 packets, 0 bytes

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show ip source-interface

```
show ip source-interface {sflow | tftp | radius | tacacs | all} [vrf <VRF-NAME>]  
[vsx-peer]
```

Description

Shows single source IP address configuration settings.

Parameter	Description
sflow tftp radius tacacs all	Shows single source IP address configuration settings for a specific protocol. The <code>all</code> option shows the global setting that applies to all protocols that do not have an address set.
vrf <VRF-NAME>	Specifies the name of a VRF.
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Examples

Showing single source IP address configuration settings for sFlow:

```
switch# show ip source-interface sflow  
  
Source-interface Configuration Information  
-----  
Protocol           Source Interface  
-----  
sflow              10.10.10.1
```

Showing single source IP address configuration settings for all protocols:

```
switch# show ip source-interface all

Source-interface Configuration Information
-----
Protocol      Source Interface
-----
all           1/1/1
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

show ipv6 interface

show ipv6 interface <INTERFACE-ID> [vsx-peer]

Description

Shows status and configuration information for an IPv6 interface.

Parameter	Description
<INTERFACE-ID>	Specifies an interface ID. Format: member/slot/port.
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Examples

```
switch# show ipv6 interface 1/1/1

Interface 1/1/1 is up
Admin state is up
IPv6 address:
    2001:0db8:85a3:0000:0000:8a2e:0370:7334/24 [VALID]
IPv6 link-local address: fe80::1e98:ecff:fee3:e800/64 (default) [VALID]
IPv6 virtual address configured: none
IPv6 multicast routing: disable
IPv6 Forwarding feature: enabled
IPv6 multicast groups locally joined:
    ff02::ff70:7334 ff02::ffe3:e800 ff02::1 ff02::1:ff00:0
    ff02::2
IPv6 multicast (S,G) entries joined: none
IPv6 MTU: 1524 (using link MTU)
```

```
IPv6 unicast reverse path forwarding: none
IPv6 load sharing: none
RX
    0 packets, 0 bytes
TX
    0 packets, 0 bytes
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show ipv6 source-interface

```
show ipv6 source-interface {sflow | tftp | radius | tacacs | all} [vrf <VRF-NAME>]
[vsx-peer]
```

Description

Shows single source IP address configuration settings.

Parameter	Description
sflow tftp radius tacacs all	Shows single source IP address configuration settings for a specific protocol. The <code>all</code> option shows the global setting that applies to all protocols that do not have an address set.
vrf <VRF-NAME>	Specifies the name of a VRF.
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Examples

Showing single source IP address configuration settings for sFlow:

```
switch# show ipv6 source-interface sflow

Source-interface Configuration Information
-----
Protocol      Source Interface
-----
sflow         2001:DB8::1
```

Showing single source IP address configuration settings for all protocols:


```
switch# show ipv6 source-interface all

Source-interface Configuration Information
-----
Protocol           Source Interface
-----
all                 1/1/1
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

shutdown

shutdown
no shutdown

Description

Disables an interface. Interfaces are disabled by default when created.
The `no` form of this command enables an interface.

Examples

Disabling an interface:

```
switch(config-if)# shutdown
```

Enabling an interface:

```
switch(config-if)# no shutdown
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

system interface-group

```
system interface-group <GROUP> speed <SPEED>
no system interface-group <GROUP>
```

Description

Configures speed for an interface group. After changing group speed, only transceivers compatible with the new speed will be enabled.



- All speed-mismatched interfaces in the group will be disabled.
- This command can interrupt active network links, user confirmation is required to proceed.

The `no` form of this command resets the specified interface group to its default.

Parameter	Description
<GROUP>	Specifies interface group to configure.
<SPEED>	Configures transceiver speed (10g, 25g or 50g) for a group. Default is 25g (see the Transceiver Guide for further detail). Configures transceiver speed (10g or 25g) for a group. Default is 25g (see the Transceiver Guide for further detail). On 8325 Switch Series: ■ 10g allows 1Gbps or 10Gbps transceivers only. ■ 25g allows 25Gbps transceivers only. On 8360 Switch Series: ■ 25g allows 1Gbps, 10Gbps or 25Gbps transceivers only. ■ 50g allows 50Gbps transceivers only. NOTE: On (8360) JL717C and JL719C: ■ 10g allows 1Gbps and 10Gbps transceivers only. ■ 25g allows 25Gbps transceivers only.

Examples

Configuring interface group 1 to allow 10Gbps and slower transceivers:

```
switch(config)# system interface-group 1 speed 10g
Changing the group speed will disable all member interfaces that do not match the
new speed.

Continue (y/n)? y
```

Configuring interface group 1 on line-module 1/1 to allow 10Gbps and slower transceivers:

```
switch(config)# system interface-group 1 line-module 1/1 speed 10g  
Changing the group speed will disable all member interfaces that do not match the  
new speed.  
  
Continue (y/n)? y
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
8325 8360	Operator (>) or Manager (#)	Administrators or local user group members with execution rights for this command.

A subinterface is a virtual interface created by dividing one physical interface into multiple logical interfaces. Subinterfaces use the parent physical interface for sending and receiving data.

Supported features

The following features are supported on L3 subinterfaces:

- RoP, L3 LAG and Hydra interface (split cable) support
- IPv4/IPv6 addressing
- ARP/ND
- Static unicast routing (IPv4/IPv6)
- Unicast routing (IPv4/IPv6) - OSPF and VRRP
- Unicast routing (IPv4/IPv6) - BGP and IVRL
- IPv4/IPv6 multicast routing (IGMP and PIM)
- Ingress ACLs and Ingress Policies
- MTU (maximum transmission unit)
- L3 counters
- VSX keep alive links
- SNMP read
- REST support

Configuring subinterfaces



- Subinterfaces can be configured for physical ports, split children of physical ports and L3 LAG interfaces.
- An L3 interface with subinterfaces must be attached to the default VRF.
- Subinterfaces on multiple ports can be assigned the same VLAN ID (there is no bridging between subinterfaces or between subinterfaces and SVIs). Each subinterface is considered to be in a separate bridge domain.
- The parent interface's IP MTU (maximum transmission unit) can be equal to or greater than the value configured on the child subinterface.

Procedure

One router with one physical interface needs to be connected to two IP networks:

1. Create two subinterfaces within the physical interface.
2. Assign each subinterface an IP address within each subnet.
3. Route packets between the two subnets.


Limitations

- Subinterfaces can only be configured on L3 ports with routing enabled.
- A subinterface cannot be a member of a LAG.
- An L3 interface with subinterfaces cannot be a member of a LAG.
- An L3 interface with subinterfaces cannot be used for L3 services (for example IP address configuration is not supported on an L3 interface if the interface is configured with subinterfaces).
- On physical interfaces, each subinterface must have a unique encapsulation ID.



Subinterface applications use VLAN context group selectors because they are matched on the subinterface's internal VLAN number in hardware. For example, if one of the "Ingress VLAN" context group selectors is allocated (due to one or more MAC ACLs applied to VLANs on ingress), it can be shared with one or more MAC ACLs applied to subinterfaces on ingress.

Subinterface in a router-on-a-stick deployment

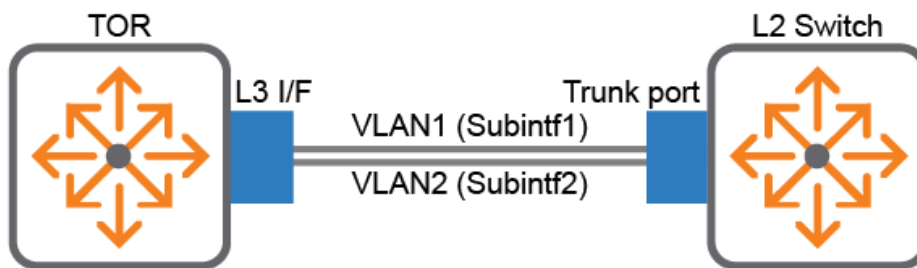

- Top-of-rack switch/router with an L3 interface connected to the trunk port of an L2 switch.
- Routing tables configured to forward outgoing traffic through a subinterface while applying a VLAN ID tag.
- All outgoing traffic from the L3 interface is tagged with a VLAN ID which enables the switch to forward traffic through different VLANs.

Subinterface commands

encapsulation dot1q

```
encapsulation dot1q <VLAN-ID>
no encapsulation dot1q <VLAN-ID>
```

Description

Configures 802.1Q encapsulation on a subinterface.

The `no` form of this command removes 802.1Q encapsulation on a subinterface.

Parameter	Description
<VLAN-ID>	Specifies encapsulation VLAN ID. Range 1 to 4094.

Usage

- Associates an 802.1Q VLAN ID with a subinterface.

Examples

Configuring 802.1Q encapsulation on a subinterface:

```
switch(config)# interface 1/1/1.201
switch(config-subif)# encapsulation dot1q 10
```

Removing 802.1Q encapsulation on a subinterface:

```
switch(config-subif)# no encapsulation dot1q 10
```

Command History

Release	Modification
10.08	Command introduced

Command Information

Platforms	Command context	Authority
8360	config-subif	Administrators or local user group members with execution rights for this command.

interface

```
interface <IFNAME>.<ID>
no interface <IFNAME>.<ID>
```

```
interface lag <LAGNUM>.<ID>
no interface lag <LAGNUM>.<ID>
```

Description

Creates a subinterface on an L3 interface and enters subinterface configuration mode. The subinterface name consists of the parent interface name (for example, 1/1/1) followed by a period and a unique ID number.

The `no` form of these commands deletes a subinterface from an L3 interface.

Parameter	Description
<IFNAME>	Specifies L3 interface name.
<ID>	Specifies subinterface ID. Range 1 to 4094.
<LAGNUM>	Specifies L3 LAG interface number.

Usage

- To create a LAG subinterface, parent LAG must exist before creating the subinterface.

Examples

Creating a subinterface on L3 interface 1/1/1.201 and entering subinterface configuration mode:

```
switch(config)# interface 1/1/1.201
switch(config-subif)#
```

Deleting subinterface on L3 interface 1/1/1.201:

```
switch(config)# no interface 1/1/1.201
```

Creating a subinterface on an L3 LAG port and entering subinterface configuration mode:

```
switch(config)# interface lag 1.201
switch(config-subif)#
```

Deleting subinterface on an L3 LAG port :

```
switch(config)# no interface lag 1.201
```

Command History

Release	Modification
10.08	Command introduced

Command Information

Platforms	Command context	Authority
8360	config	Administrators or local user group members with execution rights for this command.

show capacities subinterface

show capacities subinterface

Description

Displays maximum subinterface capacity.

Examples

Showing maximum subinterface capacity:

```
switch# show capacities subinterface

System Capacities: Filter Subinterface
Capacities Name                                     Value
-----
Maximum number of LAG subinterfaces for the entire system      256
Maximum number of LAG members when the LAG has subinterfaces    4
Maximum number of normal subinterfaces for the entire system    1024
Maximum number of subinterface resources for the entire system (normal+(4*LAG) 1024
```

Command History

Release	Modification
10.08	Command introduced

Command Information

Platforms	Command context	Authority
8360	Operator (>) or Manager (#)	Auditors or Administrators or local user group members with execution rights for this command. Auditors can execute this command from the auditor context (auditor>) only.

show interface

```
show interface <IFNAME>.<ID>
show interface lag <LAGNUM>.<ID>
```

Description

Displays subinterface configuration.

Parameter	Description
<IFNAME>	Specifies L3 interface name.
<ID>	Specifies subinterface ID. Range 1 to 4094.
<LAGNUM>	Specifies L3 LAG interface number.

Examples

Showing subinterface configuration:

```
switch# show interface 1/1/1.201
Interface 1/1/1.201 is down
Admin state is up
State information: Waiting for link
Description:
Hardware: Ethernet, MAC Address: 38:21:c7:5a:80:80
Encapsulation dot1Q ID: 10
Statistic                RX                TX                Total
-----
L3 Packets                0                0                0
L3 Bytes                  0                0                0
```

Showing subinterface LAG configuration:

```
switch# show interface lag1.1
Interface lag1.1 is down
Admin state is up
Description:
Hardware: Ethernet, MAC Address: 38:21:c7:5a:80:80
Encapsulation dot1Q ID: 2
Statistic                RX                TX                Total
-----
```


L3 Packets	0	0	0
L3 Bytes	0	0	0

Command History

Release	Modification
10.08	Command introduced

Command Information

Platforms	Command context	Authority
8360	Operator (>) or Manager (#)	Auditors or Administrators or local user group members with execution rights for this command. Auditors can execute this command from the auditor context (auditor>) only.

The source IP address is determined by the system and is typically the IP address of the outgoing interface in the routing table. However, routing switches may have multiple routing interfaces and outgoing packets can potentially be sent by different paths at different times. This results in different source IP addresses.

AOS-CX provides a configuration model that allows the selection of an IP address to use as the source address for all outgoing traffic. This allows unique identification of the software application on the server site regardless of which local interface has been used to reach the destination server. The source interface selection supports selecting an IP address or interface name.



If the source interface and source IP are configured, Source IP will have priority.

Source-interface selection commands

ip source-interface (protocol <ip-addr>)

```
ip source-interface <PROTOCOL> <IP-ADDR> [vrf <VRF-NAME>]
no ip source-interface <PROTOCOL> <IP-ADDR> [vrf <VRF-NAME>]
```

Description

Configures the source-interface IPv4 address to use for the specified protocol. If a VRF is not given, the default VRF applies. If no interface option is given, the device floods through interfaces and VRFs to reach Aruba Central. Whichever reaches Aruba Central will be picked automatically.

The `no` form of this command removes all configurations.

Parameter	Description
<PROTOCOL>	Specifies the protocol to configure. <code>all</code> Selects all protocols that can be configured by this command. <code>central</code> Selects Aruba Central. <code>dhcp_relay</code> Selects DHCP relay. <code>dns</code> Selects DNS. <code>ntp</code> Selects NTP. <code>radius</code> Selects radius. <code>sflow</code> Selects sFlow.

Parameter	Description
	simplivity Selects simplivity. syslog Selects syslog. tacacs Selects TACACS. tftp Selects TFTP.
<IP-ADDR>	Specifies the IPv4 address.
vrf <VRF-NAME>	Specifies the VRF name.

Examples

Configuring source-interface IPv4 10.1.1.1 to use for the TFTP protocol:

```
switch(config)# ip source-interface tftp 10.1.1.1
```

Configuring source-interface IPv4 10.1.1.2 to use for the TFTP protocol on VRF green :

```
switch(config)# ip source-interface tftp 10.1.1.2 vrf green
```

Removing source-interface IPv4 10.1.1.1 configuration for the TFTP protocol:

```
switch(config)# no ip source-interface tftp 10.1.1.1
```

Removing source-interface IPv4 10.1.1.2 configuration for TFTP protocol on VRF green:

```
switch(config)# no ip source-interface tftp 10.1.1.2 vrf green
```

Configuring source-interface IPv4 10.1.1.1 to use for the DNS protocol:

```
switch(config)# ip source-interface dns 10.1.1.1
```

Configuring source-interface IPv4 10.1.1.2 to use for the DNS protocol on VRF green :

```
switch(config)# ip source-interface dns 10.1.1.2 vrf green
```

Removing source-interface IPv4 10.1.1.1 configuration for the DNS protocol:

```
switch(config)# no ip source-interface tftp 10.1.1.1
```

Removing source-interface IPv4 10.1.1.2 configuration for the DNS protocol on VRF green:

```
switch(config)# no ip source-interface dns 10.1.1.2 vrf green
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

ip source-interface

```
ip source-interface <PROTOCOL> interface <IFNAME> [vrf <VRF-NAME>]  
no ip source-interface <PROTOCOL> interface <IFNAME> [vrf <VRF-NAME>]
```

Description

Configures the IPv4 source-interface interface to use for the specified protocol. If a VRF is not given, the default VRF applies.

The `no` form of this command removes the specified configuration.

Parameter	Description
<PROTOCOL>	Specifies the protocol to configure. <code>all</code> Selects all protocols that can be configured by this command. <code>central</code> Selects Aruba Central. <code>dhcp_relay</code> Selects DHCP relay. <code>dns</code> Selects DNS. <code>ntp</code> Selects NTP. <code>radius</code> Selects radius. <code>sflow</code> Selects sFlow. <code>syslog</code> Selects syslog. <code>tacacs</code> Selects TACACS. <code>tftp</code> Selects TFTP.

Parameter	Description
vrf <VRF-NAME>	Specifies the VRF name.
<IFNAME>	Specifies the interface name.

Examples

Configuring IPv4 source-interface interface 1/1/1 to use for the TFTP protocol:

```
switch(config)# ip source-interface tftp interface 1/1/1
```

Configuring IPv4 source-interface interface 1/1/2 to use for the TFTP protocol on VRF green :

```
switch(config)# ip source-interface tftp interface 1/1/2 vrf green
```

Removing IPv4 source-interface 1/1/1 configuration for the TFTP protocol:

```
switch(config)# no ip source-interface tftp interface 1/1/1
```

Removing source-interface interface 1/1/2 configuration for TFTP protocol on VRF green:

```
switch(config)# no ip source-interface tftp interface 1/1/2 vrf green
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

ipv6 source-interface

```
ipv6 source-interface <PROTOCOL> <IPV6-ADDR> [vrf <VRF-NAME>]
no source-interface <PROTOCOL> <IPV6-ADDR> [vrf <VRF-NAME>]
```

Description

Configures the source-interface IPv6 address to use for the specified protocol. If a VRF is not given, the default VRF applies.

The **no** form of this command removes the specified protocol configuration.

Parameter	Description
<PROTOCOL>	Specifies the protocol to configure. ■ all:Selects all protocols supported by this command. ■ central:Selects Aruba Central. ■ ntp:Selects NTP. ■ radius:Selects radius. ■ sflow:Selects sFlow. ■ syslog:Selects syslog. ■ tacacs:Selects TACACS. ■ tftp:Selects TFTP.
<IPv6-ADDR>	Specifies the IPv6 address.
vrf <VRF-NAME>	Specifies the VRF name.

Examples

Configuring source-interface IPv6 1111:2222 to use for the TFTP protocol:

```
switch(config)# ipv6 source-interface tftp 1111:2222
```

Configuring source-interface IPv6 1111:3333 to use for TFTP protocol on VRF green :

```
switch(config)# ipv6 source-interface tftp 1111:3333 vrf green
```

Removing source-interface IPv6 1111:2222 configuration for TFTP protocol:

```
switch(config)# no ipv6 source-interface tftp 1111:2222
```

Removing source-interface IPv6 1111:3333 configuration for TFTP protocol on VRF green:

```
switch(config)# no ipv6 source-interface tftp 1111:3333 vrf green
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

ipv6 source-interface

```
ipv6 source-interface <PROTOCOL> interface <IFNAME> [vrf <VRF-NAME>]  
no ipv6 source-interface <PROTOCOL> interface <IFNAME> [vrf <VRF-NAME>]
```

Description

Configures the IPv6 source-interface interface to use for the specified protocol. If a VRF is not given, the default VRF applies.

The `no` form of this command removes all configurations.

Parameter	Description
<PROTOCOL>	Specifies the protocol to configure. all Selects all protocols supported by this command. central Selects Aruba Central. ntp Selects NTP. radius Selects radius. sflow Selects sFlow. syslog Selects syslog. tacacs Selects TACACS. tftp Selects TFTP.
<IFNAME>	Specifies the interface name.
vrf <VRF-NAME>	Specifies the VRF name.

<IFNAME>

Specifies the interface name.

vrf <VRF-NAME>

Specifies the VRF name.

Examples

Configuring IPv6 source-interface interface 1/1/1 to use for the TFTP protocol :

```
switch(config)# ipv6 source-interface tftp interface 1/1/1
```

Configuring IPv6 source-interface interface 1/1/2 to use for the TFTP protocol on VRF green :

```
switch(config)# ipv6 source-interface tftp interface 1/1/2 vrf green
```

Removing IPv6 source-interface interface 1/1/1 configuration for the TFTP protocol:

```
switch(config)# no ipv6 source-interface tftp interface 1/1/1
```

Removing IPv6 source-interface interface 1/1/2 configuration for the TFTP protocol on VRF green:

```
switch(config)# no ipv6 source-interface tftp interface 1/1/2 vrf green
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

show ip source-interface

```
show ip source-interface <PROTOCOL> [vrf <VRF-NAME> | all-vrfs]
```

Description

Displays the source interface information for all VRFs or a specific VRF.

If a VRF is not specified, the default is displayed.

Parameter	Description
<PROTOCOL>	Specifies the protocol to show. all Shows the source interface configuration for all other protocols. central Shows the source interface configuration for Aruba Central. dhcp relay Shows the source interface configuration for DHCP relay. dns Shows the source interface configuration for DNS. ntp Shows the source interface configuration for NTP. radius Shows the source interface configuration for radius. sflow Shows the source interface configuration for sFlow. syslog Shows the source interface configuration for syslog. tacacs Shows the source interface configuration for TACACS. tftp Shows the source interface configuration for TFTP.

Parameter	Description
<code>vrf <VRF-NAME></code>	Specifies the VRF name.
<code>all-vrfs</code>	Shows the source interface configuration for all VRFs.

Examples

Displaying all source-interface protocol configurations for VRF red:

```
switch# show ip source-interface all vrf red
Source-interface Configuration Information
-----
Protocol      Src-Interface      Src-IP      VRF
-----
all           1/1/1              red
switch#
```

Displaying all source-interface protocol configurations for default VRF:

```
switch# show ip source-interface all
Source-interface Configuration Information
-----
Protocol      Src-Interface      Src-IP      VRF
-----
all           1.1.1.1            default
switch#
```

Displaying all source-interface protocol configurations for all VRFs:

```
switch# show ip source-interface all all-vrfs
Source-interface Configuration Information
-----
Protocol      Src-Interface      Src-IP      VRF
-----
all           2.2.2.2            all-vrfs
all           1.1.1.1            default
all           1/1/1/1            red
switch#
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

show ipv6 source-interface

```
show ipv6 source-interface <PROTOCOL> [detail] [vrf <VRF-NAME> | all-vrfs]
```

Description

Displays the IPV6 source interface information configured in the router for all VRFs or a specific VRF. If a VRF is not specified, the default is displayed.

Parameter	Description
<PROTOCOL>	Specifies the protocol to show. all Shows the source interface configuration for all other protocols. central Shows the source interface configuration for Aruba Central. ntp Shows the source interface configuration for NTP. radius Shows the source interface configuration for radius. sflow Shows the source interface configuration for sFlow. syslog Shows the source interface configuration for syslog. tacacs Shows the source interface configuration for TACACS. tftp Shows the source interface configuration for TFTP.
vrf <VRF-NAME>	Specifies the VRF name.
all-vrfs	Shows the source interface configuration for all VRF.

Examples

Displaying all IPv6 source-interface protocol configurations for default VRF:

```
switch# show ipv6 source-interface all
Source-interface Configuration Information
-----
Protocol      Src-Interface      Src-IP      VRF
-----
all           1111:2222          default
switch#
```

Displaying all IPv6 source-interface protocol configuration for VRF red:

```
switch# show ipv6 source-interface all vrf red
Source-interface Configuration Information
-----
Protocol      Src-Interface      Src-IP      VRF
-----
all           1/1/1              red
switch#
```

Displaying all IPv6 source-interface protocol configurations for all VRFs:

```
switch# show ipv6 source-interface all all-vrfs
Source-interface Configuration Information
-----
Protocol          Src-Interface      Src-IP              VRF
-----
all               1/1/1             2.2.2.2:3.3.3.3    all-vrfs
all               1/1/1             1.1.1.1:2.2.2.2    default
all               1/1/1             2::2                red
switch#
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

show running-config

show running-config

Description

Displays the current running configuration.

Examples

Displaying the running configuration (only items of interest to source interface selection are shown in this example output command):



Aruba Central is the priority agent. If no command is specified for ip source-interface, Central will choose the command automatically if it is reachable on any of the known ports.

```
switch# show running-config
vrf green
ip source-interface tftp interface 1/1/2 vrf green
ip source-interface radius interface 1/1/2 vrf green
ip source-interface ntp interface 1/1/2 vrf green
ip source-interface tacacs interface 1/1/2 vrf green
ip source-interface dns interface 1/1/2 vrf green
ip source-interface central interface 1/1/2 vrf green
ip source-interface all interface 1/1/2 vrf green
ipv6 source-interface tftp 2222::3333 vrf green
ipv6 source-interface radius 2222::3333 vrf green
ipv6 source-interface ntp 2222::3333 vrf green
ipv6 source-interface tacacs 2222::3333 vrf green
ipv6 source-interface central 2222::3333 vrf green
```

```

ipv6 source-interface all 2222::3333 vrf green
ip source-interface tftp 10.20.3.1
ip source-interface radius 10.20.3.1
ip source-interface ntp 10.20.3.1
ip source-interface tacacs 10.20.3.1
ip source-interface dns 10.20.3.1
ip source-interface central 10.20.3.1
ip source-interface all 10.20.3.1
interface 1/1/1
    no shutdown
    ip address 10.20.3.1/24
interface 1/1/2
    vrf attach green
    ip address 20.1.1.1/24
    ipv6 address 2222::3333/64
interface 1/1/45
    no shutdown
    ip address 100.1.0.1/24
    ipv6 address 1111::2222/64
ip route 100.2.0.0/24 10.20.3.2
switch#

```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

VLANs are primarily used to provide network segmentation at layer 2. VLANs enable the grouping of users by logical function instead of physical location. They make managing bandwidth usage within networks possible by:

- Allowing grouping of high-bandwidth users on low-traffic segments
- Organizing users from different LAN segments according to their need for common resources and individual protocols
- Improving traffic control at the edge of networks by separating traffic of different protocol types.
- Enhancing network security by creating subnets to control in-band access to specific network resources

VLANs are generally assigned on an organizational basis rather than on a physical basis. For example, a network administrator could assign all workstations and servers used by a particular workgroup to the same VLAN, regardless of their physical locations.

Hosts in the same VLAN can directly communicate with one another. A router or a Layer 3 switch is required for hosts in different VLANs to communicate with one another.

VLANs help reduce bandwidth waste, improve LAN security, and enable network administrators to address issues such as scalability and network management.



Refer to the Layer 2 Bridging Guide for VLAN configuration and commands.



Applies only to the Aruba 8360 Switch Series (not supported on JL706A and JL707A).

Precision Time Protocol (PTP) is defined in the IEEE 1588 standard (Standard for a Precision Clock Synchronization Protocol for Networked Measurement and Control Systems). PTP synchronizes clocks in packet-based networks that include distributed device clocks of varying precision and stability. On a local area network, it achieves clock accuracy in the sub-microsecond range, making it suitable for measurement and control systems. PTP is currently employed to synchronize financial transactions, mobile phone tower transmissions, and networks that require precise timing but lack access to satellite navigation signals.

PTP clocks

A PTP network consists of PTP-enabled devices and devices that are not using PTP. The PTP-enabled devices typically consist of clock-aware devices such as ordinary clocks (which are usually single-port end-stations) and one or more grandsource clocks, transparent clocks, and boundary clocks (multi-port L2/L3 time-aware devices).

The basic clock node types include:

Grandsource clock—A grandsource clock is the primary source of time for the downstream devices. This is a device with greater clock quality which may have direct access to a reference clock.

Ordinary clock—An ordinary clock is a single port end-station (which can include a GM as the originating PTP time-aware device).

Transparent clock—A transparent clock can have multiple network port connections but it does not act as either a clock-source or a clock-sink. Rather, it updates the correction field within the PTP event messages (SYNC/FOLLOW_UP, DELAY_REQUEST) to compensate for the transit time delay. Transparent clocks compensate for switch latency and jitter, making network devices appear transparent to other PTP time-aware devices. They help in reducing the end-station time errors and improving synchronization quality. But a transparent clock itself does not synchronize its time. An **End-to-End (E2E) transparent clock** updates the `correctionField` field in the PTP messages with the total time the PTP packet was resident in the network device. This is called resident time correction.

Boundary clock—A boundary clock implements a local PTP clock where one port acts as clock-sink which synchronizes itself with the clock-source while other ports act as clock-source ports to its downstream clock-aware devices. The clock-source port is used to redistribute the clock to another set of clock-sinks. Boundary clocks can also use E2E and can be configured based on the selected PTP profile. The best clock source algorithm is used by the boundary clock to select the best or most precise configured acceptable clock-source clock.

Based on hardware capability, the switch supports either boundary clock, transparent clock, or both modes.

Best clock-source algorithm

The best clock-source algorithm helps in choosing the source of timing on your network. It runs independently on each clock in a domain. This algorithm specifies the way that a local clock can determine which of all the clocks (including itself) is the best. Since it runs continuously, it continually re-adapts to changes in the network or the clocks.

Each clock sends a message to the network describing its own properties. The best clock-source algorithm running in the clock compares these properties to determine the best clock.

The comparisons of attributes happens with the following precedence :


1. Priority1: user configurable absolute priority
2. ClockClass: Attribute defining a clock's TAI traceability
3. Time Source: Attribute defining the accuracy of a clock
4. Variance: An attribute defining the precision of a clock
5. Priority2: This is a user configurable designation that provides finer grained ordering among otherwise equivalent clocks
6. Clock Identity : A tiebreaker consisting of the MAC address of the clock

In addition to this precedence order, the distance measured by the number of boundary clocks between the local clock and the best clock is used when two Announce messages reflect the same best clock. The distance is indicated in the stepsRemoved field of announce messages.

PTP network diagram

The following diagram illustrates how the various PTP clock nodes are connected and how the timing information flows from the origin to the end-stations to achieve the time synchronization. This diagram depicts the PTP clocks in a source-sink hierarchy.

Figure 1 Example PTP network with clocks in a source-sink hierarchy

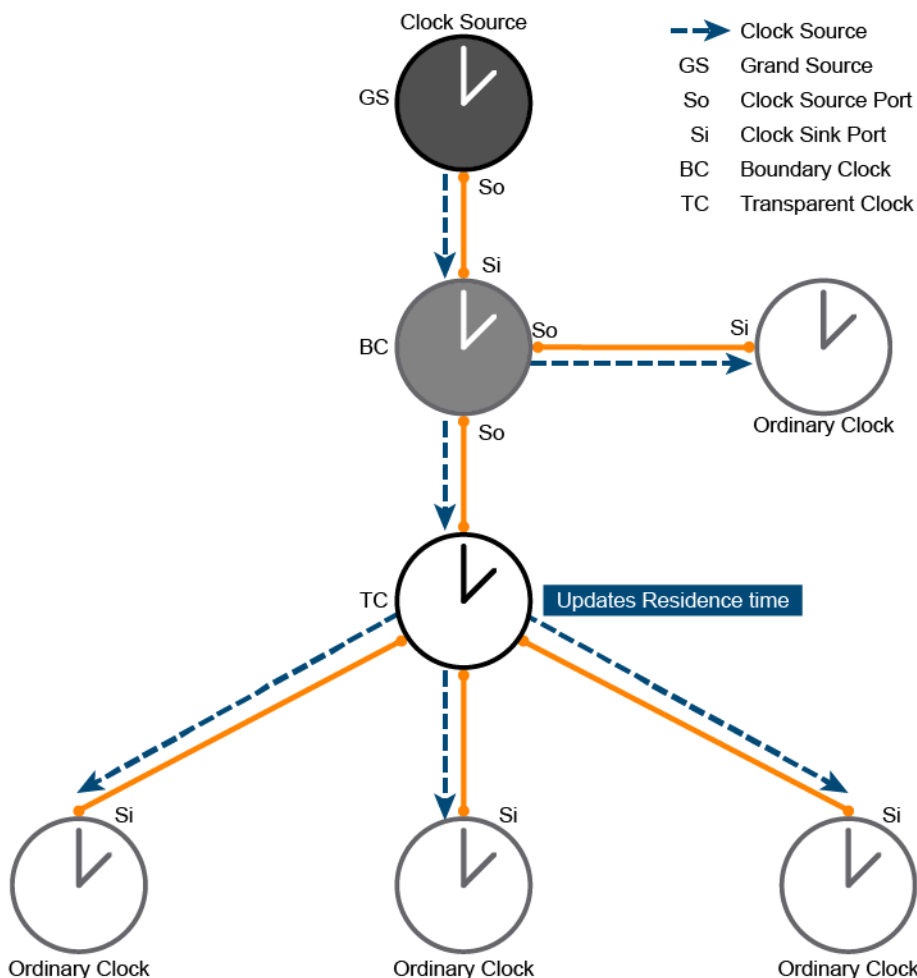

Configuration examples

Configuring a boundary clock

Follow these steps to configure the end-to-end boundary clock:

1. Create the PTP context using the specified profile.

```
switch(config)# ptp profile 1588v2  
switch(config-ptp)#
```

2. Configure the mandatory commands:
 - a. Configure the PTP mode.
 - b. Configure the PTP clock-step mode.
 - c. Configure the transport protocol.
 - d. Configure PTP globally.

```
switch(config-ptp)# mode boundary end-to-end  
switch(config-ptp)# clock-step one-step  
switch(config-ptp)# transport-protocol ethernet  
switch(config-ptp)# enable
```

3. Configure the optional commands which participate in the best clock source algorithm:
 - a. Configure priority1 value.
 - b. Configure priority2 value.

```
switch(config-ptp)# priority1 1  
switch(config-ptp)# priority2 10
```

4. Enable PTP on the connected interfaces:

```
switch(config)# int 1/1/1  
switch(config-if)# ptp enable  
switch(config-if)# int 1/1/2  
switch(config-if)# ptp enable
```

Optional: changing packet interval rate for various PTP parameters:

```
switch(config-if)# ptp sync-interval 1588v2 1  
switch(config-if)# ptp announce-interval 1588v2 -5  
switch(config-if)# ptp announce-timeout 1588v2 4  
switch(config-if)# ptp delay-req-interval 1588v2 -3
```

Configuring an end-to-end transparent clock

Follow these steps to configure the E2E transparent clock:

1. Configure the mandatory commands:
 - a. Configure the PTP mode and the delay mechanism.
 - b. Configure the PTP clock-step mode.

- c. Configure the transport protocol.
- d. Configure PTP globally.

```
Switch config:
switch(config)# ptp profile 1588v2
switch(config-ptp)# mode transparent end-to-end
switch(config-ptp)# clock-step one-step
switch(config-ptp)# transport-protocol ethernet
switch(config-ptp)# enable
```

2. Enable PTP on the connected interfaces :

```
switch(config)# int 1/1/1
switch(config-if)# ptp enable
switch(config-if)# int 1/1/2
switch(config-if)# ptp enable
```

Hardware considerations

There is no PTP support for breakout cables. QSA transceivers and sub-interfaces are not supported. PTP Clients connected to 1Gbps XCVR's on 8360 Switch acting as PTP Boundary Clock/Transparent clock will have a slightly higher Offset when there is background data traffic between clients. This is a known limitation specifically to Clients connected only on 1Gbps links on 8360 platform. Client's connected on higher speed links (10/25/40/50/100) Gbps won't have any impact.

PTP commands

clock-domain

```
clock-domain <DOMAIN-NUMBER>
no clock-domain
```

Description

Configures the PTP clock domain to a specified value.

The `no` form of this command removes the PTP domain configuration of the PTP clock.

Parameter	Description
<code><DOMAIN-NUMBER></code>	Sets the PTP clock domain. Range: 0 to 255. Value configurable subject to limits established by the PTP profile.

Usage

- The one-step end-to-end transparent clock works across domains.
- For boundary clocks, the clock-domain has to be identical with the domain used in the network.
- All PTP devices must be within same domain to be able to sync with each other.
- This command is only enabled in the PTP profile context.

Examples

Entering the PTP profile context and setting the PTP clock domain value:

```
switch(config)# ptp profile aes-r16
switch(config-ptp)#
switch(config-ptp)#clock-domain 4
switch(config-ptp)#
```

Removing the PTP clock domain value:

```
switch(config-ptp)# no clock-domain
switch(config-ptp)#
```

Command History

Release	Modification
10.08	Command introduced.

Command Information

Platforms	Command context	Authority
8360	config-ptp	Administrators or local user group members with execution rights for this command.

clock-step

```
clock-step {one-step|two-step}
no clock-step
```

Description

Configures the clock step mode that determines whether the egress-time information is sent along with the SYNC message (one-step), or a subsequent follow-up message (two-step) with the egress timestamp of the previously sent SYNC message.

The Aruba 8360 Switch Series supports both one-step and two-step modes for boundary clocks. For transparent clocks, only one-step mode is supported.

The `no` form of this command removes the PTP clock-step configuration of the PTP clock.

Parameter	Description
one-step	Sets the PTP clock-step mode to one-step messaging.
two-step	Sets the PTP clock-step mode to two-step messaging.

Usage

- Mandatory command to start the PTP clock.
- Both boundary clocks and transparent clocks can inter-operate with different step modes upstream or downstream.
- Two-step mode is currently not supported on the transparent clock.

Example

Setting the clock-step mode to one-step messaging:

```
switch(config-ptp)# clock-step one-step
switch(config-ptp)#
```

Removing the clock-step mode configuration:

```
switch(config-ptp)# no clock-step
switch(config-ptp)#
```

Command History

Release	Modification
10.08	Command introduced.

Command Information

Platforms	Command context	Authority
8360	config-ptp	Administrators or local user group members with execution rights for this command.

clear ptp statistics

```
clear ptp statistics [<IFNAME>]
```

Description

Clears PTP counters for the given interface.

Parameter	Description
<IFNAME>	Optional: Specifies the interface name.

Examples

Clearing PTP counters for the given interface:

```
switch# clear ptp statistics 1/1/8
switch# clear ptp statistics lag1
switch# clear ptp statistics
```

Command History

Release	Modification
10.08	Command introduced.

Command Information

Platforms	Command context	Authority
8360	Manager (#)	Administrators or local user group members with execution rights for this command.

enable

enable
no enable

Description

Enables the PTP profile globally. However, the PTP clock is started only when all the mandatory commands are set.

The **no** form of this command disables the PTP profile globally.

Usage

Mandatory command to start the PTP clock.

Examples

Enabling the PTP profile:

```
switch(config)# ptp profile 1588v2
switch(config-ptp)# enable
```

Disabling the PTP profile:

```
switch(config)# ptp profile 1588v2
switch(config-ptp)# no enable
```

Command History

Release	Modification
10.08	Command introduced.

Command Information

Platforms	Command context	Authority
8360	config-ptp	Administrators or local user group members with execution rights for this command.

ip source-interface

```
ip source-interface {ptp | all} interface <IFNAME> [vrf <VRF-NAME>]
ip source-interface {ptp | all} <IPV4-ADDR> [vrf <VRF-NAME>]
no ip source-interface {ptp | all} interface <IFNAME> [vrf <VRF-NAME>]
no ip source-interface {ptp | all} <IPV4-ADDR> [vrf <VRF-NAME>]
```

Description

Configures the source IP address to be used when sending PTP messages. Use the `ptp` keyword to set source IP address specific to the PTP feature. If the feature-specific configuration is not available, the source IP address corresponding to the `all` option will be used.

The `no` form of this command removes the configuration of the source IP address used by the PTP feature.

Parameter	Description
<code>ptp</code>	Selects the PTP protocol.
<code>all</code>	Selects all protocols that can be configured by this command.
<code>interface <IF-NAME></code>	Specifies the name of the interface from which the source IP address is obtained. The interface must have a valid IP address assigned to it. If the interface has both a primary and secondary IP address, the primary IP address is used.
<code>vrf <VRF-NAME></code>	Specifies the VRF name.
<code><IPv4-ADDR></code>	Specifies the source IPv4 address to be used. The IP address must be defined on the switch, and it must exist on the specified VRF (which is the default VRF, if the <code>vrf</code> option is not used). Specify the address in IPv4 format (x.x.x.x), where x is a decimal number from 0 to 255.

Usage

- This command must be configured on the switch when PTP is enabled on VLAN trunk or access ports, and the transport protocol is IPv4.
- In the current version of PTP, only the default VRF is supported.
- This command is not applicable to the end-to-end transparent clock.

Examples

Configuring the source IP address for sending PTP messages:

```
switch(config)# ip source-interface ptp interface 1/1/1
switch(config)# ip source-interface ptp 10.10.10.1
switch(config)# ip source-interface ptp interface vlan10
```

Command History

Release	Modification
10.08	Command introduced.

Command Information

Platforms	Command context	Authority
8360	<code>config</code>	Administrators or local user group members with execution rights for this command.

mode

```
mode boundary end-to-end
mode transparent end-to-end
no mode
```

Description

Configures the PTP clock mode in which the device will operate. The device can be in any single specified mode when configured. The device can operate in end-to-end boundary clock mode or in an end-to-end transparent clock mode. A device in transparent-clock mode does not synchronize or syntonize itself to a clock-source.

The `no` form of this command removes the PTP clock mode configuration on the switch.

Parameter	Description
boundary	Selects the boundary mode.
transparent	Selects the transparent mode.
end-to-end	Sets the delay-request mechanism.

Usage

Mandatory command to start the PTP clock.

Examples

Configuring PTP transparent end-to-end clock mode:

```
switch(config)# ptp profile 1588v2
switch(config-ptp)# mode transparent end-to-end
switch(config-ptp)#
```

Configuring PTP boundary end-to-end clock mode:

```
switch(config)# ptp profile 1588v2
switch(config-ptp)# mode boundary end-to-end
switch(config-ptp)#
```

Removing PTP clock mode configuration:

```
switch(config-ptp)# no mode
switch(config-ptp)#
```

Command History

Release	Modification
10.08	Command introduced.

Command Information

Platforms	Command context	Authority
8360	config-ptp	Administrators or local user group members with execution rights for this command.

priority1

priority1 <PRIORITY>
no priority1

Description

Configures the PTP clock `priority1` value of the device. This value is operational when the device is in boundary clock mode and participating in the Best Clock Source Algorithm (BMCA). This value is used to indicate priority to its downstream clock-aware devices.

The `no` form of this command removes the PTP `priority1` configuration of the PTP clock and sets it to the default value of 128.

Parameter	Description
<PRIORITY>	Sets the priority value. Default 128.

Usage

This value can be configured only for the boundary clock.

Examples

Configuring PTP priority1 value:

```
switch(config-ptp) # priority1 129
switch(config-ptp) #
```

Removing PTP priority1 configuration:

```
switch(config-ptp) # no priority1
switch(config-ptp) #
```

Command History

Release	Modification
10.08	Command introduced.

Command Information

Platforms	Command context	Authority
8360	config-ptp	Administrators or local user group members with execution rights for this command.

priority2

```
priority2 <PRIORITY>
no priority2 <PRIORITY>
```

Description

Configures the PTP clock `priority2` value of the device. This value is operational when the device is in boundary clock mode and participating in the Best Clock Source Algorithm (BMCA). This value is used to indicate priority to its downstream clock-aware devices.

The `no` form of this command removes the PTP `priority2` configuration of the PTP clock and sets it to the default value of 128.

Parameter	Description
<PRIORITY>	Sets the priority value. Default 128.

Usage

This value can be configured only for the boundary clock.

Examples

Configuring PTP `priority1` value:

```
switch(config-ptp) # priority2 129
switch(config-ptp) #
```

Removing PTP `priority2` configuration:

```
switch(config-ptp) # no priority2
switch(config-ptp) #
```

Command History

Release	Modification
10.08	Command introduced.

Command Information

Platforms	Command context	Authority
8360	config-ptp	Administrators or local user group members with execution rights for this command.

ptp profile

```
ptp profile {<PROFILE NAME>}
no PTP profile
```

Description

Enters the PTP context to configure the PTP profile in which the device will operate.

Configure PTP profile before configuring mode or other profile-specific parameters. The device can be operating in any one profile at a given point of time. The `no` form of this command removes the PTP profile

configuration in which the device will operate. This command clears the PTP profile and all parameters related to that profile.

Parameter	Description
<i><PROFILE NAME></i>	Specifies the profile to be used. Profiles include: ■ 1588v2: Specifies the IEEE 1588-2008 profile to be used. ■ aes-r16: Specifies the IEEE AES-R16-2016 profile to be used. ■ aes67: Specifies the IEEE AES67 profile to be used. ■ smpte: Specifies the IEEE SMPTE-ST-2059-2 profile to be used.

Usage

Configure PTP profile before configuring mode or other profile-specific parameters.

Example

Configuring PTP profiles:

```
switch(config)# ptp profile 1588v2
switch(config-ptp)#
```

Configuring more than one PTP profile:

```
switch(config)# ptp profile 1588v2
switch(config-ptp)# exit
switch(config)# ptp profile smpte
switch(config-ptp)#
The existing profile must be removed using the 'no ptp profile' command before
configuring a different profile.
```

Removing the PTP profile:

```
switch(config-ptp)# no ptp profile
switch(config-ptp)#
```

Command History

Release	Modification
10.08	Command introduced.

Command Information

Platforms	Command context	Authority
8360	config	Administrators or local user group members with execution rights for this command.

ptp announce-interval

```
ptp announce-interval {1588v2 | aes67 | aes-r16 | smpte} <LOG-SECONDS>
no ptp announce-interval {1588v2 | aes67 | aes-r16 | smpte}
```

Description

Sets the announce message transmit interval on a PTP-enabled interface for a specific PTP profile.

The `no` form of this command removes the announce message transmit interval configuration on a PTP-enabled interface and sets a profile specific default value.

Parameter	Description
1588v2	Specifies the PTP 1588v2 profile timers. Default: 1.
aes67	Specifies the PTP AES67 profile timers. Default: 1.
aes-r16	Specifies the PTP AES-R16 profile timers. Default: 0.
smpTE	Specifies the PTP SMPTE profile timers. Default: 0.
<LOG-SECONDS>	Sets the announce message interval in log seconds.



For the SMPTE profile, the announce interval default value is set to 0 per the SMPTE ST 2059-2 : 2019 Draft recommendation. Users can modify the announce-interval value to '-2' to support the 2015 version of the same standard.

Usage

This value can be configured only for the boundary clock.

Examples

Setting the PTP AES67 profile timers:

```
switch(config)# interface 1/1/1
switch(config-if)# ptp announce-interval aes67 2
switch(config-if)#
```

Removing the PTP AES67 profile timer configuration:

```
switch(config)# interface 1/1/1
switch(config-if)# no ptp announce-interval aes67
switch(config-if)#
```

Command History

Release	Modification
10.08	Command introduced.

Command Information

Platforms	Command context	Authority
8360	config-if	Administrators or local user group members with execution rights for this command.

ptp announce-timeout

```
ptp announce-timeout {1588v2| aes67 | aes-r16 | smpte} <COUNT>  
no ptp announce-timeout {1588v2| aes67 | aes-r16 | smpte}
```

Description

Sets the announce message receipt timeout on a PTP-enabled interface for a specific PTP profile.

The `no` form of this command resets the announce message receipt timeout configuration on a PTP-enabled interface and sets a profile-specific default value.

Parameter	Description
1588v2	Specifies the PTP 1588v2 profile timers. Default: 3.
aes67	Specifies the PTP AES67 profile timers. Default: 3.
aes-r16	Specifies the PTP AES-R16 profile timers. Default: 3.
smpte	Specifies the PTP SMTPE profile timers. Default: 3.
<LOG-SECONDS>	Specifies the number of announcement intervals.

Usage

This value can be configured only for the boundary clock.

Examples

Setting the PTP AES67 profile timer:

```
switch(config)# interface 1/1/1  
switch(config-if)# ptp announce-timeout aes67 4  
switch(config-if)#
```

Resetting the PTP AES67 profile timer:

```
switch(config)# interface 1/1/1  
switch(config-if)# no ptp announce-timeout aes67  
switch(config-if)#
```

Command History

Release	Modification
10.08	Command introduced.

Command Information

Platforms	Command context	Authority
8360	config-if	Administrators or local user group members with execution rights for this command.

ptp delay-req-interval

```
ptp delay-req-interval {1588v2 | aes67 | aes-r16 | smpte} <LOG-SECONDS>  
no ptp delay-req-interval {1588v2 | aes67 | aes-r16 | smpte}
```

Description

Sets the delay_req message transmit interval on a PTP-enabled interface for a specific PTP profile.

The `no` form of this command removes the delay_req message transmit interval configuration on a PTP-enabled interface and sets a profile specific default value.

Parameter	Description
1588v2	Specifies the PTP 1588v2 profile timers. Default 0.
aes67	Specifies the PTP AES67 profile timers. Default 0.
aes-r16	Specifies the PTP AES-R16 profile timers. Default 0.
smpte	Specifies the PTP SMTPE profile timers. Default -3.
<LOG-SECONDS>	Sets the delay_req message interval in log seconds.

Usage

This value can be configured only for the boundary clock.

Examples

Setting the PTP AES67 profile timers:

```
switch(config)# interface 1/1/1  
switch(config-if)# ptp delay-req-interval aes67 1  
switch(config-if)#
```

Removing the PTP AES67 profile timer configuration:

```
switch(config)# interface 1/1/1  
switch(config-if)# no ptp delay-req-interval aes67  
switch(config-if)#
```

Command History

Release	Modification
10.08	Command introduced.

Command Information

Platforms	Command context	Authority
8360	config-if	Administrators or local user group members with execution rights for this command.

ptp enable

ptp enable
no ptp enable

Description

Enables PTP on the interface. The `no` form of this command disables PTP on the interface.

Examples

Enabling PTP on a physical interface:

```
switch(config)# interface 1/1/1  
switch(config-if)# ptp enable  
switch(config-if)#
```

Disabling PTP on the interface context:

```
switch(config)# interface 1/1/1  
switch(config-if)# no ptp enable
```

Command History

Release	Modification
10.08	Command introduced.

Command Information

Platforms	Command context	Authority
8360	config-if	Administrators or local user group members with execution rights for this command.

ptp peer ip

ptp peer ip <IP-ADDRESS>
no ptp peer ip <IP-ADDRESS>

Description

Configures destination IP addresses for the interfaces in unicast transmission. The `no` form of this command removes the PTP destination IP address configuration for the interfaces in unicast transmission.

Parameter	Description
ip <IP-ADDRESS>	Specifies the peer IPv4 address. Syntax: A.B.C.D

Usage

This command has no effect when configured as a transparent clock.

Example

Configuring `ptp peer ip` on the interface:

```
switch(config)# interface 1/1/1
switch(config-if)# ptp peer ip 10.0.0.1
```

Removing `ptp peer ip` on the interface:

```
switch(config-if)# no ptp peer ip 10.0.0.1
```

Command History

Release	Modification
10.08	Command introduced.

Command Information

Platforms	Command context	Authority
8360	config-if	Administrators or local user group members with execution rights for this command.

ptp lag-role

```
ptp lag-role {primary | secondary}
no ptp lag-role
```

Description

Configures the PTP role for the member interfaces of a Link Aggregation (LAG) . When there are two or more member interfaces for a LAG, only one link can be configured as primary and only one other link can be configured as secondary. The primary member interface is used for transmitting the PTP packets generated by the boundary clock. When the primary member goes down, the secondary member is used for PTP packet transmission. If both primary and secondary members go down, PTP does not flip over to the other links of the LAG.

The `no` form of this command removes the PTP role configuration for the LAG member interface.



This command is not supported when configured as a transparent clock.

Parameter	Description
primary	Sets the primary PTP lag-role for the LAG member interface.
secondary	Sets the secondary PTP lag-role for the LAG member interface.

Usage

- LAG roles must be configured for boundary clock.
- For the primary or secondary LAG roles, ensure that the same link ports are configured on both ends of the LAG.

Examples

Setting the primary PTP lag-role for the LAG member interface:

```
switch(config)# interface 1/1/1
switch(config-if)# ptp lag-role primary
switch(config-if)#
```

Setting the secondary PTP lag-role for the LAG member interface:

```
switch(config)# interface 1/1/2
switch(config-if)# ptp lag-role secondary
switch(config-if)#
```

Removing the PTP lag-role configuration for the LAG member interface:

```
switch(config)# interface 1/1/1
switch(config-if)# no ptp lag-role
switch(config-if)#
```

Command History

Release	Modification
10.08	Command introduced.

Command Information

Platforms	Command context	Authority
8360	config-if	Administrators or local user group members with execution rights for this command.

ptp sync-interval

```
ptp sync-interval {1588v2 | aes67 | smpte} <LOG-SECONDS>
no ptp sync-interval {1588v2 | aes67 | smpte}
```

Description

Sets the sync message transmit interval on a PTP-enabled interface for a specific PTP profile.

The **no** form of this command removes the sync message transmit interval configuration on a PTP enabled interface and sets it to a profile-specific default value.

Parameter	Description
1588v2	Specifies the PTP 1588v2 profile timers. Default 0.
aes67	Specifies the PTP AES67 profile timers. Default -3.
smpte	Specifies the PTP SMTPE profile timers. Default -3
<LOG-SECONDS>	Sets the sync message interval in log seconds.

Examples

Setting the PTP 1588v2 sync interval :

```
switch(config)# interface 1/1/1
switch(config-if)# ptp sync-interval 1588v2 2
switch(config-if)#
```

Setting the PTP AES67 sync interval :

```
switch(config)# interface 1/1/1
switch(config-if)# ptp sync-interval aes67 -2
switch(config-if)#
```

Removing the PTP AES67 sync interval:

```
switch(config)# interface 1/1/1
switch(config-if)# no ptp sync-interval aes67
switch(config-if)#
```

Command History

Release	Modification
10.08	Command introduced.

Command Information

Platforms	Command context	Authority
8360	config-if	Administrators or local user group members with execution rights for this command.

ptp vlan

```
ptp vlan <VLAN-ID>
no ptp vlan
```

Description

Configures a VLAN for PTP messages. It is necessary when the boundary clock port is a VLAN trunk L2 interface (no routing). The **no** form of this command removes the VLAN configuration for PTP messages.

Parameter	Description
<VLAN-ID>	Specifies a VLAN. Range: 1-4094.

Usage

- This configuration has no bearing on the one-step transparent clock.
- In boundary clock mode, only PTP packets in PTP VLAN are processed; PTP packets from other VLANs are dropped.

- `ptp vlan` should be configured on interfaces only when the specific VLAN is a trunk/tagged member of that port. This configuration should not be performed on an access port.

Examples

Configuring a specific VLAN for PTP messages:

```
switch(config)# interface 1/1/1
switch(config-if)# ptp vlan 4
switch(config)#
```

Removing the VLAN configuration for PTP messages:

```
switch(config)# interface 1/1/1
switch(config-if)# no ptp vlan
switch(config)#
```

Command History

Release	Modification
10.08	Command introduced.

Command Information

Platforms	Command context	Authority
8360	config-if	Administrators or local user group members with execution rights for this command.

show ptp clock

```
show ptp clock
```

Description

Shows PTP clock-related information.

Example

Showing PTP boundary clock information:

```
switch # show ptp clock
PTP Profile           : aes67
PTP Mode              : boundary
Delay Mechanism       : end-to-end
Clock Identity        : 00:fd:45:ff:fe:68:f3:00
Network Transport Protocol : ipv4
Clock Step            : Two
Clock Domain         : 0
Number of PTP Ports   : 3
Priority1              : 128
Priority2              : 128
```

```

Clock Quality :
  Class          : 248
  Accuracy       : 49
  Offset (log variance) : 52592

Offset From Clock-Source : - 0.000000006 (s)
Mean Delay               : + 0.000000277 (s)
Steps Removed           : 1

```

Showing PTP transparent clock information:

```

switch# show ptp clock
PTP Profile          : smpte
PTP Mode            : transparent
Delay Mechanism      : end-to-end
Clock Identity       : NA
Network Transport Protocol : ipv4
Clock Step           : One
Clock Domain         : NA
Number of PTP Ports  : 1
Priority1             : NA
Priority2             : NA
Clock Quality :
  Class          : NA
  Accuracy       : NA
  Offset (log variance) : NA
Offset From Clock-Source : NA
Mean Delay       : NA
Steps Removed    : NA

```

Command History

Release	Modification
10.08	Command introduced.

Command Information

Platforms	Command context	Authority
8360	Manager (#)	Auditors or Administrators or local user group members with execution rights for this command. Auditors can execute this command from the auditor context (auditor>) only.

show ptp foreign-clock-sources

```
show ptp foreign-clock-sources
```

Description

Shows the priority1, priority2, class, accuracy, offset-scaled-log-variance (OSLV), and steps removed information for foreign clock-source nodes.

Example

Showing PTP foreign clock-source information:

```
switch(config-if)# show ptp foreign-clock-sources
P1=Priority1, P2=Priority2, C=Class, A=Accuracy,
OSLV=Offset-scaled-log-variance, SR=Steps-removed
```

```
-----
-
Interface  Foreign Port ID          Clock Source ID          P1  P2  C   A   OSLV  SR
-----
-
1/1/4      00:00:00:00:00:00:00:01 (0x0001)  00:00:00:00:00:00:00:01  0   0   6   35  0     1
1/1/5      b4:99:ba:ff:fe:54:2b:00 (0x0002)  00:00:00:00:00:00:00:01  0   0   6   35  0     2
```

Command History

Release	Modification
10.08	Command introduced.

Command Information

Platforms	Command context	Authority
8360	Manager (#)	Auditors or Administrators or local user group members with execution rights for this command. Auditors can execute this command from the auditor context (auditor>) only.

show ptp interface

```
show ptp interface [<IFNAME> | [brief]
```

Description

Shows PTP port-related information.

Parameter	Description
<IFNAME>	Specifies the interface name.
brief	Shows information in a brief format.

Examples

Showing PTP port information (when the switch is acting as a boundary clock):

```
switch# show ptp interface 1/1/1
Interface : 1/1/1
Port Identity      : 88:3a:30:ff:fe:05:c9:80 (port: 0x0002)
Port Number        : 2
PTP Version        : 2
PTP Enable         : Enabled
Transport of PTP   : ethernet
Port State         : Clock Source
Delay Mechanism     : end-to-end
Announce Interval (log mean) : 0
Announce Receipt Timeout : 3
```

```

Sync Interval (log mean)           : -3
Sync Timeout                       : NA
Delay Request Interval (log mean)  : 0

switch# show ptp interface lag1
Port Identity                      : 00:fd:45:ff:fe:68:f3:00 (port: 0x0002)
Port Number                       : 2
PTP Version                       : 2
PTP Enable                        : Enabled
Transport of PTP                  : ipv4
Port State                        : Clock Source
Delay Mechanism                   : end-to-end
Announce Interval (log mean)      : 0
Announce Receipt Timeout          : 3
Sync Interval (log mean)          : -3
Sync Timeout                     : NA
Delay Request Interval (log mean) : -3
Primary Interface                 : 1/1/5
Secondary Interface               : 1/1/6

switch # show ptp interface
Interface lag20:
Port Identity                      : 00:fd:45:ff:fe:68:f3:00 (port: 0x0002)
Port Number                       : 2
PTP Version                       : 2
PTP Enable                        : Enabled
Transport of PTP                  : ipv4
Port State                        : Clock Source
Delay Mechanism                   : end-to-end
Announce Interval (log mean)      : 0
Announce Receipt Timeout          : 3
Sync Interval (log mean)          : -3
Sync Timeout                     : NA
Delay Request Interval (log mean) : -3
Primary Interface                 : 1/1/5
Secondary Interface               : 1/1/6

Member Interface 1/1/5:
Port Identity                      : 00:fd:45:ff:fe:68:f3:00 (port: 0x0002)
Port Number                       : 2
PTP Version                       : 2
PTP Enable                        : Enabled
Transport of PTP                  : ipv4
Port State                        : Running
Delay Mechanism                   : end-to-end
Announce Interval (log mean)      : 0
Announce Receipt Timeout          : 3
Sync Interval (log mean)          : -3
Sync Timeout                     : NA
Delay Request Interval (log mean) : -3

Member Interface 1/1/6:
Port Identity                      : 00:fd:45:ff:fe:68:f3:00 (port: 0x0003)
Port Number                       : 3
PTP Version                       : 2
PTP Enable                        : Enabled
Transport of PTP                  : ipv4
Port State                        : Not Running
Delay Mechanism                   : end-to-end
Announce Interval (log mean)      : 0
Announce Receipt Timeout          : 3
Sync Interval (log mean)          : -3

```

```

Sync Timeout                               : NA
Delay Request Interval (log mean)         : -3

Interface 1/1/15:
Port Identity                             : 00:fd:45:ff:fe:68:f3:00 (port: 0x0001)
Port Number                              : 1
PTP Version                              : 2
PTP Enable                               : Enabled
Transport of PTP                         : ipv4
Port State                               : Clock Sink
Delay Mechanism                          : end-to-end
Announce Interval (log mean)             : 0
Announce Receipt Timeout                 : 3
Sync Interval (log mean)                 : -3
Sync Timeout                            : NA
Delay Request Interval (log mean)         : -3

```

Showing PTP port information (when the switch is acting as a transparent clock):

```

switch # show ptp interface 1/1/1
Port Identity                             : NA
Port Number                              : NA
PTP Version                              : 2
PTP Enable                               : Enabled
Transport of PTP                         : ipv4
Port State                               : Running
Delay Mechanism                          : end-to-end
Announce Interval (log mean)             : NA
Announce Receipt Timeout                 : NA
Sync Interval (log mean)                 : NA
Sync Timeout                            : NA
Delay Request Interval (log mean)         : NA
switch#

switch # show ptp interface lag20
Port Identity                             : NA
Port Number                              : NA
PTP Version                              : 2
PTP Enable                               : Enabled
Transport of PTP                         : ipv4
Port State                               : NA
Delay Mechanism                          : end-to-end
Announce Interval (log mean)             : NA
Announce Receipt Timeout                 : NA
Sync Interval (log mean)                 : NA
Sync Timeout                            : NA
Delay Request Interval (log mean)         : NA
switch#

```

Showing PTP port information in brief format:

```

switch# show ptp interface brief
Interface    PTP State
-----
1/1/11      Clock Source
1/1/12      Clock Sink
1/1/13      Passive

```

Command History

Release	Modification
10.08	Command introduced.

Command Information

Platforms	Command context	Authority
8360	Manager (#)	Auditors or Administrators or local user group members with execution rights for this command. Auditors can execute this command from the auditor context (auditor>) only.

show ptp parent

show ptp parent

Description

Shows parent node information for the PTP device.

Example

Showing PTP parent node information:

```
switch# show ptp parent
PTP Parent Properties

Parent Clock
-----
Parent Clock Identity           : 00:00:00:00:00:00:00:01
Parent Port Number              : 0x0001
Observed Parent Offset (log variance) : 65535
Observed Parent Clock Phase Change Rate: 2147483647

Grandsource Clock
-----
Grandsource Clock Identity      : 00:00:00:00:00:00:00:01
Grandsource Clock Quality
  Class                         : 6
  Accuracy                      : 35
  Offset (log variance)         : 0
Priority1                       : 0
Priority2                       : 0
```

Command History

Release	Modification
10.08	Command introduced.

Command Information

Platforms	Command context	Authority
8360	Manager (#)	Auditors or Administrators or local user group members with execution rights for this command. Auditors can execute this command from the auditor context (auditor>) only.

show ptp statistics

show ptp statistics [<IFNAME>]

Description

Shows PTP port statistics.

Parameter	Description
<IFNAME>	Optional. Specifies the interface name.

Examples

Showing PTP port statistics:

```
switch# show ptp statistics
```

PTP Interface Statistics

	Received Packets	Sent Packets	Discarded Packets	Lost
Packets				
Interface: 1/1/15				
Announce	0	1019	0	
0				
Sync	0	2038	0	
0				
Signaling	0	0	0	
0				
DelayReq	0	0	0	
0				
DelayResp	0	0	0	
0				
FollowUp	0	0	0	
0				
Management	0	0	0	
0				

	Received Packets	Sent Packets	Discarded Packets	Lost
Packets				
Interface: 1/1/16				
Announce	0	1019	0	
0				
Sync	0	2038	0	
0				
Signaling	0	0	0	
0				
DelayReq	0	0	0	
0				
DelayResp	0	0	0	
0				
FollowUp	0	0	0	
0				

0	Management	0	0	0
---	------------	---	---	---

Showing PTP port statistics for the specified interface:

```
switch# show ptp statistics 1/1/15
```

PTP Interface Statistics

	Received Packets	Sent Packets	Discarded Packets	Lost
Packets				
Interface: 1/1/15				
Announce	0	1024	0	
0				
Sync	0	2048	0	
0				
Signaling	0	0	0	
0				
DelayReq	0	0	0	
0				
DelayResp	0	0	0	
0				
FollowUp	0	0	0	
0				
Management	0	0	0	
0				

Command History

Release	Modification
10.08	Command introduced.

Command Information

Platforms	Command context	Authority
8360	Manager (#)	Administrators or local user group members with execution rights for this command.

show ptp time-property

show ptp time-property

Description

Shows PTP clock-time properties for the PTP device.

Example

Showing PTP clock time properties:

```
switch # show ptp time-property
PTP Clock Time Property
-----
```



```
Current UTC Offset Valid : FALSE
Current UTC Offset      : 37
Leap59                  : FALSE
Leap61                  : FALSE
Time Traceable          : FALSE
Frequency Traceable     : FALSE
PTP Timescale           : FALSE
Synchronization Uncertain : FALSE
Time Source              : 160
```

Command History

Release	Modification
10.08	Command introduced.

Command Information

Platforms	Command context	Authority
8360	Manager (#)	Auditors or Administrators or local user group members with execution rights for this command. Auditors can execute this command from the auditor context (auditor>) only.

transport-protocol

```
transport-protocol {ethernet | ipv4}
no transport-protocol
```

Description

Sets the transport protocol for PTP packets. In the case of IPv4, the UDP check-sum is reset. There is no default transport-protocol. The `no` form of this command disconnects the clock from its source.

Parameter	Description
ethernet	Specifies the Ethernet (Layer 2) transport protocol.
ipv4	Specifies the IPv4 transport protocol.

Usage

Mandatory command to start the PTP clock.

Example

Setting the Ethernet transport protocol for PTP packets:

```
switch(config-ptp) # transport-protocol ethernet
switch(config-ptp) #
```

Removing the transport protocol for PTP packets:

```
switch(config-ptp) # no transport-protocol
```

```
switch(config-ptp)#
```

Command History

Release	Modification
10.08	Command introduced.

Command Information

Platforms	Command context	Authority
8360	config-ptp	Administrators or local user group members with execution rights for this command.

Recommendations for configuration

PTP CoPP class configuration recommendations

Configuration recommendations for a boundary clock

The PTP CoPP class must be adjusted based on the number of clients associated with the boundary clock and the configured packet rate. For example, if there are 1000 clients with a configured packet rate of 2pps, and a default CoPP limit of 1000, packet drops will be observed. In such instances the CoPP limit should be increased to more than 2000.

The `show copp statistics class ptp` command can be used to monitor whether the CoPP policy must be adjusted. For example:

```
Statistics for CoPP policy 'default':
Class: ptp
Description: Precision Time Protocol (PTP) .
  priority      : 5
  rate (pps)    : 1000
  burst size (pkts) : 250

  packets passed : 611153           packets dropped : 0
```



Increasing the PTP CoPP values may help in scaling the clients but needs to be planned and configured properly so as to not to impact other protocols.

QoS prioritization configuration recommendation for transparent clock

```
class ip PTP
  10 match udp any any eq 319 count
policy PTP-POL
  10 class ip PTP action local-priority 6
policy test
interface lag 240
  apply policy PTP-POL in
```

```

interface 1/1/26
  apply policy PTP-POL in
interface 2/1/26
  apply policy PTP-POL in

```



PTP Event messages carrying a critical timestamp use UDP port 319.

General guidelines for PTP IPv4 multicast


- For IP multicast-based PTP time distribution, it is recommended to use PIM Sparse-Mode.
- When connecting Transparent Clock (TC) and Boundary Clock (BC), ensure that the TC becomes the DR by setting the DR priority.
- Ensure the mroutes are programmed on TCs so that there is reachability for PTP streams from the upstream.
- Configure static-igmp groups on TCs if the clients themselves cannot send IGMP joins for the PTP multicast group.
- The `QoS trust dscp` command needs to be explicitly configured on all non-BC switches in the network to ensure that the incoming DSCP value of PTP traffic is honored.

Use cases

The use cases provide additional PTP configuration recommendations.

Use case 1: PTP – IPv4 over L2 – Spine Leaf Topology

Figure 2 Grand clock source connected to boundary clock (spines), followed by transparent clock leaves

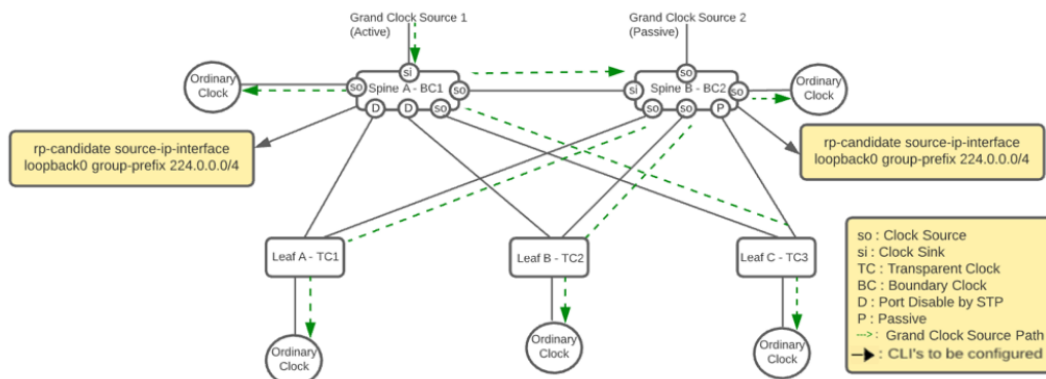

The following considerations and best practices are recommended for the topology in :

- Configure candidate-RP on switches that are connected to a grand clock source. In the above topology, the candidate-RP needs to be configured on the BC1 Spine A and BC2 Spine B.
- When the PTP clients are not capable of sending IGMP joins, be sure to configure `ip igmp snooping static-group 224.0.1.12` on the VLAN interface of a TC, where PTP is configured.




In this case, it is an L2 switch in leaf so `ip igmp snooping enable` also needs to be configured on the transparent clock VLAN interface.

- Ensure that `ip source-interface ptp <ip | interface information>` is configured on both BC switches. (VLAN interface where PTP is configured.)
- Ensure that `spanning tree` is configured in the above topology to avoid the loop. On the Aruba 6300 TC Switches, `spanning tree` is enabled by default; it needs to be explicitly configured on the Aruba 8360 BC Switches.
- It is recommended to have VRRP on boundary clock 8360 switches to have L3 redundancy for PTP end clients.

Use case 2: PTP – BC and TC (VSF) topology connected via LAG

Figure 3 Grand clock source connected to a boundary clock serving time to other boundary clocks and VSF transparent clocks in the network

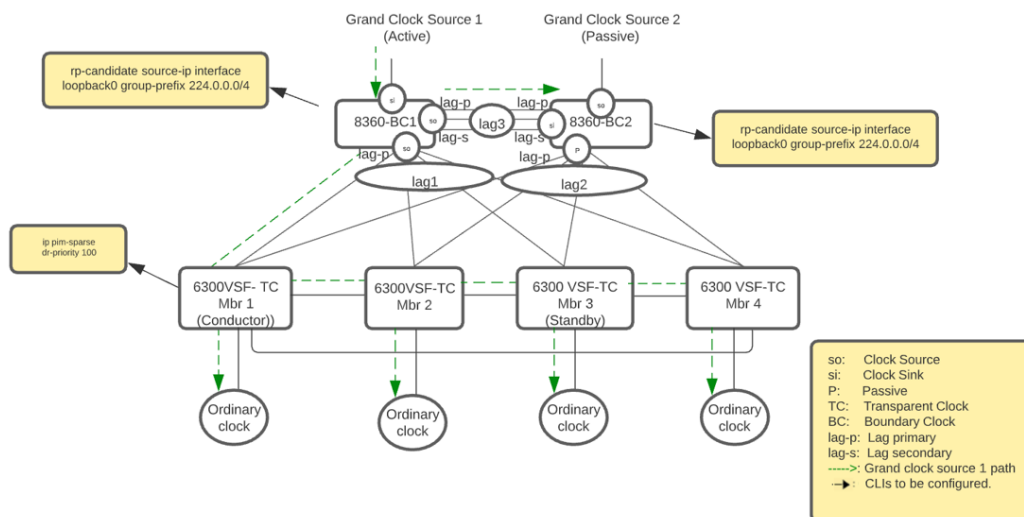

The following considerations and best practices are recommended for the topology in :

- Configure candidate-RP on switches that are connected to a grand clock source. In this topology, the Candidate-RP needs to be configured on the BC1 and BC2 switches. Each candidate-RP controls multicast traffic forwarding for one or more multicast groups.
- When the PTP clients are not capable of sending IGMP joins, ensure that `ip igmp static-group 224.0.1.129` is configured on all PTP-enabled interfaces of a TC.



`igmp static-group` config is not needed on boundary clock switches. In this case, it is an L3 network so `ip igmp enable` also needs to be configured on all PTP enabled L3 interfaces of the transparent clock.

- For the primary or secondary LAG roles, ensure that the same link ports are configured on both ends of the LAG across BC (this command is applicable only on BC switches).




When both the primary and secondary LAG role links are down, PTP packets will not be forwarded even if other LAG links are up.

- Configure `ip pim-sparse dr-priority <value>` in order to configure higher dr-priority on the links originating from the VSF (which are facing the BC switches).

Use case 3: PTP – L3 spine leaf topology

Figure 4 Grand clock source connected to transparent clock, followed by boundary clock spines and boundary clock leaves

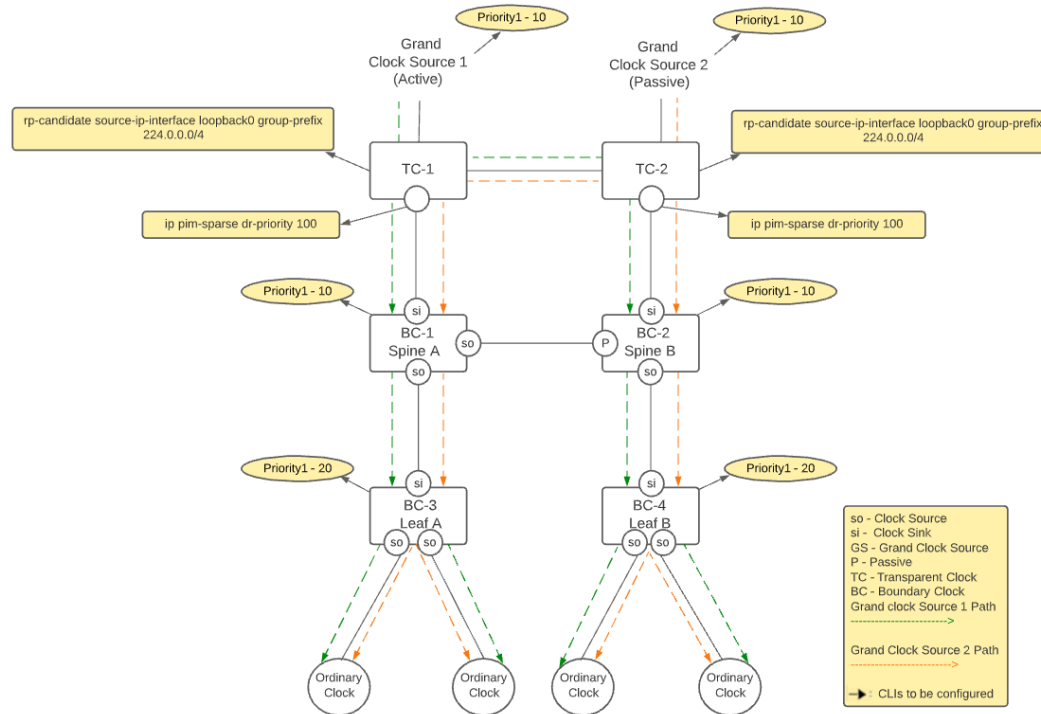

The following considerations and best practices are recommended for the topology in :

- Configure candidate-RP on switches which are connected to a grand clock source. In this topology, candidate-RP needs to be configured on TC1 and TC2. Each candidate-RP controls multicast traffic forwarding for one or more multicast groups.
- Configure higher DR priority on switches in which candidate-RP is configured. In this topology, the DR priority needs to be configured on the TC1 and TC2 on the BC facing ports.
- When the PTP clients are not capable of sending IGMP joins, ensure that `ip igmp static-group 224.0.1.129` is configured on all PTP-enabled interfaces of a TC.
- The `igmp static-group` configuration is not needed on BC switches. In this case, it is an L3 network so `ip igmp enable` also needs to be configured on all PTP-enabled L3 interfaces of the TC.

Checkpoints

A checkpoint is a snapshot of the running configuration of a switch and its relevant metadata during the time of creation. Checkpoints can be used to apply the switch configuration stored within a checkpoint whenever needed, such as to revert to a previous, clean configuration. Checkpoints can be applied to other switches of the same platform. A switch is able to store multiple checkpoints.

Checkpoint types

The switch supports two types of checkpoints:

- **System generated checkpoints:** The switch automatically generates a system checkpoint whenever a configuration change occurs.
- **User generated checkpoints:** The administrator can manually generate a checkpoint whenever required.

Maximum number of checkpoints

- Maximum checkpoints: 64 (including the startup configuration)
- Maximum user checkpoints: 32
- Maximum system checkpoints: 32

User generated checkpoints

User checkpoints can be created at any time, as long as one configuration difference exists since the last checkpoint was created. Checkpoints can be applied to either the running or startup configurations on the switch.

All user generated checkpoints include a time stamp to identify when a checkpoint was created.

A maximum of 32 user generated checkpoints can be created.

System generated checkpoints

System generated checkpoints are automatically created by default. Whenever a configuration change occurs, the switch starts a timeout counter (300 seconds by default). For each additional configuration change, the timeout counter is restarted. If the timeout expires with no additional configuration changes being made, the switch generates a new checkpoint.

System generated checkpoints are named with the prefix `cpc` followed by a time stamp in the format `<YYYYMMDDHHMMSS>`. For example: `cpc20170630073127`.

System checkpoints can be applied using the checkpoint rollback feature or copy command.

A maximum of 32 system checkpoints can be created. Beyond this limit, the newest system checkpoint replaces the oldest system checkpoint.

Supported remote file formats

You can restore a switch configuration by copying a switch configuration stored on a USB drive or a remote network device through SFTP/TFTP. The remote file formats that the switch supports depends on where you plan to restore the checkpoint.

Restoring a checkpoint to a...	File type supported
Running configuration	■ CLI ■ JSON ■ Checkpoint
Startup configuration	■ JSON ■ Checkpoint
Specified checkpoint	Specified checkpoint

Rollback

The term rollback is used to refer to when a switch configuration is reverted to a pre-existing checkpoint.

For example, the following command applies the configuration from checkpoint `ckpt1`. All previous configurations are lost after the execution of this command: `checkpoint rollback ckpt1`

You can also specify the rollback of the running configuration or of the startup configuration with a specified checkpoint, as shown with the following command: `copy checkpoint <checkpoint-name> {running-config | startup-config}`

Checkpoint auto mode

Checkpoint auto mode configures the switch with failover support, causing it to automatically revert to a previous configuration if it becomes inoperable or inaccessible due to configuration changes that are being made.

After entering checkpoint auto mode, you have a set amount of time to add, remove, or modify the existing switch configuration. To save your changes, you must execute the `checkpoint auto confirm` command before the auto mode timer expires. If you do not execute the `checkpoint auto confirm` command within the specified time, all configuration changes you made are discarded and the running configuration reverts to the state it was before entering checkpoint auto mode.

Testing a switch configuration in checkpoint auto mode

Process overview:

1. Enable the checkpoint auto mode.
2. To save the configuration, enter the `checkpoint auto confirm` command before the specified time set in step 1.

Checkpoint commands

checkpoint auto

```
checkpoint auto <TIME-LAPSE-INTERVAL>
```

Description

Starts auto checkpoint mode. In auto checkpoint mode, the switch temporarily saves the runtime configuration as a checkpoint only for the specified time lapse interval. Configuration changes must be

saved before the interval expires, otherwise the runtime configuration is restored from the temporary checkpoint.

Parameter	Description
<code><TIME-LAPSE-INTERVAL></code>	Specifies the time lapse interval in minutes. Range: 1 to 60.

Usage

To save the runtime checkpoint permanently, run the `checkpoint auto confirm` command during the time lapse interval. The filename for the saved checkpoint is named `AUTO<YYYYMMDDHHMMSS>`. If the `checkpoint auto confirm` command is not entered during the specified time lapse interval, the previous runtime configuration is restored.

Examples

Confirming the auto checkpoint:

```
switch# checkpoint auto 20
Auto checkpoint mode expires in 20 minute(s)
switch# WARNING Please "checkpoint auto confirm" within 2 minutes
switch# checkpoint auto confirm
checkpoint AUTO20170801011154 created
```

In this example, the runtime checkpoint was saved because the `checkpoint auto confirm` command was entered within the value set by the `time-lapse-interval` parameter, which was 20 minutes.

Not confirming the auto checkpoint:

```
switch# checkpoint auto 20
Auto checkpoint mode expires in 20 minute(s)
switch# WARNING Please "checkpoint auto confirm" within 2 minutes
WARNING: Restoring configuration. Do NOT add any new configuration.
Restoration successful
```

In this example, the runtime checkpoint was reverted because the `checkpoint auto confirm` command was not entered within the value set by the `time-lapse-interval` parameter, which was 20 minutes.

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

checkpoint auto confirm

`checkpoint auto confirm`

Description

Signals to the switch to save the running configuration used during the auto checkpoint mode. This command also ends the auto checkpoint mode.

Usage

To save the runtime checkpoint permanently, run the `checkpoint auto confirm` command during the time lapse value set by the `checkpoint auto <TIME-LAPSE-INTERVAL>` command. The generated checkpoint name will be in the format `AUTO<YYYYMMDDHHMMSS>`. If the `checkpoint auto confirm` command is not entered during the specified time lapse interval, the previous runtime configuration is restored.

Examples

Confirming the auto checkpoint:

```
switch# checkpoint auto confirm
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

checkpoint diff

```
checkpoint diff {<CHECKPOINT-NAME1> | running-config | startup-config}  
               {<CHECKPOINT-NAME2> | running-config | startup-config}
```

Description

Shows the difference in configuration between two configurations. Compare checkpoints, the running configuration, or the startup configuration.

Parameter	Description
{<CHECKPOINT-NAME1> running-config startup-config}	Selects either a checkpoint, the running configuration, or the startup configuration as the baseline.
{<CHECKPOINT-NAME2> running-config startup-config}	Selects either a checkpoint, the running configuration, or the startup configuration to compare.

Usability

The output of the `checkpoint diff` command has several symbols:

- The plus sign (+) at the beginning of a line indicates that the line exists in the comparison but not in the baseline.
- The minus sign (-) at the beginning of a line indicates that the line exists in the baseline but not in the comparison.

Examples

In the following example, the configurations of checkpoints `cp1` and `cp2` are displayed before the `checkpoint diff` command, so that you can see the context of the `checkpoint diff` command.

```
switch# show checkpoint cp1
Checkpoint configuration:
!
!Version AOS-CX XL.10.00.0002
!Schema version 0.1.8
module 1/1 product-number jl363a
!
!
!
!
!
!
vlan 1,200
interface 1/1/1
    no shutdown
    ip address 1.0.0.1/24
interface 1/1/2
    no shutdown
    ip address 2.0.0.1/24

switch# show checkpoint cp2
Checkpoint configuration:
!
!Version AOS-CX XL.10.00.0002
!Schema version 0.1.8
module 1/1 product-number jl363a
!
!
!
!
!
!
!
!
vlan 1,200,300
interface 1/1/1
    no shutdown
    ip address 1.0.0.1/24
interface 1/1/2
    no shutdown
    ip address 2.0.0.1/24

switch# checkpoint diff cp1 cp2
--- /tmp/chkpt11501550258421    2017-08-01 01:17:38.420514016 +0000
+++ /tmp/chkpt21501550258421    2017-08-01 01:17:38.420514016 +0000
@@ -9,7 +9,7 @@
!
!
!
-vlan 1,200
+vlan 1,200,300
```

```
interface 1/1/1
  no shutdown
  ip address 1.0.0.1/24
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

checkpoint post-configuration

checkpoint post-configuration

no checkpoint post-configuration

Description

Enables creation of system generated checkpoints when configuration changes occur. This feature is enabled by default.

The `no` form of this command disables system generated checkpoints.

Usage

System generated checkpoints are automatically created by default. Whenever a configuration change occurs, the switch starts a timeout counter (300 seconds by default). For each additional configuration change, the timeout counter is restarted. If the timeout expires with no additional configuration changes being made, the switch generates a new checkpoint.

System generated checkpoints are named with the prefix `CPC` followed by a time stamp in the format `<YYYYMMDDHHMMSS>`. For example: `CPC20170630073127`.

System checkpoints can be applied using the checkpoint rollback feature or copy command.

A maximum of 32 system checkpoints can be created. Beyond this limit, the newest system checkpoint replaces the oldest system checkpoint.

Examples

Enabling system checkpoints:

```
switch(config)# checkpoint post-configuration
```

Disabling system checkpoints:

```
switch(config)# no checkpoint post-configuration
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

checkpoint post-configuration timeout

`checkpoint post-configuration timeout <TIMEOUT>`

`no checkpoint post-configuration timeout <TIMEOUT>`

Description

Sets the timeout for the creation of system checkpoints. The timeout specifies the amount of time since the latest configuration for the switch to create a system checkpoint.

The `no` form of this command resets the timeout to 300 seconds, regardless of the value of the `<TIMEOUT>` parameter.

Parameter	Description
<code>timeout <TIMEOUT></code>	Specifies the timeout in seconds. Range: 5 to 600. Default: 300.

Examples

Setting the timeout for system checkpoints to 60 seconds:

```
switch(config)# checkpoint post-configuration timeout 60
```

Resetting the timeout for system checkpoints to 300 seconds:

```
switch(config)# no checkpoint post-configuration timeout 1
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

checkpoint rename

```
checkpoint rename <OLD-CHECKPOINT-NAME> <NEW-CHECKPOINT-NAME>
```

Description

Renames an existing checkpoint.

Parameter	Description
<OLD-CHECKPOINT-NAME>	Specifies the name of an existing checkpoint to be renamed.
<NEW-CHECKPOINT-NAME>	Specifies the new name for the checkpoint. The checkpoint name can be alphanumeric. It can also contain underscores (_) and dashes (-). NOTE: Do not start the checkpoint name with <code>CPC</code> because it is used for system-generated checkpoints.

Examples

Renaming checkpoint **ckpt1** to **cfg001**:

```
switch# checkpoint rename ckpt1 cfg001
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

checkpoint rollback

```
checkpoint rollback {<CHECKPOINT-NAME> | startup-config}
```

Description

Applies the configuration from a pre-existing checkpoint or the startup configuration to the running configuration.

Parameter	Description
<CHECKPOINT-NAME>	Specifies a checkpoint name.
startup-config	Specifies the startup configuration.

Examples

Applying a checkpoint named **ckpt1** to the running configuration:

```
switch# checkpoint rollback ckpt1
Success
```

Applying a startup checkpoint to the running configuration:

```
switch# checkpoint rollback startup-config
Success
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

copy checkpoint <CHECKPOINT-NAME> <REMOTE-URL>

```
copy checkpoint <CHECKPOINT-NAME> <REMOTE-URL> [vrf <VRF-NAME>]
```

Description

Copies a checkpoint configuration to a remote location as a file. The configuration is exported in checkpoint format, which includes switch configuration and relevant metadata.

Parameter	Description
<CHECKPOINT-NAME>	Specifies the name of a checkpoint.
<REMOTE-URL>	Specifies the remote destination and filename using the syntax: {tftp sftp}://<IP-ADDRESS>[:<PORT-NUMBER>] [;blocksize=<BLOCKSIZE-VALUE>]/<FILE-NAME>
vrf <VRF-NAME>	Specifies a VRF name.

Examples

Copying checkpoint configuration to remote file through TFTP:

```
switch# copy checkpoint ckpt1 tftp://192.168.1.10/ckptmeta vrf default
##### 100.0%
Success
```

Copying checkpoint configuration to remote file through SFTP:

```

switch# copy checkpoint ckpt1 sftp://root@192.168.1.10/ckptmeta vrf default
The authenticity of host '192.168.1.10 (192.168.1.10)' can't be established.
ECDSA key fingerprint is SHA256:FtOm6Uxuxumil7VCwLnhz92H9LkjY+eURbdddOETy50.
Are you sure you want to continue connecting (yes/no)? yes
root@192.168.1.10's password:
sftp> put /tmp/ckptmeta ckptmeta
Uploading /tmp/ckptmeta to /root/ckptmeta
Warning: Permanently added '192.168.1.10' (ECDSA) to the list of known hosts.
Connected to 192.168.1.10.
Success

```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

copy checkpoint <CHECKPOINT-NAME> {running-config | startup-config}

copy checkpoint <CHECKPOINT-NAME> {running-config | startup-config}

Description

Copies an existing checkpoint configuration to the running configuration or to the startup configuration.

Parameter	Description
<CHECKPOINT-NAME>	Specifies the name of an existing checkpoint.
{running-config startup-config}	Selects whether the running configuration or the startup configuration receives the copied checkpoint configuration. If the startup configuration is already present, the command overwrites the startup configuration.

Examples

Copying **ckpt1** checkpoint to the running configuration:

```

switch# copy checkpoint ckpt1 running-config
Success

```

Copying **ckpt1** checkpoint to the startup configuration:

```

switch# copy checkpoint ckpt1 startup-config
Success

```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

copy checkpoint <CHECKPOINT-NAME> <STORAGE-URL>

copy checkpoint <CHECKPOINT-NAME> <STORAGE-URL>

Description

Copies an existing checkpoint configuration to a USB drive. The file format is defined when the checkpoint was created.

Parameter	Description
<CHECKPOINT-NAME>	Specifies the name of the checkpoint to copy. The checkpoint name can be alphanumeric. It can also contain underscores (_) and dashes (-).
<STORAGE-URL>>	Specifies the name of the target file on the USB drive using the following syntax: <code>usb:/<FILE></code> The USB drive must be formatted with the FAT file system.

Examples

Copying the `test` checkpoint to the `testCheck` file on the USB drive:

```
switch# copy checkpoint test usb:/testCheck
Success
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

copy <REMOTE-URL> checkpoint <CHECKPOINT-NAME>

copy <REMOTE-URL> checkpoint <CHECKPOINT-NAME> [vrf <VRF-NAME>]

Description

Copies a remote configuration file to a checkpoint. The remote configuration file must be in checkpoint format.

Parameter	Description
<REMOTE-URL>	Specifies a remote file using the following syntax: {tftp sftp}://<IP-ADDRESS>[:<PORT-NUMBER>][;blocksize=<BLOCKSIZE-VALUE>]/<FILE-NAME>>
<CHECKPOINT-NAME>	Specifies the name of the target checkpoint. The checkpoint name can be alphanumeric. It can also contain underscores (_) and dashes (-). Required. NOTE: Do not start the checkpoint name with CPC because it is used for system-generated checkpoints.
vrf <VRF-NAME>	Specifies a VRF name. Default: default.

Examples

Copying a checkpoint format file to checkpoint **ckpt5** on the default VRF:

```
switch# copy tftp://192.168.1.10/ckptmeta checkpoint ckpt5
##### 100.0%
100.0%
Success
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

copy <REMOTE-URL> {running-config | startup-config}

copy <REMOTE-URL> {running-config | startup-config } [vrf <VRF-NAME>]

Description

Copies a remote file containing a switch configuration to the running configuration or to the startup configuration.

Parameter	Description
<code><REMOTE-URL></code>	Specifies a remote file with the following syntax: {tftp sftp}://<IP-ADDRESS>[:<PORT-NUMBER>][;blocksize=<BLOCKSIZE-VALUE>]/<FILE-NAME>
{running-config startup-config}	Selects whether the running configuration or the startup configuration receives the copied checkpoint configuration. If the startup configuration is already present, the command overwrites the startup configuration.
vrf <VRF-NAME>	Specifies the name of a VRF. Default: default.

Usage

The switch copies only certain file types. The format of the file is automatically detected from contents of the file. The `startup-config` option only supports the JSON file format and checkpoints, but the `running-config` option supports the JSON and CLI file formats and checkpoints.

When a file of the CLI format is copied, it overwrites the running configuration. The CLI command does not clear the running configuration before applying the CLI commands. All of the CLI commands in the file are applied line-by-line. If a particular CLI command fails, the switch logs the failure and it continues to the next line in the CLI configuration. The event log (`show events -d hpe-config`) provides information as to which command failed.

Examples

Copying a JSON format file to the running configuration:

```
switch# copy tftp://192.168.1.10/runjson running-config
##### 100.0%
Configuration may take several minutes to complete according to configuration file
size
--0%----10%----20%----30%----40%----50%----60%----70%----80%----90%----100%--
Success
```

Copying a CLI format file to the running configuration with an error in the file:

```
switch# copy tftp://192.168.1.10/runcli running-config
##### 100.0%
Configuration may take several minutes to complete according to configuration file
size
--0%----10%----20%----30%----40%----50%----60%----70%----80%----90%----100%--
Some of the configuration lines from the file were NOT applied. Use 'show
events -d hpe-config' for more info.
```

Copying a CLI format file to the startup configuration:

```
switch# copy tftp://192.168.1.10/startjson startup-config
##### 100.0%
100.0%
Success
```

Copying an unsupported file format to the startup configuration:

```
switch# copy tftp://192.168.1.10/startfile startup-config
##### 100.0%
100.0%
unsupported file format
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

copy running-config {startup-config | checkpoint <CHECKPOINT-NAME>}

copy running-config {startup-config | checkpoint <CHECKPOINT-NAME>}

Description

Copies the running configuration to the startup configuration or to a new checkpoint. If the startup configuration is already present, the command overwrites the existing startup configuration.

Parameter	Description
startup-config	Specifies that the startup configuration receives a copy of the running configuration.
checkpoint <CHECKPOINT-NAME>	Specifies the name of a new checkpoint to receive a copy of the running configuration. The checkpoint name can be alphanumeric. It can also contain underscores (_) and dashes (-). NOTE: Do not start the checkpoint name with CPC because it is used for system-generated checkpoints.

Examples

Copying the running configuration to the startup configuration:

```
switch# copy running-config startup-config
Success
```

Copying the running configuration to a new checkpoint named **ckpt1**:

```
switch# copy running-config checkpoint ckpt1
Success
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

copy {running-config | startup-config} <REMOTE-URL>

copy {running-config | startup-config} <REMOTE-URL> {cli | json} [vrf <VRF-NAME>]

Description

Copies the running configuration or the startup configuration to a remote file in either CLI or JSON format.

Parameter	Description
{running-config startup-config}	Selects whether the running configuration or the startup configuration is copied to a remote file.
<REMOTE-URL>	Specifies the remote file using the syntax: {tftp sftp}://<IP-ADDRESS>[:<PORT-NUMBER>][;blocksize=<BLOCKSIZE-VALUE>]/<FILE-NAME>
{cli json}	Selects the remote file format: P: CLI or JSON.
vrf <VRF-NAME>	Specifies the name of a VRF. Default: default.

Examples

Copying a running configuration to a remote file in CLI format:

```
switch# copy running-config tftp://192.168.1.10/runcli cli
##### 100.0%
Success
```

Copying a running configuration to a remote file in JSON format:

```
switch# copy running-config tftp://192.168.1.10/runjson json
##### 100.0%
Success
```

Copying a startup configuration to a remote file in CLI format:

```
switch# copy startup-config sftp://root@192.168.1.10/startcli cli
root@192.168.1.10's password:
sftp> put /tmp/startcli startcli
Uploading /tmp/startcli to /root/startcli
```

```
Connected to 192.168.1.10.  
Success
```

Copying a startup configuration to a remote file in JSON format:

```
switch# copy startup-config sftp://root@192.168.1.10/startjson json  
root@192.168.1.10's password:  
sftp> put /tmp/startjson startjson  
Uploading /tmp/startjson to /root/startjson  
Connected to 192.168.1.10.  
Success
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

copy {running-config | startup-config} <STORAGE-URL>

copy {running-config | startup-config} <STORAGE-URL> {cli | json}

Description

Copies the running configuration or a startup configuration to a USB drive.

Parameter	Description
{running-config startup-config}	Selects the running configuration or the startup configuration to be copied to the switch USB drive.
<STORAGE-URL>	Specifies a remote file with the following syntax: <code>usb:/<file></code>
{cli json}	Selects the format of the remote file: CLI or JSON.

Usage

The switch supports JSON and CLI file formats when copying the running or starting configuration to the USB drive. The USB drive must be formatted with the FAT file system.

The USB drive must be enabled and mounted with the following commands:

```
switch(config)# usb  
switch(config)# end  
switch# usb mount
```

Examples

Copying a running configuration to a file named `runCLI` on the USB drive:

```
switch# copy running-config usb:/runCLI cli
Success
```

Copying a startup configuration to a file named `startCLI` on the USB drive:

```
switch# copy startup-config usb:/startCLI cli
Success
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

copy startup-config running-config

copy startup-config running-config

Description

Copies the startup configuration to the running configuration.

Examples

```
switch# copy startup-config running-config
Success
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

copy <STORAGE-URL> running-config

copy <STORAGE-URL> {running-config | startup-config | checkpoint <CHECKPOINT-NAME>}

Description

This command copies a specified configuration from the USB drive to the running configuration, to a startup configuration, or to a checkpoint.

Parameter	Description
<code><STORAGE-URL></code>	Specifies the name of a configuration file on the USB drive with the syntax: <code>usb:/<FILE></code>
<code>running-config</code>	Specifies that the configuration file is copied to the running configuration. The file must be in CLI, JSON, or checkpoint format or the copy will fail. the copy will not work.
<code>startup-config</code>	Specifies that the configuration file is copied to the startup configuration. The switch stores this configuration between reboots. The startup configuration is used as the operating configuration following a reboot of the switch. The file must be in JSON or checkpoint format or the copy will fail.
<code>checkpoint <CHECKPOINT-NAME></code>	Specifies the name of a new checkpoint file to receive a copy of the configuration. The configuration file on the USB drive must be in checkpoint format. NOTE: Do not start the checkpoint name with <code>CPC</code> because it is used for system-generated checkpoints.

Usage

This command requires that the USB drive is formatted with the FAT file system and that the file be in the appropriate format as follows:

- `running-config`: This option requires the file on the USB drive be in CLI, JSON, or checkpoint format.
- `startup-config`: This option requires the file on the USB drive be in JSON or checkpoint format.
- `checkpoint <checkpoint-name>`: This option requires the file on the USB drive be in checkpoint format.

Examples

Copying the file **runCli** from the USB drive to the running configuration:

```
switch# copy usb:/runCli running-config
Configuration may take several minutes to complete according to configuration
file size
--0%----10%----20%----30%----40%----50%----60%----70%----80%----90%----100%--
Success
```

Copying the file **startUp** from the USB drive to the startup configuration:

```
switch# copy usb:/startUp startup-config
Success
```

Copying the file **testCheck** from the USB drive to the **abc** checkpoint:

```
switch# copy usb:/testCheck checkpoint abc
Success
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

erase

```
erase
  checkpoint <checkpoint-name>
  core-dump all|daemon|dsm|kernel
  startup-config
  all
```

Description

Deletes an existing checkpoint, startup configuration, or core-dump.

Parameter	Description
checkpoint <CHECKPOINT-NAME>	Specifies the name of a checkpoint.
core-dump all daemon <daemon-name> kernel	Erase one of the following sets of core-dump files: ■ all: Erase all core-dump files. ■ daemon <daemon-name>: Erase daemon core-dump files. ■ kernel: Erase the kernel core-dump. ■
startup-config	Specifies the startup configuration.
all	Specifies all checkpoints.

Examples

Erasing checkpoint **ckpt1**:

```
switch# erase checkpoint ckpt1
```

Erasing the startup configuration:

```
switch# erase startup-config
```

Erasing all checkpoints:


```
switch# erase checkpoint all
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

show checkpoint <CHECKPOINT-NAME>

```
show checkpoint <CHECKPOINT-NAME> [json]
```

Description

Shows the configuration of a checkpoint.

Parameter	Description
<CHECKPOINT-NAME>	Specifies the name of a checkpoint.
[json]	Specifies that the output is displayed in JSON format.

Examples

Showing the configuration of the `ckpt1` checkpoint in CLI format:

```
switch# show checkpoint ckpt1
Checkpoint configuration:
!
!Version AOS-CX PL.10.07.0000K-75-g55e5193
!export-password: default
lacp system-priority 65535
user admin group administrators password ciphertext
AQBapQjwipecbv36io0jFfde7ZzrHckncal1D+3n8XFTZKQdmYgAAADetYOeHSme93xzdD0uz6Vr9Kl+XBzB+
2GB0UBxSF7rvgn2x8KSgkqv7iqXVQ0Te6LkSMnH4BdNaT3Bf25qyvOqmr4YakO1V3rg8zAOADkPktQD8joTH
XflzwomoIzcmv/uX
cli-session
    timeout 0
!
!
!
!
ssh server vrf default
vlan 1
spanning-tree
interface lag 1
    no shutdown
    vlan access 1
interface lag 128
```

```

        no shutdown
        vlan access 1
interface lag 129
    shutdown
    vlan access 1
    lacp mode active
interface 1/1/1
    no shutdown
    lag 128
    lacp port-id 65535
interface 1/1/2
    no shutdown
    vlan access 1
interface 1/1/3
    no shutdown
    vlan access 1
interface 1/1/4
    no shutdown
    vlan access 1
interface 1/1/5
    no shutdown
    vlan access 1
interface 1/1/6
    no shutdown
    vlan access 1
interface 1/1/7
    no shutdown
    vlan access 1
interface 1/1/8
    no shutdown
    vlan access 1
interface 1/1/9
    no shutdown
    vlan access 1
interface 1/1/10
    no shutdown
    vlan access 1
interface 1/1/11
    no shutdown
    vlan access 1
interface 1/1/12
    no shutdown
    vlan access 1
interface 1/1/13
    no shutdown
    vlan access 1
interface 1/1/14
    no shutdown
    vlan access 1
interface 1/1/15
    no shutdown
    vlan access 1
interface 1/1/16
    no shutdown
    vlan access 1
interface vlan 1
    ip dhcp
snmp-server vrf default
!
!
!
!
```

```
!  
https-server vrf default
```

Showing the configuration of the `ckpt1` checkpoint in JSON format:

```
switch# show checkpoint ckpt1 json  
Checkpoint configuration:  
{  
  "AAA_Server_Group": {  
    "local": {  
      "group_name": "local"  
    },  
    "none": {  
      "group_name": "none"  
    }  
  },  
  ...  
  ...  
  ...  
  ...  
}
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

show checkpoint <CHECKPOINT-NAME> hash

show checkpoint <CHECKPOINT-NAME> hash [cli | json]

Description

Shows a configuration checkpoint hash calculated with the SHA-256 algorithm. When the output format is not specified, the CLI format is used. This enables you to determine whether there has been a configuration change since a previous hash was calculated.

Parameter	Description
<CHECKPOINT-NAME>	Specifies an existing checkpoint name.
[cli json]	Selects either the CLI or JSON format.

Examples

Showing a checkpoint SHA-256 hash in JSON format:

```
switch# show checkpoint ckpt1 hash json
```

```
Calculating the hash: [Success]
```

The SHA-256 hash of the checkpoint in JSON format, created in image XX.10.08.xxxx:

```
cc7a57a9bbb4e6600d3b4180296a35f6af9e797ce9c439955dfe5de58b06da9e
```

This hash is only valid for comparison to a baseline hash if the configuration has not been explicitly changed (such as with a CLI command, REST operation, etc.) or implicitly changed (such as by changing a hardware module, upgrading the SW version, etc.).

Command History

Release	Modification
10.08	Command introduced

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

show checkpoint post-configuration

```
show checkpoint post-configuration
```

Description

Shows the configuration settings for creating system checkpoints.

Examples

```
switch# show checkpoint post-configuration
```

```
Checkpoint Post-Configuration feature
```

```
-----
```

```
Status : enabled
```

```
Timeout (sec) : 300
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

show checkpoint

show checkpoint

Description

Shows a detailed list of all saved checkpoints.

Examples

Showing a detailed list of all saved checkpoints:

```
switch# show checkpoint

NAME          TYPE        WRITER  DATE (YYYY/MM/DD)  IMAGE VERSION
ckpt1         checkpoint  User    2017-02-23T00:10:02Z  XX.01.01.000X
ckpt2         checkpoint  User    2017-03-08T18:10:01Z  XX.01.01.000X
ckpt3         checkpoint  User    2017-03-09T23:11:02Z  XX.01.01.000X
ckpt4         checkpoint  User    2017-03-11T00:00:03Z  XX.01.01.000X
ckpt5         latest      User    2017-03-14T01:12:27Z  XX.01.01.000X
```

Command History

Release	Modification
10.08	Command syntax show checkpoint list all is replaced with show checkpoint.
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

show checkpoint date

show checkpoint date <START-DATE> <END-DATE>

Description

Shows detailed list of all saved checkpoints created within the specified date range.

Parameter	Description
<START-DATE>	Specifies the starting date for the range of saved checkpoints to show. Format: YYYY-MM-DD.

Parameter	Description
<END-DATE>	Specifies the ending date for the range of saved checkpoints to show. Format: YYYY-MM-DD.

Examples

Showing a detailed list of saved checkpoints for a specific date range:

```
switch# show checkpoint date 2017-03-08 2017-03-12
```

NAME	TYPE	WRITER	DATE (YYYY/MM/DD)	IMAGE	VERSION
ckpt2	checkpoint	User	2017-03-08T18:10:01Z	XX.01.01.000X	
ckpt3	checkpoint	User	2017-03-09T23:11:02Z	XX.01.01.000X	
ckpt4	checkpoint	User	2017-03-11T00:00:03Z	XX.01.01.000X	

Command History

Release	Modification
10.08	Command syntax show checkpoint list date <START-DATE> <END-DATE> is replaced with show checkpoint date <START-DATE> <END-DATE>
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

show running-config hash

show running-config hash [cli | json]

Description

Shows the running-config checkpoint hash, calculated with the SHA-256 algorithm. When the output format is not specified, the CLI format is used. This enables you to determine whether there has been a configuration change since a previous hash was calculated.

Parameter	Description
[cli json]	Selects either the CLI or JSON format.

Examples

Showing the running-config checkpoint SHA-256 hash in CLI format:

```
switch# show running-config hash cli
Calculating the hash: [Success]
```

SHA-256 hash of the config in CLI format:

8db4e7e10f4b7f1a6ab17ad2b4efe0e72f1849103eaf43da62aa1d715075b89e

This hash is only valid for comparison to a baseline hash if the configuration has not been explicitly changed (such as with a CLI command, REST operation, etc.) or implicitly changed (such as by changing a hardware module, upgrading the SW version, etc.).

Command History

Release	Modification
10.08	Command introduced

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

show startup-config hash

show startup-config hash [cli | json]

Description

Shows the startup-config checkpoint hash, calculated with the SHA-256 algorithm. When the output format is not specified, the CLI format is used. This enables you to determine whether there has been a configuration change since a previous hash was calculated.

Parameter	Description
[cli json]	Selects either the CLI or JSON format.

Examples

Showing the startup-config checkpoint SHA-256 hash in CLI format:

```
switch# show startup-config hash cli
Calculating the hash: [Success]
```

SHA-256 hash of the config in CLI format:

8db4e7e10f4b7f1a6ab17ad2b4efe0e72f1849103eaf43da62aa1d715075b89e

This hash is only valid for comparison to a baseline hash if the configuration has not been explicitly changed (such as with a CLI command, REST operation, etc.) or implicitly changed (such as by changing a hardware module, upgrading the SW version, etc.).

Command History

Release	Modification
10.08	Command introduced

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

write memory

write memory

Description

Saves the running configuration to the startup configuration. It is an alias of the command `copy running-config startup-config`. If the startup configuration is already present, this command overwrites the startup configuration.

Examples

```
switch# write memory
Success
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

Boot commands

boot fabric-module

boot fabric-module <SLOT-ID>

Description

Reboots the specified fabric module.

Parameter	Description
<SLOT-ID>	Specifies the member and slot of the module in the format member/slot. For example, to specify the module in member 1 slot 3, enter 1/3.

Usage

The `boot fabric-module` command reboots the specified fabric module. Traffic performance is affected while the module is down.

If the specified module is the only fabric module in an up state, rebooting that module stops traffic switching between line modules and the line modules power down. The line modules power up when one fabric module returns to an up state.

This command is valid for fabric modules only.

Examples

Rebooting the fabric module in slot **1/3** when auto-confirm is not enabled:

```
switch# boot fabric-module 1/3
This command will reboot the specified fabric module. Traffic performance may
be affected while the module is down. Rebooting the last fabric module will
stop traffic switching between line modules.
Do you want to continue (y/n)? y

switch#
```

Rebooting the fabric module in slot **1/1** when auto-confirm is enabled:

```
switch# boot fabric-module 1/3
This command will reboot the specified fabric module. Traffic performance may
be affected while the module is down. Rebooting the last fabric module will
stop traffic switching between line modules.
Do you want to continue (y/n) y (auto-confirm)

switch#
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
	Manager (#)	Administrators or local user group members with execution rights for this command.

boot line-module

`boot line-module <SLOT-ID>`

Description

Reboots the specified line module.

Parameter	Description
<code><SLOT-ID></code>	Specifies the member and slot of the module in the format member/slot. For example, to specify the module in member 1 slot 3, enter 1/3.

Usage

Reboots the specified line module. Any traffic for the switch passing through the affected module (SSH, TELNET, and SNMP) is interrupted. It can take up to 2 minutes to reboot the module. During that time, you can monitor progress by viewing the event log.

This command is valid for line modules only.

Examples

Reloading the module in slot 1/1:

```
switch# boot line-module 1/1
This command will reboot the specified line module and interfaces on this
module will not send or receive packets while the module is down. Any
traffic passing through the line module will be interrupted. Management
sessions connected through the line module will be affected. It might take
up to 2 minutes to complete rebooting the module. During that time, you can
monitor progress by viewing the event log.
Do you want to continue (y/n)? y
switch#
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
	Manager (#)	Administrators or local user group members with execution rights for this command.

boot management-module

`boot management-module {active | standby | <SLOT-ID>}`

Description

Reboots the specified management module. Choose the management module to reboot by role (active or standby) or by slot number.

Parameter	Description
<i>active</i>	Selects the active management module.
<i>standby</i>	Selects the standby management module.
<i><SLOT-ID></i>	Specifies the member and slot of the management module in the format <i>member/slot</i> . For example, to specify the module in member 1 slot 5, enter 1/5.

Usage

This command reboots a single management module in a chassis. Choose the management module to reboot by role (active or standby) or by slot number.

You can use the `show images` command to show information about the primary and secondary system images.

If you reboot the active management module and the standby management module is available, the active management module reboots and the standby management module becomes the active management module.

If you reboot the active management module and the standby management module is not available, you are warned, you are prompted to save the configuration, and you are prompted to confirm the operation.

If you reboot the standby management module, the standby management module reboots and remains the standby management module.

If you attempt to reboot a management module that is not available, the `boot` command is aborted.

Saving the configuration is not required. However, if you attempt to save the configuration and there is an error during the save operation, the `boot` command is aborted.



Hewlett Packard Enterprise recommends that you use the `boot management-module` command instead of pressing the module reset button to reboot a management module because if you are rebooting the only available management module, the `boot management-module` command enables you to save the configuration, cancel the reboot, or both.

Examples

Rebooting the active management module when the standby management module is available:

```
switch# boot management-module active
The management-module in slot 1/5 is going down for reboot now.
```

Rebooting the active management module when the standby management module is not available:

```
switch# boot management-module 1/5
The management module in slot 1/5 is currently active and no
standby management module was found.
This will reboot the entire switch.

Do you want to save the current configuration (y/n)? n

This will reboot the entire switch and render it unavailable
until the process is complete.
```

```
Continue (y/n)? y
The system is going down for reboot.
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
	Manager (#)	Administrators or local user group members with execution rights for this command.

boot set-default

```
boot set-default {primary | secondary}
```

Description

Sets the default operating system image to use when the system is booted.

Parameter	Description
primary	Selects the primary network operating system image.
secondary	Selects the secondary network operating system image.

Example

Selecting the primary image as the default boot image:

```
switch# boot set-default primary
Default boot image set to primary.
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

boot system

```
boot system [primary | secondary | serviceos]
```

Description

Reboots all modules on the switch. By default, the configured default operating system image is used. Optional parameters enable you to specify which system image to use for the reboot operation and for future reboot operations.

Parameter	Description
<code>primary</code>	Selects the primary operating system image for this reboot and sets the configured default operating system image to <code>primary</code> for future reboots.
<code>secondary</code>	Selects the secondary operating system image for this reboot and sets the configured default operating system image to <code>secondary</code> for future reboots.
<code>serviceos</code>	Selects the service operating system for this reboot. Does not change the configured default operating system image. The service operating system acts as a standalone bootloader and recovery OS for switches running the AOS-CX operating system and is used in rare cases when troubleshooting a switch.

Usage

This command reboots the entire system. If you do not select one of the optional parameters, the system reboots from the configured default boot image.

You can use the `show images` command to show information about the primary and secondary system images.

Choosing one of the optional parameters affects the setting for the default boot image:

- If you select the `primary` or `secondary` optional parameter, that image becomes the configured default boot image for future system reboots. The command fails if the switch is not able to set the operating system image to the image you selected.
You can use the `boot set-default` command to change the configured default operating system image.
- If you select `serviceos` as the optional parameter, the configured default boot image remains the same, and the system reboots all management modules with the service operating system.

If the configuration of the switch has changed since the last reboot, when you execute the `boot system` command you are prompted to save the configuration and you are prompted to confirm the reboot operation.

Saving the configuration is not required. However, if you attempt to save the configuration and there is an error during the save operation, the `boot system` command is aborted.

Examples

Rebooting the system from the configured default operating system image:

```
switch# boot system
Do you want to save the current configuration (y/n)? y
The running configuration was saved to the startup configuration.

This will reboot the entire switch and render it unavailable
until the process is complete.
```

```
Continue (y/n)? y  
The system is going down for reboot.
```

Rebooting the system from the secondary operating system image, setting the secondary operating system image as the configured default boot image:

```
switch# boot system secondary  
Default boot image set to secondary.  
  
Do you want to save the current configuration (y/n)? n  
  
This will reboot the entire switch and render it unavailable  
until the process is complete.  
Continue (y/n)? y  
The system is going down for reboot.
```

Canceling a system reboot:

```
switch# boot system  
  
Do you want to save the current configuration (y/n)? n  
  
This will reboot the entire switch and render it unavailable  
until the process is complete.  
Continue (y/n)? n  
Reboot aborted.  
switch#
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

show boot-history

```
show boot-history [all]
```

Description

Shows boot information. When no parameters are specified, shows the most recent information about the boot operation, and the three previous boot operations for the active management module. When the `all` parameter is specified, shows the boot information for the active management module and all available line modules. To view boot-history on the standby, the command must be sent on the standby console.

Parameter	Description
all	Shows boot information for the active management module and all available line modules.

Usage

This command displays the boot-index, boot-ID, and up time in seconds for the current boot. If there is a previous boot, it displays boot-index, boot-ID, reboot time (based on the time zone configured in the system) and reboot reasons. Previous boot information is displayed in reverse chronological order.

Index

The position of the boot in the history file. Range: 0 to 3.

Boot ID

A unique ID for the boot. A system-generated 128-bit string.

Current Boot, up for <SECONDS> seconds

For the current boot, the `show boot-history` command shows the number of seconds the module has been running on the current software.

Timestamp boot reason

For previous boot operations, the `show boot-history` command shows the time at which the operation occurred and the reason for the boot. The reason for the boot is one of the following values:

<DAEMON-NAME> crash

The daemon identified by <DAEMON-NAME> caused the module to boot.

Kernel crash

The operating system software associated with the module caused the module to boot.

Reboot requested through database

The reboot occurred because of a request made through the CLI or other API.

Uncontrolled reboot

The reason for the reboot is not known.

Examples

Showing the boot history of the active management module:

```
switch# show boot-history
Management module
=====

Index : 3
Boot ID : f1bf071bdd04492bbf8439c6e479d612
Current Boot, up for 22 hrs 12 mins 22 secs

Index : 2
Boot ID : edfa2d6598d24e989668306c4a56a06d
07 Aug 18 16:28:01 : Reboot requested through database

Index : 1
Boot ID : 0bda8d0361df4a7e8e3acdc1dba5caad
07 Aug 18 14:08:46 : Reboot requested through database

Index : 0
Boot ID : 23da2b0e26d048d7b3f4b6721b69c110
07 Aug 18 13:00:46 : Reboot requested through database
switch#
```

Showing the boot history of the active management module and all line modules:

```

switch# show boot-history all
Management module
=====

Index : 3
Boot ID : f1bf071bdd04492bbf8439c6e479d612
Current Boot, up for 22 hrs 12 mins 22 secs

Index : 2
Boot ID : edfa2d6598d24e989668306c4a56a06d
07 Aug 18 16:28:01 : Reboot requested through database

Index : 1
Boot ID : 0bda8d0361df4a7e8e3acdc1dba5caad
07 Aug 18 14:08:46 : Reboot requested through database

Index : 0
Boot ID : 23da2b0e26d048d7b3f4b6721b69c110
07 Aug 18 13:00:46 : Reboot requested through database

Line module 1/1
=====
Index : 3
10 Aug 17 12:45:46 : dune_agent crashed
...

```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

Firmware management commands

copy {primary | secondary} <REMOTE-URL>

copy {primary | secondary} <REMOTE-URL> [vrf <VRF-NAME>]

Description

Uploads a firmware image to a TFTP or SFTP server.

Parameter	Description
{primary secondary}	Selects the primary or secondary image profile to upload. Required

Parameter	Description
<REMOTE-URL>	Specifies the URL to receive the uploaded firmware using SFTP or TFTP. For information on how to format the remote URL, see URL formatting for copy commands.
vrf <VRF-NAME>	Specifies a VRF name. Default: default.

Examples

TFTP upload:

```
switch# copy primary tftp://192.0.2.0/00_10_00_0002.swi
##### 100.0%
Verifying and writing system firmware...
```

SFTP upload:

```
switch# copy primary sftp://swuser@192.0.2.0/00_10_00_0002.swi
swuser@192.0.2.0's password:
Connected to 192.0.2.0.
sftp> put primary.swi XL_10_00_0002.swi
Uploading primary.swi to /users/swuser/00_10_00_0002.swi
primary.swi          100% 179MB 35.8MB/s 00:05
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

copy {primary | secondary} <FIRMWARE-FILENAME>

copy {primary | secondary} <FIRMWARE-FILENAME>

Description

Copies a firmware image to USB storage.

Parameter	Description
{primary secondary}	Selects the primary or secondary image from which to copy the firmware. Required

Parameter	Description
<code><FIRMWARE-FILENAME></code>	Specifies the name of the firmware file to create on the USB storage device. Prefix the filename with <code>usb:/</code> . For example: <code>usb:/firmware_v1.2.3.swi</code> For information on how to format the path to a firmware file on a USB drive, see USB URL.

Examples

```
switch# copy primary usb:/11.10.00.0002.swi
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

copy primary secondary

copy primary secondary

Description

Copies the firmware image from the primary to the secondary location.

Examples

```
switch# copy primary secondary
The secondary image will be deleted.

Continue (y/n)? y
Verifying and writing system firmware...
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

copy <REMOTE-URL>

copy <REMOTE-URL> {primary | secondary} [vrf <VRF-NAME>]

Description

Downloads and installs a firmware image from a TFTP or SFTP server.

Parameter	Description
<REMOTE-URL>	Specifies the URL from which to download the firmware using SFTP or TFTP. TFTP format: tftp://<IP-ADDR>[:<PORT-NUM>] [;blocksize=<Value>]/<FILENAME> SFTP format: sftp://<USERNAME>@<IP-ADDR> [:<PORT-NUM>]/<FILENAME>
{primary secondary}	Selects the primary or secondary image profile for receiving the downloaded firmware. Required.
vrf <VRF-NAME>	Specifies the name of a VRF. Default: default.

TFTP usage

To specify a URL with:

- an IPv4 address: tftp://1.1.1.1/a.txt
- an IPv6 address: tftp://[2000::2]/a.txt
- a hostname: tftp://hpe.com/a.txt

To specify TFTP with:

- the port number of the server in the URL: tftp://1.1.1.1:12/a.txt
- the blocksize in the URL: tftp://1.1.1.1;blocksize=1462/a.txt
The valid blocksize range is 8 to 65464.
- the port number of the server and blocksize in the URL: tftp://1.1.1.1:12;blocksize=1462/a.txt

To specify a file in a directory of URL: tftp://1.1.1.1/dir/a.txt

SFTP usage

To specify:

- A URL with an IPv4 address: sftp://user@1.1.1.1/a.txt
- A URL with an IPv6 address: sftp://user@[2000::2]/a.txt
- A URL with a hostname: sftp://user@hpe.com/a.txt
- SFTP port number of a server in the URL: sftp://user@1.1.1.1:12/a.txt

- A file in a directory of URL: `sftp://user@1.1.1.1/dir/a.txt`
- To specify a file with absolute path in the URL: `sftp://user@1.1.1.1//home/user/a.txt`

Examples

TFTP download:

```
switch# copy tftp://192.10.12.0/ss.10.00.0002.swi primary
The primary image will be deleted.

Continue (y/n)? y
##### 100.0%
Verifying and writing system firmware...
```

SFTP download:

```
switch# copy sftp://swuser@192.10.12.0/ss.10.00.0002.swi primary
The primary image will be deleted.

Continue (y/n)? y
The authenticity of host '192.10.12.0 (192.10.12.0)' can't be established.
ECDSA key fingerprint is SHA256:L64khLwlyLgXlARKRMiwcAAK8oRaQ8C0oWP+PkGBXHY.
Are you sure you want to continue connecting (yes/no)? yes
Warning: Permanently added '192.10.12.0' (ECDSA) to the list of known hosts.
swuser@192.10.12.0's password:
Connected to 192.10.12.0.
Fetching /users/swuser/ss.10.00.0002.swi to ss.10.00.0002.swi.dnld
/users/swuser/ss.10.00.0002.swi          100% 179MB 25.6MB/s   00:07
Verifying and writing system firmware...
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

copy secondary primary

copy secondary primary

Description

Copies the firmware image from the secondary to the primary location.

Examples

```
switch# copy secondary primary
The primary image will be deleted.

Continue (y/n)? y
Verifying and writing system firmware...
```

```
switch# copy sftp://stor@192.22.1.0/im-switch.swi primary vrf mgmt
The primary image will be deleted.

Continue (y/n)? y
The authenticity of host '192.22.1.0 (192.22.1.0)' can't be established.
ECDSA key fingerprint is SHA256:MyI1xbdKnehYut0NLfL69gDpNzCmZqBVvBaRR46m7o8.
Are you sure you want to continue connecting (yes/no)? yes
Warning: Permanently added '192.22.1.0' (ECDSA) to the list of known hosts.
stor@192.22.1.0's password:
Connected to 192.22.1.0.
sftp> get c8d5b9f-topflite.swi c8d5b9f-topflite.swi.dnld
Fetching /home/dr/im-switch.swi to c8d5b9f-topflite.swi.dnld
/home/dr/im-switch.swi          100% 226MB 56.6MB/s 00:04

Verifying and writing system firmware...
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

copy <STORAGE-URL>

copy <STORAGE-URL> {primary | secondary}

Description

Copies, verifies, and installs a firmware image from a USB storage device connected to the active management module.

Parameter	Description
<STORAGE-URL>	Specifies the name of the firmware file to copy from the storage device. Required. USB format: usb: /<FILENAME>
{primary secondary}	Selects the primary or secondary image profile for receiving the copied firmware.

USB usage

To specify a file:

- In a USB storage device: `usb:/a.txt`
- In a directory of a USB storage device: `usb:/dir/a.txt`

Examples

```
switch# copy usb:/11.10.00.0002.swi primary
The primary image will be deleted.

Continue (y/n)? y

Verifying and writing system firmware...
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

User-based tunneling commands

backup-controller ip

```
backup-controller ip <IP-ADDR>
no backup-controller ip <IP-ADDR>
```

Description

Specifies the IP address of the backup controller for the UBT zone.

The no form of this command deletes the IP address of the backup controller.

Parameter	Description
<IP-ADDR>	Specifies the IP address of the backup controller.

Examples

Specifying the backup controller ip address for zone1:

```
switch(config)# ubt zone zone1
switch(config-ubt-zone1)# backup-controller ip 10.116.51.11
```

Delete the configured backup controller IP address:

```
switch(config)# ubt zone zone1
switch(config-ubt-zone1)# no backup-controller ip 10.116.51.11
```

Command History

Release	Modification
	--

Command Information

Platforms	Command context	Authority
	config-ubt-<ZONE-NAME>	Administrators or local user group members with execution rights for this command.

enable

enable
no enable

Description

Enables the UBT zone.

The `no` form of this command disables the UBT zone.

Examples

Enabling UBT for zone `zone1`:

```
switch(config)# ubt zone zone1
switch(config-ubt-zone1)# enable
```

Disabling UBT for `zone1`:

```
switch(config)# ubt zone zone1
switch(config-ubt-zone1)# no enable
```

Command History

Release	Modification
	--

Command Information

Platforms	Command context	Authority
	config-ubt-<ZONE-NAME>	Administrators or local user group members with execution rights for this command.

ip source-interface

```
ip source-interface {all | ubt} {interface <IFNAME> | <IPV4-ADDR>} [vrf <VRF-NAME>]  
no ip source-interface {all | ubt} {interface <IFNAME> | <IPV4-ADDR>} [vrf <VRF-NAME>]
```

Description

Sets a single source IP address for the UBT zone VRF. This ensures that all traffic sent by UBT zone/VRF has the same source IP address, regardless of how it egresses the switch.

This command provides two ways to set the source IP addresses: either by specifying a static IP address, or by using the address assigned to a switch interface. If you define both options, then the static IP address takes precedence.

The `no` form of this command deletes the single source IP address for UBT.

Parameter	Description
<code>all</code>	When used no other parameters are required.
<code>interface <IFNAME></code>	Specifies the name of the interface from which UBT obtains its source IP address. The interface must have a valid IP address assigned to it. If the interface has both a primary and secondary IP address, the primary IP address is used.
<code><IPV4-ADDR></code>	Specifies the source IP address to use for UBT. The IP address must be defined on the switch, and it must exist on the specified VRF. Default: default. Specify the address in IPv4 format (x.x.x.x), where x is a decimal number from 0 to 255.
<code>vrf <VRF-NAME></code>	Specifies the name of the VRF from which the UBT zone sets its source IP address.

Examples

Setting interface 1/1/7 as the source address for UBT for VRF default:

```
switch(config)# ip source-interface ubt interface 1/1/7 vrf default
```

Deleting the configured source interface 1/1/7 as the source address for UBT for VRF default:

```
switch(config)# no ip source-interface ubt interface 1/1/7 vrf default
```

Specifying the static IP address 1.1.1.1 as the source address for UBT for VRF default:

```
switch(config)# ip source-interface ubt 1.1.1.1 vrf default
```

Deleting the configured ip address as the source address for UBT for VRF default:

```
switch(config)# no ip source-interface ubt 1.1.1.1 vrf default
```

Command History

Release	Modification
	--

Command Information

Platforms	Command context	Authority
	config	Administrators or local user group members with execution rights for this command.

papi-security-key

```
papi-security-key [{ciphertext <SEC-KEY> | plaintext <SEC-KEY>}]
no papi-security-key
```

Description

Specifies the shared security key used to encrypt UBT PAPI messages exchanged between the switch and the controller cluster for the zone.

The `no` form of this command deletes the shared security key .

Parameter	Description
ciphertext <SEC-KEY>	Specifies an encrypted security key.
plaintext <SEC-KEY>	Specifies a plaintext security key. Range: 10 to 64 characters. NOTE: When the security key is not provided on the command line, plaintext security key prompting occurs upon pressing Enter. The entered security key characters are masked with asterisks..

Examples

Specifying the PAPI security key for UBT zone `zone1` as plaintext:

```
switch(config)# ubt zone zone1
switch(config-ubt-zone1)# papi-security-key plaintext F82#450b
```

Specifying the PAPI security key for UBT with plaintext prompting:

```
switch(config)#
switch(config-ubt-zone)# papi-security-key
Enter the PAPI security key: *****
Re-Enter the PAPI security key: *****
```

Specifying the PAPI security key for UBT `zone1` as ciphertext:

```
switch(config)# ubt zone zone1
switch(config-ubt-zone1)# papi-security-key ciphertext AQBapdAVz5...RmH3+4cpg=
```

Removing the PAPI security key for UBT zone1:

```
switch(config)# ubt zone zone1
switch(config-ubt-zone1)# no papi-security-key
```

Command History

Release	Modification
	--

Command Information

Platforms	Command context	Authority
	config-ubt-<ZONE-NAME>	Administrators or local user group members with execution rights for this command.

primary-controller ip

```
primary-controller ip <IP-ADDR>
no primary-controller ip <IP-ADDR>
```

Description

Specifies the IP address of the primary controller IP address for the zone.

The `no` form of this command deletes the IP address of the primary controller.

Parameter	Description
<IP-ADDR>	Specifies the IP address of the primary controller.

Examples

Specify the primary controller IP address for zone1:

```
switch(config)# ubt zone zone1
switch(config-ubt-zone1)# primary-controller ip 10.116.51.10
```

Delete the configured primary controller IP address:

```
switch(config)# ubt zone zone1
switch(config-ubt-zone1)# no primary-controller ip 10.116.51.10
```

Command History

Release	Modification
	--

Command Information

Platforms	Command context	Authority
	config-ubt-<ZONE-NAME>	Administrators or local user group members with execution rights for this command.

sac-heartbeat-interval

sac-heartbeat-interval <TIME>
no sac-heartbeat-interval <TIME>

Description

Specifies the SAC heartbeat refresh time interval in seconds.

The `no` form of this command sets the heartbeat interval to the default value.

Parameter	Description
<TIME>	Specifies the SAC heartbeat refresh time interval in seconds. Range: 1 to 8. Default: 1.

Examples

Specifying a heartbeat refresh interval of 1 for UBT zone1:

```
switch(config)# ubt zone zone1
switch(config-ubt-zone1)# sac-heartbeat-interval 1
```

Deleting the configured heartbeat refresh interval:

```
switch(config)# ubt zone zone1
switch(config-ubt-zone1)# no sac-heartbeat-interval
```

Command History

Release	Modification
	--

Command Information

Platforms	Command context	Authority
	config-ubt-<ZONE-NAME>	Administrators or local user group members with execution rights for this command.

show ip source-interface ubt

show ip source-interface ubt

Description

Displays source IP address configuration information for the UBT zone.

Examples

Showing source IP address configuration information:

```
switch(config)# show ip source-interface ubt
```

Source-interface Configuration Information

Protocol	Src-Interface	Src-IP	VRF
ubt	vlan10	10.1.1.2	default

Command History

Release	Modification
	--

Command Information

Platforms	Command context	Authority
	Operator (>) or Manager (#)	Administrators or local user group members with execution rights for this command.

show capacities ubt

```
show capacities ubt
```

Description

Shows the maximum number of UBT clients and zones which can be configured in the system.

Example

Command History

Release	Modification
	--

Command Information

Platforms	Command context	Authority
	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show ubt

```
show ubt [brief]
show ubt zone <ZONE-NAME> [brief]
```

Description

Shows global configuration information for UBT in addition to detailed or brief information for a specific UBT zone.

Parameter	Description
zone <ZONE-NAME>	Specifies the name of a zone. Length: 1 to 64 characters.
brief	Displays brief information.

Examples

Showing global UBT configuration information where local-VLAN mode has been configured:

```
switch# show ubt

Zone Name           : zone1
UBT Mode            : local-vlan
Primary Controller  : 10.116.51.10
Backup Controller   : 10.116.51.11
SAC HeartBeat Interval : 1
UAC KeepAlive Interval : 60
Reserved VLAN Identifier : 4094
VRF Name            : default
Admin State         : ENABLED
PAPI Security Key   : AQBapdxySvGPvdTl ... bL4FE=
```

Showing global UBT configuration information where VLAN-extend mode has been configured:

```
switch# show ubt

Zone Name           : zone1
UBT Mode            : vlan-extend
Primary Controller  : 10.116.51.10
Backup Controller   : 10.116.51.11
SAC HeartBeat Interval : 1
UAC KeepAlive Interval : 60
Reserved VLAN Identifier : -NA-
VRF Name            : default
Admin State         : ENABLED
PAPI Security Key   : AQBapdxySvGPvdTlkYn1 ... bL4FE=
```

Showing global UBT configuration information with operational state down failure reason:

```
switch# show ubt

Zone Name           : my-zone
UBT Mode            : local-vlan
Primary Controller  : 10.116.51.10
Backup Controller   : 10.116.51.11
SAC HeartBeat Interval : 1
UAC KeepAlive Interval : 60
Reserved VLAN Identifier : 4094
VRF Name            : my-vrf
Admin State         : ENABLED
PAPI Security Key   :
```

```

AQBapdxySvGPvdTlkYn1/naKX403jKHrm28xLYfO6mLOK499BwAAAHdJp/bL4FE=
Operational State      : up

Zone Name              : my-zone2
UBT Mode               : local-vlan
Primary Controller     : 10.116.51.10
Backup Controller      : 10.116.51.11
SAC HeartBeat Interval : 1
UAC KeepAlive Interval : 60
Reserved VLAN Identifier : 4094
VRF Name               : my-vrf2
Admin State            : ENABLED
PAPI Security Key      :
AQBapdxySvGPvdTlkYn1/naKX403jKHrm28xLYfO6mLOK499BwAAAHdJp/bL4FE=
Operational State      : down
Failure Reason         : Controller is unreachable

```

Showing brief global UBT configuration information where local-VLAN mode has been configured:

```

switch(config)# show ubt brief
-----
Zone Name      UBT Mode      Primary Controller Address  VRF Name  Status
Operational State
-----
zone1          local-vlan      10.116.51.10               default    Enabled
up
zone2          local-vlan      20.116.51.20               vrf2      Enabled
down
zone3          local-vlan      30.116.51.30               vrf3      Enabled
up

```

Showing brief global UBT configuration information where VLAN-extend mode has been configured:

```

switch# show ubt brief
-----
Zone Name      UBT Mode      Primary Controller Address  VRF Name  Status
Operational State
-----
zone1          vlan-extend     10.116.51.10               default    Enabled
up
zone2          vlan-extend     20.116.51.20               vrf2      Enabled
down
zone3          vlan-extend     30.116.51.30               vrf3      Enabled
up

```

Showing brief configuration for UBT zone1 where local-VLAN mode has been configured:

```

switch# show ubt zone zone1 brief
-----
Zone Name      UBT Mode      Primary Controller Address  VRF Name  Status
-----
zone1          local-vlan      10.116.51.10               default    Enabled

```

Showing brief configuration for UBT zone1 where VLAN-extend mode has been configured:

```
switch# show ubt zone zone1 brief
```

Zone Name	UBT Mode	Primary Controller Address	VRF Name	Status
zone1	vlan-extend	10.116.51.10	default	Enabled

Showing brief global UBT configuration information where VLAN-extend mode has been configured:

```
switch# show ubt zone zone1 brief
```

Zone Name	UBT Mode	Primary Controller Address	VRF Name	Status
zone1	vlan-extend	10.116.51.10	default	Enabled

Command History

Release	Modification
10.09	■ Failure Reason field added in the output of <code>show ubt</code> command. ■ Operational State column added in the output of <code>show ubt brief</code> command.
	--

Command Information

Platforms	Command context	Authority
	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show ubt information

```
show ubt information
```

```
show ubt information zone <ZONE-NAME>
```

Description

Shows SAC and UAC information for UBT. Specifying a zone name displays UBT information for that zone.

Parameter	Description
<i>ZONE-NAME</i>	Specifies UBT zone name. Maximum characters: 64.

Examples

Showing SAC and UAC information for the tunneled node server:

```
switch(config)# show ubt information
```

```

=====
Zone zone1:
=====
SAC Information :

  Active      : 10.1.1.2
  Standby     : 10.1.1.3

Node List Information :

  Cluster Name      : cluster1

  Cluster Alias Name :

  Node List        :
  -----
    10.1.1.2
    10.1.1.3
    10.1.1.4

Bucket Map Information :

Bucket Map Active   : [0...255]

Bucket ID  A-UAC      S-UAC      Connectivity
-----
0          10.1.1.2    10.1.1.3    L2
1          10.1.1.3    10.1.1.4    L2
2          10.1.1.4    10.1.1.2    L2
...

```

Showing SAC and UAC information for zone1:

```

switch(config)# show ubt information zone zone1

=====
Zone zone1:
=====
SAC Information :

  Active      : 10.1.1.2
  Standby     : 10.1.1.3

Node List Information :

  Cluster Name      : cluster1

  Cluster Alias Name :

  Node List        :
  -----
    10.1.1.2
    10.1.1.3
    10.1.1.4

Bucket Map Information :

Bucket Map Active   : [0...255]

```


Bucket ID	A-UAC	S-UAC	Connectivity
0	10.1.1.2	10.1.1.3	L2
1	10.1.1.3	10.1.1.4	L2
2	10.1.1.4	10.1.1.2	L2
...			

Command History

Release	Modification
	--

Command Information

Platforms	Command context	Authority
	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show ubt state

```
show ubt state
show ubt state zone <ZONE-NAME>
show ubt state zone <ZONE-NAME> uac-ip <UAC-ADDR>
```

Description

Shows the global UBT state.

Specifying a zone shows the UBT state of that zone.

Specifying a UAC IP address shows the UBT state of that UAC.

Parameter	Description
zone <ZONE-NAME>	Specifies UBT zone name. Maximum characters: 64.
uac-ip <UAC-ADDR>	Specifies the IP address of the user anchor controller for which to view user information. Specify the address in IPv4 format (x.x.x.x), where x is a decimal number from 0 to 255.

Examples

Showing the UBT state where local-VLAN mode has been configured:

```
switch# show ubt state
=====
Zone zone1:
=====
Local Conductor Server (LCS) State:
LCS Type      IP Address    State          Role
-----
Primary       : 10.1.1.2    ready_for_bootstrap operational_primary
```

```

Secondary      : 10.1.1.10      ready_for_bootstrap operational_secondary
Switch Anchor Controller (SAC) State:
      IP Address      MAC Address      State
-----
Active         : 10.1.1.2        00:0b:86:b7:62:9f    registered
Standby        : 10.1.1.3        00:0b:86:b7:64:0f    registered
User Anchor Controller(UAC): 10.1.1.2
User           Port      State      Bucket ID  Gre Key  VLAN
-----
00:00:00:00:00:01 1/1/1  registered      5          13      4094
User Anchor Controller(UAC): 10.1.1.3
User           Port      State      Bucket ID  Gre Key  VLAN
-----
00:00:00:00:00:02 1/1/2  registered      4          14      4094

```

Showing the UBT state where VLAN-extend mode has been configured:

```

switch# show ubt state
=====
Zone zone1:
=====
Local Conductor Server (LCS) State:
LCS Type      IP Address      State      Role
-----
Primary       : 10.1.1.2        ready_for_bootstrap operational_primary
Secondary     : 10.1.1.10      ready_for_bootstrap operational_secondary
Switch Anchor Controller (SAC) State:
      IP Address      MAC Address      State
-----
Active        : 10.1.1.2        00:0b:86:b7:62:9f    registered
Standby       : 10.1.1.3        00:0b:86:b7:64:0f    registered
User Anchor Controller(UAC): 10.1.1.2
User          Port      State      Bucket ID  Gre Key  VLAN
-----
00:00:00:00:00:01 1/1/1  registered      5          13      10
User Anchor Controller(UAC): 10.1.1.3
User          Port      State      Bucket ID  Gre Key  VLAN
-----
00:00:00:00:00:02 1/1/2  registered      4          14      20

```

Showing the UBT state of zone1:

```

switch# show ubt state zone zone1
=====
Zone zone1:
=====
Local Conductor Server (LCS) State:
LCS Type      IP Address      State      Role
-----
Primary       : 10.1.1.2        ready_for_bootstrap operational_primary
Secondary     : 10.1.1.10      ready_for_bootstrap operational_secondary
Switch Anchor Controller (SAC) State:

```

	IP Address	MAC Address	State			
Active	: 10.1.1.2	00:0b:86:b7:62:9f	registered			
Standby	: 10.1.1.3	00:0b:86:b7:64:0f	registered			
User Anchor Controller(UAC): 10.1.1.2						
User	Port	State		Bucket ID	Gre Key	VLAN
00:00:00:00:00:01	1/1/1	registered		5	13	10
User Anchor Controller(UAC): 10.1.1.3						
User	Port	State		Bucket ID	Gre Key	VLAN
00:00:00:00:00:02	1/1/2	registered		4	14	20

Showing the UBT state of a UAC with IP address 15.212.219.57 where local-VLAN mode has been configured:

switch# show ubt state zone zone1 uac-ip 15.212.219.57						
User Anchor Controller(UAC): 15.212.219.57						
User	Port	State		Bucket ID	Gre Key	VLAN
00:00:00:00:00:04	1/1/20	registered		4	14	4000

Showing the UBT state of a UAC with IP address 15.212.219.55 where VLAN-extend mode has been configured:

switch# show ubt state zone zone1 uac-ip 15.212.219.55						
User Anchor Controller(UAC): 15.212.219.55						
User	Port	State		Bucket ID	Gre Key	VLAN
00:00:00:00:00:07	1/1/10	registered		40	14	20
00:00:00:00:00:08	1/1/12	registered		28	14	30

Command History

Release	Modification
	--

Command Information

Platforms	Command context	Authority
	Operator (>) or Manager (#)	Administrators or local user group members with execution rights for this command.

show ubt statistics

```
show ubt statistics
show ubt statistics zone <ZONE-NAME>
show ubt statistics zone <ZONE-NAME> uac-ip <UAC-ADDR>
```

Description

Displays statistics for UBT.

Specifying a zone shows the UBT statistics for that zone.

Specifying a UAC IP address shows the UBT statistics for that UAC.

Parameter	Description
zone <ZONE-NAME>	Specifies UBT zone name. Maximum characters: 64.
uac-ip <UAC-ADDR>	Specifies the IP address of the user anchor controller for which to view user information. Specify the address in IPv4 format (x.x.x.x), where x is a decimal number from 0 to 255.

Examples

Showing UBT statistics where local-VLAN mode has been configured:

```
switch# show ubt statistics
UBT Statistics
=====
Zone zone1:
=====
Control Plane Statistics
Active : 10.1.1.1
  Bootstrap Tx : 10      Bootstrap Rx : 10
  Nodelist Rx  : 25      Nodelist Ack Rx : 6
  Bucketmap Rx : 21      Bucketmap Ack Rx : 10
  Failover Tx  : 4        Failover Ack Rx : 3
  Unbootstrap Tx : 7      Unbootstrap Ack Rx : 5
  Heartbeat Tx : 5        Heartbeat Rx : 3
Standby : 10.1.1.2
  Bootstrap Tx : 10      Bootstrap Rx : 10
  Nodelist Rx  : 25      Nodelist Ack Rx : 6
  Bucketmap Rx : 21      Bucketmap Ack Rx : 12
  Failover Tx  : 4        Failover Ack Rx : 3
  Unbootstrap Tx : 5      Unbootstrap Ack Rx : 3
  Heartbeat Tx : 7        Heartbeat Rx : 4
UAC : 10.1.1.1
  Bootstrap Tx : 10      Bootstrap Ack Rx : 5
  Unbootstrap Tx : 5      Unbootstrap Ack Rx : 5
  Keepalive Tx : 2        Keepalive Ack Rx : 2
UAC : 10.1.1.2
  Bootstrap Tx : 5        Bootstrap Ack Rx : 5
  Unbootstrap Tx : 0      Unbootstrap Ack Rx : 0
  Keepalive Tx : 0        Keepalive Ack Rx : 0
Data Plane Statistics
UAC      Packets Tx    Packets Rx
-----
10.1.1.1 45678        23456
10.1.1.2 34567        23457
User Statistics
UAC      User Count
```

```

-----
10.1.1.1    1
10.1.1.2    2

```

Showing UBT statistics where VLAN-extend mode has been configured:

```

switch# show ubt statistics
UBT Statistics
=====
Zone zone1:
=====
Control Plane Statistics
Active : 10.1.1.3
  Bootstrap Tx      : 10      Bootstrap Rx      : 10
  Nodelist Rx       : 25      Nodelist Ack Rx   : 6
  Bucketmap Rx      : 21      Bucketmap Ack Rx  : 10
  Failover Tx       : 4        Failover Ack Rx   : 3
  Unbootstrap Tx    : 7        Unbootstrap Ack Rx : 5
  Heartbeat Tx      : 5        Heartbeat Rx      : 3
Standby : 10.1.1.4
  Bootstrap Tx      : 10      Bootstrap Rx      : 10
  Nodelist Rx       : 25      Nodelist Ack Rx   : 6
  Bucketmap Rx      : 21      Bucketmap Ack Rx  : 12
  Failover Tx       : 4        Failover Ack Rx   : 3
  Unbootstrap Tx    : 5        Unbootstrap Ack Rx : 3
  Heartbeat Tx      : 7        Heartbeat Rx      : 4
UAC : 10.1.1.3
  Bootstrap Tx      : 10      Bootstrap Ack Rx   : 5
  Unbootstrap Tx    : 5        Unbootstrap Ack Rx : 5
  Keepalive Tx      : 2        Keepalive Ack Rx   : 2
UAC : 10.1.1.4
  Bootstrap Tx      : 5        Bootstrap Ack Rx   : 5
  Unbootstrap Tx    : 0        Unbootstrap Ack Rx : 0
  Keepalive Tx      : 0        Keepalive Ack Rx   : 0
Data Plane Statistics
SAC tunnel Rx      : 444
Standby-SAC tunnel Rx : 0
UAC      Packets Tx  Packets Rx
-----
10.1.1.3  45678      23456
10.1.1.4  34567      23457
User Statistics
UAC      User Count
-----
10.1.1.3  1
10.1.1.4  2

```

Showing UBT statistics for zone1 where local-vlan mode has been configured:

```

switch# show ubt statistics zone zone1

UBT Statistics

Zone zone1:
Control Plane Statistics

```

```

Active   : 10.1.1.3
  Bootstrap Tx   : 10
  Nodelist Rx    : 25
  Bucketmap Rx   : 21
  Failover Tx    : 4
  Unbootstrap Tx : 7
  Heartbeat Tx   : 5
  Bootstrap Rx   : 10
  Nodelist Ack Rx : 6
  Bucketmap Ack Rx : 10
  Failover Ack Rx : 3
  Unbootstrap Ack Rx : 5
  Heartbeat Rx   : 3

Standby  : 10.1.1.4
  Bootstrap Tx   : 10
  Nodelist Rx    : 25
  Bucketmap Rx   : 21
  Failover Tx    : 4
  Unbootstrap Tx : 5
  Heartbeat Tx   : 7
  Bootstrap Rx   : 10
  Nodelist Ack Rx : 6
  Bucketmap Ack Rx : 12
  Failover Ack Rx : 3
  Unbootstrap Ack Rx : 3
  Heartbeat Rx   : 4

UAC : 10.1.1.3
  Bootstrap Tx   : 10
  Unbootstrap Tx : 5
  Keepalive Tx   : 2
  Bootstrap Ack Rx : 5
  Unbootstrap Ack Rx : 5
  Keepalive Ack Rx : 2

UAC : 10.1.1.4
  Bootstrap Tx   : 5
  Unbootstrap Tx : 0
  Keepalive Tx   : 0
  Bootstrap Ack Rx : 5
  Unbootstrap Ack Rx : 0
  Keepalive Ack Rx : 0

Data Plane Statistics

UAC      Packets Tx   Packets Rx
-----
10.1.1.3 45678        23456
10.1.1.4 34567        23457

User Statistics

UAC      User Count
-----
10.1.1.3 1
10.1.1.4 2

```

Showing UBT statistics for `zone1` where VLAN-extend mode has been configured:

```

switch# show ubt statistics zone zone1

UBT Statistics

Zone zone1:
Control Plane Statistics

Active   : 10.1.1.3
  Bootstrap Tx   : 10
  Nodelist Rx    : 25
  Bucketmap Rx   : 21
  Failover Tx    : 4
  Unbootstrap Tx : 7
  Heartbeat Tx   : 5
  Bootstrap Rx   : 10
  Nodelist Ack Rx : 6
  Bucketmap Ack Rx : 10
  Failover Ack Rx : 3
  Unbootstrap Ack Rx : 5
  Heartbeat Rx   : 3

Standby  : 10.1.1.4
  Bootstrap Tx   : 10
  Nodelist Rx    : 25
  Bucketmap Rx   : 21
  Bootstrap Rx   : 10
  Nodelist Ack Rx : 6
  Bucketmap Ack Rx : 12

```

```

Failover Tx      : 4
Unbootstrap Tx   : 5
Heartbeat Tx     : 7

Failover Ack Rx   : 3
Unbootstrap Ack Rx : 3
Heartbeat Rx      : 4

UAC : 10.1.1.3
Bootstrap Tx      : 10
Unbootstrap Tx    : 5
Keepalive Tx      : 2

Bootstrap Ack Rx   : 5
Unbootstrap Ack Rx : 5
Keepalive Ack Rx   : 2

UAC : 10.1.1.4
Bootstrap Tx      : 5
Unbootstrap Tx    : 0
Keepalive Tx      : 0

Bootstrap Ack Rx   : 5
Unbootstrap Ack Rx : 0
Keepalive Ack Rx   : 0

Data Plane Statistics

SAC tunnel Rx      : 444
Standby-SAC tunnel Rx : 0

UAC      Packets Tx   Packets Rx
-----
10.1.1.3  45678      23456
10.1.1.4  34567      23457

User Statistics

UAC      User Count
-----
10.1.1.3    1
10.1.1.4    2

```

Showing the UBT statistics of a UAC with IP address 101.101.101.11:

```

switch# show ubt statistics zone zone1 uac-ip 101.101.101.11
Data Plane Statistics

SAC tunnel Rx      : 6457
Standby-SAC tunnel Rx : 0

UAC      Packets Tx   Packets Rx
-----
101.101.101.11 : 145379605      145450113

```

Command History

Release	Modification
	--

Command Information

Platforms	Command context	Authority
	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show ubt users

```
show ubt users [ all | count | down | mac <MAC-ADDR> | {port <IF-NAME> | <IF-RANGE>} | up]
zone <ZONE-NAME>
```

Description

Displays user information for UBT.

Parameter	Description
all	Display information for all users.
count	Display the total number of users configured to tunnel traffic.
down	Display the users that are not able to tunnel traffic.
mac <MAC-ADDR>	Display user information based on MAC address.
port <IF-NAME> <IF-RANGE>	Display user information for a specific interface or range of interfaces. For example, port 1/1/1 or port 1/1/1-1/1/10.
up	Display user information that are active.
zone <ZONE-NAME>	Specifies UBT zone name. Maximum characters: 64.

Examples

Showing information for all users:

```
switch# show ubt users all
=====
Displaying All UBT Users for Zone: zone1
=====
Downloaded user roles are preceded by *
Port      Mac Address      Tunnel Status  Secondary UserRole  Failure Reason
-----
1/25      00:00:00:11:12:03  activated     authenticated       ---/---
```

Showing information for users of zone1:

```
switch# show ubt users all zone zone1
=====
Displaying All UBT Users for Zone: zone1
=====
Downloaded user roles are preceded by *
Port      Mac Address      Tunnel Status  Secondary UserRole  Failure Reason
-----
1/25      00:00:00:11:12:03  activated     authenticated       ---/---
```

Displaying the number of users that are tunneling traffic:

```
switch# show ubt users count

Total Number of Users using ubt Zone : zone1 is 2
```



```
=====
Total Number of Users in all the zones :
=====
```

Showing users that are down:

```
switch# show ubt users down

=====
Displaying UBT Users of Zone: zone1 having Tunnel Status DOWN
=====
Downloaded user roles are preceded by *
Port Mac Address      Tunnel Status      Secondary UserRole  Failure Reason
-----
1/25 00:00:00:11:12:03 activation_failed  authenticated      User bootstrap has
                                           failed
```

Showing information for users of zone1 that are down:

```
switch# show ubt users down zone zone1

=====
Displaying UBT Users of Zone: zone1 having Tunnel Status DOWN
=====
Downloaded user roles are preceded by *
Port Mac Address      Tunnel Status      Secondary UserRole  Failure Reason
-----
1/25 00:00:00:11:12:03 activation_failed  authenticated      User bootstrap has
                                           failed
```

Showing information for users on port 2/25:

```
switch# show ubt users port 2/25

=====
Displaying UBT Users of Zone: zone1
=====
Downloaded user roles are preceded by *
Port   Mac Address      Tunnel Status      Secondary UserRole  Failure Reason
-----
2/25   00:00:00:11:12:03   activated         authenticated        ---/---
```

Showing information for users that are up:

```
switch# show ubt users up

=====
Displaying UBT Users of Zone: zone1 having Tunnel Status UP
=====
Downloaded user roles are preceded by *
Port   Mac Address      Tunnel Status      Secondary UserRole  Failure Reason
-----
1/25   00:00:00:11:12:03   activated         authenticated        ---/---
```

Showing information for users of zone1 that are up:

```
switch# show ubt users up zone zone1
```

```
=====
Displaying UBT Users of Zone: zone1 having Tunnel Status UP
=====
```

```
Downloaded user roles are preceded by *
```

Port	Mac Address	Tunnel Status	Secondary UserRole	Failure Reason
1/25	00:00:00:11:12:03	activated	authenticated	---/---

Showing information for the user with MAC address 00:00:00:11:12:03:

```
switch# show ubt users mac 00:00:00:11:12:03
```

```
Displaying UBT User of Zone: zone1 having MAC-Address: 00:00:00:11:12:03
```

```
Downloaded user roles are preceded by *
```

Port	Mac Address	Tunnel Status	Secondary UserRole	Failure Reason
1/25	00:00:00:11:12:03	activated	authenticated	---/---

Command History

Release	Modification
	--

Command Information

Platforms	Command context	Authority
	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

uac-keepalive-interval

```
uac-keepalive-interval <TIME>
no uac-keepalive-interval <TIME>
```

Description

Specifies the UAC keep alive refresh time interval in seconds for the UBT zone.

The `no` form of this command sets the keep alive interval to the default value.

Parameter	Description
<TIME>	Specifies the UAC keep-alive refresh time interval in seconds. Range: 1 to 60. Default: 60.

Examples

Specifying a keepalive interval of 60 seconds for UBT `zone1`:

```
switch(config)# ubt zone zone1
switch(config-ubt-zone1)# uac-keepalive-interval 60
```

Deleting the configured UAC keepalive interval:

```
switch(config)# ubt zone zone1
switch(config-ubt-zone1)# no uac-keepalive-interval 60
```

Command History

Release	Modification
	--

Command Information

Platforms	Command context	Authority
	config-ubt-<ZONE-NAME>	Administrators or local user group members with execution rights for this command.

ubt

```
ubt zone <ZONE-NAME> vrf <VRF-NAME>
no ubt zone <ZONE-NAME> vrf <VRF-NAME>
```

Description

Creates a User Based Tunnel (UBT) zone with a specified zone name and VRF name. A UBT name is used to configure all UBT properties advertised by the UBT feature.

The `no` form of this command removes the specified UBT zone.

Parameter	Description
<ZONE-NAME>	Specifies a name for the UBT zone. Length: 1 to 64 characters.
<VRF-NAME>	Specifies the VRF on which to establish the UBT tunnel.

Examples

Creating UBT zone called `zone1` associated with a VRF called `default`:

```
switch(config)# ubt zone zone1 vrf default
```

Removing UBT zone `zone1` on VRF `default`:

```
switch(config)# no ubt zone zone1 vrf default
```

Deleting all UBT configurations:

```
switch(config)# no ubt
```

Command History

Release	Modification
	--

Command Information

Platforms	Command context	Authority
	config	Administrators or local user group members with execution rights for this command.

ubt-client-vlan

```
ubt-client-vlan <VLAN-ID>  
no ubt-client-vlan <VLAN-ID>
```

Description

Specifies the UBT Client VLAN or local VLAN. This VLAN is used in local-VLAN mode only. If the UBT client VLAN is configured in VLAN-extend mode it is ignored, this is the reserved VLAN that all client traffic uses to get to the gateway. At the gateway, VLAN and policy will be assigned to the client traffic. No other feature should be enabled on the UBT client VLAN.

The `no` form of this command removes the VLAN to use for tunneled clients.

Parameter	Description
<VLAN-ID>	Specifies the VLAN ID to use for tunneled clients. Range: 1-4094.

Examples

Creating VLAN 4000:

```
switch(config)# vlan 4000  
switch(config-vlan-4000)# no shutdown
```

Specifying UBT client VLAN 4000:

```
switch(config)# ubt-client-vlan 4000
```

Removing configured UBT client VLAN 4000:

```
switch(config)# no ubt-client-vlan 4000
```

Command History

Release	Modification
	--

Command Information

Platforms	Command context	Authority
	config	Administrators or local user group members with execution rights for this command.

ubt mode vlan-extend

```
ubt-mode vlan-extend
no ubt-mode [vlan-extend]
```

Description

Selects VLAN extended mode. When VLAN-extend mode is enabled clients are assigned to their UBT role-based VLAN in the hardware datapath.

The `no` form of the command selects the default local-VLAN mode. In local-VLAN mode clients are assigned to a local switch VLAN and associated with their UBT role-based VLAN when client traffic reaches the controller.

The default UBT mode is local-VLAN.

Examples

Setting the UBT mode to VLAN-extend:

```
switch(config)# ubt-mode vlan-extend
```

Setting the UBT mode back to the default of local-VLAN:

```
switch(config)# no ubt-mode
```

Command History

Release	Modification
	--

Command Information

Platforms	Command context	Authority
	config	Administrators or local user group members with execution rights for this command.

Simple Network Management Protocol (SNMP) is an Internet-standard protocol used for managing and monitoring the devices connected to a network by collecting, organizing and modifying information about managed devices on IP networks.

Configuring SNMP

(The SNMP agent provides read-only access.)

Procedure

1. Enable SNMP on a VRF using the command `snmp-server vrf`.
2. Set the system contact, location, and description for the switch with the following commands:
 - `snmp-server system-contact`
 - `snmp-server system-location`
 - `snmp-server system-description`
3. If required, change the default SNMP port on which the agent listens for requests with the command `snmp-server agent-port`.
4. By default, the agent uses the community string **public** to protect access through SNMPv1/v2c. Set a new community string with the command `snmp-server community`.
5. Configure the trap receivers to which the SNMP agent will send trap notifications with the command `snmp-server host`.
6. Create an SNMPv3 context and associate it with any available SNMPv3 user to perform context specific v3 MIB polling using the command `snmpv3 user`.
7. Create an SNMPv3 context and associate it with an available SNMPv1/v2c community string to perform context specific v1/v2c MIB polling using the command `snmpv3 context`.
8. Review your SNMP configuration settings with the following commands:
 - `show snmp agent-port`
 - `show snmp community`
 - `show snmp system`
 - `show snmpv3 context`
 - `show snmp trap`
 - `show snmp vrf`
 - `show snmpv3 users`
 - `show tech snmp`

Example 1

This example creates the following configuration:

- Enables SNMP on the out-of-band management interface (VRF **mgmt**).
- Sets the contact, location, and description for the switch to: **JaniceM, Building2, LabSwitch**.
- Sets the community string to **Lab8899X**.

```
switch(config)# snmp-server vrf mgmt
switch(config)# snmp-server system-contact JaniceM
switch(config)# snmp-server system-location Building2
switch(config)# snmp-server system-description LabSwitch
switch(config)# snmp-server community Lab8899X
```

Example 2

This example creates the following configuration:

- Creates an SNMPv3 user named **Admin** using **sha** authentication with the plaintext password **mypassword** and using **des** security with the plaintext password **myprivpass**.
- Associates the SNMPv3 user `Admin` with a context named `newContext`.

```
switch(config)# snmpv3 user Admin auth sha auth-pass plaintext mypassword priv des
priv-pass plaintext myprivpass
switch(config)# snmpv3 user Admin context newContext
```



Refer to the SNMP Guide for SNMP Commands.

The Aruba Central network management solution, a software-as-a-service subscription in the cloud, provides streamlined management of multiple network devices. AOS-CX switches are able to talk to Aruba Central and utilize cloud-based management functionality. Cloud-based management functionality allows for the deployment of network devices at sites with no or few dedicated IT personnel (branch offices, retail stores, and so forth). AOS-CX switches utilize secure communication protocols to connect to the Aruba Central cloud portal, and can coexist with corporate security standards, such as those mandating the use of firewalls.



When Aruba Central manages AOS-CX switches, it functions as the single source of truth and the Web UI operates in read-only mode.

This feature provides:

- Zero-touch provisioning
- Network Management/Remote monitoring
- Events/alerts notification
- Switch Configuration using templates
- Firmware management

Connecting to Aruba Central

AOS-CX switch downloads the location of Aruba Central server using:

- Command-line interface (CLI).
- Aruba Activate server.
- DHCP options provided during ZTP.

DHCP servers are used to connect to Central on-premise management.

If switch is unable to connect to Activate server, it retries to establish connection in exponential back off of 1s, 2s, 8s, 16s, 32s, 64s, 128s, and 256s. After the maximum back off of 256s, switch retries happen for every 5 minutes.



If the Network Time Protocol (NTP) is not enabled on the switch, it will synchronize the system time with the Activate server.

Custom CA certificate

To use custom CA certificate to connect to Aruba Central, AOS-CX switch downloads the certificate from Aruba Activate server.



-
- If there is no custom CA provided by Aruba Activate, the CA certificate present in the device is used.
 - Duplicate CA certificates from Aruba Activate server will be ignored.
 - If CA certificate is absent in consecutive responses from Aruba Activate server, the installed custom CA certificate in device will be removed.
 - Switch will have only one custom CA certificate installed from Aruba Activate Server.
 - The certificate installed from Aruba Activate server will not be displayed in the show commands.
-

Support mode in Aruba Central

When the AOS-CX switch is managed by Aruba Central, the switch configuration cannot be modified using other interfaces such as CLI or Web UI. The following command categories are blocked:

- auto-confirm
- boot
- checkpoint
- copy-in commands
- erase
- erps
- https-server
- mfgread
- mfgwrite
- port-access
- All configuration commands except the aruba-central command

In cases where a maintenance or troubleshooting activity requires configuration updates, aruba-central support-mode can be enabled to allow these operations.



The aruba-central support-mode enable or disable operation is effective only in the CLI session where it is executed and does not impact the other CLI sessions.

If the user tries to execute any command that is not allowed, an **Invalid input:** error message is displayed.

Aruba Central commands

aruba-central

```
aruba-central
no aruba-central
```

Description

Creates or enters the Aruba Central configuration context (`config-aruba-central`).

Example

Administrators or local user group members with execution rights for this command.
Creating the Aruba Central configuration context:

```
switch(config)# aruba-central
switch(config-aruba-central)#
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
8320 8325 8360	config	Administrators or local user group members with execution rights for this command.

aruba-central support-mode

```
aruba-central support-mode
no aruba-central support-mode
```

Description

Allows the device to be writable for all operations in Aruba Central lockout mode for troubleshooting. The no form of this command disables this activity.



Support-mode is disabled by default when the switch is managed by Aruba Central. This command is only effective in the CLI session where it is executed.

Examples

Configuring the device to be writable for all operations in Aruba Central lockout mode:

```
switch# aruba-central support-mode
switch#
```

Removing the configuration that allows the device to be writable for all operations in Aruba Central lockout mode:

```
switch# no aruba-central support-mode
switch#
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
8320 8325 8360	Manager (#)	Administrators or local user group members with execution rights for this command.

configuration-lockout central managed

configuration-lockout central managed
no configuration-lockout central managed

Description

Configures the device to only be writable from Aruba Central. Aruba Central will be the only agent that can add, modify, or delete configurations on the device. The no form of this command disables this feature.



The no form of this command is only available when the device is disconnected from Aruba Central.

Usage

The AOS-CX switch connects to Aruba Central in either of two modes: monitor or managed. When the device is connected in monitor mode, Aruba Central monitors the configurations on the switch. When the device is connected in managed mode, the `configuration-lockout central managed` command does not allow configuration changes from other interfaces such as CLI or Web UI.

Examples

Configuring the device to only be writable from Aruba Central :

```
switch(config)# configuration-lockout central managed
switch# show configuration-lockout
configuration lockout
-----
central: managed
switch# sh aruba-central
Central admin state           :enable
Central location              :20.0.0.2:8083
VRF for connection           :default
Central connection status     :connected

Central source                :cli
Central source connection status :connected
Central source last connected on :Tue Feb 9 17:53:13 UTC 2021

Activate Server URL           :devices-v2.arubanetworks.com
CLI location                  :20.0.2:8083
CLI VRF                       :default
switch(config)# end
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
8320 8325 8360	config	Administrators or local user group members with execution rights for this command.

disable

disable

Description

Disables connection to Aruba Central server.

When the connection is disabled, the switch does not attempt to connect to the Aruba Central server or fetch central location from any of the three sources (CLI/Aruba Activate/DHCP). It also disconnects any active connection to the Aruba Central server.

Example

```
switch(config-aruba-central)# disable
switch(config-aruba-central)#
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
8320 8325 8360	config-aruba-central	Administrators or local user group members with execution rights for this command.

enable

enable

Description

Enables connection to Aruba Central server. When the connection is enabled, the switch attempts to download the location of the Aruba Central server in one of the following ways at startup and after the connection is lost:

- Using command-line interface (CLI).
- Connecting to Aruba Activate server.
- Using DHCP options provided during ZTP.

DHCP servers provide the options requested by the device to connect to Central, Central On-premise management, or the TFTP server.

Examples

```
switch(config-aruba-central)# enable
switch(config-aruba-central)#
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
8320 8325 8360	config-aruba-central	Administrators or local user group members with execution rights for this command.

location-override

```
location-override <location> [vrf <VRF-NAME>]
no location-override
```

Description

When `location` and `vrf` are configured, the switch overrides existing connections to Aruba Central. The switch attempts to establish connection to Aruba Central with the specified location and VRF with highest priority.

The `no` form of this command removes location override values from the Aruba Central configuration context.

Parameter	Description
<code><location></code>	Specifies one of these values: ■ <code><FQDN></code>: a fully qualified domain name. ■ <code><IPv4></code>: an IPv4 address. ■ <code><IPv6></code>: an IPv6 address.
<code>vrf <VRF-NAME></code>	Specifies the VRF name to be used for communicating with the server. If no VRF name is provided, the default VRF named <code>default</code> is used.

Examples

Configuring location override with location and VRF:

```
switch(config-aruba-central)# location-override aruba-central.com vrf default
switch(config-aruba-central)#
```

Configuring location override with location only:

```
switch(config-aruba-central)# location-override aruba-central.com  
switch(config-aruba-central)#
```

Removing location override values from the Aruba Central configuration context:

```
switch(config-aruba-central)# no location-override  
switch(config-aruba-central)#
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
8320 8325 8360	config-aruba-central	Administrators or local user group members with execution rights for this command.

show aruba-central

```
show aruba-central
```

Description

Shows information about Aruba Central connection and the status of the Activate server connection.

Examples

Example of a switch that has the Aruba Central connection:

```
switch# show aruba-central  
Central admin state           :enabled  
Central location              : N/A  
VRF for connection            : N/A  
Central connection status     : N/A  
Central source                : dhcp  
Central source connection status : connection_failure  
Central source last connected on : N/A  
System time synchronized from Activate : True  
Activate server URL           : 172.17.0.1  
CLI location                  : N/A  
CLI VRF                       : N/A  
Source IP                     : N/A  
Source IP Overridden          : false  
Central support mode          : disabled
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
8320 8325 8360	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show running-config current-context

show running-config current-context

Description

Shows the running configuration for the current-context. If user is in the context of Aruba-Central(`config-aruba-central`), then Aruba Central running configuration is displayed.

Examples

Shows the running configuration of Aruba Central:

```
switch(config-aruba-central)# show running-config current-context
aruba-central
    disable
```

Command History


Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
8320 8325 8360	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Port filtering is a feature in which packets that are ingressed through a source port can be blocked for egressing on a specific set of ports.

Figure 5 Port Filter Application

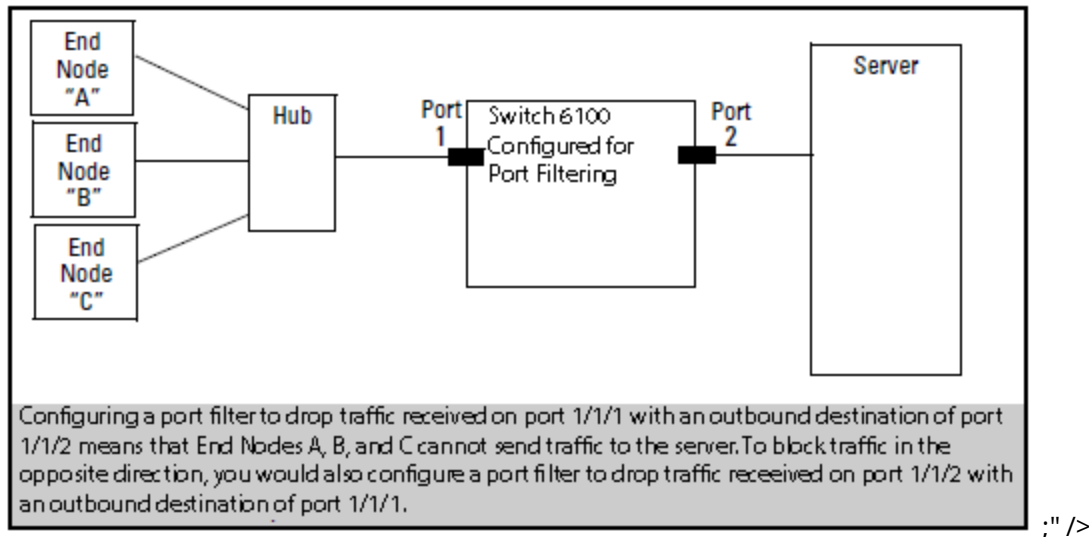

Port filtering commands

portfilter

```
portfilter <INTERFACE-LIST>
no portfilter [<INTERFACE-LIST>]
```

Description

Configures the specified ports so they do not egress any packets that were received on the source port specified in interface context.

The `no` form of this command removes the port filter setting from one or more ingress ports/LAGs.

Parameter	Description
<INTERFACE-LIST>	Specifies a list of ports/LAGs to be blocked for egressing. Specify a single interface or LAG, or a range as a comma-separated list, or both. For example: 1/1/1, 1/1/3-1/1/6, lag2, lag1-lag4.

Usage

When a port filter configuration is applied on the same ingress physical port/LAG, the configuration is updated with the new sets of egress ports/LAGs that are to be blocked for egressing and that are not a part of its previous configuration. Duplicate updates on an existing port filter configuration are ignored.

When egress ports/LAGs are removed from the existing port filter configuration of an ingress port/LAG, egressing is allowed again on those egress ports/LAGs for all packets originating from the ingress port/LAG.

The `no portfilter [<IF-NAME-LIST>]` command removes port filter configurations from the egress ports/LAGs listed in the `<IF-NAME-LIST>` parameter only. All other egress ports/LAGs in the port filter configuration of the ingress port/LAG remain intact.

If no physical ports or LAGs are provided for the `no portfilter` command, the command removes the entire port filter configuration for the ingress port/LAG.

Examples

Creating a filter that prevents packets received on port **1/1/1** from forwarding to ports **1/1/3-1/1/6** and to LAGs **1** through **4**:

```
switch(config)# interface 1/1/1
switch(config-if)# portfilter 1/1/3-1/1/6,lag1-lag4
```

Creating a filter that prevents packets received on LAG **1** from forwarding to ports **1/1/6** and LAGs **2** and **4**:

```
switch(config)# interface lag 1
switch(config-lag-if)# portfilter 1/1/6,lag2,lag4
```

Removing filters from an existing configuration that allows back packets received on port **1/1/1** to forward to ports **1/1/6** and LAGs **3** and **4**:

```
switch(config)# interface 1/1/1
switch(config-if)# no portfilter 1/1/6,lag3,lag4
```

Removing all filters from an existing configuration that allows back packets received on LAG **1** to forward to all the ports and LAGs:

```
switch(config)# interface lag 1
switch(config-lag-if)# no portfilter
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config-if config-lag-if	Administrators or local user group members with execution rights for this command.

show portfilter

```
show portfilter [<IFNAME>] [vsx-peer]
```

Description

Displays filter settings for all interfaces or a specific interface.

Parameter	Description
<IFNAME>	Specifies the ingress interface name. Specifies one of these values: ■ <FQDN>: a fully qualified domain name. ■ <IPv4>: an IPv4 address. ■ <IPv6>: an IPv6 address.
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Examples

Displaying all port filter settings on the switch:

```
switch# show portfilter
Incoming    Blocked
Interface   Outgoing Interfaces
-----
1/1/1       1/1/3-1/1/6, lag1-lag2
1/1/3       1/1/1, 1/1/5, 1/1/7, 1/1/9, 1/1/11, 1/1/13, 1/1/15, 1/1/17, 1/1/19, 1/1/21,
lag2        1/1/23, 1/1/25, 1/1/27, 1/1/29, 1/1/31, 1/1/33, 1/1/35
1/1/1       1/1/1, 1/1/3-1/1/6
```

Displaying the port filter settings for port **1/1/1**:

```
switch# show portfilter 1/1/1
Incoming    Blocked
Interface   Outgoing Interfaces
-----
1/1/1       1/1/3-1/1/6, lag1-lag2
```

Displaying the port filter settings for **LAG2**:

```
switch# show portfilter lag2
Incoming    Blocked
Interface   Outgoing Interfaces
-----
lag2        1/1/1, 1/1/3-1/1/6
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

The Domain Name System (DNS) is the Internet protocol for mapping a hostname to its IP address. DNS allows users to enter more readily memorable and intuitive hostnames, rather than IP addresses, to identify devices connected to a network. It also allows a host to keep the same hostname even if it changes its IP address.

Hostname resolution can be either static or dynamic.

- In static resolution, a local table is defined on the switch that associates hostnames with their IP addresses. Static tables can be used to speed up the resolution of frequently queried hosts.
- Dynamic resolution requires that the switch query a DNS server located elsewhere on the network. Dynamic name resolution takes more time than static name resolution, but requires far less configuration and management.

DNS client

The DNS client resolves hostnames to IP addresses for protocols that are running on the switch. When the DNS client receives a request to resolve a hostname, it can do so in one of two ways:

- Forward the request to a DNS name server for resolution.
- Reply to the request without using a DNS name server, by resolving the name using a statically defined table of hostnames and their associated IP addresses.

Configuring the DNS client

Procedure

1. Configure one or more DNS name servers with the command `ip dns server`.
2. To resolve DNS requests by appending a domain name to the requests, either configure a single domain name with the command `ip dns domain-name`, or configure a list of up to six domain names with the command `ip dns domain-list`.
3. To use static name resolution for certain hosts, associate an IP address to a host with the command `ip dns host`.
4. Review your DNS configuration settings with the command `show ip dns`.

Examples

This example creates the following configuration:

- Defines the domain **switch.com** to append to all requests.
- Defines a DNS server with IPv4 address of **1.1.1.1**.
- Defines a static DNS host named **myhost1** with an IPv4 address of **3.3.3.3**.
- DNS client traffic is sent on the default VRF (named **default**).

```

switch(config)# ip dns domain-name switch.com
switch(config)# ip dns server-address 1.1.1.1
switch(config)# ip dns host myhost1 3.3.3.3
switch(config)# exit
switch# show ip dns

```

```

VRF Name : vrf_mgmt

```

Host Name	Address

```

VRF Name : vrf_default
Domain Name : switch.com
DNS Domain list :
Name Server(s) : 1.1.1.1

```

Host Name	Address

myhost1	

This example creates the following configuration:

- Defines three domains to append to DNS requests **domain1.com**, **domain2.com**, **domain3.com** with traffic forwarding on VRF **mainvrf**.
- Defines a DNS server with an IPv6 address of **c::13**.
- Defines a DNS host named **myhost** with an IPv4 address of **3.3.3.3**.

```

switch(config)# ip dns domain-list domain1.com vrf mainvrf
switch(config)# ip dns domain-list domain2.com vrf mainvrf
switch(config)# ip dns domain-list domain3.com vrf mainvrf
switch(config)# ip dns server-address c::13
switch(config)# ip dns host myhost 3.3.3.3 vrf mainvrf
switch(config)# quit
switch# show ip dns mainvrf

```

```

VRF Name : mainvrf
Domain Name :
DNS Domain list : domain1.com, domain2.com, domain3.com
Name Server(s) : c::13

```

Host Name	Address

myhost	3.3.3.3

DNS client commands

ip dns domain-list

```

ip dns domain-list <DOMAIN-NAME> [vrf <VRF-NAME>]
no ip dns domain-list <DOMAIN-NAME> [vrf <VRF-NAME>]

```

Description

Configures one or more domain names that are appended to the DNS request. The DNS client appends each name in succession until the DNS server replies. Domains can be either IPv4 or IPv6. By default, requests are forwarded on the default VRF.

The **no** form of this command removes a domain from the list.

Parameter	Description
<code>list <DOMAIN-NAME></code>	Specifies a domain name. Up to six domains can be added to the list. Length: 1 to 256 characters.
<code>vrf <VRF-NAME></code>	Specifies a VRF name. Default: default.

Examples

This example defines a list with two entries: **domain1.com** and **domain2.com**.

```
switch(config)# ip dns domain-list domain1.com
switch(config)# ip dns domain-list domain2.com
```

This example defines a list with two entries, **domain2.com** and **domain5.com**, with requests being sent on **mainvrf**.

```
switch(config)# ip dns domain-list domain2.com vrf mainvrf
switch(config)# ip dns domain-list domain5.com vrf mainvrf
```

This example removes the entry **domain1.com**.

```
switch(config)# no ip dns domain-list domain1.com
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

ip dns domain-name

```
ip dns domain-name <DOMAIN-NAME> [ vrf <VRF-NAME> ]
no ip dns domain-name <DOMAIN-NAME> [ vrf <VRF-NAME> ]
```

Description

Configures a domain name that is appended to the DNS request. The domain can be either IPv4 or IPv6. By default, requests are forwarded on the default VRF. If a domain list is defined with the command `ip dns domain-list`, the domain name defined with this command is ignored.

The **no** form of this command removes the domain name.

Parameter	Description
<DOMAIN-NAME>	Specifies the domain name to append to DNS requests. Length: 1 to 256 characters.
vrf <VRF-NAME>	Specifies a VRF name. Default: default.

Examples

Setting the default domain name to domain.com:

```
switch(config)# ip dns domain-name domain.com
```

Removing the default domain name domain.com:

```
switch(config)# no ip dns domain-name domain.com
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

ip dns host

```
ip dns host <HOST-NAME> <IP-ADDR> [ vrf <VRF-NAME> ]
no ip dns host <HOST-NAME> <IP-ADDR> [ vrf <VRF-NAME> ]
```

Description

Associates a static IP address with a hostname. The DNS client returns this IP address instead of querying a DNS server for an IP address for the hostname. Up to six hosts can be defined. If no VRF is defined, the default VRF is used.

The **no** form of this command removes a static IP address associated with a hostname.

Parameter	Description
host <HOST-NAME>	Specifies the name of a host. Length: 1 to 256 characters.
<IP-ADDR>	Specifies an IP address in IPv4 format (x.x.x.x), where x is a decimal number from 0 to 255, or IPv6 format (xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx), where x is a hexadecimal number from 0 to F.
vrf <VRF-NAME>	Specifies a VRF name. Default: default.

Examples

This example defines an IPv4 address of **3.3.3.3** for **host1**.

```
switch(config)# ip dns host host1 3.3.3.3
```

This example defines an IPv6 address of **b::5** for **host 1**.

```
switch(config)# ip dns host host1 b::5
```

This example defines removes the entry for **host 1** with address **b::5**.

```
switch(config)# no ip dns host host1 b::5
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

ip dns server address

```
ip dns server-address <IP-ADDR> [ vrf <VRF-NAME> ]  
no ip dns server-address <IP-ADDR> [ vrf <VRF-NAME> ]
```

Description

Configures the DNS name servers that the DNS client queries to resolve DNS queries. Up to six name servers can be defined. The DNS client queries the servers in the order that they are defined. If no VRF is defined, the default VRF is used.

The **no** form of this command removes a name server from the list.

Parameter	Description
<IP-ADDR>	Specifies an IP address in IPv4 format (x.x.x.x), where x is a decimal number from 0 to 255, or IPv6 format (xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx), where x is a hexadecimal number from 0 to F.
vrf <VRF-NAME>	Specifies a VRF name. Default: default.

Examples

This example defines a name server at **1.1.1.1**.


```
switch(config)# ip dns server-address 1.1.1.1
```

This example defines a name server at **a::1**.

```
switch(config)# ip dns server-address a::1
```

This example removes a name server at **a::1**.

```
switch(config)# no ip dns server-address a::1
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

show ip dns

```
show ip dns [vrf <VRF-NAME>] [vsx-peer]
```

Description

Shows all DNS client configuration settings or the settings for a specific VRF.

Parameter	Description
vrf <VRF-NAME>	Specifies the VRF for which to show information. If no VRF is defined, the default VRF is used.
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Examples

These examples define DNS settings and then show how they are displayed with the `show ip dns` command.

```
switch(config)# ip dns domain-name domain.com
switch(config)# ip dns domain-list domain5.com
switch(config)# ip dns domain-list domain8.com
switch(config)# ip dns server-address 4.4.4.4
switch(config)# ip dns server-address 6.6.6.6
```

```

switch(config)# ip dns host host3 5.5.5.5
switch(config)# ip dns host host2 2.2.2.2
switch(config)# ip dns host host3 c::12
switch(config)# ip dns domain-name reddomain.com vrf red
switch(config)# ip dns domain-list reddomain5.com vrf red
switch(config)# ip dns domain-list reddomain8.com vrf red
switch(config)# ip dns server-address 4.4.4.5 vrf red
switch(config)# ip dns server-address 6.6.6.7 vrf red
switch(config)# ip dns host host3 5.5.5.6 vrf red
switch(config)# ip dns host host2 2.2.2.3 vrf red
switch(config)# ip dns host host3 c::13 vrf red
switch# show ip dns
VRF Name : default

```

```

Domain Name : domain.com
DNS Domain list : domain5.com, domain8.com
Name Server(s) : 4.4.4.4, 6.6.6.6

```

Host Name	Address
host2	2.2.2.2
host3	5.5.5.5
host3	c::12

VRF Name : red

```

Domain Name : reddomain.com
DNS Domain list : reddomain5.com, reddomain8.com
Name Server(s) : 4.4.4.5, 6.6.6.7

```

Host Name	Address
host2	2.2.2.3
host3	5.5.5.6
host3	c::13

```

switch(config)# ip dns domain-name domain.com vrf red
switch(config)# ip dns domain-list domain5.com vrf red
switch(config)# ip dns domain-list domain8.com vrf red
switch(config)# ip dns server-address 4.4.4.4 vrf red
switch(config)# ip dns server-address 6.6.6.6 vrf red
switch(config)# ip dns host host3 5.5.5.5 vrf red
switch(config)# no ip dns host host2 2.2.2.2 vrf red
switch(config)# ip dns host host3 c::12 vrf red

```

```

switch# show ip dns vrf red
VRF Name : red

```

```

Domain Name : domain.com
DNS Domain list : domain5.com, domain8.com
Name Server(s) : 4.4.4.4, 6.6.6.6

```

Host Name	Address
host3	5.5.5.5
host3	c::12

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

The switch provides support for LLDP and CDP to enable automatic discovery and configuration of other devices on the network.

Device profile commands

aaa authentication port-access allow-cdp-bpdu

```
aaa authentication port-access allow-cdp-bpdu
no aaa authentication port-access allow-cdp-bpdu
```

Description

Allows all packets related to the CDP (Cisco Discovery Protocol) BPDU (Bridge Protocol Data Unit) on a secure port.

The `no` form of this command blocks the CDP BPDU on a secure port. On a nonsecure port, the command has no effect.

Examples

Allowing a CDP BPDU on secure port **1/1/1**:

```
switch(config)# interface 1/1/1
switch(config-if)# aaa authentication port-access allow-cdp-bpdu
switch(config-if)# do show running-config
Current configuration:
!
!Version AOS-CX 10.0X.0000
led locator on
!
!
vlan 1
aaa authentication port-access mac-auth
    enable
aaa authentication port-access dot1x authenticator
    enable
interface 1/1/1
    no shutdown
    no routing
    vlan access 1
    aaa authentication port-access allow-cdp-bpdu
    aaa authentication port-access mac-auth
        enable
    aaa authentication port-access dot1x authenticator
        enable

switch(config-if)# do show port-access device-profile interface all
Port 1/1/1, Neighbor-Mac 00:0c:29:9e:d1:20
  Profile Name      : access_switches
  LLDP Group        :
  CDP Group         : aruba-ap_cdp
  Role              : test_ap_role
```

Status : In Progress
Failure Reason :

Blocking LLDP packet on secure port **1/1/1**:

```
switch(config)# interface 1/1/1
switch(config-if)# no aaa authentication port-access allow-cdp-bpdu
switch(config-if)# do show running-config
Current configuration:
!
!Version AOS-CX 10.0X.0000
led locator on
!
!
vlan 1
aaa authentication port-access mac-auth
enable
interface 1/1/1
no shutdown
no routing
vlan access 1
aaa authentication port-access mac-auth
enable
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
	config-if	Administrators or local user group members with execution rights for this command.

aaa authentication port-access allow-cdp-proxy-logoff

```
aaa authentication port-access allow-cdp-proxy-logoff
no aaa authentication port-access allow-cdp-proxy-logoff
```

Description

Allows a client to be logged off from the system via a special TLV in the CDP packet. By default, proxy logoff via CDP packet support is disabled. When `allow-cdp-proxy-logoff` is enabled, TLV received from CDP packets corresponding to logoff processing will be read and logoff is issued to the clients. This only works on client authentication enabled ports and `aaa authentication port-access allow-cdp-bpdu` must be enabled to process .

Examples

Allowing a client to be logged off from the system via a special TLV in the CDP packet:

```

switch(config)# interface 1/1/1
switch(config-if)# aaa authentication port-access allow-cdp-proxy-logoff
switch(config-if)# show running-config interface 1/1/1
interface 1/1/1
    no shutdown
no routing
    vlan access 1
    aaa authentication port-access allow-cdp-bpdu
    aaa authentication port-access allow-cdp-proxy-logoff
    aaa authentication port-access allow client-limit 2
    aaa authentication port-access dot1x authenticator
        enable
    aaa authentication port-access mac-auth
        enable
exit

```

Command History

Release	Modification
10.09.1000	Command introduced.

Command Information

Platforms	Command context	Authority
	config-if	Administrators or local user group members with execution rights for this command.

aaa authentication port-access allow-lldp-bpdu

```

aaa authentication port-access allow-lldp-bpdu
no aaa authentication port-access allow-lldp-bpdu

```

Description

Allows all packets related to the LLDP BPDU (Bridge Protocol Data Unit) on a secure port.

The **no** form of this command blocks the LLDP BPDU on a secure port. On a nonsecure port, the command has no effect.

Examples

Allowing an LLDP BPDU on secure port **1/1/1**:

```

switch(config)# interface 1/1/1
switch(config-if)# aaa authentication port-access allow-lldp-bpdu
switch(config-if)# do show running-config
Current configuration:
!
!Version AOS-CX 10.0X.0000
led locator on
!
!
vlan 1
aaa authentication port-access mac-auth
    enable

```

```

interface 1/1/1
  no shutdown
  no routing    vlan access 1
  aaa authentication port-access allow-lldp-bpdu
  aaa authentication port-access mac-auth
  enable

switch(config-if)# do show port-access device-profile interface all
Port 1/1/1, Neighbor-Mac 00:0c:29:9e:d1:20
  Profile Name      : access_switches
  LLDP Group        : 2920-grp
  CDP Group         :
  Role              : local_2920_role
  Status            : Profile Applied
  Failure Reason    :

```

Blocking LLDP BPDU on secure port **1/1/1**:

```

switch(config)# interface 1/1/1
switch(config-if)# no aaa authentication port-access allow-lldp-bpdu
switch(config-if)# do show running-config
Current configuration:
!
!Version AOS-CX 10.0X.0000led locator on
!
!
vlan 1
aaa authentication port-access mac-auth
enable
interface 1/1/1
  no shutdown
  no routing    vlan access 1
  aaa authentication port-access mac-auth
  enable

```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
	config-if	Administrators or local user group members with execution rights for this command.

associate cdp-group

```

associate cdp-group <GROUP-NAME>
no associate cdp-group <GROUP-NAME>

```

Description

Associates a CDP (Cisco Discovery Protocol) group with a device profile. A maximum of two CDP groups can be associated with a device profile.

The **no** form of this command removes a CDP group from a device profile.

Parameter	Description
<code><GROUP-NAME></code>	Specifies the name of the CDP group to associate with this device profile. Range: 1 to 32 alphanumeric characters.

Examples

Associating the CDP group **my-cdp-group** with the device profile **profile01**:

```
switch(config)# port-access device-profile profile01
switch(config-device-profile)# associate cdp-group my-cdp-group
```

Removing the CDP group **my-cdp-group** from the device profile **profile01**:

```
switch(config)# port-access device-profile profile01
switch(config-device-profile)# no associate cdp-group my-cdp-group
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
	config-device-profile	Administrators or local user group members with execution rights for this command.

associate lldp-group

```
associate lldp-group <GROUP-NAME>
no associate lldp-group <GROUP-NAME>
```

Description

Associates an LLDP group with a device profile. A maximum of two LLDP groups can be associated with a device profile

The **no** form of this command removes an LLDP group from a device profile.

Parameter	Description
<code><GROUP-NAME></code>	Specifies the name of the LLDP group to associate with the device profile. Range: 1 to 32 alphanumeric characters.

Examples

Associating the LLDP group **my-lldp-group** with the device profile **profile01**:


```
switch(config)# port-access device-profile profile01
switch(config-device-profile)# associate lldp-group my-lldp-group
```

Removing the LLDP group **my-lldp-group** from the device profile **profile01**:

```
switch(config)# port-access device-profile profile01
switch(config-device-profile)# no associate lldp-group my-lldp-group
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
	config-device-profile	Administrators or local user group members with execution rights for this command.

associate mac-group

```
associate mac-group <GROUP-NAME>
no associate mac-group <GROUP-NAME>
```

Description

Associates a MAC group with a device profile. A maximum of two MAC groups can be associated with a device profile.

The **no** form of this command removes a MAC group from a device profile.

Parameter	Description
<GROUP-NAME>	Specifies the name of the MAC group to associate with this device profile. Range: 1 to 32 alphanumeric characters.

Examples

Associating the MAC group **mac01-group** with the device profile **profile01**:

```
switch(config)# port-access device-profile profile01
switch(config-device-profile)# associate mac-group mac01-group
```

Removing the MAC group **mac01-group** from the device profile **profile01**:

```
switch(config)# port-access device-profile profile01
switch(config-device-profile)# no associate mac-group mac01-group
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
	config-device-profile	Administrators or local user group members with execution rights for this command.

associate role

```
associate role <ROLE-NAME>
no associate role <ROLE-NAME>
```

Description

Associates a role with a device profile. Only one role can be associated with a device profile. For information on how to configure a role, see the port access role information in the *Security Guide*.

The `no` form of this command removes a role from a device profile.

Parameter	Description
<ROLE-NAME>	Specifies the name of the role to associate with the device profile. Range: 1 to 64 alphanumeric characters.

Examples

Associating the role **my-role** with the device profile **profile01**:

```
switch(config)# port-access device-profile profile01
switch(config-device-profile)# associate role my-role
```

Removing the role **my-role** from the device profile **profile01**:

```
switch(config)# port-access device-profile profile01
switch(config-device-profile)# no associate role my-role
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
	config-device-profile	Administrators or local user group members with execution rights for this command.

disable

disable
no disable

Description

Disables a device profile.

The `no` form of this command enables a device profile.

Examples

Disabling a device profile:

```
switch(config)# port-access device-profile profile01  
switch(config-device-profile)# disable
```

Enabling a device profile named profile01:

```
switch(config)# port-access device-profile profile01  
switch(config-device-profile)# no disable
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
	config-device-profile	Administrators or local user group members with execution rights for this command.

enable

enable
no enable

Description

Enables a device profile.

The `no` form of this command disables a device profile.

Examples

Enabling a device profile:

```
switch(config)# port-access device-profile profile01  
switch(config-device-profile)# enable
```

Disabling a device profile named profile01:

```
switch(config)# port-access device-profile profile01
switch(config-device-profile)# no enable
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
	config-device-profile	Administrators or local user group members with execution rights for this command.

ignore (for CDP groups)

```
ignore [seq <SEQ-NUM>] {platform <PLATFORM> | sw-version <SWVERSION> |
voice-vlan-query <VLAN-ID>}
no ignore [seq <SEQ-ID>] {platform <PLATFORM> | sw-version <SWVERSION> |
voice-vlan-query <VLAN-ID>}
```

Description

Defines a rule to ignore devices for a CDP (Cisco Discovery Protocol) group. Up to 64 match/ignore rules can be defined for a group.

The **no** form of this command removes a rule for ignoring devices from a CDP group.

Parameter	Description
seq <SEQ-ID>	Specifies the ID of the rule to create or modify. If no ID is specified when adding a rule, an ID is automatically assigned in increments of 10 in the order in which rules are added. When more than one rule matches the command entered, the rule with the lowest ID takes precedence.
platform <PLATFORM>	Specifies the hardware or model details of the neighbor. Range: 1 to 128 alphanumeric characters.
sw-version <SWVERSION>	Specifies the software version of the neighbor. Range: 1 to 128 alphanumeric characters.
voice-vlan-query <VLAN-ID>	Specifies the VLAN query value of the neighbor. Range: 1 to 65535.

Examples

Adding a rule to the CDP group **grp01** that ignores a device that transmits **PLATFORM01** in the platform TLV:

```
switch(config)# port-access cdp-group grp01
switch(config-cdp-group)# ignore platform PLATFORM01
```

Adding a rule to the CDP group **grp01** that ignores a device that transmits **SWVERSION** in software version TLV:

```
switch(config)# port-access cdp-group grp01
switch(config-cdp-group)# ignore sw-version SWVERSION
```

Removing the rule that matches the sequence number **25** from the CDP group named **grp01**.

```
switch(config)# port-access cdp-group grp01
switch(config-cdp-group)# no ignore seq 25
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
	config-cdp-group	Administrators or local user group members with execution rights for this command.

ignore (for LLDP groups)

```
ignore [seq <SEQ-ID>] {sys-desc <SYS-DESC> | sysname <SYS-NAME> |
    vendor-oui <VENDOR-OUI> [type <KEY> [value <VALUE>]]}
no ignore [seq <SEQ-ID>] {sys-desc <SYS-DESC> | sysname <SYS-NAME> |
    vendor-oui <VENDOR-OUI> [type <KEY> [value <VALUE>]]}
```

Description

Defines a rule to ignore devices for an LLDP group. Up to 64 match/ignore rules can be defined for a group. The **no** form of this command removes a rule for ignoring devices from an LLDP group.

Parameter	Description
seq <SEQ-ID>	Specifies the ID of the rule to create or modify. If no ID is specified when adding a rule, an ID is automatically assigned in increments of 10 in the order in which rules are added. When more than one rule matches the command entered, the rule with the lowest ID takes precedence.
sys-desc <SYS-DESC>	Specifies the LLDP system description type-length-value (TLV). Range: 1 to 256 alphanumeric characters.
sysname <SYS-NAME>	Specifies the LLDP system name TLV. Range: 1 to 64 alphanumeric characters.
vendor-oui <VENDOR-OUI>	Specifies the LLDP system vendor OUI TLV. Range: 1 to 6 alphanumeric characters.
type <KEY>	Specifies the vendor OUI subtype key. Optional.
value <VALUE>	Specifies the vendor OUI subtype value. Range: 1 to 256 alphanumeric characters.

Examples

Adding a rule to the LLDP group **grp01** that ignores a device that transmits **PLATFORM01** in the system description TLV:

```
switch(config)# port-access lldp-group grp01
switch(config-lldp-group)# ignore sys-desc PLATFORM01
```

Removing the rule that matches the sequence number **25** from the LLDP group named **grp01**.

```
switch(config)# port-access lldp-group grp01
switch(config-lldp-group)# no match seq 25
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
	config-lldp-group	Administrators or local user group members with execution rights for this command.

ignore (for MAC groups)

```
[seq <SEQ-ID>] ignore {mac <MAC-ADDR> | mac-mask <MAC-MASK> | mac-oui <MAC-OUI>}
no [seq <SEQ-ID>] ignore {mac <MAC-ADDR> | mac-mask <MAC-MASK> | mac-oui <MAC-OUI>}
```

Description

Defines a rule to ignore devices for a MAC group based on the criteria of MAC address, MAC address mask, or MAC Organizational Unique Identifier (OUI). Up to 64 ignore rules can be defined for a group.

The **no** form of this command removes a rule for ignoring devices from a MAC group.

Parameter	Description
seq <SEQ-ID>	Specifies the entry sequence ID of the rule to create or modify a MAC group. If no ID is specified when adding a rule, an ID is automatically assigned in increments of 10 in the order in which rules are added. When more than one rule matches the command entered, the rule with the lowest ID takes precedence. Range: 1 to 4294967295.
mac <MAC-ADDR>	Specifies the MAC address of the device to ignore.
mac-mask <MAC-MASK>	Specifies the MAC address mask to ignore devices in that range. Supported MAC address masks: /32 and /40.
mac-oui <MAC-OUI>	Specifies the MAC OUI to ignore devices in that range. Supports MAC OUI address of maximum length of 24 bits.

Usage

To achieve the required configuration of matches for devices, it is recommended to first ignore the devices that you do not want to add. Then match the criteria for the rest of the devices that you want to add to the MAC group.

For example, if you want to ignore a specific device but add all the other devices that belong to a MAC OUI, then you must first configure the ignore criteria with a lower sequence number. And then configure match criteria with a higher sequence number.

Examples

Adding a rule to the MAC group **grp01** to ignore a device based on MAC address, but match all other devices belonging to a MAC OUI:

```
switch(config)# mac-group grp01
switch(config-mac-group)# ignore mac 1a:2b:3c:4d:5e:6f
switch(config-mac-group)# match mac-oui 1a:2b:3c
switch(config-mac-group)# exit
switch(config)# do show running-config
Current configuration:
!
!Version AOS-CX Virtual.10.0X.0001
!export-password: default
led locator on
!
!
!
!
ssh server vrf mgmtdefault
!
!
!
!
!
vlan 1
interface mgmt
    no shutdown
    ip dhcp
mac-group grp01
    seq 10 ignore mac 1a:2b:3c:4d:5e:6f
    seq 20 match mac-oui 1a:2b:3c
...
```

Adding a rule to the MAC group **grp01** to ignore devices based on MAC address mask, but match all other devices belonging to a MAC OUI:

```
switch(config)# mac-group grp01
switch(config-mac-group)# ignore mac-mask 1a:2b:3c:4d/32
switch(config-mac-group)# match mac-oui 1a:2b:3c
switch(config-mac-group)# exit
switch(config)# do show running-config
Current configuration:
!
!Version AOS-CX Virtual.10.0X.0001
!export-password: default
led locator on
!
!
```

```

!
!
ssh server vrf mgmtdefault
!
!
!
!
!
vlan 1
interface mgmt
    no shutdown
    ip dhcp
mac-group grp01
    seq 10 ignore mac-mask 1a:2b:3c:4d/32
    seq 20 match mac-oui 1a:2b:3c
...

```

Adding a rule to the MAC group **grp01** that ignores a device based on complete MAC address:

```

switch(config)# mac-group grp01
switch(config-mac-group)# ignore mac 1a:2b:3c:4d:5e:6f

```

Adding a rule to the MAC group **grp02** that ignores devices based on MAC mask:

```

switch(config)# mac-group grp01
switch(config-mac-group)# ignore mac-mask 1a:2b:3c:4d:5e/40
switch(config-mac-group)# ignore mac-mask 18:e3:ab:73/32

```

Adding a rule to the MAC group **grp03** that ignores devices based on MAC OUI:

```

switch(config)# mac-group grp03
switch(config-mac-group)# ignore mac-oui 81:cd:93

```

Adding a rule to the MAC group **grp01** that ignores devices with a sequence number and based on MAC address:

```

switch(config)# mac-group grp01
switch(config-mac-group)# seq 10 ignore mac b2:c3:44:12:78:11
switch(config-mac-group)# exit
switch(config)# do show running-config
Current configuration:
!
!Version AOS-CX Virtual.10.0X.0001
!export-password: default
led locator on
!
!
vlan 1
interface mgmt
    no shutdown
    ip dhcp
mac-group grp01
    seq 10 ignore mac b2:c3:44:12:78:11

```



```
...
```

Removing the rule from the MAC group **grp01** based on sequence number:

```
switch(config)# mac-group grp01
switch(config-mac-group)# no ignore seq 10
switch(config-mac-group)# exit
switch(config)# do show running-config
Current configuration:
!
!Version AOS-CX Virtual.10.0X.0001
!export-password: default
led locator on
!
!
vlan 1
interface mgmt
    no shutdown
    ip dhcp
mac-group grp01
...
```

Adding a rule to the MAC group **grp01** that ignores devices with MAC entry sequence number and based on MAC OUI:

```
switch(config)# mac-group grp01
switch(config-mac-group)# seq 10 ignore mac b2:c3:44:12:78:11
switch(config-mac-group)# seq 20 ignore mac-oui 1a:2b:3c
switch(config-mac-group)# seq 30 ignore mac-mask 71:14:89:f3/32
switch(config-mac-group)# exit
switch(config)# do show running-config
Current configuration:
!
!Version AOS-CX Virtual.10.0X.0001
!export-password: default
led locator on
!
!
vlan 1
interface mgmt
    no shutdown
    ip dhcp
mac-group grp01
    seq 10 ignore mac b2:c3:44:12:78:11
    seq 20 ignore mac-oui 1a:2b:3c
    seq 30 ignore mac-mask 71:14:89:f3/32
...
```

Removing the rule from the MAC group **grp01** based on sequence number and MAC OUI:

```
switch(config)# mac-group grp01
switch(config-mac-group)# no seq 20 ignore mac-oui 1a:2b:3c
switch(config-mac-group)# exit
switch(config)# do show running-config
```

```

Current configuration:
!
!Version AOS-CX Virtual.10.0X.0001
!export-password: default
led locator on
!
!
vlan 1
interface mgmt
    no shutdown
    ip dhcp
mac-group grp01
    seq 10 ignore mac b2:c3:44:12:78:11
    seq 30 ignore mac-mask 71:14:89:f3/32

...

```

Removing the rule that matches the sequence number **25** from the MAC group named **grp01**.

```

switch(config)# mac-group grp01
switch(config-mac-group)# no ignore seq 25

```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
	config-mac-group	Administrators or local user group members with execution rights for this command.

mac-group

```

mac-group <MAC-GROUP-NAME>
no mac-group <MAC-GROUP-NAME>

```

Description

Creates a MAC group or modifies an existing MAC group. A MAC group is used to classify connected devices based on the MAC address details, such as mask or OUI.

A maximum of 32 MAC groups can be configured on the switch. A maximum of 2 MAC groups can be associated with a device profile. Each group accepts 64 match or ignore commands.

The **no** form of this command removes a MAC group.

Parameter	Description
<MAC-GROUP-NAME>	Specifies the name of the MAC group to create or modify. The maximum number of characters supported is 32.

Examples

Creating a MAC group named `grp01`:

```
switch(config)# mac-group grp01
switch(config-mac-group)# exit
```

Removing a MAC group named `grp01`:

```
switch(config)# no mac-group grp01
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
	config	Administrators or local user group members with execution rights for this command.

match (for CDP groups)

```
match [seq <SEQ-ID>] {platform <PLATFORM> | sw-version <SWVERSION> |
    voice-vlan-query <VLAN-ID>}
no match [seq <SEQ-ID>] {platform <PLATFORM> | sw-version <SWVERSION> |
    voice-vlan-query <VLAN-ID>}
```

Description

Defines a rule to match devices for a CDP group. A maximum of 32 CDP groups can be configured on the switch. Up to 64 match or ignore rules can be defined for each group.

The `no` form of this command removes a rule for adding devices to a CDP group.

Parameter	Description
seq <SEQ-ID>	Specifies the ID of the rule to create or modify. If no ID is specified when adding a rule, an ID is automatically assigned in increments of 10 in the order in which rules are added. When more than one rule matches the command entered, the rule with the lowest ID takes precedence.
platform <PLATFORM>	Specifies the hardware or model details of the neighbor. Range: 1 to 128 alphanumeric characters.
sw-version <SWVERSION>	Specifies the software version of the neighbor. Range: 1 to 128 alphanumeric characters.
voice-vlan-query <VLAN-ID>	Specifies the VLAN query value of the neighbor. Range: 1 to 65535.

Examples

Adding rules to match a Cisco device with a specific software version on VLAN **512** to the CDP group **grp01**:

```

switch(config)# port-access cdp-group grp01
switch(config-cdp-group)# match platform CISCO
switch(config-cdp-group)# match sw-version 11.2(12)P
switch(config-cdp-group)# match voice-vlan-query 512
switch(config-cdp-group)# match seq 50 platform cisco sw-version 11.2(12)P voice-
vlan-query 512
switch(config-cdp-group)# exit
switch(config)# do show running-config

```

Current configuration:

```

!
!Version AOS-CX Virtual.10.0X.000
!export-password: default
led locator on
!
!
vlan 1
port-access cdp-group grp01
    seq 10 match platform CISCO
    seq 20 match sw-version 11.2(12)P
    seq 30 match voice-vlan-query 512
    seq 50 match platform cisco sw-version 11.2(12)P voice-vlan-query 512

```

Removing a rule that matches the sequence number **25** from the CDP group named **grp01**:

```

switch(config)# port-access cdp-group grp01
switch(config-cdp-group)# no match seq 25

```

Adding a rule that matches the value of vendor-OUI **000b86** to the CDP group named **grp01**:

```

switch(config)# port-access cdp-group grp01
switch(config-cdp-group)# match vendor-oui 000b86

```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
	config-cdp-group	Administrators or local user group members with execution rights for this command.

match (for LLDP groups)

```

match [seq <SEQ-ID>] {sys-desc <SYS-DESC> | sysname <SYS-NAME> |
    vendor-oui <VENDOR-OUI> [type <KEY> [value <VALUE>]]}
no match [seq <SEQ-ID>] {sys-desc <SYS-DESC> | sysname <SYS-NAME> |
    vendor-oui <VENDOR-OUI> [type <KEY> [value <VALUE>]]}

```

Description

Defines a rule to match devices for an LLDP group. Up to 64 match/ignore rules can be defined for a group.

The **no** form of this command removes a rule.

Parameter	Description
seq <SEQ-ID>	Specifies the ID of the rule to create or modify. If no ID is specified when adding a rule, an ID is automatically assigned in increments of 10 in the order in which rules are added. When more than one rule matches the command entered, the rule with the lowest ID takes precedence.
sys-desc <SYS-DESC>	Specifies the LLDP system description type-length-value (TLV). Range: 1 to 256 alphanumeric characters.
sysname <SYS-NAME>	Specifies the LLDP system name TLV. Range: 1 to 64 alphanumeric characters.
vendor-oui <VENDOR-OUI>	Specifies the LLDP system vendor OUI TLV. Range: 1 to 6 alphanumeric characters.
type <KEY>	Specifies the vendor OUI subtype key.
value <VALUE>	Specifies the vendor OUI subtype value. Range: 1 to 256 alphanumeric characters.

Examples

Adding rules that match the LLDP system description **ArubaSwitch** and system name **Aruba** to the LLDP group named **grp01**:

```
switch(config)# port-access lldp-group grp01
switch(config-lldp-group)# match sys-desc ArubaSwitch
switch(config-lldp-group)# match sysname Aruba
switch(config)# do show running-config
```

```
Current configuration:
!
!Version AOS-CX Virtual.10.0X.000
!export-password: default
led locator on
!
!
vlan 1
port-access lldp-group grp01
    seq 10 match sys-desc ArubaSwitch
    seq 20 match sysname Aruba
```

Removing a rule that matches the sequence number **25** from an LLDP group named **grp01**:

```
switch(config)# port-access lldp-group grp01
switch(config-lldp-group)# no match seq 25
```

Adding a rule that matches the value of vendor-OUI **000b86** with type of **1** to the LLDP group named **grp01**:

```
switch(config)# port-access lldp-group grp01
switch(config-lldp-group)# match vendor-oui 000b86 type 1
```

Adding a rule that matches the value of vendor-OUI **000c34** to the LLDP group named **grp01**:

```
switch(config)# port-access lldp-group grp01
switch(config-lldp-group)# match vendor-oui 000c34
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
	config-lldp-group	Administrators or local user group members with execution rights for this command.

match (for MAC groups)

```
[seq <SEQ-ID>] match {mac <MAC-ADDR> | mac-mask <MAC-MASK> | mac-oui <MAC-OUI>}
no [seq <SEQ-ID>] match {mac <MAC-ADDR> | mac-mask <MAC-MASK> | mac-oui <MAC-OUI>}
```

Description

Defines a rule to match devices for a MAC group based on the criteria of MAC address, MAC address mask, or MAC Organizational Unique Identifier (OUI). Up to 64 match rules can be defined for a group.

You must not configure the following special MAC addresses:

- Null MAC—For example, 00:00:00:00:00:00 or 00:00:00/32
- Multicast MAC
- Broadcast MAC—For example, ff:ff:ff:ff:ff:ff
- System MAC

Although the switch accepts these addresses, it will not process these addresses for the local MAC match feature.

The `no` form of this command removes a rule for adding devices to a MAC group.

The number of clients that can onboard based on the match criteria is configured in the `aaa authentication port-access client-limit` command. For information about this command, see the *Security Guide* for your switch.

Parameter	Description
seq <SEQ-ID>	Specifies the entry sequence ID of the rule to create or modify a MAC group. If no ID is specified when adding a rule, an ID is automatically assigned in increments of 10 in the order in which rules are added. When more than one rule matches the command entered, the rule with the lowest ID takes precedence. Range: 1 to 4294967295.
mac <MAC-ADDR>	Specifies the MAC address of the device.

Parameter	Description
mac-mask <MAC-MASK>	Specifies the MAC address mask to add devices in that range. Supported MAC address masks: /32 and /40.
mac-oui <MAC-OUI>	Specifies the MAC OUI to add devices in that range. Supports MAC OUI address of maximum length of 24 bits.

Examples

Adding a device to the MAC group **grp01** based on complete MAC address:

```
switch(config)# mac-group grp01
switch(config-mac-group)# match mac 1a:2b:3c:4d:5e:6f
switch(config-mac-group)# exit
```

Adding devices to the MAC group **grp02** based on MAC mask:

```
switch(config)# mac-group grp01
switch(config-mac-group)# match mac-mask 1a:2b:3c:4d:5e/40
switch(config-mac-group)# match mac-mask 18:e3:ab:73/32
switch(config-mac-group)# exit
```

Adding devices to the MAC group **grp03** based on MAC OUI:

```
switch(config)# mac-group grp03
switch(config-mac-group)# match mac-oui 81:cd:93
switch(config-mac-group)# exit
```

Adding devices to the MAC group **grp01** with MAC entry sequence number and based on MAC address:

```
switch(config)# mac-group grp01
switch(config-mac-group)# seq 10 match mac b2:c3:44:12:78:11
switch(config-mac-group)# exit
switch(config)# do show running-config
Current configuration:
!
!Version AOS-CX Virtual.10.0X.0001
!export-password: default
led locator on
!
!
vlan 1
interface mgmt
    no shutdown
    ip dhcp
mac-group grp01
    seq 10 match mac b2:c3:44:12:78:11
...

```

Removing devices from the MAC group **grp01** based on sequence number:

```

switch(config)# mac-group grp01
switch(config-mac-group)# no match seq 10
switch(config-mac-group)# exit
switch(config)# do show running-config
Current configuration:
!
!Version AOS-CX Virtual.10.0X.0001
!export-password: default
led locator on
!
!
vlan 1
interface mgmt
    no shutdown
    ip dhcp
    mac-group grp01
...

```

Adding devices to the MAC group **grp01** with MAC entry sequence number and based on MAC address, MAC address mask, and MAC OUI:

```

switch(config)# mac-group grp01
switch(config-mac-group)# seq 10 match mac b2:c3:44:12:78:11
switch(config-mac-group)# seq 20 match mac-oui 1a:2b:3c
switch(config-mac-group)# seq 30 match mac-mask 71:14:89:f3/32
switch(config-mac-group)# exit
switch(config)# do show running-config
Current configuration:
!
!Version AOS-CX Virtual.10.0X.0001
!export-password: default
led locator on
!
!
vlan 1
interface mgmt
    no shutdown
    ip dhcp
mac-group grp01
    seq 10 match mac b2:c3:44:12:78:11
    seq 20 match mac-oui 1a:2b:3c
    seq 30 match mac-mask 71:14:89:f3/32
...

```

Removing devices from the MAC group **grp01** based on MAC OUI:

```

switch(config)# mac-group grp01
switch(config-mac-group)# no seq 20 match mac-oui 1a:2b:3c
switch(config-mac-group)# exit
switch(config)# do show running-config
Current configuration:
!
!Version AOS-CX Virtual.10.0X.0001
!export-password: default
led locator on
!
!

```



```

vlan 1
interface mgmt
    no shutdown
    ip dhcp
mac-group grp01
    seq 10 match mac b2:c3:44:12:78:11
    seq 30 match mac-mask 71:14:89:f3/32

...

```

Adding devices to the MAC group **grp03** with MAC entry sequence number and based on MAC address mask:

```

switch(config)# mac-group grp03
switch(config-mac-group)# seq 10 match mac-mask 10:14:a3:b7:55/40
switch(config-mac-group)# exit
switch(config)# do show running-config
Current configuration:
!
!Version AOS-CX Virtual.10.0X.0001
!export-password: default
led locator on
!
!
vlan 1
interface mgmt
    no shutdown
    ip dhcp
mac-group grp03
    seq 10 match mac-mask 10:14:a3:b7:55/40

...

```

Removing devices from the MAC group **grp03** based on MAC address mask:

```

switch(config)# mac-group grp03
switch(config-mac-group)# no seq 10 match mac-mask 10:14:a3:b7:55/40
switch(config-mac-group)# exit
switch(config)# do show running-config
Current configuration:
!
!Version AOS-CX Virtual.10.0X.0001
!export-password: default
led locator on
!
!
vlan 1
interface mgmt
    no shutdown
    ip dhcp
mac-group grp03

...

```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
	config-mac-group	Administrators or local user group members with execution rights for this command.

port-access cdp-group

```
port-access cdp-group <CDP-GROUP-NAME>
no port-access cdp-group <CDP-GROUP-NAME>
```

Description

Creates a CDP (Cisco Discovery Protocol) group or modifies an existing CDP group. A CDP Group is used to classify connected devices based on the CDP packet details advertised by the device. A maximum of 32 CDP groups can be configured on the switch. Each group accepts 64 match/ignore commands.

The `no` form of this command removes a CDP group.

Parameter	Description
<CDP-GROUP-NAME>	Specifies the name of the CDP group to create or modify. The maximum number of characters supported is 32. Required.

Examples

Creating a CDP group named grp01:

```
switch(config)# port-access cdp-group grp01
switch(config-cdp-group)# match platform CISCO
switch(config-cdp-group)# match sw-version 11.2(12)P
switch(config-cdp-group)# match voice-vlan-query 512
switch(config-cdp-group)# seq 50 match platform cisco sw-version 11.2(12)P voice-
vlan-query 512
switch(config-cdp-group)# exit
switch(config)# do show running-config

Current configuration:
!
!Version AOS-CX Virtual.10.0X.000
!export-password: default
led locator on
!
!
vlan 1
port-access cdp-group grp01
    seq 10 match platform CISCO
    seq 20 match sw-version 11.2(12)P
    seq 30 match voice-vlan-query 512
    seq 50 match platform cisco sw-version 11.2(12)P voice-vlan-query 512
```

Removing a CDP group named grp01:

```
switch(config)# no port-access cdp-group grp01
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
	config	Administrators or local user group members with execution rights for this command.

port-access device-profile

```
port-access device-profile <DEVICE-PROFILE-NAME>  
no port-access device-profile <DEVICE-PROFILE-NAME>
```

Description

Creates a new device profile and switches to the `config-device-profile` context. A maximum of 32 device profiles can be created.

The `no` form of this command removes a device profile.

Parameter	Description
<DEVICE-PROFILE-NAME>	Specifies the name of a device profile. Range: 1 to 32 alphanumeric characters.

Examples

Creating a device profile named **profile01**:

```
switch(config)# port-access device-profile profile01  
switch(config-device-profile)#
```

Removing a device profile named **profile01**:

```
switch(config)# no port-access device-profile profile01
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
	config	Administrators or local user group members with execution rights for this command.

port-access device-profile mode block-until-profile-applied



You must configure this mode in device profile only on standalone ports where there is no security configured and when you not want the port to be offline until one client is onboarded.

```
port-access device-profile mode block-until-profile-applied
no port-access device-profile mode block-until-profile-applied
```

Description

Configures the switch to block the port until a profile match occurs for a device. This configuration is required when no security feature is enabled on the port.

You must enable this mode or security on the port for local MAC match feature to operate. You must not enable both features on the same port at the same time.



You must not combine any other AAA configurations with the block-until-profile-applied mode.

The `no` form of this command removes a rule for adding devices to a MAC group.

Example

Configuring block-until-profile applied mode on port 1/1/1:

```
switch(config)# interface 1/1/1
switch(config-if)# port-access device-profile
switch(config-if-deviceprofile)# mode block-until-profile-applied
switch(config-if-deviceprofile)# end
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
	config-if config-if-deviceprofile	Administrators or local user group members with execution rights for this command.

port-access lldp-group

```
port-access lldp-group <LLDP-GROUP-NAME>
no port-access lldp-group <LLDP-GROUP-NAME>
```

Description

Creates an LLDP group or modifies an existing LLDP group. An LLDP group is used to classify connected devices based on the LLDP type-length-values (TLVs) advertised by the device. A maximum of 32 LLDP groups can be configured on the switch. Each group accepts 64 match/ignore commands.

The `no` form of this command removes an LLDP group.

Parameter	Description
<code><LLDP-GROUP-NAME></code>	Specifies the name of the LLDP group to create or modify. The maximum number of characters supported is 32. Required.

Examples

Creating an LLDP group named grp01:

```
switch(config)# port-access lldp-group grp01
switch(config-lldp-group)#
```

Removing an LLDP group named grp01:

```
switch(config)# no port-access lldp-group grp01
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
	config	Administrators or local user group members with execution rights for this command.

show port-access device-profile

```
show port-access device-profile [[interface {all | <INTERFACE-ID>}
    [client-status <MAC-ADDR>]] | name <DEVICE-PROFILE-NAME>]
```

Description

Shows the client status for a specific MAC address or profile name.

Parameter	Description
<code>interface {all <INTERFACE-ID>}</code>	Select <code>all</code> for all interfaces or specify the name of an interface in the format: <code>member/slot/port</code> .
<code>client-status <MAC-ADDR></code>	Specifies a MAC address (<code>xx:xx:xx:xx:xx:xx</code>), where <code>x</code> is a hexadecimal number from 0 to F.
<code>name <DEVICE-PROFILE-NAME></code>	Specifies the name of the device profile.

Examples

Showing the applied state of the device profiles:

```
switch# show port-access device-profile

Profile Name      : accesspoints
LLDP Groups       : 2920-grp
CDP Groups        :
MAC Groups        : 2920-mac-grp1,2920-iot-grp2
Role              : local_role_1
State             : Enabled

Profile Name      : access_switches
LLDP Groups       : 2920-grp
CDP Groups        :
MAC Groups        :
Role              : local_2920_role
State             : Enabled

Profile Name      : iot_devices
LLDP Groups       :
CDP Groups        :
MAC Groups        : iot_camera-grp1,iot_sensors-grp1
Role              : local_2920_role
State             : Enabled

Profile Name      : lobbyaps
LLDP Groups       :
CDP Groups        : lobby_ap_cdp_grp
MAC Groups        :
Role              : test_ap_role
State             : Disabled
```

Showing the applied state of the device profile on interface 1/1/3:

```
switch# show port-access device-profile interface 1/1/3 client-status
00:0c:29:9e:d1:20

Port 1/1/3, Neighbor-Mac 00:0c:29:9e:d1:20
Profile Name      : lobbyaps
LLDP Group        :
CDP Group         : aruba-ap_cdp
MAC Group         :
Role              : test_ap_role
Status            : Failed
Failure Reason    : Failed to apply MAC based VLAN
```

Showing the applied state of a specific device profile:

```
switch# show port-access device-profile name lldp-group

Profile Name      : lldp-group
LLDP Groups       :
CDP Groups        :
MAC Groups        : pc-behind-phone, lldp
Role              : auth_role
State             : Enabled
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
	Manager (#)	Administrators or local user group members with execution rights for this command.

LLDP

The IEEE 802.1AB Link Layer Discovery Protocol (LLDP) provides a standards-based method for network devices to discover each other and exchange information about their capabilities. An LLDP device advertises itself to adjacent (neighbor) devices by transmitting LLDP data packets on all interfaces on which outbound LLDP is enabled, and reading LLDP advertisements from neighbor devices on ports on which inbound LLDP is enabled. Inbound packets from neighbor devices are stored in a special LLDP MIB (management information base). This information can then be queried by other devices through SNMP.

LLDP information is used by network management tools to create accurate physical network topologies by determining which devices are neighbors and through which interfaces they connect. LLDP operates at layer 2 and requires an LLDP agent to be active on each interface that sends and receives LLDP advertisements. LLDP advertisements can contain a variable number of TLV (type, length, value) information elements. Each TLV describes a single attribute of a device such as: system capabilities, management IP address, device ID, port ID.

Packet boundaries

When multiple LLDP devices are directly connected, an outbound LLDP packet travels only to the next LLDP device. An LLDP-capable device does not forward LLDP packets to any other devices, regardless of whether they are LLDP-enabled.

An intervening hub or repeater forwards the LLDP packets it receives in the same manner as any other multicast packets it receives. Therefore, two LLDP switches joined by a hub or repeater handle LLDP traffic in the same way that they would if directly connected.

Any intervening 802.1D device or Layer-3 device that is either LLDP-unaware or has disabled LLDP operation drops the packet.

LLDP-MED

LLDP-MED (ANSI/TIA-1057/D6) extends the LLDP (IEEE 802.1AB) industry standard to support advanced features on the network edge for Voice Over IP (VoIP) endpoint devices with specialized capabilities and LLDP-MED standards-based functionality. LLDP-MED in the switches uses the standard LLDP commands described earlier in this section, with some extensions, and also introduces new commands unique to LLDP-MED operation. The show commands described elsewhere in this section are applicable to both LLDP and LLDP-MED operation. LLDP-MED enables:

- Configure Voice VLAN and advertise it to connected MED endpoint devices.
- Power over Ethernet (PoE) status and troubleshooting support via SNMP.

LLDP agent

When you enable LLDP on the switch, it is automatically enabled on all data plane interfaces. You can customize this behavior by manually enabling/disabling support on each interface.

Supported standards

The LLDP agent supports the following standards: IEEE 802.1AB-2005, Station, and Media Access Control Connectivity Discovery.

Supported interfaces

LLDP is supported on interfaces mapped to a physical port, and the Out-Of-Band Management (OOBM) port. It is not supported on logical interfaces, such as loopback, tunnels, and SVIs.

Operating modes

When LLDP is enabled, the switch periodically transmits an LLDP advertisement (packet) out each active port enabled for outbound LLDP transmissions and receives LLDP advertisements on each active port enabled to receive LLDP traffic.

The LLDP agent can operate in one of the following modes:

- **Transmit and receive (TxRx):** This is the default setting on all ports. It enables a given port to both transmit and receive LLDP packets and to store the data from received (inbound) LLDP packets in the switch's MIB.
- **Transmit only (Tx):** Enables a port to transmit LLDP packets that can be read by LLDP neighbors. However, the port drops inbound LLDP packets from LLDP neighbors without reading them. This prevents the switch from learning about LLDP neighbors on that port.
- **Receive only (Rx):** Enables a port to receive and read LLDP packets from LLDP neighbors and to store the packet data in the switch's MIB. However, the port does not transmit outbound LLDP packets. This prevents LLDP neighbors from learning about the switch through that port.
- **Disabled:** Disables LLDP packet transmissions and reception on a port. In this state, the switch does not use the port for either learning about LLDP neighbors or informing LLDP neighbors of its presence.

An LLDP agent operating in TxRx mode or Tx mode sends LLDP frames to its directly connected devices both periodically and when the local configuration changes.

Sending LLDP frames

Each time the LLDP operating mode of an LLDP agent changes, its LLDP protocol state machine reinitializes. A configurable reinitialization delay prevents frequent initializations caused by frequent changes to the operating mode. If you configure the reinitialization delay, an LLDP agent must wait the specified amount of time to initialize LLDP after the LLDP operating mode changes.

Receiving LLDP frames

An LLDP agent operating in TxRx mode or Rx mode confirms the validity of TLVs carried in every received LLDP frame. If the TLVs are valid, the LLDP agent saves the information and starts an aging timer. The initial value of the aging timer is equal to the TTL value in the Time To Live TLV carried in the LLDP frame. When the LLDP agent receives a new LLDP frame, the aging timer restarts. When the aging timer decreases to zero, all saved information ages out.

TLV support

By default, the agent sends and receives the following mandatory TLVs on each interface:

- Port ID
- Chassis ID
- TTL

By default, the following ANSI/TIA-1057 TLVs for LLDP Media Endpoint Discovery (MED) are enabled on an agent. Sending them depends on the configuration and reception of any MED TLVs:

- MAC/PHY status. Includes the bit rate and auto negotiation status of the link.
- Power Via MDI: Includes Power Over Ethernet related information for supported interfaces.
- Port description
- System name
- System description
- Management address
- System capabilities
- Port VLAN ID

By default, the agent sends and receives the following ANSI/TIA-1057 TLVs for LLDP Media Endpoint Discovery (MED):

- Capabilities: Indicates MED TLV capability.
- Power Via MDI: Includes Power Over Ethernet related information.
- Network Policy: Includes the VLAN configuration for voice application.
- Location: Location identification information.
- Extended Power Via MDI: Power Over Ethernet related information

TLV advertisements

The LLDP agent transmits the following:

- Chassis-ID: Base MAC address of the switch.
- Port-ID: Port number of the physical port.
- Time-to-Live (TTL): Length of time an LLDP neighbor retains advertised data before discarding it.
- System capabilities: Identifies the primary switch capabilities (bridge, router). Identifies the primary switch functions that are enabled, such as routing.
- System description: Includes switch model name and running software version, and ROM version.
- System name: Name assigned to the switch.
- Management address: Default address selection method unless an optional address is configured.
- Port description: Physical port identifier.
- Port VLAN ID: On an L2 port, contains access or native VLAN ID. On an L3 port, contains a value of 0. Trunk allowed VLANs information are not advertised as part of the Port VLAN ID TLV. (Not supported on the OOBM interface)

LLDP MED support

LLDP-MED interoperates with directly connected IP telephony (endpoint) clients and provides the following features:

- Advertisement of the voice VLAN configured on the interface which is used by connected IP telephony (endpoint) clients.

- Advertisement of the configured location on the switch that can be used by the connected endpoint.
- Support for the fast-start capability



LLDP-MED is intended for use with VoIP endpoints and is not designed to support links between network infrastructure devices (such as switch-to-switch or switch-to-router links).

Configuring the LLDP agent

Procedure

1. By default, the LLDP agent is enabled on all active interfaces. If LLDP was disabled, enable it with the command `lldp`.
2. By default, the LLDP agent transmits and receive on all interfaces. To customize LLDP behavior on a specific interface, use the commands `lldp transmit` and `lldp receive`.
3. By default, the LLDP agent sets the management address in all TLVs in the following order:
 - a. LLDP management IP address.
 - b. Loopback interface IP.
 - c. ROP (L3 ports) or SVI (L2 ports).
 - d. OOBM (Management interface IP).
 - e. Base MAC.

On the OOBM port, the following order is used:

- a. LLDP management IP address,
- b. IP address of the management interface (OOBM port).
- c. IP address of the loopback interface.
- d. Base MAC address of the switch.

To specify a different address, use the commands `lldp management-ipv4-address` and `lldp management-ipv6-address`

4. By default, all supported TLVs are sent and received. To customize the list, use the command `lldp select-tlv`.
5. By default, support for the LLDP-MED TLV is enabled. To customize settings, use the commands `lldp med` and `lldp med-location`.
6. If required, adjust LLDP timer, holdtime, reinitialization delay, and transmit delay from their default values with the commands `lldp timer`, `lldp holdtime`, `lldp reinit`, and `lldp txdelay`.

Example

This example creates the following configuration:

- Enables LLDP support.
- Disables LLDP transmission on interface **1/1/1**.

```
switch(config)# lldp
switch(config)# interface 1/1/1
switch(config-copp)# no lldp transmit
```

LLDP commands

clear lldp neighbors

```
clear lldp neighbors
```

Description

Clears all LLDP neighbor details.

Examples

Clearing all LLDP neighbor details:

```
switch# clear lldp neighbors
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

clear lldp statistics

```
clear lldp statistics
```

Description

Clears all LLDP neighbor statistics.

Examples

Clearing all LLDP neighbor statistics:

```
switch# clear lldp statistics
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

lldp

```
lldp
no lldp
```

Description

Enables LLDP support globally on all active interfaces. By default, LLDP is enabled.

The `no` form of this command disables LLDP support globally on all active interfaces. It does not remove any LLDP configuration settings.

Examples

Enabling LLDP:

```
switch(config)# lldp
```

Disabling LLDP:

```
switch(config)# no lldp
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

lldp dot3

```
lldp dot3 {poe | macphy}
no lldp dot3 {poe | macphy}
```

Description

Sets the 802.3 TLVs to be advertised. By default, advertisement of both POE and MAC/PHY TLVs is enabled. Not supported on the OOBM interface.

The `no` form of this command disables advertisement of 802.3 TLVs.

Parameter	Description
poe	Specifies advertisement of power over Ethernet data link classification.
macphy	Specifies advertisement of media access control and physical layer information.

Examples

Enabling advertisement of the POE TLV:

```
switch(config-if)# lldp dot3 poe
```

Disabling advertisement of the POE TLV:

```
switch(config-if)# no lldp dot3 poe
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config-if	Administrators or local user group members with execution rights for this command.

lldp holdtime

```
lldp holdtime <TIME>  
no lldp holdtime
```

Description

Sets the holdtime that is used to calculate the LLDP Time-to-Live value. Time-to-Live defines the length of time that neighbors consider LLDP information sent by this agent as valid. When Time-to-Live expires, the information is deleted by the neighbor. Time-to-live is calculated by multiplying holdtime by the value of `lldp timer`.

The `no` form of this command sets the holdtime to its default value of 4.

Parameter	Description
<TIME>	Specifies the holdtime in seconds. Range: 2 to 10. Default: 4.

Examples

Setting the holdtime to 8 seconds:

```
switch(config)# lldp holdtime 8
```

Setting the holdtime to the default value of 4 seconds:

```
switch(config)# no lldp holdtime
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

lldp management-ipv4-address

```
lldp management-ipv4-address <IPV4-ADDR>
no lldp management-ipv4-address
```

Description

Defines the IPv4 management address of the switch which is sent in the management address TLV. One IPv4 and one IPv6 management address can be configured.

If you do not define an LLDP management address, then LLDP uses one of the following (in order):

- IP address of the port
- IP address of the management interface
- Base MAC address of the switch

The `no` form of this command removes the IPv4 management address of the switch.

Parameter	Description
<IPV4-ADDR>	Specifies the management address of the switch as an IPv4 format (x.x.x.x), where x is a decimal value from 0 to 255.

Examples

Setting the management address to **10.10.10.2**:

```
switch(config)# lldp management-ipv4-address 10.10.10.2
```

Removing the management address:

```
switch(config)# no lldp management-ipv4-address
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

lldp management-ipv6-address

```
lldp management-ipv6-address <IPv6-ADDR>
no lldp management-ipv6-address
```

Description

Defines the IPv6 management address of the switch. The management address is encapsulated in the management address TLV.

If you do not define an LLDP management address, then LLDP uses one of the following (in order):

- IP address of the port
- IP address of the management interface
- Base MAC address of the switch

The `no` form of this command removes the IPv6 management address of the switch.

Parameter	Description
<IPv6-ADDR>	Specifies an IP address in IPv6 format (xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx), where x is a hexadecimal number from 0 to F.

Examples

Setting the management address to 2001:db8:85a3::8a2e:370:7334:

```
switch(config)# lldp management-ipv6-address 2001:0db8:85a3::8a2e:0370:7334
```

Removing the management address:

```
switch(config)# no lldp management-ipv6-address
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

lldp med

```
lldp med [poe [priority-override] | capability | network-policy]
no med [poe [priority-override] | capability | network-policy]
```

Description

Configures support for the LLDP-MED TLV. LLDP-MED (media endpoint devices) is an extension to LLDP developed by TIA to support interoperability between VoIP endpoint devices and other networking end-devices. The switch only sends the LLDP MED TLV after receiving a MED TLV from and connected endpoint device.

Not supported on the OOBM interface.

The `no` form of this command disables support for the LLDP MED TLV.

Parameter	Description
<code>poe [priority-override]</code>	Specifies advertisement of power over Ethernet data link classification. The <code>priority-override</code> option overrides user-configured port priority for Power over Ethernet. When both <code>lldp dot3 poe</code> and <code>lldp med poe</code> are enabled, the <code>lldp dot3 poe3</code> setting takes precedence. Default: enabled.
<code>capability</code>	Specifies advertisement of supported LLDP MED TLVs. The capability TLV is always sent with other MED TLVs, therefore it cannot be disabled when other MED TLVs are enabled. Default: enabled.
<code>network-policy</code>	Network policy discovery lets endpoints and network devices advertise their VLAN IDs, and IEEE 802.1p (PCP and DSCP) values for voice applications. This TLV is only sent when a voice VLAN policy is present. Default: enabled.

Examples

Enabling advertisement of the network policy TLV:

```
switch(config-if) # lldp med network-policy
```

Disabling advertisement of the network policy TLV:

```
switch(config-if) # no lldp med network-policy
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	<code>config-if</code>	Administrators or local user group members with execution rights for this command.

lldp med-location

```
lldp med-location {civic-addr | elin-addr }  
no med-location {civic-addr | elin-addr }
```

Description

Configures support for the LLDP-MED TLV. Supports only civic address and emergency location information number (ELIN). Coordinate-based location is not supported.

The `no` form of this command disables support for the LLDP MED TLV.

Parameter	Description
civic-addr	Configures the LLDP MED civic location TLV.
elin-addr	Configures support for the LLDP MED emergency location TLV.

Examples

Enabling support for the LLDP MED emergency location TLV:

```
switch(config-if)# lldp med-location elin-addr gher
```

Disabling support for the LLDP MED emergency location TLV:

```
switch(config-if)# no lldp med-location elin-addr gher
```

Enabling support for the LLDP MED civic address TLV:

```
switch(config-if)# lldp med-location civic-addr US 1 4 ret 6 tyu 7 tiyuo
```

Disabling support for the LLDP MED civic address TLV:

```
switch(config-if)# no lldp med-location civic-addr US 1 4 ret 6 tyu 7 tiyuo
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config-if	Administrators or local user group members with execution rights for this command.

lldp receive

```
lldp receive  
no lldp receive
```

Description

Enables reception of LLDP information on an interface. By default, LLDP reception is enabled on all active interfaces, including the OOBM interface.

The `no` form of this command disables reception of LLDP information on an interface.

Examples

Enabling LLDP reception on interface **1/1/1**:

```
switch(config)# interface 1/1/1
switch(config-if)# lldp receive
```

Disabling LLDP reception on interface **1/1/1**:

```
switch(config)# interface 1/1/1
switch(config-if)# no lldp receive
```

Enabling LLDP reception on the OOBM interface:

```
switch(config)# interface mgmt
switch(config-if)# lldp receive
```

Disabling LLDP reception on the OOBM interface:

```
switch(config)# interface mgmt
switch(config-if)# no lldp receive
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config-if	Administrators or local user group members with execution rights for this command.

lldp reinit

```
lldp reinit <TIME>
no lldp reinit
```

Description

Sets the amount of time (in seconds) to wait before performing LLDP initialization on an interface.

The `no` form of this command sets the reinitialization time to its default value of 2 seconds.

Parameter	Description
<code><TIME></code>	Specifies the reinitialization time in seconds. Range: 1 to 10. Default: 2 seconds.

Examples

Setting the reinitialization time to 5 seconds:

```
switch(config)# lldp reinit 5
```

Setting the reinitialization time to the default value of 2 seconds:

```
switch(config)# no lldp reinit
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

lldp select-tlv

```
lldp select-tlv <TLV-NAME>
no lldp select-tlv <TLV-NAME>
```

Description

Selects a TLV that the LLDP agent will send and receive. By default, all supported TLVs are sent and received. The `no` form of this command stops the LLDP agent from sending and receiving a specific TLV.

Parameter	Description
<code>select-tlv <TLV-NAME></code>	Specifies the TLV name to send. The following TLV names are supported: ■ <code>management-address</code>: Selected as follows: 1. IPv4 or IPV6 management address. 2. IP address of the lowest configured loopback interface. 3. If layer 3, then the route-only port IP address. If layer 2, the IP address of the SVI. 4. OOBM interface IP address. 5. Base MAC address of the switch.

Parameter	Description
	■ <code>port-description</code>: A description of the port. ■ <code>port-vlan-id</code>: VLAN ID assigned to the port. ■ <code>system-capabilities</code>: Identifies the primary switch functions that are enabled, such as routing. ■ <code>system-description</code>: Description of the system, comprised of the following information: hardware serial number, hardware revision number, and firmware version. ■ <code>system-name</code>: Host name assigned to the switch.

Examples

Stopping the LLDP agent from sending the **port-description** TLV:

```
switch(config)# no lldp select-tlv port-description
```

Enabling the LLDP agent to send the **port-description** TLV:

```
switch(config)# lldp select-tlv port-description
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	<code>config</code>	Administrators or local user group members with execution rights for this command.

lldp timer

```
lldp timer <TIME>
no lldp timer
```

Description

Sets the interval (in seconds) at which local LLDP information is updated and TLVs are sent to neighboring network devices by the LLDP agent. The minimum setting for this timer must be four times the value of `lldp txdelay`.

For example, this is a valid configuration:

- `lldp timer = 16`
- `lldp txdelay = 4`

And, this is an invalid configuration:

- `lldp timer = 5`
- `lldp txdelay = 2`

When copying a saved configuration to the running configuration, the value for `lldp timer` is applied before the value of `lldp txdelay`. This can result in a configuration error if the saved configuration has a value of `lldp timer` that is not four times the value of `lldp txdelay` in the running configuration.

For example, if the saved configuration has the settings:

- `lldp timer = 16`
- `lldp txdelay = 4`



And the running configuration has the settings:

- `lldp timer = 30`
- `lldp txdelay = 7`

Then you will see an error indicating that certain configuration settings could not be applied, and you will have to manually adjust the value of `lldp txdelay` in the running configuration.

The `no` form of this command sets the update interval to its default value of 30 seconds.

Parameter	Description
<code><TIME></code>	Specifies the update interval (in seconds). Range: 5 to 32768. Default: 30.

Examples

Setting the update interval to 7 seconds:

```
switch(config)# lldp timer 7
```

Setting the update interval to the default value of 30 seconds:

```
switch(config)# no lldp timer
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	<code>config</code>	Administrators or local user group members with execution rights for this command.

lldp transmit

```
lldp transsmmit
no lldp transmit
```

Description

Enables transmission of LLDP information on specific interface. By default, LLDP transmission is enabled on all active interfaces, including the OOBM interface.

The `no` form of this command disables transmission of LLDP information on an interface.

Examples

Enabling LLDP transmission on interface **1/1/1**:

```
switch(config)# interface 1/1/1
switch(config-if)# lldp transsmmit
```

Disabling LLDP transmission on interface **1/1/1**:

```
switch(config)# interface 1/1/1
switch(config-if)# no lldp transsmmit
```

Enabling LLDP transmission on the OOBM interface:

```
switch(config)# interface mgmt
switch(config-if)# lldp transsmmit
```

Disabling LLDP transmission on the OOBM interface:

```
switch(config)# interface mgmt
switch(config-if)# no lldp transsmmit
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config-if	Administrators or local user group members with execution rights for this command.

lldp txdelay

```
lldp txdelay <TIME>
no lldp txdelay
```

Description

Sets the amount of time (in seconds) to wait before sending LLDP information from any interface. The maximum value for `txdelay` is 25% of the value of `lldp tx timer`.

The `no` form of this command sets the delay time to its default value of 2 seconds.

Parameter	Description
<code><TIME></code>	Specifies the delay time in seconds. Range: 0 to 10. Default: 2.

Examples

Setting the delay time to 8 seconds:

```
switch(config)# lldp txdelay 8
```

Setting the delay time to the default value of 2 seconds:

```
switch(config)# no lldp txdelay
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

lldp trap enable

lldp trap enable
no lldp trap enable

Description

Enables sending SNMP traps for LLDP related events from a particular interface. LLDP trap generation is enabled by default on all the interfaces and has to be disabled for interfaces on which traps are not required to be generated.

The `no` form of this command disables the LLDP trap generation.



LLDP trap generation is disabled by default at the global level and must be enabled before any LLDP traps are sent.

Examples

Enabling LLDP trap generation on global level:

```
switch(config)# lldp trap enable
```

Enabling LLDP trap generation on interface level:

```
switch(config-if)# lldp trap enable
```

Disabling LLDP trap generation on global level:

```
switch(config)# no lldp trap enable
```

Disabling LLDP trap generation on interface level:

```
switch(config-if)# no lldp trap enable
```

Displaying LLDP global configuration:

```
switch# show lldp configuration
```

LLDP Global Configuration

=====

```
LLDP Enabled           : No
LLDP Transmit Interval : 30
LLDP Hold Time Multiplier : 4
LLDP Transmit Delay Interval : 2
LLDP Reinit Timer Interval : 2
LLDP Trap Enabled      : No
```

TLVs Advertised

=====

```
Management Address
Port Description
Port VLAN-ID
System Description
System Name
```

LLDP Port Configuration

=====

PORT	TX-ENABLED	RX-ENABLED	INTF-TRAP-ENABLED
1/1/1	Yes	Yes	Yes
1/1/2	Yes	Yes	Yes
1/1/3	Yes	Yes	Yes
1/1/4	Yes	Yes	Yes
1/1/5	Yes	Yes	Yes
1/1/6	Yes	Yes	Yes
.....			
.....			
mgmt	Yes	Yes	Yes

Displaying LLDP Configuration for the interface:

```
switch# show lldp configuration 1/1/1
```

LLDP Global Configuration

=====

```
LLDP Enabled           : Yes
LLDP Transmit Interval : 30
LLDP Hold Time Multiplier : 4
```



```
LLDP Transmit Delay Interval : 2
LLDP Reinit Timer Interval   : 2
LLDP Trap Enabled            : No
```

LLDP Port Configuration

```
=====
PORT          TX-ENABLED      RX-ENABLED      INTF-TRAP-ENABLED
-----
1/1/1         Yes             Yes             Yes
```

Displaying LLDP Configuration for the management interface:

```
switch# show lldp configuration mgmt
```

LLDP Global Configuration

```
=====
LLDP Enabled           : Yes
LLDP Transmit Interval : 30
LLDP Hold Time Multiplier : 4
LLDP Transmit Delay Interval : 2
LLDP Reinit Timer Interval : 2
LLDP Trap Enabled      : Yes
```

LLDP Port Configuration

```
=====
PORT          TX-ENABLED      RX-ENABLED      INTF-TRAP-ENABLED
-----
mgmt          Yes             Yes             Yes
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config and config-if	Administrators or local user group members with execution rights for this command.

show lldp configuration

```
show lldp configuration [<INTERFACE-ID>] [vsx-peer]
```

Description

Shows LLDP configuration settings for all interfaces or a specific interface.

Parameter	Description
<INTERFACE-ID>	Specifies an interface. Format: member/slot/port.

Parameter	Description
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Example

Showing configuration settings for all interfaces:

```
switch# show lldp configuration

LLDP Global Configuration
=====
LLDP Enabled                : No
LLDP Transmit Interval     : 30
LLDP Hold Time Multiplier  : 4
LLDP Transmit Delay Interval : 2
LLDP Reinit Timer Interval : 2
LLDP Trap Enabled          : No

TLVs Advertised
=====
Management Address
Port Description
Port VLAN-ID
System Description
System Name

LLDP Port Configuration
=====
PORT          TX-ENABLED    RX-ENABLED    INTF-TRAP-ENABLED
-----
1/1/1         Yes           Yes           Yes
1/1/2         Yes           Yes           Yes
1/1/3         Yes           Yes           Yes
1/1/4         Yes           Yes           Yes
1/1/5         Yes           Yes           Yes
1/1/6         Yes           Yes           Yes
.....
.....
mgmt          Yes           Yes           Yes
```

This example shows configuration settings for interface **1/1/1**.

```
switch# show lldp configuration 1/1/1

LLDP Global Configuration
=====
LLDP Enabled                : Yes
LLDP Transmit Interval     : 30
LLDP Hold Time Multiplier  : 4
LLDP Transmit Delay Interval : 2
LLDP Reinit Timer Interval : 2
LLDP Trap Enabled          : No
```

LLDP Port Configuration

=====

PORT	TX-ENABLED	RX-ENABLED	INTF-TRAP-ENABLED
1/1/1	Yes	Yes	Yes

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show lldp configuration mgmt

show lldp configuration mgmt

Description

Shows LLDP configuration settings for the OOBM interface.

Example

Showing configuration settings for all interfaces:

```
switch# show lldp configuration mgmt
```

LLDP Global Configuration

=====

```
LLDP Enabled           : Yes
LLDP Transmit Interval : 30
LLDP Hold Time Multiplier : 4
LLDP Transmit Delay Interval : 2
LLDP Reinit Timer Interval : 2
LLDP Trap Enabled      : Yes
```

LLDP Port Configuration

=====

PORT	TX-ENABLED	RX-ENABLED	INTF-TRAP-ENABLED
mgmt	Yes	Yes	Yes

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
8320 8325 8360	Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show lldp local-device

```
show lldp local-device [vsx-peer]
```

Description

Shows global LLDP information advertised by the switch, as well as port-based data. If VLANs are configured on any active interfaces, the VLAN ID is only shown for trunk native or untagged VLAN IDs on access interfaces.

Parameter	Description
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Example

Showing global LLDP information only (all ports including OOBM port are administratively down):

```
switch# show lldp local-device

Global Data
=====

Chassis-ID       : 1c:98:ec:e3:45:00
System Name      : switch
System Description : Aruba JL375A 8400X XL.01.01.0001
Management Address : 192.168.10.1
Capabilities Available : Bridge, Router
Capabilities Enabled  : Bridge, Router
TTL               : 120
```

Showing all ports except **1/1/11** and OOBM as administratively down:

```
switch# show lldp local-device

Global Data
=====

Chassis-ID       : 1c:98:ec:e3:45:00
System Name      : switch
System Description : Aruba
Management Address : 192.168.10.1
Capabilities Available : Bridge, Router
Capabilities Enabled  : Bridge, Router
TTL               : 120
```

```

Port Based Data
=====

Port-ID          : 1/1/11
Port-Desc        : "1/1/11"
Port Mgmt-Address : 164.254.21.220
Port VLAN ID     : 0

Port-ID          : mgmt
Port-Desc        : "mgmt"
Port Mgmt-Address : 164.254.21.220

```

In this example, all the ports except **1/1/11** are administratively down, and VLAN ID 100 is configured on this access interface.

```

switch# show lldp local-device

Global Data
=====

Chassis-ID       : 1c:98:ec:e3:45:00
System Name      : switch
System Description : Aruba
Management Address : 192.168.10.1
Capabilities Available : Bridge, Router
Capabilities Enabled : Bridge, Router
TTL              : 120

Port Based Data
=====

Port-ID          : 1/1/11
Port-Desc        : "1/1/11"
Port VLAN ID     : 100
Parent Interface : interface 1/1/11

```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show lldp neighbor-info

show lldp neighbor-info [<INTERFACE-NAME>] [vsx-peer]

Description

Displays information about neighboring devices for all interfaces or for a specific interface. The information displayed varies depending on the type of neighbor connected and the type of TLVs sent by the neighbor.

Parameter	Description
<INTERFACE-NAME>	Specifies the interface for which to show information for neighboring devices. Use the format member/slot/port (for example, 1/3/1).
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Examples

Showing LLDP information for all interfaces:

```
switch# show lldp neighbor-info
```

```
LLDP Neighbor Information
```

```
=====
```

```
Total Neighbor Entries      : 3
Total Neighbor Entries Deleted : 0
Total Neighbor Entries Dropped : 0
Total Neighbor Entries Aged-Out : 0
```

LOCAL-PORT	CHASSIS-ID	PORT-ID	PORT-DESC	TTL	SYS-NAME
1/1/1	70:72:cf:a4:7d:50	1/1/1	1/1/1	32	switch
1/1/2	48:0f:cf:af:73:80	1/1/2	1/1/2	120	switch
1/1/46	48:0f:cf:af:73:80	1/1/46	1/1/46	120	switch
mgmt	48:0f:cf:af:73:80	mgmt	mgmt	120	switch

Showing information for interface **1/3/1** when it has only one switch connected as a neighbor:

```
switch# show lldp neighbor-info 1/3/1
```

```
Port : 1/1/1
Neighbor Entries : 1
Neighbor Entries Deleted : 0
Neighbor Entries Dropped : 0
Neighbor Entries Aged-Out : 0
Neighbor Chassis-Name : HP-3800-24G-PoEP-2XG
Neighbor Chassis-Description : HP J9587A 3800-24G-PoE+-2XG Switch, revision...
Neighbor Chassis-ID : 10:60:4b:39:3e:80
Neighbor Management-Address : 192.168.1.1
Chassis Capabilities Available : Bridge, Router
Chassis Capabilities Enabled : Bridge
Neighbor Port-ID : 1/1/1
Neighbor Port-Desc : 1/1/1
Neighbor Port VLAN ID :
TTL : 120
```

Showing information for interface **1/3/10** when the neighbor sends a DOT3 power TLV:

```
switch# show lldp neighbor-info 1/3/10
Port : 1/3/10
Neighbor Entries : 1
```

```

Neighbor Entries Deleted      : 0
Neighbor Entries Dropped     : 0
Neighbor Entries Aged-Out    : 0
Neighbor Chassis-Name        : 84:d4:7e:ce:5d:68
Neighbor Chassis-Description  : ArubaOS (MODEL: 325), Version Aruba IAP
Neighbor Chassis-ID          : 84:d4:7e:ce:5d:68
Neighbor Management-Address   : 169.254.41.250
Chassis Capabilities Available : Bridge, WLAN
Chassis Capabilities Enabled  : WLAN
Neighbor Port-ID             : 84:d4:7e:ce:5d:68
Neighbor Port-Desc           : eth0
TTL                          : 120
Neighbor Port VLAN ID        :
Neighbor PoE information     : DOT3
Neighbor Power Type          : TYPE2 PD
Neighbor Power Priority       : Unkown
Neighbor Power Source        : Primary
PD Requested Power Value     : 25.0 W
PSE Allocated Power Value    : 25.0 W
Neighbor Power Supported     : Yes
Neighbor Power Enabled       : Yes
Neighbor Power Class         : 5
Neighbor Power Paircontrol    : No
PSE Power Pairs              : Signal

```

Showing information for interface **1/1/1** when it has multiple neighbors (displays a maximum of four):

```

switch# show lldp neighbor-info 1/1/1

Port                : 1/1/1
Neighbor Entries     : 4
Neighbor Entries Deleted : 0
Neighbor Entries Dropped : 0
Neighbor Entries Aged-Out : 0
Neighbor Chassis-Name : switch
Neighbor Chassis-Description : Aruba JL375A 8400X XL.01.01.0001
Neighbor Chassis-ID   : 1c:98:ec:fe:25:00
Neighbor Management-Address : 10.1.1.2
Chassis Capabilities Available : Bridge, Router
Chassis Capabilities Enabled  : Bridge, Router
Neighbor Port-ID       : 1/1/1
Neighbor Port-Desc     : 1/1/1
Neighbor Port VLAN ID  :
TTL                    : 120
Neighbor Chassis-Name  : switch
Neighbor Chassis-Description : Aruba JL375A 8400X XL.01.01.0001
Neighbor Chassis-ID    : 1c:98:ec:fe:25:01
Neighbor Management-Address : 10.1.1.3
Chassis Capabilities Available : Bridge, Router
Chassis Capabilities Enabled  : Bridge, Router
Neighbor Port-ID       : 1/1/1
Neighbor Port-Desc     : 1/1/1
Neighbor Port VLAN ID  :
TTL                    : 120
Neighbor Chassis-Name  : switch
Neighbor Chassis-Description : Aruba JL375A 8400X XL.01.01.0001
Neighbor Chassis-ID    : 1c:98:ec:fe:25:02
Neighbor Management-Address : 10.1.1.4
Chassis Capabilities Available : Bridge, Router
Chassis Capabilities Enabled  : Bridge, Router
Neighbor Port-ID       : 1/1/1

```

```

Neighbor Port-Desc      : 1/1/1
Neighbor Port VLAN ID   : 50
TTL                     : 120
Neighbor Chassis-Name    : switch
Neighbor Chassis-Description : Aruba JL375A 8400X XL.01.01.0001
Neighbor Chassis-ID      : 1c:98:ec:fe:25:03
Neighbor Management-Address : 10.1.1.5
Chassis Capabilities Available : Bridge, Router
Chassis Capabilities Enabled  : Bridge, Router
Neighbor Port-ID        : 1/1/1
Neighbor Port-Desc      : 1/1/1
Neighbor Port VLAN ID   : 100
TTL                     : 120

```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show lldp neighbor-info detail

show lldp neighbor-info detail [vsx-peer]

Description

Shows detailed LLDP neighbor information for all LLDP neighbor connected interfaces.

Parameter	Description
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Examples

Showing detailed LLDP information for all interfaces:

```

switch# show lldp neighbor-info detail

LLDP Neighbor Information
=====

Total Neighbor Entries      : 6
Total Neighbor Entries Deleted : 2
Total Neighbor Entries Dropped : 0
Total Neighbor Entries Aged-Out : 2

```



```

-----
Port                               : 1/1/1
Neighbor Entries                   : 1
Neighbor Entries Deleted           : 0
Neighbor Entries Dropped           : 0
Neighbor Entries Aged-Out          : 0
Neighbor Chassis-Name              : 6300
Neighbor Chassis-Description       : Aruba ...
Neighbor Chassis-ID                : 38:11:17:1a:d5:00
Neighbor Management-Address        : 38:11:17:1a:d5:00
Chassis Capabilities Available     : Bridge, Router
Chassis Capabilities Enabled       : Bridge, Router
Neighbor Port-ID                   : 1/1/4
Neighbor Port-Desc                 : 1/1/4
Neighbor Port VLAN ID              : 1
TTL                                : 120

Neighbor Mac-Phy details
Neighbor Auto-neg Supported        : true
Neighbor Auto-Neg Enabled          : true
Neighbor Auto-Neg Advertised       : 1000 BASE_TFD, 100 BASE_T4, 10 BASET_FD
Neighbor MAU type                  : 1000 BASETFD

```

```

-----
Port                               : 1/1/2
Neighbor Entries                   : 1
Neighbor Entries Deleted           : 0
Neighbor Entries Dropped           : 0
Neighbor Entries Aged-Out          : 0
Neighbor Chassis-Name              : 6300
Neighbor Chassis-Description       : Aruba ...
Neighbor Chassis-ID                : 38:11:17:1a:d5:00
Neighbor Management-Address        : 38:11:17:1a:d5:00
Chassis Capabilities Available     : Bridge, Router
Chassis Capabilities Enabled       : Bridge, Router
Neighbor Port-ID                   : 1/1/5
Neighbor Port-Desc                 : 1/1/5
Neighbor Port VLAN ID              : 1
TTL                                : 120

Neighbor Mac-Phy details
Neighbor Auto-neg Supported        : true
Neighbor Auto-Neg Enabled          : true
Neighbor Auto-Neg Advertised       : 1000 BASE_TFD, 100 BASE_T4, 10 BASET_FD
Neighbor MAU type                  : 1000 BASETFD

```

```

-----
Port                               : 1/1/3
Neighbor Entries                   : 1
Neighbor Entries Deleted           : 0
Neighbor Entries Dropped           : 0
Neighbor Entries Aged-Out          : 0
Neighbor Chassis-Name              : 6300
Neighbor Chassis-Description       : Aruba ...
Neighbor Chassis-ID                : 38:11:17:1a:d5:00
Neighbor Management-Address        : 38:11:17:1a:d5:00
Chassis Capabilities Available     : Bridge, Router
Chassis Capabilities Enabled       : Bridge, Router

```

```

Neighbor Port-ID           : 1/1/6
Neighbor Port-Desc         : 1/1/6
Neighbor Port VLAN ID      : 1
TTL                        : 120

Neighbor Mac-Phy details
Neighbor Auto-neg Supported : true
Neighbor Auto-Neg Enabled   : true
Neighbor Auto-Neg Advertised : 1000 BASE_TFD, 100 BASE_T4, 10 BASET_FD
Neighbor MAU type           : 1000 BASETFD

```

```

-----

Port                        : 1/1/46
Neighbor Entries           : 1
Neighbor Entries Deleted   : 0
Neighbor Entries Dropped   : 0
Neighbor Entries Aged-Out  : 0
Neighbor Chassis-Name      : 6300
Neighbor Chassis-Description : Aruba ...
Neighbor Chassis-ID        : 38:11:17:1a:d5:00
Neighbor Management-Address : 38:11:17:1a:d5:00
Chassis Capabilities Available : Bridge, Router
Chassis Capabilities Enabled  : Bridge, Router
Neighbor Port-ID           : 1/1/19
Neighbor Port-Desc         : 1/1/19
Neighbor Port VLAN ID      : 1
TTL                        : 120

```

```

Neighbor Mac-Phy details
Neighbor Auto-neg Supported : true
Neighbor Auto-Neg Enabled   : true
Neighbor Auto-Neg Advertised : 1000 BASE_TFD, 100 BASE_T4, 10 BASET_FD
Neighbor MAU type           : 1000 BASETFD

```

```

-----

Port                        : 1/1/47
Neighbor Entries           : 1
Neighbor Entries Deleted   : 0
Neighbor Entries Dropped   : 0
Neighbor Entries Aged-Out  : 0
Neighbor Chassis-Name      : 6300
Neighbor Chassis-Description : Aruba ...
Neighbor Chassis-ID        : 38:11:17:1a:d5:00
Neighbor Management-Address : 38:11:17:1a:d5:00
Chassis Cap                :

```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show lldp neighbor-info mgmt

show lldp neighbor-info mgmt

Description

Displays information about neighboring devices connected to the OOBM interface.

Examples

Showing LLDP information for the OOBM interface:

```
switch# show lldp neighbor-info mgmt

Port                               : mgmt
Neighbor Entries                   : 1
Neighbor Entries Deleted           : 0
Neighbor Entries Dropped           : 0
Neighbor Entries Aged-Out          : 0
Neighbor Chassis-Name              : HP-3800-24G-PoEP-2XG
Neighbor Chassis-Description       : HP J9587A 3800-24G-PoE+-2XG Switch, revision...
Neighbor Chassis-ID                : 10:60:4b:39:3e:80
Neighbor Management-Address        : 192.168.1.1
Chassis Capabilities Available     : Bridge, Router
Chassis Capabilities Enabled       : Bridge
Neighbor Port-ID                   : mgmt
Neighbor Port-Desc                  : mgmt
Neighbor Port VLAN ID              :
TTL                                : 120
```

Showing LLDP information for the OOBM interface when there are four neighbors:

```
switch# show lldp neighbor-info mgmt

Port                               : mgmt
Neighbor Entries                   : 4
Neighbor Entries Deleted           : 0
Neighbor Entries Dropped           : 0
Neighbor Entries Aged-Out          : 0
Neighbor Chassis-Name              : switch
Neighbor Chassis-Description       : Aruba JL375A 8400X XL.01.01.0001
Neighbor Chassis-ID                : 1c:98:ec:fe:25:00
Neighbor Management-Address        : 10.1.1.2
Chassis Capabilities Available     : Bridge, Router
Chassis Capabilities Enabled       : Bridge, Router
Neighbor Port-ID                   : 1/1/1
Neighbor Port-Desc                  : 1/1/1
Neighbor Port VLAN ID              :
TTL                                : 120

Neighbor Chassis-Name              : switch
Neighbor Chassis-Description       : Aruba JL375A 8400X XL.01.01.0001
Neighbor Chassis-ID                : 1c:98:ec:fe:25:01
Neighbor Management-Address        : 10.1.1.3
```

```

Chassis Capabilities Available : Bridge, Router
Chassis Capabilities Enabled   : Bridge, Router
Neighbor Port-ID               : 1/1/1
Neighbor Port-Desc             : 1/1/1
Neighbor Port VLAN ID         :
TTL                           : 120

Neighbor Chassis-Name          : switch
Neighbor Chassis-Description   : Aruba JL375A 8400X XL.01.01.0001
Neighbor Chassis-ID            : 1c:98:ec:fe:25:02
Neighbor Management-Address    : 10.1.1.4
Chassis Capabilities Available : Bridge, Router
Chassis Capabilities Enabled   : Bridge, Router
Neighbor Port-ID               : 1/1/1
Neighbor Port-Desc             : 1/1/1
Neighbor Port VLAN ID         :
TTL                           : 120

Neighbor Chassis-Name          : switch
Neighbor Chassis-Description   : Aruba JL375A 8400X XL.01.01.0001
Neighbor Chassis-ID            : 1c:98:ec:fe:25:03
Neighbor Management-Address    : 10.1.1.5
Chassis Capabilities Available : Bridge, Router
Chassis Capabilities Enabled   : Bridge, Router
Neighbor Port-ID               : 1/1/1
Neighbor Port-Desc             : 1/1/1
Neighbor Port VLAN ID         :
TTL                           : 120

```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
8320 8325 8360	Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show lldp statistics

show lldp statistics [<INTERFACE-ID>] [vsx-peer]

Description

Shows global LLDP statistics or statistics for a specific interface.

Parameter	Description
<INTERFACE-ID>	Specifies an interface. Format: member/slot/port.

Parameter	Description
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Example

Showing global statistics for all interfaces:

```
switch# show lldp statistics
LLDP Global Statistics
=====

Total Packets Transmitted      : 19
Total Packets Received        : 19
Total Packets Received And Discarded : 0
Total TLVs Unrecognized       : 0

LLDP Port Statistics
=====

PORT-ID      TX-PACKETS  RX-PACKETS  RX-DISCARDED  TLVS-UNKNOWN
-----
1/1/1        7            7            0              0
1/1/2        7            7            0              0
1/1/3        0            0            0              0
1/1/4        0            0            0              0
1/1/5        0            0            0              0
...
mgmt         5            5            0              0
...
```

Showing statistics for interface **1/1/1**:

```
switch# show lldp statistics 1/1/1

LLDP Statistics
=====

Port Name      : 1/1/1
Packets Transmitted : 159
Packets Received  : 163
Packets Received And Discarded : 0
Packets Received And Unrecognized : 0
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show lldp statistics mgmt

show lldp statistics mgmt

Description

Shows LLDP statistics for the OOBM interface.

Example

Showing LLDP statistics for the OOBM interface:

```
switch# show lldp statistics mgmt

LLDP Statistics
=====

Port Name                : mgmt
Packets Transmitted      : 20
Packets Received         : 23
Packets Received And Discarded : 0
Packets Received And Unrecognized : 0
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
8320 8325 8360	Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show lldp tlv

show lldp tlv[vsx-peer]

Description

Shows the LLDP TLVs that are configured for send and receive.

Parameter	Description
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Example

```
switch# show lldp tlv

TLVs Advertised
=====

Management Address
Port Description
Port VLAN-ID
System Capabilities
System Description
System Name
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Cisco Discovery Protocol (CDP)

Cisco Discovery Protocol (CDP) is a proprietary layer 2 protocol supported by most Cisco devices. It is used to exchange information, such as software version, device capabilities, and voice VLAN information, between directly connected devices, such as a VoIP phone and a switch.

CDP support

By default, CDP is enabled on each active switch port. This is a read-only capability, which means the switch can receive and store information about adjacent CDP devices, but does not generate CDP packets (except when communicating with Cisco IP phones.)

The switch supports CDPv2 only and does not support SNMP MIB traps.

When a CDP-enabled port receives a CDP packet from another CDP device, it enters data for that device into the CDP Neighbors table, along with the port number on which the data was received. It does not forward the packet. The switch also periodically purges the table of any entries that have expired. (The holdtime for any data entry in the switch CDP Neighbors table is configured in the device transmitting the CDP packet and cannot be controlled in the switch receiving the packet.) A switch reviews the list of CDP neighbor entries every three seconds and purges any expired entries.

Support for legacy Cisco IP phones

Autoconfiguration of legacy Cisco IP phones for tagged voice VLAN support requires CDPv2.

On initial boot-up, and sometimes periodically, a Cisco phone queries the switch and advertises information about itself using CDPv2. When the switch receives the VoIP VLAN Query TLV (type 0x0f) from the phone, the switch immediately responds with the voice VLAN ID in a reply packet using the VoIP VLAN Reply TLV

(type 0x0e). This enables the Cisco phone to boot properly and send traffic on the advertised voice VLAN ID. The switch CDP packet includes these TLVs:

- CDP Version: 2
- CDP TTL: 180 seconds
- Checksum
- Capabilities (type 0x04): 0x0008 (is a switch)
- Native VLAN: The PVID of the port
- VoIP VLAN Reply (type 0xe): voice VLAN ID (same as advertised by LLDP-MED)
- Trust Bitmap (type 0x12): 0x00
- Untrusted port CoS (type 0x13): 0x00

CDP commands

cdp

cdp

Description

Configures CDP support globally on all active interfaces or on a specific interface. By default, CDP is enabled on all active interfaces.

When CDP is enabled, the switch adds entries to its CDP Neighbors table for any CDP packets it receives from neighboring CDP devices.

When CDP is disabled, the CDP Neighbors table is cleared and the switch drops all inbound CDP packets without entering the data in the CDP Neighbors table.

The `no` form of this command disables CDP support globally on all active interfaces or on a specific interface.

Examples

Enabling CDP globally:

```
switch(config)# cdp
```

Disabling CDP globally:

```
switch(config)# no cdp
```

Enabling CDP on interface **1/1/1**:

```
switch(config)# interface 1/1/1  
switch(config-if)# cdp
```

Disabling CDP on interface **1/1/1**:

```
switch(config)# interface 1/1/1  
switch(config-if)# no cdp
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config config-if	Administrators or local user group members with execution rights for this command.

clear cdp counters

clear cdp counters

Description

Clears CDP counters.

Examples

Clearing CDP counters:

```
switch(config) clear cdp counters
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

clear cdp neighbor-info

clear cdp neighbor-info

Description

Clears CDP neighbor information.

Examples

Clearing CDP neighbor information:

```
switch(config) clear neighbor-info
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

show cdp

show cdp

Description

Shows CDP information for all interfaces.

Examples

Showing CDP information:

```
switch(config)# show cdp
CDP Global Information
=====
CDP           : Enabled
CDP Mode      : Rx only
CDP Hold Time : 180 seconds

Port          CDP
-----
1/1/1         Enabled
1/1/2         Enabled
1/1/3         Enabled
1/1/4         Enabled
1/1/5         Enabled
1/1/6         Enabled
1/1/7         Enabled
1/1/8         Enabled
1/1/9         Enabled
1/1/10        Enabled
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

show cdp neighbor-info

show cdp neighbor-info <INTERFACE-ID>

Description

Shows CDP information for all neighbors or for CDP information on a specific interface.

Parameter	Description
<INTERFACE-ID>	Specifies an interface. Format: member/slot/port.

Examples

Showing all CDP neighbor information:

```
switch(config)# show cdp neighbor-info
Port          Device ID          Platform          Capability
-----
1/1/1         myswitch           cisco WS-C2950-12  SI
```

Showing CDP information for interface **1/1/1**:

```
switch(config)# show cdp neighbor-info 1/1/1
Local Port : 1/1/1
MAC        : 3c:a8:2a:7b:6b:2b
Device ID  : SEPd4adbd2a30d6
Address    : 2.71.0.230
Platform   : Cisco IP Phone 3905
Duplex     : full
Capability : host
Voice VLAN Support : Yes
Neighbor Port-ID : Port 1
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

show cdp traffic

show cdp neighbor-info

Description

Shows CDP statistics for each interface.

Examples

Showing CDP traffic statistics:

```
switch(config)# show cdp traffic
```

```
CDP Statistics
```

```
=====
```

Port	Transmitted Frames	Received Frames	Discarded Frames
1/1/1	0	4	0
1/1/2	0	0	0
1/1/3	0	2	0
1/1/4	0	0	0
1/1/5	0	0	0

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

DCBx is a discovery and capability exchange protocol to discover peers and negotiate Data Center Bridging configuration. DCBx is specified as part of IEEE 802.1Qaz-2011. DCBx uses LLDP as the underlying protocol for exchange of parameters with the peer. The DCBx parameters are exchanged as LLDP TLVs.

There are two main versions of DCBx: IEEE DCBx and CEE DCBx. AOS-CX switches support the IEEE DCBx version which uses an OUI of 0x0080c2.

DCBx supports VSX synchronization. For more information about enabling VSX synchronization, see the *Virtual Switching Extension (VSX) Guide* for your switch and software version.

DCBx LLDP TLVs supported by AOS-CX:

- PFC (Priority Flow Control) TLV with subtype 0x0b.
 - Advertises priorities that are configured in the switch as lossy/lossless.
 - PFC TLVs are symmetrical which means they have to match between peers.
 - If a peer PFC priority configuration does not match switch configuration, a misconfiguration error is displayed by the command `show dcbx interface`.
- ETS (Enhanced Transmission Selection) configuration TLV with subtype 0x09.
 - Advertises the configured bandwidth reservation and the transmission algorithm used for each traffic class.
 - This is an asymmetric TLV which means the configuration does not have to match between peers.
- ETS (Enhanced Transmission Selection) recommendation TLV with subtype 0x0a.
 - If the peer device is willing to accept switch ETS configuration, then the contents of this TLV can be used by peer to configure itself.
 - The switch sends the current ETS configuration as the ETS recommended values.
- Application priority TLV with subtype 0x0c.
 - This is an informational TLV that tells the peer to map certain application traffic to a priority.
 - The user has to correctly configure this information using the application priority command.
 - This allows the peer to map applications to appropriate lossless priority configured on the switch.

DCBx guidelines

- DCBx is disabled by default.
- LLDP must be enabled on the interfaces supporting DCBx.
- DCBx is only supported on physical interfaces and not on management or logical interfaces, similar to how LLDP behaves.
- AOS-CX supports only the IEEE 802.1Qaz 2011 version of DCBx with an OUI of 0x0080c2.
- AOS-CX advertises DCBx with 'willing bit' set to 0 in all TLVs. This tells the peer that the switch is not willing to change its configuration to match the peer's configuration.
- When a peer switch does not support IEEE DCBx, a misconfiguration error will be displayed in the `show dcbx interface output`.

DCBx commands

lldp dcbx

```
lldp dcbx [ version { cee | ieee } ]  
no lldp dcbx [ version { cee | ieee } ]
```

Description

Globally enables advertisement of the DCBx TLVs in LLDP packets. By default, DCBx is disabled in the switch.

The `no` form of this command disables DCBx advertisement.

Parameter	Description
<code>version { cee ieee }</code>	Configures the DCBx version in either CEE (Converged Enhanced Ethernet) or IEEE (IEEE 802.1Qaz). Default version: IEEE

Examples

Enabling DCBx globally with default version:

```
switch(config)# lldp dcbx
```

Disabling DCBx globally:

```
switch(config)# no lldp dcbx
```

Enabling DCBx globally with the CEE version:

```
switch(config)# lldp dcbx version cee
```

Command History

Release	Modification
10.08	Added a parameter <code>version</code>
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
8320 8325 8360	config	Administrators or local user group members with execution rights for this command.

lldp dcbx (per interface)

```
lldp dcbx [ version { cee | ieee } ]  
no lldp dcbx [ version { cee | ieee } ]
```

Description

Enables DCBx on an interface. By default, an interface follows the global DCBx configuration. DCBx must be enabled globally for the interface configuration to take effect.

The `no` form of this command disables DCBx on the interface.

Parameter	Description
<code>version { cee ieee }</code>	Configures the DCBx version in either CEE (Converged Enhanced Ethernet) or IEEE (IEEE 802.1Qaz). Default version: IEEE

Usage

If the interface command specifies a different version than the global configuration, it overrides the globally configured DCBx version. If the command is executed without specifying a version, the IEEE version is configured.

Examples

Enabling DCBx on interface 1/1/1:

```
switch(config)# interface 1/1/1
switch(config-if)# lldp dcbx
```

Disabling DCBx on interface 1/1/1:

```
switch(config)# interface 1/1/1
switch(config-if)# no lldp dcbx
```

Enabling DCBx on interface 1/1/1 with the CEE version:

```
switch(config)# interface 1/1/1
switch(config-if)# lldp dcbx version cee
```

Enabling DCBx and configuring PFC for priority 4 on interface 1/1/1.



Priority Flow Control (PFC) commands are only supported on the 8325 and 8360.

```
switch(config)# interface 1/1/1
switch(config-if)# lldp dcbx
switch(config-if)# flow-control priority 4
```

Command History

Release	Modification
10.08	Added a parameter 'version'
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
8320 8325 8360	config-if	Administrators or local user group members with execution rights for this command.

dcbx application

```
dcbx application {iscsi | tcp-sctp <PORT-NUM> | tcp-sctp-udp <PORT-NUM> | tcp-udp <PORT-NUM>
                  | udp <PORT-NUM> | ether <ETHERTYPE>} priority <PRIORITY>
no dcbx application
```

Description

Configures application to priority map that gets advertised in DCBx application priority messages. This tells the DCBx peer to send the application traffic with the configured priority so that the traffic is treated as lossless. Multiple applications can be configured in this manner. PFC lossless priority configured on the switch should be the same as this priority.



Priority Flow Control (PFC) commands are only supported on the 8325 and 8360.

The `no` form of this command removes the existing configuration.

Parameter	Description
<code>iscsi</code>	Specifies a physical port on the switch. TCP ports 860 and 3260.
<code>tcp-sctp <PORT-NUM></code>	Specifies the traffic for a specified TCP or SCTP port. Range: 1 to 65535.
<code>tcp-sctp-udp <PORT-NUM></code>	Specifies the traffic for a specified TCP or SCTP or UDP port. Range: 1 to 65535.
<code>tcp-udp <PORT-NUM></code>	Specifies the traffic for a specified TCP or UDP port. Range: 1 to 65535.
<code>udp <PORT-NUM></code>	Specifies the traffic for a specified UDP port. Range: 1 to 65535.
<code><ETHERTYPE></code>	Specifies the traffic for a specific Ethernet type. Range: 1536 to 65535.
<code><PRIORITY></code>	Specifies the application priority. Range: 0 to 7.

Usage

- In CEE DCBx version, the following traffic type configurations are sent using application TLVs:
 - Ethertype
 - iSCSI
 - TCP-UDP
- In IEEE DCBx version, the following traffic type configurations are sent using application TLVs:
 - Ethertype
 - iSCSI

- TCP-SCTP
- TCP-SCTP-UDP
- UDP

Examples

Mapping iSCSI traffic to priority 5.

```
switch(config)# dcbx application iscsi priority 5
```

Mapping TCP or SCTP traffic with port 860 to priority 3.

```
switch(config)# dcbx application tcp-sctp 860 priority 3
```

Command History

Release	Modification
10.08	Added a parameter option <code>tcp-udp</code> .
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
8320 8325 8360	config	Administrators or local user group members with execution rights for this command.

show dcbx interface

```
show dcbx interface <IFNAME> [peer | vsx-peer]
```

Description

Shows the current DCBx status and the configuration of PFC, ETS, and application priority applied on the interface and the status of the TLVs received from the peer.

Parameter	Description
interface <IFNAME>	Specifies the interface name.
peer	Shows peer DCBx information.
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Examples

Showing DCBx on interface 1/1/1 with default DCBx version:

```

switch# show dcbx interface 1/1/1
DCBx admin state      : enabled
DCBx operational state : active
DCBx version          : local = IEEE, remote = IEEE
PFC operational state  : active

Mismatch  Advertisement          Local          Peer
-----
Priority Flow Control (PFC)
-> Willing:                      No             Yes
    MACsec Bypass Capability:    Yes            Yes
    Max PFC Traffic Classes:     1              1
    Priority 0:                  False           False
    Priority 1:                  False           False
    Priority 2:                  False           False
    Priority 3:                  False           False
    Priority 4:                  True            True
    Priority 5:                  False           False
    Priority 6:                  False           False
    Priority 7:                  False           False

Enhanced Transmission Selection (ETS)
-> Willing:                      No             Yes
    Credit-Based Shaper:         No             No
    Max Traffic Classes:        8              8
    Priority 0:                  Class 1         Class 1
    Priority 1:                  Class 0         Class 0
    Priority 2:                  Class 2         Class 2
    Priority 3:                  Class 3         Class 3
    Priority 4:                  Class 4         Class 4
    Priority 5:                  Class 5         Class 5
    Priority 6:                  Class 6         Class 6
    Priority 7:                  Class 7         Class 7
    Class 0:                    ETS 5           ETS 5
    Class 1:                    ETS 30          ETS 30
    Class 2:                    ETS 10          ETS 10
-> Class 3:                    ETS 10          ETS 25
-> Class 4:                    ETS 25          ETS 10
    Class 5:                    ETS 10          ETS 10
    Class 6:                    ETS 10          ETS 10
    Class 7:                    Strict          Strict

Application Priority Map:
Mismatch  Protocol      Protocol ID    Local      Peer
-----
-> iscsi
    tcp-sctp      1001 (0x03E9)    1          1
-> tcp-sctp      1002 (0x03EA)    2          7
    EtherType     2000 (0x07D0)    6          6

```

Showing DCBx on interface 1/1/1 with CEE version:

```

switch# show dcbx interface 1/1/1
DCBx admin state      : enabled
DCBx operational state : active
DCBx version          : local = CEE, remote = CEE
PFC operational state  : active

Mismatch  Advertisement          Local          Peer
-----

```

```

Control
    Operating Version:      0          0
    Max Version:           0          0
    Sequence Number:       1          1
-> Acknowledgement Number: 1          0

Priority Flow Control (PFC)
    Operating Version:      0          0
    Max Version:           0          0
    Enabled:               Yes        Yes
-> Willing:               No         Yes
    Error:                 No         No
    Max PFC Traffic Classes: 8          8
    Priority 0:            False      False
    Priority 1:            False      False
    Priority 2:            False      False
    Priority 3:            False      False
    Priority 4:            True        True
    Priority 5:            False      False
    Priority 6:            False      False
    Priority 7:            False      False

Priority Group
    Operating Version:      0          0
    Max Version:           0          0
-> Enabled:               Yes        No
-> Willing:               No         Yes
    Error:                 No         No
    Max Traffic Classes:   8          8
    Priority 0:            PGID 1      PGID 1
    Priority 1:            PGID 0      PGID 0
    Priority 2:            PGID 2      PGID 2
    Priority 3:            PGID 3      PGID 3
    Priority 4:            PGID 4      PGID 4
    Priority 5:            PGID 5      PGID 5
    Priority 6:            PGID 6      PGID 6
    Priority 7:            PGID 7      PGID 7
-> PG0 Percentage:        5          10
-> PG1 Percentage:        10         25
    PG2 Percentage:        30         30
    PG3 Percentage:        30         30
    PG4 Percentage:        30         30
    PG5 Percentage:        30         30
    PG6 Percentage:        30         30
    PG7 Percentage:        30         30

Application Protocol
    Operating Version:      0          0
    Max Version:           0          0
    Enabled:               Yes        Yes
-> Willing:               No         Yes
    Error:                 No         No

Application Priority Map:
Mismatch Protocol Protocol ID Local Peer
                        Priority Priority
-----
-> iscsi
    tcp/udp      1001 (0x03E9)  1      1
-> tcp/udp      1002 (0x03EA)  2      7
    EtherType    2000 (0x07D0)  6      6

```

Showing DCBx on interface 1/1/1 with mismatched version:

```

switch# show dcbx interface 1/1/1
DCBx admin state      : enabled
DCBx operational state : version_mismatch
DCBx version          : local = IEEE, remote = CEE
PFC operational state  : active

```

Showing DCBx peer connected to an interface 1/1/1 with running CEE version:

```

switch# show dcbx interface 1/1/1 peer
DCBx version: CEE
Control
  Operating Version      : 0
  Max Version           : 0
  Sequence Number       : 1
  Acknowledgement Number : 1

Priority Flow Control (PFC)
  Operating Version      : 0
  Max Version           : 0
  Enabled               : Yes
  Willing               : No
  Error                : No
  Max PFC Traffic Classes: 8
  Priority 0            : False
  Priority 1            : False
  Priority 2            : False
  Priority 3            : False
  Priority 4            : True
  Priority 5            : False
  Priority 6            : False
  Priority 7            : False

Priority Group
  Operating Version      : 0
  Max Version           : 0
  Enabled               : No
  Willing               : Yes
  Error                : No
  Max Traffic Classes   : 8
  Priority 0            : PGID 1
  Priority 1            : PGID 0
  Priority 2            : PGID 2
  Priority 3            : PGID 3
  Priority 4            : PGID 4
  Priority 5            : PGID 5
  Priority 6            : PGID 6
  Priority 7            : PGID 7
  PG0 Percentage        : 25
  PG1 Percentage        : 25
  PG2 Percentage        : 10
  PG3 Percentage        : 10
  PG4 Percentage        : 5
  PG5 Percentage        : 5
  PG6 Percentage        : 10
  PG7 Percentage        : 10

Application Protocol
  Operating Version      : 0
  Max Version           : 255
  Enabled               : Yes
  Willing               : No

```

Error	:	No
Application Priority Map:		
Protocol	Protocol ID	Priority
-----	-----	-----
iscsi		5
tcp/udp	1001 (0x03E9)	1
tcp/udp	1002 (0x03EA)	7
EtherType	2000 (0x07D0)	6

Command History

Release	Modification
10.08	Updated the output to show the DCBx version enhancement.
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
8320 8325 8360	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Zero Touch Provisioning (ZTP) enables the auto-configuration of factory default switches without a network administrator onsite.

When a switch is booted from its factory default configuration, ZTP autoprovisions the switch by automatically downloading and installing a firmware file, a configuration file, or both. With ZTP, even a nontechnical user (for example: a store manager in a retail chain or a teacher in a school) can deploy devices at a site.

ZTP support

The switch supports standards-based Zero Touch Provisioning (ZTP) operations as follows:

- The switch must be running the factory default configuration.
- The switch can connect to the DHCP server from the OOBM management port.
- ZTP operations are supported over IPv4 connections only. IPv6 connections are not supported for ZTP operations.
- You must configure the DHCP server to provide a standards-based ZTP server solution. Options and features that are specific to Network Management Solution (NMS) tools, such as AirWave, are not supported.
 - Aruba Central on-premise can manage AOS-CX switches on supported models through DHCP ZTP using two approaches:
 - On the DHCP server, configure DHCP option-60 as "ArubaInstantAP" 90 and provide the value in option-43 in the format *<group-details>, <aruba-central-on-prem-ip-or-fqdn>, <shared-token>*.
 - On the DHCP server, configure DHCP option-60 as HPE vendor VCI and provide the value in option-43 in the tag-length-value (TLV) format. Next, enter the Aruba Central on-premise fully qualified domain name (FQDN) or IPv4 address as the value for sub-option code 146 using the format: *<group-details>, <aruba-central-on-prem-ip-or-fqdn>, <shared-token>*.
 - Supported DHCP options are:

DHCP option	Description
43	Vendor Specific Information
43 suboption 144	Name of the configuration file
43 suboption 145	Name of the firmware image file
43 suboption 146	FQDN or IPv4 address of the Aruba Central on-premise server
43 suboption 148	FQDN or IPv4 address of the HTTP Proxy
60	Vendor Class Identifier (VCI)

DHCP option	Description
66	IPv4 address of the TFTP server (Specifying a host name instead of an IP address is not supported.)
67	Name of the configuration file (Option 43 suboption 144 takes precedence over this option.)

- The configuration file is a text file or JSON file that becomes the startup and running configuration on the switch after the ZTP operation is complete. The configuration can be in CLI or in JSON format.
- When the switch is started using the factory default configuration, the ZTP operation is started automatically and is active until any running configuration of the switch is modified. There is no CLI command required to start the operation.

The switch supports the following standards:

- [RFC 2131](#), *Dynamic Host Configuration Protocol*.
- [RFC 2132](#), *DHCP Options and BOOTP Vendor Extensions*. Support is limited to the options listed in the table "Supported DHCP options for ZTP on AOS-CX."

Hewlett Packard Enterprise recommends that you implement ZTP in a secure and private environment. Any public access can compromise the security of the switch, as follows:

- ZTP is enabled only in the factory default configuration of the switch, DHCP snooping is not enabled. The Rogue DHCP server must be manually managed.
- The DHCP offer is in plain data without encryption.

Setting up ZTP on a trusted network

The following procedure is an overview of setting up a Zero Touch Provisioning (ZTP) environment to provision newly installed switches automatically. The procedure is intended for network administrators who are familiar with automatically provisioning switches in a network, and does not provide detailed information about configuring or managing switches.

Procedure

1. For each switch model to be provisioned using ZTP, do the following:
 - a. Obtain the switch firmware image file.
 - b. Prepare the switch configuration file. The configuration file becomes the running configuration and the startup configuration on the switch.
2. Set up a TFTP server and record its IP address. The address is required when you set up the DHCP server. The switch must be able to reach the TFTP server and DHCP server, either on the same subnet, or on a remote subnet via DHCP relay.

For switches that do not support ZTP connections through a data port, use the management port and management network.

3. Publish the configuration files and image files to the TFTP server. You need to know the locations of the files and the IP address of the TFTP server when you set up the vendor class options on the DHCP server.
4. On the DHCP server, set up vendor classes for each switch model you plan to provision. To do this you need the following information:

- The IP address of the TFTP server. Using a host name is not supported.
- The path to the switch configuration and firmware image files on the TFTP server.
- The vendor class identifier (VCI) for each switch model.

You can obtain the VCI by entering the `show dhcp client vendor-class-identifier` command from a switch CLI command prompt in the manager context. The VCI is the text string in the response that starts with `Aruba`.

For example:

```
switch# show dhcp client vendor-class-identifier
Vendor Class Identifier: Aruba xxxxx xxxx
```

Where x indicates the switch model number.

5. At the installation site, provide the switch installer with a Cat6 network cable connected to the network that includes the DHCP and TFTP servers, and information about the switch port to use. The switch installer plugs the cable into the data port you specify.

The ZTP operation begins when power is applied to the switch after the network cable is installed.

6. Assuming the downloaded configuration includes a way to access the CLI of the switch, you can enter the following command to show the options offered by the DHCP server and the status of the ZTP operation:

```
show ztp information
```

ZTP process during switch boot

1. The switch boots up with the factory default configuration.

If the ZTP operation detects that the switch configuration is different from the factory default configuration, the ZTP operation ends. The switch must be configured at the installation site.

2. The switch sends out a DHCP discovery from the management port.

The switch waits to receive DHCP options indefinitely or until the running configuration is modified. If a DHCP IP address is received but no DHCP options are received, the switch waits an additional minute before ending the ZTP operation.

After the ZTP operation ends, there is no automatic retry. You can either attempt to boot the switch with the factory default configuration again, configure the switch at the installation site, or use the ZTP force-provision CLI to trigger the ZTP process, ignoring the present running configuration of the switch.

- Once force-provision is enabled, new DHCP requests are sent from the switch. Disabling force-provision does not stop the DHCP already in progress, but only changes the switch configuration status of force-provision.
- If ZTP fails while force-provision is enabled, there is no automatic retry. To retry, `ztp force-provision` should be disabled and re-enabled to clear the current ZTP state and send a new DHCP request. When `ztp force-provision` is already enabled on the switch, re-enabling it results in no operation.
- If the DHCP server is configured to provide both ZTP image and configuration options and there is a non-default startup configuration present on the switch, clearing the non-default startup configuration before triggering `ztp force-provision` is recommended. If an image is downloaded via ZTP, the switch reboots once the image download is complete and ZTP force-provision

configuration is lost, causing ZTP to enter into a failed state. ZTP force-provision will need to be enabled again to continue the process.

3. The DHCP server responds with an offer containing the following:
 - The IPv4 address of the TFTP server
 - One or both of the following:
 - The name of the firmware image file
 - The name of the configuration file
 - Aruba Central Location (optional) including the shared token value for the on-premise server
 - HTTP Proxy Location (optional)
4. If a firmware image file is offered, the ZTP operation downloads the image file from the TFTP server to the switch. If the current switch image and downloaded firmware image version do not match, then the switch boots with the downloaded image:
 - If the image upgrade fails, the switch retains its original firmware image and the ZTP operation ends with a failed status.
 - If the image upgrade succeeds, the ZTP operation is started again after the switch reboots. Because the downloaded image file matches the image file installed on the switch, the ZTP operation continues, and checks if a configuration file is offered.
5. If a configuration file is offered, the ZTP operation downloads the configuration file copies the file to the running-config and then to the startup-config of the switch:
 - If the startup configuration update fails, the switch retains its factory-default running configuration and the ZTP operation ends with a failed status.
 - If the copy operation fails, the ZTP operation ends with a failed status.
 - If the copy operation succeeds, the ZTP operation ends successfully.

ZTP VSF switchover support

ZTP status is not synced in the VSF stack. When the VSF stack is formed, configuration changes are applied on the conductor switch, which is then synced to standby switch. When the switchover is performed on the VSF stack, the standby becomes the new conductor switch.

As part of the switchover process, the ZTP daemon starts on the new conductor. The status of the ZTP is failed because there are configuration changes present.

ZTP commands

show ztp information

```
show ztp information
```

Description

Shows information about Zero Touch Provisioning (ZTP) operations performed on the switch.

Usage

When a switch configured to use ZTP is booted from a factory default configuration, the switch contacts a DHCP server, which offers options for obtaining files used to provision the switch:

- The IP address of the TFTP server
- The name of the image file
- The name of the configuration file

The `show ztp information` command shows the options offered by the DHCP server and the status of the ZTP operation.

The status of the ZTP operation is one of the following:

Success

The ZTP operation succeeded.

One of the following is true:

- Both the running configuration and the startup configuration were updated.
- The IP address of the TFTP server was received, but the offer did not include a configuration file or a firmware image file.
- Any combination of vendor encapsulated DHCP options are received as configured, along with the firmware image and switch configuration file.
- Only vendor encapsulated DHCP options are configured and are received accordingly.

Failed - Custom startup configuration detected

The switch was booted from a configuration that is not the factory default configuration. For example, the administrator password has been set.

Failed - Timed out while waiting to receive ZTP options

Either the switch received the DHCP IPv4 address but no ZTP options were received within 1 minute or ZTP force-provision is triggered and no ZTP options are received within 3 minutes.

Failed - Detected change in running configuration

The running configuration was modified by a user while the ZTP operation was in progress.

Failed - TFTP server unreachable

The TFTP server is not reachable at the specified IP address.

Failed - TFTP server information unavailable

The image file name or config file name is provided without the TFTP server location to fetch the files from and ZTP enters failed state.

Failed - Invalid configuration file received

Either the file transfer of the configuration file failed, or the configuration file is invalid (an error occurred while attempting to apply the configuration).

Failed - Invalid image file received

Either the file transfer of the firmware image file failed, or the firmware image file is invalid (an error occurred while verifying the image).

Examples

Showing switch image download in progress after receiving ZTP options:

```
switch# show ztp information
TFTP Server           : 10.0.0.2
Image File            : TL_10_02_0001.swi
Configuration File    : config_file
ZTP Status            : In-progress - Image download and verification
Aruba Central Location : secure.arubanetworks.com
```

```
Aruba Central Shared Token      : aruba123
Force-Provision                 : Disabled
HTTP Proxy Location             : http.proxy.arubanetworks.com
```

Showing switch image download failure after receiving ZTP options:

```
switch# show ztp information
TFTP Server                     : 10.0.0.2
Image File                     : TL_10_02_0001.swi
Configuration File              : config_file
ZTP Status                     : Failed - Unable to download image
Aruba Central Location         : secure.arubanetworks.com
Aruba Central Shared Token     : aruba123
Force-Provision                 : Disabled
HTTP Proxy Location            : http.proxy.arubanetworks.com
```

Showing switch configuration download in progress after receiving ZTP options:

```
switch# show ztp information
TFTP Server                     : 10.0.0.2
Image File                     : TL_10_02_0001.swi
Configuration File              : config_file
ZTP Status                     : In-progress - Configuration download
Aruba Central Location         : secure.arubanetworks.com
Aruba Central Shared Token     : aruba123
Force-Provision                 : Disabled
HTTP Proxy Location            : http.proxy.arubanetworks.com
```

Showing switch configuration download failure after receiving ZTP options:

```
switch# show ztp information
TFTP Server                     : 10.0.0.2
Image File                     : TL_10_02_0001.swi
Configuration File              : config_file
ZTP Status                     : Failed - Unable to download configuration
Aruba Central Location         : secure.arubanetworks.com
Aruba Central Shared Token     : aruba123
Force-Provision                 : Disabled
HTTP Proxy Location            : http.proxy.arubanetworks.com
```

Showing switch failure to update start-up configuration after downloading configuration received from ZTP options:

```
switch# show ztp information
TFTP Server                     : 10.0.0.2
Image File                     : TL_10_02_0001.swi
Configuration File              : config_file
ZTP Status                     : Failed - Could not copy to start-up configuration
Aruba Central Location         : secure.arubanetworks.com
Aruba Central Shared Token     : aruba123
Force-Provision                 : Disabled
HTTP Proxy Location            : http.proxy.arubanetworks.com
```

In the following example, the ZTP operation succeeded, and both an image file and a configuration file were provided.

```
VSF-10-Mbr# show ztp information
TFTP Server           : 10.1.84.160
Image File            : FL_10_06_0001CK.swi
Configuration File     : 102720-new-setup-config-updated.txt
Status                : Success
Aruba Central Location : NA
Aruba Central Shared Token : aruba123
Force-Provision        : Disabled
HTTP Proxy Location    : NA
VSF-10-Mbr#
```

In the following example, the ZTP option succeeded. A configuration file was not provided, but an image file was provided.

```
VSF-10-Mbr# show ztp information
TFTP Server           : 10.1.84.160
Image File            : TL_10_02_0001.swi
Configuration File     : NA
Status                : Success
Aruba Central Location : NA
Aruba Central Shared Token : aruba123
Force-Provision        : Disabled
HTTP Proxy Location    : NA
VSF-10-Mbr#
```

In the following example, the ZTP operation failed because the TFTP server was unreachable.

```
VSF-10-Mbr# show ztp information
TFTP Server           : 10.1.84.160
Image File            : TL_10_02_0001.swi
Configuration File     : 102720-new-setup-config-updated.txt
Status                : Failed - TFTP server unreachable
Aruba Central Location : NA
Aruba Central Shared Token : NA
Force-Provision        : Disabled
HTTP Proxy Location    : NA
VSF-10-Mbr#
```

In the following example, the ZTP operation was stopped because the switch did not receive any options from the DHCP server for ZTP within 1 minute of receiving the IP address from the server.

```
VSF-10-Mbr## show ztp information
TFTP Server           : NA
Image File            : NA
Configuration File     : NA
Status                : Failed - Timed out while waiting to receive ZTP options
Aruba Central Location : NA
Aruba Central Shared Token : NA
Force-Provision        : Disabled
HTTP Proxy Location    : NA
VSF-10-Mbr#
```

In the following example, the ZTP operation was stopped because the switch was booted from a configuration that was not the factory default configuration.

```
switch# show ztp information
TFTP Server           : 10.0.0.2
Image File            : TL_10_02_0001.swi
Configuration File     : ztp.cfg
Status                : Failed - Custom startup configuration detected
Aruba Central Location : NA
Aruba Central Shared Token : NA
Force-Provision        : Disabled
HTTP Proxy Location    : NA
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

ztp force provision

```
ztp force-provision
no ztp force-provision
```

Description

Starts on-demand ZTP.

Usage

DHCP options received are processed independent of the current state of configuration on the switch. Previous ZTP TFTP Server, Image File, Configuration File, Aruba Central Location, and HTTP Proxy location options are cleared and the switch sends a DHCP request.

Examples

In the following example, force-provision is enabled.

```
switch# configure terminal
switch(config)# ztp force-provision
```

In the following example, force-provision status is checked while enabled.

```
switch# show ztp information
TFTP Server           : 10.0.0.2
Image File            : TL_10_02_0001.swi
Configuration File     : ztp.cfg
Status                : Success
Aruba Central Location : NA
```

```
Aruba Central Shared Token      : NA
Force-Provision                 : Enabled
HTTP Proxy Location             : NA
```

In the following example, force-provision is disabled.

```
switch# configure terminal
switch(config)# no ztp force-provision
```

In the following example, force-provision status is checked while disabled.

```
switch# show ztp information
TFTP Server                   : 10.0.0.2
Image File                    : TL_10_02_0001.swi
Configuration File            : ztp.cfg
Status                        : Success
Aruba Central Location        : NA
Aruba Central Shared Token     : NA
Force-Provision                : Disabled
HTTP Proxy Location           : NA
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Operator (>) or Manager (#)	Administrators or local user group members with execution rights for this command.

bluetooth disable

bluetooth disable
no bluetooth disable

Description

Disables the Bluetooth feature on the switch. The Bluetooth feature includes both Bluetooth Classic and Bluetooth Low Energy (BLE). Bluetooth is enabled by default.

The `no` form of this command enables the Bluetooth feature on the switch.

Example

Disabling Bluetooth on the switch. `<XXXX>` is the switch platform and `<NNNNNNNNNN>` is the device identifier.

```
switch(config)# bluetooth disable
switch# show bluetooth
Enabled           : No
Device name       : <XXXX>-<NNNNNNNNNN>

switch(config)# show running-config
...
bluetooth disabled
...
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
8320 8325 8360	config	Administrators or local user group members with execution rights for this command.

bluetooth enable

bluetooth enable
no bluetooth enable

Description

This command enables the Bluetooth feature on the switch. The Bluetooth feature includes both Bluetooth Classic and Bluetooth Low Energy (BLE).

Default: Bluetooth is enabled by default.

The `no` form of this command disables the Bluetooth feature on the switch.

Usage

The default configuration of the Bluetooth feature is `enabled`. The output of the `show running-config` command includes Bluetooth information only if the Bluetooth feature is disabled.

The Bluetooth feature includes both Bluetooth Classic and Bluetooth Low Energy (BLE).

The Bluetooth feature requires the USB feature to be enabled. If the USB feature has been disabled, you must enable the USB feature before you can enable the Bluetooth feature.

Examples

```
switch(config)# bluetooth enable
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
8320 8325 8360	config	Administrators or local user group members with execution rights for this command.

clear events

```
clear events
```

Description

Clears up event logs. Using the `show events` command will only display the logs generated after the `clear events` command.

Examples

Clearing all generated event logs:

```
switch# show events
-----
show event logs
-----
2018-10-14:06:57:53.534384|hpe-sysmond|6301|LOG_INFO|MSTR|1|System resource
utilization poll interval is changed to 27
2018-10-14:06:58:30.805504|lldpd|103|LOG_INFO|MSTR|1|Configured LLDP tx-timer to 36
2018-10-14:07:01:01.577564|hpe-sysmond|6301|LOG_INFO|MSTR|1|System resource
```



```

utilization poll interval is changed to 49

switch# clear events

switch# show events
-----
show event logs
-----
2018-10-14:07:03:05.637544|hpe-sysmond|6301|LOG_INFO|MSTR|1|System resource
utilization poll interval is changed to 34

```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

clear ip errors

clear ip errors

Description

Clears all IP error statistics.

Example

Clearing and showing ip errors:

```

switch# clear ip errors
switch# show ip errors
-----
Drop reason                Packets
-----
Malformed packets          0
IP address errors          0
...

```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
8320 8325 8360	Manager (#)	Administrators or local user group members with execution rights for this command.

console baud-rate

```
console baud-rate <SPEED>
no console baud-rate <SPEED>
```

Description

Sets the console serial port speed.

The no form of this command resets the console port speed to its default of 115200 bps.

Parameter	Description
<SPEED>	Selects the console port speed in bps, either 9600 or 115200.

Usage

The speed change occurs immediately for the active console session. The console will be inaccessible until the client terminal settings are updated to match the console port speed that you set. After the command is executed you will be prompted to log in again.

Examples

Setting the console port speed to 9600 bps:

```
switch(config)# console baud-rate 9600
This command will configure the baud rate immediately for the active serial
console session. After the command is executed the user will be prompted to
re-login. The serial console will be inaccessible until the terminal client
settings are updated to match the baud rate of the switch.
Continue (y/n)? y
```

Resetting the console port to its default speed 115200 bps:

```
switch(config)# no console baud-rate
```

Command History

Release	Modification
10.08	Command introduced

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

domain-name

domain-name <NAME>
no domain-name [<NAME>]

Description

Specifies the domain name of the switch.

The **no** form of this command sets the domain name to the default, which is no domain name.

Parameter	Description
<NAME>	Specifies the domain name to be assigned to the switch. The first character of the name must be a letter or a number. Length: 1 to 32 characters.

Examples

Setting and showing the domain name:

```
switch# show domain-name

switch# config
switch(config)# domain-name example.com
switch(config)# show domain-name
example.com
switch(config)#
```

Setting the domain name to the default value:

```
switch(config)# no domain-name
switch(config)# show domain-name

switch(config)#
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

fabric admin-state

```
fabric <SLOT-ID> admin-state {diagnostic | down | up}
```

Description

Sets the administrative state of the specified fabric module.

Parameter	Description
<SLOT-ID>	Specifies the member and slot of the module. For example, to specify the module in member 1, slot 2, enter the following: 1/2
admin-state {diagnostic down up}	Selects the administrative state in which to put the specified module: diagnostic Selects the <code>diagnostic</code> administrative state. Network traffic does not pass through the module. down Selects the <code>down</code> administrative state. Network traffic does not pass through the module. up Selects the <code>up</code> administrative state. The module is fully operational. The <code>up</code> state is the default administrative state.

Usage

This command is valid for fabric modules only.

Examples

Setting the administrative state of the fabric module 2 to `down`:

```
switch(config)# fabric 1/2 admin-state down
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
	config	Administrators or local user group members with execution rights for this command.

hostname

```
hostname <HOSTNAME>
```

```
no hostname [<HOSTNAME>]
```

Description

Sets the host name of the switch.

The `no` form of this command sets the host name to the default value, which is `switch`.

Parameter	Description
<code><HOSTNAME></code>	Specifies the host name. The first character of the host name must be a letter or a number. Length: 1 to 32 characters. Default: <code>switch</code>

Examples

Setting and showing the host name:

```
switch# show hostname
switch
switch# config
switch(config)# hostname myswitch
myswitch(config)# show hostname
myswitch
```

Setting the host name to the default value:

```
myswitch(config)# no hostname
switch(config)#
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	<code>config</code>	Administrators or local user group members with execution rights for this command.

led locator

```
led locator {on | off | flashing | slow_blink | fast_blink | half_bright}
no led locator {on | off | flashing | slow_blink | fast_blink | half_bright}
```

Description

Sets the state of the locator LED.

Parameter	Description
on	Turns on the LED.
off	Turns off the LED, which is the default value.
flashing	Sets the LED to blink on and off repeatedly.
slow_blink	Sets the LED to slow blink on and off.
fast_blink	Sets the LED to fast blink on and off.
half_bright	Sets the LED intensity to half bright.

Example

Setting the state of the locator LED:

```
switch# led locator flashing
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
8320 8325 8360	Manager (#)	Administrators or local user group members with execution rights for this command.

module admin-state

```
module <SLOT-ID> admin-state {diagnostic | down | up}
no module <SLOT-ID> [admin-state [diagnostic | down | up]]
```

Description

Sets the administrative state of the specified line module.

The `no` form of the command configures administrative state to the default `up`.

Parameter	Description
<SLOT-ID>	Specifies the member and slot of the module. For example, to specify the module in member 1, slot 3, enter the following: 1/3
admin-state {diagnostic down up}	Selects the administrative state in which to put the specified module:

Parameter	Description
diagnostic	Selects the <code>diagnostic</code> administrative state. Network traffic does not pass through the module.
down	Selects the <code>down</code> administrative state. Network traffic does not pass through the module.
up	Selects the <code>up</code> administrative state. The line module is fully operational. The <code>up</code> state is the default administrative state.

Example

Setting the administrative state of the module in slot **1/3** to `down`:

```
switch(config)# module 1/3 admin-state down
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
	config	Administrators or local user group members with execution rights for this command.

module product-number

```
module <SLOT-ID> product-number [<PRODUCT-NUM>]
no module <SLOT-ID> [product-number [<PRODUCT-NUM>]]
```

Description

Changes the configuration of the switch to indicate that the specified member and slot number contains, or will contain, a line module.

The `no` form of this command removes the line module and its interfaces from the configuration. If there is a line module installed in the slot, the line module is powered off and then powered on.

Parameter	Description
<SLOT-ID>	Specifies the member and slot in the form <code>m/s</code> , where <code>m</code> is the member number, and <code>s</code> is the slot number.
<PRODUCT-NUM>	Specifies the product number of the line module. For example: JL363A

Parameter	Description
	If there is a line module installed in the slot when you execute this command, <i><PRODUCT-NUM></i> is optional. The switch reads the product number information from the module that is installed in the slot. If there is no line module installed in the slot when you execute this command, <i><PRODUCT-NUM></i> is required.

Usage

The default configuration associated with a line module slot is:

- There is no module product number or interface configuration information associated with the slot. The slot is available for the installation with any supported line module.
- The Admin State is Up (which is the default value for Admin State).

To add a line module to the configuration, you must use the `module` command either before or after you install the physical module.

If you execute the `module` command after you install a line module in an empty slot, you can omit the *<PRODUCT-NUM>* variable. The switch reads the product information from the installed module.

If the module is not installed in the slot when you execute the `module` command, you must specify a value for the *<PRODUCT-NUM>* variable:

- The switch validates the product number of the module against the slot number you specify to ensure that the right type of module is configured for the specified slot.

For example, the switch returns an error if you specify the product number of a line module for a slot reserved for management modules.

- You can configure the line module interfaces before the line module is installed.

When you install the physical line module in a preconfigured slot, the following actions occur:

- If a product number was specified in the command and it matches the product number of the installed module, the switch initializes the module.
- If a product number was specified in the command and the product number of the module does not match what was specified, the module device initialization fails.

The `no` form of the command removes the line module and its interfaces from the configuration and restores the line module slot to the default configuration.

If there is a line module installed in the slot when you execute the `no` form of the command, the command also powers off and then powers on the module. Traffic passing through the line module is stopped. Management sessions connected through the line module are also affected.

If the slot associated with the line module is in the default configuration, you can remove the module from the chassis without disrupting the operation of the switch.

Examples

Configuring slot 1/1 for future installation of a line module:

```
switch(config)# module 1/1 product-number j1363a
```

Configuring a line module that is already installed in slot 1/1:


```
switch(config)# module 1/1 product-number
```

Attempting to configure slot 1/1 for the future installation of a line module without specifying the product number (returned error shown):

```
switch(config)# module 1/1 product-number
Line module '1/4' is not physically available. Please provide the product
number to preconfigure the line module.
```

Removing a module from the configuration:

```
switch(config)# no module 1/1
This command will power cycle the specified line module and restore its default
configuration. Any traffic passing through the line module will be interrupted.
Management sessions connected through the line module will be affected. It
might take a few minutes to complete this operation.

Do you want to continue (y/n)? y
switch(config)#
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
	config	Administrators or local user group members with execution rights for this command.

mtrace

```
mtrace <IPV4-SRC-ADDR> <IPV4-GROUP-ADDR> [lhr <IPV4-LHR-ADDR>] [ttl <HOPS>]
[vrf <VRF-NAME>]
```

Description

Traces the specified IPv4 source and group addresses.

Parameter	Description
<i>IPV4-SRC-ADDR</i>	Specifies the source IPv4 address to trace.
<i>IPV4-GROUP-ADDR</i>	Specifies the group IPv4 address to trace.
lhr <IPV4-LHR-ADDR>	Specifies the last hop router address from which to start the trace.
ttl <HOPS>	Specifies the Time-To-Live duration in hops. Range: 1 to 255 hops. Default: 8 hops.

Parameter	Description
<code>vrf <VRF-NAME></code>	Specifies the name of the VRF. If a name is not specified the default VRF will be used.

Examples

Tracing with source, group, and LHR addresses and TTL:

```
(switch)# mtrace 20.0.0.1 239.1.1.1 lhr 10.1.1.1 ttl 10

Type escape sequence to abort.
Mtrace from 10.0.0.1 for Source 20.0.0.1 via Group 239.1.1.1
From destination(?) to source (?)...
Querying full reverse path...
0 10.0.0.1
-1 30.0.0.1 PIM 0 ms
-2 40.0.0.1 PIM 2 ms
-3 50.0.0.1 PIM 100 ms
-4 60.0.0.1 PIM 156 ms
-5 20.0.0.1 PIM 123 ms
```

Tracing with source and group addresses:

```
(switch)# mtrace 200.0.0.1 239.1.1.1

Type escape sequence to abort.
Mtrace from self for Source 200.0.0.1 via Group 239.1.1.1
From destination(?) to source (?)...
Querying full reverse path...
0 10.0.0.1
-1 30.0.0.1 PIM 0 ms
-2 40.0.0.1 PIM 2 ms
-3 50.0.0.1 PIM 100 ms
-4 60.0.0.1 PIM 156 ms
-5 200.0.0.1 PIM 123 ms
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
8320 8325 8360	Manager (#)	Administrators or local user group members with execution rights for this command.

show bluetooth

show bluetooth

Description

Shows general status information about the Bluetooth wireless management feature on the switch.

Usage

This command shows status information about the following:

- The USB Bluetooth adapter
- Clients connected using Bluetooth
- The switch Bluetooth feature.

The output of the `show running-config` command includes Bluetooth information only if the Bluetooth feature is disabled.

The device name given to the switch includes the switch serial number to uniquely identify the switch while pairing with a mobile device.

The management IP address is a private network address created for managing the switch through a Bluetooth connection.

Examples

Example output when Bluetooth is enabled but no Bluetooth adapter is connected. `<XXXX>` is the switch platform and `<NNNNNNNNNN>` is the device identifier.

```
switch# show bluetooth
Enabled           : Yes
Device name       : <XXXX>-<NNNNNNNNNN>
Adapter State     : Absent
```

Example output when Bluetooth is enabled and there is a Bluetooth adapter connected:

```
switch# show bluetooth
Enabled           : Yes
Device name       : <XXXX>-<NNNNNNNNNN>
Adapter State     : Ready
Adapter IP address : 192.168.99.1
Adapter MAC address : 480fcf-af153a

Connected Clients
-----
Name                MAC Address      IP Address      Connected Since
-----
Mark's iPhone       089734-b12000    192.168.99.10   2018-07-09 08:47:22 PDT
```

Example output when Bluetooth is disabled:

```
switch# show bluetooth
Enabled           : No
Device name       : <XXXX>-<NNNNNNNNNN>
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
8320 8325 8360	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show boot-history

```
show boot-history [all]
```

Description

Shows boot information. When no parameters are specified, shows the most recent information about the boot operation, and the three previous boot operations for the active management module. When the `all` parameter is specified, shows the boot information for the active management module and all available line modules. To view boot-history on the standby, the command must be sent on the standby console.

Parameter	Description
<code>all</code>	Shows boot information for the active management module and all available line modules.

Usage

This command displays the boot-index, boot-ID, and up time in seconds for the current boot. If there is a previous boot, it displays boot-index, boot-ID, reboot time (based on the time zone configured in the system) and reboot reasons. Previous boot information is displayed in reverse chronological order.

Index

The position of the boot in the history file. Range: 0 to3.

Boot ID

A unique ID for the boot . A system-generated 128-bit string.

Current Boot, up for <SECONDS> seconds

For the current boot, the `show boot-history` command shows the number of seconds the module has been running on the current software.

Timestamp boot reason

For previous boot operations, the `show boot-history` command shows the time at which the operation occurred and the reason for the boot. The reason for the boot is one of the following values:

<DAEMON-NAME> crash

The daemon identified by <DAEMON-NAME> caused the module to boot.

Kernel crash

The operating system software associated with the module caused the module to boot.

Reboot requested through database

The reboot occurred because of a request made through the CLI or other API.

Uncontrolled reboot

The reason for the reboot is not known.

Examples

Showing the boot history of the active management module:

```
switch# show boot-history
Management module
=====
```

```

Index : 3
Boot ID : f1bf071bdd04492bbf8439c6e479d612
Current Boot, up for 22 hrs 12 mins 22 secs

Index : 2
Boot ID : edfa2d6598d24e989668306c4a56a06d
07 Aug 18 16:28:01 : Reboot requested through database

Index : 1
Boot ID : 0bda8d0361df4a7e8e3acdc1dba5caad
07 Aug 18 14:08:46 : Reboot requested through database

Index : 0
Boot ID : 23da2b0e26d048d7b3f4b6721b69c110
07 Aug 18 13:00:46 : Reboot requested through database
switch#

```

Showing the boot history of the active management module and all line modules:

```

switch# show boot-history all
Management module
=====

Index : 3
Boot ID : f1bf071bdd04492bbf8439c6e479d612
Current Boot, up for 22 hrs 12 mins 22 secs

Index : 2
Boot ID : edfa2d6598d24e989668306c4a56a06d
07 Aug 18 16:28:01 : Reboot requested through database

Index : 1
Boot ID : 0bda8d0361df4a7e8e3acdc1dba5caad
07 Aug 18 14:08:46 : Reboot requested through database

Index : 0
Boot ID : 23da2b0e26d048d7b3f4b6721b69c110
07 Aug 18 13:00:46 : Reboot requested through database

Line module 1/1
=====
Index : 3
10 Aug 17 12:45:46 : dune_agent crashed
...

```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

show capacities

show capacities <FEATURE> [vsx-peer]

Description

Shows system capacities and their values for all features or a specific feature.

Parameter	Description
<FEATURE>	Specifies a feature. For example, aaa or vrrp.
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Usage

Capacities are expressed in user-understandable terms. Thus they may not map to a specific hardware or software resource or component. They are not intended to define a feature exhaustively.

Examples

Showing all available capacities for BGP:

```
switch# show capacities bgp

System Capacities: Filter BGP
Capacities Name                                     Value
-----
Maximum number of AS numbers in as-path attribute   32
...
```

Showing all available capacities for mirroring:

```
switch# show capacities mirroring

System Capacities: Filter Mirroring
Capacities Name                                     Value
-----
Maximum number of Mirror Sessions configurable in a system 4
Maximum number of enabled Mirror Sessions in a system      4
```

Showing all available capacities for MSTP:

```
switch# show capacities mstp

System Capacities: Filter MSTP
Capacities Name                                     Value
-----
Maximum number of mstp instances configurable in a system 64
```

Showing all available capacities for VLAN count:

```
switch# show capacities vlan-count

System Capacities: Filter VLAN Count
Capacities Name                                     Value
-----
Maximum number of VLANs supported in the system      4094
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

show capacities-status

show capacities-status <FEATURE> [vsx-peer]

Description

Shows system capacities status and their values for all features or a specific feature.

Parameter	Description
<FEATURE>	Specifies the feature, for example <code>aaa</code> or <code>vrrp</code> for which to display capacities, values, and status. Required.
<code>vsx-peer</code>	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Examples

Showing the system capacities status for all features:

```
switch# show capacities-status

System Capacities Status
Capacities Status Name                                     Value Maximum
-----
Number of active gateway mac addresses in a system        0          16
Number of aspath-lists configured                          0          64
Number of community-lists configured                      0          64
...
```

Showing the system capacities status for BGP:

```
switch# show capacities-status bgp

System Capacities Status: Filter BGP
Capacities Status Name                                     Value Maximum
-----
Number of aspath-lists configured                          0          64
Number of community-lists configured                       0          64
Number of neighbors configured across all VRFs             0          50
Number of peer groups configured across all VRFs           0          25
Number of prefix-lists configured                         0          64
Number of route-maps configured                           0          64
Number of routes in BGP RIB                               0 256000
Number of route reflector clients configured across all VRFs 0          16
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

show console

show console

Description

Shows the serial console port current speed.

Examples

Showing the console port current speed:

```
switch# show console
Baud Rate: 9600
```

Command History

Release	Modification
10.08	Command introduced

Command Information

Platforms	Command context	Authority
All platforms	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show core-dump

```
show core-dump all
```

Description

Shows core dump information about the specified module. When no parameters are specified, shows only the core dumps generated in the current boot of the management module. When the `all` parameter is specified, shows all available core dumps.

Parameter	Description
<code>all</code>	Shows all available core dumps.

Usage

When no parameters are specified, the `show core-dump` command shows only the core dumps generated in the current boot of the management module. You can use this command to determine when any crashes are occurring in the current boot.

If no core dumps have occurred, the following message is displayed: `No core dumps are present`

To show core dump information for the standby management module, you must use the `standby` command to switch to the standby management module and then execute the `show core-dump` command.

In the output, the meaning of the information is the following:

Daemon Name

Identifies name of the daemon for which there is dump information.

Instance ID

Identifies the specific instance of the daemon shown in the **Daemon Name** column.

Present

Indicates the status of the core dump:

Yes

The core dump has completed and available for copying.

In Progress

Core dump generation is in progress. Do not attempt to copy this core dump.

Timestamp

Indicates the time the daemon crash occurred. The time is the local time using the time zone configured on the switch.

Build ID

Identifies additional information about the software image associated with the daemon.

Examples

Showing core dump information for the current boot of the active management module only:

```
switch# show core-dump
=====
Daemon Name      | Instance ID | Present   | Timestamp                | Build ID
=====
hpe-fand         | 1399        | Yes      | 2017-08-04 19:05:34     | 1246d2a
```

```

hpe-sysmond      957          Yes      2017-08-04 19:05:29      1246d2a
=====
Total number of core dumps : 2
=====

```

Showing all core dumps:

```

switch# show core-dump all
=====
Management Module core-dumps
=====
Daemon Name      | Instance ID | Present      | Timestamp           | Build ID
=====
hpe-sysmond      513          Yes          2017-07-31 13:58:05  e70f101
hpe-tempd        1048         Yes          2017-08-13 13:31:53  e70f101
hpe-tempd        1052         Yes          2017-08-13 13:41:44  e70f101

Line Module core-dumps
=====
Line Module : 1/1
=====
dune_agent_0     18958        Yes          2017-08-12 11:50:17  e70f101
dune_agent_0     18842        Yes          2017-08-12 11:50:09  e70f101
=====
Total number of core dumps : 5
=====

```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

show domain-name

show domain-name [vsx-peer]

Description

Shows the current domain name.

Parameter	Description
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Usage

If there is no domain name configured, the CLI displays a blank line.

Example

Setting and showing the domain name:

```
switch# show domain-name

switch# config
switch(config)# domain-name example.com
switch(config)# show domain-name
example.com
switch(config)#
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

show environment fan

```
show environment fan [vsx-peer]
```

Description

Shows the status information for all fans and fan trays (if present) in the system.

Parameter	Description
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Usage

For fan trays, *Status* is one of the following values:

ready

The fan tray is operating normally.

fault

The fan tray is in a fault event. The status of the fan tray does not indicate the status of fans.

empty

The fan tray is not installed in the system.

For fans:

Speed

Indicates the relative speed of the fan based on the nominal speed range of the fan. Values are:

Slow

The fan is running at less than 25% of its maximum speed.

Normal

The fan is running at 25-49% of its maximum speed.

Medium

The fan is running at 50-74% of its maximum speed.

Fast

The fan is running at 75-99% of its maximum speed.

Max

The fan is running at 100% of its maximum speed.

N/A

The fan is not installed.

Direction

The direction of airflow through the fan. Values are:

front-to-back

Air flows from the front of the system to the back of the system.

N/A

The fan is not installed.

Status

Fan status. Values are:

uninitialized

The fan has not completed initialization.

ok

The fan is operating normally.

fault

The fan is in a fault state.

empty

The fan is not installed.

Examples

Showing output for a system without a fan tray:

```
switch# show environment fan
```

Fan information

Fan	Serial Number	Speed	Direction	Status	RPM
1	SGXXXXXXXXXX	slow	front-to-back	ok	6000
2	SGXXXXXXXXXX	normal	front-to-back	ok	8000
3	SGXXXXXXXXXX	medium	front-to-back	ok	11000
4	SGXXXXXXXXXX	fast	front-to-back	ok	14000
5	SGXXXXXXXXXX	max	front-to-back	fault	16500
6	N/A	N/A	N/A	empty	
...					

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show environment led

show environment led [vsx-peer]

Description

Shows state and status information for all the configurable LEDs in the system.

Parameter	Description
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Example

Showing state and status for LED:

```
switch# show environment led
Name           State      Status
-----
locator        flashing  ok
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show environment power-consumption

show environment power-consumption [vsx-peer]

Description

Shows the power being consumed by each management module, line card, and fabric card subsystem, and shows power consumption for the entire chassis.

Parameter	Description
<code>vsx-peer</code>	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Usage

This command is only applicable to systems that support power consumption readings.

The power consumption values are updated once every minute.

The output of this command includes the following information:

Name

Shows the member number and slot number of the management module, line module, or fabric card module.

Type

Shows the type of module installed at the location specified by Name.

Description

Shows the product name and brief description of the module.

Usage

Shows the instantaneous power consumption of the module. Power consumption is shown in Watts.

Module Total Power Usage

Shows the total power consumption of all the modules listed. Power consumption is shown in Watts.

Chassis Total Power Usage

Shows the total instantaneous power consumed by the entire chassis, including modules and components that do not support individual power reporting. Power consumption is shown in Watts.

Chassis Total Power Available

Shows the total amount of power, in Watts, that can be supplied to the chassis.

Chassis Total Power Allocated

Shows total power, in Watts, that is allocated to powering the chassis and its installed modules.

Chassis Total Power Unallocated

Shows the total amount of power, in Watts, that has not been allocated to powering the chassis or its installed modules. This power can be used for additional hardware you install in the chassis.

Example

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show environment power-supply

`show environment power-supply [vsx-peer]`

Description

Shows status information about all power supplies in the switch.

Parameter	Description
<code>vsf</code>	Shows output from the VSF member-id on switches that support VSF.
<code>vsx-peer</code>	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Usage

The following information is provided for each power supply:

`Mbr/PSU`

Shows the member and slot number of the power supply.

`Product Number`

Shows the product number of the power supply.

`Serial Number`

Shows the serial number of the power supply, which uniquely identifies the power supply.

`PSU Status`

The status of the power supply. Values are:

`OK`

Power supply is operating normally.

`OK*`

Power supply is operating normally, but it is the only power supply in the chassis. One power supply is not sufficient to supply full power to the switch. When this value is shown, the output of the command also shows a message at the end of the displayed data.

`Absent`

No power supply is installed in the specified slot.

`Input fault`

The power supply has a fault condition on its input.

`Output fault`

The power supply has a fault condition on its output.

`Warning`

The power supply is not operating normally.

`Wattage Maximum`

Shows the maximum amount of wattage that the power supply can provide.

Example

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show environment rear-display-module

show environment rear-display-module [vsx-peer]

Description

Shows information about the display module on the back of the switch.

Parameter	Description
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Example

Showing the rear display module information on the back of the switch:

```
switch> show environment rear-display-module

Rear display module is ready
Description: 8400 Rear Display Mod
Full Description: 8400 Rear Display Module
Serial number: SG00000000
Part number: 5300_0272
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show environment temperature

show environment temperature [detail] [vsx-peer]

Description

Shows the temperature information from sensors in the switch that affect fan control.

Parameter	Description
detail	Shows detailed information from each temperature sensor.

Parameter	Description
<code>vsx-peer</code>	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Usage

Temperatures are shown in Celsius.

Valid values for status are the following:

`normal`

Sensor is within nominal temperature range.

`min`

Lowest temperature from this sensor.

`max`

Highest temperature from this sensor.

`low_critical`

Lowest threshold temperature for this sensor.

`critical`

Highest threshold temperature for this sensor.

`fault`

Fault event for this sensor.

`emergency`

Over temperature event for this sensor.

Examples

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show events

```
show events [ -e <EVENT-ID> |
    -s {emergency | alert | critical | error | warning | notice | info | debug} |
    -r |
    -a |
    -n <COUNT> |
    -i <MEMBER-SLOT> |
    -m {active | standby} |
    -c {lldp | ospf | ...} |
    -d {lldpd | bgpd | fand | ...}]
```

Description

Shows event logs generated by the switch modules since the last reboot.

Parameter	Description
<code>-e <EVENT-ID></code>	Shows the event logs for the specified event ID. Event ID range: 101 through 99999.
<code>-s {emergency alert critical error warning notice info debug}</code>	Shows the event logs for the specified severity. Select the severity from the following list: ■ emergency: Displays event logs with severity emergency only. ■ alert: Displays event logs with severity alert and above. ■ critical: Displays event logs with severity critical and above. ■ error: Displays event logs with severity error and above. ■ warning: Displays event logs with severity warning and above. ■ notice: Displays event logs with severity notice and above. ■ info: Displays event logs with severity info and above. ■ debug: Displays event logs with all severities.
<code>-r</code>	Shows the most recent event logs first.
<code>-a</code>	Shows all event logs, including those events from previous boots.
<code>-n <COUNT></code>	Displays the specified number of event logs.
<code>-c {lldp ospf ...}</code>	Shows the event logs for the specified event category. Enter <code>show event -c</code> for a full listing of supported categories with descriptions.
<code>-d {lldpd bgpd fand ...}</code>	Shows the event logs for the specified process. Enter <code>show event -d</code> for a full listing of supported daemons with descriptions.

Examples

Showing event logs:

```
switch# show events
-----
show event logs
-----
2016-12-01:12:37:31.733551|lacpd|15007|INFO|AMM|1|LACP system ID set to
70:72:cf:51:50:7c
2016-12-01:12:37:31.734541|intfd|4001|INFO|AMM|1|Interface port_admin set to
up for bridge_normal interface
2016-12-01:12:37:32.583256|switchd|24002|ERR|AMM|1|Failed to create VLAN 1
in Hardware
```

Showing the most recent event logs first:

```
switch# show events -r
-----
show event logs
-----
2016-12-01:12:37:32.583256|switchd|24002|ERR|AMM|1|Failed to create VLAN 1
in Hardware
2016-12-01:12:37:31.734541|intfd|4001|INFO|AMM|1|Interface port_admin set to
up for bridge_normal interface
2016-12-01:12:37:31.733551|lacpd|15007|INFO|AMM|1|LACP system ID set to
70:72:cf:51:50:7c
```

Showing all event logs:

```
switch# show events -a
-----
show event logs
-----
2016-12-01:12:37:31.733551|lacpd|15007|INFO|AMM|1|LACP system ID set to
70:72:cf:51:50:7c
2016-12-01:12:37:31.734541|intfd|4001|INFO|AMM|1|Interface port_admin set to
up for bridge_normal interface
2016-12-01:12:37:32.583256|switchd|24002|ERR|AMM|1|Failed to create VLAN 1
in Hardware
```

Showing event logs related to LACP:

```
switch# show events -c lacp
-----
show event logs
-----
2016-12-01:12:37:31.733551|lacpd|15007|INFO|AMM|1|LACP system ID set to
70:72:cf:51:50:7c
```

Showing event logs as per the specified member/slot ID:

```
switch# show events -i 1/1
-----
show event logs
-----
2017-08-17:22:32:25.743991|hpe-sysmond|6301|LOG_INFO|LC|1/1|System resource
utilization poll interval is changed to 313
2017-08-17:22:33:01.692860|hpe-sysmond|6301|LOG_INFO|LC|1/1|System resource
utilization poll interval is changed to 23
2017-08-17:22:33:06.181436|hpe-sysmond|6301|LOG_INFO|LC|1/1|System resource
utilization poll interval is changed to 512
2017-08-17:22:33:06.181436|systemd-coredump|1201|LOG_CRIT|LC|1/1|hpe-sysmond
crashed due to signal:11
```

Showing event logs as per the specified process:

```
switch# show events -d lacpd
-----
show event logs
-----
2016-12-01:12:37:31.733551|lacpd|15007|INFO|AMM|1|LACP system ID set to
70:72:cf:51:50:7c
```

Displaying the specified number of event logs:

```
switch# show events -n 5
-----
show event logs
-----
2018-03-21:06:12:15.500603|arpmgrd|6101|LOG_INFO|AMM|-|ARPMGRD daemon has started
2018-03-21:06:12:17.734405|lldpd|109|LOG_INFO|AMM|-|Configured LLDP tx-delay to 2
2018-03-21:06:12:17.740517|lacpd|1307|LOG_INFO|AMM|-|LACP system ID set to
70:72:cf:d4:34:42
```

```
2018-03-21:06:12:17.743491|vrfmgrd|5401|LOG_INFO|AMM|-|Created a vrf entity
42cc3df7-1113-412f-b5cb-e8227b8c22f2
2018-03-21:06:12:17.904008|vrfmgrd|5401|LOG_INFO|AMM|-|Created a vrf entity
4409133e-2071-4ab8-adfe-f9662c06b889
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Auditors or Administrators or local user group members with execution rights for this command. Auditors can execute this command from the auditor context (auditor>) only.

show fabric

```
show fabric [<SLOT-ID>] [vsx-peer]
```

Description

Shows information about the installed fabrics.

Parameter	Description
<SLOT-ID>	Specifies the member and slot of the fabric to show. For example, to show the module in member 1, slot 2, enter the following: 1/2
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Examples

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show hostname

show hostname [vsx-peer]

Description

Shows the current host name.

Parameter	Description
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Example

Setting and showing the host name:

```
switch# show hostname
switch
switch# config
switch(config)# hostname myswitch
myswitch(config)# show hostname
myswitch
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

show images

show images [vsx-peer]

Description

Shows information about the software in the primary and secondary images.

Parameter	Description
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Example

Showing the primary and secondary images on a 8320 switch:

```
switch# show images
-----
AOS-CX Primary Image
-----
Version : TL.10.05.0001I
Size    : 405 MB
Date    : 2020-04-23 02:49:04 PDT
SHA-256 : 7efe86a445e87e40f47de156add25720b7277cae1a8db2f9c4ea5f49e74f2a5a
-----

AOS-CX Secondary Image
-----
Version : TL.10.05.0001I
Size    : 405 MB
Date    : 2020-04-23 02:49:04 PDT
SHA-256 : 7efe86a445e87e40f47de156add25720b7277cae1a8db2f9c4ea5f49e74f2a5a
-----

Default Image : primary
-----

Management Module 1/1 (Active)
-----
Active Image      : primary
Service OS Version : TL.01.05.0002-internal
BIOS Version      : TL-01-0013
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show ip errors

show ip errors [vsx-peer]

Description

Shows IP error statistics for packets received by the switch since the switch was last booted.

Parameter	Description
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Usage

IP error info about received packets is collected from each active line card on the switch and is preserved during failover events. Error counts are cleared when the switch is rebooted.

Drop reasons are the following:

■ Malformed packet

The packet does not conform to TCP/IP protocol standards such as packet length or internet header length. A large number of malformed packets can indicate that there are hardware malfunctions such as loose cables, network card malfunctions, or that a DOS (denial of service) attack is occurring.

■ IP address error

The packet has an error in the destination or source IP address. Examples of IP address errors include the following:

- The source IP address and destination IP address are the same.
- There is no destination IP address.
- The source IP address is a multicast IP address.
- The forwarding header of an IPv6 address is empty.
- There is no source IP address for an IPv6 packet.

■ Invalid TTLs

The TTL (time to live) value of the packet reached zero. The packet was discarded because it traversed the maximum number of hops permitted by the TTL value.

TTLs are used to prevent packets from being circulated on the network endlessly.

Example

Showing ip error statistics for packets received by the switch:

```
switch# show ip errors
-----
Drop reason          Packets
-----
Malformed packets    1
IP address errors    10
...
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
8320 8325 8360	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show module

```
show module [vsx-peer]
```

Description

Shows information about installed line modules and management modules.



Although this switch does not have removable modules, this command will still return information about the switch, referring to management modules and line modules.

Parameter	Description
<code>vsx-peer</code>	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Usage

Identifies and shows status information about the line modules and management modules that are installed in the switch.

To show the configuration information—if any—associated with that line module slot, use the `show running-configuration` command.

Status is one of the following values:

Active

This switch is the active management module.

Standby

This switch is the standby management module.

Deinitializing

The switch is being deinitialized.

Diagnostic

The switch is in a state used for troubleshooting.

Down

The switch is physically present but is powered down.

Empty

The switch hardware is not installed in the chassis.

Failed

The switch has experienced an error and failed.

Failover

This switch is a fabric module or a line module, and it is in the process of connecting to the new active management module during a management module failover event.

Initializing

The switch is being initialized.

Present

The switch hardware is installed in the chassis.

Ready

The switch is available for use.

Updating

A firmware update is being applied to the switch.

Examples

Showing all installed modules:

```
switch(config)# show module
```

```
Management Modules
```



```

=====

      Product
Name  Number  Description
-----
1/1   JL581A  8320 Mgmt Mod

      Serial
Number  Status
-----
TW87KCW00X Ready

Line Modules
=====

      Product
Name  Number  Description
-----
1/1   JL581A  8320

      Serial
Number  Status
-----
TW87KCW00X Ready

```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show running-config

show running-config [<FEATURE>] [all] [vsx-peer]

Description

Shows the current nondefault configuration running on the switch. No user information is displayed.

Parameter	Description
<FEATURE>	Specifies the name of a feature. For a list of feature names, enter the <code>show running-config</code> command, followed by a space, followed by a question mark (?). When the <code>json</code> parameter is used, the <code>vsx-peer</code> parameter is not applicable.
<i>all</i>	Shows all default values for the current running configuration.
<i>vsx-peer</i>	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Examples

Showing the current running configuration:

```

switch> show running-config
Current configuration:
!
!Version AOS-CX 10.0X.XXXX
!
lldp enable
linecard-module LC1 part-number JL363A
vrf green
!
!
!
!
!
!
aaa authentication login default local
aaa authorization commands default none
!
!
!
!
vlan 1
    no shutdown
vlan 20
    no shutdown
vlan 30
    no shutdown
interface 1/1/1
    no shutdown
    no routing
    vlan access 30
interface 1/1/32
    no shutdown
    no routing
    vlan access 20
interface bridge_normal-1
    no shutdown
interface bridge_normal-2
    no shutdown
interface vlan20
    no shutdown
    vrf attach green
    ip address 20.0.0.44/24
    ip ospf 1 area 0.0.0.0
    ip pim-sparse enable

interface vlan30
    no shutdown
    vrf attach green
    ip address 30.0.0.44/24
    ip ospf 1 area 0.0.0.0
    ip pim-sparse enable

    ip pim-sparse hello-interval 100

```

Showing the current running configuration in json format:

```

switch> show running-config json
Running-configuration in JSON:
{
    "Monitoring_Policy_Script": {
        "system_resource_monitor_mm1.1.0": {

```

```

        "Monitoring_Policy_Instance": {
            "system_resource_monitor_mm1.1.0/system_resource_monitor_
mm1.1.0.default": {
                "name": "system_resource_monitor_mm1.1.0.default",
                "origin": "system",
                "parameters_values": {
                    "long_term_high_threshold": "70",
                    "long_term_normal_threshold": "60",
                    "long_term_time_period": "480",
                    "medium_term_high_threshold": "80",
                    "medium_term_normal_threshold": "60",
                    "medium_term_time_period": "120",
                    "short_term_high_threshold": "90",
                    "short_term_normal_threshold": "80",
                    "short_term_time_period": "5"
                }
            }
        },
        ...
        ...
        ...

```

Show the current running configuration without default values:

```

switch(config)# show running-config
Current configuration:
!
!Version AOS-CX Virtual.10.04.0000-6523-gbb15c03~dirty
led locator on
!
!
!
!
!
!
!
!
vlan 1
switch(config)# show running-config all
Current configuration:
!
!Version AOS-CX Virtual.10.04.0000-6523-gbb15c03~dirty
led locator on
!
!
!
!
!
!
!
!
vlan 1
switch(config)#

```

Show the current running configuration with default values:

```
switch(config)# snmp-server vrf mgmt
switch(config)# show running-config
Current configuration:
!
!Version AOS-CX Virtual.10.04.0000-6523-gbb15c03~dirty
led locator on
!
!
!
!
snmp-server vrf mgmt
!
!
!
!
!
vlan 1
switch(config)#
switch(config)#
switch(config)# show running-config all
Current configuration:
!
!Version AOS-CX Virtual.10.04.0000-6523-gbb15c03~dirty
led locator on
!
!
!
!
!
snmp-server vrf mgmt
snmp-server agent-port 161
snmp-server community public
!
!
!
!
!
vlan 1
switch(config)#
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

show running-config current-context

show running-config current-context

Description

Shows the current non-default configuration running on the switch in the current command context.

Usage

You can enter this command from the following configuration contexts:

- Any child of the global configuration (`config`) context. If the child context has instances—such as interfaces—you can enter the command in the context of a specific instance. Support for this command is provided for one level below the `config` context. For example, entering this command for a child of a child of the `config` context is not supported. If you enter the command on a child of the `config` context, the current configuration of that context and the children of that context are displayed.
- The global configuration (`config`) context. If you enter this command in the global configuration (`config`) context, it shows the running configuration of the entire switch. Use the `show running-configuration` command instead.

Examples

Showing the running configuration for the current interface:

```
switch(config-if)# show running-config current-context
interface 1/1/1
vsx-sync qos vlans
    no shutdown
    description Example interface
    no routing
vlan access 1
exit
```

Showing the current running configuration for the management interface:

```
switch(config-if-mgmt)# show running-config current-context
interface mgmt
    no shutdown
    ip static 10.0.0.1/24
    default-gateway 10.0.0.8
    nameserver 10.0.0.1
```

Showing the running configuration for the external storage share named `nasfiles`:

```
switch(config-external-storage-nasfiles)# show running-config current-context
external-storage nasfiles
    address 192.168.0.1
    vrf default
    username nasuser
    password ciphertext AQBapalKj+XMsZumHEwIc9OR6YcOw5Z6Bh9rV+9ZtKDKzvbaBAAAAB1CTrM=
    type scp
    directory /home/nas
    enable
switch(config-external-storage-nasfiles)#
```

Showing the running configuration for a context that does not have instances:

```
switch(config-vsx)# show run current-context
vsx
    inter-switch-link 1/1/1
```

```
role secondary
vsx-sync sflow time
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config or a child of config. See Usage.	Administrators or local user group members with execution rights for this command.

show startup-config

```
show startup-config [json]
```

Description

Shows the contents of the startup configuration.



Switches in the `factory-default` configuration do not have a startup configuration to display.

Parameter	Description
<code>json</code>	Display output in JSON format.

Examples

Showing the startup-configuration in non-JSON format for an 8320 switch:

```
Leaf2(config)# show startup-config
Startup configuration:
!
!Version AOS-CX TL.xx.xx.xxxx
hostname Leaf2
user admin group administrators password ciphertext

AQBapaGi+KZp4g8gw63UqK+zCtvO5zigFLv2DFBEH+lztqjdYgAAABwrJ+5GayUWArgv9tVfo9AzMY6gmI7
x/

KBEkGBJDXjpFson2qM83CXBUI673qWHDQ0pEIZXeuig0XogCVuId4oZiQVZlOe2MfxnqZL+E9hXaMNVowBwb
D0
cli-session
    timeout 0
!
!
!
ssh server vrf mgmt
```

Showing the startup-configuration in JSON format:

```
switch# show startup-config json
Startup configuration:
{
  "AAA_Server_Group": {
    "local": {
      "group_name": "local"
    },
    "none": {
      "group_name": "none"
    }
  },
  ...
}
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

show system error-counter-monitor

show system error-counter-monitor {basic <PORT-NUM> | extended} [vsx-peer]

Description

Shows error counter statistics.

Parameter	Description
basic <PORT-NUM>	Specifies a physical port on the switch. Use the format member/slot/port (for example, 1/3/1).
extended	Shows statistics for all interfaces.

Examples

Showing error counter statistics for interface 1/1/1:

```
switch# show system error-counter-monitor basic 1/1/1

Interface error counter statistics for 1/1/1

Error Counter                               Value
-----
EtherStatsOversizePkts                      983
```

```

EtherStatsUndersizePkts      1024
EtherStatsJabbers            10
Dot3StatsAlignmentErrors    462
Dot3StatsFCSErrors          321
Dot3StatsLateCollisions     2024
EtherStatsFragments         121
Dot3StatsExcessiveCollisions 1025
IfInBroadcastPkts           2001

```

Showing error counter statistics for all interfaces:

```

switch# show system error-counter-monitor extended

Interface error counter statistics for 1/1/1

Error Counter                Value
-----
EtherStatsOversizePkts      983
EtherStatsUndersizePkts    1024
EtherStatsJabbers           10
Dot3StatsAlignmentErrors   462
Dot3StatsFCSErrors         321
Dot3StatsLateCollisions    2024
EtherStatsFragments        121
Dot3StatsExcessiveCollisions 1025
IfInBroadcastPkts          2001
...
...
Interface error counter statistics for 1/8/32

Error Counter                Value
-----
EtherStatsOversizePkts      0
...

```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
	Manager (#)	Administrators or local user group members with execution rights for this command.

show system

show system [vsx-peer]

Description

Shows general status information about the system.

Parameter	Description
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Usage

CPU utilization represents the average utilization across all the CPU cores.

System Contact, System Location, and System Description can be set with the `snmp-server` command.

Examples

Showing system information for the VSX primary and secondary (peer) switch on an 8320:

```
vsx-primary# show system
Hostname           : vsx-primary
System Description : TL.10.xx.xxxxx
System Contact     :
System Location    :

Vendor             : Aruba
Product Name       : JL479A 8320
Chassis Serial Nbr : TW82K7200Q
Base MAC Address   : 98f2b3-68792e
AOS-CX Version    : TL.10.xx.xxxxx

Time Zone          : UTC

Up Time            : 19 hours, 51 minutes
CPU Util (%)       : 50
Memory Usage (%)   : 36

vsx-primary# show system vsx-peer
Hostname           : vsx-secondary
System Description : TL.10.xx.xxxxx
System Contact     :
System Location    :

Vendor             : Aruba
Product Name       : JL479A 8320
Chassis Serial Nbr : TW73JQH024
Base MAC Address   : e0071b-cb72e4
AOS-CX Version    : TL.10.xx.xxxxx

Time Zone          : UTC

Up Time            : 21 hours, 23 minutes
CPU Util (%)       : 14
Memory Usage (%)   : 36
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show system resource-utilization

show system resource-utilization [daemon <DAEMON-NAME>] [vsx-peer]

Description

Shows information about the usage of system resources such as CPU, memory, and open file descriptors.

Parameter	Description
daemon <DAEMON-NAME>	Shows the filtered resource utilization data for the process specified by <DAEMON-NAME> only.
vrf <VRF-NAME>	Specifies the VRF name to be used for communicating with the server. If no VRF name is provided, the default VRF named default is used. NOTE: For a list of daemons that log events, enter <code>show events -d ?</code> from a switch prompt in the manager (#) context.
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Examples

Showing all system resource utilization data:

```
switch# show system resource-utilization
System Resources:
Processes: 70
CPU usage(%): 20
Memory usage(%): 25
Open FD's: 1024

Process                CPU Usage(%)    Memory Usage(%)    Open FD's
-----
pmd                     2                1                  14
hpe-sysmond            1                2                  11
hpe-mgmdd              0                1                   5
...
```

Showing the resource utilization data for the pmd process:

```
switch# show system resource-utilization daemon pmd
Process                CPU Usage    Memory Usage    Open FD's
```

pmd	2	1	14
-----	---	---	----

Showing resource utilization data when system resource utilization polling is disabled:

```
switch# show system resource-utilization
System resource utilization data poll is currently disabled
```

Showing resource utilization data for a line module:

```
switch# show system resource-utilization module 1/1
System Resource utilization for line card module: 1/1
CPU usage(%): 0
Memory usage(%): 35
Open FD's: 512
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

show tech

show tech [basic | <FEATURE>] [local-file]

Description

Shows detailed information about switch features by automatically running the `show` commands associated with the feature. If no parameters are specified, the `show tech` command shows information about all switch features. Technical support personnel use the output from this command for troubleshooting.

Parameter	Description
basic	Specifies showing a basic set of information.
<FEATURE>	Specifies the name of a feature. For a list of feature names, enter the <code>show tech</code> command, followed by a space, followed by a question mark (?).
local-file	Shows the output of the <code>show tech</code> command to a local text file.

Usage

To terminate the output of the `show tech` command, enter **Ctrl+C**.

If the command was not terminated with **Ctrl+C**, at the end of the output, the `show tech` command shows the following:

- The time consumed to execute the command.
- The list of failed `show` commands, if any.

To get a copy of the local text file content created with the `show tech` command that is used with the local-file parameter, use the `copy show-tech local-file` command.

Example

Showing the basic set of system information:

```
switch# show tech basic
=====
Show Tech executed on Wed Sep  6 16:50:37 2017
=====
[Begin] Feature basic
=====

*****
Command : show core-dump all
*****
no core dumps are present

...

[End] Feature basic
=====

1 show tech command failed
=====
Failed command:
  1. show boot-history
=====
Show tech took 3.000000 seconds for execution
```

Directing the output of the **show tech basic** command to the local text file:

```
switch# show tech basic local-file
Show Tech output stored in local-file. Please use 'copy show-tech local-file'
to copy-out this file.
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

show usb

show usb [vsx-peer]

Description

Shows the USB port configuration and mount settings.

Parameter	Description
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Examples

If USB has not been enabled:

```
switch> show usb
Enabled: No
Mounted: No
```

If USB has been enabled, but no device has been mounted:

```
switch> show usb
Enabled: Yes
Mounted: No
```

If USB has been enabled and a device mounted:

```
switch> show usb
Enabled: Yes
Mounted: Yes
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show usb file-system

show usb file-system [<PATH>]

Description

Shows directory listings for a mounted USB device. When entered without the <PATH> parameter the top level directory tree is shown.

Parameter	Description
<PATH>	Specifies the file path to show. A leading "/" in the path is optional.

Usage

Adding a leading "/" as the first character of the <PATH> parameter is optional.

Attempting to enter '.' as any part of the <PATH> will generate an invalid path argument error. Only fully-qualified path names are supported.

Examples

Showing the top level directory tree:

```
switch# show usb file-system
/mnt/usb:
'System Volume Information'  dir1'

/mnt/usb/System Volume Information':
IndexerVolumeGuid  WPSettings.dat

/mnt/usb/dir1:
dir2  test1

/mnt/usb/dir1/dir2:
test2
```

Showing available path options from the top level:

```
switch# show usb file-system /
total 64
drwxrwxrwx 2 32768 Jan 22 16:27 'System Volume Information'
drwxrwxrwx 3 32768 Mar  5 15:26 dir1
```

Showing the contents of a specific folder:

```
switch# show usb file-system /dir1
total 32
drwxrwxrwx 2 32768 Mar  5 15:26 dir2
-rwxrwxrwx 1      0 Feb  5 18:08 test1

switch# show usb file-system dir1/dir2
total 0
-rwxrwxrwx 1 0 Feb  6 05:35 test2
```

Attempting to enter an invalid character in the path:

```
switch# show usb file-system dir1/../../../../
Invalid path argument
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show version

show version [vsx-peer]

Description

Shows version information about the network operating system software, service operating system software, and BIOS.

Parameter	Description
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Example

Showing version information for an 8320 switch:

```
switch(config)# show version
-----
AOS-CX
(c) Copyright 2017-2020 Hewlett Packard Enterprise Development LP
-----
Version       : TL.xx.xx.xxxx
Build Date    : 2020-08-20 10:56:02 PDT
Build ID      : AOS-CX:xx.xx.xxxx:feb590a400a5:201908201736
Build SHA     : feb590a400a57ed818b01614f92010d74fbc9a4b
Active Image  : secondary

Service OS Version : TL.01.03.0008
BIOS Version      : TL-01-0013
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

system error-counter-monitor

```
system error-counter-monitor
no system error-counter-monitor
```

Description

Enables the system error counter monitoring feature, which records error counter data every 10 seconds. Default: Disabled.

The `no` form of the command disables error counter monitoring and stops the recording of error counter data.

Example

Enabling the system error counter monitor:

```
switch(config)# system error-counter-monitor
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
	config	Administrators or local user group members with execution rights for this command.

system error-counter-monitor poll-interval

```
system error-counter-monitor poll-interval <INTERVAL>
```

Description

Sets the polling interval used for the collection and recording of error counter data.

Parameter	Description
<INTERVAL>	Specifies the poll interval in seconds. Range: 10 to 3600. Default: 10.

Example

Setting the system error counter monitor poll interval:


```
switch(config)# system error-counter-monitor poll-interval 20
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
	config	Administrators or local user group members with execution rights for this command.

system resource-utilization poll-interval

```
system resource-utilization poll-interval <SECONDS>
```

Description

Configures the polling interval for system resource information collection and recording such as CPU and memory usage.

Parameter	Description
<SECONDS>	Specifies the poll interval in seconds. Range: 10-3600. Default: 10.

Example

Configuring the system resource utilization poll interval:

```
switch(config)# system resource-utilization poll-interval 20
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

top cpu

```
top cpu
```

Description

Shows CPU utilization information.

Example

Showing top CPU information:

```
switch# top cpu
top - 09:42:55 up 3 min, 3 users, load average: 3.44, 3.78, 1.70
Tasks: 76 total, 2 running, 74 sleeping, 0 stopped, 0 zombie
%Cpu(s): 31.4 us, 32.7 sy, 0.5 ni, 34.4 id, 04. wa, 0.0 hi, 0.6 si, 0.0 st
KiB Mem : 4046496 total, 2487508 free, 897040 used, 661948 buff/cache
KiB Swap: 0 total, 0 free, 0 used, 2859196 avail Mem

  PID USER      PRI  NI   VIRT   RES   SHR S  %CPU  %MEM     TIME+ COMMAND
...
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

top memory

top memory

Description

Shows memory utilization information.

Example

Showing top memory:

```
switch> top memory
top - 09:42:55 up 3 min, 3 users, load average: 3.44, 3.78, 1.70
Tasks: 76 total, 2 running, 74 sleeping, 0 stopped, 0 zombie
%Cpu(s): 31.4 us, 32.7 sy, 0.5 ni, 34.4 id, 04. wa, 0.0 hi, 0.6 si, 0.0 st
KiB Mem : 4046496 total, 2487508 free, 897040 used, 661948 buff/cache
KiB Swap: 0 total, 0 free, 0 used, 2859196 avail Mem

  PID USER      PRI  NI   VIRT   RES   SHR S  %CPU  %MEM     TIME+ COMMAND
...
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

usb

usb
no usb

Description

Enables the USB ports on the switch. This setting is persistent across switch reboots and management module failovers. Both active and standby management modules are affected by this setting.

The `no` form of this command disables the USB ports.

Example

Enabling USB ports:

```
switch(config)# usb
```

Disabling USB ports when a USB drive is mounted:

```
switch(config)# no usb
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

usb mount | unmount

usb {mount | unmount}

Description

Enables or disables the inserted USB drive.

Parameter	Description
mount	Enables the inserted USB drive.
unmount	Disables the inserted USB drive in preparation for removal.

Usage

If USB has been enabled in the configuration, the USB port on the active management module is available for mounting a USB drive. The USB port on the standby management module is not available.

An inserted USB drive must be mounted each time the switch boots or fails over to a different management module.

A USB drive must be unmounted before removal.

The supported USB file systems are FAT16 and FAT32.

Examples

Mounting a USB drive in the USB port:

```
switch# usb mount
```

Unmounting a USB drive:

```
switch# usb unmount
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

Accessing Aruba Support

Aruba Support Services	https://www.arubanetworks.com/support-services/
Aruba Support Portal	https://asp.arubanetworks.com/
North America telephone	1-800-943-4526 (US & Canada Toll-Free Number) +1-408-754-1200 (Primary - Toll Number) +1-650-385-6582 (Backup - Toll Number - Use only when all other numbers are not working)
International telephone	https://www.arubanetworks.com/support-services/contact-support/

Be sure to collect the following information before contacting Support:

- Technical support registration number (if applicable)
- Product name, model or version, and serial number
- Operating system name and version
- Firmware version
- Error messages
- Product-specific reports and logs
- Add-on products or components
- Third-party products or components

Other useful sites

Other websites that can be used to find information:

Airheads social forums and Knowledge Base	https://community.arubanetworks.com/
AOS-CX Switch Software Documentation Portal	https://www.arubanetworks.com/techdocs/AOS-CX/help_portal/Content/home.htm

Aruba Hardware Documentation and Translations Portal	https://www.arubanetworks.com/techdocs/hardware/DocumentationPortal/Content/home.htm
Aruba software	https://asp.arubanetworks.com/downloads
Software licensing	https://lms.arubanetworks.com/
End-of-Life information	https://www.arubanetworks.com/support-services/end-of-life/
Aruba Developer Hub	https://developer.arubanetworks.com/

Accessing Updates

You can access updates from the Aruba Support Portal or the HPE My Networking Website.

Aruba Support Portal

<https://asp.arubanetworks.com/downloads>

If you are unable to find your product in the Aruba Support Portal, you may need to search My Networking, where older networking products can be found:

My Networking

<https://www.hpe.com/networking/support>

To view and update your entitlements, and to link your contracts and warranties with your profile, go to the Hewlett Packard Enterprise Support Center **More Information on Access to Support Materials** page:

<https://support.hpe.com/portal/site/hpsc/aae/home/>

Access to some updates might require product entitlement when accessed through the Hewlett Packard Enterprise Support Center. You must have an HP Passport set up with relevant entitlements.

Some software products provide a mechanism for accessing software updates through the product interface. Review your product documentation to identify the recommended software update method.

To subscribe to eNewsletters and alerts:

<https://asp.arubanetworks.com/notifications/subscriptions> (requires an active Aruba Support Portal (ASP) account to manage subscriptions). Security notices are viewable without an ASP account.

Warranty Information

To view warranty information for your product, go to <https://www.arubanetworks.com/support-services/product-warranties/>.

Regulatory Information

To view the regulatory information for your product, view the *Safety and Compliance Information for Server, Storage, Power, Networking, and Rack Products*, available at <https://www.hpe.com/support/Safety-Compliance-EnterpriseProducts>

Additional regulatory information

Aruba is committed to providing our customers with information about the chemical substances in our products as needed to comply with legal requirements, environmental data (company programs, product recycling, energy efficiency), and safety information and compliance data, (RoHS and WEEE). For more information, see <https://www.arubanetworks.com/company/about-us/environmental-citizenship/>.

Documentation Feedback

Aruba is committed to providing documentation that meets your needs. To help us improve the documentation, send any errors, suggestions, or comments to Documentation Feedback (docsfeedback-switching@hpe.com). When submitting your feedback, include the document title, part number, edition, and publication date located on the front cover of the document. For online help content, include the product name, product version, help edition, and publication date located on the legal notices page.