

AOS-CX 10.10 IP Services Guide

83xx, 9300, 10000 Switch Series



**Hewlett Packard
Enterprise**

Published: August 2022

Version: 2

Copyright Information

© Copyright 2024 Hewlett Packard Enterprise Development LP.

This product includes code licensed under certain open source licenses which require source compliance. The corresponding source for these components is available upon request. This offer is valid to anyone in receipt of this information and shall expire three years following the date of the final distribution of this product version by Hewlett Packard Enterprise Company. To obtain such source code, please check if the code is available in the HPE Software Center at <https://myenterpriselicense.hpe.com/cwp-ui/software> but, if not, send a written request for specific software version and product for which you want the open source code. Along with the request, please send a check or money order in the amount of US \$10.00 to:

Hewlett Packard Enterprise Company
Attn: General Counsel
WW Corporate Headquarters
1701 E Mossy Oaks Rd Spring, TX 77389
United States of America.



Notices

The information contained herein is subject to change without notice. The only warranties for Hewlett Packard Enterprise products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. Hewlett Packard Enterprise shall not be liable for technical or editorial errors or omissions contained herein.

Confidential computer software. Valid license from Hewlett Packard Enterprise required for possession, use, or copying. Consistent with FAR 12.211 and 12.212, Commercial Computer Software, Computer Software Documentation, and Technical Data for Commercial Items are licensed to the U.S. Government under vendor's standard commercial license.

Links to third-party websites take you outside the Hewlett Packard Enterprise website. Hewlett Packard Enterprise has no control over and is not responsible for information outside the Hewlett Packard Enterprise website.

Acknowledgments

Intel®, Itanium®, Optane™, Pentium®, Xeon®, Intel Inside®, and the Intel Inside logo are trademarks of Intel Corporation in the U.S. and other countries.

Microsoft® and Windows® are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

Adobe® and Acrobat® are trademarks of Adobe Systems Incorporated.

Java® and Oracle® are registered trademarks of Oracle and/or its affiliates.

UNIX® is a registered trademark of The Open Group.

All third-party marks are property of their respective owners.

About this document	10
Applicable products	10
Latest version available online	10
Command syntax notation conventions	10
About the examples	11
Identifying switch ports and interfaces	11
IRDP	13
Configuring IRDP	14
IRDP commands	15
diag-dump irdp basic	15
ip irdp	15
ip irdp holdtime	16
ip irdp maxadvertinterval	17
ip irdp minadvertinterval	18
ip irdp preference	19
show ip irdp	20
IPv6 Router Advertisement	22
Configuring IPv6 RA	22
IPv6 RA scenario	24
IPv6 RA commands	25
ipv6 address <global-unicast-address>	25
ipv6 address autoconfig	25
ipv6 address link-local	26
ipv6 nd cache-limit	27
ipv6 nd dad attempts	28
ipv6 nd hop-limit	28
ipv6 nd mtu	29
ipv6 nd ns-interval	30
ipv6 nd prefix	30
ipv6 nd ra dns search-list	32
ipv6 nd ra dns server	33
ipv6 nd ra lifetime	34
ipv6 nd ra managed-config-flag	34
ipv6 nd ra max-interval	35
ipv6 nd ra min-interval	36
ipv6 nd ra other-config-flag	37
ipv6 nd ra reachable-time	38
ipv6 nd ra retrans-timer	38
ipv6 nd route	39
ipv6 nd router-preference	40
ipv6 nd suppress-ra	41
show ipv6 nd global traffic	42
show ipv6 nd interface	43
show ipv6 nd interface prefix	45
show ipv6 nd interface route	46
show ipv6 nd ra dns search-list	47
show ipv6 nd ra dns server	48

sFlow	50
sFlow agent	50
Configuring the sFlow agent	51
sFlow scenario	52
sFlow scenario 2	53
sFlow agent commands	56
clear sflow statistics	56
sflow	57
sflow agent-ip	58
sflow collector	59
sflow disable	60
sflow header-size	60
sflow max-datagram-size	61
sflow mode	62
sflow polling	63
sflow sampling	64
show sflow	65
DHCP	67
DHCP client	67
DHCP client commands	67
ip dhcp	67
show ip dhcp	68
DHCP relay agent	69
DHCPv4 relay agent	69
Configuring the DHCPv4 relay agent	71
DHCPv4 relay scenario 1	72
DHCPv4 relay scenario 2	73
DHCPv4 relay scenario 3	74
DHCPv4 relay commands	76
DHCPv6 relay agent	86
Configuring the DHCPv6 relay agent	86
DHCPv6 relay scenario 1	87
DHCPv6 relay scenario 2	88
DHCP relay (IPv6) commands	89
DHCP server	94
Configuring a DHCPv4 server on a VRF	94
Configuring the DHCPv6 server on a VRF	96
DHCP server IPv4 commands	97
authoritative	97
bootp	98
clear dhcp-server leases	99
default-router	100
dhcp-server external-storage	101
dhcp-server vrf	102
disable	103
dns-server	103
domain-name	104
enable	105
http-proxy	106
lease	107
netbios-name-server	108
netbios-node-type	109
option	110
pool	111
range	112

show dhcp-server	113
static-bind	115
DHCP server IPv6 commands	116
authoritative	116
clear dhcpv6-server leases	117
dhcpv6-server external-storage	118
dhcpv6-server vrf	119
disable	120
dns-server	121
enable	122
lease	122
option	123
pool	124
range	125
show dhcpv6-server	126
static-bind	128

DHCP snooping 130

DHCPv6 guard	130
DHCP server interoperation	130
DHCPv4 snooping conditions for dropping DHCPv4 packets	131
Protocol details	131
Configuring DHCPv4 and v6 snooping over VXLAN overlay	132
DHCPv4 snooping commands	132
clear dhcpv4-snooping binding	132
clear dhcpv4-snooping statistics	133
dhcpv4-snooping	134
dhcpv4-snooping (in config-vlan context)	134
dhcpv4-snooping allow-overwrite-binding	135
dhcpv4-snooping authorized-server	136
dhcpv4-snooping event-log client	137
dhcpv4-snooping external-storage	138
dhcpv4-snooping flash-storage	139
dhcpv4-snooping max-bindings	140
dhcpv4-snooping option 82	141
dhcpv4-snooping static-attributes	143
dhcpv4-snooping trust	143
dhcpv4-snooping tunnel vxlan trust	144
dhcpv4-snooping verify mac	145
show dhcpv4-snooping	146
show dhcpv4-snooping binding	147
show dhcpv4-snooping statistics	149
DHCPv6 snooping commands	150
clear dhcpv6-snooping binding	150
clear dhcpv6-snooping guard-policy statistics	151
clear dhcpv6-snooping statistics	152
dhcpv6-snooping	152
dhcpv6-snooping (in config-vlan context)	153
dhcpv6-snooping authorized-server	154
dhcpv6-snooping event-log client	155
dhcpv6-snooping external-storage	156
dhcpv6-snooping flash-storage	157
dhcpv6-snooping max-bindings	158
dhcpv6-snooping trust	159
dhcpv6-snooping tunnel vxlan trust	160
match server access-list	160

match client prefix-list	161
preference	162
show dhcpv6-snooping	163
show dhcpv6-snooping binding	164
dhcpv6-snooping guard-policy	165
show dhcpv6-snooping guard-policy	166
show dhcpv6-snooping guard-policy interface	168
show dhcpv6-snooping guard-policy vlan	169
show dhcpv6-snooping statistics	169
ND snooping	171
Overview (applies to the 8325, 9300, 10000 Switch Series)	171
Overview (applies to the 8360 Switch Series)	171
ND snooping commands	172
clear nd-snooping binding	172
clear nd-snooping ra-guard-policy statistics	173
clear nd-snooping statistics	174
nd-snooping	174
nd-snooping (in config-vlan context)	175
nd-snooping mac-check	176
nd-snooping prefix-list	177
nd-snooping max-bindings	178
nd-snooping nd-guard	179
nd-snooping ra-guard	179
nd-snooping ra-drop	181
nd-snooping trust	181
show nd-snooping	182
show nd-snooping bindings	184
show nd-snooping prefix-list	185
show nd-snooping statistics	186
RA guard policy commands	187
hop limit	187
ipv6 nd-snooping ra-guard policy	189
managed-config-flag	189
match access-list	190
match prefix-list	191
nd-snooping ra-guard attach-policy	192
other-config-flag	194
router-preference	195
show nd-snooping ra-guard interface	196
show nd-snooping ra-guard policy	197
show nd-snooping ra-guard vlan	198
IPv6 destination guard	199
IPv6 destination guard commands	199
clear ipv6 destination-guard statistics vlan	199
ipv6 destination guard	200
show ipv6 destination-guard statistics vlan	200
show ipv6 destination-guard	201
IP Tunnels	203
Configuring an IP tunnel	204
Creating a GRE tunnel for traversing a public network	204
Creating two GRE tunnels to different destination addresses	206
Creating an IPv6 in IPv4 tunnel for traversing a public network	208
Creating an IPv6 in IPv6 tunnel for traversing a public network	209

IP tunnels commands	211
description	211
destination ip	212
destination ipv6	213
interface tunnel	214
ip address	216
ipv6 address	217
ip mtu	218
show interface tunnel	219
show running-config interface tunnel	221
shutdown	222
source ip	223
source ipv6	224
ttl	225
vrf attach	226
IP Source Lockdown	228
IPv4 source lockdown commands	228
ipv4 source-binding	228
ipv4 source-lockdown	229
ipv4 source-lockdown hardware retry	230
show ipv4 source-binding	231
show ipv4 source-lockdown	232
IPv6 source lockdown commands	234
ipv6 source-binding	234
ipv6 source-lockdown	235
ipv6 source-lockdown hardware retry	236
show ipv6 source-binding	237
show ipv6 source-lockdown	238
Internet Control Message Protocol (ICMP)	241
ICMP message types	241
When ICMP messages are sent	241
ICMP redirect messages	242
When ICMP redirect messages are sent	242
ICMP commands	242
ip icmp redirect	242
ip icmp throttle	243
ip icmp unreachable	244
DNS	245
DNS client	245
Configuring the DNS client	245
DNS client commands	246
ip dns domain-list	246
ip dns domain-name	247
ip dns host	248
ip dns server address	249
show ip dns	250
ARP	253
Configuring proxy ARP	254
Configuring local proxy ARP	254
ARP commands	255
arp inspection trust	255
arp process-grat-arp	255

arp ipv4 mac	257
clear arp	257
ip local-proxy-arp	258
ipv6 neighbor mac	259
ip proxy-arp	260
show arp	261
show arp inspection interface	262
show arp inspection statistics	263
show arp state	263
show arp summary	264
show arp timeout	266
show arp vrf	267
show ipv6 neighbors	268
show ipv6 neighbors state	269
Network Load Balancing (NLB)	271
NLB commands	271
arp ipv4 mac	271
show arp	272
show ip igmp snooping vlan group	273
Support and Other Resources	274
Accessing Aruba Support	274
Accessing Updates	275
Aruba Support Portal	275
My Networking	275
Warranty Information	275
Regulatory Information	275
Documentation Feedback	276

This document describes features of the AOS-CX network operating system. It is intended for administrators responsible for installing, configuring, and managing Aruba switches on a network.

Applicable products

This document applies to the following products:

- Aruba 8320 Switch Series (JL479A, JL579A, JL581A)
- Aruba 8325 Switch Series (JL624A, JL625A, JL626A, JL627A)
- Aruba 8360 Switch Series (JL700A, JL701A, JL702A, JL703A, JL706A, JL707A, JL708A, JL709A, JL710A, JL711A, JL700C, JL701C, JL702C, JL703C, JL706C, JL707C, JL708C, JL709C, JL710C, JL711C, JL704C, JL705C, JL719C, JL718C, JL717C, JL720C, JL722C, JL721C)
- Aruba 9300 Switch Series (R9A29A, R9A30A, R8Z96A)
- Aruba 10000 Switch Series (R8P13A, R8P14A)

Latest version available online

Updates to this document can occur after initial publication. For the latest versions of product documentation, see the links provided in [Support and Other Resources](#).

Command syntax notation conventions

Convention	Usage
<code>example-text</code>	Identifies commands and their options and operands, code examples, filenames, pathnames, and output displayed in a command window. Items that appear like the example text in the previous column are to be entered exactly as shown and are required unless enclosed in brackets ([]).
example-text	In code and screen examples, indicates text entered by a user.
Any of the following: ■ <code><example-text></code> ■ <code><example-text></code> ■ <i>example-text</i> ■ <i>example-text</i>	Identifies a placeholder—such as a parameter or a variable—that you must substitute with an actual value in a command or in code: ■ For output formats where italic text cannot be displayed, variables are enclosed in angle brackets (< >). Substitute the text—including the enclosing angle brackets—with an actual value. ■ For output formats where italic text can be displayed, variables might or might not be enclosed in angle brackets. Substitute the text including the enclosing angle brackets, if any, with an actual value.

Convention	Usage
	Vertical bar. A logical OR that separates multiple items from which you can choose only one. Any spaces that are on either side of the vertical bar are included for readability and are not a required part of the command syntax.
{ }	Braces. Indicates that at least one of the enclosed items is required.
[]	Brackets. Indicates that the enclosed item or items are optional.
... or ...	Ellipsis: ■ In code and screen examples, a vertical or horizontal ellipsis indicates an omission of information. ■ In syntax using brackets and braces, an ellipsis indicates items that can be repeated. When an item followed by ellipses is enclosed in brackets, zero or more items can be specified.

About the examples

Examples in this document are representative and might not match your particular switch or environment.

The slot and port numbers in this document are for illustration only and might be unavailable on your switch.

Understanding the CLI prompts

When illustrating the prompts in the command line interface (CLI), this document uses the generic term `switch`, instead of the host name of the switch. For example:

```
switch>
```

The CLI prompt indicates the current command context. For example:

```
switch>
```

Indicates the operator command context.

```
switch#
```

Indicates the manager command context.

```
switch(CONTEXT-NAME)#
```

Indicates the configuration context for a feature. For example:

```
switch(config-if) #
```

Identifies the `interface` context.

Variable information in CLI prompts

In certain configuration contexts, the prompt may include variable information. For example, when in the VLAN configuration context, a VLAN number appears in the prompt:

```
switch(config-vlan-100) #
```

When referring to this context, this document uses the syntax:

```
switch(config-vlan-<VLAN-ID>) #
```

Where `<VLAN-ID>` is a variable representing the VLAN number.

Identifying switch ports and interfaces

Physical ports on the switch and their corresponding logical software interfaces are identified using the format:

member/slot/port

On the 83xx, 9300, and 10000 Switch Series

- *member*: Always 1. VSF is not supported on this switch.
- *slot*: Always 1. This is not a modular switch, so there are no slots.
- *port*: Physical number of a port on the switch.

For example, the logical interface 1/1/4 in software is associated with physical port 4 on the switch.



If using breakout cables, the port designation changes to x:y, where x is the physical port and y is the lane when split to 4 x 10G or 4 x 25G. For example, the logical interface 1/1/4:2 in software is associated with lane 2 on physical port 4 in slot 1 on member 1.

ICMP Router Discovery Protocol (IRDP), an extension of the ICMP, is independent of any routing protocol. It allows hosts to discover the IP addresses of neighboring routers that can act as default gateways to reach devices on other IP networks.

IRDP operation

IRDP uses the following types of ICMP messages:

- Router advertisement (RA): Sent by a router to advertise IP addresses (including the primary and secondary IP addresses) and preference.
- Router solicitation (RS): Sent by a host to request the IP addresses of routers on the subnet.

An interface with IRDP enabled periodically broadcasts or multicasts an RA message to advertise its IP addresses. A receiving host adds the IP addresses to its routing table, and selects the IP address with the highest preference as the default gateway.

When a host attached to the subnet starts up, the host multicasts an RS message to request immediate advertisements. If the host does not receive any advertisements, it retransmits the RS several times. If the host does not discover the IP addresses of neighboring routers because of network problems, the host can still discover them from periodic RAs.

IRDP allows hosts to discover neighboring routers, but it does not suggest the best route to a destination. If a host sends a packet to a router that is not the best next hop, the host will receive an ICMP redirect message from the router.

IP address preference

Every IP address advertised in RAs has a preference value. A larger preference value represents a higher preference. The IP address with the highest preference is selected as the default gateway address.

You can specify the preference for IP addresses to be advertised on a router interface.

An address with the minimum preference value (-2147483648) will not be used as a default gateway address.

Lifetime of an IP address

An RA contains a lifetime field that specifies the lifetime of advertised IP addresses. If the host does not receive a new RA for an IP address within the address lifetime, the host removes the route entry.

All the IP addresses advertised by an interface have the same lifetime.

Advertising interval

A router interface with IRDP enabled sends out RAs randomly between the minimum and maximum advertising intervals. This mechanism prevents the local link from being overloaded by a large number of RAs sent simultaneously from routers.

As a best practice, shorten the advertising interval on a link that suffers high packet loss rates

Destination address of RA

An RA uses either of the following destination IP addresses:

- Broadcast address 255.255.255.255.
- Multicast address 224.0.0.1, which identifies all hosts on the local link.

By default, the destination IP address of an RA is the multicast address. If all listening hosts in a local area network support IP multicast, specify 224.0.0.1 as the destination IP address.

Proxy-advertised IP addresses

By default, an interface advertises its primary and secondary IP addresses. You can specify IP addresses of other gateways for an interface to proxy-advertise.

VRF support

In IP-based computer networks, virtual routing and forwarding (VRF) is a technology that allows multiple instances of a routing table to co-exist within the same router at the same time. Because the routing instances are independent, the same or overlapping IP addresses can be used without conflicting with each other.

IRDP is VRF aware. As the router advertisements and solicit processing occurs on the interface, packet is through the interface and corresponding VRF.

VSX synchronization

IRDP supports VSX synchronization. For more information on using VSX, see the *Virtual Switching Extension (VSX) Guide* for your switch and software version

Configuring IRDP

Prerequisites

A layer 3 interface.

Procedure

1. Enable IRDP on an interface with the command `ip irdp`.
2. Set the maximum hold time with the command `ip irdp holdtime`.
3. Set the maximum router advertisement interval with the command `ip irdp maxadvertinterval`.
4. Set the minimum router advertisement interval with the command `ip irdp minadvertinterval`.
5. Set the IRDP preference level with the command `ip irdp preference`.
6. Review IRDP configuration settings with the command `show ip irdp`.

Example

This example creates the following configuration:

- Enables IRDP on the layer 3 interface 1/1/1 with packet type set to broadcast.
- Sets the hold time to 5000 seconds.
- Sets the advertisement interval to 30 seconds.
- Sets the minimum advertisement interval to 25 seconds.
- Sets the IRDP preference level to 25.

```
switch(config)# interface 1/1/1
switch(config-if)# ip irdp broadcast
```

```
switch(config-if)# ip irdp holdtime 5000
switch(config-if)# ip irdp maxadvertinterval 30
switch(config-if)# ip irdp minadvertinterval 25
switch(config-if)# ip irdp preference 25
```

IRDP commands

diag-dump irdp basic

diag-dump irdp basic

Description

Displays diagnostic information for IRDP.

Example

```
switch# diag-dump irdp basic
=====
[Start] Feature irdp Time : Thu Jun  8 09:50:28 2017
=====
-----
[Start] Daemon hpe-rdiscd
-----
Interface: 1/1/1 (state : Up)
rdisc ipv4 (enabled: 0, max:600, min:450, hold:1800, pref:0, isBcast:0)
Router IPs - 192.168.1.2,
Interface: 1/1/2 (state : Up)
rdisc ipv4 (enabled: 0, max:600, min:450, hold:1800, pref:0, isBcast:0)
Router IPs - 192.168.2.2,
-----
[End] Daemon hpe-rdiscd
-----
=====
[End] Feature irdp
=====
Diagnostic dump captured for feature irdp
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

ip irdp

```
ip irdp [broadcast | multicast]
no ip irdp
```

Description

Enables IRDP on an interface and specifies the packet type that is used to send advertisements. By default, the packet type is set to `multicast`. IRDP is only supported on layer 3 interfaces.

The `no` form of this command disables IRDP on an interface.

Parameter	Description
<code>broadcast</code>	Advertisements are sent as broadcast packets to IP address 255.255.255.255.
<code>multicast</code>	Advertisements are sent as multicast packets to the multicast group with IP address 24.0.0.1. Default.

Examples

Enabling IRDP on interface 1/1/1 with packet type set to the default value (multicast).

```
switch(config)# interface 1/1/1
switch(config-if)# ip irdp
```

Enabling IRDP on interface 1/1/1 with packet type set to broadcast.

```
switch(config)# interface 1/1/1
switch(config-if)# ip irdp broadcast
```

Disabling IRDP.

```
switch(config)# interface 1/1/1
switch(config-if)# no ip irdp
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	<code>config-if</code>	Administrators or local user group members with execution rights for this command.

ip irdp holdtime

```
ip irdp holdtime <TIME>
no ip irdp holdtime <TIME>
```

Description

Specifies the maximum amount of time the host will consider an advertisement to be valid until a newer advertisement arrives. When a new advertisement arrives, hold time is reset. Hold time must be greater than or equal to the maximum advertisement interval. Therefore, if the hold time for an advertisement expires, the host can reasonably conclude that the router interface that sent the advertisement is no longer available. The default hold time is three times the maximum advertisement interval.

The `no` form of this command removes the specified maximum amount of time the host will consider an advertisement to be valid until a newer advertisement arrives and update it to the default value.

Parameter	Description
<code><TIME></code>	Specifies the lifetime of router advertisements sent from this interface. Range: 4 to 9000 seconds. Default: 1800 seconds.

Example

Setting the hold time for interface 1/1/1 to 5000 seconds:

```
switch(config)# interface 1/1/1
switch(config-if)# ip irdp holdtime 5000
```

Removing the the hold time for interface 1/1/1 to 5000 seconds:

```
switch(config)# interface 1/1/1
switch(config-if)# no ip irdp holdtime 5000
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config-if	Administrators or local user group members with execution rights for this command.

ip irdp maxadvertinterval

```
ip irdp maxadvertinterval <TIME>
no ip irdp maxadvertinterval <TIME>
```

Description

Specifies the maximum router advertisement interval.

The `no` form of this command removes the specified maximum router advertisement interval and reverts to the default value.

Parameter	Description
<TIME>	Specifies the maximum time allowed between the sending of unsolicited router advertisements. Range: 4 to 1800 seconds. Default: 600 seconds.

Example

Setting the advertisement interval for interface 1/1/1 to 30 seconds:

```
switch(config)# interface 1/1/1
switch(config-if)# ip irdp maxadvertinterval 30
```

Removing the advertisement interval for interface 1/1/1 to 30 seconds:

```
switch(config)# interface 1/1/1
switch(config-if)# no ip irdp maxadvertinterval 30
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config-if	Administrators or local user group members with execution rights for this command.

ip irdp minadvertinterval

```
ip irdp minadvertinterval <TIME>
no ip irdp minadvertinterval <TIME>
```

Description

Specifies the minimum amount of time the switch waits between sending router advertisements. By default, this value is automatically set by the switch to be 75% of the value configured for maximum router advertisement interval. Use this command to override the automatically configured value.

The **no** form of this command removes the specified minimum amount of time the switch waits between sending router advertisements and reverts to the default value.

Parameter	Description
<TIME>	Specifies the minimum time allowed between the sending of unsolicited router advertisements. Range: 3 to 1800 seconds. Default: 450 seconds (75% of the default value for maximum router advertisement interval).

Example

Setting the minimum advertisement interval for interface 1/1/1 to 25 seconds:

```
switch(config)# interface 1/1/1
switch(config-if)# ip irdp minadvertinterval 25
```

Removing the minimum advertisement interval for interface 1/1/1 to 25 seconds:

```
switch(config)# interface 1/1/1
switch(config-if)# no ip irdp minadvertinterval 25
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config-if	Administrators or local user group members with execution rights for this command.

ip irdp preference

```
ip irdp preference <LEVEL>
no ip irdp preference <LEVEL>
```

Description

Specifies the IRDP preference level. If a host receives multiple router advertisement messages from different routers, the host selects the router that sent the message with the highest preference as the default gateway.

The `no` form of this command removes the specified IRDP preference level and reverts to the default value.

Parameter	Description
<LEVEL>	Specifies the IRDP preference level. Range: -2147483648 to 2147483647. Default: 0.

Example

Setting the IRDP preference level for interface 1/1/1 to 25.

```
switch(config)# interface 1/1/1
switch(config-if)# ip irdp preference 25
```

Removing the IRDP preference level for interface 1/1/1 to 25.

```
switch(config)# interface 1/1/1
switch(config-if)# no ip irdp preference 25
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config-if	Administrators or local user group members with execution rights for this command.

show ip irdp

```
show ip irdp [vsx-peer]
```

Description

Displays IRDP configuration settings.

Parameter	Description
<code><location></code>	Specifies one of these values: ▪ <code><FQDN></code>: a fully qualified domain name. ▪ <code><IPv4></code>: an IPv4 address. ▪ <code><IPv6></code>: an IPv6 address.

`vsx-peer`

Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Example

```
switch# show ip irdp

ICMP Router Discovery Protocol

Interface Status   Advertising Address  Minimum Maximum Holdtime Preference
-----
1/1/1    Enabled  multicast  6         8         10         10
1/1/2    Disabled multicast  450        600       1800        0
1/1/3    Enabled  broadcast  450        600       1800       115
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

IPv6 RA provides a method for local IPv6 hosts to automatically configure their own IP address (and other settings such as a preferred DNS server) based on information advertised by switches/routers operating on the network.

IPv6 flags

Behavior of IPv6 hosts to IPv6 RA messages is controlled by the managed address configuration flag (M flag), and other stateful configuration flag (O flag).

M flag	O flag	Description
0	0	Indicates that no information is available via DHCPv6.
0	1	Indicates that other configuration information is available via DHCPv6. Examples of such information are DNS-related information or information on other servers within the network.
1	0	Indicates that addresses are available via Dynamic Host Configuration Protocol (DHCPv6).
1	1	If the M flag is set, the O flag is redundant and can be ignored because DHCPv6 will return all available configuration information.

Configuring IPv6 RA

Procedure

1. Enable transmission of IPv6 router advertisements with the command `no ipv6 nd suppress-ra`.
2. Optionally, configure IPv6 unicast address prefixes with the command `ipv6 nd prefix`.
3. Optionally, configure support for DNS name resolution with the commands `ipv6 nd ra dns server` and `ipv6 nd ra dns search-list`.
4. For most deployments, the default values for the following features do not need to be changed. If your deployment requires different settings, change the default values with the indicated command:

IPv6 RA setting	Default value	Command to change it
Number of neighbor solicitations to be sent when performing DAD.	1	<code>ipv6 nd dad attempts</code>
Number of neighbor entries in the ND cache.	131072	<code>ipv6 nd cache-limit</code>

IPv6 RA setting	Default value	Command to change it
Hop limit to be sent in the RA messages.	64	<code>ipv6 nd hop-limit</code>
MTU value to be sent in the RA messages.	1500 bytes	<code>ipv6 nd mtu</code>
Neighbor solicitation interval	1000 milliseconds	<code>ipv6 nd ns-interval</code>
Lifetime of a default router.	1800 seconds	<code>ipv6 nd ra lifetime</code>
Retrieval of an IPv6 address by devices.	Disabled	<code>ipv6 nd ra managed-config-flag</code>
Maximum interval between transmissions of IPv6 RAs.	600 seconds	<code>ipv6 nd ra max-interval</code>
Minimum interval between transmissions of IPv6 RAs.	200 seconds	<code>ipv6 nd ra min-interval</code>
Time that an interface considers a device to be reachable.	0 milliseconds (no limit)	<code>ipv6 nd ra reachable-time</code>
Retry period between ND solicitations.	0 (Use locally configured NS-interval)	<code>ipv6 nd ra retrans-timer</code>
Default routing preference for an interface.	Medium	<code>ipv6 nd router-preference</code>

5. Review IPv6 RA configuration settings with the commands `show ipv6 nd interface`, `show ipv6 nd interface prefix`, `show ipv6 nd ra dns server`, and `show ipv6 nd ra dns search-list`.

Example

This example creates the following configuration:

- Enables IPV6 RA on interface 1/1/3.
- Sets the recursive DNS server address to 4001::1 with a lifetime of 400 seconds.
- Sets the minimum interval between transmissions to 3 seconds.
- Sets the maximum interval between transmissions to 13 seconds.
- Sets the lifetime of a default router to 1900 seconds.

```
switch(config)# interface 1/1/3
switch(config-if)# no ipv6 nd suppress-ra
switch(config-if)# ipv6 nd ra dns server 4001::1 lifetime 400
switch(config-if)# ipv6 nd ra min-interval 3
switch(config-if)# ipv6 nd ra max-interval 13
switch(config-if)# ipv6 nd ra lifetime 1900
switch(config-if)# end
switch# show ipv6 nd interface 1/1/3
Interface 1/1/3 is up
Admin state is up
IPv6 address:
  2006::1/64 [VALID]
IPv6 link-local address: fe80::98f2:b321:368:6dc6/64 [VALID]
ICMPv6 active timers:
```


```

    Last Router-Advertisement sent: 0 Secs
    Next Router-Advertisement sent in: 13 Secs
Router-Advertisement parameters:
  Periodic interval: 3 to 13 secs
  Router Preference: medium
  Send "Managed Address Configuration" flag: false
  Send "Other Stateful Configuration" flag: false
  Send "Current Hop Limit" field: 64
  Send "MTU" option value: 1500
  Send "Router Lifetime" field: 1900
  Send "Reachable Time" field: 0
  Send "Retrans Timer" field: 0
  Suppress RA: false
  Suppress MTU in RA: true
ICMPv6 error message parameters:
  Send redirects: false
ICMPv6 DAD parameters:
  Current DAD attempt: 1
switch# show ipv6 nd ra dns server
Recursive DNS Server List on: 1/1/3
  Suppress DNS Server List: No
  DNS Server 1: 2001::1    lifetime 400

```

IPv6 RA scenario

In this scenario, two host computers are auto-configured with IP addresses using IPv6 RA. In addition, the switch provides the hosts with an address of a recursive DNS server. The physical topology of the network looks like this:

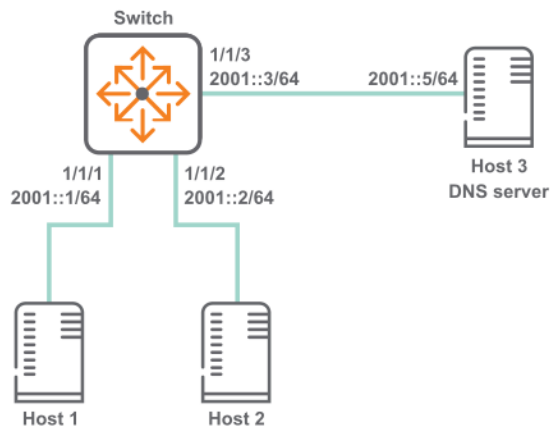

Procedure

1. Configure the interfaces with IPv6 addresses.

```

switch# config
switch(config)# interface 1/1/1
switch(config-if)# ipv6 address 2001::1/64
switch(config)# interface 1/1/2
switch(config-if)# ipv6 address 3001::1/64
switch(config)# interface 1/1/3
switch(config-if)# ipv6 address 4001::1/64

```

2. Enable transmission of all IPv6 RA messages.

```

switch(config-if)# no ipv6 nd suppress-ra

```


IPv6 RA commands

ipv6 address <global-unicast-address>

```
ipv6 address <global-unicast-address>
no ipv6 address <global-unicast-address>
```

Description

Sets a global unicast address on the interface.

The `no` form of this command removes the global unicast address on the interface.



This command automatically creates an IPv6 link-local address on the interface. However, it does not add the `ipv6 address link-local` command to the running configuration. If you remove the IPv6 address, the link-local address is also removed. To maintain the link-local address, you must manually execute the `ipv6 address link-local` command.

Example

Enabling a global unicast address:

```
switch(config)# interface 1/1/1
switch(config-if)# ipv6 address 3731:54:65fe:2::a7
```

Disabling a global unicast address:

```
switch(config)# interface 1/1/1
switch(config-if)# no ipv6 address 3731:54:65fe:2::a7
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config-if	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

ipv6 address autoconfig

```
ipv6 address autoconfig
no ipv6 address autoconfig
```

Description

Enables the interface to automatically obtain an IPv6 address using router advertisement information and the EUI-64 identifier.

The `no` form of this command disables address auto-configuration.



- A maximum of 15 autoconfigured addresses are supported.
- This command automatically creates an IPv6 link-local address on the interface. However, it does not add the `ipv6 address link-local` command to the running configuration. If you remove the IPv6 address, the link-local address is also removed. To maintain the link-local address, you must manually execute the `ipv6 address link-local` command.

Usage

The IPv6 SLAAC feature lets the router obtain the IPv6 address for the interface it is configured through the SLAAC method. This feature is not available on the `mgmt` VRF.

Example

Enabling unicast autoconfiguring:

```
switch(config)# interface 1/1/1
switch(config-if)# ipv6 address autoconfig
```

Disabling unicast autoconfiguring:

```
switch(config)# interface 1/1/1
switch(config-if)# no ipv6 address autoconfig
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config-if	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

ipv6 address link-local

`ipv6 address link-local [<IPV6-ADDR>/<MASK>]`

Description

Enables IPv6 on the current interface. If no address is specified, an IPv6 link-local address is auto-generated for the interface. If an address is specified, auto-configuration is disabled and the specified address/mask is assigned to the interface.

To disable IPv6 link-local on the interface, remove `ipv6 address link-local`, `ipv6 address <global-ipv6-address>`, and `ipv6 address autoconfig` from the interface.



This feature is not available on the management VRF.

Parameter	Description
<code><IPV6-ADDR></code>	Specifies the IP address in IPv6 format (xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx), where x is a hexadecimal number from 0 to F. You can use two colons (::) to represent consecutive zeros (but only once), remove leading zeros, and collapse a hextet of four zeros to a single 0. For example, this address 2222:0000:3333:0000:0000:0000:4444:0055 becomes 2222:0:3333::4444:55.
<code><MASK></code>	Specifies the number of bits in the address mask in CIDR format (x), where x is a decimal number from 0 to 128.

Example

Enabling IPv6 link-local on the interface:

```
switch(config)# interface 1/1/1
switch(config-if)# ipv6 address link-local
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config-if	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

ipv6 nd cache-limit

```
ipv6 nd cache-limit <CACHELIMIT>
no ipv6 nd cache-limit [<CACHELIMIT>]
```

Description

Configures the limit on the number of neighbor entries in the ND cache.

The `no` form of this command sets the cache limit to the default value.

Parameter	Description
<code><CACHELIMIT></code>	Specifies the neighbor cache entries limit. Range: 1-131072. Default: 131072.

Examples

Setting the cache limit to 20.

```
switch(config)# ipv6 nd cache-limit 20
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

ipv6 nd dad attempts

```
ipv6 nd dad attempts <NUM-ATTEMPTS>  
no ipv6 nd dad attempts [<NUM-ATTEMPTS>]
```

Description

Configures the number of neighbor solicitations to be sent when performing duplicate address detection (DAD) for a unicast address configured on an interface. If the active gateway is configured with the same IP as an SVI IP, then IPv6 DAD cannot be configured.

The `no` form of this command sets the number of attempts to the default value.

Parameter	Description
dad attempts <NUM-ATTEMPTS>	Specifies the number of neighbor solicitations to send. Range: 0-15. Default: 1.

Examples

```
switch(config)# interface 1/1/1  
switch(config-if)# ipv6 nd dad attempts 5
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config-if	Administrators or local user group members with execution rights for this command.

ipv6 nd hop-limit

```
ipv6 nd hop-limit <HOPLIMIT>
no ipv6 nd hop-limit [<HOPLIMIT>]
```

Description

Configures the hop limit to be sent in RAs.

The `no` form of this command resets the hop limit to 0. This reset eliminates the hop limit from the RAs that originate on the interface, so the host determines the hop limit.

Parameter	Description
hop-limit <HOPLIMIT>	Specifies the hop limit. Range: 0-255. Default: 64.

Examples

```
switch(config)# interface 1/1/1
switch(config-if)# ipv6 nd hop-limit 64
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config-if	Administrators or local user group members with execution rights for this command.

ipv6 nd mtu

```
ipv6 nd mtu <MTU-VALUE>
no ipv6 nd mtu [<MTU-VALUE>]
```

Description

Configures the MTU size to be sent in the RA messages.

The `no` form of this command sets hop limit to the default value.

Parameter	Description
<MTU-VALUE>	Specifies the MTU size. Range: 1280-65535 bytes. Default: 1500 bytes.

Examples

```
switch(config)# interface 1/1/1
switch(config-if)# ipv6 nd mtu 1300
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config-if	Administrators or local user group members with execution rights for this command.

ipv6 nd ns-interval

```
ipv6 nd ns-interval <TIME>
no ipv6 nd ns-interval [<TIME>]
```

Description

Configures the ND time in milliseconds between DAD neighbor solicitations sent for an unresolved destination. Increase the ns-interval time if the network is slow or if there are persistent retry failures. If the active gateway is configured with the same IP as an SVI IP, then IPv6 DAD cannot be configured. The `no` form of this command sets the ns-interval to the default value.

Parameter	Description
<TIME>	Specifies the neighbor solicitation interval. Range: 1000-3600000 milliseconds. Default: 1000 milliseconds.

Examples

```
switch(config)# interface 1/1/1
switch(config-if)# ipv6 nd ns-interval 1200
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config-if	Administrators or local user group members with execution rights for this command.

ipv6 nd prefix

```
ipv6 nd prefix <IPV6-ADDR>/<PREFIX-LEN>
    [no-advertise | [valid <LIFETIME-VALUE> preferred
    <LIFETIME-VALUE>] | no-autoconfig | no-onlink]

no ipv6 nd prefix <IPV6-ADDR>/<PREFIX-LEN> [no-advertise
```

```

    | [valid <LIFETIME-VALUE> preferred <LIFETIME-VALUE>
    ] | no-autoconfig | no-onlink]

ipv6 nd prefix default [no-advertise | [valid <LIFETIME-VALUE>
    preferred <LIFETIME-VALUE>] | no-autoconfig | no-onlink]]

no ipv6 nd prefix default [no-advertise | [valid <LIFETIME-VALUE>
    preferred <LIFETIME-VALUE>] | no-autoconfig | no-onlink]]

```

Description

Specifies prefixes for the routing switch to include in RAs transmitted on the interface. IPv6 hosts use the prefixes in RAs to autoconfigure themselves with global unicast addresses. The autoconfigured address of a host is composed of the advertised prefix and the interface identifier in the current link-local address of the host.

By default, advertise, autoconfig, and onlink are set.

The `no` form of this command removes the configuration on the interface.

Parameter	Description
<IPv6-ADDR>/<PREFIX-LEN>	Specifies the IPv6 prefix to advertise in RA. Format: X:X::X:X/M
default	Specifies apply configuration to all on-link prefixes that are not individually set by the <code>ipv6 ra prefix <IPv6-ADDR>/<PREFIX-LEN></code> command. It applies the same valid and preferred lifetimes, link state, autoconfiguration state, and advertise options to the advertisements sent for all on-link prefixes that are not individually configured with a unique lifetime. This also applies to the prefixes for any global unicast addresses configured later on the same interface. Using default once, and then using it again with any new parameter values results in the new values replacing the former values in advertisements. If default is used without the <code>no-advertise</code> , <code>no-autoconfig</code> , or <code>no-onlink</code> parameter, the advertisement setting for the absent parameter is returned to its default setting.
no-advertise	Specifies do not advertise prefix in RA.
valid <LIFETIME-VALUE>	Specifies the total time, in seconds, the prefix remains available before becoming unusable. After preferred-lifetime expiration, any autoconfigured address is deprecated and used only for transactions only before preferred-lifetime expires. If the valid lifetime expires, the address becomes invalid. You can enter a value in seconds or enter <code>valid infinite</code> which sets infinite lifetime. Default: 2,592,000 seconds which is 30 days. Range: 0–4294967294 seconds.
preferred <LIFETIME-VALUE>	Specifies the span of time during which the address can be freely used as a source and destination for traffic. This setting must be less than or equal to the corresponding valid-lifetime setting. You can enter a value in seconds or enter <code>preferred infinite</code> which sets infinite lifetime. Default: 604,800 seconds which is seven days. Range: 0–4294967294 seconds.
no-autoconfig	Specifies do not use prefix for autoconfiguration.
no-onlink	Specifies do not use prefix for onlink determination.

Examples

```
switch(config)# interface 1/1/1
switch(config-if)# ipv6 nd prefix 4001::1/64 valid 30 preferred 10 no-autoconfig
no-onlink
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config-if	Administrators or local user group members with execution rights for this command.

ipv6 nd ra dns search-list

```
ipv6 nd ra dns search-list <DOMAIN-NAME> [lifetime <TIME>]
no ipv6 nd ra dns search-list <DOMAIN-NAME>
```

Description

Configures the DNS Search List (DNSSL) to include in Router Advertisements (RAs) transmitted on the interface.

The `no` form of this command removes the DNS Search List from the RAs transmitted on the interface.

Parameter	Description
<DOMAIN-NAME>	Specifies the domain names for DNS queries.
lifetime <TIME>	Specifies lifetime in seconds. Range: 4-4294967295 seconds. Default: 1800 seconds.

Usage

- DNSSL contains the domain names of DNS suffixes or IPv6 hosts to append to short, unqualified domain names for DNS queries.
- Multiple DNS domain names can be added to the DNSSL by using the command repeatedly.
- A maximum of eight server addresses are allowed.

Examples

```
switch(config)# interface 1/1/1
switch(config-if)# ipv6 nd ra dns search-list test.com lifetime 500
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config-if	Administrators or local user group members with execution rights for this command.

ipv6 nd ra dns server

```
ipv6 nd ra dns server <IPv6-ADDR> [lifetime <TIME>]  
no ipv6 nd ra dns server <IPv6-ADDR>
```

Description

Configures the IPv6 address of a preferred Recursive DNS Server (RDNSS) to be included in Router Advertisements (RAs) transmitted on the interface.

The `no` form of this command removes the configured DNS server from the RAs transmitted on the interface.

Parameter	Description
<code><IPv6-ADDR></code>	Specifies the RDNSS address in IPv6 format (xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx), where x is a hexadecimal number from 0 to F. You can use two colons (::) to represent consecutive zeros (but only once), remove leading zeros, and collapse a hextet of four zeros to a single 0. For example, this address 2222:0000:3333:0000:0000:0000:4444:0055 becomes 2222:0:3333::4444:55.
<code>lifetime <TIME></code>	Specifies IPv6 DNS server lifetime in seconds. Range: 4-4294967295 seconds. Default: 1800 seconds.

Usage

- Including RDNSS information in RAs provides DNS server configuration for connected IPv6 hosts without requiring DHCPv6.
- Multiple servers can be configured on the interface by using the command repeatedly.
- A maximum of eight server addresses are allowed.

Examples

```
switch(config)# interface 1/1/1  
switch(config-if)# ipv6 nd ra dns server 2001::1 lifetime 400
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config-if	Administrators or local user group members with execution rights for this command.

ipv6 nd ra lifetime

```
ipv6 nd ra lifetime <TIME>
no ipv6 nd ra lifetime [<TIME>]
```

Description

Configures the lifetime, in seconds, for the routing switch to be used as a default router by hosts on the current interface.

The `no` form of this command sets lifetime to the default of 1800 seconds.

Parameter	Description
<TIME>	Specifies lifetime in seconds of a default router. A setting of 0 for default router lifetime in an RA indicates that the routing switch is not a default router on the interface. Range: 0-9000 seconds. Default: 1800 seconds.

Usage

- A given host on an interface refreshes the default router lifetime for a specific router each time the host receives an RA from that router.
- A specific router ceases to be a default router candidate for a given host if the default router lifetime expires before the host is updated with a new RA from the router.

Examples

```
switch(config)# interface 1/1/1
switch(config-if)# ipv6 nd ra lifetime 1200
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config-if	Administrators or local user group members with execution rights for this command.

ipv6 nd ra managed-config-flag

```
ipv6 nd ra managed-config-flag
no ipv6 nd ra managed-config-flag
```

Description

Controls the M flag setting in RAs the router transmits on the current interface. Enable the M flag to indicate that hosts can obtain IP address through DHCPv6. The M flag is disabled by default.

The `no` form of this command turns off (disables) the M flag.

Usage

- Enabling the M flag directs hosts to acquire their IPv6 addressing for the current interface from a DHCPv6 server.
- When the M-bit is enabled, receiving hosts ignore the O flag setting, which is configured using the command `ipv6 nd ra other-config-flag`.
- When the M-bit is disabled (the default), receiving hosts expect to receive their IPv6 addresses from RA.

M flag	O flag	Description
0	0	Indicates that no information is available via DHCPv6.
0	1	Indicates that other configuration information is available via DHCPv6. Examples of such information are DNS-related information or information on other servers within the network.
1	0	Indicates that addresses are available via Dynamic Host Configuration Protocol (DHCPv6).
1	1	If the M flag is set, the O flag is redundant and can be ignored because DHCPv6 will return all available configuration information.

Examples

```
switch(config)# interface 1/1/1
switch(config-if)# ipv6 nd ra managed-config-flag
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	<code>config-if</code>	Administrators or local user group members with execution rights for this command.

ipv6 nd ra max-interval

```
ipv6 nd ra max-interval <TIME>
no ipv6 nd ra max-interval [<TIME>]
```

Description

Configures the maximum interval between transmissions of IPv6 RAs on the interface. The interval between RA transmissions on an interface is a random value that changes every time an RA is sent. The interval is calculated to be a value between the current max-interval and min-interval settings.

The `no` form of this command returns the setting to its default, provided the default value is less than the default lifetime value.

Parameter	Description
<code><TIME></code>	Specifies the maximum advertisement time in seconds. Range: 4-1800. Default: 600 seconds.

Usage

- This value has one setting per interface. The setting does not apply to RAs sent in response to a router solicitation received from another device.
- Attempting to set max-interval to a value that is not sufficiently larger than the current min-interval also results in an error message.

Examples

```
switch(config)# interface 1/1/1
switch(config-if)# ipv6 nd ra max-interval 30
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	<code>config-if</code>	Administrators or local user group members with execution rights for this command.

ipv6 nd ra min-interval

```
ipv6 nd ra min-interval <TIME>
no ipv6 nd ra min-interval [<TIME>]
```

Description

Configures the minimum interval between transmissions of IPv6 RAs on the interface. The interval between RA transmissions on an interface is a random value that changes every time an RA is sent. The interval is calculated to be a value between the current max-interval and min-interval settings.

The `no` form of this command returns the setting to its default, provided the default value is less than the current max-interval setting.

Parameter	Description
<TIME>	Specifies a minimum advertisement time in seconds. Range: 3-1350. Default: 200 seconds.

Usage

- This value has one setting per interface and does not apply to RAs sent in response to a router solicitation received from another device.
- The min-interval must be less than the max-interval. Attempting to set min-interval to a higher value results in an error message.

Examples

```
switch(config)# interface 1/1/1
switch(config-if)# ipv6 nd ra min-interval 25
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config-if	Administrators or local user group members with execution rights for this command.

ipv6 nd ra other-config-flag

```
ipv6 nd ra other-config-flag
no ipv6 nd ra other-config-flag
```

Description

Controls the O-bit in RAs the router transmits on the current interface; but is ignored unless the M-bit is disabled in RAs. Configure to set the O-bit in RA messages for host to obtain network parameters through DHCPv6. The other-config-flag is disabled by default.

For more information on configuring the M-bit, see `ipv6 nd ra managed-config-flag`.

The `no` form of this command turns off (disables) the setting for this command in RAs.

Usage

Enabling the O-bit while the M-bit is disabled directs hosts on the interface to acquire their other configuration information from DHCPv6. Examples of such information are DNS-related information or information on other servers within the network.

Examples

```
switch(config)# interface 1/1/1
switch(config-if)# ipv6 nd ra other-config-flag
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config-if	Administrators or local user group members with execution rights for this command.

ipv6 nd ra reachable-time

```
ipv6 nd ra reachable-time <TIME>
no ipv6 nd ra reachable-time [<TIME>]
```

Description

Sets the amount of time that the interface considers a device to be reachable after receiving a reachability confirmation from the device.

The `no` form of this command sets the reachable time to the default value of 0. (no limit).

Parameter	Description
<TIME>	Specifies the reachable time in milliseconds. Range: 1000-3600000. Default: 0 (no limit).

Examples

```
switch(config)# interface 1/1/1
switch(config-if)# ipv6 nd ra reachable-time 2000
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config-if	Administrators or local user group members with execution rights for this command.

ipv6 nd ra retrans-timer

```
ipv6 nd ra retrans-timer <TIME>
no ipv6 nd ra retrans-timer [<TIME>]
```

Description

Configures the period (retransmit timer) between ND solicitations sent by a host for an unresolved destination, or between DAD neighbor solicitation requests. By default, hosts on the interface use their own locally configured NS-interval settings instead of using the value received in the RAs.

Increase this timer when neighbor solicitation retries or failures occur, or in a "slow" (WAN) network.

The `no` form of this command sets the value to the default of 0.

Parameter	Description
<TIME>	Specifies the retransmit timer value in milliseconds. Range: 0 - 4294967295 milliseconds. Default: 0 (Use locally configured NS-interval).

Examples

```
switch(config)# interface 1/1/1
switch(config-if)# ipv6 nd ra retrans-timer 400
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config-if	Administrators or local user group members with execution rights for this command.

ipv6 nd route

```
ipv6 nd route <IPv6-ADDR>/<PREFIX-LEN> [no-advertise | lifetime {<SECONDS> | infinite} |
preference {low | medium | high}]
no ipv6 nd route <IPv6-ADDR>/<PREFIX-LEN> [no-advertise | lifetime {<SECONDS> | infinite}
| preference {low | medium | high}]
```

Description

Configures the routing switch to include the routing information in the RAs transmitted on the interface. The routing switch includes the route information in the RA packets only if the configured routes are present in the routing table. After receiving the RA packets carrying the route information, the IPv6 host updates its routing table. The hosts lookup their routing table and selects the best possible route to forward packets.

The `no` form of this command removes the settings for including the routing information in the RA packets.

Parameter	Description
<IPv6-ADDR>/<PREFIX-LEN>	Specifies the IPv6 route prefix to advertise in RA. Format: X:X::X:X/M
no-advertise	Specifies to not advertise the route information.
lifetime {<SECONDS> infinite}	Specifies the duration in seconds that the route is valid for the route determination. If this parameter is configured with 0, the route becomes invalid. Default: 1800. Range: 0-4294967295.
preference {low medium high}	Specifies the preference for the hosts to choose the router associated with the route over other routers when multiple identical route prefixes from different routers are received. Default: medium

Examples

Configuring routing information on interface 1/1/1.

```
switch(config)# int 1/1/1
switch(config-if)# ipv6 nd route 1::1/64 lifetime 200 preference high
```

Command History

Release	Modification
10.10	Command introduced

Command Information

Platforms	Command context	Authority
All platforms	config-if	Administrators or local user group members with execution rights for this command.

ipv6 nd router-preference

```
ipv6 nd router-preference {high | medium | low}
no ipv6 nd router-preference [high | medium | low]
```

Description

Specifies the value that is set in the Default Router Preference (DRP) field of Router Advertisements (RAs) that the switch sends from an interface. An interface with a DRP value of high will be preferred by other devices on the network over interfaces with an RA value of medium or low.

The **no** form of this command set the value to the default of medium.

Parameter	Description
high	Sets DRP to high.

Parameter	Description
medium	Sets DRP to medium. Default.
low	Sets DRP to low.

Examples

```
switch(config)# interface 1/1/1
switch(config-if)# ipv6 nd router-preference high
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config-if	Administrators or local user group members with execution rights for this command.

ipv6 nd suppress-ra

```
ipv6 nd suppress-ra [<SUPPRESS-OPTION>]
no ipv6 nd ra suppress-ra [<SUPPRESS-OPTION>]
```

Description

Configures suppression of IPv6 Router Advertisement transmissions on an interface.

The **no** form of this command restores transmission of IPv6 Router Advertisement and options.

Parameter	Description
suppress-ra [<SUPPRESS-OPTION>]	Specifies suppressing RA transmissions. Entering suppress-ra without any options, suppresses all RA messages (default). Or you can enter one of the following options.
dnssl	Specifies suppressing DNSSL options in RA messages.
mtu	Specifies suppressing MTU options in RA messages.
rdnss	Specifies suppressing RDNSS options in RA messages.

Examples

```
switch(config)# interface 1/1/1
switch(config-if)# ipv6 nd suppress-ra mtu dnssl rdnss
switch(config-if)# no ipv6 nd suppress-ra mtu dnssl rdnss
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config-if	Administrators or local user group members with execution rights for this command.

show ipv6 nd global traffic

show ipv6 nd global traffic [vsx-peer]

Description

Displays IPV6 Neighbor Discovery traffic details on a device.

Parameter	Description
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Examples

```
switch# show ipv6 nd global traffic
ICMPv6 packet Statistics (sent/received)
  Total Messages           :      18/0
  Error Messages           :        0/0
  Destination Unreachables :        0/0
  Time Exceeded            :        0/0
  Parameter Problems       :        0/0
  Echo Request             :        0/0
  Echo Replies             :        0/0
  Redirects                :        0/0
  Packet Too Big           :        0/0
  Router Advertisements    :        4/0
  Router Solicitations     :        0/0
  Neighbor Advertisements  :        0/0
  Neighbor Solicitations   :        3/0
  Duplicate router RA received :      0/0
ICMPv6 MLD Statistics (sent/received)
  V1 Queries :          0/0
  V2 Queries :          0/0
  V1 Reports  :          0/0
  V2 Reports  :         11/0
  V1 Leaves  :          0/0
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show ipv6 nd interface

```
show ipv6 nd interface [<IF-NAME> | all-vrfs | vrf <VRF-NAME>] [vsx-peer]
```

Description

Displays neighbor discovery information for an interface. If no options are specified, displays information for the default VRF.

Parameter	Description
<IF-NAME>	Displays information about the specified IPv6 enabled interface.
all-vrfs	Displays information about interfaces in all VRFs.
vrf <VRF-NAME>	Displays information about interfaces in a particular VRF. Or, if <VRF-NAME> is not specified, information for the default VRF is displayed.
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Examples

Showing information for all VRFs:

```
switch# show ipv6 nd interface all-vrfs

List of IPv6 Interfaces for VRF default
Interface 1/1/1 is up
Admin state is up
IPv6 address:
IPv6 link-local address: fe80::7272:cfff:fee7:a8b9/64 [VALID]
ICMPv6 active timers:
  Last Router-Advertisement sent:
  Next Router-Advertisement sent in:
Router-Advertisement parameters:
  Periodic interval: 200 to 600 secs
  Router Preference: medium
  Send "Managed Address Configuration" flag: false
  Send "Other Stateful Configuration" flag: false
  Send "Current Hop Limit" field: 64
  Send "MTU" option value: 1500
  Send "Router Lifetime" field: 1800
  Send "Reachable Time" field: 0
  Send "Retrans Timer" field: 0
  Suppress RA: true
  Suppress MTU in RA: true
```

```

ICMPv6 error message parameters:
  Send redirects: false
ICMPv6 DAD parameters:
  Current DAD attempt: 1

List of IPv6 Interfaces for VRF red
Interface 1/1/2 is up
Admin state is up
IPv6 address:
  2001::1/64 [VALID]
IPv6 link-local address: fe80::7272:cfff:fee7:a8b9/64 [VALID]
ICMPv6 active timers:
  Last Router-Advertisement sent:
  Next Router-Advertisement sent in:
Router-Advertisement parameters:
  Periodic interval: 200 to 600 secs
  Router Preference: medium
  Send "Managed Address Configuration" flag: false
  Send "Other Stateful Configuration" flag: false
  Send "Current Hop Limit" field: 64
  Send "MTU" option value: 1500
  Send "Router Lifetime" field: 1800
  Send "Reachable Time" field: 0
  Send "Retrans Timer" field: 0
  Suppress RA: true
  Suppress MTU in RA: true
ICMPv6 error message parameters:
  Send redirects: false
ICMPv6 DAD parameters:
  Current DAD attempt: 1

```

Showing information for interface 1/1/1:

```

switch# show ipv6 nd interface 1/1/1
Interface 1/1/1 is up
Admin state is up
IPv6 address:
IPv6 link-local address: fe80::7272:cfff:fee7:a8b9/64 [VALID]
ICMPv6 active timers:
  Last Router-Advertisement sent:
  Next Router-Advertisement sent in:
Router-Advertisement parameters:
  Periodic interval: 200 to 600 secs
  Router Preference: high
  Send "Managed Address Configuration" flag: false
  Send "Other Stateful Configuration" flag: false
  Send "Current Hop Limit" field: 64
  Send "MTU" option value: 1500
  Send "Router Lifetime" field: 1800
  Send "Reachable Time" field: 0
  Send "Retrans Timer" field: 0
  Suppress RA: true
  Suppress MTU in RA: true
ICMPv6 error message parameters:
  Send redirects: false
ICMPv6 DAD parameters:
  Current DAD attempt: 1

```

Showing information for the default VRF:

```

switch# show ipv6 nd interface

List of IPv6 Interfaces for VRF default
Interface 1/1/1 is up
  Admin state is up
  IPv6 address:
    2001::1/64 [VALID]
  IPv6 link-local address: fe80::7272:cfff:fee7:a8b9/64 [VALID]
  ICMPv6 active timers:
    Last Router-Advertisement sent: 6 Secs
    Next Router-Advertisement sent in: 7 Secs
  Router-Advertisement parameters:
    Periodic interval: 3 to 13 secs
    Router Preference: medium
    Send "Managed Address Configuration" flag: false
    Send "Other Stateful Configuration" flag: false
    Send "Current Hop Limit" field: 64
    Send "MTU" option value: 1500
    Send "Router Lifetime" field: 1900
    Send "Reachable Time" field: 0
    Send "Retrans Timer" field: 0
    Suppress RA: true
    Suppress MTU in RA: true
  ICMPv6 error message parameters:
    Send redirects: false
  ICMPv6 DAD parameters:
    Current DAD attempt: 1

```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show ipv6 nd interface prefix

```
show ipv6 nd interface prefix [all-vrfs | vrf <VRF-NAME>] [vsx-peer]
```

Description

Shows IPv6 prefix information for all VRFs or a specific VRF. If no options are specified, shows information for the default VRF.

Parameter	Description
all-vrfs	Shows prefix information for all VRFs.
vrf <VRF-NAME>	Name of a VRF.

Parameter	Description
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Examples

Showing prefix information for the default VRF:

```
switch# show ipv6 nd interface prefix

List of IPv6 Interfaces for VRF default
List of IPv6 Prefix advertised on 1/1/1
  Prefix : 4545::/65
  Enabled : Yes
  Validlife time : 2592000
  Preferred lifetime : 604800
  On-link : Yes
  Autonomous : Yes
```

Showing information for VRF red:

```
switch# show ipv6 nd interface prefix vrf red

List of IPv6 Interfaces for VRF red
List of IPv6 Prefix advertised on 1/1/2
  Prefix : 2001::/64
  Enabled : Yes
  Validlife time : 2592000
  Preferred lifetime : 604800
  On-link : Yes
  Autonomous : Yes
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show ipv6 nd interface route

```
show ipv6 nd interface route [all-vrfs | vrf <VRF-NAME>]
```

Description

Displays route information of all interfaces in the default VRF.

Parameter	Description
all-vrfs	Displays information about interfaces in all VRFs.
vrf <VRF-NAME>	Displays information about interfaces in a particular VRF. Or, if <VRF-NAME> is not specified, displays information for the default VRF.

Examples

Showing routing information for interface 1/1/1 in the default VRF:

```
switch# show ipv6 nd interface route

List of IPv6 Interfaces for VRF default
List of IPv6 Routes advertised on 1/1/1
Route : 1::/64
Enabled : Yes
Route lifetime : 200
Route preference : high
```

Showing routing information for interface 1/1/1 in VRF red:

```
switch# show ipv6 nd interface route vrf red

List of IPv6 Interfaces for VRF red
List of IPv6 Routes advertised on 1/1/2
Route : 2::/64
Enabled : No
Route lifetime : 1800
Route preference : low
```

Command History

Release	Modification
10.10	Command introduced

Command Information

Platforms	Command context	Authority
All platforms	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show ipv6 nd ra dns search-list

```
show ipv6 nd ra dns search-list [vsx-peer]
```

Description

Displays domain name information on all interfaces.

Parameter	Description
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Examples

```
switch(config)# interface 1/1/1
switch(config-if)# ipv6 nd ra dns search-list test.com
switch# show ipv6 nd ra dns search-list
Recursive DNS Search List on: 1
  Suppress DNS Search List: Yes
  DNS Search 1: test.com      lifetime 1800
```

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show ipv6 nd ra dns server

show ipv6 nd ra dns server [vsx-peer]

Description

Displays DNS server information on all interfaces.

Parameter	Description
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Examples

```
switch(config)# interface 1/1/1
switch(config-if)# ipv6 nd ra dns server 2001::1
switch# show ipv6 nd ra dns server
Recursive DNS Server List on: 1
  Suppress DNS Server List: Yes
  DNS Server 1: 2001::1      lifetime 1800
```


Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

sFlow is a technology for monitoring traffic in switched or routed networks. The sFlow monitoring system is comprised of:

- An sFlow Agent that runs on a network device, such as a switch. The agent uses sampling techniques to capture information about the data traffic flowing through the device and forwards this information to an sFlow collector.
- An sFlow Collector that receives monitoring information from sFlow agents. The collector stores this information so that a network administrator can analyze it to understand network data flow patterns.



The sFlow UDP datagrams sent to a collector are not encrypted, therefore any sensitive information contained in an sFlow sample is exposed.

sFlow agent

The sFlow agent on the switch provides ingress sampling of all forwarded layer 2 and layer 3 traffic on LAG and Ethernet ports. High-availability is supported (packet sampling continues to work after switch-over).

The sFlow agent can communicate with up to three sFlow collectors at the same time. The agent communicates with collectors on the default VRF and non-default VRF.

Although you can configure very high sampling rates, the switch may drop samples if it cannot handle the rate of sampled packets. High sampling rates may also cause high CPU usage resulting in control plane performance issues.

A single sFlow datagram sent to a collector contains multiple flow and counter samples. The total number of samples an sFlow datagram can contain varies depending on the settings for header size and maximum datagram size.

Default settings

- sFlow is disabled on all interfaces.
- Collector port: UDP port 6343.
- sflow sampling mode: Ingress
- Sampling rate: 4096.
- Polling interval: 30 seconds.
- Header size: 128 bytes.
- Max datagram size: 1400 bytes.

Supported features

- Global sampling rate
- Global sampling mode (Ingress, Egress, and Both)

- Interface counters polling
- Agent IP configuration for IPv4 and IPv6
- Header size configuration
- Max datagram size configuration
- Ingress sampling for all forwarded traffic (L2, L3)
- Egress sampling for all forwarded traffic (L2, L3)
- Enable/Disable sFlow per interface
- Support for three remote collectors
- A collector can be defined on the default and non-default VRF
- Sampling on Ethernet and LAG interfaces
- High availability support (sampling continues to work after switch-over)
- Source IP support (setting source IP for sFlow datagrams sent to a remote collector)



For the 4100i, 6000, and 6100 switch series, collector can be defined only on the default VRF. Also, there is no sampling of egress traffic.

Limitations

- Sampling rate cannot be set per interface (global only)
- sFlow is not configurable via SNMP
- sFlow egress global counters will increase for broadcast, unknown-unicast, & multicast (BUM) traffic. However, the interface counters will not increase because it is flooded traffic. The output port in the sFlow sampled packet for BUM traffic will be 0x80000000.
- When the sampling mode is configured as both, the ingress and egress packets may not be sampled in equal proportions.
- The sampled packet count will not match the configured value when sFlow is configured but it will converge after sampling around 500 packets.
- sFlow egress sampling is supported only on certain types of CPU generated traffic.
- The sFlow egress sampling on VxLAN tunnel is not supported and there will not be any indication to the user when configuring sFlow.

Configuring the sFlow agent

Procedure

1. Configure one or more sFlow collectors with the command `sflow collector`. This determines where the sFlow agent sends sFlow information.
2. Enable the sFlow agent on all interfaces, or on a specific interface, with the command `sflow`.
3. Define the address of the sFlow agent with the command `sflow agent-ip`.
4. By default, the source IP address for sFlow datagrams is set to the IP address of the outgoing switch interface on which the sFlow client is communicating with a collector. Since the switch can have multiple routing interfaces, datagrams can potentially be sent on different paths at different times, resulting in different source IP addresses for the same client. To resolve this issue, define a single source IP address. For details, see *Single source IP address* in the *Fundamentals Guide*.
5. For most deployments, the default values for the following settings do not need to be changed. If your deployment requires different settings, change the default values with the indicated

commands:

sFlow setting	Default value	Command to change it
Rate at which packets are sampled.	1 in every 4096 packets	<code>sflow sampling</code>
Rate at which the switch sends data to an sFlow collector.	30 seconds	<code>sflow polling</code>
Size of the sFlow header.	128 bytes	<code>sflow header-size</code>
Maximum size of an sFlow datagram.	1400 bytes	<code>sflow max-datagram-size</code>

6. Review sFlow configuration settings with the command `show sflow`.

Example


This example creates the following configuration:

- Configures an sFlow collector with the IP address **10.10.20.209**.
- Enables the sFlow agent on all interfaces.
- Defines the sFlow agent IP address to be **10.10.1.5**.

```
switch(config)# sflow collector 10.10.20.209
switch(config)# sflow
switch(config)# sflow agent-ip 10.0.0.1
```

sFlow scenario

In this scenario, two hosts send sFlow traffic through a switch to an sFlow collector. The physical topology of the network looks like this:

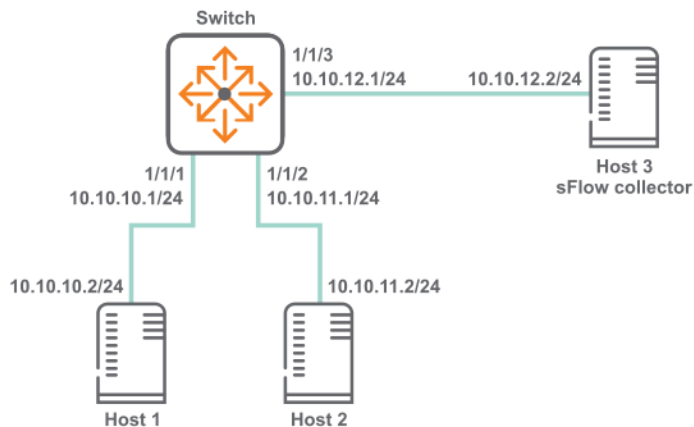

Procedure

1. Enable sFlow globally.
`switch# config`
`switch(config)# sflow`
2. Set the sFlow agent IP address to **10.10.12.1**.

- ```
switch(config)# sflow agent-ip 10.10.12.1
```
3. Set the sFlow collector IP address to **10.10.12.2**.  

```
switch(config)# sflow collector 18.2.2.2
```
  4. Configure sFlow sampling rate and polling interval.  

```
switch(config)# sflow sampling 5000
switch(config)# sflow polling 20
```
  5. Configure interface **1/1/1** with IP address **10.10.10.1/24**.  

```
switch(config)# interface 1/1/1
switch(config-if)# no shutdown
switch(config-if)# ip address 10.10.10.1/24
switch(config)# quit
```
  6. Configure interface **1/1/2** with IP address **10.10.11.1/24**.  

```
switch(config)# interface 1/1/2
switch(config-if)# no shutdown
switch(config-if)# ip address 10.10.11.1/24
switch(config)# quit
```
  7. Configure interface **1/1/3** with IP address **10.10.12.1/24**.  

```
switch(config)# interface 1/1/3
switch(config-if)# no shutdown
switch(config-if)# ip address 10.10.12.1/24
switch(config)# quit
```
  8. Verify sFlow configuration

The following example is only applicable for the 8360 series switch

```
switch# show sflow
sFlow Global Configuration

sFlow enabled
Collector IP/Port/Vrf 10.10.10.2/6343/default
Agent Address 10.0.0.1
Sampling Rate 1024
Polling Interval 30
Header Size 128
Max Datagram Size 1400
Sampling Mode both

sFlow Status

Running - Yes

sFlow enabled on Interfaces:


lag100

sFlow Statistics

Number of Ingress Samples 200
Number of Egress Samples 0
```

## sFlow scenario 2

In this scenario, two hosts connected to different switches send sFlow traffic to a collector. A LAG is used to connect the two switches. The physical topology of the network looks like this:

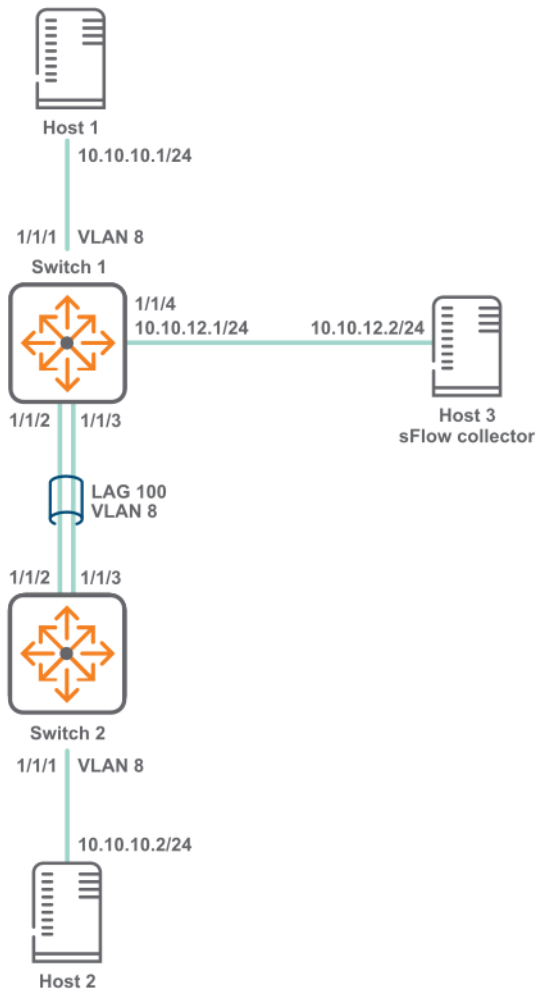

## Procedure

1. Configure switch 1.
  - a. Enable sFlow globally.
 

```
switch# config
switch(config)# sflow
```
  - b. Set the sFlow agent IP address to **10.10.12.1**.
 

```
switch(config)# sflow agent-ip 10.10.12.1
```
  - c. Set the sFlow collector IP address to **10.10.12.2**.
 

```
switch(config)# sflow collector 10.10.12.2
```
  - d. Configure sFlow sampling rate and polling interval.
 

```
switch(config)# sflow sampling 5000
switch(config)# sflow polling 10
```
  - e. Create VLAN **8**.
 

```
switch(config)# vlan 8
switch(config-vlan-8)# no shutdown
switch(config)# exit
```
  - f. Define LAG **100** and assign VLAN **vlan 8** to it.
 

```
switch(config)# interface lag 100
switch(config-lag-if)# no shutdown
switch(config-lag-if)# no routing
switch(config-lag-if)# vlan access 8
switch(config-lag-if)# lacp mode active
```

- g. Configure interface **1/1/1**.
 

```
switch(config)# interface 1/1/1
switch(config-if)# no shutdown
switch(config-lag-if)# no routing
switch(config-if)# vlan access 8
```
- h. Configure interface **1/1/2** and **1/1/3** as members of LAG **100**.
 

```
switch# (config)#interface 1/1/2
switch(config-if)# no shutdown
switch(config-if)# lag 100
switch(config-if)# exit
switch(config)# interface 1/1/3
switch(config-if)# no shutdown
switch(config-if)# lag 100
switch(config-if)# exit
```
- i. Configure interface **1/1/4** with IP address **10.10.12.1/24**.
 

```
switch# (config)#interface 1/1/4
switch(config-if)# no shutdown
switch(config-if)# ip address 10.10.12.1/24
switch(config-if)# quit
```
- j. Verify sFlow configuration.

The following example is only applicable for the 8360 series switch

```
switch# show sflow
sFlow Global Configuration

sFlow enabled
Collector IP/Port/Vrf 10.10.10.2/6343/default
Agent Address 10.0.0.1
Sampling Rate 1024
Polling Interval 30
Header Size 128
Max Datagram Size 1400
Sampling Mode both

sFlow Status

Running - Yes

sFlow enabled on Interfaces:

lag100

sFlow Statistics

Number of Ingress Samples 200
Number of Egress Samples 0
```

2. Configure switch 2.
  - a. Create VLAN **8**.
 

```
switch(config)# vlan 8
switch(config-vlan-8)# no shutdown
switch(config)# exit
```
  - b. Define LAG **100** and assign VLAN **vlan 8** to it.
 

```
switch(config)# interface lag 100
switch(config-lag-if)# no shutdown
switch(config-lag-if)# no routing
switch(config-lag-if)# vlan access 8
switch(config-lag-if)# lacp mode active
```

- c. Configure interface **1/1/1**.
- ```
switch(config)# interface 1/1/1
switch(config-if)# no shutdown
switch(config-lag-if)# no routing
switch(config-if)# vlan access 8
```
- d. Configure interface **1/1/2** and **1/1/3** as members of LAG **100**.
- ```
switch# (config)#interface 1/1/2
switch(config-if)# no shutdown
switch(config-if)# lag 100
switch(config-if)# exit
switch(config)-if# interface 1/1/3
switch(config-if)# no shutdown
switch(config-if)# lag 100
switch(config-if)# exit
```

## sFlow agent commands

### clear sflow statistics

```
clear sflow statistics {global | interface <INTERFACE-NAME>}
```

#### Description

This command clears the sFlow sample statistics counter to 0 either globally or for a specific interface.

| Parameter                  | Description                                       |
|----------------------------|---------------------------------------------------|
| global                     | Specifies all interfaces on the switch.           |
| interface <INTERFACE-NAME> | Specifies the name of an interface on the switch. |

#### Examples

Clearing the global sFlow sample statistics counter to 0 globally:

```
switch(config)# clear sflow statistics global
```

Clearing the global sFlow sample statistics counter to 0 for interface **1/1/1**:

```
switch(config)# clear sflow statistics interface 1/1/1
```

#### Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

#### Command Information

| Platforms     | Command context | Authority                                                                          |
|---------------|-----------------|------------------------------------------------------------------------------------|
| All platforms | config          | Administrators or local user group members with execution rights for this command. |



# sflow

sflow  
no sflow

## Description

Enables the sFlow agent.

- In the `config` context, this command enables the sFlow agent globally on all interfaces.
- In an `config-if` context, this command enables the sFlow agent on a specific interface. sFlow cannot be enabled on a member of a LAG, only on the LAG.

The sFlow agent is disabled by default.

The `no` form of this command disables the sFlow agent and deletes all sFlow configuration settings, either globally, or for a specific interface.

## Examples

Enabling sFlow globally on all interfaces:

```
switch(config)# sflow
```

Disabling sFlow globally on all interfaces:

```
switch(config)# no sflow
```

Enabling sFlow on interface **1/1/1**:

```
switch(config)# interface 1/1/1
switch(config-if)# sflow
```

Disabling sFlow on interface **1/1/1**:

```
switch(config)# interface 1/1/1
switch(config-if)# no sflow
```

Enabling sFlow on interface **lag100**:

```
switch(config)# interface lag100
switch(config-if)# sflow
```

Disabling sFlow on interface **lag100**:

```
switch(config)# interface lag100
switch(config-if)# no sflow
```

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms     | Command context     | Authority                                                                          |
|---------------|---------------------|------------------------------------------------------------------------------------|
| All platforms | config<br>config-if | Administrators or local user group members with execution rights for this command. |

## sflow agent-ip

```
sflow agent-ip <IP-ADDR>
no sflow agent-ip [<IP-ADDR>]
```

## Description

Defines the IP address of the sFlow agent to use in sFlow datagrams. This address must be defined for sFlow to function. HPE recommends that the address:

- can uniquely identify the switch
- is reachable by the sFlow collector
- does not change with time

The `no` form of this command deletes the IP address of the sFlow agent. This causes sFlow to stop working and no datagrams will be sent to the sFlow collector.

| Parameter | Description                                                                                                                                                                                                                                                                                                                                                                                       |
|-----------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <IP-ADDR> | Specifies an IP address in IPv4 format (x.x.x.x), where x is a decimal number from 0 to 255, or IPv6 format (xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx), where x is a hexadecimal number from 0 to F. The agent address is used to identify the switch in all sFlow datagrams sent to sFlow collectors. It is usually set to an IP address on the switch that is reachable from an sFlow collector. |

## Examples

Setting the agent address to **10.10.10.100**:

```
switch(config)# sflow agent-ip 10.0.0.100
```

Setting the agent address to **2001:0db8:85a3:0000:0000:8a2e:0370:7334**:

```
switch(config)# sflow agent-ip 2001:0db8:85a3:0000:0000:8a2e:0370:7334
```

Removing the address configuration from the switch, which results in sFlow being disabled:

```
switch(config)# no sflow agent-ip
```

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms     | Command context | Authority                                                                          |
|---------------|-----------------|------------------------------------------------------------------------------------|
| All platforms | config          | Administrators or local user group members with execution rights for this command. |

## sflow collector

```
sflow collector <IP-ADDR> [port <PORT>] [vrf <VRF>]
no sflow collector <IP-ADDR> [port <PORT>] [vrf <VRF>]
```

## Description

Defines a collector to which the sFlow agent sends data. Up to three collectors can be defined. At least one collector should be defined, and it must be reachable from the switch for sFlow to work.

| Parameter                              | Description                                                                                                                                                                                                         |
|----------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>collector &lt;IP-ADDR&gt;</code> | Specifies the IP address of a collector in IPv4 format (x.x.x.x), where x is a decimal number from 0 to 255, or IPv6 format (xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx), where x is a hexadecimal number from 0 to F. |
| <code>port &lt;PORT&gt;</code>         | Specifies the UDP port on which to send information to the sFlow collector. Range: 0 to 65536. Default: 6343.                                                                                                       |
| <code>vrf &lt;VRF&gt;</code>           | Specifies the VRF on which to send information to the sFlow collector. The VRF must be defined on the switch. If no VRF is specified, the default VRF (default) is used.                                            |

## Example

Defining a collector with IP address **10.10.10.100** on UDP port **6400**:

```
switch(config)# sflow collector 10.0.0.1 port 6400
```

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms     | Command context | Authority                                                                          |
|---------------|-----------------|------------------------------------------------------------------------------------|
| All platforms | config          | Administrators or local user group members with execution rights for this command. |

## sflow disable

sflow disable

### Description

Disables the sFlow agent, but retains any existing sFlow configuration settings. The settings become active if the sFlow agent is re-enabled.

### Example

Disabling sFlow support:

```
switch(config)# sflow disable
```

### Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

### Command Information

| Platforms     | Command context | Authority                                                                          |
|---------------|-----------------|------------------------------------------------------------------------------------|
| All platforms | config          | Administrators or local user group members with execution rights for this command. |

## sflow header-size

sflow header-size <SIZE>  
no sflow header-size [<SIZE>]

### Description

Sets the sFlow header size in bytes.

The `no` form of this command sets the header size to the default value of 128.

| Parameter          | Description                                                               |
|--------------------|---------------------------------------------------------------------------|
| header-size <SIZE> | Specifies the sFlow header size in bytes. Range: 64 to 256. Default: 128. |

### Examples

Setting the header size to **64** bytes:

```
switch(config)# sflow header-size 64
```

Setting the header size to the default value of **128** bytes:

```
switch(config)# no sflow header-size
```

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms     | Command context | Authority                                                                          |
|---------------|-----------------|------------------------------------------------------------------------------------|
| All platforms | config          | Administrators or local user group members with execution rights for this command. |

## sflow max-datagram-size

```
sflow max-datagram-size <SIZE>
no sflow max-datagram-size [<SIZE>]
```

### Description

Sets the maximum number of bytes that are sent in one sFlow datagram.

The **no** form of this command sets maximum number of bytes to the default value of 1400.

| Parameter                | Description                                                                    |
|--------------------------|--------------------------------------------------------------------------------|
| max-datagram-size <SIZE> | Specifies the maximum datagram size in bytes. Range: 1 to 9000. Default: 1400. |

## Examples

Setting the datagram size to **1000** bytes:

```
switch(config)# sflow max-datagram-size 1000
```

Setting the header size to the default value of **1400** bytes:

```
switch(config)# no sflow max-datagram-size
```

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms     | Command context | Authority                                                                          |
|---------------|-----------------|------------------------------------------------------------------------------------|
| All platforms | config          | Administrators or local user group members with execution rights for this command. |

## sflow mode

```
sflow mode {ingress | egress | both}
no sflow mode {ingress | egress | both}
```

### Description

Sets the sFlow sampling mode. The default mode is ingress.

The no form of the command sets the sampling mode to ingress. Executing the no form of the command with the ingress option will have no impact as ingress is the default mode.

| Parameter | Description                              |
|-----------|------------------------------------------|
| ingress   | Samples only ingress traffic.            |
| egress    | Samples only egress traffic.             |
| both      | Samples both ingress and egress traffic. |

### Examples

Setting the sFlow mode to only sample egress traffic:

```
switch# configure terminal
switch(config)# sflow mode egress
```

Setting the sFlow mode to only sample ingress traffic:

```
switch# configure terminal
switch(config)# sflow mode ingress
```

Setting the sFlow mode to sample both sample ingress and egress traffic:

```
switch# configure terminal
switch(config)# sflow mode both
```

Resetting the sFlow sampling mode to the default of ingress from previously configured mode of egress:

```
switch# configure terminal
switch(config)# no sflow mode egress
```

### Command History

| Release          | Modification                                                      |
|------------------|-------------------------------------------------------------------|
| 10.10            | Command enabled on the 8320, 8325, 9300, and 10000 Switch Series. |
| 10.07 or earlier | --                                                                |

## Command Information

| Platforms                             | Command context | Authority                                                                          |
|---------------------------------------|-----------------|------------------------------------------------------------------------------------|
| 8360<br>8320<br>8325<br>9300<br>10000 | config          | Administrators or local user group members with execution rights for this command. |

## sflow polling

```
sflow polling <INTERVAL>
no sflow polling [<INTERVAL>]
```

### Description

Defines the global polling interval for sFlow in seconds.

The `no` form of this command sets the polling interval to the default value of 30 seconds.

| Parameter  | Description                                                                |
|------------|----------------------------------------------------------------------------|
| <INTERVAL> | Specifies the polling interval in seconds. Range: 10 to 3600. Default: 30. |

### Examples

Setting the polling interval to 10:

```
switch(config)# sflow polling 10
```

Setting the polling interval to the default value.

```
switch(config)# no sflow polling
```

### Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms     | Command context | Authority                                                                          |
|---------------|-----------------|------------------------------------------------------------------------------------|
| All platforms | config          | Administrators or local user group members with execution rights for this command. |

## sflow sampling

```
sflow sampling <RATE>
no sflow sampling [<RATE>]
```

### Description

Defines the global sampling rate for sFlow in number of packets. The default sampling rate is 4096, which means that one in every 4096 packets is sampled. A warning message is displayed when the sampling rate is set to less than 4096 and proceeds only after user confirmation.

The `no` form of this command sets the sampling rate to the default value of 4096.

| Parameter       | Description                                                         |
|-----------------|---------------------------------------------------------------------|
| sampling <RATE> | Specifies the sampling rate. Range: 1 to 1000000000. Default: 4096. |

### Examples

Setting the sampling rate to **5000**:

```
switch(config)# sflow sampling 5000
```

Setting the sampling rate to the default:

```
switch(config)# no sflow sampling
```

Setting the sampling rate to **1000**:

```
switch(config)# sflow sampling 1000
Setting the sFlow sampling rate lower than 4096 is not recommended and might
affect system performance.
Do you want to continue [y/n]? y
switch(config)#
```

### Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

### Command Information

| Platforms     | Command context | Authority                                                                          |
|---------------|-----------------|------------------------------------------------------------------------------------|
| All platforms | config          | Administrators or local user group members with execution rights for this command. |



# show sflow

show sflow [interface <INTERFACE-NAME>] [vsx-peer]

## Description

Shows sFlow configuration settings and statistics for all interfaces, or for a specific interface. It also displays the current status of sFlow on the device and reports any errors that require attention.



If sFlow is enabled on the interfaces associated with a lag interface, then the interfaces will not be shown as separate entries under sFlow enabled on Interface in the output. Only the associated lag interface will have an entry in the column.

| Parameter                  | Description                                                                                                                                                                                                                      |
|----------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| interface <INTERFACE-NAME> | Specifies the name of an interface on the switch.                                                                                                                                                                                |
| vsx-peer                   | Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX. |

## Examples

Showing sFlow information for all interfaces:

```
switch# show sflow
sFlow Global Configuration

sFlow enabled
Collector IP/Port/Vrf 10.0.0.2/6343/default
 10.0.0.3/6400/default
Agent Address 10.0.0.1
Sampling Rate 1024
Polling Interval 30
Header Size 128
Max Datagram Size 1400
Sampling Mode ingress

sFlow Status

Running - Yes

sFlow enabled on Interfaces:

1/1/2
1/1/3
lag100

sFlow Statistics

Number of Ingress Samples 200
Number of Egress Samples 120
```

Showing sFlow information for interface 1/1/1:

```
switch# show sflow interface 1/1/1
```

```
sFlow configuration - Interface 1/1/1

sFlow enabled
Sampling Rate 1024
Sampling Mode both
Number of Ingress Samples 81
Number of Egress Samples 20
sFlow Sampling Status success
```

Showing sFlow information for interface **lag 10**:

```
switch# show sflow interface lag 10
sFlow Configuration - Interface lag10

sFlow enabled
Sampling Rate 4096
Sampling Mode both
Number of Ingress Samples 0
Number of Egress Samples 0
sFlow Sampling Status error

Sampling Status on LAG members

Intf 1/1/2 no agent
Intf 1/1/3 no agent
```

## Command History

| Release          | Modification                                                                                                                                              |
|------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------|
| 10.10            | Command output updated to display Sampling Mode, Number of Ingress Samples, and Number of Egress Samples for 8320, 8325, 9300, and 10000 series switches. |
| 10.07 or earlier | --                                                                                                                                                        |

## Command Information

| Platforms     | Command context | Authority                                                                          |
|---------------|-----------------|------------------------------------------------------------------------------------|
| All platforms | Manager (#)     | Administrators or local user group members with execution rights for this command. |

The Dynamic Host Configuration Protocol (DHCP) enables the automatic assignment of IP addresses and other configuration settings to network devices.

DHCP is composed of three components: DHCP server, DHCP client, and DHCP relay agent.

The DHCP server contains the IP addresses and configuration settings for a network as defined by a network administrator. It responds to DHCP requests issued by DHCP clients, returning the requested network configuration settings.

The DHCP client runs on a network device. It issues a request to a DHCP server to obtain an IP address for the network device, and other network settings.

The DHCP relay agent acts as an intermediary, forwarding DHCP requests/response between DHCP clients/servers on different networks. This enables DHCP clients to use the services of DHCP servers that are not on the same subnet on which they are located.

## DHCP client

By default, the switch operates as a DHCP client on the management interface allowing it to automatically obtain an IP address from a DHCP server on the network to which it is connected.

## DHCP client commands

### ip dhcp

```
ip dhcp
no ip dhcp
```

### Description

Enables the DHCP client on the management interface or any interface VLAN to automatically obtain an IP address from a DHCP server on the network. By default, the DHCP client is enabled on the management interface and VLAN 1.

The `no` form of the command disables DHCP mode and is supported only on interface VLANs; it is not supported on the management interface.

### Examples

Enabling the DHCP client on the management interface:

```
switch(config)# interface mgmt
switch(config-if-mgmt) # ip dhcp
switch(config-if-mgmt) # no shutdown
```

Enabling the DHCP client on the interface vlan 1:

```
switch(config)# interface vlan 1
switch(config-if-vlan)# ip dhcp
switch(config-if-vlan)# no shutdown
```

Disabling the DHCP client on the interface vlan 1:

```
switch(config)# interface vlan 1
switch(config-if-vlan)# no ip dhcp
```

Enabling the DHCP client on the interface vlan 4 under non-default VRF:

```
switch(config)# interface vlan 4
switch(config-if-vlan)# vrf attach red
switch(config-if-vlan)# ip dhcp
```

If the interface is not enabled, you can enable it by entering the `no shutdown` command.



---

`ip dhcp` is supported only on one vlan at a time.

---

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms     | Command context                  | Authority                                                                          |
|---------------|----------------------------------|------------------------------------------------------------------------------------|
| All platforms | config-if-mgmt<br>config-if-vlan | Administrators or local user group members with execution rights for this command. |

## show ip dhcp

show ip dhcp

## Description

Displays DHCP IPv4 information on the ports.

## Examples

Displaying the DHCP IPv4 information on the ports:

```
switch# show ip dhcp
```

| INTERFACE-NAME | ADDRESS            | DEFAULT_GATEWAY | DOMAIN_NAME | VRF     | DNS-SERVERS |
|----------------|--------------------|-----------------|-------------|---------|-------------|
| -----          |                    |                 |             |         |             |
| vlan1          | 10.254.239.10/27   |                 | domain.com  | default | 50.0.0.2,   |
|                | 50.0.0.3, 50.0.0.4 |                 |             |         |             |

## Command History

| Release          | Modification        |
|------------------|---------------------|
| 10.09 or earlier | Command introduced. |

## Command Information

| Platforms     | Command context             | Authority                                                                                                                                                              |
|---------------|-----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| All platforms | Operator (>) or Manager (#) | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

## DHCP relay agent

The function of the DHCP relay agent is to forward the DHCP messages to other subnets so that the DHCP server does not have to be on the same subnet as the DHCP clients. The DHCP relay agent transfers DHCP messages from the DHCP clients located on a subnet without a DHCP server, to other subnets. It also relays answers from DHCP servers to DHCP clients.

### Supported interfaces

The DHCP relay agent is supported on layer 3 interfaces, layer 3 VLAN interfaces, and LAG interfaces. DHCP relay is not supported on the management interface.

### VRF support

The DHCP relay agent is VRF aware and behaves as follows when VRFs are defined on the switch:

- DHCP client requests received on an interface are forwarded to the configured servers via the VRF that the interface is part of.
- DHCP server responses received on an interface are forwarded to the client that is reachable via the VRF that the interface is part of.

### DHCP server interoperation

Both DHCP relay and DHCP server can be configured on the same VRF.

## DHCPv4 relay agent

### Hop count in DHCP requests

When a DHCP client broadcasts request, the DHCP relay agent in the switch receives the packets and forwards them to the DHCP server as unicast requests. During this process, the DHCP relay agent increments the hop count before forwarding DHCP packets to the server. The DHCP server, in turn, includes the hop count in the DHCP header in the response sent back to a DHCP client.

### DHCP relay option 82

Option 82 is called the relay agent information option. When a DHCP relay agent forwards client-originated DHCP packets to a DHCP server, the option 82 field is inserted/replaced, or the packet with this option is dropped. Servers recognizing the relay agent information option may use the information to implement policies for the assignment of IP addresses and other parameters. The relay agent relays the server-to-client replies to the client.

If a second relay agent is configured to add its own option 82 information, it can encapsulate option 82 information in messages from a first relay agent. The DHCP server uses the option 82 information from both relay agents to decide the IP address for the client.

## Inter-VRF DHCP relay

The DHCP relay agent supports anycast gateway using option 82 sub-option 5 (RFC 3527). The DHCP relay discovery packet is filled with the client's gateway IP address in sub-option 5 (discovery packet). The DHCP server uses this information to offer an IP address from the right pool. Pool selection occurs by matching the default gateway configuration settings on the DHCP server with the requested gateway IP address in sub-option 5 in the discovery packet.

The switch uses DHCP relay sub-option 151 to enable DHCP relay to forward discovery and reply packets between VXLAN DHCP clients and DHCP servers even when they are on different overlay or underlay VRFs and the DHCP-server is reachable on the default VRF or one of the overlay VRFs.

In general deployments, a renewal of a DHCP client's IP occurs when the client sends a request to the DHCP server directly. In the case of EVPN VXLAN clients, the DHCP server is not directly reachable. Instead, the renewal request is sent to the DHCP relay. DHCP relay agent fills the option 82 sub-option 11 field in the DHCP discovery packet with the client's gateway IP on the VTEP (which is the relay interface IP address of the VTEP) and the DHCP server returns a DHCP offer reply packet with option 54 set to the DHCP server Identifier. When the reply packet is received by the client, the client uses the IP in option 54 to sent subsequent renewal requests to this IP (VTEP's Relay Interface IP) using sub-option 11 (also known as the Server ID Override Sub-option). Refer to RFC 5107 for more details.

Sub-options 5,11,151,152 are filled in the discover packet, only if a source IP address is defined (using the command `ip source-address`) for the given DHCP server's source VRF. If the server does not understand sub-option 151, then the server will add sub-option 152 in offer packet.

In an inter-VRF situation, when both DHCP relay and DHCP snooping are enabled on the switch with option 82, DHCPv4 clients will not receive an IP address.

## Configuring a BOOTP/DHCP relay gateway

The DHCP relay agent selects the lowest-numbered IP address on the interface to use for DHCP messages. The DHCP server then uses this IP address when it assigns client addresses. However, this IP address may not be the same subnet as the one on which the client needs the DHCP service. This feature provides a way to configure a gateway address for the DHCP relay agent to use for relayed DHCP requests, rather than the DHCP relay agent automatically assigning the lowest-numbered IP address.



---

When configuring a bootp-gateway, dhcp-smart-relay will be ineffective. This can occur with dhcp-relay as well.

---

## DHCP smart relay

The DHCP Smart Relay feature first attempts to use the primary IP address from the client-connected interfaces as a gateway IP address (giaddr) and as an IP address for pool selection. If the DHCP server does not reply to the DHCP discover messages with the primary IP address, the feature attempts to use secondary IP addresses in sequential order from the lowest to the highest. The DHCP Smart Relay forwards three client discover messages with every IP address configured on the client interface until it receives a response from the server. If the list of IP addresses from the client-connected interface is exhausted or the client times out, the DHCP Smart Relay uses the primary IP address. If the DHCP Smart Relay is not configured, the giaddr is the lowest IP address on the interface.

The DHCP Smart Relay maintains the client cache which includes the information about the client, giaddr, retry count for giaddr, port, the total number of processed discovery messages the timestamp of

the discover packets. This client cache is rebuilt upon high availability and VSF switchover, VSX-MM (redundancy) switchover, and when the switch reboots.



---

DHCP Smart Relay is only supported for IPv4.

---

## Configuring the DHCPv4 relay agent

### Prerequisites

- An enabled layer 3 interface.

### Procedure

1. The DHCPv4 relay agent is enabled by default. If it was previously disabled, enable it with the command `dhcp-relay`.
2. Configure one or more IP helper addresses with the command `ip helper-address`. This determines where the DHCPv4 agent forwards DHCP requests. IP helper addresses can be configured on layer 3 interfaces, layer 3 VLAN interfaces, and LAG interfaces.
3. If you want to modify the content of forwarded DHCP packets or drop DHCP packets, configure option 82 support with the command `dhcp-relay option 82`.
4. Define the gateway address that the DHCPv4 agent will use with the command [ip bootp-gateway](#).
5. If required, enable the hop count increment feature with the command `dhcp-relay hop-count-increment`.
6. Review DHCPv4 relay agent configuration settings with the commands `show dhcp-relay`, `show ip helper-address`, and `show dhcp-relay bootp-gateway`.

### Example

This example creates the following configuration:

- Enables the DHCPv4 relay agent.
- Enables interface **1/1/1** and assigns an IPv4 address to it. (By default, all interfaces are layer 3 and disabled.)
- Defines an IP helper address of **10.10.20.209** on the interface.
- Enables DHCP option 82 support and replaces all option 82 information with the values from the switch with the switch MAC address as the remote ID.



---

On 4100i, 6000 and 6100 series switches, only SVIs are supported.

---

```
switch(config)# dhcp-relay
switch(config)# interface 1/1/1
switch(config-if)# no shutdown
switch(config-if)# ip address 198.51.100.1/24
switch(config-if)# ip helper-address 10.10.20.209
switch(config-if)# exit
switch(config)# dhcp-relay option 82 replace mac
switch# show dhcp-relay
```

```
DHCP Relay Agent : enabled
DHCP Request Hop Count Increment : enabled
Option 82 : disabled
```

```
Response Validation : disabled
Option 82 Handle Policy : replace
Remote ID : mac
```

#### DHCP Relay Statistics:


| Valid Requests | Dropped Requests | Valid Responses | Dropped Responses |
|----------------|------------------|-----------------|-------------------|
| 60             | 10               | 60              | 10                |

#### DHCP Relay Option 82 Statistics:

| Valid Requests | Dropped Requests | Valid Responses | Dropped Responses |
|----------------|------------------|-----------------|-------------------|
| 50             | 8                | 50              | 8                 |

## DHCPv4 relay scenario 1

In this scenario, DHCP relay on the server enables two hosts to obtain their IP addresses from a DHCP server on a different subnet. The physical topology of the network looks like this:

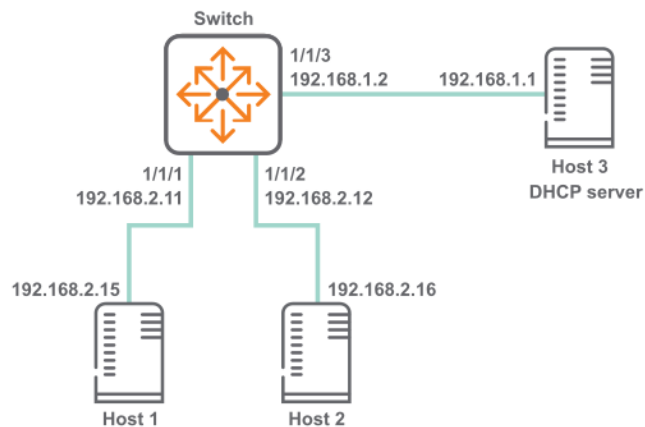

## Procedure

1. DHCP relay is enabled by default. If it was previously disabled, enable it.

```
switch# config
switch(config)# dhcp-relay
```

2. Define an IPv4 helper address on interfaces 1/1/1 and 1/1/2.

```
switch(config)# interface 1/1/1
switch(config-if)# ip address 192.168.2.11/24
switch(config-if)# ip helper-address 192.168.1.1
switch(config-if)# interface 1/1/2
switch(config-if)# ip address 192.168.2.12/24
switch(config-if)# ip helper-address 192.168.1.1
```

3. Verify DHCP relay configuration.



```
switch# show dhcp-relay
```

```
DHCP Relay Agent : enabled
DHCP Request Hop Count Increment : enabled
Option 82 : disabled
Source-Interface : disabled
Response Validation : disabled
Option 82 Handle Policy : replace
Remote ID : mac
```

```
DHCP Relay Statistics:
```

| Valid Requests | Dropped Requests | Valid Responses | Dropped Responses |
|----------------|------------------|-----------------|-------------------|
| 60             | 10               | 60              | 10                |

```
DHCP Relay Option 82 Statistics:
```

| Valid Requests | Dropped Requests | Valid Responses | Dropped Responses |
|----------------|------------------|-----------------|-------------------|
| 50             | 8                | 50              | 8                 |

```
switch# show ip helper-address
```

```
IP Helper Addresses
```

```
Interface: 1/1/1
IP Helper Address VRF


192.168.1.1 default

Interface: 1/1/2
IP Helper Address VRF

192.168.1.1 default
```

## DHCPv4 relay scenario 2

In this scenario, the two host computers communicate with two different DHCP servers. Each server is reached on a different VRF. The physical topology of the network looks like this:

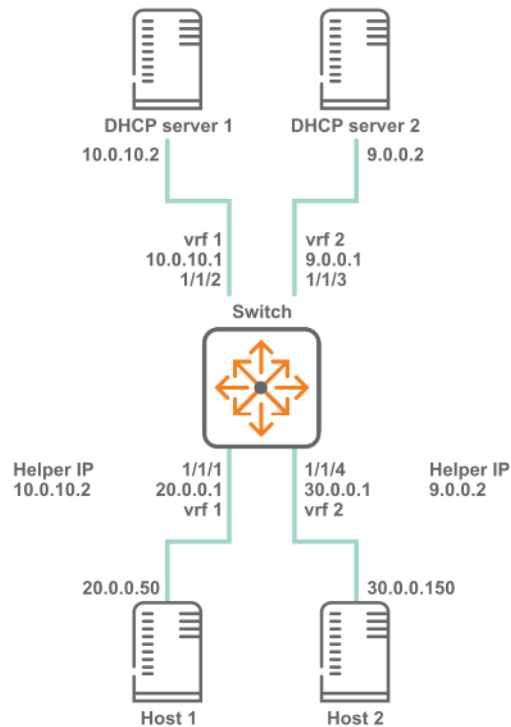

## Procedure

1. Create the two VRFs.
 

```
switch# config
switch(config)# vrf vrf 1
switch(config)# vrf vrf 2
```
2. Configure interface **1/1/1**. Set its IP address, associate it with VRF 1, and define the helper IP address to reach DHCP server 1.
 

```
switch(configif)# interface 1/1/1
switch(configif)# vrf attach vrf1
switch(configif)# ip address 20.0.0.1/8
switch(configif)# ip helper-address 10.0.10.2
```
3. Configure interface **1/1/2**. Set its IP address and associate it with VRF 1.
 


```
switch(configif)# interface 1/1/2
switch(configif)# vrf attach vrf1
switch(configif)# ip address 10.0.10.1/24
```
4. Configure interface **1/1/3**. Set its IP address and associate it with VRF 1.
 

```
switch(configif)# interface 1/1/3
switch(configif)# vrf attach vrf2
switch(configif)# ip address 9.0.0.1/24
```
5. Configure interface **1/1/4**. Set its IP address, associate it with VRF 2, and define the helper IP address to reach DHCP server 2.
 

```
switch(configif)# interface 1/1/4
switch(configif)# vrf attach vrf2
switch(configif)# ip address 30.0.0.1/8
switch(configif)# ip helper-address 9.0.0.2
```

## DHCPv4 relay scenario 3

In this scenario, host on switch 1 reaches the DHCP server on switch two via a LAG. The physical topology of the network looks like this:

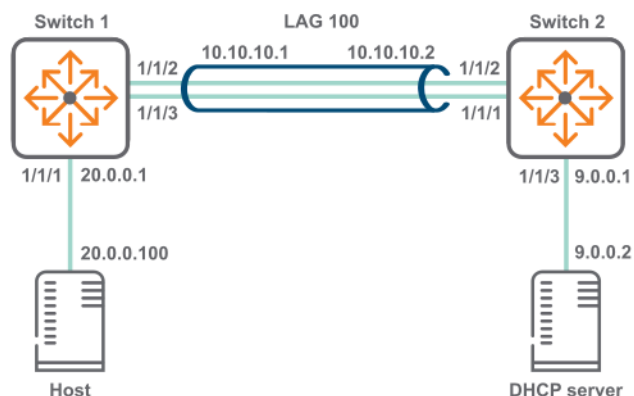

## Procedure

1. On switch 1:
  - a. Create LAG 100 and assign an IP address to it.

```

switch# config
switch(config)# interface lag 100
switch(config-lag-if)# no shutdown
switch(config-lag-if)# ip address 10.0.10.1/24
switch(config-lag-if)# lacp mode active
switch(config-lag-if)# exit

```

- b. Assign an IP address to interface 1/1/1 and an IP helper address to reach the DHCP server.

```

switch(config)# interface 1/1/1
switch(config-if)# ip address 20.0.0.1/8
switch(config-if)# ip helper-address 9.0.0.2

```

- c. Assign interfaces 1/1/2 and 1/1/3 to LAG 100.

```

switch(config-if)# interface 1/1/2
switch(config-if)# lag 100
switch(config-if)# interface 1/1/3
switch(config-if)# lag 100

```

- d. Create a route between 10.0.10.2 and 9.0.0.0.

```

switch(config)# ip route 9.0.0.0/24 10.0.10.2

```

2. On switch 2:
  - a. Create LAG 100 and assign an IP address to it.

```

switch# config
switch(config)# interface lag 100
switch(config-lag-if)# no shutdown
switch(config-lag-if)# ip address 10.0.10.2/24
switch(config-lag-if)# lacp mode active
switch(config-lag-if)# exit

```

- b. Assign an IP address to interface 1/1/3.

```
switch(config)# interface 1/1/3
switch(config-if)# ip address 9.0.0.1/24
```

- c. Assign interfaces 1/1/2 and 1/1/3 to LAG 100.

```
switch(config-if)# interface 1/1/2
switch(config-if)# lag 100
switch(config-if)# interface 1/1/3
switch(config-if)# lag 100
```

- d. Create a route between 20.0.0.0 and 10.0.10.1.

```
switch(config)# ip route 20.0.0.0/8 10.0.10.1
```

## DHCPv4 relay commands

### dhcp-relay

```
dhcp-relay
no dhcp-relay
```

### Description

Enables DHCP relay support. DHCP relay is enabled by default. DHCP relay is not supported on the management interface.

The `no` form of this command disables DHCP relay support.

### Examples

This example enables DHCP relay support.

```
switch(config)# dhcp-relay
```

This example removes DHCP relay support.

```
switch(config)# no dhcp-relay
```

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms    | Command context | Authority                                                                          |
|--------------|-----------------|------------------------------------------------------------------------------------|
| 8320<br>8325 | config          | Administrators or local user group members with execution rights for this command. |

| Platforms             | Command context | Authority |
|-----------------------|-----------------|-----------|
| 8360<br>9300<br>10000 |                 |           |

### dhcp-relay hop-count-increment

```
dhcp-relay hop-count-increment
no dhcp-relay hop-count-increment
```

### Description

Enables the DHCP relay hop count increment feature, which causes the DHCP relay agent to increment the hop count in all relayed DHCP packets. Hop count is enabled by default.

The `no` form of this command disables the hop count increment feature.

### Examples

Enabling the hop count increment feature.

```
switch(config)# dhcp-relay hop-count-increment
```

Disabling the hop count increment feature.

```
switch(config)# no dhcp-relay hop-count-increment
```

### Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

### Command Information

| Platforms                             | Command context | Authority                                                                          |
|---------------------------------------|-----------------|------------------------------------------------------------------------------------|
| 8320<br>8325<br>8360<br>9300<br>10000 | config          | Administrators or local user group members with execution rights for this command. |

### dhcp-relay l2vpn-clients

```
dhcp-relay l2vpn-clients
no dhcp-relay l2vpn-clients
```

### Description

Enables forwarding of packets from L2 VPN clients. Forwarding is enabled by default.

The `no` form of this command disables forwarding of packets from L2 VPN clients.

### Example

Enabling forwarding of packets from L2 VPN clients.

```
switch(config)# dhcp-relay 12vpn-clients
switch(config)# no dhcp-relay 12vpn-clients
```

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms                             | Command context | Authority                                                                          |
|---------------------------------------|-----------------|------------------------------------------------------------------------------------|
| 8320<br>8325<br>8360<br>9300<br>10000 | config          | Administrators or local user group members with execution rights for this command. |

### dhcp-relay option 82

```
dhcp-relay option 82 {replace [validate] | drop [validate] |
 keep | source-interface | validate [replace | drop]} [ip | mac]
no dhcp-relay option 82 {replace [validate] | drop [validate] |
 keep | source-interface | validate [replace | drop]} [ip | mac]
```

## Description

Configures the behavior of DHCP relay option 82. A DHCP relay agent can receive a message from another DHCP relay agent having option 82. The relay information from the previous relay agent is replaced by default.

The `no` form of this command disables the DHCP relay option 82 configurations.

| Parameter        | Description                                                                                                                                                                                       |
|------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| replace          | Replace the existing option 82 field in an inbound client DHCP packet with the information from the switch. The remote ID and circuit ID information from the first relay agent is lost. Default. |
| validate         | Validate option 82 information in DHCP server responses and drop invalid responses.                                                                                                               |
| drop             | Drop any inbound client DHCP packet that contains option 82 information.                                                                                                                          |
| keep             | Keep the existing option 82 field in an inbound client DHCP packet. The remote ID and circuit ID information from the first relay agent is preserved.                                             |
| source-interface | Configures the DHCP relay to use a configured source IP address for inter-VRF server reachability. Set the source IP address with the command <code>ip source-interface</code> .                  |
| ip               | Use the IP address of the interface on which the client DHCP packet entered the switch as the option 82 remote ID.                                                                                |

| Parameter | Description                                                            |
|-----------|------------------------------------------------------------------------|
| mac       | Use the MAC address of the switch as the option 82 remote ID. Default. |

## Example

This example enables DHCP option 82 support and replaces all option 82 information with the values from the switch, with the switch MAC address as the remote ID.

```
switch(config) # dhcp-relay option 82 replace mac
```

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms                             | Command context | Authority                                                                          |
|---------------------------------------|-----------------|------------------------------------------------------------------------------------|
| 8320<br>8325<br>8360<br>9300<br>10000 | config          | Administrators or local user group members with execution rights for this command. |

### dhcp-smart-relay

```
dhcp-smart-relay
no dhcp-smart-relay
```

## Description

Enables DHCP Smart Relay on the device and on all the interfaces where IP helper addresses are configured. Disabled by default at the device level. Not supported on the management interface. The `no` form of this command disables DHCP Smart Relay.



Prior to enabling DHCP Smart Relay, enable IP helper address configuration and configure secondary IP addresses on the interface.

## Examples

Enabling DHCP Smart Relay:

```
switch(config) # dhcp-smart-relay
```

Disabling DHCP Smart Relay support:

```
switch(config) # no dhcp-smart-relay
```

## Command History

| Release | Modification        |
|---------|---------------------|
| 10.10   | Command introduced. |

## Command Information

| Platforms                             | Command context | Authority                                                                          |
|---------------------------------------|-----------------|------------------------------------------------------------------------------------|
| 8320<br>8325<br>8360<br>9300<br>10000 | config          | Administrators or local user group members with execution rights for this command. |

### diag-dump dhcp-relay basic

diag-dump dhcp-relay basic

### Description

Dumps DHCP relay configurations for all interfaces.

### Examples

This example enables DHCP relay support.

```
switch# diag-dump dhcp-relay basic
=====
[Start] Feature dhcp-relay Time : Sun Apr 26 06:38:10 2020
=====

[Start] Daemon hpe-relay

DHCP Relay : 1
DHCP Relay hop-count-increment : 1
DHCP Relay Option82 : 1
DHCP Relay Option82 validate : 0
DHCP Relay Option82 policy : keep
DHCP Relay Option82 remote-id : mac
DHCP Relay Option82 Source Intf : Disable
DHCP Smart Relay : Enable
System Mac [f4:03:43:80:27:00]
VRF :BLUE, Source Ip:200.0.0.10
vsx: Not Present

Interface vlan2: 1

Client Packet Statistics:

Valid Dropped O82_Valid O82_Dropped vsx_drops

0 0 0 0 0

Server Packet Statistics:

Valid Dropped O82_Valid O82_Dropped Invalid_IP_Drops To_
Dsnoop


```



```

-
 0 0 0 0 0 0
client request dropped packets with extn option 82 = 0
client request valid packets with extn option 82 = 0
server request dropped packets with extn option 82 = 0
server request valid packets with extn option 82 = 0
Port 67 - 200.0.0.100,2
source vrf-BLUE.

Interface vlan3: 1

 Client Packet Statistics:

 Valid Dropped O82_Valid O82_Dropped vsx_drops

 0 0 0 0 0

 Server Packet Statistics:

 Valid Dropped O82_Valid O82_Dropped Invalid_IP_Drops To_
Dsnoop

-
 0 0 0 0 0 0
client request dropped packets with extn option 82 = 0
client request valid packets with extn option 82 = 0
server request dropped packets with extn option 82 = 0
server request valid packets with extn option 82 = 0
Port 67 - 200.0.0.100,2
source vrf-BLUE.

DHCP Smart Relay Client Cache:
Total Number of entries: 2

Client-MAC PortIndex Timestamp RetryCount DiscCount GWIP

00:50:56:bd:6a:7a 20 1636105218 1 4 30.0.0.1
00:50:56:bd:71:17 20 1636105214 1 4 30.0.0.1

[End] Daemon hpe-relay
=====
[End] Feature dhcp-relay
=====
Diagnostic-dump captured for feature dhcp-relay

```

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms    | Command context | Authority                                                                          |
|--------------|-----------------|------------------------------------------------------------------------------------|
| 8320<br>8325 | config          | Administrators or local user group members with execution rights for this command. |

| Platforms             | Command context | Authority |
|-----------------------|-----------------|-----------|
| 8360<br>9300<br>10000 |                 |           |

### ip bootp-gateway

```
ip bootp-gateway <IPV4-ADDR>
no ip bootp-gateway <IPV4-ADDR>
```

### Description

Configures a gateway address for the DHCP relay agent to use for DHCP requests. By default DHCP relay agent picks the lowest-numbered IP address on the interface.

The `no` form of this command removes the gateway address.

| Parameter   | Description                                                                                                  |
|-------------|--------------------------------------------------------------------------------------------------------------|
| <IPV4-ADDR> | Specifies the IP address of the gateway in IPv4 format (x.x.x.x), where x is a decimal number from 0 to 255. |

### Examples

Setting the IP address of the gateway for interface 1/1/1 to 10.10.10.10:

```
switch(config)# interface 1/1/1
switch(config-if)# ip bootp-gateway 10.10.10.10
```

### Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

### Command Information

| Platforms                             | Command context | Authority                                                                          |
|---------------------------------------|-----------------|------------------------------------------------------------------------------------|
| 8320<br>8325<br>8360<br>9300<br>10000 | config-if       | Administrators or local user group members with execution rights for this command. |

### ip helper-address

```
ip helper-address <IPV4-ADDR> [vrf <VRF-NAME>]
no ip helper-address <IPV4-ADDR> [vrf <VRF-NAME>]
```

### Description

Defines the address of a remote DHCP server or DHCP relay agent. Up to eight addresses can be defined. The DHCP agent forwards DHCP client requests to all defined servers.

This command requires that you define a source IP address for DHCP relay with the command `ip source-interface`. The configured source IP on the VRF is used to forward DHCP packets to the server. A helper address cannot be defined on the OOBM interface. The `no` form of this command removes an IP helper address.

| Parameter                                     | Description                                                                                          |
|-----------------------------------------------|------------------------------------------------------------------------------------------------------|
| <code>helper-address &lt;IPv4-ADDR&gt;</code> | Specifies the helper IP address in IPv4 format (x.x.x.x), where x is a decimal number from 0 to 255. |
| <code>vrf &lt;VRF-NAME&gt;</code>             | Specifies the name of a VRF. Default: default.                                                       |

## Examples

Defining the IP helper address 10.10.10.209 on interface 1/1/1:

```
switch(config)# interface 1/1/1
switch(config-if)# ip helper-address 10.10.10.209
```

Removing the IP helper address 10.10.10.209 on interface 1/1/1:

```
switch(config-if)# no ip helper-address 10.10.10.209
```

Defining the IP helper address 10.10.10.209 on interface 1/1/2 on VRF myvrf:

```
switch(config)# interface 1/1/2
switch(config-if)# ip helper-address 10.10.10.209 vrf myvrf
```

Removing the IP helper address **10.10.10.209** on interface **1/1/2** on VRF `myvrf`:

```
switch(config-if)# no ip helper-address 10.10.10.209 vrf myvrf
```

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms                             | Command context        | Authority                                                                          |
|---------------------------------------|------------------------|------------------------------------------------------------------------------------|
| 8320<br>8325<br>8360<br>9300<br>10000 | <code>config-if</code> | Administrators or local user group members with execution rights for this command. |

## show dhcp-relay

```
show dhcp-relay [vsx-peer]
```

## Description

Shows DHCP relay configuration settings.

| Parameter | Description                                                                                                                                                                                                                      |
|-----------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| vsx-peer  | Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX. |

## Example

Showing DHCP relay settings:

```
switch# show dhcp-relay

DHCP Relay Agent : enabled
DHCP Smart Relay : enabled
DHCP Request Hop Count Increment : enabled
L2VPN Clients : disabled
Option 82 : disabled
Source-Interface : disabled
Response Validation : disabled
Option 82 Handle Policy : replace
Remote ID : mac

DHCP Relay Statistics:

Valid Requests Dropped Requests Valid Responses Dropped Responses

60 10 60 10

DHCP Relay Option 82 Statistics:

Valid Requests Dropped Requests Valid Responses Dropped Responses

50 8 50 8
```

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms                             | Command context | Authority                                                                                                                                                              |
|---------------------------------------|-----------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 8320<br>8325<br>8360<br>9300<br>10000 | Manager (#)     | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

### show dhcp-relay bootp-gateway

```
show dhcp-relay bootp-gateway [interface <INTERFACE-NAME>] [vsx-peer]
```

## Description

Shows the bootp gateway defined for all interfaces or a specific interface.

| Parameter                           | Description                                                                                                                                                                                                                      |
|-------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>&lt;INTERFACE-NAME&gt;</code> | Specifies an interface. Format: member/slot/port.                                                                                                                                                                                |
| <code>vsx-peer</code>               | Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX. |

## Examples

Showing the designated bootp gateway for all interfaces:

```
switch# show dhcp-relay bootp-gateway

BOOTP Gateway Entries

Interface Source IP

1/1/1 1.1.1.1
1/1/2 1.1.1.2
```

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms                             | Command context | Authority                                                                                                                                                              |
|---------------------------------------|-----------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 8320<br>8325<br>8360<br>9300<br>10000 | Manager (#)     | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

## show ip helper-address

```
show ip helper-address [interface <INTERFACE-ID>] [vsx-peer]
```

## Description

Shows the IP helper addresses defined for all interfaces or a specific interface.

| Parameter                                   | Description                                                       |
|---------------------------------------------|-------------------------------------------------------------------|
| <code>interface &lt;INTERFACE-ID&gt;</code> | Specifies an interface. Format: member/slot/port.                 |
| <code>vsx-peer</code>                       | Shows the output from the VSX peer switch. If the switches do not |

| Parameter | Description                                                                                                                                                    |
|-----------|----------------------------------------------------------------------------------------------------------------------------------------------------------------|
|           | have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX. |

## Examples

Showing the IP helper addresses for all interfaces:

```
switch# show ip helper-address
IP Helper Addresses

Interface: 1/1/1
IP Helper Address VRF

192.168.20.1 default
192.168.10.1 default

Interface: 1/1/2
IP Helper Address VRF

192.168.30.1 RED
```

Showing the IP helper addresses for interface 1/1/1:

```
switch# show ip helper-address interface 1/1/1
IP Helper Addresses

Interface: 1/1/1
IP Helper Address VRF

192.168.20.1 default
192.168.10.1 default
```

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms                             | Command context | Authority                                                                                                                                                              |
|---------------------------------------|-----------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 8320<br>8325<br>8360<br>9300<br>10000 | Manager (#)     | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

## DHCPv6 relay agent

### Configuring the DHCPv6 relay agent

## Prerequisites

- An enabled layer 3 interface.

## Procedure

1. Enable the DHCPv6 agent with the command `dhcpv6-relay`.
2. Configure one or more IP helper addresses with the command `ipv6 helper-address`. This determines where the DHCPv6 agent forward DHCP requests.
3. If you want to enable DHCP option 79 support to forward client link-layer addresses, use the command `dhcpv6-relay option 79`.
4. Review DHCPv6 relay agent configuration settings with the commands `show dhcpv6-relay` and `show ipv6 helper-address`.

## Example


This example creates the following configuration:

- Enables the DHCPv6 relay agent.
- Enables interface **1/1/2** and assigns an IPv6 address to it. (By default, all interfaces are layer 3 and disabled.)
- Defines an IP helper address of **FF01::1:1000** on interface **1/1/2**.
- Enables DHCP option 79.

```
switch(config)# dhcpv6-relay
switch(config)# interface 1/1/2
switch(config-if)# no shutdown
switch(config-if)# ipv6 address 2001:0db8:85a3::8a2e:0370:7334/24
switch(config-if)# ip helper-address FF01::1:1000
switch(config-if)# exit
switch(config)# dhcpv6-relay option 79
```

## DHCPv6 relay scenario 1

In this scenario, DHCP relay on the server enables two hosts to obtain their IP addresses from a DHCP server on a different subnet. The physical topology of the network looks like this:

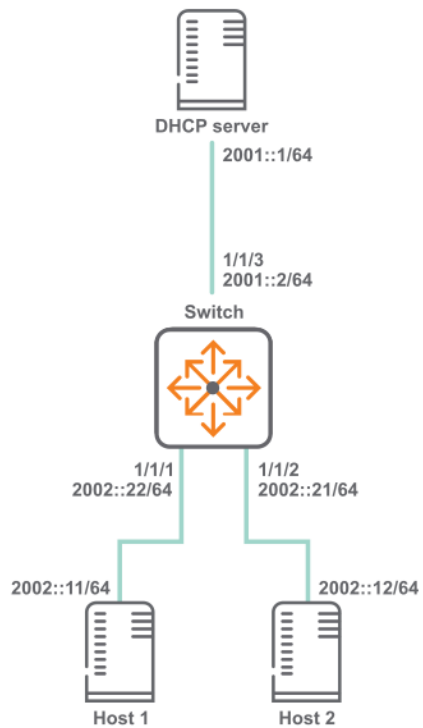

## Procedure

1. Enable DHCP relay.

```
switch# config
switch(config)# dhcpv6-relay
```

2. Define an IPv6 helper address on interfaces 1/1/1 and 1/1/2 .

```
switch(config)# interface 1/1/1
switch(config-if)# ipv6 address 2002::22/64
switch(config-if)# ipv6 helper-address 2001::1
switch(config-if)# interface 1/1/2
switch(config-if)# ipv6 address 2002::21/64
switch(config-if)# ipv6 helper-address 2001::1
switch(config-if)# quit
```

3. Verify DHCP relay configuration.


```
switch# show dhcpv6-relay
 DHCPv6 Relay Agent : enabled
 Option 79 : disabled
switch# show ipv6 helper-address
```

|                     |             |
|---------------------|-------------|
| Interface: 1/1/1    |             |
| IPv6 Helper Address | Egress Port |
| -----               | -----       |
| 2001::1             | 1/1/3       |
|                     |             |
| Interface: 1/1/2    |             |
| IPv6 Helper Address | Egress Port |
| -----               | -----       |
| 2001::1             | 1/1/3       |

## DHCPv6 relay scenario 2

In this scenario, the two host computers communicate with two different DHCP servers. Each server is reached on a different VRF. The physical topology of the network looks like this:



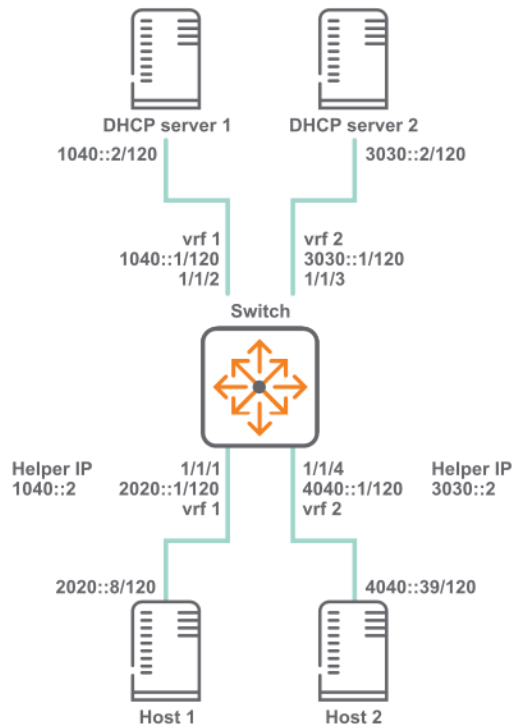

## Procedure

1. Create the two VRFs.
 

```
switch# config
switch(config)# vrf vrf 1
switch(config)# vrf vrf 2
```
2. Configure interface **1/1/1**. Set its IP address, associate it with VRF 1, and define the helper IP address to reach DHCP server 1.
 

```
switch(configif)# interface 1/1/1
switch(configif)# vrf attach vrf1
switch(configif)# ipv6 address 20.0.0.1/8
switch(configif)# ipv6 helper-address unicast 1040::2
```
3. Configure interface **1/1/2**. Set its IP address and associate it with VRF 1.
 

```
switch(configif)# interface 1/1/2
switch(configif)# vrf attach vrf1
switch(configif)# ipv6 address 1040::1/120
```
4. Configure interface **1/1/3**. Set its IP address and associate it with VRF 1.
 

```
switch(configif)# interface 1/1/3
switch(configif)# vrf attach vrf2
switch(configif)# ipv6 address 3030::1/120
```
5. Configure interface **1/1/4**. Set its IP address, associate it with VRF 2, and define the helper IP address to reach DHCP server 2.
 

```
switch(configif)# interface 1/1/4
switch(configif)# vrf attach vrf2
switch(configif)# ipv6 address 4040::1/120
switch(configif)# ipv6 helper-address unicast 3030::2
```

## DHCP relay (IPv6) commands

### dhcpv6-relay

```
dhcpv6-relay
no dhcpv6-relay
```

## Description

Enables DHCPv6 relay support. DHCPv6 relay is disabled by default.  
DHCP relay is not supported on the management interface  
The `no` form of this command disables DHCP relay support.

## Examples

Enables DHCPv6 relay support.

```
switch(config)# dhcpv6-relay
```

Removes DHCPv6 relay support.

```
switch(config)# no dhcpv6-relay
```

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms                             | Command context | Authority                                                                          |
|---------------------------------------|-----------------|------------------------------------------------------------------------------------|
| 8320<br>8325<br>8360<br>9300<br>10000 | config          | Administrators or local user group members with execution rights for this command. |

### dhcpv6-relay option 79

dhcpv6-relay option 79  
no dhcpv6-relay option 79

## Description

Enables support for DHCP relay option 79. When enabled, the DHCPv6 relay agent forwards the link-layer address of the client. This option is disabled by default.  
The `no` form of this command disables support for DHCP relay option 79.

## Examples

Enables DHCP option 79 support.

```
switch(config)# dhcpv6-relay option 79
```

Disables DHCP option 79 support.

```
switch(config)# no dhcpv6-relay option 79
```

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms                             | Command context | Authority                                                                          |
|---------------------------------------|-----------------|------------------------------------------------------------------------------------|
| 8320<br>8325<br>8360<br>9300<br>10000 | config          | Administrators or local user group members with execution rights for this command. |

### ipv6 helper-address

```
ipv6 helper-address unicast <UNICAST-IPV6-ADDR>
no ipv6 helper-address unicast <UNICAST-IPV6-ADDR>
ipv6 helper-address multicast {all-dhcp-servers | <MULTICAST-IPV6-ADDR>} egress <PORT-
NUM>
no ipv6 helper-address multicast {all-dhcp-servers | <MULTICAST-IPV6-ADDR>} egress <PORT-
NUM>
```

### Description

Defines the address of a remote DHCPv6 server or DHCPv6 relay agent. Up to eight addresses can be defined. The DHCPv6 agent forwards DHCPv6 client requests to all defined servers.

Not supported on the OOBM interface.

The `no` form of this command removes an IP helper address.

| Parameter             | Description                                                                                                                                                                                                                      |
|-----------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <UNICAST-IPV6-ADDR>   | Specifies the unicast helper IP address in IPv6 format (xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx), where x is a hexadecimal number from 0 to F.                                                                                   |
| <MULTICAST-IPV6-ADDR> | Specifies the multicast helper IP address in IPv6 format (xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx), where x is a hexadecimal number from 0 to F.                                                                                 |
| all-dhcp-servers      | Specifies all the DHCP server IPv6 addresses for the interface.                                                                                                                                                                  |
| egress <PORT-NUM>     | Specifies the port number on which DHCPv6 service requests are relayed to a multicast destination. The egress port must be different than the one on which the multicast helper address is configured. Format: member/slot/port. |
| vrf <VRF-NAME>        | Specifies the name of the VRF from which the specified protocol sets its source IP address.                                                                                                                                      |

### Examples

Defining a multicast IPv6 helper address of **2001:DB8::1** on port **1/1/2**:

```
switch(config-if)# ipv6 helper-address multicast 2001:DB8:0:0:0:0:1 egress 1/1/2
```

Removing the IP helper address of **2001:DB8::1** on port **1/1/2**:

```
switch(config-if)# no ipv6 helper-address multicast 2001:DB8:0:0:0:0:1 egress 1/1/2
```

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms                             | Command context | Authority                                                                          |
|---------------------------------------|-----------------|------------------------------------------------------------------------------------|
| 8320<br>8325<br>8360<br>9300<br>10000 | config-if       | Administrators or local user group members with execution rights for this command. |

## show dhcpv6-relay

```
show dhcpv6-relay [vsx-peer]
```

## Description

Shows DHCP relay configuration settings.

| Parameter | Description                                                                                                                                                                                                                      |
|-----------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| vsx-peer  | Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX. |

## Example

```
switch# show dhcpv6-relay
DHCPv6 Relay Agent : enabled
Option 79 : disabled
```

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms                             | Command context | Authority                                                                                                                                                              |
|---------------------------------------|-----------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 8320<br>8325<br>8360<br>9300<br>10000 | Manager (#)     | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

## show ipv6 helper-address

show ipv6 helper-address [interface <INTERFACE-ID>] [vsx-peer]

## Description

Shows the helper IP addresses defined for all interfaces or a specific interface.

| Parameter                | Description                                                                                                                                                                                                                      |
|--------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| interface <INTERFACE-ID> | Specifies an interface. Format: member/slot/port.                                                                                                                                                                                |
| vsx-peer                 | Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX. |

## Examples

```
switch# show ipv6 helper-address

Interface: 1/1/1
IPv6 Helper Address Egress Port

2001:db8:0:1:: -
FF01::1:1000 1/1/2

Interface: 1/1/2
IPv6 Helper Address Egress Port

2001:db8:0:1:: -

switch# show ipv6 helper-address interface 1/1/1

Interface: 1/1/1
IPv6 Helper Address Egress Port

2001:db8:0:1:: -
FF01::1:1000 1/1/2
```

```
switch# show ipv6 helper-address interface 1/1/1

Interface: 1/1/1
IPv6 Helper Address Egress Port

2001:db8:0:1:: -
FF01::1:1000 1/1/2
```

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms                             | Command context | Authority                                                                                                                                                              |
|---------------------------------------|-----------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 8320<br>8325<br>8360<br>9300<br>10000 | Manager (#)     | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

## DHCP server

### Overview

The dynamic host configuration protocol (DHCP) enables a server to automate the assignment of IP addresses, and other networking settings, to host computers. The DHCP server on the switch provides both IPv4 and IPv6 support and is independently configurable on each VRF.

### Key features

- Supports multiple address pools and static address bindings.
- Supports DHCP options, enabling the server to provide additional information about the network when DHCP clients request an address.
- Supports BOOTP to distribute boot image files using an external TFTP server.
- VRF aware, meaning that DHCP client requests received on an interface are processed by the DHCP server instance configured for a VRF. DHCP server responses are forwarded to clients on the VRF.
- Supports external storage of lease information on a remote host. This enables the DHCP server to restore lease information after a reboot or a failure. Lease information is stored in a flat file on the configured external device. It is important that the external device provide persistent external storage to allow restoration of lease information. If external storage is not configured, then after a failure or reboot, all existing lease information is lost.
- Supports VSX. In a VSX setup, one switch acts as primary and the other switch acts as secondary. The DHCP server is active only on the primary switch. After a failover, the DHCP server is enabled based on the state and role of the switch. The state of the DHCP server indicates the operational state of the server. VSX synchronization supports DHCPv4 and DHCPv6 server, including external storage configurations. For more information on VSX support, see the *Virtual Switching Extension (VSX) Guide*.

### DHCP relay interoperation

Both DHCP relay and DHCP server can be configured on the same VRF.

### DHCP snooping interoperation

DHCP snooping may not be configured with DHCP server.

## Configuring a DHCPv4 server on a VRF

## Prerequisites

- An enabled layer 3 interface.
- A VRF.
- An external TFTP server to host BOOTP image files (optional).
- An external storage device installed and configured (optional).

## Procedure

1. Assign the DHCPv4 server to a VRF with the command `dhcp-server vrf`. This switches to the DHCPv4 server configuration context.
2. If you want the DHCPv4 server to be the sole authority for IP addresses on the VRF, enable authoritative mode with the command `authoritative`.
3. Define an address pool for the VRF with the command `pool`. This switches to the DHCPv4 server pool context. Customize pool settings as follows:
  - a. Define the range of addresses in the pool with the command `range`.
  - b. Set the lease time for addresses in the pool with the command `lease`.
  - c. Set the domain name for the pool with the command `domain-name`.
  - d. Define up to four default routers with the command `default-router`.
  - e. Define up to four DNS servers with the command `dns-server`.
  - f. Create static bindings for specific addresses in the pool with the command `static-bind`.
  - g. Configure custom DHCPv4 options for the pool with the command `option`.
  - h. Configure NetBIOS support with the commands `netbios-name-server` and `netbios-node-type`.
  - i. Configure BOOTP options with the command `bootp`.
  - j. Exit the DHCPv4 server pool context with the command `exit`.
4. Enable the DHCP server on the VRF with the command `enable`.
5. Configure support for persistent external storage of DHCP settings with the command `dhcp-server external-storage`.
6. View DHCPv4 server configuration settings with the command `show dhcp-server all-vrfs`.

## Example

This example creates the following configuration:

- Configures the DHCPv4 server on VRF **primary-vrf**.
- Enables authoritative mode.
- Defines the pool **primary-pool** with the following settings:
  - Address range: **10.0.0.1** to **10.0.0.100**.
  - Lease time: 12 hours.
  - Domain name: **example.org.in**.
  - Default routers: **10.30.30.1** and **10.30.30.2**.
  - DNS servers: **125.0.0.1** and **125.0.0.2**.
  - Static binding of **10.0.0.11** for MAC address **24:be:05:24:75:73**.
  - DHCP custom option **3** with IP address **10.30.30.3**.
- Enables the DHCPv4 server.

```

switch(config)# dhcp-server vrf primary
switch(config-dhcp-server)# pool primary-pool
switch(config-dhcp-server-pool)# range 10.0.0.1 10.0.0.100
switch(config-dhcp-server-pool)# lease 12:00:00
switch(config-dhcp-server-pool)# domain-name example.org.in
switch(config-dhcp-server-pool)# default-router ip 10.30.30.1 10.30.30.2
switch(config-dhcp-server-pool)# dns-server 125.0.0.1 125.0.0.2
switch(config-dhcp-server-pool)# static-bind ip 10.0.0.11 mac 24:be:05:24:75:73
switch(config-dhcp-server-pool)# option 3 ip 10.30.30.3
switch(config-dhcp-server-pool)# exit
switch(config-dhcp-server)# enable

```

## Configuring the DHCPv6 server on a VRF

### Prerequisites

- An enabled layer 3 interface.
- A VRF.
- An external storage device installed and configured (optional).

### Procedure

1. Assign the DHCPv6 server to a VRF with the command `dhcpv6-server vrf`. This switches to the DHCPv6 server configuration context.
2. If you want the DHCP server to be the sole authority for IP addresses on the VRF, enable authoritative mode with the command `authoritative`.
3. Define an address pool for the VRF with the command `pool`. This switches to the DHCPv6 server pool context. Customize pool settings as follows:
  - a. Define the range of addresses in the pool with the command `range`.
  - b. Set the DHCP lease time for addresses in the pool with the command `lease`.
  - c. Define up to four DNS servers with the command `dns-server`.
  - d. Create static bindings for specific addresses in the pool with the command `static-bind`.
  - e. Configure custom DHCP options for the pool with the command `option`.
  - f. Exit the DHCP server pool context with the command `exit`.
4. Enable the DHCPv6 server on the VRF with the command `enable`.
5. Configure support for persistent external storage of DHCP settings with the command `dhc6p-server external-storage`.
6. View DHCPv6 server configuration settings with the command `show dhcpv6-server all-vrfs`.

### Example

This example creates the following configuration:

- Configures a DHCPv6 server on VRF **primary-vrf**.
- Enables authoritative mode.
- Defines the pool **primary-pool** with the following settings:
  - Address range: **2001::1 to 2001::100**.
  - Lease time: 12 hours.
  - DNS servers: **2101::14** and **2101::14**.



- Static binding of **2001::101** for client ID **1:0:a0:24:ab:fb:9c**.
- DHCP custom option: **22** with IP address **2101::15**.
- Enables the DHCPv6 server.

```
switch(config)# dhcpv6-server vrf primary
switch(config-dhcpv6-server)# pool primary-pool
switch(config-dhcpv6-server-pool)# range 2001::1 2001::100 prefix-len 64
switch(config-dhcpv6-server-pool)# lease 12:00:00
switch(config-dhcpv6-server-pool)# dns-server 2101::13 2101::14
switch(config-dhcpv6-server-pool)# static-bind ipv6 2001::10 client-id
1:0:a0:24:ab:fb:9c
switch(config-dhcpv6-server-pool)# option 22 ipv6 2101::15
switch(config-dhcpv6-server-pool)# exit
switch(config-dhcpv6-server)# enable
```

## DHCP server IPv4 commands

### authoritative

```
authoritative
no authoritative
```

### Description

Configures the DHCPv4 server as *authoritative* on the current VRF. This means that the server is the sole authority for the network on the VRF. Therefore, if a client requests an IP address lease for which the server has no record, the server responds with DHCPNAK, indicating that the client must no longer use that IP address. If the server is not authoritative, then it will ignore DHCPv4 requests received for unknown leases from unknown hosts.

The `no` form of this command disables authoritative mode on the current VRF.

### Example

Configures DHCPv4 server authoritative mode on VRF **primary**.

```
switch(config)# dhcp-server vrf primary
switch(config-dhcp-server)# authoritative
```

Removes the DHCPv4 server authoritative mode on VRF **primary**.

```
switch(config)# dhcp-server vrf primary
switch(config-dhcp-server)# no authoritative
```

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms                             | Command context    | Authority                                                                          |
|---------------------------------------|--------------------|------------------------------------------------------------------------------------|
| 8320<br>8325<br>8360<br>9300<br>10000 | config-dhcp-server | Administrators or local user group members with execution rights for this command. |

## bootp

```
bootp <REMOTE-URL>
no bootp <REMOTE-URL>
```

## Description

Sets the BOOTP options that are returned by the DHCPv4 server for the current pool. BOOTP provides a way to distribute an IP address and boot image file to client stations. The DHCPv4 server returns the IP address and the location of the boot image file, which must be stored on an external TFTP server.

The `no` form of this command disables support for BOOTP.

| Parameter                       | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>&lt;REMOTE-URL&gt;</code> | <p>Specifies the name and location of a BOOTP file on a TFTP server in the format:</p> <pre>tftp://{&lt;IP&gt;   &lt;HOST&gt;}/&lt;FILE&gt;</pre> <ul style="list-style-type: none"> <li>▪ <code>&lt;IP&gt;</code>: Specifies the IP address of the TFTP server hosting the file in IPv4 format (x.x.x.x), where x is a decimal number from 0 to 255. You can remove leading zeros. For example, the address 192.169.005.100 becomes 192.168.5.100.</li> <li>▪ <code>&lt;HOST&gt;</code>: Specifies the fully-qualified domain name of the TFTP server hosting the file. Range: 1 to 64 printable ASCII characters.</li> <li>▪ <code>&lt;FILE&gt;</code>: Specifies the name of the BOOTP file. Range: 1 to 64 printable ASCII characters.</li> </ul> |

## Example

Defines BOOTP support on the DHCPv4 server pool **primary-pool** on VRF **primary**.

```
switch(config)# dhcp-server vrf primary
switch(config-dhcp-server)# pool primary-pool
switch(config-dhcp-server-pool)# bootp tftp://10.0.0.1/mybootfile
```

Deletes BOOTP support on the DHCPv4 server pool **primary-pool** on VRF **primary**.

```
switch(config)# dhcp-server vrf primary
switch(config-dhcp-server)# pool primary-pool
switch(config-dhcp-server-pool)# no bootp tftp://10.0.0.1/mybootfile
```

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms                             | Command context         | Authority                                                                          |
|---------------------------------------|-------------------------|------------------------------------------------------------------------------------|
| 8320<br>8325<br>8360<br>9300<br>10000 | config-dhcp-server-pool | Administrators or local user group members with execution rights for this command. |

## clear dhcp-server leases

```
clear dhcp-server leases [all-vrfs | <IPv4-ADDR> vrf <VRF-NAME>] | vrf <VRF-NAME>]
```

## Description

Clears DHCPv4 server lease information. The DHCPv4 server must be disabled before clearing lease information.

| Parameter                  | Description                                                                                                                                                                                                                                             |
|----------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| all-vrfs                   | Clears leases for all VRFs.                                                                                                                                                                                                                             |
| <IPv4-ADDR> vrf <VRF-NAME> | Clears the lease for a specific client on a specific VRF. Specify the client address in IPv4 format (x.x.x.x), where x is a decimal number from 0 to 255. You can remove leading zeros. For example, the address 192.169.005.100 becomes 192.168.5.100. |
| vrf <VRF-NAME>             | Clears leases for a specific VRF.                                                                                                                                                                                                                       |

## Examples

Clearing all DHCPv4 server leases.

```
switch(config)# dhcp-server vrf primary
switch(config-dhcp-server)# disable
switch(config-dhcp-server)# exit
switch(config)# exit
switch# clear dhcp-server leases
```

Clearing all DHCPv4 server leases for VRF **primary-vrf**.

```
switch(config)# dhcp-server vrf primary
switch(config-dhcp-server)# disable
switch(config-dhcp-server)# exit
switch(config)# exit
switch# clear dhcp-server leases vrf primary-vrf
```

Clear the DHCPv4 server lease for IP address **10.10.10.1** on VRF **primary-vrf**.

```
switch(config)# dhcp-server vrf primary
switch(config-dhcp-server)# disable
switch(config-dhcp-server)# exit
switch(config)# exit
switch# clear dhcp-server leases 10.10.10.1 vrf primary-vrf
```

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms                             | Command context | Authority                                                                                                                                                              |
|---------------------------------------|-----------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 8320<br>8325<br>8360<br>9300<br>10000 | Manager (#)     | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

## default-router

```
default-router <IPv4-ADDR-LIST>
no default-router <IPv4-ADDR-LIST>
```

## Description

Defines up to four default routers for the current DHCPv4 server pool.

The `no` form of this command removes the specified default routers from the pool.

| Parameter                           | Description                                                                                                                                                                                                                                                                                          |
|-------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>&lt;IPv4-ADDR-LIST&gt;</code> | Specifies the IP addresses of the default routers in IPv4 format (x.x.x.x), where x is a decimal number from 0 to 255. You can remove leading zeros. For example, the address 192.169.005.100 becomes 192.168.5.100. Separate addresses with a space. A maximum of four IP addresses can be defined. |

## Example

Defines two default routers, **10.0.0.1** and **10.0.0.10**, for the server pool **primary-pool** on VRF **primary**.

```
switch(config)# dhcp-server vrf primary
switch(config-dhcp-server)# pool primary-pool
switch(config-dhcp-server-pool)# default-router ip 10.0.0.1 10.0.0.10
```

Deletes the default router **10.0.0.1** from the server pool **primary-pool** on VRF **primary**.

```
switch(config)# dhcp-server vrf primary
switch(config-dhcp-server)# pool primary-pool
switch(config-dhcp-server-pool)# no default-router ip 10.0.0.1
```

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms                             | Command context         | Authority                                                                          |
|---------------------------------------|-------------------------|------------------------------------------------------------------------------------|
| 8320<br>8325<br>8360<br>9300<br>10000 | config-dhcp-server-pool | Administrators or local user group members with execution rights for this command. |

## dhcp-server external-storage

```
dhcp-server external-storage <VOLUME-NAME> file <LEASE-FILENAME> [delay <DELAY>]
no dhcp-server external-storage <VOLUME-NAME> file <LEASE-FILENAME> [delay <DELAY>]
```

## Description

Configures the external storage file location for DHCPv4 server lease information. This file provides persistent storage, enabling DHCPv4 server settings to be restored when the switch is restarted. Lease information is stored in a flat file on the configured external device.

If external storage is not configured, then after a failure or reboot, all existing lease information is lost. Lease information is saved to external storage each time the delay timer expires, which by default is every 300 seconds.

Lease information is not restored when issuing the command `dhcp-server enable`.

The `no` form of this command removes external storage support for the DHCPv4 server.

| Parameter             | Description                                                                                                       |
|-----------------------|-------------------------------------------------------------------------------------------------------------------|
| <VOLUME-NAME>         | Specifies the external storage volume name. Range: 1 to 64 printable ASCII characters.                            |
| file <LEASE-FILENAME> | Specifies the external storage filename. Range: 1 to 255 printable ASCII characters.                              |
| delay <DELAY>         | Specifies the interval in seconds between updates to the external storage file. Range: 15 to 86400. Default: 300. |

## Example

Stores the lease file on external storage volume **Storage1** in file **LeaseFile** at an interval of 600 seconds.

```
switch(config)# dhcp-server external-storage Storage1 file LeaseFile delay 600
```

Disables storage of the lease file on external storage volume **Storage1** in file **LeaseFile**.

```
switch(config)# no dhcp-server external-storage Storage1 file LeaseFile delay 600
```

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms                             | Command context | Authority                                                                          |
|---------------------------------------|-----------------|------------------------------------------------------------------------------------|
| 8320<br>8325<br>8360<br>9300<br>10000 | config          | Administrators or local user group members with execution rights for this command. |

## dhcp-server vrf

```
dhcp-server vrf <VRF-NAME>
no dhcp-server vrf <VRF-NAME>
```

## Description

Configures the DHCPv4 server to support a VRF and changes to the `config-dhcp-server` context for that VRF.

The `no` form of this command removes DHCPv4 server support on a VRF.

| Parameter  | Description    |
|------------|----------------|
| <VRF-NAME> | Name of a VRF. |

## Example

Configures DHCPv4 server support on VRF **primary**.

```
switch(config)# dhcp-server vrf primary
```

Removes DHCPv4 server support on VRF **primary**.

```
switch(config)# no dhcp-server vrf primary
```

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms                             | Command context | Authority                                                                          |
|---------------------------------------|-----------------|------------------------------------------------------------------------------------|
| 8320<br>8325<br>8360<br>9300<br>10000 | config          | Administrators or local user group members with execution rights for this command. |

### disable

disable

### Description

Disables the DHCPv4 server on the current VRF. The DHCPv4 server is disabled by default when configured on a VRF.

### Example

Disables the DHCPv4 server on VRF **primary**.

```
switch(config)# dhcp-server vrf primary
switch(config-dhcp-server)# disable
```

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms                             | Command context    | Authority                                                                          |
|---------------------------------------|--------------------|------------------------------------------------------------------------------------|
| 8320<br>8325<br>8360<br>9300<br>10000 | config-dhcp-server | Administrators or local user group members with execution rights for this command. |

### dns-server

```
dns-server <IPV4-ADDR-LIST>
no dns-server <IPV4-ADDR-LIST>
```

### Description

Defines up to four DNS servers for the current DHCPv4 server pool.

The **no** form of this command removes the specified DNS servers from the pool.

| Parameter        | Description                                                  |
|------------------|--------------------------------------------------------------|
| <IPV4-ADDR-LIST> | Specifies the IP addresses of the DNS servers in IPv4 format |

| Parameter | Description                                                                            |
|-----------|----------------------------------------------------------------------------------------|
|           | (x.x.x.x), where x is a decimal number from 0 to 255. Separate addresses with a space. |

## Example

Defines two DNS servers for the server pool **primary-pool** on VRF **primary**.

```
switch(config)# dhcp-server vrf primary
switch(config-dhcp-server)# pool primary-pool
switch(config-dhcp-server-pool)# dns-server 10.0.20.1
```

Deletes a DNS server from the server pool **primary-pool** on VRF **primary**.

```
switch(config)# dhcp-server vrf primary
switch(config-dhcp-server)# pool primary-pool
switch(config-dhcp-server-pool)# no dns-server 10.0.20.1
```

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms                             | Command context         | Authority                                                                          |
|---------------------------------------|-------------------------|------------------------------------------------------------------------------------|
| 8320<br>8325<br>8360<br>9300<br>10000 | config-dhcp-server-pool | Administrators or local user group members with execution rights for this command. |

## domain-name

```
domain-name <DOMAIN-NAME>
no domain-name <DOMAIN-NAME>
```

## Description

Defines a domain name for the current DHCPv4 server pool.

The **no** form of this command removes the specified domain name from the pool.

| Parameter     | Description                                                          |
|---------------|----------------------------------------------------------------------|
| <DOMAIN-NAME> | Specifies a domain name. Range: 1 to 255 printable ASCII characters. |

## Example

Defines a domain name for the server pool **primary-pool** on VRF **primary**.



```
switch(config)# dhcp-server vrf primary
switch(config-dhcp-server)# pool primary-pool
switch(config-dhcp-server-pool)# domain-name example.org.in
```

Deletes a domain name from the server pool **primary-pool** on VRF **primary**.

```
switch(config)# dhcp-server vrf primary
switch(config-dhcp-server)# pool primary-pool
switch(config-dhcp-server-pool)# no domain-name example.org.in
```

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms                             | Command context         | Authority                                                                          |
|---------------------------------------|-------------------------|------------------------------------------------------------------------------------|
| 8320<br>8325<br>8360<br>9300<br>10000 | config-dhcp-server-pool | Administrators or local user group members with execution rights for this command. |

## enable

enable

## Description

Enables the DHCPv4 server on the current VRF. The DHCPv4 server is disabled by default when configured on a VRF.

## Example

Enables the DHCPv4 server on VRF **primary**.

```
switch(config)# dhcp-server vrf primary
switch(config-dhcp-server)# enable
```

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms                             | Command context    | Authority                                                                          |
|---------------------------------------|--------------------|------------------------------------------------------------------------------------|
| 8320<br>8325<br>8360<br>9300<br>10000 | config-dhcp-server | Administrators or local user group members with execution rights for this command. |

## http-proxy

```
http-proxy {<FQDN | IPV4-ADDR>} [vrf <VRF-NAME>]
no http-proxy [<FQDN | IPV4-ADDR>] [vrf <VRF-NAME>]
```

## Description

Specifies HTTP proxy location and VRF.

The `no` form of this command removes a specified HTTP proxy location.

| Parameter   | Description                                     |
|-------------|-------------------------------------------------|
| <FQDN>      | Specifies FQDN for HTTP proxy location.         |
| <IPV4-ADDR> | Specifies IPV4 address for HTTP proxy location. |
| <VRF-NAME>  | Specifies VRF for HTTP proxy.                   |



A FQDN or IPV4 address are optional in the `no` form of the command.

## Usage

- HTTP proxy location can be configured using the CLI/REST interface or auto-configured through the DHCP server connected to the switch.
- There are three sources for HTTP proxy location:
  - User configured HTTP proxy via CLI or REST interface.
  - DHCP options received via management/OOBM port.
  - DHCP options received via VLAN 1 on supported switch platforms.
- Operational configuration for HTTP proxy location is determined by the source with the highest priority. Source priority:
  1. User configured.
  2. DHCP options received via management/OOBM port.
  3. DHCP options received via VLAN 1.



- HTTP proxy location can only be a FQDN or an IPV4 address.
- When HTTP proxy location and VRF are configured, they override any existing HTTP proxy location and VRF.
- If this command is executed without the VRF parameter, the default VRF will be used.
- Port number may need to be specified at the end of the IP address for FQDN to connect via HTTP proxy.
  - For example, 8088 is the TCP port number: http-proxy 192.168.248.248:**8088**

## Examples

Specifying a FQDN for HTTP proxy location and `MGMT` VRF:

```
switch(config)# http-proxy http-proxy.aruba.com vrf mgmt
```

Removing HTTP proxy location

```
switch(config)# no http-proxy
```

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms     | Command context | Authority                                                                          |
|---------------|-----------------|------------------------------------------------------------------------------------|
| All platforms | config          | Administrators or local user group members with execution rights for this command. |

## lease

```
lease {<TIME> | infinite}
no lease
```

## Description

Sets the length of the DHCPv4 lease time for the current pool. The lease time determines how long an IP address is valid before a DHCPv4 client must request that it be renewed.

The `no` form of this command returns the DHCPv4 lease time to its default value 1 hour.

| Parameter | Description                                                                                  |
|-----------|----------------------------------------------------------------------------------------------|
| <TIME>    | Sets the DHCPv4 lease time. Format: DD:HH:MM. Default: 01:00:00.                             |
| infinite  | Sets the DHCPv4 lease time to infinite. This means that addresses do not need to be renewed. |

## Example

Sets the lease time for DHCPv4 server pool **primary-pool** on VRF **primary** to **12** hours.

```
switch(config)# dhcp-server vrf primary
switch(config-dhcp-server)# pool primary-pool
switch(config-dhcp-server-pool)# lease 00:12:00
```

Deletes the lease time for DHCPv4 server pool **primary-pool** on VRF **primary**.

```
switch(config)# dhcp-server vrf primary
switch(config-dhcp-server)# pool primary-pool
switch(config-dhcp-server-pool)# no lease 00:12:00
```

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms                             | Command context         | Authority                                                                          |
|---------------------------------------|-------------------------|------------------------------------------------------------------------------------|
| 8320<br>8325<br>8360<br>9300<br>10000 | config-dhcp-server-pool | Administrators or local user group members with execution rights for this command. |

## netbios-name-server

```
netbios-name-server <IPV4-ADDR-LIST>
no netbios-name-server <IPV4-ADDR-LIST>
```

## Description

Defines up to four NetBIOS WINS servers for the current DHCPv4 server pool. WINS is used by Microsoft DHCP clients to match host names with IP addresses.

The **no** form of this command removes the specified WINS servers from the pool.

| Parameter        | Description                                                                                                                                                                                               |
|------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <IPV4-ADDR-LIST> | Specifies the IP addresses of NetBIOS (WINS) servers in IPv4 format (x.x.x.x), where x is a decimal number from 0 to 255. Separate addresses with a space. A maximum of four IP addresses can be defined. |

## Example

Defines two WINS servers for the server pool **primary-pool** on VRF **primary**.

```
switch(config)# dhcp-server vrf primary
switch(config-dhcp-server)# pool primary-pool
switch(config-dhcp-server-pool)# netbios-name-server ip 10.0.20.1 10.0.30.10
```

Deletes a WINS server from the server pool **primary-pool** on VRF **primary**.

```
switch(config)# dhcp-server vrf primary
switch(config-dhcp-server)# pool primary-pool
switch(config-dhcp-server-pool)# no netbios-name-server ip 10.0.20.1
```

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms                             | Command context         | Authority                                                                          |
|---------------------------------------|-------------------------|------------------------------------------------------------------------------------|
| 8320<br>8325<br>8360<br>9300<br>10000 | config-dhcp-server-pool | Administrators or local user group members with execution rights for this command. |

## netbios-node-type

```
netbios-node-type <TYPE>
no netbios-node-type <TYPE>
```

## Description

Defines the NetBIOS node type for the current DHCPv4 server pool.

The **no** form of this command removes the NetBIOS node type for the current pool.

| Parameter | Description                                                                 |
|-----------|-----------------------------------------------------------------------------|
| <TYPE>    | Specifies the NetBIOS node type: broadcast, hybrid, mixed, or peer-to-peer. |

## Examples

Defines the NetBIOS node type **broadcast** for the DHCPv4 server pool **primary-pool** on VRF **primary**.

```
switch(config)# dhcp-server vrf primary
switch(config-dhcp-server)# pool primary-pool
switch(config-dhcp-server-pool)# netbios-node-type broadcast
```

Deletes the NetBIOS node type **broadcast** from the DHCPv4 server pool **primary-pool** on VRF **primary**.

```
switch(config)# dhcp-server vrf primary
switch(config-dhcp-server)# pool primary-pool
switch(config-dhcp-server-pool)# no netbios-node-type broadcast
```

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms                             | Command context         | Authority                                                                          |
|---------------------------------------|-------------------------|------------------------------------------------------------------------------------|
| 8320<br>8325<br>8360<br>9300<br>10000 | config-dhcp-server-pool | Administrators or local user group members with execution rights for this command. |

## option

```
option <OPTION-NUM> {ascii <ASCII-STR> | hex <HEX-STR> | ip <IPV4-ADDR-LIST>}
no option <OPTION-NUM> {ascii <ASCII-STR> | hex <HEX-STR> | ip <IPV4-ADDR-LIST>}
```

## Description

Defines custom DHCPv4 options for the current DHCPv4 server pool. DHCPv4 options enable the DHCPv4 server to provide additional information about the network when DHCPv4 clients request an address.

The `no` form of this command removes custom DHCPv4 options from the pool.

| Parameter           | Description                                                                                                                                                                                                                                                                       |
|---------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <OPTION-NUM>        | Specifies a DHCPv4 option number. For a list of DHCPv4 option numbers, see <a href="https://www.iana.org/assignments/bootp-dhcp-parameters/bootp-dhcp-parameters.xhtml">https://www.iana.org/assignments/bootp-dhcp-parameters/bootp-dhcp-parameters.xhtml</a> . Range: 2 to 254. |
| ascii <ASCII-STR>   | Specifies a value for the selected option as an ASCII string. Range: 1 to 255 ASCII characters.                                                                                                                                                                                   |
| hex <HEX-STR>       | Specifies a value for the selected option as a hexadecimal string. Range: 1 to 255 hexadecimal characters.                                                                                                                                                                        |
| ip <IPV4-ADDR-LIST> | Specifies a list of IP addresses in IPv4 format (x.x.x.x), where x is a decimal number from 0 to 255. Separate addresses with a space. A maximum of four IP addresses can be defined.                                                                                             |

## Example

Defines DHCPv4 option **3** for the server pool **primary-pool** on VRF **primary**.

```
switch(config)# dhcp-server vrf primary
switch(config-dhcp-server)# pool primary-pool
switch(config-dhcp-server-pool)# option 3 ip 192.168.1.1
```

Deletes DHCPv4 option **3** for the server pool **primary-pool** on VRF **primary**.

```
switch(config)# dhcp-server vrf primary
switch(config-dhcp-server)# pool primary-pool
switch(config-dhcp-server-pool)# no option 3 ip 192.168.1.1
```

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms                             | Command context         | Authority                                                                          |
|---------------------------------------|-------------------------|------------------------------------------------------------------------------------|
| 8320<br>8325<br>8360<br>9300<br>10000 | config-dhcp-server-pool | Administrators or local user group members with execution rights for this command. |

## pool

```
pool <POOL-NAME>
no pool <POOL-NAME>
```

## Description

Creates a DHCPv4 server pool for the current VRF and switches to the `config-dhcp-server-pool` context for it. Multiple pools, each with a distinct range, can be assigned to a VRF. A maximum of 64 pools (IPv4 and IPv6), 64 address ranges, and 8182 clients are supported on the switch across all VRFs. The `no` form of this command deletes the specified DHCPv4 server pool.

| Parameter   | Description                                                                                                                                                                                           |
|-------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <POOL-NAME> | Specifies the DHCPv4 pool name. A maximum of 64 pools (IPv4 and IPv6) are supported across VRFs on the switch. Range: 1 to 32 printable ASCII characters. First character must be a letter or number. |

## Example

Creates the DHCPv4 server pool **primary-pool** on VRF **primary**.

```
switch(config)# dhcp-server vrf primary
switch(config-dhcp-server)# pool primary-pool
switch(config-dhcp-server-pool)#
```

Deletes the DHCPv4 server pool **primary-pool** on VRF **primary**.

```
switch(config)# dhcp-server vrf primary
switch(config-dhcp-server)# no pool primary-pool
```

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms                             | Command context    | Authority                                                                          |
|---------------------------------------|--------------------|------------------------------------------------------------------------------------|
| 8320<br>8325<br>8360<br>9300<br>10000 | config-dhcp-server | Administrators or local user group members with execution rights for this command. |

## range

```
range <LOW-IPV4-ADDR> <HIGH-IPV4-ADDR> [prefix-len <MASK>]
no range <LOW-IPV4-ADDR> <HIGH-IPV4-ADDR> [prefix-len <MASK>]
```

## Description

Defines the range of IP addresses supported by the current DHCPv4 server pool. A maximum of 64 ranges are supported per switch across all VRFs.

The `no` form of this command deletes the address range for the current pool.

| Parameter         | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|-------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <LOW-IPV4-ADDR>   | Specifies the lowest IP address in the pool in IPv4 format (x.x.x.x), where x is a decimal number from 0 to 255.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <HIGH-IPV4-ADDR>  | Specifies the highest IP address in the pool in IPv4 format (x.x.x.x), where x is a decimal number from 0 to 255.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| prefix-len <MASK> | <p>Specifies the number of bits in the address mask in CIDR format (x), where x is a decimal number from 0 to 32.</p> <p><b>NOTE:</b> When active gateway is configured on the interface serviced by the pool, you must specify a prefix length that matches the mask on the IP address assigned to the interface. Otherwise, client stations will get a prefix length from active gateway that may not be consistent with the configured range, and a DHCP error will occur. In the following example, the DHCP range prefix is set to 16 to match the mask on the IP address assigned to interface VLAN 2.</p> <pre>switch(config)# interface vlan 2 switch(config-if-vlan)# ip address 200.1.1.1/16 switch(config-if-vlan)# active-gateway ip 200.1.1.3                         mac 00:aa:aa:aa:aa:aa switch(config-if-vlan)# exit switch(config)# dhcp-server vrf primary</pre> |



| Parameter | Description                                                                                                                             |
|-----------|-----------------------------------------------------------------------------------------------------------------------------------------|
|           | <pre>switch(config-dhcp-server)# pool primary-pool switch(config-dhcp-server-pool)# range 192.168.1.1 192.168.1.100 prefix-len 16</pre> |

## Examples

Defines the address range **192.168.1.1** to **192.168.1.100** with a mask of **24** bits for the DHCPv4 server pool **primary-pool** on VRF **primary**.

```
switch(config)# dhcp-server vrf primary
switch(config-dhcp-server)# pool primary-pool
switch(config-dhcp-server-pool)# 192.168.1.1 192.168.1.100 prefix-len 24
```

Deletes the address range **192.168.1.1** to **192.168.1.100** with a mask of **24** bits from the DHCPv4 server pool **primary-pool** on VRF **primary**.

```
switch(config)# dhcp-server vrf primary
switch(config-dhcp-server)# pool primary-pool
switch(config-dhcp-server-pool)# no 192.168.1.1 192.168.1.100 prefix-len 24
```

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms                             | Command context         | Authority                                                                          |
|---------------------------------------|-------------------------|------------------------------------------------------------------------------------|
| 8320<br>8325<br>8360<br>9300<br>10000 | config-dhcp-server-pool | Administrators or local user group members with execution rights for this command. |

## show dhcp-server

```
show dhcp-server [all-vrfs]
show dhcp-server leases {all-vrfs | vrf <VRF-NAME>}
show dhcp-server pool <POOL-NAME> [vrf <VRF-NAME>]
```

## Description

Shows configuration settings for the DHCPv4 server.

| Parameter                          | Description                                                   |
|------------------------------------|---------------------------------------------------------------|
| all-vrfs                           | Shows DHCPv4 server configuration settings for all VRFs.      |
| leases {all-vrfs   vrf <VRF-NAME>} | Shows DHCPv4 server lease configuration settings for all VRFs |

| Parameter                                                  | Description                                                                     |
|------------------------------------------------------------|---------------------------------------------------------------------------------|
|                                                            | or a specific VRF.                                                              |
| <code>pool &lt;POOL-NAME&gt; [vrf &lt;VRF-NAME&gt;]</code> | Shows DHCPv4 server pool configuration settings for all VRFs or a specific VRF. |

## Examples

Showing all DHCPv4 server configuration settings.

```
switch# show dhcp-server

VRF Name : default
DHCP Server : enabled
Operational State : operational
Authoritative Mode : false

Pool Name : test
Lease Duration : 00:01:00

DHCP dynamic IP allocation

Start-IP-Address End-IP-Address Prefix-Length

192.168.1.1 192.168.1.20 24

DHCP Server options

Option-Number Option-Type Option-Value

6 ip 10.0.0.3 10.0.0.4 10.0.0.5 10.0.0.6

DHCP Server static IP allocation

IP-Address Client-Hostname State MAC-Address

10.0.0.3 * OPERATIONAL aa:aa:aa:aa:aa:aa

BOOTP Options

Boot-File-Name TFTP-Server-Name TFTP-Server-Address

boot.txt * 10.0.0.10
```

Showing DHCP server configuration settings for VRF **primary-vrf**.

```
switch# show dhcp-server vrf primary-vrf

VRF Name : primary-vrf
DHCP Server : disabled
Operational State : disabled
Authoritative Mode : false

Pool Name : test
```

Lease Duration : 00:01:00

#### DHCP dynamic IP allocation

| Start-IP-Address | End-IP-Address | Prefix-Length |
|------------------|----------------|---------------|
| 10.0.0.1         | 10.0.0.30      | *             |
| 192.168.1.1      | 192.168.1.20   | 24            |
| 192.168.10.30    | 192.168.10.60  | 16            |

#### DHCP Server options

| Option-Number | Option-Type | Option-Value                        |
|---------------|-------------|-------------------------------------|
| 6             | ip          | 10.0.0.3 10.0.0.4 10.0.0.5 10.0.0.6 |
| 18            | ascii       | aswed                               |

#### DHCP Server static IP allocation

| IP-Address | Client-Hostname | MAC-Address       |
|------------|-----------------|-------------------|
| 10.0.0.1   | *               | aa:bb:cc:11:12:a4 |
| 20.0.0.1   | *               | 11:22:11:22:aa:dd |

#### BOOTP Options

| Boot-File-Name | TFTP-Server-Name | State       | TFTP-Server-Address |
|----------------|------------------|-------------|---------------------|
| boot.txt       | *                | OPERATIONAL | 10.0.0.10           |

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms                             | Command context | Authority                                                                                                                                                              |
|---------------------------------------|-----------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 8320<br>8325<br>8360<br>9300<br>10000 | Manager (#)     | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

## static-bind

```
static-bind {ip <IPv4-ADDR>}|{ mac <MAC-ADDR>} [hostname <HOST>]
no static-bind <IPv4-ADDR-LIST>
```

## Description

Creates a static binding that associates an IP address in the current pool with a specific MAC address. This causes the DHCPv4 server to only assign the specified IP address to a client station with the specified MAC address.

The **no** form of this command removes the specified binding.

| Parameter                          | Description                                                                                                                                                                |
|------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>&lt;IPv4-ADDR&gt;</code>     | Specifies an IP address in IPv4 format (x.x.x.x), where x is a decimal number from 0 to 255. The IP address must be within the address range defined for the current pool. |
| <code>mac &lt;MAC-ADDR&gt;</code>  | Specifies a client station MAC address (xx:xx:xx:xx:xx:xx), where x is a hexadecimal number from 0 to F.                                                                   |
| <code>hostname &lt;HOST&gt;</code> | Specifies the host name of the client station. Range: 1 to 255 printable ASCII characters                                                                                  |

## Examples

Defines a static address for the server pool **primary-pool** on VRF **primary**.

```
switch(config)# dhcp-server vrf primary
switch(config-dhcp-server)# pool primary-pool
switch(config-dhcp-server-pool)# static-bind ip 10.0.0.1 mac 24:be:05:24:75:73
```

Deletes a static address from the server pool **primary-pool** on VRF **primary**.

```
switch(config)# dhcp-server vrf primary
switch(config-dhcp-server)# pool primary-pool
switch(config-dhcp-server-pool)# no static-bind ip 10.0.0.1 mac 24:be:05:24:75:73
```

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms                             | Command context         | Authority                                                                          |
|---------------------------------------|-------------------------|------------------------------------------------------------------------------------|
| 8320<br>8325<br>8360<br>9300<br>10000 | config-dhcp-server-pool | Administrators or local user group members with execution rights for this command. |

## DHCP server IPv6 commands

### authoritative

```
authoritative
no authoritative
```

### Description

Configures the DHCPv6 server as *authoritative* on the current VRF. This means that the server is the sole authority for the network on the VRF. It responds to client solicit messages with advertise messages having a priority/preference value set to 255 (the maximum), instead of 0 (the minimum). Clients always choose the DHCPv6 server with the highest priority/preference value. If two DHCPv6 servers send an advertise message with the same priority/preference value, then the client picks one and discards the other.

The `no` form of this command disables authoritative mode on the current VRF.

## Example

Configures DHCPv6 server authoritative mode on VRF **primary**.

```
switch(config)# dhcpv6-server vrf primary
switch(config-dhcpv6-server)# authoritative
```

Removes DHCPv6 server authoritative mode on VRF **primary**.

```
switch(config)# dhcpv6-server vrf primary
switch(config-dhcpv6-server)# no authoritative
```

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms                             | Command context      | Authority                                                                          |
|---------------------------------------|----------------------|------------------------------------------------------------------------------------|
| 8320<br>8325<br>8360<br>9300<br>10000 | config-dhcpv6-server | Administrators or local user group members with execution rights for this command. |

## clear dhcpv6-server leases

```
clear dhcpv6-server leases [all-vrfs | <IPv6-ADDR> vrf <VRF-NAME>] | vrf <VRF-NAME>]
```

## Description

Clears DHCPv6 server lease information. The DHCPv6 server must be disabled before clearing lease information.

| Parameter                  | Description                                                                                                                                                 |
|----------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------|
| all-vrfs                   | Clears leases for all VRFs.                                                                                                                                 |
| <IPv6-ADDR> vrf <VRF-NAME> | Clears the lease for a specific client on a specific VRF. Specify the client address in IPv6 format (xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx), where x is a |

| Parameter      | Description                                                                                                                                                                                                                                                                                |
|----------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                | hexadecimal number from 0 to F. You can use two colons (::) to represent consecutive zeros (but only once), remove leading zeros, and collapse a hextet of four zeros to a single 0. For example, this address<br>2222:0000:3333:0000:0000:0000:4444:0055 becomes<br>2222:0:3333::4444:55. |
| vrf <VRF-NAME> | Clears leases for a specific VRF.                                                                                                                                                                                                                                                          |

## Examples

Clearing all DHCPv6 server leases.

```
switch(config)# dhcpv6-server vrf primary
switch(config-dhcpv6-server)# disable
switch(config-dhcpv6-server)# exit
switch(config)# exit
switch# clear dhcpv6-server leases
```

Clearing all DHCPv6 server leases for VRF **primary-vrf**.

```
switch(config)# dhcpv6-server vrf primary
switch(config-dhcpv6-server)# disable
switch(config-dhcpv6-server)# exit
switch(config)# exit
switch# clear dhcpv6-server leases vrf primary-vrf
```

Clear the DHCPv6 server lease for IP address **2001::1** on VRF **primary-vrf**.

```
switch(config)# dhcpv6-server vrf primary
switch(config-dhcpv6-server)# disable
switch(config-dhcpv6-server)# exit
switch(config)# exit
switch# clear dhcpv6-server leases 2001::1 vrf primary-vrf
```

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms                             | Command context | Authority                                                                                                                                                              |
|---------------------------------------|-----------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 8320<br>8325<br>8360<br>9300<br>10000 | Manager (#)     | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

## dhcv6p-server external-storage

```
dhcpv6-server external-storage <VOLUME-NAME> file <LEASE-FILENAME> [delay <DELAY>]
no dhcpv6-server external-storage <VOLUME-NAME> file <LEASE-FILENAME> [delay <DELAY>]
```

## Description

Configures the external storage file location for DHCPv6 server lease information. This file provides persistent storage, enabling DHCPv6 server settings to be restored when the switch is restarted. Lease information is stored in a flat file on the configured external device.

If external storage is not configured, then after a failure or reboot, all existing lease information is lost.

Lease information is saved to external storage each time the delay timer expires, which by default is every 300 seconds.

Lease information is not restored when issuing the command `dhcp-server enable`.

The `no` form of this command removes external storage support for the DHCPv6 server.

| Parameter             | Description                                                                                                       |
|-----------------------|-------------------------------------------------------------------------------------------------------------------|
| <VOLUME-NAME>         | Specifies the external storage volume name. Range: 1 to 64 printable ASCII characters.                            |
| file <LEASE-FILENAME> | Specifies the external storage filename. Range: 1 to 255 printable ASCII characters.                              |
| delay <DELAY>         | Specifies the interval in seconds between updates to the external storage file. Range: 15 to 86400. Default: 300. |

## Example

Stores the lease file on external storage volume **Storage1** in file **LeaseFile** at an interval of 600 seconds.

```
switch(config)# dhcpv6-server external-storage Storage1 file LeaseFile delay 600
```

Disables storage of the lease file on external storage volume **Storage1** in file **LeaseFile**.

```
switch(config)# no dhcpv6-server external-storage Storage1 file LeaseFile delay 600
```

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms                             | Command context | Authority                                                                          |
|---------------------------------------|-----------------|------------------------------------------------------------------------------------|
| 8320<br>8325<br>8360<br>9300<br>10000 | config          | Administrators or local user group members with execution rights for this command. |

## dhcpv6-server vrf

```
dhcpv6-server vrf VRF-NAME
no dhcpv6-server vrf VRF-NAME
```

## Description

Configures the DHCPv6 server to support a VRF and changes to the `config-dhcpv6-server` context for that VRF.

The `no` form of this command removes DHCPv6 server support on a VRF.

| Parameter       | Description    |
|-----------------|----------------|
| <i>VRF-NAME</i> | Name of a VRF. |

## Example

Configures DHCPv6 server support on VRF **primary**.

```
switch(config)# dhcpv6-server vrf primary
```

Removes the DHCPv6 server support on VRF **primary**.

```
switch(config)# no dhcpv6-server vrf primary
```

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms                             | Command context     | Authority                                                                          |
|---------------------------------------|---------------------|------------------------------------------------------------------------------------|
| 8320<br>8325<br>8360<br>9300<br>10000 | <code>config</code> | Administrators or local user group members with execution rights for this command. |

## disable

`disable`

## Description

Disables the DHCPv6 server on the current VRF. The DHCPv6 server is disabled by default when configured on a VRF.

## Example

Disables the DHCPv6 server on VRF **primary**.



```
switch(config)# dhcpv6-server vrf primary
switch(config-dhcpv6-server)# disable
```

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms                             | Command context      | Authority                                                                          |
|---------------------------------------|----------------------|------------------------------------------------------------------------------------|
| 8320<br>8325<br>8360<br>9300<br>10000 | config-dhcpv6-server | Administrators or local user group members with execution rights for this command. |

## dns-server

```
dns-server <IPv6-ADDR-LIST>
no dns-server <IPv6-ADDR-LIST>
```

## Description

Defines up to four DNS servers for the current DHCPv6 server pool.

The **no** form of this command removes the specified DNS servers from the pool.

| Parameter        | Description                                                                                                                                                                                                                          |
|------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <IPv6-ADDR-LIST> | Specifies the IP addresses of the DNS servers in IPv6 format (xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx), where x is a hexadecimal number from 0 to F. Separate addresses with a space. A maximum of four IP addresses can be defined. |

## Example

Defines DNS server **2001::13** for the server pool **primary-pool** on VRF **primary**.

```
switch(config)# dhcpv6-server vrf primary
switch(config-dhcpv6-server)# pool primary-pool
switch(config-dhcpv6-server-pool)# dns-server 2001::13
```

Deletes DNS server **2001::13** from the server pool **primary-pool** on VRF **primary**.

```
switch(config)# dhcpv6-server vrf primary
switch(config-dhcpv6-server)# pool primary-pool
switch(config-dhcpv6-server-pool)# no dns-server 2001::13
```

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms                             | Command context           | Authority                                                                          |
|---------------------------------------|---------------------------|------------------------------------------------------------------------------------|
| 8320<br>8325<br>8360<br>9300<br>10000 | config-dhcpv6-server-pool | Administrators or local user group members with execution rights for this command. |

## enable

enable

## Description

Enables the DHCPv6 server on the current VRF. The DHCPv6 server is disabled by default when configured on a VRF.

## Example

Enables the DHCPv6 server on VRF **primary**.

```
switch(config)# dhcpv6-server vrf primary
switch(config-dhcpv6-server)# enable
```

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms                             | Command context      | Authority                                                                          |
|---------------------------------------|----------------------|------------------------------------------------------------------------------------|
| 8320<br>8325<br>8360<br>9300<br>10000 | config-dhcpv6-server | Administrators or local user group members with execution rights for this command. |

## lease

```
lease {<TIME> | infinite}
no lease
```

## Description

Sets the length of the DHCPv6 lease time for the current pool. The lease time determines how long an IP address is valid before a DHCPv6 client must request that it be renewed.

The **no** form of this command returns the DHCPv6 lease time to the default value 1 hour.

| Parameter | Description                                                                                  |
|-----------|----------------------------------------------------------------------------------------------|
| <TIME>    | Sets the DHCPv6 lease time. Format: DD:HH:MM. Default: 01:00:00.                             |
| infinite  | Sets the DHCPv6 lease time to infinite. This means that addresses do not need to be renewed. |

## Example

Sets the lease time for DHCPv6 server pool **primary-pool** on VRF **primary** to **12** hours.

```
switch(config)# dhcpv6-server vrf primary
switch(config-dhcpv6-server)# pool primary-pool
switch(config-dhcpv6-server-pool)# lease 00:12:00
```

Sets the lease time for DHCP server pool **primary-pool** on VRF **primary** to the default value.

```
switch(config)# dhcpv6-server vrf primary
switch(config-dhcpv6-server)# pool primary-pool
switch(config-dhcpv6-server-pool)# no lease 00:12:00
```

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms                             | Command context           | Authority                                                                          |
|---------------------------------------|---------------------------|------------------------------------------------------------------------------------|
| 8320<br>8325<br>8360<br>9300<br>10000 | config-dhcpv6-server-pool | Administrators or local user group members with execution rights for this command. |

## option

```
option <OPTION-NUM> {ascii <ASCII-STR> | hex <HEX-STR> | ip <IPV6-ADDR-LIST>}
no option <OPTION-NUM> {ascii <ASCII-STR> | hex <HEX-STR> | ip <IPV6-ADDR-LIST>}
```

## Description

Defines custom DHCPv6 options for the current DHCPv6 server pool.

The **no** form of this command removes custom DHCPv6 options from the pool.

| Parameter         | Description                                                          |
|-------------------|----------------------------------------------------------------------|
| <OPTION-NUM>      | Specifies a DHCPv6 option number. Range: 2 to 254.                   |
| ascii <ASCII-STR> | Specifies a value for the selected option as an ASCII string. Range: |

| Parameter           | Description                                                                                                                                            |
|---------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------|
|                     | 1 to 255 ASCII characters.                                                                                                                             |
| hex <HEX-STR>       | Specifies a value for the selected option as a hexadecimal string. Range: 1 to 255 hexadecimal characters.                                             |
| ip <IPV6-ADDR-LIST> | Specifies a list of IP addresses for the option in IPv6 format (xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx), where x is a hexadecimal number from 0 to F. |

## Example

Defines DHCPv6 option **22** for the server pool **primary-pool** on VRF **primary**.

```
switch(config)# dhcpv6-server vrf primary
switch(config-dhcpv6-server)# pool primary-pool
switch(config-dhcpv6-server-pool)# option 22 ipv6 2001::12
```

Deletes DHCPv6 option 22 for the server pool **primary-pool** on VRF **primary**.

```
switch(config)# dhcpv6-server vrf primary
switch(config-dhcpv6-server)# pool primary-pool
switch(config-dhcpv6-server-pool)# no option 22 ipv6 2001::12
```

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms                             | Command context           | Authority                                                                          |
|---------------------------------------|---------------------------|------------------------------------------------------------------------------------|
| 8320<br>8325<br>8360<br>9300<br>10000 | config-dhcpv6-server-pool | Administrators or local user group members with execution rights for this command. |

## pool

```
pool <POOL-NAME>
no pool <POOL-NAME>
```

## Description

Creates a DHCPv6 server pool for the current VRF and switches to the `config-dhcpv6-server-pool` context for it. Multiple pools, each with a distinct range, can be assigned to a VRF. A maximum of 64 pools (IPv4 and IPv6), 64 address ranges, and 8182 clients are supported on the switch across all VRFs. The `no` form of this command deletes the specified DHCPv6 server pool.

| Parameter   | Description                                                                                                                                                                                           |
|-------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <POOL-NAME> | Specifies the DHCPv6 pool name. A maximum of 64 pools (IPv4 and IPv6) are supported across VRFs on the switch. Range: 1 to 32 printable ASCII characters. First character must be a letter or number. |

## Example

Creates the DHCPv6 server pool **primary-pool** on VRF **primary**.

```
switch(config)# dhcpv6-server vrf primary
switch(config-dhcpv6-server)# pool primary-pool
switch(config-dhcpv6-server-pool)#
```

Deletes the DHCPv6 server pool **primary-pool** on VRF **primary**.

```
switch(config)# dhcpv6-server vrf primary
switch(config-dhcpv6-server)# no pool primary-pool
```

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms                             | Command context      | Authority                                                                          |
|---------------------------------------|----------------------|------------------------------------------------------------------------------------|
| 8320<br>8325<br>8360<br>9300<br>10000 | config-dhcpv6-server | Administrators or local user group members with execution rights for this command. |

## range

```
range <LOW-IPV6-ADDR> <HIGH-IPV6-ADDR> [prefix-len <MASK>]
no range <LOW-IPV6-ADDR> <HIGH-IPV6-ADDR> [prefix-len <MASK>]
```

## Description

Defines the range of IP addresses supported by the current DHCPv6 server pool. A maximum of 64 ranges are supported per switch across all VRFs.

The **no** form of this command deletes the address range for the current pool.

| Parameter       | Description                                                                                                                                        |
|-----------------|----------------------------------------------------------------------------------------------------------------------------------------------------|
| <LOW-IPV6-ADDR> | Specifies the lowest IP address in the pool in IPv6 format (xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx), where x is a hexadecimal number from 0 to F. |

| Parameter                            | Description                                                                                                                                         |
|--------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>&lt;HIGH-IPV6-ADDR&gt;</code>  | Specifies the highest IP address in the pool in IPv6 format (xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx), where x is a hexadecimal number from 0 to F. |
| <code>prefix-len &lt;MASK&gt;</code> | Specifies the number of bits in the address mask in CIDR format (x), where x is a decimal number from 64 to 128.                                    |

## Example

Defines an address range for the DHCPv6 server pool **primary-pool** on VRF **primary**.

```
switch(config)# dhcpv6-server vrf primary
switch(config-dhcpv6-server)# pool primary-pool
switch(config-dhcpv6-server-pool)# range 2001::1 2001::10 prefix-len 64
```

Deletes an address range for the DHCPv6 server pool **primary-pool** on VRF **primary**.

```
switch(config)# dhcpv6-server vrf primary
switch(config-dhcpv6-server)# pool primary-pool
switch(config-dhcpv6-server-pool)# no range 2001::1 2001::10 prefix-len 64
```

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms                             | Command context           | Authority                                                                          |
|---------------------------------------|---------------------------|------------------------------------------------------------------------------------|
| 8320<br>8325<br>8360<br>9300<br>10000 | config-dhcpv6-server-pool | Administrators or local user group members with execution rights for this command. |

## show dhcpv6-server

```
show dhcpv6-server [all-vrfs]
show dhcpv6-server leases {all-vrfs | vrf <VRF-NAME>}
show dhcpv6-server pool <POOL-NAME> [vrf <VRF-NAME>]
```

## Description

Shows configuration settings for the DHCPv6 server.

| Parameter             | Description                                              |
|-----------------------|----------------------------------------------------------|
| <code>all-vrfs</code> | Shows DHCPv6 server configuration settings for all VRFs. |

| Parameter                          | Description                                                                      |
|------------------------------------|----------------------------------------------------------------------------------|
| leases {all-vrfs   vrf <VRF-NAME>} | Shows DHCPv6 server lease configuration settings for all VRFs or a specific VRF. |
| pool <POOL-NAME> [vrf <VRF-NAME>]  | Shows DHCPv6 server pool configuration settings for all VRFs or a specific VRF.  |

## Examples

Showing all DHCPv6 server configuration settings.

```
switch# show dhcpv6-server

VRF Name : default
DHCPv6 Server : enabled
Operational State : operational
Authoritative Mode : true

Pool Name : test
Lease Duration : 00:01:00

DHCPV6 dynamic IP allocation

Start-IPv6-Address End-IPv6-Address Prefix-Length

2001::2 2001::10 64

DHCPv6 Server options

Option-Number Option-Type Option-Value

7 ipv6 2001::15

DHCPv6 Server static IP allocation

DHCPv6 Server static host is not configured.
```

Showing DHCPv6 server configuration settings for VRF **primary-vrf**.

```
switch# show dhcpv6-server vrf primary-vrf

VRF Name : primary-vrf
DHCPv6 Server : disabled
Operational State : standby
Authoritative Mode : false

Pool Name : test
Lease Duration : 00:01:00

DHCPV6 dynamic IP allocation

Start-IPv6-Address End-IPv6-Address Prefix-Length

2000::1 2000::20 *
2001::20 2001::50 *
2001::2 2001::10 64
2010::20 2010::40 *
```

#### DHCPv6 Server options

| Option-Number | Option-Type | Option-Value |
|---------------|-------------|--------------|
| 7             | ipv6        | 2001::15     |
| 23            | ipv6        | 2001::30     |
| 30            | ipv6        | 2001::10     |

#### DHCPv6 Server static IP allocation

DHCPv6 Server static host is not configured.

Pool Name : v6test  
Lease Duration : 00:01:00

#### DHCPv6 dynamic IP allocation

| Start-IPv6-Address | End-IPv6-Address | Prefix-Length |
|--------------------|------------------|---------------|
| 2001::1            | 2001::20         | 64            |
| 2010::10           | 2010::30         | *             |
| 2020::20           | 2020::60         | *             |

#### DHCPv6 Server options

| Option-Number | Option-Type | Option-Value                            |
|---------------|-------------|-----------------------------------------|
| 7             | ipv6        | 2001::20                                |
| 23            | ipv6        | 2001:0db8:85a3:0000:0000:8a2e:0370:7334 |
|               |             | 2001:0db8:85a3:0000:0000:8a2e:0370:7335 |
|               |             | 2001:0db8:85a3:0000:0000:8a2e:0370:7336 |
|               |             | 2001:0db8:85a3:0000:0000:8a2e:0370:7337 |

#### DHCPv6 Server static IP allocation

| IPv6-Address | Client-Hostname | State       | Client-Id          |
|--------------|-----------------|-------------|--------------------|
| 2100::4      | *               | OPERATIONAL | 1:0:a0:24:ab:fb:9c |

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms                             | Command context | Authority                                                                                                                                                              |
|---------------------------------------|-----------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 8320<br>8325<br>8360<br>9300<br>10000 | Manager (#)     | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

## static-bind



```
static-bind ipv6 <IPv6-ADDR> client-id <ID> [hostname <HOST>]
no static-bind ipv6 <IPv6-ADDR-LIST>
```

## Description

Creates a static binding that associates an IP address in the current pool with a client identifier or DUID. This causes the DHCPv6 server to only assign the specified IP address to a client station with the specified client identifier or DUID.

The `no` form of this command removes the specified static binding from the pool.

| Parameter       | Description                                                                                                                                                                                                                               |
|-----------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <IPv6-ADDR>     | Specifies the IP address to assign in IPv6 format (xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx), where x is a hexadecimal number from 0 to F. For example, this address 2222:0000:3333:0000:0000:0000:4444:0055 becomes 2222:0:3333::4444:55. |
| client-id <ID>  | Specifies the client identifier or DUID.                                                                                                                                                                                                  |
| hostname <HOST> | Specifies the host name of the client station. Range: 1 to 255 printable ASCII characters                                                                                                                                                 |

## Example

Defines a static address for the DHCPv6 server pool **primary-pool** on VRF **primary**.

```
switch(config)# dhcpv6-server vrf primary
switch(config-dhcpv6-server)# pool primary-pool
switch(config-dhcpv6-server-pool)# static-bind ipv6 2001::10 client-id
1:0:a0:24:ab:fb:9c
```

Deletes a static address from the DHCPv6 server pool **primary-pool** on VRF **primary**.

```
switch(config)# dhcpv6-server vrf primary
switch(config-dhcpv6-server)# pool primary-pool
switch(config-dhcpv6-server-pool)# no static-bind ipv6 2001::10 client-id
1:0:a0:24:ab:fb:9c
```

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms                             | Command context           | Authority                                                                          |
|---------------------------------------|---------------------------|------------------------------------------------------------------------------------|
| 8320<br>8325<br>8360<br>9300<br>10000 | config-dhcpv6-server-pool | Administrators or local user group members with execution rights for this command. |



---

Applies only to the 8360 Switch Series.

---

DHCP is a protocol used by DHCP servers in IP networks to dynamically allocate network configuration data to client devices (DHCP clients). Possible network configuration data includes user IP address, subnet mask, default gateway IP address, DNS server IP address, and lease duration. The DHCP protocol enables DHCP clients to be dynamically configured with such network configuration data without any manual setup process.

DHCP snooping is a security feature that helps avoid problems caused by an unauthorized DHCP server on the network that provides invalid configuration data to DHCP clients. A user without malicious intent may cause this problem by unknowingly adding to the network a switch or other device that includes a DHCP server enabled by default. In some cases, a user with malicious intent adds a DHCP server to the network as part of their Denial of Service or Man in the Middle attack.

DHCP snooping helps prevent such problems by distinguishing between trusted ports connected to legitimate DHCP servers and untrusted ports connected to general users. DHCP packets are forwarded between trusted ports without inspection. DHCP packets received on other switch ports are inspected before being forwarded. DHCP Packets from untrusted sources are dropped.

---

DHCP Snooping and DHCP relay can be configured on the same switch.



When DHCP snooping and DHCP relay are both enabled on a VLAN, the following actions occur:

- Received packet: DHCP snooping processes the DHCP packet before (possibly) handing it to DHCP relay.
- Transmitted packet: DHCP packets sent by DHCP relay are intercepted by DHCP snooping to learn IP bindings.



---

For even more rigorous security that is applied in hardware on a packet-by-packet basis, you can use IP source lockdown feature as described in `IP source lockdown`.

---

## DHCPv6 guard

The DHCPv6 guard feature is an extension of DHCPv6 snooping. When the DHCPv6 snooping feature is configured globally and on the VLAN, the ports are configured as trusted and untrusted ports on the VLAN. DHCPv6 guard enhances this feature by creating a policy and applying it on a port and VLAN. This policy contains multiple attributes which are compared against the packet that is received on trusted ports. If the packet complies with the attributes of the policy, it is forwarded to the destination port; otherwise the packet is dropped.

## DHCP server interoperation

DHCP server may not be configured with DHCP snooping.

## DHCPv4 snooping conditions for dropping DHCPv4 packets

Applies only to DHCPv4 snooping.

| Packet types that are dropped | Conditions for dropping the packets                                                                                                                                                                                                                                                                            |
|-------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| DHCPOFFER, DHCPACK, DHCPNACK  | <ul style="list-style-type: none"><li>■ A packet from a DHCP server is received on an untrusted port.</li><li>■ The switch is configured with a list of authorized DHCP server addresses and a DHCP response received on a trusted port, but the source IP address is not an authorized DHCP server.</li></ul> |
| DHCPRELEASE, DHCPDECLINE      | <ul style="list-style-type: none"><li>■ A broadcast packet that has a MAC address in the DHCP binding database, but the port in the DHCP binding database does not match the port on which the packet is received.</li></ul>                                                                                   |
| All DHCP packet types         | <ul style="list-style-type: none"><li>■ A DHCP packet received on an untrusted port in which the DHCP client hardware MAC address does not match the source MAC address in the packet.</li><li>■ A DHCP packet containing DHCP relay information (option 82) is received on an untrusted port.</li></ul>       |

## Protocol details

1. In a VSX setup, the configured VSX Primary switch writes IP binding entries to an external storage file. If the VSX Primary switch reboots, the IP Binding entries will not be synced to the external storage file until the VSX Primary switch comes back up. Once the VSX Primary switch comes up, it will sync entries from the VSX secondary switch and write the consolidated bindings to external storage.
2. In a VSX setup, external storage should be configured only after the VSX role is configured.
3. In a VSX setup, once external storage is configured, the VSX switch role should not be changed. If there is a need to change the role, do so using these steps:
  - a. Remove DHCPv4-Snooping external storage.
  - b. Change the VSX role.
  - c. Configure DHCPv4-Snooping external storage
4. When a port is configured as a trusted port, all the dynamic IP binding entries learned on that port will be deleted.
5. When a client is connected on a trusted port, the dynamic IP binding entries will not be learned on the switch, even though the client gets an IP address.
6. If DHCPv4 snooping is enabled on two back-to-back access switches, DHCP packets will be dropped. Since by default option 82 is enabled on DHCPv4 snooping and the default policy is drop. The second switch with DHCPv4 snooping enabled drops the packets. In this scenario the user should enable DHCPv4 snooping option 82 on one switch, or else you can disable on both.
7. 8360 Switch Series: VXLAN is trusted by default for DHCPv4 and DHCPv6 snooping over VXLAN.
8. 8360 Switch Series: VXLAN operational status must be in the forward state to forward the packets over VXLAN tunnel.

# Configuring DHCPv4 and v6 snooping over VXLAN overlay

## Procedure

1. Configure VXLAN overlay setup to establish the VxLAN tunnel. For more information, see *AOS-CX VXLAN EVPN Guide*.
2. Validate whether the tunnel is established between the VTEPS (either static or EVPN) with the command `show interface vxlan vteps`.

The status of the tunnel should be operational in order to forward the packets.

3. Configure DHCPv4 and v6 snooping in the global and VLAN contexts with the commands `dhcpv4-snooping` and `dhcpv6-snooping`.
4. Configure the server connected port as trusted with the commands `dhcpv4-snooping trust` and `dhcpv6-snooping trust`.

If the server is connected through the VXLAN tunnel, then this step can be ignored. This is because VXLAN is trusted by default for DHCPv4 and DHCPv6 snooping over VXLAN.

5. Validate the DHCPv4 and v6 snooping configuration with the commands `show dhcpv4-snooping` and `show dhcpv6-snooping`.

## DHCPv4 snooping commands

### clear dhcpv4-snooping binding

```
clear dhcpv4-snooping binding {all | ip <IPV4-ADDR> vlan <VLAN-ID> | port <PORT-NUM> |
vlan <VLAN-ID>}
```

### Description

Clears DHCPv4 snooping binding entries.

| Parameter                     | Description                                                                                    |
|-------------------------------|------------------------------------------------------------------------------------------------|
| all                           | Specifies that all DHCPv4 binding information is to be cleared.                                |
| ip <IPV4-ADDR> vlan <VLAN-ID> | Specifies the IPv4 address and VLAN for which all DHCPv4 binding information is to be cleared. |
| port <PORT-NUM>               | Specifies the port number for which all DHCPv4 binding information is to be cleared.           |
| vlan <VLAN-ID>                | Specifies the VLAN for which all DHCPv4 binding information is to be cleared.                  |

### Examples

Clearing all DHCPv4 binding information for IP address 192.168.2.4 and VLAN 5:

```
switch(config)# clear dhcpv4-snooping binding ip 192.168.2.4 vlan 5
```

Clearing all DHCPv4 binding information for port 1/1/1:

```
switch(config)# clear dhcpv4-snooping binding port 1/1/1
```

Clearing all DHCPv4 binding information for VLAN 10:

```
switch(config)# clear dhcpv4-snooping binding vlan 10
```

Clearing all DHCPv4 binding information:

```
switch(config)# clear dhcpv4-snooping binding all
```

## Command History

| Release          | Modification                                            |
|------------------|---------------------------------------------------------|
| 10.09.1000       | Command introduced for the 8360 Switch Series.          |
| 10.09            | Command introduced for the 6000 and 6100 Switch Series. |
| 10.07 or earlier |                                                         |

## Command Information

| Platforms | Command context             | Authority                                                                                                                                                              |
|-----------|-----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 8360      | Operator (>) or Manager (#) | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

## clear dhcpv4-snooping statistics

```
clear dhcpv4-snooping statistics
```

### Description

Clears all DHCPv4 snooping statistics.

### Examples

Clear all DHCPv4 snooping statistics:

```
switch# clear dhcpv4-snooping statistics
```

## Command History

| Release          | Modification                                            |
|------------------|---------------------------------------------------------|
| 10.09.1000       | Command introduced for the 8360 Switch Series.          |
| 10.09            | Command introduced for the 6000 and 6100 Switch Series. |
| 10.07 or earlier |                                                         |

## Command Information

| Platforms | Command context             | Authority                                                                                                                                                              |
|-----------|-----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 8360      | Operator (>) or Manager (#) | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

## dhcpv4-snooping

dhcpv4-snooping  
no dhcpv4-snooping

### Description

Enables DHCPv4 snooping. DHCPv4 snooping is disabled by default. DHCP snooping is not supported on the management interface.

The no form of the command disables DHCPv4 snooping, flushing all the IP bindings learned since DHCPv4 snooping was enabled.

### Examples

Enabling DHCPv4 snooping:

```
switch(config)# dhcpv4-snooping
```

Disabling DHCPv4 snooping:

```
switch(config)# no dhcpv4-snooping
```

## Command History

| Release          | Modification                                            |
|------------------|---------------------------------------------------------|
| 10.09.1000       | Command introduced for the 8360 Switch Series.          |
| 10.09            | Command introduced for the 6000 and 6100 Switch Series. |
| 10.07 or earlier |                                                         |

## Command Information

| Platforms | Command context | Authority                                                                          |
|-----------|-----------------|------------------------------------------------------------------------------------|
| 8360      | config          | Administrators or local user group members with execution rights for this command. |

## dhcpv4-snooping (in config-vlan context)

dhcpv4-snooping  
no dhcpv4-snooping

### Description

Enables DHCPv4 snooping for the specified VLAN in the `config-vlan` context. DHCPv4 snooping is disabled by default for all VLANs.

The no form of the command disables DHCPv4 snooping on the specified VLAN, flushing all the IP bindings learned for this VLAN since DHCPv4 snooping was enabled for this VLAN.

## Examples

Enabling DHCPv4 snooping on VLAN 100:

```
switch(config)# vlan 100
switch(config-vlan-100)# dhcpv4-snooping
switch(config-vlan-100)# exit
switch(config)#
```

Disabling DHCPv4 snooping on VLAN 100:

```
switch(config)# vlan 100
switch(config-vlan-100)# no dhcpv4-snooping
switch(config-vlan-100)# exit
switch(config)#
```

## Command History

| Release          | Modification                                            |
|------------------|---------------------------------------------------------|
| 10.09.1000       | Command introduced for the 8360 Switch Series.          |
| 10.09            | Command introduced for the 6000 and 6100 Switch Series. |
| 10.07 or earlier |                                                         |

## Command Information

| Platforms | Command context | Authority                                                                          |
|-----------|-----------------|------------------------------------------------------------------------------------|
| 8360      | config-vlan     | Administrators or local user group members with execution rights for this command. |

## dhcpv4-snooping allow-overwrite-binding

dhcpv4-snooping allow-overwrite-binding  
no dhcpv4-snooping allow-overwrite-binding

## Description

Allows binding to be overwritten for the same IP address. When enabled, and a DHCP server offers a host an IP address that is already bound to an existing host in the binding table, the existing binding is overwritten for the new host if the new host is successfully able to acquire the same IP address. This overwriting is disabled by default, causing the DHCP server offers to be dropped.

The no form of the command disables DHCPv4 snooping overwrite binding.

## Examples

Enabling DHCPv4 snooping overwrite binding:

```
switch(config)# dhcpv4-snooping allow-overwrite-binding
```

Disabling DHCPv4 snooping overwrite binding:

```
switch(config)# no dhcpv4-snooping allow-overwrite-binding
```

## Command History

| Release          | Modification                                            |
|------------------|---------------------------------------------------------|
| 10.09.1000       | Command introduced for the 8360 Switch Series.          |
| 10.09            | Command introduced for the 6000 and 6100 Switch Series. |
| 10.07 or earlier |                                                         |

## Command Information

| Platforms | Command context | Authority                                                                          |
|-----------|-----------------|------------------------------------------------------------------------------------|
| 8360      | config          | Administrators or local user group members with execution rights for this command. |

## dhcpv4-snooping authorized-server

```
dhcpv4-snooping authorized-server <IPv4-ADDR> [vrf <VRF-NAME>]
no dhcpv4-snooping authorized-server <IPv4-ADDR> [vrf <VRF-NAME>]
```

### Description

Adds an authorized (trusted) DHCP server to a list of authorized servers for use by DHCPv4 snooping. This command can be issued multiple times, adding a maximum of 20 authorized servers per VRF. By default, with an empty list of authorized servers, all DHCP servers are considered to be trusted for DHCPv4 snooping purposes.



The `mgmt` VRF cannot be used with this command.

The `no` form of this command deletes the specified DHCP server from the authorized list.

| Parameter      | Description                                              |
|----------------|----------------------------------------------------------|
| <IPv4-ADDR>    | Specifies the IPv4 address of the trusted DHCPv4 server. |
| vrf <VRF-NAME> | Specifies the VRF name.                                  |

### Usage

For authorized server lookup, the VRF is derived from the Switch Virtual Interface (SVI) configured for the incoming VLAN. If the SVI is not configured, the `default` VRF is assumed.

### Examples

Adding DHCP servers 192.168.2.2, 192.168.2.3, and 192.168.2.10 to the authorized server list:



```
switch(config)# dhcpv4-snooping authorized-server 192.168.2.2
switch(config)# dhcpv4-snooping authorized-server 192.168.2.3 vrf default
switch(config)# dhcpv4-snooping authorized-server 192.168.2.10 vrf default
```

Removing DHCP server 192.168.2.3 from the authorized server list:

```
switch(config)# no dhcpv4-snooping authorized-server 192.168.2.3 vrf default
```

## Command History

| Release          | Modification                                            |
|------------------|---------------------------------------------------------|
| 10.09.1000       | Command introduced for the 8360 Switch Series.          |
| 10.09            | Command introduced for the 6000 and 6100 Switch Series. |
| 10.07 or earlier |                                                         |

## Command Information

| Platforms | Command context | Authority                                                                          |
|-----------|-----------------|------------------------------------------------------------------------------------|
| 8360      | config          | Administrators or local user group members with execution rights for this command. |

## dhcpv4-snooping event-log client

```
dhcpv4-snooping event-log client
no dhcpv4-snooping event-log client
```

### Description

This command enables/disables DHCPv4 client level event logs that help with client telemetry on a remote management station such as Aruba Central. By default, client level event logs are disabled. The `no` form of this command disables client-level event logs for DHCPv4 snooping after they are enabled. View these logged DHCPv4 snooping events by issuing the command `show events -c dhcpv4-snooping`.

### Examples

Enabling DHCPv4 client level event logs:

```
switch(config)# # dhcpv4-snooping event-log client
```

Disabling external storage:

```
witch(config)# # no dhcpv4-snooping event-log client
```

## Command History

| Release | Modification        |
|---------|---------------------|
| 10.10   | Command introduced. |

## Command Information

| Platforms | Command context | Authority                                                                          |
|-----------|-----------------|------------------------------------------------------------------------------------|
| 8360      | config          | Administrators or local user group members with execution rights for this command. |

## dhcpv4-snooping external-storage

```
dhcpv4-snooping external-storage volume <VOL-NAME> file <FILE-NAME>
no dhcpv4-snooping external-storage volume <VOL-NAME> file <FILE-NAME>
```

### Description

Configures external storage to be used for backing up IP bindings (used by DHCPv4 snooping) to a file. When configured, the switch stores all the IP bindings in an external storage file so that they are retained after the switch restarts. When the switch restarts, it reads the IP bindings from the configured external storage file to populate its local cache.



When both external storage and flash storage are configured to store DHCP snooping IP bindings, the external storage takes priority, and is used exclusively until it becomes unconfigured, at which time flash storage (if configured) is used. Later, if external storage is configured again, flash storage stops and external storage resumes.

The no form of this command disables the saving of IP bindings in an external storage file.

| Parameter         | Description                                                                                                                                                                                                                                                                                                                                                                        |
|-------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| volume <VOL-NAME> | Specifies the name of the existing external storage volume where the IP bindings file will be saved. Before running the <code>dhcpv4-snooping external-storage volume</code> command, first create the external storage volume using command <code>external-storage &lt;VOLUME-NAME&gt;</code> . See <i>External storage commands</i> in the <i>Command-Line Interface Guide</i> . |
| file <FILE-NAME>  | Specifies the file name to use for storing IP bindings. Maximum 255 characters.                                                                                                                                                                                                                                                                                                    |

Configuring IP bindings storage in file `dsnoop_ipbindings` on existing volume `dhcp_snoop`:

```
switch(config)# dhcpv4-snooping external-storage volume dhcp_snoop file dsnoop_
ipbindings
```

Disabling external storage:

```
switch(config)# no dhcpv4-snooping external-storage volume dhcp_snoop
```

Disabling external storage when flash storage is also configured (note the message indicating that flash storage will be used):

```
switch(config)# no dhcpv4-snooping external-storage volume dhcp_snoop
DHCPv4-Snooping will use flash storage to store IP Binding database
switch(config)#
```

## Command History

| Release          | Modification                                            |
|------------------|---------------------------------------------------------|
| 10.09.1000       | Command introduced for the 8360 Switch Series.          |
| 10.09            | Command introduced for the 6000 and 6100 Switch Series. |
| 10.08            | Updated example with flash storage information.         |
| 10.07 or earlier |                                                         |

## Command Information

| Platforms | Command context | Authority                                                                          |
|-----------|-----------------|------------------------------------------------------------------------------------|
| 8360      | config          | Administrators or local user group members with execution rights for this command. |

## dhcpv4-snooping flash-storage

```
dhcpv4-snooping flash-storage [delay <DELAY>]
no dhcpv4-snooping flash-storage [delay <DELAY>]
```

### Description

Configures switch flash storage to be used for backing up client IP bindings (used by DHCPv4 snooping). When flash storage is configured (and external storage is not already configured for this purpose), the switch stores the IP bindings in switch flash storage. When the switch restarts, it reads the IP bindings from the switch flash storage to populate its local cache.

Writing the IP bindings to flash storage only occurs after the configured delay and if there has been a change in client IP bindings. Writing is skipped when client IP bindings have not changed since the previous write.

Omitting `delay <DELAY>` sets the default delay of 900 seconds.



To reduce switch flash aging it is recommended that you use external storage (command `dhcpv4-snooping external-storage`) to backup DHCP snooping IP bindings. Alternatively, consider configuring flash storage with a substantial delay between writes.



When both external storage and flash storage are configured to store DHCP snooping IP bindings, the external storage takes priority, and is used exclusively until it becomes unconfigured, at which time flash storage (if configured) is used. Later, if external storage is configured again, flash storage stops and external storage resumes.

The no form of this command disables the saving of IP bindings in flash storage.

| Parameter                        | Description                                                                                                             |
|----------------------------------|-------------------------------------------------------------------------------------------------------------------------|
| <code>delay &lt;DELAY&gt;</code> | Specifies the delay in seconds between writes (when necessary) to the flash storage, Default: 900. Range: 300 to 86400. |

## Examples

Configuring switch flash storage for DHCP snooping IP binding storage with a write delay of 1200 seconds:

```
switch(config)# dhcpv4-snooping flash-storage delay 1200
Warning: Using flash storage reduces switch lifetime. It is recommended to use an
external-storage.
Do you want to continue (y/n)? y
switch(config)#
```

Unconfiguring usage of switch flash storage for IP bindings :

```
switch(config)# no dhcpv4-snooping flash-storage
```

## Command History

| Release    | Modification                                            |
|------------|---------------------------------------------------------|
| 10.09.1000 | Command introduced for the 8360 Switch Series.          |
| 10.09      | Command introduced for the 6000 and 6100 Switch Series. |
| 10.08      |                                                         |

## Command Information

| Platforms | Command context | Authority                                                                          |
|-----------|-----------------|------------------------------------------------------------------------------------|
| 8360      | config          | Administrators or local user group members with execution rights for this command. |

## dhcpv4-snooping max-bindings

```
dhcpv4-snooping max-bindings <MAX-BINDINGS>
no dhcpv4-snooping max-bindings <MAX-BINDINGS>
```

### Description

Sets the maximum number of DHCP bindings allowed on the selected interface. For all interfaces on which this command is not run, the default max binding is the maximum value of the range.

The no form of the command reverts max bindings for the selected interface to its default.

| Parameter      | Description                                                      |
|----------------|------------------------------------------------------------------|
| <MAX-BINDINGS> | Specifies the maximum number of DHCP bindings. Range: 0 to 2000. |

## Examples

Set the DHCP max bindings to 256 on interface 1/1/1:

```
switch(config)# interface 1/1/1
switch(config-if)# dhcpv4-snooping max-bindings 256
switch(config-if)# exit
switch(config)#
```

Revert DHCP max bindings to its default on interface 1/1/1:

```
switch(config)# interface 1/1/1
switch(config-if)# no dhcpv4-snooping max-bindings 256
switch(config-if)# exit
switch(config)#
```

## Command History

| Release          | Modification                                            |
|------------------|---------------------------------------------------------|
| 10.09.1000       | Command introduced for the 8360 Switch Series.          |
| 10.09            | Command introduced for the 6000 and 6100 Switch Series. |
| 10.07 or earlier |                                                         |

## Command Information

| Platforms | Command context | Authority                                                                          |
|-----------|-----------------|------------------------------------------------------------------------------------|
| 8360      | config-if       | Administrators or local user group members with execution rights for this command. |

## dhcpv4-snooping option 82

```
dhcpv4-snooping option 82 [remote-id {mac | subnet-ip | mgmt-ip}]
 [untrusted-policy {drop | keep | replace}]
no dhcpv4-snooping option 82 [remote-id {mac | subnet-ip | mgmt-ip}]
 [untrusted-policy {drop | keep | replace}]
```

## Description

Configures the addition of option 82 DHCP relay information to DHCP client packets that are being forwarded on trusted ports. DHCP relay is enabled by default.

In the switch default state and when this command is entered without parameters (`dhcpv4-snooping option 82`), this default configuration is used:

```
dhcpv4-snooping option 82 remote-id mac untrusted-policy drop
```

When `remote-id` is omitted, its default (`mac`) is used. When `untrusted-policy` is omitted, its default (`drop`) is used.

The no form of this command disables DHCPv4 snooping option 82.

| Parameter                     | Description                                                                                                                                                                                                   |
|-------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>remote-id</code>        | Specifies what address to use as the remote ID for the <code>replace</code> option of <code>untrusted-policy</code> . Specify one of these address types:                                                     |
| <code>mac</code>              | The default. Uses the switch MAC address as the remote ID.                                                                                                                                                    |
| <code>subnet-ip</code>        | Uses the IP address of the client VLAN as the remote ID.                                                                                                                                                      |
| <code>untrusted-policy</code> | Specifies what action to take for DHCP packets (with option 82) that are received on untrusted ports. Specify one of these actions:                                                                           |
| <code>drop</code>             | The default. Drop DHCP packets (with option 82) without forwarding them.                                                                                                                                      |
| <code>keep</code>             | Forward DHCP packets (with option 82).                                                                                                                                                                        |
| <code>replace</code>          | Replace the option 82 information in the DHCP packets with whatever is set for <code>remote-id</code> (one of: <code>mac</code> , <code>subnet-ip</code> , or <code>mgmt-ip</code> ) and forward the packets. |

## Examples

Configuring DHCPv4 snooping option 82 with the `keep` action:

```
switch(config)# dhcpv4-snooping option 82 untrusted-policy keep
```

Configuring DHCPv4 snooping option 82 with `mgmt-ip` as the `remote-id` and the `replace` action:

```
switch(config)# dhcpv4-snooping option 82 remote-id mgmt-ip untrusted-policy replace
```

Disabling DHCPv4 snooping option 82:

```
switch(config)# no dhcpv4-snooping option 82 untrusted-policy keep
```

## Command History

| Release          | Modification                                            |
|------------------|---------------------------------------------------------|
| 10.09.1000       | Command introduced for the 8360 Switch Series.          |
| 10.09            | Command introduced for the 6000 and 6100 Switch Series. |
| 10.07 or earlier |                                                         |

## Command Information

| Platforms | Command context | Authority                                                                          |
|-----------|-----------------|------------------------------------------------------------------------------------|
| 8360      | config          | Administrators or local user group members with execution rights for this command. |

## dhcpv4-snooping static-attributes

dhcpv4-snooping static-attributes  
no dhcpv4-snooping static-attributes

### Description

Enables storage of static attributes provided to the DHCP client by DHCP server during DHCP packet exchange. Disabled by default. When enabled, the following attributes are stored in OVSDB along with the client IP binding entry:

1. Name server IP addresses: DNS server IPs provided by the DHCP server to the client. Maximum: 3 per client.
2. Default gateway IP address: Router IP addresses provided by DHCP server to the client. Maximum: 3 per client.
3. Server IP address: IP address of the DHCP server that leased the IP to the client.

The `no` form of the command disables storing of client static attributes. After disabling, existing client static attributes will be flushed.

### Examples

Enabling the storage of DHCPv4 snooping static attributes:

```
switch(config)# dhcpv4-snooping static-attributes
```

Disabling the storage of DHCPv4 snooping static attributes:

```
switch(config)# no dhcpv4-snooping static-attributes
```

### Command History

| Release | Modification        |
|---------|---------------------|
| 10.10   | Command introduced. |

### Command Information

| Platforms | Command context | Authority                                                                          |
|-----------|-----------------|------------------------------------------------------------------------------------|
| 8360      | config          | Administrators or local user group members with execution rights for this command. |

## dhcpv4-snooping trust

dhcpv4-snooping trust  
no dhcpv4-snooping trust

### Description

Enables DHCPv4 snooping trust on the selected port. Only server packets received on trusted ports are forwarded. All the ports are untrusted by default.

The `no` form of the command disables DHCPv4 snooping trust on the selected port.

## Examples

Enabling DHCPv4 snooping trust on interface 2/2/1:

```
switch(config)# interface 2/2/1
switch(config-if)# dhcpv4-snooping trust
switch(config-if)# exit
switch(config)#
```

Disabling DHCPv4 snooping trust on interface 2/2/1:

```
switch(config)# interface 2/2/1
switch(config-if)# no dhcpv4-snooping trust
switch(config-if)# exit
switch(config)#
```

## Command History

| Release          | Modification                                            |
|------------------|---------------------------------------------------------|
| 10.09.1000       | Command introduced for the 8360 Switch Series.          |
| 10.09            | Command introduced for the 6000 and 6100 Switch Series. |
| 10.07 or earlier |                                                         |

## Command Information

| Platforms | Command context        | Authority                                                                          |
|-----------|------------------------|------------------------------------------------------------------------------------|
| 8360      | <code>config-if</code> | Administrators or local user group members with execution rights for this command. |

## dhcpv4-snooping tunnel vxlan trust

```
dhcpv4-snooping tunnel vxlan trust
no dhcpv4-snooping tunnel vxlan trust
```

## Description

Enables DHCPv4-snooping trust on all VxLAN tunnels.

The `no` form of the command marks all VxLAN tunnels as untrusted.

By default, all VxLAN tunnel interfaces are trusted. When trust is disabled on VxLAN tunnel interfaces:

- DHCP broadcast packets are not forwarded on VxLAN tunnels.
- DHCP server packets received on VxLAN tunnel interfaces are discarded.

## Examples

Enabling trust on all VxLAN tunnel interfaces:



```
switch(config)# dhcpv4-snooping tunnel vxlan trust
```

Disabling trust on all VxLAN tunnel interfaces:

```
switch(config)# no dhcpv4-snooping tunnel vxlan trust
```

## Command History

| Release    | Modification        |
|------------|---------------------|
| 10.10.1030 | Command introduced. |

## Command Information

| Platforms | Command context | Authority                                                                          |
|-----------|-----------------|------------------------------------------------------------------------------------|
| 8360      | config          | Administrators or local user group members with execution rights for this command. |

## dhcpv4-snooping verify mac

```
dhcpv4-snooping verify mac
no dhcpv4-snooping verify mac
```

### Description

This command enables verification of the hardware address field in DHCP client packets. When enabled, the DHCP client hardware address field and the source MAC address must be the same for packets received on untrusted ports or else the packet is dropped. This DHCP snooping MAC verification is enabled by default.

The no form of the command disables DHCPv4 snooping MAC verification.

### Examples

Enabling DHCPv4 snooping MAC verification:

```
switch(config)# dhcpv4-snooping verify mac
```

Disabling DHCPv4 snooping MAC verification:

```
switch(config)# no dhcpv4-snooping verify mac
```

## Command History

| Release          | Modification                                            |
|------------------|---------------------------------------------------------|
| 10.09.1000       | Command introduced for the 8360 Switch Series.          |
| 10.09            | Command introduced for the 6000 and 6100 Switch Series. |
| 10.07 or earlier |                                                         |

## Command Information

| Platforms | Command context | Authority                                                                          |
|-----------|-----------------|------------------------------------------------------------------------------------|
| 8360      | config          | Administrators or local user group members with execution rights for this command. |

### show dhcpv4-snooping

show dhcpv4-snooping [vsx-peer]

#### Description

Shows the DHCPv4 snooping configuration.

| Parameter | Description                                                                                                                                                                                                                      |
|-----------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| vsx-peer  | Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX. |

#### Examples

Showing the DHCPv4 snooping configuration:

```
switch(config)# show dhcpv4-snooping

DHCPv4-Snooping Information

DHCPv4-Snooping : Yes Verify MAC Address : Yes
Allow Overwrite Binding : No Enabled VLANs : 1-100
IP Binding Disabled VLANs :
Static Attributes : Yes
Client Event Logs : No

Option 82 Configurations

Untrusted Policy : replace Insertion : Yes
Option 82 Remote-id : mac

External Storage Information

Volume Name : ipbinding
File Name : ipv4Bindings
Inactive Since : 01:23:20 09/10/2021
Error : File Write Failure

Flash Storage Information

File Write Delay : 300 seconds
Active Storage : External

Authorized Server Configurations

VRF Authorized Servers

default 1.1.10.3
default 10.10.10.1
```

```

default 10.10.10.56
default 200.10.10.3
green 1.1.10.3
green 1.10.10.3
green 10.10.100.3
red 192.168.122.53
red 192.168.122.121

```

#### Port Information

| Port     | Trust | Max Bindings | Static Bindings | Dynamic Bindings |
|----------|-------|--------------|-----------------|------------------|
| -----    | ----- | -----        | -----           | -----            |
| 1/1/2    | Yes   | 5000         | 50              | 0                |
| 1/1/3    | Yes   | 8192         | 0               | 0                |
| 1/1/5    | Yes   | 8192         | 0               | 22               |
| 1/1/16   | No    | 100          | 0               | 0                |
| 10/10/10 | No    | 8100         | 320             | 200              |
| lag120   | No    | 512          | 0               | 0                |

## Command History

| Release          | Modification                                            |
|------------------|---------------------------------------------------------|
| 10.09.1000       | Command introduced for the 8360 Switch Series.          |
| 10.09            | Command introduced for the 6000 and 6100 Switch Series. |
| 10.08            | Updated example with flash storage information.         |
| 10.07 or earlier |                                                         |

## Command Information

| Platforms | Command context             | Authority                                                                                                                                                              |
|-----------|-----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 8360      | Operator (>) or Manager (#) | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

## show dhcpv4-snooping binding

show dhcpv4-snooping binding [vsx-peer][detail]

### Description

Shows the DHCPv4 snooping binding configuration.

| Parameter | Description                                                                                                                                                                                                                      |
|-----------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| vsx-peer  | Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX. |
| detail    | Shows detailed information for active IP bindings on the system.                                                                                                                                                                 |

## Examples

Showing the DHCPv4 snooping binding configuration:

```
switch(config)# show dhcpv4-snooping binding
```

| MacAddress        | IP       | VLAN | Interface | Time-Left |
|-------------------|----------|------|-----------|-----------|
| aa:b1:c1:dd:ee:ff | 10.2.3.4 | 1    | 1/1/2     | 582       |
| aa:b2:c2:dd:ee:ff | 10.2.3.5 | 1    | 1/1/2     | 584       |

Showing detailed information for active IP bindings:

```
switch(config)# show dhcpv4-snooping binding detail
```

VLAN Id : 2, MAC : 00:50:56:96:74:46

| IP          | Interface | Time-Left |
|-------------|-----------|-----------|
| 100.1.2.100 | 1/1/23    | 194       |

Static Attributes:  
Default Router : 100.1.2.1, 192.1.1.1, 1.1.1.2  
Server IP : 10.1.84.2  
Name Servers : 192.1.1.2, 2.2.2.2, 1.1.1.1

VLAN Id : 3, MAC : 00:50:56:96:e5:8e

| IP          | Interface | Time-Left |
|-------------|-----------|-----------|
| 100.1.3.100 | 2/1/22    | 145       |

Static Attributes:  
Default Router : 100.1.3.1, 192.1.1.1, 1.1.1.2  
Server IP : 10.1.84.2  
Name Servers : 192.1.1.2, 2.2.2.2, 1.1.1.1

VLAN Id : 3, MAC : 00:11:01:00:00:03

| IP         | Interface | Time-Left |
|------------|-----------|-----------|
| 100.1.3.99 | 2/1/24    | 137       |

Static Attributes:  
Default Router : 100.1.3.1, 192.1.1.1, 1.1.1.2  
Server IP : 10.1.84.2  
Name Servers : 192.168.0.1, 192.168.1.1, 192.168.2.1

## Command History

| Release    | Modification                                   |
|------------|------------------------------------------------|
| 10.10      | Detail parameter added.                        |
| 10.09.1000 | Command introduced for the 8360 Switch Series. |

| Release          | Modification                                            |
|------------------|---------------------------------------------------------|
| 10.09            | Command introduced for the 6000 and 6100 Switch Series. |
| 10.07 or earlier |                                                         |

## Command Information

| Platforms | Command context             | Authority                                                                                                                                                              |
|-----------|-----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 8360      | Operator (>) or Manager (#) | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

## show dhcpv4-snooping statistics

show dhcpv4-snooping statistics [vsx-peer]

### Description

Shows the DHCPv4 snooping statistics.

| Parameter | Description                                                                                                                                                                                                                      |
|-----------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| vsx-peer  | Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX. |

### Examples

Showing the DHCPv4 snooping statistics:

```
switch(config)# show dhcpv4-snooping statistics
```

| Packet-Type | Action  | Reason                        | Count |
|-------------|---------|-------------------------------|-------|
| server      | forward | from trusted port             | 5425  |
| client      | forward | to trusted port               | 3895  |
| server      | drop    | received on untrusted port    | 117   |
| server      | drop    | unauthorized server           | 214   |
| client      | drop    | destination on untrusted port | 78    |
| client      | drop    | untrusted option 82 field     | 85    |
| client      | drop    | bad DHCP release request      | 0     |
| client      | drop    | failed verify MAC check       | 5     |
| client      | drop    | failed on max-binding limit   | 15    |

### Command History

| Release          | Modification                                            |
|------------------|---------------------------------------------------------|
| 10.09.1000       | Command introduced for the 8360 Switch Series.          |
| 10.09            | Command introduced for the 6000 and 6100 Switch Series. |
| 10.07 or earlier |                                                         |

## Command Information

| Platforms | Command context             | Authority                                                                                                                                                              |
|-----------|-----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 8360      | Operator (>) or Manager (#) | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

## DHCPv6 snooping commands

### clear dhcpv6-snooping binding

```
clear dhcpv6-snooping binding {all | ip <IPV6-ADDR> vlan <VLAN-ID> | interface <IFNAME> |
vlan <VLAN-ID>}
```

#### Description

Clears DHCPv6 snooping binding entries.

| Parameter                     | Description                                                                                     |
|-------------------------------|-------------------------------------------------------------------------------------------------|
| all                           | Specifies that all DHCPv6 binding information is to be cleared.                                 |
| ip <IPV6-ADDR> vlan <VLAN-ID> | Specifies the IPv6 address and VLAN for which all DHCPv6 binding information is to be cleared.  |
| interface <IFNAME>            | Specifies the interface for which all DHCPv6 binding information is to be cleared.              |
| vlan <VLAN-ID>                | Specifies the VLAN for which all DHCPv6 binding information is to be cleared. Range: 1 to 4094. |

#### Examples

Clearing all DHCPv6 binding information for 5000::1 vlan 1:

```
switch(config)# clear dhcpv6-snooping binding ip 5000::1 vlan 1
```

Clearing all DHCPv6 binding information for interface 1/1/10:

```
switch(config)# clear dhcpv6-snooping binding interface 1/1/10
```

Clearing all DHCPv6 binding information for VLAN 10:

```
switch(config)# clear dhcpv6-snooping binding vlan 10
```

Clearing all DHCPv6 binding information:

```
switch(config)# clear dhcpv6-snooping binding all
```

#### Command History

| Release          | Modification                                            |
|------------------|---------------------------------------------------------|
| 10.09.1000       | Command introduced for the 8360 Switch Series.          |
| 10.09            | Command introduced for the 6000 and 6100 Switch Series. |
| 10.07 or earlier |                                                         |

## Command Information

| Platforms | Command context             | Authority                                                                                                                                                              |
|-----------|-----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 8360      | Operator (>) or Manager (#) | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

## clear dhcpv6-snooping guard-policy statistics

```
clear dhcpv6-snooping guard-policy statistics [vlan <VLAN-ID> | interface <INTERFACE-NAME>]
```

### Description

Clears all DHCPv6 snooping guard policy statistics from the specified VLAN or interface.

| Parameter        | Description                           |
|------------------|---------------------------------------|
| <VLAN-ID>        | Specifies the VLAN ID. Range: 1-4094. |
| <INTERFACE-NAME> | Specifies the interface name.         |

### Examples

Clearing all DHCPv6 snooping guard policy statistics from VLAN 100:

```
switch# clear dhcpv6-snooping guard-policy statistics vlan 100
```

Clearing all DHCPv6 snooping guard policy statistics from interface 1/1/10:

```
switch# clear dhcpv6-snooping guard-policy statistics interface 1/1/10
```

### Command History

| Release | Modification        |
|---------|---------------------|
| 10.10   | Command introduced. |

## Command Information

| Platforms | Command context             | Authority                                                                                                                                                              |
|-----------|-----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 8360      | Operator (>) or Manager (#) | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

## clear dhcpv6-snooping statistics

clear dhcpv6-snooping statistics

### Description

Clears all DHCPv6 snooping statistics.

### Examples

Clear all DHCPv6 snooping statistics:

```
switch# clear dhcpv6-snooping statistics
```

### Command History

| Release          | Modification                                            |
|------------------|---------------------------------------------------------|
| 10.09.1000       | Command introduced for the 8360 Switch Series.          |
| 10.09            | Command introduced for the 6000 and 6100 Switch Series. |
| 10.07 or earlier |                                                         |

### Command Information

| Platforms | Command context             | Authority                                                                                                                                                              |
|-----------|-----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 8360      | Operator (>) or Manager (#) | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

## dhcpv6-snooping

dhcpv6-snooping  
no dhcpv6-snooping

### Description

Enables DHCPv6 snooping. DHCPv6 snooping is disabled by default. DHCPv6 snooping is not supported on the management interface.

The no form of the command disables DHCPv6 snooping, flushing all the IP bindings learned since DHCPv6 snooping was enabled.

### Examples

Enabling DHCPv6 snooping:

```
switch(config)# dhcpv6-snooping
```



Disabling DHCPv6 snooping:

```
switch(config)# no dhcpv6-snooping
```

## Command History

| Release          | Modification                                            |
|------------------|---------------------------------------------------------|
| 10.09.1000       | Command introduced for the 8360 Switch Series.          |
| 10.09            | Command introduced for the 6000 and 6100 Switch Series. |
| 10.07 or earlier |                                                         |

## Command Information

| Platforms | Command context | Authority                                                                          |
|-----------|-----------------|------------------------------------------------------------------------------------|
| 8360      | config          | Administrators or local user group members with execution rights for this command. |

## dhcpv6-snooping (in config-vlan context)

dhcpv6-snooping  
no dhcpv6-snooping

### Description

Enables DHCPv6 snooping in the `config-vlan` context. DHCPv6 snooping is disabled by default for all VLANs.

The `no` form of the command disables DHCPv6 snooping on the specified VLAN, flushing all the IPv6 bindings learned for this VLAN since DHCPv6 snooping was enabled for this VLAN.

### Examples

Enabling DHCPv6 snooping on VLAN 100:

```
switch(config)# vlan 100
switch(config-vlan-100)# dhcpv6-snooping
switch(config-vlan-100)# exit
switch(config)#
```

Disabling DHCPv6 snooping on VLAN 100:

```
switch(config)# vlan 100
switch(config-vlan-100)# no dhcpv6-snooping
switch(config-vlan-100)# exit
switch(config)#
```

## Command History

| Release          | Modification                                            |
|------------------|---------------------------------------------------------|
| 10.09.1000       | Command introduced for the 8360 Switch Series.          |
| 10.09            | Command introduced for the 6000 and 6100 Switch Series. |
| 10.07 or earlier |                                                         |

## Command Information

| Platforms | Command context | Authority                                                                          |
|-----------|-----------------|------------------------------------------------------------------------------------|
| 8360      | config-vlan     | Administrators or local user group members with execution rights for this command. |

## dhcpv6-snooping authorized-server

```
dhcpv6-snooping authorized-server <IPv6-ADDR> [vrf <VRF-NAME>]
no dhcpv6-snooping authorized-server <IPv6-ADDR> [vrf <VRF-NAME>]
```

### Description

Adds an authorized (trusted) DHCPv6 server to a list of authorized servers for use by DHCPv6 snooping. This command can be issued multiple times, adding a maximum of 20 authorized servers per VRF. By default, with an empty list of authorized servers, all DHCPv6 servers are considered to be trusted for DHCPv6 snooping purposes.



The mgmt VRF cannot be used with this command.



Configure the link local IPv6 address instead of global IPv6 address of the DHCPv6 server as the authorized-server. For example:

```
switch(config)# dhcpv6-snooping authorized-server fe80::2ca4:fa40:d4cd:bc2f
```

The no form of this command deletes the specified DHCPv6 server from the authorized list.

| Parameter      | Description                                              |
|----------------|----------------------------------------------------------|
| <IPv6-ADDR>    | Specifies the IPv6 address of the trusted DHCPv6 server. |
| vrf <VRF-NAME> | Specifies the VRF name.                                  |

### Usage

For authorized server lookup, the VRF is derived from the Switch Virtual Interface (SVI) configured for the incoming VLAN. If the SVI is not configured, the default VRF is assumed.

### Examples

Adding DHCP servers ABCD:5ACD::2000, and ABCD:5ACD::2010 to the authorized server list:

```
switch(config)# dhcpv6-snooping authorized-server ABCD:5ACD::2000 vrf default
switch(config)# dhcpv6-snooping authorized-server ABCD:5ACD::2010 vrf default
```

Removing DHCP server ABCD:5ACD::2000 from the authorized server list:

```
switch(config)# no dhcpv6-snooping authorized-server ABCD:5ACD::2000 vrf default
```

## Command History

| Release    | Modification                                   |
|------------|------------------------------------------------|
| 10.09.1000 | Command introduced for the 8360 Switch Series. |

## Command Information

| Platforms | Command context | Authority                                                                          |
|-----------|-----------------|------------------------------------------------------------------------------------|
| 8360      | config          | Administrators or local user group members with execution rights for this command. |

## dhcpv6-snooping event-log client

```
dhcpv6-snooping event-log client
no dhcpv6-snooping event-log client
```

### Description

This command enables/disables DHCPv6 client level event logs that help with client telemetry on a remote management station such as Aruba Central. By default, client level event logs are disabled. The `no` form of this command disables client-level event logs for DHCPv6 snooping after they are enabled. View these logged DHCPv6 snooping events by issuing the command `show events -c dhcpv6-snooping`.

### Examples

Enabling DHCPv6 client level event logs:

```
switch(config)# # dhcpv6-snooping event-log client
```

Disabling external storage:

```
witch(config)# # no dhcpv6-snooping event-log client
```

## Command History

| Release | Modification        |
|---------|---------------------|
| 10.10   | Command introduced. |

## Command Information

| Platforms | Command context | Authority                                                                          |
|-----------|-----------------|------------------------------------------------------------------------------------|
| 8360      | config          | Administrators or local user group members with execution rights for this command. |

## dhcpv6-snooping external-storage

```
dhcpv6-snooping external-storage volume <VOL-NAME> file <FILE-NAME>
no dhcpv6-snooping external-storage volume <VOL-NAME> file <FILE-NAME>
```

### Description

Configures external storage to be used for backing up IPv6 bindings (used by DHCPv6 snooping) to a file. When configured, the switch stores all the IP bindings in an external storage file so that they are retained after the switch restarts. When the switch restarts, it reads the IPv6 bindings from the configured external storage file to populate its local cache.



When both external storage and flash storage are configured to store DHCP snooping IP bindings, the external storage takes priority, and is used exclusively until it becomes unconfigured, at which time flash storage (if configured) is used. Later, if external storage is configured again, flash storage stops and external storage resumes.

The no form of this command disables the saving of IPv6 bindings in an external storage file.

| Parameter         | Description                                                                                                                                                                                                                                                                                                                                                                          |
|-------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| volume <VOL-NAME> | Specifies the name of the existing external storage volume where the IPv6 bindings file will be saved. Before running the <code>dhcpv6-snooping external-storage volume</code> command, first create the external storage volume using command <code>external-storage &lt;VOLUME-NAME&gt;</code> . See <i>External storage commands</i> in the <i>Command-Line Interface Guide</i> . |
| file <FILE-NAME>  | Specifies the file name to use for storing IPv6 bindings. Maximum 255 characters.                                                                                                                                                                                                                                                                                                    |

### Examples

Configuring IPv6 bindings storage in file `ipv6Bindings` on existing volume `dhcp_snoop`:

```
switch(config)# dhcpv6-snooping external-storage volume dhcp_snoop file
ipv6Bindings
```

Disabling external storage:

```
switch(config)# no dhcpv6-snooping external-storage volume dhcp_snoop
```

Disabling external storage when flash storage is also configured (note the message indicating that flash storage will be used):

```
switch(config)# no dhcpv6-snooping external-storage volume dhcp_snoop
DHCPv6-Snooping will use flash storage to store IP Binding database
```

```
switch(config)#
```

## Command History

| Release          | Modification                                    |
|------------------|-------------------------------------------------|
| 10.08            | Updated example with flash storage information. |
| 10.07 or earlier | Command introduced                              |

## Command Information

| Platforms | Command context | Authority                                                                          |
|-----------|-----------------|------------------------------------------------------------------------------------|
| 8360      | config          | Administrators or local user group members with execution rights for this command. |

## dhcpv6-snooping flash-storage

```
dhcpv6-snooping flash-storage [delay <DELAY>]
no dhcpv6-snooping flash-storage [delay <DELAY>]
```

### Description

Configures switch flash storage to be used for backing up client IP bindings (used by DHCPv6 snooping). When flash storage is configured (and external storage is not already configured for this purpose), the switch stores the IP bindings in switch flash storage. When the switch restarts, it reads the IP bindings from the switch flash storage to populate its local cache.

Writing the IP bindings to flash storage only occurs after the configured delay and if there has been a change in client IP bindings. Writing is skipped when client IP bindings have not changed since the previous write.

Omitting `delay <DELAY>` sets the default delay of 900 seconds.



To reduce switch flash aging it is recommended that you use external storage (command `dhcpv6-snooping external-storage`) to backup DHCP snooping IP bindings. Alternatively, consider configuring flash storage with a substantial delay between writes.



When both external storage and flash storage are configured to store DHCP snooping IP bindings, the external storage takes priority, and is used exclusively until it becomes unconfigured, at which time flash storage (if configured) is used. Later, if external storage is configured again, flash storage stops and external storage resumes.

The `no` form of this command disables the saving of IP bindings in flash storage.

| Parameter                        | Description                                                                                                             |
|----------------------------------|-------------------------------------------------------------------------------------------------------------------------|
| <code>delay &lt;DELAY&gt;</code> | Specifies the delay in seconds between writes (when necessary) to the flash storage, Default: 900. Range: 300 to 86400. |

## Examples

Configuring switch flash storage for DHCP snooping IP binding storage with a write delay of 1200 seconds:

```
switch(config)# dhcpv6-snooping flash-storage delay 1200
Warning: Using flash storage reduces switch lifetime. It is recommended to use an
external-storage.
Do you want to continue (y/n)? y
switch(config)#
```

Unconfiguring usage of switch flash storage for IP bindings :

```
switch(config)# no dhcpv6-snooping flash-storage
```

## Command History

| Release    | Modification                                   |
|------------|------------------------------------------------|
| 10.09.1000 | Command introduced for the 8360 Switch Series. |

## Command Information

| Platforms | Command context | Authority                                                                          |
|-----------|-----------------|------------------------------------------------------------------------------------|
| 8360      | config          | Administrators or local user group members with execution rights for this command. |

## dhcpv6-snooping max-bindings

```
dhcpv6-snooping max-bindings <MAX-BINDINGS>
no dhcpv6-snooping max-bindings <MAX-BINDINGS>
```

### Description

Sets the maximum number of DHCPv6 bindings allowed on the selected interface. For all interfaces on which this command is not run, the default max binding is the maximum value of the range.

The no form of the command reverts max bindings for the selected interface to its default.

| Parameter      | Description                                                      |
|----------------|------------------------------------------------------------------|
| <MAX-BINDINGS> | Specifies the maximum number of DHCP bindings. Range: 0 to 2000. |

## Examples

Set the DHCPv6 max bindings to 256 on interface 1/1/1:

```
switch(config)# interface 1/1/1
switch(config-if)# dhcpv6-snooping max-bindings 256
switch(config-if)# exit
switch(config)#
```

Revert DHCPv6 max bindings to its default on interface 1/1/1:

```
switch(config)# interface 1/1/1
switch(config-if)# no dhcpv6-snooping max-bindings 256
switch(config-if)# exit
switch(config)#
```

## Command History

| Release    | Modification                                   |
|------------|------------------------------------------------|
| 10.09.1000 | Command introduced for the 8360 Switch Series. |

## Command Information

| Platforms | Command context | Authority                                                                          |
|-----------|-----------------|------------------------------------------------------------------------------------|
| 8360      | config-if       | Administrators or local user group members with execution rights for this command. |

## dhcpv6-snooping trust

dhcpv6-snooping trust  
no dhcpv6-snooping trust

### Description

Enables DHCPv6 snooping trust on the selected interface. Only server packets received on trusted interfaces are forwarded. All the interfaces are untrusted by default.

The no form of the command disables DHCPv6 snooping trust on the selected interface.

config-if

### Examples

Enabling DHCPv6 snooping trust on interface 2/2/1:

```
switch(config)# interface 2/2/1
switch(config-if)# dhcpv6-snooping trust
switch(config-if)# exit
switch(config)#
```

Disabling DHCPv6 snooping trust on interface 2/2/1:

```
switch(config)# interface 2/2/1
switch(config-if)# no dhcpv6-snooping trust
switch(config-if)# exit
switch(config)#
```

## Command History

| Release    | Modification                                   |
|------------|------------------------------------------------|
| 10.09.1000 | Command introduced for the 8360 Switch Series. |

## Command Information

| Platforms | Command context | Authority                                                                          |
|-----------|-----------------|------------------------------------------------------------------------------------|
| 8360      | config          | Administrators or local user group members with execution rights for this command. |

## dhcpv6-snooping tunnel vxlan trust

```
dhcpv6-snooping tunnel vxlan trust
no dhcpv4-snooping tunnel vxlan trust
```

### Description

Enables DHCPv6-snooping trust on all VxLAN tunnels.

The no form of the command marks all VxLAN tunnels as untrusted.

By default, all VxLAN tunnel interfaces are trusted. When trust is disabled on VxLAN tunnel interfaces:

- DHCP broadcast packets are not forwarded on VxLAN tunnels.
- DHCP server packets received on VxLAN tunnel interfaces are discarded.

### Examples

Enabling trust on all VxLAN tunnel interfaces:

```
switch(config)# dhcpv6-snooping tunnel vxlan trust
```

Disabling trust on all VxLAN tunnel interfaces:

```
switch(config)# no dhcpv6-snooping tunnel vxlan trust
```

## Command History

| Release     | Modification        |
|-------------|---------------------|
| 10.10 .1030 | Command introduced. |

## Command Information

| Platforms | Command context | Authority                                                                          |
|-----------|-----------------|------------------------------------------------------------------------------------|
| 8360      | config          | Administrators or local user group members with execution rights for this command. |

## match server access-list

```
match server access-list <ACL-NAME>
no match server access-list <ACL-NAME>
```

### Description

Configures an access list to a DHCPv6 snooping guard policy, enabling the DHCPv6 snooping guard policy to allow or deny the specific DHCP server to assign an IPv6 address. If no filters are applied, DHCP server traffic from any source IP address is allowed in the trusted port.



The `no` form of the command removes the specified access list from the DHCPv6 snooping guard policy.

| Parameter                     | Description                                               |
|-------------------------------|-----------------------------------------------------------|
| <code>&lt;ACL-NAME&gt;</code> | Specifies the name of the IPv6 access list to be matched. |

## Examples

Creating an access-list `acl1` on DHCPv6 snooping guard policy `pol1` :

```
switch(config)# dhcpv6-snooping guard-policy pol1
switch(config-dhcpv6-guard-policy)# match server access-list acl1
```

Deleting the access list `acl1` from the DHCPv6 snooping guard policy `pol1`:

```
switch(config)# dhcpv6-snooping guard-policy pol1
switch(config-dhcpv6-guard-policy)# no match server access-list acl1
```

## Command History

| Release | Modification        |
|---------|---------------------|
| 10.10   | Command introduced. |

## Command Information

| Platforms | Command context                         | Authority                                                                          |
|-----------|-----------------------------------------|------------------------------------------------------------------------------------|
| 8360      | <code>config-dhcpv6-guard-policy</code> | Administrators or local user group members with execution rights for this command. |

## match client prefix-list

```
match client prefix-list <PREFIX-LIST-NAME>
no match client prefix-list <PREFIX-LIST-NAME>
```

## Description

Configures a prefix-list for the DHCPv6 snooping guard policy enabling the policy to allow the assigned IPv6 addresses within a specific prefix range.

The `no` form of the command removes a prefix list from the DHCPv6 snooping guard policy.

| Parameter                             | Description                                 |
|---------------------------------------|---------------------------------------------|
| <code>&lt;PREFIX-LIST-NAME&gt;</code> | Specifies the name of the IPv6 prefix list. |

## Examples

Adding a prefix list named `pref1` to the `pol1` DHCPv6 snooping guard policy:

```
switch(config)# ipv6 prefix-list pref1 permit 2001:db8::/64 le 128
switch(config)# dhcpv6-snooping guard-policy pol1
switch(config-dhcpv6-guard-policy)# match client prefix-list
<ipv6-prefix-list-name> IPv6 prefix-list name
switch(config-dhcpv6-guard-policy)# match client prefix-list pref1
```

Deleting the prefix list named prf1 from the pol1 DHCPv6 snooping guard policy:

```
switch(config)# dhcpv6-snooping guard-policy pol1
switch(config-dhcpv6-guard-policy)# no match client prefix-list <ipv6-prefix-list-
name>
```

## Command History

| Release | Modification        |
|---------|---------------------|
| 10.10   | Command introduced. |

## Command Information

| Platforms | Command context            | Authority                                                                          |
|-----------|----------------------------|------------------------------------------------------------------------------------|
| 8360      | config-dhcpv6-guard-policy | Administrators or local user group members with execution rights for this command. |

## preference

```
preference [minimum | maximum] <VALUE>
no preference
```

## Description

Enables a DHCPv6 snooping guard policy to allow or deny the DHCPv6 servers in the specified server preference range. If not configured the minimum preference is set to 0 and maximum preference is set to 255.

The `no` form of the command removes the server preference limits on the specified DHCPv6 snooping guard policy.

| Parameter       | Description                                                                |
|-----------------|----------------------------------------------------------------------------|
| minimum <VALUE> | Specifies the minimum value for the server preference range. Range: 1-255. |
| maximum <VALUE> | Specifies the maximum value for the server preference range. Range: 1-255. |

## Examples

Setting the minimum and maximum server preference range to 6-250 on DHCPv6 snooping guard policy pol1:

```
switch(config)# dhcpv6-snooping guard-policy poll
switch(config-dhcpv6-guard-policy)# preference min 6
switch(config-dhcpv6-guard-policy)# preference max 250
```

Disabling the server preference range on DHCPv6 snooping guard policy pol1:

```
switch(config)# dhcpv6-snooping guard-policy poll
switch(config-dhcpv6-guard-policy)# no preference
```

## Command History

| Release | Modification        |
|---------|---------------------|
| 10.10   | Command introduced. |

## Command Information

| Platforms | Command context            | Authority                                                                          |
|-----------|----------------------------|------------------------------------------------------------------------------------|
| 8360      | config-dhcpv6-guard-policy | Administrators or local user group members with execution rights for this command. |

## show dhcpv6-snooping

show dhcpv6-snooping [vsx-peer]

### Description

Shows the DHCPv6 snooping configuration.

| Parameter | Description                                                                                                                                                                                                                      |
|-----------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| vsx-peer  | Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX. |

## Examples

Showing the DHCPv6 snooping configuration:

```
switch(config)# show dhcpv6-snooping

DHCPv6-Snooping Information

DHCPv6-Snooping : Yes Enabled VLANs : 1,5,7,100-110

External Storage Information

Volume Name : dhcp_snoop
File Name : ip_binding
Inactive Since : 01:23:20 09/10/2021
Error : Failed to write external storage
```

#### Flash Storage Information

File Write Delay : 300 seconds

Active Storage : External

#### Authorized Server Configurations

| VRF     | Authorized Servers                      |
|---------|-----------------------------------------|
| default | 2001:0db8:85a3:0000:0000:8a2e:0370:7334 |
| default | 2002::2                                 |
| default | 2004::1                                 |
| red     | 2002::1                                 |
| red     | 2002::2                                 |
| red     | 2002::9                                 |
| green   | 5000::1                                 |
| green   | 5000::2                                 |
| green   | 5000::3                                 |
| green   | 5000::7                                 |
| green   | 5000::8                                 |

#### Port Information

| Port     | Trust | Max Bindings | Static Bindings | Dynamic Bindings |
|----------|-------|--------------|-----------------|------------------|
| 1/1/2    | Yes   | 0            | 0               | 0                |
| 1/1/3    | Yes   | 0            | 3               | 0                |
| 1/1/5    | Yes   | 0            | 22              | 0                |
| 1/1/16   | No    | 256          | 0               | 20               |
| 10/10/10 | No    | 256          | 12              | 7                |
| lag120   | No    | 256          | 3               | 0                |

## Command History

| Release          | Modification                                    |
|------------------|-------------------------------------------------|
| 10.08            | Updated example with flash storage information. |
| 10.07 or earlier | Command introduced                              |

## Command Information

| Platforms | Command context             | Authority                                                                                                                                                              |
|-----------|-----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 8360      | Operator (>) or Manager (#) | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

## show dhcpv6-snooping binding

show dhcpv6-snooping binding [vsx-peer]

### Description

Shows the DHCPv6 snooping binding configuration.

| Parameter | Description                                                                                                                                                                                                                      |
|-----------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| vsx-peer  | Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX. |

## Examples

Showing the DHCPv6 snooping binding configuration:

```
switch# show dhcpv6-snooping binding
```

```
IP Binding Information
```

```
=====
```

| MAC-ADDRESS       | IPV6-ADDRESS                            | VLAN | INTERFACE |
|-------------------|-----------------------------------------|------|-----------|
| 00:50:56:96:e4:cf | aaaa:bbbb:cccc:dddd:eeee:1234:5678:abcd | 1    | 1/1/1     |
| 584               |                                         |      |           |
| 00:50:56:96:04:4d | 1000::3                                 | 134  | 1/1/2     |
| 435               |                                         |      |           |
| 00:50:56:96:d8:3d | 2000:1000::4                            | 2002 | lag123    |
| 21234             |                                         |      |           |

## Command History

| Release          | Modification                                            |
|------------------|---------------------------------------------------------|
| 10.09.1000       | Command introduced for the 8360 Switch Series.          |
| 10.09            | Command introduced for the 6000 and 6100 Switch Series. |
| 10.07 or earlier |                                                         |

## Command Information

| Platforms | Command context             | Authority                                                                                                                                                              |
|-----------|-----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 8360      | Operator (>) or Manager (#) | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

## dhcpv6-snooping guard-policy

```
dhcpv6-snooping guard-policy <POLICY-NAME>
```

```
no dhcpv6-snooping guard-policy <POLICY-NAME>
```

## Description

Configures a DHCPv6 snooping guard policy with the given name and enters the guard policy configuration context.

The no form of the command disables the specified guard policy.

| Parameter     | Description                                                                    |
|---------------|--------------------------------------------------------------------------------|
| <POLICY-NAME> | Specifies the name of the DHCPv6 snooping guard policy.<br>Maximum length: 64. |

## Examples

Creating the DHCPv6 snooping guard policy name pol1:

```
switch(config)# dhcpv6-snooping guard-policy pol1
switch(config-guard-policy-pol1)#
```

Deleting the DHCPv6 snooping guard policy named pol1:

```
switch(config)# no dhcpv6-snooping guard-policy pol1
```

Creating the DHCPv6 snooping guard policy name pol1 on interface 1/1/1:



The DHCPv6 snooping guard policy applied on the port takes priority over the policy applied over VLAN.

```
switch(config)# interface 1/1/1
switch(config-if)# dhcpv6-snooping guard-policy pol1
```

Creating the DHCPv6 snooping guard policy name pol1 on a VLAN:

```
switch(config)# vlan 100
switch(config-vlan-100)# dhcpv6-snooping guard-policy pol1
```

## Command History

| Release | Modification        |
|---------|---------------------|
| 10.10   | Command introduced. |

## Command Information

| Platforms | Command context                                                            | Authority                                                                          |
|-----------|----------------------------------------------------------------------------|------------------------------------------------------------------------------------|
| 8360      | config<br>config-if<br>config-dhcpv6-guard-policy<br>config-vlan-<VLAN-ID> | Administrators or local user group members with execution rights for this command. |

## show dhcpv6-snooping guard-policy

show dhcpv6-snooping guard-policy[<POLICY\_NAME>] [vsx-peer]

### Description

Shows the DHCPv6 snooping guard policy configuration.

| Parameter     | Description                                                                                                                                                                                                                      |
|---------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <POLICY-NAME> | Specifies the DHCPv6 snooping guard policy for which the information is displayed.                                                                                                                                               |
| vsx-peer      | Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX. |

## Examples

Showing the DHCPv6 snooping guard policy configuration:

```
switch# show dhcpv6-snooping guard-policy

DHCPv6-Snooping guard-policy Information

 DHCPV6 Guard Policy name : POL1
 Attached Access List : ACL1
 Attached Prefix List : PRF1
 Preference Range : 0-255
 Applied on VLAN : 5,7
 Applied on Port :

 DHCPV6 Guard Policy name : POL2
 Attached Access List : ACL2
 Attached Prefix List : PRF2
 Preference Range : 2-20
 Applied on VLAN :
 Applied on Port : 1/1/1, 1/1/2

 DHCPV6 Guard Policy name : POL3
 Attached Access List : ACL3
 Attached Prefix List : PRF3
 Preference Range : 3-60
 Applied on VLAN : 4,6
 Applied on Port :
```

Showing the DHCPv6 snooping guard policy configuration for the policy named POLICY\_NAME1:

```
switch# show dhcpv6-snooping guard-policy POLICY_NAME1

DHCPv6-Snooping guard-policy Information
=====
 DHCPV6 Guard Policy name : POLICY_NAME1
 Attached Access List : ACL1
 Attached Prefix List : PRF1
 Preference Range : 0-255
 vsx-sync
 Applied on VLAN : 5,7
 Applied on Port : 1/1/1, 1/1/2
```

## Command History

| Release | Modification        |
|---------|---------------------|
| 10.10   | Command introduced. |

## Command Information

| Platforms | Command context             | Authority                                                                                                                                                              |
|-----------|-----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 8360      | Operator (>) or Manager (#) | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

## show dhcpv6-snooping guard-policy interface

show dhcpv6-snooping guard-policy [*interface* <INTERFACE-NAME>] [*vsx-peer*]

### Description

Shows the DHCPv6 snooping guard policy configuration and statistics for the specified interface.

| Parameter        | Description                                                                                                                                                                                                                      |
|------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <INTERFACE-NAME> | Specifies the interface name for which the DHCPv6 guard counter information is displayed.                                                                                                                                        |
| vsx-peer         | Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX. |

### Examples

Showing the DHCPv6 snooping guard policy configuration and statistics for interface 1/1/1:

```
switch# show dhcpv6-snooping guard-policy int 1/1/1
DHCPv6 Guard Policy Applied : poll
DHCPv6 Guard Policy Counters
=====

DHCPv6 Packets Received : 20
DHCPv6 Packets Forwarded : 5
DHCPv6 Packets Dropped : 15 [Total]
Access list error [7]
Prefix list error [8]
Server preference error [0]
```

### Command History

| Release | Modification        |
|---------|---------------------|
| 10.10   | Command introduced. |

## Command Information

| Platforms | Command context             | Authority                                                                                                                                                              |
|-----------|-----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 8360      | Operator (>) or Manager (#) | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |



## show dhcpv6-snooping guard-policy vlan

show dhcpv6-snooping guard-policy [vlan <VLAN-ID>] [vsx-peer]

### Description

Shows the DHCPv6 snooping guard policy configuration and statistics for the specified VLAN.

| Parameter | Description                                                                                                                                                                                                                      |
|-----------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <VLAN-ID> | Specifies the VLAN ID for which the DHCPv6 guard counter information is displayed.                                                                                                                                               |
| vsx-peer  | Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX. |

### Examples

Showing the DHCPv6 snooping guard policy configuration and statistics for VLAN 100:

```
switch# show dhcpv6-snooping guard-policy vlan 2
DHCPv6 Guard Policy Applied : poll
DHCPv6 Guard Policy Counters
=====
DHCPv6 Packets Received : 20
DHCPv6 Packets Forwarded : 5
DHCPv6 Packets Dropped : 15 [Total]
 Access list error [0]
 Prefix list error [8]
 Server preference error [7]
```

### Command History

| Release | Modification        |
|---------|---------------------|
| 10.10   | Command introduced. |

### Command Information

| Platforms | Command context             | Authority                                                                                                                                                              |
|-----------|-----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 8360      | Operator (>) or Manager (#) | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

## show dhcpv6-snooping statistics

show dhcpv6-snooping statistics [vsx-peer]

### Description

Shows the DHCPv6 snooping statistics.

| Parameter | Description                                                                                                                                                                                                                      |
|-----------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| vsx-peer  | Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX. |

## Examples

Showing the DHCPv6 snooping statistics:

```
switch(config) # show dhcpv6-snooping statistics
```

| Packet-Type | Action  | Reason                        | Count |
|-------------|---------|-------------------------------|-------|
| server      | forward | from trusted port             | 12    |
| client      | forward | to trusted port               | 20    |
| server      | drop    | received on untrusted port    | 5     |
| server      | drop    | unauthorized server           | 4     |
| client      | drop    | destination on untrusted port | 2     |
| client      | drop    | bad DHCP release request      | 5     |
| server      | drop    | relay reply on untrusted port | 2     |
| client      | drop    | failed on max-binding limit   | 5     |

## Command History

| Release          | Modification                                            |
|------------------|---------------------------------------------------------|
| 10.09.1000       | Command introduced for the 8360 Switch Series.          |
| 10.09            | Command introduced for the 6000 and 6100 Switch Series. |
| 10.07 or earlier |                                                         |

## Command Information

| Platforms | Command context             | Authority                                                                                                                                                              |
|-----------|-----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 8360      | Operator (>) or Manager (#) | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |



---

ND snooping is not supported on the 8320 Switch Series.

---

## Overview (applies to the 8325, 9300, 10000 Switch Series)

ND (Neighbor Discovery) snooping is used in Layer 2 switching networks and prevents ND attacks. RA (Router Advertisement) guard is a sub-feature of ND snooping and manages RA and RR (Router Redirect) packets on configured VLANs. RA and RR packets received on trusted ports are allowed. RA and RR packets are dropped in the following cases:

- If the Ethernet source MAC address is mismatched with the address contained in the ICMPv6 Target link layer address field of the ND packet.
- If a packet is received on an untrusted port of a RA guard enabled VLAN.



---

On the 8325, 9300, and 10000 Switch Series, only the RA guard portion of ND snooping is supported. The following are not supported: RA guard policy, ND guard, RA drop.

---

## Overview (applies to the 8360 Switch Series)

ND snooping is used in Layer 2 switching networks and prevents ND attacks. ND snooping drops invalid ND packets, and together with DIPLDv6 (Dynamic IP Lockdown for IPv6), blocks data traffic from invalid hosts. ND snooping learns the source MAC addresses, source IPv6 addresses, input interfaces, and VLANs of incoming ND messages and data packets to build IP binding entries.



---

When DHCPv6 snooping and ND snooping are both enabled, and DHCPv6 clients request and IPv6 address, entries are added to the DHCPv6 snooping table and DHCPv6 snooping takes priority over ND snooping.

---

ND snooping drops ND packets as follows:

- If the Ethernet source MAC address is mismatched with the address contained in the ICMPv6 Target link layer address field of the ND packet.
- If the global IPv6 address in the source address field is mismatched with the ND snooping prefix filter table.
- If the global IPv6 address or the link-local IPv6 address in the source IP address field is mismatched with the ND snooping binding table.

ND snooping drops RA and RR packets on untrusted ports. To block only RA packets on VLANs with ND snooping enabled, use `nd-snooping ra-drop`. RA (Router Advertisement) drop is disabled by default on VLANs. When enabled (with `nd-snooping ra-drop`), ND snooping blocks RA packets on both trusted and untrusted ports. When RA drop is disabled, ND snooping allows RA packets on trusted ports and blocks them on untrusted ports.

When RA guard policy is enabled (with `ipv6 nd-snooping ra-guard policy`), RA packets received on trusted ports are validated against a set of parameters configured on the policy and assigned to a port or VLAN.



For more information on RA guard including RA guard policies, see this related video on the [Aruba AirHeads Broadcasting Channel](#).

Dynamic IPv6 lockdown is performed for ND snooping entries. Based on the DAD NS received from the hosts by the switch, ND snooping entries are programmed into the IP binding table and the hardware (as allowed). And ND Binding table entries are added when NA packets are received from hosts. Therefore, data packets from invalid hosts and transit traffic are blocked.



Statically-configured IP binding information supersedes any information collected dynamically by ND snooping for the same client.

## ND snooping commands

### clear nd-snooping binding

```
clear nd-snooping bindings {all | ipv6 <IPV6-ADDR> vlan <VLAN-ID> |
 port <PORT-NUM> | vlan <VLAN-ID>}
```

#### Description

Clears ND snooping binding entries.

#### Command context

| Parameter                     | Description                                                                                 |
|-------------------------------|---------------------------------------------------------------------------------------------|
| all                           | Specifies that all ND binding information is to be cleared.                                 |
| ip <IPV6-ADDR> vlan <VLAN-ID> | Specifies the IPv6 address and VLAN for which all ND binding information is to be cleared.  |
| port <PORT-NUM>               | Specifies the port (interface) for which all ND binding information is to be cleared.       |
| vlan <VLAN-ID>                | Specifies the VLAN for which all ND binding information is to be cleared. Range: 1 to 4094. |

#### Examples

Clearing all ND binding information for 5000::1 vlan 1:

```
switch(config)# clear nd-snooping bindings ipv6 5000::1 vlan 1
```

Clearing all ND binding information for port 1/1/10:

```
switch(config)# clear nd-snooping bindings port 1/1/10
```

Clearing all ND binding information for VLAN 10:

```
switch(config)# clear nd-snooping bindings vlan 10
```

Clearing all ND binding information:

```
switch(config)# clear nd-snooping bindings all
```

## Command History

| Release          | Modification                |
|------------------|-----------------------------|
| 10.10            | Added support for the 8360. |
| 10.07 or earlier | --                          |

## Command Information

| Platforms | Command context             | Authority                                                                                                                                                              |
|-----------|-----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 8360      | Operator (>) or Manager (#) | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

## clear nd-snooping ra-guard-policy statistics

```
clear nd-snooping ra-guard-policy statistics [vlan <VLAN-ID>][interface <IFNAME>]
```

### Description

Clear all RA Guard policy statistics from the specified interface or VLAN.

### Command context

| Parameter          | Description                                                      |
|--------------------|------------------------------------------------------------------|
| vlan <VLAN-ID>     | Clear all RA Guard policy information on the specified VLAN      |
| interface <IFNAME> | Clear all RA Guard policy information on the specified interface |

### Examples

Clear all RA Guard policy statistics for VLAN 10:

```
switch# clear nd-snooping ra-guard-policy statistics vlan 10
```

Clear all RA Guard policy statistics for interface 1/1/10

```
switch# clear nd-snooping ra-guard-policy statistics interface 1/1/10
```

## Command History

| Release | Modification        |
|---------|---------------------|
| 10.10   | Command introduced. |

## Command Information

| Platforms | Command context             | Authority                                                                                                                                                              |
|-----------|-----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 8360      | Operator (>) or Manager (#) | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

## clear nd-snooping statistics

`clear nd-snooping statistics`

### Description

Clears all ND snooping statistics.

### Examples

Clear all ND snooping statistics:

```
switch# clear nd-snooping statistics
```

## Command History

| Release          | Modification                                             |
|------------------|----------------------------------------------------------|
| 10.10            | Added support for the 8360.                              |
| 10.09            | Added support for the 8325. Added support for the 10000. |
| 10.07 or earlier | --                                                       |

## Command Information

| Platforms                     | Command context             | Authority                                                                                                                                                              |
|-------------------------------|-----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 8325<br>8360<br>9300<br>10000 | Operator (>) or Manager (#) | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

## nd-snooping

`nd-snooping {enable|disable}`  
`no nd-snooping {enable|disable}`

### Description

Enables or disables ND snooping. ND snooping is disabled by default. ND snooping is not supported on the management interface.

### Examples

Enabling ND snooping:

```
switch(config) # nd-snooping enable
```

Disabling ND snooping:

```
switch(config) # nd-snooping disable
```

## Command History

| Release          | Modification                                             |
|------------------|----------------------------------------------------------|
| 10.10            | Added support for the 8360.                              |
| 10.09            | Added support for the 8325. Added support for the 10000. |
| 10.07 or earlier | --                                                       |

## Command Information

| Platforms                     | Command context | Authority                                                                          |
|-------------------------------|-----------------|------------------------------------------------------------------------------------|
| 8325<br>8360<br>9300<br>10000 | config          | Administrators or local user group members with execution rights for this command. |

## nd-snooping (in config-vlan context)

nd-snooping  
no nd-snooping

### Description

Enables ND snooping in the `config-vlan` context. ND snooping is disabled by default for all VLANs. The `no` form of the command disables ND snooping on the specified VLAN.

### Examples

Enabling ND snooping on VLAN 100:

```
switch(config) # vlan 100
switch(config-vlan-100) # nd-snooping
switch(config-vlan-100) # exit
switch(config) #
```

Disabling ND snooping on VLAN 100:

```
switch(config) # vlan 100
switch(config-vlan-100) # no nd-snooping
switch(config-vlan-100) # exit
switch(config) #
```

## Command History

| Release          | Modification                                             |
|------------------|----------------------------------------------------------|
| 10.10            | Added support for the 8360.                              |
| 10.09            | Added support for the 8325. Added support for the 10000. |
| 10.07 or earlier | --                                                       |

## Command Information

| Platforms                     | Command context | Authority                                                                          |
|-------------------------------|-----------------|------------------------------------------------------------------------------------|
| 8325<br>8360<br>9300<br>10000 | config-vlan     | Administrators or local user group members with execution rights for this command. |

## nd-snooping mac-check

nd-snooping mac-check  
no nd-snooping mac-check

### Description

This command enables verification of the hardware address field in ND snooping packets. When enabled, the ICMPv6 target link layer address field and the source MAC address must be the same for packets received on untrusted ports or else the packets are dropped. This ND snooping MAC verification is enabled by default.

The no form of the command disables ND snooping MAC verification.

### Examples

Enabling ND snooping MAC verification:

```
switch(config)# nd-snooping mac-check
```

Disabling ND snooping MAC verification:

```
switch(config)# no nd-snooping mac-check
```

## Command History

| Release          | Modification                                             |
|------------------|----------------------------------------------------------|
| 10.10            | Added support for the 8360.                              |
| 10.09            | Added support for the 8325. Added support for the 10000. |
| 10.07 or earlier | --                                                       |

## Command Information



| Platforms                     | Command context | Authority                                                                          |
|-------------------------------|-----------------|------------------------------------------------------------------------------------|
| 8325<br>8360<br>9300<br>10000 | config          | Administrators or local user group members with execution rights for this command. |

## nd-snooping prefix-list

```
nd-snooping prefix-list <IPv6-ADDR>
no nd-snooping prefix-list <IPv6-ADDR>
```

### Description

Configures the ND snooping prefix list for the selected VLAN and the specified IPv6 address prefix. ND snooping must be enabled both globally and on this VLAN before this prefix list configuration takes effect.

The no form of this command removes the prefix list configuration for the selected VLAN and IPv6 address.

| Parameter   | Description                 |
|-------------|-----------------------------|
| <IPv6-ADDR> | Specifies the IPv6 address. |

### Examples

Configuring ND snooping prefix-list on VLAN 1:

```
switch(config)# vlan 1
switch(config-vlan-1)# nd-snooping prefix-list 2001::1/64
switch(config-vlan-1)# exit
switch(config)#
```

Remove configuration of ND snooping prefix-list on VLAN 100:

```
switch(config)# vlan 1
switch(config-vlan-1)# no nd-snooping prefix-list 2001::1/64
switch(config-vlan-1)# exit
switch(config)#
```

### Command History

| Release          | Modification                |
|------------------|-----------------------------|
| 10.10            | Added support for the 8360. |
| 10.07 or earlier | --                          |

### Command Information

| Platforms | Command context       | Authority                                                                                                                                                              |
|-----------|-----------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 8360      | config-vlan-<VLAN-ID> | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

## nd-snooping max-bindings

```
nd-snooping max-bindings <MAX-BINDINGS>
no nd-snooping max-bindings
```

### Description

Sets the maximum number of ND bindings allowed on the selected interface. For all interfaces on which this command is not run, the default max bindings applies.

The no form of the command reverts max bindings for the selected interface to its default.

| Parameter      | Description                                                                                                                                           |
|----------------|-------------------------------------------------------------------------------------------------------------------------------------------------------|
| <MAX-BINDINGS> | Specifies the maximum number of ND bindings. You can use the <code>show capacities</code> command to see the maximum available for your switch model. |

### Examples

Set the ND max bindings to 768 on interface 2/2/1:

```
switch(config)# interface 2/2/1
switch(config-if)# nd-snooping max-bindings 768
switch(config-if)# exit
switch(config)#
```

Revert ND max bindings to its default on interface 2/2/1:

```
switch(config)# interface 2/2/1
switch(config-if)# no nd-snooping max-bindings
switch(config-if)# exit
switch(config)#
```

### Command History

| Release          | Modification                |
|------------------|-----------------------------|
| 10.10            | Added support for the 8360. |
| 10.07 or earlier | --                          |

### Command Information

| Platforms | Command context | Authority                                                                          |
|-----------|-----------------|------------------------------------------------------------------------------------|
| 8360      | config-if       | Administrators or local user group members with execution rights for this command. |

## nd-snooping nd-guard

```
nd-snooping nd-guard
no nd-snooping nd-guard
```

### Description

This command enables ND guard on the selected VLAN.

The no form of the command disables ND guard and deletes all the IPv6 bindings learned on the VLAN.



---

ND snooping must be enabled in both the global context and the config-vlan context before this command can be used.

---

### Examples

Enabling ND snooping ND guard on VLAN 100:

```
switch(config) # nd-snooping enable
switch(config) # vlan 100
switch(config-vlan-100) # nd-snooping nd-guard
switch(config-vlan-100) # exit
switch(config) #
```

Disabling ND snooping ND guard on VLAN 100:

```
switch(config) # vlan 100
switch(config-vlan-100) # no nd-snooping nd-guard
switch(config-vlan-100) # exit
switch(config) #
```

### Command History

| Release          | Modification                |
|------------------|-----------------------------|
| 10.10            | Added support for the 8360. |
| 10.07 or earlier | --                          |

### Command Information

| Platforms | Command context | Authority                                                                          |
|-----------|-----------------|------------------------------------------------------------------------------------|
| 8360      | config-vlan     | Administrators or local user group members with execution rights for this command. |

## nd-snooping ra-guard

```
nd-snooping ra-guard [log]
no nd-snooping ra-guard
```

### Description

This command enables Routing Advertisement (RA) guard on the selected VLAN. When enabled, ingress Routing Advertisement (RA) and Routing Redirect (RR) packets on the selected VLAN are blocked on untrusted ports. The packets are forwarded when received on trusted ports.

The no form of the command disables RA guard on the VLAN.



ND snooping must be enabled in both the global context and the config-vlan context before this command can be used.

| Parameter | Description                                  |
|-----------|----------------------------------------------|
| [log]     | Logs messages along with drop functionality. |

## Examples

Enabling ND snooping RA guard on VLAN 100:

```
switch(config)# nd-snooping enable
switch(config)# vlan 100
switch(config-vlan-100)# nd-snooping ra-guard
switch(config-vlan-100)# exit
switch(config)#
```

Enabling ND snooping RA guard on VLAN 100 with event logging on dropped packets:

```
switch(config)# nd-snooping enable
switch(config)# vlan 100
switch(config-vlan-100)# nd-snooping ra-guard log
switch(config-vlan-100)# exit
switch(config)#
```

Disabling ND snooping RA guard on VLAN 100:

```
switch(config)# vlan 100
switch(config-vlan-100)# no nd-snooping ra-guard
switch(config-vlan-100)# exit
switch(config)#
```

## Command History

| Release          | Modification                                             |
|------------------|----------------------------------------------------------|
| 10.10            | Added support for the 8360.                              |
| 10.09            | Added support for the 8325. Added support for the 10000. |
| 10.07 or earlier | --                                                       |

## Command Information

| Platforms                     | Command context       | Authority                                                                          |
|-------------------------------|-----------------------|------------------------------------------------------------------------------------|
| 8325<br>8360<br>9300<br>10000 | config-vlan-<VLAN-ID> | Administrators or local user group members with execution rights for this command. |

## nd-snooping ra-drop

```
nd-snooping ra-drop
no nd-snooping ra-drop
```

### Description

This command enables Routing Advertisement (RA) drop on the selected VLAN. When enabled, ingress RA packets on the selected VLAN are blocked on both trusted and untrusted ports. When disabled, RA packets are forwarded on the selected VLAN with ND snooping trusted port validation. RA drop is disabled by default.



---

ND snooping must be enabled in both the config context and the config-vlan context before this command can be used.

---

The no form of the command disables ND snooping RA drop on the selected VLAN.

### Examples

Enabling ND snooping RA drop on VLAN 100:

```
switch(config)# nd-snooping enable vlan 100
switch(config-vlan-100)# nd-snooping ra-drop
switch(config-vlan-100)# exit
switch(config)#
```

Disabling ND snooping RA drop on VLAN 100:

```
switch(config)# vlan 100
switch(config-vlan-100)# no nd-snooping ra-drop
switch(config-vlan-100)# exit
switch(config)#
```

### Command History

| Release          | Modification                |
|------------------|-----------------------------|
| 10.10            | Added support for the 8360. |
| 10.07 or earlier | --                          |

### Command Information

| Platforms | Command context                     | Authority                                                                          |
|-----------|-------------------------------------|------------------------------------------------------------------------------------|
| 8360      | config-vlan- <i>&lt;VLAN-ID&gt;</i> | Administrators or local user group members with execution rights for this command. |

## nd-snooping trust

```
nd-snooping trust
no nd-snooping trust
```

### Description

Enables ND snooping trust on the selected interface (port) allowing RA and RR packets to be received. RA and RR packets received on untrusted ports are discarded, all ports are untrusted by default. The no form of the command disables ND snooping trust on the selected port.

## Examples

Enabling ND snooping trust on interface 2/2/1:

```
switch(config)# interface 2/2/1
switch(config-if)# nd-snooping trust
switch(config-if)# exit
switch(config)#
```

Disabling ND snooping trust on interface 2/2/1:

```
switch(config)# interface 2/2/1
switch(config-if)# no nd-snooping trust
switch(config-if)# exit
switch(config)#
```

## Command History

| Release          | Modification                                             |
|------------------|----------------------------------------------------------|
| 10.10            | Added support for the 8360.                              |
| 10.09            | Added support for the 8325. Added support for the 10000. |
| 10.07 or earlier | --                                                       |

## Command Information

| Platforms                     | Command context | Authority                                                                          |
|-------------------------------|-----------------|------------------------------------------------------------------------------------|
| 8325<br>8360<br>9300<br>10000 | config-if       | Administrators or local user group members with execution rights for this command. |

## show nd-snooping

```
show nd-snooping [vlan <VLAN-ID>] [vsx-peer]
```

## Description

Shows either all ND snooping configuration or the configuration for the specified VLAN.

| Parameter      | Description                                                                         |
|----------------|-------------------------------------------------------------------------------------|
| vlan <VLAN-ID> | Specifies the VLAN for which the ND configuration is to be shown. Range: 1 to 4094. |
| vsx-peer       | Shows the output from the VSX peer switch. If the switches do not                   |

## Parameter

## Description

have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

## Examples

(Applies to the 6200, 6300, 6400 and 8360.) Showing all ND snooping configuration:

```
switch(config)# show nd-snooping

ND Snooping Information
=====

ND Snooping : Enabled
ND Snooping Enabled VLANs : 10
Trusted Port Bindings Enabled VLANs : 10
ND Guard Enabled VLANs : 10
RA Guard Enabled VLANs : 10
RA Drop Enabled VLANs :
MAC Address Check : Disabled

PORT TRUST MAX-BINDINGS CURRENT-BINDINGS

1/1/1 Yes
1/1/2 Yes
1/1/3 No 100 10
1/1/4 No 200 10
1/1/5 No 300 10
```

(Applies to the 6200, 6300, 6400, 8360.) Showing ND snooping configuration for VLAN 2:

```
switch(config)# show nd-snooping vlan 2

ND Snooping Information
=====

ND Snooping : Enabled
MAC Address Check : Disabled
Trusted Port Bindings : Enabled
ND Guard : Enabled
RA Guard : Disabled
RA Drop : Disabled

PORT TRUST MAX-BINDINGS CURRENT-BINDINGS

1/1/1 Yes
1/1/2 Yes
1/1/3 No 100 10
```

(Applies to the 8325, 9300, 10000.) Showing all ND snooping configuration:

```
switch(config)# show nd-snooping

ND Snooping Information
=====
```

```

ND Snooping : Enabled
ND Snooping Enabled VLANs : 10
RA Guard Enabled VLANs : 10
MAC Address Check : Disabled

```

```

PORT TRUST

1/1/1 Yes
1/1/2 Yes
1/1/3 No
1/1/4 No
1/1/5 No

```

(Applies to the 8325, 9300, 10000.) Showing ND snooping configuration for VLAN 2:

```
switch(config)# show nd-snooping vlan 2
```

```

ND Snooping Information
=====

```

```

ND Snooping : Enabled
MAC Address Check : Disabled
RA Guard : Disabled

```

```

PORT TRUST

1/1/1 Yes
1/1/2 Yes
1/1/3 No

```

## Command History

| Release          | Modification                                             |
|------------------|----------------------------------------------------------|
| 10.10            | Added support for the 8360.                              |
| 10.09            | Added support for the 8325. Added support for the 10000. |
| 10.07 or earlier | --                                                       |

## Command Information

| Platforms                     | Command context             | Authority                                                                                                                                                              |
|-------------------------------|-----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 8325<br>8360<br>9300<br>10000 | Operator (>) or Manager (#) | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

## show nd-snooping bindings

```
show nd-snooping bindings [vsx-peer]
```

### Description

Shows the ND snooping binding configuration.



| Parameter | Description                                                                                                                                                                                                                      |
|-----------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| vsx-peer  | Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX. |

## Examples

Showing the ND snooping binding configuration:

```
switch# show nd-snooping bindings
```

| PORT<br>LEFT STATE | IPV6-ADDRESS                            | MAC-ADDRESS       | VLAN | TIME- |
|--------------------|-----------------------------------------|-------------------|------|-------|
| 1/1/1<br>Valid     | 2001::1                                 | 00:00:0A:01:02:03 | 1    | 600   |
| 1/1/2<br>Tentative | fe80::250:56ff:fe9a:143c                | 00:00:0B:01:02:03 | 2    | -     |
| 1/1/3<br>Testing   | 2001:1111:2222:3333:4444:5555:6666:7777 | 00:00:0C:01:02:03 | 4094 | -     |

## Command History

| Release          | Modification                |
|------------------|-----------------------------|
| 10.10            | Added support for the 8360. |
| 10.07 or earlier | --                          |

## Command Information

| Platforms | Command context             | Authority                                                                                                                                                              |
|-----------|-----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 8360      | Operator (>) or Manager (#) | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

## show nd-snooping prefix-list

```
show nd-snooping prefix-list [vsx-peer]
```

### Description

Shows the ND snooping prefix list information.

| Parameter | Description                                                                                                                                                                                                                      |
|-----------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| vsx-peer  | Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX. |

## Examples

Showing the ND snooping prefix list information:

```
switch# show nd-snooping prefix-list
```

| VLAN | IPV6-ADDRESS-PREFIX | SOURCE  |
|------|---------------------|---------|
| 1    | 2001::/64           | Static  |
| 4094 | 3001::/64           | Dynamic |

## Command History

| Release          | Modification                                             |
|------------------|----------------------------------------------------------|
| 10.10            | Added support for the 8360.                              |
| 10.09            | Added support for the 8325. Added support for the 10000. |
| 10.07 or earlier | --                                                       |

## Command Information

| Platforms                     | Command context             | Authority                                                                                                                                                              |
|-------------------------------|-----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 8325<br>8360<br>9300<br>10000 | Operator (>) or Manager (#) | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

## show nd-snooping statistics

```
show nd-snooping statistics [vsx-peer]
```

### Description

Shows the global ND snooping statistics.

| Parameter | Description                                                                                                                                                                                                                      |
|-----------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| vsx-peer  | Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX. |

### Examples

(Applies to the 6200, 6300, 6400, 8360.) Showing global ND snooping statistics:

```
switch(config)# show nd-snooping statistics
```

| PACKET-TYPE | ACTION  | REASON                                | COUNT |
|-------------|---------|---------------------------------------|-------|
| RA          | forward | RA packets received on trusted port   | 20    |
| RA          | drop    | RA packets received on untrusted port | 45    |
| NS          | forward | NS packets received on trusted port   | 52    |

|    |         |                                                 |    |
|----|---------|-------------------------------------------------|----|
| NS | forward | NS packets received on untrusted port           | 95 |
| NS | drop    | NS packets failed MAC check                     | 14 |
| NS | drop    | NS packets failed Prefix check                  | 12 |
| NS | drop    | NS packets failed on max-binding limit          | 0  |
| NS | drop    | NS packets failed ND snooping validation checks | 20 |
| NA | forward | NA packets received on trusted port             | 17 |
| NA | forward | NA packets received on untrusted port           | 30 |
| NA | drop    | NA packets failed Prefix check                  | 15 |
| NA | drop    | NA packets failed on max-binding limit          | 2  |
| NA | drop    | NA packets failed ND snooping validation checks | 5  |

(Applies to the 8325, 9300, 10000.) Showing global ND snooping statistics:

```
switch(config) # show nd-snooping statistics
```

| PACKET-TYPE | ACTION  | REASON                                | COUNT |
|-------------|---------|---------------------------------------|-------|
| RA          | forward | RA packets received on trusted port   | 20    |
| RA          | drop    | RA packets received on untrusted port | 45    |
| RR          | forward | RR packets received on trusted port   | 20    |
| RR          | drop    | RR packets received on untrusted port | 45    |

## Command History

| Release          | Modification                                             |
|------------------|----------------------------------------------------------|
| 10.10            | Added support for the 8360.                              |
| 10.09            | Added support for the 8325. Added support for the 10000. |
| 10.07 or earlier | --                                                       |

## Command Information

| Platforms                     | Command context             | Authority                                                                                                                                                              |
|-------------------------------|-----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 8325<br>8360<br>9300<br>10000 | Operator (>) or Manager (#) | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

# RA guard policy commands

## hop limit

```
hop limit [minimum | maximum] <HOP-LIMIT>
no hop limit [minimum | maximum] <HOP-LIMIT>
```

## Description

Enables verification of the advertised hop count limit if the RA guard policy is applied on a VLAN or interface. RA packets with the hop limit within the specified minimum and maximum values are processed. If none of the values are specified for hop limit, the default range is 1-255. If hop limit is not enabled, packets are not validated for hop limit.

The `no` form of the command disables the hop limit on the specified RA guard policy.



ND snooping must be enabled in both the global context and the config-vlan context before this command can be used.

| Parameter                      | Description                                                                                                                                     |
|--------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>&lt;HOP-LIMIT&gt;</code> | Specifies the hop-limit value. Range: 1-255.                                                                                                    |
| <code>minimum</code>           | Specifies the minimum value for the hop-limit range. Default: 1, Range 1-255.<br>The range is minimum–255 if only a minimum value is specified. |
| <code>maximum</code>           | Specifies the maximum value for the hop-limit range. Default: 255, Range 1-255.<br>The range is 1–maximum if only a maximum value is specified. |

## Examples

Enabling the hop limit on the RA guard policy and adding minimum and maximum values for hop limit on the policy:

```
switch(config)# ipv6 nd-snooping ra-guard policy <POLICY-NAME>
switch(config-raguard-policy)# hop-limit enable
switch(config-raguard-policy)# hop-limit maximum 150
switch(config-raguard-policy)# hop-limit minimum 50
```

Disabling the hop limit on the RA guard policy:

```
switch(config)# ipv6 nd-snooping ra-guard policy <POLICY-NAME>
switch(config-raguard-policy)# no hop-limit enable
```

Removing minimum and maximum values for the hop limit on the RA guard policy:

```
switch(config)# ipv6 nd-snooping ra-guard policy <POLICY-NAME>
switch(config-raguard-policy)# no hop-limit maximum 150
switch(config-raguard-policy)# no hop-limit minimum 50
switch(config-raguard-policy)# no hop-limit maximum
switch(config-raguard-policy)# no hop-limit minimum
```

## Command History

| Release | Modification        |
|---------|---------------------|
| 10.10   | Command introduced. |

## Command Information

| Platforms | Command context       | Authority                                                                          |
|-----------|-----------------------|------------------------------------------------------------------------------------|
| 8360      | config-raguard-policy | Administrators or local user group members with execution rights for this command. |

## ipv6 nd-snooping ra-guard policy

```
ipv6 nd-snooping ra-guard policy <POLICY-NAME>
no ipv6 nd-snooping ra-guard policy <POLICY-NAME>
```

### Description

Creates the Router Advertisement (RA) guard policy with the given name and enters the RA guard policy configuration context.

The **no** form of the command removes the specified RA guard policy from the switch.



ND snooping must be enabled in both the global context and the config-vlan context before this command can be used.

| Parameter     | Description                                                    |
|---------------|----------------------------------------------------------------|
| <POLICY-NAME> | Specifies the name of the RA guard policy. Maximum length: 64. |

### Examples

Creating the RA guard policy globally with a specified name:

```
switch(config)# ipv6 nd-snooping ra-guard policy <POLICY-NAME>
switch(config-ra-guard-policy)#
```

Deleting the specified RA guard policy:

```
switch(config)# no ipv6 nd-snooping ra-guard policy <POLICY-NAME>
```

### Command History

| Release | Modification        |
|---------|---------------------|
| 10.10   | Command introduced. |

### Command Information

| Platforms | Command context | Authority                                                                          |
|-----------|-----------------|------------------------------------------------------------------------------------|
| 8360      | config          | Administrators or local user group members with execution rights for this command. |

## managed-config-flag

```
managed-config-flag [on | off]
no managed-config-flag [on | off]
```

### Description

Enables the verification of the advertised manage configuration flag. Verifies that the advertised managed address configuration flag is On or Off based on the configured value.

The **no** form of the command disables the manage configuration flag verification.



ND snooping must be enabled in both the global context and the config-vlan context before this command can be used.

| Parameter | Description                                                             |
|-----------|-------------------------------------------------------------------------|
| on        | Verifies that the advertised managed address configuration flag is On.  |
| off       | Verifies that the advertised managed address configuration flag is Off. |

## Examples

Enabling managed configuration flag verification:

```
switch(config)# ipv6 nd-snooping ra-guard policy <POLICY-NAME>
switch(config-ra-guard-policy)# managed-config-flag off
switch(config-ra-guard-policy)# managed-config-flag on
```

Disabling managed configuration flag verification:

```
switch(config)# ipv6 nd-snooping ra-guard policy <POLICY-NAME>
switch(config-ra-guard-policy)# no managed-config-flag
switch(config-ra-guard-policy)# no managed-config-flag off
switch(config-ra-guard-policy)# no managed-config-flag on
```

## Command History

| Release | Modification        |
|---------|---------------------|
| 10.10   | Command introduced. |

## Command Information

| Platforms | Command context        | Authority                                                                          |
|-----------|------------------------|------------------------------------------------------------------------------------|
| 8360      | config-ra-guard-policy | Administrators or local user group members with execution rights for this command. |

## match access-list

```
match access-list <ACL-NAME>
no match access-list <ACL-NAME>
```

## Description

Configures the access list to an RA guard policy. The access list has to be created with the desired match criteria before adding it into RA guard policy. Advertised packets are verified for the match criteria when an RA guard policy with matched access list is enabled on a trusted port or VLANs.

The **no** form of the command removes the access list from the RA guard policy.



ND snooping must be enabled in both the global context and the config-vlan context before this command can be used.

| Parameter                     | Description                                          |
|-------------------------------|------------------------------------------------------|
| <code>&lt;ACL-NAME&gt;</code> | Specifies the name of the access list to be matched. |

## Examples

Adding an access list named Example\_ACL to the RA guard policy POL1:

```
switch(config)# ipv6 nd-snooping ra-guard policy POL1
switch(config-raguard-policy)# match access-list Example_ACL
```

Deleting the access list named Example\_ACL from the RA guard policy POL1:

```
switch(config)# ipv6 nd-snooping ra-guard policy POL1
switch(config-raguard-policy)# no match access-list Example_ACL
```

## Command History

| Release | Modification        |
|---------|---------------------|
| 10.10   | Command introduced. |

## Command Information

| Platforms | Command context       | Authority                                                                          |
|-----------|-----------------------|------------------------------------------------------------------------------------|
| 8360      | config-raguard-policy | Administrators or local user group members with execution rights for this command. |

## match prefix-list

```
match prefix-list <PREFIX-LIST-NAME>
no match prefix-list <PREFIX-LIST-NAME>
```

### Description

Configures a prefix-list for the RA guard policy. Advertised prefixes in RA packets are compared against the configured prefix-list and if there is no match, the RA packets are dropped. If the RA prefix list is not configured, this check is not performed.

The `no` form of the command removes the prefix list from the RA guard policy.



ND snooping must be enabled in both the global context and the config-vlan context before this command can be used.

| Parameter                             | Description                                          |
|---------------------------------------|------------------------------------------------------|
| <code>&lt;PREFIX-LIST-NAME&gt;</code> | Specifies the name of the prefix list to be matched. |

## Examples

Adding a prefix list named PREFIX\_LIST\_EXAMPLE to the POLICY1 RA guard policy:

```
switch(config)# ipv6 nd-snooping ra-guard policy POLICY1
switch(config-ra-guard-policy)# match prefix-list PREFIX_LIST_EXAMPLE
```

Deleting the prefix list named PREFIX\_LIST\_EXAMPLE from the POLICY1 RA guard policy:

```
switch(config)# ipv6 nd-snooping ra-guard policy POLICY1
switch(config-ra-guard-policy)# no match pefix-list PREFIX_LIST_EXAMPLE
```

## Command History

| Release | Modification        |
|---------|---------------------|
| 10.10   | Command introduced. |

## Command Information

| Platforms | Command context        | Authority                                                                          |
|-----------|------------------------|------------------------------------------------------------------------------------|
| 8360      | config-ra-guard-policy | Administrators or local user group members with execution rights for this command. |

## nd-snooping ra-guard attach-policy

```
nd-snooping ra-guard attach-policy <POLICY-NAME>
no nd-snooping ra-guard attach-policy <POLICY-NAME>
```

## Description

Applies the created RA guard policy to a specific L2 port or VLAN.

The `no` form of the command detaches the specified RA guard policy from the L2 port or VLAN.

| Parameter                        | Description                                |
|----------------------------------|--------------------------------------------|
| <code>&lt;POLICY-NAME&gt;</code> | Specifies the name of the RA guard policy. |

## Usage

In the interface configuration (config-if) context:

- RA guard must be enabled on member VLANs of the port for which RA packets need to be inspected using the policy.

In the interface configuration (config-if) and VLAN configuration (config-vlan) contexts:



- RA packets received on untrusted ports are dropped without any inspection.
- RA packets received on trusted ports are validated against the policy.
- The applied policy takes effect only if ND snooping is enabled globally and both ND snooping and RA guard are enabled under the VLAN context.

Policy precedence between VLAN and port:

- If the policy is attached to both VLAN and port, the port policy takes precedence over the VLAN policy.
- Only one policy can be attached per VLAN or port.
- If the port belongs to a different VLAN (for example, in the case of a trunk port) the tagged VLAN takes priority. If the packets are untagged, the native VLAN policy takes precedence.

## Examples

Attaching the RA guard policy to an L2 port:

```
switch(config)# interface 1/1/10
switch(config-if)# nd-snooping ra-guard attach-policy POLICY_NAME
```

Attempting to attach the RA guard policy to a port where routing is enabled, the policy is not configured, or it is an untrusted port:

(When prompted, enter "Y" to create the policy and attach it to the interface. )

```
switch(config)# interface 1/1/10
switch(config-if)# nd-snooping ra-guard attach-policy POLICY_NAME
RA Guard policy can't be attached to an interface with routing enabled.

switch(config-if)# no routing
switch(config-if)# nd-snooping trust
switch(config-if)# nd-snooping ra-guard attach-policy POLICY_NAME
switch(config-if)#6300 (config-if)# nd-snooping ra-guard attach-policy POLICY_NOT_
CREATED
RA guard policy does not exist.
Do you want to create (y/n)?

switch(config)# interface 1/1/10
switch(config-if)# nd-snooping ra-guard attach-policy AA
RA Guard policy is ineffective, as 1/1/10 is configured as untrusted port.
```

Attaching the RA guard policy to a VLAN:

```
switch(config)# vlan 10
switch(config-vlan-10)# nd-snooping ra-guard attach-policy POLICY_NAME
```

Detaching the RA guard policy:

```
switch(config)# interface 1/1/10
switch(config-if)# no nd-snooping ra-guard attach-policy POLICY_NAME
```

Attempting to detach a RA guard policy which is not applied on the port or VLAN:

```
switch(config)# interface 1/1/10
switch(config-if)# no nd-snooping ra-guard attach-policy POLICY_NAME
RA Guard Policy POLICY_NAME is not applied on this port.
```

Attempting to detach a non-existent RA guard policy:

```
switch(config-if)# no nd-snooping ra-guard attach-policy POLICY_NOT_CREATED
Could not find the policy POLICY_NOT_CREATED.
```

## Command History

| Release | Modification        |
|---------|---------------------|
| 10.10   | Command introduced. |

## Command Information

| Platforms | Command context                    | Authority                                                                          |
|-----------|------------------------------------|------------------------------------------------------------------------------------|
| 8360      | config-if<br>config-vlan-<VLAN-ID> | Administrators or local user group members with execution rights for this command. |

## other-config-flag

```
other-config-flag [on | off]
no other-config-flag [on | off]
```

### Description

Enables the verification of the advertised other configuration flag. Verifies that the advertised Other Stateful Configuration flag is On or Off based on the configured value.

The `no` form of the command disables other configuration flag verification.



ND snooping must be enabled in both the global context and the config-vlan context before this command can be used.

| Parameter | Description                                                            |
|-----------|------------------------------------------------------------------------|
| on        | Verifies that the advertised Other Stateful Configuration flag is On.  |
| off       | Verifies that the advertised Other Stateful Configuration flag is Off. |

## Examples

Enabling other configuration flag verification:

```
switch(config)# ipv6 nd-snooping ra-guard policy <POLICY-NAME>
switch(config-raguard-policy)# other-config-flag off
switch(config-raguard-policy)# other-config-flag on
```

Disabling other configuration flag verification:

```
switch(config)# ipv6 nd-snooping ra-guard policy <POLICY-NAME>
switch(config-ra-guard-policy)# no other-config-flag
switch(config-ra-guard-policy)# no other-config-flag off
switch(config-ra-guard-policy)# no other-config-flag on
```

## Command History

| Release | Modification        |
|---------|---------------------|
| 10.10   | Command introduced. |

## Command Information

| Platforms | Command context        | Authority                                                                          |
|-----------|------------------------|------------------------------------------------------------------------------------|
| 8360      | config-ra-guard-policy | Administrators or local user group members with execution rights for this command. |

## router-preference

```
router-preference {high | medium | low}
no router-preference [high | medium | low]
```

### Description

Enables the router preference verification on the RA guard policy for advertised packets and processes the packets only if the router preference is lower than the configured value. If the router preference is not configured, this validation is bypassed.

The `no` form of this command disables router preference verification on the RA guard policy.

| Parameter | Description                                   |
|-----------|-----------------------------------------------|
| high      | Sets the maximum router preference to high.   |
| medium    | Sets the maximum router preference to medium. |
| low       | Sets the maximum router preference to low.    |

## Examples

Enabling router preference verification with the maximum router preference set to high:

```
switch(config)# ipv6 nd-snooping ra-guard policy <POLICY-NAME>
switch(config-ra-guard-policy)# router-preference high
```

Disabling router preference verification:

```
switch(config)# ipv6 nd-snooping ra-guard policy <POLICY-NAME>
switch(config-ra-guard-policy)# no router-preference
```

## Command History

| Release          | Modification        |
|------------------|---------------------|
| 10.10 or earlier | Command introduced. |

## Command Information

| Platforms | Command context       | Authority                                                                          |
|-----------|-----------------------|------------------------------------------------------------------------------------|
| 8360      | config-raguard-policy | Administrators or local user group members with execution rights for this command. |

## show nd-snooping ra-guard interface

show nd-snooping ra-guard interface <INTERFACE-ID>

### Description

Shows RA guard counters for the specified interface. Counters are cleared once the RA guard policy is detached from the interface.

| Parameter      | Description                                                            |
|----------------|------------------------------------------------------------------------|
| <INTERFACE-ID> | Specifies the interface for which the RA guard counters are displayed. |

### Examples

Showing RA guard counters for interface 1/1/1:

```
switch# show nd-snooping ra-guard interface 1/1/1

RA Guard Policy Counters
=====

RA Guard Policy Applied : POLICY_2
RA Packets Received : 10
RA Packets Forwarded : 5
RA Packets Dropped : 5 [Total]

 reason : Managed flag error [0]
 Other flag error [0]
 Access list error [0]
 Prefix list error [0]
 Router preference error [0]
 Hop limit error [5]
```

## Command History

| Release | Modification        |
|---------|---------------------|
| 10.10   | Command introduced. |

## Command Information

| Platforms | Command context             | Authority                                                                                                                                                              |
|-----------|-----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 8360      | Operator (>) or Manager (#) | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

## show nd-snooping ra-guard policy

show nd-snooping ra-guard policy [<POLICY-NAME>]

### Description

Shows the RA guard policy configuration.

| Parameter     | Description                                                |
|---------------|------------------------------------------------------------|
| <POLICY-NAME> | Specifies the name of the RA guard policy to be displayed. |

### Examples

Showing RA guard configuration:

```
switch# show nd-snooping ra-guard policy
RA Guard Policy Applied Ports Applied VLANs

POLICY_NAME1 1/1/25,1/1/27,1/1/29-1/1/44,1/1/46 10,20,50-100
POLICY_NAME2 1/1/1-1/1/24
```

```
switch# show nd-snooping ra-guard policy POLICY_NAME1

RA Guard policy Information
=====
Policy name : POLICY_NAME1
Policy Applied Ports : 1/1/25,1/1/27,1/1/29-1/1/44,1/1/46
Policy Applied VLANs : 10,20,50-100
Hop Limit : enabled
 minimum : 50
 maximum : 150
Managed config flag : On
Other config flag : On
Access List : ACL1
Prefix List : PREFIX_LIST_NAME
Router Preference : high
```

### Command History

| Release | Modification        |
|---------|---------------------|
| 10.10   | Command introduced. |

### Command Information

| Platforms | Command context             | Authority                                                                                                                                                              |
|-----------|-----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 8360      | Operator (>) or Manager (#) | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

## show nd-snooping ra-guard vlan

show nd-snooping ra-guard vlan <VLAN-ID>]

### Description

Shows RA guard counters for the specified VLAN. Counters are cleared once the RA guard policy is detached from the VLAN.

| Parameter | Description                                                                          |
|-----------|--------------------------------------------------------------------------------------|
| <VLAN-ID> | Specifies a VLAN ID for which the RA guard counters are displayed. Range: 1 to 4094. |

### Examples

Showing RA guard counters for VLAN 2:

```
switch# show nd-snooping ra-guard vlan 2

RA Guard Policy Counters
=====

RA Guard Policy Applied : POLICY_1
RA Packets Received : 20
RA Packets Forwarded : 5
RA Packets Dropped : 15 [Total]

 reason : Managed flag error [1]
 Other flag error [4]
 Access list error [1]
 Prefix list error [4]
 Router preference error[0]
 Hop limit error [5]
```

### Command History

| Release | Modification        |
|---------|---------------------|
| 10.10   | Command introduced. |

### Command Information

| Platforms | Command context             | Authority                                                                                                                                                              |
|-----------|-----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 8360      | Operator (>) or Manager (#) | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

Enabling IPv6 destination guard on a switch prevents ND cache depletion issues and helps in minimizing Denial-of-Service (DoS) attacks. When IPv6 destination guard is enabled address resolution is performed only for the destination addresses that are active on the link.

This feature requires the binding table to be populated with the help of DHCPv6 snooping, ND snooping, or static-ip-bindings. Destination guard enables the destination address based filtering of IPv6 traffic and blocks the Neighbor Discovery (ND) protocol resolution for destination addresses that are not found in the binding table.

## IPv6 destination guard commands

### clear ipv6 destination-guard statistics vlan

```
clear ipv6 destination-guard statistics vlan <VLAN-ID>
```

#### Description

Clears IPv6 destination guard statistics from the specified VLAN.

#### Command context

| Parameter      | Description                                                                                        |
|----------------|----------------------------------------------------------------------------------------------------|
| vlan <VLAN-ID> | Specifies the VLAN for which all destination guard statistics are to be cleared. Range: 1 to 4094. |

#### Examples

Clearing all ipv6 destination-guard statistics for VLAN 10:

```
switch# clear ipv6 destination-guard statistics vlan 10
```

#### Command History

| Release | Modification        |
|---------|---------------------|
| 10.10   | Command introduced. |

#### Command Information

| Platforms | Command context             | Authority                                                                                                                                                              |
|-----------|-----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 8360      | Operator (>) or Manager (#) | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

# ipv6 destination guard

ipv6 destination-guard  
no ipv6 destination-guard

## Description

Enables IPv6 destination guard on a VLAN.

The `no` form of the command removes the IPv6 destination guard from a VLAN.



To avoid dropping valid packets when destination guard is enabled, it is recommended to configure DHCPv6 snooping and ND snooping to populate the binding database.

## Examples

Enabling IPv6 destination guard policy on a VLAN:

```
switch(config)# vlan 10
switch(config-vlan-10)# ipv6 destination-guard
```

Disabling IPv6 destination guard policy on a VLAN:

```
switch(config-vlan-10)# no ipv6 destination-guard
```

## Command History

| Release | Modification        |
|---------|---------------------|
| 10.10   | Command introduced. |

## Command Information

| Platforms | Command context                     | Authority                                                                          |
|-----------|-------------------------------------|------------------------------------------------------------------------------------|
| 8360      | config-vlan- <i>&lt;VLAN-ID&gt;</i> | Administrators or local user group members with execution rights for this command. |

# show ipv6 destination-guard statistics vlan

show ipv6 destination-guard statistics {vlan *<VLAN-ID>*}

## Description

Shows IPv6 destination guard statistics for the specified VLAN.

## Command context

| Parameter                   | Description                                                                                          |
|-----------------------------|------------------------------------------------------------------------------------------------------|
| vlan <i>&lt;VLAN-ID&gt;</i> | Specifies the VLAN for which all destination guard statistics are to be displayed. Range: 1 to 4094. |

## Examples



Showing IPv6 destination-guard statistics for VLAN 10:

```
switch# show ipv6 destination-guard statistics vlan 10
Packets dropped for VLAN 10 : 25467
```

Showing IPv6 destination-guard statistics for all VLANs:

```
switch# show ipv6 destination-guard statistics
Packets dropped for VLAN 10 : 25467
Packets dropped for VLAN 30 : 434
Packets dropped for VLAN 50 : 8767
```

## Command History

| Release | Modification        |
|---------|---------------------|
| 10.10   | Command introduced. |

## Command Information

| Platforms | Command context             | Authority                                                                                                                                                              |
|-----------|-----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 8360      | Operator (>) or Manager (#) | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

## show ipv6 destination-guard

show ipv6 destination-guard

### Description

Shows the ipv6 destination-guard configuration.

### Examples

Showing the IPv6 destination-guard configuration:

```
switch# show ipv6 destination-guard

IPv6 Destination-Guard information

Enabled VLANs : 10,20,31-35
```

## Command History

| Release | Modification        |
|---------|---------------------|
| 10.10   | Command introduced. |

## Command Information

| Platforms | Command context             | Authority                                                                                                                                                              |
|-----------|-----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 8360      | Operator (>) or Manager (#) | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

True point-to-point networks are not always possible in corporate networking environment. Many networks deploy nontraditional methods of connection (for example, DSL or broadband) at remote sites or branch offices. The branch office, telecommuter, or business traveler then becomes separated from the corporate network. Some method of tunneling becomes imperative to connect all the network sites together.

Virtual Private Networking (VPN) is often deployed to create private tunnels through the public network system for passing data to remote sites. While VPN is sufficient for the average business traveler, it is not a good solution for branch site connectivity. VPN configurations must include statically maintained access lists to identify traffic through the tunnel. These access lists are often tedious to configure for larger networks and are prone to errors.

VPNs do not permit multicast traffic to pass; therefore routing protocols such as Routing Information Protocol (RIP) and Open Shortest Path First (OSPF) are no longer options for dynamic routing updates. All new additions to the network topology must be manually added to the various configured access lists. Without dynamic routing from one site to another, network management is severely hampered. Network managers need their non-heterogeneous networks to function like traditional point-to-point networks so that traditional management methods (once available only on point-to-point circuits) can apply to the entire network.

The solution to these challenges is to use IP tunnels. An IP tunnel provides a virtual link between endpoints on two different networks enabling data to be exchanged as if the endpoints were directly connected on the same network. Traffic between the devices is isolated from the intervening networks that the tunnel spans.

For example, the following diagram shows an IP tunnel (using GRE) that connects two IPv4 networks over an IPv4 network.



If network 1 and network 3 are using IPv6 addressing, the tunnel connects them by encapsulating the IPv6 traffic in IPv4 packets to traverse network 2. The intermediate network devices do not know about Network 1 and Network 2 because the packets are encapsulated.

An IP tunnel can also be used to create a point-to-point link for IPv6 traffic over an IPv6 network.

#### IP tunnels supported features

- Up to 127 tunnels can be defined on a switch shared between different tunnel types: GRE, IPv6 in IPv4, and IPv6 in IPv6.
- A maximum of 16 source IP addresses are supported. Tunnels can have the same source IP address and different destination IP addresses. The source IP, destination IP, and VRF combine to uniquely identify a tunnel.

#### Unsupported features

- GRE IPv4 over IPv6.
- QoS cannot be applied to a GRE tunnel interface.
- Key support can be added for security and identification purposes when there are multiple applications.
- VPN across public IP network.
- MPLS over GRE.
- Multipoint GRE for scalable network to reach multiple remote sites.

## Configuring an IP tunnel

### Prerequisites

An enabled layer 3 interface with an IP address assigned to it, created with the command `interface`.

### Procedure

1. Create an IP tunnel with the command `interface tunnel`.
2. Set the IP address for the tunnel. For a GRE tunnel, enter the command `ip address`. For an IPv6 in IPv4 or an IPv6 in IPv6 tunnel, enter the command `ipv6 address`.
3. Set the source IP address for the tunnel. For a GRE or an IPv6 in IPv4 tunnel, enter the command `source ip`. For an IPv6 in IPv6 tunnel, enter the command `source ipv6`.
4. Set the destination IP address for the tunnel. For a GRE or an IPv6 in IPv4 tunnel, enter the command `destination ip`. For an IPv6 in IPv6 tunnel, enter the command `destination ipv6`.
5. Optionally, set the TTL (hop count) for the tunnel with the command `ttl`.
6. Optionally, set the MTU for the tunnel with the command `ip mtu`.
7. Optionally, add a description to the tunnel with the command `description`.
8. By default, the tunnel is attached to the default VRF. Attach it to a different VRF with the command `vrf attach`.
9. Enable the tunnel with the command `no shutdown`.
10. Review tunnel settings with the command `show interface tunnel`.

### Example


This example creates the following configuration:

- Creates GRE tunnel **33**.
- Set the tunnel IP address to **10.10.20.209/24**.
- Sets the tunnel source IP address to **10.10.10.1**.
- Sets the tunnel destination IP address to **10.10.10.2**.
- Enables the tunnel.

```
switch(config)# interface tunnel 33 mode gre ipv4
switch(config-gre-if)# ip address 10.10.20.209/24
switch(config-gre-if)# source ip address 10.10.10.1
switch(config-gre-if)# destination ip address 10.10.10.2
switch(config-gre-if)# no shutdown
```

## Creating a GRE tunnel for traversing a public network

This example creates a GRE tunnel between two switches, enabling traffic from two networks to traverse a public network.

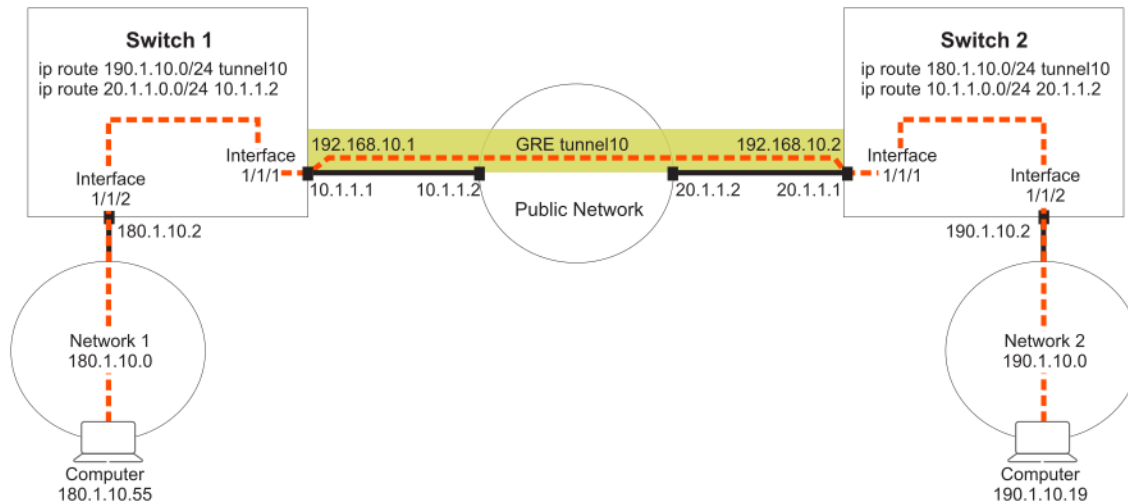

## Procedure

### 1. On switch 1:

- Enable interface **1/1/1** and assign the IP address **10.1.1.1/24** to it.  

```
switch# config
switch(config)# interface 1/1/1
switch(config-if)# ip address 10.1.1.1/24
switch(config-if)# no shutdown
```
- Enable interface **1/1/2** and assign the IP address **180.1.10.2/24** to it.  

```
switch# config
switch(config)# interface 1/1/2
switch(config-if)# ip address 180.1.10.2/24
switch(config-if)# no shutdown
switch(config-if)# exit
```
- Create GRE tunnel **10** and assign the IP address **192.168.10.1/24**, source address **10.1.1.1**, and destination address **20.1.1.1** to it.  

```
switch(config)# interface tunnel 10 mode gre ipv4
switch(config-gre-if)# ip address 192.168.10.1/24
switch(config-gre-if)# source ip 10.1.1.1
switch(config-gre-if)# destination ip 20.1.1.1
switch(config-gre-if)# no shutdown
switch(config-gre-if)# exit
```
- Defines routes so that traffic from network 1 can reach network 2 through the tunnel.  

```
switch(config)# ip route 20.1.1.0/24 10.1.1.2
switch(config)# ip route 190.1.10.0/24 tunnel10
```

### 2. On switch 2:

- Enable interface **1/1/1** and assign the IP address **20.1.1.1/24** to it.  

```
switch# config
switch(config)# interface 1/1/1
switch(config-if)# ip address 20.1.1.1/24
switch(config-if)# no shutdown
```
- Enable interface **1/1/2** and assign the IP address **190.1.10.2/24** to it.  

```
switch(config)# interface 1/1/2
switch(config-if)# ip address 190.1.10.2/24
switch(config-if)# no shutdown
switch(config-if)# exit
```


- c. Create GRE tunnel **10** and assign the IP address **192.168.10.2/24**, source address **20.1.1.1**, and destination address **10.1.1.1** to it.
 

```
switch(config)# interface tunnel 10 mode gre ipv4
switch(config-gre-if)# ip address 192.168.10.2/24
switch(config-gre-if)# source ip 20.1.1.1
switch(config-gre-if)# destination ip 10.1.1.1
switch(config-gre-if)# no shutdown
switch(config-gre-if)# exit
```
- d. Defines routes so that traffic from network 2 can reach network 1 through the tunnel.
 

```
switch(config)# ip route 10.1.1.0/24 20.1.1.2
switch(config)# ip route 180.1.10.0/24 tunnel10
```

## Creating two GRE tunnels to different destination addresses

This example creates two GRE tunnels to different destination addresses. Traffic from network 1 can reach either network 2 or network 3 using the appropriate tunnel.

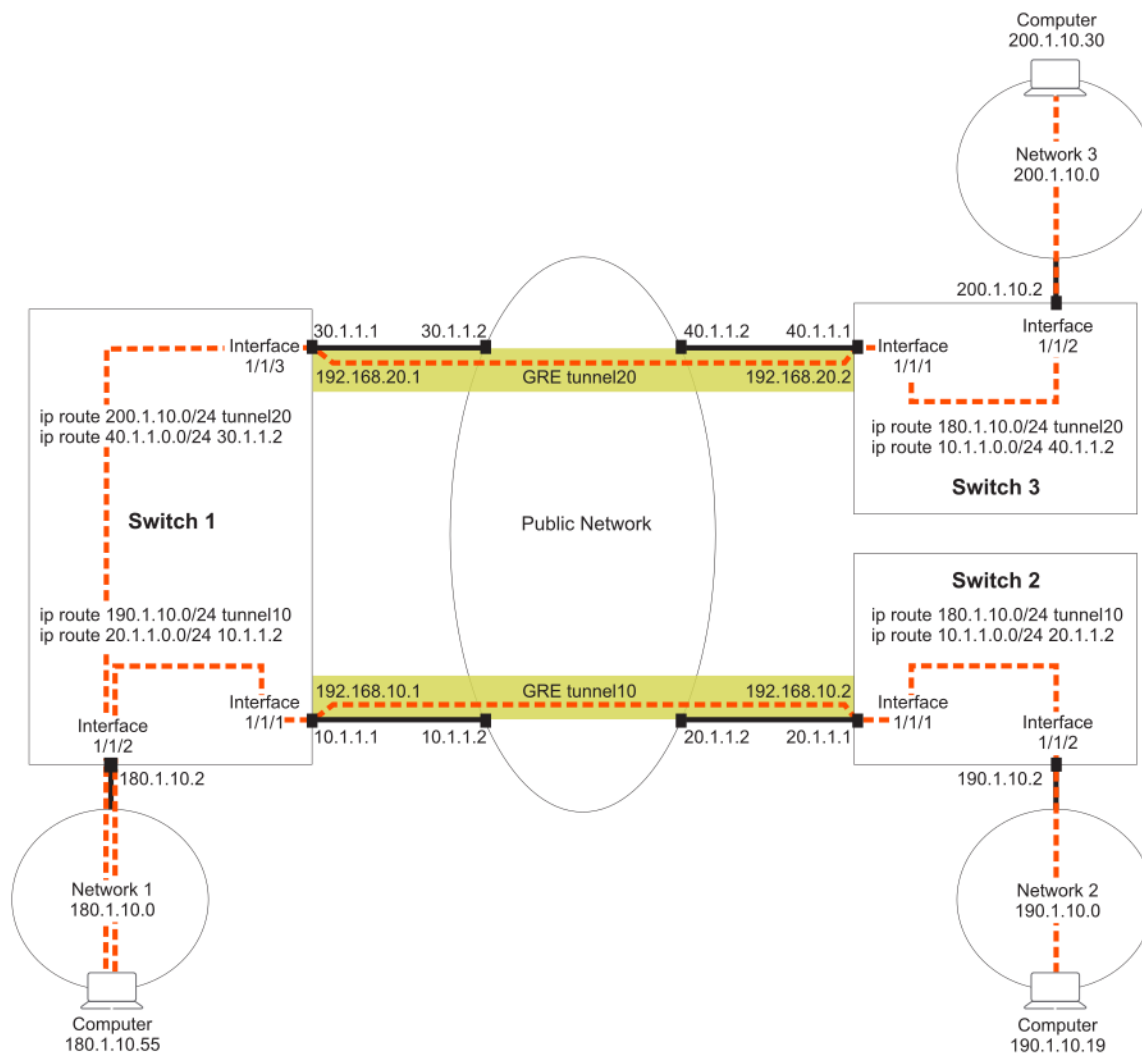

### Procedure

1. On switch 1:

- a. Enable interface **1/1/1** and assign the IP address **10.1.1.1/24** to it.  

```
switch# config
switch(config)# interface 1/1/1
switch(config-if)# ip address 10.1.1.1/24
switch(config-if)# no shutdown
```
- b. Enable interface **1/1/2** and assign the IP address **180.1.10.2/24** to it.  

```
switch# config
switch(config)# interface 1/1/2
switch(config-if)# ip address 180.1.10.2/24
switch(config-if)# no shutdown
switch(config-if)# exit
```
- c. Enable interface **1/1/3** and assign the IP address **30.1.1.1/24** to it.  

```
switch# config
switch(config)# interface 1/1/3
switch(config-if)# 30.1.1.1/24
switch(config-if)# no shutdown
switch(config-if)# exit
```
- d. Create GRE tunnel **10** and assign the IP address **192.168.10.1/24**, source address **10.1.1.1**, and destination address **20.1.1.1** to it.  

```
switch(config)# interface tunnel 10 mode gre ipv4
switch(config-gre-if)# ip address 192.168.10.1/24
switch(config-gre-if)# source ip 10.1.1.1
switch(config-gre-if)# destination ip 20.1.1.1
switch(config-gre-if)# no shutdown
switch(config-gre-if)# exit
```
- e. Create GRE tunnel **20** and assign the IP address **192.168.20.1/24**, source address **30.1.1.1**, and destination address **40.1.1.1** to it.  

```
switch(config)# interface tunnel 20 mode gre ipv4
switch(config-gre-if)# ip address 192.168.20.1/24
switch(config-gre-if)# source ip 30.1.1.1
switch(config-gre-if)# destination ip 40.1.1.1
switch(config-gre-if)# no shutdown
switch(config-gre-if)# exit
```
- f. Defines routes so that traffic from network 1 can reach network 2 through tunnel 10.  

```
switch(config)# ip route 20.1.1.0/24 10.1.1.2
switch(config)# ip route 190.1.10.0/24 tunnel10
```
- g. Defines routes so that traffic from network 1 can reach network 3 through the tunnel 20.  

```
switch(config)# ip route 40.1.1.0/24 30.1.1.2
switch(config)# ip route 200.1.10.0/24 tunnel20
```

2. On switch 2:

- a. Enable interface **1/1/1** and assign the IP address **20.1.1.1/24** to it.  

```
switch# config
switch(config)# interface 1/1/1
switch(config-if)# ip address 20.1.1.1/24
switch(config-if)# no shutdown
```
- b. Enable interface **1/1/2** and assign the IP address **190.1.10.2/24** to it.  

```
switch(config)# interface 1/1/2
switch(config-if)# ip address 190.1.10.2/24
switch(config-if)# no shutdown
switch(config-if)# exit
```
- c. Create GRE tunnel **10** and assign the IP address **192.168.10.2/24**, source address **20.1.1.1**, and destination address **10.1.1.1** to it.  

```
switch(config)# interface tunnel 10 mode gre ipv4
switch(config-gre-if)# ip address 192.168.10.2/24
```

```

switch(config-gre-if)# source ip 20.1.1.1
switch(config-gre-if)# destination ip 10.1.1.1
switch(config-gre-if)# no shutdown
switch(config-gre-if)# exit

```

- d. Defines routes so that traffic from network 2 can reach network 1 through tunnel 10.

```

switch(config)# ip route 10.1.1.0/24 20.1.1.2
switch(config)# ip route 180.1.10.0/24 tunnel10

```

3. On switch 3:

- a. Enable interface **1/1/1** and assign the IP address **40.1.1.1/24** to it.

```

switch# config
switch(config)# interface 1/1/1
switch(config-if)# ip address 40.1.1.1/24
switch(config-if)# no shutdown

```

- b. Enable interface **1/1/2** and assign the IP address **200.1.10.2/24** to it.

```

switch(config)# interface 1/1/2
switch(config-if)# ip address 200.1.10.2/24
switch(config-if)# no shutdown
switch(config-if)# exit

```

- c. Create GRE tunnel **20** and assign the IP address **192.168.20.2/24**, source address **40.1.1.1**, and destination address **30.1.1.1** to it.

```

switch(config)# interface tunnel 10 mode gre ipv4
switch(config-gre-if)# ip address 192.168.20.2/24
switch(config-gre-if)# source ip 40.1.1.1
switch(config-gre-if)# destination ip 30.1.1.1
switch(config-gre-if)# no shutdown
switch(config-gre-if)# exit

```

- d. Defines routes so that traffic from network 3 can reach network 1 through tunnel 20.


```

switch(config)# ip route 30.1.1.0/24 40.1.1.2
switch(config)# ip route 180.1.10.0/24 tunnel20

```

## Creating an IPv6 in IPv4 tunnel for traversing a public network

This example creates an IPv6 in IPv4 tunnel between two switches, enabling traffic from two networks to traverse a public network.

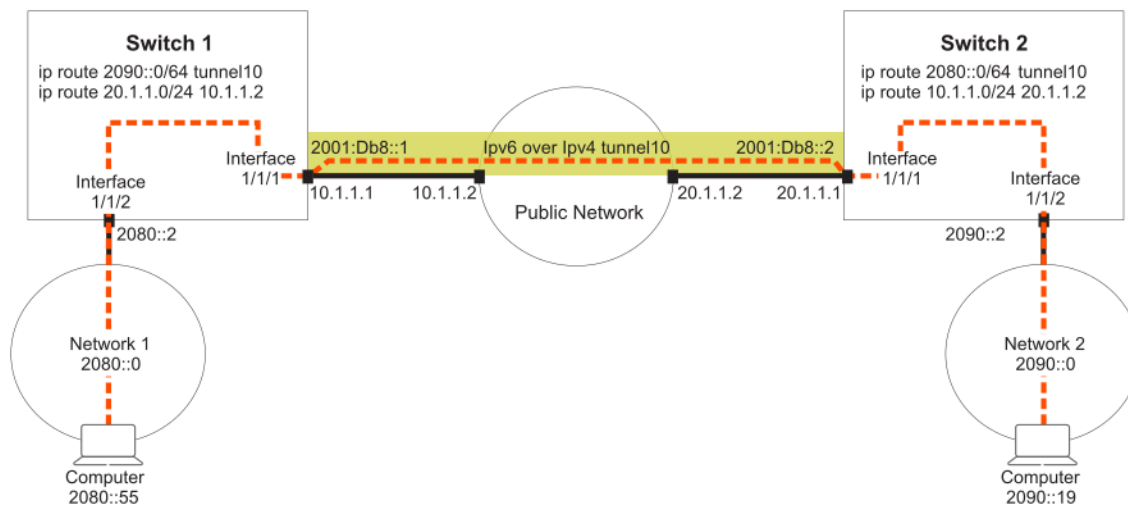

### Procedure



1. On switch 1:

- a. Enable interface **1/1/1** and assign the IP address **10.1.1.1/24** to it.  

```
switch# config
switch(config)# interface 1/1/1
switch(config-if)# ip address 10.1.1.1/24
switch(config-if)# no shutdown
```
- b. Enable interface **1/1/2** and assign the IP address **2080::2/64** to it.  

```
switch# config
switch(config)# interface 1/1/2
switch(config-if)# ipv6 address 2080::2/64
switch(config-if)# no shutdown
switch(config-if)# exit
```
- c. Create IPv6 in IPv4 tunnel **10** and assign the IP address **2001:DB8::1/32**, source address **10.1.1.1**, and destination address **20.1.1.1** to it.  

```
switch(config)# interface tunnel 10 mode ip 6in4
switch(config-ip-if)# ipv6 address 2001:DB8::1/62
switch(config-ip-if)# source ip 10.1.1.1
switch(config-ip-if)# destination ip 20.1.1.1
switch(config-ip-if)# no shutdown
switch(config-ip-if)# exit
```
- d. Defines routes so that traffic from network 1 can reach network 2 through the tunnel.  

```
switch(config)# ip route 20.1.1.0/24 10.1.1.2
switch(config)# ipv6 route 290::0/64 tunnel10
```

2. On switch 2:

- a. Enable interface **1/1/1** and assign the IP address **20.1.1.1/24** to it.  

```
switch# config
switch(config)# interface 1/1/1
switch(config-if)# ip address 20.1.1.1/24
switch(config-if)# no shutdown
```
- b. Enable interface **1/1/2** and assign the IP address **2090::2/64** to it.  


```
switch(config)# interface 1/1/2
switch(config-if)# ipv6 address 2090::2/64
switch(config-if)# no shutdown
switch(config-if)# exit
```
- c. Create IPv6 in IPv4 tunnel **10** and assign the IP address **2001:DB8::2/32**, source address **10.1.1.1**, and destination address **20.1.1.1** to it.  

```
switch(config)# interface tunnel 10 mode ip 6in4
switch(config-ip-if)# ipv6 address 2001:DB8::2/62
switch(config-ip-if)# source ip 20.1.1.1
switch(config-ip-if)# destination ip 10.1.1.1
switch(config-ip-if)# no shutdown
switch(config-ip-if)# exit
```
- d. Defines routes so that traffic from network 2 can reach network 1 through the tunnel.  

```
switch(config)# ip route 10.1.1.0/24 20.1.1.2
switch(config)# ip route 2080::0/64 tunnel10
```

## Creating an IPv6 in IPv6 tunnel for traversing a public network

This example creates an IPv6 in IPv6 tunnel between two switches, enabling traffic from two networks to traverse a public network.

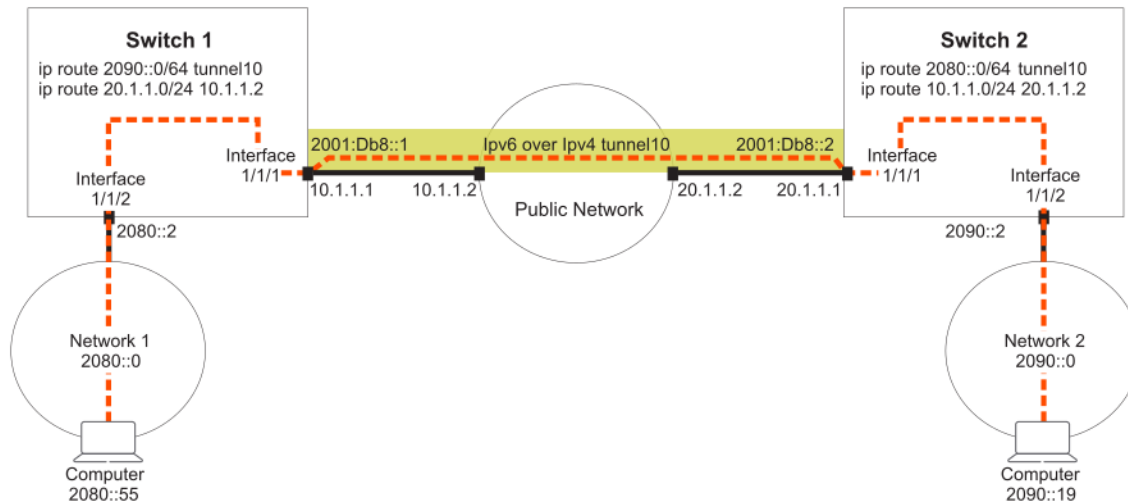

## Procedure

### 1. On switch 1:

- a. Enable interface **1/1/1** and assign the IP address **2001:DB8:5::1/64** to it.
 

```
switch# config
switch(config)# interface 1/1/1
switch(config-if)# ipv6 address 2001:DB8:5::1/64
switch(config-if)# no shutdown
```
- b. Enable interface **1/1/2** and assign the IP address **2080::2/64** to it.
 

```
switch# config
switch(config)# interface 1/1/2
switch(config-if)# ipv6 address 2080::2/64
switch(config-if)# no shutdown
switch(config-if)# exit
```
- c. Create IPv6 in IPv6 tunnel **10** and assign the IP address **2001:DB8::1/32**, source address **2001:DB8:5::1**, and destination address **2001:DB8:9::1** to it. (Optional) Set the MTU and TTL parameters for this tunnel interface.
 

```
switch(config)# interface tunnel 10 mode ip 6in6
switch(config-ip-if)# ipv6 address 2001:DB8::1/62
switch(config-ip-if)# source ipv6 2001:DB8:5::1
switch(config-ip-if)# destination ipv6 2001:DB8:9::1
switch(config-ip-if)# no shutdown
switch(config-ip-if)# exit
```
- d. Defines routes so that traffic from network 1 can reach network 2 through the tunnel.
 

```
switch(config)# ipv6 route 2001:DB8:9::0/64 2001:DB8:5::2
switch(config)# ipv6 route 2090::0/64 tunnel10
```

### 2. On switch 2:

- a. Enable interface **1/1/1** and assign the IP address **2001:DB8:9::1/64** to it.
 

```
switch# config
switch(config)# interface 1/1/1
switch(config-if)# ipv6 address 2001:DB8:9::1/64
switch(config-if)# no shutdown
```
- b. Enable interface **1/1/2** and assign the IP address **2090::2/64** to it.
 

```
switch(config)# interface 1/1/2
switch(config-if)# ipv6 address 2090::2/64
switch(config-if)# no shutdown
switch(config-if)# exit
```
- c. Create IPv6 in IPv6 tunnel **10** and assign the IP address **2001:DB8::2/32**, source address **2001:DB8:5::1**, and destination address **2001:DB8:9::1** to it. (Optional) Set the MTU and TTL

parameters for this tunnel interface.

```
switch(config)# interface tunnel 10 mode ip 6in6
switch(config-ip-if)# ipv6 address 2001:DB8::2/62
switch(config-ip-if)# source ipv6 2001:DB8:9::1
switch(config-ip-if)# destination ipv6 2001:DB8:5::1
switch(config-ip-if)# no shutdown
switch(config-ip-if)# exit
```

- d. Defines routes so that traffic from network 2 can reach network 1 through the tunnel.

```
switch(config)# ipv6 route 2001:DB8:5::0/64 2001:DB8:9::2
switch(config)# ipv6 route 2080::0/64 tunnel10
```

## IP tunnels commands

### description

```
description <DESC>
no description
```

#### Description

Associates a text description with an IP tunnel for identification purposes.

The `no` form of this command removes the description from an IP tunnel.

| Parameter | Description                                                                                                   |
|-----------|---------------------------------------------------------------------------------------------------------------|
| <DESC>    | Specifies the descriptive text to associate with the IP tunnel.<br>Range: 1 to 64 printable ASCII characters. |

### Examples

Defines a description for GRE tunnel **33**.

```
switch(config)# interface tunnel 33 mode gre ipv4
switch(config-gre-if)# description Network A Tunnel C
```

Removes the description for GRE tunnel **33**.

```
switch(config)# interface tunnel 33
switch(config-gre-if)# no description
```

Defines a description for IPv6 in IPv4 tunnel **27**.

```
switch(config)# interface tunnel 27 mode ip 6in4
switch(config-ip-if)# description Network 3 Tunnel 27
```

Removes the description for IPv6 in IPv4 tunnel **27**.

```
switch(config)# interface tunnel 27
switch(config-ip-if)# no description
```

Defines a description for IPv6 in IPv6 tunnel **8**.

```
switch(config)# interface tunnel 8 mode ip 6in6
switch(config-if)# description Network 4 Tunnel 8
```

Removes the description for IPv6 in IPv6 tunnel **8**.

```
switch(config)# interface tunnel 8
switch(config-if)# no description
```

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms                             | Command context               | Authority                                                                          |
|---------------------------------------|-------------------------------|------------------------------------------------------------------------------------|
| 8320<br>8325<br>8360<br>9300<br>10000 | config-gre-if<br>config-ip-if | Administrators or local user group members with execution rights for this command. |

## destination ip

```
destination ip <IPv4-ADDR>
no destination ip <IPv4-ADDR>
```

## Description

Sets the destination IP address for an IP tunnel. Specify the address of the interface on the remote device to which the tunnel will be established.

The **no** form of this command deletes the destination IP address from an IP tunnel.

| Parameter   | Description                                                                                               |
|-------------|-----------------------------------------------------------------------------------------------------------|
| <IPv4-ADDR> | Specifies the destination IP address in IPv4 format (x.x.x.x), where x is a decimal number from 0 to 255. |

## Examples

Defines the destination IP address to be **10.10.10.1** for GRE tunnel **33**.

```
switch(config)# interface tunnel 33 mode gre ipv4
switch(config-gre-if)# destination ip 10.10.10.1
```

Deletes the destination IP address **10.10.10.1** from GRE tunnel **33**.

```
switch(config)# interface tunnel 33
switch(config-gre-if)# no destination ip 10.10.10.1
```

Defines the destination IP address to be **10.10.20.1** for IPv6 in IPv4 tunnel **27**.

```
switch(config)# interface tunnel 27 mode ip 6in4
switch(config-ip-if)# destination ip 10.10.20.1
```

Deletes the destination IP address **10.10.20.1** from IPv6 in IPv4 tunnel **27**.

```
switch(config)# interface tunnel 27
switch(config-ip-if)# no destination ip 10.10.20.1
```

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms                             | Command context               | Authority                                                                          |
|---------------------------------------|-------------------------------|------------------------------------------------------------------------------------|
| 8320<br>8325<br>8360<br>9300<br>10000 | config-gre-if<br>config-ip-if | Administrators or local user group members with execution rights for this command. |

## destination ipv6

```
destination ipv6 <IPVv6-ADDR>
no destination ipv6 [IPV6-ADDR]
```

## Description

Sets the destination IPv6 address for an IP tunnel. Specify the address of the interface on the remote device to which the tunnel will be established.

The **no** form of this command deletes the destination IPv6 address from an IP tunnel.

| Parameter   | Description                                                                                                                                                                                      |
|-------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <IPV6-ADDR> | Specifies the tunnel IP address in IPv6 format (xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx), where x is a hexadecimal number from 0 to F.<br>This is optional in the <b>no</b> form of the command. |

## Examples

Defines the destination IPv6 address to be **2001:DB8::1** for IPv6 in IPv6 tunnel

```
switch(config)# interface tunnel 8 mode ip 6in6
switch(config-if)# destination ipv6 2001:DB8::1
```

Deletes the destination IPv6 address **2001:DB8::1** from IPv6 in IPv6 tunnel **8**.

```
switch(config)# interface tunnel 8
switch(config-if)# no destination ipv6 2001:DB8::1
```

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms                             | Command context | Authority                                                                          |
|---------------------------------------|-----------------|------------------------------------------------------------------------------------|
| 8320<br>8325<br>8360<br>9300<br>10000 | config-ip-if    | Administrators or local user group members with execution rights for this command. |

## interface tunnel

```
interface tunnel <TUNNEL-NUMBER> mode {gre ipv4 | ip 6in4 | ip 6in6}
interface tunnel <EXISTING-TUNNEL-NUMBER>
no interface tunnel <EXISTING-TUNNEL-NUMBER> [mode {gre ipv4 | ip 6in4 | ip 6in6}]
```

## Description

Creates or updates an IP tunnel. After you enter the command, the firmware switches to the configuration context for the tunnel.

If the specified tunnel exists, this command switches to the context for the tunnel.

By default, all tunnels are automatically assigned to the default VRF when they are created.

The **no** form of this command deletes an existing IP tunnel. It is optional to include a mode in the **no** form, but if a mode has been entered, selecting a mode is required.

| Parameter                           | Description                                                                                                                                                                                                                                                                                                                                        |
|-------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| mode {gre ipv4   ip 6in4   ip 6in6} | Creates an IP tunnel. Choose one of the following options: <ul style="list-style-type: none"> <li>gre ipv4: Creates a GRE tunnel.</li> <li>ip 6in4: Creates an IPv4 tunnel for IPv6 traffic.</li> <li>ip 6in6: Creates an IPv6 tunnel for IPv6 traffic.</li> </ul> This is optional in the <b>no</b> form, unless a mode has already been entered. |
| <TUNNEL-NUMBER>                     | Specifies the number for a new tunnel. Range: 1 to 127. Numbering is shared between all tunnels, so the same tunnel number cannot be used for an IPv6 in IPv4 tunnel and a GRE                                                                                                                                                                     |

| Parameter                                   | Description                                                      |
|---------------------------------------------|------------------------------------------------------------------|
|                                             | tunnel.                                                          |
| <code>&lt;EXISTING-TUNNEL-NUMBER&gt;</code> | Specifies the number for an existing IP tunnel. Range: 1 to 127. |

## Examples

Defines a new GRE tunnel with number **27**.

```
switch(config)# interface tunnel 33 mode gre ipv4
switch(config-gre-if)#
```

Switches to the `config-gre-if` context for existing tunnel **33**.

```
switch(config)# interface tunnel 33
switch(config-gre-if)#
```

Deletes GRE tunnel **33**.

```
switch(config)# no interface tunnel 33
```

Defines a new IPv6 in IPv4 tunnel with number **27**.

```
switch(config)# interface tunnel 27 mode ip 6in4
switch(config-ip-if)#
```

Switches to the `config-ip-if` context for existing tunnel **27**.

```
switch(config)# interface tunnel 27
switch(config-ip-if)#
```

Deletes IPv6 in IPv4 tunnel **27**.

```
switch(config)# no interface tunnel 27
```

Defines a new IPv6 in IPv6 tunnel with number **8**.

```
switch(config)# interface tunnel 8 mode ip 6in6
switch(config-ip-if)#
```

Deletes IPv6 in IPv6 tunnel with number **3**.

```
switch(config)# no interface tunnel 33 mode gre ipv4
```

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms                             | Command context                         | Authority                                                                          |
|---------------------------------------|-----------------------------------------|------------------------------------------------------------------------------------|
| 8320<br>8325<br>8360<br>9300<br>10000 | config-gre-if<br>config-ip-if<br>config | Administrators or local user group members with execution rights for this command. |

## ip address

ip address <IPv4-ADDR>/<MASK>  
no ip address <IPv4-ADDR>/<MASK>

## Description

Sets the local IP address of a GRE tunnel. This address identifies the tunnel interface for routing. It must be on the same subnet as the tunnel address assigned on the remote device.

The `no` form of this command deletes the local IP address assigned to a GRE tunnel.

| Parameter   | Description                                                                                                                                                                                        |
|-------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <IPv4-ADDR> | Specifies the tunnel IP address in IPv4 format (x.x.x.x), where x is a decimal number from 0 to 255. You can remove leading zeros. For example, the address 192.169.005.100 becomes 192.168.5.100. |
| <MASK>      | Specifies the number of bits in the address mask in CIDR format (x), where x is a decimal number from 0 to 32.                                                                                     |

## Examples

Defines the local IP address **10.10.10.1** for GRE tunnel **33**.

```
switch(config)# interface tunnel 33 mode gre ipv4
switch(config-gre-if)# ip address 10.10.10.1/24
```

Deletes the local IP address **10.10.10.1** for GRE tunnel **33**.

```
switch(config)# interface tunnel 33
switch(config-gre-if)# no ip address 10.10.10.1/24
```

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |



## Command Information

| Platforms                             | Command context | Authority                                                                          |
|---------------------------------------|-----------------|------------------------------------------------------------------------------------|
| 8320<br>8325<br>8360<br>9300<br>10000 | config-gre-if   | Administrators or local user group members with execution rights for this command. |

## ipv6 address

```
ipv6 address <IPV6-ADDR>/<MASK>
no ipv6 address <IPV6-ADDR>/<MASK>
```

### Description

Sets the local IP address of an IPv6 to IPv4 tunnel or of an IPv6 to IPv6 tunnel. This address identifies the tunnel interface for routing. It must be on the same subnet as the tunnel address assigned on the remote device.

The `no` form of this command deletes the local IP address assigned to an IPv6 to IPv4 tunnel.

| Parameter   | Description                                                                                                                            |
|-------------|----------------------------------------------------------------------------------------------------------------------------------------|
| <IPV6-ADDR> | Specifies the tunnel IP address in IPv6 format (xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx), where x is a hexadecimal number from 0 to F. |
| <MASK>      | Specifies the number of bits in the address mask in CIDR format (x), where x is a decimal number from 0 to 32.                         |

### Examples

Defines the local IP address **2001:DB8:5::1/64** for tunnel **8** for an IPv6 to IPv6 tunnel.

```
switch(config)# interface tunnel 8 mode ip 6in6
switch(config-ip-if)# ipv6 address 2001:DB8:5::1/64
```

Deletes the local IP address **2001:DB8:5::1/32** for tunnel **8**.

```
switch(config)# interface tunnel 8
switch(config-ip-if)# no ipv6 address 2001:DB8:5::1/64
```

### Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms                             | Command context           | Authority                                                                          |
|---------------------------------------|---------------------------|------------------------------------------------------------------------------------|
| 8320<br>8325<br>8360<br>9300<br>10000 | config-ip-if<br>config-if | Administrators or local user group members with execution rights for this command. |

## ip mtu

ip mtu <VALUE>

### Description

Sets the MTU (maximum transmission unit) for an IP interface. The default value is 1500 bytes. The `no` form of this command sets the MTU to the default value of 1500 bytes.

| Parameter | Description                                                    |
|-----------|----------------------------------------------------------------|
| <VALUE>   | Specifies the MTU in bytes. Range: 1,280 bytes to 9,192 bytes. |

### Usage

The IP MTU is the largest IP packet that can be sent or received by the interface. For a tunnel, the IP MTU is the maximum size of the IP payload. To enable jumbo packet forwarding through the tunnel, set the IP MTU of the tunnel to a value greater than 1500. Also set the MTU and the IP MTU values for the underlying physical interface that the tunnel is using to a value greater than 1,500 bytes. The IP MTU of the tunnel must also be greater than or equal to the MTU of the ingress interface on the switch. The IP MTU value of the tunnel must also be less than or equal to the IP MT of the underlying interface that the tunnel is using.

When defining a GRE tunnel, the MTU has to account for 28 bytes of IP layer overhead, plus a GRE header. It must be larger than the MTU of the interface that the tunnel is using. Packets larger than the MTU are dropped.

### Examples

Sets the MTU on GRE interface 33 to **1300** bytes.

```
switch(config)# interface tunnel 33 mode gre ipv4
switch(config-gre-if)# mtu 1300
```

Sets the MTU on GRE interface 33 to the default value.

```
switch(config)# interface tunnel 33 mode gre ipv4
switch(config-gre-if)# ip mtu
```

Sets the MTU on IPv6 in IPv4 tunnel 27 to **1000** bytes.

```
switch(config)# interface tunnel 27 mode ip 6in4
switch(config-ip-if)# mtu 1000
```

Sets the MTU on IPv6 in IPv4 tunnel 27 to the default value.

```
switch(config)# interface tunnel 27 mode ip 6in4
switch(config-if)# ip mtu
```

Sets the MTU on IPv6 in IPv6 tunnel 8 to **900** bytes.

```
switch(config)# interface tunnel 8 mode ip 6in6
switch(config-if)# ip mtu 9000
```

Sets the MTU on IPv6 in IPv6 tunnel 8 to the default value.

```
switch(config)# interface tunnel 8 mode ip 6in6
switch(config-if)# ip mtu
```

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms                             | Command context               | Authority                                                                          |
|---------------------------------------|-------------------------------|------------------------------------------------------------------------------------|
| 8320<br>8325<br>8360<br>9300<br>10000 | config-gre-if<br>config-ip-if | Administrators or local user group members with execution rights for this command. |

## show interface tunnel

```
show interface tunnel[<TUNNEL-NUMBER>] [vsx-peer]
```

## Description

Shows configuration settings for all IP tunnels, or a specific tunnel.

| Parameter       | Description                                                                                                                                                                                                                      |
|-----------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <TUNNEL-NUMBER> | Specifies the number of an IP tunnel. Range: 1 to 127.                                                                                                                                                                           |
| vsx-peer        | Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX. |

## Examples

Shows configuration settings for tunnel **10**, which is a GRE tunnel in the following example.

```
switch# show interface tunnel10
```

```
Interface tunnel10 is up
Admin state is up
tunnel type GRE IPv4
tunnel interface IPv4 address 192.0.2.0/24
tunnel source IPv4 address 1.1.1.1
tunnel destination IPv4 address 2.2.2.2
tunnel ttl 60
```

| Statistics | RX | TX | Total |
|------------|----|----|-------|
| L3 Packets | 0  | 0  | 0     |
| L3 Bytes   | 0  | 0  | 0     |

Shows configuration settings for tunnel **12**, which is an IPv6 in IPv6 tunnel in the following example.

```
switch# show interface tunnel12
```

```
Interface tunnel12 is up
Admin state is up
tunnel type IPv6 in IPv6
tunnel interface IPv6 address 4::1/64
tunnel source IPv6 address 2::1
tunnel destination IPv6 address 2::2
tunnel ttl 60
Description: Network2 Tunnel
```

| Statistics | RX | TX | Total |
|------------|----|----|-------|
| L3 Packets | 0  | 0  | 0     |
| L3 Bytes   | 0  | 0  | 0     |

Shows configuration settings for all tunnels.

```
switch# show interface tunnel
```

```
Interface tunnel10 is up
Admin state is up
tunnel type GRE IPv4
tunnel interface IPv4 address 192.0.2.0/24
tunnel source IPv4 address 1.1.1.1
tunnel destination IPv4 address 2.2.2.2
tunnel ttl 60
```

| Statistics | RX | TX | Total |
|------------|----|----|-------|
| L3 Packets | 0  | 0  | 0     |
| L3 Bytes   | 0  | 0  | 0     |

```
Interface tunnel11 is up
Admin state is up
tunnel type IPv6 in IPv4
tunnel source IPv4 address 198.51.100.0
tunnel destination IPv4 address 198.51.200.5
tunnel ttl 80
Description: Network11
```

| Statistics | RX | TX | Total |
|------------|----|----|-------|
| L3 Packets | 0  | 0  | 0     |
| L3 Bytes   | 0  | 0  | 0     |

```

Interface tunnel12 is up
Admin state is up
tunnel type IPv6 in IPv6
tunnel interface IPv6 address 4::1/64
tunnel source IPv6 address 2::1
tunnel destination IPv6 address 2::2
tunnel ttl 60
Description: Network2 Tunnel

```

| Statistics | RX | TX | Total |
|------------|----|----|-------|
| L3 Packets | 0  | 0  | 0     |
| L3 Bytes   | 0  | 0  | 0     |

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms                             | Command context | Authority                                                                                                                                                              |
|---------------------------------------|-----------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 8320<br>8325<br>8360<br>9300<br>10000 | Manager (#)     | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

## show running-config interface tunnel

show running-config interface tunnel<TUNNEL-NUMBER> [vsx-peer]

### Description

Shows the commands used to configure an IP tunnel.

| Parameter       | Description                                                                                                                                                                                                                      |
|-----------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <TUNNEL-NUMBER> | Specifies the number of an IP tunnel. Range: 1 to 127.                                                                                                                                                                           |
| vsx-peer        | Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX. |

### Examples

Shows the configuration for a GRE tunnel.

```
switch# show running-config interface tunnel2
interface tunnel 2 mode gre ipv4
source ip 10.10.20.11
destination ip 10.20.1.2
ip address 10.10.10.1/24
ttl 60
```

Shows the configuration for IPv6 in IPv4 tunnel.

```
switch# show running-config interface tunnel5
interface tunnel5 mode ip 6in4
source ip 10.10.10.12
destination ip 22.20.20.20
ip6 address 2001:DB8:5::1/64
ttl 60
no shutdown
description Network10
```

Shows the configuration for IPv6 in IPv6 tunnel.

```
switch# show running-config interface tunnel1
interface tunnel 1 mode ip 6in6
description Network2 Tunnel
source ipv6 2::1
destination ipv6 2::2
ipv6 address 4::1/64
ttl 60
```

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms                             | Command context | Authority                                                                                                                                                              |
|---------------------------------------|-----------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 8320<br>8325<br>8360<br>9300<br>10000 | Manager (#)     | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

## shutdown

```
shutdown
no shutdown
```

## Description

This command disables an IP interface. IP interfaces are disabled by default when created. The `no` form of this command enables an IP interface.

## Examples

Enables GRE interface **33**.

```
switch(config)# interface tunnel 33 mode gre ipv4
switch(config-gre-if)# no shutdown
```

Disables GRE interface **33**.

```
switch(config)# interface tunnel 33 mode gre ipv4
switch(config-gre-if)# shutdown
```

Enables IPv6 in IPv4 interface **27**.

```
switch(config)# interface tunnel 27 mode ip 6in4
switch(config-ip-if)# no shutdown
```

Disables IPv6 in IPv4 interface **27**.

```
switch(config)# interface tunnel 27 mode ip 6in4
switch(config-ip-if)# shutdown
```

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms                             | Command context               | Authority                                                                          |
|---------------------------------------|-------------------------------|------------------------------------------------------------------------------------|
| 8320<br>8325<br>8360<br>9300<br>10000 | config-gre-if<br>config-ip-if | Administrators or local user group members with execution rights for this command. |

## source ip

```
source ip <IPv4-ADDR>
no source ip <IPv4-ADDR>
```

## Description

Sets the source IP address for an IP tunnel. Specify the IP address of a layer 3 interface on the switch. Tunnels can have the same source IP address and different destination IP addresses.

The **no** form of this command deletes the source IP address for an IP tunnel.

| Parameter   | Description                                                                                          |
|-------------|------------------------------------------------------------------------------------------------------|
| <IPv4-ADDR> | Specifies the source IP address in IPv4 format (x.x.x.x), where x is a decimal number from 0 to 255. |

## Examples

Defines the source IP address to be **10.10.20.1** for GRE tunnel **33**.

```
switch(config)# interface tunnel 33 mode gre ipv4
switch(config-gre-if)# source ip 10.10.20.1
```

Deletes the source IP address **10.1.20.1** from GRE tunnel **33**.

```
switch(config)# interface tunnel 33
switch(config-gre-if)# no source ip 10.10.20.1
```

Defines the source IP address to be **10.10.10.1** for IPv6 in IPv4 tunnel **27**.

```
switch(config)# interface tunnel 27 mode ip 6in4
switch(config-ip-if)# source ip 10.10.10.1
```

Deletes the source IP address **10.1.10.1** from IPv6 in IPv4 tunnel **27**.

```
switch(config)# interface tunnel 27
switch(config-ip-if)# no source ip 10.10.10.1
```

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms                             | Command context               | Authority                                                                          |
|---------------------------------------|-------------------------------|------------------------------------------------------------------------------------|
| 8320<br>8325<br>8360<br>9300<br>10000 | config-gre-if<br>config-ip-if | Administrators or local user group members with execution rights for this command. |

## source ipv6

```
source ipv6 <IPV6-ADDR>
no source ipv6 [IPV6-ADDR]
```

## Description

Sets the source IPv6 address to be used for the encapsulation.

The **no** form of this command deletes the source IPv6 address for an IP tunnel.

| Parameter   | Description                                    |
|-------------|------------------------------------------------|
| <IPV6-ADDR> | Specifies the tunnel IP address in IPv6 format |



| Parameter | Description                                                                                                                                             |
|-----------|---------------------------------------------------------------------------------------------------------------------------------------------------------|
|           | (xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx), where x is a hexadecimal number from 0 to F.<br>This is optional in the <code>no</code> form of the command. |

## Examples

Defines the source IPv6 address to be **2001:DB8::1** for IPv6 in IPv6 tunnel **8**.

```
switch(config)# interface tunnel 8 mode ip 6in6
switch(config-ip-if)# source ipv6 2001:DB8::1
```

Deletes the source IP address **2001:DB8::1** from IPv6 in IPv6 tunnel **8**.

```
switch(config)# interface tunnel 8
switch(config-ip-if)# no source ipv6 2001:DB8::1
```

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms                             | Command context | Authority                                                                          |
|---------------------------------------|-----------------|------------------------------------------------------------------------------------|
| 8320<br>8325<br>8360<br>9300<br>10000 | config-ip-if    | Administrators or local user group members with execution rights for this command. |

## ttl

```
ttl <COUNT>
no ttl
```

## Description

Sets the TTL (time-to-live), also known as the hop count, for tunneled packets. If not configured, the default value of 64 is used for the tunnel. (The hop count of the original packets is not changed.) A maximum of four different TTL values can be used at the same time by all tunnels on the switch. For example, if tunnel-1 has TTL 10, tunnel-2 has TTL 20, tunnel-3 has TTL 30, and tunnel-4 has TTL 40, then tunnel-5 cannot have a unique TTL value, it must reuse one of the values assigned to the other tunnels (10, 20, 30, 40).

The `no` form of this command sets TTL to the default value of 64.

| Parameter | Description                                            |
|-----------|--------------------------------------------------------|
| <COUNT>   | Specifies the hop count. Range: 1 to 255. Default: 64. |

## Examples

Defines a TTL of **99** for GRE tunnel **33**.

```
switch(config)# interface tunnel 33 mode gre ipv4
switch(config-gre-if)# ttl 99
```

Sets the TTL for GRE tunnel **33** to the default value of 64.

```
switch(config)# interface tunnel 33
switch(config-gre-if)# no ttl
```

Defines a TTL of **55** for IPv6 in IPv4 tunnel **27**.

```
switch(config)# interface tunnel 27 mode ip 6in4
switch(config-ip-if)# ttl 55
```

Sets the TTL for IPv6 in IPv4 tunnel **27** to the default value of 64.

```
switch(config)# interface tunnel 27
switch(config-ip-if)# no ttl
```

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms                             | Command context               | Authority                                                                          |
|---------------------------------------|-------------------------------|------------------------------------------------------------------------------------|
| 8320<br>8325<br>8360<br>9300<br>10000 | config-gre-if<br>config-ip-if | Administrators or local user group members with execution rights for this command. |

## vrf attach

```
vrf attach <VRF-NAME>
no vrf attach <VRF-NAME>
```

## Description

Assigns an IP tunnel to a VRF. By default, all tunnels are automatically assigned to the default VRF when they are created.

The **no** form of this command assigns a tunnel to the default VRF (**default**).

| Parameter  | Description                                           |
|------------|-------------------------------------------------------|
| <VRF-NAME> | Specifies the VRF name to which to assign the tunnel. |

## Examples

Assigns GRE tunnel **33** to **vrf1**.

```
switch(config)# interface tunnel 33 mode gre ipv4
switch(config-gre-if)# vrf attach vrf1
```

Reassigns GRE tunnel **33** to the default VRF.

```
switch(config)# interface tunnel 33
switch(config-gre-if)# no vrf attach vrf1
```

Assigns IPv6 in IPv4 tunnel **27** to **vrf2**.

```
switch(config)# interface tunnel 27 mode gre ipv4
switch(config-ip-if)# vrf attach vrf2
```

Reassigns IPv6 in IPv4 tunnel **27** to the default VRF.

```
switch(config)# interface tunnel 27
switch(config-ip-if)# no vrf attach vrf2
```

Assigns IPv6 in IPv6 tunnel **8** to **vrf3**.

```
switch(config)# interface tunnel 8 mode ip 6in6
switch(config-ip-if)# vrf attach vrf3
```

Reassigns IPv6 in IPv6 tunnel **8** to the default VRF.

```
switch(config)# interface tunnel 8
switch(config-ip-if)# no vrf attach vrf3
```

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms                             | Command context               | Authority                                                                          |
|---------------------------------------|-------------------------------|------------------------------------------------------------------------------------|
| 8320<br>8325<br>8360<br>9300<br>10000 | config-gre-if<br>config-ip-if | Administrators or local user group members with execution rights for this command. |

IP source lockdown provides added security by preventing IP source address spoofing on a per-port basis. Every packet is inspected for this purpose in hardware. When IP source lockdown is enabled, IP traffic received on an interface (port) is forwarded only if the VLAN, IP address, MAC address, interface (port) matches the IP binding database entry.



---

It is best to configure IP source lockdown during a switch maintenance period as enabling it may cause client traffic to be dropped for 10 to 15 seconds.

---

To use IPv4 source lockdown, the IPv4 binding database must be populated. The binding database is typically dynamically populated by DHCPv4 snooping that learns and saves the binding information. Alternatively, the IPv4 binding database can be statically populated with the `ipv4 source-binding` command described in this chapter. Often DHCPv4 snooping is used to dynamically populate most of the IP binding database along with the `ipv4 source-binding` command that is used to add the binding information for several known and trusted clients, typically administrators. For dynamic IP binding database population with DHCPv4 snooping, see [DHCP snooping](#).

To use IPv6 source lockdown, the IPv6 binding database must be populated. The binding database is typically dynamically populated by DHCPv6 snooping that learns and saves the binding information. Alternatively, the IPv6 binding database can be statically populated with the `ipv6 source-binding` command described in this chapter. Often DHCPv6 snooping is used to dynamically populate most of the IPv6 binding database along with the `ipv6 source-binding` command that is used to add the binding information for several known and trusted clients, typically administrators. For dynamic IPv6 binding database population with DHCPv6 snooping, see [DHCP snooping](#).



---

IP source lockdown should not be configured on ISL (inter-switch link) ports.

---

## IPv4 source lockdown commands

### ipv4 source-binding

```
ipv4 source-binding <VLAN-ID> <IPV4-ADDR> <MAC-ADDR> <IFNAME>
no ipv4 source-binding <VLAN-ID> <IPV4-ADDR> <MAC-ADDR> <IFNAME>
```

#### Description

Adds static IPv4 client source binding information to the switch IP binding database. Although DHCPv4 snooping is often used to dynamically populate the binding database, this command is available for manually adding entries to the switch IP binding database.



---

Statically configured IP binding information supersedes any dynamically collected binding information for the same client.

---

The no form of this command removes the specified binding that was statically configured with the `ipv4 source-binding` command. The no form has no effect on bindings that were dynamically configured with DHCPv4 snooping.

| Parameter   | Description                                                                              |
|-------------|------------------------------------------------------------------------------------------|
| <VLAN-ID>   | Specifies the ID of an existing VLAN on which the client is connected. Range: 1 to 4094. |
| <IPv4-ADDR> | Specifies the client IPv4 unicast address.                                               |
| <MAC-ADDR>  | Specifies the client MAC address.                                                        |
| <IFNAME>    | Specifies the interface on which the client is connected.                                |

## Examples

Adding a static IPv4 binding:

```
switch(config)# ipv4 source-binding 1 10.2.1.4 00:50:56:96:e4:cf 1/1/1
```

Removing a IPv4 binding:

```
switch(config)# no ipv4 source-binding 1 10.2.1.4 00:50:56:96:e4:cf 1/1/1
```

## Command History

| Release          | Modification                             |
|------------------|------------------------------------------|
| 10.10            | Command enabled on 8360 series switches. |
| 10.07 or earlier | --                                       |

## Command Information

| Platforms | Command context | Authority                                                                          |
|-----------|-----------------|------------------------------------------------------------------------------------|
| 8360      | config          | Administrators or local user group members with execution rights for this command. |

## ipv4 source-lockdown

```
ipv4 source-lockdown
no ipv4 source-lockdown
```

## Description

Enables IPv4 source lockdown for all VLANs on the selected interface (port).

The no form of this command disables IPv4 source lockdown for the selected interface (port).

## Examples

Enabling IPv4 source lockdown on interface 1/1/1:

```
switch(config)# interface 1/1/1
switch(config-if)# ipv4 source-lockdown
```

Enabling IPv4 source lockdown on interface lag112:

```
switch(config)# interface lag112
switch(config-if)# ipv4 source-lockdown
```

Disabling IPv4 source lockdown on interface 1/1/1:

```
switch(config)# interface 1/1/1
switch(config-if)# no ipv4 source-lockdown
```

## Command History

| Release          | Modification                             |
|------------------|------------------------------------------|
| 10.10            | Command enabled on 8360 series switches. |
| 10.07 or earlier | --                                       |

## Command Information

| Platforms | Command context | Authority                                                                          |
|-----------|-----------------|------------------------------------------------------------------------------------|
| 8360      | config-if       | Administrators or local user group members with execution rights for this command. |

## ipv4 source-lockdown hardware retry

`ipv4 source-lockdown hardware retry <VLAN-ID> <IPv4-ADDR>`

### Description

Retries the IPv4 source lockdown hardware programming for a client identified by VLAN and IPv4 address.

| Parameter   | Description                                                                              |
|-------------|------------------------------------------------------------------------------------------|
| <VLAN-ID>   | Specifies the ID of an existing VLAN on which the client is connected. Range: 1 to 4094. |
| <IPv4-ADDR> | Specifies the client IPv4 unicast address.                                               |

### Example

Configure IPv4 source lockdown hardware retry for the client on VLAN 10.

```
switch(config)# ipv4 source-lockdown hardware retry 10 1.1.2.1
```

## Command History

| Release          | Modification                             |
|------------------|------------------------------------------|
| 10.10            | Command enabled on 8360 series switches. |
| 10.07 or earlier | --                                       |

## Command Information

| Platforms | Command context | Authority                                                                          |
|-----------|-----------------|------------------------------------------------------------------------------------|
| 8360      | config          | Administrators or local user group members with execution rights for this command. |

## show ipv4 source-binding

show ipv4 source-binding [vsx-peer]

### Description

Shows all IPv4 static source binding information irrespective of source lockdown configuration..

| Parameter | Description                                                                                                                                                                                                                      |
|-----------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| vsx-peer  | Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX. |

### Examples

Showing all IPv4 source binding information:

```
switch# show ipv4 source-binding
```

| PORT  | VLAN | MAC-ADDRESS       | HW-STATUS | FROM   | IPv4-ADDRESS |
|-------|------|-------------------|-----------|--------|--------------|
| 1/1/1 | 2    | aa:bb:cc:dd:ee:ff | Yes       | static | 1.2.3.4      |
| 1/1/2 | 12   | aa:ab:cc:dd:ee:ff | Yes       | static | 10.20.30.40  |

## Command History

| Release          | Modification                             |
|------------------|------------------------------------------|
| 10.10            | Command enabled on 8360 series switches. |
| 10.07 or earlier | --                                       |

## Command Information

| Platforms | Command context             | Authority                                                                                                                                                              |
|-----------|-----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 8360      | Operator (>) or Manager (#) | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

## show ipv4 source-lockdown

```
show ipv4 source-lockdown [binding [interface <IFNAME> | ip <IPV4-ADDR> | mac <MAC-ADDR> | vlan <VLAN-ID>] | interface <IFNAME>] [vsx-peer]
```

### Description

Shows summary or detailed IPv4 source lockdown information. When entered without parameters, summary status information for all interfaces (ports) in the binding database is shown.

| Parameter          | Description                                                                                                                                                                                                                            |
|--------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| binding            | Specifies that detailed lockdown binding record information is to be displayed. The binding database record can be identified by any one of <code>interface</code> (port), <code>ip</code> , <code>mac</code> , or <code>vlan</code> . |
| interface <IFNAME> | Specifies the client interface (port). When entered without the <code>binding</code> parameter, the summary status information is displayed for the specified interface.                                                               |
| ip <IPV4-ADDR>     | Specifies the client IPv4 unicast address.                                                                                                                                                                                             |
| mac <MAC-ADDR>     | Specifies the client MAC address.                                                                                                                                                                                                      |
| vlan <VLAN-ID>     | Specifies the ID of an existing VLAN on which the client is connected. Range: 1 to 4094.                                                                                                                                               |
| vsx-peer           | Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.       |

### Examples

Showing the summary status information for all interfaces in the binding database:

```
switch# show ipv4 source-lockdown

INTERFACE LOCKDOWN HW-STATUS

1/1/1 Yes Yes
1/1/2 Yes No
lag112 Yes Yes
```

Showing the summary status information for the specified interface in the binding database:

```
switch# show ipv4 source-lockdown interface 1/1/2

INTERFACE LOCKDOWN HW-STATUS

1/1/2 Yes No
```

Showing the detailed binding record and related information for all interfaces in the binding database:

```
switch# show ipv4 source-lockdown binding
```



```

Interface Name : 1/1/1
VLAN Id : 2000
MAC Address : 00:50:56:96:e4:cf
IP Address : 192.168.142.113
Time Remaining : static
Lockdown Status : Yes
Hardware Status : Yes
Hardware Error Reason : --

Interface Name : 1/1/2
VLAN Id : 100
MAC Address : 00:50:56:96:04:4d
IP Address : 120.168.43.52
Time Remaining : 115 seconds
Lockdown Status : Yes
Hardware Status : No
Hardware Error Reason : Resource unavailable

Interface Name : lag112
VLAN Id : 12
MAC Address : 00:50:56:96:d8:3d
IP Address : 120.168.76.182
Time Remaining : static
Lockdown Status : Yes
Hardware Status : Yes
Hardware Error Reason : --

```

Showing the detailed binding record and related information for interface 1/1/2:

```
switch# show ipv4 source-lockdown binding interface 1/1/2
```

```

Interface Name : 1/1/2
VLAN Id : 100
MAC Address : 00:50:56:96:04:4d
IP Address : 120.168.43.52
Time Remaining : 115 seconds
Lockdown Status : Yes
Hardware Status : No
Hardware Error Reason : Resource unavailable

```

Showing the detailed binding record and related information for interface lag112 (identified in this example command by the IP address):

```
switch# show ipv4 source-lockdown binding ip 120.168.76.182
```

```

Interface Name : lag112
VLAN Id : 12
MAC Address : 00:50:56:96:d8:3d
IP Address : 120.168.76.182
Time Remaining : static
Lockdown Status : Yes
Hardware Status : Yes
Hardware Error Reason : --

```

Showing the detailed binding record and related information for interface 1/1/1 (identified in this example command by the MAC address):

```
switch# show ipv4 source-lockdown binding mac 00:50:56:96:e4:cf

Interface Name : 1/1/1
VLAN Id : 2000
MAC Address : 00:50:56:96:e4:cf
IP Address : 192.168.142.113
Time Remaining : static
Lockdown Status : Yes
Hardware Status : Yes
Hardware Error Reason : --
```

Showing the detailed binding record and related information for interface 1/1/2 (identified in this example command by the VLAN):

```
switch# show ipv4 source-lockdown binding vlan 100

Interface Name : 1/1/2
VLAN Id : 100
MAC Address : 00:50:56:96:04:4d
IP Address : 120.168.43.52
Time Remaining : 115 seconds
Lockdown Status : Yes
Hardware Status : No
Hardware Error Reason : Resource unavailable
```

## Command History

| Release          | Modification                             |
|------------------|------------------------------------------|
| 10.10            | Command enabled on 8360 series switches. |
| 10.07 or earlier | --                                       |

## Command Information

| Platforms | Command context             | Authority                                                                                                                                                              |
|-----------|-----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 8360      | Operator (>) or Manager (#) | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

# IPv6 source lockdown commands

## ipv6 source-binding

```
ipv6 source-binding <VLAN-ID> <IPv6-ADDR> <MAC-ADDR> <IFNAME>
no ipv6 source-binding <VLAN-ID> <IPv6-ADDR> <MAC-ADDR> <IFNAME>
```

## Description

Adds static IPv6 client source binding information to the switch IPv6 binding database. Although DHCPv6 snooping is often used to dynamically populate the binding database, this command is available for manually adding entries to the switch IPv6 binding database.



Statically configured IPv6 binding information supersedes any dynamically collected binding information for the same client.

The no form of this command removes the specified binding that was statically configured with the `ipv6 source-binding` command. The no form has no effect on bindings that were dynamically configured with DHCPv6 snooping.

| Parameter   | Description                                                                              |
|-------------|------------------------------------------------------------------------------------------|
| <VLAN-ID>   | Specifies the ID of an existing VLAN on which the client is connected. Range: 1 to 4094. |
| <IPv6-ADDR> | Specifies the client IPv6 address.                                                       |
| <MAC-ADDR>  | Specifies the client MAC address.                                                        |
| <IFNAME>    | Specifies the interface on which the client is connected.                                |

## Examples

Adding a static IPv6 binding:

```
switch(config)# ipv6 source-binding 2 2000::2 00:12:11:44:55:12 1/1/28
```

Removing a IPv6 binding:

```
switch(config)# no ipv6 source-binding 2 2000::2 00:12:11:44:55:12 1/1/28
```

## Command History

| Release          | Modification                             |
|------------------|------------------------------------------|
| 10.10            | Command enabled on 8360 series switches. |
| 10.07 or earlier | --                                       |

## Command Information

| Platforms | Command context | Authority                                                                          |
|-----------|-----------------|------------------------------------------------------------------------------------|
| 8360      | config          | Administrators or local user group members with execution rights for this command. |

## ipv6 source-lockdown

```
ipv6 source-lockdown
no ipv6 source-lockdown
```

### Description

Enables IPv6 source lockdown for all VLANs on the selected interface (port).

The no form of this command disables IPv6 source lockdown for the selected interface (port).

## Examples

Enabling IPv6 source lockdown on interface 1/1/1:

```
switch(config)# interface 1/1/1
switch(config-if)# ipv6 source-lockdown
```

Enabling IPv6 source lockdown on interface lag112:

```
switch(config)# interface lag112
switch(config-if)# ipv6 source-lockdown
```

Disabling IPv6 source lockdown on interface 1/1/1:

```
switch(config)# interface 1/1/1
switch(config-if)# no ipv6 source-lockdown
```

## Command History

| Release          | Modification                             |
|------------------|------------------------------------------|
| 10.10            | Command enabled on 8360 series switches. |
| 10.07 or earlier | --                                       |

## Command Information

| Platforms | Command context | Authority                                                                          |
|-----------|-----------------|------------------------------------------------------------------------------------|
| 8360      | config-if       | Administrators or local user group members with execution rights for this command. |

## ipv6 source-lockdown hardware retry

ipv6 source-lockdown hardware retry <VLAN-ID> <IPv6-ADDR>

### Description

Retries the IPV6 source lockdown hardware programming for a client identified by VLAN and IPv6 address.

| Parameter   | Description                                                                              |
|-------------|------------------------------------------------------------------------------------------|
| <VLAN-ID>   | Specifies the ID of an existing VLAN on which the client is connected. Range: 1 to 4094. |
| <IPv6-ADDR> | Specifies the client IPv6 address.                                                       |

### Example

Configure IPv6 source lockdown hardware retry for the client on VLAN 1.

```
switch(config)# ipv6 source-lockdown hardware retry 1 2000::2
```

## Command History

| Release          | Modification                             |
|------------------|------------------------------------------|
| 10.10            | Command enabled on 8360 series switches. |
| 10.07 or earlier | --                                       |

## Command Information

| Platforms | Command context | Authority                                                                          |
|-----------|-----------------|------------------------------------------------------------------------------------|
| 8360      | config          | Administrators or local user group members with execution rights for this command. |

## show ipv6 source-binding

```
show ipv6 source-binding [vsx-peer]
```

### Description

Shows all IPv6 static source binding information irrespective of source lockdown configuration.

| Parameter | Description                                                                                                                                                                                                                      |
|-----------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| vsx-peer  | Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX. |

### Examples

Showing all IPv6 source binding information:

| switch# show ipv6 source-binding |      |                   |           |        |              |
|----------------------------------|------|-------------------|-----------|--------|--------------|
| PORT                             | VLAN | MAC-ADDRESS       | HW-STATUS | FROM   | IPv6-ADDRESS |
| 1/1/1                            | 1234 | 00:50:56:96:e4:cf | Yes/No    | static | 3000::1      |
| 1/1/1                            | 1    | 00:50:56:96:04:4d | Yes/No    | static | 3000::2      |
| 1/1/24                           | 1    | 00:01:01:00:00:01 | Yes       | static | 1001::1      |

## Command History

| Release          | Modification                             |
|------------------|------------------------------------------|
| 10.10            | Command enabled on 8360 series switches. |
| 10.07 or earlier | --                                       |

## Command Information

| Platforms | Command context             | Authority                                                                                                                                                              |
|-----------|-----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 8360      | Operator (>) or Manager (#) | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

## show ipv6 source-lockdown

```
show ipv6 source-lockdown [binding [interface <IFNAME> | ip <IPV6-ADDR> | mac <MAC-ADDR> | vlan <VLAN-ID>] | interface <IFNAME>] [vsx-peer]
```

### Description

Shows summary or detailed IPv6 source lockdown information. When entered without parameters, summary status information for all interfaces (ports) in the binding database is shown.

| Parameter          | Description                                                                                                                                                                                                                            |
|--------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| binding            | Specifies that detailed lockdown binding record information is to be displayed. The binding database record can be identified by any one of <code>interface</code> (port), <code>ip</code> , <code>mac</code> , or <code>vlan</code> . |
| interface <IFNAME> | Specifies the client interface (port). When entered without the <code>binding</code> parameter, the summary status information is displayed for the specified interface.                                                               |
| ip <IPV6-ADDR>     | Specifies the client IPv6 address.                                                                                                                                                                                                     |
| mac <MAC-ADDR>     | Specifies the client MAC address.                                                                                                                                                                                                      |
| vlan <VLAN-ID>     | Specifies the ID of an existing VLAN on which the client is connected. Range: 1 to 4094.                                                                                                                                               |
| vsx-peer           | Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.       |

### Examples

Showing the summary status information for all interfaces in the binding database:

```
switch# show ipv6 source-lockdown

INTERFACE LOCKDOWN HW-STATUS

1/1/1 Yes Yes
1/1/2 Yes Yes
lag112 Yes Yes
```

Showing the summary status information for the specified interface in the binding database:

```
switch# show ipv6 source-lockdown interface 1/1/2
```

| INTERFACE | LOCKDOWN | HW-STATUS |
|-----------|----------|-----------|
| -----     | -----    | -----     |
| 1/1/2     | Yes      | No        |

Showing the detailed binding record and related information for all interfaces in the binding database:

```
switch# show ipv6 source-lockdown binding

Interface Name : 1/1/1
VLAN Id : 1234
MAC Address : 00:50:56:96:e4:cf
IP Address : aaaa:bbbb:cccc:dddd:eeee:1234
Time Remaining : static
Lockdown Status : Yes
Hardware Status : Yes
Hardware Error Reason : --

Interface Name : 1/1/2
VLAN Id : 1234
MAC Address : 00:50:56:96:04:4d
IP Address : 4000::1
Time Remaining : 3290 seconds
Lockdown Status : Yes
Hardware Status : No
Hardware Error Reason : Resource unavailable

Interface Name : lag112
VLAN Id : 151
MAC Address : 00:50:56:96:d8:3d
IP Address : 1001::5
Time Remaining : 1200 seconds
Lockdown Status : No
Hardware Status : Yes
Hardware Error Reason : --
```

Showing the detailed binding record and related information for interface 1/1/2:

```
switch# show ipv6 source-lockdown binding interface 1/1/2

Interface Name : 1/1/2
VLAN Id : 1234
MAC Address : 00:50:56:96:04:4d
IP Address : 4000::1
Time Remaining : 3290 seconds
Lockdown Status : Yes
Hardware Status : No
Hardware Error Reason : Resource unavailable
```

Showing the detailed binding record and related information for interface 1/1/2 (identified in this example command by the IP address):

```
switch# show ipv6 source-lockdown binding ip 4000::1

Interface Name : 1/1/2
VLAN Id : 1234
MAC Address : 00:50:56:96:04:4d
IP Address : 4000::1
```

```
Time Remaining : 515 seconds
Lockdown Status : No
Hardware Status : Yes
Hardware Error Reason : --
```

Showing the detailed binding record and related information for interface 1/1/1 (identified in this example command by the MAC address):

```
switch# show ipv6 source-lockdown binding mac 00:50:56:96:e4:cf

Interface Name : 1/1/1
VLAN Id : 1234
MAC Address : 00:50:56:96:e4:cf
IP Address : aaaa:bbbb:cccc:dddd:eeee:1234
Time Remaining : static
Lockdown Status : Yes
Hardware Status : Yes
Hardware Error Reason : --
```

Showing the detailed binding record and related information for interface lag112 (identified in this example command by the VLAN):

```
switch# show ipv6 source-lockdown binding vlan 151

Interface Name : lag112
VLAN Id : 151
MAC Address : 00:50:56:96:d8:3d
IP Address : 1001::5
Time Remaining : 1200 seconds
Lockdown Status : No
Hardware Status : Yes
Hardware Error Reason : --
```

## Command History

| Release          | Modification                             |
|------------------|------------------------------------------|
| 10.10            | Command enabled on 8360 series switches. |
| 10.07 or earlier | --                                       |

## Command Information

| Platforms | Command context             | Authority                                                                                                                                                              |
|-----------|-----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 8360      | Operator (>) or Manager (#) | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |



## Internet Control Message Protocol (ICMP)

The Internet Control Message Protocol (ICMP) is a supporting protocol in the Internet protocol suite. The protocol is used by network devices, including routers, to send error messages and operational information. For example, an ICMP message might indicate that a requested service is not available. Another example of an ICMP message might be that a host or router could not be reached.

### ICMP message types

The type field identifies the type of message sent by the host or gateway.

| Type | ICMP messages                                             |
|------|-----------------------------------------------------------|
| 0    | Echo Reply (Ping Reply, used with Type 8, Ping Request)   |
| 3    | Destination Unreachable                                   |
| 4    | Source Quench                                             |
| 5    | Redirect                                                  |
| 8    | Echo Request (Ping Request, used with Type 0, Ping Reply) |
| 9    | Router Advertisement (Used with Type 9)                   |
| 10   | Router Solicitation (Used with Type 10)                   |
| 11   | Time Exceeded                                             |
| 12   | Parameter Problem                                         |
| 13   | Timestamp Request (Used with Type 14)                     |
| 14   | Timestamp Reply (Used with Type 13)                       |
| 15   | Information Request (obsolete) (Used with Type 16)        |
| 16   | Information Reply (obsolete) (Used with Type 15)          |
| 17   | Address Mask Request (Used with Type 17)                  |
| 18   | Address Mask Reply (Used with Type 18)                    |

### When ICMP messages are sent

ICMP messages are sent when one or more of the following scenarios occur:

- A datagram cannot reach its destination.
- The gateway does not have the buffering capacity to forward a datagram.
- The gateway can direct the host to send traffic on a shorter route.

## ICMP redirect messages

ICMP redirect messages are used by routers to notify the hosts on the data link that a better route is available for a particular destination.

## When ICMP redirect messages are sent

The switch is configured to send redirects by default. ICMP redirect messages are sent when one or more of the following scenarios occur:

- The interface on which the packet comes into the router is the same interface on which the packet gets routed out.
- The subnet or network of the source IP address is on the same subnet or network of the next-hop IP address of the routed packet.
- The datagram is not source-routed.
- The destination unicast address is unreachable. In this case, the router generates the ICMP destination unreachable message to inform the source host about the situation.

## ICMP commands

### ip icmp redirect

```
ip icmp redirect
no ip icmp redirect
```

#### Description

Enables the sending of ICMPv4 and ICMPv6 redirect messages to the source host. Enabled by default. The `no` form of this command disables ICMPv4 and ICMPv6 redirect messages to the source host.

#### Examples

Enabling ICMP redirect messages:

```
switch(config)# ip icmp redirect
```

Disabling ICMP redirect messages:

```
switch(config)# no ip icmp redirect
```

#### Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms     | Command context | Authority                                                                          |
|---------------|-----------------|------------------------------------------------------------------------------------|
| All platforms | config          | Administrators or local user group members with execution rights for this command. |

## ip icmp throttle

```
ip icmp throttle <PACKET-INTERVAL>
no ip icmp throttle [<PACKET-INTERVAL>]
```

### Description

Used to configure the throttle parameter for both ICMPv4 and ICMPv6 error messages and redirect messages.

The `no` form of this command disables the throttle parameter for both ICMPv4 and ICMPv6 error messages and redirect messages.

| Parameter         | Description                                                                            |
|-------------------|----------------------------------------------------------------------------------------|
| <PACKET-INTERVAL> | Specifies the ICMPv4/v6 packet interval in seconds. Default: 1 second. Range: 1-86400. |

### Examples

Enabling the throttle parameter for both ICMPv4 and ICMPv6 error messages and redirect messages:

```
switch(config)# ip icmp throttle 3000
```

Disabling the throttle parameter for both ICMPv4 and ICMPv6 error messages and redirect messages:

```
switch(config)# no ip icmp throttle
```

### Command History

| Release          | Modification                                                                               |
|------------------|--------------------------------------------------------------------------------------------|
| 10.8             | Added the optional <PACKET-INTERVAL> parameter to the <code>no</code> form of the command. |
| 10.07 or earlier | --                                                                                         |

## Command Information

| Platforms     | Command context | Authority                                                                          |
|---------------|-----------------|------------------------------------------------------------------------------------|
| All platforms | config          | Administrators or local user group members with execution rights for this command. |

## ip icmp unreachable

```
ip icmp unreachable
no ip icmp unreachable
```

### Description

Enables the sending of ICMPv4 and ICMPv6 destination unreachable messages on the switch to a source host when a specific host is unreachable. The unreachable host address originates from the failed packet. Default setting.

The `no` form of this command disables the sending of ICMPv4 and ICMPv6 destination unreachable messages from the switch to a source host when a specific host is unreachable. This command does not prevent other hosts from sending an ICMP unreachable message.

### Examples

Enabling ICMPv4 and ICMPv6 destination unreachable messages to a source host:

```
switch(config)# ip icmp unreachable
```

Disabling ICMPv4 and ICMPv6 destination unreachable messages to a source host:

```
switch(config)# no ip icmp unreachable
```

### Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

### Command Information

| Platforms     | Command context | Authority                                                                          |
|---------------|-----------------|------------------------------------------------------------------------------------|
| All platforms | config          | Administrators or local user group members with execution rights for this command. |

The Domain Name System (DNS) is the Internet protocol for mapping a hostname to its IP address. DNS allows users to enter more readily memorable and intuitive hostnames, rather than IP addresses, to identify devices connected to a network. It also allows a host to keep the same hostname even if it changes its IP address.

Hostname resolution can be either static or dynamic.

- In static resolution, a local table is defined on the switch that associates hostnames with their IP addresses. Static tables can be used to speed up the resolution of frequently queried hosts.
- Dynamic resolution requires that the switch query a DNS server located elsewhere on the network. Dynamic name resolution takes more time than static name resolution, but requires far less configuration and management.

## DNS client

The DNS client resolves hostnames to IP addresses for protocols that are running on the switch. When the DNS client receives a request to resolve a hostname, it can do so in one of two ways:

- Forward the request to a DNS name server for resolution.
- Reply to the request without using a DNS name server, by resolving the name using a statically defined table of hostnames and their associated IP addresses.

## Configuring the DNS client

### Procedure

1. Configure one or more DNS name servers with the command `ip dns server`.
2. To resolve DNS requests by appending a domain name to the requests, either configure a single domain name with the command `ip dns domain-name`, or configure a list of up to six domain names with the command `ip dns domain-list`.
3. To use static name resolution for certain hosts, associate an IP address to a host with the command `ip dns host`.
4. Review your DNS configuration settings with the command `show ip dns`.

### Examples

This example creates the following configuration:

- Defines the domain **switch.com** to append to all requests.
- Defines a DNS server with IPv4 address of **1.1.1.1**.
- Defines a static DNS host named **myhost1** with an IPv4 address of **3.3.3.3**.
- DNS client traffic is sent on the default VRF (named **default**).

```

switch(config)# ip dns domain-name switch.com
switch(config)# ip dns server-address 1.1.1.1
switch(config)# ip dns host myhost1 3.3.3.3
switch(config)# exit
switch# show ip dns

```

```

VRF Name : vrf_mgmt

```

| Host Name | Address |
|-----------|---------|
| -----     |         |

```

VRF Name : vrf_default
Domain Name : switch.com
DNS Domain list :
Name Server(s) : 1.1.1.1

```

| Host Name | Address |
|-----------|---------|
| -----     |         |
| myhost1   |         |

This example creates the following configuration:

- Defines three domains to append to DNS requests **domain1.com**, **domain2.com**, **domain3.com** with traffic forwarding on VRF **mainvrf**.
- Defines a DNS server with an IPv6 address of **c::13**.
- Defines a DNS host named **myhost** with an IPv4 address of **3.3.3.3**.

```

switch(config)# ip dns domain-list domain1.com vrf mainvrf
switch(config)# ip dns domain-list domain2.com vrf mainvrf
switch(config)# ip dns domain-list domain3.com vrf mainvrf
switch(config)# ip dns server-address c::13
switch(config)# ip dns host myhost 3.3.3.3 vrf mainvrf
switch(config)# quit
switch# show ip dns mainvrf

```

```

VRF Name : mainvrf
Domain Name :
DNS Domain list : domain1.com, domain2.com, domain3.com
Name Server(s) : c::13

```

| Host Name | Address |
|-----------|---------|
| -----     |         |
| myhost    | 3.3.3.3 |

## DNS client commands

### ip dns domain-list

```

ip dns domain-list <DOMAIN-NAME> [vrf <VRF-NAME>]
no ip dns domain-list <DOMAIN-NAME> [vrf <VRF-NAME>]

```

#### Description

Configures one or more domain names that are appended to the DNS request. The DNS client appends each name in succession until the DNS server replies. Domains can be either IPv4 or IPv6. By default, requests are forwarded on the default VRF.

The **no** form of this command removes a domain from the list.

| Parameter                             | Description                                                                                       |
|---------------------------------------|---------------------------------------------------------------------------------------------------|
| <code>list &lt;DOMAIN-NAME&gt;</code> | Specifies a domain name. Up to six domains can be added to the list. Length: 1 to 256 characters. |
| <code>vrf &lt;VRF-NAME&gt;</code>     | Specifies a VRF name. Default: default.                                                           |

## Examples

This example defines a list with two entries: **domain1.com** and **domain2.com**.

```
switch(config)# ip dns domain-list domain1.com
switch(config)# ip dns domain-list domain2.com
```

This example defines a list with two entries, **domain2.com** and **domain5.com**, with requests being sent on **mainvrf**.

```
switch(config)# ip dns domain-list domain2.com vrf mainvrf
switch(config)# ip dns domain-list domain5.com vrf mainvrf
```

This example removes the entry **domain1.com**.

```
switch(config)# no ip dns domain-list domain1.com
```

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms     | Command context | Authority                                                                          |
|---------------|-----------------|------------------------------------------------------------------------------------|
| All platforms | config          | Administrators or local user group members with execution rights for this command. |

## ip dns domain-name

```
ip dns domain-name <DOMAIN-NAME> [vrf <VRF-NAME>]
no ip dns domain-name <DOMAIN-NAME> [vrf <VRF-NAME>]
```

## Description

Configures a domain name that is appended to the DNS request. The domain can be either IPv4 or IPv6. By default, requests are forwarded on the default VRF. If a domain list is defined with the command `ip dns domain-list`, the domain name defined with this command is ignored.

The **no** form of this command removes the domain name.

| Parameter                         | Description                                                                       |
|-----------------------------------|-----------------------------------------------------------------------------------|
| <code>&lt;DOMAIN-NAME&gt;</code>  | Specifies the domain name to append to DNS requests. Length: 1 to 256 characters. |
| <code>vrf &lt;VRF-NAME&gt;</code> | Specifies a VRF name. Default: default.                                           |

## Examples

Setting the default domain name to `domain.com`:

```
switch(config)# ip dns domain-name domain.com
```

Removing the default domain name `domain.com`:

```
switch(config)# no ip dns domain-name domain.com
```

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms     | Command context     | Authority                                                                          |
|---------------|---------------------|------------------------------------------------------------------------------------|
| All platforms | <code>config</code> | Administrators or local user group members with execution rights for this command. |

## ip dns host

```
ip dns host <HOST-NAME> <IP-ADDR> [vrf <VRF-NAME>]
no ip dns host <HOST-NAME> <IP-ADDR> [vrf <VRF-NAME>]
```

## Description

Associates a static IP address with a hostname. The DNS client returns this IP address instead of querying a DNS server for an IP address for the hostname. Up to six hosts can be defined. If no VRF is defined, the default VRF is used.

The `no` form of this command removes a static IP address associated with a hostname.

| Parameter                           | Description                                                                                                                                                                                                                                                 |
|-------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>host &lt;HOST-NAME&gt;</code> | Specifies the name of a host. Length: 1 to 256 characters.                                                                                                                                                                                                  |
| <code>&lt;IP-ADDR&gt;</code>        | Specifies an IP address in IPv4 format ( <code>x.x.x.x</code> ), where <code>x</code> is a decimal number from 0 to 255, or IPv6 format ( <code>xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx</code> ), where <code>x</code> is a hexadecimal number from 0 to F. |
| <code>vrf &lt;VRF-NAME&gt;</code>   | Specifies a VRF name. Default: default.                                                                                                                                                                                                                     |



## Examples

This example defines an IPv4 address of **3.3.3.3** for **host1**.

```
switch(config)# ip dns host host1 3.3.3.3
```

This example defines an IPv6 address of **b::5** for **host 1**.

```
switch(config)# ip dns host host1 b::5
```

This example defines removes the entry for **host 1** with address **b::5**.

```
switch(config)# no ip dns host host1 b::5
```

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms     | Command context | Authority                                                                          |
|---------------|-----------------|------------------------------------------------------------------------------------|
| All platforms | config          | Administrators or local user group members with execution rights for this command. |

## ip dns server address

```
ip dns server-address <IP-ADDR> [vrf <VRF-NAME>]
no ip dns server-address <IP-ADDR> [vrf <VRF-NAME>]
```

## Description

Configures the DNS name servers that the DNS client queries to resolve DNS queries. Up to six name servers can be defined. The DNS client queries the servers in the order that they are defined. If no VRF is defined, the default VRF is used.

The **no** form of this command removes a name server from the list.

| Parameter      | Description                                                                                                                                                                                         |
|----------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <IP-ADDR>      | Specifies an IP address in IPv4 format (x.x.x.x), where x is a decimal number from 0 to 255, or IPv6 format (xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx), where x is a hexadecimal number from 0 to F. |
| vrf <VRF-NAME> | Specifies a VRF name. Default: default.                                                                                                                                                             |

## Examples

This example defines a name server at **1.1.1.1**.

```
switch(config)# ip dns server-address 1.1.1.1
```

This example defines a name server at **a::1**.

```
switch(config)# ip dns server-address a::1
```

This example removes a name server at **a::1**.

```
switch(config)# no ip dns server-address a::1
```

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms     | Command context | Authority                                                                          |
|---------------|-----------------|------------------------------------------------------------------------------------|
| All platforms | config          | Administrators or local user group members with execution rights for this command. |

## show ip dns

```
show ip dns [vrf <VRF-NAME>] [vsx-peer]
```

## Description

Shows all DNS client configuration settings or the settings for a specific VRF.

| Parameter      | Description                                                                                                                                                                                                                      |
|----------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| vrf <VRF-NAME> | Specifies the VRF for which to show information. If no VRF is defined, the default VRF is used.                                                                                                                                  |
| vsx-peer       | Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX. |

## Examples

These examples define DNS settings and then show how they are displayed with the `show ip dns` command.

```
switch(config)# ip dns domain-name domain.com
switch(config)# ip dns domain-list domain5.com
switch(config)# ip dns domain-list domain8.com
switch(config)# ip dns server-address 4.4.4.4
switch(config)# ip dns server-address 6.6.6.6
```

```

switch(config)# ip dns host host3 5.5.5.5
switch(config)# ip dns host host2 2.2.2.2
switch(config)# ip dns host host3 c::12
switch(config)# ip dns domain-name reddomain.com vrf red
switch(config)# ip dns domain-list reddomain5.com vrf red
switch(config)# ip dns domain-list reddomain8.com vrf red
switch(config)# ip dns server-address 4.4.4.5 vrf red
switch(config)# ip dns server-address 6.6.6.7 vrf red
switch(config)# ip dns host host3 5.5.5.6 vrf red
switch(config)# ip dns host host2 2.2.2.3 vrf red
switch(config)# ip dns host host3 c::13 vrf red
switch# show ip dns
VRF Name : default

```

```

Domain Name : domain.com
DNS Domain list : domain5.com, domain8.com
Name Server(s) : 4.4.4.4, 6.6.6.6

```

| Host Name | Address |
|-----------|---------|
| host2     | 2.2.2.2 |
| host3     | 5.5.5.5 |
| host3     | c::12   |

VRF Name : red

```

Domain Name : reddomain.com
DNS Domain list : reddomain5.com, reddomain8.com
Name Server(s) : 4.4.4.5, 6.6.6.7

```

| Host Name | Address |
|-----------|---------|
| host2     | 2.2.2.3 |
| host3     | 5.5.5.6 |
| host3     | c::13   |

```

switch(config)# ip dns domain-name domain.com vrf red
switch(config)# ip dns domain-list domain5.com vrf red
switch(config)# ip dns domain-list domain8.com vrf red
switch(config)# ip dns server-address 4.4.4.4 vrf red
switch(config)# ip dns server-address 6.6.6.6 vrf red
switch(config)# ip dns host host3 5.5.5.5 vrf red
switch(config)# no ip dns host host2 2.2.2.2 vrf red
switch(config)# ip dns host host3 c::12 vrf red

```

```

switch# show ip dns vrf red
VRF Name : red

```

```

Domain Name : domain.com
DNS Domain list : domain5.com, domain8.com
Name Server(s) : 4.4.4.4, 6.6.6.6

```

| Host Name | Address |
|-----------|---------|
| host3     | 5.5.5.5 |
| host3     | c::12   |

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms     | Command context | Authority                                                                                                                                                              |
|---------------|-----------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| All platforms | Manager (#)     | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

ARP (Address Resolution Protocol) is used to map the network address assigned to a device to its physical address. For example, on an Ethernet network, ARP maps layer 3 IPv4 network addresses to layer 2 MAC addresses. (ARP does not work with IPv6 addresses. Instead, the Neighbor discovery protocol is used.)

ARP operates at layer 2. ARP requests are broadcast to all devices on the local network segment and are not forwarded by routers. ARP is enabled by default and cannot be disabled.

### Proxy ARP

Proxy ARP allows a routing switch to answer ARP requests from devices on one network on behalf of devices on another network. The ARP proxy is aware of the location of the traffic destination, and offers its own MAC address as the final destination.

For example, if Proxy ARP is enabled on a routing switch connected to two subnets (10.10.10.0/24 and 20.20.20.0/24), the routing switch can respond to an ARP request from 10.10.10.69 for the MAC address of the device with IP address 20.20.20.69.

Typically, the host that sent the ARP request then sends its packets to the switch that has the ARP proxy. This switch then forwards the packets to the intended host through a mechanism such as a tunnel.

Proxy ARP is supported on L3 physical and VLAN interfaces. It is disabled by default. To enable proxy ARP, routing must be enabled on the interface.

### Local proxy ARP

Local proxy ARP is a technique by which a device on a given network answers the ARP queries for a host address that is on the same network. It is primarily used to enable layer 3 communication between hosts within a common subnet that are separated by layer 2 boundaries (Example: PVLAN). Local proxy ARP is supported on L3 physical and VLAN interfaces.

Local proxy ARP is disabled by default. Routing must be enabled on the interface to enable local proxy ARP.

### Dynamic ARP inspection

ARP is used for resolving IP against MAC addresses on a broadcast network segment like the Ethernet and was originally defined by Internet Standard RFC 826. ARP does not support any inherent security mechanism and as such depends on simple datagram exchanges for the resolution, with many of these being broadcast.

Because it is an unreliable and non-secure protocol, ARP is vulnerable to attacks. Some attacks may be targeted toward the networks whereas other attacks may be targeted toward the switch itself. The attacks primarily intend to create denial of service (DoS) for the other entities present in the network.

Most of the attacks are carried out in one of the following three forms:

- Overwhelming the switch control plane with too many ARP packets.
- Overwhelming the switch control plane with too many unresolved data packets.
- Masquerading as a trusted gateway/server by wrongly advertising ARPs.

Several defense mechanisms can be put in place on a switch to protect against attacks:

- Limit the amount of ARP activity allowed from a host or on a port.
- Ensure that all ARP packets are consistent with one or more binding databases, which can be created through various means.
- Enforce integrity checks on the ARP packets to check against different MAC or IP addresses in the Ethernet or IP header and ARP header.

Only the following is supported:

- Enabling and disabling of Dynamic ARP Inspection on a VLAN level (it does not have to be SVI).
- Defining the member ports of a VLAN as either trusted or untrusted.
- Only ARP traffic on untrusted ports subjected to checks.
- Routed ports (RoPs) always treated as trusted.
- Listening to the DHCP Bindings table and check every ARP packet to match against the binding.

ARP ACLs are not supported in this release and the DHCP snooping table will be the only source of binding.

## Configuring proxy ARP

### Procedure

1. Switch to configuration context with the command `config`.
2. Switch to an interface with the command `interface`, or to an interface VLAN with the command `interface vlan`, or to a LAG with the command `interface lag`.
3. Enable local proxy ARP with the command `ip proxy-arp`.

### Examples

This example configures proxy ARP on interface **1/1/2**

```
switch# config
switch(config)# interface 1/1/2
switch(config-if)# ip proxy-arp
```

This example configures proxy ARP on interface VLAN **30**.

```
switch# config
switch(config)# interface vlan 30
switch(config-vlan-30)# ip proxy-arp
```

## Configuring local proxy ARP

### Procedure

1. Switch to configuration context with the command `config`.
2. Switch to an interface with the command `interface`, or to an interface VLAN with the command

interface vlan, or to a LAG with the command `interface lag`.

3. Enable local proxy ARP with the command `ip local-proxy-arp`.

## Examples

This example configures local proxy ARP on interface **1/1/2**

```
switch# config
switch(config)# interface 1/1/2
switch(config-if)# ip local-proxy-arp
```

This example configures local proxy ARP on interface VLAN **30**.

```
switch# config
switch(config)# interface vlan 30
switch(config-vlan-30)# ip local-proxy-arp
```

## ARP commands

### arp inspection trust

```
arp inspection trust
no arp inspection trust
```

#### Description

Configures the interface as a trusted. All interfaces are untrusted by default.

The `no` form of this command returns the interface to the default state (untrusted).

#### Example

Setting an interface as trusted:

```
switch(config-if)# arp inspection trust
```

#### Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

#### Command Information

| Platforms     | Command context | Authority                                                                          |
|---------------|-----------------|------------------------------------------------------------------------------------|
| All platforms | config-if       | Administrators or local user group members with execution rights for this command. |

### arp process-grat-arp

```
arp process-grat-arp
no arp process-grat-arp
```

## Description

Enables the processing of gratuitous ARP packets on the individual port or group of L3 ports together. By default, the gratuitous ARP processing is enabled. When gratuitous ARP (GARP) processing is enabled, a switch that is advertising any changes in its MAC through the GARP will reflect in the neighbor table of the switch. However, the switch will not be able to learn the neighbor through the GARP. This configuration is applicable only on L3 interfaces such as ROPs, subinterfaces, and SVIs. The `no` form of this command disables the processing of gratuitous ARP packets.

## Example

Enabling the processing of gratuitous ARP packets on the interface **1/1/1**:

```
switch(config)# interface 1/1/1
switch(config-if)# no shutdown
switch(config-if)# arp process-grat-arp
```

Enabling the processing of gratuitous ARP packets on interfaces **1/1/1** to **1/1/5**:

```
switch(config)# interface 1/1/1-1/1/5
switch(config-if<1/1/1-1/1/5>)# no shutdown
switch(config-if<1/1/1-1/1/5>)# arp process-grat-arp
```

Enabling the processing of gratuitous ARP packets on sub-interface **1/1/1.10**:



---

Applies only to the Aruba 6300, 6400, and 8360 Switch Series.

---

```
switch(config)# interface 1/1/1.10
switch(config-subif)# no shutdown
switch(config-subif)# arp process-grat-arp
```

Disabling the processing of gratuitous ARP packets on VLANs **2** to **100**:

```
switch(config)# interface vlan 2-100
switch(config-if-vlan<2-100>)# no shutdown
switch(config-if-vlan<2-100>)# no arp process-grat-arp
```

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms     | Command context                             | Authority                                                                          |
|---------------|---------------------------------------------|------------------------------------------------------------------------------------|
| All platforms | config-if<br>config-if-vlan<br>config-subif | Administrators or local user group members with execution rights for this command. |



## arp ipv4 mac

```
arp ipv4 <IPV4_ADDR> mac <MAC_ADDR>
no arp ipv4 <IPV4_ADDR> mac <MAC_ADDR>
```

### Description

Specifies a permanent static neighbor entry in the ARP table (for IPv4 neighbors).

The `no` form of this command deletes a permanent static neighbor entry from the ARP table.

| Parameter                           | Description                                                                                                                                                                                      |
|-------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>ipv4 &lt;IPV4-ADDR&gt;</code> | Specifies the IP address of the neighbor or the virtual IP address of the cluster in IPv4 format (x.x.x.x), where x is a decimal number from 0 to 255. . Range: 4096 to 131072. Default: 131072. |
| <code>mac &lt;MAC-ADDR&gt;</code>   | Specifies the MAC address of the neighbor or the multicast MAC address in IANA format (xx:xx:xx:xx:xx:xx), where x is a hexadecimal number from 0 to F. Range: 4096 to 131072. Default: 131072.  |

### Example

Configuring a static ARP entry on a interface VLAN 10:

```
switch(config)# interface vlan 10
switch(config-if-vlan)# arp ipv4 2.2.2.2 mac 01:00:5e:00:00:01
```

Removing a static ARP entry on interface VLAN10:

```
switch(config)# interface vlan 10
switch(config-if-vlan)# no arp ipv4 2.2.2.2 mac 01:00:5e:00:00:01
```

### Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

### Command Information

| Platforms     | Command context             | Authority                                                                          |
|---------------|-----------------------------|------------------------------------------------------------------------------------|
| All platforms | config-if<br>config-if-vlan | Administrators or local user group members with execution rights for this command. |

## clear arp

```
clear arp [port <PORT-ID> | vrf {all-vrfs | <VRF-NAME>}]
```

### Description

Clears IPv4 and IPv6 neighbor entries from the ARP table. If you do not specify any parameters, ARP table entries are cleared for the default VRF.

| Parameter      | Description                                                                             |
|----------------|-----------------------------------------------------------------------------------------|
| port <PORT-ID> | Specifies a physical port on the switch. Format: member/slot/port. For example: 1/1/1.. |
| all-vrfs       | Selects all VRFs.                                                                       |
| <VRF-NAME>     | Specifies the name of a VRF. Default: default.                                          |

## Examples

Clearing all IPv4 and IPv6 neighbor ARP entries for the default VRF:

```
switch# clear arp
```

Clearing all ARP neighbor entries for a port:

```
switch# clear arp 1/1/35
```

Clearing all IPv4 and IPv6 neighbor ARP entries for all VRFs:

```
switch# clear arp vrf all-vrfs
```

Clearing all IPv4 and IPv6 neighbor ARP entries for a specific VRF instance:

```
switch# clear arp vrf RED
```

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms     | Command context | Authority                                                                          |
|---------------|-----------------|------------------------------------------------------------------------------------|
| All platforms | Manager (#)     | Administrators or local user group members with execution rights for this command. |

## ip local-proxy-arp

```
ip local-proxy-arp
no ip local-proxy-arp
```

## Description

Enables local proxy ARP on the specified interface. Local proxy ARP is supported on Layer 3 physical interfaces and on VLAN interfaces. To enable local proxy ARP on an interface, routing must be enabled on that interface.

The `no` form of this command disables local proxy ARP on the specified interface.

## Examples

Enabling local proxy ARP on interface **1/1/1**:

```
switch# interface 1/1/1
switch(config-if)# ip local proxy-arp
```

Enabling local proxy ARP on interface VLAN **3**:

```
switch# interface vlan 3
switch(config-if-vlan)# ip local-proxy-arp
```

Disabling local proxy ARP on on interface **1/1/1**.

```
switch# interface 1/1/1
switch(config-if)# no ip local-proxy-arp
```

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms     | Command context             | Authority                                                                          |
|---------------|-----------------------------|------------------------------------------------------------------------------------|
| All platforms | config-if<br>config-if-vlan | Administrators or local user group members with execution rights for this command. |

## ipv6 neighbor mac

```
ipv6 neighbor <IPV6-ADDR> mac <MAC-ADDR>
no ipv6 neighbor <IPV6-ADDR> mac <MAC-ADDR>
```

## Description

Specifies a permanent static neighbor entry in the ARP table (for IPv6 neighbors).

The **no** form of this command deletes a permanent static neighbor entry from the ARP table.

| Parameter       | Description                                                                                                                                                            |
|-----------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <IPV6-ADDR>>    | Specifies an IP address in IPv6 format (xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx), where x is a hexadecimal number from 0 to F. Range: 4096 to 131072. Default: 131072. |
| mac <MAC-ADDR>> | Specifies the MAC address of the neighbor (xx:xx:xx:xx:xx:xx), where x is a hexadecimal number from 0 to F. Range: 4096 to 131072. Default: 131072.                    |

## Example

Creates a static ARP entry on interface **1/1/1**.

```
switch(config)# interface 1/1/1
switch(config-if)# arp ipv6 neighbor 2001:0db8:85a3::8a2e:0370:7334 mac
00:50:56:96:df:c8
```

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms     | Command context | Authority                                                                          |
|---------------|-----------------|------------------------------------------------------------------------------------|
| All platforms | config-if       | Administrators or local user group members with execution rights for this command. |

## ip proxy-arp

```
ip proxy-arp
no ip proxy-arp
```

### Description

Enables proxy ARP for the specified Layer 3 interface. Proxy ARP is supported on Layer 3 physical interfaces, LAG interfaces, and VLAN interfaces. It is disabled by default. To enable proxy ARP on an interface, routing must be enabled on that interface.

The `no` form of this command disables proxy ARP for the specified interface.

### Examples

Enabling proxy ARP on interface **1/1/1**:

```
switch# interface 1/1/1
switch(config-if)# ip proxy-arp
```

Enabling proxy ARP on VLAN **3**:

```
switch# interface vlan 3
switch(config-if-vlan)# ip proxy-arp
```

Enabling proxy ARP on a LAG **11**:

```
switch(config)# int lag 11
switch(config-lag-if)# ip proxy-arp
```

Disabling proxy ARP on interface 1/1/1:

```
switch# interface 1/1/1
switch(config-if)# no ip proxy-arp
```

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms     | Command context                                | Authority                                                                          |
|---------------|------------------------------------------------|------------------------------------------------------------------------------------|
| All platforms | config-if<br>config-if-vlan<br>config-lag-vlan | Administrators or local user group members with execution rights for this command. |

## show arp

show arp [vsx-peer]

### Description

Shows the entries in the ARP (Address Resolution Protocol) table.

| Parameter | Description                                                                                                                                                                                                                      |
|-----------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| vsx-peer  | Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX. |

### Usage

This command displays information about ARP entries, including the IP address, MAC address, port, and state.

When no parameters are specified, the `show arp` command shows all ARP entries for the default VRF (Virtual Router Forwarding) instance.

### Examples

```
switch# show arp
```

| IPv4 Address | MAC               | Port   | Physical Port |           |
|--------------|-------------------|--------|---------------|-----------|
| 192.168.1.2  | 00:50:56:96:7b:e0 | vlan10 | 1/1/29        | stale     |
| 192.168.1.3  | 00:50:56:96:7b:ac | vlan10 | 1/1/1         | reachable |

```
Total Number Of ARP Entries Listed- 2.
```

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms     | Command context | Authority                                                                          |
|---------------|-----------------|------------------------------------------------------------------------------------|
| All platforms | Manager (#)     | Administrators or local user group members with execution rights for this command. |

## show arp inspection interface

show arp inspection interface

### Description

Displays the current configuration of dynamic ARP inspection on a VLAN or interface.

### Examples

```
switch# show arp inspection interface
```

```

Interface Trust-State

1/1/1 Untrusted

```

```
switch# show arp inspection interface vsx-peer
```

```

Interface Trust-State

1/1/1 Untrusted
lag100 Trusted

```

```
switch# show arp inspection interface 1/1/1
```

```

Interface Trust-State

1/1/1 Untrusted

```

### Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

### Command Information

| Platforms     | Command context             | Authority                                                                                                                                                              |
|---------------|-----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| All platforms | Operator (>) or Manager (#) | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

## show arp inspection statistics

show arp inspection statistics

### Description

Displays statistics about forwarded and dropped ARP packets.

### Examples

```
switch# show arp inspection statistics vlan 1-200
```

| VLAN | Name           | Forwarded | Dropped |
|------|----------------|-----------|---------|
| 1    | DEFAULT_VLAN_1 | 0         | 0       |

```
switch# show arp inspection statistics vlan
```

| VLAN | Name           | Forwarded | Dropped |
|------|----------------|-----------|---------|
| 1    | DEFAULT_VLAN_1 | 0         | 0       |
| 200  | VLAN200        | 0         | 0       |

### Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

### Command Information

| Platforms     | Command context             | Authority                                                                                                                                                              |
|---------------|-----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| All platforms | Operator (>) or Manager (#) | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

## show arp state

show arp state {all | failed | incomplete | permanent | reachable | stale} [vsx-peer]

### Description

Shows ARP (Address Resolution Protocol) cache entries that are in the specified state.

| Parameter | Description                                                                    |
|-----------|--------------------------------------------------------------------------------|
| all       | Shows the ARP cache entries for all VRF (Virtual Router Forwarding) instances. |
| failed    | Shows the ARP cache entries that are in <code>failed</code> state. The         |

| Parameter  | Description                                                                                                                                                                                                                                                                                                       |
|------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|            | neighbor might have been deleted.                                                                                                                                                                                                                                                                                 |
| incomplete | Shows the ARP cache entries that are in <code>incomplete</code> state. An incomplete state means that address resolution is in progress and the link-layer address of the neighbor has not yet been determined. A solicitation request was sent, and the switch is waiting for a solicitation reply or a timeout. |
| permanent  | Shows the ARP cache entries that are in <code>permanent</code> state. ARP entries that are in a permanent state can be removed by administrative action only.                                                                                                                                                     |
| reachable  | Shows the ARP cache entries that are in <code>reachable</code> state, meaning that the neighbor is known to have been reachable recently.                                                                                                                                                                         |
| stale      | Shows ARP cache entries that are in <code>stale</code> state. ARP cache entries are in the <code>stale</code> state if the elapsed time is in excess of the ARP timeout in seconds since the last positive confirmation that the forwarding path was functioning properly.                                        |
| vsx-peer   | Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.                                                                                  |

## Examples

```
switch# show arp state failed
```

| IPv4 Address | MAC | Port   | Physical Port | State  |
|--------------|-----|--------|---------------|--------|
| 192.168.1.4  |     | vlan10 |               | failed |

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms     | Command context             | Authority                                                                                                                                                              |
|---------------|-----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| All platforms | Operator (>) or Manager (#) | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

## show arp summary

```
show arp summary [all-vrfs | vrf <VRF-NAME>] [vsx-peer]
```



## Description

Shows a summary of the IPv4 and IPv6 neighbor entries on the switch for all VRFs or a specific VRF.

| Parameter      | Description                                                                                                                                                                                                                      |
|----------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| all-vrfs       | Selects all VRFs.                                                                                                                                                                                                                |
| vrf <VRF-NAME> | Specifies the name of a VRF.                                                                                                                                                                                                     |
| vsx-peer       | Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX. |

## Examples

Showing summary ARP information for all VRFs:

```
switch# show arp summary all-vrfs

ARP Entry's State : IPv4 IPv6

Number of Reachable ARP entries : 2 0
Number of Stale ARP entries : 0 0
Number of Failed ARP entries : 2 2
Number of Incomplete ARP entries : 0 0
Number of Permanent ARP entries : 0 0

Total ARP Entries: 6 : 4 2

```

Showing a summary of all IPv4 and IPv6 neighbor entries on the primary and secondary (peer) switches:

```
vsx-primary# show arp summary
ARP Entry's State IPv4 IPv6

Number of Reachable ARP entries 25858 32231
Number of Stale ARP entries 0 1
Number of Failed ARP entries 0 257
Number of Incomplete ARP entries 0 0
Number of Permanent ARP entries 0 0

Total ARP Entries- 58347 25858 32489

vsx-primary# show arp summary vsx-peer
ARP Entry's State IPv4 IPv6

Number of Reachable ARP entries 25858 32168
Number of Stale ARP entries 0 3
Number of Failed ARP entries 0 317
```

|                                  |       |             |
|----------------------------------|-------|-------------|
| Number of Incomplete ARP entries | 0     | 0           |
| Number of Permanent ARP entries  | 0     | 0           |
| -----                            |       |             |
| Total ARP Entries-               | 58346 | 25858 32488 |
| -----                            |       |             |

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms     | Command context             | Authority                                                                                                                                                              |
|---------------|-----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| All platforms | Operator (>) or Manager (#) | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

## show arp timeout

show arp timeout [<INTERFACE>] [vsx-peer]

### Description

Shows the age-out period for each ARP (Address Resolution Protocol) entry for a port, LAG, or VLAN interface.

| Parameter   | Description                                                                                                                                                                                                                      |
|-------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <INTERFACE> | Specifies a physical port, VLAN, or LAG on the switch. For physical ports, use the format member/slot/port (for example, 1/3/1).                                                                                                 |
| vsx-peer    | Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX. |

## Examples

Showing ARP timeout information for a port:

```
switch# show arp timeout 1/1/1
ARP Timeout:

Port VRF Timeout
1/1/1 default 600
```

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms     | Command context             | Authority                                                                                                                                                              |
|---------------|-----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| All platforms | Operator (>) or Manager (#) | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

## show arp vrf

```
show arp {all-vrfs | vrf <VRF-NAME>} [vsx-peer]
```

## Description

Shows the ARP table for all VRF instances, or for the named VRF.

| Parameter      | Description                                                                                                                                                                                                                      |
|----------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| all-vrfs       | Specifies all VRFs.                                                                                                                                                                                                              |
| vrf <VRF-NAME> | Specifies the name of a VRF. Length: 1 to 32 alphanumeric characters.                                                                                                                                                            |
| vsx-peer       | Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX. |

## Examples

Showing ARP entries for VRF **test**.

```
switch# show arp vrf test
ARP IPv4 Entries:

IPv4 Address MAC Port Physical Port State VRF
10.20.30.40 00:50:56:bd:6a:c5 1/1/29 1/1/29 reachable test

Total Number Of ARP Entries Listed: 1.

switch# show arp all-vrfs
ARP IPv4 Entries:

IPv4 Address MAC Port Physical Port State VRF
192.168.120.10 00:50:56:bd:10:be 1/1/32 1/1/32 reachable red
10.20.30.40 00:50:56:bd:6a:c5 1/1/29 1/1/29 reachable test

Total Number Of ARP Entries Listed: 2.

```

Showing ARP entries for all VRFs.

```

switch# show arp all-vrfs
ARP IPv4 Entries:

IPv4 Address MAC Port Physical Port State VRF
192.168.120.10 00:50:56:bd:10:be 1/1/32 1/1/32 reachable red
10.20.30.40 00:50:56:bd:6a:c5 1/1/29 1/1/29 reachable test

Total Number Of ARP Entries Listed: 2.

```

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms     | Command context             | Authority                                                                                                                                                              |
|---------------|-----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| All platforms | Operator (>) or Manager (#) | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

## show ipv6 neighbors

```
show ipv6 neighbors {all-vrfs | vrf <VRF-NAME>} [vsx-peer]
```

### Description

Shows entries in the ARP table for all IPv6 neighbors for all VRFs or for a specific VRF.

When no parameters are specified, this command shows all ARP entries for the default VRF, and state information for `reachable` and `stale` entries only.

| Parameter                         | Description                                                                                                                                                                                                                      |
|-----------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>all-vrfs</code>             | Specifies all VRFs.                                                                                                                                                                                                              |
| <code>vrf &lt;VRF-NAME&gt;</code> | Specifies the name of a VRF. Length: 1 to 32 alphanumeric characters.                                                                                                                                                            |
| <code>vsx-peer</code>             | Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX. |

## Examples

```

switch# show ipv6 neighbors
IPv6 Entries:

IPv6 Address MAC Port Physical Port State

```

```

fe80::a21d:48ff:fe8f:2700 a0:1d:48:8f:27:00 vlan2300 1/1/31 reachable
fe80::f603:43ff:fe80:a600 f4:03:43:80:a6:00 vlan2300 1/1/30 reachable

Total Number Of IPv6 Neighbors Entries Listed: 2.

```

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms     | Command context             | Authority                                                                          |
|---------------|-----------------------------|------------------------------------------------------------------------------------|
| All platforms | Operator (>) or Manager (#) | Administrators or local user group members with execution rights for this command. |

## show ipv6 neighbors state

```
show ipv6 neighbors state {all | failed | incomplete | permanent | reachable | stale}
[vsx-peer]
```

## Description

Shows all IPv6 neighbor ARP (Address Resolution Protocol) cache entries, or those cache entries that are in the specified state.

| Parameter  | Description                                                                                                                                                                                                                                                                                                                |
|------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| all        | Shows all ARP cache entries.                                                                                                                                                                                                                                                                                               |
| failed     | Shows ARP cache entries that are in <code>failed</code> state. The neighbor might have been deleted. Set the neighbor to be unreachable.                                                                                                                                                                                   |
| incomplete | Shows ARP cache entries that are in <code>incomplete</code> state.<br>An incomplete state means that address resolution is in progress and the link-layer address of the neighbor has not yet been determined. This means that a solicitation request was sent, and you are waiting for a solicitation reply or a timeout. |
| permanent  | Shows ARP cache entries that are in <code>permanent</code> state.                                                                                                                                                                                                                                                          |
| reachable  | Shows ARP cache entries that are in <code>reachable</code> state, meaning that the neighbor is known to have been reachable recently.                                                                                                                                                                                      |
| stale      | Shows ARP cache entries that are in <code>stale</code> state.<br>ARP cache entries are in the <code>stale</code> state if the elapsed time is in excess of the ARP timeout in seconds since the last positive                                                                                                              |

| Parameter | Description                                                                                                                                                                                                                      |
|-----------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|           | confirmation that the forwarding path was functioning properly.                                                                                                                                                                  |
| vsx-peer  | Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX. |

## Example

```
switch# show ipv6 neighbors state all
```

| IPv6 Address              | MAC               | Port   | Physical Port | State |
|---------------------------|-------------------|--------|---------------|-------|
| 100::2                    | 48:0f:cf:af:f1:cc | lag1   | lag1          |       |
| reachable                 |                   |        |               |       |
| 300::3                    | 48:0f:cf:af:33:be | vlan3  | 1/4/20        |       |
| reachable                 |                   |        |               |       |
| fe80::4a0f:cfff:feaf:f1cc | 48:0f:cf:af:f1:cc | lag1   | lag1          |       |
| reachable                 |                   |        |               |       |
| 200::3                    | 48:0f:cf:af:33:be | 1/4/11 | 1/4/11        |       |
| reachable                 |                   |        |               |       |
| fe80::4a0f:cfff:feaf:33be | 48:0f:cf:af:33:be | vlan3  | 1/4/20        |       |
| reachable                 |                   |        |               |       |

Total Number Of IPv6 Neighbors Entries Listed- 5.

## Command History

| Release          | Modification |
|------------------|--------------|
| 10.07 or earlier | --           |

## Command Information

| Platforms     | Command context             | Authority                                                                                                                                                              |
|---------------|-----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| All platforms | Operator (>) or Manager (#) | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

Network Load Balancing (NLB) is a load balancing technology for server clustering. NLB supports load sharing and redundancy among servers within a cluster. To implement fast failover, NLB requires that the switch forwards network traffic to one or all servers in the cluster. Each server filters out the unexpected traffic. For more information, see [Configuring network infrastructure to support the NLB operation mode](#)

NLB is used to spread incoming requests across as many as 32 servers. Currently, NLB in AOS-CX supports only IGMP multicast mode. The IGMP multicast mode sends the packets out of the ports which connect to the cluster members. Assign a static multicast MAC address within the Internet Assigned Numbers Authority (IANA) range to the cluster's virtual unicast IP address. The clustered servers send IGMP joins to the configured multicast cluster group. If IGMP snooping is enabled, the switch dynamically populates the IGMP snooping table with the clustered servers, which prevents unicast flooding.

## NLB commands

### arp ipv4 mac

```
arp ipv4 <IPv4-ADDR> mac <MAC-ADDR>
no arp ipv4 <IPv4-ADDR> mac <MAC-ADDR>
```

#### Description

Configures static ARP multicast on the interface.

The `no` form of this command removes the static ARP multicast configuration.

| Parameter   | Description                                                                                              |
|-------------|----------------------------------------------------------------------------------------------------------|
| <IPv4-ADDR> | Specifies cluster's virtual IPv4 address.                                                                |
| <MAC-ADDR>  | Specifies multicast MAC address in IANA format (xx:xx:xx:xx:xx:xx) and non IANA format (xxxx.xxxx.xxxx). |

#### Examples

Configuring static ARP multicast on an interface:

```
switch(config)# vlan 10
switch(config-vlan-10)# no shutdown
switch(config-vlan-10)# ip igmp snooping enable
switch(config-vlan-10)# exit
switch(config)# interface vlan10
switch(config-if-vlan)# ip igmp enable
switch(config-if-vlan)# arp ipv4 10.1.30.254 mac 01:00:5e:7f:1e:fe
```



If your NLB Virtual IP address is 10.1.30.254, then the server will join the 239.255.30.254 IGMP group. This IGMP group is mapped to the destination MAC address of 01:00:5e:7F:1E:FE.

On 8320, 8325, 9300, and 10000: The clusters sends the IGMP join to any valid multicast group IP address that is within the range from 224.0.0.0 to 239.255.255.255 except reserved group IP addresses.

### Command History

| Release          | Modification                              |
|------------------|-------------------------------------------|
| 10.08            | Added NLB support for 8360 Switch series. |
| 10.07 or earlier | --                                        |

### Command Information

| Platforms                             | Command context                 | Authority                                                                          |
|---------------------------------------|---------------------------------|------------------------------------------------------------------------------------|
| 8320<br>8325<br>8360<br>9300<br>10000 | config-if and<br>config-if-vlan | Administrators or local user group members with execution rights for this command. |

## show arp

show arp

### Description

Displays the static ARP multicast information.

### Examples

Displaying the static ARP multicast information:

```
switch# show arp

IPv4 Address MAC Port Physical Port State

3.3.3.3 01:00:5e:00:00:02 vlan10 1/1/1 permanent
2.2.2.2 01:00:5e:00:00:01 vlan10 1/1/1 permanent

Total Number Of ARP Entries Listed- 2.

```

### Command History

| Release          | Modification                              |
|------------------|-------------------------------------------|
| 10.08            | Added NLB support for 8360 Switch series. |
| 10.07 or earlier | --                                        |



## Command Information

| Platforms                             | Command context             | Authority                                                                          |
|---------------------------------------|-----------------------------|------------------------------------------------------------------------------------|
| 8320<br>8325<br>8360<br>9300<br>10000 | Operator (>) or Manager (#) | Administrators or local user group members with execution rights for this command. |

## show ip igmp snooping vlan group

show ip igmp snooping vlan <VLAN-ID> group IGMP-Group

### Description

Displays multicast joins (members of the cluster) participating in the IGMP group.

### Examples

Displaying multicast joins participating in the IGMP group:

```
switch# show ip igmp snooping vlan 10 group 239.255.30.254

VLAN ID : 10
VLAN Name : VLAN10

Group Address : 239.255.30.254
Last Reporter : 10.1.30.254
Group Type : Filter

Port Vers Mode Uptime Expires V1 V2 Sources Sources
----- - --- - - - - - - -
1/1/6 2 EXC 0m 21s 1m 12s Timer Timer Forwarded Blocked
```

## Command History

| Release          | Modification                              |
|------------------|-------------------------------------------|
| 10.08            | Added NLB support for 8360 Switch series. |
| 10.07 or earlier | --                                        |

## Command Information

| Platforms                             | Command context             | Authority                                                                          |
|---------------------------------------|-----------------------------|------------------------------------------------------------------------------------|
| 8320<br>8325<br>8360<br>9300<br>10000 | Operator (>) or Manager (#) | Administrators or local user group members with execution rights for this command. |

### Accessing Aruba Support

|                                             |                                                                                                                                                                                      |
|---------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Aruba Support Services                      | <a href="https://www.arubanetworks.com/support-services/">https://www.arubanetworks.com/support-services/</a>                                                                        |
| AOS-CX Switch Software Documentation Portal | <a href="https://www.arubanetworks.com/techdocs/AOS-CX/help_portal/Content/home.htm">https://www.arubanetworks.com/techdocs/AOS-CX/help_portal/Content/home.htm</a>                  |
| Aruba Support Portal                        | <a href="https://asp.arubanetworks.com/">https://asp.arubanetworks.com/</a>                                                                                                          |
| North America telephone                     | 1-800-943-4526 (US & Canada Toll-Free Number)<br>+1-408-754-1200 (Primary - Toll Number)<br>+1-650-385-6582 (Backup - Toll Number - Use only when all other numbers are not working) |
| International telephone                     | <a href="https://www.arubanetworks.com/support-services/contact-support/">https://www.arubanetworks.com/support-services/contact-support/</a>                                        |

Be sure to collect the following information before contacting Support:

- Technical support registration number (if applicable)
- Product name, model or version, and serial number
- Operating system name and version
- Firmware version
- Error messages
- Product-specific reports and logs
- Add-on products or components
- Third-party products or components

### Other useful sites

Other websites that can be used to find information:

|                                             |                                                                                                                                                                                         |
|---------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Airheads social forums and Knowledge Base   | <a href="https://community.arubanetworks.com/">https://community.arubanetworks.com/</a>                                                                                                 |
| AOS-CX Switch Software Documentation Portal | <a href="https://www.arubanetworks.com/techdocs/AOS-CX/help_portal/Content/home.htm">https://www.arubanetworks.com/techdocs/AOS-CX/help_portal/Content/home.htm</a>                     |
| Aruba Hardware Documentation                | <a href="https://www.arubanetworks.com/techdocs/hardware/DocumentationPortal/Content/home.htm">https://www.arubanetworks.com/techdocs/hardware/DocumentationPortal/Content/home.htm</a> |

|                         |                                                                                                                                       |
|-------------------------|---------------------------------------------------------------------------------------------------------------------------------------|
| Aruba software          | <a href="https://asp.arubanetworks.com/downloads">https://asp.arubanetworks.com/downloads</a>                                         |
| Software licensing      | <a href="https://lms.arubanetworks.com/">https://lms.arubanetworks.com/</a>                                                           |
| End-of-Life information | <a href="https://www.arubanetworks.com/support-services/end-of-life/">https://www.arubanetworks.com/support-services/end-of-life/</a> |
| Aruba Developer Hub     | <a href="https://developer.arubanetworks.com/">https://developer.arubanetworks.com/</a>                                               |

## Accessing Updates

You can access updates from the Aruba Support Portal or the HPE My Networking Website.

### Aruba Support Portal

<https://asp.arubanetworks.com/downloads>

If you are unable to find your product in the Aruba Support Portal, you may need to search My Networking, where older networking products can be found:

### My Networking

<https://www.hpe.com/networking/support>

To view and update your entitlements, and to link your contracts and warranties with your profile, go to the Hewlett Packard Enterprise Support Center **More Information on Access to Support Materials** page:

<https://support.hpe.com/portal/site/hpsc/aae/home/>

Access to some updates might require product entitlement when accessed through the Hewlett Packard Enterprise Support Center. You must have an HP Passport set up with relevant entitlements.

Some software products provide a mechanism for accessing software updates through the product interface. Review your product documentation to identify the recommended software update method.

To subscribe to eNewsletters and alerts:

<https://asp.arubanetworks.com/notifications/subscriptions> (requires an active Aruba Support Portal (ASP) account to manage subscriptions). Security notices are viewable without an ASP account.

## Warranty Information

To view warranty information for your product, go to <https://www.arubanetworks.com/support-services/product-warranties/>.

## Regulatory Information

To view the regulatory information for your product, view the *Safety and Compliance Information for Server, Storage, Power, Networking, and Rack Products*, available at <https://www.hpe.com/support/Safety-Compliance-EnterpriseProducts>

### Additional regulatory information

Aruba is committed to providing our customers with information about the chemical substances in our products as needed to comply with legal requirements, environmental data (company programs, product recycling, energy efficiency), and safety information and compliance data, (RoHS and WEEE). For more information, see <https://www.arubanetworks.com/company/about-us/environmental-citizenship/>.

## Documentation Feedback

Aruba is committed to providing documentation that meets your needs. To help us improve the documentation, send any errors, suggestions, or comments to Documentation Feedback ([docsfeedback-switching@hpe.com](mailto:docsfeedback-switching@hpe.com)). When submitting your feedback, include the document title, part number, edition, and publication date located on the front cover of the document. For online help content, include the product name, product version, help edition, and publication date located on the legal notices page.