

AOS-CX 10.15.xxxx Security Guide

8320, 8325, 8400, 9300, 10000 Switch Series



Hewlett Packard
Enterprise

Published: February 2025

Version: 1

Copyright Information

© Copyright 2025 Hewlett Packard Enterprise Development LP.

This product includes code licensed under certain open source licenses which require source compliance. The corresponding source for these components is available upon request. This offer is valid to anyone in receipt of this information and shall expire three years following the date of the final distribution of this product version by Hewlett Packard Enterprise Company. To obtain such source code, please check if the code is available in the HPE Software Center at <https://myenterpriselicense.hpe.com/cwp-ui/software> but, if not, send a written request for specific software version and product for which you want the open source code. Along with the request, please send a check or money order in the amount of US \$10.00 to:

Hewlett Packard Enterprise Company
Attn: General Counsel
WW Corporate Headquarters
1701 E Mossy Oaks Rd Spring, TX 77389
United States of America.



Notices

The information contained herein is subject to change without notice. The only warranties for Hewlett Packard Enterprise products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. Hewlett Packard Enterprise shall not be liable for technical or editorial errors or omissions contained herein.

Confidential computer software. Valid license from Hewlett Packard Enterprise required for possession, use, or copying. Consistent with FAR 12.211 and 12.212, Commercial Computer Software, Computer Software Documentation, and Technical Data for Commercial Items are licensed to the U.S. Government under vendor's standard commercial license.

Links to third-party websites take you outside the Hewlett Packard Enterprise website. Hewlett Packard Enterprise has no control over and is not responsible for information outside the Hewlett Packard Enterprise website.

About this document	14
Applicable products	14
Latest version available online	14
Command syntax notation conventions	14
About the examples	15
Identifying switch ports and interfaces	16
Identifying modular switch components	16
About security	17
About Authentication, Authorization, and Accounting (AAA)	17
Managing users and groups	18
Default user admin	18
Example of first login with password setting	18
Built-in user groups and their privileges	18
User-defined user groups	19
User name requirements	19
Password requirements	20
Per-user management interface enablement	20
Local per-user management interface enablement	20
Remote (TACACS+ or RADIUS) per-user management interface enablement	21
User and user group management tasks	22
Resetting the switch admin password using the Service OS console	23
Resetting the admin password by reverting the switch to factory defaults	24
User and group commands	25
password complexity	25
service export-password	29
show password-complexity	30
show user-group	30
show user-list	32
show user-list management-interface	33
show user information	34
user	36
user-group	39
user management-interface	42
user password	44
SSH server	46
SSH defaults	46
SSH server tasks	46
SSH server commands	47
show ssh host-key	47
show ssh server	48
show ssh server sessions	52
ssh ciphers	53
ssh host-key	54
ssh host-key-algorithms	56
ssh key-exchange-algorithms	57
ssh known-host remove	58

ssh macs	59
ssh maximum-auth-attempts	60
ssh public-key-algorithms	61
ssh server allow-list	62
ssh server port	64
ssh server vrf	64
ssh sftp-server	65
show ssh sftp-server file-system	66
show ssh sftp-server usage	67
erase ssh sftp-server	67
SSH client	69
SSH client commands	69
ssh (client login)	69
Local AAA	71
Local AAA defaults and limits	71
Supported platforms and standards	71
Scale	71
Local authentication	72
Password-based local authentication	72
SSH public key-based local authentication	72
Local authentication tasks	72
Local authorization	74
Local authorization tasks	74
Command authorization over RADIUS	75
Local accounting	75
Local accounting tasks	76
Local AAA commands	77
aaa accounting all-mgmt (local)	77
aaa authentication console-login-attempts	79
aaa authentication limit-login-attempts	80
aaa authentication login (local)	81
aaa authentication minimum-password-length	82
aaa authentication login privilege-elevation	83
aaa authorization commands (local)	84
show aaa accounting (local)	86
show aaa authentication (local)	87
show aaa authorization (local)	88
show authentication locked-out-users	90
show ssh authentication-method	90
show user	91
ssh password-authentication	92
ssh public-key-authentication	93
user authorized-key	94
Remote AAA with TACACS+	96
Parameters for TACACS+ server	96
Default server groups	97
Supported platforms and standards	97
About global versus per-TACACS+ server passkeys (shared secrets)	98
Remote AAA TACACS+ server configuration requirements	98
User role assignment using TACACS+ attributes	99
TACACS+ server redundancy and access sequence	99
Single source IP address for consistent source identification to AAA servers	99

TACACS+ general tasks	100
TACACS+ authentication	100
About authentication fail-through	101
TACACS+ authentication tasks	101
TACACS+ authorization	102
Using local authorization as fallback from TACACS+ authorization	102
About authentication fail-through and authorization	102
TACACS+ authorization tasks	102
TACACS+ accounting	103
Sample accounting information on a TACACS+ server	103
Sample REST accounting information on a TACACS+ server	104
TACACS+ accounting tasks	105
Example: Configuring the switch for Remote AAA with TACACS+	105

Remote AAA with RADIUS 109

Parameters for RADIUS server	109
Default server groups	110
Supported platforms and standards	111
About global versus per-RADIUS server passkeys (shared secrets)	112
Remote AAA RADIUS server configuration requirements	112
User role assignment using RADIUS attributes	112
RADIUS server redundancy and access sequence	113
Configuration task list	113
Single source IP address for consistent source identification to AAA servers	115
RADIUS general tasks	115
Per-port RADIUS server group configuration	116
RADIUS authentication	116
About authentication fail-through	117
RADIUS authentication tasks	117
Two-factor authentication	119
Configuring two-factor authentication (for local users)	119
Configuring two-factor authentication with SSH (for remote-only users)	120
Configuring two-factor authentication with HTTPS server and REST (for remote-only users)	123
Two-factor authentication commands	126
aaa authorization radius	126
https-server authentication certificate	127
ssh certificate-as-authorized-key	129
ssh two-factor-authentication	129
Secure RADIUS (RadSec)	131
RadSec configuration	131
Deployment scenarios	131
RadSec example configuration	132
RADIUS accounting	134
Sample general accounting information	134
RADIUS accounting tasks	136
Example: Configuring the switch for Remote AAA with RADIUS	137

Remote AAA (TACACS+, RADIUS) commands 140

aaa accounting allow-fail-through	140
aaa accounting all-mgmt (remote)	140
aaa authentication allow-fail-through	143
aaa authentication login (remote)	144
aaa authorization allow-fail-through	146
aaa authorization commands (remote)	148
aaa group server	151

aaa troubleshoot test-server	152
radius-server auth-type	154
radius-server host	155
radius-server host secure ipsec	158
radius-server host tls (RadSec)	163
radius-server host tls port-access	166
radius-server host tls tracking-method	167
radius-server key	169
radius-server retries	170
radius-server status-server interval	171
radius-server timeout	172
radius-server tls timeout (RadSec)	172
radius-server tracking	173
server	175
show aaa accounting (remote)	177
show aaa authentication (remote)	180
show aaa authorization (remote)	182
show aaa server-groups	184
show aaa troubleshoot test-server status	186
show accounting log	189
show radius-server	192
show radius-server secure ipsec	198
show radius-server authentication statistics	199
show radius-server authentication statistics host	200
show tacacs-server	202
show tacacs-server statistics	204
show tech aaa	205
tacacs-server auth-type	211
tacacs-server host	212
tacacs-server key	214
tacacs-server timeout	216
tacacs-server tracking	216
RADIUS dynamic authorization	219
Requirements and tips	219
RADIUS dynamic authorization commands	219
radius dyn-authorization enable	219
radius dyn-authorization client	220
radius dyn-authorization port	222
show radius dyn-authorization	223
show radius dyn-authorization client	225
IP Flow Information Export	227
Traffic Insight	228
Protocol and feature details	228
Supported Platforms	228
Caveats for Traffic Insight	229
Configuring Traffic Insight	229
Traffic Insight Configuration	230
show running-config traffic-insight	230
show traffic-insight monitor-type	231
traffic insight	236
Client Insight	242
L2 onboarding status and failure reason codes	244

L3 onboarding states and failure reason codes	244
DNS onboarding states	244
Overall onboarding status and failure reason codes	244
Supported Platforms	245
Prerequisites	245
Points to Note	246
Limitations	246
Secure client considerations	246
Feature Interoperability	247
Platform specific scale numbers	249
Troubleshooting Client Insight	249
Client Insight Commands	249
client-insight enable	249
client-insight on-boarding event logs	250
diag-dump client-insight basic	251
show capacities client-insight-client-limit	253
show capacities-status client-insight-client-limit	254
show events -c client-insight	254
show tech client-insight	257

PKI	263
PKI concepts	263
Digital certificate	263
Certificate authority	263
Root certificate	264
Leaf certificate	264
Intermediate certificate	264
Trust anchor	264
OCSP	264
PKI on the switch	264
Trust anchor profiles	264
Leaf certificates	265
Mandatory matching of peer device hostname	265
PKI EST	265
EST usage overview	265
Prerequisites for using EST for certificate enrollment	266
EST profile configuration	266
Certificate enrollment	266
Certificate re-enrollment	267
Checking EST profile and certificate configuration	267
EST best practices	267
Example using EST for certificate enrollment	268
Example including the use of an intermediate certificate	275
Installing a self-signed leaf certificate (created inside the switch)	277
Installing a self-signed leaf certificate (created outside the switch)	278
Installing a certificate of a root CA	279
Installing a downloadable user role certificate	280
Installing a CA-signed leaf certificate (initiated in the switch)	282
Installing a CA-signed leaf certificate (created outside the switch)	283
PKI commands	285
crypto pki application	285
crypto pki certificate	286
crypto pki ta-profile	287
enroll self-signed	288
enroll terminal	289
ext-key-usage	290

import (CA-signed leaf certificate)	291
import (self-signed leaf certificate)	293
key-type	295
key-usage	296
ocsp disable-nonce	298
ocsp enforcement-level	299
ocsp url	300
ocsp vrf	301
revocation-check ocsp	302
show crypto pki application	302
show crypto pki certificate	303
show crypto pki ta-profile	305
ta-certificate	307
subject	309
subject-alt-name	310
PKI EST commands	311
arbitrary-label	311
arbitrary-label-enrollment	312
arbitrary-label-reenrollment	313
crypto pki est-profile	314
enroll est-profile	315
reenrollment-lead-time	317
retry-count	317
retry-interval	318
show crypto pki est-profile	319
url (est profile)	320
username (est profile)	321
vrf (est profile)	323

MACsec 325

MACsec in AOS-CX	325
MACsec use cases	326
MACsec configuration (using pre-shared keys)	328
MACsec limitations	329
MACsec WAN extension	329
WAN MACsec on a LAG interface	330
Replay protection with WAN MACsec	330
MACsec WAN extension configuration	330
MACsec WAN extension use cases	331
Debugging and troubleshooting	334
MACsec best practices	335
MACsec troubleshooting	336
apply macsec policy	336
bypass	338
cipher-suite	339
clear macsec statistics	340
clear tag mode	341
confidentiality	342
data-delay-protection	343
include-sci-tag	344
macsec policy	345
macsec selftest	346
replay-protection	347
show macsec policy	348
show macsec selftest	349
show macsec statistics	350

show macsec status	353
apply mka policy	355
clear mka statistics	356
eapol-destination-mac	357
eapol-dot1q-tagged	358
eapol-eth-type	359
key-server-priority	360
mka policy	361
pre-shared-key	362
show mka policy	364
show mka statistics	365
show mka status	366
transmit-interval	367
Port access	369
Port access MAC authentication	370
How MAC authentication works	371
How RADIUS server is used in MAC authentication	371
Supported platforms and standards	371
Scale	371
Supported RFCs and standards	372
Considerations and best practices	372
Port access configuration task list	373
Port access 802.1X and MAC authentication configuration example	373
Use cases	375
Use case 1: Faster onboarding of MAC authentication clients using concurrent onboarding	375
Use case 2: PXE clients that download the supplicant	376
Port access 802.1X authentication commands	376
aaa authentication port-access dot1x authenticator	376
aaa authentication port-access dot1x authenticator auth-method	377
aaa authentication port-access dot1x authenticator cached-reauth	378
aaa authentication port-access dot1x authenticator cached-reauth-period	379
aaa authentication port-access dot1x authenticator discovery-period	380
aaa authentication port-access dot1x authenticator eapol-timeout	381
aaa authentication port-access dot1x authenticator initial-auth-response-timeout	382
aaa authentication port-access dot1x authenticator max-eapol-requests	383
aaa authentication port-access dot1x authenticator max-retries	384
aaa authentication port-access dot1x authenticator quiet-period	385
aaa authentication port-access dot1x authenticator radius server-group	386
aaa authentication port-access dot1x authenticator reauth	387
aaa authentication port-access dot1x authenticator reauth-period	388
clear dot1x authenticator statistics interface	389
show aaa authentication port-access dot1x authenticator interface client-status	389
show aaa authentication port-access dot1x authenticator interface port-statistics	391
Port access MAC authentication commands	393
aaa authentication port-access allow-lldp-auth	393
aaa authentication port-access mac-auth	394
aaa authentication port-access mac-auth addr-format	395
aaa authentication port-access mac-auth auth-method	396
aaa authentication port-access mac-auth cached-reauth	397
aaa authentication port-access mac-auth cached-reauth-period	398
aaa authentication port-access mac-auth password	399
aaa authentication port-access mac-auth quiet-period	400
aaa authentication port-access mac-auth radius server-group	401
aaa authentication port-access mac-auth reauth	402

aaa authentication port-access mac-auth reauth-period	403
clear mac-auth statistics	404
show aaa authentication port-access mac-auth interface client-status	404
show aaa authentication port-access mac-auth interface port-statistics	407
Port access general commands	408
aaa authentication port-access allow-ldp-auth	408
aaa authentication port-access allow-cdp-auth	409
aaa authentication port-access auth-mode	410
aaa authentication port-access auth-precedence	411
aaa authentication port-access auth-priority	412
aaa authentication port-access auth-role	413
aaa authentication port-access client-auto-log-off final-authentication-failure	415
aaa authentication port-access client-limit	415
port-access allow-flood-traffic	416
port-access client-move	417
port-access event-log client	418
port-access fallback-role	419
port-access log-off client	420
port-access onboarding-method precedence	421
port-access onboarding-method concurrent	423
port-access reauthenticate interface	424
show aaa authentication port-access interface client-status	425
show port-access clients	427
show port-access clients detail	432
show port-access clients onboarding-method	440
Port access debugging and troubleshooting	442
Radius server reachability debugging and troubleshooting	442
Port access MAC authentication debugging and troubleshooting	443
Using show commands	443
Using debug commands	444
Port access 802.1X authentication debugging and troubleshooting	445
Using show commands	445
Using other commands	448
Port access FAQ	448
References	449
Port access security violation	449
Port access security violation commands	449
port-access security violation action	449
port-access security violation action shutdown auto-recovery	451
port-access security violation action shutdown recovery-timer	451
show interface (security violation)	452
show port-access aaa violation interface	453
show port-access port-security violation client-limit-exceeded interface	454
Port access policy	456
Classes and actions supported by port access policies	456
RADIUS policies	456
Filter-ID	457
NAS-Filter-Rule	457
Aruba-NAS-Filter-Rule	458
ICMP support with reflexive policy	458
Limitations	459
Port access policy commands	459
port-access policy	459
port-access policy copy	464
port-access policy resequence	465
port-access policy reset	466

clear port-access policy hitcounts	467
show port-access policy	469
show port-access policy hitcounts	472
Port access role	473
Operational notes	474
Downloadable user roles	475
Special roles	475
Critical role	475
Reject role	475
Pre-authentication role	475
Auth-role	477
Fallback role	477
Port access role commands	477
auth-mode	477
cached-reauth-period	478
client-inactivity timeout	479
description (role)	480
mtu (port access)	480
port-access role	481
reauth-period	482
session timeout (port access)	483
show aaa authentication port-access interface client-status (role)	484
show port-access role	485
stp-admin-edge-port	487
trust-mode	488
vlan (port access)	489

Supported RADIUS attributes 492

Attributes supported in 802.1X authentication	492
Attributes supported in MAC authentication	492
Attributes supported in dynamic authorization	493
Session authorization attributes supported in 802.1X and MAC authentication, and CoA	493
Standard session attributes supported	494
Vendor-Specific Attributes in session authorization	494
Description of VSAs	494
Attributes supported in RADIUS network accounting	496
Attributes supported in RADIUS server tracking	496

Port security 497

Port-security sticky MAC	497
Basic operation	498
Default port security operation	498
Intruder protection	498
General operation for port security	498
Blocking unauthorized traffic	499
Trunk group exclusion	499
Port security commands	499
port-access port-security	499
port-access port-security client-limit	500
port-access port-security mac-address	501
show port-access port-security interface client-status	502
show port-access port-security interface port-statistics	504
sticky-learn enable	505
sticky-learn mac	505
show port-access security violation sticky-mac-client-move interface	507

Fault Monitor	509
Fault monitoring conditions	509
Excessive broadcasts	509
Excessive multicasts	509
Excessive link flaps	509
Excessive oversize packets	509
Excessive jabbers	509
Excessive fragments	509
Excessive CRC errors	510
Excessive late collisions	510
Excessive collisions	510
Excessive TX drops	510
Excessive alignment errors	510
Excessive flow control watchdog triggers	510
Fault monitor commands	510
(Fault enabling/disabling)	510
action	512
apply fault-monitor profile	515
fault-monitor profile	516
show fault-monitor profile	517
show interface fault-monitor profile	519
show interface fault-monitor status	520
show running-config	521
threshold	523
vsx-sync (fault monitor)	525
 Group based policy (GBP)	 527
Limitations and considerations	527
gbp enable	528
gbp role infra	529
 Configuring enhanced security	 531
Configuring enhanced security	531
Configuring remote logging using SSH reverse tunnel	532
CLI user session management commands	533
cli-session	533
 Auditors and auditing tasks	 536
Auditing tasks (CLI)	536
Auditing tasks (Web UI)	536
REST requests and accounting logs	537
 Support and Other Resources	 538
Accessing HPE Aruba Networking Support	538
Accessing Updates	539
Warranty Information	539
Regulatory Information	539
Documentation Feedback	539

Chapter 1

About this document

This document describes features of the AOS-CX network operating system. It is intended for administrators responsible for installing, configuring, and managing HPE Aruba Networking switches on a network.

Applicable products

This document applies to the following products:

- HPE Aruba Networking 8320 Switch Series (JL479A, JL579A, JL581A)
- HPE Aruba Networking 8325 Switch Series (JL624A, JL625A, JL626A, JL627A)
- HPE Aruba Networking 8325H Switch Series (S4B20A, S4B21A, S4B22A, S4B23A, S2T42A, S2T46A, S2T47A, S2T48A)
- HPE Aruba Networking 8325P Switch Series (S0G12A, S4A48A)
- HPE Aruba Networking 8400 Switch Series (JL366A, JL363A, JL687A)
- HPE Aruba Networking 9300 Switch Series (R9A29A, R9A30A, R8Z96A, S0F81A, S0F82A, S0F83A, S0F84A, S0F85A, S0F86A, S0F87A, S0F88A, S0F95A, S0F96A)
- HPE Aruba Networking 10000 Switch Series (R8P13A, R8P14A)

Latest version available online

Updates to this document can occur after initial publication. For the latest versions of product documentation, see the links provided in [Support and Other Resources](#).

Command syntax notation conventions

Convention	Usage
<code>example-text</code>	Identifies commands and their options and operands, code examples, filenames, pathnames, and output displayed in a command window. Items that appear like the example text in the previous column are to be entered exactly as shown and are required unless enclosed in brackets ([]).
example-text	In code and screen examples, indicates text entered by a user.
Any of the following: ■ <code><example-text></code> ■ <code><example-text></code> ■ <i>example-text</i> ■ <i>example-text</i>	Identifies a placeholder—such as a parameter or a variable—that you must substitute with an actual value in a command or in code: ■ For output formats where italic text cannot be displayed, variables are enclosed in angle brackets (<code>< ></code>). Substitute the text—including the enclosing angle brackets—with an actual value. ■ For output formats where italic text can be displayed, variables might or might not be enclosed in angle brackets. Substitute the

Convention	Usage
	text including the enclosing angle brackets, if any, with an actual value.
	Vertical bar. A logical OR that separates multiple items from which you can choose only one. Any spaces that are on either side of the vertical bar are included for readability and are not a required part of the command syntax.
{ }	Braces. Indicates that at least one of the enclosed items is required.
[]	Brackets. Indicates that the enclosed item or items are optional.
... or ...	Ellipsis: ■ In code and screen examples, a vertical or horizontal ellipsis indicates an omission of information. ■ In syntax using brackets and braces, an ellipsis indicates items that can be repeated. When an item followed by ellipses is enclosed in brackets, zero or more items can be specified.

About the examples

Examples in this document are representative and might not match your particular switch or environment.

The slot and port numbers in this document are for illustration only and might be unavailable on your switch.

Understanding the CLI prompts

When illustrating the prompts in the command line interface (CLI), this document uses the generic term **switch**, instead of the host name of the switch. For example:

```
switch>
```

The CLI prompt indicates the current command context. For example:

```
switch>
```

Indicates the operator command context.

```
switch#
```

Indicates the manager command context.

```
switch(CONTEXT-NAME) #
```

Indicates the configuration context for a feature. For example:

```
switch(config-if) #
```

Identifies the **interface** context.

Variable information in CLI prompts

In certain configuration contexts, the prompt may include variable information. For example, when in the VLAN configuration context, a VLAN number appears in the prompt:

```
switch(config-vlan-100) #
```

When referring to this context, this document uses the syntax:

```
switch(config-vlan-<VLAN-ID> #
```

Where **<VLAN-ID>** is a variable representing the VLAN number.

Identifying switch ports and interfaces

Physical ports on the switch and their corresponding logical software interfaces are identified using the format: ***member/slot/port***.

On the HPE Aruba Networking 8xxx, 9300/9300S, and 10000 Switch Series

- *member*: Always 1. VSF is not supported on this switch.
- *slot*: Always 1. This is not a modular switch, so there are no slots.
- *port*: Physical number of a port on the switch.

For example, the logical interface **1/1/4** in software is associated with physical port 4 on the switch.



If using breakout cables, the port designation changes to x:y, where x is the physical port and y is the lane when split. For example, the logical interface 1/1/4:2 in software is associated with lane 2 on physical port 4 in slot 1 on member 1.

On the HPE Aruba Networking 8400 Switch Series

- *member*: Always 1. VSF is not supported on this switch.
- *slot*: Specifies physical location of a module in the switch chassis.
 - Management modules are on the front of the switch in slots 1/5 and 1/6.
 - Line modules are on the front of the switch in slots 1/1 through 1/4, and 1/7 through 1/10.
- *port*: Physical number of a port on a line module

For example, the logical interface **1/1/4** in software is associated with physical port 4 in slot 1 on member 1.

Identifying modular switch components

- Power supplies are on the front of the switch behind the bezel above the management modules. Power supplies are labeled in software in the format: *member/power supply*:
 - *member*: 1.
 - *power supply*: 1 to 4.
- Fans are on the rear of the switch and are labeled in software as: *member/tray/fan*:
 - *member*: 1.
 - *tray*: 1 to 4.
 - *fan*: 1 to 4.
- Fabric modules are not labeled on the switch but are labeled in software in the format: *member/module*:
 - *member*: 1.
 - *member*: 1 or 2.
- The display module on the rear of the switch is not labeled with a member or slot number.

This AOS-CX Switch provides the following security features:

- Local user and group management.
- Authentication, Authorization, and Accounting (AAA), either local (password or SSH public key-based), or remote password-based TACACS+ or RADIUS.
- SSH server. SSH is a cryptographic protocol that encrypts all communication between devices.
- Ability to use enhanced security as described in [Configuring enhanced security](#).
- Making sensitive switch configuration information available for secure export/import between switches. For information, see `service export-password`.

About Authentication, Authorization, and Accounting (AAA)

- **Authentication:** identifies users, validates their credentials, and grants switch access.
- **Authorization:** controls authenticated users command execution and switch interaction privileges.
- **Accounting:** collects and manages user session activity logs for auditing and reporting purposes.

Local AAA on your HPE Aruba Networking switch provides:

- Authentication using local password or SSH public key.
- Authorization using role-based access control (RBAC), and optionally, using user-defined local user groups with command authorization rules defined per group.
- Accounting of user activity on the switch using accounting logs.

Remote AAA provides the following for your HPE Aruba Networking switch:

- Authentication using remote AAA servers with either TACACS+ or RADIUS.
- Authorization using remote AAA servers with TACACS+ fine-grained command authorization. Local RBAC or local rule-based authorization is also possible.
- Transmission of locally collected accounting information to remote TACACS+ and RADIUS servers.



TACACS+ (Terminal Access Controller Access-Control System Plus) and RADIUS (Remote Authentication Dial-In User Service) server software is readily available as either open source or from various vendors.



For switches that support multiple management modules such as the HPE Aruba Networking 8400, all AAA functionality discussed only applies to the active management module. See also *AAA on switches with multiple management modules* in the *High Availability Guide*.

Default user admin

A factory-default switch comes with a single user named **admin**.

The **admin** user:

- Has an empty password. Press **Enter** in response to the **admin** password prompt. At initial boot, you are prompted to define a password for the **admin** user. Although empty (blank) passwords are allowed, it is recommended that you use strong passwords for all production switches.
- Is a member of the **administrators** group.
- Cannot be removed from the switch.



The switch **admin** user is distinct from the Service OS **admin** user. The Service OS acts as the **bootloader** and recovery operating system. The Service OS has its own CLI.

Example of first login with password setting

```
switch login: admin
Password:

Please configure the 'admin' user account password.
Enter new password: *****
Confirm new password: *****
switch#
```

Built-in user groups and their privileges

The switch provides the following built-in user groups with corresponding roles. Each of these roles comes with a set of privileges.

Group/Role	Privileges
administrators	Administrators have full privileges, including: ▪ Full CLI access. ▪ Performing firmware upgrades. ▪ Viewing switch configuration information, including sensitive information such as passwords which are displayed as ciphertext. ▪ Performing switch configuration. ▪ Adding/removing user accounts. ▪ Configuring users accounts, including passwords. Once set, a password cannot be deleted or set to empty.

Group/Role	Privileges
	REST API: All methods (GET, PUT, POST, DELETE) and switch resources are available. The privilege level for administrators is 15.
operators	Operators have no switch configuration privileges. Operators are restricted to: - Basic display-only CLI access. - Viewing of nonsensitive switch configuration information. - REST API: Other than the \login and \logout resources, only the GET method is available. The privilege level for operators is 1.
auditors	Auditors are restricted to functions related to auditing only: - CLI: Access to commands in the auditor context (auditor>) only. - Web UI: Access to the System > Log page only. - REST API: POST method available for the \login and \logout resources. GET method available for the following resources only: - Audit log: /logs/audit - Event log: /logs/event The privilege level for auditors is 19.

User-defined user groups

The switch enables you to create up to 29 user-defined local user groups, for the purpose of configuring local authorization. Each of the 29 user-defined groups support up to 1024 CLI command authorization rules that define what CLI commands can be executed by members of the group.

The local user groups with their command execution rules are useful for the following:

- Providing authorization for use with RADIUS servers.
- Providing fallback authorization for use with TACACS+ servers.
- Providing authorization when neither RADIUS or TACACS+ servers are used.

User name requirements

Specifies the user name. Requirements:

- Must start with a lowercase letter.
- Can contain numbers and lowercase letters.
- Can include only these three special characters: hyphens (-), dots (.), and underscores (_).
- Can have a maximum of 32 characters.
- Cannot be empty.
- Cannot contain uppercase letters.
- Cannot be: `admin`, `root`, or `remote_user`.
- Cannot be Linux reserved names such as:

`daemon`, `bin`, `sys`, `sync`, `proxy`, `www-data`, `backup`, `list`, `irc`, `gnats`, `nobody`, `systemd-bus-proxy`, `sshd`, `messagebus`, `rpc`, `systemd-journal-gateway`, `systemd-journal-remote`, `systemd-journal-`

upload, systemd-timesync, systemd-coredump, systemd-resolve, rpcuser, vagrant, opsd, rdanet, _lldpd, rdaadmin, rdaweb, docker_container, tss.

Password requirements

Passwords must:

- Contain only ASCII characters from hexadecimal 21 to hexadecimal 7E [\x21-\x7E] (decimal 33 to 126). Spaces are not allowed. When the password is entered directly without prompting, the "?" symbol (hexadecimal 3F [\x3F] (decimal 63)) is not permitted.
- Contain at most 32 characters.
- Contain at least the number of characters configured (optionally) for minimum-password-length.



Although empty passwords are supported, it is recommended that you use strong passwords for all production switches.



Only an administrator can change the password of a user assigned to the `operators` role.

Per-user management interface enablement

By default, switch users are enabled for accessing the switch through all these available management interfaces: **ssh**, **telnet**, **https-server**, **console**.

Optionally, one or more of the management interfaces can be disabled for specific users.

User accounts can be local or managed on remote TACACS+ or RADIUS servers.

Local per-user management interface enablement

Local per-user management interface enablement is performed with CLI command **user management-interface**. CLI command **show user-list management-interface** is available for showing the current configuration.

Example of disabling the SSH management interface for local user **admin1**:

```
switch(config)# no user admin1 management-interface ssh
switch(config)# show user-list management-interface
USER                                     ENABLED MANAGEMENT INTERFACE(S)
-----
admin                                   ssh,telnet,https-server,console
admin1                                 telnet,https-server,console
```

Example of disabling the telnet management interface for local user **admin1**:

```
switch(config)# no user admin1 management-interface telnet
switch(config)# show user-list management-interface
USER                                     ENABLED MANAGEMENT INTERFACE(S)
-----
admin                                   ssh,telnet,https-server,console
```

```
admin1                                https-server,console
```

Example of re-enabling the SSH management interface for local user **admin1**:

```
switch(config)# user admin1 management-interface ssh
switch(config)# show user-list management-interface
USER                                ENABLED MANAGEMENT INTERFACE(S)
-----
admin                               ssh,telnet,https-server,console
admin1                              ssh,https-server,console
```

Remote (TACACS+ or RADIUS) per-user management interface enablement

For remote TACACS+ and RADIUS servers, per-user management interface enablement is performed by configuring the Aruba VSA **Aruba-User-Mgmt-Interface**.

On the TACACS+ or RADIUS server, the Aruba VSA **Aruba-User-Mgmt-Interface** must be set to a comma-separated list of management interface names for which login is permitted by the associated user. Management interfaces omitted from the list are disabled for the associated user. A maximum of four management interface names are allowed, with each management interface name given once.

Permitted management interface names (always lowercase) are as follows:

- **ssh**
- **telnet**
- **https-server**
- **console**

The VSA has a maximum length of 32 characters. The VSA is ignored by the switch if longer than 32 characters.

When a user login fails because of an attempt to use a management interface that is not allowed, an event log is available indicating the enabled management interfaces as received in the TACACS+ or RADIUS VSA.

When using a RADIUS server other than ClearPass Policy Manager (CPPM), before setting the **Aruba-User-Mgmt-Interface** VSA, you must first define the VSA on the RADIUS server in file **/usr/share/freeradius/dictionary.aruba** as follows:

```
ATTRIBUTE  Aruba-User-Mgmt-Interface  69  string
```

Example RADIUS server VSA value that enables the two named management interfaces (**ssh**, **telnet**) while disabling the two unnamed management interfaces (**https-server**, **console**):

```
Aruba-User-Mgmt-Interface = "ssh,telnet"
```

Example RADIUS server VSA value that enables all four management interfaces:

```
Aruba-User-Mgmt-Interface = "ssh,telnet,https-server,console"
```

Example TACACS+ server configuration for user **admin1** with a VSA that enables management interfaces **ssh** and **console**:

```
key = test
group = admin {
    default service = permit
    service = exec {
        priv-lvl = 15
        Aruba-User-Mgmt-Interface = ssh,console
    }
}
user = admin1 {
    member = admin
    pap = cleartext testing
}
```

User and user group management tasks

User and user group management common tasks are as follows:

Task	Command or procedure	Example
Creating a user	<code>user</code>	<code>user jamie group administrators password</code>
Changing a user password	<code>user password</code>	<code>user jamie password</code>
Removing a user	<code>user</code>	<code>no user jamie</code>
Setting a user account password	<code>user password</code>	<code>user admin password</code>
Resetting the admin password using the Service OS	(procedure)	
Resetting the admin password by reverting the switch to factory defaults	(procedure)	<code>erase startup-config</code> <code>boot system</code>
Showing a list of all users	<code>show user-list</code>	<code>show user-list</code>
Showing information for the logged-in user	<code>show user information</code>	<code>show user information</code>
Creating a user group	<code>user-group</code>	<code>user-group admuser2</code>
Adding command authorization rules to a user group	permit or deny (within user-group)	<code>10 deny cli command "show aaa ."</code> <code>20 permit cli command "show ."</code>
Adding comments to rules in a user group	comment (within user-group)	<code>10 comment Deny all show aaa commands.</code> <code>20 comment Permit all other show commands.</code>

Task	Command or procedure	Example
Resequencing rules in a user group	resequence (within user-group)	resequence 100 20
Showing a list of all user groups	show user-group	show user-group

Resetting the switch admin password using the Service OS console

Perform this task only when the switch (Product OS) `admin` user password has been forgotten.

Prerequisites

- You are connected to the switch through the console port.
- You know the Service OS password (if configured).



If you forget the Service OS password, the only recourse is to zeroize the switch, reverting it to factory defaults. For more information, see *Zeroization* in the *Diagnostics and Supportability Guide*.

Procedure

1. Reboot the switch.
2. At the boot prompt, select **0. Service OS Console**.

```
0. Service OS Console
1. Primary Software Image [XL.01.01.0001]
2. Secondary Software Image [XL.01.01.0002]
```

3. At the **Switch Login** prompt, enter **admin** and press **Enter**. If prompted for a Service OS password, enter it and press **Enter**.

```
Switch login: admin
Password: *****
Hewlett Packard Enterprise
SVOS>
```

4. At the `SVOS>` prompt, enter `password` and press **Enter**.
5. Enter the new switch (Product OS) password at both password prompts.

```
SVOS> password
Enter password: *****
Confirm password: *****
SVOS>
```

1. Enter `boot` and press `Enter`.

```
SVOS> boot

ServiceOS Information:
  Version: **.10.06.0001
  Build Date: 2020-12-01 14:52:31 PDT
  Build ID: ServiceOS: **.01.01.0001:461519208911:20180301452
  SHA: 46151920891195cdb2267ea6889a3c6cbc3d4193

Boot Profiles:
0. Service OS Console
1. Primary Software Image [**.10.06.0001]
2. Secondary Software Image [**.10.06.0001]

Select profile(primary):
```

2. To boot with the primary switch image press `1` and then `Enter`. To boot with the secondary switch image, press `2` and then `Enter`. If you make no selection for approximately 10 seconds, the switch boots the default image. The default is shown in parentheses to the right of `Select profile`, for example: `Select profile(primary):.`
3. Once in AOS-CX, save the configuration to make the `admin` login user account password setting persistent.

Resetting the admin password by reverting the switch to factory defaults



This task erases all switch configuration, reverting the switch to its factory default state. Consider using other less-impacting techniques for admin password reset. For example, another administrator user can reset the admin user password to a known value. See also [Resetting the switch admin password using the Service OS console](#).

Prerequisites

If wanted, you have saved a copy of the switch configuration.

Procedure

1. At the manager command prompt, enter **`erase startup-config`**.

```
switch# erase startup-config
```

2. Enter **`boot system`**, responding **`n`** to the **Do you want to save the current configuration** prompt and then responding **`y`** to the **Continue** prompt.

```
switch# boot system
Do you want to save the current configuration (y/n)? n

This will reboot the entire switch and render it unavailable
until the process is complete.
```



```
Continue (y/n)? y  
The system is going down for reboot.
```

3. At the login prompt, enter **admin** and press **Enter**. The admin password remains empty until it is set.

User and group commands

password complexity

```
password complexity  
no password complexity
```

Description

Enters the password-complexity context (shown in the switch prompt as **config-pwd-cplx**) for the purpose of enabling and configuring password complexity. Password complexity enhances security by enforcing specific password complexity requirements. Password complexity is disabled by default and must be enabled by execution of the **enable** command.

Enabling or changing password complexity settings effects password creation or password change after the password complexity feature is enabled or changed. All existing passwords will continue to function as currently configured. When existing passwords are changed they will have to comply with whatever password complexity settings are enabled at the time of the change.

The **no** form of this command reverts all settings to their default values and disables password complexity enforcement.



To ensure that enhanced security is maintained, it is recommended that you do not set any values to less than their defaults.



Password complexity applies only to local authentication. For remote authentication, you may choose to set up an equivalent of password complexity according to whatever is supported on your particular TACACS+ or RADIUS server.

Subcommands

These subcommands are available within the password complexity context (shown in the switch prompt as **config-pwd-cplx**).

enable

Enables password complexity enforcement. The enforcement only applies to passwords created after this enabling. Existing passwords are not checked against password complexity.

disable

Disables password complexity enforcement.

[no] history-count <COUNT>

Specifies the number of previous passwords checked to prevent excessive reuse. Not applicable when adding new users. The **no** form of this subcommand resets the value to its default. Default: 5. Range: 1 to 5.



Previous passwords checked includes passwords used prior to enabling the password complexity feature.

[no] minimum-length <LENGTH>

Specifies the minimum password length. The no form of this subcommand resets the value to its default. Default: 8. Range: 1 to 32.

[no] position-changes <POSITIONS>

Specifies the minimum number of characters that must change in the new password compared to the previous password. Not applicable if no previous password exists, including when adding new users. The no form of this subcommand resets the value to its default. Default: 8. Range: 1 to 32.

The number of password position changes is based on the number of simple character insertions, deletions, or replacements. For example:

Old password: abCD4\$ New password: abCD\$ Position changes=1 ("4" deleted) Old password: abCD4\$ New password: abCDEF4\$ Position changes=2 ("EF" inserted) Old password: abCD4\$ New password: ebCD4\$ Position changes=2 ("a" replaced with "e," "1" added) Old password: abCD4\$ New password: abC\$# Position changes=3 ("D4" deleted, "#" added)

[no] lowercase-count <COUNT>

Specifies the minimum lowercase character count for new passwords. The no form of this subcommand resets the value to its default. Default: 1. Range: 0 to 32.

[no] uppercase-count <COUNT>

Specifies the minimum uppercase character count for new passwords. The no form of this subcommand resets the value to its default. Default: 1. Range: 0 to 32.

[no] numeric-count <COUNT>

Specifies the minimum numeric digit count for new passwords. The no form of this subcommand resets the value to its default. Default: 1. Range: 0 to 32.

[no] special-char-count <COUNT>

Specifies the minimum special character count for new passwords. The no form of this subcommand resets the value to its default. Default: 1. Range: 0 to 32.

[no] adjacent-char-type-count

Specifies the maximum number of adjacent characters from a character set allowed in a password. The different character sets are:

- Numbers
- Lowercase alphabets
- Uppercase alphabets
- Special characters

The number of adjacent characters from the character set in the password has to be less than or equal to the configured value. When set to 0, adjacent character type length check requirement is disabled. The no form of this subcommand resets the value to its default. Default: 0. Range: 0-31.

list

List the subcommands available within the password complexity context.

exit

Exits the password complexity context.

end

Exits the password complexity context and then the config context.

Usage

- Password complexity is only for use with plaintext passwords. With password complexity enabled, existing ciphertext passwords will continue working until a password is changed. All new passwords must be entered in plaintext form and be compliant with your password complexity configuration.
- The effective minimum password length may be larger than the configured **minimum-length** value. The effective minimum password length is calculated as follows:

LARGEST-of: (minimum-length, position-changes, (SUM-of: lowercase-count+uppercase-count+numeric-count+special-char-count))

For example, with **minimum-length=8**, and **position-changes=10** (and the sum of the other four count settings ≤ 9), the **effective minimum-length is 10** (because **position-changes** is largest). Similarly, with a **minimum-length=12**, **position-changes=8**, **lowercase-count=8**, **uppercase-count=4**, **numeric-count=1**, **special-char-count=1**, the **effective minimum-length is 14** ($8+4+1+1=14$) (because sum off the four counts is largest).

Examples

Configuring password complexity settings with an effective minimum length of 10 (because **position-changes** is 10):

```
switch(config)# password complexity
switch(config-pwd-cplx)# history-count 3
switch(config-pwd-cplx)# minimum-length 8
switch(config-pwd-cplx)# position-changes 10
switch(config-pwd-cplx)# lowercase-count 2
switch(config-pwd-cplx)# uppercase-count 2
switch(config-pwd-cplx)# numeric-count 2
switch(config-pwd-cplx)# special-char-count 2
switch(config-pwd-cplx)# adjacent-char-type-count 3
switch(config-pwd-cplx)# enable
switch# exit
```

Configuring password complexity settings with an effective minimum length of 14 (because the sum of the four count items is 14):

```
switch(config)# password complexity
switch(config-pwd-cplx)# history-count 4
switch(config-pwd-cplx)# minimum-length 12
switch(config-pwd-cplx)# position-changes 8
switch(config-pwd-cplx)# lowercase-count 8
switch(config-pwd-cplx)# uppercase-count 4
switch(config-pwd-cplx)# numeric-count 1
switch(config-pwd-cplx)# special-char-count 1
switch(config-pwd-cplx)# adjacent-char-type-count 3
switch(config-pwd-cplx)# enable
switch# exit
```

Enabling password complexity (with default settings) and changing a user (admin1) password successfully but failing to change another user (admin2) password due to not meeting complexity requirements:

```
switch(config)# password complexity
switch(config-pwd-cplx)# enable
switch(config-pwd-cplx)# exit
switch(config)#
switch(config)# user admin1 password
Changing password for user admin1
Enter old password:*****
Enter new password:*****
Confirm new password:*****
switch(config)#
switch(config)# user admin2 password
Changing password for user admin2
Enter old password:*****
Enter new password:*****
Confirm new password:*****
```

```
User password not changed.
The new password does not meet one or more of the following complexity
requirements:
Minimum length           : 8
Position changes         : 8
Numeric count            : 1
Lowercase count          : 1
Uppercase count          : 1
Special character count  : 1
Adjacent character type count: 3
```

With password complexity already enabled, attempting to change an existing user password but failing because the new password is identical to a recently used one (**history-count**).

```
switch(config)# user admin1 password
Changing password for user admin1
Enter old password:*****
Enter new password:*****
Confirm new password:*****
User password not changed.
The new password is the same as a recently used password.
```

With password complexity already enabled, creating a new admin user (admin3) with a plaintext password that meets complexity requirements.

```
switch(config)# user admin3 group administrators password
Adding user admin3
Enter password:*****
Confirm password:*****
```

With password complexity already enabled, attempting to create a new admin user (admin4) with a ciphertext password but failing because ciphertext passwords are not supported with password complexity enabled.

```
switch(config)# user admin4 group administrators password ciphertext AQBapPd...==
Ciphertext passwords cannot be used when password complexity is enabled.
switch(config)#
```

Command History

Release	Modification
10.11.1010	adjacent-char-type-count subcommand added.
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

service export-password

service export-password
no service export-password

Description

Configures a nondefault export password. The export password is used to transform critical security parameters (such as password hashes) into ciphertext suitable for exporting and showing by commands such as **show running-config**. This transformation enables safe switch configuration import and export.

The **no** form of this command reverts the export password to its factory default.



All factory-default switches have identical default export passwords. For security, it is recommended that you set the same nondefault export password on every switch in a group that will exchange configuration information. Only switches with identical export passwords can exchange configuration information.

Usage

Prompts you twice for the new export password.

The export password must:

- Contain only ASCII characters from hexadecimal 21 to hexadecimal 7E [\x21-\x7E] (decimal 33 to 126). Spaces are not allowed.
- Contain at most 32 characters.
- Not be blank.

Examples

Configuring a new export password:

```
switch(config)# service export-password
Enter password:*****
Confirm password:*****
```

Reverting the export password to its factory default:

```
switch(config)# no service export-password
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

show password-complexity

show password-complexity

Description

Shows user-configured or default password complexity checking criteria.

Examples

Showing the current password complexity checking criteria:

```
switch(config)# show password-complexity

Global password complexity checking criteria:
  Password complexity           : Enabled
  Previous passwords to check   : 3
  Minimum password length      : 12
  Minimum position changes     : 10
  Maximum adjacent characters count : 3
  Password composition
    Minimum lowercase characters : 3
    Minimum uppercase characters : 1
    Minimum special characters   : 1
    Minimum numeric characters   : 3
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

show user-group

show user-group [<GROUP-NAME>] [vsx-peer]

Description

Shows user group information for the built-in groups plus any user-defined local user groups. When entered without <GROUP-NAME>, summary information is shown for all groups.

Parameter	Description
<GROUP-NAME>	Narrows the show command output to that of the specified group, and for local user groups, adds the User Group Rules list.
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Examples

Show the list of all user groups, including built-in groups and local user groups.

```
switch# show user-group
GROUP NAME      GROUP TYPE      INCLUDED GROUP  NUMBER OF RULES
-----
administrators  built-in        n/a             n/a
admuser1        configuration    --             5
admuser2        configuration    admuser1        2
auditors        built-in        n/a             n/a
operators       built-in        n/a             n/a
```

Show detailed information for local user group **admuser2**.

```
switch(config-usr-grp-admuser2)# show user-group admuser2
User Group Summary
=====
Name           : admuser2
Type           : configuration
Included Group : admuser1
Number of Rules : 2
User Group Rules
=====
SEQUENCE NUM  ACTION      COMMAND                                COMMENT
-----
10            deny        show aaa .*                            Deny all show aaa commands.
20            permit      show .*                                Permit all other show
commands.
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

show user-list

show user-list [vsx-peer]

Description

Shows all configured users and their corresponding group names.

Parameter	Description
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Examples

Show the user list from a switch with only the admin user defined.

```
switch# show user-list

USER                               GROUP
-----
admin                             administrators
```

Show the user list after adding a user to the operators built-in group.

```
switch# show user-list

USER                               GROUP
-----
admin                             administrators
oper1                             operators
```

Show the user list after adding a user to the auditors built-in group.

```
switch# show user-list

USER                               GROUP
-----
admin                             administrators
oper1                             operators
audit1                             auditors
```

Show the user list after adding a total of three users to two user-defined user groups.

```
switch# show user-list

USER                               GROUP
-----
admin                             administrators
oper1                             operators
audit1                             auditors
adm1a                             admuser1
admin2-a                           admuser2
admin2-b                           admuser2
```




For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

show user-list management-interface

`show user-list management-interface [vsx-peer]`

Description

Shows a list of local users and the enabled management interfaces for each user.

Parameter	Description
<code>vsx-peer</code>	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Examples

Disabling SSH and https-server for user **admin1**, disabling Telnet for **admin2**, then showing the configuration:

```
switch(config)# no user admin1 management-interface ssh
switch(config)# no user admin1 management-interface https-server
switch(config)# no user admin2 management-interface telnet
switch(config)# show user-list management-interface
USER                               ENABLED MANAGEMENT INTERFACE(S)
-----
admin                               ssh,telnet,https-server,console
admin1                             telnet,console
admin2                             ssh, https-server, console
```

Re-enabling https-server for user **admin1**, re-enabling Telnet for **admin2**, then showing the configuration:

```
switch(config)# user admin1 management-interface https-server
switch(config)# user admin2 management-interface telnet
switch(config)# show user-list management-interface
USER                               ENABLED MANAGEMENT INTERFACE(S)
-----
```

admin	ssh,telnet,https-server,console
admin1	telnet,https-server,console
admin2	telnet,https-server,console



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

Release	Modification
10.11	Command introduced

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

show user information

show user information

Description

Shows the following information for the logged-in user:

- User name.
- User authentication type: **local**, **RADIUS**, or **TACACS+**.
- User group: **administrators**, **operators**, or **<GROUP-NAME>**. This field is not applicable for remote authenticated users who are mapped to administrators or operators based on their privilege level.
- User privilege level: For the built-in user groups and RADIUS or TACACS+, the role privilege level value is shown. For user-defined user groups, **N/A** is shown.
- User login session: **ssh**, **telnet**, **https-server**, or **console**.

Examples

Showing information for the **admin** user:

```
switch# show user information
Username           : admin
Authentication type : Local
User group         : administrators
User privilege level : 15
User login session  : console
```

Showing information for a member of the user-defined local user group **admuser2**:

```
switch# show user information
Username           : admin2-b
Authentication type : Local
```

```
User group          : admuser2
User privilege level : N/A
User login session   : telnet
```

Showing information for a member of **operators**:

```
switch# show user information
Username           : operator
Authentication type : Local
User group          : operators
User privilege level : 1
User login session   : https-server
```

Showing information for remote RADIUS user **rad_user1** mapped to local user group **administrators**:

```
switch# show user information
Username           : rad_user1
Authentication type : RADIUS
User group          : administrators
User privilege level : 15
User login session   : telnet
```

Showing information for remote RADIUS user **rad_user2** mapped to local user group **operators**:

```
switch# show user information
Username           : rad_user2
Authentication type : RADIUS
User group          : operators
User privilege level : 1
User login session   : console
```

Showing information for remote TACACS+ **tac_user1** logged in with **priv-lvl** 15 (mapped to user group **administrators**):

```
switch# show user information
Username           : tac_user1
Authentication type : TACACS+
User group          : administrators
User privilege level : 15
User login session   : ssh
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

Release	Modification
10.11	Command now includes User login session information in its output
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

user

```
user <USERNAME> group {administrators | operators | auditors | <USER-GROUP>}  
    password [ciphertext <CIPHERTEXT-PASSWORD> | plaintext <PLAINTEXT-PASSWORD>]  
no user <USERNAME>
```

Description

Creates a user and adds the user to one of the user groups. Users are given the privileges of their group. For the three built-in user groups (**administrators**, **operators**, **auditors**), the privileges are fixed. For user-defined local user groups, the privileges are defined by the CLI command authorization rules of the group.

When entered without either optional **ciphertext** or **plaintext** parameters, the cleartext password is prompted for twice, with the characters entered masked with "*" symbols.

The **no** form of this command removes a user account from the switch. The administrator cannot delete the user account from which they are logged in. The **admin** user cannot be deleted.

Parameter	Description
<USERNAME>	Specifies the user name. Requirements: - Must start with a lowercase or uppercase letter. - Can contain numbers, lowercase, and uppercase letters. - Can include only these three special characters: hyphens (-), dots (.), and underscores (_). - Can have a maximum of 32 characters. - Cannot be empty. - Cannot be: <code>admin</code>, <code>root</code>, or <code>remote_user</code>. - Cannot be Linux reserved names such as: <code>daemon</code>, <code>bin</code>, <code>sys</code>, <code>sync</code>, <code>proxy</code>, <code>www-data</code>, <code>backup</code>, <code>list</code>, <code>irc</code>, <code>gnats</code>, <code>nobody</code>, <code>systemd-bus-proxy</code>, <code>sshd</code>, <code>messagebus</code>, <code>rpc</code>, <code>systemd-journal-gateway</code>, <code>systemd-journal-remote</code>, <code>systemd-journal-upload</code>, <code>systemd-timesync</code>, <code>systemd-coredump</code>, <code>systemd-resolve</code>, <code>rpcuser</code>, <code>vagrant</code>, <code>opds</code>, <code>rdanet</code>, <code>_lldpd</code>, <code>rdaadmin</code>, <code>rdaweb</code>, <code>docker_container</code>, <code>tss</code>. NOTE: Usernames containing the same consecutive letters with varying capitalization, such as <code>Admin</code>, <code>ADMIN</code>, and <code>aDmin</code>, will each be treated as different customer-configured user accounts.
group	Selects the local user group to which the new user will be assigned.
administrators operators auditors	Selects one of three built-in local user groups.

Parameter	Description
<code><USER-GROUP></code>	Specifies an existing user-defined local user group.
<code>ciphertext <CIPHERTEXT-PASSWORD></code>	Specifies a ciphertext password. No password prompts are provided and the ciphertext password is validated before the configuration is applied for the user. The variable <code><CIPHERTEXT-PASSWORD></code> is Base64 and is typically copied from another switch using the <code>show running-config</code> command output and then pasted into this command. NOTE: The administrator cannot construct ciphertext passwords themselves. The ciphertext is only created by an AOS-CX switch. The ciphertext is created by setting a password for a user with the <code>user</code> command. The ciphertext is available for copying from the <code>show running-config</code> output and pasting into the configuration on any other AOS-CX switch. The target switch must have the same export password (default or otherwise) as the source switch.
<code>plaintext <PLAINTEXT-PASSWORD></code>	Specifies the password without prompting. The password is visible as cleartext when entered but is encrypted thereafter. Command history does show the password as cleartext.

Usage

- Up to 63 local users can be added, for a total of 64 users including the default user **admin**. A user can belong to only one group.
- The switch ships with the **admin** user account and three built-in local user groups: **administrators**, **operators**, and **auditors**. The **admin** account belongs to the **administrators** group. The Service OS also includes the administrator user **admin**. The two admin users are entirely distinct.
- When a local user account is removed, the user loses all active login/SSH sessions. Any calls on the existing REST session with that local user account fail with a permissions issue as soon as the user is deleted. Soon afterwards, the existing REST sessions with the deleted local user account become invalidated. If a user is viewing the GUI while their account is deleted, the user is redirected to the login page within 60 seconds. The home directory associated with the user is also removed from the switch.
- Cleartext passwords (whether entered with prompting or entered directly) must:
 - Contain only ASCII characters from hexadecimal 21 to hexadecimal 7E [`\x21-\x7E`] (decimal 33 to 126). Spaces are not allowed. When the password is entered directly without prompting, the "?" symbol (hexadecimal 3F [`\x3F`] (decimal 63)) is not permitted.
 - Contain at most 32 characters.
 - Contain at least the number of characters configured (optionally) for `minimum-password-length`.



Although empty passwords are supported, it is recommended that you use strong passwords for all production switches.



Only an administrator can change the password of a user assigned to the `operators` role.

Although usernames with uppercase letters appear in the show-running configuration, users will not have login access if the username was configured and downgraded to a version without uppercase support.

Examples

Creating local user **jamie** in the **administrators** group with a prompted password:

```
switch(config)# user jamie group administrators password
Adding user jamie
Enter password:*****
Confirm password:*****
```

Creating user **chris** in the existing user-defined local user group **admuser2** with a cleartext password, using direct entry without prompting:

```
switch(config)# user chris group admuser2 password plaintext passWORDxJ|989
```

Creating user **alex** in the **operators** group with a ciphertext password (the ciphertext shown is a placeholder that must be replaced with actual ciphertext):

```
switch(config)# user alex group operators password ciphertext NDcDI2...8igJfA=
```

Removing user **jamie**:

```
switch(config)# no user jamie
User jamie's home directory and active sessions will be deleted.
Do you want to continue [y/n]?y
```

Using uppercase letters within username:

```
switch(config)# user TestUser1 group administrators password plaintext testuser1
switch(config)#
```



For more information on features that use this command, refer to the Multicast Guide for your switch model.

Command History

Release	Modification
10.13	Added support for use of uppercase letters within username.
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

user-group

```
user-group <GROUP-NAME>
no user-group <GROUP-NAME>
```

Description

If **<GROUP-NAME>** does not exist, this command creates a local user group and then enters its context. If **<GROUP-NAME>** exists, this command enters the context for the specified **<GROUP-NAME>**. Within the **<GROUP-NAME>** context, several subcommands are available for working with rules that specify what CLI commands are permitted or denied for all members of the local group.

In addition to the three built-in user groups **administrators**, **operators**, and **auditors**, up to 29 user-defined local user groups can be defined. All users can be members of only one of the up to 32 groups.

The **no** form of this command deletes the specified user group. All members of the deleted group lose all command authorization privilege.

Parameter	Description
<GROUP-NAME>	Specify a user group name up to 32 characters long. A new group is created if the specified group does not exist and then the group context is entered. If the group name exists, its context is entered.



Do not causally delete user-defined local user groups without understanding the implications. Although user-defined local user groups can be deleted with the respective members losing all privileges, the three built-in groups **administrators**, **operators**, and **auditors** are always available and their privileges are unchangeable.

Subcommands

These subcommands are available within the user-defined local user group context (shown in the switch prompt as **config-usr-grp-<GROUP-NAME>**).

```
[<SEQ-NUM>] {permit | deny} cli command "<REGEX>"
no <SEQ-NUM>
```

Defines a CLI command privilege **permit** or **deny** rule. There is an implicit "**deny.***" rule at the end of every user-defined group rule list. Members of a user-defined group without any **permit** rules have no CLI command privileges.

The **no** form of this subcommand deletes the specified (by sequence number) rule from the group.



Rule evaluation proceeds from lowest to highest sequence number until the first successful match, resulting in either CLI command permission or denial. Rule evaluation ceases upon first match. Therefore, rules for related CLI commands must be defined in most restrictive to least restrictive order.

```
<SEQ-NUM>
```

Specifies the CLI command rule sequence number. When omitted, a sequence number that is 10 greater the highest existing sequence number is auto-assigned. When no rules exist, the first auto-assigned sequence number is 10.

{**permit** | **deny**}

Sets the rule type as either **permit** or **deny**. Rule order is important. For example, these two related rules together authorize all **show** commands except for the **show aaa** commands.

```
switch(config-usr-grp-admuser2)#10 deny cli command "show aaa .*"
switch(config-usr-grp-admuser2)#20 permit cli command "show .*"

```

To achieve the wanted effect in this example, the **deny** rule must precede the **permit** rule. These two rules together achieve the following:

- All **show aaa** commands match on rule 10, triggering command denial, and the immediate cessation of further rule evaluation. Matching on rule 20 is never attempted.
- All other **show** commands (excluding **show aaa** commands) match on rule 20 and are therefore permitted.

<REGEX>

Specifies the CLI command matching criteria of the rule. The criteria can be expressed as **.*** which matches all commands. Otherwise, the criteria is expressed as a POSIX-compliant regular expression (regex) string starting with an exact match command token (for example **show**) followed by a regex representing command arguments. The first word must be a string that contains only alphanumeric or hyphen characters.

For example, to allow all commands starting with the word **interface**, the regex must be **"interface .*" or just "interface"**. Using **"interface.*"** (without the space) is not supported. For example, **"show .*" matches every show command**. Consult the Extended regular expression information available at: https://pubs.opengroup.org/onlinepubs/9699919799/basedefs/V1_chap09.html#tag_09_04.

Sample matching criteria	Sample matched CLI command or specifier	Matches
show .*	show accounting log	All show commands
bgp .*	bgp router-id 1.1.1.1	All bgp commands
interface .*	interface 1/1/1	All interface specifiers
vlan (3 4)	vlan 3	VLAN 3 or 4
vlan [1-9]	vlan 5	A single VLAN in the range 1 to 9
vlan ([1-9] 1[0-9])	vlan 19	A single VLAN in the range 1 to 19

```
[<SEQ-NUM>] comment <TEXT-STRING>
no <SEQ-NUM> comment

```

Adds a comment to an existing rule. The no form of this subcommand removes an existing comment.

```
switch(config-usr-grp-admuser2)# 10 comment Deny all show aaa commands.
switch(config-usr-grp-admuser2)# 20 comment Permit all other show commands.
switch(config-usr-grp-admuser2)#

```



```
switch(config-usr-grp-admuser2)# show running-config current-context
user-group admuser2
  10 comment Deny all show aaa commands.
  10 deny cli command "show aaa .*"
  20 comment Permit all other show commands.
  20 permit cli command "show .*"

```

`include <GROUP-NAME> [no] include <GROUP-NAME>`

Include all rules from the specified user-defined **<GROUP-NAME>**. Only one group can be included in the definition of another group. The content of the included group is effectively placed at the top of the rules list in the current group. If the specified **<GROUP-NAME>** does not exist, it is created.

The `no` form of this subcommand removes the specified included group from the current group. The specified included group must exist and must be included in the current group or else an error message is shown.

The name of the included group is shown at the top of the **show user-group** command for the group with the **include**.

In this example, group **admuser1** is included in group **admuser2**. So the **admuser1** rules are evaluated first and then the rules in the **admuser2** group are only evaluated if no CLI command match occurs for the rules in group **admuser1**.

```
switch(config-usr-grp-admuser2)# include admuser1
switch(config-usr-grp-admuser2)# show user-group admuser2
User Group Summary
=====
Name           : admuser2
Type           : configuration
Included Group : admuser1
Number of Rules : 2
User Group Rules
=====

```

SEQUENCE NUM	ACTION	COMMAND	COMMENT
10	deny	show aaa .*	Deny all show aaa commands.
20	permit	show .*	Permit all other show commands.

`resequence [<STARTING-SEQ-NUM> <INCREMENT>]`

Resequences the CLI command authorization rules. When entered without the optional parameters the rules are resequenced with a **<STARTING-SEQ-NUM>** of 10 and an **<INCREMENT>** of 10.

<STARTING-SEQ-NUM>

Specifies the starting sequence number.

<INCREMENT>

Specifies the sequence number increment.

Resequencing the rules to start at 100 with an increment of 20:

```
switch(config-usr-grp-admuser2)# resequence 100 20
switch(config-usr-grp-admuser2)# show running-config current-context
user-group admuser2
  100 comment Deny all show aaa commands.
  100 deny cli command "show aaa .*"
  120 comment Permit all other show commands.
  120 permit cli command "show .*"

```

Resequencing the rules to the default of starting at 10 with an increment of 10:

```
switch(config-usr-grp-admuser2)# resequence
switch(config-usr-grp-admuser2)# show running-config current-context
user-group admuser2
  10 comment Deny all show aaa commands.
  10 deny cli command "show aaa .*"
  20 comment Permit all other show commands.
  20 permit cli command "show .*"

```

show running-config current-context

Shows all the commands used to configure the rules in the current group context.

```
switch(config-usr-grp-admuser2)# show running-config current-context
user-group admuser2
  10 comment Deny all show aaa commands.
  10 deny cli command "show aaa .*"
  20 comment Permit all other show commands.
  20 permit cli command "show .*"

```

list

List the subcommands available within the user-defined group context.

exit

Exits the user-defined group context.

end

Exits the user-defined group context and then the config context.



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

user management-interface

```
user <USERNAME> management-interface <MGMT-INTERFACE>
no user <USERNAME> management-interface <MGMT-INTERFACE>

```

Description

Enables a management interface for the specified local user. By default, all management interfaces are enabled for all local users.

The **no** form of this command disables the selected management interface for the specified local user.

Parameter	Description
<code><USERNAME></code>	Specifies the name of an existing local user.
<code><MGMT-INTERFACE></code>	Selects one of the management interfaces: ssh , telnet , https-server , console . Note that https-server corresponds to the Web UI and REST.

Examples

Enabling the SSH management interface for local user **admin1**:

```
switch(config)# user admin1 management-interface ssh
```

Disabling the SSH management interface for local user **admin1**:

```
switch(config)# no user admin1 management-interface ssh
```

Enabling the telnet management interface for local user **admin1**:

```
switch(config)# user admin1 management-interface telnet
```

Disabling the telnet management interface for local user **admin1**:

```
switch(config)# no user admin1 management-interface telnet
```

Enabling the https-server (Web UI) management interface for local user **admin1**:

```
switch(config)# user admin1 management-interface https-server
```

Disabling the https-server (Web UI) management interface for local user **admin1**:

```
switch(config)# no user admin1 management-interface https-server
```

Enabling the console management interface for local user **admin1**:

```
switch(config)# user admin1 management-interface console
```

Disabling the console management interface for local user **admin1**:

```
switch(config)# no user admin1 management-interface console
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

Release	Modification
10.11	Command introduced

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

user password

```
user <USERNAME> password [ciphertext <CIPHERTEXT-PASSWORD> | plaintext <PLAINTEXT-PASSWORD>]
```

Description

Changes a password for an account or enables the password for the admin account. When entered without either optional **ciphertext** or **plaintext** parameters, the cleartext password is prompted for twice, with the characters entered masked with "*" symbols.

Parameter	Description
<USERNAME>	Specifies the corresponding user name for the password you want to change.
ciphertext <CIPHERTEXT-PASSWORD>	Specifies a ciphertext password. No password prompts are provided and the ciphertext password is validated before the configuration is applied for the user. The variable <CIPHERTEXT-PASSWORD> is Base64 and is typically copied from another switch using the <code>show running-config</code> command output and then pasted into this command. NOTE: The administrator cannot construct ciphertext passwords themselves. The ciphertext is only created by an AOS-CX switch. The ciphertext is created by setting a password for a user with the <code>user</code> command. The ciphertext is available for copying from the <code>show running-config</code> output and pasting into the configuration on any other AOS-CX switch. The target switch must have the same export password (default or otherwise) as the source switch.
plaintext <PLAINTEXT-PASSWORD>	Specifies the password without prompting. The password is visible as cleartext when entered but is encrypted thereafter. Command history does show the password as cleartext.

Usage

The admin account is available on the switch without a password by default.

Cleartext passwords (whether entered with prompting or entered directly) must:

- Contain only ASCII characters from hexadecimal 21 to hexadecimal 7E [\x21-\x7E] (decimal 33 to 126). Spaces are not allowed. When the password is entered directly without prompting, the "?" symbol (hexadecimal 3F [\x3F] (decimal 63)) is not permitted.

- Contain at most 32 characters.
- Contain at least the number of characters configured (optionally) for `minimum-password-length`.



Although empty passwords are supported, it is recommended that you use strong passwords for all production switches.



Only an administrator can change the password of a user assigned to the `operators` role.

Although usernames with uppercase letters appear in the show-running configuration, users will not have login access if the username was configured and downgraded to a version without uppercase support.

Examples

Enabling (or changing) a cleartext password for **admin**:

```
switch(config)# user admin password
Changing password for user admin
Enter password:*****
Confirm password:*****
```

Changing the cleartext password for user **chris**, using direct entry without prompting:

```
switch(config)# user chris password plaintext PASSwordZQ#@67
```

Changing the ciphertext password for user **alex** (the ciphertext shown is a placeholder that must be replaced with actual ciphertext):

```
switch(config)# user alex password ciphertext XqYJ36...W83D4Y=
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	<code>config</code>	Administrators or local user group members with execution rights for this command.

SSH (Secure Shell) is a cryptographic protocol that encrypts all communication between devices. Each switch VRF includes an SSH server. The SSH server on the **mgmt** VRF is enabled by default in software version 10.02 and higher, and disabled in version 10.01 and lower. Only the SSH servers included in the switch are supported.

The SSH server provides SSH client to switch communications, enabling SSH clients (at least SSH v2.0) to connect to the switch for the purpose of managing it. The SSH server interfaces with the authentication service that provides local and/or remote AAA.



The SSH server will perform a rekey operation for all open SSH sessions at every hour or after 1 GB of data transferred, whichever occurs first. The rekey is performed to address a common security concern that encryption/decryption keys not be used for long periods of time. This limits the amount of data exposed in the unfortunate case where a key is exposed or refactored.



SSH public key authentication is separate from SSH server. Look for information on *SSH public key* under [Local authentication](#).

SSH defaults

Setting	Default value
Maximum SSH password retries	3 password retries.
Password-based (with SSH client) authentication	Enabled.
SSH password-based login grace period timeout	120 seconds.
SSH public key authentication	Enabled.
SSH idle session timeout	60 seconds.

SSH server tasks

SSH server tasks are as follows:

Task	Command name	Example
Enabling the SSH server	<code>ssh server vrf</code>	<code>ssh server vrf default</code>

Task	Command name	Example
Disabling the SSH server	no ssh server vrf	no ssh server vrf default
Generating an SSH host-key pair	ssh host-key	ssh host-key rsa bits 2048
Clearing the list of trusted SSH servers for your user account	ssh known-host remove	ssh known-host remove 1.1.1.1
Configuring SSH to use a set of ciphers	ssh ciphers	ssh ciphers chacha20-poly1305@openssh.com aes256-ctr aes256-cbc
Configuring SSH to use a set of host key algorithms	ssh host-key-algorithms	ssh host-key-algorithms ssh-rsa ssh-ed25519 ecdsa-sha2-nistp521
Configuring SSH to use a set of MACs	ssh macs	ssh macs hmac-sha2-256 hmac-sha2-512
Configuring SSH to use a set of key exchange algorithms	ssh key-exchange-algorithms	ssh key-exchange-algorithms ecdh-sha2-nistp256
Configuring SSH to use a set of public key algorithms	ssh public-key-algorithms	ssh public-key-algorithms x509v3-ssh-rsa ssh-rsa rsa-sha2-256
Configuring SSH idle session timeout	cli-session	switch(config)# cli-session switch(config-cli-session)# timeout 20
Showing the SSH server configuration	show ssh server	show ssh server all-vrfs
Showing the active SSH sessions	show ssh server sessions	show ssh server sessions all-vrfs
Showing the SSH server host keys	show ssh host-key	show ssh host-key ecdsa

SSH server commands

show ssh host-key

```
show ssh host-key [ecdsa | ed25519 | rsa]
```

Description

Shows the public host keys for the SSH server. If the key type is not provided, all available host-keys are shown.

Parameter	Description
ecdsa	Selects the ECDSA host-key pair.

Parameter	Description
ed25519	Selects the ED25519 host-key pair.
rsa	Selects the RSA host-key pair.

Examples

Showing the ECDSA public host-key:

```
switch# show ssh host-key ecdsa

Key Type : ECDSA      Curve : ecdsa-sha2-nistp256

ecdsa-sha2-nistp256 AAAAE2VjZHNhLXNoYTItbmlzdHAyNTYAAAAIbmlzdHAyNTYAAhtuv5rABBBGs
...
O4mjVFGMVKZ87RWkyrxeQa2fAGZZEp1902K33/k3q17fA4EivRzC75YvjDu8=
```

Showing all public host keys:

```
switch# show ssh host-key

Key Type : ECDSA      Curve : ecdsa-sha2-nistp256
ecdsa-sha2-nistp256 AAAAE2VjZHNhLXNoYTItbmlzdHAyNTYAAAAIbmlzdHAyNTYAAhtuv5rABBBGs
...
O4mjVFGMVKZ87RWkyrxeQa2fAGZZEp1902K33/k3q17fA4EivRzC75YvjDu8=

Key Type : ED25519
ssh-ed25519 AAAAC3NzaC1lZDI1NTE5AAAAIGb6910Jwoe8Hkl9K5Yhqi jrWI3yovNbiJVq6tw4WjJr4

Key Type : RSA        Key Size : 2048
ssh-rsa AAAAB3NzaC1yc2EAAAADAQABAAQDdVCXlw43h4n1bwg9jI6DSBMngymCdPD0JUG42Sn9IS
...
nGSXtrNy6OmlFDJTAy+zz5Kd8d21ZLuhf07IHNgF3pff65Xc8qNJBv
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

show ssh server

```
show ssh server [vrf <VRF-NAME> | all-vrfs] [vsx-peer]
```

Description

Shows the SSH server configuration for the specified VRF. Administrators can show the server configuration of all VRFs by using the **all-vrfs** parameter. If no VRF name is provided in this command, the command shows the SSH server configuration on the default VRF.

Parameter	Description
<code>vrf <VRF-NAME></code>	Specifies the VRF name.
<code>all-vrfs</code>	Selects all VRFs.
<code>vsx-peer</code>	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Examples

Showing the SSH server configuration on the default VRF:

switch# **show ssh server**

```
SSH server configuration on VRF default :
IP Version           : IPv4 and IPv6      SSH Version           : 2.0
TCP Port             : 22                  Grace Timeout (sec)   : 60
Max Auth Attempts    : 6                   Server Status         : running
Allow-list           : disabled
Ciphers:
chacha20-poly1305@openssh.com, aes128-ctr, aes192-cbc,
aes128-cbc, aes192-ctr, aes256-gcm@openssh.com,
aes128-gcm@openssh.com, aes256-ctr, aes256-cbc

Host Key Algorithms:
ecdsa-sha2-nistp256, ecdsa-sha2-nistp384, ecdsa-sha2-nistp521,
ssh-ed25519, rsa-sha2-256, rsa-sha2-512, ssh-rsa

Key Exchange Algorithms:
curve25519-sha256, curve25519-sha256@libssh.org,
ecdh-sha2-nistp256,ecdh-sha2-nistp384, ecdh-sha2-nistp521,
diffie-hellman-group-exchange-sha256,diffie-hellman-group16-sha512,
diffie-hellman-group18-sha512,diffie-hellman-group14-sha256,
diffie-hellman-group14-sha1

MACs:
hmac-sha1-etm@openssh.com, umac-64@openssh.com,
umac-128@openssh.com, hmac-sha2-256,hmac-sha2-512,hmac-sha1

Public Key Algorithms:
rsa-sha2-256, rsa-sha2-512ssh-rsa, ecdsa-sha2-nistp256,
ecdsa-sha2-nistp384, ecdsa-sha2-nistp521, ssh-ed25519,
x509v3-rsa2048-sha256, x509v3-ssh-rsa, x509v3-sign-rsa,
x509v3-ecdsa-sha2-nistp256, x509v3-ecdsa-sha2-nistp384,
x509v3-ecdsa-sha2-nistp521
```

Showing the SSH server configuration on the management VRF:

```
switch# show ssh server vrf mgmt

SSH server configuration on VRF mgmt :
```

```
IP Version           : IPv4 and IPv6      SSH Version          : 2.0
TCP Port             : 22                  Grace Timeout (sec)  : 120
Max Auth Attempts    : 6
```

Allow-list: disabled

Ciphers:

chacha20-poly1305@openssh.com, aes128-ctr, aes192-cbc,
aes128-cbc, aes192-ctr, aes256-gcm@openssh.com,
aes128-gcm@openssh.com, aes256-ctr, aes256-cbc

Host Key Algorithms:

ecdsa-sha2-nistp256, ecdsa-sha2-nistp384, ecdsa-sha2-nistp521,
ssh-ed25519, rsa-sha2-256, rsa-sha2-512, ssh-rsa

Key Exchange Algorithms:

curve25519-sha256, curve25519-sha256@libssh.org,
ecdh-sha2-nistp256, ecdh-sha2-nistp384, ecdh-sha2-nistp521,
diffie-hellman-group-exchange-sha256, diffie-hellman-group16-sha512,
diffie-hellman-group18-sha512, diffie-hellman-group14-sha256,
diffie-hellman-group14-sha1

MACs:

hmac-sha1-etm@openssh.com, umac-64@openssh.com,
umac-128@openssh.com, hmac-sha2-256, hmac-sha2-512, hmac-sha1

Public Key Algorithms:

rsa-sha2-256, rsa-sha2-512, ssh-rsa, ecdsa-sha2-nistp256,
ecdsa-sha2-nistp384, ecdsa-sha2-nistp521, ssh-ed25519,
x509v3-rsa2048-sha256, x509v3-ssh-rsa, x509v3-sign-rsa,
x509v3-ecdsa-sha2-nistp256, x509v3-ecdsa-sha2-nistp384,

Showing the SSH server configuration for all VRFs:

```
switch# show ssh server all-vrfs
```

SSH server configuration on VRF default :

```
IP Version           : IPv4 and IPv6      SSH Version          : 2.0
TCP Port             : 22                  Grace Timeout (sec)  : 120
Max Auth Attempts    : 6
```

Ciphers:

chacha20-poly1305@openssh.com, aes128-ctr, aes192-cbc,
aes128-cbc, aes192-ctr, aes256-gcm@openssh.com,
aes128-gcm@openssh.com, aes256-ctr, aes256-cbc

Host Key Algorithms:

ecdsa-sha2-nistp256, ecdsa-sha2-nistp384, ecdsa-sha2-nistp521,
ssh-ed25519, rsa-sha2-256, rsa-sha2-512, ssh-rsa

Key Exchange Algorithms:

curve25519-sha256, curve25519-sha256@libssh.org,
ecdh-sha2-nistp256, ecdh-sha2-nistp384, ecdh-sha2-nistp521,
diffie-hellman-group-exchange-sha256, diffie-hellman-group16-sha512,
diffie-hellman-group18-sha512, diffie-hellman-group14-sha256,

MACs:
hmac-sha1-etm@openssh.com, umac-64@openssh.com,
umac-128@openssh.com, hmac-sha2-256, hmac-sha2-512, hmac-sha1

Public Key Algorithms:
rsa-sha2-256, rsa-sha2-512ssh-rsa, ecdsa-sha2-nistp256,
ecdsa-sha2-nistp384, ecdsa-sha2-nistp521, ssh-ed25519,
x509v3-rsa2048-sha256, x509v3-ssh-rsa, x509v3-sign-rsa,
x509v3-ecdsa-sha2-nistp256, x509v3-ecdsa-sha2-nistp384,
x509v3-ecdsa-sha2-nistp521

SSH server configuration on VRF mgmt :

IP Version	: IPv4 and IPv6	SSH Version	: 2.0
TCP Port	: 22	Grace Timeout (sec)	: 120
Max Auth Attempts	: 6		

Ciphers:
chacha20-poly1305@openssh.com, aes128-ctr, aes192-cbc,
aes128-cbc, aes192-ctr, aes256-gcm@openssh.com,
aes128-gcm@openssh.com, aes256-ctr, aes256-cbc

Host Key Algorithms:
ecdsa-sha2-nistp256, ecdsa-sha2-nistp384, ecdsa-sha2-nistp521,
ssh-ed25519, rsa-sha2-256, rsa-sha2-512, ssh-rsa

Key Exchange Algorithms:
curve25519-sha256, curve25519-sha256@libssh.org,
ecdh-sha2-nistp256, ecdh-sha2-nistp384, ecdh-sha2-nistp521,
diffie-hellman-group-exchange-sha256, diffie-hellman-group16-sha512,
diffie-hellman-group18-sha512, diffie-hellman-group14-sha256,
diffie-hellman-group14-sha1

MACs:
hmac-sha1-etm@openssh.com, umac-64@openssh.com,
umac-128@openssh.com, hmac-sha2-256, hmac-sha2-512, hmac-sha1

Public Key Algorithms:
rsa-sha2-256, rsa-sha2-512ssh-rsa, ecdsa-sha2-nistp256,
ecdsa-sha2-nistp384, ecdsa-sha2-nistp521, ssh-ed25519,
x509v3-rsa2048-sha256, x509v3-ssh-rsa, x509v3-sign-rsa,
x509v3-ecdsa-sha2-nistp256, x509v3-ecdsa-sha2-nistp384,



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show ssh server sessions

```
show ssh server sessions [vrf <VRF-NAME> | all-vrfs] [vsx-peer]
```

Description

Shows the active SSH sessions on a specified VRF or on all VRFs. If no VRF is specified, the active sessions on the **default** VRF are shown.

Parameter	Description
vrf <VRF-NAME>	Specifies the VRF name.
all-vrfs	Selects all VRFs.
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Usage

If you provide the command with a VRF name, the command shows the active SSH session for the specified VRF. Any user can show sessions of all VRFs by using the **all-vrfs** parameter. The maximum number of sessions per VRF is five. The maximum SSH idle session timeout is 60 seconds.

Examples

Showing the active SSH sessions on the default VRF:

```
switch# show ssh server sessions

SSH sessions on VRF default
IPv4 SSH Sessions
  Server IP      : 10.1.1.1
  Client IP      : 10.1.1.2
  Client Port    : 58835

IPv6 SSH Sessions
  Server IP      : FF01:0:0:0:0:0:FB
  Client IP      : FF01:0:0:0:0:0:FC
  Client Port    : 58836
```

Showing the SSH server configuration for all VRFs:

```
switch# show ssh server sessions all-vrf

SSH sessions on VRF mgmt
IPv4 SSH Sessions
  Server IP      : 10.1.1.1
  Client IP      : 10.1.1.2
  Client Port    : 58835

IPv6 SSH Sessions
  Server IP      : FF01:0:0:0:0:0:FB
  Client IP      : FF01:0:0:0:0:0:FC
  Client Port    : 58836
```

```
SSH sessions on VRF default
IPv4 SSH Sessions
  Server IP      : 20.1.1.1
  Client IP     : 20.1.1.2
  Client Port    : 58837

IPv6 SSH Sessions
  Server IP      : FF01:0:0:0:0:0:FD
  Client IP     : FF01:0:0:0:0:0:FE
  Client Port    : 58838
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Operator (>) or Manager (#)	Administrators or local user group members with execution rights for this command.

ssh ciphers

```
ssh ciphers <CIPHERS-LIST>
no ssh ciphers
```

Description

Configures SSH to use a set of ciphers in the specified priority order. Ciphers in SSH are used for privacy of data being transported over the connection. The first cipher type entered in the CLI is considered a first priority. Each option is an algorithm that is used to encrypt the link and each name indicates the algorithm and cryptographic parameters that are used. Only ciphers that are entered by the user are configured.

The **no** form of this command removes the configuration of ciphers and reverts SSH to use the default set of ciphers.

Parameter	Description
<CIPHERS-LIST>	Valid ciphers: ■ aes128-cbc ■ aes192-cbc ■ aes256-cbc ■ aes128-ctr ■ aes192-ctr ■ aes256-ctr ■ aes128-gcm@openssh.com

Parameter	Description
	▪ aes256-gcm@openssh.com ▪ chacha20-poly1305@openssh.com Default set of ciphers in priority order (highest at top): ▪ chacha20-1305@openssh.com ▪ aes128-ctr ▪ aes192-ctr ▪ aes256-ctr ▪ aes128-gcm@openssh.com ▪ aes256-gcUm@openssh.com

Examples

Configuring SSH to use only specified ciphers in the priority order:

```
switch(config)# ssh ciphers chacha20-poly1305@openssh.com aes256-ctr aes256-cbc
```

Reverting SSH to use the default set of ciphers:

```
switch(config)# no ssh ciphers
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

ssh host-key

```
ssh host-key {ecdsa [ecdsa-sha2-nistp256 | ecdsa-sha2-nistp384 | ecdsa-sha2-nistp521] |  
ed25519 | rsa [bits {2048 | 4096}] }
```

Description

Generates an SSH host-key pair.

Parameter	Description
ecdsa	Selects the ECDSA host-key pair type as ecdsa-sha2-nistp256 (the default), ecdsa-sha2-nistp384 , or ecdsa-sha2-nistp521 .
ed25519	Selects the ED25519 host-key pair.
rsa	Selects the RSA host-key pair. Optionally, the key bit length is selected with either bits 2048 (the default) or bits 4096 .

Usage

When an SSH server is enabled on a VRF for the first time, host-keys are generated.

If the host-key of the given type exists, a warning message is displayed with a request to overwrite the previous host-key with the new key.

Examples

Overwriting an old ECDSA host-key with a new ecdsa-sha2-nistp384 host-key:

```
switch(config)# ssh host-key ecdsa ecdsa-sha2-nistp384
ecdsa host-key will be overwritten.
Do you want to continue (y/n)?
```

Overwriting an old RSA host-key with a new RSA host-key with 2048 bits:

```
switch(config)# ssh host-key rsa bits 2048
rsa host-key will be overwritten.
Do you want to continue (y/n)?
```

Overwriting an ECDSA host-key with an ED25519 host-key pair:

```
switch(config)# ssh host-key ed25519
ed25519 host-key will be overwritten.
Do you want to continue (y/n)?
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

ssh host-key-algorithms

```
ssh host-key-algorithms <HOST-KEY-ALGORITHMS-LIST>
no ssh host-key-algorithms
```

Description

Configures SSH to use a set of host key algorithms in the specified priority order. Host key algorithms specify which host key types are allowed to be used for the SSH connection. The first host key entered in the CLI is considered a first priority. Each option represents a type of key that can be used. Host keys are used to verify the host that you are connecting to. This configuration allows you to control which host key types are presented to incoming clients, or which host key types to receive first from hosts. Only the host key algorithms that are specified by the user are configured.

The **no** form of this command removes the configuration of host key algorithms and reverts SSH to use the default set of algorithms.

Parameter	Description
<HOST-KEY-ALGORITHMS-LIST>	Default set of public key algorithms in priority order (highest at top), comprised of all possible valid algorithms: ▪ ecdsa-sha2-nistp256 ▪ ecdsa-sha2-nistp384 ▪ ecdsa-sha2-nistp521 ▪ ssh-ed25519 ▪ rsa-sha2-256 ▪ rsa-sha2-512 ▪ ssh-rsa

Examples

Configuring SSH to use only specified host key algorithms:

```
switch(config)# ssh host-key-algorithms ssh-rsa ssh-ed25519 ecdsa-sha2-nistp521
```

Reverting SSH to use the default set of host key algorithms:

```
switch(config)# no host-key-algorithms
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

ssh key-exchange-algorithms

```
ssh key-exchange-algorithms <KEY-EXCHANGE-ALGORITHMS-LIST>
no ssh key-exchange-algorithms
```

Description

Configures SSH to use a set of key exchange algorithm types in the specified priority order. The first key exchange type entered in the CLI is considered a first priority. Key exchange algorithms are used to exchange a shared session key with a peer securely. Each option represents an algorithm that is used to distribute a shared key in a way that prevents outside interference, manipulation, or recovery. Only the key exchange algorithms that are specified by the user are configured.

The **no** form of this command removes the configuration of key exchange algorithms and reverts SSH to use the default set of algorithms.

Parameter	Description
<KEY-EXCHANGE-ALGORITHMS-LIST>	Valid key exchange algorithms: ▪ curve25519-sha256 ▪ curve25519-sha256@libssh.org ▪ diffie-hellman-group-exchange-sha1 ▪ diffie-hellman-group-exchange-sha256 ▪ diffie-hellman-group14-sha1 ▪ diffie-hellman-group14-sha256 ▪ diffie-hellman-group16-sha512 ▪ diffie-hellman-group18-sha512 ▪ ecdh-sha2-nistp256 ▪ ecdh-sha2-nistp384 ▪ ecdh-sha2-nistp521 Default set of key exchange algorithms in priority order (highest at top): ▪ curve25519-sha256 ▪ curve25519-sha256@libssh.org ▪ ecdh-sha2-nistp256 ▪ ecdh-sha2-nistp384 ▪ ecdh-sha2-nistp521 ▪ diffie-hellman-group-exchange-sha256 ▪ diffie-hellman-group16-sha512 ▪ diffie-hellman-group18-sha512 ▪ diffie-hellman-group14-sha256 ▪ diffie-hellman-group-exchange-sha1

Examples

Configuring SSH to use a set of specified key exchange algorithms:

```
switch(config)# ssh key-exchange-algorithms ecdh-sha2-nistp256 curve25519-sha256  
diffie-hellman-group-exchange-sha256
```

Reverting SSH to use the default set of key-exchange-algorithms:

```
switch(config)# no key-exchange-algorithms
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

ssh known-host remove

```
ssh known-host remove {all | {<IPv4-ADDRESS> | <HOSTNAME> | <IPv6-ADDRESS>} }
```

Description

Clears the list of trusted SSH servers for your user account. When you download or upload a file to or from a server using SFTP, you establish a trusted SSH relationship with that server. Each user account maintains its own set of SSH server host-keys for every server to which the user previously connected.

Parameter	Description
all	Clears the trusted servers list.
<IPv4-ADDRESS>	Specifies the IPv4 address of the remote device.
<HOSTNAME>	Specifies the host name of the remote device. Range: up to 255 characters.
<IPv6-ADDRESS>	Specifies the IPv6 address of the remote device.

Examples

Clearing the trusted server list:

```
switch(config)# ssh known-host remove all
```

Removing a specified server from the trusted server list:

```
switch(config) # ssh known-host remove 1.1.1.1
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

ssh macs

```
ssh macs <MACS-LIST>
no ssh macs
```

Description

Configures SSH to use a set of message authentication codes (MACs) in the specified priority order. The first MAC entered in the CLI is considered a first priority. MACs maintain the integrity of each message sent across an SSH connection. Each option represents an algorithm that can be used to provide integrity between peers. Only the MAC types that are specified by the user are configured.

The **no** form of this command removes the configuration of MACs and reverts SSH to use the default set of MACs.

Parameter	Description
<MACS-LIST>	Valid MACs: ▪ hmac-sha1 ▪ hmac-sha1-96 ▪ hmac-sha1-etm@openssh.com ▪ hmac-sha2-256 ▪ hmac-sha2-512 ▪ hmac-sha2-256-etm@openssh.com ▪ hmac-sha2-512-etm@openssh.com Default set of MACs in priority order (highest at top): ▪ hmac-sha2-256-etm@openssh.com ▪ hmac-sha2-512-etm@openssh.com ▪ hmac-sha1-etm@openssh.com ▪ hmac-sha2-256 ▪ hmac-sha2-512 ▪ hmac-sha1

Examples

Configuring SSH to use a set of specified MACs:

```
switch(config)# ssh macs hmac-sha2-256 hmac-sha2-512
```

Reverting SSH to use the default set of MACs:

```
switch(config)# no ssh macs
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

ssh maximum-auth-attempts

```
ssh maximum-auth-attempts <ATTEMPTS>  
no maximum-auth-attempts
```

Description

Sets the SSH maximum number of authentication attempts.

The **no** form of the command resets the maximum to its default of 6.

Parameter	Description
<ATTEMPTS>	Specifies the maximum number of SSH authentication attempts. Range: 1 to 10. Default: 6.

Examples

Setting the maximum number of authentication attempts:

```
switch(config)# ssh maximum-auth-attempts 3
```

Resetting the maximum number of authentication attempts to its default of 6:

```
switch(config)# no maximum-auth-attempts
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

ssh public-key-algorithms

```
ssh public-key-algorithms <PUBLIC-KEY-ALGORITHMS-LIST>
no ssh public-key-algorithms
```

Description

Configures SSH to use a set of public key algorithms in the specified priority order. The first public key type entered in the CLI is considered a first priority. Public key algorithms specify which public key types can be used for public key authentication in SSH. Each option represents a public key type that the SSH server can accept or that the SSH client can present to a server. Only the public key algorithms that are chosen by the user are configured.

The **no** form of this command removes the configuration of public key algorithms and reverts SSH to use the default set.

Parameter	Description
<PUBLIC-KEY-ALGORITHMS-LIST>	Default set of public key algorithms in priority order (highest at top), comprised of all possible valid algorithms: ▪ rsa-sha2-256 ▪ rsa-sha2-512 ▪ ssh-rsa ▪ ecdsa-sha2-nistp256 ▪ ecdsa-sha2-nistp384 ▪ ecdsa-sha2-nistp521 ▪ ssh-ed25519 ▪ x509v3-rsa2048-sha256 ▪ x509v3-ssh-rsa ▪ x509v3-sign-rsa ▪ x509v3-ecdsa-sha2-nistp256 ▪ x509v3-ecdsa-sha2-nistp384 ▪ x509v3-ecdsa-sha2-nistp521

Examples

Configuring SSH to use a set of specified public key algorithms:

```
switch(config)# ssh public-key-algorithms x509v3-ssh-rsa ssh-rsa rsa-sha2-256
```

Reverting SSH to use the default set of public key algorithms:

```
switch(config)# no ssh public-key-algorithms
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

ssh server allow-list

```
ssh server allow-list
ip <ipv4-addr>[mask]
ipv6 <ipv6-addr>[mask]
enable
no
```

Description

Configure a list of addresses that will be the only hosts allowed to connect to the SSH servers running on all VRFs of the switch. By default, the allow-list is disabled and any host is allowed to connect given the correct authentication criteria. When the allow-list is enabled, only the hosts that fall under one of the entries may connect with the correct authentication criteria, all other hosts will be denied to attempt authentication.

Parameter	Description
<i>ip <ipv4-addr>[mask]</i>	An allowed host IP address and (optional) subnet in any of the following formats: ▪ A.B.C.D: An allowed IPv4 address ▪ A.B.C.D/M: An allowed IPv4 subnet with prefix length ▪ A.B.C.D W.X.Y.Z: An allowed IPv4 address with network mask ▪ A.B.C.D/W.X.Y.Z: An allowed IPv4 address with network mask
<i>ipv6 <ipv6-addr>[mask]</i>	An allowed host IPv6 address and (optional) subnet in any of the following formats: ▪ X:X::X:X: An allowed IPv6 address ▪ X:X::X:X/M: An allowed IPv6 subnet

Parameter	Description
enable	Enable the allow-list.
no ...	Negate a command or set its default.

Usage

The allow-list can contain up to 20 entries of IPv4 or IPv6 addresses, including entire subnets. The order in which the entries are added to the list does not matter. The configuration will only take effect once the allow-list is enabled by issuing the **enable** command in the *config-ssh-al* (**ssh server allow-list**) context.

When the allow-list is enabled, SSH servers on all VRFs will restart and all active SSH sessions will be terminated. The enabled allow-list may be modified to remove existing entries or add new entries, and each of those modifications will trigger an SSH server restart for all VRFs and will terminate all active SSH sessions, which may include the current user if they are connected via SSH. If you disable the allow-list before making changes and enabling the allow-list again once the changes are made, any host will be allowed to connect during the modification period before the allow-list is re-enabled. When the allow-list is disabled, the SSH servers on all VRFs will restart and active SSH sessions will persist.



Every SSH allow-list ends with an implicit **deny all** rule. When you add entries to an allow list, take care to avoid blocking connectivity to the SSH server. If an SSH allow-list is enabled with no entries configured, the **deny all** functionality will block all addresses, and the SSH server will be unusable.

Examples

Configuring and enabling an SSH server allow list

```
switch(config)# ssh server allow-list
switch(config-ssh-al)# 1.1.1.1
switch(config-ssh-al)# enable
Active SSH sessions will be terminated.
Do you want to continue (y/n)?
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

Release	Modification
10.12	Command introduced

Command Information

Platforms	Command context	Authority
All platforms	config and config-ssh-al contexts	Administrators or local user group members with execution rights for this command.

ssh server port

```
ssh server port <PORT-NUMBER>
no ssh server port [<PORT-NUMBER>]
```

Description

Configures SSH server to listen on a particular TCP port number. The default value is 22.

This port will be used for all VRFs that have SSH server enabled.



Configuring the TCP port number restarts the SSH server and terminates all active SSH sessions. It may take a few seconds for the SSH sessions to reach the running state on some VRFs.

The **no** form of the command resets the TCP port number to the default, 22.

Parameter	Description
<PORT-NUMBER>	Specifies the TCP port number. Range: 1 to 65535. Default: 22.

Examples

Configuring TCP port number 19222:

```
switch(config)# ssh server port 19222
```

Resetting the TCP port number to the default, 22:

```
switch(config)# no ssh server port
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

Release	Modification
10.11.1000	Command introduced

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

ssh server vrf

```
ssh server vrf <VRF-NAME>
no ssh server vrf <VRF-NAME>
```

Description

Enables the SSH server on the specified VRF. SSH is disabled by default and will not be operational till the admin password is set on the switch. Note that the admin password is considered set even if it is configured to be empty.

The **no** form of the command disables the SSH server on the specified VRF. If no VRF is specified, by default the SSH server will be enabled on the **default** or **mgmt** VRF, depending on the switch model.

Parameter	Description
<code>vrf <VRF-NAME></code>	Specifies the VRF name.

Examples

Enabling the SSH server on the management VRF:

```
switch(config)# ssh server vrf mgmt
```

Disabling the SSH server on the management VRF:

```
switch(config)# no ssh server vrf mgmt
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	<code>config</code>	Administrators or local user group members with execution rights for this command.

ssh sftp-server

```
ssh sftp-server  
no ssh sftp-server
```

Description

Enables the SFTP server on the switch, allowing secure file transfers. The SFTP server is disabled by default.

The **no** form of the command disables the SFTP server on the switch.

Parameter	Description
<code>vrf <VRF-NAME></code>	Specifies the VRF name.

Examples

Enabling the SFTP server on the switch:

```
switch(config)# ssh sftp-server
```

Disabling the SFTP server on the switch:

```
switch(config)# no ssh sftp-server
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

Release	Modification
10.15	Command introduced.

Command Information

Platforms	Command context	Authority
9300	config	Administrators or local user group members with execution rights for this command.

show ssh sftp-server file-system

```
show ssh sftp-server file-system
```

Description

List SFTP local storage directory.

Examples

Showing SFTP local storage directory:

```
switch# show ssh sftp-server file-system  
total 16  
drwxrwxr-x 4 admin administrators 4096 Jul 11 22:50 .  
drwxr-xr-x 7 root root 4096 Jul 10 21:03 ..  
drwxr-xr-x 2 admin administrators 4096 Jul 11 22:42 dir1  
drwxr-xr-x 2 admin administrators 4096 Jul 11 22:42 dir2
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

Release	Modification
10.15	Command introduced.

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

show ssh sftp-server usage

```
show ssh sftp-server usage
```

Description

Shows the amount of used storage space along with the total amount of allotted space.

Examples

Showing the amount of used storage and allotted space:

```
switch# show ssh sftp-server usage
Used:      4K
Allotted:  4096M
```

Copying files to and from the SFTP local storage directory:

```
switch# copy primary local:/image.swi
switch# copy local:/image.swi secondary
switch# copy running-config local:/config.txt cli
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

Release	Modification
10.15	Command introduced.

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

erase ssh sftp-server

```
erase ssh sftp-server {recursive} FILENAME
```

Description

Deletes a specified file or directory within the SFTP server local storage directory.

All filenames are interpreted relative to the SFTP server local storage directory.

Parameter	Description
recursive	Recursively delete a directory.
FILENAME	

Examples

Deleting a specified filename:

```
switch# erase ssh sftp-server filename
```

Deleting a specified directory:

```
switch# erase ssh sftp-server recursive /path/to/dir1
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

Release	Modification
10.15	Command introduced.

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

The switch provides an SSH client that enables the switch to log in to an SSH server such as another switch, typically for command execution purposes. The SSH client provides secure encrypted communications between the switch and the SSH server over any network.

SSH client commands

ssh (client login)

```
ssh [<USERNAME>@]{<IPV4> | <HOSTNAME>} [vrf <VRF-NAME>] [port <PORT-NUMBER>]
```

Description

Establishes a client session with an SSH server which is typically another switch.

username, vrf and port number are optional parameters. If a source ip address or source interface is configured for the ssh client protocol, the configuration values are used for establishing the client session with the SSH server.



The source interface can be configured using the IP source interface configuration commands described in the Fundamentals Guide.

Parameter	Description
<USERNAME>	Specifies the username that the client uses to log in to an SSH server. When omitted, the username of the current session is used.
<IPV4>	Specifies the SSH server to which the SSH client will connect as an IPv4 address.
<HOSTNAME>	Specifies the SSH server to which the SSH client will connect as a host name.
vrf <VRF-NAME>	Specifies the VRF to be used for the SSH client session. When omitted, the default VRF named <code>default</code> is used.
port <PORT-NUMBER>	Specifies the SSH server TCP port number. When omitted, the default TCP port 22 is used.

Examples

Establishing an SSH client session (using the management VRF) with an SSH server:

```
switch# ssh admin@10.0.11.180 vrf mgmt
```

Establishing an SSH client session (using the default VRF and a specific port) with an SSH server:

```
switch# ssh admin@10.0.11.175 port 223
```

Configuring a test user on switch 1 and then connecting to switch 1 from switch 2 using the SSH client on the mgmt VRF:

```
** Configuring a test user on switch 1 **
switch(config)# user-group test
switch(config-usr-grp-test)# permit cli command ".*"
switch(config)# exit
switch(config)# user test-user group test password plaintext tst#9J

** On switch 2, connecting to switch 1 using the SSH client **
switch# ssh test-user@10.0.11.177 vrf mgmt
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

Local AAA on your HPE Aruba Networking CX switch provides:

- Authentication using local password or SSH public key.
- Authorization using local role-based access control (RBAC). Optional per-command authorization is possible through configuration of user-defined local user groups, with command authorization rules applied to respective group members.
- Accounting of user activity on the switch using accounting logs.



For switches that support multiple management modules such as the HPE Aruba Networking 8400, all AAA functionality discussed only applies to the active management module. See also *AAA on switches with multiple management modules* in the *High Availability Guide*.

Local AAA defaults and limits

Setting	Default value / limit
Local authentication	Enabled by default for all connection types: console, SSH, and REST.
Local role-based access control (RBAC) authorization	Enabled by default for all connection types: console, SSH, and REST.
Local accounting	Enabled.
Maximum number of local users	64 users, including the default <code>admin</code> user.
Maximum number of user-defined local user groups	32 groups, including the three built-in groups <code>administrators</code> , <code>operators</code> , <code>auditors</code> .
Password for default admin account	The password is empty by default.
SSH public key authentication	Enabled.

Supported platforms and standards

Local AAA is supported on the 4100i, 5420, 6000, 6100, 6200, 6300, 6400, 8320, 8325, 8360, 8400, 9300, and 10000 Switch Series.

Scale

Setting	Default value / limit
Local authentication	Enabled by default for all connection types: console, SSH, and REST.
Local role-based access control (RBAC) authorization	Enabled by default for all connection types: console, SSH, and REST.
Local accounting	Enabled.
Maximum number of local users	64 users, including the default admin user.
Maximum number of user-defined local user groups	32 groups, including the three built-in groups administrators , operators , auditors .
Password for default admin account	The password is empty by default.
SSH public key authentication	Enabled.

Local authentication

Authentication identifies users, validates their credentials, and grants switch access. Local authentication is either password-based or SSH public key-based.

Password-based local authentication

- Validates users with local user name and password credentials
- Is supported on all interfaces/channels (SSH, WebUI, Console, REST)
- Is enabled by default but can be superseded by remote authentication or with SSH client using SSH public key authentication

SSH public key-based local authentication

- Validates users identified with SSH public keys stored in the local user database
- Is supported on the SSH interface/channel with SSH client
- Takes precedence over password-based authentication whether local or remote
- Is enabled by default (also requires key configuration to work)

Local authentication tasks

The local authentication (local password and SSH public key) tasks are as follows:

Task	Command	Example
Enable authentication as local for the specified connection types	aaa authentication login	Enable local authentication for the default and console connection types: aaa authentication login default local aaa authentication login console local

Task	Command	Example
Show authentication configuration	show aaa authentication	show aaa authentication
Enable password-based authentication minimum password length checking	aaa authentication minimum-password-length	aaa authentication minimum-password-length 12
Disable password-based authentication minimum password length checking	aaa authentication minimum-password-length	no aaa authentication minimum-password-length
Enable local password-based authentication login attempt limiting	aaa authentication limit-login-attempts	aaa authentication limit-login-attempts 4 lockout-time 20
Disable local password-based authentication login attempt limiting	aaa authentication limit-login-attempts	no aaa authentication limit-login-attempts
Enable local password-based authentication for use with SSH clients (enabled by default)	ssh password-authentication	ssh password-authentication
Disable local password-based authentication for use with SSH clients	ssh password-authentication	no ssh password-authentication
Enable SSH	ssh public-key-authentication	ssh public-key-authentication

Task	Command	Example
public key authentication (enabled by default)	key-authentication	
Disable SSH public key authentication	ssh public-key-authentication	no ssh public-key-authentication
Show state of local password-based (for SSH) and SSH public key authentication	show ssh authentication-method	show ssh authentication-method
Copying the client SSH public key into the key list	user authorized-key	user admin authorized-key ecdsa-sha2-nistp256 E2VjZH...QUiCAk= root@switch
Removing SSH public keys from the key list	user authorized-key	no user admin authorized-key 2
Showing the SSH client public key list	show user	show user admin authorized-key

Local authorization

Authorization controls authenticated users command execution and switch interaction privileges. Local authorization uses role-based access control (RBAC) to provide role-based privilege levels plus optional user-defined local user groups with command execution rules. Authorization occurs only after successful authentication.

- **Administrators** have full command execution and switch interaction privilege.
- **Operators** are limited to the use of several nonsensitive `show` commands.
- **Auditors** are limited to a few auditing-related commands.

Optional per-command authorization is available through configuration of user-defined local user groups with command authorization rules applied to respective group members. see [User-defined user groups](#) .

Local authorization tasks

The local authorization tasks are as follows:

Task	Command name	Example
Enable authorization as local RBAC for the specified connection types	aaa authorization commands	Enable local authorization for the default and console connection types: aaa authorization commands default local aaa authorization commands console local
Show authorization configuration	show aaa authorization	show aaa authorization

Command authorization over RADIUS

Command authorization over RADIUS is supported with local authorization. During authentication, the remote RADIUS server needs to indicate to which user-group the remote user belongs. For authorization to work, this user-group needs to be configured locally, and RBAC-rules need to be assigned for this user-group.

The following workflow describes a sample configuration and behaviors for RADIUS command authorization:

1. Configure Remote RADIUS Server (IP:10.10.10.10) with the Aruba-Admin-Role VSA.

```
"user1"      Cleartext-Password := "user1",
Aruba-Admin-Role = "group1"
```

2. Configure this RADIUS server on the switch.

```
switch(config)# radius-server host 10.10.10.10 key plaintext radius
```

3. Configure user-defined group **group1** on the switch.

```
switch(config)# user-group group1
switch(config-usr-grp-group1)# 10 permit cli command "show aaa .*"
switch(config-usr-grp-group1)# end
```

4. Configure primary authentication method as "RADIUS" and primary authorization method as **local**.

```
switch(config)# aaa authentication login default group radius
switch(config)# aaa authorization commands default group local
```

5. Once user1 successfully logs into the switch, the VSA Aruba-Admin-Role is received from the RADIUS server, the user-group for **user1** is set as **group1**, the local RBAC rules configured for **group1** are applied, and **user1** can execute commands that are permitted for group1.

Local accounting

Local accounting is always active. It cannot be turned off.

This accounting information is captured and made available locally (using **show accounting log**) and, if desired, for sending to remote AAA servers:

- Exec Accounting: user login/logout events.
- Command accounting: commands executed by users.
- System accounting: remote accounting On/Off events.
- CLI show commands.
- Interactions on the non-CLI interfaces: REST and WebUI.

The following is not captured or made available as accounting information:

- CLI commands that reboot the switch.
- Interactions in the bash shell.



See also the **show accounting log** command.

Local accounting tasks

The local accounting tasks are as follows:

Task	Command name	Example
Enable accounting as local for the specified connection types	<code>aaa accounting all-mgmt</code>	Enable local accounting for the default and console connection types: <code>aaa accounting all-mgmt default start-stop local</code> <code>aaa accounting all-mgmt console start-stop local</code>
Show accounting configuration	<code>show aaa accounting</code>	<code>show aaa accounting</code>
Show local accounting log contents	<code>show accounting log</code>	<code>show accounting log last 10</code>

aaa accounting all-mgmt (local)

```
aaa accounting all-mgmt <CONNECTION-TYPE> start-stop {local | group <GROUP-LIST>}
no aaa accounting all-mgmt <CONNECTION-TYPE>
```

Description

Defines accounting as being local (with the name **local**) (the default). Or defines a sequence of remote AAA server groups to be accessed for accounting purposes.

For remote accounting, the information is sent to the first reachable remote server that was configured with this command for remote accounting. If no remote server is reachable, local accounting remains available. Each available connection type (channel) can be configured individually as either local or using remote AAA server groups. All server groups named in your command, must exist. This command can be issued multiple times, once for each connection type. Local is always available for any connection type not configured for remote accounting.



The system accounting log is not associated with any connection type (channel) and is therefore sent to the accounting method configured on the default connection type (channel) only.

The **no** form of this command removes for the specified connection type, any defined remote AAA server group accounting sequence. Local accounting is available for connection types without a configured remote AAA server group list (whether default or for the specific connection type).

Parameter	Description
<CONNECTION-TYPE>	One of these connection types (channels): default Defines a list of accounting server groups to be used for the default connection type. This configuration applies to all other connection types (console , https-server , ssh) that are not explicitly configured with this command. For example, if you do not use aaa accounting all-mgmt console... to define the console accounting list, then this default configuration is used for console. console Defines a list of accounting server groups to be used for the console connection type. https-server Defines a list of accounting server groups to be used for the https-server (REST, Web UI) connection type. ssh Defines a list of accounting server groups to be used for the ssh connection type.
start-stop	Selects accounting information capture at both the beginning and

Parameter	Description
	end of a process.
local	Selects local-only accounting when used without the group parameter.
group <GROUP-LIST>	Specifies the list of remote AAA server group names. Each name can be specified one time. Predefined remote AAA group names tacacs and radius are available. Although not a group name, predefined name local is available. User-defined TACACS+ and RADIUS server group names may also be used. The remote AAA server groups are accessed in the order that the group names are listed in this command. Within each group, the servers are accessed in the order in which the servers were added to the group. Server groups are defined using command aaa group server and servers are added to a server group with the command server. If the AAA server(s) in the group are not reachable, or the if there is a key mismatch error between the server and the switch, the next accounting method is attempted.

Usage

Local accounting is always active. It cannot be turned off.

Examples

Setting local accounting for the default connection type:

```
switch(config)# aaa accounting all-mgmt default start-stop local
```

Setting local accounting for the console connection type:

```
switch(config)# aaa accounting all-mgmt console start-stop local
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

aaa authentication console-login-attempts

```
aaa authentication console-login-attempts <ATTEMPTS> console-lockout-time <LOCKOUT-TIME>
no aaa authentication console-login-attempts
```

Description

For the console interface (channel) only, enables console login attempt limiting. If the number of failed console login attempts equals the configured threshold, the user is locked out for the configured duration.

The **no** form of this command disables console login attempt limits.



Important: If you enable the lockout using this command and also enable the SSH, REST, and Telnet lockout using command **aaa authentication limit-login-attempts**, and then enter too many consecutive wrong passwords, you may become locked out, and will have to wait for the configured lockout time to elapse before logging in on any interface.



This console login attempt limiting feature is only available when not using remote authentication through AAA servers (TACACS+ or RADIUS) on any interface. Remote authentication through AAA servers (TACACS+ or RADIUS) is not possible when limit login attempts is configured on any interface.

Parameter	Description
<ATTEMPTS>	Specifies the threshold of failed console login attempts that triggers user lockout. Range: 1 to 10. For example, if <ATTEMPTS> is set to 1, a single failed login attempt triggers immediate user lockout.
<LOCKOUT-TIME>	Specifies the amount of time a user is locked out. Range: 1 to 3600 seconds.

Examples

Enabling console login attempt failure limiting with a 60 second lockout being triggered upon the third consecutive login attempt failure.

```
switch(config)# aaa authentication console-login-attempts 3 console-lockout-time 60
```

Disabling console login attempt failure limiting:

```
switch(config)# no aaa authentication console-login-attempts
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

aaa authentication limit-login-attempts

```
aaa authentication limit-login-attempts <ATTEMPTS> logout-time <LOCKOUT-TIME>
no aaa authentication limit-login-attempts <ATTEMPTS> logout-time <LOCKOUT-TIME>
```

Description

For the SSH, REST, and Telnet interface (channel), enables local login attempt limiting. If the number of failed local login attempts equals the configured threshold, the user is locked out for the configured duration.

The **no** form of this command disables local login attempt limits.



Important: If you enable the logout using this command and also enable the console logout using command **aaa authentication console-login-attempts**, and then enter too many consecutive wrong passwords, you may become locked out, and will have to wait for the configured logout time to elapse before logging in on any interface.



This local login attempt limiting feature is only available when not using remote authentication through AAA servers (TACACS+ or RADIUS) on any interface. Remote authentication through AAA servers (TACACS+ or RADIUS) is not possible when limit login attempts is configured on any interface.

Parameter	Description
<ATTEMPTS>	Specifies the threshold of failed local login attempts that triggers user logout. Range: 1 to 10. For example, if <ATTEMPTS> is set to 1, a single failed login attempt triggers immediate user logout.
<LOCKOUT-TIME>	Specifies the amount of time a user is locked out. Range: 1 to 3600 seconds.

Examples

Enabling local login attempt failure limiting with a 20 second logout being triggered upon the fourth consecutive login attempt failure.

```
switch(config)# aaa authentication limit-login-attempts 4 logout-time 20
```

Disabling login attempt failure limiting:

```
switch(config)# no aaa authentication limit-login-attempts
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

Release	Modification
10.11	Added Telnet support on the 10000, 9300, 83xx, 6100, 6000 and 4100i Switch Series.
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

aaa authentication login (local)

```
aaa authentication login <CONNECTION-TYPE> {local | group <GROUP-LIST>}  
no aaa authentication login <CONNECTION-TYPE> {local | group <GROUP-LIST>}
```

Description

Defines authentication as being local (with the name **local**) (the default). Or defines a sequence of remote AAA server groups to be accessed for authentication purposes. Each available connection type (channel) can be configured individually as either local or using remote AAA server groups. All server groups named in your command, must exist. This command can be issued multiple times, once for each connection type. Local is always available for any connection type not configured for remote AAA authentication.

The **no** form of this command removes for the specified connection type, any defined remote AAA server group authentication sequence. Local authentication is available for connection types without a configured remote AAA server group list (whether default or for the specific connection type).

Parameter	Description
<code><CONNECTION-TYPE></code>	One of these connection types (channels): <code>default</code> Defines a list of accounting server groups to be used for the <code>default</code> connection type. This configuration applies to all other connection types (<code>console</code>, <code>https-server</code>, <code>ssh</code>) that are not explicitly configured with this command. For example, if you do not use <code>aaa accounting all-mgmt console...</code> to define the console accounting list, then this default configuration is used for console. <code>console</code> Defines a list of accounting server groups to be used for the console connection type. <code>https-server</code> Defines a list of accounting server groups to be used for the https-server (REST, Web UI) connection type. <code>ssh</code> Defines a list of accounting server groups to be used for the ssh connection type.

Parameter	Description
local	Selects local-only accounting when used without the group parameter.
group <GROUP-LIST>	Specifies the list of remote AAA server group names. Each name can be specified one time. Predefined remote AAA group names tacacs and radius are available. Although not a group name, predefined name local is available. User-defined TACACS+ and RADIUS server group names may also be used. The remote AAA server groups are accessed in the order that the group names are listed in this command. Within each group, the servers are accessed in the order in which the servers were added to the group. Server groups are defined using command aaa group server and servers are added to a server group with the command server . If no AAA server(s) in the group are reachable, or if there is a key mismatch error between the server and the switch, the next authentication method is attempted.

Examples

Setting local authentication for the default connection type:

```
switch(config)# aaa authentication login default local
```

Setting local authentication for the console connection type:

```
switch(config)# aaa authentication login console local
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

aaa authentication minimum-password-length

```
aaa authentication minimum-password-length <LENGTH>
no aaa authentication minimum-password-length <LENGTH>
```

Description

Enables minimum password length checking. Existing passwords shorter than the minimum length are unaffected. Length checking does not apply to ciphertext passwords. Length checking applies both to local and remote authentication.

The **no** form of this command disables minimum password length checking.

Parameter	Description
<LENGTH>	Specifies the minimum password length. Range: 1 to 32.

Examples

Enabling password length checking, with a minimum length of 12.

```
switch(config)# aaa authentication minimum-password-length 12
```

Disabling minimum password length checking:

```
switch(config)# no aaa authentication minimum-password-length
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

aaa authentication login privilege-elevation

```
aaa authentication login privilege-elevation group administrators  
no aaa authentication login privilege-elevation group administrators
```

Description

Enables/disables privilege elevation for the users in an administrators group. When enabled, an administrative user is provided lower privilege access upon successful switch login. The user must execute an **enable** command and re-authenticate to elevate their privilege to administrator (the administrator level access with '#' prompt). Executing the **disable** command revokes an administrator privilege and returns the user to the lower privilege access level (the operator level access '>' prompt). The **no** form of this command disables privilege elevation for the administrator user group.

Usage

For more information about support for local, RADIUS or TACACS+ password authentication using privilege mode, refer to the [video on the HPE Aruba Networking Airheads Broadcasting Channel](#).

Examples

Enable privilege elevation for the administrator user group:

```
switch(config)# aaa authentication login privilege-elevation group administrators
```

Disable privilege elevation for the administrator user group:

```
switch(config)# no aaa authentication login privilege-elevation group administrators
```

Command History

Release	Modification
10.15	Command introduced.

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

aaa authorization commands (local)

```
aaa authorization commands <CONNECTION-TYPE> {local | none}
no aaa authorization commands <CONNECTION-TYPE> {local | none}
aaa authorization commands <CONNECTION-TYPE> group <GROUP-LIST>
no aaa authorization commands <CONNECTION-TYPE> group <GROUP-LIST>
```

Description

Defines authorization as being basic local RBAC (specified as **none**), or as full-fledged local RBAC specified as **local** (the default), or as remote TACACS+ (specified with `group <GROUP-LIST>`). Each available connection type (channel) can be configured individually. All server groups named in the command, must exist. This command can be issued multiple times, once for each connection type.

The **no** form of this command unconfigures authorization for the specified connection type, reverting to the default of **local**.



Although only TACACS+ servers are supported for remote authorization, local authorization (basic or full-fledged) can be used with remote RADIUS authentication. If your switch uses command authorization, best practices is to configure [authorization fail-through](#) before configuring authentication fail-through. If not, the switch may fall into an unusable state where authorization will fail for all commands.

Parameter	Description
<code><CONNECTION-TYPE></code>	One of these connection types (channels): <code>default</code> Selects the default connection type for configuration. This configuration applies to all other connection types (console, ssh) that are not explicitly configured with this command. For example, if you do not use aaa authorization commands console... to define the console authorization list, then this default configuration is used for console. <code>console</code> Selects the console connection type for configuration. <code>ssh</code> Selects the ssh connection type for configuration.
<code>local</code>	When used alone without <code>group <GROUP-LIST></code>, selects local authorization which can be used to provide authorization for a purely local setup without any remote AAA servers and also for when RADIUS is used for remote Authentication and Accounting but Authorization is local. When used after <code>group</code>, provides for fallback (to full-fledged local authorization) when every server in every specified TACACS+ server group cannot be reached. NOTE: If any TACACS+ server in the specified groups is reachable, but the command fails to be authorized by that server, the command is rejected and local authorization is never attempted. Local authorization is only attempted if every TACACS+ server cannot be reached.
<code>none</code>	When used alone without <code>group <GROUP-LIST></code>, selects basic local RBAC authorization, for use with the built-in user groups (administrators, operators, auditors). When used after <code>group</code>, provides for fallback (to basic local RBAC authorization) when every server in every specified TACACS+ server group cannot be reached. NOTE: With none, for users belonging to user-defined user groups, all commands can be executed regardless of what authorization rules are defined in such groups. For per-command local authorization, use local instead.
<code>group <GROUP-LIST></code>	Specifies the list of remote AAA server group names. Predefined remote AAA group name tacacs is available. User-defined TACACS+ server group names may also be used. The remote AAA server groups are accessed in the order that the group names are listed in this command. Within each group, the servers are accessed in the order in which the servers were added to the group. Server groups are defined using command aaa server group and servers are added to a server group using command server. It is recommended to always include either the special name local or none as the last name in the group list. If both local or none are omitted, and no remote AAA server is reachable (or the first reachable server cannot authorize the command), command execution for the current user will not be possible. If no AAA server(s) in the group are reachable, or if there is a key mismatch error between the server and the switch, the next authorization method is attempted.

Examples

Setting the authorization for default to **local**:

```
switch(config)# aaa authorization commands default local
```

Setting the authorization for the SSH interface to **none**:

```
switch(config)# aaa authorization commands ssh none
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

show aaa accounting (local)

```
show aaa accounting [vsx-peer]
```

Description

Shows the accounting configuration per connection type (channel).

Parameter	Description
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Example

Configuring and then showing local accounting for the default and console connection types:

```
switch(config)# aaa accounting all default start-stop local
switch(config)# aaa accounting all console start-stop local
switch(config)# exit
switch# show aaa accounting
AAA Accounting:
  Accounting Type           : all
  Accounting Mode           : start-stop

Accounting for default channel:
```

```

-----
GROUP NAME | GROUP PRIORITY
-----
local | 0
-----

Accounting for console channel:
-----
GROUP NAME | GROUP PRIORITY
-----
local | 0
-----

```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show aaa authentication (local)

show aaa authentication [vsx-peer]

Description

Shows the authentication configuration per connection type (channel).

Parameter	Description
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Example

Configuring and then showing local authentication for the default and console connection types (channels):

```

switch(config)# aaa authentication login default local
switch(config)# aaa authentication login console local
switch(config)# exit

```

```
switch# show aaa authentication

AAA Authentication:
  Fail-through           : Disabled
  Limit Login Attempts   : Not set
  Lockout Time           : 300
  Minimum Password Length : Not set
```

```
Authentication for default channel:
```

```
-----
GROUP NAME | GROUP PRIORITY
-----
local      | 0
-----
```

```
Authentication for console channel:
```

```
-----
GROUP NAME | GROUP PRIORITY
-----
local      | 0
-----
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show aaa authorization (local)

```
show aaa authorization [vsx-peer]
```

Description

Shows the authorization configuration per connection type (channel).

Parameter	Description
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Example

Configuring and then showing full-fledged local RBAC authorization for the default and console connection types (channels):

```
switch(config)# aaa authorization commands default none
switch(config)#
switch(config)# aaa authorization commands console none
switch(config)# exit
switch#
switch# show aaa authorization
Authorization for default channel:
```

```
-----
GROUP NAME | GROUP PRIORITY
-----
none | 0
-----
```

Authorization for console channel:

```
-----
GROUP NAME | GROUP PRIORITY
-----
none | 0
-----
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show authentication locked-out-users

show authentication locked-out-users

Description

Shows a list of users currently locked out due to excessive failed login attempts. This applies to console, REST, SSH, WebUI, and telnet logins.

Example

Showing locked-out users.

```
switch# show authentication locked-out-users
USER                                GROUP
-----
admin                               administrators
admin-1                             administrators
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

Release	Modification
10.11	The output of this command now also includes information for users locked out due to excessive REST login attempts.
10.09	Command introduced.

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

show ssh authentication-method

show ssh authentication-method

Description

Shows the status of the SSH public key method and the local password-based (through SSH client) authentication method.

Example

Showing the authentication methods.

```
switch# show ssh authentication-method
SSH publickey authentication : Enabled
SSH password authentication : Enabled
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show user

```
show user <USERNAME> authorized-key
```

Description

Shows the SSH client public key list for a specified user.

Parameter	Description
<USERNAME>	Specifies the username for which you want to show the SSH client public key list.

Usage

Any user can show their own public key list; however, administrators can also show a public key list of other users.

Examples

Showing a client public key:

```
switch# show user admin authorized-key

1. Key Type : RSA      Key size : 2048
ssh-rsa AAAAB3NzaC1yc2EAAAADAQABAAQDMtyMBmmAaF6r1zx3DZNHSYVHBjhlbBlyAIqQ8DSHK
...
U+aE14UW/ifiukmK67sIHwK+FhhRYwPztQc5pjyOPk128a4pgKQaHCcOF169Z admin@switch
```

Showing two client public keys:

```
switch# show user admin authorized-key
1. Key Type : ECDSA      Curve : nistp256
ecdsa-sha2-nistp256 AAAAE2VjZHNhLXNoYTItbmlzdHAyNTYAAAAIbmlzdHAyNTYAAABBEqEFevZ0
...
176V+D0svdCJ9Wo32zqI9OeAdTJw/eZYp5qknhNgS81HjAI6J/4/kAqdZAJbqQUiCAk= admin@switch

2. Key Type : RSA      Key size : 2048
ssh-rsa AAAAB3NzaC1yc2EAAAADAQABAAQDXQhrqV7+/GcMdOhr//IRjJkX7TQKupW89j80bL7xq8
...
j8qKuHWSN0/h/HxjzQJuYDVmZN5vG3DhpXbBZU1ZNnchVod13QLCesqA3VLKN admin@switch
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

ssh password-authentication

```
ssh password-authentication
```

```
no ssh password-authentication
```

Description

Enables the password-based authentication method for use with SSH clients.

The **no** form of this command disables the password-based authentication method for use with SSH clients.

Usage

The switch ships with password-based authentication (for SSH clients) enabled. The maximum number of password retries is three.

Examples

Enabling password authentication for use with SSH clients:

```
switch(config)# ssh password-authentication
```

Disabling password authentication for use with SSH clients:

```
switch(config)# no ssh password-authentication
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

ssh public-key-authentication

```
ssh public-key-authentication  
no ssh public-key-authentication
```

Description

Enables the SSH public key authentication method. The switch ships with SSH public key authentication enabled.

The **no** form of this command disables the SSH public key authentication method.



Although SSH public key authentication is enabled by default, it cannot be used until SSH public keys are added with the **user authorized-key** command.

Examples

Enabling SSH public key authentication:

```
switch(config)# ssh public-key-authentication
```

Disabling SSH public key authentication:

```
switch(config)# no ssh public-key-authentication
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

user authorized-key

```
user <USERNAME> authorized-key <PUBKEY>
no user <USERNAME> authorized-key [<KEYNUM>]
```

Description

Copies an SSH client public key into the key list. If the key list and the public key do not exist, it creates a list with the public key. If the SSH client public key exists, the command appends the new key to the existing list. The client public key list holds a maximum of 32 client keys.

The **no** form of the command removes either one or all SSH public keys from the key list.

Parameter	Description
<USERNAME>	Specifies the name of the user.
<PUBKEY>	Specifies the SSH client public key to be copied into the key list.
<KEYNUM>	Specifies the key number. The range is 1 to 32. Use the show user <USERNAME> authorized-key command to find the key number associated with the key.

Usage

Each key on the key list has a key identifier. The **show user <USERNAME> authorized-key** command displays the key identifier associated with the key.

Administrators can add and remove the public keys of themselves and other users. Operators can add and remove only their own public keys. If the public key authentication method is enabled, the client public key present is used by the SSH server to authenticate the client. The authentication method reverts to the password authentication method and prompts for a client password when one of the following occurs:

- The client public keys are not present.
- The server does not have the keys enabled.
- The public key method is disabled.

You can either remove all keys or a specific key. Each key on the key list has a key identifier. If you provide the key identifier in this command, the command removes the corresponding key from the list. If you provide no key identifier, the command removes all keys from the key list.

Examples

Adding a public key:

```
switch(config)#user admin authorized-key ecdsa-sha2-nistp256 AAAAE2VjZHNhLXNoYTItbmlzdHAyNTYAAAAIbmlzdHAyNTYAAABBEqEFevZ0l76V+D0svdCJ9Wo32zqI9OeAIdTJwT/eZYp50qkA  
nhZNgS81HBjAI6QJ/4/kAyqdZ9oAjbicQUiCAk= root@switch
```

Removing all SSH public keys from the list:

```
switch(config)# no user admin authorized-key
```

Removing the specified SSH public key from the list:

```
switch(config)# no user admin authorized-key 2
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

Release	Modification
10.07 or earlier	--

Command Information

Platforms	Command context	Authority
All platforms	config	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Chapter 9

Remote AAA with TACACS+

Remote AAA with TACACS+ provides the following for your Aruba CX switch:

- Authentication using remote TACACS+ AAA servers.
- Authorization using remote TACACS+ AAA servers, providing fine-grained command authorization. Optional user-defined local user groups with configured command authorization rules can be used to provide authorization fallback protection for when TACACS+ servers become temporarily unavailable.
- Transmission of locally collected accounting information to remote TACACS+ servers.



For switches that support multiple management modules such as the Aruba 8400, all AAA functionality discussed only applies to the active management module. See also *AAA on switches with multiple management modules* in the *High Availability Guide*.

Parameters for TACACS+ server

When creating a TACACS+ server for AAA, you must configure the following parameters using the [tacacs-server host](#) command:

Parameter	Description
<code>{<FQDN> <IPv4> <IPv6>}</code>	Specifies the TACACS+ server as: ■ <code><FQDN></code>: a fully qualified domain name. ■ <code><IPv4></code>: an IPv4 address. ■ <code><IPv6></code>: an IPv6 address.
<code>key [plaintext <PASSKEY> ciphertext <PASSKEY>]</code>	Selects either a plaintext or an encrypted local shared-secret passkey for the server. As per RFC 2865, shared-secret can be a mix of alphanumeric and special characters. Plaintext passkeys are between 1 and 32 alphanumeric and special characters. NOTE: When <code>key</code> is entered without either sub-parameter, plaintext passkey prompting occurs upon pressing Enter. Enter must be pressed immediately after the <code>key</code> parameter without entering other parameters. The entered passkey characters are masked with asterisks. When <code>key</code> is omitted, the server uses the global passkey. This command requires either the global or local passkey to be set; otherwise the server will not be contacted. The command tacacs-server key is available for setting the global passkey.
<code>timeout <TIMEOUT-SECONDS></code>	Specifies the timeout. Range: 1 to 60 seconds. Default : 5 seconds.
<code>port <PORT-NUMBER></code>	Specifies the TCP authentication port number. Range: 1 to 65535. Default: 49.

Parameter	Description
<code>auth-type {pap chap}</code>	Selects either the PAP (the default) or CHAP authentication types. If this parameter is not specified, the TACACS+ global default is used.
<code>tracking {enable disable}</code>	Enables or disables server tracking for the RADIUS server. Tracked servers are probed at the start of each server tracking interval to check if they are reachable. Use command tacacs-server tracking to configure TACACS+ server tracking globally.
<code>vrf <VRF-NAME></code>	Specifies the VRF name to be used for communicating with the server. If no VRF name is provided, the default VRF named <code>default</code> is used.

Default server groups

The switch always has these four default groups:

- `tacacs`: for remote AAA, always contains every configured TACACS+ server.
- `radius`: for remote AAA, always contains every configured RADIUS server.
- `local`: for local authentication.
- `none`: for local (RBAC) authorization.

User-defined AAA servers are always added to the matching default group, either **tacacs** or **radius**. A maximum of 28 user-defined groups can be created.



- On the 4100i, 5420, 6000, 6100, 6200, 6300, 6400, 8100, 8325, 8360, and 10000 Switch Series, a RADIUS server can be associated with a maximum of four different user-defined server groups.
- On the 8320, 8400, and 9300 Switch Series, a RADIUS server can be associated with only one user-defined server group.

The order in which servers are added to a group is important. The server added first is accessed first, and if necessary, the second server is accessed second, and so on.

Supported platforms and standards

Remote AAA with TACACS+ is supported on the 4100i, 5420, 6000, 6100, 6200, 6300, 6400, 8100, 8320, 8325, 8360, 8400, 9300, and 10000 Switch Series.



TACACS VxLAN overlay (IPv4 and IPv6) is supported on the following platforms only: 6300, 6400, 8100, and 8360.

TACACS Static VxLAN underlay (IPv4) is supported on the 5420 and 6200 platforms.

Setting	Default value / limit
Authentication of REST sessions with TACACS+	Disabled

Setting	Default value / limit
Maximum number of TACACS+ servers in an AAA group	16
Maximum number of TACACS+ servers that can be configured	16
Maximum number of user-defined AAA server groups that can be configured	28
TACACS+ authentication	Disabled
TACACS+ authentication global timeout	5 seconds
TACACS+ authentication passkey (shared secret)	None
TACACS+ authentication tcp-port	49
TACACS+ global authentication protocol	PAP
TACACS+ server tracking default interval	300 seconds
TACACS+ server access through the default VRF	default*

*The default value is **default**, unless another VRF is specified during the server configuration.

About global versus per-TACACS+ server passkeys (shared secrets)

To communicate with a TACACS+ AAA server, the switch must have a passkey (shared secret) configured that matches what is configured on the server. Use one of these commands to achieve the desired configuration:

- For a global passkey common to every TACACS+ server, use **tacacs-server key**.
- For a per-TACACS+ server passkey, use **tacacs-server host** with the **key** parameter.



If both passkeys are configured on the switch, the per-TACACS+ server passkey is used.

Remote AAA TACACS+ server configuration requirements

The user-supplied TACACS+ server must:

- Have an IPv4/IPv6 address or fully qualified domain name (FQDN) that is visible to the switch.
- Have a passkey (shared secret) that matches what is configured on the switch.
- Provide username and password definitions for every switch user. Remote users do not require definition on the switch.
- Configure user role assignment using TACACS+ attributes.
- Have any needed command authorization configured to control what commands (per user or user role) will be executable on the switch.



Consult your TACACS+ server documentation for installation and general configuration details.



If SSH public key authentication is used, the key information is stored locally on the switch, making username and password definition on the TACACS+ server unnecessary.

User role assignment using TACACS+ attributes

User role assignment is configured on the TACACS+ server using VSAs (vendor-specific attributes) and TACACS+ specified attributes.

TACACS+ servers can return multiple attribute value pairs (AVPs) in response to an authentication request. The attributes are processed in this order of precedence to determine the user role assigned:

- If the **Aruba-Admin-Role** VSA is present, map the user to the matching corresponding local user-group name.
 - Else if the **priv-lvl** TACACS+ specified attribute is present, extract the privilege level (1, 15, or 19) and map the user to the local user-group corresponding to this privilege level (**1=operators, 15=administrators, 19=auditors**). Privilege levels 2 to 14 may also be used with matching local user groups named 2 to 14.
 - Otherwise, the user role cannot be determined, and authentication fails.

Aruba-Admin-Role	priv-lvl	User role assigned
<GROUP-NAME>	Do not care	Matching local user <GROUP-NAME>
Not present	1	Operators
Not present	15	Administrators
Not present	19	Auditors
Not present	2 to 14	Matching local user groups named 2 to 14
Not present	Not present	None (not authenticated)

TACACS+ server redundancy and access sequence

To prevent authentication and authorization interruption, it is common practice to configure more than one TACACS+ server. When identifying TACACS+ servers to the switch, server group order (and server order within the group), determines server access order.



When defining the server access sequence for authentication with **aaa authentication login default**, there is an implied `local` included as the last item in the list. If no TACACS+ server can be reached, local authentication will be attempted.



When defining the server access sequence for authorization with **aaa authorization commands**, it is recommended to always include either `local` or `none` as the last item in the list.

Single source IP address for consistent source identification to AAA servers



If applicable to your installation, it is recommended that you perform the optional configuration mentioned in this section.

If your topology allows the AAA server to be reached through multiple paths, the server interprets the incoming packets to be from different switches even though they are all coming from the same switch. Having a switch associated with multiple IP addresses makes it more difficult to interpret system logs and accounting data.

To ensure that all traffic sent from the switch to the AAA server uses the same source IP address, use **ip source-interface** or **ipv6 source-interface**. These two commands plus the related commands **show ip source-interface** and **show ipv6 source-interface** are described under *Layer 2/3 Interface commands* in the *Command-Line Interface Guide*.

TACACS+ general tasks

General TACACS+ tasks, not specific to authentication, authorization, or accounting, are as follows:

Task	Command name	Example
Configuring a TACACS+ server	<code>tacacs-server host</code>	<code>tacacs-server host 1.1.1.1 vrf default</code> <code>no tacacs-server host 1.1.1.1 vrf default</code>
Showing global and TACACS+ server configurations	<code>show tacacs-server</code>	<code>show tacacs-server detail</code>
Configuring a TACACS+ server group	<code>aaa group server</code>	<code>aaa group server tacacs sgl</code> <code>no aaa group server tacacs sgl</code>
Showing server groups	<code>show aaa server-groups</code>	<code>show aaa server-groups</code>
Adding a TACACS server to a server-group	<code>server</code>	<code>aaa group server tacacs sgl</code> <code>server 1.1.1.2 port 32 vrf default</code>
Deleting a TACACS server from a server-group	<code>server</code>	<code>aaa group server tacacs sgl</code> <code>no server 1.1.1.2 port 32 vrf default</code>
Configuring a TACACS+ global passkey	<code>tacacs-server key</code>	<code>tacacs-server key plaintext mypasskey123</code>
Configuring PAP or CHAP for TACACS+	<code>tacacs-server auth-type</code>	<code>tacacs-server auth-type chap</code> <code>no tacacs-server auth-type</code>
Configuring the TACACS+ global timeout	<code>tacacs-server timeout</code>	<code>tacacs-server timeout 20</code> <code>no tacacs-server timeout</code>

TACACS+ authentication

TACACS+ authentication occurs as follows:

- User credentials are sent from the switch to TACACS+ server using the PAP or CHAP authentication protocol.

- If a user is authenticated, their role is communicated to the switch as Administrator, Operator, or Auditor.
- An unknown user or a user who entered an invalid password is identified as such to the switch, which then rejects user login.

About authentication fail-through

Normally, authentication is performed by the first AAA server reached. A rarely needed feature named "Authentication fail-through" is available. If authentication fail-through is enabled and authentication fails on the first reachable AAA server, authentication is attempted on the second AAA server, and so on, until successful authentication or the server list is exhausted.

Enabling Authentication fail-through is typically unnecessary because the user credential databases should be consistent across all AAA servers. Authentication fail-through might be helpful if your AAA user credential databases are not quickly synchronized across all AAA servers.



[Authentication fail-through](#), [authorization fail-through](#), and [accounting fail-through](#) must each be configured separately.

TACACS+ authentication tasks

The TACACS+ authentication-related tasks are as follows:

Task	Command name	Example
Configuring the authentication sequence for the default connection type	aaa authentication login	aaa authentication login default group tg1 tg2 tacacs local
Configuring the authentication sequence for the console connection type	aaa authentication login	aaa authentication login console group tg2 tg3 tacacs local
Configuring the authentication sequence for the ssh connection type	aaa authentication login	aaa authentication login ssh group tg2 tacacs local
Removing remote AAA for the default connection type	aaa authentication login	no aaa authentication login default
Configuring authentication fail-through	aaa authentication allow-fail-	aaa authentication allow-fail-through no aaa authentication allow-fail-through

Task	Command name	Example
	through	
Showing the authentication sequence	show aaa authentication	show aaa authentication

TACACS+ authorization

Upon successful user authentication, the user is assigned their role by the TACACS+ server. See also [User role assignment using TACACS+ attributes](#).

TACACS+ authorization provides command filtering to allow/disallow individual command or command set execution. Each command is sent to the TACACS+ server for approval, and the switch then allows/disallows command execution according to the server response.



TACACS+ authorization applies only to the CLI interface.

Using local authorization as fallback from TACACS+ authorization

Local authorization can be used for the situation in which communication is lost with all TACACS+ servers after a successful authentication. Users that are members of the built-in local user groups (**administrators**, **operators**, or **auditors**) are authorized according to the fixed roles and privilege levels of those groups. Optionally, local user-defined user groups can be configured with specific command execution rules per group. Users that are members of such groups, are authorized according to the command execution rules of the group to which they belong. For configuring local user groups, see **user-group**.

About authentication fail-through and authorization



Rare potential out-of-synchronization situation when using authentication fail-through: Successful authentication on one server can be followed by authorization denial on another. The user is known on the server doing the authentication but unknown on the server attempting the authorization. This situation typically arises only during brief periods in which user credential databases are not synchronized across all TACACS+ servers. See also TACACS+ server authorization considerations in [aaa authorization commands \(remote\)](#).

TACACS+ authorization tasks

The TACACS+ authorization-related tasks are as follows:

Task	Command name	Example
Configuring the authorization sequence for the default connection	aaa authorization commands	aaa authorization commands default group tgl tacacs local

Task	Command name	Example
type		
Configuring the authorization sequence for the console connection type	aaa authorization commands	aaa authorization commands console group tg1 tg2 tacacs none
Removing remote AAA for the default connection type	aaa authorization commands	no aaa authorization commands default
Showing the TACACS+ authorization sequence	show aaa authorization	show aaa authorization

TACACS+ accounting

This accounting information is captured and made available for sending to remote accounting servers:

- Exec Accounting: user login/logout events.
- Command accounting: commands executed by users.
- System accounting: remote accounting On/Off events.
- CLI show commands.
- Interactions on the non-CLI interfaces: REST and WebUI.

The following is not captured or made available as accounting information:

- CLI commands that reboot the switch.
- Interactions in the bash shell.



Local accounting (always enabled) must be functioning properly for remote Accounting to work.



The accounting information is sent to the first reachable remote TACACS+ AAA server (configured for remote accounting). If no remote TACACS+ server is reachable, local accounting remains available.

Sample accounting information on a TACACS+ server

```
Mon May 9 17:52:32 10.10.11.1 UNKNOWN tty 0.0.0.0 start task_id=1525899775430
timezone=UTC start_time=1525913552.428 service=system event=sys_acct
reason="System-accounting-ON" result=success
Mon May 9 17:52:48 10.10.11.1 admin tty 192.168.1.20 start task_id=1525899775431
timezone=UTC start_time=1525913567.611 service=shell priv_lvl=15 result=success
Mon May 9 17:52:48 10.10.11.1 admin tty 192.168.1.20 stop task_id=1525899775432
```

```

    timezone=UTC stop_time=1525913567.614 service=shell priv_lvl=15 cmd="enable"
result=success
Mon May 9 17:52:51 10.10.11.1 admin tty 192.168.1.20 stop task_id=1525899775433
    timezone=UTC stop_time=1525913570.851 service=shell priv_lvl=15
cmd="configure" result=success
Mon May 9 17:52:53 10.10.11.1 admin tty 192.168.1.20 stop task_id=1525899775434
    timezone=UTC stop_time=1525913573.427 service=shell priv_lvl=15 cmd="interface
1/1/3" result=success
Mon May 9 17:52:54 10.10.11.1 admin tty 192.168.1.20 stop task_id=1525899775435
    timezone=UTC stop_time=1525913574.447 service=shell priv_lvl=15 cmd="no
shutdown" result=success
Mon May 9 17:52:58 10.10.11.1 admin tty 192.168.1.20 stop task_id=1525899775436
    timezone=UTC stop_time=1525913578.131 service=shell priv_lvl=15 cmd="ip
address 10.10.13.1/24" result=success
Mon May 9 17:52:59 10.10.11.1 admin tty 192.168.1.20 stop task_id=1525899775437
    timezone=UTC stop_time=1525913579.468 service=shell priv_lvl=15 cmd="exit"
result=success
Mon May 9 17:53:10 10.10.11.1 admin tty 192.168.1.20 stop task_id=1525899775442
    timezone=UTC stop_time=1525913590.204 service=shell priv_lvl=15 cmd="exit"
result=success
Mon May 9 17:53:10 10.10.11.1 admin tty 192.168.1.20 stop task_id=1525899775431
    timezone=UTC stop_time=1525913590.205 service=shell priv_lvl=15 result=success
Mon May 9 17:53:44 10.10.11.1 UNKNOWN tty 0.0.0.0 stop task_id=1525899775430
    timezone=UTC stop_time=1525913624.473 service=system event=sys_acct
reason="System-accounting-OFF" result=successMon May 9 17:52:32 10.10.11.1
UNKNOWN tty 0.0.0.0 start task_id=1525899775430 timezone=UTC start_
time=1525913552.428 service=system event=sys_acct reason="System-accounting-ON"
result=success
Mon May 9 17:52:48 10.10.11.1 admin tty 192.168.1.20 start task_id=1525899775431
    timezone=UTC start_time=1525913567.611 service=shell priv_lvl=15 result=success
Mon May 9 17:52:48 10.10.11.1 admin tty 192.168.1.20 stop task_id=1525899775432
    timezone=UTC stop_time=1525913567.614 service=shell priv_lvl=15 cmd="enable"
result=success
Mon May 9 17:52:51 10.10.11.1 admin tty 192.168.1.20 stop task_id=1525899775433
    timezone=UTC stop_time=1525913570.851 service=shell priv_lvl=15
cmd="configure" result=success
Mon May 9 17:52:53 10.10.11.1 admin tty 192.168.1.20 stop task_id=1525899775434
    timezone=UTC stop_time=1525913573.427 service=shell priv_lvl=15 cmd="interface
1/1/3" result=success
Mon May 9 17:52:54 10.10.11.1 admin tty 192.168.1.20 stop task_id=1525899775435
    timezone=UTC stop_time=1525913574.447 service=shell priv_lvl=15 cmd="no
shutdown" result=success
Mon May 9 17:52:58 10.10.11.1 admin tty 192.168.1.20 stop task_id=1525899775436
    timezone=UTC stop_time=1525913578.131 service=shell priv_lvl=15 cmd="ip
address 10.10.13.1/24" result=success
Mon May 9 17:52:59 10.10.11.1 admin tty 192.168.1.20 stop task_id=1525899775437
    timezone=UTC stop_time=1525913579.468 service=shell priv_lvl=15 cmd="exit"
result=success
Mon May 9 17:53:10 10.10.11.1 admin tty 192.168.1.20 stop task_id=1525899775442
    timezone=UTC stop_time=1525913590.204 service=shell priv_lvl=15 cmd="exit"
result=success
Mon May 9 17:53:10 10.10.11.1 admin tty 192.168.1.20 stop task_id=1525899775431
    timezone=UTC stop_time=1525913590.205 service=shell priv_lvl=15 result=success
Mon May 9 17:53:44 10.10.11.1 UNKNOWN tty 0.0.0.0 stop task_id=1525899775430
    timezone=UTC stop_time=1525913624.473 service=system event=sys_acct
reason="System-accounting-OFF" result=success

```



This sample is representative and not from any particular TACACS+ server implementation.

Sample REST accounting information on a TACACS+ server


```
Oct 30 16:31:56 10.10.10.1 admin tty 127.0.0.1 start task_id=1540942055868
timezone=UTC start_time=1540942316.36 service=https-server priv_lvl=15
cmd="http-method=POST http-uri=/rest/v1/login" result=success
```



This sample is representative and not from any particular TACACS+ server implementation.

TACACS+ accounting tasks

The TACACS+ accounting-related tasks are as follows:

Task	Command name	Example
Configuring the accounting sequence for the default connection type	aaa accounting all-mgmt	aaa accounting all-mgmt default start-stop group tg1 tg2 tacacs local
Configuring the accounting sequence for the console connection type	aaa accounting all-mgmt	aaa accounting all-mgmt console start-stop group tg2 tg3 tacacs local
Configuring the accounting sequence for the ssh connection type	aaa accounting all-mgmt	aaa accounting all-mgmt ssh start-stop group tg2 tacacs local
Removing remote AAA for the default connection type	aaa accounting all-mgmt	no aaa accounting all-mgmt default start-stop
Showing the accounting configuration	show aaa accounting	show aaa accounting

Example: Configuring the switch for Remote AAA with TACACS+

Prerequisites

- TACACS+ servers configured in general according to the information in [Remote AAA TACACS+ server configuration requirements](#). The exact settings appropriate to your environment will vary.
- Logged in to the switch with Administrator privilege and in the **config** context.

Procedure

1. Configure the global TACACS+ passkey (shared secret) as "xjKW74932qX3j_\$"

```
switch(config)# tacacs-server key plaintext xjKW74932qX3j_$
switch(config)#
```

2. Add these configuration details for two remote TACACS+ servers:

- Server 1 with IPv4 address 10.0.0.2, on the management interface (belonging to VRF "mgmt"), using the default PAP protocol.
- Server 2 with IPv4 address 4.0.0.2, on the data interface (belonging to VRF "default"), using the CHAP protocol.

```
switch(config)# tacacs-server host 10.0.0.2 vrf mgmt
switch(config)# tacacs-server host 4.0.0.2 auth-type chap
switch(config)#
```

3. Create a TACACS+ group named **tac_grp1**, assign TACACS+ server 10.0.0.2 to the group, show the group information.



The default TACACS+ group named `tacacs` includes every TACACS+ server regardless of whether any TACACS+ servers are also assigned to a user-defined TACACS+ group.

```
switch(config)# aaa group server tacacs tac_grp1
switch(config-sg)# server 10.0.0.2 vrf mgmt
switch(config-sg)# exit
switch(config)#
switch(config)# do show aaa server-groups tacacs

***** AAA Mechanism TACACS+ *****
-----
GROUP NAME          | SERVER NAME          | PORT | VRF      | PRIORITY
-----
tac_grp1            | 10.0.0.2              | 49   | mgmt     | 1
-----
tacacs (default)    | 10.0.0.2              | 49   | mgmt     | 1
tacacs (default)    | 4.0.0.2               | 49   | default  | 2
-----
switch(config)#
```

4. Define the authentication sequence list so that the new TACACS+ group is first, the default TACACS+ group is second, and local is third. Show the authentication sequence.

```
switch(config)# aaa authentication login default group tac_grp1 tacacs local
switch(config)#
switch(config)# do show aaa authentication
AAA Authentication:
```

```

Fail-through           : Disabled
Limit Login Attempts   : Not set
Lockout Time           : 300
Minimum Password Length : Not set

```

Default Authentication for All Channels:

```

-----
GROUP NAME                | GROUP PRIORITY
-----
tac_grp1                   | 0
tacacs                     | 1
local                      | 2
-----
switch(config)#

```

5. Define the authorization sequence list with two TACACS+ server groups plus local RBAC. Show the authorization sequence.

```

switch(config)# aaa authorization commands default group tac_grp1 tacacs
local
switch(config)#
switch(config)# do show aaa authorization

```

Default command Authorization for All Channels:

```

-----
GROUP NAME                | GROUP PRIORITY
-----
tac_grp1                   | 0
tacacs                     | 1
local                      | 2
-----
switch(config)#

```

6. Define the accounting sequence list with two TACACS+ server groups. Show the accounting sequence.

```

switch(config)# aaa accounting all default start-stop group tac_grp1 tacacs
switch(config)#
switch(config)# do show aaa accounting
AAA Accounting:
  Accounting Type           : all
  Accounting Mode           : start-stop

```

Default Accounting for All Channels:

```

-----
GROUP NAME                | GROUP PRIORITY
-----
tac_grp1                   | 0
tacacs                     | 1
-----

```

```
switch(config)# aaa accounting all default start-stop group tac_grp1 tacacs
switch(config)#
switch(config)# do show aaa accounting
AAA Accounting:
  Accounting Type           : all
  Accounting Mode           : start-stop
```

Default Accounting for All Channels:

```
-----
GROUP NAME                  | GROUP PRIORITY
-----
tac_grp1                    | 0
tacacs                      | 1
-----
-----
```

```
switch(config)# aaa accounting all default start-stop group tac_grp1 tacacs
switch(config)#
switch(config)# do show aaa accounting
AAA Accounting:
  Accounting Type           : all
  Accounting Mode           : start-stop
```

Default Accounting for All Channels:

```
-----
GROUP NAME                  | GROUP PRIORITY
-----
tac_grp1                    | 0
tacacs                      | 1
-----
-----
```

```
switch(config)# aaa accounting all default start-stop group tac_grp1 tacacs
switch(config)#
switch(config)# do show aaa accounting
AAA Accounting:
  Accounting Type           : all
  Accounting Mode           : start-stop
```

Default Accounting for All Channels:

```
-----
GROUP NAME                  | GROUP PRIORITY
-----
tac_grp1                    | 0
tacacs                      | 1
-----
-----
```

Chapter 10

Remote AAA with RADIUS

Remote AAA with RADIUS is supported on the 4100i, 5420, 6000, 6100, 6200, 6300, 6400, 8320, 8325, 8360, 8400, 9300, and 10000 Switch Series.

Remote AAA with RADIUS provides the following for your Aruba CX switch:

- Authentication using remote RADIUS AAA servers. For added security, two-factor authentication may be used. In two-factor authentication, X.509 certificate-based authentication is combined with RADIUS authentication.
- Command authorization is not supported by RADIUS servers, however, user-defined local user groups can be configured with command-authorization rules, providing locally configured per-command authorization for members of such groups. See [User-defined user groups](#).

In the switch default state (without user-defined local groups), basic role-based authorization is available with the three built-in roles (**administrators, operators, auditors**).

- Transmission of locally collected accounting information to remote RADIUS servers.



For switches that support multiple management modules, all AAA functionality discussed only applies to the active management module. See also *AAA on switches with multiple management modules* in the *High Availability Guide*.

AOS-CX supports IPv4 and IPv6 Radius over the VXLAN overlay network without additional configuration from the user.

Parameters for RADIUS server

When creating a RADIUS server for AAA, you must configure the following parameters using the [radius-server host](#) command:

Parameter	Description
{<FQDN> <IPv4> <IPv6>}	Specifies the RADIUS server as: ■ <FQDN>: a fully qualified domain name. ■ <IPv4>: an IPv4 address. ■ <IPv6>: an IPv6 address.
key [plaintext <PASSKEY> ciphertext <PASSKEY>]	Selects either a plaintext or an encrypted local shared-secret passkey for the server. As per RFC 2865, shared-secret can be a mix of alphanumeric and special characters. Plaintext passkeys are between 1 and 32 alphanumeric and special characters. NOTE: When <code>key</code> is entered without either sub-parameter, plaintext passkey prompting occurs upon pressing Enter. Enter must be pressed immediately after the <code>key</code> parameter without entering other parameters. The entered passkey characters are

Parameter	Description
	masked with asterisks. When <code>key</code> is omitted, the server uses the global passkey. This command requires either the global or local passkey to be set; otherwise the server will not be contacted. Command <code>radius-server key</code> is available for setting the global passkey.
<code>timeout <TIMEOUT-SECONDS></code>	Specifies the timeout. Range: 1 to 60 seconds. If a timeout is not specified, the value from the global timeout for RADIUS is used.
<code>port <PORT-NUMBER></code>	Specifies the authentication port number. Range: 1 to 65535. Default: 1812.
<code>auth-type {pap chap}</code>	Selects either the PAP (the default) or CHAP authentication types. If this parameter is not specified, the RADIUS global default is used.
<code>acct-port <ACCT-PORT></code>	Specifies the UDP accounting port number. Range: 1 to 65535. Default: 1813.
<code>retries <RETRY-COUNT></code>	Specifies the number of retry attempts for contacting the specified RADIUS server. Range is 0 to 5 attempts. If no retry value is provided, the default value of 1 is used.
<code>tracking {enable disable}</code>	Enables or disables server tracking for the RADIUS server. Tracked servers are probed at the start of each server tracking interval to check if they are reachable. Use command radius-server tracking to configure RADIUS server tracking globally. NOTE: Server tracking uses authentication request and response packets to determine server reachability status. The server tracking user name and password are used to form the request packet which is sent to the server with tracking enabled. Upon receiving a response to the request packet, the server is considered to be reachable.
<code>tracking-mode {any dead-only}</code>	Configures tracking mode for the RADIUS server that has tracking enabled with the server. The tracking mode is used to monitor the status of RADIUS server reachability. The default tracking mode is any. ▪ any: Track the RADIUS server irrespective of its server reachability. ▪ dead-only: Track the RADIUS server only when the server is marked as unreachable.
<code>vrf <VRF-NAME></code>	Specifies the VRF name to be used for communicating with the server. If no VRF name is provided, the default VRF named default is used.

Default server groups

The switch always has these four default groups:

- **tacacs**: for remote AAA, always contains every configured TACACS+ server.
- **radius**: for remote AAA, always contains every configured RADIUS server.
- **local**: for local authentication.
- **none**: for local (RBAC) authorization.

User-defined AAA servers are always added to the matching default group, either **tacacs** or **radius**. A maximum of 28 user-defined groups can be created.



- On the 4100i, 5420, 6000, 6100, 6200, 6300, 6400, 8100, 8325, 8360, and 10000 Switch Series, a RADIUS server can be associated with a maximum of four different user-defined server groups.
- On the 8320, 8400, and 9300 Switch Series, a RADIUS server can be associated with only one user-defined server group.

The order in which servers are added to a group is important. The server added first is accessed first, and if necessary, the second server is accessed second, and so on.

Supported platforms and standards

Remote AAA with RADIUS is supported on the 4100i, 5420, 6000, 6100, 6200, 6300, 6400, 8320, 8325, 8360, 8400, 9300, and 10000 Switch Series.

Setting	Default value / limit
Maximum number of RADIUS servers in a AAA group	16
Maximum number of RADIUS servers that can be configured	16
Maximum number of user-defined AAA server groups that can be configured	28
RADIUS authentication	Disabled
RADIUS authentication global timeout	5 seconds
RADIUS authentication passkey (shared secret)	None
RADIUS authentication udp-port	1812
RADIUS global authentication protocol	PAP
RADIUS global retries	1 retry
RADIUS server tracking default interval	300 seconds
RADIUS server access through the default VRF	default*

*The default value is **default**, unless another VRF is specified during the server configuration.

About global versus per-RADIUS server passkeys (shared secrets)

To communicate with a RADIUS AAA server, the switch must have a passkey (shared secret) configured that matches what is configured on the server. Use one of these commands to achieve the desired configuration:

- For a global passkey common to every RADIUS server, use **radius-server key**.
- For a per-RADIUS server passkey, use **radius-server host** with the **key** parameter.



If both passkeys are configured on the switch, the per-RADIUS server passkey is used.

Remote AAA RADIUS server configuration requirements

The user-supplied RADIUS server must:

- Have an IPv4/IPv6 address or fully qualified domain name (FQDN) that is visible to the switch.
- Have a passkey (shared secret) that matches what is configured on the switch.
- Provide username and password definitions for every switch user. Remote users do not require definition on the switch.
- Configure user role assignment using RADIUS attributes.

If SSH public key authentication is used, the key information is stored locally on the switch, making username and password definition on the RADIUS server unnecessary.

One of the RADIUS attributes **User-Group**, **Privilege-Level** or **Service-Type** is mandatory in an Access-Accept message for the switch to authenticate the client.

AOS-CX supports the following AV pairs -



- Aruba-Admin-Role VSA (user-groups configured on the switch)
- Aruba-Priv-Admin-User VSA (built-in user groups)
- Service-Type.

If the privilege level of the user is not among the fully defined privilege levels then the user is denied access.



Consult your RADIUS server documentation for installation and general configuration details.

User role assignment using RADIUS attributes

User role assignment is configured on the RADIUS server using VSAs (vendor-specific attributes).

RADIUS servers can return multiple attribute value pairs (AVPs) in response to an authentication request. The attributes are processed in this order of precedence to determine the user role assigned:

- If the **Aruba-Admin-Role** VSA is present, map the user to the matching local user-group name.
- Else, if the **Aruba-Priv-Admin-User** VSA is present, extract the privilege level (1, 15, or 19) and map the user to the local user-group corresponding to this privilege level (**1=operators**,

15=administrators, 19=auditors). Privilege levels 2 to 14 may also be used with matching local user groups named 2 to 14.

- Else, If Service-Type AVP is present, map **Administrative-User(6)** to **administrators** and map **NAS-Prompt-User(7)** to **operators**.
- Otherwise, the user role cannot be determined, and the authentication fails.

Aruba-Admin-Role	Aruba-Priv-Admin-User	service-type	User role assigned
<GROUP-NAME>	Do not care	Do not care	Matching local user <GROUP-NAME>
Not present	privilege level =1	Do not care	Operators
Not present	privilege level =15	Do not care	Administrators
Not present	privilege level =19	Do not care	Auditors
Not present	privilege level =2 to 14	Do not care	Matching local user groups named 2 to 14
Not present	Not present	Administrative-User (6)	Administrators
Not present	Not present	NAS-Prompt-User (7)	Operators
Not present	Not present	Not present (or = any other value)	None (not authenticated)



The `Service-Type` attribute is retained only for backward compatibility. It is recommended that you instead use the **Aruba-Admin-Role** or **Aruba-Priv-Admin-User** VSA.

RADIUS server redundancy and access sequence

To prevent authentication interruption, it is common practice to configure more than one RADIUS server. When identifying RADIUS servers to the switch, server group order (and server order within the group), determines server access order.



When defining the server access sequence for authentication with `aaa authentication login default`, there is an implied `local` included as the last item in the list. If no RADIUS server can be reached, local authentication will be attempted.

Configuration task list

Steps	Example	Comments
Step 1: Configure	Local VLAN (Reserved VLAN) mode :	In the local

Steps	Example	Comments
the UBT mode	<pre>ubt-client-vlan 4000</pre> VLAN extend mode: <pre>ubt-mode vlan-extend</pre>	VLAN mode, the UBT client VLAN on the switch will be a reserved UBT VLAN. The default UBT mode is Local VLAN. For the Local VLAN mode, UBT client VLAN needs to be configured.
Step 2: Configure the source IP address	<pre>interface vlan 10 no shutdown ip address 192.168.10.1/24 ip source-interface ubt interface vlan10</pre>	UBT source IP address can be a loopback interface, ROP, or SVI.
Step 3: Configure the UBT zones	<pre>ubt zone zone1 vrf default primary-controller ip 192.168.10.8 backup-controller ip 192.168.10.18 enable</pre>	
Step 4: Configure the UBT client role	VLAN extend mode configuration: <pre>port-access role ubt-switch-role gateway-zone zone zone1 gateway-role ubt- controller-role vlan access 20</pre> Local VLAN mode configuration: <pre>port-access role ubt-switch-role gateway-zone zone zone1 gateway-role ubt- controller-role</pre>	UBT supports both LUR and DUR roles for the UBT client. In the case of LUR, the UBT client role needs to be configured on the switch. In case of DUR, UBT client role needs to be configured on the CPPM server. NOTE: In the case of Local VLAN UBT mode, UBT client primary/switch role VLAN configuration is not needed.
Step 5: Configure the	<pre>user-role ubt-controller-role</pre>	VLAN 20 is the secondary role VLAN on the

Steps	Example	Comments
secondary role on the gateway	<pre>access-list session allowall access-list session v6-allowall vlan 20</pre>	controller for the UBT client.

Single source IP address for consistent source identification to AAA servers



If applicable to your installation, it is recommended that you perform the optional configuration mentioned in this section.

If your topology allows the AAA server to be reached through multiple paths, the server interprets the incoming packets to be from different switches even though they are all coming from the same switch. Having a switch associated with multiple IP addresses makes it more difficult to interpret system logs and accounting data.

To ensure that all traffic sent from the switch to the AAA server uses the same source IP address, use **ip source-interface** or **ipv6 source-interface**. These two commands plus the related commands **show ip source-interface** and **show ipv6 source-interface** are described under *Layer 2/3 Interface commands* in the *Command-Line Interface Guide*.

RADIUS general tasks

General RADIUS tasks, not specific to authentication, are as follows:

Task	Command name	Example
Configuring a RADIUS server	radius-server host	radius-server host 1.1.1.1 vrf default no radius-server host 1.1.1.1 vrf default
Showing global and RADIUS server configurations	show radius-server	show radius-server detail
Configuring a RADIUS server group	aaa group server	aaa group server radius sg3 no aaa group server radius sg3
Showing server groups	show aaa server-groups	show aaa server-groups
Adding a RADIUS server to a server-group	server	aaa group server radius sg3 server 1.1.1.4 port 32 vrf default
Deleting a RADIUS server from a server-group	server	aaa group server tacacs sg3 no server 1.1.1.4 port 32 vrf default
Configuring a RADIUS global passkey	radius-server key	radius-server key plaintext mypasskey123

Task	Command name	Example
Configuring PAP or CHAP for RADIUS	<code>radius-server auth-type</code>	<code>radius-server auth-type chap</code> <code>no radius-server auth-type</code>
Configuring the RADIUS global timeout	<code>radius-server timeout</code>	<code>radius-server timeout 15</code> <code>no radius-server timeout</code>
Configuring the RADIUS global retries	<code>radius-server retries</code>	<code>radius-server retries 3</code> <code>no radius-server retries</code>
Overriding the global retries for a RADIUS server	<code>radius-server host</code>	<code>radius-server host 1.1.1.1 retries 2</code>

Per-port RADIUS server group configuration

RADIUS server groups can be configured for MAC and 802.1X authentication mechanisms on a port. This port-specific server group configuration overrides any global server group configured for the authentication mechanisms.

In the absence of a port-specific configuration, clients authenticated on a port will be associated with the globally configured RADIUS server group. When a RADIUS server group is configured on a port, any existing clients already authenticated on that port, using the previous group, will be associated with the new port-specific server group during the subsequent reauthentication cycle.



- On the 4100i, 5420, 6000, 6100, 6200, 6300, 6400, 8100, 8325, 8360, and 10000 Switch Series, a RADIUS server can be associated with a maximum of four different user-defined RADIUS server groups.
- On the 8320, 8400, and 9300 Switch Series, a RADIUS server can be associated with only one user-defined server group.

Different NAS-IDs can be sent to the same RADIUS server as a RADIUS server can be associated with four user-defined server groups.



- For more details on NAS-IDs configuration, refer to Configurable RADIUS attributes (port access).
- Dynamic authentication is not affected by this port configuration, because only the authentication server will be determined by this configuration. Any COA or disconnect requests from any of the reachable server will be successful.

To configure per-port or global RADIUS server groups for MAC and 802.1X authentication mechanisms, see:

- [aaa authentication port-access dot1x authenticator radius server-group](#)
- [aaa authentication port-access mac-auth radius server-group](#)

RADIUS authentication

RADIUS authentication occurs as follows:

- User credentials are sent from the switch to RADIUS server using the PAP or CHAP authentication protocol.
- If a user is authenticated, their role is communicated to the switch as Administrator, Operator, or Auditor.
- An unknown user or a user who entered an invalid password is identified as such to the switch, which then rejects user login.

About authentication fail-through

Normally, authentication is performed by the first AAA server reached. A rarely needed feature named "Authentication fail-through" is available. If authentication fail-through is enabled and authentication fails on the first reachable AAA server, authentication is attempted on the second AAA server, and so on, until successful authentication or the server list is exhausted.

Enabling Authentication fail-through is typically unnecessary because the user credential databases should be consistent across all AAA servers. Authentication fail-through might be helpful if your AAA user credential databases are not quickly synchronized across all AAA servers.



[Authentication fail-through](#), [authorization fail-through](#), and [accounting fail-through](#) must each be configured separately.

RADIUS authentication tasks

The RADIUS authentication-related tasks are as follows:

Task	Command name	Example
Configuring the authentication sequence for the default connection type	aaa authentication login	aaa authentication login default group rg1 rg2 radius local
Configuring the authentication sequence for the https-server connection type	aaa authentication login	aaa authentication login https-server group rg1 radius local
Removing remote AAA for the default connection type	aaa authentication login	no aaa authentication login default
Configuring authentication fail-through	aaa authentication allow-fail-through	aaa authentication allow-fail-through no aaa authentication allow-fail-through
Configuring	aaa	aaa authorization allow-fail-through

Task	Command name	Example
authorization fail-through	authorization allow-fail-through	no aaa authorization allow-fail-through
Configuring accounting fail-through	aaa accounting allow-fail-through	aaa accounting allow-fail-through no aaa accounting allow-fail-through
Showing the authentication sequence	show aaa authentication	show aaa authentication

Two-factor authentication

Two-factor authentication is available for added security. In two-factor authentication, X.509 certificate-based authentication is combined with RADIUS authentication.

Two-factor authentication can be performed with local or remote (on RADIUS server) users.

Configuring two-factor authentication (for local users)

Two-factor authentication is available for added security. In two-factor authentication, X.509 certificate-based authentication is combined with RADIUS authentication. When a user establishes an SSH connection to the switch, two factor-authentication occurs as follows:

- The username in the user's X.509 certificate is validated against the local user accounts on the switch.
- The username and password are validated against the accounts on the RADIUS server and the configured trust anchors.

Prerequisites

- The switch SSH server is enabled.
- Your switch management computer, though its SSH client, is connected to the switch.
- A remote RADIUS server is available to authenticate switch users and is configured on the switch.
- Every user that will use two-factor authentication is configured both on the RADIUS server and locally on the switch using identical usernames. Users are added locally on the switch with the **user** command. These usernames must precisely match the usernames identified by the X.509 user certificates.
- The X.509 CA certificate is both installed on your switch management computer and is also visible to your computer's SSH client. The X.509 CA certificate is the root of trust for the client certificate being used.
- One X.509 certificate per user is available on your switch management computer and is visible to your computer's SSH client. The usernames identified by these user certificates must be the same as the usernames already defined on the RADIUS server and locally on the switch.

Procedure

1. Create a TA profile with the command **crypto pki ta-profile**. This command switches to the TA configuration context. The TA profile is where the switch stores the root certificate of the CA that is used to validate the certificates of clients communicating with the SSH server.
2. Although optional, it is recommended that you enable certificate revocation checking with the command **revocation-check ocsp**.
3. Import the root certificate of the CA with the command **ta-certificate**.
4. Exit the TA configuration context with the command **exit**.
5. For each user that will be using two-factor authentication, import the public key from the individual X.509 user certificate with the command **user <USERNAME> authorized-key <PUBKEY>**. Each user identified by <USERNAME> must exist locally on the switch and on the RADIUS authentication server.
6. Enable two-factor authentication with the command `ssh two-factor-authentication`.

Example

This example shows the above steps being executed:

```
--- step 1 ---
switch(config)# crypto pki ta-profile root-cert

--- step 2 ---
switch(config-ta-root-cert)# revocation-check ocsf

--- step 3 ---
switch(config-ta-root-cert)# ta-certificateta-certificate
Paste the certificate in PEM format below, then hit enter and ctrl-D:
switch(config-ta-cert)# -----BEGIN CERTIFICATE-----
switch(config-ta-cert)# MIIDuTCCAqECCQCuoxeJ2ZNYcjANBgqhkiG9w0BAQsFADCBq
...
switch(config-ta-cert)# 3LvMLZcssSe5J2Ca2XIhfDme8UaNZ7syGYoCD/TMsAW0nG7yY
switch(config-ta-cert)# -----END CERTIFICATE-----
switch(config-ta-cert)#
The certificate you are importing has the following attributes:
Issuer: C=US, ST=CA, L=Rocklin, O=Company, OU=Site,
       CN=site.com/emailAddress=test.ca@site.com
Subject: C=US, ST=CA, L=Rocklin, O=Company, OU=Site,
        CN=8400/emailAddress=test.ca@site.com
Serial Number: 12121221634631568498 (0xae51217d5945772)

Do you want to accept this certificate (y/n)? y
TA certificate accepted.

--- step 4 ---
switch(config-ta-root-cert)# exit
switch(config)#

--- step 5 ---
switch(config)# user admin authorized-key ssh-rsa
AAAAB3NzaClyc2EAAAADAQABAAQAC6krLTrFTnzg3YjLiZKTZEYnh4cUiuOK+cjduxFnZUa
...
iAfcGvqvWtWWBSOWd011DeEZNKn008uEKeteCAjfrnRHeOk2QJmw== "sv1@site.net"
switch(config)#

--- step 6 ---
switch(config)# ssh two-factor-authentication
```

Configuring two-factor authentication with SSH (for remote-only users)

Two-factor authentication is available for added security. In two-factor authentication, X.509 certificate-based authentication is combined with RADIUS authorization.

In circumstances where it is desirable to have no local users, when a user establishes an SSH connection to the switch, two factor-authentication occurs as follows:

- The certificate is validated by the switch using the set of customer-configured trusted TA profiles. If validated, the switch then sends a RADIUS Authorize-Only request to the RADIUS server using the username found in the certificate. The username is chosen from either the certificate UserPrincipalName (UPN) or CommonName (CN).
- A password is not required at time of authentication.

Prerequisites

- The switch SSH server is enabled.
- The remote RADIUS server providing authentication supports the "authorize-only" Service-Type. This includes RADIUS servers such as Aruba's ClearPass Policy Manager, Windows 2019 NPS, or FreeRADIUS.
- The RADIUS server is configured using a TLS (RadSec) connection. This requires the provisioning of a RadSec tunnel between the Switch and a RadSec proxy server, which then forwards the request to the RADIUS server. For information, see *Secure RADIUS (RadSec)* in the Security Guide for your switch.
- An appropriate set of Certificate Authority (CA) and leaf certificates for mutual TLS communication has been created for the switch-to-RADIUS server connection.
- Your switch management computer, through its SSH client, is connected to the switch. Typical supported clients are VanDyke SecureCRT and Pragma Fortress SSH Client Suite.
- Your SSH client is configured to get the username from the certificate.
- For the user being authenticated, an X.509 certificate is installed on your switch management computer and is visible to your computer SSH client. The username identified in the certificate matches a username already defined on the remote RADIUS server.

Procedure

1. Create a TA profile with the command **crypto pki ta-profile**. This command switches to the TA configuration context. The TA profile is where the switch stores the root certificate of the CA that is used to validate the certificates of clients communicating with the SSH server.
2. Although optional, it is recommended that you enable certificate revocation checking with the command **revocation-check ocsp**.
3. Import the root certificate of the CA with the command **ta-certificate**.
4. Exit the TA configuration context with the command **exit**.
5. Repeat steps 1 to 4 for the root certificate authority used for the RADIUS server.
6. Create a leaf certificate profile for the RADIUS client certificate, using the command **crypto pki certificate**. This command switches to the certificate configuration context.
7. Import the leaf certificate with the command **import terminal ta-profile**. Paste the leaf certificate in PEM format, followed by the corresponding private key.
8. Set the certificate for usage with RADIUS communication. Do this with the command **crypto pki application radsec-client certificate**.
9. Configure SSH to enforce the requirement to have the username defined in the X.509 certificate, within any of these two certificate fields: UserPrincipalName (UPN) or Common Name (CN). Do this with command **ssh certificate-as-authorized-key**.
10. Enable two-factor authentication with authorization performed by the RADIUS server. Do this with command **ssh two-factor-authentication authorization radius**.
11. Add the radius server connection to the switch. Do this with the command **radius-server host tls**.
12. Enable authorization by any RADIUS server (in default group **radius**) configured for Authorize-Only with command **aaa authorization radius ssh group radius**. Note also that user-defined RADIUS groups can be used in addition to or instead of the default RADIUS group.

Example

This example shows the above steps being executed:

```
--- step 1 ---
switch(config)# crypto pki ta-profile root-cert

--- step 2 ---
switch(config-ta-root-cert)# revocation-check ocsp

--- steps 3, 4 ---
switch(config-ta-root-cert)# ta-certificate
Paste the certificate in PEM format below, then hit enter and ctrl-D:
switch(config-ta-cert)# -----BEGIN CERTIFICATE-----
switch(config-ta-cert)# MIIDuTCCAqECCQCuoxeJ2ZNYcjANBgkqhkiG9w0BAQsFADCBq
...
switch(config-ta-cert)# 3LvMLZcssSe5J2Ca2XIhfDme8UaNZ7syGYoCD/TMsAW0nG7yY
switch(config-ta-cert)# -----END CERTIFICATE-----
switch(config-ta-cert)#
The certificate you are importing has the following attributes:
Issuer: C=XX, ST=XX, L=Xxxx, O=Company, OU=Site,
       CN=9999/emailAddress=test.ca@site.com
Subject: C=XX, ST=XX, L=Xxxx, O=Company, OU=Site,
        CN=9999/emailAddress=test.ca@site.com
Serial Number: 99999999999999999999 (0xffffffffffffffff)

Do you want to accept this certificate (y/n)? y
TA certificate accepted.
switch(config-ta-root-cert)# exit

--- step 5 ---
switch(config)# crypto pki ta-profile radius-root-cert
switch(config-ta-root-cert)# ta-certificate
Paste the certificate in PEM format below, then hit enter and ctrl-D:
switch(config-ta-cert)# -----BEGIN CERTIFICATE-----
switch(config-ta-cert)# MIIDuTCCAqECCQCuoxeJ2ZNYcjANBgkqhkiG9w0BAQsFADCBq
...
switch(config-ta-cert)# 3LvMLZcssSe5J2Ca2XIhfDme8UaNZ7syGYoCD/TMsAW0nG7yY
switch(config-ta-cert)# -----END CERTIFICATE-----
switch(config-ta-cert)#
The certificate you are importing has the following attributes:
Issuer: C=XX, ST=XX, L=Xxxx, O=Company, OU=Site,
       CN=9999/emailAddress=test.ca@site.com Subject: C=XX, ST=XX, L=Xxxx, O=Company,
       OU=Site,
       CN=9999/emailAddress=test.ca@site.com
Serial Number: 99999999999999999999 (0xffffffffffffffff)

Do you want to accept this certificate (y/n)? y
TA certificate accepted.
switch(config-ta-radius-root-cert)# exit

--- step 6 ---
switch(config)# crypto pki certificate radius-client-cert

--- step 7 ---
switch(config-cert-radius-client-cert)# import terminal ta-profile radius-root-
cert
Paste the certificate in PEM format below, then hit enter and ctrl-D:
switch(config-cert-import)# -----BEGIN CERTIFICATE-----
switch(config-cert-import)# MIIDuTCCAqECCQCuoxeJ2ZNYcjANBgkqhkiG9w0BAQsFADCBq
...
switch(config-cert-import)# 3LvMLZcssSe5J2Ca2XIhfDme8UaNZ7syGYoCD/TMsAW0nG7yY
switch(config-cert-import)# -----END CERTIFICATE-----
```

```

switch(config-cert-import)#
Leaf certificate is validated with radius-root-cert and imported successfully.
Certificate is installed and ready to use.
switch(config-cert-radius-client-cert)#
Paste the certificate in PEM format below, then hit enter and ctrl-D:
switch(config-cert-import)# -----BEGIN CERTIFICATE-----
switch(config-cert-import)# MIIDuTCCAqECCQCuoxeJ2ZNYcjANBgkqhkiG9w0BAQsFADCBq
...
switch(config-cert-import)# 3LvMLZcssSe5J2Ca2XIhfDme8UaNZ7syGYoCD/TMsAW0nG7yY
switch(config-cert-import)# -----END CERTIFICATE-----
switch(config-cert-import)#
Leaf certificate is validated with radius-root-cert and imported successfully.
Certificate is installed and ready to use.
switch(config-cert-radius-client-cert)# exit

--- step 8 ---
switch(config)# crypto pki application radsec-client certificate radius-client-
cert

--- step 9 ---
switch(config)# ssh certificate-as-authorized-key

--- step 10 ---
switch(config)# ssh two-factor-authentication authorization radius

--- step 11 ---
switch(config)# radius-server host 999.99.9.9 tls

--- step 12 ---
switch(config)# aaa authorization radius ssh group radius
All commands will fail if none of the radsec servers in the group list are
reachable.
Continue (y/n)?

```

Configuring two-factor authentication with HTTPS server and REST (for remote-only users)

Two-factor authentication is available for added security. In two-factor authentication, X.509 certificate-based authentication is combined with RADIUS authorization.

In circumstances where it is desirable to have no local users, when a user establishes an HTTPS connection to the switch, two factor-authentication occurs as follows:

- The certificate is validated by the switch using the set of customer-configured trusted TA profiles. If validated, the switch then sends a RADIUS Authorize-Only request to the RADIUS server using the username found in the certificate. The username is chosen from either the certificate User Principal Name (UPN) or Common Name (CN).
- A password is not required at time of authentication.

Prerequisites

- The switch HTTPS REST server is enabled in the desired VRF.
- The remote RADIUS server providing authentication supports the "authorize-only" Service-Type. This includes RADIUS servers such as Aruba's ClearPass Policy Manager, Windows 2019 NPS, or FreeRADIUS.

- The RADIUS server is configured using a TLS (RadSec) connection. This requires the provisioning of a RadSec tunnel between the Switch and a RadSec proxy server, which then forwards the request to the RADIUS server. For information, see *Secure RADIUS (RadSec)* in the Security Guide for your switch.
- An appropriate set of Certificate Authority (CA) and leaf certificates for mutual TLS communication has been created for the switch-to-RADIUS server connection.
- Your switch management computer has access to the REST API using an appropriate HTTPS client. This can be done with a web browser, using the WebUI, or other HTTP request tools such as Postman. Usage of Firefox is not recommended, as it requires additional configuration to work with this feature.
- For the user being authenticated, an X.509 certificate is installed on your switch management computer and loaded to your preferred HTTPS client. The username identified in the certificate (whether in the User Principal Name (UPN) or Common Name (CN) fields) matches a username already defined on the remote RADIUS server.

Procedure

1. Create a TA profile with the command **crypto pki ta-profile**. This command switches to the TA configuration context. The TA profile is where the switch stores the root certificate of the CA that is used to validate the certificates of clients logging in to the HTTPS REST server.
2. Although optional, it is recommended that you enable certificate revocation checking with the command **revocation-check ocsp**.
3. Import the root certificate of the CA with the command **ta-certificate**.
4. Exit the TA configuration context with the command **exit**.
5. Repeat steps 1 to 4 for the root certificate authority used for the RADIUS server.
6. Create a leaf certificate profile for the RADIUS client certificate, using the command **crypto pki certificate**. This command switches to the certificate configuration context.
7. Import the leaf certificate with the command **import terminal ta-profile**. Paste the leaf certificate in PEM format, followed by the corresponding private key.
8. Set the certificate for usage with RADIUS communication. Do this with the command **crypto pki application radsec-client certificate**.
9. Enable certificate authentication for the HTTPS server. Configure it with authorization performed by the RADIUS server and enforce the requirement to have the username defined in the X.509 certificate, within any of these two certificate fields: User Principal Name (UPN) or Common Name (CN). Do this with command **https-server authentication certificate authorization radius**.
10. Respond with **y** (yes) to the prompt indicating that HTTP authentication with certificate will be enabled and that password authentication will be disabled .
11. Add the radius server connection to the switch. Do this with the command **radius-server host tls**.
12. Enable authorization by any RADIUS server (in default group **radius**) configured for Authorize-Only with command **aaa authorization radius ssh group radius**. Note also that user-defined RADIUS groups can be used in addition to or instead of the default RADIUS group.
13. At this point you can send a POST request to the **/certificate_login** endpoint in the REST API, including the corresponding user certificate. Alternatively you can access the login page of the WebUI, where a login button is presented. Upon pressing the login button, the browser prompts you to select a certificate.

Example

This example shows the above steps being executed:

```

--- step 1 ---
switch(config)# crypto pki ta-profile https-root-cert

--- step 2 ---
switch(config-ta-root-cert)# revocation-check ocsp

--- steps 3, 4 ---
switch(config-ta-root-cert)# ta-certificate
Paste the certificate in PEM format below, then hit enter and ctrl-D:
switch(config-ta-cert)# -----BEGIN CERTIFICATE-----
switch(config-ta-cert)# MIIDuTCCAqECCQCuoxeJ2ZNYcjANBgkqhkiG9w0BAQsFADCBq
...
switch(config-ta-cert)# 3LvMLZcssSe5J2Ca2XIhfDme8UaNZ7syGYoCD/TMsAW0nG7yY
switch(config-ta-cert)# -----END CERTIFICATE-----
switch(config-ta-cert)#
The certificate you are importing has the following attributes:
Issuer: C=XX, ST=XX, L=Xxxx, O=Company, OU=Site,
CN=9999/emailAddress=test.ca@site.com Subject: C=XX, ST=XX, L=Xxxx, O=Company,
OU=Site,
CN=9999/emailAddress=test.ca@site.com
Serial Number: 99999999999999999999 (0xffffffffffffffff)

Do you want to accept this certificate (y/n)? y
TA certificate accepted.
switch(config-ta-root-cert)# exit

--- step 5 ---
switch(config)# crypto pki ta-profile radius-root-cert
switch(config-ta-root-cert)# ta-certificate
Paste the certificate in PEM format below, then hit enter and ctrl-D:
switch(config-ta-cert)# -----BEGIN CERTIFICATE-----
switch(config-ta-cert)# MIIDuTCCAqECCQCuoxeJ2ZNYcjANBgkqhkiG9w0BAQsFADCBq
...
switch(config-ta-cert)# 3LvMLZcssSe5J2Ca2XIhfDme8UaNZ7syGYoCD/TMsAW0nG7yY
switch(config-ta-cert)# -----END CERTIFICATE-----
switch(config-ta-cert)#
The certificate you are importing has the following attributes:
Issuer: C=XX, ST=XX, L=Xxxx, O=Company, OU=Site,
CN=9999/emailAddress=test.ca@site.com Subject: C=XX, ST=XX, L=Xxxx, O=Company,
OU=Site,
CN=9999/emailAddress=test.ca@site.com
Serial Number: 99999999999999999999 (0xffffffffffffffff)

Do you want to accept this certificate (y/n)? y
TA certificate accepted.
switch(config-ta-radius-root-cert)# exit

--- step 6 ---
switch(config)#
switch(config)# crypto pki certificate radius-client-cert

--- step 7 ---
switch(config-cert-radius-client-cert)# import terminal ta-profile radius-root-cert
Paste the certificate in PEM format below, then hit enter and ctrl-D:
switch(config-cert-import)# -----BEGIN CERTIFICATE-----
switch(config-cert-import)# MIIDuTCCAqECCQCuoxeJ2ZNYcjANBgkqhkiG9w0BAQsFADCBq
...
switch(config-cert-import)# 3LvMLZcssSe5J2Ca2XIhfDme8UaNZ7syGYoCD/TMsAW0nG7yY
switch(config-cert-import)# -----END CERTIFICATE-----
switch(config-cert-import)#
Leaf certificate is validated with radius-root-cert and imported successfully.

```

```

Certificate is installed and ready to use.
switch(config-cert-radius-client-cert)# exit

--- step 8 ---
switch(config)# crypto pki application radsec-client certificate radius-client-
cert

--- steps 9, 10 ---
switch(config)# https-server authentication certificate authorization radius
username common_name
This will enable HTTPS authentication with certificate and disable password
authentication
Continue (y/n)? y

--- step 11 ---
switch(config)# radius-server host 999.99.9.9 tls

--- step 12 ---
switch(config)# aaa authorization radius ssh group radius
All commands will fail if none of the radsec servers in the group list are
reachable.
Continue (y/n)? y

```

Two-factor authentication commands

aaa authorization radius

```

aaa authorization radius {ssh | https-server} group <GROUP-LIST>
no aaa authorization radius {ssh | https-server} group <GROUP-LIST>

```

Description

Enables RADIUS authorize-only for use with two-factor authentication. By default RADIUS authenticates and authorizes a client that is configured for AAA based access. This command causes the RADIUS server to instead be used only for authorization and not for authentication.

Authorization requests are sent over TLS and therefore RADIUS authorize-only requires a RadSec RADIUS server.



If command authorization is also configured it is given priority over RADIUS authorize-only and therefore command authorization is done on the basis of command authorization configuration and not the user role and privilege level assigned by the RADIUS server.

The **no** form of this command disables RADIUS authorize-only, causing RADIUS to be again used for both authentication and authorization.

Parameter	Description
ssh	Selects the SSH authorization list.
https-server	Selects the HTTPS server authorization list.
group <GROUP-LIST>	Specifies the list of remote RADIUS server group names. Each name can be specified one time. Predefined remote RADIUS group name radius is available. The remote RADIUS server groups are accessed in the order that the group names are listed in this command. Within each group,

Parameter	Description
	the servers are accessed in the order in which the servers were added to the group. Server groups are defined using command aaa group server and servers are added to a server group with the command server .

Examples

Enabling RADIUS authorize only for SSH with the default RADIUS group:

```
switch(config)# aaa authorization radius ssh group radius
All commands will fail if none of the radsec servers in the group list are
reachable.
Continue (y/n)? y
```

Disabling RADIUS authorize only for SSH with the default RADIUS group, causing RADIUS to be again used for both authentication and authorization:

```
switch(config)# no aaa authorization radius ssh group radius
```

Enabling RADIUS authorize only for HTTPS server with the default RADIUS group:

```
switch(config)# aaa authorization radius https-server group radius
All commands will fail if none of the radsec servers in the group list are
reachable.
Continue (y/n)? y
```

Disabling RADIUS authorize only for HTTPS server with the default RADIUS group, causing RADIUS to be again used for both authentication and authorization:

```
switch(config)# no aaa authorization radius https-server group radius
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Release	Modification
10.11	Command introduced

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

https-server authentication certificate

```
https-server authentication certificate [authorization radius] [username {<CERT-FIELD>}]
```

Description

Enables certificate-based authentication where the HTTPS server uses an X.509 certificate for authentication and a RADIUS server for authorization.

Enabling password authentication is the only way of disabling certificate authentication.

Parameter	Description
<code>authorization radius</code>	Specifies that after certificate authentication succeeds, instead of prompting for a password, the HTTPS server checks the RADIUS server only for authorization. A local user is not required. By default, the username found in the certificate field <code>UserPrincipalName</code> (UPN) is used for authorization on the RADIUS server. When this parameter is omitted, authorization radius is still the assumed active setting.
<code><CERT-FIELD></code>	Selects which certificate username field is to be used for authorization. - Specify user_principal_name to use the certificate <code>UserPrincipalName</code> (UPN) field. This is the default. - Specify common_name to use the certificate <code>CommonName</code> (CN) field. When this parameter is omitted, user_principal_name is assumed.

Examples

Enabling HTTPS server authentication with authorization on a RADIUS server with the username in certificate field `UserPrincipalName` (UPN):

```
switch(config)# https-server authentication certificate authorization radius
```

Enabling HTTPS server authentication with authorization on a RADIUS server with the username in certificate field `UserPrincipalName` (UPN) (**authorization radius** is still implied even though not specified):

```
switch(config)# https-server authentication certificate
```

Enabling HTTPS server authentication with authorization on a RADIUS server with the username in certificate field `CommonName` (CN):

```
switch(config)# https-server authentication certificate authorization radius
username common_name
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

Release	Modification
10.11	Command introduced

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

ssh certificate-as-authorized-key

```
ssh certificate-as-authorized-key
no ssh certificate-as-authorized-key
```

Description

Enables SSH enforcement that the username must be present in the certificate that is being used for authorization. This configuration alters how certificate-based authentication maps to a user account. When this is enabled, SSH will not require local user association with an authorized-key and instead enforces that the username used to log in is present within the certificate.

The SSH server will check for the username in certificate fields **Common Name** or **User Principle Name** for a match. If a certificate is not used for authentication then this configuration has no effect on SSH authentication.

The **no** form of this command disables the SSH enforcement of username in the certificate.

Examples

Enabling SSH enforcement of username in the certificate:

```
switch(config)# ssh certificate-as-authorized-key
```

Disabling SSH enforcement of username in the certificate:

```
switch(config)# no ssh certificate-as-authorized-key
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

Release	Modification
10.11	Command introduced

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

ssh two-factor-authentication

```
ssh two-factor-authentication [authorization radius]
no ssh two-factor-authentication [authorization radius]
```

Description

Enables the selected SSH Two Factor authentication method. Two-factor authentication uses an X.509 certificate and possibly a password. First the X.509 certificate presented by the user is authenticated. Then, if successful, (when the **authorization-radius** parameter is not specified) the (locally-defined) user is prompted for a password. When the **authorization radius** parameter is specified, instead of prompting for a password, SSH checks only for authorization with the remote RADIUS server. A local user is not required.

The **no** form of the command disables SSH two-factor authentication.

Parameter	Description
<code>authorization radius</code>	Specifies that after certificate authentication succeeds, SSH checks the RADIUS server only for authorization.

Examples

Enabling two-factor authentication for local user with password prompting:

```
switch(config)# ssh two-factor-authentication
```

Disabling two-factor authentication for local user with password prompting:

```
switch(config)# no ssh two-factor-authentication
```

Enabling two-factor authentication for remote-only RADIUS-defined users without password prompting:

```
switch(config)# ssh two-factor-authentication authorization radius
```

Disabling two-factor authentication for remote-only RADIUS-defined users without password prompting: :

```
switch(config)# no ssh two-factor-authentication authorization radius
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

Release	Modification
10.11	Added the authorization radius parameter
10.10	Command introduced

Command Information

Platforms	Command context	Authority
All platforms	<code>config</code>	Administrators or local user group members with execution rights for this command.

Secure RADIUS (RadSec)

RADIUS protocol uses UDP as underlying transport layer protocol. RadSec is a protocol that supports RADIUS over TCP and TLS. In conventional RADIUS requests, security is a concern as the confidential data is sent using weak encryption algorithms. The access requests are in plain text includes information such as user name, IP address and so on. The user password is an encrypted shared secret. As a result, eavesdroppers can listen to these RADIUS requests and collect confidential information. Data protection is necessary in roaming environments where the RADIUS packets travel across multiple administrative domains and untrusted networks.

RadSec module secures the communication between the switch and RADIUS server using TLS connection. Using RADIUS over TLS provides users with the flexibility to host RADIUS servers across geographies and WAN networks.

For enabling RADIUS security, a CLI option **tls** is provided with the command **radius-server host**, where **tls** stands for Transport Layer Security.

Advantages:

- Secures the communication between the switch and RADIUS server using a TLS session.
- Provides flexibility and enhances security to host RADIUS servers across geographies and WAN networks.
- Uses digital certificates to authenticate both client and server connection.

RadSec over VXLAN

CX supports IPv4/IPv6 RadSec over the VXLAN overlay network and requires additional configuration from the user. The RadSec connection between the switch and RadSec server requires TLS with mutual authentication. The switch and RadSec servers exchange digital certificates as a part of TLS mutual authentication. These digital certificates often contain certificate chains which can increase the packet sizes to over 1500 bytes. If the MTU size is set to default on all interfaces between the switch and RadSec server then the packets that are carrying digital certificates will be dropped and the RadSec connection will fail.

To successfully establish RadSec connection between the switch and RadSec server, MTU configuration of all the interfaces in the path should be set to higher values based on the switch and RadSec server's certificate size. With this configuration change the RadSec connection will be established successfully and can be used for authentication of network clients and management users.

RadSec configuration

To configure RadSec protocol, use the following commands:

- Configure TLS using the command **radius-server host tls**.
- Associate the leaf certificate with RadSec feature (**radsec-client**) using the command **crypto pki application**. To use switch inbuilt IDEVID certificate, add **device-identity** with the command **crypto pki application**. By default, switch uses the local certificate for Radsec application. For more information on installing certificates, see [PKI](#) chapter.




RadSec mandates validating server certificates SAN/CN while establishing connections.

Deployment scenarios

You can deploy the RADIUS/TLS servers in any of the following scenarios:


- Scenario 1: Switch establishes TLS connection with the RADIUS server.
- Scenario 2: Switch establishes TLS connection with the proxy server, which communicates with the RADIUS server.

Figure 1 Scenario 1: Switch establishes TLS connection with the RADIUS server

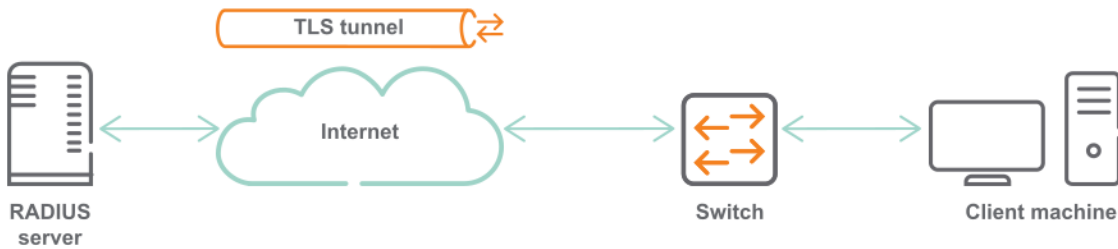

In this scenario, the RADIUS server is across WAN. The RADIUS/TLS secures the user data by creating an encrypted TLS tunnel between the switch and authentication server.

Figure 2 Scenario 2: Switch establishes TLS connection with the proxy server, which communicates with the RADIUS server

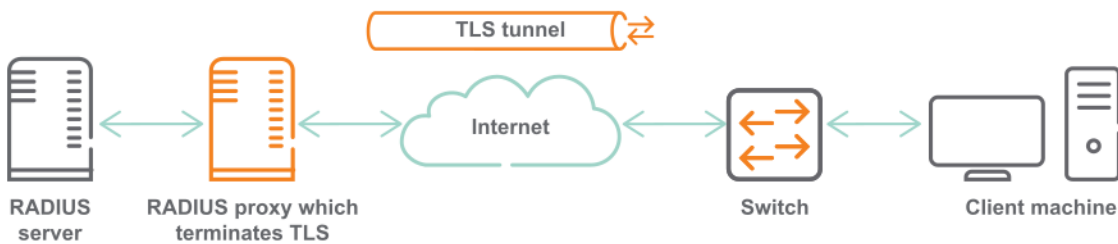

In this scenario, multiple RADIUS servers are distributed over WAN (untrusted networks). RADIUS proxy directs the RADIUS requests to the RADIUS server, which listens on UDP. The proxy server uses the switch certificates to authenticate the client-server credentials. As a result, all RADIUS communications across the network are TLS encrypted.

RadSec example configuration

Prerequisite

- ClearPass version is 6.7.4 or higher.

ClearPass as RadSec server

Following are the steps to configure ClearPass as RadSec server:

1. From the ClearPass Web UI, navigate to **Administration > Certificates > Certificate store** and click **Import Certificate** to import the Root CA certificate to the ClearPass certificate store.

The screenshot shows the 'Certificate Store' page in the ClearPass Web UI. The breadcrumb is 'Administration > Certificates > Certificate Store'. The page title is 'Certificate Store'. There are three links: 'Create Self-Signed Certificate', 'Create Certificate Signing Request', and 'Import Certificate'. Below the title is a description: 'Allows you to create multiple service certificates, each of which can be associated with a specific ClearPass service.' There are two tabs: 'Server Certificates' (selected) and 'Service Certificates'. A 'Select Server' dropdown is set to 'CPPM2' and a 'Select Type' dropdown is set to 'RadSec Server Certificate'. The main content area shows details for a certificate: Subject: CN=, OU=NTL, O=HPE, L=BLR, ST=KA, C=IN; Issued by: CN=radsec-DC2-CA, DC=radsec, DC=com; Issue Date: Feb 26, 2019 06:45:09 UTC; Expiry Date: Feb 25, 2021 06:45:09 UTC; Validity Status: Valid. There is a 'View Details' button. Below this is the 'Root CA Certificate' section with similar details: Subject: CN=radsec-DC2-CA, DC=radsec, DC=com; Issued by: CN=radsec-DC2-CA, DC=radsec, DC=com; Issue Date: Feb 08, 2019 04:35:50 UTC; Expiry Date: Feb 08, 2024 04:45:46 UTC; Validity Status: Valid. There is another 'View Details' button. An 'Export' button is at the bottom right.

2. The **Import Certificate** window opens. In the **Certificate Type** field, select **Server Certificate**. Specify the server and upload method. In the **Usage** field, you must select **Radsec Server Certificate**.

The screenshot shows the 'Import Certificate' dialog box. It has a title bar 'Import Certificate' with a close button. The form contains: 'Certificate Type' dropdown set to 'Server Certificate'; 'Server' dropdown set to 'CPPM2'; 'Type' dropdown set to 'RadSec Server Certificate'; 'Upload Method' dropdown set to 'Upload Certificate and Use Saved Private Key'; and 'Certificate File' field with a 'Browse...' button. Below the form is a red note: 'Note: Certificates with a wildcard as the common name (ex: *.arubanetworks.com) and Extended Validation certificates (EV, "Green Bar") are not recommended for use as the RADIUS/EAP server certificate. Some clients may be unable to authenticate when these types of certificates are used.' At the bottom are 'Import' and 'Cancel' buttons.

3. Click **Import**.
4. next, click **Create Certificate Signing Request**. In the **Common Name** field, enter the IP address of the ClearPass server. For configuring `radius-server host`, enter the hostname.
5. Click **Submit**. You can download the CSR or copy and paste the displayed CSR content into the web form in the enrollment process.
6. Sign the created CSR with the CA.

7. Select **Enable RadSec** while adding devices. The IP address is used as the source IP of the switch.

Edit Device Details

Device	RadSec Settings	SNMP Read Settings	SNMP Write Settings	CLI Settings	OnConnect Enforcement	Attributes
Name:	6300					
IP or Subnet Address:	20.1.1.248 (e.g., 192.168.1.10 or 192.168.1.1/24 or 192.168.1.1-20 or 2001:db8:a0b:12f0::1)					
Description:						
RADIUS Shared Secret:	*****			Verify:	*****	
TACACS+ Shared Secret:				Verify:		
Vendor Name:	Aruba					
Enable RADIUS Dynamic Authorization:	☒					
Enable RadSec:	☒					

Note: Enabling RadSec changes the shared secret to "radsec". Please ensure the same is correct in the network device configuration.

Copy **Save** **Cancel**

RADIUS accounting

This accounting information is captured and made available for sending to remote accounting servers:

- Port access accounting
- Exec Accounting: user login/logout events
- Command accounting: commands executed by users. The Vendor-Specific Attribute (VSA) **Aruba_Command_String** with a value of 46 is available.
- System accounting: remote accounting On/Off events.
- CLI show commands.
- Interactions on the non-CLI interfaces: REST and WebUI.



With RADIUS, command accounting logs a maximum of 247 characters per command entered by the user.

The following is not captured or made available as accounting information:

- CLI commands that reboot the switch.
- Interactions in the bash shell.



Local accounting (always enabled) must be functioning properly for remote Accounting to work.



The accounting information is sent to the first reachable remote RADIUS AAA server (configured for remote accounting). If no remote RADIUS server is reachable, local accounting remains available.

Sample general accounting information

~~~~~ EXEC ~~~~~

Mon Jul 16 16:25:27 2018  
User-Name = "admin"  
NAS-Identifier = "switchx"  
NAS-Port = 331  
NAS-Port-Type = Virtual  
Acct-Status-Type = Start  
Acct-Session-Id = "1531769192494"  
Acct-Authentic = Local  
Calling-Station-Id = "0.0.0.0"  
Event-Timestamp = "Jul 16 2018 16:25:22 PDT"  
Acct-Delay-Time = 0  
NAS-IP-Address = 10.10.10.1  
Acct-Unique-Session-Id = "b83e29f4140c17b1"  
Timestamp = 1531783527

~~~ EXEC stop ~~~

Mon Jul 16 16:26:42 2018
User-Name = "admin"
NAS-Identifier = "switchx"
NAS-Port = 331
NAS-Port-Type = Virtual
Acct-Status-Type = Stop
Acct-Session-Id = "1531769192494"
Acct-Authentic = Local
Calling-Station-Id = "0.0.0.0"
Event-Timestamp = "Jul 16 2018 16:26:37 PDT"
Acct-Delay-Time = 0
Acct-Session-Time = 75
NAS-IP-Address = 10.10.10.1
Acct-Unique-Session-Id = "b83e29f4140c17b1"
Timestamp = 1531783602

~~~~~ CMD ACCOUNTING ~~~~~

Mon Jul 16 16:26:42 2018  
User-Name = "admin"  
NAS-Identifier = "switchx"  
NAS-Port = 331  
NAS-Port-Type = Virtual  
Acct-Status-Type = Stop  
Acct-Session-Id = "1531769192496"  
Acct-Authentic = Local  
Aruba-Command-String = "exit"  
Calling-Station-Id = "0.0.0.0"  
Event-Timestamp = "Jul 16 2018 16:26:37 PDT"  
Acct-Delay-Time = 0  
NAS-IP-Address = 10.10.10.1  
Acct-Unique-Session-Id = "280710992629128c"  
Timestamp = 1531783602

~~~~~ SYSTEM ACCOUNTING ~~~~~

Mon Jul 16 17:13:02 2018
User-Name = "UNKNOWN"
NAS-Identifier = "UNKNOWN"
NAS-Port = 331
NAS-Port-Type = Virtual
Acct-Status-Type = Accounting-On
Acct-Session-Id = "1531769192506"

```

Acct-Authentic = Local
Calling-Station-Id = "0.0.0.0"
Event-Timestamp = "Jul 16 2018 17:12:56 PDT"
Acct-Delay-Time = 0
NAS-IP-Address = 10.10.10.1
Acct-Unique-Session-Id = "b478e6402c86933e"
Timestamp = 1531786382

Mon Jul 16 17:12:55 2018
User-Name = "UNKNOWN"
NAS-Identifier = "UNKNOWN"
NAS-Port = 331
NAS-Port-Type = Virtual
Acct-Status-Type = Accounting-Off
Acct-Session-Id = "1531769192491"
Acct-Authentic = Local
Calling-Station-Id = "0.0.0.0"
Event-Timestamp = "Jul 16 2018 17:12:49 PDT"
Acct-Delay-Time = 0
NAS-IP-Address = 10.10.10.1
Acct-Unique-Session-Id = "93da1f094121f2ee"
Timestamp = 1531786375

~~~~~

```



This sample is representative and not from any particular RADIUS server implementation.

RADIUS accounting tasks

The RADIUS accounting-related tasks are as follows:

| Task | Command name | Example |
|--|-------------------------------|---|
| Configuring the accounting sequence for the default connection type | aaa
accounting
all-mgmt | aaa accounting all-mgmt default start-stop group rg1 rg2
radius local |
| Configuring the accounting sequence for the https-server connection type | aaa
accounting
all-mgmt | aaa accounting all-mgmt https-server start-stop group rg1
radius local |
| Removing remote AAA for the default connection type | aaa
accounting
all-mgmt | no aaa accounting all-mgmt default start-stop |

| Task | Command name | Example |
|--------------------------------------|---------------------|---------------------|
| Showing the accounting configuration | show aaa accounting | show aaa accounting |

Example: Configuring the switch for Remote AAA with RADIUS

Prerequisites

- RADIUS servers configured in general according to the information in [Remote AAA RADIUS server configuration requirements](#). The exact settings appropriate to your environment will vary.
- Logged in to the switch with Administrator privilege and in the **config** context.

Procedure

1. Configure the global RADIUS passkey (shared secret) as "xjKW74932qX3j_\$"

```
switch(config)# radius-server key plaintext xjKW74932qX3j_$
switch(config)#
```

2. Add these configuration details for two remote RADIUS servers.

- Server 1 with IPv4 address 10.0.0.2, on the management interface (belonging to VRF "mgmt"), using the default PAP protocol.
- Server 2 with IPv4 address 4.0.0.2, on the data interface (belonging to VRF "default"), using the CHAP protocol.

```
switch(config)# radius-server host 10.0.0.2 vrf mgmt
switch(config)# radius-server host 4.0.0.2 auth-type chap
switch(config)#
```

3. Create a RADIUS group named `rad_grp1`, assign RADIUS server 10.0.0.2 to the group, show the group information.



The default RADIUS group named `radius` includes every RADIUS server regardless of whether any RADIUS servers are also assigned to a user-defined RADIUS group.

```
switch(config)# aaa group server radius rad_grp1
switch(config-sg)# server 10.0.0.2 vrf mgmt
switch(config-sg)# exit
switch(config)#
switch(config)# do show aaa server-groups radius

***** AAA Mechanism RADIUS *****
-----
GROUP NAME          | SERVER NAME          | PORT | VRF    | PRIORITY
```

```

-----
rad_grp1          | 10.0.0.2          | 1812 | mgmt      | 1
-----
radius (default) | 10.0.0.2          | 1812 | mgmt      | 1
radius (default) | 4.0.0.2           | 1812 | default   | 2
-----
switch(config)#

```

```

switch(config)# aaa group server radius rad_grp1
switch(config-sg)# server 10.0.0.2 vrf mgmt
switch(config-sg)# exit
switch(config)#
switch(config)# do show aaa server-groups radius

***** AAA Mechanism RADIUS *****
-----
GROUP NAME          | SERVER NAME          | PORT | VRF      | PRIORITY
-----
rad_grp1            | 10.0.0.2             | 1812 | mgmt     | 1
-----
radius (default)    | 10.0.0.2             | 1812 | mgmt     | 1
radius (default)    | 4.0.0.2              | 1812 | default  | 2
-----
switch(config)#

```

4. Define the authentication sequence list so that the new RADIUS group is first, the default RADIUS group is second, and local is third. Show the authentication sequence.

```

switch(config)# aaa authentication login default group rad_grp1 radius local
switch(config)#
switch(config)# do show aaa authentication

AAA Authentication:
  Fail-through           : Disabled
  Limit Login Attempts   : Not set
  Lockout Time           : 300
  Minimum Password Length : Not set

Default Authentication for All Channels:
-----
---
GROUP NAME          | GROUP PRIORITY
-----
rad_grp1            | 0
radius              | 1
local               | 2
-----
---
switch(config)#

```

5. Define the accounting sequence list with two RADIUS server groups. Show the accounting sequence.

```

switch(config)# aaa accounting all default start-stop group rad_grp1 radius
switch(config)#
switch(config)# do show aaa accounting

```

```
AAA Accounting:
  Accounting Type           : all
  Accounting Mode           : start-stop
```

Default Accounting for All Channels:

```
-----
--
GROUP NAME                | GROUP PRIORITY
-----
--
rad_grp1                  | 0
radius                    | 1
-----
--
```

```
switch(config)# aaa accounting all default start-stop group rad_grp1 radius
switch(config)#
switch(config)# do show aaa accounting
AAA Accounting:
  Accounting Type           : all
  Accounting Mode           : start-stop
```

Default Accounting for All Channels:

```
-----
--
GROUP NAME                | GROUP PRIORITY
-----
--
rad_grp1                  | 0
radius                    | 1
-----
--
```

```
switch(config)# aaa accounting all default start-stop group rad_grp1 radius
switch(config)#
switch(config)# do show aaa accounting
AAA Accounting:
  Accounting Type           : all
  Accounting Mode           : start-stop
```

Default Accounting for All Channels:

```
-----
--
GROUP NAME                | GROUP PRIORITY
-----
--
rad_grp1                  | 0
radius                    | 1
-----
--
```

aaa accounting allow-fail-through

```
aaa accounting allow-fail-through
no aaa accounting allow-fail-through
```

Description

Enables accounting fail-through. When this option is enabled, the next server or accounting method is attempted after an accounting failure.

The **no** form of this command disables accounting fail-through. The system only attempts to reach the next server or accounting method if there is an accounting failure due to an unreachable TACACS+ or RADIUS server or a shared key mismatch error between the switch and the server.

Example

Enabling accounting fail-through:

```
switch(config)# aaa accounting allow-fail-through
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------|---------------------|
| 10.12.1000 | Command introduced. |

Command Information

| Platforms | Command context | Authority |
|---------------|-----------------|--|
| All platforms | config | Administrators or local user group members with execution rights for this command. |

aaa accounting all-mgmt (remote)

```
aaa accounting all-mgmt <CONNECTION-TYPE> start-stop {local | group <GROUP-LIST>}
no aaa accounting all-mgmt <CONNECTION-TYPE> start-stop {local | group <GROUP-LIST>}
```

Description

Defines accounting as being local (with the name **local**) (the default). Or defines a sequence of remote AAA server groups to be accessed for accounting purposes.

For remote accounting, the information is sent to the first reachable remote server that was configured with this command for remote accounting. If no remote server is reachable, local accounting remains available. Each available connection type (channel) can be configured individually as either local or using remote AAA server groups. All server groups named in your command, must exist. This command can be issued multiple times, once for each connection type. Local is always available for any connection type not configured for remote accounting.



The system accounting log is not associated with any connection type (channel) and is therefore sent to the accounting method configured on the default connection type (channel) only.

The **no** form of this command removes for the specified connection type, any defined remote AAA server group accounting sequence. Local accounting is available for connection types without a configured remote AAA server group list (whether default or for the specific connection type).

| Parameter | Description |
|---------------------------------------|--|
| <code><CONNECTION-TYPE></code> | <p>One of these connection types (channels):</p> <p>default
Defines a list of accounting server groups to be used for the default connection type. This configuration applies to all other connection types (console, ssh, https-server, telnet) that are not explicitly configured with this command. For example, if you do not use aaa accounting all-mgmt console... to define the console accounting list, then this default configuration is used for console.</p> <p>console
Defines a list of accounting server groups to be used for the console connection type.</p> <p>ssh
Defines a list of accounting server groups to be used for the ssh connection type.</p> <p>https-server
Defines a list of accounting server groups to be used for the https-server (REST, Web UI) connection type.</p> <p>telnet
Defines a list of accounting server groups to be used for the telnet connection type.</p> |
| <code>start-stop</code> | Selects accounting information capture at both the beginning and end of a process. |
| <code>local</code> | Selects local-only accounting when used without the group parameter. |
| <code>group <GROUP-LIST></code> | <p>Specifies the list of remote AAA server group names. Each name can be specified one time. Predefined remote AAA group names tacacs and radius are available. Although not a group name, predefined name local is available. User-defined TACACS+ and RADIUS server group names may also be used.</p> <p>The remote AAA server groups are accessed in the order that the group names are listed in this command. Within each group, the servers are accessed in the order in which the servers were added to the group. Server groups are defined using command aaa</p> |

| Parameter | Description |
|-----------|--|
| | <p>group server and servers are added to a server group with the command server.</p> <p>If the remote server(s) in the group is unreachable or if there is a key mismatch error between the switch and the AAA Server, then the next accounting method is attempted.</p> |

Usage

Local accounting is always active. It cannot be turned off.

Examples

Defining the default accounting sequence based on two user-defined TACACS+ server groups, then the default TACACS+ server group, and finally (if needed), local accounting.

```
switch(config)# aaa accounting all-mgmt default start-stop group tg1 tg2 tacacs
local
```

Defining the console accounting sequence based on two user-defined TACACS+ server groups, then the default TACACS+ server group, and finally (if needed), local accounting.

```
switch(config)# aaa accounting all-mgmt console start-stop group tg2 tg3 tacacs
local
```

Defining the ssh accounting sequence based on one user-defined TACACS+ server group and then the default TACACS+ server group.

```
switch(config)# aaa accounting all-mgmt ssh start-stop group tg2 tacacs
```

Defining the Telnet accounting sequence based on one user-defined TACACS+ server group and then the default TACACS+ server groups.

```
switch(config)# aaa accounting all-mgmt telnet start-stop group tg1 tacacs
```

Defining the default accounting sequence based on two user-defined RADIUS server groups, then the default RADIUS server group, and finally (if needed), local accounting.

```
switch(config)# aaa accounting all-mgmt default start-stop group rg1 rg2 radius
local
```

Defining the https-server accounting sequence based on one user-defined RADIUS server group and then the default RADIUS server group.

```
switch(config)# aaa accounting all-mgmt https-server start-stop group rg1 radius
```

Setting local accounting for the default connection type:

```
switch(config)# aaa accounting all-mgmt default start-stop local
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------------|--|
| 10.11 | Added the telnet parameter for all other platforms. |
| 10.07 or earlier | -- |

Command Information

| Platforms | Command context | Authority |
|---------------|-----------------|--|
| All platforms | config | Administrators or local user group members with execution rights for this command. |

aaa authentication allow-fail-through

```
aaa authentication allow-fail-through  
no aaa authentication allow-fail-through
```

Description

Enables authentication fail-through. If this feature is enabled, the next server or authentication method is tried after an authentication failure.

The **no** form of this command disables authentication fail-through. The system only attempts to reach the next server or authentication method if there is an accounting failure due to an unreachable TACACS+/RADIUS server or a shared key mismatch error between the switch and the server.



If your switch uses command authorization, best practices is to configure [authorization fail-through](#) before configuring authentication fail-through. If not, the switch may fall into an unusable state where authorization will fail for all commands.

Example

Enabling authentication fail-through:

```
switch(config)# aaa authentication allow-fail-through
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------------|--------------|
| 10.07 or earlier | -- |

Command Information

| Platforms | Command context | Authority |
|---------------|-----------------|--|
| All platforms | config | Administrators or local user group members with execution rights for this command. |

aaa authentication login (remote)

```
aaa authentication login <CONNECTION-TYPE> {local | group <GROUP-LIST>}
no aaa authentication login <CONNECTION-TYPE> {local | group <GROUP-LIST>}
```

Description

Defines authentication as being local (with the name **local**) (the default). Or defines a sequence of remote AAA server groups to be accessed for authentication purposes. Each available connection type (channel) can be configured individually as either local or using remote AAA server groups. All server groups named in your command, must exist. This command can be issued multiple times, once for each connection type. Local is always available for any connection type not configured for remote AAA authentication.



If you do not want local authentication to occur in cases where all AAA servers contacted reject the user's credentials, do not enable authentication fail-through (command **aaa authentication allow-fail-through**).

The **no** form of this command removes for the specified connection type, any defined remote AAA server group authentication sequence. Local authentication is available for connection types without a configured remote AAA server group list (whether default or for the specific connection type).

| Parameter | Description |
|--------------------------------------|--|
| <code><CONNECTION-TYPE></code> | <p>One of these connection types (channels):</p> <p>default
Defines a list of AAA server groups to be used for the default connection type. This configuration applies to all other connection types (console, ssh, https-server, telnet) that are not explicitly configured with this command. For example, if you do not use aaa accounting all-mgmt console... to define the console accounting list, then this default configuration is used for console.</p> <p>console
Defines a list of AAA server groups to be used for the console connection type.</p> <p>ssh
Defines a list of AAA server groups to be used for the ssh connection type.</p> <p>https-server
Defines a list of AAA server groups to be used for the https-server (REST, Web UI) connection type.</p> |

| Parameter | Description |
|--------------------|---|
| | telnet
Defines a list of AAA server groups to be used for the telnet connection type. |
| local | Selects local-only authentication when used without the group parameter. |
| group <GROUP-LIST> | Specifies the list of remote AAA server group names. Each name can be specified one time. Predefined remote AAA group names tacacs and radius are available. Although not a group name, predefined name local is available. User-defined TACACS+ and RADIUS server group names may also be used.
The remote AAA server groups are accessed in the order that the group names are listed in this command. Within each group, the servers are accessed in the order in which the servers were added to the group. Server groups are defined using command aaa group server and servers are added to a server group with the command server . If the remote server(s) in the group is unreachable or if there is a key mismatch error between switch and the AAA Server, then the next authentication method is attempted. |

Examples

Defining the default authentication sequence based on two user-defined TACACS+ server groups, then the default TACACS+ server group, and finally (if needed), local authentication.

```
switch(config)# aaa authentication login default group tg1 tg2 tacacs local
```

Defining the default authentication sequence based on two user-defined TACACS+ server groups, then the default TACACS+ server group, and finally (if needed), local authentication.

```
switch(config)# aaa authentication login console group tg2 tg3 tacacs local
```

Defining the ssh authentication sequence based on one user-defined TACACS+ server group and then the default TACACS+ server group.

```
switch(config)# aaa authentication login ssh group tg2 tacacs
```

Defining the Telnet authentication sequence with two user-defined TACACS+ server groups, the default TACACS+ server group, and finally (if needed), local authentication.

```
switch(config)# switch(config)# aaa authentication login telnet group tg1 tg2 tacacs local
```

Defining the default authentication sequence based on two user-defined RADIUS server groups, then the default RADIUS server group, and finally (if needed), local authentication.

```
switch(config)# aaa authentication login default group rg1 rg2 radius local
```

Defining the https-server authentication sequence based on one user-defined RADIUS server group and then the default RADIUS server group.

```
switch(config)# aaa authentication login https-server group rg1 radius
```

Setting local authentication for the default connection type:

```
switch(config)# aaa authentication login default local
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------------|---|
| 10.11 | Added the telnet parameter on 10000, 9300, 83xx, 6100, 6000 and 4100i Switch Series. |
| 10.07 or earlier | -- |

Command Information

| Platforms | Command context | Authority |
|---------------|-----------------|--|
| All platforms | config | Administrators or local user group members with execution rights for this command. |

aaa authorization allow-fail-through

```
aaa authorization allow-fail-through  
no aaa authorization allow-fail-through
```

Description

Enables authorization fail-through. When this option is enabled, the next server or authorization method is attempted after an authorization failure.

The **no** form of this command disables authorization fail-through. The system only attempts to reach the next server or authorization method if there is an authorization failure due to an unreachable TACACS+ server or a shared key mismatch error between the switch and the server.



If your switch uses command authorization, best practices is to configure [authorization fail-through](#) before configuring authentication fail-through. If not, the switch may fall into an unusable state where authorization will fail for all commands.

Example

Enabling authorization fail-through:

```
switch(config)# aaa authorization allow-fail-through
```

The following configurations use authorization fail-through in different scenarios.

Example configuration one:

```
aaa authentication allow-fail-through
aaa authorization allow-fail-through
aaa group server tacacs CPPM-TACACS
server 172.16.1.12
aaa authentication login ssh group CPPM-TACACS local
aaa authorization commands ssh group CPPM-TACACS local
```

Example configuration one does not support authentication via the TACACS+ server for a locally configured user. If the user is configured locally and that user does not have a profile present in the TACACS+ server, authentication fails with TACACS+, but the user is authenticated successfully with local authentication. Similarly, if authorization is rejected, the user is authorized locally with a fail-through configuration.

Example configuration two:

```
aaa group server tacacs CPPM-TACACS
server 172.16.1.12
aaa authentication allow-fail-through
aaa authorization allow-fail-through
aaa authentication login ssh group CPPM-TACACS local
aaa authorization commands ssh group local CPPM-TACACS
```

With configuration two, if a user's profile is configured only in the TACACS+ server, user authorization is rejected locally and is authorized with TACACS using the fail-through configuration. When authentication fail-through is configured, if the first authentication method fails, authentication is attempted using the next server or authentication method. The authorization fail-through is based on the authorization sequence, and is independent of the authentication method of the user.

Example configuration three:

```
aaa group server tacacs CPPM-TACACS
server 172.16.1.12
aaa group server tacacs TACACS
server 192.168.10.15
aaa authentication allow-fail-through
aaa authorization allow-fail-through
aaa authentication login ssh group CPPM-TACACS local
aaa authorization commands ssh group TACACS local
```

Example configuration four:

```
aaa group server radius RAD-GRP
server 172.16.1.12
aaa group server tacacs TACACS
server 192.168.10.15
aaa authentication allow-fail-through
aaa authorization allow-fail-through
aaa authentication login ssh group RAD-GRP local
aaa authorization commands ssh group TACACS local
```

With configurations three and four, the **CPPM-TACACS** or **RAD-GRP** groups reject authentication requests for locally configured users, and the users are authenticated locally with fail-through.

Authorization is attempted with the TACACS group in these configurations, and if this authorization attempt fails, the user will be authorized locally due to the fail-through configuration.



When authorization is rejected by multiple servers/server groups due to the fail-through configuration, a delay may be seen while executing commands.



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------|---------------------|
| 10.12.1000 | Command introduced. |

Command Information

| Platforms | Command context | Authority |
|---------------|-----------------|--|
| All platforms | config | Administrators or local user group members with execution rights for this command. |

aaa authorization commands (remote)

```
aaa authorization commands <CONNECTION-TYPE> {local | none}
no aaa authorization commands <CONNECTION-TYPE> {local | none}
aaa authorization commands <CONNECTION-TYPE> group <GROUP-LIST>
no aaa authorization commands <CONNECTION-TYPE> group <GROUP-LIST>
```

Description

Defines authorization as being basic local RBAC (specified as **none**), or as full-fledged local RBAC specified as **local** (the default), or as remote TACACS+ (specified with group <GROUP-LIST>). Each available connection type (channel) can be configured individually. All server groups named in the command, must exist. This command can be issued multiple times, once for each connection type.

The **no** form of this command unconfigures authorization for the specified connection type, reverting to the default of **local**.



Although only TACACS+ servers are supported for remote authorization, local authorization (basic or full-fledged) can be used with remote RADIUS authentication. If your switch uses command authorization, best practices is to configure [authorization fail-through](#) before configuring authentication fail-through. If not, the switch may fall into an unusable state where authorization will fail for all commands.

| Parameter | Description |
|-------------------|--|
| <CONNECTION-TYPE> | One of these connection types (channels):
default
Selects the default connection type for configuration. This configuration applies to all other connection types (console , ssh , telnet) that are not explicitly configured with this |

| Parameter | Description |
|---------------------------------|---|
| | <p>command. For example, if you do not use aaa authorization commands console... to define the console authorization list, then this default configuration is used for console.</p> <p>console
Selects the console connection type for configuration.</p> <p>ssh
Selects the ssh connection type for configuration.</p> <p>telnet
Selects the telnet connection type for configuration.</p> |
| local | <p>When used alone without group <i><GROUP-LIST></i>, selects local authorization which can be used to provide authorization for a purely local setup without any remote AAA servers and also for when RADIUS is used for remote Authentication and Accounting but Authorization is local. When used after group, provides for fallback (to full-fledged local authorization) when every server in every specified TACACS+ server group cannot be reached.</p> <p>NOTE: If any TACACS+ server in the specified groups is reachable, but the command fails to be authorized by that server, the command is rejected and local authorization is never attempted. Local authorization is only attempted if every TACACS+ server cannot be reached.</p> |
| none | <p>When used alone without group <i><GROUP-LIST></i>, selects basic local RBAC authorization, for use with the built-in user groups (administrators, operators, auditors). When used after group, provides for fallback (to basic local RBAC authorization) when every server in every specified TACACS+ server group cannot be reached.</p> <p>NOTE: With none, for users belonging to user-defined user groups, all commands can be executed regardless of what authorization rules are defined in such groups. For per-command local authorization, use local instead.</p> |
| group <i><GROUP-LIST></i> | <p>Specifies the list of remote AAA server group names. Predefined remote AAA group name tacacs is available. User-defined TACACS+ server group names may also be used. The remote AAA server groups are accessed in the order that the group names are listed in this command. Within each group, the servers are accessed in the order in which the servers were added to the group. Server groups are defined using command aaa server group and servers are added to a server group using command server.</p> <p>It is recommended to always include either the special name local or none as the last name in the group list. If both local and none are omitted, and no remote AAA server is reachable (or the first reachable server cannot authorize the command), command execution for the current user will not be possible.</p> <p>If the AAA server(s) in the group are not reachable, or if there is a key mismatch error between the server and the switch, the next authorization method is attempted.</p> |

Usage

TACACS+ server authorization considerations



Use caution when configuring authorization, as it has no fail through. If the switch is not configured properly, the switch might get into an unusable state in which all command execution is prohibited.

To prevent authorization difficulties:

- Make sure that all listed TACACS+ servers can authorize users for command execution.
- Make sure that credential database changes are promptly synchronized across all TACACS+ servers.
- Make sure either **local** or **none** is included as the last name in the group list. If both **local** and **none** are omitted, and no remote TACACS+ server is reachable (or the first reachable server cannot authorize), authorization will not be possible.
- Although not recommended, if you choose to omit both **local** and **none** from the list, and are manipulating configuration files, special caution is necessary. If the source configuration includes TACACS+ authorization and you are copying configuration from an existing switch into the running configuration of a new switch, and you have not yet configured the interface or routing information to reach the TACACS+ server, the switch will enter an unusable state, requiring hard reboot.
To avoid getting into this situation that can occur when **local** and **none** have been omitted, do either of the following:
 - In the configuration source, delete or comment-out the line configuring remote authorization. Then, after the configuration copy and paste, manually configure authorization.
 - Move the line configuring the authorization to the end of the source configuration before copying and pasting.

Examples

Defining the default authorization sequence based on a user-defined TACACS+ server group, then the default TACACS+ server group, and finally (as a precaution), **local** authorization:

```
switch(config)# aaa authorization commands default group tg1 tacacs local
All commands will fail if none of the servers in the group list are reachable.
Continue (y/n)? y
```

Defining the Telnet authorization sequence based on a user-defined TACACS+ server group, then the default TACACS+ server group, and finally (as a precaution), **local** authorization:

```
switch(config)# aaa authorization commands telnet group tg1 tacacs local
All commands will fail if none of the servers in the group list are reachable.
Continue (y/n)? y
```

Defining the console authorization sequence based on two user-defined TACACS+ server groups, and finally (as a precaution), **local** authorization:

```
switch(config)# aaa authorization commands console group tg1 tg2 local
All commands will fail if none of the servers in the group list are reachable.
Continue (y/n)? y
```

Setting the authorization for default to **local**:

```
switch(config)# aaa authorization commands default local
```

Setting the authorization for the SSH interface to **none**:

```
switch(config)# aaa authorization commands ssh none
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------------|---|
| 10.11 | Added the telnet parameter on the 10000, 9300, 83xx, 6100, 6000 and 4100i Switch Series. |
| 10.07 or earlier | -- |

Command Information

| Platforms | Command context | Authority |
|---------------|-----------------|--|
| All platforms | config | Administrators or local user group members with execution rights for this command. |

aaa group server

```
aaa group server {tacacs | radius} <SERVER-GROUP-NAME>  
no aaa group server {tacacs | radius} <SERVER-GROUP-NAME>
```

Description

Creates an AAA server group that is either empty or contains preconfigured RADIUS/TACACS+ servers. You can create a maximum of 28 server groups.

The **no** form of this command deletes a server group. Only a preconfigured user-defined RADIUS/TACACS+ server group can be deleted. RADIUS or TACACS+ servers that were in a deleted server group remain a part of their default server group. The default server group for TACACS+ servers is **tacacs**. The default server group for RADIUS servers is **radius**.

| Parameter | Description |
|--------------------------|---|
| server {tacacs radius} | Select either tacacs or radius for the server type. |
| <SERVER-GROUP-NAME> | Specifies the name of the server group to be created. The name of the server group can have a maximum of 32 characters. |

Examples

Creating TACACS+ server group sg1:

```
switch(config)# aaa group server tacacs sg1
```

Creating RADIUS server group sg3:

```
switch(config)# aaa group server radius sg3
```

Deleting TACACS+ server group sg1:

```
switch(config)# no aaa group server tacacs sg1
```

Deleting RADIUS server group sg3:

```
switch(config)# no aaa group server radius sg3
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------------|--------------|
| 10.07 or earlier | -- |

Command Information

| Platforms | Command context | Authority |
|---------------|-----------------|--|
| All platforms | config | Administrators or local user group members with execution rights for this command. |

aaa troubleshoot test-server

```
aaa troubleshoot test-server radius-server <RADIUS-SERVER-NAME> [tls]
[port <PORT-NUMBER>] [vrf <VRF-NAME>] [auth-type {pap | chap}]
[user <USER-NAME>] [password {plaintext | ciphertext} <PASSWORD>]
```

Description

Initiates a dummy user authentication request to the specified AAA server with the specified credentials.

The results of the last five test authentication will be available for review. When the number of authentication requests exceeds five, the oldest test authentication results will be removed.



The REST API allows for no more than five consecutive POST operations for **aaa troubleshoot test-server**. Any one of the first five test run IDs must be deleted in order to execute a sixth POST operation.

| Parameter | Description |
|----------------------|---|
| <RADIUS-SERVER-NAME> | Specifies the RADIUS server IP address or hostname. |

| Parameter | Description |
|---|---|
| <code>tls</code> | Specifies RADIUS connection over TLS. |
| <code>port <PORT-NUMBER></code> | Specifies the authentication port number. Range: 1 to 65535. Default: 1812. |
| <code>vrf <VRF-NAME></code> | Specifies the VRF name. |
| <code>auth-type {pap chap}</code> | Selects either the PAP (the default) or CHAP authentication types. |
| <code>user-name <NAME></code>
<code>[password [plaintext <PASSWORD> </code>
<code>ciphertext <PASSWORD>]]</code> | Specifies the user name (and optionally a password) to be used for server checking.
The password is optional and may be entered as plaintext or pasted in as ciphertext . The plaintext password is visible as cleartext when entered but is encrypted thereafter.
Command history does show the password as cleartext. |

Usage

For more information on using this feature for advanced troubleshooting, refer to the [video on the HPE Aruba Networking Airheads Broadcasting Channel](#).

Examples

```
switch(config)# aaa troubleshoot test-server radius-server test auth-type pap vrf
red password plaintext temp tls port 1234 user test
Test initiated successfully. Test run ID for this request is 1.
```

```
switch(config)# aaa troubleshoot test-server radius-server test auth-type pap
password plaintext temp user test
Test initiated successfully. Test run ID for this request is 2.
```

```
switch(config)# aaa troubleshoot test-server radius-server 10.10.10.10 password
plaintext test_pass user test_user1
Test initiated successfully. Test run ID for this request is 3.
```

```
switch(config)# aaa troubleshoot test-server radius-server 10.10.10.13 vrf yellow
password plaintext test_pass1 user test_user
Radius-server configuration not present.
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---------------------|
| 10.15 | Command Introduced. |

Command Information

| Platforms | Command context | Authority |
|------------------------|-----------------|--|
| 8325
8325H
10000 | config | Administrators or local user group members with execution rights for this command. |

radius-server auth-type

```
radius-server auth-type {pap | chap}
no radius-server auth-type {pap | chap}
```

Description

Enables the CHAP or PAP authentication protocol, which is used for communication with the RADIUS servers, at the global level. You can override this command with a fine-grained per server **auth-type** configuration.

The **no** form of this command resets the global authentication mechanism for RADIUS to PAP or CHAP. PAP is the default authentication mechanism for RADIUS.

| Parameter | Description |
|------------------------|---|
| auth-type {pap chap} | Selects either the PAP or CHAP authentication protocol. |

Examples

Authenticating CHAP:

```
switch(config)# radius-server auth-type chap
```

Authenticating PAP:

```
switch(config)# radius-server auth-type pap
```

Removing CHAP authentication:

```
switch(config)# no radius-server auth-type chap
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------------|--------------|
| 10.07 or earlier | -- |

Command Information

| Platforms | Command context | Authority |
|---------------|-----------------|--|
| All platforms | config | Administrators or local user group members with execution rights for this command. |

radius-server host

```
radius-server host {<FQDN> | <IPv4> | <IPv6>}
[key [plaintext <PASSKEY> | ciphertext <PASSKEY>]]
[timeout <TIMEOUT-SECONDS>] [port <PORT-NUMBER>]
[auth-type {pap | chap}] [acct-port <ACCT-PORT>] [retries <RETRY-COUNT>]
[tracking {enable | disable}] [tracking-mode {any | dead-only}][vrf <VRF-NAME>]
no radius-server host {<FQDN> | <IPv4> | <IPv6>}
[key [plaintext <PASSKEY> | ciphertext <PASSKEY>]]
[timeout <TIMEOUT-SECONDS>] [port <PORT-NUMBER>]
[auth-type {pap | chap}] [acct-port <ACCT-PORT>] [retries <RETRY-COUNT>]
[tracking {enable | disable}] [tracking-mode {any | dead-only}][vrf <VRF-NAME>]
```

Description

Adds a RADIUS server. By default, the RADIUS server is associated with the server group named **radius**. The **no** form of this command removes a previously added RADIUS server.



For enhanced security with IPsec, the alternative command **radius-server host secure ipsec** is available. The standard non-IPsec **radius-server host** command does not modify any existing IPsec configuration. If IPsec is already configured for the RADIUS server, then IPsec will remain enabled for the server.

| Parameter | Description |
|--|--|
| {<FQDN> <IPv4> <IPv6>} | Specifies the RADIUS server as: <ul style="list-style-type: none"> ▪ <FQDN>: a fully qualified domain name. ▪ <IPv4>: an IPv4 address. ▪ <IPv6>: an IPv6 address. |
| key [plaintext <PASSKEY> ciphertext <PASSKEY>] | Selects either a plaintext or an encrypted local shared-secret passkey for the server. As per RFC 2865, shared-secret can be a mix of alphanumeric and special characters. Plaintext passkeys are between 1 and 32 alphanumeric and special characters. <p>NOTE: When key is entered without either sub-parameter, plaintext passkey prompting occurs upon pressing Enter. Enter must be pressed immediately after the key parameter without entering other parameters. The entered passkey characters are masked with asterisks. When key is omitted, the server uses the global passkey. This command requires either the global or local passkey to be set; otherwise the server will not be contacted. Command radius-server key is available for setting the global passkey.</p> |
| timeout <TIMEOUT-SECONDS> | Specifies the timeout. Range: 1 to 60 seconds. If a timeout is not specified, the value from the global timeout for RADIUS is used. |
| port <PORT-NUMBER> | Specifies the authentication port number. Range: 1 to 65535. Default: 1812. |

| Parameter | Description |
|--|--|
| <code>auth-type {pap chap}</code> | Selects either the PAP (the default) or CHAP authentication types. If this parameter is not specified, the RADIUS global default is used. |
| <code>acct-port <ACCT-PORT></code> | Specifies the UDP accounting port number. Range: 1 to 65535. Default: 1813. |
| <code>retries <RETRY-COUNT></code> | Specifies the number of retry attempts for contacting the specified RADIUS server. Range is 0 to 5 attempts. If no retry value is provided, the default value of 1 is used. |
| <code>tracking {enable disable}</code> | <p>Enables or disables server tracking for the RADIUS server. Tracked servers are probed at the start of each server tracking interval to check if they are reachable.</p> <p>Use command radius-server tracking to configure RADIUS server tracking globally.</p> <p>NOTE: Server tracking uses authentication request and response packets to determine server reachability status. The server tracking user name and password are used to form the request packet which is sent to the server with tracking enabled. Upon receiving a response to the request packet, the server is considered to be reachable.</p> |
| <code>tracking-mode {any dead-only}</code> | <p>Configures tracking mode for the RADIUS server that has tracking enabled with the server. The tracking mode is used to monitor the status of RADIUS server reachability. The default tracking mode is any.</p> <p>any
Track the RADIUS server irrespective of its server reachability.</p> <p>dead-only
Track the RADIUS server only when the server is marked as unreachable.</p> |
| <code>vrf <VRF-NAME></code> | Specifies the VRF name to be used for communicating with the server. If no VRF name is provided, the default VRF named default is used. |

Usage

If the fully qualified domain name is provided for the RADIUS server, a DNS server must be configured and accessible through the same VRF which is configured for the RADIUS server. This configuration is required for the resolution of the RADIUS server hostname to its IP address. If a DNS server is not available for this VRF, the RADIUS servers reachable through this VRF must be configured by means of their IP addresses only.

Examples

Adding a RADIUS server with an IPv4 address and a prompted passkey:

```
switch(config)# radius-server host 1.1.1.5 key
Enter the RADIUS server key: *****
Re-Enter the RADIUS server key: *****
```

Deleting a RADIUS server with an IPv4 address and a prompted passkey:

```
switch(config)# no radius-server host 1.1.1.5 key  
Enter the RADIUS server key: *****  
Re-Enter the RADIUS server key: *****
```

Adding a RADIUS server with an IPv4 address and a named VRF:

```
switch(config)# radius-server host 1.1.1.1 vrf mgmt
```

Deleting a RADIUS server with an IPv4 address and a named VRF:

```
switch(config)# no radius-server host 1.1.1.1 vrf mgmt
```

Adding a RADIUS server with an IPv4 address, a port, and a named VRF:

```
switch(config)# radius-server host 1.1.1.2 port 32 vrf mgmt
```

Deleting a RADIUS server with an IPv4 address, a port, and a named VRF:

```
switch(config)# no radius-server host 1.1.1.2 port 32 vrf mgmt
```

Adding a RADIUS server with an FQDN, a timeout, port number, and a named VRF:

```
switch(config)# radius-server host abc.com timeout 15 port 32 vrf vrf_blue
```

Deleting a RADIUS server with an FQDN, a timeout, port number, and a named VRF:

```
switch(config)# no radius-server host abc.com timeout 15 port 32 vrf vrf_blue
```

Adding a RADIUS server with an IPv6 address:

```
switch(config)# radius-server host 2001:0db8:85a3:0000:0000:8a2e:0370:7334
```

Deleting a RADIUS server with an IPv6 address:

```
switch(config)# no radius-server host 2001:0db8:85a3:0000:0000:8a2e:0370:7334
```

Adding a RADIUS server with tracking enabled and tracking mode is set to dead-only:

```
switch(config)# radius-server host 1.1.1.1 tracking enable tracking-mode dead-only
```

Deleting a RADIUS server with tracking enabled and tracking mode is set to dead-only:

```
switch(config)# no radius-server host 1.1.1.1 tracking enable tracking-mode dead-only
```

Adding a RADIUS server with tracking disabled:

```
switch(config)# radius-server host 1.1.1.1 tracking disable
```

Deleting a RADIUS server with tracking disabled:

```
switch(config)# no radius-server host 1.1.1.1 tracking disable
```

Adding a RADIUS server with an IPv4 address, key, encrypted passkey, number of retries, and VRF name:

```
switch(config)# radius-server host 1.1.1.6 key ciphertext AQBapStbgHt1X2JlbcEcQl  
xbbzWjrFr9UsfH3+00x5Qj0qcQBAAAAJ5WZBQ= retries 3 vrf vrf_red
```

Deleting a RADIUS server with an IPv4 address, key, encrypted passkey, number of retries, and VRF name:

```
switch(config)# no radius-server host 1.1.1.6 key ciphertext  
AQBapStbgHt1X2JlbcEcQl  
xbbzWjrFr9UsfH3+00x5Qj0qcQBAAAAJ5WZBQ= retries 3 vrf vrf_red
```

Deleting a RADIUS server with an IPv4 address and specified VRF:

```
switch(config)# no radius-server host 1.1.1.1 vrf mgmt
```

Deleting a RADIUS server with an FQDN, port, and specified VRF:

```
switch(config)# no radius-server host abc.com port 32 vrf vrf_blue
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------------|--------------|
| 10.07 or earlier | -- |

Command Information

| Platforms | Command context | Authority |
|---------------|-----------------|--|
| All platforms | config | Administrators or local user group members with execution rights for this command. |

radius-server host secure ipsec

Syntax for a RADIUS server that uses IPsec for authentication:

```
radius-server host {<FQDN> | <IPV4> | <IPV6>}
```

```

[key [plaintext <PASSKEY> | ciphertext <PASSKEY>]]
[timeout <TIMEOUT-SECONDS>] [port <PORT-NUMBER>]
[auth-type {pap | chap}] [acct-port <ACCT-PORT>] [retries <RETRY-COUNT>]
[tracking {enable | disable}] [tracking-mode {any | dead-only}] [vrf <VRF-NAME>]
secure ipsec authentication spi <SPI-INDEX> <AUTH-TYPE> <AUTH-KEY-TYPE> [<AUTH-KEY>]
no radius-server host {<FQDN> | <IPV4> | <IPV6>}
[key [plaintext <PASSKEY> | ciphertext <PASSKEY>]]
[timeout <TIMEOUT-SECONDS>] [port <PORT-NUMBER>]
[auth-type {pap | chap}] [acct-port <ACCT-PORT>] [retries <RETRY-COUNT>]
[tracking {enable | disable}] [tracking-mode {any | dead-only}] [vrf <VRF-NAME>]
secure ipsec authentication spi <SPI-INDEX><AUTH-TYPE><AUTH-KEY-TYPE> [<AUTH-KEY>]

```

Syntax for a RADIUS server that uses IPsec for both authentication and encryption:

```

radius-server host {<FQDN> | <IPV4> | <IPV6>}
[key [plaintext <PASSKEY> | ciphertext <PASSKEY>]]
[timeout <TIMEOUT-SECONDS>] [port <PORT-NUMBER>]
[auth-type {pap | chap}] [acct-port <ACCT-PORT>] [retries <RETRY-COUNT>]
[tracking {enable | disable}] [tracking-mode {any | dead-only}] [vrf <VRF-NAME>]
secure ipsec encryption spi <SPI-INDEX> <AUTH-TYPE> <AUTH-KEY-TYPE>
[<AUTH-KEY>] <ENCRYPT-TYPE> <ENCRYPT-KEY-TYPE> [<ENCRYPT-KEY>]
no radius-server host {<FQDN> | <IPV4> | <IPV6>}
[key [plaintext <PASSKEY> | ciphertext <PASSKEY>]]
[timeout <TIMEOUT-SECONDS>] [port <PORT-NUMBER>]
[auth-type {pap | chap}] [acct-port <ACCT-PORT>] [retries <RETRY-COUNT>]
[tracking {enable | disable}] [tracking-mode {any | dead-only}] [vrf <VRF-NAME>]
secure ipsec encryption spi <SPI-INDEX><AUTH-TYPE><AUTH-KEY-TYPE>
[<AUTH-KEY>] <ENCRYPT-TYPE><ENCRYPT-KEY-TYPE> [<ENCRYPT-KEY>]

```

Description

Adds a RADIUS server that uses IPsec for enhanced security (authentication and possibly encryption). By default, the RADIUS server is associated with the server group named **radius**.

The **no** form of this command removes a previously added RADIUS (with IPsec) server.



Unless enhanced security with IPsec is required, use the **radius-server host** command instead.

| Parameter | Description |
|--|--|
| {<FQDN> <IPV4> <IPV6>} | Specifies the RADIUS server as: <ul style="list-style-type: none"> ▪ <FQDN>: a fully qualified domain name. ▪ <IPV4>: an IPv4 address. ▪ <IPV6>: an IPv6 address. |
| key [plaintext <PASSKEY> ciphertext <PASSKEY>] | <p>Selects either a plaintext or an encrypted local shared-secret passkey for the server. As per RFC 2865, shared-secret can be a mix of alphanumeric and special characters. Plaintext passkeys are between 1 and 32 alphanumeric and special characters.</p> <p>NOTE: When key is entered without either sub-parameter, plaintext passkey prompting occurs upon pressing Enter. Enter must be pressed immediately after the key parameter without entering other parameters. The entered passkey characters are masked with asterisks. When key is omitted, the server uses the global passkey. This command requires either the global or local passkey to be set; otherwise the server will not be contacted. Command radius-server key is available for setting the global</p> |

| Parameter | Description |
|---------------------------------|--|
| | passkey. |
| timeout <TIMEOUT-SECONDS> | Specifies the timeout. Range: 1 to 60 seconds. If a timeout is not specified, the value from the global timeout for RADIUS is used. |
| port <PORT-NUMBER> | Specifies the authentication port number. Range: 1 to 65535. Default: 1812. |
| auth-type {pap chap} | Selects either the PAP (the default) or CHAP authentication types. If this parameter is not specified, the RADIUS global default is used. |
| acct-port <ACCT-PORT> | Specifies the UDP accounting port number. Range: 1 to 65535. Default: 1813. |
| retries <RETRY-COUNT> | Specifies the number of retry attempts for contacting the specified RADIUS server. Range is 0 to 5 attempts. If no retry value is provided, the default value of 1 is used. |
| tracking {enable disable} | <p>Enables or disables server tracking for the RADIUS server. Tracked servers are probed at the start of each server tracking interval to check if they are reachable.</p> <p>Use command radius-server tracking to configure RADIUS server tracking globally.</p> <p>NOTE: Server tracking uses authentication request and response packets to determine server reachability status. The server tracking user name and password are used to form the request packet which is sent to the server with tracking enabled. Upon receiving a response to the request packet, the server is considered to be reachable.</p> |
| tracking-mode {any dead-only} | <p>Configures tracking mode for the RADIUS server that has tracking enabled with the server. The tracking mode is used to monitor the status of RADIUS server reachability. The default tracking mode is any.</p> <p>any
Track the RADIUS server irrespective of its server reachability.</p> <p>dead-only
Track the RADIUS server only when the server is marked as unreachable.</p> |
| vrf <VRF-NAME> | Specifies the VRF name to be used for communicating with the server. If no VRF name is provided, the default VRF named default is used. |
| spi <SPI-INDEX> | Specifies the Security Parameters Index. The SPI is an identification tag carried in the IPsec AH header. The SPI must be unique on the switch. Range: 256 to 4294967295. |
| <AUTH-TYPE> | Specifies the authentication algorithm: md5 , sha1 , or sha256 . |
| <AUTH-KEY-TYPE> | Specifies the authentication key type: plaintext , hex-string , or ciphertext . |

| Parameter | Description |
|--------------------|--|
| [<AUTH-KEY>] | <p>Specifies the authentication key. For <AUTH-TYPE> of ciphertext, this is the ciphertext string.</p> <p>For <AUTH-TYPE> of plaintext or hex-string:</p> <ul style="list-style-type: none"> ▪ md5 (plaintext): 1 to 16 characters, (hex-string): 2 to 32 hexadecimal digits. ▪ sha1 (plaintext): 1 to 20 characters, (hex-string): 2 to 40 hexadecimal digits. ▪ sha256 (plaintext): 1 to 32 characters, (hex-string): 2 to 64 hexadecimal digits. <p>NOTE: When <AUTH-KEY-TYPE> is not followed by <AUTH-KEY>, plaintext authentication key prompting occurs upon pressing Enter. Enter must be pressed immediately after the <AUTH-KEY-TYPE> parameter without entering other parameters. The entered authentication key characters are masked with asterisks.</p> |
| <ENCRYPT-TYPE> | Specifies the encryption algorithm: 3des , aes , des , or null . |
| <ENCRYPT-KEY-TYPE> | Specifies the encryption key type: plaintext , hex-string , or ciphertext . |
| [<ENCRYPT-KEY>] | <p>Specifies the encryption key. For <ENCRYPT-TYPE> of ciphertext, this is the ciphertext string.</p> <p>For <ENCRYPT-TYPE> of plaintext or hex-string:</p> <ul style="list-style-type: none"> ▪ 3des (plaintext): 24 characters, (hex-string): 48 hexadecimal digits. ▪ aes (plaintext): 16, 24, or 32 characters, (hex-string): 32, 48, or 64 hexadecimal digits. ▪ des (plaintext): 8 characters, (hex-string): 16 hexadecimal digits. <p>NOTE: When <ENCRYPT-KEY-TYPE> is not followed by <ENCRYPT-KEY>, plaintext encryption key prompting occurs upon pressing Enter. Enter must be pressed immediately after the <ENCRYPT-KEY-TYPE> parameter without entering other parameters. The entered encryption key characters are masked with asterisks.</p> |

Usage

If the fully qualified domain name is provided for the RADIUS server host, a DNS server must be configured and accessible through the same VRF as mentioned for the server host. This configuration is required for the resolution of the RADIUS server hostname to its IP address. If a DNS server is not available for this VRF, the RADIUS servers reachable through this VRF must be configured by means of their IP addresses only.

Examples

Adding a RADIUS server with an IPv4 address, a plaintext passkey, and IPsec authentication (md5 plaintext).

```
switch(config)# radius-server host 1.1.1.1 key plaintext 98ab vrf mgmt secure
```

```
ipsec authentication spi 261 md5 plaintext labc
```

Deleting a RADIUS server with an IPv4 address, a plaintext passkey, and IPsec authentication (md5 plaintext).

```
switch(config)# no radius-server host 1.1.1.1 key plaintext 98ab vrf mgmt secure  
ipsec authentication spi 261 md5 plaintext labc
```

Adding a RADIUS server with an IPv4 address and a prompted IPsec authentication (md5) plaintext authentication key.

```
switch(config)# radius-server host 1.1.1.1 secure ipsec authentication spi 261  
md5  
Enter the IPsec authentication key: *****  
Re-Enter the IPsec authentication key: *****
```

Deleting a RADIUS server with an IPv4 address and a prompted IPsec authentication (md5) plaintext authentication key.

```
switch(config)# no radius-server host 1.1.1.1 secure ipsec authentication spi 261  
md5  
Enter the IPsec authentication key: *****  
Re-Enter the IPsec authentication key: *****
```

Adding a RADIUS server with an IPv4 address, IPsec authentication (MD5 plaintext), and IPsec encryption (AES plaintext):

```
switch(config)# radius-server host 1.1.1.2 vrf mgmt secure  
ipsec encryption spi 262 md5 plaintext 9xyz aes plaintext 1234567890abcdef
```

Deleting a RADIUS server with an IPv4 address, IPsec authentication (MD5 plaintext), and IPsec encryption (AES plaintext):

```
switch(config)# no radius-server host 1.1.1.2 vrf mgmt secure  
ipsec encryption spi 262 md5 plaintext 9xyz aes plaintext 1234567890abcdef
```

Adding a RADIUS server by providing an IPv4 address and IPsec MD5 authentication type, and then responding to prompts for the keys and encryption type:

```
switch(config)# radius-server host 1.1.1.6 secure ipsec encryption spi 262 md5  
Enter the IPsec authentication key: *****  
Re-Enter the IPsec authentication key: *****  
  
Enter the IPsec encryption type (3des/aes/des/null)? aes  
  
Enter the IPsec encryption key: *****  
Re-Enter the IPsec encryption key: *****
```

Deleting a RADIUS server by providing an IPv4 address and IPsec MD5 authentication type, and then responding to prompts for the keys and encryption type:

```
switch(config)# no radius-server host 1.1.1.6 secure ipsec encryption spi 262 md5
Enter the IPsec authentication key: *****
Re-Enter the IPsec authentication key: *****

Enter the IPsec encryption type (3des/aes/des/null)? aes

Enter the IPsec encryption key: *****
Re-Enter the IPsec encryption key: *****
```

Adding a RADIUS server with an IPv4 address, tracking enabled, tracking mode, IPsec authentication (MD5 plaintext), IPsec encryption (AES plaintext) is set to dead-only:

```
switch(config)# radius-server host 1.1.1.1 tracking enable tracking-mode dead-only
vrf mgmt secure ipsec encryption spi 262 md5 plaintext 9xyz
aes plaintext 1234567890abcdef
```

Deleting a RADIUS server with an IPv4 address, tracking enabled, tracking mode, IPsec authentication (MD5 plaintext), IPsec encryption (AES plaintext) is set to dead-only:

```
switch(config)# no radius-server host 1.1.1.1 tracking enable tracking-mode dead-only
vrf mgmt secure ipsec encryption spi 262 md5 plaintext 9xyz
aes plaintext 1234567890abcdef
```

Removing a RADIUS server:

```
switch(config)# no radius-server host 1.1.1.1 vrf mgmt
```

Removing the ipsec configuration from a RADIUS server:

```
switch(config)# no radius-server host 1.1.1.2 vrf mgmt secure ipsec encryption
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------------|--------------|
| 10.07 or earlier | -- |

Command Information

| Platforms | Command context | Authority |
|---------------|-----------------|--|
| All platforms | config | Administrators or local user group members with execution rights for this command. |

radius-server host tls (RadSec)

```
radius-server host {<FQDN> | <IPV4> | <IPV6>}tls [timeout <TIMEOUT-SECONDS>] [port <PORT-  
NUMBER>][auth-type {pap | chap}] [tracking {enable | disable}] [tracking-  
mode {any | dead-  
only}] [vrf <VRF-NAME>]

no radius-server host {<FQDN> | <IPV4> | <IPV6>}tls [timeout <TIMEOUT-SECONDS>] [port  
<PORT-  
NUMBER>][auth-type {pap | chap}] [tracking {enable | disable}] [tracking-  
mode {any | dead-  
only}] [vrf <VRF-NAME>]
```

Description

Adds a RadSec server. By default, the RADIUS server is associated with the server group named **radius**. RadSec is used to secure the communication between RADIUS server and RADIUS client using TLS.

The **no** form of this command removes a previously added RadSec server.



The shared key will be added as **radsec** for connection establishment.

| Parameter | Description |
|---------------------------------|---|
| {<FQDN> <IPV4> <IPV6>} | Specifies the RADIUS server as: <ul style="list-style-type: none"> ▪ <FQDN>: a fully qualified domain name. ▪ <IPV4>: an IPv4 address. ▪ <IPV6>: an IPv6 address. |
| tls | Establishes RADIUS connection over TLS. |
| timeout <TIMEOUT-SECONDS> | Specifies the timeout. Range: 1 to 60 seconds. If a timeout is not specified, the value from the global timeout for RADIUS is used. |
| port <PORT-NUMBER> | Specifies the authentication port number. Range: 1 to 65535. Default: 1812. |
| auth-type {pap chap} | Selects either the PAP (the default) or CHAP authentication types. If this parameter is not specified, the RADIUS global default is used. |
| acct-port <ACCT-PORT> | Specifies the UDP accounting port number. Range: 1 to 65535. Default: 1813. |
| tracking {enable disable} | Enables or disables server tracking for the RADIUS server. Tracked servers are probed at the start of each server tracking interval to check if they are reachable.
Use command radius-server tracking to configure RADIUS server tracking globally.

NOTE: Server tracking uses authentication request and response packets to determine server reachability status. The server tracking user name and password are used to form the request packet which is sent to the server with tracking enabled. Upon receiving a response to the request packet, the server is considered to be reachable. |
| tracking-mode {any dead-only} | Configures tracking mode for the RADIUS server that has tracking enabled with the server. The tracking mode is used to monitor the status of RADIUS server reachability. The default tracking mode is |

| Parameter | Description |
|-----------------------------------|---|
| | any.
any
Track the RADIUS server irrespective of its server reachability.
dead-only
Track the RADIUS server only when the server is marked as unreachable. |
| <code>vrf <VRF-NAME></code> | Specifies the VRF name to be used for communicating with the server. If no VRF name is provided, the default VRF named default is used. |

Examples

Adding a RADIUS server over TLS with an IPv4 address and a named VRF:

```
switch(config)# radius-server host 1.1.1.1 tls vrf mgmt
```

Deleting a RADIUS server over TLS with an IPv4 address and a named VRF:

```
switch(config)# no radius-server host 1.1.1.1 tls vrf mgmt
```

Adding a RADIUS server over TLS with an IPv4 address and default port:

```
switch(config)# radius-server host 1.1.1.1 tls port
```

Deleting a RADIUS server over TLS with an IPv4 address and default port:

```
switch(config)# no radius-server host 1.1.1.1 tls port
```

Adding a RADIUS server over TLS with tracking enabled and tracking mode is set to dead-only:

```
switch(config)# radius-server host 1.1.1.1 tls tracking enable tracking-mode dead-only
```

Deleting a RADIUS server over TLS with tracking enabled and tracking mode is set to dead-only:

```
switch(config)# no radius-server host 1.1.1.1 tls tracking enable tracking-mode dead-only
```

Adding a RADIUS server over TLS with an IPv4 address, a port, and a named VRF:

```
switch(config)# radius-server host 1.1.1.2 tls port 32 vrf mgmt
```

Deleting a RADIUS server over TLS with an IPv4 address, a port, and a named VRF:

```
switch(config)# no radius-server host 1.1.1.2 tls port 32 vrf mgmt
```

Adding a RADIUS server over TLS with an IPv6 address:

```
switch(config)# radius-server host 2001:0db8:85a3:0000:0000:8a2e:0370:7334 tls
```

Deleting a RADIUS server over TLS with an IPv6 address:

```
switch(config)# no radius-server host 2001:0db8:85a3:0000:0000:8a2e:0370:7334 tls
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------------|--------------|
| 10.07 or earlier | -- |

Command Information

| Platforms | Command context | Authority |
|--|-----------------|--|
| 8320
8325
8325H
8325P
8400
9300
9300S
10000 | config | Administrators or local user group members with execution rights for this command. |

radius-server host tls port-access

```
radius-server host {<FQDN> | <IPV4> | <IPV6>} tls port-access {status-server | keep-alive}
```

```
no radius-server host {<FQDN> | <IPV4> | <IPV6>} tls port-access {status-server | keep-alive}
```

Description

Configures the type of messages to be sent inside RadSec sessions for port access authentication. Default message type for port access authentication sessions is **status-server**.

The **no** form of this command removes the message type configured for port access authentication sessions and sets the default, **status-server**.

| Parameter | Description |
|----------------------------|--|
| {<FQDN> <IPV4> <IPV6>} | Specifies the RADIUS server as: <ul style="list-style-type: none">▪ <FQDN>: a fully qualified domain name.▪ <IPV4>: an IPv4 address.▪ <IPV6>: an IPv6 address. |

| Parameter | Description |
|---|---|
| port-access
{status-server keep-alive} | <p>Specifies the message type to be used for port access authentication in RadSec sessions. Following message types are supported:</p> <ul style="list-style-type: none"> ▪ status-server: Sets status server message type for authentication. ▪ keep-alive: Sets keep-alive message type for authentication. <p>NOTE: Keep-alive as tracking method and for port access sessions is recommended in networks where a RadSec server is connected to more number of RadSec clients. The server requires additional resources to process status-server and access-request messages when compared to keep-alive messages. This is because status-server and access-request messages are RADIUS protocol packets. However, keep-alive packets are TCP control packets that does not require any additional resources for processing by the RadSec server.</p> |

Examples

Configuring the **keep-alive** messages for port access authentication in RadSec session on host **1.1.1.1**:

```
switch(config)# radius-server host 1.1.1.1 tls port-access keep-alive
```

Deleting the message type configured on host **1.1.1.1** for port access authentication session and setting the method to the default, **status-server**:

```
switch(config)# no radius-server host 1.1.1.1 tls port-access status-server
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|--------------------|
| 10.10 | Command introduced |

Command Information

| Platforms | Command context | Authority |
|----------------------|-----------------|--|
| 8320
8400
9300 | config | Administrators or local user group members with execution rights for this command. |

radius-server host tls tracking-method

```
radius-server host {<FQDN> | <IPv4> | <IPv6>} tls tracking-method {status-server | keep-alive | access-request}
no radius-server host {<FQDN> | <IPv4> | <IPv6>} tls tracking-method {status-server | keep-alive | access-request}
```

Description

Configures the tracking method to be used for RADIUS server tracking. RADIUS server tracking must be configured for enabling the tracking method. Default tracking method is **access-request**.

The **no** form of this command sets the tracking method to the default option, **access-request**.

| Parameter | Description |
|--|---|
| <code>{<FQDN> <IPv4> <IPv6>}</code> | <p>Specifies the RADIUS server as:</p> <ul style="list-style-type: none">▪ <FQDN>: a fully qualified domain name.▪ <IPv4>: an IPv4 address.▪ <IPv6>: an IPv6 address. |
| <code>tracking-method</code>
<code>{status-server keep-alive access-request}</code> | <p>Specifies the tracking method for RadSec tracking. Following methods are supported:</p> <ul style="list-style-type: none">▪ status-server: Status server responses are used to update the reachability status of the RadSec server.▪ keep-alive: Server socket status is verified to update the reachability status of the RadSec server. <p>NOTE: keep-alive as tracking method and for port access sessions is recommended in networks where a RadSec server is connected to more number of RadSec clients. The server requires additional resources to process status-server and access-request messages when compared to keep-alive messages. This is because status-server and access-request messages are RADIUS protocol packets. However, keep-alive packets are TCP control packets that does not require any additional resources for processing by the RadSec server.</p> <ul style="list-style-type: none">▪ access-request: Access response messages are used to update the reachability status of the RadSec server. |

Usage

- If the network has a RADIUS proxy, then it is recommended to use the **access-request** tracking method to track the RadSec server.
- If **keep-alive** is the tracking method, then make sure to check whether the server has the capability to treat the **keep-alive** messages sent in RadSec sessions as valid RadSec messages to keep the session active.

Examples

Configuring the RADIUS server tracking method on host **1.1.1.1**:

```
switch(config)# radius-server host 1.1.1.1 tls tracking-method status-server
```

Deleting the RADIUS server tracking method on host **1.1.1.1** and setting the method to the default, **access-request**:


```
switch(config)# no radius-server host 1.1.1.1 tls tracking-method access-request
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|--------------------|
| 10.10 | Command introduced |

Command Information

| Platforms | Command context | Authority |
|---------------|-----------------|--|
| All platforms | config | Administrators or local user group members with execution rights for this command. |

radius-server key

```
radius-server key [plaintext <GLOBAL-PASSKEY> | ciphertext <GLOBAL-PASSKEY>]  
no radius-server key [plaintext <GLOBAL-PASSKEY> | ciphertext <GLOBAL-PASSKEY>]
```

Description

Creates or modifies a RADIUS global passkey. The RADIUS global passkey is used as a shared-secret for encrypting the communication between all RADIUS servers and the switch. The RADIUS global passkey is required for authentication unless local passkeys have been set. By default, the RADIUS global passkey is empty. If the administrator has not set this key, the switch will not be able to perform RADIUS authentication. The switch will instead rely on the authentication mechanism configured with **aaa authentication login**.



When this command is entered without parameters, plaintext passkey prompting occurs upon pressing Enter. The entered passkey characters are masked with asterisks.

The **no** form of the command removes the global passkey.

| Parameter | Description |
|-----------------------------|--|
| plaintext <GLOBAL-PASSKEY> | Specifies the RADIUS global passkey in plaintext format with a length of 1 to 31 characters. As per RFC 2865, a shared-secret can be a mix of alphanumeric and special characters. |
| ciphertext <GLOBAL-PASSKEY> | Specifies the RADIUS global passkey in encrypted format. |

Examples

Adding the global passkey:

```
switch(config)# radius-server key plaintext mypasskey123
```

Adding the global passkey with prompting:

```
switch(config)# radius-server key
Enter the RADIUS server key: *****
Re-Enter the RADIUS server key: *****
```

Removing the global passkey:

```
switch(config)# no radius-server key
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------------|--------------|
| 10.07 or earlier | -- |

Command Information

| Platforms | Command context | Authority |
|---------------|-----------------|--|
| All platforms | config | Administrators or local user group members with execution rights for this command. |

radius-server retries

```
radius-server retries <0-5>
no radius-server retries <0-5>
```

Description

Sets at the global level the number of retries the switch makes before concluding that the RADIUS server is unreachable.

You can override this setting with a fine-grained per RADIUS server retries configuration.

The **no** form of this command resets the RADIUS global retries to the default retries value of 1.

| Parameter | Description |
|---------------|--|
| retries <0-5> | Specifies the number of retry attempts for contacting RADIUS servers. Range is 0 to 5 retries. |

Example

```
switch(config)# radius-server retries 3
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------------|--------------|
| 10.07 or earlier | -- |

Command Information

| Platforms | Command context | Authority |
|---------------|-----------------|--|
| All platforms | config | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

radius-server status-server interval

```
radius-server status-server interval <10-86400>  
no radius-server status-server interval <10-86400>
```

Description

Configures the time interval in seconds to send the status server requests to the RADIUS server. The **no** form of this command configures the default time interval, **300** seconds.

| Parameter | Description |
|------------|---|
| <10-86400> | Specifies the status server time interval in seconds. Default: 300 . |

Examples

Configuring the status server time interval of 200 seconds:

```
switch(config)# radius-server status-server interval 200
```

Resetting the status server time interval to the default, 300 seconds:

```
switch(config)# no radius-server status-server interval 200
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|--------------------|
| 10.10 | Command introduced |

Command Information

| Platforms | Command context | Authority |
|---------------|-----------------|--|
| All platforms | config | Administrators or local user group members with execution rights for this command. |

radius-server timeout

```
radius-server timeout [<1-60>]
no radius-server timeout [<1-60>]
```

Description

Specifies the number of seconds to wait for a response from the RADIUS server before trying the next RADIUS server. If a value is not specified, a default value of 5 seconds is used. You can override this value with a fine-grained per server timeout configured for individual servers.

The **no** form of this command resets the RADIUS global authentication timeout to the default of 5 seconds.

| Parameter | Description |
|----------------|--|
| timeout <1-60> | Specifies the timeout interval of 1 to 60 seconds. Default: 5 seconds. |

Examples

Setting the RADIUS server timeout:

```
switch(config)# radius-server timeout 10
```

Resetting the timeout for the RADIUS server to the default:

```
switch(config)# no radius-server timeout
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------------|--------------|
| 10.07 or earlier | -- |

Command Information

| Platforms | Command context | Authority |
|---------------|-----------------|--|
| All platforms | config | Administrators or local user group members with execution rights for this command. |

radius-server tls timeout (RadSec)

```
radius-server tls timeout [<1-60>]
no radius-server tls timeout [<1-60>]
```

Description

Specifies the number of seconds to wait for a response from the RadSec server before trying the next RADIUS or RadSec server. If a value is not specified, a default value of 5 seconds is used. You can override this value with a fine-grained per server timeout configured for individual servers.

The **no** form of this command resets the RadSec global authentication timeout to the default of 5 seconds.

| Parameter | Description |
|----------------|--|
| timeout <1-60> | Specifies the timeout interval of 1 to 60 seconds. Default: 5 seconds. |

Examples

Setting the RadSec server timeout:

```
switch(config)# radius-server tls timeout 10
```

Resetting the timeout for the RadSec to the default:

```
switch(config)# no radius-server tls timeout
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------------|--------------|
| 10.07 or earlier | -- |

Command Information

| Platforms | Command context | Authority |
|--|-----------------|--|
| 8320
8325
8325H
8325P
8400
9300
9300S
10000 | config | Administrators or local user group members with execution rights for this command. |

radius-server tracking

```
radius-server tracking interval <INTERVAL>
no radius-server tracking interval
```

```
radius-server tracking retries <RETRIES>
no radius-server tracking retries

radius-server tracking user-name <NAME>
    [password [plaintext <PASSWORD> | ciphertext <PASSWORD>]]
no radius-server tracking user-name <NAME>
    [password [plaintext <PASSWORD> | ciphertext <PASSWORD>]]
```

Description

Configures RADIUS server tracking settings globally for all configured RADIUS servers that have tracking enabled with the **radius-server host** command on individual servers.

The **no** form of the command removes the specified configuration, reverting it to its default. The **no** form with **user-name** also clears the password (resets it to empty).

| Parameter | Description |
|---|---|
| <code>interval <INTERVAL></code> | Specifies the time interval, in seconds, to wait before checking the server reachability status. Default: 300. Range 60 to 84600. |
| <code>retries <RETRIES></code> | Specifies the number of server retries. Default: Global RADIUS retries. Range: 0 to 5. |
| <code>user-name <NAME></code>
<code> [password [plaintext <PASSWORD> </code>
<code> ciphertext <PASSWORD>]]</code> | <p>Specifies the user name (and optionally a password) to be used for server checking. The default user name is radius-tracking-user with an empty password. The password is optional and may be entered as plaintext or pasted in as ciphertext. The plaintext password is visible as cleartext when entered but is encrypted thereafter. Command history does show the password as cleartext.</p> <p>NOTE: When password is entered without a following sub-parameter, plaintext password prompting occurs upon pressing Enter. The entered password characters are masked with asterisks.</p> <p>NOTE: The user does not have to be configured on the server. Server tracking can still be performed with a user which is not configured on the server because authentication failure on the server achieves confirmation that the server is reachable.</p> <p>NOTE: Server tracking uses authentication request and response packets to determine server reachability status. The server tracking user name and password are used to form the request packet which is sent to the server with tracking enabled. Upon receiving a response to the request packet, the server is considered to be reachable.</p> |

Examples

Configuring a tracking interval of 120 seconds:

```
switch(config)# radius-server tracking interval 120
```

Reverting the tracking interval to its default of 300 seconds:

```
switch(config)# no radius-server tracking interval
```

Configuring three retries:

```
switch(config)# radius-server tracking retries 3
```

Configuring user **radius-tracker** with a plaintext password.

```
switch(config)# radius-server tracking user-name radius-tracker  
password plaintext track$1
```

Configuring user **radius-tracker** with a prompted plaintext password.

```
switch(config)# radius-server tracking user-name radius-tracker password  
Enter the RADIUS server tracking password: *****  
Re-Enter the RADIUS server tracking password: *****
```

Reverting the tracking user name to its default of **radius-tracking-user**:

```
switch(config)# no radius-server tracking user-name
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------------|--------------|
| 10.07 or earlier | -- |

Command Information

| Platforms | Command context | Authority |
|---------------|-----------------|--|
| All platforms | config | Administrators or local user group members with execution rights for this command. |

server

```
server {<FQDN> | <IPV4> | <IPV6>} [tls] [port <PORT-NUMBER>] [vrf <VRF-NAME>]  
no server {<FQDN> | <IPV4> | <IPV6>} [tls] [port <PORT-NUMBER>] [vrf <VRF-NAME>]
```

Description

Adds a TACACS+ or RADIUS server to a server group. Only the configured TACACS+ or RADIUS servers are allowed to be added within the server group. If the same server name exists with multiple ports or multiple VRFs, specify the server name, port, and VRF when adding the server to the server-group.

The **no** form of this command removes a TACACS+/RADIUS server from a server-group.



On the HPE Aruba Networking 4100i, 5420, 6000, 6100, 6200, 6300, 6400, 8100, 8325, 8325H, 8325P, 8360, and 10000 Switch series, a RADIUS server can be associated with a maximum of four different user-defined server groups.

On the HPE Aruba Networking 8320, 8400, and 9300/9300S Switch Series, a RADIUS server can be associated with only one user-defined server group.

| Parameter | Description |
|----------------------------|---|
| {<FQDN> <IPv4> <IPv6>} | Specifies the RADIUS server as: <ul style="list-style-type: none">▪ <FQDN>: a fully qualified domain name.▪ <IPv4>: an IPv4 address.▪ <IPv6>: an IPv6 address. |
| tls | Specifies the TLS protection for the RADIUS server. If TLS is configured without a port number, the system searches the RADIUS server by host name and sets the default authentication port (2083). Group server priority is assigned based on the sequence in which the servers are added. |
| port <PORT-NUMBER> | Specifies the authentication port number. Range: 1 to 65535. Default TACACS+ (TCP): 49, RADIUS (UDP): 1812 and RadSec: 2083. If a port number is not provided, the system searches the TACACS+/RADIUS server by host name and sets the default authentication port. Group server priority is assigned based on the sequence in which the servers are added. |
| vrf <VRF-NAME> | Specifies the VRF name to be used for communicating with the server. If no VRF name is provided, the default VRF named default is used. |

Examples

Adding a server to TACACS+ server group sg1 by providing an IPv4 address, port number, and VRF name:

```
switch(config)# aaa group server tacacs sg1
switch(config-sg)# server 1.1.1.2 port 32 vrf default
```

Adding a server to TACACS+ server group sg2 by providing an IPv6 address and default VRF:

```
switch(config)# aaa group server tacacs sg2
switch(config-sg)# server 2001:0db8:85a3:0000:0000:8a2e:0370:7334 vrf default
```

Adding a server to RADIUS server group sg3 by providing an IPv4 address, port number, and VRF name:

```
switch(config)# aaa group server radius sg3
switch(config-sg)# server 1.1.1.5 port 12 vrf default
```

Adding a server to RADIUS server group sg3 with TLS protection by providing an IPv4 address, port number, and VRF name:


```
switch(config)# aaa group server radius sg3
switch(config-sg)# server 1.1.1.5 tls port 12 vrf default
```

Adding a server to RADIUS server group sg4 by providing an IPv6 address and default VRF:

```
switch(config)# aaa group server radius sg4
switch(config-sg)# server 2001:0db8:85a3:0000:0000:8a2e:0371:7334 vrf default
```

Adding a server to RADIUS server group sg4 by providing an IPv4 address, port number, and VRF name:

```
switch(config)# aaa group server radius sg4
switch(config-sg)# server 1.1.1.6 port 32 vrf vrf_red
```

Specifying an IPv4 address when removing a TACACS+ server from server group sg1:

```
switch(config)# aaa group server tacacs sg1
switch(config-sg)# no server 1.1.1.2 port 12 vrf default
```

Specifying an IPv6 address when removing a TACACS+ server from server group sg2 with the default VRF:

```
switch(config)# aaa group server tacacs sg2
switch(config-sg)# no server 2001:0db8:85a3:0000:0000:8a2e:0370:7334 vrf default
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------------|--------------|
| 10.07 or earlier | -- |

Command Information

| Platforms | Command context | Authority |
|---------------|-----------------|--|
| All platforms | config-sg | Administrators or local user group members with execution rights for this command. |

show aaa accounting (remote)

```
show aaa accounting [vsx-peer]
```

Description

Shows the accounting configuration per connection type (channel).

| Parameter | Description |
|-----------|--|
| vsx-peer | Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX. |

Examples

Configuring and then showing the accounting sequence for TACACS+ groups and local:

```
(config)# aaa accounting all-mgmt default start-stop group sgl tacacs radius
(config)# aaa accounting all-mgmt console start-stop local
(config)# aaa accounting all-mgmt ssh start-stop group radius tacacs local
(config)# aaa accounting all-mgmt https-server start-stop group sgl tacacs
(config)# aaa accounting all-mgmt telnet start-stop group radius tacacs local
(config)# show aaa accounting
AAA Accounting:
Accounting Type           : all
Accounting Mode           : start-stop
Accounting Failthrough    : Enabled

Accounting for https-server channel:
-----
GROUP NAME                | GROUP PRIORITY
-----
sgl                        | 0
tacacs                     | 1
-----

Accounting for console channel:
-----
GROUP NAME                | GROUP PRIORITY
-----
local                      | 0
-----

Accounting for default channel:
-----
GROUP NAME                | GROUP PRIORITY
-----
sgl                        | 0
tacacs                     | 1
radius                     | 2
-----

Accounting for ssh channel:
-----
GROUP NAME                | GROUP PRIORITY
-----
radius                     | 0
tacacs                     | 1
local                      | 2
-----

Accounting for telnet channel:
-----
GROUP NAME                | GROUP PRIORITY
-----
radius                     | 0
tacacs                     | 1
local                      | 2
-----
```

Configuring and then showing the accounting sequence for RADIUS groups and local:

```

switch(config)# aaa accounting all default start-stop group rg1 rg2 radius local
switch(config)# aaa accounting all console start-stop group rg4 radius local
switch(config)# exit
switch# show aaa accounting
AAA Accounting:
Accounting Type                : all
Accounting Mode                : start-stop
Accounting Failthrough         : Enabled
Accounting for default channel:
-----
GROUP NAME                     | GROUP PRIORITY
-----
rg1                            | 0
rg2                            | 1
radius                         | 2
local                         | 3
-----
Accounting for console channel:
-----
GROUP NAME                     | GROUP PRIORITY
-----
tg4                            | 0
radius                         | 1
local                         | 2
-----

```

Configuring and then showing only local accounting for default:

```

switch(config)# aaa accounting all default start-stop local
switch(config)# exit
switch# show aaa accounting
AAA Accounting:
Accounting Type                : all
Accounting Mode                : start-stop
Accounting for default channel:
-----
GROUP NAME                     | GROUP PRIORITY
-----
local                         | 0
-----

```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------------|--------------|
| 10.07 or earlier | -- |

Command Information

| Platforms | Command context | Authority |
|---------------|-----------------------------|--|
| All platforms | Operator (>) or Manager (#) | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

show aaa authentication (remote)

show aaa authentication [vsx-peer]

Description

Shows the authentication configuration per connection type (channel).

| Parameter | Description |
|-----------|--|
| vsx-peer | Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX. |

Example

Configuring TACACS+ authentication sequences and then showing the configuration per connection type (channel):

```
switch(config)# aaa authentication login default group sg1 sg2 sg3 sg4 tacacs local
switch(config)# aaa authentication login ssh group sg1 sg2
switch(config)# aaa authentication login console group sg4 tacacs local
switch(config)# aaa authentication login https-server local group tacacs sg3
switch(config)# aaa authentication login telnet group sg1 sg2
switch(config)# exit
```

```
switch# show aaa authentication
```

```
AAA Authentication:
```

```
Fail-through           : Enabled
Limit Login Attempts   : Not set
Lockout Time           : 300
Minimum Password Length : Not set
```

```
Authentication for ssh channel:
```

```
-----
GROUP NAME                | GROUP PRIORITY
-----
sg1                        | 0
sg2                        | 1
-----
```

```
Authentication for https-server channel:
```

```
-----
GROUP NAME                | GROUP PRIORITY
-----
local                     | 0
tacacs                    | 1
sg3                        | 2
-----
```

```
Authentication for console channel:
```

```
-----
GROUP NAME                | GROUP PRIORITY
-----
sg4                       | 0
tacacs                    | 1
local                     | 2
-----
```

Authentication for default channel:

| GROUP NAME | GROUP PRIORITY |
|------------|----------------|
| sg1 | 0 |
| sg2 | 1 |
| sg3 | 2 |
| sg4 | 3 |
| tacacs | 4 |
| local | 5 |

Authentication for telnet channel:

| GROUP NAME | GROUP PRIORITY |
|------------|----------------|
| sg1 | 0 |
| sg2 | 1 |

Configuring RADIUS authentication sequences and then showing the configuration per connection type (channel):

```
switch(config)# aaa authentication login default group rg1 rg2 rg3 rg4 radius local
```

```
switch(config)# aaa authentication login console group rg4 radius local
```

```
switch(config)# exit
```

```
switch# show aaa authentication
```

AAA Authentication:

Fail-through : Enabled
Limit Login Attempts : Not set
Lockout Time : 300
Minimum Password Length : Not set

Authentication for default channel:

| GROUP NAME | GROUP PRIORITY |
|------------|----------------|
| rg1 | 0 |
| rg2 | 1 |
| rg3 | 2 |
| rg4 | 3 |
| radius | 4 |
| local | 5 |

Authentication for console channel:

| GROUP NAME | GROUP PRIORITY |
|------------|----------------|
| rg4 | 0 |
| radius | 1 |
| local | 2 |

Configuring only default authentication and then showing the default connection type (channel):

```
switch(config)# aaa authentication login default local
```

```
switch(config)# exit
```

```
switch# show aaa authentication
```

```
AAA Authentication:
  Fail-through           : Disabled
  Limit Login Attempts   : Not set
  Lockout Time           : 300
  Minimum Password Length : Not set
```

```
Authentication for default channel:
```

```
-----
GROUP NAME | GROUP PRIORITY
-----
local      | 0
-----
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------------|--------------|
| 10.07 or earlier | -- |

Command Information

| Platforms | Command context | Authority |
|---------------|-----------------------------|--|
| All platforms | Operator (>) or Manager (#) | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

show aaa authorization (remote)

```
show aaa authorization [vsx-peer]
```

Description

Shows the authorization configuration per connection type (channel).

| Parameter | Description |
|-----------|--|
| vsx-peer | Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX. |

Example

Configuring and then showing the authorization sequence for default and console connection types (channels):

```
(config)# aaa authorization commands default group sg1 tacacs local
All commands will fail if none of the servers in the group list are reachable.
```

```

Continue (y/n)? y
(config)# aaa authorization commands ssh group sg2
All commands will fail if none of the servers in the group list are reachable.
Continue (y/n)? y
(config)# aaa authorization commands telnet group sg2
All commands will fail if none of the servers in the group list are reachable.
Continue (y/n)? y
(config)# aaa authorization commands console group sg1 local
All commands will fail if none of the servers in the group list are reachable.
Continue (y/n)? y
(config)# aaa authorization radius ssh group sg1
All commands will fail if none of the radsec servers in the group list are
reachable.
Continue (y/n)? y
(config)# aaa authorization radius https-server group sg2
All commands will fail if none of the radsec servers in the group list are
reachable.
Continue (y/n)? y

```

```

(config)# show aaa authorization

```

```

***** Command authorization *****

```

```

Authorization for console channel:

```

```

-----
GROUP NAME | GROUP PRIORITY
-----
sg1        | 0
local      | 1
-----

```

```

Authorization for default channel:

```

```

-----
GROUP NAME | GROUP PRIORITY
-----
sg1        | 0
tacacs     | 1
local      | 2
-----

```

```

Authorization for ssh channel:

```

```

-----
GROUP NAME | GROUP PRIORITY
-----
sg2        | 0
-----

```

```

Authorization for telnet channel:

```

```

-----
GROUP NAME | GROUP PRIORITY
-----
sg2        | 0
-----

```

```

***** User authorization through radius *****

```

```

Authorization for ssh channel:

```

```

-----
GROUP NAME | GROUP PRIORITY
-----
sg1        | 0
-----

```

```
Authorization for https-server channel:
```

```
-----  
GROUP NAME | GROUP PRIORITY  
-----  
sg2 | 0  
-----
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------------|--------------|
| 10.07 or earlier | -- |

Command Information

| Platforms | Command context | Authority |
|---------------|-----------------------------|--|
| All platforms | Operator (>) or Manager (#) | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

show aaa server-groups

```
show aaa server-groups [tacacs | radius] [vsx-peer]
```

Description

Shows TACACS+ and RADIUS AAA server group information for all server types or for the specified server type.

| Parameter | Description |
|-----------|--|
| tacacs | Narrows the command output to only TACACS+ servers. |
| radius | Narrows the command output to only RADIUS servers. |
| vsx-peer | Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX. |

Example

Showing all AAA server group information:

```
switch# show aaa server-groups  
  
***** AAA Mechanism TACACS+ *****  
-----  
GROUP NAME | SERVER NAME | PORT | VRF | PRIORITY
```



```

-----
sg2          | 2001:0db8:85a3:0000:0000:8a2e:
              0370:7334              | 49 | default | 1
-----
sg1          | 1.1.1.2              | 12 | mgmt   | 1
-----
tacacs (default) | FQDN.com            | 32 | mgmt   | 1
tacacs (default) | 1.1.1.1            | 49 | mgmt   | 2
tacacs (default) | 1.1.1.2            | 12 | mgmt   | 3
tacacs (default) | abc.com             | 32 | vrf_red | 4
tacacs (default) | 2001:0db8:85a3:0000:0000:8a2e:
              0370:7334              | 49 | default | 5
tacacs (default) | 1.1.1.3            | 32 | vrf_blue | 6
-----
***** AAA Mechanism RADIUS *****
-----
GROUP NAME    | SERVER NAME          | PORT | VRF     | PRIORITY
-----
sg4          | 2001:0db8:85a3:0000:0000:8a2e:
              0370:7334              | 1812 | default | 1
-----
sg3          | 1.1.1.5              | 12 | mgmt   | 1
-----
radius (default) | 1.1.1.4            | 1812 | mgmt   | 1
radius (default) | 1.1.1.5            | 12 | mgmt   | 2
radius (default) | abc1.com            | 32 | mgmt   | 3
radius (default) | 2001:0db8:85a3:0000:0000:8a2e:
              0370:7334              | 1812 | default | 4
radius (default) | 1.1.1.6            | 32 | vrf_red | 5
radius (default) | 1.1.1.7            | 32 | vrf_blue | 6
-----

```

Showing TACACS+ server group information:

```

switch# show aaa server-groups tacacs

***** AAA Mechanism TACACS+ *****
-----
GROUP NAME    | SERVER NAME          | PORT | VRF     | PRIORITY
-----
sg2          | 2001:0db8:85a3:0000:0000:8a2e:
              0370:7334              | 49 | default | 1
-----
sg1          | 1.1.1.2              | 12 | mgmt   | 1
-----
tacacs (default) | FQDN.com            | 32 | mgmt   | 1
tacacs (default) | 1.1.1.1            | 49 | mgmt   | 2
tacacs (default) | 1.1.1.2            | 12 | mgmt   | 3
tacacs (default) | abc.com             | 32 | vrf_red | 4
tacacs (default) | 2001:0db8:85a3:0000:0000:8a2e:
              0370:7334              | 49 | default | 5
tacacs (default) | 1.1.1.3            | 32 | vrf_blue | 6
-----

```

Showing RADIUS server group information:

```

switch# show aaa server-groups radius

***** AAA Mechanism RADIUS *****

```

| GROUP NAME | SERVER NAME | PORT | VRF | PRIORITY |
|------------------|---|------|----------|----------|
| sg4 | 2001:0db8:85a3:0000:0000:8a2e:0370:7334 | 1812 | default | 1 |
| sg3 | 1.1.1.5 | 12 | mgmt | 1 |
| radius (default) | 1.1.1.4 | 1812 | mgmt | 1 |
| radius (default) | 1.1.1.5 | 12 | mgmt | 2 |
| radius (default) | abc1.com | 32 | mgmt | 3 |
| radius (default) | 2001:0db8:85a3:0000:0000:8a2e:0370:7334 | 1812 | default | 4 |
| radius (default) | 1.1.1.6 | 32 | vrf_red | 5 |
| radius (default) | 1.1.1.7 | 32 | vrf_blue | 6 |



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------------|--------------|
| 10.07 or earlier | -- |

Command Information

| Platforms | Command context | Authority |
|---------------|-----------------------------|--|
| All platforms | Operator (>) or Manager (#) | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

show aaa troubleshoot test-server status

```
show aaa troubleshoot test-server status [radius-server <RADIUS-SERVER-NAME> [tls]
[port <PORT-NUMBER>] [vrf <VRF-NAME>]] [run <RUN-ID>]
```

Description

Shows the AAA server test results. The details of the last five tests are displayed in the output.

| Parameter | Description |
|----------------------|---|
| <RADIUS-SERVER-NAME> | Specifies the RADIUS server IP address or hostname. |
| tls | Establishes RADIUS connection over TLS. |
| port <PORT-NUMBER> | Specifies the authentication port number. Range: 1 to 65535. Default: 1812. |
| vrf <VRF-NAME> | Specifies the VRF name. |

| Parameter | Description |
|--------------|--|
| run <RUN-ID> | Specifies the AAA server test run ID . |

Examples

```
switch# show aaa troubleshoot test-server status run 2

Test Run ID           : 2
Test Start Time       : Mon Jul 22 14:15:54 UTC 2024
AAA Server            : 10.10.10.10:1812/my-vrf
Authentication Type   : pap
Test Username/Password : test-
user/AQBapdxySvGPvdTlkYn1/naKX4O3jKHrm28xLYfO6mLOK499BwAAAHdJp/bL4FE=
Test Status           : Completed
Server Response       : Access-Accept

RADIUS Attributes
-----
  User-Name           : Student
  Filter-ID           : DHCP, WebServices-Student, DataCenter-Student,
RemoteAccess-Student, Printer-Student
  Framed-MTU          : 1500 bytes
  Session-Timeout     : 500 seconds
  Idle-Timeout        : 200 seconds
  Termination-Action  : RADIUS-Request
  Egress-VLAN-ID      : 10(t), 15(t), 20(u)
  Egress-VLAN-Name     : VLAN100(t), VLAN200(u)
  Tunnel-Type          : 13
  Tunnel-Medium-Type   : 6
  Tunnel-Private-Group-ID : 20
  NAS-Filter-Rule      : permit in 17 from any to any
                        deny in tcp from any to 10.10.10.3/8
  Aruba-Captive-Portal-URL :
http://arubanetworks.com/student/captiveportal.php
  Aruba-PoE-Priority   : Low
  Aruba-Port-Auth-Mode : client-mode
  Aruba-NAS-Filter-Rule : deny in icmp from 10.10.10.1 to any 27
  Aruba-QoS-Trust-Mode : dscp
  Aruba-UBT-Gateway-Role : gateway_student_role
  Aruba-Gateway-Zone   : student_zone
  Aruba-STP-Admin-Edge-Port : false
  Aruba-UBT-Gateway-CPPM-Role : ubt_gateway_cppm_student_role
  Aruba-Device-Traffic-Class : data
  Aruba-PVLAN-Port-Type : secondary
  Aruba-PoE-Allocate-By-Method : class
```

```
switch# show aaa troubleshoot test-server radius-server test port 1234 vrf red

Test Run ID           : 3
Test Start Time       : Mon Jul 22 14:15:54 UTC 2024
AAA Server            : test:1234/red tls
Authentication Type   : pap
Test Username/Password : test-
user/AQBapdxySvGPvdTlkYn1/naKX4O3jKHrm28xLYfO6mLOK499BwAAAHdJp/bL4FE=
Test Status           : Completed
Server Response       : Access-Accept

RADIUS Attributes
```

```

-----
User-Name                : Student
Filter-ID                : DHCP, WebServices-Student, DataCenter-Student,
                          RemoteAccess-Student, Printer-Student
Framed-MTU               : 1500 bytes
Session-Timeout          : 500 seconds
Tunnel-Type              : 13, 1
Tunnel-Medium-Type       : 6, 1
Tunnel-Private-Group-ID  : 10

```

switch# **show aaa troubleshoot test-server status**

```

Test Run ID              : 2
Test Start Time          : Mon Jul 22 14:15:54 UTC 2024
AAA Server               : 10.10.10.10:1812/my-vrf
Authentication Type      : pap
Test Username/Password   : test-
user/AQBapdxySvGPvdTlkYn1/naKX403jKHrm28xLYfO6mLOK499BwAAAHdJp/bL4FE=
Test Status              : Completed
Server Response          : Access-Accept

```

RADIUS Attributes

```

-----
User-Name                : Student
Filter-ID                : DHCP, WebServices-Student, DataCenter-Student,
                          RemoteAccess-Student, Printer-Student
Framed-MTU               : 1500 bytes
Session-Timeout          : 500 seconds
Idle-Timeout             : 200 seconds
Termination-Action       : RADIUS-Request
Egress-VLAN-ID           : 10(t), 15(t), 20(u)
Egress-VLAN-Name         : VLAN100(t), VLAN200(u)
Tunnel-Type              : 13
Tunnel-Medium-Type       : 6
Tunnel-Private-Group-ID  : 20
NAS-Filter-Rule           : permit in 17 from any to any
                          deny in tcp from any to 10.10.10.3/8
Aruba-Captive-Portal-URL :
http://arubanetworks.com/student/captiveportal.php
Aruba-PoE-Priority       : Low
Aruba-Port-Auth-Mode     : client-mode
Aruba-NAS-Filter-Rule    : deny in icmp from 10.10.10.1 to any 27
Aruba-QoS-Trust-Mode     : dscp
Aruba-UBT-Gateway-Role   : gateway_student_role
Aruba-Gateway-Zone       : student_zone
Aruba-STP-Admin-Edge-Port : false
Aruba-UBT-Gateway-CPPM-Role : ubt_gateway_cppm_student_role
Aruba-Device-Traffic-Class : data
Aruba-PVLAN-Port-Type    : secondary
Aruba-PoE-Allocate-By-Method : class

```

```

Test Run ID              : 3
Test Start Time          : Mon Jul 22 14:15:54 UTC 2024
AAA Server               : test:1234/red tls
Authentication Type      : pap
Test Username/Password   : test-
user/AQBapdxySvGPvdTlkYn1/naKX403jKHrm28xLYfO6mLOK499BwAAAHdJp/bL4FE=
Test Status              : Completed
Server Response          : Access-Accept

```

RADIUS Attributes

```

-----
User-Name                : Student
Filter-ID                : DHCP, WebServices-Student, DataCenter-Student,
                          RemoteAccess-Student, Printer-Student
Framed-MTU               : 1500 bytes
Session-Timeout          : 500 seconds
Tunnel-Type              : 13, 1
Tunnel-Medium-Type       : 6, 1
Tunnel-Private-Group-ID  : 10

```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---------------------|
| 10.15 | Command Introduced. |

Command Information

| Platforms | Command context | Authority |
|------------------------|-----------------------------|--|
| 8325
8325H
10000 | Operator (>) or Manager (#) | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

show accounting log

```
show accounting log [last <QTY-TO-SHOW> | all]
```

Description

Entered without optional parameters, this command shows all accounting log records for the current boot. Sensitive information is masked from the log, by being represented as asterisks.



This **show accounting log** command replaces the **show audit-log** command that is supported only in 10.00 releases.

| Parameter | Description |
|--------------------|---|
| last <QTY-TO-SHOW> | Specifies how many most-recent accounting log records to show for the current boot. Range: 1 to 1000. |
| all | Selects for showing, all accounting records from the current boot and the previous boot. |

Usage

The log message starts with the record type, which is specific to AOS-CX. Values are the following:

USER_START

Record of a user login action.

USER_END

Record of a user logout action.

USYS_CONFIG

Record of a command executed by the user.

The three types of accounting log information are identified by the **msg=** element starting with the **rec=** item as follows:

- Exec is identified with: **msg='rec=ACCT_EXEC**
- Command is identified with: **msg='rec=ACCT_CMD**
- System is identified with: **msg='rec=ACCT_SYSTEM**

The user group is indicated by **priv-lvl**, which is specific to AOS-CX. Values are the following:

| Privilege level | User group |
|-----------------|----------------|
| 1 | operators |
| 15 | administrators |
| 19 | auditors |

The value of **service** indicates which user interface was used:

service=shell

Indicates that the log entry is a result of a CLI command.

service=https-server

Indicates that the log entry is a result of a REST API request or a Web UI action.

The string value of **data** identifies the CLI command or REST API request that was executed.

These elements are shown in context under *Examples*.

Examples

Showing the accounting log for the previous and current boot. Line breaks have been added for readability.

```
switch# show accounting log all

-----
Local accounting logs from previous boot
-----
----
type=DAEMON_START msg=audit(Nov 05 2018 23:00:58.607:9057) :
auditd start, ver=2.4.3 format=raw kernel=4.9.119-yocto-standard res=success
----
type=USER_START msg=audit(Nov 05 2018 23:06:42.398:42) :
msg='rec=ACCT_EXEC op=start session=CONSOLE timezone=UTC user=user1 priv-lvl=15
auth-method=LOCAL auth-type=LOCAL service=shell isconfig=no
hostname=8xxx addr=0.0.0.0 res=success'
----
type=USYS_CONFIG msg=audit(Nov 05 2018 23:06:42.399:43) :
msg='rec=ACCT_CMD op=stop session=CONSOLE timezone=UTC user=user1 priv-lvl=15
auth-method=LOCAL auth-type=LOCAL service=shell isconfig=no
data="enable" hostname=8xxx addr=0.0.0.0 res=success'
----
type=USYS_CONFIG msg=audit(Nov 05 2018 23:08:24.693:51) :
msg='rec=ACCT_CMD op=stop session=CONSOLE timezone=UTC user=user1 priv-lvl=1
```

```

auth-method=LOCAL auth-type=LOCAL service=shell isconfig=no
data="configure terminal" hostname=8xxx addr=0.0.0.0 res=success'
----
type=USYS_CONFIG msg=audit(Nov 05 2018 23:08:39.108:52) :
msg='rec=ACCT_CMD op=stop session=CONSOLE timezone=UTC user=user1 priv-lvl=15
auth-method=LOCAL auth-type=LOCAL service=shell isconfig=yes
data="https-server rest access-mode read-write"
hostname=8xxx addr=0.0.0.0 res=success'
----
type=USER_START msg=audit(Nov 05 2018 23:10:57.238:58) :
msg='rec=ACCT_EXEC op=start session=REST timezone=UTC user=admin priv-lvl=15
auth-method=LOCAL auth-type=LOCAL service=https-server
data="http-method=POST http-uri=/rest/v1/login"
hostname=8xxx addr=127.0.0.1 res=success'
----
type=USYS_CONFIG msg=audit(Nov 05 2018 23:15:11.958:75) :
msg='rec=ACCT_CMD op=stop session=CONSOLE timezone=UTC user=user1 priv-lvl=15
auth-method=LOCAL auth-type=LOCAL service=shell isconfig=yes
data="tacacs-server host 2.2.2.2" hostname=8xxx addr=0.0.0.0 res=success'
----
type=USYS_CONFIG msg=audit(Nov 05 2018 23:15:37.090:76) :
msg='rec=ACCT_CMD op=stop session=REST timezone=UTC user=admin priv-lvl=15
auth-method=LOCAL auth-type=LOCAL service=https-server
data="http-method=GET http-uri=/rest/v1/system/vrfs/mgmt/tacacs_servers"
hostname=8xxx addr=127.0.0.1 res=success'
----
type=USER_END msg=audit(Nov 05 2018 23:26:59.207:90) :
msg='rec=ACCT_EXEC op=stop session=REST timezone=UTC user=admin priv-lvl=15
auth-method=LOCAL auth-type=LOCAL service=https-server
data="http-method=POST http-uri=/rest/v1/logout"
hostname=8xxx addr=127.0.0.1 res=success'
----
type=USER_END msg=audit(Nov 05 2018 23:27:49.164:93) :
msg='rec=ACCT_EXEC op=stop session=CONSOLE timezone=UTC user=user1 priv-lvl=15
auth-method=LOCAL auth-type=LOCAL service=shell isconfig=no
hostname=8xxx addr=0.0.0.0 res=success'

-----
Local accounting logs from current boot
-----
----
type=DAEMON_START msg=audit(Nov 05 2018 23:32:05.642:626) :
auditd start, ver=2.4.3 format=raw kernel=4.9.119-yocto-standard res=success
----
type=USER_START msg=audit(Nov 05 2018 23:35:52.915:11) :
msg='rec=ACCT_EXEC op=start session=CONSOLE timezone=UTC user=admin priv-lvl=15
auth-method=LOCAL auth-type=LOCAL service=shell isconfig=no
hostname=8xxx addr=0.0.0.0 res=success'
----
type=USYS_CONFIG msg=audit(Nov 05 2018 23:35:52.917:12) :
msg='rec=ACCT_CMD op=stop session=CONSOLE timezone=UTC user=admin priv-lvl=15
auth-method=LOCAL auth-type=LOCAL service=shell isconfig=no data="enable"
hostname=8xxx addr=0.0.0.0 res=success'

```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------------|--------------|
| 10.07 or earlier | -- |

Command Information

| Platforms | Command context | Authority |
|---------------|----------------------------------|--|
| All platforms | Manager (#) or Auditor (auditor) | Auditors or Administrators or local user group members with execution rights for this command. Auditors can execute this command from the auditor context (auditor>) only. |

show radius-server

```
show radius-server [detail] [vsx-peer]
```

Description

Shows configured RADIUS servers information.

| Parameter | Description |
|-----------|--|
| detail | Selects additional RADIUS server details and global parameters for showing. |
| vsx-peer | Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX. |

Usage

- When the **show radius-server** command shows **None** for the shared-secret, the passkey is missing.
- The **Tracking-Last-Attempted** and **Next-Tracking-Request** fields are applicable only when the RADIUS server tracking method is **access-request**.
- The **TLS Connection Status** section of the output of the **show radius-server detail** command displays the connection status of the TLS connection created for port-access (network client) authentication. If no port-access related configuration is present, the TLS Connection Status field displays a status of **N/A**.

Examples

Showing a summary of the global RADIUS configuration:

```
switch# show radius-server
***** Global RADIUS Configuration *****

Shared-Secret:<password>
Timeout: 60
Auth-Type: pap
Retries: 5
TLS Timeout: 60
Tracking Time Interval (seconds): 60
Tracking Retries: 5
```



```
Tracking User-name: radius-tracking-user
Tracking Password: None
Number of Servers: 1
```

| SERVER NAME | TLS | PORT | VRF |
|---|-----|------|----------|
| 20.1.1.129 | | 1812 | default |
| 1.1.1.4 | | 1812 | mgmt |
| 1.1.1.5 | | 12 | mgmt |
| abc1.com | | 32 | mgmt |
| 2001:0db8:85a3:0000:0000:8a2e:0371:7334 | | 1812 | default |
| 1.1.1.6 | | 32 | vrf_red |
| 1.1.1.7 | | 32 | vrf_blue |

Showing a summary of a RADIUS server when the status server time interval is configured:

```
switch# show radius-server
Unreachable servers are preceded by *
***** Global RADIUS Configuration *****
```

```
Shared-Secret: None
Timeout: 5
Auth-Type: pap
Retries: 1
TLS Timeout: 5
Tracking Time Interval (seconds): 300
Tracking Retries: 1
Tracking User-name: radius-tracking-user
Tracking Password: None
Status-Server Time Interval (seconds): 400
Number of Servers: 2
```

| SERVER NAME | TLS | PORT | VRF |
|-------------|-----|------|---------|
| 1.1.1.1 | Yes | 2083 | default |
| 2.2.2.2 | | 1812 | default |

Showing details of a global RADIUS configuration:

```
switch# show radius-server detail
***** Global RADIUS Configuration *****
```

```
Shared-Secret: ***
Timeout: 5
Auth-Type: pap
Retries: 5
TLS Timeout: 60
Tracking Time Interval (seconds): 60
Tracking Retries: 5
Tracking User-name: radius-tracking-user
Tracking Password: None
Number of Servers: 1
```

```
***** RADIUS Server Information *****
Server-Name      : 20.1.1.129
Auth-Port        : 1812
```

```

Accounting-Port      : 1813
VRF                  : default
TLS Enabled          : No
Shared-Secret        : None
Timeout              : 60
Retries              : 5
Auth-Type            : pap
Server-Group:Priority : radius:1
Tracking             : disabled
Tracking-Mode        : any
Reachability-Status  : N/A
ClearPass-Username   :
ClearPass-Password   : None

```

Showing details of a RADIUS server when the per-server shared key and the global RADIUS shared key are not set:

```

switch# show radius-server detail
***** Global RADIUS Configuration *****

Shared-Secret: None
Timeout: 5
Auth-Type: pap
Retries: 1
TLS Timeout : 5
Number of Servers: 1

***** RADIUS Server Information *****
Server-Name           : 1.1.1.1
Auth-Port             : 2083
VRF                   : default
Shared-Secret (default) : None
Timeout (default)     : 5
Retries (default)     : 1
Auth-Type (default)   : pap
Server-Group:Priority  : radius:1
Default-Priority       : 1

```

Showing details of a RADIUS server with TLS:

```

switch# show radius-server detail
***** Global RADIUS Configuration *****

Shared-Secret: None
Timeout: 5
Auth-Type: pap
Retries: 1
TLS Timeout: 5
TLS Connection Timeout: 5
TLS Connection Retries: 1
Tracking Time Interval (seconds): 60
Tracking Retries: 1
Tracking User-name: jim
Tracking Password: ***
Number of Servers: 1

***** RADIUS Server Information *****
Server-Name           : 172.20.30.30
Auth-Port             : 2083

```

```

Accounting-Port      : 2083
VRF                  : default
TLS Enabled          : Yes
TLS Connection Timeout (default): 5
TLS Connection Retries (default): 1
TLS Connection Status : tls_connection_established
Timeout (default)    : 5
Auth-Type (default)  : pap
Server-Group:Priority : radius:1
Tracking              : enabled
Tracking-Mode         : any
Reachability-Status   : reachable
ClearPass-Username    : admin
ClearPass-Password    : ***

```

Showing details of a RADIUS server when the **status-server** tracking method is configured:

```

switch# show radius-server detail
***** Global RADIUS Configuration *****

Shared-Secret: None
Timeout: 5
Auth-Type: pap
Retries: 1
TLS Timeout: 5
Tracking Time Interval (seconds): 300
Tracking Retries: 1
Tracking User-name: radius-tracking-user
Tracking Password: None
Status-Server Time Interval (seconds)      : 600
Number of Servers: 1

***** RADIUS Server Information *****
Server-Name                               : 2.2.2.2
Auth-Port                                  : 2083
Accounting-Port                            : 2083
VRF                                          : default
TLS Enabled                                : Yes
TLS Connection Status                      : tls_connection_established
Timeout                                    : 5
Auth-Type                                  : pap
Server-Group:Priority                      : radius:1
Default-Priority                           : 1
ClearPass-Username                         : 
ClearPass-Password                         : None
Tracking                                   : disabled
Tracking-Mode                              : any
Tracking-Method                            : status-server
Reachability-Status                        : unknown
Tracking-Last-Attempted                    : N/A
Next-Tracking-Request                      : N/A
Port-Access session                        : status-server

```

Showing details of a RADIUS server when the **keep-alive** tracking method is configured:

```

switch# show radius-server detail
***** Global RADIUS Configuration *****

Shared-Secret: None

```

```

Timeout: 5
Auth-Type: pap
Retries: 1
TLS Timeout: 5
Tracking Time Interval (seconds): 300
Tracking Retries: 1
Tracking User-name: radius-tracking-user
Tracking Password: None
Status-Server Time Interval (seconds)      : 400
Number of Servers: 1

***** RADIUS Server Information *****
Server-Name                               : 1.1.1.1
Auth-Port                                 : 2083
Accounting-Port                           : 2083
VRF                                        : default
TLS Enabled                               : Yes
TLS Connection Status                     : tcp_connection_failed
Timeout                                   : 5
Auth-Type                                 : pap
Server-Group:Priority                     : radius:1
ClearPass-Username                        :
ClearPass-Password                        : None
Tracking                                  : disabled
Tracking-Mode                             : any
Tracking-Method                           : keep-alive
Reachability-Status                       : unknown
Tracking-Last-Attempted                   : N/A
Next-Tracking-Request                     : N/A
Port-Access session                       : status-server

```

Showing details of a RADIUS server when the **access-request** tracking method is configured:

```

switch# show radius-server detail
***** Global RADIUS Configuration *****

Shared-Secret: None
Timeout: 5
Auth-Type: pap
Retries: 1
TLS Timeout: 5
Tracking Time Interval (seconds): 300
Tracking Retries: 1
Tracking User-name: radius-tracking-user
Tracking Password: None
Status-Server Time Interval (seconds)      : 500
Number of Servers: 1

***** RADIUS Server Information *****
Server-Name                               : 4.4.4.4
Auth-Port                                 : 2083
Accounting-Port                           : 2083
VRF                                        : default
TLS Enabled                               : Yes
TLS Connection Status                     : tcp_connection_failed
Timeout                                   : 5
Auth-Type                                 : pap
Server-Group:Priority                     : radius:1
ClearPass-Username                        :
ClearPass-Password                        : None
Tracking                                  : disabled

```

```

Tracking-Mode                : any
Tracking-Method              : access-request
Reachability-Status          : unknown
Tracking-Last-Attempted      : N/A
Next-Tracking-Request        : N/A
Port-Access session          : keep-alive

```

Showing details of a RADIUS server when the server group is configured:

```

switch# show radius-server detail
***** Global RADIUS Configuration *****

Shared-Secret: None
Timeout: 10
Auth-Type: pap
Retries: 5
TLS Timeout: 5
Tracking Time Interval (seconds): 60
Tracking Retries: 5
Tracking User-name: radius
Tracking Password: None
Status-Server Time Interval (seconds): 300
Number of Servers: 12
AAA Server Status Trap: Enabled

***** RADIUS Server Information *****
Server-Name                  : cppm2.cxsecurity.com
Auth-Port                    : 1812
Accounting-Port              : 1813
VRF                          : sss
TLS Enabled                  : No
Shared-Secret                : ***
Timeout                      : 10
Retries                      : 5
Auth-Type                    : pap
Server-Group:Priority        : RG1:1, RG2:1, RG3:1, RG4:1
ClearPass-Username           :
ClearPass-Password           : None
Tracking                     : enabled
Tracking-Mode                : any
Reachability-Status          : reachable, Since Tue Mar 14 19:58:45 UTC 2023
Tracking-Last-Attempted      : Thu Mar 16 10:23:46 UTC 2023
Next-Tracking-Request        : 36 seconds

```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------------|--------------|
| 10.07 or earlier | -- |

Command Information

| Platforms | Command context | Authority |
|---------------|-----------------------------|--|
| All platforms | Operator (>) or Manager (#) | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

show radius-server secure ipsec

```
show radius-server secure ipsec { server-list | host {<FQDN> | <IPv4> | <IPv6>}
[port <PORT-NUMBER>] [vrf <VRF-NAME>] [vsx-peer] }
```

Description

Shows information for one or all RADIUS servers configured with IPsec.

| Parameter | Description |
|----------------------------|--|
| server-list | Selects all servers for showing. |
| {<FQDN> <IPv4> <IPv6>} | Specifies the RADIUS server as: <ul style="list-style-type: none"> ▪ <FQDN>: a fully qualified domain name. ▪ <IPv4>: an IPv4 address. ▪ <IPv6>: an IPv6 address. |
| port <PORT-NUMBER> | Specifies the authentication port number. Range: 1 to 65535. Default: 1812. |
| vrf <VRF-NAME> | Specifies the VRF name to be used for communicating with the server. If no VRF name is provided, the default VRF named default is used. |
| vsx-peer | Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX. |

Usage

The IPsec key is shown in an exportable ciphertext format.

Examples

Showing information for RADIUS server 1.1.1.1 secured with IPsec:

```
switch# show radius-server secure ipsec host 1.1.1.1
IPsec                : enabled
Protocol              : ESP
Authentication        : MD5
Encryption            : AES
SPI                  : 1234
```

Showing information for all RADIUS servers secured with IPsec:

```
switch# show radius-server secure ipsec server-list
Server               : 1.1.1.1
```

```
IPsec          : enabled
Protocol       : ESP
Authentication  : MD5
Encryption     : AES
SPI            : 1234

Server        : 1.1.1.2
IPsec         : enabled
Protocol       : ESP
Authentication  : MD5
Encryption     : AES
SPI           : 12341
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------------|--------------|
| 10.07 or earlier | -- |

Command Information

| Platforms | Command context | Authority |
|--------------|-----------------------------|--|
| All platorms | Operator (>) or Manager (#) | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

show radius-server authentication statistics

```
show radius-server statistics authentication [vsx-peer]
```

Description

Shows authentication statistics for all configured RADIUS servers.

| Parameter | Description |
|-----------|--|
| vsx-peer | Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX. |

Examples

Showing RADIUS server authentication statistics:

```
switch# show radius-server statistics authentication
Server Name      : rad1
Auth-Port        : 1812
```

```

Accounting-Port : 1813
VRF              : mgmt
TLS Enabled      : Yes

Authentication Statistics
-----
Round Trip Time      : 100
Pending Requests     : 0
Timeouts             : 6
Bad Authenticators   : 2
Packets Dropped      : 0
Access Requests      : 20
Access Challenge     : 8
Access Accepts       : 14
Access Rejects       : 0
Access Response Malformed : 0
Access Retransmits   : 0
Tracking Requests    : 5
Tracking Responses   : 5
Unknown Response Code : 0

```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------------|--------------|
| 10.07 or earlier | -- |

Command Information

| Platforms | Command context | Authority |
|--|-----------------------------|--|
| 8320
8325
8325H
8325P
8400
9300
9300S
10000 | Operator (>) or Manager (#) | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

show radius-server authentication statistics host

```

show radius-server statistics authentication host {<FQDN> | <IPV4> | <IPV6>}
[tls] [port <PORT-NUMBER>] [vrf <VRF-NAME>] [vsx-peer]

```

Description

Shows authentication statistics for the specified RADIUS server.

| Parameter | Description |
|----------------------------|---------------------------------|
| {<FQDN> <IPV4> <IPV6>} | Specifies the RADIUS server as: |

| Parameter | Description |
|--------------------|--|
| | <ul style="list-style-type: none"> ▪ <FQDN>: a fully qualified domain name. ▪ <IPv4>: an IPv4 address. ▪ <IPv6>: an IPv6 address. |
| tls | Selects TLS. |
| port <PORT-NUMBER> | Specifies the authentication port number. Range: 1 to 65535. Default: 1812. |
| vrf <VRF-NAME> | Specifies the VRF name to be used for communicating with the server. If no VRF name is provided, the default VRF named default is used. |
| vsx-peer | Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX. |

Examples

Showing RADIUS server authentication statistics:

```
switch# show radius-server statistics authentication host 20.1.1.49
Server Name       : 20.1.1.49
Auth-Port        : 2083
Accounting-Port   : 2083
VRF               : default
TLS Enabled      : No

Authentication Statistics
-----
Round Trip Time   : 3
Pending Requests  : 0
Timeouts          : 0
Bad Authenticators : 0
Packets Dropped   : 0
Access Requests   : 13
Access challenge   : 6
Access Accepts    : 3
Access Rejects    : 4
Access Response Malformed : 0
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------------|--------------|
| 10.07 or earlier | -- |

Command Information

| Platforms | Command context | Authority |
|--|-----------------------------|--|
| 8320
8325
8325H
8325P
8400
9300
9300S
10000 | Operator (>) or Manager (#) | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

show tacacs-server

`show tacacs-server [detail] [vsx-peer]`

Description

Shows the configured TACACS+ servers.

| Parameter | Description |
|-----------|--|
| detail | Selects additional TACACS+ server details and global parameters for showing. |
| vsx-peer | Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX. |

Examples

Showing a summary of a global TACACS+ configuration with a shared-secret:

```
switch# show tacacs-server
***** Global TACACS+ Configuration *****

Shared-Secret: AQBapb+HsdpqVlQ3CPCBMQTG8e1cA+CyD0RvfbeA8BEgikCgAAAJOWZSNzA2SWrLA=
Timeout: 5
Auth-Type: pap
Number of Servers: 5

-----
SERVER NAME                               | PORT | VRF
-----
1.1.1.1                                   | 49    | mgmt
1.1.1.2                                   | 12    | mgmt
abc.com                                   | 32    | vrf_blue
2001:0db8:85a3:0000:0000:8a2e:0370:7334 | 49    | default
1.1.1.3                                   | 32    | vrf_red
-----
```

Showing details of a global TACACS+ configuration:

```
switch# show tacacs-server detail
***** Global TACACS+ Configuration *****
```

```
Shared-Secret: AQBapb+HsdpqVlQ3CPCBMQTG8e1cA+CyD0RvfbeA8BEgikCgAAAJOWZSNzA2SWrLA=
Timeout: 5
Auth-Type: pap
Number of Servers: 5
```

***** TACACS+ Server Information *****

```
Server-Name          : 1.1.1.2
Auth-Port            : 12
VRF                  : mgmt
Shared-Secret (default) : AQBapb+HsdpqVlQ3CPCBMQTG8eeA8BEgikCgAAAJOWZSNzA2SWrLA=
Timeout (default)    : 5
Auth-Type (default)  : pap
Server-Group         : sg1
Group-Priority       : 1
```

```
Server-Name          : 2001:0db8:85a3:0000:0000:8a2e:0370:7334
Auth-Port            : 49
VRF                  : default
Shared-Secret (default) : AQBapb+HsdpqVlQ3CPCBMQTG8eeA8BEgikCgAAAJOWZSNzA2SWrLA=
Timeout (default)    : 5
Auth-Type (default)  : pap
Server-Group         : sg2
Group-Priority       : 1
```

```
Server-Name          : 1.1.1.1
Auth-Port            : 49
VRF                  : mgmt
Shared-Secret (default) : AQBapb+HsdpqVlQ3CPCBMQTG8eeA8BEgikCgAAAJOWZSNzA2SWrLA=
Timeout (default)    : 5
Auth-Type (default)  : pap
Server-Group (default) : tacacs
Default-Priority     : 1
```

```
Server-Name          : abc.com
Auth-Port            : 32
VRF                  : vrf_red
Shared-Secret (default) : AQBapb+HsdpqVlQ3CPCBMQTG8eeA8BEgikCgAAAJOWZSNzA2SWrLA=
Timeout              : 15
Auth-Type (default)  : pap
Server-Group (default) : tacacs
Default-Priority     : 3
```

```
Server-Name          : 1.1.1.3
Auth-Port            : 32
VRF                  : vrf_blue
Shared-Secret        : AQBapfnqbSswqKC476tdUFZ+AncIRY92hDTYkQCAAAAFEaHn43vNC
Timeout              : 15
Auth-Type            : chap
Server-Group (default) : tacacs
Default-Priority     : 5
```

Showing TACACS+ server when per-server shared key and global TACACS+ shared key is not set:

```
switch# show tacacs-server
***** Global TACACS+ Configuration *****

Shared-Secret: None
Timeout: 5
Auth-Type: pap
Number of Servers: 1
```

| SERVER NAME | PORT | VRF |
|-------------|------|---------|
| 1.1.1.1 | 49 | default |

Showing TACACS+ server details when per-server shared key and global TACACS+ shared key is not set:

```
switch# show tacacs-server detail
***** Global TACACS+ Configuration *****

Shared-Secret: None
Timeout: 5
Auth-Type: pap
Number of Servers: 1

***** TACACS+ Server Information *****
Server-Name           : 1.1.1.1
Auth-Port             : 49
VRF                   : default
Shared-Secret (default) : None
Timeout (default)     : 5
Auth-Type (default)   : pap
Server-Group (default) : tacacs
Default-Priority       : 1
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------------|--------------|
| 10.07 or earlier | -- |

Command Information

| Platforms | Command context | Authority |
|---------------|-----------------------------|--|
| All platforms | Operator (>) or Manager (#) | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

show tacacs-server statistics

```
show tacacs-server statistics [vsx-peer]
```

Description

Shows authentication statistics for all configured TACACS+ servers.

| Parameter | Description |
|-----------|--|
| vsx-peer | Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX. |

Examples

Showing TACACS+ server authentication statistics:

```
switch# show tacacs-server statistics
Server Name      : tac1
Auth-Port       : 49
VRF              : mgmt
Authentication Statistics
-----
Round Trip Time      : 1
Pending Requests    : 0
Timeout             : 0
Unknown Types       : 0
Packet Dropped      : 0
Auth Start          : 8
Auth challenge       : 0
Auth Accepts        : 4
Auth Rejects        : 4
Auth reply malformed : 0
Tracking Requests   : 0
Tracking Responses   : 0
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------------|--------------|
| 10.07 or earlier | -- |

Command Information

| Platforms | Command context | Authority |
|---------------|-----------------------------|--|
| All platforms | Operator (>) or Manager (#) | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

show tech aaa

show tech aaa

Description

Shows the AAA configuration settings.

Example

Showing the AAA configuration settings:

```
switch# show tech aaa
```

```
=====
Show Tech executed on Tue Feb 14 02:19:11 2017
=====
```

```
[Begin] Feature aaa
=====
```

```
*****
Command : show aaa authentication
*****
```

```
AAA Authentication:
  Fail-through           : Enabled
  Limit Login Attempts    : Not set
  Lockout Time           : 300
  Minimum Password Length : Not set
```

```
Authentication for ssh channel:
```

```
-----
GROUP NAME | GROUP PRIORITY
-----
local      | 0
-----
```

```
Authentication for https-server channel:
```

```
-----
GROUP NAME | GROUP PRIORITY
-----
local      | 0
-----
```

```
Authentication for console channel:
```

```
-----
GROUP NAME | GROUP PRIORITY
-----
local      | 0
-----
```

```
Authentication for default channel:
```

```
-----
GROUP NAME | GROUP PRIORITY
-----
tacacs     | 0
local      | 1
-----
```

```
Authentication for telnet channel:
```

```
-----
GROUP NAME | GROUP PRIORITY
-----
local      | 0
-----
```

```
*****
Command : show aaa accounting
*****
```

```
AAA Accounting:
```

```
Accounting for default channel:
```

```

    Accounting Type                               : all
    Accounting Mode                               : start-stop
Default Accounting for login Channels:

```

```

-----
GROUP NAME | GROUP PRIORITY
-----
local      | 0
-----

```

```

Accounting for ssh channel:

```

```

-----
GROUP NAME | GROUP PRIORITY
-----
tacacs     | 0
local      | 1
-----

```

```

Accounting for https-server channel:

```

```

-----
GROUP NAME | GROUP PRIORITY
-----
tacacs     | 0
-----

```

```

Accounting for telnet channel:

```

```

-----
GROUP NAME | GROUP PRIORITY
-----
tacacs     | 0
local      | 1
-----

```

```

*****
Command : show aaa accounting port-access
*****

```

```

AAA Accounting Port Access
=====

```

```

Radius Accounting Enabled      : yes
Radius Server Group           : acct_group
Local Accounting Enabled      : no
Accounting Mode               : start-stop
Interim Update Enabled        : true
Interim Interval              : 12 minutes
Interim Update on-reauth Enabled : true

```

```

*****
Syntax : show aaa accounting port-access interface <IFNAME | all> client-status
[mac <MAC-ADDRESS>]
Command : show aaa accounting port-access interface 1/1/1 client-status
*****

```

```

Port Access Client Status Details

```

```

Client 00:50:56:96:5b:9f, steve
=====

```

```

Session Details
-----

```

```

Port          : 1/1/22
Session Time   : 141s

```

```

IPv4 Address      : 10.0.0.3
IPv6 Address      : 2001::1
                  2001::3

Accounting Details
-----
Accounting Session ID : 1584556574841
Input Packets         : 265
Input Octets          : 28348
Output Packets        : 341
Output Octets         : 37761
Input Gigaword        : 0
Output Gigaword       : 0
...

...

#### No aaa clients

When there are no port-access accounting sessions:
...

switch# show aaa accounting port-access interface all client-status
Port-access accounting sessions not found.

switch# show aaa accounting port-access interface 1/1/2 client-status
Port-access accounting sessions not found.

switch# show aaa accounting port-access interface 1/1/2 client-status mac
6e:93:79:d9:cb:ee
Port-access accounting sessions not found.
...

*****
Syntax   : show accounting log {all | port-access}
Command  : show accounting log port-access
*****
Command to display the Local accounting logs for the network user.
...

-----
May 29 2018 20:29:03.714:53 'acct-id=56789453 type=network user=NWUSER auth-
method=dot1x auth-type=radius rec=ACCT_START mac=00:0d:6a:4f:2a:44 input-pkt=0
ouput-pkt=0 input-octet=0 output-octets=0'
-----
May 29 2018 20:30:03.714:53 'acct-id=56789453 type=network user=NWUSER auth-
method=dot1x auth-type=radius rec=ACCT_INTRM mac=00:0d:6a:4f:2a:44 input-pkt=2
ouput-pkt=30 input-octet=20 output-octets=50'
-----
May 29 2018 24:29:03.714:53 'acct-id=56789453 type=network user=NWUSER auth-
method=dot1x auth-type=radius rec=ACCT_STOP mac=00:0d:6a:4f:2a:44 input-pkt=20
ouput-pkt=300 input-octet=200 output-octets=500'
-----
May 29 2018 20:29:03.714:53 'acct-id=56789453 type=network user=NWUSER aauth-
method=macauth auth-type=local rec=ACCT_START mac=00:0d:6a:4f:2a:44 input-pkt=0
ouput-pkt=0 input-octet=0 output-octets=0'
-----
...

*****
Syntax   : show radius-server statistics {authentication | accounting}
*****

```



```

*****
Command : show radius-server statistics authentication
*****
...

Server Name       : 2.2.2.2
Auth-Port        : 1812
Accounting-Port  : 1813
VRF              : mgmt

Authentication Statistics
-----
Round Trip Time   : 100
Pending Requests  : 0
Timeouts         : 6
Bad Authenticators : 2
Packets Dropped   : 0
Access Requests   : 20
Access Challenge  : 8
Access Accepts    : 14
Access Rejects    : 0
Access Response Malformed : 0
Access Retransmits : 0
Tracking Requests : 5
Tracking Responses : 5
Unknown Response Code : 0
...

*****
Command : show radius-server statistics accounting
*****
...

Server Name       : 2.2.2.2
Auth-Port        : 1812
Accounting-Port  : 1813
VRF              : mgmt

Accounting Statistics
-----
Round Trip Time   : 100
Pending Requests  : 0
Timeouts         : 5
Bad Authenticators : 1
Packets Dropped   : 0
Accounting Requests : 15
Accounting Responses : 10
Accounting Response Malformed : 0
Accounting Retransmits : 0
Unknown Response Code : 0
...

*****
Command : show aaa authorization
*****

Authorization for default channel:
-----
GROUP NAME          | GROUP PRIORITY
-----
local               | 0
-----

Authorization for console channel:
-----

```

| GROUP NAME | GROUP PRIORITY |
|------------|----------------|
| local | 0 |

| | |
|-------|---|
| local | 0 |
|-------|---|

Authorization for ssh channel:

| GROUP NAME | GROUP PRIORITY |
|------------|----------------|
| tacacs | 0 |
| local | 1 |

| | |
|--------|---|
| tacacs | 0 |
|--------|---|

| | |
|-------|---|
| local | 1 |
|-------|---|

Authorization for telnet channel:

| GROUP NAME | GROUP PRIORITY |
|------------|----------------|
| tacacs | 0 |
| local | 1 |

| | |
|--------|---|
| tacacs | 0 |
|--------|---|

| | |
|-------|---|
| local | 1 |
|-------|---|

Command : show aaa server-groups

***** AAA Mechanism TACACS+ *****

| GROUP NAME | SERVER NAME | PORT | PRIORITY | VRF |
|------------|-------------|------|----------|-----|
| tacacs | 1.1.1.1 | 49 | 1 | |
| mgmt | | | | |

| | | | | |
|--------|---------|----|---|--|
| tacacs | 1.1.1.1 | 49 | 1 | |
|--------|---------|----|---|--|

| | | | | |
|------|--|--|--|--|
| mgmt | | | | |
|------|--|--|--|--|

***** AAA Mechanism RADIUS *****

| GROUP NAME | SERVER NAME | PORT | PRIORITY | VRF |
|------------|-------------|------|----------|-----|
|------------|-------------|------|----------|-----|

Command : show tacacs-server detail

***** Global TACACS+ Configuration *****

Shared-Secret: AQBapb+HsdpqVlQ3CPCBMQTG8ekK1c...fbeA8BEgikCgAAAJOWZSNzA2SWrLA=

Timeout: 5

Auth-Type: pap

Tracking Time Interval (seconds): 300

Tracking User-name: tacacs-tracking-user

Tracking Password: None

Number of Servers: 1

***** TACACS+ Server Information *****

Server-Name : 1.1.1.1

Auth-Port : 49

VRF : mgmt

Shared-Secret : AQBapfiTREwB7yUKCdmOMT0f...9j2AUx1GAAAF2MkfMTojqX

```

Timeout                : 5
Auth-Type              : pap
Server-Group           : tacacs
Default-Priority        : 1
Tracking               : disabled
Reachability-Status     : N/A

*****
Command : show radius-server detail
*****
***** Global RADIUS Configuration *****

Shared-Secret: AQBapb+HsdpqVlQ3CPCBMQTG8ekK1cA+Cy...8BEgikCgAAAJOWZSNzA2SWrLA=
Timeout: 5
Auth-Type: pap
Retries: 1
Number of Servers: 0

=====
[End] Feature aaa
=====

=====
Show Tech commands executed successfully
=====

```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------------|--------------|
| 10.07 or earlier | -- |

Command Information

| Platforms | Command context | Authority |
|---------------|-----------------|--|
| All platforms | Manager (#) | Administrators or local user group members with execution rights for this command. |

tacacs-server auth-type

```

tacacs-server auth-type {pap | chap}
no tacacs-server auth-type [pap | chap]

```

Description

Enables the CHAP or PAP authentication protocol, which is used for communication with the TACACS+ servers, at the global level. You can override this command with a fine-grained per server **auth-type** configuration.

The **no** form of this command resets the global authentication mechanism for TACACS+ to PAP, which is the default authentication mechanism for TACACS+.

| Parameter | Description |
|------------------------|---|
| auth-type {pap chap} | Selects either the PAP or CHAP authentication protocol. |

Examples

Enabling command for CHAP authentication:

```
switch(config)# tacacs-server auth-type chap
```

Enabling command for PAP authentication:

```
switch(config)# tacacs-server auth-type pap
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------------|--------------|
| 10.07 or earlier | -- |

Command Information

| Platforms | Command context | Authority |
|---------------|-----------------|--|
| All platforms | config | Administrators or local user group members with execution rights for this command. |

tacacs-server host

```
tacacs-server host {<FQDN> | <IPV4> | <IPV6>}
    [key [plaintext <PASSKEY> | ciphertext <PASSKEY>]]
    [timeout <TIMEOUT-SECONDS>] [port <PORT-NUMBER>]
    [auth-type {pap | chap}] [tracking {enable | disable}] [vrf <VRF-NAME>]
```

```
no tacacs-server host {<FQDN> | <IPV4> | <IPV6>}
    [key [plaintext <PASSKEY> | ciphertext <PASSKEY>]]
    [timeout <TIMEOUT-SECONDS>] [port <PORT-NUMBER>]
    [auth-type {pap | chap}] [tracking {enable | disable}] [vrf <VRF-NAME>]
```

Description

Adds a TACACS+ server. By default, the TACACS+ server is associated with the server group named **tacacs**.

The **no** form of this command removes a previously added TACACS+ server.

| Parameter | Description |
|---|---|
| <code>{<FQDN> <IPv4> <IPv6>}</code> | Specifies the TACACS+ server as: <ul style="list-style-type: none"> ▪ <code><FQDN></code>: a fully qualified domain name. ▪ <code><IPv4></code>: an IPv4 address. ▪ <code><IPv6></code>: an IPv6 address. |
| <code>key [plaintext <PASSKEY> ciphertext <PASSKEY>]</code> | <p>Selects either a plaintext or an encrypted local shared-secret passkey for the server. As per RFC 2865, shared-secret can be a mix of alphanumeric and special characters. Plaintext passkeys are between 1 and 32 alphanumeric and special characters.</p> <p>NOTE: When key is entered without either sub-parameter, plaintext passkey prompting occurs upon pressing Enter. Enter must be pressed immediately after the key parameter without entering other parameters. The entered passkey characters are masked with asterisks. When key is omitted, the server uses the global passkey. This command requires either the global or local passkey to be set; otherwise the server will not be contacted. Command tacacs-server key is available for setting the global passkey.</p> |
| <code>timeout <TIMEOUT-SECONDS></code> | Specifies the timeout. Range: 1 to 60 seconds. Default : 5 seconds. |
| <code>port <PORT-NUMBER></code> | Specifies the TCP authentication port number. Range: 1 to 65535. Default: 49. |
| <code>auth-type {pap chap}</code> | Selects either the PAP (the default) or CHAP authentication types. If this parameter is not specified, the TACACS+ global default is used. |
| <code>tracking {enable disable}</code> | <p>Enables or disables server tracking for the RADIUS server. Tracked servers are probed at the start of each server tracking interval to check if they are reachable.</p> <p>Use command tacacs-server tracking to configure TACACS+ server tracking globally.</p> |
| <code>vrf <VRF-NAME></code> | Specifies the VRF name to be used for communicating with the server. If no VRF name is provided, the default VRF named default is used. |

Usage

If the fully qualified domain name is provided for the TACACS+ server, a DNS server must be configured and accessible through the same VRF which is configured for the TACACS+ server. This configuration is required for the resolution of the TACACS+ server hostname to its IP address. If a DNS server is not available for this VRF, the TACACS+ servers reachable through this VRF must be configured by means of their IP addresses only.

Examples

Adding a TACACS+ server with an IPv4 address, plaintext passkey, timeout, port, authentication type, and VRF name:

```
switch(config)# tacacs-server host 1.1.1.3 key plaintext test-123 timeout 15 port
32 auth-type chap vrf vrf_red
```

Adding a TACACS+ server with an IPv4 address and prompted plaintext passkey:

```
switch(config)# tacacs-server host 1.1.1.5 key
Enter the TACACS server key: *****
Re-Enter the TACACS server key: *****
```

Adding a TACACS+ server with an IPv4 address and a named VRF:

```
switch(config)# tacacs-server host 1.1.1.1 vrf mgmt
```

Adding a TACACS+ server with an IPv4 address, a port, and a named VRF:

```
switch(config)# tacacs-server host 1.1.1.2 port 32 vrf mgmt
```

Adding a TACACS+ server with an FQDN, a timeout, port number, and a named VRF:

```
switch(config)# tacacs-server host abc.com timeout 15 port 32 vrf vrf_blue
```

Adding a TACACS+ server with an IPv6 address:

```
switch(config)# tacacs-server host 2001:0db8:85a3:0000:0000:8a2e:0370:7334
```

Deleting a TACACS+ server with an IPv4 address and specified VRF:

```
switch(config)# no tacacs-server host 1.1.1.1 vrf mgmt
```

Deleting a TACACS+ server with an FQDN, port, and specified VRF:

```
switch(config)# no tacacs-server host abc.com port 32 vrf vrf_blue
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------------|--------------|
| 10.07 or earlier | -- |

Command Information

| Platforms | Command context | Authority |
|---------------|-----------------|--|
| All platforms | config | Administrators or local user group members with execution rights for this command. |

tacacs-server key

tacacs-server key [plaintext <GLOBAL-PASSKEY> | ciphertext <GLOBAL-PASSKEY>]

```
no tacacs-server key [plaintext <GLOBAL-PASSKEY> | ciphertext <GLOBAL-PASSKEY>]
```

Description

Creates or modifies a TACACS+ global passkey. The TACACS+ global passkey is used as a shared-secret for encrypting the communication between all TACACS+ servers and the switch. The TACACS+ global passkey is required for authentication unless local passkeys have been set. By default, the TACACS+ global passkey is empty. If the administrator has not set this key, the switch will not be able to perform TACACS+ authentication. The switch will instead rely on the authentication mechanism configured with **aaa authentication login**.



When this command is entered without parameters, plaintext passkey prompting occurs upon pressing Enter. The entered passkey characters are masked with asterisks.

The **no** form of the command removes the global passkey.

| Parameter | Description |
|-----------------------------|---|
| plaintext <GLOBAL-PASSKEY> | Specifies the TACACS+ global passkey in plaintext format with a length of 1 to 31 characters. As per RFC 2865, a shared-secret can be a mix of alphanumeric and special characters. |
| ciphertext <GLOBAL-PASSKEY> | Specifies the TACACS+ global passkey in encrypted format. |

Examples

Adding the global passkey:

```
switch(config)# tacacs-server key plaintext mypasskey123
```

Adding the global passkey with prompting:

```
switch(config)# tacacs-server key
Enter the TACACS server key: *****
Re-Enter the TACACS server key: *****
```

Removing the global passkey:

```
switch(config)# no tacacs-server key
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------------|--------------|
| 10.07 or earlier | -- |

Command Information

| Platforms | Command context | Authority |
|---------------|-----------------|--|
| All platforms | config | Administrators or local user group members with execution rights for this command. |

tacacs-server timeout

```
tacacs-server timeout [<1-60>]
no tacacs-server timeout [<1-60>]
```

Description

Specifies the number of seconds to wait for a response from the TACACS+ server before trying the next TACACS+ server. If a value is not specified, a default value of 5 seconds is used. You can override this value with a fine-grained per server timeout configured for individual servers.

The **no** form of this command resets the TACACS+ global authentication timeout to the default of 5 seconds.

| Parameter | Description |
|----------------|--|
| timeout <1-60> | Specifies the timeout interval of 1 to 60 seconds. Default: 5 seconds. |

Examples

Specifying the TACACS+ server timeout:

```
switch(config)# tacacs-server timeout 10
```

Resetting the timeout for the TACACS+ server to the default:

```
switch(config)# no tacacs-server timeout
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------------|--------------|
| 10.07 or earlier | -- |

Command Information

| Platforms | Command context | Authority |
|---------------|-----------------|--|
| All platforms | config | Administrators or local user group members with execution rights for this command. |

tacacs-server tracking


```
tacacs-server tracking interval <INTERVAL>
no tacacs-server tracking interval [<INTERVAL>]

tacacs-server tracking user-name <NAME>
    [password [plaintext <PASSWORD> | ciphertext <PASSWORD>]]
no tacacs-server tracking [user-name [<NAME>] [ciphertext <PASSWORD>]]
```

Description

Configures TACACS+ server tracking settings globally for all configured TACACS+ servers that have tracking enabled with the **tacacs-server host** command on individual servers.

The **no** form of the command removes the specified configuration, reverting it to its default. The **no** form with **user-name** also clears the password (resets it to empty).

| Parameter | Description |
|---|---|
| <code>interval <INTERVAL></code> | Specifies the time interval, in seconds, to wait before checking the server reachability status. Default: 300. Range 60 to 84600. |
| <code>user-name <NAME></code>
<code> [password [plaintext <PASSWORD> </code>
<code> ciphertext <PASSWORD>]]</code> | <p>Specifies the user name (and optionally a password) to be used for server checking. The default user name is tacacs-tracking-user with an empty password. The password is optional and may be entered as plaintext or pasted in as ciphertext. The plaintext password is visible as cleartext when entered but is encrypted thereafter. Command history does show the password as cleartext.</p> <p>NOTE: When password is entered without a following sub-parameter, plaintext password prompting occurs upon pressing Enter. The entered password characters are masked with asterisks.</p> <p>NOTE: The user does not have to be configured on the server. Server tracking can still be performed with a user which is not configured on the server because authentication failure on the server achieves confirmation that the server is reachable.</p> <p>NOTE: Server tracking uses authentication request and response packets to determine server reachability status. The server tracking user name and password are used to form the request packet which is sent to the server with tracking enabled. Upon receiving a response to the request packet, the server is considered to be reachable.</p> |

Examples

Configuring a tracking interval of 120 seconds:

```
switch(config)# tacacs-server tracking interval 120
```

Reverting the tracking interval to its default of 300 seconds:

```
switch(config)# no tacacs-server tracking interval
```

Configuring user **tacacs-tracker** with a plaintext password.

```
switch(config)# tacacs-server tracking user-name tacacs-tracker password plaintext track$1
```

Configuring user **tacacs-tracker** with a prompted plaintext password.

```
switch(config)# tacacs-server tracking user-name tacacs-tracker password
Enter the TACACS server tracking password: *****
Re-Enter the TACACS server tracking password: *****
```

Reverting the tracking user name to its default of **tacacs-tracking-user**:

```
switch(config)# no tacacs-server tracking user-name
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------------|--------------|
| 10.07 or earlier | -- |

Command Information

| Platforms | Command context | Authority |
|---------------|-----------------|--|
| All platforms | config | Administrators or local user group members with execution rights for this command. |

RADIUS dynamic authorization



RADIUS dynamic authorization applies to the 8325 and 10000 Switch Series but not the 8320, 8400, or 9300 Switch Series.

RADIUS dynamic authorization provides the ability to make changes to a user account session while it is in progress. This ability includes disconnecting a session or updating some aspect of the authorization for the session. It also includes "pot bounce" in which the interface on which a client is connected is brought down and then back up (using COA (change of authorization)).

RADIUS dynamic authorization enables or disables the processing of "Disconnect" and "Change of Authorization (CoA)" messages from the RADIUS server. When enabled, the RADIUS server can dynamically terminate or change the authorization parameters (such as VLAN/user-role assignment) used in an active client session on the switch.



See also *RFC 3576* available at <http://www.ietf.org/rfc/rfc3576.txt> for general information on the dynamic authorization extensions to RADIUS.

Requirements and tips

The switch validates these mandatory attributes that must be present in the CoA/Disconnect Message:

- **NAS IP** or **NAS IPV6** or NAS Identifier
- Any one of the following combinations is used to identify the client session:
 - **NAS-Port** and **Calling-Station-ID**
 - **NAS-Port-ID** and **Calling-Station-ID**
 - **Accounting-Session-ID**

RADIUS server requirements:

- For ClearPass to provide CoA capabilities, in the case where the switch sends the NAS-IP address as a routable IP address, the CLI command `ip source interface` must be executed with the `radius` parameter.
- In CISCO ISE, to send the CoA request with the same username as in the RADIUS Accept, the Identity rewrite option has to be configured.

When policy entries are applied via CoA messages, limit the number of entries to 32 entries per policy.

RADIUS dynamic authorization commands

radius dyn-authorization enable

```
radius dyn-authorization enable
no radius dyn-authorization enable
```

Description

Enables RADIUS dynamic authorization. This command must be issued before the configuration set with other **radius dyn-authorization** commands takes effect.

The **no** form of this command disables RADIUS dynamic authorization.

Examples

Enabling RADIUS dynamic authorization:

```
switch(config)# radius dyn-authorization enable
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---------------------------------|
| 10.11 | Command introduced on the 8325 |
| 10.11 | Command introduced on the 10000 |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|-----------------|--|
| 8325
8325H
8325P
10000 | config | Administrators or local user group members with execution rights for this command. |

radius dyn-authorization client

```
radius dyn-authorization client {<IPV4> | <IPV6> | <HOSTNAME>}  
    [secret-key [plaintext <PASSKEY> | ciphertext <PASSKEY>]]  
    [time-window <WIDTH>] [vrf <VRF-NAME>] [replay-protection {enable|disable}]  
    [rfc5176-enforcement-mode <strict|loose>]  
no...
```

Description

Configures RADIUS dynamic authorization for the specified client on the specified (or **default**) VRF.

The **no** form of this command unconfigures RADIUS dynamic authorization for the specified client on the specified (or **default**) VRF.

Guidelines

Configure **rfc5176-enforcement-mode loose** when integrating with the Adaptive Network Control (ANC) feature of Cisco ISE, as authorization attributes are sent as part of Disconnect-Requests (code 40) instead of CoA-Requests (code 43).

The following are the only authorization attributes that are accepted in the disconnect requests in the loose mode:

1. Cisco-AVPair='subscriber:command=bounce-host-port'
2. Cisco-AVPair='subscriber:command=disable-host-port'
3. Cisco-AVPair='subscriber:command=reauthenticate' and Cisco-AVPair='subscriber:reauthenticate-type=<last|rerun>



The **reauthenticate-type=rerun** option is not supported if concurrent onboarding is enabled for the client.

| Parameter | Description |
|---|--|
| <IPV4> <IPV6> <HOSTNAME> | Specifies the client IPv4 address, IPv6 address, or host name. |
| secret-key [plaintext <PASSKEY> ciphertext <PASSKEY>] | Specifies the dynamic authorization server (RADIUS server) shared secret key required for client access. Provide either a plaintext or an encrypted shared-secret passkey. As per RFC 2865, the shared-secret can be a mix of alphanumeric and special characters. Plaintext passkeys are between 1 and 32 alphanumeric and special characters.

NOTE: When secret-key is entered without either sub-parameter, plaintext shared secret prompting occurs upon pressing Enter. Enter must be pressed immediately after the secret-key parameter without entering other parameters. The entered shared secret characters are masked with asterisks. |
| rfc5176-enforcement-mode <strict loose> | Configure the enforcement mode of RFC5176. The default mode is strict and in this mode, no authorization attributes are allowed as part of disconnect requests. When configured mode is loose , then the authorization attributes are accepted in disconnect requests. |
| time-window <WIDTH> | Specifies the width of the synchronization window (in seconds) between the RADIUS dynamic authorization client and the RADIUS dynamic authorization server. Default 300. Range: 1 to 65535. |
| replay-protection {enable disable} | Enables or disables RADIUS dynamic authorization replay protection for the specified client on the specified (or default) VRF. By default, the replay-protection is set to disabled. |
| vrf <VRF-NAME> | Specifies the VRF on which the identified client is connected. When omitted, VRF default is assumed. |

Examples

Configuring RADIUS dynamic authorization with replay protection for a client on the default VRF:

```
switch(config)# radius dyn-authorization client 1.1.2.5 replay-protection enable
```

Configuring RADIUS dynamic authorization with time window and shared secret for a client on the default VRF:

```
switch(config)# radius dyn-authorization client 1.1.2.7 time-window 8
secret-key plaintext skF82#450
```

Configuring loose enforcement of RFC5176:

```
switch(config)# radius dyn-authorization client 1.1.1.1 rfc5176-enforcement-mode
loose
```

Configuring RADIUS dynamic authorization with a prompted shared secret:

```
switch(config)# radius dyn-authorization client 1.1.2.7 secret-key
Enter the RADIUS dyn-authorization key: *****
Re-Enter the RADIUS dyn-authorization key: *****
```

Configuring RADIUS dynamic authorization for a client on the adm2 VRF:

```
switch(config)# radius dyn-authorization client 1.1.2.1 vrf adm2
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---|
| 10.13 | The rfc5176-enforcement-mode parameter was introduced. |
| 10.11 | Command introduced on the 8325 |
| 10.11 | Command introduced on the 10000 |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|-----------------|--|
| 8325
8325H
8325P
10000 | config | Administrators or local user group members with execution rights for this command. |

radius dyn-authorization port

radius dyn-authorization port <PORT-NUMBER>

Description

Sets the RADIUS dynamic authorization server UDP or TCP port.

| Parameter | Description |
|---------------|--|
| <PORT-NUMBER> | Specifies the UDP or TCP port. Default UDP: 3799 and TCP:2083. |

Examples

Setting the RADIUS dynamic authorization server UDP port back to its default 3799:

```
switch(config)# radius dyn-authorization port 3799
```

Setting the RADIUS dynamic authorization server TCP port back to its default 2083:

```
switch(config)# radius dyn-authorization port 2083
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---------------------------------|
| 10.11 | Command introduced on the 8325 |
| 10.11 | Command introduced on the 10000 |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|-----------------|--|
| 8325
8325H
8325P
10000 | config | Administrators or local user group members with execution rights for this command. |

show radius dyn-authorization

```
show radius dyn-authorization
```

Description

Shows RADIUS dynamic authorization configuration and summarized statistics for all clients configured for dynamic authorization.

Usage

Show command output item identification:

- **Radius Dynamic Authorization:** Enabled or Disabled status, system wide.
- **Radius Dynamic Authorization Port:** The UDP or TCP port used for dynamic authorization (default 3799).
- **Invalid Client Address in CoA Requests:** The number of CoA (change of authorization) requests received with an incorrect DAC (dynamic authorization client) address.
- **Invalid Client Address in Disconnect Requests:** The number of disconnect requests received with incorrect DAC address.
- **Disconnect Requests:** The number of disconnect requests received from the DAC.
- **Disconnect ACKs:** The number of Disconnect-ACKs sent to the DAC.

- **Disconnect NAKs:** The number of Disconnect-NAKs sent to the DAC.
- **CoA Requests:** The number of CoA-requests received from the DAC.
- **CoA ACKs:** The number of CoA-ACKs sent to the DAC.
- **CoA NAKs:** The number of CoA-NAKs sent to the DAC.

Example

Showing RADIUS dynamic authorization summarized statistics for all clients configured for dynamic authorization:

```
switch# show radius dyn-authorization
Status and Counters - RADIUS Dynamic Authorization Information

RADIUS Dynamic Authorization          : Enabled
RADIUS Dynamic Authorization UDP Port : 3799
Invalid Client Addresses in CoA Requests : 0
Invalid Client Addresses in Disconnect Requests: 0

Dynamic Authorization Client Information
=====

IP Address      : 1.1.2.1
VRF             : adm2
Replay Protection : Disabled
TLS Enabled    : Yes
Time Window     : 20
Disconnect Requests : 1
Disconnect ACKs   : 1
Disconnect NAKs   : 0
CoA Requests     : 7
CoA ACKs         : 2
CoA-NAKs        : 5
Shared-Secret    :
AQBapb+HsdpqVlQ3CPCBMQTG8ekK1cA+CyD0RvfbeA8BEgikCgAAAJOWZSNzA2SWrLA=

IP Address      : 1.1.2.5
VRF             : default
Replay Protection : Enabled
TLS Enabled    : No
Time Window     : 20
Disconnect Requests : 6
Disconnect ACKs   : 6
Disconnect NAKs   : 0
CoA Requests     : 9
CoA ACKs         : 5
CoA-NAKs        : 4
Shared-Secret    :
AQBapb+HsdpqVlQ3CPCBMQTG8ekK1cA+CyD0RvfbeA8BEgikCgAAAJOWZSNzA2SWrLA=

IP Address      : 1.1.2.7
VRF             : default
Replay Protection : Disabled
TLS Enabled    : Yes
Time Window     : 8
Disconnect Requests : 6
Disconnect ACKs   : 6
Disconnect NAKs   : 0
CoA Requests     : 9
CoA ACKs         : 5
```



```
CoA-NAKs          : 4
Shared-Secret     :
AQBapb+HsdpqV1Q3CPCBMQTG8ekK1cA+CyD0RvfbeA8BEgikCgAAAJOWZSNzA2SWrLA=
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---------------------------------|
| 10.11 | Command introduced on the 8325 |
| 10.11 | Command introduced on the 10000 |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|-----------------------------|--|
| 8325
8325H
8325P
10000 | Operator (>) or Manager (#) | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

show radius dyn-authorization client

```
show radius dyn-authorization client <IP-ADDR> [vrf <VRF-NAME>]
```

Description

Shows RADIUS dynamic authorization statistics for the specified client on the specified VRF.

| Parameter | Description |
|----------------|---|
| <IP-ADDR> | Specifies the client IPv4 or IPv6 address. |
| vrf <VRF-NAME> | Specifies the VRF on which the identified client is connected. When omitted, VRF default is assumed. |

Usage

Show command output item identification:

- **Total Requests:** The number of Disconnect and CoA (change of authorization) requests received from the DAC (dynamic authorization client).
- **Authorize Only Requests:** The number of Disconnect and CoA requests received from the DAC with an "Authorize only" Service-Type attribute.
- **Malformed Requests:** The number of malformed Disconnect and CoA requests received from the DAC.
- **Bad Authenticator Requests:** The number of Disconnect and CoA requests received from this DAC with an invalid authenticator field.

- **Dropped Requests:** The number of Disconnect and CoA requests from this DAC that have been silently discarded for reasons other than malformed, bad authenticators, or unknown type.
- **Total ACK Responses:** The number of Disconnect-ACKs sent to the DAC.
- **Total NAK Responses:** The number of Disconnect-NAKs sent to the DAC.
- **Session Not Found Responses:** The number of Disconnect-NAKs sent to the DAC because no session context could be found.
- **User Sessions Modified:** The number of user sessions for which authorization changed due to Disconnect and CoA requests received from the DAC.

Example

Showing RADIUS dynamic authorization statistics for client 1.1.2.1 on VRF default:

```
switch# show radius dyn-authorization client 1.1.2.1 vrf default
Status and Counters - RADIUS Dynamic Authorization Client Information

VRF Name           : default
Authorization Client : 1.1.2.1
Unknown Packets    : 55
Message-Type              Disconnect              CoA
-----
Total Requests            2147483647              10
Authorize Only Requests   10                  10
Malformed Requests        10                  10
Bad Authenticator Requests 2147483647          2147483647
Dropped Requests          10                  10
Total ACK Responses        10                  10
Total NAK Responses        10                  10
Session Not Found Responses 10                  10
User Sessions Modified     20                  20
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---------------------------------|
| 10.11 | Command introduced on the 8325 |
| 10.11 | Command introduced on the 10000 |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|-----------------------------|--|
| 8325
8325H
8325P
10000 | Operator (>) or Manager (#) | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

Chapter 13

IP Flow Information Export

IP Flow Information Export (IPFIX) is an embedded network flow analysis tool that compiles characteristic and measured properties of flows and sends flow reports to internal or external flow collectors. IPFIX is configurable via CLI or REST. IPFIX is configurable via the command-line or REST interfaces. With IPFIX, customers configure flow records with match (key) fields and collection (non-key) fields. Match fields are the set of fields that define a flow, such as IP address or UDP port. Collection fields are the set of fields that identify information to collect for a flow, such as packet and byte counters.

A flow exporter defines where and how to export flow reports. Flow exporters are created as standalone entities in the **config** context to provide flow monitors the ability to export flow reports. A single flow exporter can be assigned to one or more flow monitors, and multiple flow exporters can be assigned to a single flow monitor.

IPFIX is a stand alone feature and can work on its own to monitor the traffic flow. On enabling the Application Recognition and Control feature, application information along with flow properties are exported to external or internal IPFIX collectors.

For more information about IPFIX, see the *Monitoring Guide*.

Traffic insight allows monitoring of large amount of data that it collects from various flow exporters like IPFIX provide the ability to filter, aggregate, and sort the data based on user flow monitor requests. Traffic insight tracks different monitor requests simultaneously and provides monitor reports per request.

Protocol and feature details

When traffic insight is enabled and clients on the network access SaaS services or public websites, a flow exporter like IPFIX caches flows in both directions and collects traffic statistics and source and destination MAC addresses.

The IPFIX sends the flow record to traffic insight, and the traffic insight feature collects these records and updates the bidirectional traffic information to the Open vSwitch Database (OVSDb). HPE Aruba Networking Central fetches the flow details from OVSDb through REST APIs.

Supported Platforms

The following table list the supported platforms for Traffic Insight.

Table 1: *Supported platforms for Traffic Insight.*

| Platform | Traffic Insight |
|----------|-----------------|
| 8325 | Yes |
| 10000 | Yes |

Supported Monitor Types

Traffic insight supports a variety of monitor types. Refer to this section to learn which monitor types are supported on each platform.

The 6200, 6300, 6400, 8100, 8325, 8360, and 10000 platforms support the following monitor types:

- topN-flow monitor
 - Monitors topN flows by volume (bytes).
 - By default, the TopN monitor supports 5 entries and a maximum of 20 entries per monitor.
 - By default IPFIX exports inactive flows every 30 seconds and active flows every 30 minutes.
 - It is recommended to configure IPFIX active timeout as <=5 minutes when traffic-insight is configured to monitor topN flows.
 - New topN flow entries are reported every 5 minutes. You cannot configure the report frequency.
 - By default, statistics are cleared for every 10 minutes.

The 8100, 8325, 8360, 9300 and 10000 platforms support the following monitor type:

- Flow Monitor (previously referred to as **workload-flows**)
 - Provides flow visibility in a data center network to Aruba Central or gravity.
 - Flow direction is determined based on list of common destination ports. If destination port of a flow is found in list of common destination ports, the flow is considered as client to server flow, and reverse of this flow is considered as server to client flow.
 - Flow Tx/Rx bytes are computed based on flow direction. Tx byte count is incremented for client to server direction. Rx byte count is incremented for server to client direction.
 - On the 10000 Switch Series, Policy and rule name are determined based on the security policy applied through PSM.
 - Flow action status is determined based on the security policy applied through PSM.
 - OVSDB Traffic Insight Workload Flow table is updated with traffic flow detail for once in every 30 seconds if flow cache size is more than 2k and once in 12 minutes if flow cache size is less than 2k. And a maximum of 2k flows will be updated to the DB at any given point of time. If there are more than 2k flows then the difference is updated in the next revision.
 - Flow update to the DB happens in FIFO order of the flows received from IPFIX.
 - If the flow cache limit is reached, then upcoming new flows will be dropped.
 - Monitors flow workload in a DCN and provides bi-directional flow visibility.
 - Every DB update includes two sets of operations:
 - Existing entries will be flushed from DB.
 - New set of entries are written to DB.
 - Telemetry details:
 - policy_name: Specifies the name of the PSM security policy that is policing the flow.
 - rule_name: Specifies the name of the specific rule within the mentioned policy that is policing the flow.



Flow monitor supports applications with the following destination ports: Windows Remote Desktop (RDP) - 3389, ICMP - 0, FTP - 20, 21, SSH/Telnet - 22, 23, HTTP - 80, Web Servers - 8080, 443, MYSQL - 3306, DNS - 53, Reserved Ports - 0 to 1023, Kubernetes - 6443, 2379, 2380, 10250, 10259, 10257.

Caveats for Traffic Insight

The following section provides details on the caveats to be noted for Traffic Insight.

- Only one traffic-insight instance is allowed.
- Maximum number of supported flows is 100k with the default COPP rates. To increase the scale up to 200k, see IPFIX guide.
- Maximum number of supported workload flow table size is 2k at a time.

Configuring Traffic Insight

Prerequisite:

- Enable IPFIX—Flow data is exported to Traffic Insight, which is an internal IPFIX collector.
- Export flows to an IPv4 address on an interface configured on the switch as the traffic insight flow collector. A SVI or ROP interface is recommended.

- IPFIX must be enabled under AMD Pensando Distributed Services Module (DSM).
- AMD Pensando Policy and Services Manager (PSM) server must be connected and configured to export flow data.
- PSM server must export flows to an IPv4 address on vrf default configured on the switch as the traffic insight flow collector, a loopback interface is recommended.
- PSM server must export flows on UDP port 4739.
- Configure **collect forwarding-status** and **collect egress-vlan** in IPFIX record in order for blocked flows to be identified.
- Configure a SVI or ROP interface for traffic flows.
- Flows are exported to an IPv4 address on an interface configured on the switch as the traffic insight flow collector. An SVI or a ROP interface is recommended for this configuration.



The Application Recognition feature is only supported on the 6200, 6300, and 6400 Switch Series.

Traffic Insight Configuration

Complete the steps below to configure traffic insight.

1. Create and enable Traffic Insight instance and specify the flow source

```
switch(config)# traffic-insight TI_Instance-01 -->Creates a Traffic Insight
                                                    instance with name TI_Instance-01
switch(config-ti)# source ipfix -->Sets the source protocol to
                                                    collect flow information
switch(config-ti)# enable -->Enables Traffic Insight
```

show running-config traffic-insight

show running-config traffic-insight

Description

Display configuration settings for all traffic insight instances.

Examples

```
switch# show running-config traffic-insight
traffic-insight t1
    enable
    source ipfix
    !
    monitor mntrl workload-flows
...
```

For 8325 switch series the **show running-config traffic-insight** command shows following output:

```
switch# show run traffic-insight
traffic-insight t1
    enable
    source ipfix
    monitor Top-monitor type topN-flows
```

```
monitor Flow-monitor type flow
interface 1/1/1
traffic-insight flow-collector
```



For more information on features that use this command, refer to the Application Traffic Visibility Guide for your switch model.

Related Commands

| Command | Description |
|---------------------------------|---|
| traffic insight | Create and configure a traffic insight instance |

Command History

| Release | Modification |
|------------|---|
| 10.14.1000 | Command updated for 8325 Switch Series. |
| 10.11 | Command introduced. |

Command Information

| Platforms | Command context | Authority |
|---|--------------------------------|---|
| 8325
8325H
8325P
10000
8325 | Operator (>) or
Manager (#) | Administrators or local user group members with
execution rights for this command. |

show traffic-insight monitor-type

```
show traffic-insight <INSTANCE_NAME> monitor-type
```

```
dns-average-latency <MONITOR_NAME>
topN-flows {<MONITOR_NAME> | all} [app-details]
workload-flows <MONITOR_NAME> [vrf <VRF-NAME> | all]
```

Description

Display information for traffic insight monitored flows.

| Parameter | Description |
|-----------------|---|
| <INSTANCE_NAME> | Name of the traffic insight instance, string of maximum length up to 32 characters. |
| monitor-type | Specifies traffic insight monitor type. |
| workload-flows | vrf, vrf-name and all options are supported only for the |

| Parameter | Description |
|----------------|---|
| | workload-flow monitor. By default, the workload-flow monitor option shows flow details for default VRF. |
| <MONITOR_NAME> | Specify a monitor name to display information for that monitor. |

Examples

The following example shows **all** monitoring flow data for **topN-flows**, for instance **instance-1**:

```
switch# show traffic-insight instance-1 monitor-type topN-flows all
```

Name : top-5-dst-ip
 Entries : 5
 group By : dst_ip
 Filter By : None
 Running Statistics Timeout: 2700

Dataset : Running Statistics

| Rank | dst_ip | Bytes |
|------|-----------------|-------|
| 1 | 34.94.235.109 | 4168 |
| 2 | 61.113.171.176 | 3500 |
| 3 | 41.244.240.249 | 3120 |
| 4 | 40.159.33.244 | 3084 |
| 5 | 247.182.130.159 | 3084 |

Name : top-5-conversations
 Entries : 5
 group By : dst_ip
 Filter By : None
 Running Statistics Timeout: 2700

Dataset: Running Statistics

| Rank | src_ip | dst_ip | ip_proto | src_port | dst_port | Bytes |
|------|--------------|-----------------|----------|----------|----------|-------|
| 1 | 192.168.1.6 | 223.126.110.198 | 17 | 18251 | 38530 | 102 |
| 2 | 11.89.15.20 | 143.193.61.233 | 17 | 43482 | 5929 | 103 |
| 3 | 107.56.36.77 | 255.111.58.122 | 6 | 15820 | 59117 | 104 |
| 4 | 1000::1 | 2000::2 | 6 | 20065 | 53239 | 105 |
| 5 | 3000::3 | 5000::5 | 17 | 12124 | 50782 | 105 |

The following example shows **all** monitoring flow data permitted or denied for **workload-flows**, for monitor **mon1**:

```
# show traffic-insight test monitor-type workload-flows mon1 all
```

Name : mon1
 Type : workload-flows
 VRF : default

--

| | |
|-----------------------------|-----------------------------|
| src_mac : aa:aa:aa:aa:aa:aa | dst_mac : bb:bb:bb:bb:bb:bb |
| src_ip : 172.20.0.2 | dst_ip : 172.40.0.2 |
| src_vlan : 100 | dst_port : 20000 |


```

vlan_pcp : 0                               ip_tos   : 12
tx(bytes): 1440                             rx(bytes): 1865
action   : permitted
-----
--
src_mac  : aa:aa:aa:aa:aa:aa               dst_mac  : bb:bb:bb:bb:bb:bb
src_ip   : 172.20.0.2                       dst_ip   : 172.40.0.2
src_vlan : 100                             dst_port : 21000
vlan_pcp : 0                               ip_tos   : 12
tx(bytes): 1540                             rx(bytes): 6865
action   : denied
-----
--
src_mac  : aa:aa:aa:aa:aa:aa               dst_mac  : bb:bb:bb:bb:bb:bb
src_ip   : 172.2.2.1                       dst_ip   : 172.16.2.1
src_vlan : 100                             dst_port : 30000
vlan_pcp : 0                               ip_tos   : 8
tx(bytes): 6440                             rx(bytes): 18555
action   : permitted
-----
--
VRF      : Red
-----
--
src_mac  : aa:aa:aa:aa:aa:aa               dst_mac  : bb:bb:bb:bb:bb:bb
src_ip   : 172.60.0.3                       dst_ip   : 172.40.0.2
src_vlan : 100                             dst_port : 20000
vlan_pcp : 0                               ip_tos   : 12
tx(bytes): 140                             rx(bytes): 18675
action   : permitted
-----
--
src_mac  : aa:aa:aa:aa:aa:aa               dst_mac  : bb:bb:bb:bb:bb:bb
src_ip   : 172.60.0.3                       dst_ip   : 172.40.0.2
src_vlan : 100                             dst_port : 21000
vlan_pcp : 0                               ip_tos   : 12
tx(bytes): 1440                             rx(bytes): 1865
action   : denied
-----
--
src_mac  : aa:aa:aa:aa:aa:aa               dst_mac  : bb:bb:bb:bb:bb:bb
src_ip   : 172.3.3.1                       dst_ip   : 172.17.2.1
src_vlan : 100                             dst_port : 30000
vlan_pcp : 0                               ip_tos   : 8
tx(bytes): 1440                             rx(bytes): 18695
action   : permitted
-----
--
...
...

```

The following example shows monitoring flow data permitted or denied for **workload-flows**, for monitor **mon1** and vrf type **red**:

```

10000# show traffic-insight test monitor-type workload-flows mon1 vrf Red
-----
src_mac  : aa:aa:aa:aa:aa:aa               dst_mac  : bb:bb:bb:bb:bb:bb
src_ip   : 172.60.0.3                       dst_ip   : 172.40.0.2
src_vlan : 100                             dst_port : 20000

```

```

vlan_pcp : 0                               ip_tos   : 12
tx(bytes): 140                             rx(bytes): 18675
action   : permitted
-----
src_mac   : aa:aa:aa:aa:aa:aa             dst_mac   : bb:bb:bb:bb:bb:bb
src_ip    : 172.60.0.3                     dst_ip    : 172.40.0.2
src_vlan  : 100                           dst_port  : 21000
vlan_pcp  : 0                             ip_tos    : 12
tx(bytes): 1440                           rx(bytes): 1865
action    : denied
-----
src_mac   : aa:aa:aa:aa:aa:aa             dst_mac   : bb:bb:bb:bb:bb:bb
src_ip    : 172.3.3.1                     dst_ip    : 172.17.2.1
src_vlan  : 100                           dst_port  : 30000
vlan_pcp  : 0                             ip_tos    : 8
tx(bytes): 1440                           rx(bytes): 18695
action    : permitted
-----

```

The following example shows monitoring flow data permitted or denied for **workload-flows**, for monitor **mon1**:

```

10000# show traffic-insight test monitor-type workload-flows mon1
Name   : mon1
Type   : workload-flows
VRF    : default
-----
src_mac   : aa:aa:aa:aa:aa:aa             dst_mac   : bb:bb:bb:bb:bb:bb
src_ip    : 172.20.0.2                     dst_ip    : 172.40.0.2
src_vlan  : 100                           dst_port  : 20000
vlan_pcp  : 0                             ip_tos    : 12
tx(bytes): 1440                           rx(bytes): 1865
action    : permitted
-----
--
src_mac   : aa:aa:aa:aa:aa:aa             dst_mac   : bb:bb:bb:bb:bb:bb
src_ip    : 172.20.0.2                     dst_ip    : 172.40.0.2
src_vlan  : 100                           dst_port  : 21000
vlan_pcp  : 0                             ip_tos    : 12
tx(bytes): 1540                           rx(bytes): 6865
action    : denied
-----
--
src_mac   : aa:aa:aa:aa:aa:aa             dst_mac   : bb:bb:bb:bb:bb:bb
src_ip    : 172.2.2.1                     dst_ip    : 172.16.2.1
src_vlan  : 100                           dst_port  : 30000
vlan_pcp  : 0                             ip_tos    : 8
tx(bytes): 6440                           rx(bytes): 18555
action    : permitted
-----
--
...
...

```

The following example shows when monitor type is incorrect, an error message will be displayed.:

```
10000# show traffic-insight test monitor-type workload-flows mon1 all
Monitor mon1 type is not configured as workload-flows.
```

The following example shows when monitor ID is incorrect, an error message will be displayed:

```
10000# show traffic-insight test monitor-type workload-flows mon1 all
Monitor mon1 is not configured in traffic insight instance test.
```

For 8325 switch series the following example shows monitoring flow data for **flow monitor** for **flow** and **topNflow** flow monitors respectively:

```
switch# show traffic-insight t1 monitor-type flow flow-monitor
Name      : flow-monitor
Type      : flow
VRF       : default

-----
src_ip    : 36.1.1.17          dst_ip    : 37.1.1.17
src_port  : 8008              dst_port  : 21
tx(bytes) : 84844053551       rx(bytes)  : 84840862354
action    : permitted
-----
src_ip    : 36.1.1.16          dst_ip    : 37.1.1.16
src_port  : 8008              dst_port  : 21
tx(bytes) : 84849765072       rx(bytes)  : 84847237065
action    : permitted
-----
src_ip    : 36.1.1.13          dst_ip    : 37.1.1.13
src_port  : 8008              dst_port  : 21
tx(bytes) : 84846641563       rx(bytes)  : 84842671737
action    : permitted
```

```
# show traffic-insight t1 monitor-type topN-flows top-monitor

Name      : top-monitor
Group By  : None
Entries   : 5
Filter By : None
Running Statistics Timeout : 600

Dataset   : Running Statistics
Rank      dstip          Bytes
-----
1         37.1.1.15      84924695000
2         37.1.1.19      84923144678
3         37.1.1.16      84922587012
4         37.1.1.11      84922408979
5         36.1.1.18      84921561302
```



Policy-action for the flows is only based on Port-Access Role and Application Based Policing configurations.



For more information on features that use this command, refer to the Security Guide for your switch model.

Related Commands

| Command | Description |
|---------------------------------|--|
| traffic insight | Create and configure a traffic insight instance. |

Command History

| Release | Modification |
|------------|---|
| 10.14 | "Action" field introduced to workload-flow . |
| 10.14.1000 | Command updated for 8325 Switch Series. |
| 10.12.1000 | The dns-onboarding-latency sub-parameter was introduced. |
| 10.11 | Command introduced. |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|-----------------|--|
| 8325
8325H
8325P
10000 | Manager (#) | Administrators or local user group members with execution rights for this command. |

traffic insight

```
traffic-insight <INSTANCE_NAME>
  enable
  source ipfix
  traffic-insight flow-collector
  monitor <NAME> type
    flow
    workload-flows
    topN-flows
      entries <Entry-VALUE>
      running-statistics-timeout <TIMEOUT-SECONDS>
      group-by {<GROUP-TYPE>}
      filter-by {<FILTER-TYPE>}
```

Description

Traffic insight monitors data collected from flow exporters like the IP Flow Information Export (IPFIX) flow exporter. Traffic insight tracks multiple monitor requests simultaneously and provides monitor reports for each request.



An egress Interface can be determined only after MAC and ARP resolution; the egress interface is exported only after next active/inactive timeout after the MAC entry is programmed. This is not applicable for 6200 Switch Series.

| Parameter | Description |
|---|---|
| <code><INSTANCE_NAME></code> | Name of the traffic insight instance, string of maximum length up to 32 characters. |
| <code>enable</code> | Use the enable parameter to enable this traffic insight configuration, or use the no enable option to disable traffic insight. |
| <code>source ipfix</code> | The traffic insight configuration uses this source protocol to collect traffic flows. The only available protocol is ipfix . |
| <code>traffic-insight flow-collector</code> | Enables the Traffic insight flow collector on an IP interface. Traffic insight will listen for IPFIX packets destined for primary IP address of the port. The no form of the command disables traffic insight flow collector on the port. |
| <code>monitor <INSTANCE_NAME> type</code> | Enable flow monitoring on a traffic insight instance and configure rules for filtering and grouping traffic flows. |
| <code>flow</code> | Monitors traffic flows in the device. |
| <code>topN-flows</code> | Monitors IP traffic flowing through the switch and captures topN flows volume. The default number of top flows captured is 5. |
| <code>entries <Entry-VALUE></code> | Select the maximum number of entries in the monitor report. Range: 1 to 20. The default value is 5. |
| <code>running-statistics-timeout <TIMEOUT-SECONDS></code> | Sets running-statistics reset timeout value. Range: 360 to 86400. The default value is 600. |
| <code>filter-by <FILTER-TYPE></code> | <p>Include any of the following values to filter the data set.</p> <ul style="list-style-type: none"> ▪ src_ip_mask <IP_MASK>—Filter by source IP netmask ▪ dst_ip_mask <IP_MASK>—Filter by destination IP netmask ▪ src_ip <IP_ADDRESS>—Filter by source IP address ▪ dst_ip <IP_ADDRESS>— Filter by destination IP address ▪ src_port <PORT>—Filter by source port number ▪ dst_port <PORT>—Filter by destination port number ▪ ip_proto <PROTOCOL>—Filter by IP protocol ▪ appid <string>—Filter by application ID <p>(For 1000 Switch series only)</p> <ul style="list-style-type: none"> ▪ egress_interface <interface>—Filter by egress interface ▪ egress_queue <string>—Filter by egress queue. ▪ egress_interface <interface> ▪ egress_interface <interface> |
| <code>group-by <GROUP-TYPE></code> | <p>Include any of the following values to create a monitor that groups matching traffic flows by that criteria.</p> <ul style="list-style-type: none"> ▪ srcip—Group by source IP address ▪ dstip —Group by destination IP address ▪ srcport—Group by source port number ▪ dstport—Group by destination port number ▪ ipproto—Group by IP protocol ▪ appid—Group by application ID |

| Parameter | Description |
|-----------------------------|---|
| | <ul style="list-style-type: none"> ▪ srcip_dstip—Group by Source IP and Destination IP ▪ srcip_dstport—Group by Source IP and Destination Port ▪ srcip_appid—Group by Source IP and Application ID. (For 1000 Switch series only) ▪ egress_interface—Group by Egress Interface. ▪ egress_interface_queue—Group by Egress Interface and QoS Queue. ▪ egress_interface <interface> ▪ egress_interface <interface> |
| <code>workload-flows</code> | Monitors unicast traffic flows and provides the rx/tx counters. The frequency with which Traffic insight workload flow table in DB is updated with new flow stats info is 30 sec if flow count is more than 2k else once in 12 minutes. A maximum of 2k flows can be written to DB in an update. If flow cache limit is reached, then new flows will be ignored. |
| <code>no ...</code> | Negate a command or reset it to default values. |

Examples

The following example creates a traffic insight instance named **TI_1**:

```
switch(config)# traffic-insight TI_1
```

The following example deletes a traffic insight instance named **TI_1**:

```
switch(config)# no traffic-insight TI_1
```

The following example enables traffic insight instance for **TI_1** instance:

```
switch(config)# traffic-insight TI_1
switch(config-ti)#enable
```

The following example disables traffic insight instance for **TI_1** instance:

```
switch(config)# traffic-insight TI_1
switch(config-ti)#no enable
```

The following example sets the source protocol for **TI_1** instance to collect flows information from IPFIX:

```
switch(config)# traffic-insight TI_1
switch(config-ti)# source ipfix
```

The following example removed the source protocol for **TI_1** instance:

```
switch(config)# traffic-insight TI_1
switch(config-ti)# no source ipfix
```

The following examples create traffic insight monitor with filter and grouping rules for **topN-flows** for the **mnti1** monitoring:

```
switch(config)# traffic-insight TI_1
switch(config-ti)# monitor mnti1 type topN-flows
switch(config-ti)# monitor mnti1 type topN-flows running-statistics-timeout 1800
switch(config-ti)# monitor type topN-flows group-by src_ip
switch(config-ti)# monitor type topN-flows filter-by src_ip_mask 192.0.0.0/8
```

The following example creates a traffic insight monitor with filter and grouping rules for **topN-flows** using the below parameter for the **mnti1** monitoring:

- 10 entries
- Grouped by **srcip** (Source IP)
- Filter by **src_ip_mask** (Source IP Mask)

```
switch(config-ti)# monitor mnti1 type topN-flows entries 10 group-by srcip filter-
by src_ip_mask 192.0.0.0/8
```

The following example removes flow monitoring:

```
switch(config)# traffic-insight TI_1
switch(config-ti)# no monitor mnti1 topN-flows
```

The following example creates a traffic insight monitor for **workload-flows** for the **mntr3** instance:

```
switch(config-ti)# monitor mntr3 type workload-flows
```

The following example creates a traffic insight **monitor <NAME> type** for **topN flows**:

```
`monitor <NAME> type (topN-flows)
[entries <NUM> | running-statistics-timeout <NUM> |
group-by (srcip|dstip|srcport|dstport|ipproto|appid|srcip_dstip|
srcip_dstport|srcip_appid) |
filter-by (src_ip_mask STR | dst_ip_mask STR | src_ip STR |
dst_ip STR | src_port STR |dst_port STR |ip_proto STR)
]`
</pd>
```

The following example creates a traffic insight **monitor <NAME> type flow**:

```
`monitor <NAME> type (flow)`
```

The following example creates a traffic insight **monitor <NAME> type** for **workload flows**:

```
`monitor <NAME> type (workload-flows)`
```



For more information on features that use this command, refer to the Security Guide for your switch model.

The following example enables traffic insight flow collector.

```
switch(config)#interface loopback1  
switch(config-loopback-if)# traffic-insight flow-collector
```

The following example disables traffic insight flow collector.

```
switch(config)#interface loopback1  
switch(config-loopback-if)# no traffic-insight flow-collector
```

Monitor types supported on different platforms

| Monitor type | Supported platforms |
|------------------------|---|
| topN-flows | 6200/6300 (except for S3L75A, S3L76A, S3L77A)/6400/8100/8325/8360/10000 |
| application-flows | 6200/6300 (except for S3L75A, S3L76A, S3L77A) /6400 |
| raw-flows | 6200/6300 (except for S3L75A, S3L76A, S3L77A) /6400 |
| dns-average-latency | 6300 (except for S3L75A, S3L76A, S3L77A) /6400 /8360 |
| dns-onboarding-latency | 6300 (except for S3L75A, S3L76A, S3L77A) /6400 |
| workload-flows | 10000 |
| flow | 8100/8325/8360/10000 |

Command History

| Release | Modification |
|------------|---|
| 10.14.1000 | Command updated for 8325 Switch Series. |
| 10.12.1000 | The dns-onboarding-latency sub-parameter was introduced. |
| 10.13 | The raw-flows sub-parameter introduced. |
| 10.11 | Command introduced. |


Command Information

| Platforms | Command context | Authority |
|-----------|-----------------|---|
| 8325 | config | Administrators or local user group members with execution |

| Platforms | Command context | Authority |
|-------------------------|-----------------|--------------------------|
| 8325H
8325P
10000 | | rights for this command. |

The Client Insight feature captures L2, L3, and L4 onboarding details such as time taken for authentication, acquiring IP address and DNS resolution of the clients. The details published by the Client Insight feature help in providing better insight into the client activities, using the HPE Aruba Networking Central application. Client Insight can also be configured to generate event logs with client onboarding status.

Figure 1 Onboarding Event Workflow

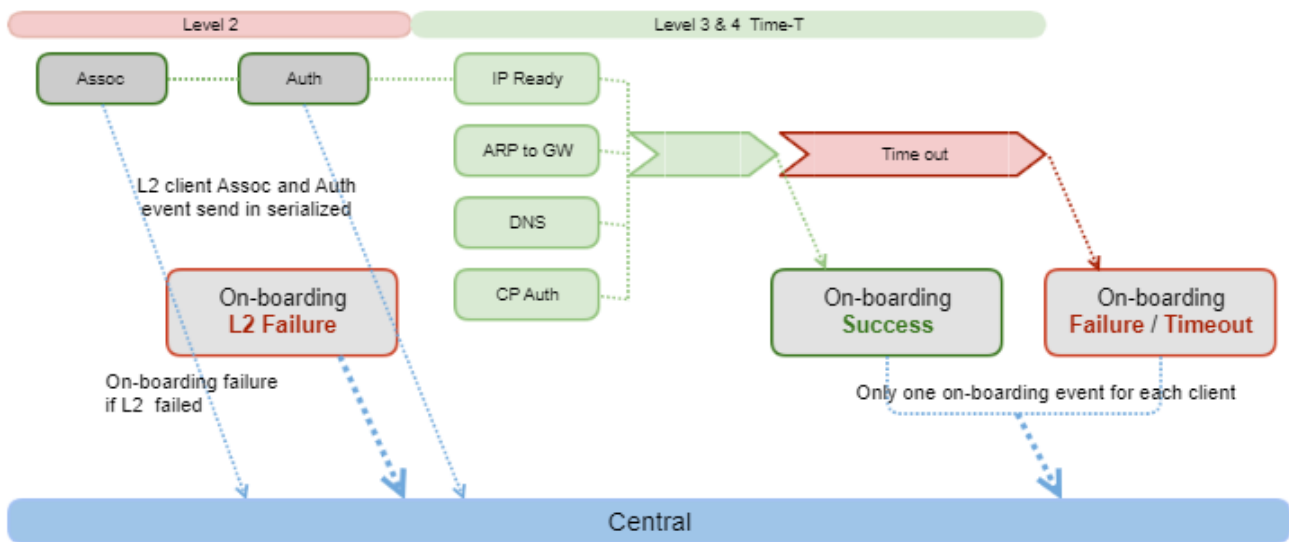

Following is a brief explanation of the various stages in the feature:

- **L2 stage**—Client undergoes authentication or authorization. If security is disabled on the port, then the client is treated as L2 on-boarded client. For L2 clients undergoing authentication, RADIUS and authentication latencies are published in the Client Insight table. Using the authentication start and end time, port access publishes authentication start timestamp, end timestamp and authentication latencies to the Client Insight table. It also publishes time taken by authentication methods to send request and receive response from the RADIUS server. From these values, the following authentication latency can be derived:
 - **dot1x_radius_latency**—Time taken to complete 802.1x RADIUS authentication.
 - **macauth_radius_latency**—Time taken to complete mac-auth RADIUS authentication.



radius_latency values are a subset of **auth_latency**. Depending on the configuration, only one of either 802.1X and mac-auth RADIUS latency values is published. In case of concurrent onboarding or authentication precedence with priority, when both the methods are enabled, both latencies are published.

- **L3 stage**—Client acquires an IP address through the DHCP process, in case the onboarding latency would be the time taken by the DHCP exchange. Onboarding details are captured for only those

clients that onboard the switch after enabling Client Insight configurations. Onboarding data will not be available or published for the existing clients before the Client Insight feature is enabled.

- The DHCP discover, offer, request, and acknowledge (DORA) message exchange between client and server need to be tracked to calculate per-client DHCP latency.
- L4 stage—Client accesses DNS service for its DNS name resolution use cases.

Following is the high level scope of this feature:

- Latency involved during L2, L3, L4 onboarding at various stages.
- Failure status during L2, L3, L4 onboarding. In case of failure, reason code for the failure is also captured.
- Average and on-boarding latency of the DNS Request/Response per client basis.

The client on-boarding details such as time taken for authentication, acquiring IP address and DNS resolution will be available as consolidated data for Aruba Central consumption. Client Insight can be configured to generate event logs with client onboarding status.

-
- For L2 clients undergoing authentication, 2 types of latencies are published in Client_Insight table:
 - auth start & end time : port-access publishes authentication start and end timestamps to client_insight tables. From these values, authentication latency can be derived.
 - dot1x_radius_latency : Time taken to complete 802.1x RADIUS authentication.
 - macauth_radius_latency : Time taken to complete macauth RADIUS authentication.
 - radius_latency values are a subset of auth_latency. Depending on the configuration only one of 802.1x and mac-auth radius_latency values can be published.
 - For DHCP clients, L3 onboarding latency is the time taken by the clients in acquiring IP address from the DHCP server. L3 onboarding latency is calculated based on DHCP message exchange start and end timestamps between client and server. The start and end timestamps are published in DB.
 - DNS onboarding latency is calculated based on the first DNS request/response between the Client and the DNS server. The start and the end timestamps for each DNS server are published in DB.
 - Onboarding details are captured for only those clients that onboard the switch after enabling 'client-insight' configurations. Onboarding data will not be available/published for the existing clients before 'client-insight' feature enablement.
 - Onboarding detail will not be captured for clients onboarded during daemon restart.
 - L3 onboarding start and end timestamps are reset to 0 in case of below sequence of events:
 - Client MAC ages out.
 - DHCP snooping daemon (ipsavd) restarts.
 - Client sends DHCP renewal request.
 - Upon successful L3 onboarding, if switch re-learns the client's MAC after the MAC ages out, L3 onboarding timestamp values would be older than L2 onboarding timestamps.
 - There can be multiple onboarding event logs for a client if the client MAC ages out and re-joins repeatedly.
 - Clients behind network infrastructure devices such as a switch will not be monitored by Client Insight. But clients behind a connected device like a station or telephone is monitored by Client Insight along with the connected device.
-



L2 onboarding status and failure reason codes

Onboarding status types include:

- **successful** : L2 onboarding is successful
- **partial** : Authentication is not completely successful. Possible reasons could be because the client is placed in unintended role such as Fallback or Critical (For example, if RADIUS server is not reachable), or the L2 onboarding timer expired while the client is getting authenticated with preferred method, but intermediate auth state is successful.
- **auth_failed**: Authentication failed

If the L2 authentication is failed, the reason code is updated with one of the following values. This value is not populated only if the status is **auth_failed, server-reject : RADIUS server rejected the client**.

- **server-timeout** : Timeout while connecting to RADIUS server
- **supplicant-timeout** : dot1x client timed out

L3 onboarding states and failure reason codes

L3 onboarding states include the following:

- **successful** : DHCP exchange is successful
- **failed** : Client failed to get IP through DHCP
- **timeout** : Client did not get any response from the server
- **partial** : DHCP exchange in one of the VLANs is not successful or in-progress

Failure Reason Codes

The reason code is updated when the status moves to 'failed'.

dhcp-failure : Client DHCP exchange failed

- **no-dhcp** : Client did not initiate DHCP exchange



If a client is onboarding on multiple VLANs, consolidated onboarding status on all the VLANs is considered to derive L3 onboarding status.

DNS onboarding states

- **successful** : DNS exchange is successful
- **failed** : Client failed to get the successful DNS response
- **timeout** : Client did not initiate DNS request

Overall onboarding status and failure reason codes

- **successful** : successful
- **failed** : failed
- **timeout** : Client did not get any response from the server
- **partial** : Incomplete L2 and/or L3 onboarding

Failure Reason Codes: Reason code is updated when the status moves to **failed**.

- `l2_onboarding_failed` : L2 onboarding failed
- `l3_onboarding_failed` : L3 onboarding failed
- `l4_onboarding_failed` : L4 onboarding failed

The following table depicts the overall client on-boarding status derivation based on L2, L3 and L4 stages.

Table 1: *On-boarding status derivation*

| L2 onboarding | L3 onboarding | L4 onboarding | Overall-onboarding |
|---------------|---------------|---------------|----------------------|
| Successful | Successful | Successful | Successful |
| Successful | Successful | Any state | L4 onboarding status |
| Successful | Any state | Any state | L3 onboarding status |
| Partial | Successful | Any state | L2 onboarding status |
| Partial | Partial | Any state | Partial |
| Partial | Failed | Any state | Failed |
| Partial | Timedout | Any state | Timedout |

Supported Platforms

Client Insight feature is supported on AOS-CX 4100i, 5420, 6000, 6100, 6200, 6300, 6400, 8100, 8325, 8360, 8400, and 10000 Switch Series.

Prerequisites

Listed below are the prerequisites to configure Client Insight:

1. DHCP snooping must be enabled to capture the L3 onboarding status of clients. If DHCP snooping is not enabled, then all clients are marked with L3 timeout as onboarding status.
2. Port access configuration is recommended if the authentication and latency values must be derived. If port access is not configured, MAC learn is considered to be L2 onboarding success.
3. For DNS onboarding latency, Traffic-Insight instance with monitor type **dns-onboarding-latency** must be configured.
4. For Average DNS Latency, Traffic-Insight instance with monitor type **dns-average-latency** must be configured for DNS packet sampling.
5. On platforms where the Traffic Insight feature is not available, the Average DNS Latency values are not available.
6. On platforms where Traffic-Insight and ARC features are not available, DNS on-board latency values are not available.

Points to Note

- Onboarding details will not be captured for clients onboarded during process restart.
- There can be multiple onboarding event logs for a client if the client MAC ages out and rejoins repeatedly.
- UBT clients are ignored by Client Insight.
- Upon successful L3 onboarding, if switch relearns the client's MAC after the MAC ages out, L3 onboarding timestamp values would be older than L2 onboarding timestamps.
- In case of unavailability of L2 and L3 timestamps, the timestamp value in the onboarding event log will be displayed as -1.

Following are some of the scenarios where the L3 timestamp could be unavailable:

- For clients onboarded while Client Insight is in disabled state, followed by feature enable and client MAC being aged out and relearned in switch.
In this scenario, the event log generated will have L2 timestamps but not L3 timestamps.
- For successfully onboarded clients who have acquired IP address. Switch reboot will flush client MAC from the system and any traffic other than DHCP exchange will trigger client onboarding.
In this scenario, L3 timestamp will not be available since the DHCP exchange did not take place during client onboarding.
- When a client is authenticated using port access device-mode, all Client Insight entries on the port except device MAC address will be cleared from the database. Further, Client Insight will only monitor device MAC client on the port and ignore other clients.

Limitations

Listed below are the limitations for this feature:

- Clients with static IP configuration—Static IP or static binding clients will enter L3 timeout state, as DHCP process will not be triggered for them
- L2 and L3 stage timeout values are configured as 3 minutes and 2 minutes. These values cannot be modified.
- For mac-auth clients, with parallel-auth/auth-priority, there will be delay in firing the on-boarding event. This is because authentication status is published only after the 802.1x authentication process is complete.
- If the client onboarding is successful after the onboarding timeout, no new event is generated. To check the current onboarding status, HPE Aruba Networking Central must monitor the events from appropriate features (port access, DHCP snooping). The same is applicable for clients where the onboarding fails.
- Old L3 latency values are published when the port to which clients are connected flaps, as the client will not trigger DHCP process after L2 authentication on rejoin.
- ND-snooping binding clients will enter L3 timeout state, as DHCP process will not be triggered for them.
- UBT clients will not be monitored.
- Clients that are onboarded on the LAG interfaces will not be monitored.

Secure client considerations

1. For device-profile clients without security(dot1x/macauth) RADIUS-latency is not applicable.
2. For Port-security client's RADIUS-latency and authentication_latency are not applicable.
3. When a client is authenticated via device-mode, all Client-Insight entries on the port except device MAC will be cleared from DB. Further, Client-Insight will only monitor device MAC client on the port and ignore other clients.
4. UBT clients will not be monitored by Client-Insight.

Authentication completion time calculation for some special cases is detailed below:

Case 1:

1. Interface configured as auth-priority dot1x mac-auth for MacAuth client.
2. Client state changed from Auth In-Progress to Interim-Auth Success(MacAuth)
3. Interface configured high priority auth-method failed(Dot1x)
4. (d) Client state changed from Interim-Auth Success(MacAuth) to Final-Auth Success(MacAuth)
5. **Auth_completion_time** is updated in this point In this case client onboarded after Interim-Auth (MacAuth) Success time, but **auth_completion_time** is updated after higher priority auth-method(dot1x) failed. Hence, client authentication latency will be higher than the actual authentication latency.

Case 2:

1. Interface configured as auth-priority dot1x mac-auth for dot1x client
2. Client state changed from Auth In-Progress to Interim-Auth Success(MacAuth).
3. Interface configured high priority auth-method failed(Dot1x)
4. Client state changed from Interim-Auth Success(MacAuth) to Final-Auth Success(MacAuth)
5. **Auth_completion_time** is updated in this point
6. Supplicant downloaded in background successfully and client moved Final-Auth Success(Dot1x). In this case, client onboarded after dot1x client moved to **Final-Auth Success**, but **auth_completion_time** value is updated once MacAuth client moved to **Final-Auth Success**. Therefore, client authentication latency will be lesser than the actual authentication latency.

Feature Interoperability

- DHCP snooping must be enabled for L3 onboarding stage updates.
- A Traffic Insight instance must be created to check the average DNS latency values.
- Authentication is not required for dynamic clients. Therefore, if port access is disabled on the port, it will be considered as L2 successful soon after the MAC address is learnt. Client-Insight will print the event log as **Auth Successful** for non-secured clients.
- DHCPv6 snooping doesn't support static-attributes option, hence DHCPv6 Server attributes will not be printed in both Client Insight event log and in diag-dump output.
- Port_name will be empty for Dynamic Clients in both OVSDB and event logs.
- DHCPv4 and DHCPv6 onboarding events are displayed based on the Enablement of DHCPv4 or DHCPv6 snooping.
- Once L3 onboarding is successful either when DHCPv4 or DHCPv6 complete, then any further attributes exchanged are not captured in Client-Insight per VLAN onboarding columns. They would be updated in the per VLAN ongoing columns.

The following table describes the features support across platforms that are required for publishing client-insight information.

- Port-Access : Provides detail about secure L2 onboarding.
- DHCP-Snooping: Provides DHCP onboarding detail for the clients.
- Traffic-Insight: Computes DNS latency and publishes it to client-insight table.

Table 2: Feature support across platforms

| Platform | Port-Access | DHCP-Snooping | DNS on-boarding | DNS avg latency |
|----------|---------------|---------------|-----------------|-----------------|
| 4100i | Supported | Supported | Not Supported | Not Supported |
| 5420 | Supported | Supported | Not Supported | Not Supported |
| 6000 | Supported | Supported | Not Supported | Not Supported |
| 6100 | Supported | Supported | Not Supported | Not Supported |
| 6200 | Supported | Supported | Not Supported | Not Supported |
| 6300 | Supported | Supported | Supported | Supported |
| 6400 | Supported | Supported | Supported | Supported |
| 8100 | Supported | Supported | Not Supported | Not Supported |
| 8325 | Supported | Supported | Not Supported | Not Supported |
| 8360 | Supported | Supported | Not Supported | Supported |
| 8400 | Not Supported | Supported | Not Supported | Not Supported |
| 10000 | Supported | Supported | Not Supported | Not Supported |

Based on the table above:

On platforms that don't support **Port-Access** (8400 and 10000), L2 latency will always be Zero. As only dynamic clients are learnt, as soon as MAC is learnt for the client, L2 onboarding is considered to be successful. RADIUS-latency (shown as RADIUS-Latencies) value will not be available.

In the on-boarding events, L2 onboarding will always be marked successful with 0 latency value.

On platforms that don't support **Traffic-Insight** (4100i, 6100, , 6200, 8325, 8400 and 10000), DNS onboard latency and **Average DNS Latency** information will not be available, along with traffic-insight configuration related to client-telemetry.

- On platforms that support **Port-Access**, **Traffic-insight** and **DHCP-Snooping** (6300, 6400 and 8360), all the telemetry attributes will be available.
 - Authentication-Latency
 - DHCP-Latency
 - L2, L3 failure status
 - On-boarding events
 - DNS onboard latency
 - Average DNS-Latency

Platform specific scale numbers

The following table shows scale support values for clients:

- **soft-limit** : Indicates the recommended client-limit for this feature
- **hard-limit** : Maximum client-limit the feature can handle. New client information is not maintained in client-insight table, after hitting this limit.

Table 3: *Scale support for clients*

| Platform | soft-limit | hard-limit |
|---------------|------------|------------|
| 8325
8325P | 1024 | 2048 |
| 8400 | 1024 | 4096 |
| 10000 | 1024 | 2048 |

Troubleshooting Client Insight

How do you check for a client's onboarding history?

To check a client's onboarding history, validate the client's onboarding event logs using the **sh events -c client-insight -r** command.

L3 latency data is not present for a client

if L3 latency data is not present for a client in the diag-dump output, validate the DHCP snooping binding table.

Client details is missing in the client-insight table

If any client MAC address is not present in the MAC address table, the client-insight table will not have any information regarding that client.

Client Insight Commands

client-insight enable

```
client-insight enable
no client-insight enable
```

Description

Enables the Client Insight feature on the device. Client Insight is disabled by default at the device level. The **no** form of the command disables Client Insight.

Examples

Enabling the Client Insight feature:

```
switch(config)# client-insight enable
```

Disabling the Client Insight feature:

```
switch(config)# no client-insight enable
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---------------------|
| 10.11 | Command introduced. |

Command Information

| Platforms | Command context | Authority |
|---|-----------------|--|
| 8325
8325H
8325P
8400
10000 | config | Administrators or local user group members with execution rights for this command. |

client-insight on-boarding event logs

```
client-insight  
  event-log  
  client-onboarding
```

Description

Enables generation of event logs that lists the onboarding status of each client. Onboarding event logs are disabled by default. For onboarding event logs to work, the Client Insight feature should be enabled before client onboarding. Use the no form of the command to disable onboarding event logs for clients.

| Parameter | Description |
|-------------------|---|
| event-log | Configure client onboarding event logs. |
| client-onboarding | Enable client onboarding event logs. |

Examples

Enabling client onboarding event logs:

```
switch(config)# client-insight event-log client-onboarding
```

Disabling client onboarding event logs:

```
switch(config)# no client-insight event-log client-onboarding
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---------------------|
| 10.11 | Command introduced. |

Command Information

| Platforms | Command context | Authority |
|---|-----------------|--|
| 8325
8325H
8325P
8400
10000 | config | Administrators or local user group members with execution rights for this command. |

diag-dump client-insight basic

```
diag-dump client-insight basic
```

Description

Displays the status of the Client Insight feature—whether enabled or disabled globally. It also displays latencies for all active clients that are onboarded.

Examples

```
switch# diag-dump client-insight basic

MAC : 00:50:56:96:07:06
-----
Overall on-boarding status      : failed
Overall on-boarding failure reason : l4_onboarding_failed

L2 on-boarding detail
-----
L2 on-boarding status          : successful
L2 on-boarding failure reason  : -
L2 on-boarding start time     : 08/27/2024 06:56:55.295950 UTC
L2 on-boarding end time       : 08/27/2024 06:56:55.295950 UTC
L2 on-boarding latency        : 0 min, 0 sec, 0 us
802.1x RADIUS latency         : -
MAC-Auth RADIUS latency       : -

L3 on-boarding detail
-----
IP on-boarding status          : successful
IP on-boarding failure reason  : -
L3 on-boarding latency        : 0 min, 1 sec, 8781 us
VLAN : 10
-----
```

```

IP details
-----
IPv4 on-boarding status      : successful
IPv6 on-boarding status      : -

DHCPv4
-----
Status      : successful
Failure reason : -
Start time   : 08/27/2024 06:56:55.255191 UTC
End time     : 08/27/2024 06:56:56.263972 UTC
Client IP    : 10.10.10.11
Server IP    : 10.10.10.2
DNS Server IP : -
DHCPv6
-----
Status      : -
Failure reason : -
Start time   : -
End time     : -
Client IP    : -
Server IP    : -
DNS Server IP : -

L4 on-boarding detail
-----
DNS details
-----
DNS on-boarding status : failed
Failure reason          : Client did not receive valid DNS response
Server IP: 10.10.10.2
-----
On-boarding latency    : -
DNS request time       : 08/27/2024 06:57:28.436295 UTC
DNS response time      : -
Server IP: 10.10.10.2
-----
Last Known Average latency      : 8684usec
DNS start time for latency calculation : 08/27/2024 06:56:46.999054 UTC
DNS end time for latency calculation  : 08/27/2024 07:00:55.721475 UTC
Number of Cumulative DNS requests   : 27
Cumulative Error Statistics:
Server IP: 10.10.10.2
-----
DNS Total Failures      : 27
DNS RRset Exists Errors : 8
DNS Non RRset Exists Errors : 10
DNS Not Implemented Errors : 9
L2 on-going detail
-----
L2 on-going status      : successful
L2 on-going failure reason : -
L3 on-going detail
-----
L3 on-going status      : successful
L3 on-going failure reason : -
VLAN : 10
-----
IP details
-----
IPv4 on-going status      : successful
IPv6 on-going status      : -

```

```
DHCPv4
-----
Status      : successful
Failure reason : -
```

```
DHCPv6
-----
Status      : -
Failure reason : -
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---------------------|
| 10.11 | Command introduced. |

Command Information

| Platforms | Command context | Authority |
|---|-----------------------------|--|
| 8325
8325H
8325P
8400
10000 | Operator (>) or Manager (#) | Administrators or local user group members with execution rights for this command. |

show capacities client-insight-client-limit

show capacities client-insight-client-limit

Description

Displays the maximum number of clients supported by the Client Insight feature on the switch.

Examples

```
switch# show capacities client-insight-client-limit
System Capacities: Filter Client-Insight client limit
Capacities Name                                     Value
-----
Maximum number of clients supported by Client-Insight feature 4096
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---------------------|
| 10.11 | Command introduced. |

Command Information

| Platforms | Command context | Authority |
|---|-----------------------------|--|
| 8325
8325H
8325P
8400
10000 | Operator (>) or Manager (#) | Administrators or local user group members with execution rights for this command. |

show capacities-status client-insight-client-limit

show capacities-status client-insight-client-limit

Description

Displays the maximum number of clients learnt by the Client Insight feature on the switch.

Examples

```
switch# show capacities-status client-insight-client-limit
System Capacities Status: Filter Client-Insight client limit
Capacities Status Name                                     Value Maximum
-----
Number of clients learnt by Client-Insight feature         0          4096
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---------------------|
| 10.11 | Command introduced. |

Command Information

| Platforms | Command context | Authority |
|---|-----------------------------|--|
| 8325
8325H
8325P
8400
10000 | Operator (>) or Manager (#) | Administrators or local user group members with execution rights for this command. |

show events -c client-insight

show events -c client-insight

Description

Displays all the events logged by the Client Insight feature.

Following events are logged by the Client Insight feature:

Table 1: *Events Logged by Client Insight*

| Process | Event ID | Severity | Message | Description |
|-----------------|----------|----------|--|---|
| client-insightd | 14301 | Info | Client {mac} {vlans} on {port_name} successfully on-boarded. Client on-boarding started at {ob_start_ts}; L2 complete at {l2_end_ts}; L3 complete at {l3_end_ts} | Client successfully on-boarded with given timestamp values. |
| client-insightd | 14302 | Info | Client {mac} {vlans} on {port_name} partial success in on-boarding. L2 status:{l2_ob_state} L3 status:{l3_ob_state}. Client on-boarding started at {ob_start_ts};L2 complete at {l2_end_ts}; L3 complete at {l3_end_ts} | Client on-boarding is partial-successful with given timestamp values. |
| client-insightd | 14303 | Info | Client {mac} on {port_name} failed to on-board with status: {onboarding_status} reason_code: {failure_phase_id} | Client failed to on-board with given status and reason code. |
| client-insightd | 14304 | Info | Maximum system wide client limit {client-number} reached | Maximum system wide client limit is reached |
| client-insightd | 14305 | Info | Maximum system wide client limit {client-number} reached | Maximum system wide client limit is reached |
| client-insightd | 14306 | Info | Client {mac} successfully on-boarded on VLAN {vlans}; Client on-boarding started at {ob_start_ts}; L2 complete at {l2_end_ts}; L3 complete at {l3_end_ts}; ARP to GW response received at {arp_end_ts}; DNS on-boarding to (dns_server_ip) completed at {dns_end_ts} | Client successfully on-boarded with given timestamp values. |
| client-insightd | 14307 | Info | Client {mac} on-boarded on VLANs {vlans} and failed on VLANs{failed_vlans}; Client on-boarding started at {ob_start_ts}; L2 complete at {l2_end_ts}; L3 complete at {l3_end_ts}; ARP to GW response received at {arp_end_ts}; DNS on-boarding to (dns_server_ip) completed at {dns_end_ts}; L2 status {l2_ob_state} failure_reason_code – {l2_failure_reason}; L3 status {l3_ob_state} failure_reason_code – {l3_failure_reason}; DNS on-boarding status {dns_status} failure_reason_code – {dns_failure_reason} | Client on-boarding is partial-successful with given timestamp values. |
| client-insightd | 14308 | Info | Client {mac} on-boarded on VLAN {vlans} and failed on VLANs {failed_vlans} Port {port} auth-status {auth-status} auth-type {auth-type} auth-latency {auth-latency} dot1x-auth-failure-reason {dot1x-auth-failure-reason} mac-auth-failure-reason | Client L2 on-boarding details. |

| Process | Event ID | Severity | Message | Description |
|-----------------|----------|----------|--|------------------------------------|
| | | | {mac-auth-failure-reason} radius-server {radius-server} assigned-role {assigned-role} assigned-role-type {assigned-role-type} | |
| client-insightd | 14309 | Info | Client {mac} on-boarded on VLAN {successfulvlans} Port {port} dhcpv4-status {dhcpv4-status} dhcpv4-failure-reason {dhcpv4-failure-reason} dhcpv4-server{dhcpv4-server} dhcpv4-client {dhcpv4-client} dhcpv4-latency {dhcpv4-latency} | Client DHCPV4 on-boarding details. |
| client-insightd | 14310 | Info | Client {mac} on-boarded on VLAN {successfulvlans} Port {port} dhcpv6-status {dhcpv6-status} dhcpv6-failure-reason {dhcpv6-failure-reason} dhcpv6-server{dhcpv6-server} dhcpv6-client {dhcpv6-client} dhcpv6-latency {dhcpv6-latency} | Client DHCPV6 on-boarding details. |
| client-insightd | 14311 | Info | Client {mac} on-boarded on Port {port} dns-status {dns-status} dns-failure-reason {dns-failure-reason} dns-server {dns-server} dns-latency {dns-latency} | Client DNS on-boarding details. |

Example

```
| 2024-10-10T06:55:56.589927+00:00 6300 client-insightd[46406]: Event|14308|LOG_
INFO|CDTR|1|Client 00:50:56:96:a1:ff on-boarded on VLAN 100 and failed on VLANs -
Port auth-status successful auth-type - auth-latency 0ms dot1x-auth-failure-
reason - mac-auth-failure-reason - radius-server - assigned-role - assigned-role-
type -
| 2024-10-10T06:55:56.590020+00:00 6300 client-insightd[46406]: Event|14309|LOG_
INFO|CDTR|1|Client 00:50:56:96:a1:ff on-boarded on VLAN 100 Port dhcpv4-status
successful dhcpv4-failure-reason - dhcpv4-server20.20.20.3 dhcpv4-client
20.20.20.10 dhcpv4-latency 1007ms
| 2024-10-10T06:55:56.590104+00:00 6300 client-insightd[46406]: Event|14311|LOG_
INFO|CDTR|1|Client 00:50:56:96:a1:ff on-boarded on Port 1/1/4 dns-status - dns-
failure-reason - dns-server - dns-latency 0ms
| 2024-10-10T06:58:11.603797+00:00 6300 client-insightd[46406]: Event|14308|LOG_
INFO|CDTR|1|Client 00:50:56:96:a1:ff on-boarded on VLAN - and failed on VLANs 100
Port auth-status successful auth-type - auth-latency 0ms dot1x-auth-failure-
reason - mac-auth-failure-reason - radius-server - assigned-role - assigned-role-
type -
| 2024-10-10T06:58:11.603886+00:00 6300 client-insightd[46406]: Event|14309|LOG_
INFO|CDTR|1|Client 00:50:56:96:a1:ff on-boarded on VLAN - Port dhcpv4-status
failed dhcpv4-failure-reason - dhcpv4-server- dhcpv4-client - dhcpv4-latency 0ms
| 2024-10-10T06:58:11.603973+00:00 6300 client-insightd[46406]: Event|14311|LOG_
INFO|CDTR|1|Client 00:50:56:96:a1:ff on-boarded on Port 1/1/4 dns-status - dns-
failure-reason - dns-server - dns-latency 0ms
| 2024-10-10T06:59:00.612861+00:00 6300 client-insightd[46406]: Event|14308|LOG_
INFO|CDTR|1|Client 00:50:56:96:a1:ff on-boarded on VLAN 100 and failed on VLANs -
Port 1/1/4 auth-status successful auth-type dot1x auth-latency 14ms dot1x-auth-
failure-reason - mac-auth-failure-reason - radius-server 20.20.20.2 assigned-role
RADIUS_0 assigned-role-type radius-assigned
```



```
| 2024-10-10T06:59:00.612953+00:00 6300 client-insightd[46406]: Event|14309|LOG_
INFO|CDTR|1|Client 00:50:56:96:a1:ff on-boarded on VLAN 100 Port 1/1/4 dhcpv4-
status successful dhcpv4-failure-reason - dhcpv4-server20.20.20.3 dhcpv4-client
20.20.20.10 dhcpv4-latency 4124ms
| 2024-10-10T06:59:00.613036+00:00 6300 client-insightd[46406]: Event|14311|LOG_
INFO|CDTR|1|Client 00:50:56:96:a1:ff on-boarded on Port 1/1/4 dns-status - dns-
failure-reason - dns-server - dns-latency 0ms
| 2024-10-10T07:00:54.623271+00:00 6300 client-insightd[46406]: Event|14308|LOG_
INFO|CDTR|1|Client 00:50:56:96:88:8f on-boarded on VLAN - and failed on VLANs -
Port auth-status successful auth-type - auth-latency 0ms dot1x-auth-failure-
reason - mac-auth-failure-reason - radius-server - assigned-role - assigned-role-
type -
| 2024-10-10T07:00:54.623358+00:00 6300 client-insightd[46406]: Event|14311|LOG_
INFO|CDTR|1|Client 00:50:56:96:88:8f on-boarded on Port 1/1/46 dns-status - dns-
failure-reason - dns-server - dns-latency 0ms
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|--|
| 10.15 | Introduces event IDs 14309, 14310 and 14311. |
| 10.11 | Command introduced. |

Command Information

| Platforms | Command context | Authority |
|---|--------------------------------|---|
| 8325
8325H
8325P
8400
10000 | Operator (>) or Manager
(#) | Administrators or local user group members with execution
rights for this command. |

show tech client-insight

`show tech client-insight`

Description

Displays if the global Client Insight and client on-boarding event log features are enabled or disabled. Also displays the latencies for all active clients that are onboarded.

Examples

```
switch# show tech client-insight

=====
Show Tech executed on Thu May 18 15:05:43 2022
=====
```

```

=====
[Begin] Feature client-insight
=====
*****
Command : show client-insight
*****
Client Insight Information:
Global client-insight      = ENABLED
Client on-boarding event logs = ENABLED
=====
[End] Feature client-insight
=====
=====
Show Tech commands executed successfully
=====

```

Displaying L2, L3 client latencies and details:

```

switch# show tech client-insight
=====
Show Tech executed on Thu Sep 22 06:34:16 2022
=====
=====
[Begin] Feature client-insight
=====

*****
Command : diag-dump client-insight basic
*****

=====
[Start] Feature client-insight Time : Thu Sep 22 06:34:16 2022
=====
-----
[Start] Daemon client-insightd
-----

Global client-insight      = ENABLED
Client on-boarding event logs = ENABLED

Displaying client entries with (mac) as key.
Total number of entries: 1

MAC : 00:11:01:00:00:08
-----
Overall on-boarding status      : -
Overall on-boarding failure reason : -

L2 on-boarding detail
-----
L2 on-boarding status          : successful
L2 on-boarding failure reason : -
L2 authentication start time   : 05/18/22 15:01:01.456789 UTC
L2 authentication end time     : 05/18/22 15:01:02.123456 UTC
L2 authentication latency      : 0 min, 0 sec, 666667 us
802.1x RADIUS latency          : -
MAC-Auth RADIUS latency        : 0 min, 0 sec, 332456 us

L3 on-boarding detail
-----
L3 on-boarding status          : in_progress

```

L3 on-boarding failure reason : -
L3 on-boarding latency : -

VLAN : 10

IP details

IPv4 on-boarding status : successful
IPv6 on-boarding status : -

DHCPv4

Status : successful
Failure reason : -
Start time : 05/18/22 15:01:02.456789 UTC
End time : 05/18/22 15:01:02.999988 UTC

DHCPv6

Status : -
Failure reason : -
Start time : -
End time : -

VLAN : 20

IP details

IPv4 on-boarding status : In_Progress
IPv6 on-boarding status : -

DHCPv4

Status : In_Progress
Failure reason : -
Start time : 05/18/22 15:01:03.256485 UTC
End time : -

DHCPv6

Status : -
Failure reason : -
Start time : -
End time : -

DNS details

Server IP: 172.16.1.8

Average latency : 0 min, 0 sec, 432456 us
DNS start time for latency calculation : 05/18/22 15:01:03.123456 UTC
DNS end time for latency calculation : 05/18/22 15:01:03.425466 UTC
Number of DNS requests : 16

Server IP: 2003::1

Average latency : 0 min, 0 sec, 432456 us
DNS start time for latency calculation : 05/18/22 15:01:03.123456 UTC
DNS end time for latency calculation : 05/18/22 15:01:03.425466 UTC
Number of DNS requests : 16

[End] Daemon client-insightd

=====
[End] Feature client-insight
=====

Diagnostic-dump captured for feature client-insight
=====

[End] Feature client-insight
=====

```

=====
Show Tech commands executed successfully
=====
Show Tech took 43 seconds for execution

=====
Show Tech executed on Thu Sep 22 06:34:16 2022
=====
[Begin] Feature client-insight
=====

*****
Command : diag-dump client-insight basic
*****

=====
[Start] Feature client-insight Time : Thu Sep 22 06:34:16 2022
=====
-----
[Start] Daemon client-insightd
-----

Global client-insight          = ENABLED
Client on-boarding event logs = ENABLED

Displaying client entries with (mac) as key.
Total number of entries: 1

MAC : 00:11:01:00:00:08
-----
Overall on-boarding status      : -
Overall on-boarding failure reason : -

L2 on-boarding detail
-----
L2 on-boarding status          : successful
L2 on-boarding failure reason  : -
L2 authentication start time   : 05/18/22 15:01:01.456789 UTC
L2 authentication end time     : 05/18/22 15:01:02.123456 UTC
L2 authentication latency      : 0 min, 0 sec, 666667 us
802.1x RADIUS latency          : -
MAC-Auth RADIUS latency        : 0 min, 0 sec, 332456 us

L3 on-boarding detail
-----
L3 on-boarding status          : in_progress
L3 on-boarding failure reason  : -
L3 on-boarding latency         : -

VLAN : 10
-----
IP details
-----
IPv4 on-boarding status        : successful
IPv6 on-boarding status        : -

DHCPv4                         DHCPv6
-----
Status                          : successful          Status : -
Failure reason                  : -                  Failure reason : -
Start time                      : 05/18/22 15:01:02.456789 UTC Start time : -

```

```

End time      : 05/18/22 15:01:02.999988 UTC      End time      : -

VLAN : 20
-----
IP details
-----
IPv4 on-boarding status      : In_Progress
IPv6 on-boarding status      : -

DHCPv4                      DHCPv6
-----
Status      : In_Progress      Status      : -
Failure reason : -              Failure reason : -
Start time   : 05/18/22 15:01:03.256485 UTC   Start time   : -
End time     : -                  End time     : -

DNS details
-----
Server IP: 172.16.1.8
-----
Average latency      : 0 min, 0 sec, 432456 us
DNS start time for latency calculation : 05/18/22 15:01:03.123456 UTC
DNS end time for latency calculation   : 05/18/22 15:01:03.425466 UTC
Number of DNS requests      : 16

Server IP: 2003::1
-----
Average latency      : 0 min, 0 sec, 432456 us
DNS start time for latency calculation : 05/18/22 15:01:03.123456 UTC
DNS end time for latency calculation   : 05/18/22 15:01:03.425466 UTC
Number of DNS requests      : 16

-----
[End] Daemon client-insightd
-----
=====
[End] Feature client-insight
=====
Diagnostic-dump captured for feature client-insight
=====
[End] Feature client-insight
=====

=====
Show Tech commands executed successfully
=====
Show Tech took 43 seconds for execution

```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---------------------|
| 10.11 | Command introduced. |

Command Information

| Platforms | Command context | Authority |
|---|-----------------------------|--|
| 8325
8325H
8325P
8400
10000 | Operator (>) or Manager (#) | Administrators or local user group members with execution rights for this command. |

The public key infrastructure (PKI) feature enables administrators to manage digital certificates on the switch. The switch uses certificates to validate SSH clients when acting as an SSH server, and when communicating with syslog servers when TLS encryption is used.

PKI concepts

Digital certificate

A digital certificate is an electronic form of identification that stores important information about an entity (such as a computer, program, or website). Certificates help secure digital transactions by enabling the end parties to validate each other's identity. Digital certificates are issued by a certificate authority (CA) and are composed of an encoded string of characters (usually stored in a file). For example:

```
-----BEGIN CERTIFICATE-----
MIIDS DCCApG CCQDJotuPPj 9GCDANBgqhkiG9w0BAQsAADCBCqzELMAkGA1UEBh
VVMxEzARBgNVBAGMCKNhG1mb3JuaWExEDAOBgNVBACBM1JvY2tsaW4xDDAKBg
BAoMA0hQTjEVMBMGAlUECwwMSFBOUm9zZXZpbGx1MSokwAYDVQQDDCFocG5zd
...
MioDy0096DvSMPsnOaI+jnZ3AozN8y+nLgotXUsg36pO/Ncc51oQhyUdcAbgA1
rzSLgyTnpXZKumvlaoTk3pziF7m5V103GTbgHGSFCzgO6QWxVxu9d7ju1o59S
aOIT7JSsYI5LsLpVz9ZqS599rj/1LoH+rLN1RDVXpS+J51
-----END CERTIFICATE-----
```

The switch can import PEM encoded ITU-T X.509 v3 certificates. (Certificates can be converted to human-readable form using a software decoder.)

An X.509 digital certificate typically includes the following information:

- Signature algorithm: The cryptographic algorithm used to generate the digital signature.
- Signature value: Digital signature of the certificate generated using the CA's private key.
- Version number: X.509 version number.
- Serial number: Certificate serial number.
- Issuer name: Name of the certificate authority (CA) that issued the certificate.
- Validity period: Beginning and ending dates.
- Subject name: Name of the entity to which the certificate is issued.
- Subject public key and key algorithm.
- Key usage extension: Purpose of the certificate.

Certificate authority

A certificate authority (CA) is an entity that can issue and sign digital certificates. A CA can be a well-known, trusted commercial company, or a private entity controlled by your organization. For a commercial CA, the CA validates the credentials of a user before issuing a certificate and signing it,

guaranteeing a certificate holder's identity. For a private CA, self-signed certificates can be generated as needed for devices on your network without paying a commercial company.

Root certificate

A root certificate is a self-signed certificate that is deemed the root of trust for a certificate chain. This is the certificate that identifies a CA, and is used by the CA to sign any certificates that it issues. When two peers attempt to establish a secure connection, they use the CA's public key to verify that each other's certificates were indeed signed by a trusted certificate authority.

Each root CA certificate has a unique fingerprint, which is the hash value of the certificate content. The fingerprint of a root CA certificate can be used to authenticate the validity of the root CA.

In a certificate chain, the root CA generates a self-signed certificate, and each lower level CA holds a CA certificate (intermediate certificate) issued by the CA immediately above it. The hierarchy of these certificates forms a *chain of trust*.

Leaf certificate

This is the certificate used by a software entity, such as a syslog client, to identify itself to a peer when establishing a secure connection.

Intermediate certificate

An intermediate certificate is a CA which has been issued by the root certificate or by another intermediate certificate. Intermediate CAs can issue leaf certificates and sit in between the root and leaf certificates. The use of an intermediate CA allows administrators to segregate their PKI groups.

Trust anchor

This is the certificate that acts as the base of trust for the validation of other certificates. A trust anchor can be a root or intermediate certificate issued by a CA.

OCSP

The online certificate status protocol (OCSP) is a real-time method for determining the revocation status of a certificate. When two peers attempt to establish a secure connection, they can query an OCSP responder to determine the status (valid or revoked) of each other's certificates. The OCSP responder for a certificate is typically provided by a server managed by the CA that issued the certificate.

PKI on the switch

The AOS-CX Switch Series switches provides for installation of certificate authority (CA) certificates and the generation and installation of leaf certificates.

Trust anchor profiles

The switch supports 64 trust anchor (TA) profiles. Each TA profile stores a trusted CA certificate. The certificate can be either a root CA certificate, which must be self-signed, or an intermediate CA certificate that is issued by another CA.



The certificate must have its `BasicConstraints` field with CA key set to **true**, and its **KeyUsage** extension field set with **keyCertSign** and/or **cRLSign**.

CA certificates are used to:

- Validate the certificates that remote peers present when attempting to establish a secure connection with a service on the switch, for example, the SSH server.
- Validate leaf certificates installed on the switch that are used, for example, by the syslog client, the Web UI, or REST API.

The TA profile also enables configuration of real-time checking of certificate revocation (through OCSP).

Leaf certificates

Leaf certificates can be installed on the switch for use by features such as the syslog client, the Web UI, or REST API. If you are purchasing a certificate from a trusted CA, the switch can generate the certificate signing request (CSR) that is used to obtain the certificate. The switch can also directly generate self-signed certificates. Alternatively, the certificate and private key can be generated outside the switch and then imported. X509 certificate management software such as OpenSSL can be used to generate the private key and CSR and then combine the certificate and private key into one PEM or PKCS#12 file suitable for importation into the switch.

Mandatory matching of peer device hostname

While validating the peer device certificates, the switch checks that the peer device configured hostname matches either the Subject Alternative Name (SAN) field or the Common Name (CN) within the certificate Subject field. If the SAN field is present and matches the hostname, validation succeeds, otherwise it fails. If the SAN field is not present, and the CN matches the hostname, validation succeeds, otherwise it fails.

PKI EST

EST (Enrollment over Secure Transport) (RFC 7030) defines the protocol that devices use to request trusted certificate authority (CA) certificates and to enroll / re-enroll device certificates from CA services using secure channels, specifically HTTP over TLS.

Devices can be configured to request the trusted CA certificates and to request enrollment, and re-enrollment of device certificates automatically, without the need for administrator intervention, while maintaining the security and integrity of the whole enrollment process.

The switch includes an EST client implemented as a part of the PKI infrastructure.

For detailed CLI command descriptions, see:

- [PKI commands](#)
 - [PKI EST commands](#)
-



EST usage overview

- The EST client on the switch requires EST profile configuration, including EST server URL and the VRF providing HTTP connection to the EST server.
- At the time the URL is set in the EST profile, the switch connects to the EST server and downloads the trusted CA certificate chain. To accommodate CA certificate updates, the certificate chain is also downloaded before a certificate enrollment or re-enrollment is attempted.

- EST supports up to:
 - 16 EST profiles
 - 63 trusted CA certificates downloaded from EST servers.
 - 18 device certificates enrolled through EST services.
- EST profile configuration is supported through the CLI and the REST API **PKI_EST_Profile**.
- CA certificate request and device certificate enrollment is supported through the CLI and the REST custom API **CertificateManager /certificate**.

Prerequisites for using EST for certificate enrollment

- Establish the PKI infrastructure for your organization, with the CA chain and service ready to issue certificates. Issue a service certificate for the EST server.
- Install the root CA certificate in a TA profile on the switch that will validate the EST server certificate using CLI commands **crypto pki ta-profile** and **ta-certificate**.
- Optionally, preconfigure an EST client certificate on the switch.
- Make the EST server reachable from the switch. Connect the CA service(s) to the EST server. If there is a client certificate for the EST client, install the root CA certificate on the server that will validate the client certificate.

EST profile configuration

In the global configuration context, create an EST profile and enter its context:

```
crypto pki est-profile <EST-NAME>
```

In an EST profile context, configure the EST profile parameters using these commands:

```
url <URL>
vrf <VRF-NAME>
username <USERNAME> password [ciphertext <CIPHERTEXT-PASSWORD> |plaintext
<PLAINTEXT-PASSWORD>]
retry-interval <INTERVAL>
retry-count <RETRIES>
arbitrary-label <LABEL>
arbitrary-label-enrollment <LABEL>
arbitrary-label-reenrollment <LABEL>
reenrollment-lead-time <LEAD-TIME>
```

Certificate enrollment

In the global configuration context, create a certificate and enter its context:

```
crypto pki certificate <CERT-NAME>
```

In a certificate configuration context, configure the certificate parameters:

```
key-type {rsa [key-size <K-SIZE>] | ecdsa [curve-size <C-SIZE>]}
subject [common-name <COMMON-NAME>]
        [country <COUNTRY>]
        [locality <LOCALITY>]
        [org <ORG-NAME>]
        [org-unit <ORG-UNIT>]
        [state <STATE>]
```

In a certificate configuration context, enroll the certificate using an EST service:

```
enroll est-profile <EST-NAME>
```

Certificate re-enrollment

- The re-enrollment request is sent automatically to the same EST server that was used for the original enrollment.
- The switch presents the enrolled certificate being re-enrolled to the EST server for authentication. If the certificate has expired or authentication fails for any reason, the switch falls back to using the EST client certificate or the username and password in the EST profile, whichever is configured, and performs a new certificate enrollment.
- Re-enrollment lead-time is configurable in the EST profile using CLI command **reenrollment-lead-time**. It sets the number of days before certificate expiry date that certificate re-enrollment will be initiated.

Checking EST profile and certificate configuration

Show the list of EST profiles or details of a specific EST profile:

```
show crypto pki est-profile [<EST-NAME>]
```

Show a list of TA profiles whether directly configured or EST-enrolled, or details of a specific TA profile:

```
show crypto pki ta-profile [<TA-NAME>]
```

Show the list of certificates whether directly configured or EST-enrolled, or details of a specific certificate:

```
show crypto pki certificate [<CERT-NAME> [plaintext | pem]]
```

Show all certificates assigned to the switch EST client as well as certificates that are assigned to other applications on the switch.:

```
show crypto pki application
```

EST best practices

Ensure the following:

- A time synchronization service is used on both the switch (the EST client) and the EST server.
- In all CA certificates, the **Basic Constraints** field has **CA** set to **true**, **pathlen** is set appropriately, and **Key Usage** is set with **keyCertSign**.
- In all leaf certificates, the **Extended Key Usage** field is set with the appropriate purpose as follows:
 - For server certificates, set with **serverAuth**. The **Key Usage** field has at least one of **digitalSignature**, **keyEncipherment**, or **keyAgreement**.
 - For client certificates, set with **clientAuth**. The **Key Usage** field has at least one of **digitalSignature**, or **keyAgreement**.

- The EST server is configured to include the intermediate issuer CA certificates in the trusted CA certificate chain that the EST server sends to the switch (the EST client) upon request.

Example using EST for certificate enrollment

This example illustrates the configuration of an EST profile and enrolling application certificates using an EST server.

Prerequisites:

- An EST server is reachable from the switch management port.
- Availability of the root CA certificate used to validate the server certificate.

This example shows the following:

- Installing the root CA certificate as a TA profile for validation of the EST server certificate.
- Configuring an EST profile with the EST server information, including the username and password for client authentication and the EST server URL.
- Issuing a request to enroll a leaf certificate using the EST server.
- Assigning the enrolled certificate to the EST client and syslog client on the switch.

Each section in the below example is preceded by descriptive text.

Example

g'

```
=====
The switch in its default configuration state.
=====
```

```
switch# show running-config
Current configuration:
!
!Version AOS-CX FL.10.06.0001CM
!export-password: default
user admin group administrators password ciphertext AQBapTLgcT+DNrtd0bmdXIP2L0AY
NUpwwyQEIZX4oMKtwlXcYgAAAOmKlfxH+ugf3Fe2JuWar2uKG7A/R6bqMO/ZHS364NompXV/Ko37ZhCq
cFpaOJsk0l+IJPRUkbpigCeEObM67Od8/vrASJaO6EAj+RBnWCrifwdChcUUS3XpbCUl7dmxYHNg
!
!
ssh server vrf default
ssh server vrf mgmt
vsf member 1
    type jl668a
vlan 1
spanning-tree
interface mgmt
    no shutdown
    ip dhcp
interface 1/1/1
```

```

    no shutdown
    no routing
    vlan access 1
interface 1/1/2
    no shutdown
    no routing
    vlan access 1
interface 1/1/3
    no shutdown
    no routing
    vlan access 1
...
interface 1/1/26
    no shutdown
    no routing
    vlan access 1
interface 1/1/27
    no shutdown
    no routing
    vlan access 1
interface 1/1/28
    no shutdown
    no routing
    vlan access 1
interface vlan 1
    ip dhcp
!
!
https-server vrf default
https-server vrf mgmt
switch#

```

```

=====
The mgmt port is connected to a network with DNS available and the
EST server reachable.
=====

```

```

switch# show interface mgmt
Address Mode           : dhcp
Admin State            : up
Mac Address             : 38:21:c7:59:cd:81
IPv4 address/subnet-mask : 999.100.205.146/24
Default gateway IPv4    : 999.100.205.1
IPv6 address/prefix     :
IPv6 link local address/prefix: fe80::3a21:c7ff:fe59:cd81/64
Default gateway IPv6    :
Primary Nameserver      :
Secondary Nameserver    :
switch#

```

```

=====

Address Mode           : dhcp
Admin State            : up
Mac Address             : 38:21:c7:59:cd:81
IPv4 address/subnet-mask : 999.100.205.146/24
Default gateway IPv4    : 999.100.205.1
IPv6 address/prefix     :
IPv6 link local address/prefix: fe80::3a21:c7ff:fe59:cd81/64
Default gateway IPv6    :

```

```

Primary Nameserver      :
Secondary Nameserver    :
switch#

```

```

=====
Configure the root CA cert as a TA profile that will validate the server cert.
=====

```

```

switch# config
switch(config)#
switch(config)# crypto pki ta-profile root-ca-for-est-server
switch(config-ta-root-ca-for-est-server)#
switch(config-ta-root-ca-for-est-server)# ta-certificate import terminal
Paste the certificate in PEM format below, then hit enter and ctrl-D:
switch(config-ta-cert)# -----BEGIN CERTIFICATE-----
NVBAYTonfig-ta-cert)# MIIB2DCCAX6gAwIBAgIJAKtmJvZZy9RdMAoGCCqGSM49BAMCMGIXCzAJBg
QKEwNIonfig-ta-cert)# AlVTMQswCQYDVQQIEwJDQTESMBAGA1UEBxMJUm9zZXZpbGx1MQwwCgYDVQ
0yMDAlonfig-ta-cert)# UEUxDjAMBgNVBASBUBFydWJhMRQwEgYDVQQDEWtkYW51c3Qtcm9vdDAeFw
...
YDVR0Ponfig-ta-cert)# VCnKTLhxfmV72nfxYpI979UsopuP5nCjHTAbMAwGA1UdEwQFMAMBAf8wCw
eo6yN0onfig-ta-cert)# BAQDAgEGMAoGCCqGSM49BAMCA0gAMEUCIQDb/uHvU8DFRTyfnP9wkli6sd
c=00 (config-ta-cert)# UvU05t7/rrVxRQIgMHGjHhaNlnkjYBG8Ei3ClUDILiKl07McMTCWVo4Ik5
switch(config-ta-cert)# -----END CERTIFICATE-----
switch(config-ta-cert)#
The certificate you are importing has the following attributes:
Subject: C = US, ST = CA, L = Roseville, O = HPE, OU = Aruba, CN = danest-root
Issuer: C = US, ST = CA, L = Roseville, O = HPE, OU = Aruba, CN = danest-root
Serial Number: 0xAB6626FXXXXD45D
TA certificate import is allowed only once for a TA profile
Do you want to accept this certificate (y/n)? y
switch(config-ta-root-ca-for-est-server)#
switch(config-ta-root-ca-for-est-server)# exit
switch(config)#
switch(config)# show crypto pki ta-profile

```

| TA Profile Name | TA Certificate | Revocation Check |
|------------------------|------------------|------------------|
| root-ca-for-est-server | Installed, valid | disabled |

```

switch(config)#

```

```

=====
Configure the EST profile with the EST server URL, username/password.
=====

```

```

switch(config)# crypto pki est-profile test-est-server
switch(config-est-test-est-server)#
switch(config-est-test-est-server)# user fred password plaintext barney
switch(config-est-test-est-server)#
switch(config-est-test-est-server)# url https://999.0.10.229:8443/.well-known/est
switch(config-est-test-est-server)#
switch(config-est-test-est-server)# exit
switch(config)#

```

```

=====
At the time the EST URL is set, the switch sends a request to the EST server to
get the set of trusted CA certs. If that is successful, TA profiles will be
auto-created for those CA certs.

```

Display the list of TA profiles and EST profile details.

```
switch(config)# show crypto pki ta-profile
```

| TA Profile Name | TA Certificate | Revocation Check |
|--------------------------|------------------|------------------|
| test-est-server-est-ta00 | Installed, valid | OCSF |
| test-est-server-est-ta02 | Installed, valid | OCSF |
| test-est-server-est-ta05 | Installed, valid | OCSF |
| test-est-server-est-ta01 | Installed, valid | OCSF |
| root-ca-for-est-server | Installed, valid | disabled |
| test-est-server-est-ta04 | Installed, valid | OCSF |
| test-est-server-est-ta03 | Installed, valid | OCSF |

```
switch(config)# show crypto pki est-profileshow crypto pki est-profile
```

| Profile Name | Downloaded
TA Profiles | Enrolled
Certificates |
|-----------------|---------------------------|--------------------------|
| test-est-server | 6 | 1 |

```
switch(config)# show crypto pki est-profile test-est-server
```

```
Profile Name      : test-est-server
Service VRF       : mgmt
Service URL       : https://999.0.10.229:8443/.well-known/est
  Arbitrary Label   : not configured
  Arbitrary Label Enrollment : not configured
  Arbitrary Label Reenrollment : not configured
Authentication Username : fred
Authentication Password :
  AQBapR7ndgoxkMlWQUQvK+Dvd3S6m+s9fdaPQwdkMbIYEMnMBgAAAHRhhliYwA==
Retry Interval    : 30 seconds
Retry Count       : 3 times
Reenrollment Lead Time : 2 days
Downloaded TA Profiles : 6
Enrolled Certificates :
  cert-for-app
switch(config)#
```

Originally, the switch only has two built-in certificates.

```
switch(config)# show crypto pki certificate
```

| Certificate Name | Cert Status | EST Status | Associated Applications |
|------------------|-------------|------------|------------------------------|
| local-cert | installed | n/a | captive-portal, est-client, |
| | | | https-server, radsec-client, |
| device-identity | installed | n/a | syslog-client |
| | | | none |

```
switch(config)#
```

=====
Create a new certificate, configure its key type, key size, and subject fields.
=====

```
switch(config)# crypto pki certificate cert-for-app
switch(config-cert-cert-for-app)#
switch(config-cert-cert-for-app)# key-type ecdsa curve-size 521
switch(config-cert-cert-for-app)# subject
Do you want to use the switch serial number as the common name (y/n)? n
Common Name: 999.100.205.146
Org Unit: Aruba-Roseville
Org Name: HPE
Locality: Roseville
State: CA
Country: US
switch(config-cert-cert-for-app)#
```

=====
Request to enroll the certificate through the EST server.
=====

```
switch(config-cert-cert-for-app)# enroll est-profile test-est-server
You are enrolling a certificate with the following attributes:
Subject: C=US, ST=CA, L=Roseville, OU=Aruba-Roseville, O=HPE,
        CN=999.100.205.146
Key Type: ECDSA (521)

Continue (y/n)? y
Certificate enrollment via test-est-server has been initiated. Please use
'show crypto pki certificate cert-for-app' to check its status.
switch(config-cert-cert-for-app)#
```

=====
Check the cert status to see if enrollment is successful. It is.
=====

```
switch(config-cert-cert-for-app)# show crypto pki certificate
```

| Certificate Name | Cert Status | EST Status | Associated Applications |
|------------------|-------------|----------------|------------------------------|
| local-cert | installed | n/a | captive-portal, est-client, |
| | | | https-server, radsec-client, |
| device-identity | installed | n/a | syslog-client |
| cert-for-app | installed | enroll success | none |

```
switch(config-cert-cert-for-app)#
switch(config-cert-cert-for-app)# exit
switch(config)#
switch(config)# show crypto pki certificate cert-for-app pem
Certificate Name: cert-for-app
```



```

Associated Applications:
  est-client
Certificate Status: installed
EST Status: enroll success
Certificate Type: regular
Intermediates:
  Subject: C = US, ST = CA, O = HPE, OU = Aruba, CN = danest-int2
  Issuer: C = US, ST = CA, O = HPE, OU = Aruba, CN = danest-int1
  Serial Number: 0x02
  Subject: C = US, ST = CA, O = HPE, OU = Aruba, CN = danest-int1
  Issuer: C = US, ST = CA, L = Roseville, O = HPE, OU = Aruba, CN = danest-
root
  Serial Number: 0x01
  Subject: C = US, ST = CA, L = Roseville, O = HPE, OU = Aruba, CN = danest-root
  Issuer: C = US, ST = CA, L = Roseville, O = HPE, OU = Aruba, CN = danest-
root
  Serial Number: 0xAB6626FXXXX45D
-----BEGIN CERTIFICATE-----
MIICizCCAjKgAwIBAgICAIGwCQYHKoZIZj0EATBOMQswCQYDVQQGEwJVUzELMAkG
A1UECBMCQ0ExDDAKBgNVBAoTA0hQRTEOMAwGA1UECxFMQXJ1YmExFDASBgNVBAMT
C2RhbmVzdC1pbnQyMB4XDTEwMTAyODE5NTczOVVoXDTIwMTEyNTE5NTczOVowbzEL
...
RTEOMAwGA1UECxFMQXJ1YmExFDASBgNVBAMTC2RhbmVzdC1pbnQxggECMAkGBYqG
SM49BAEDSAAwRQIgVC1kVieWxhpBSQVqVsQ36MbZrR4XsaGbQeu7+08gbUCIQCH
cS17gcLbNxlJlWVr2jnZpPBxy9vID38FjirJiGZ5cZw==
-----END CERTIFICATE-----
-----BEGIN CERTIFICATE-----
MIIBpzCCAU2gAwIBAgIBAJBgcqhkJOPQQBME4xCzAJBgNVBAYTA1VTMQswCQYD
VQQIEwJDQTESMBAwGA1UEChMDSFBFMQ4wDAYDVQQLEwVBCnViYTEUMBIGA1UEAxML
ZGFuZ3R0LWludDEwHhcNMjAwNTIwMDUyNDE5WWhcNMzAwNTE4MDUyNDE5WjBOMQsw
...
7ovbXodgN8lqDvB11VTJYlLBSz19FKmdMBswDAYDVROTBAAUwAwEB/zALBgNVHQ8E
BAMCAQYwCQYHKoZIZj0EAQNJADBGAIeA+i3x7KEZsXObVruM1kwqWe+QXiLKbgNL
fL077jsSMhYCIQD/dFBkH/yN0NFzb3wI7Oaoo083HY2p/47t2pIBk/JNfg==
-----END CERTIFICATE-----
-----BEGIN CERTIFICATE-----
MIIBuTCCAWGgAwIBAgIBATAJBgcqhkJOPQQBMGIxChAJBgNVBAYTA1VTMQswCQYD
VQQIEwJDQTESMBAwGA1UEBxMJU9zZXZpbGx1MQwwCgYDVQQKEwN1UEUxXjAMBGNV
BASTBUFYdWJhMRQwEgYDVQQDEwtkYW5lc3Qtc9vdDAeFw0yMDA1MjAwNTE1MjNa
...
BgNVHRMEBTADAQH/MASGA1UdDwQEAwIBBjAJBgcqhkJOPQQBA0cAMEQCIGrlZmBX
SmbhDvG9pRiXG0YmQVbvZd37jRQdE+mEk2jFAiBFghzMjUadhQbuPUTNs9A7bdYk
wej0mJe5bRpd7sqwRQ==
-----END CERTIFICATE-----
-----BEGIN CERTIFICATE-----
MIIB2DCCAX6gAwIBAgIJAKtmJvZZy9RdMAoGCCqGSM49BAMCMGIXChAJBgNVBAYT
A1VTMQswCQYDVQQIEwJDQTESMBAwGA1UEBxMJU9zZXZpbGx1MQwwCgYDVQQKEwN1
UEUxXjAMBGNVBASTBUFYdWJhMRQwEgYDVQQDEwtkYW5lc3Qtc9vdDAeFw0yMDA1
...
VCnKtlhxfmV72nfxYpI979UsopuP5nCjHTAbMAwGA1UdEwQFMAMBAf8wCwYDVROp
BAQDAgEGMAoGCCqGSM49BAMCA0gAMEUCIQDb/uHvU8DFRTyfnP9wkli6sdeo6yN0
UvUO5t7/rrVxRQIgMHGjHhaN1nkjYBG8Ei3C1UDILiKlO7McMTCWVo4Ik5c=
-----END CERTIFICATE-----
switch(config)#

=====

Certificate Name: cert-for-app
Associated Applications:
  est-client
Certificate Status: installed

```

```

EST Status: enroll success
Certificate Type: regular
Intermediates:
  Subject: C = US, ST = CA, O = HPE, OU = Aruba, CN = danest-int2
  Issuer: C = US, ST = CA, O = HPE, OU = Aruba, CN = danest-int1
  Serial Number: 0x02
  Subject: C = US, ST = CA, O = HPE, OU = Aruba, CN = danest-int1
  Issuer: C = US, ST = CA, L = Roseville, O = HPE, OU = Aruba, CN = danest-
root
  Serial Number: 0x01
  Subject: C = US, ST = CA, L = Roseville, O = HPE, OU = Aruba, CN = danest-root
  Issuer: C = US, ST = CA, L = Roseville, O = HPE, OU = Aruba, CN = danest-
root
  Serial Number: 0xAB6626FXXXXD45D
  -----BEGIN CERTIFICATE-----
  MIICizCCAjKgAwIBAgICAIGwCQYHKoZiZj0EATBOMQswCQYDVQQGEwJVUzELMAkG
  A1UECBMCQ0ExDDAKBgNVBAoTA0hQRTEOMAwGA1UECxFQXJlYmExFDASBgNVBAMT
  C2RhbmVzdC1pbnpQyMB4XDTEwMTAyODE5NTczOVVoXDTIwMTEyNTE5NTczOVowbzEL
  ...
  RTEOMAwGA1UECxFQXJlYmExFDASBgNVBAMTC2RhbmVzdC1pbnpQxggECMAkGBYqG
  SM49BAEDSAAwRQIgVC1kVieWxhpBSQVqVsQ36MbZrhR4XsaGbQeu7+08gbUCIQCH
  cS17gcLbNxJ1WVr2jnZpPBxy9vID38FjirJiGZ5cZw==
  -----END CERTIFICATE-----
  -----BEGIN CERTIFICATE-----
  MIIBpzCCAU2gAwIBAgIBAIAJBgcqhkJOPQQBME4xCzAJBgNVBAYTA1VTMzswCQYD
  VQQLIEwJDQTEMMaGA1UEChMDSFBFMQ4wDAYDVQQLEwVBCnViYTEUMBIGAlUEAxML
  ZGFuZXR0LWludDEwHhcNMjAwNTIwMDUyNDEwXW5lcnQtcmluZDQtcmluZDQtcmlu
  ...
  7ovbXodgN8lqDvB11VTJY1LBSz19FKMdMBswDAYDVR0TBAAUwAwEB/zALBgNVHQ8E
  BAMCAQYwCQYHKoZiZj0EAQNJADBGAIeA+i3x7KEZsxObVruM1kwqWe+QXiLKbgNL
  fL077jsSMhYCIQD/dFBkh/yN0NFzb3wI7Oaoo083HY2p/47t2pIBk/JNfg==
  -----END CERTIFICATE-----
  -----BEGIN CERTIFICATE-----
  MIIBuTCCAWGgAwIBAgIBATAJBgcqhkJOPQQBMGIxCzAJBgNVBAYTA1VTMzswCQYD
  VQQLIEwJDQTESMBAGA1UEBxMJUum9zZXZpbGx1MQwwCgYDVQQKEwNIEUxZjAMBGNV
  BAsTBUFydWJhMRQwEgYDVQQDEWtkYW5lc3QtcmluZDQtcmluZDQtcmluZDQtcmlu
  ...
  BgNVHRMEBTADAQH/MASGA1UdDwQEAwIBBjAJBgcqhkJOPQQBA0cAMEQCIGrlZmBX
  SmbhDvG9pRiXG0YmQVbvZd37jRQdE+mEk2jfAiBFGHzMjUadhQbuPUTNs9A7bdYk
  wej0mJe5bRpd7sqwRQ==
  -----END CERTIFICATE-----
  -----BEGIN CERTIFICATE-----
  MIIB2DCCAX6gAwIBAgIJAKtmJvZZy9RdMAoGCCqGSM49BAMCMGIxCzAJBgNVBAYT
  A1VTMzswCQYDVQQLEwJDQTESMBAGA1UEBxMJUum9zZXZpbGx1MQwwCgYDVQQKEwNIEU
  xZjAMBGNVBAsTBUFydWJhMRQwEgYDVQQDEWtkYW5lc3QtcmluZDQtcmluZDQtcmlu
  ...
  VCnKtLhxfmV72nfxYpI979UsopuP5nCjHTAbMAwGA1UdEwQFMAMBAf8wCwYDVROp
  BAQDAgEGMAoGCCqGSM49BAMCA0gAMEUCIQDb/uHvU8DFRTyfnP9wkli6sdeo6yN0
  UvU05t7/rrVxRQIgMHGjHhaNlnkjYBG8Ei3C1UDILiKlO7McMTCWVo4Ik5c=
  -----END CERTIFICATE-----
switch(config)#

=====
Initially, all applications use the default local-cert.
=====

switch(config)# show crypto pki application

Associated Applications      Certificate Name              Cert Status
-----
captive-portal              not configured, using local-cert

```

```

est-client                not configured, using local-cert
https-server              not configured, using local-cert
radsec-client              not configured, using local-cert
syslog-client              not configured, using local-cert
switch(config) #

```

```

=====
Assign the newly enrolled cert to applications as desired.
In this example, the cert is assigned to the est-client and syslog.
=====

```

```

switch(config) #
=====

```

```

switch(config) # crypto pki application est-client certificate cert-for-app
switch(config) # crypto pki application syslog-client certificate cert-for-app
switch(config) #
switch(config) # show crypto pki application

```

| Associated Applications | Certificate Name | Cert Status |
|-------------------------|------------------|----------------------------------|
| ----- | ----- | ----- |
| captive-portal | | not configured, using local-cert |
| est-client | cert-for-app | valid |
| https-server | | not configured, using local-cert |
| radsec-client | | not configured, using local-cert |
| syslog-client | cert-for-app | valid |
| switch(config) # | | |

Example including the use of an intermediate certificate

This example shows the following:

- Installing a root CA as a TA profile.
- Creating a CSR for a leaf certificate.
- Installing the signed leaf certificate issued by an intermediate CA. The intermediate CA certificate is included after the signed leaf certificate.

Each section in the below example is preceded by descriptive text.

Example

```

=====
Install root CA as a TA profile
=====

```

```

switch(config) # crypto pki ta-profile root
switch(config-ta-root) # ta-certificate import terminal
Paste the certificate in PEM format below, then hit enter and ctrl-D:
switch(config-ta-cert) # -----BEGIN CERTIFICATE-----
switch(config-ta-cert) # MIIGATCCA+mgAwIBAgIJAL/JIZfJ0GpcMA0GCSqGSIUAMIGOMQswCQYD
switch(config-ta-cert) # VQQGEWJVUzETMBEGA1UECAwKQ2FsaWZvcn5pYTESBwwJUm9zZXZpbGxl
switch(config-ta-cert) # MQwwCgYDVQQKDANIUEUxEzARBgNVBASMCK5ldmcxFTATBgNVBAMMDFRl
...
switch(config-ta-cert) # rvadRXSAsUlevJRNNoyINrEJyOfUX2hAfLaiBYP+In6gKTAwVhlxLiXn
switch(config-ta-cert) # LlryAb2/go4BTYjil3eJyXxweUHheuBeesEslBawLv0cPCQPTTdbc970

```

```

switch(config-ta-cert)# iWbyAmfSpD/TS3AgCLnBFPKEKsms0f0LF3/C9dRUXjIHT/LDBr+lgzY3
switch(config-ta-cert)# m2NCvxY=
switch(config-ta-cert)# -----END CERTIFICATE-----
switch(config-ta-cert)#
The certificate you are importing has the following attributes:
Subject: C = US, ST = California, L = Roseville, O = HPE, OU = Networking,
        CN = Test CA root, emailAddress = generic@corp.com
Issuer:  C = US, ST = California, L = Roseville, O = HPE, OU = Networking,
        CN =Test CA root, emailAddress = generic@corp.com
Serial Number: 0xBFC92197xxxxxxx
TA certificate import is allowed only once for a TA profile
Do you want to accept this certificate (y/n)? y
switch(config-ta-root)# exit

```

```

=====
Create a CSR for a leaf certificate
=====

```

```

switch(config)# crypto pki certificate leaf
switch(config-cert-leaf)# subject
Do you want to use the switch serial number as the common name (y/n)? y
Common Name: SG9Zxxxxxx
Org Unit:
Org Name:
Locality:
State:
Country:
switch(config-cert-leaf)# enroll terminal
You are enrolling a certificate with the following attributes:
Subject: C=<empty>, ST=<empty>, L=<empty>, OU=<empty>, O=<empty>,
        CN=SG9Zxxxxxx
Key Type: RSA (2048)

Continue (y/n)? y

```

```

-----BEGIN CERTIFICATE REQUEST-----
MIICWjCCAUICAQIwFTETMBEGA1UEAwKU0c5WktONDAwSoZIhvcN
AQEBBQADgqEPADCCAQoCggEBAMKdtoucDEMeuZjPGvCcWTm4D39A
WBA8K/bduJvM1E2B/uirU2TX7mF6lN30akClSxZOoofZAmBPCzI3
...
wZtb5c8fYCSR+TpLwZAdoXrvGJqJ1aGzV6/kVfb7rM6ulBksfBo/
JwO+7x8Vn5hldGCrs19CPJienni/fq24+1CJzspMbY9BKu9EIL+P
5ND9BmN0IzEmDO26F+Ip74DqFCIYjXtl3uPJk4cwJkXq121hlcrG
UlatpvjNEpZOtfoEryDJSs0pHXky7VjltYABiuDy
-----END CERTIFICATE REQUEST-----

```

```

-----BEGIN CERTIFICATE REQUEST-----
MIICWjCCAUICAQIwFTETMBEGA1UEAwKU0c5WktONDAwSoZIhvcN
AQEBBQADgqEPADCCAQoCggEBAMKdtoucDEMeuZjPGvCcWTm4D39A
WBA8K/bduJvM1E2B/uirU2TX7mF6lN30akClSxZOoofZAmBPCzI3
...
wZtb5c8fYCSR+TpLwZAdoXrvGJqJ1aGzV6/kVfb7rM6ulBksfBo/
JwO+7x8Vn5hldGCrs19CPJienni/fq24+1CJzspMbY9BKu9EIL+P
5ND9BmN0IzEmDO26F+Ip74DqFCIYjXtl3uPJk4cwJkXq121hlcrG
UlatpvjNEpZOtfoEryDJSs0pHXky7VjltYABiuDy
-----END CERTIFICATE REQUEST-----

```

```
=====
Install the signed leaf certificate issued by an intermediate CA. The
intermediate CA certificate is included after the signed leaf certificate.
=====
```

```
switch(config-cert-leaf)# import terminal ta-profile root
Paste the certificate in PEM format below, then hit enter and ctrl-D:
switch(config-cert-import)# -----BEGIN CERTIFICATE-----
switch(config-cert-import)# MII EK TCC Ah Gg Aw I B Ag I J A O 1 L S o B m K x t b M A 0 G C S q G S I Y x C z A J B g N V
switch(config-cert-import)# B A Y T a K F V M R U w E w Y D V Q Q I D A x J b n R l c m 1 l Z G N V B A o M G E l u d G V y b m V 0
switch(config-cert-import)# I F d p Z G d p d H M g U H R 5 I E x 0 Z D E N M A s G A 1 U E A w 0 y M D A 1 M T Q y M D I 3 M T l a
...
switch(config-cert-import)# a x n Z c I a N p 4 e N i 9 5 i n + T v c k X A 0 e M L S c N y R 7 I F + W j n 5 6 H 0 f Q K Y s H p /
switch(config-cert-import)# j l l b C k y B l x K n n 6 I p z I j / h v A x 3 N p A 0 j X x / q J A + V / c l t a A L 6 + Q P Z m I
switch(config-cert-import)# v r 5 G Z s o V 7 2 B H F O X x o t e Z l m W M U d V l d Y X X P 2 D z E U b t t r 9 z o j w z 0 M y K
switch(config-cert-import)# Q z 5 t c 0 B l G f J a t g h y k w = =
switch(config-cert-import)# -----END CERTIFICATE-----
switch(config-cert-import)# -----BEGIN CERTIFICATE-----
switch(config-cert-import)# M I I F y z C C A 7 O g A w I B A g I J A O 1 L S o B m K x t w M A 0 G C S q G C I G O M Q s w C Q Y D
switch(config-cert-import)# V Q Q G E w J V U z E T M B E G A 1 U E C A w K Q 2 F s a W Z v c 1 U E B w w J U m 9 z Z X Z p b G x l
switch(config-cert-import)# M Q w w C g Y D V Q Q K D A N I U E U x E z A R B g N V B A s M C m c x F T A T B g N V B A M M D F R l
...
switch(config-cert-import)# L M 9 D V 3 Y N W O M 4 U M M P 2 H X a D D f q x Z P X 9 Z s j 6 G l / s t R C h 8 S V f s F 2 d u Y R
switch(config-cert-import)# 5 b r L f E p i D h X r 2 V X x F 9 l l j R A B O 2 J P L S U u f g 7 x r 6 M / K 5 a C u j x V Y z K 7
switch(config-cert-import)# D Q a C E w 5 N l m C l v p Y l Y 2 T G 3 d l U Q P Z D e Q O A H w u B d 4 H e w q D H W f p / T 0 4 =
switch(config-cert-import)# -----END CERTIFICATE-----
switch(config-cert-import)#
Leaf certificate is validated with root and imported successfully.
switch(config-cert-leaf)#
```

Installing a self-signed leaf certificate (created inside the switch)

This procedure describes how to create (wholly inside the switch) and install a self-signed X.509 leaf certificate. And associate it with one of the following switch features: syslog client, RadSec client, captive-portal, HTTPS server, or HSC (hardware switch controller).

Procedure

1. Create a leaf certificate context with the command **crypto pki certificate**. This switches to the leaf certificate configuration context.
2. Define leaf certificate properties with the command **subject**.
3. Set the encryption key type for the leaf certificate with the command **key-type**.
4. Generate and install the self-signed certificate with the command **enroll self-signed**.
5. Exit the leaf certificate context with the command **exit**.
6. Associate the leaf certificate with a switch feature (syslog client, RadSec client, captive-portal, HTTPS server, or HSC) with the command **crypto pki application**.

Example

This example:

- Creates the leaf certificate context.
- Defines the leaf certificate characteristics.

- Creates and installs the self-signed leaf certificate.
- Associates the leaf certificate with the syslog client (application) on the switch.

```
switch(config)# crypto pki cert SS_LC
8400X(config-cert-SS_LC)# subject common-name SSLeaf country US
state CA locality Rocklin org Company org-unit Site
8400X(config-cert-SS_LC)# key-type rsa key-size 3072
8400X(config-cert-SS_LC)# enroll self-signed
You are enrolling a certificate with the following attributes:
Subject: C=US, ST=CA, L=Rocklin, OU=Site, O=Company,
        CN=SSLeaf
Key Type: RSA (3072)

Continue (y/n)? y
Self-signed certificate is created and enrolled successfully.
8400X(config-cert-SS_LC)# exit
switch(config)# crypto pki application syslog-client certificate SS_LC
```

Installing a self-signed leaf certificate (created outside the switch)

This procedure describes how to install a self-signed X.509 leaf certificate (that was created outside the switch). And then associate the certificate with one of the following switch features: syslog client, RadSec client, captive-portal, HTTPS server, or HSC (hardware switch controller).

Prerequisites

A self-signed leaf certificate (including private-key data) must be created outside the switch.

Procedure

1. Create the leaf certificate context with the command **crypto pki certificate** which then switches to the created leaf certificate context.
2. Import the leaf certificate data into the switch with the command **import(self-signed leaf certificate)**.
3. Exit the leaf certificate context with the command **exit**.
4. Associate the leaf certificate with a switch feature (syslog client, RadSec client, captive-portal, HTTPS server, or HSC) with the command **crypto pki application**.

Example

This example:

- Creates the leaf certificate context.
- Imports the self-signed leaf certificate.
- Associates the leaf certificate with the syslog client (application) on the switch.

```
switch(config)# switch(config)# crypto pki certificate SS_LC2
switch(config)# switch(config-cert-SS_LC)# import terminal self-signed
Paste the certificate in PEM format below, then hit enter and ctrl-D:
switch(config-cert-import)# -----BEGIN CERTIFICATE-----
switch(config-cert-import)# MIIFRDCCAyygAwIBAgIQP8nnS2Vp15u07xXMdktDJzANBgkqhkiG9
switch(config-cert-import)# MQswCQYDVQGEwJVUEOMAwGA1UECgwFXJlYmxDAOgNBAMMB1Jvb3gw
```

```

switch(config-cert-import)# HhcNMTkNDEwMjIwNTlWhcjIwMTA0MjIwNElWjBzQswQYDVQQGEwJV
...
switch(config-cert-import)# 1fIYZYGQyla0AwFuPTTxBXHYwRxTPbUYU5tumJrfwRPM40VY8S9D
switch(config-cert-import)# lNGNm3NG03GqPScs/TF9bVyFA5BOrS5lmm7kNfRYlK8D/kMTfRreS
switch(config-cert-import)# YQ1ulNqShps=
switch(config-cert-import)# -----END CERTIFICATE-----
switch(config-cert-import)# -----BEGIN ENCRYPTED PRIVATE KEY-----
switch(config-cert-import)# MIIFDjBABgkqhkiG9wBBQ0wMzAbBgkqkiw0QwwDQImNpJMN7sVGwC
switch(config-cert-import)# MBQGCCqGS1b3DQMHAit+2qadNAASCMg5LYJ4AFm3EffhH5p51Ggr8
switch(config-cert-import)# IJ6L/UhEtH523nUkdV6gvoAWgoYaeD83PeswToAGv5VS8OMFTPTtr
...
switch(config-cert-import)# OgSecqZsG6arbx0ESaYBir1c/6rPslpcjbDxw283DiD1MWOpes2a
switch(config-cert-import)# iKnXnUMpVPfLc74ty2S41DtH0X9Sgf6aa1LjiStg+N7cND9XfGtj/
switch(config-cert-import)# cb4=
switch(config-cert-import)# -----END ENCRYPTED PRIVATE KEY-----
switch(config-cert-import)#
Enter import password:
Paste the certificate in PEM format below, then hit enter and ctrl-D:
switch(config-cert-import)# -----BEGIN CERTIFICATE-----
switch(config-cert-import)# MIIFRDCCAYygAwIBAgIQP8nns2Vp15u07xXMdktDjZANBgkqhkiG9
switch(config-cert-import)# MQswCQYDVQGEwJVUEOMAwGA1UECgwFXJlYmxDaOgNBAMMB1Jvb3gw
switch(config-cert-import)# HhcNMTkNDEwMjIwNTlWhcjIwMTA0MjIwNElWjBzQswQYDVQQGEwJV
...
switch(config-cert-import)# 1fIYZYGQyla0AwFuPTTxBXHYwRxTPbUYU5tumJrfwRPM40VY8S9D
switch(config-cert-import)# lNGNm3NG03GqPScs/TF9bVyFA5BOrS5lmm7kNfRYlK8D/kMTfRreS
switch(config-cert-import)# YQ1ulNqShps=
switch(config-cert-import)# -----END CERTIFICATE-----
switch(config-cert-import)# -----BEGIN ENCRYPTED PRIVATE KEY-----
switch(config-cert-import)# MIIFDjBABgkqhkiG9wBBQ0wMzAbBgkqkiw0QwwDQImNpJMN7sVGwC
switch(config-cert-import)# MBQGCCqGS1b3DQMHAit+2qadNAASCMg5LYJ4AFm3EffhH5p51Ggr8
switch(config-cert-import)# IJ6L/UhEtH523nUkdV6gvoAWgoYaeD83PeswToAGv5VS8OMFTPTtr
...
switch(config-cert-import)# OgSecqZsG6arbx0ESaYBir1c/6rPslpcjbDxw283DiD1MWOpes2a
switch(config-cert-import)# iKnXnUMpVPfLc74ty2S41DtH0X9Sgf6aa1LjiStg+N7cND9XfGtj/
switch(config-cert-import)# cb4=
switch(config-cert-import)# -----END ENCRYPTED PRIVATE KEY-----
switch(config-cert-import)#
Enter import password: *****
Leaf certificate is validated as self-signed certificate and imported
successfully.
switch(config-cert-SS_LC2)# exit
switch(config)# crypto pki application syslog-client certificate SS_LC2

```

Installing a certificate of a root CA

Prerequisites

- A certificate of a root CA (that is used as the signer).
- Revocation checking URLs for the CA (optional).

Procedure

1. Create a TA profile with the command **crypto pki ta-profile** which then switches to the created TA profile context.



Step 2 is optional and suggested only for advanced users.

2. Optionally enable certificate revocation checking with the command **revocation-check ocsf**. Most certificates contain revocation checking URLs for OCSF. If you want to override these URLs, configure custom revocation checking URLs with the command **ocsf url**.
3. Import the certificate of the root CA with the command **ta-certificate**.

Example

This example installs the certificate **root-cert** and defines custom revocation checking URLs:

```
switch(config)# crypto pki ta-profile root-cert
switch(config-ta-root-cert)# revocation-check ocsf
switch(config-ta-root-cert)# ocsf url primary http://ocsf-server.site.com
switch(config-ta-root-cert)# ocsf url secondary http://ocsf-server2.site.com
switch(config-ta-root-cert)# ta-certificate import terminal
Paste the certificate in PEM format below, then hit enter and ctrl-D:
switch(config-ta-cert)# -----BEGIN CERTIFICATE-----
switch(config-ta-cert)# MIIDuTCCAqECCQCuoxeJ2ZNYcjANBgkqhkiG9w0BAQsFADCBQzELMAEBh
switch(config-ta-cert)# VVMxEzARBgNVBAGMCkNhbm3JuaWExEDAOBgNVBACMB1JvY2tsDAKBg
switch(config-ta-cert)# BAoMA0hQTjEVMBMGA1UECwwMSFBOUm9zZXZpbGx1MSowKAYDVQOCG5zd
...
switch(config-ta-cert)# x3Wff3dFZ8o9sd5LVAHneH/ztb9MP34z+le1V346r12L2kpxmTOVJVyTO
switch(config-ta-cert)# BIZD/ST/HaWI+OS+S80rm93PSscEbb9GWk7vshh5EnW/moehBKcE40lzy
switch(config-ta-cert)# 3LvMLZcSSSe5J2Ca2XIhfDme8UaNZ7syGYMsAW0nG7yYHWkEOQu9s
switch(config-ta-cert)# -----END CERTIFICATE-----
switch(config-ta-cert)#
The certificate you are importing has the following attributes:
Issuer: C=US, ST=CA, L=Rocklin, O=Company, OU=Site,
       CN=site.com/emailAddress=test.ca@site.com
Subject: C=US, ST=CA, L=Rocklin, O=Company, OU=Site,
       CN=8400/emailAddress=test.ca@site.com
Serial Number: 12121221634631568498 (0xae51217d5945772)

TA certificate import is allowed only once for a TA profile
Do you want to accept this certificate (y/n)? y
TA certificate accepted.
switch(config-ta-root-cert)#
```

Installing a downloadable user role certificate

This procedure describes how to create and install a downloadable user role (DUR) certificate.

If a DUR is already present on the switch, either because

- another client already onboarded with the same role, or
- the role is cached because the cached-critical-role feature is enabled and the DUR role has been restored/retained



then if the server has an invalid certificate or password configured (or for some other reason cannot not provide a role to a client) and the role is already present on the switch, the switch will not retry the download, but apply the role already present on the switch.

Prerequisites

- A certificate of a root CA (that is used as the signer).

Procedure

1. Create a TA profile with the command **crypto pki ta-profile** which then switches to the created TA profile context.
2. Import the certificate of the root CA with the command **ta-certificate**.

Example

```
switch(config)# crypto pki ta-profile DUR-cert
switch(config-ta-DUR-cert)# ta-profile
switch(config-ta-cert)# -----BEGIN CERTIFICATE-----
switch(config-ta-cert)#
MIIGFjCCA/6gAwIBAgIJAMt1KN7Gy9GCMA0GCSqGSIb3DQEBCwUAMIGWMQswCQYD
VQQGEWJTTjESMBAGA1UECAwJS2FybmF0YWdhMRIwEAYDVQQHDA1CYW5nYWxvcUx
DDAKBgNVBAoMA0hQRTEMAoGA1UECwwDSFBOMRcwFQYDVQQDDA4xNS4yMTIuMjIx
LjE5NDEqMCgGCSqGSIb3DQEJARYbcmFkaGFrcmlzaG5hbi5nb3BhbEBocGUuY29t
MCAXDTIwMDExNTA5MzgWMLoYDzQxODMxMDIyMDkzODAzWjCB1jELMAkGA1UEBhMC
SU4xEjAQBgNVBAgMCUthcm5hdGFnYTESMBAGA1UEBwwJQmFuZ2Fsb3JlMQwwCgYD
VQQKDANIUEUxDDAKBgNVBAsMA0hQQtjEXMBUGA1UEAwwOMTUuMjEyLjIyMS4xOTQx
KjAoBgkqhkiG9w0BCQEWG3JhZGhha3Jpc2huYW4uZ29wYXxhbm1mNvbTCCAIiW
DQYJKoZIhvcNAQEBBQADggIPADCCAgoCggIBALs99p/xrJHXgYTAiV4WjwgHgJJt
aRwisIoA8iKBZN3zmc1HKJNEGHYXJl0QNC7xfAFSptwgmQ+bhawLuGLNWWMLzQdP
68GmJS10jnlxkQlVIwjrDCfk5t7RAMY/bZKPRjPnfzbZ03Nv3tqp9h/bWTP1y17S
SzYdDF9SiEVfx/4EWicXIDx2ie44kE+9CGB817Q/kovALiIjREJxtv2WJLvE4g/X
2pBu2WMMKhxU95JX2WdIrbHLM1sETUMvb6itg6jfhnpDIZWF5Xbb0c22HsJ6Ynvy
FylHqkN5QjTBaWo9UpvVeeNEA12tm8D7UsRGJO5u0Y01j4Xp1bQgDf/S6b6LHYQZ
4TLZIEjBn9tH1hXoPd0wXAdpXnYqBZ0U04ZHaRxvG5wEsvZ3LOyJXNU1J2Z5osC+
HkJRr5tMKV9Dc0gON81LPXj4+JmubyWi7ABM8+ktNyDqTeGqMaUZaB+NvGwQyMUr
Ntgvam9ntI+/njW0ViKYewQJ4OB9D+0sWXJHFrqfZpbVYTQjZktDDnVhSL9Z5Fce
5+AIIBLCCFCnc933fv29jC0oVWjZ2Rht/8B0DdPY/hDPb0epy+WEosxIQzQ++D+M
s9aBPYVgWCKE2mkT6lnqBhAaNiSK7wiUU92rHvYhRr2W6Zib+wU9BFWZIZFKbXd
D8I7P0Zm0hf/j0wVAgMBAAGjYzBhMB0GA1UdDgQWBRRV0riw2MVuuc/Y9VtGgstN
PTrm+DAfBgNVHSMEGDAWgBRV0riw2MVuuc/Y9VtGgstNPTrm+DAPBgNVHRMBAf8E
BTADAQH/MA4GA1UdDwEB/wQEAWIBhjANBgkqhkiG9w0BAQsFAAOCAgEAU7fff1Ci
lyA7yq37jlxzdnGXiuR+00xiuZ62xBcu6F/p2SwsieesQCJ2odiOcaqeYXIAiI2
EAHpesan7OQap2KQ/Xw/00H3/q+SQo47LiGiZjWLeGjaJ5NXBBra6MhZXjli1EEG
70Qn0dehM7am5bsLRhYvRR+TesWEceNoFQn1lyiqpGWCPII8Q4eL4MsSTEM16Qki
yaVDzQko2FW9P3sDV7RGwKrxJIYT8HqPrU6WZUaT7+C0G5EwqP8peg7HOaInKM6Z
lsmFXaSlTvHGbgjJm8uReWr1wNr+V3nugzOCUFspy320exP90fJ873K1glIbEfxw
bmWMq6za1KQ9rzyNVI2ucp9F7oyXz0vy/6/FagulKkv2BoUxExU9AVwCkDsdVnun
IuQMly2CVGpj+5bhCDRS3ZUmKWAMw0uBwky0BiE1A48LN7R/OYbOmr4QkmveAJAD
MOZIGK4KbutsrIGsT0vs+1U9wrfdiG2TiZlshWIT47EYg/C9ZkeDtQUuilob6uaO
Wt/2il/ePUbsSZn9YX9jLBNEsNBw9B5wyqhAh1AwOpC5KVkHPOsXPOLJZPNO2RI
UKVv7wqGQMMFwKvnn4MoNEdQCYwRsTt6l0+yYlC1dA6xsG0LUXa2SpuX/gpovaNW
6VA2QAAIJIcSFB4KylgncPv2gUr+GbD01M=
switch(config-ta-cert)# -----END CERTIFICATE-----
switch(config-ta-cert)#

switch(config-ta-cert)# -----BEGIN CERTIFICATE-----
switch(config-ta-cert)#
MIIGFjCCA/6gAwIBAgIJAMt1KN7Gy9GCMA0GCSqGSIb3DQEBCwUAMIGWMQswCQYD
VQQGEWJTTjESMBAGA1UECAwJS2FybmF0YWdhMRIwEAYDVQQHDA1CYW5nYWxvcUx
DDAKBgNVBAoMA0hQRTEMAoGA1UECwwDSFBOMRcwFQYDVQQDDA4xNS4yMTIuMjIx
LjE5NDEqMCgGCSqGSIb3DQEJARYbcmFkaGFrcmlzaG5hbi5nb3BhbEBocGUuY29t
MCAXDTIwMDExNTA5MzgWMLoYDzQxODMxMDIyMDkzODAzWjCB1jELMAkGA1UEBhMC
SU4xEjAQBgNVBAgMCUthcm5hdGFnYTESMBAGA1UEBwwJQmFuZ2Fsb3JlMQwwCgYD
VQQKDANIUEUxDDAKBgNVBAsMA0hQQtjEXMBUGA1UEAwwOMTUuMjEyLjIyMS4xOTQx
KjAoBgkqhkiG9w0BCQEWG3JhZGhha3Jpc2huYW4uZ29wYXxhbm1mNvbTCCAIiW
DQYJKoZIhvcNAQEBBQADggIPADCCAgoCggIBALs99p/xrJHXgYTAiV4WjwgHgJJt
aRwisIoA8iKBZN3zmc1HKJNEGHYXJl0QNC7xfAFSptwgmQ+bhawLuGLNWWMLzQdP
68GmJS10jnlxkQlVIwjrDCfk5t7RAMY/bZKPRjPnfzbZ03Nv3tqp9h/bWTP1y17S
SzYdDF9SiEVfx/4EWicXIDx2ie44kE+9CGB817Q/kovALiIjREJxtv2WJLvE4g/X
2pBu2WMMKhxU95JX2WdIrbHLM1sETUMvb6itg6jfhnpDIZWF5Xbb0c22HsJ6Ynvy
```

```

FylHqkN5QjTBaWo9UpvVeeNEAL2tm8D7UsRGJO5u0Y01j4Xp1bQgDf/S6b6LHYQZ
4TLZIEjBn9tH1hXoPd0wXAdpXnYqBZ0U04ZHaRxxvG5wEsvZ3L0yJXNU1J2Z5osC+
HkJRr5tMKV9Dc0gON81LPXj4+JmubyWi7ABM8+ktNyDqTeGqMaUZaB+NvGwQyMUR
Ntgvam9ntI+/njW0ViKYEWQJ4OB9D+0sWXJHFrqfZpbVYTQjZktDDnVhSL9Z5Fce
5+AIBBLCCFcNc933fv29jC0oVWjZ2Rht/8B0DdPY/hDPb0epy+WEosxIQzQ++D+M
s9aBPYVgwCKE2mkT6lnqBhAaNNiSK7wiUU92rHvYhRr2W6Zib+wU9BFWZIZFKbXd
D8I7P0Zm0hf/j0wVAgMBAAGjYzBhMB0GA1UdDgQWBRRV0riw2MVuuc/Y9VtGgstN
PTrm+DAfBgNVHSMEGDAWgBRV0riw2MVuuc/Y9VtGgstNPTrm+DAPBgNVHRMBAf8E
BTADAQH/MA4GA1UdDwEB/wQEAWIBhjANBgkqhkiG9w0BAQsFAAOCAgEAU7fff1Ci
lyA7yq37jlxzdnGXiuR+00xiuz62xBcu6F/p2SwsieesQCJ2odiOcaqeYXIAiI2
EAHpesan7OQap2KQ/Xw/00H3/q+SQo47LiGiZjWLeGjaJ5NXBBra6MhZXjli1EEG
70Qn0dehM7am5bsLRhYvRR+TesWEceNoFQN11yiqpGWCPII8Q4eL4MsSTEM16Qki
yaVDzQko2FW9P3sDV7RGwKrxJIYt8HqPrU6WZUaT7+C0G5EwqP8peg7HOaInKM6Z
lsmFXaSlTvHGbgjJm8uReWrlwNr+V3nugzOCUFspy32OexP90fJ873K1glIbEfxw
bmWMq6za1KQ9rzyNVI2ucp9F7oyXz0vy/6/FagulKkv2BoUxExU9AVwCkDsdVnun
IuQMly2CVGpj+5bhcDRS3ZUmKWAMw0uBwky0BiE1A48LN7R/OYbOmr4QkmveAJAD
MOZIGK4KbutsrIGsT0vs+1U9wrfdiG2TiZlhsWIT47EYg/C9ZkeDtQUuilib6uaO
Wt/2il/ePUbsSZn9YX9jLBNEsNWbW9B5wyqhAh1AwOpC5KVkHPOsXPOLJZPNO2RI
UKVv7wqGQMMFwKvnn4MoNedQCYwRsTt6l0+yYlC1dA6xsG0LUXa2SpuX/gpovaNW
6VA2QAAIJICsFB4KylgncPvV2gUr+Gbd01M=
switch(config-ta-cert) # -----END CERTIFICATE-----
switch(config-ta-cert) #

```

Installing a CA-signed leaf certificate (initiated in the switch)

This procedure describes how to create and install an X.509 leaf certificate that is initiated inside the switch but signed outside the switch by a CA. And then associate the certificate with one of the following switch features: syslog client, RadSec client, HTTPS server, or HSC (hardware switch controller).

Prerequisites

Root CA certificate **root-cert** must be installed as described in [Installing a certificate of a root CA](#).

Procedure

1. Create a leaf certificate context with the command **crypto pki certificate** which then switches to the created leaf certificate configuration context.
2. Define leaf certificate properties with the command **subject**.
3. Set the encryption key type for the leaf certificate with the command **key-type**.
4. Generate the certificate signing request (CSR) with the command **enroll terminal**.
5. Use the CSR to obtain a leaf certificate from the root CA, using the root CA directly as the signer CA.
6. Import the leaf certificate into the switch with the command **import(CA-signed leaf certificate)**.
7. Exit the leaf certificate context with the command **exit**.
8. Associate the leaf certificate with a switch feature (syslog client, RadSec client, HTTPS server, or HSC) with the command **crypto pki application**.

Example

This example:

- Creates the leaf certificate context.
- Defines the leaf certificate characteristics.

- Generates the leaf certificate signing request in the switch for getting signed outside the switch by a CA.
- Imports the CA-signed leaf certificate into the switch.
- Associates the leaf certificate with the syslog client (application) on the switch.

```
switch(config)# crypto pki certificate lcert
switch(config-cert-lcert)# subject common-name Leaf country US state CA
locality Rocklin org Company org-unit Site
switch(config-cert-lcert)# key-type rsa key-size 3072
switch(config-cert-lcert)# enroll terminal
You are enrolling a certificate with the following attributes:
Subject: C=US, ST=CA, L=Rocklin, O=Company, OU=Site
        CN=Leaf
Key Type: RSA (2048)

Continue (y/n)? y

-----BEGIN CERTIFICATE REQUEST-----
MIIBozCCAQwCAQAwYzEVMBMGAlUEAxMMcG9kMDEtODQwMC0xMQ4wDAYDV
nViYTEMMAoGA1UEChMDSFBMRlWEAYDVQQHEw1Sb3Nldm1sbGUxCzAJBg
NBMQswCQYDVQQGEwJVUzCBnzANBQgkqhkiG9w0BAQEFAAOBjQAwgYkCgYE
...
GBAJ4L3lFFfWBEL+KAKpOGjZcVmw1BMqSKFtOFNF9nzmUmONmU3SKy6dz
7Au22mf3lWDxztCC/dj5RtWJeJekxp2LCIK/3eRXUwbYveQDKcxH7j9Z
ace+2tA68F2vlgRCQ/hcQH0YmNuaq4Ne3w0dhm7H1Urx
-----END CERTIFICATE REQUEST-----

switch(config-cert-lcert)#

-----BEGIN CERTIFICATE REQUEST-----
MIIBozCCAQwCAQAwYzEVMBMGAlUEAxMMcG9kMDEtODQwMC0xMQ4wDAYDV
nViYTEMMAoGA1UEChMDSFBMRlWEAYDVQQHEw1Sb3Nldm1sbGUxCzAJBg
NBMQswCQYDVQQGEwJVUzCBnzANBQgkqhkiG9w0BAQEFAAOBjQAwgYkCgYE
...
GBAJ4L3lFFfWBEL+KAKpOGjZcVmw1BMqSKFtOFNF9nzmUmONmU3SKy6dz
7Au22mf3lWDxztCC/dj5RtWJeJekxp2LCIK/3eRXUwbYveQDKcxH7j9Z
ace+2tA68F2vlgRCQ/hcQH0YmNuaq4Ne3w0dhm7H1Urx
-----END CERTIFICATE REQUEST-----

switch(config-cert-lcert)# import terminal ta-profile root-cert
Paste the certificate in PEM format below, then hit enter and ctrl-D:
switch(config-cert-import)# -----BEGIN CERTIFICATE-----
switch(config-cert-import)# MIIFRDCCAYygwIBAgIQPnnS2Vp5u07XMdktDJzANBqkqhkiG9w0Bv
switch(config-cert-import)# MQswCQYDVQGEwJVEOMAwG1UECgwFJlYmxDAOGNBMMB1Jvb3QgQ0Ew
switch(config-cert-import)# HhcNMTkNEwMjIwNTWcjIwMTA0MjwNE1WBzQswQYDVQGEwJVUzEL
...
switch(config-cert-import)# 1fIYZYGQyla0AwFuTTxBXYwRxPbUYU5tumrfwRPmE4OVY8S9DQgcr
switch(config-cert-import)# lNGNm3NG03GqPcs/T9bVyF5BOrS5lmm7kNfRYl8D/kMTfRreSdxis
switch(config-cert-import)# YQ1ulNqShps=
switch(config-cert-import)# -----END CERTIFICATE-----
switch(config-cert-import)#
Leaf certificate is validated with root-cert and imported successfully.
switch(config-cert-lcert)# exit
switch(config)# crypto pki application syslog-client certificate lcert
```

Installing a CA-signed leaf certificate (created outside the switch)

This procedure describes how to install an X.509 leaf certificate that was created and signed (by a CA) outside the switch. And then associate the certificate with one of the following switch features: syslog client, RadSec client, captive-portal, HTTPS server, or HSC (hardware switch controller).

Prerequisites

- Root CA certificate `root-cert` installed as described in [Installing a certificate of a root CA](#).
- A CA-signed leaf certificate (including private-key data) created outside the switch.

Procedure

1. Create the leaf certificate context with the command **crypto pki certificate** which then switches to the created leaf certificate context.
2. Import the leaf certificate into the switch with the command **import (CA-signed leaf certificate)**.
3. Exit the leaf certificate context with the command **exit**.
4. Associate the leaf certificate with a switch feature (syslog client, RadSec client, captive-portal, HTTPS server, or HSC) with the command **crypto pki application**.

Example

This example:

- Creates the leaf certificate context.
- imports the CA-signed leaf certificate.
- Associates the leaf certificate with the syslog client (application) on the switch.

```
switch(config)# switch(config)# crypto pki certificate CA_LC
switch(config)# switch(config-cert-CA_LC)# import terminal ta-profile root-cert
Paste the certificate in PEM format below, then hit enter and ctrl-D:
switch(config-cert-import)# -----BEGIN CERTIFICATE-----
switch(config-cert-import)# MIIFRDCCAYygAwIBAgIQP8nn2Vp15u07XMktDJANBgkqhkiG9w0Bv
switch(config-cert-import)# MQswCQYDVQGEwJVUEOMAw1UECgwFX1YmxDOgNBAMMB1Jvb3QgQ0Ew
switch(config-cert-import)# HhcNMTkNDEwMjIwNT1WhjIMTA0MjIwNE1jBzQswYDVQQGEwJVUzEL
...
switch(config-cert-import)# 1fIYZYGQyla0AwFuPTTxBXHYRxTPbUYUtmJrwrPmE40VY8S9DQgcr
switch(config-cert-import)# 1NGNm3NG03GqPScs/TF9bVyFABOrlmm7kNfRlK8D/kMTfRreSdxis
switch(config-cert-import)# YQ1ulNqShps=
switch(config-cert-import)# -----END CERTIFICATE-----
switch(config-cert-import)# -----BEGIN ENCRYPTED PRIVATE KEY-----
switch(config-cert-import)# MIIFDjBABgkqhkiG9wBBQ0wMzAbBgkiwQwwQImNpJMN7sVGwCaggA
switch(config-cert-import)# MBQGCCqGS1b3DQMHAit+2qadNAASCMgLYJ4AFEfhH5p51Ggr86VqS
switch(config-cert-import)# IJ6L/UhEtH523nUkdV6gvoAWgoYaeD8eswAGv5VS8OMFTPttrn5/K
...
switch(config-cert-import)# OgSecqZsG6arbx0ESaYBir1c6rPslpcbDx283DD1MW0peoS2aEmOX
switch(config-cert-import)# iKnXnUMpVPfLc74ty2S41tH0X9gfaalLiStg+N7cND9XfgtjaV2+
switch(config-cert-import)# cb4=
switch(config-cert-import)# -----END ENCRYPTED PRIVATE KEY-----
switch(config-cert-import)#
Enter import password:
Paste the certificate in PEM format below, then hit enter and ctrl-D:
switch(config-cert-import)# -----BEGIN CERTIFICATE-----
switch(config-cert-import)# MIIFRDCCAYygAwIBAgIQP8nn2Vp15u07XMktDJANBgkqhkiG9w0Bv
switch(config-cert-import)# MQswCQYDVQGEwJVUEOMAw1UECgwFX1YmxDOgNBAMMB1Jvb3QgQ0Ew
switch(config-cert-import)# HhcNMTkNDEwMjIwNT1WhjIMTA0MjIwNE1jBzQswYDVQQGEwJVUzEL
...
switch(config-cert-import)# 1fIYZYGQyla0AwFuPTTxBXHYRxTPbUYUtmJrwrPmE40VY8S9DQgcr
switch(config-cert-import)# 1NGNm3NG03GqPScs/TF9bVyFABOrlmm7kNfRlK8D/kMTfRreSdxis
```

```

switch(config-cert-import)# YQ1ulNqShps=
switch(config-cert-import)# -----END CERTIFICATE-----
switch(config-cert-import)# -----BEGIN ENCRYPTED PRIVATE KEY-----
switch(config-cert-import)# MIIFDjBABgkqhkiG9wBBQ0wMzAbBgkiwQwwQImNpJMN7sVGwCAgga
switch(config-cert-import)# MBQGCCqGSib3DQMHAit+2qadNAASCMgLYJ4AFefhH5p51Ggr86VqS
switch(config-cert-import)# IJ6L/UhEtH523nUkdV6gvoAWgoYaeD8eswAGv5VS8OMFTpttrn5/K
...
switch(config-cert-import)# OgSecqZsG6arbx0ESaYBir1c6rPslpcbDx283DD1MWOpes2aEmOX
switch(config-cert-import)# iKnXnUMpVPfLc74ty2S41tH0X9gfaa1LiStg+N7cND9XfGtjaV2+/
switch(config-cert-import)# cb4=
switch(config-cert-import)# -----END ENCRYPTED PRIVATE KEY-----
switch(config-cert-import)#
Enter import password: *****
Leaf certificate is validated with root-cert and imported successfully.
switch(config-cert-CA_LC)# exit
switch(config)# crypto pki application syslog-client certificate CA_LC

```

PKI commands

crypto pki application

```

crypto pki application <APP-NAME> certificate <CERT-NAME>
no crypto pki application <APP-NAME> certificate <CERT-NAME>

```

Description

Associates a leaf certificate with a feature (application) on the switch. By default, all features are associated with the default, self-signed certificate **local-cert**. This certificate is created by the switch the first time it starts.

The **no** form of this command associates the specified feature with the default certificate.

| Parameter | Description |
|-------------|---|
| <APP-NAME> | <p>Specifies the name of a feature on the switch:</p> <ul style="list-style-type: none"> ▪ captive-portal: Captive portal ▪ est-client: EST client ▪ hsc: Hardware switch controller ▪ https-server: HTTPS server ▪ radsec-client: RadSec client ▪ syslog-client: Syslog client <p>syslog-client communicates with syslog server over TLS. You can associate a certificate with the syslog-client application by enrolling the certificate manually or through EST.</p> |
| <CERT-NAME> | Specifies the name of an installed leaf certificate. |

Examples

Associating the EST client with leaf certificate **leaf-cert1**:

```

switch(config)# crypto pki application est-client certificate leaf-cert1

```

Associating the syslog client with leaf certificate **leaf-cert**:

```
switch(config)# crypto pki application syslog-client certificate leaf-cert
```

Setting the syslog client to use the default certificate:

```
switch(config)# no crypto pki application syslog-client certificate
```

Setting the RadSec client to use the default certificate:

```
switch(config)# no crypto pki application radsec-client certificate
```

Associating the RadSec client with leaf certificate **leaf-cert**:

```
switch(config)# crypto pki application radsec-client certificate leaf-cert
```

Associating the HTTPS server with leaf certificate **leaf-cert2**:

```
switch(config)# crypto pki application https-server certificate leaf-cert2
```

Associating the 802.1X supplicant with leaf certificate **cert1**:

```
switch(config)# crypto pki application dot1x-suppliant certificate cert1
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------------|--------------|
| 10.07 or earlier | -- |

Command Information

| Platforms | Command context | Authority |
|---------------|-----------------|--|
| All platforms | config | Administrators or local user group members with execution rights for this command. |

crypto pki certificate

```
crypto pki certificate <CERT-NAME>  
no crypto pki certificate <CERT-NAME>
```

Description

Creates a leaf certificate and changes to its context **config-cert-<CERT-NAME>**. If the specified leaf certificate exists, this command changes to its context.

The first time the switch starts it creates a self-signed, default leaf certificate called **local-cert**. This certificate is used by any switch application that does not have an associated leaf certificate.

The **no** form of this command deletes the specified leaf certificate. The default leaf certificate **local-cert** cannot be deleted.

| Parameter | Description |
|--------------------------------|---|
| <code><CERT-NAME></code> | Specifies the name of a leaf certificate. Range: 1 to 32 alphanumeric characters (excluding "). |

Examples

Creating leaf certificate **leaf-cert**:

```
switch(config)# crypto pki certificate leaf-cert
switch(config-cert-leaf-cert)#
```

Deleting leaf certificate **leaf-cert**:

```
switch(config)# no crypto pki certificate leaf-cert
The leaf certificate has associated applications. Deleting the certificate
will make the applications use the default certificate local-cert.
Continue (y/n)? y
switch(config)#
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------------|--------------|
| 10.07 or earlier | -- |

Command Information

| Platforms | Command context | Authority |
|---------------|-----------------|--|
| All platforms | config | Administrators or local user group members with execution rights for this command. |

crypto pki ta-profile

```
crypto pki ta-profile <TA-NAME>
no crypto pki ta-profile <TA-NAME>
```

Description

Creates a trust anchor (TA) profile and changes to the **config-ta-<TA-NAME>** context for the profile. Each TA profile stores the certificate for a trusted CA. Up to 64 profiles can be defined.

If the specified TA profile exists, this command changes to the **config-ta-<TA-NAME>** context for the profile.

The **no** form of this command removes the specified TA profile.



When creating a new profile, If you exit the **config-ta-<TA-NAME>** context without importing the TA certificate, the profile is discarded.

| Parameter | Description |
|------------------------------|---|
| <code><TA-NAME></code> | Specifies the TA profile name. Range: 1 to 48 alphanumeric characters excluding ".

NOTE: The TA profile name cannot end with est-ta<nn> where <nn> is 00 to 99 . For example, company-trust-anchor-est-ta01 is not allowed. This TA profile name suffix is reserved for TA profiles that are created for CA certificates from EST servers. |

Examples

Creating the TA profile **root-cert**:

```
switch(config)# crypto pki ta-profile root-cert
switch(config-ta-root-cert)#
```

Removing TA profile **root-cert**:

```
switch(config)# no crypto pki ta-profile root-cert
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------------|--------------|
| 10.07 or earlier | -- |

Command Information

| Platforms | Command context | Authority |
|---------------|-----------------|--|
| All platforms | config | Administrators or local user group members with execution rights for this command. |

enroll self-signed

`enroll self-signed`

Description

Generates a key pair and generates a self-signed certificate with it.

The subject fields and key type of the current leaf certificate must be defined before running this command. If not, you are prompted to fill in the subject fields, and the key type is set to **RSA 2048**.

Example

Enrolling the leaf certificate **leaf-cert**:

```
switch(config-cert-leaf-cert)# enroll self-signed
You are enrolling a certificate with the following attributes:
Subject: C=US, ST=CA, L=Rocklin, OU=Site, O=Comp,
        CN=Leaf01
Key Type: RSA (2048)

Continue (y/n)? y
Self-signed certificate is created and enrolled successfully.

switch(config-cert-leaf-cert)#
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------------|--------------|
| 10.07 or earlier | -- |

Command Information

| Platforms | Command context | Authority |
|---------------|-------------------------|--|
| All platforms | config-cert-<CERT-NAME> | Administrators or local user group members with execution rights for this command. |

enroll terminal

enroll terminal

Description

Generates a key pair and certificate signing request (CSR) for the current leaf certificate. Use the CSR to obtain a signed certificate from a certificate authority (CA), and then import the certificate onto the switch with the command **import terminal**.

The key type, and the certificate common name in the subject fields of the current leaf certificate must be completed before running this command. After this command is issued, any configuration change in the same certificate context will not be reflected in the generated CSR or certificate until you issue an **enroll** command again.

Usage

The subject fields and/or subject alternative name are usually already configured before the **enroll terminal** command is issued. If both subject fields and subject alternative name are not preconfigured, the command-line interface will prompt the user to confirm, using the serial number as subject common name. If subject alternative name is preconfigured but all subject fields are not, the command-line interface will prompt the user to confirm making the subject alternative name a critical extension (as per RFC 5280 Section 4.1.2.6). If the subject common name is preconfigured but all other subject fields are empty, it is considered the user's decision to leave them empty.

In auto-confirm and CLI config downloads, if both subject alternative name and subject common name are not pre-configured, the switch will automatically use serial number as subject common name and use other subject fields as is, including being empty. If the subject alternative name is preconfigured and all subject fields are not, the switch will automatically make subject alternative name a critical extension for certificate enrollment.

Note that although RFC 5280 allows leaving subject fields all empty when a subject alternative name is present and marked as critical, many servers and applications do not tolerate this. *It is strongly recommended to populate at least the common name of the subject even if the subject alternative name is present.*

Example

```
switch(config-cert-8400-1)# enroll terminal
You are enrolling a certificate with the following attributes:
Subject: C=US, ST=CA, L=Roseville, OU=Aruba-Roseville, O=Aruba, CN=8400-1
Key Type: RSA (2048)
Key Usage: nonRepudiation
Ext Key Usage: clientAuth, codeSigning
Subject Alternative Name: DNS:example1.com, IP:1.1.1.1, IP:2222::2222

Continue (y/n)? y
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|--------------------|
| 10.15 | Comand introduced. |

Command Information

| Platforms | Command context | Authority |
|---------------|-------------------------|--|
| All platforms | config-cert-<CERT-NAME> | Administrators or local user group members with execution rights for this command. |

ext-key-usage

[no] ext-key-usage {server-auth | client-auth}

Description

Configure extended-key-usage extensions for certificate enrollment.

The **no** form of this command negates or removes any configuration parameter.

| Parameter | Description |
|-------------|--|
| client-auth | Configure use of key for client authentication |
| server-auth | Configure use of key for server authentication |

Usage

Extended-key-usage options are specified in [RFC 5280](#). AOS-CX switches support the configuration of the **id-kp-serverAuth** and **id-kp-clientAuth** options described in this RFC.

Setting multiple key-usage options for a certificate:

```
switch(config)# crypto pki certificate leaf-cert
switch (config-cert-leaf-cert)# ext-key-usage client-auth
switch (config-cert-leaf-cert)#
switch (config-cert-leaf-cert)# ext-key-usage server-auth
switch (config-cert-leaf-cert)#
```

Removing an option from a extended-key-usage extension for the certificate to be enrolled.

```
switch(config)# crypto pki certificate leaf-cert
switch (config-cert-leaf-cert)# no ext-key-usage client-auth
switch (config-cert-leaf-cert)#
switch (config-cert-leaf-cert)# no ext-key-usage server-auth
switch (config-cert-leaf-cert)#
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|--------------------|
| 10.15 | Comand introduced. |

Command Information

| Platforms | Command context | Authority |
|---------------|-------------------------|--|
| All platforms | config-cert-<CERT-NAME> | Administrators or local user group members with execution rights for this command. |

import (CA-signed leaf certificate)

```
import terminal ta-profile <TA-NAME> [password <PW>]
import <REMOTE-URL> ta-profile <TA-NAME> [password <PW>] [vrf <VRF-NAME>]
import <STORAGE-URL> ta-profile <TA-NAME> [password <PW>]
```

Description

Imports a CA-signed leaf certificate and then validates the certificate against the specified TA profile. If the imported data includes a private key, the private key must match the leaf certificate being imported.

If the imported data does not include a private key, the certificate must match a CSR that was previously generated with the command **enroll terminal** and must be signed by the CA whose root certificate is installed in the specified TA profile. The TA profile must exist and have a TA certificate configured.

| Parameter | Description |
|---|--|
| <code>terminal</code> | Import the certificate by pasting PEM-format data at the console. Upon execution, the config-cert-import context is entered for certificate pasting. To complete certificate data entry press Control-D in your terminal program. Alternatively, the pasted certificate data can include at its end the delimiter END_OF_CERTIFICATE (after the -----END CERTIFICATE----- line), making entry of Control-D unnecessary. |
| <code>ta-profile <TA-NAME></code> | Specifies the TA profile name. Range: 1 to 48 alphanumeric characters excluding ".". |
| <code>password <PW></code> | Specifies the plaintext password used to decrypt the private key in the imported certificate data. When this parameter is omitted, the password is prompted for as required. Range: 1 to 32 alphanumeric characters. |
| <code><REMOTE-URL></code> | Specifies a certificate data file on a remote TFTP or SFTP server. The URL syntax is:
<pre>{tftp:// sftp://<USER>@} {<IP> <HOST>} [:<PORT>] [;blocksize=<SIZE>]/<FILE></pre> |
| <code>vrf <VRF-NAME></code> | Specifies the name of the VRF to use for the remote URL file transfer. The default is mgmt . |
| <code><STORAGE-URL></code> | Available on switch families that provide USB device file import capability, specifies a certificate data file on a USB storage device inserted in the switch USB port. The URL syntax is usb:/<FILE> . |

Usage

- The imported data must include all the intermediate CA certificates in the certificate chain leading to the certificate imported into the specified TA profile.
- This command cannot be used with the default certificate **local-cert**.
- The PEM data format is supported for all import sources. The PKCS#12 data format is supported for **<REMOTE-URL>** and **<STORAGE-URL>**.
- The PEM data must be delimited with these lines for the certificate data:

```
-----BEGIN CERTIFICATE-----
-----END CERTIFICATE-----
```

And the PEM data must be delimited with either of these line pairs for the private key data:

```
-----BEGIN PRIVATE KEY-----
-----END PRIVATE KEY-----
```

```
-----BEGIN ENCRYPTED PRIVATE KEY-----
-----END ENCRYPTED PRIVATE KEY-----
```

Examples

Importing a leaf certificate from the console:

```

switch(config)# crypto pki certificate leaf-cert
switch(config-cert-leaf-cert1)# import terminal ta-profile root-cert
Paste the certificate in PEM format below, then hit enter and ctrl-D:
switch(config-cert-import)# -----BEGIN CERTIFICATE-----
switch(config-cert-import)# MIIFRDCCAYygAwIBAgQP8nS2Vp15u0xXMdkDJzANBgkqhkiG9w0Bv
switch(config-cert-import)# MQswCQYDVQGEwJVUEOMAwGA1UCgwFXJ1YmDAGNBAMM1Jvb3QgQ0Ew
switch(config-cert-import)# HhcNMTkNDEwMjIwNT1WhcjIwMT0MjwNE1WjzQswQDVQGEwJVUzEL
...
switch(config-cert-import)# 1fIYZYGQyla0AwFuPTTxBXHYwRxTPbUYU5umJfRPmE4VY8S9DQgcr
switch(config-cert-import)# 1NGNm3NG03GqPScs/TF9bVyFA5BOS5lmmkfRYK8D/kMTfRreSdxis
switch(config-cert-import)# YQ1ulNqShps=
switch(config-cert-import)# -----END CERTIFICATE-----
switch(config-cert-import)# -----BEGIN ENCRYPTED PRIVATE KEY-----
switch(config-cert-import)# MIIFDjBABGkqhkiG9wBBQ0wMzAbBgqkw0QwwDQIpJMN7sVGwCAggA
switch(config-cert-import)# MBQGCCqGS1b3DQMHAit+2qadNAASCgLYJ4Am3EfhH5p51Ggr86VqS
switch(config-cert-import)# IJ6L/UhEtH523nUkdV6gvAgoYaD83PswToAGv5VS8OMFTPttrn5/K
...
switch(config-cert-import)# OgSecqZsG6arbx0ESaYBir1c/6rPspcjbx283iD1MWOpesS2aEmOX
switch(config-cert-import)# iKnXnUMpVPfLc74ty2S41DtH0X9gf6aa1jStg+7cND9XfGtjaV2+/
switch(config-cert-import)# cb4=
switch(config-cert-import)# -----END ENCRYPTED PRIVATE KEY-----
switch(config-cert-import)#
Enter import password: *****
Leaf certificate is validated with root-cert and imported successfully.
switch(config-cert-leaf-cert)#

```

Importing a leaf certificate from a remote file:

```

switch(config)# crypto pki certificate leaf-cert2
switch(config-cert-leaf-cert2)# import tftp://1.1.1.2/c2.p12 ta-profile root-cert
% Total      % Received % Xferd  Average Speed   Time    Time       Time  Current
           Dload    Upload   Total   Spent    Left     Speed
100  3722  100  3722    0      0   391k      0  --:--:--  --:--:--  --:--:--  391k
100  3722  100  3722    0      0   376k      0  --:--:--  --:--:--  --:--:--  376k
Enter import password: *****
Leaf certificate is validated with root-cert and imported successfully.
switch(config-cert-leaf-cert2)#

```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------------|--------------|
| 10.07 or earlier | -- |

Command Information

| Platforms | Command context | Authority |
|---------------|-------------------------|--|
| All platforms | config-cert-<CERT-NAME> | Administrators or local user group members with execution rights for this command. |

import (self-signed leaf certificate)

```
import terminal self-signed [password <PW>]
import <REMOTE-URL> self-signed [password <PW>] [vrf <VRF-NAME>]
import <STORAGE-URL> self-signed [password <PW>]
```

Description

Imports a self-signed leaf certificate including its matching private key.

| Parameter | Description |
|----------------|--|
| terminal | Import the certificate by pasting PEM-format data at the console. Upon execution, the config-cert-import context is entered for certificate pasting. To complete certificate data entry press Control-D in your terminal program. Alternatively, the pasted certificate data can include at its end the delimiter END_OF_CERTIFICATE (after the -----END CERTIFICATE----- line), making entry of Control-D unnecessary. |
| password <PW> | Specifies the plaintext password used to decrypt the private key in the imported certificate data. When this parameter is omitted, the password is prompted for as required. Range: 1 to 32 alphanumeric characters. |
| <REMOTE-URL> | Specifies a certificate data file on a remote TFTP or SFTP server. The URL syntax is:
{tftp:// sftp://<USER>@} {<IP> <HOST>}
[:<PORT>] [;blocksize=<SIZE>]/<FILE> |
| vrf <VRF-NAME> | Specifies the name of the VRF to use for the remote URL file transfer. The default is mgmt . |
| <STORAGE-URL> | Available on switch families that provide USB device file import capability, specifies a certificate data file on a USB storage device inserted in the switch USB port. The URL syntax is usb:/<FILE> . |

Usage

- This command cannot be used with the default certificate **local-cert**.
- The PEM data format is supported for all import sources. The PKCS#12 data format is supported for **<REMOTE-URL>** and **<STORAGE-URL>**.
- The PEM data must be delimited with these lines for the certificate data:

```
-----BEGIN CERTIFICATE-----
-----END CERTIFICATE-----
```

And the PEM data must be delimited with either of these line pairs for the private key data:

```
-----BEGIN PRIVATE KEY-----
-----END PRIVATE KEY-----
```

```
-----BEGIN ENCRYPTED PRIVATE KEY-----
-----END ENCRYPTED PRIVATE KEY-----
```

Example

Importing a self-signed leaf certificate from the console:

```
switch(config)# crypto pki certificate ss-leaf-cert
switch(config-cert-ss-leaf-cert)# import terminal self-signed
Paste the certificate in PEM format below, then hit enter and ctrl-D:
switch(config-cert-import)# -----BEGIN CERTIFICATE-----
```

```

switch(config-cert-import)# MIID2TCCAsGgAwIBAgIJAKcrqokm6p9GMA0GCSqGSIb3DQEBCwUAM
switch(config-cert-import)# tDCCA5ygAwIBAgICEAEwDQYJKoZIhvcNAQELBQAwwGxGzABAYTAl
switch(config-cert-import)# VQQGEwJVUzELMAkGA1UECAwCQ0ExDTALBgNVBACMBFJvc2UxDDAKB
...
switch(config-cert-import)# +fWQLxhp+jKJGZGOZz/FENt2uSfZHxlXiu8n3g+EgqExenYlpBRJr
switch(config-cert-import)# VuEEoNb/YfkPXHHva4Zfx223q+f694wlVsHkENSzqr2goHpa2fOzq
switch(config-cert-import)# alewwdmVqCES+x8bvfh3C/6IB6ePkEsnMlHNTeM=
switch(config-cert-import)# -----END CERTIFICATE-----
switch(config-cert-import)# -----BEGIN ENCRYPTED PRIVATE KEY-----
switch(config-cert-import)# MIIFDjBABGkqhkiG9w0BBQ0wMzAbBgkqhkiG9w0BBQwwDgQIt8Ni3
switch(config-cert-import)# MBQGCCqGSIb3DQMHBAiBHrejkdPdASCBMjVxrrYYPnt3V1abr9k8
switch(config-cert-import)# 5GE0U99awh9ys4360WR95xOFGThvjKTyRWG511nGwVeLZs/7TPXWI
...
switch(config-cert-import)# hzc5ZT/w2F08icRI5mFbGoTAAw9IIWMOXGweaWQJdyKGrhg89GrnV
switch(config-cert-import)# M2UuP/tYuu0328QcenKZEJmZKCbX78oFRR+pgma4oeMaFTIyXE6Pr
switch(config-cert-import)# GAdCK8tkDiJ9DKbqdm5W0/nTJfqwUQlf127dNrBAodsHdwr3UR99H
switch(config-cert-import)# SPo=
switch(config-cert-import)# -----END ENCRYPTED PRIVATE KEY-----
switch(config-cert-import)#
Enter import password: *****
Leaf certificate is validated as self-signed certificate and imported
successfully.
switch(config-cert-ss-leaf-cert)#

```

Importing a leaf certificate from a remote file:

```

switch(config)# crypto pki certificate ss-leaf-cert2
switch(config-cert-ss-leaf-cert2)# import tftp://1.1.1.2/ss2.p12 self-signed
  % Total      % Received % Xferd  Average Speed   Time    Time     Time  Current
                                 Dload  Upload   Total   Spent    Left   Speed
100 3230 100 3230    0     0  875k      0 --:--:-- --:--:-- --:--:-- 875k
100 3230 100 3230    0     0  831k      0 --:--:-- --:--:-- --:--:-- 831k
Enter import password: *****
Leaf certificate is validated as self-signed certificate and imported
successfully.
switch(config-cert-ss-leaf-cert2)#

```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------------|--------------|
| 10.07 or earlier | -- |

Command Information

| Platforms | Command context | Authority |
|---------------|---------------------------------------|--|
| All platforms | config-cert- <i><CERT-NAME></i> | Administrators or local user group members with execution rights for this command. |

key-type

```
key-type {rsa [key-size <K-SIZE>] | ecdsa [curve-size <C-SIZE>]}
```

Description

Sets the key type and key size for the current leaf certificate. The key type of the default certificate **local-cert** cannot be changed.

| Parameter | Description |
|---------------------|--|
| rsa | Selects the RSA key type. |
| key-size <K-SIZE> | Specifies the RSA key size in bits. Supported values: 2048, 3072, 4096. Default: 2048 |
| ecdsa | Selects the ECDSA key type. |
| curve-size <C-SIZE> | Specifies the ECDSA elliptic curve size in bits. Supported values: 256, 348, 521. Default: 256 |

Examples

Setting RSA encryption on the leaf certificate **leaf-cert**:

```
switch(config)# crypto pki certificate leaf-cert
switch(config-cert-leaf-cert)# key-type rsa key-size 3072
```

Setting ECDSA encryption on the leaf certificate **leaf-cert**:

```
switch(config)# crypto pki certificate leaf-cert
switch(config-cert-leaf-cert)# key-type ecdsa curve-size 521
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------------|--------------|
| 10.07 or earlier | -- |

Command Information

| Platforms | Command context | Authority |
|---------------|-------------------------|--|
| All platforms | config-cert-<CERT-NAME> | Administrators or local user group members with execution rights for this command. |

key-usage

```
{no} key-usage
    data-encipherment
    digital-signature
    key-encipherment
    key-agreement
    key-restriction {encipher-only | decipher-only}
    non-repudiation
```


Description

Configure key-usage extensions for certificate enrollment. Users can select zero, one, or multiple key usage options. The selected options will be set into the key-usage extension field of the CSR for the certificate. The CA server that signs the certificate determines whether or not to grant the options, and which option(s) to grant. As a result, after the certificate is successfully enrolled, the key-usage extension field may appear differently from the original user configuration.

The **no** form of this command negates or removes any configuration parameter.

| Parameter | Description |
|---|---|
| data-encipherment | Configure use of key for encrypting data |
| digital-signature | Configure use of key for digital signature validation |
| key-encipherment | Configure use of key for encrypting keys |
| key-agreement | Configure use of key for key exchange between parties |
| key-restriction {encipher-only decipher-only} | Configure restriction of key on key-agreement usage with one the following options: <ul style="list-style-type: none">▪ decipher-only: Configure restriction of key as decipher only▪ encipher-only: Configure restriction of key as encipher only |
| non-repudiation | Configure use of key for non-repudiation service |

Examples

Setting multiple key-usage options for a certificate:

```
switch(config)# crypto pki certificate leaf-cert
switch (config-cert-leaf-cert)# key-usage digital-signature
switch (config-cert-leaf-cert)#
switch (config-cert-leaf-cert)# key-usage non-repudiation
switch (config-cert-leaf-cert)#
switch (config-cert-leaf-cert)# key-usage key-restriction encipher-only
Encipher-only and decipher-only options will not take effect until key-agreement
option
is enabled.
Continue (y/n)? y
switch (config-cert-leaf-cert)#
switch (config-cert-leaf-cert)# key-usage key-agreement
switch (config-cert-leaf-cert)#
```

Removing an option from a key-usage extension for the certificate to be enrolled

```
switch (config-cert-leaf-cert)# no key-usage digital-signature
switch (config-cert-leaf-cert)#
switch (config-cert-leaf-cert)# no key-usage non-repudiation
switch (config-cert-leaf-cert)#
switch (config-cert-leaf-cert)# no key-usage key-agreement
switch (config-cert-leaf-cert)#
switch (config-cert-leaf-cert)# no key-usage key-restriction
switch (config-cert-leaf-cert)#
```

```
switch (config-cert-leaf-cert)# no key-usage key-restriction encipher-only
switch (config-cert-leaf-cert)#
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|--------------------|
| 10.15 | Comand introduced. |

Command Information

| Platforms | Command context | Authority |
|---------------|-------------------------|--|
| All platforms | config-cert-<CERT-NAME> | Administrators or local user group members with execution rights for this command. |

ocsp disable-nonce

```
ocsp disable-nonce
no ocsp disable-nonce
```

Description

Configures exclusion of the nonce from OCSF requests. A nonce is a unique identifier that an OCSF client inserts in an OCSF request and expects the OCSF responder to include it in the corresponding OCSF response. The nonce mechanism helps prevent replay attacks in which a malicious player attempts to masquerade as the OCSF responder. Although the nonce is included by default, it can be excluded. Some OCSF responders choose to not support the use of the nonce due to performance considerations.

The **no** form of this command re-enables nonce inclusion in OCSF requests.

Examples

Disable inclusion of the nonce in OCSF requests for TA profile **root-cert**:

```
switch(config)# crypto pki ta-profile root-cert
switch(config-ta-root-cert)# ocsp disable-nonce
```

Enable inclusion of the nonce in OCSF requests for TA profile **root-cert**:

```
switch(config)# crypto pki ta-profile root-cert
switch(config-ta-root-cert)# no ocsp disable-nonce
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------------|--------------|
| 10.07 or earlier | -- |

Command Information

| Platforms | Command context | Authority |
|---------------|--|--|
| All platforms | <code>config-ta-<TA-NAME></code> | Administrators or local user group members with execution rights for this command. |

ocsp enforcement-level

```
ocsp enforcement-level {strict | optional}
no enforcement-level
```

Description

Sets either strict or reduced enforcement of the OCSF check of certificates. Strict enforcement is enabled by default.

The **no** form of this command resets enforcement to its default of **strict**.

| Parameter | Description |
|-----------------------|--|
| <code>strict</code> | Sets strict OCSF checking of certificates. The certificate is accepted only if all possible checking (including validation failures, software system errors, configuration errors, transactional errors) is successful. |
| <code>optional</code> | Sets reduced OCSF checking of certificates. The certificate is accepted unless one or more of these validation errors occur: <ul style="list-style-type: none"> ▪ Response signature invalid. ▪ Nonce in response mismatch. ▪ Certificate revoked, but only when revocation checking is possible. if revocation check is not possible, the certificate is still accepted if there are no other validation errors. |

Examples

Setting reduced OCSF checking of certificates:

```
switch(config)# crypto pki ta-profile root-cert
switch(config-ta-root-cert)# ocsp enforcement-level optional
```

Setting strict OCSF checking of certificates:

```
switch(config)# crypto pki ta-profile root-cert
switch(config-ta-root-cert)# ocsp enforcement-level strict
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------------|--------------|
| 10.07 or earlier | -- |

Command Information

| Platforms | Command context | Authority |
|---------------|--|--|
| All platforms | <code>config-ta-<TA-NAME></code> | Administrators or local user group members with execution rights for this command. |

ocsp url

```
ocsp url {primary | secondary} <URL>
no ocsp url {primary | secondary}
```

Description

Configures the OCSP responder URLs that the current TA profile uses to verify the revocation status of an X.509 digital certificate. These URLs override the OCSP responder URL contained within the peer certificate being verified (as well as URLs defined in any intermediate CAs in the chain of trust).

If no OCSP responder URLs are defined for a TA profile (default setting), then the OCSP responder URL in the peer certificate is used for revocation status checking. (The OCSP responder URL is contained in a certificate's Authority Information Access field, which is an X.509 v3 certificate extension.)

The **no** form of this command deletes the specified OCSP responder URL (primary or secondary) from the current TA profile.

| Parameter | Description |
|--|---|
| <code>{primary secondary} <URL></code> | Specify the HTTP URL of the primary or secondary OCSP responder using either a fully qualified domain name or IPv4 address. |

Examples

Defining the primary OCSP URL for the TA profile **root-cert**:

```
switch(config)# crypto pki ta-profile root-cert
switch(config-ta-root-cert)# revocation-check ocsp
switch(config-ta-root-cert)# ocsp url primary http://ocsp-server.site.com
```

Removing the primary OCSP URL from the TA profile **root-cert**:

```
switch(config)# crypto pki ta-profile oot-cert
switch(config-ta-root-cert)# revocation-check ocsp
switch(config-ta-root-cert)# no ocsp url primary
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------------|--------------|
| 10.07 or earlier | -- |

Command Information

| Platforms | Command context | Authority |
|---------------|--|--|
| All platforms | <code>config-ta-<TA-NAME></code> | Administrators or local user group members with execution rights for this command. |

ocsp vrf

```
ocsp vrf <VRF-NAME>
no ocsp vrf
```

Description

Sets the VRF that the switch uses to communicate with OCSF responders for OCSF checking. VRF **mgmt** is used by default.

The **no** form of this command resets the VRF to its default **mgmt**.

| Parameter | Description |
|-------------------------------|---|
| <code><VRF-NAME></code> | Specifies the name of the VRF the switch uses to communicate with OCSF responders. Default: mgmt . |

Examples

Setting the OCSF responder VRF to **corp1**:

```
switch(config)# crypto pki ta-profile root-cert
switch(config-ta-root-cert)# ocsp vrf corp1
```

Reverting the OCSF responder VRF to its default:

```
switch(config)# crypto pki ta-profile root-cert
switch(config-ta-root-cert)# no ocsp vrf
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------------|--------------|
| 10.07 or earlier | -- |

Command Information

| Platforms | Command context | Authority |
|---------------|--|--|
| All platforms | <code>config-ta-<TA-NAME></code> | Administrators or local user group members with execution rights for this command. |

revocation-check ocsdp

```
revocation-check ocsdp
no revocation-check
```

Description

Enables certificate revocation checking for the current profile using the online certificate status protocol (OCSP).

The **no** form of this command disables certificate revocation checking for the current profile.

Examples

Enabling revocation checking for the TA profile **root-cert**:

```
switch(config)# crypto pki ta-profile root-cert
switch(config-ta-root-cert)# revocation-check ocsdp
```

Disabling revocation checking for the TA profile **root-cert**:

```
switch(config)# crypto pki ta-profile root-cert
switch(config-ta-root-cert)# no revocation-check
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------------|--------------|
| 10.07 or earlier | -- |

Command Information

| Platforms | Command context | Authority |
|---------------|--|--|
| All platforms | <code>config-ta-<TA-NAME></code> | Administrators or local user group members with execution rights for this command. |

show crypto pki application

```
show crypto pki application
```

Description

Shows certificate information for all features (applications) using leaf certificates that are managed by PKI.

Examples

Showing certificate information for all features (applications) using leaf certificates:

```
switch# show crypto pki application1
```

| Associated Applications | Certificate Name | Cert Status |
|-------------------------|------------------|----------------------------------|
| https-server | | not configured, using local-cert |
| syslog-client | local-cert | valid |
| hsc | xhscert | invalid, using local-cert |
| radsec-client | device-identity | valid |



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------------|--------------|
| 10.07 or earlier | -- |

Command Information

| Platforms | Command context | Authority |
|---------------|-----------------|--|
| All platforms | Manager (#) | Administrators or local user group members with execution rights for this command. |

show crypto pki certificate

```
show crypto pki certificate [<CERT-NAME> [plaintext | pem]]
```

Description

Shows a list of all configured leaf certificates, or detailed information for a specific leaf certificate.

Possible values for Cert Status are: **CSR pending, expired, expires soon, installed, malformed, not yet known**.

Possible values for EST Status are: **enroll failed, enroll pending, enroll retrying, enroll success, n/a** (certificate is not EST-enrolled), **reenroll failed, reenroll pending, reenroll retrying**.

| Parameter | Description |
|-------------|--|
| <CERT-NAME> | Specifies the leaf certificate name. Range: 1 to 32 alphanumeric characters excluding ".". |
| plaintext | Shows certificate information in plain text. |
| pem | Shows certificate information in PEM format. |

Examples

Showing a list of all configured leaf certificates:

```
switch# show crypto pki certificate
```

| Certificate Name | Cert Status | EST Status | Associated Applications |
|------------------|-------------|-----------------|-------------------------------|
| local-cert | installed | n/a | radsec-client, captive-portal |
| device-identity | installed | n/a | none |
| pod01-99-1 | installed | n/a | https-server, est-client |
| syslog-1 | CSR pending | enroll retrying | syslog-client |
| leaf-cert1 | installed | enroll success | none |
| leaf-cert2 | CSR pending | enroll failed | none |

Showing detailed information (in plaintext format) for leaf certificate **pod01-99-1**:

```
switch# show crypto pki certificate pod01-99-1 plaintext
```

```
Certificate Name: pod01-99-1
Associated Applications:
  https-server, est-client
Certificate Status: installed
EST Status: n/a
Certificate Type: regular
Intermediates:
  Subject: C = US, ST = CA, O = Company, OU = Lab-IT, CN = DeviceCA
  Issuer: C = US, ST = CA, O = Company, OU = Lab-IT, CN = Lab-CA
  Serial Number: 0x02
  Subject: C = US, ST = CA, O = Company, OU = Lab-IT, CN = Lab-CA
  Issuer: C = US, ST = CA, O = Company, OU = Lab-IT, CN = Lab-Root
  Serial Number: 0x01
Certificate:
  Data:
    Version: 1 (0x0)
    Serial Number: 14529416756121781768 (0xc9a2db8f3e3f4608)
  Signature Algorithm: sha256WithRSAEncryption
  Issuer: C=US, ST=CA, OU=Lab-IT, O=Company, CN=DeviceCA
  Validity
    Not Before: Jan 12 23:36:57 2018 GMT
    Not After : Nov 1 23:36:57 2020 GMT
  Subject: C=US, ST=CA, OU=Lab-IT, O=Company, CN=pod01-99-1
  Subject Public Key Info:
    Public Key Algorithm: rsaEncryption
    Public-Key: (2048 bit)
    Modulus:
      00:a0:cd:ef:1b:f9:b8:bd:39:fc:7a:0e:00:17:ff:
      2b:72:d8:4e:d4:df:49:36:ca:3a:f9:05:05:d7:e3:
      d1:97:29:71:e6:33:b8:bb:8e:f0:ee:a6:e4:4a:f8:
      ...
      fe:dd:d9:a0:af:59:47:25:b4:34:06:af:03:1d:33:
      30:c3:85:fe:5c:e7:19:7f:ff:3a:b2:21:b8:e8:ed:
      83:09
    Exponent: 65537 (0x10001)
  Signature Algorithm: sha256WithRSAEncryption
    39:f6:03:86:03:d9:05:61:39:25:5f:0d:75:cc:05:ae:04:7e:
    4c:a3:13:0b:f0:1e:af:68:0e:40:9f:ed:48:b6:5e:56:8c:53:
    46:5b:c9:a4:e0:b0:bc:31:4b:a7:5d:0a:ed:7c:9c:f6:bf:1e:
    ...
    39:f5:26:58:68:e2:13:ec:94:ac:60:8e:4b:b0:ba:45:cf:d6:
    6a:4b:9f:7d:ae:3f:e5:2e:81:fe:ac:b3:65:44:35:47:a5:2f:
    89:e7:58:a0
```


Showing detailed information (in PEM format) for leaf certificate **leaf-cert1** with a status of **CSR pending**:

```
switch# show crypto pki certificate leaf-cert1 pem

Certificate Name: leaf-cert1

Associated Applications:
  syslog-client
Certificate Status: CSR pending
EST Status: enroll retrying
Certificate Type: regular
-----BEGIN CERTIFICATE REQUEST-----

MIICtTCCAzoCAQAwcDEWMBQGA1UEAxMNC3lzbG9nLTg0MBYGA1UECzMpQ
XJlYmEtUm9zZXZpbGx1MQ4wDAYDVQQKEyTESMBAGA1EBxMJU9zZXZpbG
xlMQswCQYDVQQIEwJDQTELMAGA1UEBhMCVVMwgEiMSIb3DQEBAQUAA4I
...
cw2ytN6Idgh81k59x6DH7V/eORaKd5lq+oO7nkr6+QBf5L3f5Kb+TOFio
lei+EdCHMxxc07MK0n3dkziSW25HFUGsyEXVMK+BiD3zbKDoUe6XVhvqI
mamXyghigLYDcbsn6WVw==
-----END CERTIFICATE REQUEST-----
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------------|--------------|
| 10.07 or earlier | -- |

Command Information

| Platforms | Command context | Authority |
|---------------|-----------------|--|
| All platforms | Manager (#) | Administrators or local user group members with execution rights for this command. |

show crypto pki ta-profile

show crypto pki ta-profile [<TA-NAME>]

Description

Shows a list of all configured TA profiles, or detailed information for a specific profile.



This command shows information for both directly-configured TA profiles and TA profiles that were dynamically downloaded from EST servers.

| Parameter | Description |
|-----------|--|
| <TA-NAME> | Specifies the TA profile name. Range: 1 to 48 alphanumeric characters excluding ". |

Examples

Showing a list of all configured TA profiles:

```
switch# show crypto pki ta-profile
```

| Profile Name | TA Certificate | Revocation Check |
|--------------|-------------------|------------------|
| BASE_CA | Installed,valid | disabled |
| BASE02_CA | Installed,expired | disabled |
| root-cert | Installed,valid | OCSP |
| ROOT-A_CA | Not Installed | OCSP |
| EST-Service1 | Installed,valid | None |
| EST-Service2 | Installed,valid | None |

Showing detailed information for TA profile **root-cert**:

```
switch# show crypto pki ta-profile root-cert
```

```
TA Profile Name      : root-cert
Revocation Check     : OCSP
  OSCP Primary URL    : http://ocsp1.domain.com
  OSCP Secondary URL  : Not Configured
  OSCP Disable-nonce  : false
  OSCP Enforcement Level: strict
  OSCP VRF            : mgmt
TA Certificate: Installed and valid
Version: 3 (0x2)
Serial Number:
  74:e6:6d:22:3f:52:cc:94:43:41:ab:66:a8:8d:47:b1
Signature Algorithm: sha1withRSAEncryption
Issuer: OU=DeviceTrust, OU=Operations, O=Site, C=US,
       CN=Site Trusted Computing Root CA 1.0
Validity
  Not Before: Sep 14 03:12:06 2007 GMT
  Not After  : Sep 14 03:21:14 2032 GMT
Subject: OU=DeviceTrust, OU=Operations, O=Site, C=US,
       CN=Site Trusted Computing Root CA 1.0
Subject Public Key Info:
  Public Key Algorithm: rsaEncryption
  RSA Public Key: (2048 bit)
  Modulus (2048 bit):
    30:0d:06:09:2a:86:48:86:f7:0d:01:01:01:05:33:
    03:82:01:0f:00:30:82:01:3a:02:82:01:01:00:ac:
    3d:60:3a:2e:ca:a4:34:db:5c:3b:6b:07:df:73:62:
    ...
    20:c8:df:63:14:5a:e8:d3:ea:83:d8:47:a3:b5:2e:
    bb:64:51:f0:be:13:b6:91:e4:32:45:58:5e:1f:0d:
    02:03:01:00:01
  Exponent: 65537 (0x10001)
X509v3 extensions:
  X509v3 Key Usage:
    Digital Signature, Certificate Signing, CRL Signing
  X509v3 Basic Constraints:
    CA:TRUE, pathlen:4
  X509v3 Subject Key Identifier:
    eb:d7:ec:db:8a:cb:f2:51:d5:06:e1:42:7b:39:a7:d0:1e:31:6e:bf

Signature Algorithm: sha1withRSAEncryption
1c:90:f3:a4:f0:0d:e2:e3:e9:ae:01:e1:7d:a7:13:e2:cc:0b:
17:31:26:92:a2:5d:1d:19:60:54:03:13:9b:e1:73:6c:e4:b3:
```

```
01:4f:4e:ae:61:bd:ae:b6:12:d3:ab:08:ae:8c:47:92:d7:0d:
...
ca:cf:11:78:55:6d:06:49:fa:d4:8d:f3:ef:7f:79:38:35:5d:
16:5a:57:7f:a8:dc:b0:f8:a2:04:0d:17:0b:bb:58:32:30:e0:
2d:a8:37:a2
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------------|--------------|
| 10.07 or earlier | -- |

Command Information

| Platforms | Command context | Authority |
|---------------|-----------------|--|
| All platforms | Manager (#) | Administrators or local user group members with execution rights for this command. |

ta-certificate

```
ta-certificate { [import [terminal]] | import {<REMOTE-URL> | <STORAGE-URL>} }
```

Description

Imports a CA certificate for use in the current TA profile. The certificate must be in PEM format. The PEM data must be delimited with these lines:

```
-----BEGIN CERTIFICATE-----
-----END CERTIFICATE-----
```



Only the first certificate in the PEM data is imported. Any additional certificates are ignored.

| Parameter | Description |
|---|--|
| <code>[import [terminal]]</code> | Import the certificate by pasting PEM-format data at the console. Upon execution, the config-cert-import context is entered for certificate pasting. To complete certificate data entry press Control-D in your terminal program. Alternatively, the pasted certificate data can include at its end the delimiter END_OF_CERTIFICATE (after the -----END CERTIFICATE----- line), making entry of Control-D unnecessary. |
| <code>import <REMOTE-URL></code> | Import the certificate from a file on a remote TFTP or SFTP server. The URL syntax is:
{tftp:// sftp://<USER>@} {<IP> <HOST>}
[:<PORT>] [;blocksize=<SIZE>]/<FILE> |
| <code>import <STORAGE-URL></code> | Available on switch families that provide USB device file import capability, import the certificate from a file on a USB storage device inserted in the switch USB port. The URL syntax is usb:/<FILE> . |

Example

Importing a certificate into the TA profile **root-cert** by pasting PEM-format certificate data at the console:

```
switch(config)# crypto pki ta-profile root-cert
switch(config-ta-root-cert)# ta-certificate import terminal
Paste the certificate in PEM format below, then hit enter and ctrl-D:
switch(config-ta-cert)# -----BEGIN CERTIFICATE-----
switch(config-ta-cert)# MIIDuTCCAqECCQCuoxeJ2ZNYcjANBgkqhkiG9w0BAQsFADCBQzELMAEBh
switch(config-ta-cert)# VVMxEzARBgNVBAgMCkNhbgG1mb3JuaWExEDA0BgNVBACMB1JvY2tsDAKBg
switch(config-ta-cert)# BAoMA0hQTjEVMBMGAlUECwwMSFBOUm9zZXZpbGx1MSowKAYDVQOCG5zdz
...
switch(config-ta-cert)# x3Wff3dFZ8o9sd5LVAHneH/ztb9MP34z+le1V346r12L2kpxmTOVJVyTO
switch(config-ta-cert)# BIzD/ST/HaWI+OS+S80rm93PSscEbb9GWk7vshh5EnW/moehBKcE40lzy
switch(config-ta-cert)# 3LvMLZcSSSe5J2Ca2XIhfDme8UaNZ7syGYMsAW0nG7yYHWkEOQu9s
switch(config-ta-cert)# -----END CERTIFICATE-----
switch(config-ta-cert)#
The certificate you are importing has the following attributes:
Issuer: C=US, ST=CA, L=Rocklin, O=Company, OU=Site,
       CN=site.com/emailAddress=test.ca@site.com
Subject: C=US, ST=CA, L=Rocklin, O=Company, OU=Site,
        CN=9000/emailAddress=test.ca@site.com
Serial Number: 12121221634631568498 (0xae51217d5945772)

TA certificate import is allowed only once for a TA profile
Do you want to accept this certificate (y/n)? y
TA certificate accepted.
switch(config-ta-root-cert)#
```

Importing a certificate into the TA profile **root-cert2** from file **rcert2-data** on the USB device:

```
switch(config)# crypto pki ta-profile root-cert2
switch(config-ta-root-cert2)# ta-certificate import usb:/rcert2-data
The certificate you are importing has the following attributes:
Issuer: C=US, ST=California, L=Rocklin, O=Company, OU=Site,
       CN=site.com/emailAddress=test.ca@site.com
Subject: C=US, ST=California, L=Rocklin, O=Company, OU=Site,
        CN=9000/emailAddress=test.ca@site.com
Serial Number: 12121221634631568498 (0xae51217d5945772)

TA certificate import is allowed only once for a TA profile
Do you want to accept this certificate (y/n)? y
TA certificate accepted.
switch(config-ta-root-cert2)#
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------------|--------------|
| 10.07 or earlier | -- |

Command Information

| Platforms | Command context | Authority |
|---------------|--|--|
| All platforms | <code>config-ta-<TA-NAME></code> | Administrators or local user group members with execution rights for this command. |

subject

```
subject [common-name <COMMON-NAME>] [country <COUNTRY>] [locality <LOCALITY>]
        [org <ORG-NAME>] [org-unit <ORG-UNIT>] [state <STATE>]
```

Description

Sets the subject fields for the current leaf certificate. If the **common-name** parameter is not specified, then you are prompted to define a value for each field. If a configured value exists for any field, it is presented as the default.

The subject fields of the default certificate **local-cert** cannot be changed.

| Parameter | Description |
|--|---|
| <code>common-name <COMMON-NAME></code> | Specifies the common name. The name can be a single word or multiple words enclosed in quotation marks ("). |
| <code>country <COUNTRY></code> | Specifies the country or region using the two letter ISO 3166-1 country code. |
| <code>locality <LOCALITY></code> | Specifies the locality such as city or region. The locality can be a single word or multiple words enclosed in quotation marks ("). |
| <code>org <ORG-NAME></code> | Specifies the organization. The org name can be a single word or multiple words enclosed in quotation marks ("). |
| <code>org-unit <ORG-UNIT></code> | Specifies the organizational unit (OU). The OU can be a single word or multiple words enclosed in quotation marks ("). Define multiple OUs by separating the names with commas (,). |
| <code>state <STATE></code> | Specifies the state. The state can be a single word or multiple words enclosed in quotation marks ("). |

Examples

Setting subject fields for the leaf certificate **leaf-cert**:

```
switch(config-cert-leaf-cert)# subject common-name Leaf01 country US
locality Roseville org "HPE Aruba" org-unit Storage,Server state CA
```

Setting subject fields for the leaf certificate **leaf-cert** interactively:

```
switch(config-cert-leaf-cert)# subject
Do you want to use the switch serial number as the common name (y/n)? n
Enter Common Name : Leaf01
Enter Org Unit : Storage,Server
Enter Org Name : HPE Aruba
Enter Locality : Roseville
Enter State : CA
Enter Country : US
switch(config-cert-leaf-cert)#
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------------|--------------|
| 10.07 or earlier | -- |

Command Information

| Platforms | Command context | Authority |
|---------------|--|--|
| All platforms | <code>config-cert-<CERT-NAME></code> | Administrators or local user group members with execution rights for this command. |

subject-alt-name

[no] subject-alt-name {dns-name <dns-name> | ip <ip-address>}

Description

Configure subject alternative name (SAN) extensions for certificate enrollment. SAN extensions are specified in [RFC 5280](#). The switch supports both **dnsName** and **ipAddress** types, with a maximum of two entries for each type.

The **no** form of this command negates or removes any configuration parameter.

| Parameter | Description |
|---------------------|--|
| dns-name <dns-name> | Configure a SAN entry containing a DNS name. The DNS name can contain no more than 255 characters. |
| ip <ip-address> | Configure a SAN entry containing an IP address in either IPv4 or IPv6 format. |

Usage

For more information on using this configuring a subject Alternative name during CSR creation, refer to the [video on the HPE Aruba Networking Airheads Broadcasting Channel](#).

Examples

Setting two subject-alternative names for a certificate:

```
switch(config)# crypto pki certificate leaf-cert
switch (config-cert-leaf-cert)# subject-alt-name ip 2222::2222
switch (config-cert-leaf-cert)#
switch (config-cert-leaf-cert)# subject-alt-name ip 3.3.3.3
A maximum of 2 IP addresses can be configured
```

Removing subject-alternative names from a certificate.

```
switch(config)# crypto pki certificate leaf-cert
switch (config-cert-leaf-cert)# no subject-alt-name ip 2222::2222
switch (config-cert-leaf-cert)#
switch (config-cert-leaf-cert)# no subject-alt-name ip 3.3.3.3
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|--------------------|
| 10.15 | Comand introduced. |

Command Information

| Platforms | Command context | Authority |
|---------------|-------------------------|--|
| All platforms | config-cert-<CERT-NAME> | Administrators or local user group members with execution rights for this command. |

PKI EST commands

arbitrary-label

```
arbitrary-label <LABEL>
no arbitrary-label
```

Description

Within the EST profile context, configures the generic optional label (also known as arbitrary label) to be concatenated to the EST server URL that is configured with the **url** command. There is no arbitrary label configured by default. Any existing arbitrary label is replaced by this command. The use of arbitrary labels is optional.

RFC 7030 allows the use of arbitrary labels so that one EST server may serve multiple CAs with the same server URL that gets concatenated with different arbitrary labels. The same label is used for every request made under a particular EST profile.

Some EST schemes use arbitrary labels in a more sophisticated way, defining different labels for different types of requests under the same EST profile. For example, the CA certificate request could use the generic label (configured with this **arbitrary-label** command), the certificate enrollment request could use the enrollment label (configured with the **arbitrary-label-enrollment** command), and the re-enrollment request could use the re-enrollment label (configured with the **arbitrary-label-reenrollment** command). Note that only one label of each of the three available types can be configured in any EST profile.

The **no** form of this command removes the generic arbitrary label.

| Parameter | Description |
|-----------|--|
| <LABEL> | Specifies the generic arbitrary label. Range: Up to 64 characters. |

Examples

Configuring the URL and generic arbitrary label. Note that with the URL and arbitrary label configured in this example, the final URL the switch uses to request CA certificates from the EST server is `https://est-service999.com/.well-known/est/rsa2048/cacerts`.

```
switch(config)# crypto pki est-profile EST-service1  
switch(config)# url https://est-service999.com/.well-known/est  
switch(config-est-EST-service1)# arbitrary-label rsa2048
```

Removing the generic arbitrary label:

```
switch(config)# crypto pki est-profile EST-service1  
switch(config-est-EST-service1)# no arbitrary-label
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------------|--------------|
| 10.07 or earlier | -- |

Command Information

| Platforms | Command context | Authority |
|---------------|--|--|
| All platforms | <code>config-est-<EST-NAME></code> | Administrators or local user group members with execution rights for this command. |

arbitrary-label-enrollment

```
arbitrary-label-enrollment <LABEL>  
no arbitrary-label-enrollment
```

Description

Within the EST profile context, configures the arbitrary enrollment label to be concatenated to the EST server URL that is configured with the **url** command. This label is specific to the enrollment operation. There is no arbitrary enrollment label configured by default. Any existing arbitrary enrollment label is replaced by this command. The use of arbitrary enrollment labels is optional.

When the enrollment label is not configured, the generic arbitrary label (created with the **arbitrary-label** command) is used (if configured) for enrollment.

RFC 7030 allows the use of arbitrary labels so that one EST server may serve multiple CAs with the same server URL that gets concatenated with different arbitrary labels. The same label is used for every request made under a particular EST profile.

Some EST schemes use arbitrary labels in a more sophisticated way, defining different labels for different types of requests under the same EST profile. For example, the CA certificate request could use the generic label (configured with the **arbitrary-label** command), the certificate enrollment request could use the enrollment label (configured with this **arbitrary-label-enrollment** command), and the re-enrollment request could use the re-enrollment label (configured with the **arbitrary-label-**

reenrollment command). Note that only one label of each of the three available types can be configured in any EST profile.

The **no** form of this command removes the arbitrary enrollment label.

| Parameter | Description |
|-----------|---|
| <LABEL> | Specifies the arbitrary enrollment label. Range: Up to 64 characters. |

Examples

Configuring the arbitrary enrollment label:

```
switch(config)# crypto pki est-profile EST-service1  
switch(config-est-EST-service1)# arbitrary-label-enrollment ipsec-v7
```

Removing the arbitrary enrollment label :

```
switch(config)# crypto pki est-profile EST-service1  
switch(config-est-EST-service1)# no arbitrary-label-enrollment
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------------|--------------|
| 10.07 or earlier | -- |

Command Information

| Platforms | Command context | Authority |
|---------------|-----------------------|--|
| All platforms | config-est-<EST-NAME> | Administrators or local user group members with execution rights for this command. |

arbitrary-label-reenrollment

```
arbitrary-label-reenrollment <LABEL>  
no arbitrary-label-reenrollment
```

Description

Within the EST profile context, configures the arbitrary re-enrollment label to be concatenated to the EST server URL that is configured with the **url** command. This label is specific to the re-enrollment operation. There is no arbitrary re-enrollment label configured by default. Any existing arbitrary re-enrollment label is replaced by this command. The use of arbitrary re-enrollment labels is optional.

When the re-enrollment label is not configured, the generic arbitrary label (created with the **arbitrary-label** command) is used (if configured) for re-enrollment.

RFC 7030 allows the use of arbitrary labels so that one EST server may serve multiple CAs with the same server URL that gets concatenated with different arbitrary labels. The same label is used for every request made under a particular EST profile.

Some EST schemes use arbitrary labels in a more sophisticated way, defining different labels for different types of requests under the same EST profile. For example, the CA certificate request could use the generic label (configured with the **arbitrary-label** command), the certificate enrollment request could use the enrollment label (configured with the **arbitrary-label-enrollment** command), and the re-enrollment request could use the re-enrollment label (configured with this **arbitrary-label-reenrollment** command). Note that only one label of each of the three available types can be configured in any EST profile.

The **no** form of this command removes the arbitrary re-enrollment label.

| Parameter | Description |
|----------------------------|--|
| <code><LABEL></code> | Specifies the arbitrary re-enrollment label. Range: Up to 64 characters. |

Examples

Configuring the arbitrary re-enrollment label:

```
switch(config)# crypto pki est-profile EST-service1  
switch(config-est-EST-service1)# arbitrary-label-reenrollment ipsec-v7
```

Removing the arbitrary re-enrollment label :

```
switch(config)# crypto pki est-profile EST-service1  
switch(config-est-EST-service1)# no arbitrary-label-reenrollment
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------------|--------------|
| 10.07 or earlier | -- |

Command Information

| Platforms | Command context | Authority |
|---------------|--|--|
| All platforms | <code>config-est-<EST-NAME></code> | Administrators or local user group members with execution rights for this command. |

crypto pki est-profile

```
crypto pki est-profile <EST-NAME>  
no crypto pki est-profile <EST-NAME>
```

Description

Creates a certificate Enrollment over Secure Transport (EST) profile and changes to the **config-est-<EST-NAME>** context for the profile. Each EST profile stores information about the EST service, including EST server URL Up to 16 profiles can be created.

If the specified EST profile exists, this command changes to the **config-est-<EST-NAME>** context for the profile.

The **no** form of this command deletes the specified EST profile. It also deletes the TA profiles whose CA certificates were downloaded from the corresponding EST server, and the leaf certificates that were enrolled using this EST profile.

The deletion of the related TA profiles and enrolled certificates is permanent. If the EST profile is in the startup configuration and the EST profile is deleted but this deletion is not updated in the startup configuration before a switch reboot, the EST profile will still exist after the reboot but the related TA profiles and enrolled certificates will not exist.



Parameter

Description

<EST-NAME>

Specifies the EST profile name. Range: Up to 32 alphanumeric characters (excluding ").

Examples

Creating EST profile **EST-Service1**:

```
switch(config)# crypto pki est-profile EST-Service1
switch(config-est-service1)#
```

Removing EST profile **service1**:

```
switch(config)# no crypto pki est-profile EST-Service1
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

Release

Modification

10.07 or earlier

--

Command Information

Platforms

Command context

Authority

All platforms

config

Administrators or local user group members with execution rights for this command.

enroll est-profile

```
enroll est-profile <EST-NAME>
```

Description

Enrolls a leaf certificate through a remote EST (Enrollment over Secure Transport) server.

Per RFC 7030, EST enables clients to request certificate signing services over secure TLS connections. The switch generates a key pair and the corresponding CSR. The CSR is sent to the EST server to request signing, and the signed certificate is returned to the switch where it is validated. If the whole process succeeds, the certificate can be used as a leaf certificate on the switch. When the leaf certificate approaches its expiry date, it will be renewed automatically through the same EST server.

Each enrollment or re-enrollment attempt starts with a **/cacerts** request sent to the EST server to get the latest chain of CA certificates. After the enrollment or re-enrollment succeeds, this chain of CA certificates will be compared with those downloaded previously from the same EST server. Updates will be made as appropriate.

The subject fields of the current leaf certificate must be defined before running this command. If the common name subject field is not configured, this command is rejected.

This command cannot be used to enroll or renew the default certificate "local-cert."

| Parameter | Description |
|-------------------------------|--|
| <code><EST-NAME></code> | Specifies an existing EST profile name. Range: Up to 32 alphanumeric characters (excluding "). |

Example

Enrolling leaf certificate **leaf-cert1** through the EST server identified in EST profile **EST-service1**:

```
switch(config-cert-leaf-cert1)# enroll est-profile EST-service1
You are enrolling a certificate with the following attributes:
  Subject: C=US, ST=CA, L=Roseville, OU=Aruba-Roseville, O=Aruba,
          CN=leaf-cert1
  Key Type: RSA (2048 bits)

Continue (y/n)? y
Certificate enrollment via EST-service1 has been initiated.
Please use `show crypto pki certificate leaf-cert1` to check its status.

switch(config-cert-leaf-cert1)#
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------------|--------------|
| 10.07 or earlier | -- |

Command Information

| Platforms | Command context | Authority |
|---------------|--|--|
| All platforms | <code>config-cert-<CERT-NAME></code> | Administrators or local user group members with execution rights for this command. |

reenrollment-lead-time

reenrollment-lead-time <LEAD-TIME>
no reenrollment-lead-time

Description

Within the EST profile context, sets the certificate re-enrollment lead time which is the number of days before certificate expiry date that certificate re-enrollment will be initiated.

The **no** form of this command resets the EST server re-enrollment lead time to its default of 2 days.

| Parameter | Description |
|-------------|--|
| <LEAD-TIME> | Specifies the certificate re-enrollment lead time in days. Range: 0 to 30 days. Default: 2 days. |

Examples

Setting the certificate re-enrollment lead time to 15 days:

```
switch(config)# crypto pki est-profile EST-service1  
switch(config-est-EST-service1)# reenrollment-lead-time 15
```

Resetting the certificate re-enrollment lead time to its default of 2 days :

```
switch(config)# crypto pki est-profile EST-service1  
switch(config-est-EST-service1)# no reenrollment-lead-time
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------------|--------------|
| 10.07 or earlier | -- |

Command Information

| Platforms | Command context | Authority |
|---------------|-----------------------|--|
| All platforms | config-est-<EST-NAME> | Administrators or local user group members with execution rights for this command. |

retry-count

retry-count <RETRIES>
no retry-count

Description

Within the EST profile context, sets the maximum number of retries to be attempted after the initial certificate enrollment request fails.

The **no** form of this command resets the maximum number of certificate enrollment request retries to its default of 3.

| Parameter | Description |
|------------------------------|---|
| <code><RETRIES></code> | Specifies the maximum number of certificate enrollment request retries. Range: 0 to 32 retries. Default: 3 retries. |

Examples

Setting the retry count to 5 retries:

```
switch(config)# crypto pki est-profile EST-service1  
switch(config-est-EST-service1)# retry-count 5
```

Resetting the retry count to its default of 3 retries:

```
switch(config)# crypto pki est-profile EST-service1  
switch(config-est-EST-service1)# no retry-count
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------------|--------------|
| 10.07 or earlier | -- |

Command Information

| Platforms | Command context | Authority |
|---------------|--|--|
| All platforms | <code>config-est-<EST-NAME></code> | Administrators or local user group members with execution rights for this command. |

retry-interval

```
retry-interval <INTERVAL>  
no retry-interval
```

Description

Within the EST profile context, sets the interval at which a failed certificate enrollment request is retried. The **no** form of this command resets the enrollment request retry interval to its default of 30 seconds.

| Parameter | Description |
|-------------------------------|--|
| <code><INTERVAL></code> | Specifies the enrollment request retry interval in seconds. Range: 30 to 600 seconds. Default: 30 seconds. |

Examples

Setting the certificate enrollment request retry interval to 45 seconds:

```
switch(config)# crypto pki est-profile EST-service1  
switch(config-est-EST-service1)# retry-interval 45
```

Resetting the retry interval to its default of 30 seconds:

```
switch(config)# crypto pki est-profile EST-service1  
switch(config-est-EST-service1)# no retry-interval
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------------|--------------|
| 10.07 or earlier | -- |

Command Information

| Platforms | Command context | Authority |
|---------------|-------------------------------------|--|
| All platforms | config-est- <i><EST-NAME></i> | Administrators or local user group members with execution rights for this command. |

show crypto pki est-profile

```
show crypto pki est-profile [<EST-NAME>]
```

Description

Shows a list of all configured EST profiles, or detailed information for a specific profile.

| Parameter | Description |
|-------------------------|--|
| <i><EST-NAME></i> | Specifies the EST profile name. Range: Up to 32 alphanumeric characters (excluding "). |

Examples

Showing a list of all configured EST profiles:

```
switch# show crypto pki est-profile  
  
Profile Name           Downloaded  Enrolled  
                        TA Profiles  Certificates  
-----  
EST-service1           2           3  
EST-service2           1           2  
EST-service3           2           0
```

Showing detailed information for EST profile **EST-service1**:

```

switch# show crypto pki est-profile EST-service1
Profile Name           : EST-service1
Service VRF           : mgmt
Service URL            : https://est-service999.com
  Arbitrary Label      : not configured
  Arbitrary Label Enrollment : /ipsec-VP7
  Arbitrary Label Reenrollment : not configured
Authentication Username : est1
Authentication Password :
  AQBapREALpWYm2z7L1LanOtR3vGkqhBN1hBUU2CuvQXUF/ggYgAAAnAnGTnKq49P4c
  dNQ6UqPbjHL4XzCO0T04djkhsUXPKGfnsWuFEONveh+JbEobqKImfwJjc3eWHiaUb
  eNpPx2zN2Q1DdyxAAQi4rmKr8LITMTMd7qr
Retry Interval         : 45 seconds
Retry Count            : 5 times
Reenrollment Lead Time : 2 days
Downloaded TA Profiles : 2
Enrolled Certificates  :
  leaf-cert1
  leaf-cert2
  leaf-cert3

```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------------|--------------|
| 10.07 or earlier | -- |

Command Information

| Platforms | Command context | Authority |
|---------------|-----------------|--|
| All platforms | Manager (#) | Administrators or local user group members with execution rights for this command. |

url (est profile)

```

url <URL>
no url

```

Description

Within the EST profile context, configures the URL of the certificate enrollment EST server. This is not configured by default. Any existing URL is replaced by this command.

The **no** form of this command removes the EST server URL within the selected EST profile. The removal of the URL does not affect the TA profiles and enrolled certificates from the EST server.

| Parameter | Description |
|-----------|--|
| <URL> | Specifies the EST server URL. Range: Up to 192 characters. |

Usage

- The configuration and update of the EST profile URL triggers the sending of a **/cacerts** request to the EST server. A successful request will result in a chain of trusted CA certificates being downloaded from the EST server. Each CA certificate, either root CA certificates or intermediate CA certificates, will be saved as a TA profile, with TA profile name **<est-name>-est-taNN** with **NN** representing two numerical digits. This TA profile naming scheme with the **-est-taNN** suffix is reserved for TA profiles downloaded from EST servers.
- Upon connection with an EST server, the switch authenticates the server by validating the server certificate. For this validation to succeed, a TA profile needs to pre-exist in the switch with a CA certificate from the issuer chain of the server certificate. Once the server is authenticated, all CA certificates in its **/cacerts** response will be trusted, with no further validation occurring for them.
- The TA profiles with CA certificates downloaded from an EST server will have their revocation check set to OCSP, enforcement set to optional, and the OCSP VRF set to the same as that of the EST profile.

Examples

Configuring the EST server URL:

```
switch(config)# crypto pki est-profile EST-service1
switch(config-est-EST-service1)# url https://est-service999.com/.well-known/est
```

Removing the EST server URL:

```
switch(config)# crypto pki est-profile EST-service1
switch(config-est-EST-service1)# no url
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------------|--------------|
| 10.07 or earlier | -- |

Command Information

| Platforms | Command context | Authority |
|---------------|-----------------------|--|
| All platforms | config-est-<EST-NAME> | Administrators or local user group members with execution rights for this command. |

username (est profile)

```
username <USERNAME> password [ciphertext <CIPHERTEXT-PASSWORD> |
    plaintext <PLAINTEXT-PASSWORD>]
no username
```

Description

Within the EST profile context, configures the user account information for the EST server that is used to authenticate the switch before accepting requests from the switch. This is not configured by default. Any existing username and password is replaced by this command.

When entered without either optional **ciphertext** or **plaintext** parameters, the plaintext password is prompted for twice, with the characters entered masked with "*" symbols.

The **no** form of this command removes the user account information within the selected EST profile.

There are two ways the EST client on a CX switch can prove itself to an EST server: a certificate, and/or username and password. At least one of the two must be configured for the EST request to succeed. If both are configured, certificate authentication will be used. If a certificate is not configured or certificate authentication fails, and username and password is configured, the username and password will be sent to the EST server for authentication.

| Parameter | Description |
|----------------------------------|--|
| <USERNAME> | Specifies the EST server account user name. The exact user name requirements are set by the chosen EST service. Range: Up to 32 alphanumeric characters. |
| ciphertext <CIPHERTEXT-PASSWORD> | Specifies the EST server account password as Base64 ciphertext. No password prompts are provided and the ciphertext password is validated before the configuration is applied for the user.

NOTE: The ciphertext password must be gotten from the EST service. |
| plaintext <PLAINTEXT-PASSWORD> | Specifies the password without prompting. The password is visible as cleartext when entered but is encrypted thereafter. The exact password requirements are set by the chosen EST service. Range: Up to 64 alphanumeric characters. |

Examples

Configuring an EST user with prompted cleartext password entry :

```
switch(config)# crypto pki est-profile EST-service1
switch(config-est-EST-service1)# username est1 password
Enter password: *****
Confirm password: *****
switch(config-est-EST-service1)#
```

Configuring an EST user with direct cleartext password entry:

```
switch(config)# crypto pki est-profile EST-service2
switch(config-est-EST-service2)# username est1 password plaintext concept_leap739
```

Configuring an EST user with ciphertext password entry :

```
switch(config)# crypto pki est-profile EST-service3
switch(config-est-EST-service3)# username est1 password ciphertext
AQBpRALpWYm2z7L1LanOtR3vGkqhN1hBU2CuvQXUF/ggYgAAAHWaPqxU6nAnGTnKq49P4cdNQ6U
qPbjHL4XzO0T04djKUPKGfnsWuFEONveh+JbEobq63+1k80qBKImfwJjc3eWHiaUbeNpPx2zN2Q
1DdyxAAQi4rmKr8LITMTTmd7qr
```

Removing the EST user account information for EST profile EST-service2:

```
switch(config)# crypto pki est-profile EST-service2  
switch(config-est-EST-service2)# no username
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------------|--------------|
| 10.07 or earlier | -- |

Command Information

| Platforms | Command context | Authority |
|---------------|-------------------------------------|--|
| All platforms | config-est- <i><EST-NAME></i> | Administrators or local user group members with execution rights for this command. |

vrf (est profile)

```
vrf <VRF-NAME>  
no vrf
```

Description

Within the EST profile context, selects the VRF through which the EST server can be reached. Any existing VRF selection is replaced by this command. When this command is not used, VRF **mgmt** is used by default on switch families supporting the **mgmt** VRF, otherwise the default VRF named **default** is used.

The **no** form of this command selects the default VRF either **mgmt** or **default**.

| Parameter | Description |
|-------------------------|--|
| <i><VRF-NAME></i> | Specifies the name of the VRF to use for EST server communication. |

Examples

Selecting VRF **it-services** for EST server communications:

```
switch(config)# crypto pki est-profile EST-service1  
switch(config-est-EST-service1)# vrf it-services
```

Resetting the VRF to its default of **mgmt** for EST server communications:

```
switch(config)# crypto pki est-profile EST-service1  
switch(config-est-EST-service1)# no vrf
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------------|--------------|
| 10.07 or earlier | -- |

Command Information

| Platforms | Command context | Authority |
|---------------|--|--|
| All platforms | <code>config-est-<EST-NAME></code> | Administrators or local user group members with execution rights for this command. |




MACsec is available on the 9300S Switch Series.

Media Access Control security (MACsec) provides Layer 2 security for wired LANs, protecting network communications against a range of attacks including: denial of service, intrusion, man-in-the-middle, and eavesdropping. These attacks exploit Layer 2 vulnerabilities and often cannot be detected. MACsec appends a header and tail to all Ethernet frames, and encrypts data payload within the frame. Receiving device checks header and tail for integrity. If the check fails, traffic is dropped. If the check is successful, the frame is decrypted.

The Media Access Control security (MACsec) protocol:

- Provides a Layer 2 hop-by-hop encryption on point-to-point Ethernet links, enabling a bi-directional secure link after an exchange and verification of security keys between two connected devices.
- Secures switch-to-switch infrastructure using the MKA (MACsec Key Agreement) protocol and Static CAK (Connectivity Association Key).
- MACsec is primarily used to secure point-to-point links. With some extensions in the feature, it is possible to establish a MACsec tunnel between two endpoints over a layer2 network. These extensions are referred to as MACsec WAN extensions. The MACsec WAN extensions are available only with an advance feature pack.
- MACsec encrypts all fields behind the source/destination MAC addresses except for MACsec SecTAG.
- MACsec secures switch to switch infrastructure using the MACsec Key Agreement (MKA) protocol and Static Connectivity Association Key (CAK).
- The pre-shared key (PSK) includes a connectivity association name (CKN) and a connectivity association key (CAK). The CKN and CAK are configured by the administrator and must match on both ends of the link.
- The MACsec frame format includes an additional 32-byte MACsec header, which includes a well-known EtherType field (0x88E5), while allowing the Ethernet source/destination MAC addresses to be left in the clear for Ethernet frame forwarding.

Figure 1 MACsec Frame Format

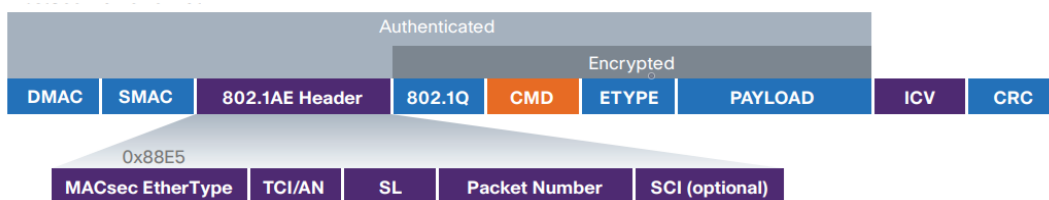

MACsec in AOS-CX

9300S Switch Series models that support MACsec:

| 9300S model | Interfaces | Speed |
|-------------|----------------------------------|-----------------------|
| S0F96A | 1/1/1 - 1/1/8
1/1/33 - 1/1/40 | 10G/25G/40G /
100G |

MACsec provides:

- **Connectionless data integrity:** Unauthorized changes to data cannot be made without being detected. Each MAC frame carries a separate integrity verification code.
- **Replay protection:** When enabled, packets are expected to arrive within the replay protection window number of packets. MAC frames copied from the network by an attacker cannot be resent into the network without being detected.
- **Secure Channel Identifier (SCI) tag:** Enables inclusion of the Secure Channel Identifier (SCI) tag in the Security TAG (SecTAG) field of the MACsec header. The Secure Channel Identifier (SCI) tag in the Security TAG (SecTAG) field of the MACsec header is comprised of a globally unique MAC Address and a port identifier that is unique within the system. An explicitly encoded SCI field in the SecTAG is not required on point-to-point links if the transmitting link has only one MACsec peer.
- **Data origin authenticity:** A received MAC frame is guaranteed to have been sent by the authenticated device.
- **Confidentiality:** The data payload of each MAC frame is encrypted to prevent it from being eavesdropped by unauthorized parties. The start-of-encryption offset is configurable, with available offset options of 0, 30 or 50 bytes. The default offset of 0 causes the entire data payload to be encrypted.
- **Bounded receive delay:** MAC frames cannot be intercepted by a man-in-the-middle attack and delayed by more than a few seconds without being detected.
- **Multiple Cipher Suites:**
 - gcm-aes-128: AES-128 encryption with Galois/Counter mode.
 - gcm-aes-256: AES-256 encryption with Galois/Counter mode.
 - gcm-aes-xpn-128: AES-128 encryption with Galois/Counter mode and extended packet numbering.
 - gcm-aes-xpn-256: AES-128 encryption with Galois/Counter mode and extended packet numbering. (Default)


MACsec use cases

The following deployments include point-to-point links between directly connected MACsec-capable devices. In these diagrams, potential MACsec links appear in red.

Use Case 1: *Central campus*

In this example, a company is leasing several floors on a building, where fiber is in the riser of the building.


Figure 1 Central campus building with switches on different floors

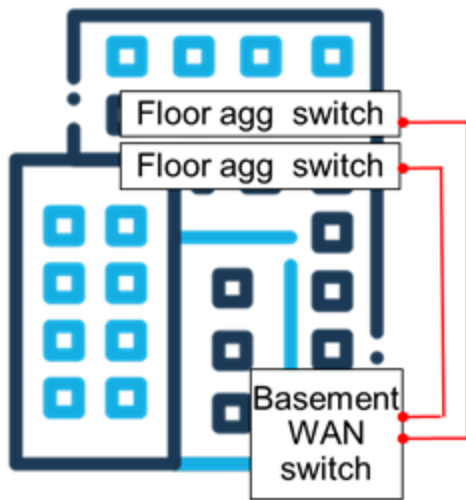

Use Case 2: Distributed campus

In this low-density distributed campus, multiple sites are linked with both MACsec and non-secured links.

Figure 2 Distributed campus deployments

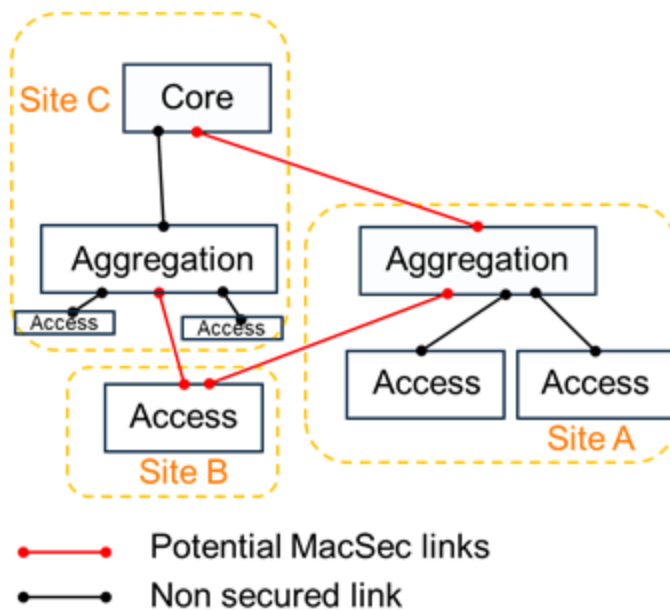

Use Case 3: ERPS connected campus

In this example, a multi-site campus is connected using Ethernet Ring Protection Switching (ERPS).


Figure 3 ERPS Campus



Use Case 4: Multi-Site Datacenter

A multi-site datacenter can use MACsec links between the sites.

Figure 4 Datacenter deployment

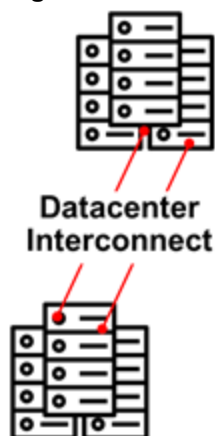

MACsec configuration (using pre-shared keys)

A simple configuration example is provided here to illustrate MACsec configuration using pre-shared keys in the MKA policy:

- Create and configure a MACsec policy:

```
switch(config)# macsec policy MS_Policy1
switch(config-macsec-policy)# cipher-suite gcm-aes-256 gcm-aes-xpn-256
switch(config-macsec-policy)# replay-protection window-size 100
switch(config-macsec-policy)# exit
switch(config)#
```

- Create and configure an MKA policy:

```
switch(config)# mka policy MKA_Policy1
switch(config-mka-policy)# pre-shared-key ckn abcdef12 cak plaintext 123abcdef
switch(config-mka-policy)# key-server-priority 5
switch(config-mka-policy)# exit
switch(config)#
```

- Apply the MACsec and MKA policy to a port range:

```
switch(config)# interface 1/1/1-1/1/4
switch(config-if-<1/1/1-1/1/4>)# apply macsec policy MS_Policy1
switch(config-if-<1/1/1-1/1/4>)# apply mka policy MKA_Policy1
switch(config-if-<1/1/1-1/1/4>)# exit
switch(config)#
```

- Show commands are provided for showing policy information and monitoring MACsec and MKA status and statistics:


```

switch(config)# show macsec policy MS_Policy1
...
switch# show macsec status
...
switch# show macsec statistics
...
switch# show mka policy MKA_Policy1
...
switch# show mka status
...
switch# show mka statistics
...

```

MACsec limitations

Listed below are the limitations:

- Only use MACsec-supported interfaces. Not all interfaces on a system may support the MACsec capability. The switch will display an error message when a policy is associated with a physical interface that is not capable of MACsec.
- WAN MACsec on a LAG interface is not supported.
- When packets transit over a WAN MACsec tunnel, it is possible that they arrive out of order on the destination. By default, replay protection is enabled on a MACsec channel with a window size of 0. All out of order packets in such cases would be dropped. When configuring a MACsec policy for use on a WAN MACsec channel, also configure the replay window to account for out of order packets.
- WAN MACsec with an HPE Aruba Networking controller as nexthop will be established only if the controller has ArubaOS versions 8.10, 10.6, or later.
- When using WAN MACsec, it is possible that the packet size exceeds the link MTU due to the overhead of the MACsec SecTAG header. This can lead to packets being dropped on the next hop device due to larger MTU. Configure the link MTU to account for the additional overhead of the MACsec header in such instances.
- MACsec with custom ether type will not be established between CX devices when there are PVOS switches in bypass.

MACsec WAN extension



-
- The MACsec WAN extensions are available only with an advanced feature pack.
 - This feature is available on the 9300S Switch Series.
-

The MACsec WAN extension allows the establishment of a MACsec channel between two remote endpoints. This process initially requires securing the MKA channel between these endpoints, which is achieved by changing the destination MAC associated with EAPoL frames for MKA. The switch continues to use Ether-Type 0x888e for MKA. It is possible that MKA frames intended for the remote peer are used by an intermediate device when 802.1X or MACsec is enabled on the link of that intermediate device. Hence, it is important to note that a remote MACsec channel establishment will fail, if 802.1X or MACsec is enabled on any of the hops between the two remote endpoints.

9300S Switch Series models that support MACsec WAN extension:

| 9300S model | Interfaces |
|-------------|----------------------------------|
| S0F96A | 1/1/1 - 1/1/8
1/1/33 - 1/1/40 |



Split ports are not supported on the 9300S Switch Series.

EAP TLS MACsec is not supported on the 9300S Switch Series.

WAN MACsec on a LAG interface

It is recommended not to configure a LAG interface as a WAN MACsec endpoint. If configured, both the LAG state and MACsec state on the member interfaces of the LAG will go down.

Replay protection with WAN MACsec

When packets transit over a WAN MACsec tunnel, it is possible they may arrive out of order at the destination. By default, replay protection is enabled on a MACsec channel with a window size of 0. In this case, all out-of-order packets will be dropped. Hence, when configuring a MACsec policy for a WAN MACsec channel, it is recommended to configure the replay window to account for out-of-order packets.

MACsec WAN extension configuration

The following example shows the tasks that need to be performed to configure MACsec WAN extension:

Configure MACsec bypass

```
switch(config)# macsec policy Aggregator-Connect
switch(config-macsec-policy)# bypass ieee-bpdu
OR
switch(config)# macsec policy Aggregator-Connect bypass ieee-bpdu
```

Configure the clear-tag mode in the MACsec policy

```
switch(config)# macsec policy Aggregator-Connect
switch(config-macsec-policy)# clear-tag-mode dot1q
OR
switch(config)# macsec policy Aggregator-Connect clear-tag-mode dot1q
```

Configure EAPoL-Destination Mac Address

```
switch(config)# mka policy Agg-To-Agg
switch(config-mka-policy)# eapol-destination-mac ff:ff:ff:ff:ff:ff
OR
switch(config)# mka policy Agg-To-Agg eapol-destination-mac ff:ff:ff:ff:ff:ff
```

Enable 802.1q tag for EAPoL MKA frames

```
switch(config)# mka policy Agg-To-Agg
switch(config-mka-policy)# eapol-dot1q-tagged
OR
switch(config)# mka policy Agg-To-Agg eapol-dot1q-tagged
```

Sample configuration

```
vlan 1,10,20
macsec policy <macsec-policy-name>
    bypass ieee-bpdu
    clear-tag-mode dot1q
mka policy <mka-policy-name>
    pre-shared-key ckn <ckn> cak plaintext <cak>
    eapol-destination-mac <<MAC-ADDRESS>>
    eapol-dot1q-tagged
interface 1/1/1
    no shutdown
    no routing
    vlan trunk native 10 tag
    vlan trunk allowed all
    apply mka policy <mka-policy-name>
    apply macsec policy <macsec-policy-name>
```

MACsec WAN extension use cases

The following deployments include point-to-point links between directly connected MACsec-capable devices.


Use Case 1: QinQ – Service Provider Bridging

The IEEE 802.1ad specification, commonly known as QinQ or provider bridging, extends the IEEE 802.1Q standard by providing a second tier of VLANs in a bridged network. The general purpose of QinQ is to allow frames from multiple customers to be forwarded in the provider network using service VLANs or S-VLANs. The provider bridge, which may comprise multiple devices in the service provider domain, appears as a simple bridge port to the customer's traffic and maintains the customer's VLAN.

In this example, Customer Network A, spread across multiple site locations, wants to link them together in a single logical network. The same applies to customer B. Customer VLANs are not used to make any forwarding decisions inside the provider network, where customer frames get assigned to service VLANs (S-VLANs). Inside the Service Provider Network, frames are forwarded based on the S-VLAN tag only, while the C-VLAN tag remains protected during data transmission. The S-VLAN tag is removed when the frame exits the provider network, restoring the original customer frame.

By enabling MACsec, customer frames are encrypted along this path. Hence, the secure customer traffic isolation is achieved at Layer 2 within a Service Provider network.


Figure 1 QinQ – Service Provider Bridging

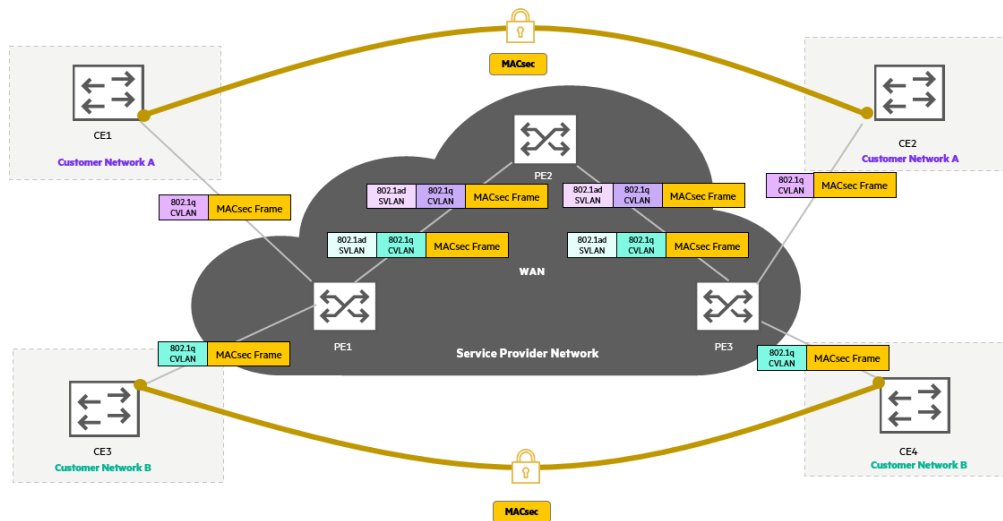

Use Case 2: Interconnect using VXLAN

In this example, two floors are interconnected over VXLAN. Access VSF switches act as VTEPs. The WAN MACsec tunnel is established between the extended access edge switches of different floors.


Figure 2 Interconnect using VXLAN

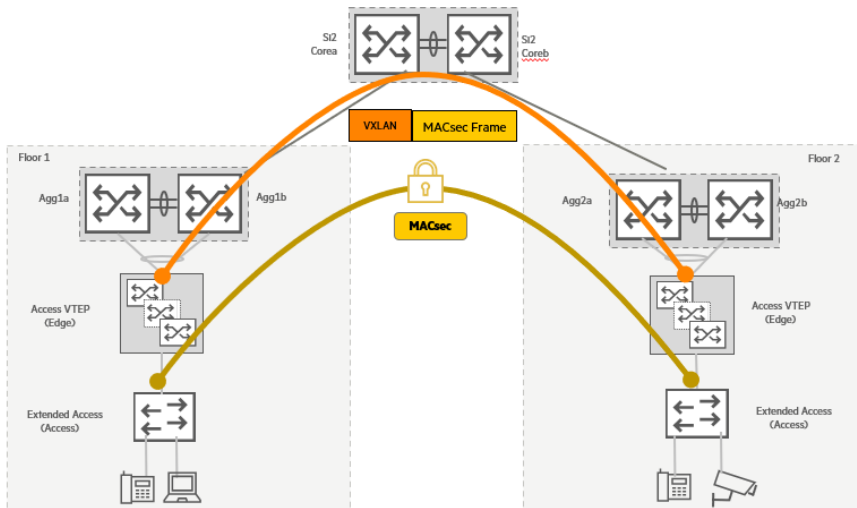

Use Case 3: Interconnect – L2 Only

In this example, two Floors are interconnected over L2-only interfaces. Access VSF switches is connected to extended access standalone switches. The WAN MACsec tunnel is established between the extended access edge switches of different floors.


Figure 3 Interconnect – L2 Only

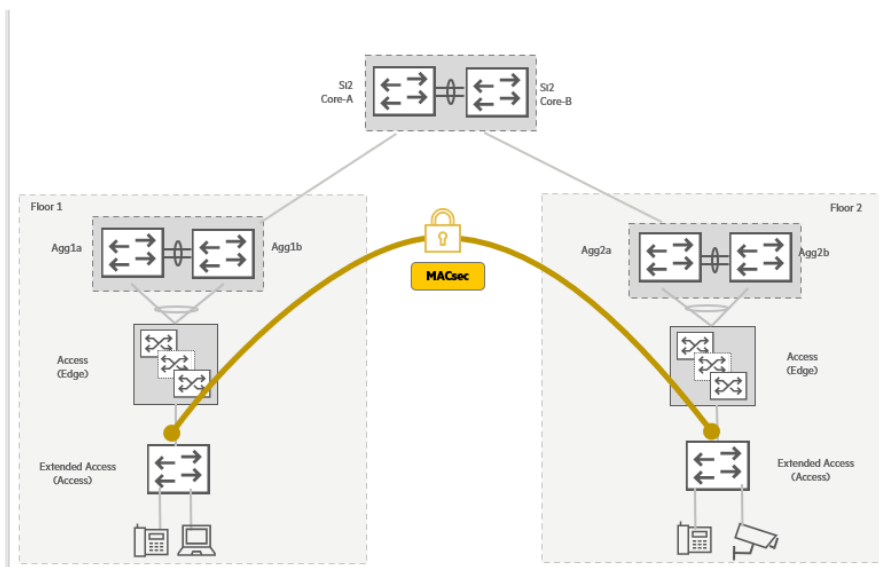

Use Case 4: Pseudo Wire – Site Interconnect using MPLS

In this example, two different sites, Site A and Site B, are connected using MPLS. The WAN MACsec tunnel is established between MACsec tunnel end-points over MPLS cloud. The MPLS PE is a third-party device that supports L2 VPN.


Figure 4 Pseudo Wire – Site Interconnect using MPLS

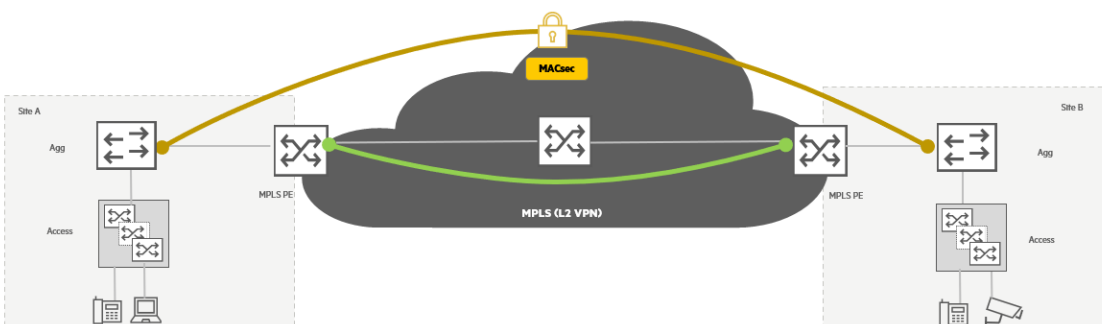

Use Case 5: Dual Encryption – MACsec over IPsec

In this example, two different sites, Site A and Site B, are protected using IPsec. The LAN MACsec channels are established between Access and Aggregation switches. The WAN MACsec tunnel is established between MACsec tunnel End-Points over IPsec. Gateways are used to establish IPsec tunnels and achieve L2 extension between the sites. The gateways must have an L2 GRE tunnel across the IPsec.

Figure 5 Dual Encryption – MACsec over IPsec

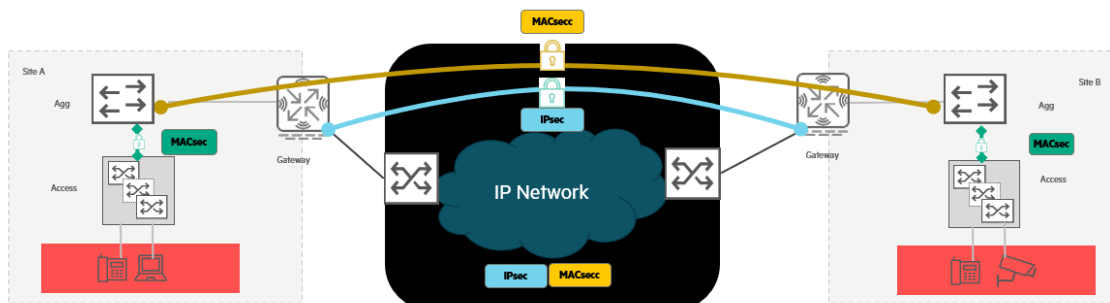

Debugging and troubleshooting

The output of the following show commands can be used to debug and troubleshoot any MACsec WAN extension related configurations:

show mka policy

```
9300(config)# sh mka policy

MKA Policy Details
=====
Policy Name: mka1
-----
Mode                : Pre-shared key
CKN                 : 123
CAK (encrypted)     : AQBapdmm17Ql4DWgACmS0iX7JrkVUvfRg4NvDvuQm6+...
Keychain            :
EAPoL Destination MAC : 01:80:c2:00:00:03
EAPoL Ethernet Type  : 888e
EAPoL 802.1q Tag     : Disabled
Key-server Priority   : 0
Transmit Interval    : 2 seconds
```

show mka status

```
9300(config)# sh mka status

MKA Protocol Status
Interface 1/1/4
=====
MKA Port Identifier   : 1
MKA Policy Name       : mka1
MKA Session Status    : Unsecured
Mode                  : Pre-shared key
CKN                   : 1230
CAK (encrypted)       :
AQBapTPSRl29UzarAbF0NrxgsU3B8Z5w9lhEz/oKjWMbf7+6AwAAAMMlEQ==
Keychain              :
Member Identifier     : f84f8bd77971b527c4a7e370
Message Number        : 2
Capability             : IC, Conf, Offset 0
EAPoL Destination MAC : 01:80:c2:00:00:03
EAPoL Ethernet Type   : 888e
EAPoL 802.1q Tagged    : Disabled
Transmit Interval     : 2 seconds
Key Server Priority    : 0
Key Server            : Yes
Live Peer List:
MI                    MN          PRI Capability          Rx-SCI
-----
Potential Peer List:
MI                    MN          PRI Capability          Rx-SCI
-----
```

show mka statistics

```
switch# show mka statistics interface 1/1/1
```

```

Interface 1/1/1
=====

KaY
----
SCI : ec0273f72f4d0001

Statistics
-----
MKPDUs With Invalid Version : 0
MKPDUs With Invalid CKN    : 0

Participant
-----
CKN : 1234567890

Statistics
-----
Tx MKPDUs           : 33834
Rx MKPDUs           : 35375
SAKs Distributed    : 1
SAKs Received       : 0
MKPDUs With Invalid ICV : 0
MKPDUs With Duplicate MI : 0
MKPDUs With Invalid MN : 0
...

```

show macsec policy

```

9300# sh macsec policy

MACsec Policy Details
=====
Policy Name: ml
-----
Cipher suite           : GCM-AES-128, GCM-AES-256, GCM-AES-XPB-128, GCM-AES-XPB-256
Include SCI            : Yes
Confidentiality        : Enabled
Confidentiality offset : 0
Replay protection      : Enabled
Replay protection window : 0
Data delay protection  : Disabled
Bypass                 :
Clear Tag Mode         : None

```

MACsec best practices

- Enable MACsec on links that have the potential to be compromised, and can be vulnerable to man-in-the-middle and masquerading attacks.
- Avoid enabling MACsec on links that are operating at 85% or greater capacity. The overhead of a MACsec header can lead to packet drops on a link operating close to full capacity.
- In an environment with devices running AOS-Switch, do not enable UDLD on both links. The UDLD session can toggle between UP and DOWN continuously when both MACsec and UDLD are enabled on the same link.

- Use the default values for the following configurations are recommended for most deployments.
 - **Confidentiality** (Default: Enabled)
 - **Confidentiality-Offset** (Default: 0)
 - **Replay Protection** (Default: Enabled, Window-Size 0)
 - **Transmit-Interval** (Default: 2 seconds)
- Configure the most secure cipher-suite that both the ends of a MACsec channel can support.
- One of the MACsec peers becomes the key-server, which generates and sends secure key information to members of a MACsec CA. When configuring the key-server priority, ensure the device to be elected as the key-server is configured with a lower key-server priority value than the other device on the channel.
- Disable the **Include-SCI tag** option for a slight improvement in performance caused by the reduced overhead in the MACsec header on point-to-point links.
- In an environment with a Cisco device, the Cisco device must be designated as the key server. Designating the AOS-CX server as the key server results in complete traffic loss.
- In an environment with Cisco and HPE FlexFabric devices, do not update confidentiality-offset on the live channel. There can be complete traffic loss for an extended period on the MACsec channel when confidentiality-offset is updated on both ends.
- In an environment with Cisco devices, when the GCM-AES-XPB-128 or GCM-AES-XPB-256 cipher suite is used for establishing the MACsec channel, the MKA policy on the Cisco device must be configured with **ssci-based-on-sci**.

MACsec troubleshooting

- As a result of standard PHY behavior, the FedCert Event log can indicate that there are packets seen on MACsec interface with a **UNKNOWN_SCI** value, even though other statistics show that this log entry represents combination of packets with either the **not valid** or **UNKNOWN_SCI** values.
- Use the **copy support-files feature macsec** and **copy diag-dump feature macsec** commands to capture diagnostic data specific to MACsec.
- Debug logs are available for MACsec. Issue the **debug macsec all** command for verbose logs when debugging issues.
- When MACsec does not work between two endpoints.
 - Verify the MKA session is **Secured** on both the sides.
 - When the MKA sessions between the two MACsec endpoints flaps continuously between Secured and Unsecured.
 - Verify the cipher-suite advertised by the elected key-server is supported on the peer.
 - Verify the confidentiality-offset configuration is identical on the MACsec peers.
 - Verify the MACsec status shows as **Up** and the state shows as **Retire**.
 - Check the MACsec statistics for packets being dropped.
 - Ok packets must increment on the transmitting channel.
 - **Not Valid** packets incrementing on the transmitting channel indicates an issue with the key programmed on either side of the MACsec channel.

apply macsec policy

```
apply macsec policy <MACSEC-POLICY-NAME>
no apply macsec policy
```


Description

Within the selected interface context, applies the specified MACsec policy to the selected port. When a MACsec policy is applied to a port, MACsec is enabled on the port and all data traffic is blocked on the port until a secure channel is successfully established.



A MACsec policy can be applied to a physical interface port that is not part of any LAG ports or to a lag port. It can also be applied to an interface that is configured as an MCLAG, VSX keep-alive, or VSX inter-switch-link.

If a MACsec policy is already applied to the selected port, this command replaces the existing policy application.



For MACsec to work, an MKA policy must also be configured and applied to the same ports.

The **no** form of this command dissociates the specified policy from the port.

| Parameter | Description |
|---|---|
| <code><MACSEC-POLICY-NAME></code> | Specifies the MACsec policy name. Range: 1 to 128 alphanumeric characters including only the three special characters "." (period), "-" (hyphen), and "_" (underscore). |

Usage

- When any MACsec or MKA policy parameter is updated, any active MACsec session on all interfaces running the MACsec or MKA policy is terminated and restarted. This is indicated with the following prompt that provides an opportunity to not execute the **apply** command.

```
This policy is currently in use by one or more interfaces.  
Updating the policy will cause existing MACsec sessions using  
the policy to restart.  
Continue (y/n)?
```

- For non-LAG ports, a range of ports can be specified in the **interface** command used to enter the interface context. For example, entering the interface context for ports 1/1/1 through 1/1/2:

```
switch(config) # interface 1/1/1-1/1/2  
switch(config-if-<1/1/1-1/1/2>) # apply macsec policy MS_Policy1
```

- Not all interfaces on a switch may support the MACsec capability. An error will be generated when a policy is applied to a physical interface that is not capable of MACsec. For LAG ports, any non-MACsec capable interfaces that are part of the LAG will be blocked.

Examples

Applying a MACsec policy to a range of two ports:

```
switch(config) # interface 1/1/1-1/1/2  
switch(config-if-<1/1/1-1/1/2>) # apply macsec policy MS_Policy1
```

Attempting to apply a MACsec policy to a port that is not MACsec capable:

```
9300(config)# int 1/1/9
9300(config-if)# apply macsec policy m1

MACsec is not supported on the interface.
```

Removing MACsec policy association from a port:

```
switch(config)# interface 1/1/1
switch(config-if)# no apply macsec policy
```

Applying a MACsec policy to a LAG port:

```
switch(config)# interface lag 1
switch(config-if)# apply macsec policy MS_Policy1
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------|----------------------------------|
| 10.14.1000 | Command introduced on the 9300S. |

Command Information

| Platforms | Command context | Authority |
|-----------|-----------------|--|
| 9300S | config-if | Administrators or local user group members with execution rights for this command. |

bypass

```
bypass {ieee-bpdu}
no bypass {ieee-bpdu}
```

Description

Configures the MACsec policy to bypass MACsec for specific features.

When bypass is enabled on the BPDU, packets with a destination MAC matching the IEEE BPDU MAC (01:80:c2:00:00:0*) will bypass MACsec on both the egress and ingress directions.

By default, when MACsec is enabled on an interface, all BPDU frames except EAPoL are protected by MACsec. However, when an interface configured is configured to initiate a MACsec tunnel, the BPDU frames that are essential to the next hop device are sent with MACsec protection. This causes protocols such as LLDP and LACP to fail on the local link since the next hop device will fail to read the MACsec protected frames. To enable these protocols to operate on such links, you must enable BPDU bypass in the MACsec policy.

The **no** form of the command disables MACsec bypass for the specified feature. When no feature is specified, MACsec bypass is disabled for all the features.

MACsec WAN extension is only supported on the following switches:

| Platform | SKU | Interfaces |
|----------|--------|--------------------------------|
| 9300S | S0F96A | 1/1/1 - 1/1/8, 1/1/33 - 1/1/40 |

Examples

Enabling the MACsec bypass for IEEE BPDUs:

```
switch(config)# macsec policy Aggregator-Connect
switch(config-macsec-policy)# bypass ieee-bpdu
OR
switch(config)# macsec policy Aggregator-Connect bypass ieee-bpdu
```

Disabling the MACsec bypass for IEEE BPDU:

```
switch(config)# macsec policy Aggregator-Connect
switch(config-macsec-policy)# no bypass ieee-bpdu
OR
switch(config)# no macsec policy Aggregator-Connect bypass ieee-bpdu
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------|----------------------------------|
| 10.14.1000 | Command introduced on the 9300S. |

Command Information

| Platforms | Command context | Authority |
|-----------|--------------------------------|--|
| 9300S | config
config-macsec-policy | Administrators or local user group members with execution rights for this command. |

cipher-suite

```
cipher-suite {<CIPHER-SUITE>} [<CIPHER-SUITE>] ... [<CIPHER-SUITE>]
no cipher-suite [<CIPHER-SUITE>] ... [<CIPHER-SUITE>]
```

Description

Within the MACsec policy context, configures one or more cipher suites to be used to generate the SAK (Secure Authentication Key) for when the switch is the key server. When multiple cipher suites are configured, the most secure cipher suite is considered first during negotiation.

The no form of this command (without the **<CIPHER-SUITE>** parameter) resets to the default of considering (during negotiation) all supported cipher suites while giving priority to the most secure suite **gcm-aes-xpn-256**. Include the **<CIPHER-SUITE>** parameter to disable a particular cipher suite.

| Parameter | Description |
|-----------------------------------|---|
| <code><CIPHER-SUITE></code> | <p>Selects the cipher suite. Available cipher suites are:</p> <ul style="list-style-type: none"> ▪ gcm-aes-128: AES-128 encryption with Galois/Counter mode. ▪ gcm-aes-256: AES-256 encryption with Galois/Counter mode. ▪ gcm-aes-xpn-128: AES-128 encryption with Galois/Counter mode and extended packet numbering. ▪ gcm-aes-xpn-256: AES-128 encryption with Galois/Counter mode and extended packet numbering. (The default and the most secure.) |

Examples

Enabling a single cipher suite:

```
switch(config-macsec-policy)# cipher-suite gcm-aes-128
```

Enabling two cipher suites:

```
switch(config-macsec-policy)# cipher-suite gcm-aes-256 gcm-aes-xpn-256
```

Disabling a particular cipher suite:

```
switch(config-macsec-policy)# no cipher suite gcm-aes-128
```

Resetting to the default of considering all available cipher suites while giving priority to **gcm-aes-xpn-256**:

```
switch(config-macsec-policy)# no cipher-suite
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------|----------------------------------|
| 10.14.1000 | Command introduced on the 9300S. |

Command Information

| Platforms | Command context | Authority |
|-----------|----------------------|--|
| 9300S | config-macsec-policy | Administrators or local user group members with execution rights for this command. |

clear macsec statistics

```
clear macsec statistics [interface <IF-RANGE>]
```

Description

Clears MACsec statistics on all MACsec-enabled interfaces or on a specific interface or interface range. MACsec statistics are cleared for the entire switch rather than just in the current user session.

| Parameter | Description |
|---|--|
| <code>interface <IF-RANGE></code> | Specifies one or more interfaces for which MACsec statistics information is to be cleared. |

Examples

Clearing MACsec statistics on an interface range:

```
switch# clear macsec statistics interface 1/1/1-1/1/4
```

Clearing MACsec statistics on all MACsec-enabled interfaces:

```
switch# clear macsec statistics
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------|----------------------------------|
| 10.14.1000 | Command introduced on the 9300S. |

Command Information

| Platforms | Command context | Authority |
|-----------|-----------------|--|
| 9300S | Manager (#) | Administrators or local user group members with execution rights for this command. |

clear tag mode

```
clear tag mode {dot1q | none}  
no clear tag mode {dot1q | none}
```

Description

Configures the part of the Ethernet payload in a MACsec protected frame that must precede the Security TAG (SecTAG) header in clear text.

The **dot1q** mode allows the 802.1q tag of a MACsec protected frame to be sent in clear text and placed before the MACsec SecTAG header. This enables the establishment of a MACsec tunnel between two MACsec endpoints over a non-MACsec Layer 2 network.

The **no** form of the command will configure the device to place the SecTAG header immediately after the destination and source MAC addresses.

MACsec WAN extension is only supported on the following switches:

| Platform | SKU | Interfaces |
|----------|--------|--------------------------------|
| 9300S | S0F96A | 1/1/1 - 1/1/8, 1/1/33 - 1/1/40 |



Untagged traffic is not supported on a MACsec channel running clear-tag mode as **dot1q**. All untagged frames will be dropped on ingress.

| Parameter | Description |
|-----------|---|
| dot1q | Specifies the encoding of a single 802.1q tag in clear text before Security TAG (SecTAG). |
| none | Specifies that the Security TAG (SecTAG) directly follows the Ethernet addresses. This is the default option. |

Examples

Configuring the clear-tag mode as **dot1q**:

```
switch(config)# macsec policy Aggregator-Connect
switch(config-macsec-policy)# clear-tag-mode dot1q
OR
switch(config)# macsec policy Aggregator-Connect clear-tag-mode dot1q
```

Resetting the clear-tag mode:

```
switch(config)# macsec policy Aggregator-Connect
switch(config-macsec-policy)# no clear-tag-mode dot1q
OR
switch(config)# no macsec policy Aggregator-Connect clear-tag-mode dot1q
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------|----------------------------------|
| 10.14.1000 | Command introduced on the 9300S. |

Command Information

| Platforms | Command context | Authority |
|-----------|--------------------------------|--|
| 9300S | config
config-macsec-policy | Administrators or local user group members with execution rights for this command. |

confidentiality

```
confidentiality [offset {0|30|50}]
no confidentiality
```

Description

Within the MACsec policy context, enables Ethernet packet encryption after the MACsec header, optionally including a start-of-encryption offset. Confidentiality is enabled by default with an offset of 0 bytes after the MACsec header.

An offset of 0 causes the entire packet (after the MACsec header) to be encrypted. It is sometimes desirable to offset the start of the encryption deeper into the packet to allow for fields such as MPLS labels and 802.1Q tags to remain unencrypted.

Omitting the **offset** parameter enables confidentiality with whatever offset was configured previously. The **no** form of this command disables confidentiality.

| Parameter | Description |
|-------------------------------|---|
| <code>offset {0 30 50}</code> | Selects the start-of-encryption offset (in bytes) into the packet after the MACsec header. Default 0 bytes. |

Examples

Enabling confidentiality with an offset of 30 bytes:

```
switch(config-macsec-policy)# confidentiality offset 30
```

Disabling confidentiality

```
switch(config-macsec-policy)# no confidentiality
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------|----------------------------------|
| 10.14.1000 | Command introduced on the 9300S. |

Command Information

| Platforms | Command context | Authority |
|-----------|-----------------------------------|--|
| 9300S | <code>config-macsec-policy</code> | Administrators or local user group members with execution rights for this command. |

data-delay-protection

```
data-delay-protection  
no data-delay-protection
```

Description

Configures the MACsec policy to use data delay protection. Data delay protection allows MKA participants to ensure that the data frames protected by MACsec are not delayed by more than 2 seconds.

Enabling data delay protection necessitates transmission of MKPDUs at a frequency of 0.5 second to meet a maximum data delay of 2 seconds while minimizing connectivity interruption due to the possibility of lost or delayed MKPDUs.

Data delay protection should be enabled only when there is a need to drop MACsec protected frames that are delayed by more than 2 seconds on the wire. It is recommended to not enable data delay protection unless absolutely required as it adds extra load on the system.

Disabled by default.



When data delay protection is enabled, a default of 0.5 second is used as transmit-interval and transmit-interval configuration under MKA policy is ignored.

Examples

Enabling data delay protection:

```
switch(config)# macsec policy Aggregator-Connect data-delay-protection
```

or

```
switch(config)# macsec policy Aggregator-Connect
switch(config-macsec-policy)# data delay protection
```

Disabling data delay protection:

```
switch(config)# no macsec policy Aggregator-Connect data-delay-protection
```

or

```
switch(config)# macsec policy Aggregator-Connect
switch(config-macsec-policy)# no data delay protection
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------|--|
| 10.14.1000 | Command introduced on the 9300S Switch Series. |

Command Information

| Platforms | Command context | Authority |
|-----------|--------------------------------|--|
| 9300S | config
config-macsec-policy | Administrators or local user group members with execution rights for this command. |

include-sci-tag


```
include-sci-tag
no include-sci-tag
```

Description

Within the MACsec policy context, enables inclusion of the Secure Channel Identifier (SCI) tag in the Security TAG (SecTAG) field of the MACsec header. This is the default.

Inclusion of the SCI tag is not required on point-to-point links if the transmitting link has only one MACsec peer.

The **no** form of this command disables inclusion of the Secure Channel Identifier (SCI) tag in the Security TAG (SecTAG) field of the MACsec header.

Examples

Enabling the SCI tag:

```
switch(config-macsec-policy)# include-sci-tag
```

Disabling the SCI tag:

```
switch(config-macsec-policy)# no include-sci-tag
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------|----------------------------------|
| 10.14.1000 | Command introduced on the 9300S. |

Command Information

| Platforms | Command context | Authority |
|-----------|----------------------|--|
| 9300S | config-macsec-policy | Administrators or local user group members with execution rights for this command. |

macsec policy

```
macsec policy <MACSEC-POLICY-NAME>
no macsec policy <MACSEC-POLICY-NAME>
```

Description

Creates the specified MACsec policy and then enters its context (displayed in the CLI as **config-macsec-policy**). If the MACsec policy already exists, this command enters the specified MACsec policy context.

A MACsec policy can be applied to one or more switch ports, enabling MACsec on the ports. An MKA (MACsec Key Agreement) policy must be applied to the same ports.

The **no** form of this command deletes the MACsec policy.



A MACsec policy cannot be deleted if it is currently applied to any ports. All application of the policy must be removed before the policy can be deleted.

| Parameter | Description |
|---|---|
| <code><MACSEC-POLICY-NAME></code> | Specifies the MACsec policy name. Range: 1 to 128 alphanumeric characters including only the three special characters "." (period), "-" (hyphen), and "_" (underscore). |

Examples

Creating a MACsec policy:

```
switch(config)# macsec policy MS_Policy1
switch(config-macsec-policy)#
```

Deleting a MACsec policy (the policy cannot be currently applied to any ports):

```
switch(config)# no macsec policy MS_Policy1
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------|----------------------------------|
| 10.14.1000 | Command introduced on the 9300S. |

Command Information

| Platforms | Command context | Authority |
|-----------|-----------------|--|
| 9300S | config | Administrators or local user group members with execution rights for this command. |

macsec selftest

```
macsec selftest
no macsec selftest
```

Description

Configures the system to run a self test for MACsec on all MACsec-capable interfaces.

The **no** form of the command disables the MACsec self test on the device.

When enabled, the system will drop traffic on all MACsec capable interfaces until the MACsec selftest completes successfully on the interface. A MACsec selftest will be run in the following scenarios:

- After every reboot (if enabled)

Examples

Running a MACsec self test:

```
switch(config)# macsec selftest
```

Disabling the MACsec self test:

```
switch(config)# no macsec selftest
```

Running a MACsec self-test from the switch user mode:

```
switch# macsec selftest run interface 1/1/1-1/1/4
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------|----------------------------------|
| 10.14.1000 | Command introduced on the 9300S. |

Command Information

| Platforms | Command context | Authority |
|-----------|-----------------|--|
| 9300S | config | Administrators or local user group members with execution rights for this command. |

replay-protection

```
replay-protection [window-size <WINDOW-SIZE>]  
no replay-protection
```

Description

Within the MACsec policy context, enables replay protection with the default or specified window size. With replay protection enabled, packets are expected to arrive within the replay protection window number of packets. For example with a window size of 10, any packet arriving out-of-sequence by more than 10 packets will be discarded. A window size of 0 (the default) enforces strict order of packet reception, discarding all packets not received in perfect sequence.

The **no** form of this command disables replay protections and resets the window size to its 0 default.

| Parameter | Description |
|---------------|--|
| <WINDOW-SIZE> | Specifies the replay protection window size in packets. Default 0 packets. Range: 0 to 4294967295 packets. |

Examples

Enabling replay protection with the default window size of 0 (strict order of packet reception):

```
switch(config-macsec-policy)# replay-protection
```

Enabling replay protection with a windows size of 100 packets:

```
switch(config-macsec-policy)# replay-protection window-size 100
```

Disabling replay protection.

```
switch(config-macsec-policy)# no replay-protection
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------|----------------------------------|
| 10.14.1000 | Command introduced on the 9300S. |

Command Information

| Platforms | Command context | Authority |
|-----------|----------------------|--|
| 9300S | config-macsec-policy | Administrators or local user group members with execution rights for this command. |

show macsec policy

```
show macsec policy [<MACSEC-POLICY-NAME>]
```

Description

Shows information for one or all MACsec policies.

| Parameter | Description |
|----------------------|---|
| <MACSEC-POLICY-NAME> | Specifies the MACsec policy name. Range: 1 to 128 alphanumeric characters including only the three special characters "." (period), "-" (hyphen), and "_" (underscore). |

Examples

Showing information for a specific MACsec policy:

```
9300(config)# sh macsec policy

MACsec Policy Details
=====

Policy Name: m1
```

```

-----
Cipher suite           : GCM-AES-128, GCM-AES-256, GCM-AES-XPB-128, GCM-AES-XPB-
256
Include SCI           : Yes
Confidentiality        : Enabled
Confidentiality offset : 0
Replay protection      : Enabled
Replay protection window : 0
Data delay protection  : Disabled
Bypass                 :
Clear Tag Mode         : None

```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------|--|
| 10.14.1000 | Command introduced on the 9300S Switch Series. |

Command Information

| Platforms | Command context | Authority |
|-----------|-----------------------------|--|
| 9300S | Operator (>) or Manager (#) | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

show macsec selftest

show macsec selftest [interface <IFRANGE>]

Description

Shows the status of the MACsec selftest for MACsec capable interfaces. If an interface fails the self test then MACsec selftest should be disabled.

| Parameter | Description |
|-----------|---|
| <IFRANGE> | Specifies the interface(s) for which to show MACsec selftest information. |

Examples

Showing MACsec self test information for all interfaces that are MACsec capable:

```

switch# show macsec selftest
MACsec selftest status

Interface  Status      Failure Reason
-----
1/1/1     Initializing --

```

```

1/1/2      Passed      --
1/1/3      Queued for run --
1/1/4      Running
1/1/5      Failed      Encryption test failed
1/1/6      Failed      Decryption test failed
1/1/7      Failed      Initialization failed
1/1/8      Failed      Time out

```

Showing MACsec self test information for a specific interface:

```

switch# show macsec selftest interface 1/1/1

MACsec selftest status

Interface  Status  Failure Reason
-----
1/1/1     Passed  --

```

Showing MACsec self test information for an interface range:

```

switch# show macsec selftest interface 1/1/1-1/1/3

MACsec selftest status

Interface  Status      Failure Reason
-----
1/1/1     Passed      --
1/1/2     Running     --
1/1/3     Failed      Decryption test failed

```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------|--|
| 10.14.1000 | Command introduced on the 9300S Switch Series. |

Command Information

| Platforms | Command context | Authority |
|-----------|-----------------|--|
| 9300S | Manager (#) | Administrators or local user group members with execution rights for this command. |

show macsec statistics

show macsec statistics [interface <IF-RANGE>]

Description

Shows MACsec statistics for all MACsec-enabled interfaces or a specific interface or interface range.

| Parameter | Description |
|----------------------|--|
| interface <IF-RANGE> | Specifies one or more interfaces for which MACsec statistics information is to be shown. |

Examples

Showing MACsec statistics for a specific interface:

```
switch# show macsec statistics interface 1/1/1

MACsec Statistics

Interface 1/1/1
=====

Rx Statistics
-----
  Unicast Uncontrolled Packets      : 170438363226
  Multicast Uncontrolled Packets    : 66586
  Broadcast Uncontrolled Packets    : 4399
  Rx Uncontrolled Drop Packets      : 0
  Rx Uncontrolled Error Packets     : 0
  Rx Controlled Unicast Packets     : 170438369232
  Rx Controlled Multicast Packets   : 31298
  Rx Controlled Broadcast Packets   : 4399
  Rx Controlled Drop Packets        : 0
  Rx Controlled Error Packets       : 0
  Uncontrolled Octets               : 27270198219337
  Controlled Octets                 : 21816165353719

Tx Statistics
-----
  Unicast Uncontrolled Packets      : 0
  Multicast Uncontrolled Packets    : 33756
  Broadcast Uncontrolled Packets    : 0
  Rx Uncontrolled Drop Packets      : 0
  Rx Uncontrolled Error Packets     : 0
  Unicast Controlled Packets       : 171226945517
  Multicast Controlled Packets     : 98215
  Broadcast Controlled Packets     : 71894
  Rx Controlled Drop Packets        : 0
  Rx Controlled Error Packets       : 0
  Uncontrolled Octets               : 4658308
  Controlled Octets                 : 21917110733304
  Common Octets                     : 27396383670012

SecY Statistics
-----
  Port Identifier : 1

Rx Statistics
-----
  Transform Error Packets : 0
  Control Packets        : 35288
  Untagged Packets       : 0
  No Tag Packets         : 0
  Bad Tag Packets        : 39
  No SCI Packets         : 0
  Unknown SCI Packets    : 0
  Tagged Control Packets : 0
```

```

      Overrun Packets      : 0

Tx Statistics
-----
      Transform Error Packets : 0
      Control Packets       : 33756
      Untagged Packets      : 0

Transmit Secure Channel
-----
      SCI : ec0273f72f4d0001

Statistics
-----
      Encrypted Packets : 171227173728
      Protected Packets : 0

Secure Association
-----
      Association Number : 0

Statistics
-----
      Encrypted Packets      : 171227173728
      Encrypted Octets      : 19862392663792
      Protected Packets     : 0
      Protected Octets      : 0
      Too Long Packets      : 0
      SA Not In Use Packets : 0

Receive Secure Channel
-----
      SCI : 00fd4568f4110001

Statistics
-----
      Late Packets      : 0
      Not Valid Packets : 0
      Delayed Packets   : 0
      Ok Packets        : 170438441668

Secure Association
-----
      Association Number : 0

Statistics
-----
      Unchecked Packets      : 0
      Delayed Packets       : 0
      Late Packets          : 0
      Ok Packets            : 170438441668
      Invalid Packets       : 0
      Not Valid Packets     : 0
      Not Using SA Packets  : 0
      Unused SA Packets     : 0
      Decrypted Octets      : 19770908750641
      Validated Octets      : 0

```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------|--|
| 10.14.1000 | Command introduced on the 9300S Switch Series. |

Command Information

| Platforms | Command context | Authority |
|-----------|-----------------------------|--|
| 9300S | Operator (>) or Manager (#) | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

show macsec status

`show macsec status [interface <IF-RANGE>] [detailed]`

Description

Shows MACsec status information for all MACsec-enabled interfaces or a specific interface or interface range.

| Parameter | Description |
|---|--|
| <code>interface <IF-RANGE></code> | Specifies one or more interfaces for which MACsec status information is to be shown. |
| <code>detailed</code> | Specifies that detailed status information is to be shown. |

Usage

Applicable to when the **detailed** parameter is included: The stop time for the MACsec secure channel and secure association is updated only when the secure channel or association entry is being deleted. Therefore, it is never shown as set in the **show macsec status detailed command** output.

Examples

Showing MACsec summary information for all interfaces:

```
switch# show macsec status

MACsec Protocol Status
```

| Interface | Port ID | Policy | Protection | Status | State |
|-----------|---------|------------|----------------|--------|--------|
| 1/1/1 | 0 | MS_Policy1 | Conf, Offset 0 | Up | Retire |
| 1/1/2 | 0 | MS_Policy1 | IC | Down | Init |
| ... | | | | | |

Showing detailed MACsec information for a specific interface:

```
9300(config)# show macsec status interface 1/1/4 detailed

MACsec Protocol Status

Interface 1/1/4
```

```

=====

Port Identifier: 1
=====

Policy           : m1
Status           : Up
State            : Retire
Cipher Suite     : GCM-AES-XPB-256
Protection       : IC, Conf, Offset 0


Bypass           : -
Clear Tag Mode   : None
Transmit Secure Channel
-----
SCI   : e4de40bb2afd0001
SSCI  : 1


Secure Association
-----
Association Number   : 0 (current)
Key Identifier       : 168496150f5dde1e3c1ac18a00000001
Packet Number       : 4
SA-Start-Time       : Wed May 22 08:17:02 UTC 2024
SA-Stop-Time        : -


Receive Secure Channel
-----
SCI   : e4de40bb17fc0001
SSCI  : 2


Secure Association
-----
Association Number   : 0 (current)
Key Identifier       : 168496150f5dde1e3c1ac18a00000001
Lowest Packet Number : 5
SA-Start-Time       : Wed May 22 08:17:02 UTC 2024
SA-Stop-Time        : -

```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------|--|
| 10.14.1000 | Command introduced on the 9300S Switch Series. |

Command Information

| Platforms | Command context | Authority |
|-----------|-----------------------------|--|
| 9300S | Operator (>) or Manager (#) | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

apply mka policy

```
apply mka policy <MKA-POLICY-NAME>
no apply mka policy
```

Description

Within the selected interface context, applies the specified MKA policy to the selected port. To start the MKA protocol on the port, a MACsec policy must also be applied to the port.



An MKA policy can be applied to a physical interface port that is not part of any LAG ports or to a lag port. It can also be applied to an interface that is configured as an MCLAG, VSX keep-alive, or VSX inter-switch-link.

If an MKA policy is already applied to the selected port, this command replaces the existing policy application.

The **no** form of this command dissociates the specified policy from the port.

| Parameter | Description |
|-------------------|---|
| <MKA-POLICY-NAME> | Specifies the MKA policy name. Range: 1 to 32 alphanumeric characters including only the three special characters "." (period), "-" (hyphen), and "_" (underscore). |

Usage

- When any MACsec or MKA policy parameter is updated, any active MACsec session on all interfaces running the MACsec or MKA policy is terminated and restarted. This is indicated with the following prompt that provides an opportunity to not execute the **apply** command.

```
This policy is currently in use by one or more interfaces.
Updating the policy will cause existing MACsec sessions using
the policy to restart.
Continue (y/n)?
```

- For non-LAG ports, a range of ports can be specified in the **interface** command used to enter the interface context. For example, entering the interface context for ports 1/1/1 through 1/1/4:

```
switch(config)# interface 1/1/1-1/1/4
switch(config-if-<1/1/1-1/1/4>)# apply mka policy MKA_Policy1
```

- Not all interfaces on a switch may support the MACsec capability. An error will be generated when a policy is applied to a physical interface that is not capable of MACsec. For LAG ports, any non-MACsec capable interfaces that are part of the LAG will be blocked.

Examples

Applying an MKA policy to a range of two ports:

```
switch(config)# interface 1/1/1-1/1/2
switch(config-if-<1/1/1-1/1/2>)# apply mka policy MKA_Policy1
```

Removing MKA policy association from a port:

```
switch(config)# interface 1/1/1
switch(config-if)# no apply mka policy
```

Applying an MKA policy to a LAG port:

```
switch(config)# interface lag 1
switch(config-if)# apply mka policy MKA_Policy1
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------|----------------------------------|
| 10.14.1000 | Command introduced on the 9300S. |

Command Information

| Platforms | Command context | Authority |
|-----------|-----------------|--|
| 9300S | config-if | Administrators or local user group members with execution rights for this command. |

clear mka statistics

```
clear mka statistics [interface <IF-RANGE>]
```

Description

Clears MKA statistics on all MACsec-enabled interfaces or on a specific interface or interface range. MKA statistics are cleared for the entire switch rather than just in the current user session.

| Parameter | Description |
|----------------------|---|
| interface <IF-RANGE> | Specifies one or more interfaces (ports) for which MKA statistics information is to be cleared. |

Examples

Clearing MKA statistics on an interface range:

```
switch# clear mka statistics interface 1/1/1-1/1/4
```

Clearing MKA statistics on all MACsec-enabled interfaces:

```
switch# clear mka statistics
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------|--|
| 10.14.1000 | Command introduced on the 9300S Switch Series. |

Command Information

| Platforms | Command context | Authority |
|-----------|-----------------------------|--|
| 9300S | Operator (>) or Manager (#) | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

eapol-destination-mac

```
eapol-destination-mac <MAC-ADDRESS>  
no eapol-destination-mac <MAC-ADDRESS>
```

Description

Configures the destination MAC address to use in EAPoL frames for MKA. When not configured, the switch uses the default EAPoL multicast address (01:80:C2:00:00:03) for MKA.

The **no** form of the command configures the switch to use the default EAPoL multicast address for MKA.

MACsec WAN extension is only supported on the following switches:

| Platform | SKU | Interfaces |
|----------|--------|--------------------------------|
| 9300S | S0F96A | 1/1/1 - 1/1/8, 1/1/33 - 1/1/40 |

| Parameter | Description |
|---------------|--|
| <MAC-ADDRESS> | Specifies the EAPoL destination MAC address for MKA. |

Examples

Configuring the broadcast MAC as EAPoL destination address:

```
switch(config)# mka policy Agg-To-Agg  
switch(config-mka-policy)# eapol-destination-mac ff:ff:ff:ff:ff:ff  
OR  
switch(config)# mka policy Agg-To-Agg eapol-destination-mac ff:ff:ff:ff:ff:ff
```

Resetting MKA policy to use untagged EAPoL MKA frames:

```
switch(config)# mka policy Agg-To-Agg  
switch(config-mka-policy)# no eapol-destination-mac  
OR  
switch (config) # no mka policy Agg-to-Agg eapol-destination-mac
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------|--|
| 10.14.1000 | Command introduced on the 9300S Switch Series. |

Command Information

| Platforms | Command context | Authority |
|-----------|-------------------|--|
| 9300S | config-mka-policy | Administrators or local user group members with execution rights for this command. |

eapol-dot1q-tagged

eapol-dot1q-tagged
no eapol-dot1q-tagged

Description

Configures the EAPoL frames for MKA to be transmitted with an 802.1q tag. The native VLAN associated with the port is used in the MKA frames. This configuration enables the switch to establish a MACsec tunnel over a Layer 2 network with the next hop connected over non-MACsec, 802.1q tagged only link. The **no** form of command configures the switch to send MKA frames as untagged.

MACsec WAN extension is only supported on the following switches:

| Platform | SKU | Interfaces |
|----------|--------|--------------------------------|
| 9300S | S0F96A | 1/1/1 - 1/1/8, 1/1/33 - 1/1/40 |

- When the configuration is enabled, MKA is restarted on the port if the native VLAN associated with the port is updated.
- The 802.1q tag added to the MKA frame is also used in the computation of the ICV for the MKA frame. If the 802.1q tag is removed or modified in any way along the path, including changes in VLAN ID or PCP, the MKA frame will be discarded at the destination.



Examples

Configuring the MKA policy to use 802.1q tagged EAPoL MKA frames:

```
switch(config)# mka policy Agg-To-Agg
switch(config-mka-policy)# eapol-dot1q-tagged
OR
switch(config)# mka policy Agg-To-Agg eapol-dot1q-tagged
```

Resetting MKA policy to use untagged EAPoL MKA frames:

```
switch(config)# mka policy Agg-To-Agg
switch(config-mka-policy)# no eapol-dot1q-tagged
OR
switch (config) # no mka policy Agg-to-Agg eapol-dot1q-tagged
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------|--|
| 10.14.1000 | Command introduced on the 9300S Switch Series. |

Command Information

| Platforms | Command context | Authority |
|-----------|-------------------|--|
| 9300S | config-mka-policy | Administrators or local user group members with execution rights for this command. |

eapol-eth-type

```
eapol-eth-type <ETH-TYPE>
no eapol-eth-type <ETH-TYPE>
```

Description

Configures the Ether-Type for use in frames for MKA.

The **no** form of the command uses the default EAPoL ether-type 0x888e for MKA.

MACsec WAN extension is only supported on the following switches:

| Platform | SKU | Interfaces |
|----------|--------|--------------------------------|
| 9300S | S0F96A | 1/1/1 - 1/1/8, 1/1/33 - 1/1/40 |



- Only values 0x876f and 0x888e are supported.
- Refer to the MACsec WAN extension for a complete list of supported switch models.

| Parameter | Description |
|------------|--|
| <ETH-TYPE> | Configures the Ether-Type in EAPoL frames for MKA. |

Examples

Configuring the custom Ethernet type for MKA:

```
switch(config)# mka policy Agg-To-Agg eapol-eth-type 876f
OR
switch(config)# mka policy Agg-To-Agg
switch(config-mka-policy)# eapol-eth-type 876f
```

Resetting the custom EAPoL Ethernet Type:

```
switch(config)# no mka policy Agg-To-Agg eapol-eth-type 876f
OR
switch(config)# mka policy Agg-To-Agg
switch(config-mka-policy)# no eapol-eth-type 876f
```

Using an Ethernet Type value other than 876f or 888e:

```
switch(config)# mka policy Agg-To-Agg
switch(config-mka-policy)# eapol-eth-type 999F
Unsupported Ether-Type. Supported values are 888e and 876f
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------|--|
| 10.14.1000 | Command introduced on the 9300S Switch Series. |

Command Information

| Platforms | Command context | Authority |
|-----------|-------------------|--|
| 9300S | config-mka-policy | Administrators or local user group members with execution rights for this command. |

key-server-priority

```
key-server-priority <PRIORITY>
no key-server-priority
```

Description

In the **config-mka-policy** policy context, configures the MKA key server priority. The highest priority is 0 and indicates that this switch strongly wants to be the MKA key server. The lowest priority is 255 and indicates that switch does not want to be the MKA key server, allowing the switch at the other end of the link to be the key server. Set this priority on the switches at either end of the link to achieve the desired effect.

If the key server priority is 0 on both switches then the switch with the lowest system MACsec address is elected as key server.

The **no** form of this command resets the MKA key server priority to its default of 0.

| Parameter | Description |
|------------|---|
| <PRIORITY> | Selects the MKA key server priority for this switch. Default 0 (highest priority). Range: 0 to 255. |

Examples

Setting the MKA key server priority:

```
switch(config-mka-policy) # key-server-priority 5
```

Resetting the MKA key server priority to its default of 0:

```
switch(config-mka-policy) # no key-server-priority
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------|----------------------------------|
| 10.14.1000 | Command introduced on the 9300S. |

Command Information

| Platforms | Command context | Authority |
|-----------|-------------------|--|
| 9300S | config-mka-policy | Administrators or local user group members with execution rights for this command. |

mka policy

```
mka policy <MKA-POLICY-NAME>
no mka policy <MKA-POLICY-NAME>
```

Description

Creates the specified MKA (MACsec Key Agreement) policy and then enters its context (displayed in the CLI as **config-mka-policy**). If the MKA policy already exists, this command enters the specified MKA policy context.

An MKA policy can be applied to one or more switch ports, enabling MKA on the ports. A MACsec policy must be applied to the same ports.

The **no** form of this command deletes the MKA policy.



An MKA policy cannot be deleted if it is currently applied to any ports. All application of the policy must be removed before the policy can be deleted.

| Parameter | Description |
|--------------------------------------|---|
| <code><MKA-POLICY-NAME></code> | Specifies the MKA policy name. Range: 1 to 32 alphanumeric characters including only the three special characters "." (period), "-" (hyphen), and "_" (underscore). |

Examples

Creating an MKA policy:

```
switch(config)# mka policy MKA_Policy1
switch(config-mka-policy) #
```

Deleting an MKA policy (policy cannot be deleted if the mka policy is currently applied to any ports):

```
switch(config)# no mka policy MKA_Policy1
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------|--|
| 10.14.1000 | Command introduced on the 9300S Switch Series. |

Command Information

| Platforms | Command context | Authority |
|-----------|-----------------|--|
| 9300S | config | Administrators or local user group members with execution rights for this command. |

pre-shared-key

```
pre-shared-key keychain <NAME>
pre-shared-key ckn <CA-KEY-NAME> cak {plaintext [<PLAINTEXT-CAK>] | ciphertext
<CIPHERTEXT-CAK>}
```

Description

Configures the Pre-Shared Key (PSK) to use for an MKA policy.

A PSK can be configured one of two ways:

1. Configure the Connectivity Association Key Name (CKN) and Connectivity Association Key (CAK) directly in the PSK.
2. Configure the PSK to use an existing keychain for the CKN (key name) and CAK (key-string).

If both a key chain and a static CKN/CAK are configured in the PSK, then the key chain will be used for MKA operations.



When using a PSK with a key chain, only the send lifetime is considered for CAK lifetime. It is recommended to not configure an accept lifetime in the key chain used for MACsec.

The **no** form of this command deletes the PSK configuration including the key chain association, the CKN and the CAK.

| Parameter | Description |
|------------------|---|
| <CA-KEY-NAME> | Specifies the CKN (Connectivity Association Key Name). Range: 1 to 64 hexadecimal characters. |
| <PLAINTEXT-CAK> | Specifies the CAK (Connectivity Association Key) in plaintext. Range: 1 to 64 hexadecimal characters. |
| <CIPHERTEXT-CAK> | Specifies the CAK (Connectivity Association Key) as ciphertext. |
| <NAME> | Specifies the keychain name. |

Examples

Configuring the pre-shared key with a specified plaintext CAK:

```
switch(config-mka-policy) # pre-shared-key ckn abcdef12 cak plaintext 123abcdef
```

Configuring the pre-shared key with a prompted plaintext CAK:

```
switch(config-mka-policy) # pre-shared-key ckn abcdef12 cak plaintext  
Enter CAK: *****  
Confirm CAK: *****
```

Configuring the pre-shared key with a ciphertext CAK:

```
switch(config-mka-policy) # pre-shared-key ckn abcdef12 cak ciphertext  
AQBapUvjDZgUxtTpgA4NLqnsn7CjXqbDch+BOS7y9fcWExLUBgAAAKUmDYdhew==
```

Configuring a key chain for an MKA policy:

```
switch(config) # mka policy Agg-To-Agg  
switch(config-mka-policy) # pre-shared-key keychain macsec_keys
```

Deleting the PSK configuration including its CKN and CAK:

```
switch(config-mka-policy) # no pre-shared-key
```

Deleting a key chain from an MKA policy:

```
switch(config) # mka policy Agg-To-Agg  
switch(config-mka-policy) # no pre-shared-key keychain macsec_keys
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------|--|
| 10.14.1000 | Command introduced on the 9300S Switch Series. |

Command Information

| Platforms | Command context | Authority |
|-----------|-------------------|--|
| 9300S | config-mka-policy | Administrators or local user group members with execution rights for this command. |

show mka policy

show mka policy [*<MKA-POLICY-NAME>*]

Description

Shows information for one or all MKA policies.

| Parameter | Description |
|--------------------------------|---|
| <i><MKA-POLICY-NAME></i> | Specifies the MKA policy name. Range: 1 to 32 alphanumeric characters including only the three special characters "." (period), "-" (hyphen), and "_" (underscore). |

Examples

Showing information for a specific MKA policy:

```
switch(config)# show mka policy mka1

MKA Policy Details
=====

Policy Name: mka1
-----
Mode                : Pre-shared key
CKN                 : 123
CAK (encrypted)     : AQBapdmm17Q14DWgACmS0iX7JrkVUvfRg4NvDvuQm6+...
Keychain            :
EAPoL Destination MAC : 01:80:c2:00:00:03
EAPoL Ethernet Type  : 888e
EAPoL 802.1q Tag     : Disabled
Key-server Priority   : 0
Transmit Interval    : 2 seconds
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------|--|
| 10.14.1000 | Command introduced on the 9300S Switch Series. |

Command Information

| Platforms | Command context | Authority |
|-----------|-----------------------------|--|
| 9300S | Operator (>) or Manager (#) | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

show mka statistics

show mka statistics [interface <IF-RANGE>]

Description

Shows MKA statistics for all MACsec-enabled interfaces or a specific interface or interface range. The MKA statistics are refreshed periodically, approximately every five seconds.

| Parameter | Description |
|----------------------|---|
| interface <IF-RANGE> | Specifies one or more interfaces for which MKA statistics information is to be shown. |

Examples

Showing MKA statistics information for a specific interface:

```
switch# show mka statistics interface 1/1/1
```

```
Interface 1/1/1
=====
```

```
KaY
----
```

```
SCI : ec0273f72f4d0001
```

```
Statistics
-----
```

```
MKPDUs With Invalid Version : 0
MKPDUs With Invalid CKN      : 0
```

```
Participant
-----
```

```
CKN : 1234567890
```

```
Statistics
-----
```

```
Tx MKPDUs           : 33834
Rx MKPDUs           : 35375
SAKs Distributed     : 1
SAKs Received        : 0
MKPDUs With Invalid ICV : 0
MKPDUs With Duplicate MI : 0
```

```
MKPDUs With Invalid MN      : 0
...
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------|--|
| 10.14.1000 | Command introduced on the 9300S Switch Series. |

Command Information

| Platforms | Command context | Authority |
|-----------|-----------------------------|--|
| 9300S | Operator (>) or Manager (#) | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

show mka status

```
show mka status [interface <IF-RANGE>]
```

Description

Shows MKA status information for all MACsec-enabled interfaces or a specific interface or interface range.

| Parameter | Description |
|----------------------|---|
| interface <IF-RANGE> | Specifies one or more interfaces for which MKA status information is to be shown. |

Examples

Showing MKA status information for a specific interface (Pre-shared key):

```
switch(config)# show mka status

MKA Protocol Status

Interface 1/1/4
=====

MKA Port Identifier      : 1
MKA Policy Name          : mka1
MKA Session Status      : Unsecured
Mode                    : Pre-shared key
CKN                     : 1230
CAK (encrypted)         :
AQBapTPSRl29UzarAbF0NrxgsU3B8Z5w9lhEz/oKjWMbf7+6AwAAAMMlEQ==
Keychain                 :
Member Identifier        : f84f8bd77971b527c4a7e370
```

```

Message Number      : 2
Capability          : IC, Conf, Offset 0
EAPoL Destination MAC : 01:80:c2:00:00:03
EAPoL Ethernet Type  : 888e
EAPoL 802.1q Tagged  : Disabled
Transmit Interval    : 2 seconds
Key Server Priority   : 0
Key Server           : Yes
Live Peer List:
MI                   MN           PRI Capability           Rx-SCI
-----
Potential Peer List:
MI                   MN           PRI Capability           Rx-SCI
-----

```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------|--|
| 10.14.1000 | Command introduced on the 9300S Switch Series. |

Command Information

| Platforms | Command context | Authority |
|-----------|-----------------------------|--|
| 9300S | Operator (>) or Manager (#) | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

transmit-interval

```

transmit-interval <INTERVAL>
no transmit-interval

```

Description

In the **config-mka-policy** policy context, configures the MKA packet transmit interval.

The **no** form of this command resets the MKA packet transmit interval to its default of 2 seconds.

| Parameter | Description |
|------------|---|
| <INTERVAL> | Selects the MKA packet transmit interval. Default 2 seconds. Range: 2 to 6 seconds. |

Examples

Setting the MKA packet transmit interval:

```
switch(config-mka-policy) # transmit-interval 4
```

Resetting the MKA packet transmit interval to its default of 2 seconds:

```
switch(config-mka-policy) # no transmit-interval
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------|----------------------------------|
| 10.14.1000 | Command introduced on the 9300S. |

Command Information

| Platforms | Command context | Authority |
|-----------|-------------------|--|
| 9300S | config-mka-policy | Administrators or local user group members with execution rights for this command. |



Port access applies to the 8325 and 10000 Switch Series but not the 8320, 8400, or 9300 Switch Series.



On the 10000 Switch Series PSM / Distributed Services (DSS) cannot be enabled at the same time as port access 802.1X authentication, port access MAC authentication, or port access device profile. If you attempt to enable PSM / DSS and any of these authentication types are already enabled, one or more of the following relevant messages is displayed:

Distributed Services and 802.1X Authentication cannot be enabled on the system at the same time.

Distributed Services and MAC Authentication cannot be enabled on the system at the same time.


Distributed Services and Device profile cannot be enabled on the system at the same time.

Local Area Networks are often deployed in a way that allows unauthorized clients to attach to network devices or allow unauthorized users to get access to unattended clients on a network. 802.1X and MAC authentication simplify security management by providing access control plus the ability to control user profiles, allowing a given user entering valid user credentials access from multiple points within the network.

AOS-CX access switches support the following port access authentication types:

- 802.1X authentication
- MAC authentication


Figure 1 802.1X and MAC authentication

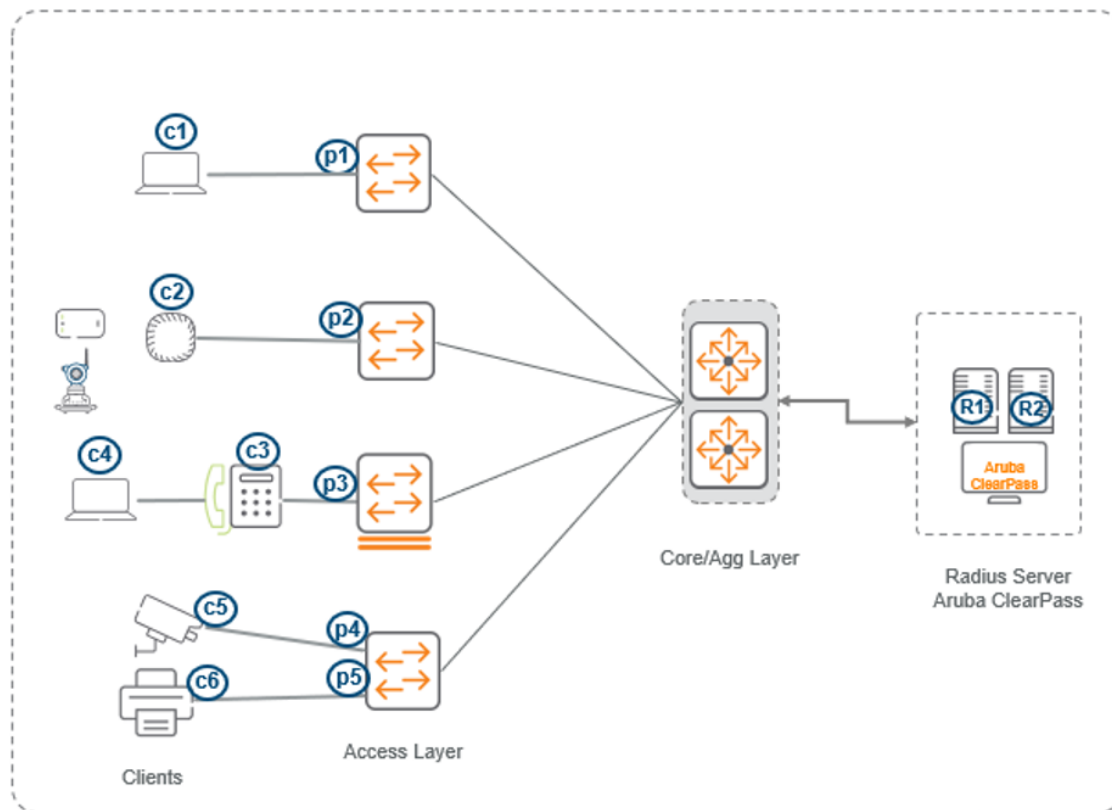

Port access MAC authentication

MAC authentication is designed to be used at the edge of a network. It provides port-based security measures for protecting private networks and switches from unauthorized access. Because this method does not require clients to run special supplicant software (unlike 802.1X authentication), it is suitable to be used in legacy systems, IoT devices, and temporary access situations where introducing supplicant software is not an attractive option. Only a MAC address is required for authentication.

Figure 1 MAC authentication

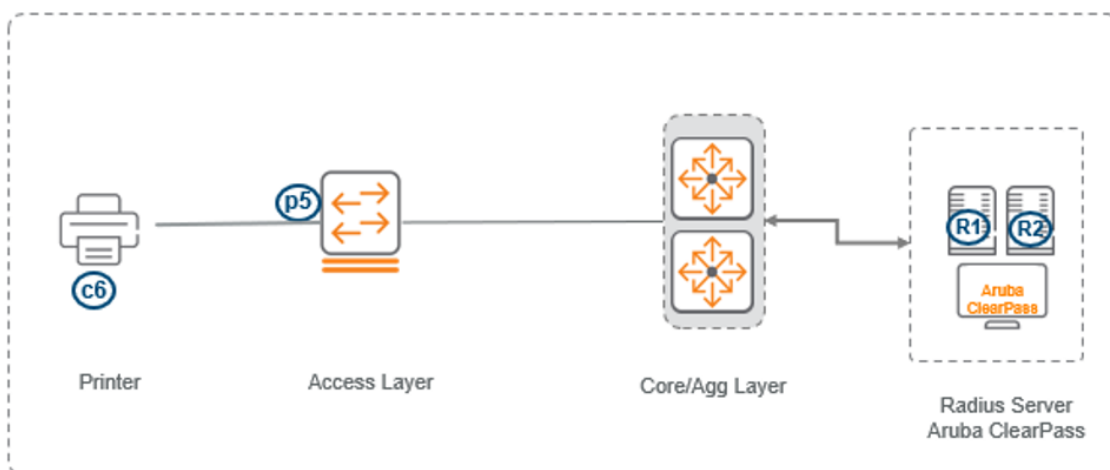

MAC authentication relies on a RADIUS server to authenticate clients. This technique simplifies access security management by using a database on a single server to control client access. Up to three RADIUS servers can be used for backup in case access to the primary server fails. It also means that the

same credentials can be used for authentication, regardless of which switch or switch port is the current access point into the LAN.

On a port configured for MAC authentication, the switch operates as a port-access authenticator using a RADIUS server, and the Challenge-Handshake Authentication Protocol (CHAP) and Password Authentication Protocol (PAP) protocols. Inbound traffic is processed by the switch alone, until authentication occurs. Some traffic from the switch to an unauthorized client is supported (for example, broadcast or unknown destination packets) before authentication occurs.

How MAC authentication works

MAC authentication grants access to a secure network by authenticating devices. When a device connects to the switch, either by direct link or through the network, the switch forwards the device MAC address to the RADIUS server for authentication. The RADIUS server uses the device MAC address as the user name and password, and grants or denies network access in the same way that it does for clients capable of interactive logons. The process does not use a client device configuration or a logon session. MAC authentication is well suited for clients not capable of providing interactive logons, such as telephones, printers, and wireless access points. Also, because most RADIUS servers allow for authentication to depend on the source switch and port through which the client connects to the network, you can use MAC authentication to lock a particular device to a specific switch and port.



802.1X port access and MAC authentication can be configured at the same time on a port. A total of 256 clients can be configured per port and 16,384 clients on the entire switch, irrespective of the authentication method. After the limit of 16,384 clients is reached, no additional authentication clients are allowed on any port for any method. The default is one client.

MAC authentication and port security are mutually exclusive on a given port. If you configure any of these authentication methods on a port, you must disable LACP on the port.

How RADIUS server is used in MAC authentication

MAC authentication uses a RADIUS server to temporarily assign a port to a static VLAN to support an authenticated client. During client authentication, the switch port membership is determined according to the following hierarchy:

- A RADIUS-assigned VLAN.
- A static, port-based, untagged VLAN to which the port is configured. A RADIUS-assigned VLAN has priority over switch-port membership in any VLAN.

Supported platforms and standards

Port access is supported on the 4100i, 5420, 6000, 6100, 6200, 6300, 6400, 8325, 8360, and 10000 Switch Series.

Scale

| Client authentication type | 4100i | 6000, 6100 | 5420, 6200 | 6300, 6400 | 8325 | 8360 | 10000 |
|---------------------------------------|-------|------------|------------|------------|------|------|-------|
| 802.1X authenticated clients per port | 32 | 32 | 256 | 256 | 256 | 256 | 256 |

| Client authentication type | 4100i | 6000, 6100 | 5420, 6200 | 6300, 6400 | 8325 | 8360 | 10000 |
|---|-------|------------|------------|------------|------|------|-------|
| MAC authenticated clients per port | 32 | 32 | 256 | 256 | 256 | 256 | 256 |
| Multiple authenticated clients per system (802.1X or MAC) | 736 | 736 | 2048 | 4094 | 4094 | 4094 | 4094 |

Supported RFCs and standards

- IEEE 2010
- RADIUS (Remote Authentication Dial In User Service) as defined in RFC [2865]
- EAP (Extensible Authentication Protocol) as defined in RFC [3748]

Considerations and best practices

The following considerations and best practices are recommended for faster onboarding of port access clients:

- Port access concurrent on-boarding enables faster on-boarding of clients. Concurrent authentication enables all methods to start concurrently for a faster onboarding process.
- Concurrent onboarding causes all the authentication methods such as 802.1X and MAC to start concurrently, enabling faster onboarding.
- The default precedence order is 802.1X authentication, MAC authentication, device-profile.
- When a higher precedence authentication method fails, the profile of the next highest precedence authentication method (that is successful) is applied.
- If all authentication methods fail, the reject role/critical role will be applied based on 802.1X failure reason and authentication attempts continue with 802.1X if enabled.
- Upon successful authentication, the client profile is applied based on the authentication precedence configured for the port.
- When both concurrent onboarding and authentication precedence are configured, concurrent onboarding is used and authentication precedence is ignored.

| Client | Without concurrent onboarding enabled | With concurrent onboarding enabled |
|--|--|---|
| Only dot1X client
 | Same time for onboarding. | Same time for onboarding. |
| Mac-auth client
 | Dot1X will be attempted and then MAC auth, causing MAC auth clients to wait. | Onboarding is faster because all auth methods are initiated at the same time. |
| PC behind Phone
 | Dot1X will be attempted and then MAC auth, causing MAC auth clients to wait. | Onboarding is faster because all auth methods are initiated at the same time. |

Port access configuration task list

The following example shows the tasks that need to be performed to configure port access.

Note that before enabling 802.1X on the switch, first set up an authentication (RADIUS) server for the switch to use. Identify of the authentication server must be known before the following tasks can be performed.

Port access 802.1X and MAC authentication configuration example

Step 1: Configure the radius server group

The server order defines the priority order.

```
Switch(config)# aaa group server radius AAA-RADIUS
Switch(config-sg)# server tmeswitching1.aaa
Switch(config-sg)# server tmeswitching2.aaa
Switch(config-sg)# server tmeswitching3.aaa
```

Step 2: Configure the DNS server

If you define a FQDN (fully qualified domain name) for the RADIUS server, you must define a DNS server to resolve the name to an IP address:

```
Switch(config)# ip dns domain-name aaa
Switch(config)# ip dns server-address 10.20.10.11
Switch(config)# ip dns server-address 10.20.10.12
```

Step 3: Configure the RADIUS server secret key

```
Switch(config)# radius-server host tmeswitching1.aaa key plaintext admin123
Switch(config)# radius-server host tmeswitching2.aaa key plaintext admin@123
Switch(config)# radius-server host tmeswitching3.aaa key plaintext admin#123
```

Step 4: Configure the Downloadable User Role (DUR) using ClearPass

```
Switch(config)# Switch(config)# radius-server host tmeswitching1.aaa clearpass-  
username <USER> clearpass-password plaintext <PASS> vrf <VRF>
```

Step 5: Configure RADIUS server tracking

Configure the tracking:

```
Switch(config)# Switch(config)# radius-server host tmeswitching1.aaa tracking  
enable vrf <VRF>Switch(config)# radius-server host tmeswitching1.aaa tracking  
enable vrf <VRF>
```

Configure the tracking mode (any or dead-only):

```
Switch(config)# Switch(config)# radius-server host tmeswitching1.aaa tracking-mode  
enable vrf <VRF>
```

Step 6: Configure RADIUS dynamic authorization

```
Switch(config)# radius dyn-authorization enable  
Switch(config)# radius dyn-authorization client tmeswitching1.aaa secret-key  
plaintext admin123  
Switch(config)# radius dyn-authorization client tmeswitching2.aaa secret-key  
plaintext admin@123
```

Step 7: Configure AAA authentication fail-through

```
Switch(config)# aaa authentication allow-fail-through
```

Step 8: Configure port access authentication on an access port

```
Switch(config)# interface 1/1/1  
Switch(config-if)# aaa authentication port-access auth-precedence mac-auth dot1x  
Switch(config-if)# aaa authentication port-access client-limit 3  
Switch(config-if)# aaa authentication port-access dot1x authenticator  
Switch(config-if-dot1x-auth)# cached-reauth  
Switch(config-if-dot1x-auth)# cached-reauth-period 60 (default is 30sec)  
Switch(config-if-dot1x-auth)# max-eapol-requests 1  
Switch(config-if-dot1x-auth)# max-retries 1  
Switch(config-if-dot1x-auth)# quiet-period 5  
Switch(config-if-dot1x-auth)# discovery-period 10  
Switch(config-if-dot1x-auth)# enable  
Switch(config-if-dot1x-auth)# exit  
Switch(config-if)#  
Switch(config-if# aaa authentication port-access mac-auth  
Switch(config-if-macauth)# enable  
Switch(config-if-macauth)# end  
Switch# end
```

These commands are available for tuning 802.1X authentication:

- `aaa authentication port-access dot1x authenticator max-eapol-requests`
- `aaa authentication port-access dot1x authenticator max-retries`
- `aaa authentication port-access dot1x authenticator quiet-period`
- `aaa authentication port-access dot1x authenticator discovery-period`

See also:

- [Port access 802.1X authentication commands](#)
- [Port access MAC authentication commands](#)
- [Port access general commands](#)

Use cases

Some port access use cases are as follows.

Use case 1: Faster onboarding of MAC authentication clients using concurrent onboarding

With this default port access authentication precedence configuration, it could take up to 162 seconds to onboard the MAC authentication clients.

```
show running-config interface 1/1/12
interface 1/1/12
no shutdown
no routing
vlan access 1
aaa authentication port-access dot1x authenticator
enable
aaa authentication port-access mac-auth
enable
```

802.1X timers could be tuned to reduce onboarding time, but it could still take 60 seconds to start MAC authentication with the following 802.1X timers configuration. Note that reducing the **eapol-timeout** any further could cause 802.1X to fail in some cases.

```
aaa authentication port-access dot1x authenticator
eapol-timeout 30
max-retries 1
max-eapol-request 1
```

However, with a concurrent onboarding configuration like this, MAC authentication clients can be onboarded quickly.

```
show running-config interface 1/1/12
interface 1/1/12
no shutdown
no routing
vlan access 1
port-access onboarding-method concurrent enable
aaa authentication port-access dot1x authenticator
enable
aaa authentication port-access mac-auth
```

```
enable
```

Use case 2: PXE clients that download the supplicant

PXE (Preboot Execution Environment) clients expect the IP address to be assigned within 15 to 20 seconds before continuing the PXE process of connecting to a server to download and install the image and supplicant. With concurrent onboarding, this can be achieved as MAC authentication occurs quickly, gaining access to the PXE network. Once the supplicant is downloaded, the PXE client reboots and starts 802.1X authentication.

Port access 802.1X authentication commands

aaa authentication port-access dot1x authenticator

```
aaa authentication port-access dot1x authenticator {enable | disable}  
no aaa authentication port-access dot1x authenticator {enable | disable}
```

Description

Enables or disables 802.1X authentication globally or at the port-level.

The **no** form of the command deletes global 802.1X configuration details and disables 802.1X authentication.

Examples

Enabling 802.1X authentication globally:

```
switch(config)# aaa authentication port-access dot1x authenticator enable
```

Disabling 802.1X authentication globally:

```
switch(config)# aaa authentication port-access dot1x authenticator disable
```

Deleting and disabling global 802.1X authentication:

```
switch(config)# no aaa authentication port-access dot1x authenticator
```

Enabling 802.1X authentication on a port:

```
switch(config-if)# aaa authentication port-access dot1x authenticator enable
```

Disabling 802.1X authentication on a port:

```
switch(config-if)# aaa authentication port-access dot1x authenticator disable
```

Deleting and disabling 802.1X authentication configuration on a port:

```
switch(config-if)# no aaa authentication port-access dot1x authenticator
```




For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---------------------------------|
| 10.11 | Command introduced on the 8325 |
| 10.11 | Command introduced on the 10000 |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|---------------------|--|
| 8325
8325H
8325P
10000 | config
config-if | Administrators or local user group members with execution rights for this command. |

aaa authentication port-access dot1x authenticator auth-method

```
aaa authentication port-access dot1x authenticator auth-method eap-radius  
no aaa authentication port-access dot1x authenticator auth-method eap-radius
```

Description

Configures the authentication mechanism used to control access to the network. The configured authentication method will be used to authenticate 802.1X clients.

The **no** form of the command resets the authentication mechanism to the default, **eap-radius**.

| Parameter | Description |
|------------|---|
| eap-radius | Specifies the EAP RADIUS as the 802.1X authentication method. |

Examples

Enabling the EAP RADIUS 802.1X authentication method on the switch:

```
switch(config)# aaa authentication port-access dot1x authenticator auth-method  
eap-radius
```

Resetting the EAP RADIUS 802.1X authentication method on the switch:

```
switch(config)# no aaa authentication port-access dot1x authenticator auth-method  
eap-radius
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---------------------------------|
| 10.11 | Command introduced on the 8325 |
| 10.11 | Command introduced on the 10000 |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|-----------------|--|
| 8325
8325H
8325P
10000 | config | Administrators or local user group members with execution rights for this command. |

aaa authentication port-access dot1x authenticator cached-reauth

```
aaa authentication port-access dot1x authenticator cached-reauth
no aaa authentication port-access dot1x authenticator cached-reauth
```

Description

Enables cached reauthentication on a port. Cached reauthentication allows 802.1X reauthentications to succeed when the RADIUS server is unavailable. Users already authenticated retain their currently assigned RADIUS attributes.

The **no** form of the command disables the cached reauthentication on a port.

Examples

Enabling cached reauthentication on a port:

```
switch(config-if)# aaa authentication port-access dot1x authenticator cached-
reauth
```

Disabling cached reauthentication on a port:

```
switch(config-if)# no aaa authentication port-access dot1x authenticator cached-
reauth
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---------------------------------|
| 10.11 | Command introduced on the 8325 |
| 10.11 | Command introduced on the 10000 |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|-----------------|--|
| 8325
8325H
8325P
10000 | config-if | Administrators or local user group members with execution rights for this command. |

aaa authentication port-access dot1x authenticator cached-reauth-period

```
aaa authentication port-access dot1x authenticator cached-reauth-period <PERIOD>
no aaa authentication port-access dot1x authenticator cached-reauth-period
```

Description

Configures the period during which an authenticated client, which has failed to reauthenticate because the RADIUS server is unreachable, remains authenticated.

The **no** form of the command resets the cached reauthentication period to the default, 30 seconds.

| Parameter | Description |
|-----------|---|
| <PERIOD> | Specifies the cached reauthentication period (in seconds). Default: 3600. Range: 1 to 4294967295. |

Examples

Configuring the cached reauthentication period on a port:

```
switch(config-if)# aaa authentication port-access dot1x authenticator cached-
reauth-period 300
```

Resetting the cached reauthentication period to the default value:

```
switch(config-if)# no aaa authentication port-access dot1x authenticator cached-
reauth-period
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------------|---------------------------------|
| 10.11 | Command introduced on the 8325 |
| 10.11 | Command introduced on the 10000 |
| 10.07 or earlier | -- |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|-----------------|--|
| 8325
8325H
8325P
10000 | config-if | Administrators or local user group members with execution rights for this command. |

aaa authentication port-access dot1x authenticator discovery-period

```
aaa authentication port-access dot1x authenticator discovery-period <PERIOD>
no aaa authentication port-access dot1x authenticator discovery-period
```

Description

Configures the period the port waits to retransmit the next EAPOL request identity frame on an 802.1X enabled port that has no authenticated clients.

The **no** form of the command resets the discovery period to the default, 30 seconds.

| Parameter | Description |
|-----------|--|
| <PERIOD> | Specifies the discovery period (in seconds). Default: 30. Range: 1 to 65535. |

Examples

Configuring the discovery period on a port:

```
switch(config-if)# aaa authentication port-access dot1x authenticator discovery-period 120
```

Resetting the discovery period to the default value:

```
switch(config-if)# no aaa authentication port-access dot1x authenticator discovery-period
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---------------------------------|
| 10.11 | Command introduced on the 8325 |
| 10.11 | Command introduced on the 10000 |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|-----------------|--|
| 8325
8325H
8325P
10000 | config-if | Administrators or local user group members with execution rights for this command. |

aaa authentication port-access dot1x authenticator eapol-timeout

```
aaa authentication port-access dot1x authenticator eapol-timeout <EAPOL-TIMEOUT>
no aaa authentication port-access dot1x authenticator eapol-timeout
```

Description

Configure the period the switch waits for a response from a client before retransmitting an EAPOL PDU. If the value is **0**, the time period is calculated as per RFC 2988.



As per RFC 2988 2.1: Before Round-Trip Time (RTT) measurement, set Retransmission Timeout (RTO) to 3 seconds for initial retransmission and then double the RTO to provide back off as per section 5.5. Limit the maximum RTO (RTOmax) to 20 seconds as per section 4.3 of RFC 3748.

The **no** form of the command resets the timeout period to the default.

| Parameter | Description |
|-----------------|---|
| <EAPOL-TIMEOUT> | Specifies the EAPOL timeout period (in seconds). Range: 1 to 65535. |

Examples

Configuring EAPOL timeout on a port:

```
switch(config-if)# aaa authentication port-access dot1x authenticator eapol-
timeout 120
```

Resetting the EAPOL timeout to the default value:

```
switch(config-if)# no aaa authentication port-access dot1x authenticator eapol-
timeout
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---------------------------------|
| 10.11 | Command introduced on the 8325 |
| 10.11 | Command introduced on the 10000 |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|-----------------|--|
| 8325
8325H
8325P
10000 | config-if | Administrators or local user group members with execution rights for this command. |

aaa authentication port-access dot1x authenticator initial-auth-response-timeout

```
aaa authentication port-access dot1x authenticator
    initial-auth-response-timeout <TIMEOUT>
no aaa authentication port-access dot1x authenticator
    initial-auth-response-timeout [<TIMEOUT>]
```

Description

Configures the period of time (in seconds) the switch waits for the first EAPOL frame from a client before deeming the client to be incapable of 802.1X and therefore attempting the next authentication method, if any. The default is for this timeout to be disabled.

The **no** form of this command disables the timeout.

| Parameter | Description |
|-----------|---|
| <TIMEOUT> | Specifies the timeout period (in seconds). Range: 1 to 65535. |

Examples

Setting a 30 second timeout:

```
switch(config-if)# aaa authentication port-access dot1x authenticator
    initial-auth-response-timeout 30
```

Disabling the timeout:

```
switch(config-if)# no aaa authentication port-access dot1x authenticator
    initial-auth-response-timeout
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---------------------------------|
| 10.11 | Command introduced on the 8325 |
| 10.11 | Command introduced on the 10000 |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|-----------------|--|
| 8325
8325H
8325P
10000 | config-if | Administrators or local user group members with execution rights for this command. |

aaa authentication port-access dot1x authenticator max-eapol-requests

```
aaa authentication port-access dot1x authenticator max-eapol-requests <MAX-EAPOL-REQUESTS>
```

```
no aaa authentication port-access dot1x authenticator max-eapol-requests
```

Description

Configures the number of EAPOL requests to send to a supplicant that must time out before authentication fails and the authentication session ends.

The **no** form of the command resets the maximum number of EAPOL requests to the default, 5.

| Parameter | Description |
|----------------------|---|
| <MAX-EAPOL-REQUESTS> | Specifies the maximum number of EAPOL requests. Default: 5. Range: 1 to 10. |

Examples

Configuring maximum EAPOL requests on a port:

```
switch(config-if)# aaa authentication port-access dot1x authenticator max-eapol-requests 3
```

Resetting the maximum EAPOL requests on a port to default:

```
switch(config-if)# no aaa authentication port-access dot1x authenticator max-eapol-requests
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---------------------------------|
| 10.11 | Command introduced on the 8325 |
| 10.11 | Command introduced on the 10000 |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|-----------------|--|
| 8325
8325H
8325P
10000 | config-if | Administrators or local user group members with execution rights for this command. |

aaa authentication port-access dot1x authenticator max-retries

```
aaa authentication port-access dot1x authenticator max-retries <max-retries>
no aaa authentication port-access dot1x authenticator max-retries
```

Description

Configures the maximum number of retries that the switch attempts to authenticate a client on a port before marking the client as unauthenticated.

The **no** form of the command resets the maximum number of retries to the default, 2.

| Parameter | Description |
|---------------|--|
| <max-retries> | Indicates the number of authentication attempts. Default: 2. Range: 1 to 10. |

Examples

Configuring maximum authentication attempts on a port:

```
switch(config-if)# aaa authentication port-access dot1x authenticator max-retries
5
```

Resetting the maximum authentication attempts on a port to default:

```
switch(config-if)# no aaa authentication port-access dot1x authenticator max-
retries
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---------------------------------|
| 10.11 | Command introduced on the 8325 |
| 10.11 | Command introduced on the 10000 |

Command Information

| Platforms | Command context | Authority |
|---------------|-----------------|--|
| 8325
8325H | config-if | Administrators or local user group members with execution rights for this command. |

| Platforms | Command context | Authority |
|----------------|-----------------|-----------|
| 8325P
10000 | | |

aaa authentication port-access dot1x authenticator quiet-period

```
aaa authentication port-access dot1x authenticator quiet-period <PERIOD>
no aaa authentication port-access dot1x authenticator quiet-period
```

Description

Configures the period during which the port does not try to acquire a supplicant. This period begins after the last authentication attempt, authorized by the maximum retries parameter, fails.

You can configure the number of maximum retries with the **aaa authentication port-access dot1x authenticator max-retries** command.

The **no** form of the command resets the quiet period to the default, 60 seconds.

| Parameter | Description |
|-----------|--|
| <PERIOD> | Specifies the quiet period (in seconds). Default: 60. Range: 0 to 65535. |

Examples

Configuring quiet period on a port:

```
switch(config-if)# aaa authentication port-access dot1x authenticator quiet-period
100
```

Resetting the quiet period on a port to default:

```
switch(config-if)# no aaa authentication port-access dot1x authenticator quiet-
period
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---------------------------------|
| 10.11 | Command introduced on the 8325 |
| 10.11 | Command introduced on the 10000 |

Command Information

| Platforms | Command context | Authority |
|-----------|-----------------|---|
| 8325 | config-if | Administrators or local user group members with execution |

| Platforms | Command context | Authority |
|-------------------------|-----------------|--------------------------|
| 8325H
8325P
10000 | | rights for this command. |

aaa authentication port-access dot1x authenticator radius server-group

```
aaa authentication port-access dot1x authenticator radius server-group <GROUP-NAME>
no aaa authentication port-access dot1x authenticator radius server-group <GROUP-NAME>
```

Description

Configures the switch to use an existing RADIUS server group for 802.1X authentication globally or for a particular port.

The **no** form of the command resets the server group to the default, **radius**.

When configured on a port, the **no** form of the command resets the server group on that port to the globally configured group. If no global RADIUS server group is configured, the **no** form of the command resets the configuration to the default group, **radius**.



When the RADIUS server group for 802.1X authentication is updated on a port, any existing clients on the port that were authenticated using the previous globally configured group will associate with the new group for the port during the next re-authentication cycle. Any new client that is onboarding on the port after the server group update will associate with the new group immediately.

| Parameter | Description |
|--------------|--|
| <GROUP-NAME> | Specifies the name of the RADIUS server group. |

Examples

Configuring the switch to use RADIUS server group **employee**:

```
switch(config)# aaa authentication port-access dot1x authenticator radius server-group employee
```

Resetting RADIUS server group configuration to default:

```
switch(config)# no aaa authentication port-access dot1x authenticator radius server-group
```

Configuring the RADIUS authentication server group on **1/1/1**:

```
switch(config)# interface 1/1/1
switch(config-if)# aaa authentication port-access dot1x authenticator
switch(config-if-dot1x-auth)# radius server-group group2
```

Resetting 802.1X RADIUS server group configuration on **1/1/1**:

```
switch(config)# interface 1/1/1
switch(config-if)# aaa authentication port-access dot1x authenticator
switch(config-if-dot1x-auth)# no radius server-group
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---------------------------------------|
| 10.12 | Command is now configurable on a port |
| 10.11 | Command introduced on the 8325 |
| 10.11 | Command introduced on the 10000 |

Command Information

| Platforms | Command context | Authority |
|-----------|----------------------|--|
| 8325 | config | Administrators or local user group members with execution rights for this command. |
| 8325H | config-dot1x-auth | |
| 8325P | config-if-dot1x-auth | |
| 10000 | | |

aaa authentication port-access dot1x authenticator reauth

```
aaa authentication port-access dot1x authenticator reauth
no aaa authentication port-access dot1x authenticator reauth
```

Description

Enables periodic reauthentication of authenticated clients on the port.
The **no** form of the command disables periodic reauthentication.

Examples

Enabling periodic reauthentication on a port:

```
switch(config-if)# aaa authentication port-access dot1x authenticator reauth
```

Disabling periodic reauthentication on a port:

```
switch(config-if)# no aaa authentication port-access dot1x authenticator reauth
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---------------------------------|
| 10.11 | Command introduced on the 8325 |
| 10.11 | Command introduced on the 10000 |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|-----------------|--|
| 8325
8325H
8325P
10000 | config-if | Administrators or local user group members with execution rights for this command. |

aaa authentication port-access dot1x authenticator reauth-period

```
aaa authentication port-access dot1x authenticator reauth-period <PERIOD>
no aaa authentication port-access dot1x authenticator reauth-period
```

Description

Configures the period after which the authenticated clients are reauthenticated on the port. You must enable reauthentication on the port before configuring the reauthentication period.

The **no** form of the command resets the reauthentication period to the default, 3600 seconds.

| Parameter | Description |
|-----------|--|
| <PERIOD> | Specifies the reauthentication period (in seconds). Default: 3600. Range: 1 to 4294967295. |

Examples

Configuring reauthentication period on a port:

```
switch(config-if)# aaa authentication port-access dot1x authenticator reauth-
period 100
```

Resetting the reauthentication period to the default value:

```
switch(config-if)# no aaa authentication port-access dot1x authenticator reauth-
period
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---------------------------------|
| 10.11 | Command introduced on the 8325 |
| 10.11 | Command introduced on the 10000 |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|-----------------|--|
| 8325
8325H
8325P
10000 | config-if | Administrators or local user group members with execution rights for this command. |

clear dot1x authenticator statistics interface

```
clear dot1x authenticator statistics [interface <IF-NAME>]
```

Description

Clears the 802.1X authentication statistics associated with the port and all the authenticator clients attached to this port.

If no interface is specified, the statistics is cleared for all 802.1X enabled ports.

| Parameter | Description |
|-----------|-------------------------------|
| <IF-NAME> | Specifies the interface name. |

Examples

Clearing authentication statistics on a port:

Clearing authentication statistics on all ports:

```
switch# clear dot1x authenticator statistics
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---------------------------------|
| 10.11 | Command introduced on the 8325 |
| 10.11 | Command introduced on the 10000 |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|-----------------|--|
| 8325
8325H
8325P
10000 | Manager (#) | Administrators or local user group members with execution rights for this command. |

show aaa authentication port-access dot1x authenticator interface client-status

```
show aaa authentication port-access dot1x authenticator interface {all|<IF-NAME>}
client-status [mac <MAC-ADDRESS>]
```

Description

Shows information about active 802.1X authentication sessions. The output can be filtered by interface or MAC address.

| Parameter | Description |
|---------------|-----------------------------------|
| all | Specifies all interfaces. |
| <IF-NAME> | Specifies the interface name. |
| <MAC-ADDRESS> | Specifies the client MAC address. |

Examples

Showing client status information for all ports.

```
switch# show aaa authentication port-access dot1x authenticator interface all
client-status
```

```
Client  FE:04:D7:50:89:37, johndoe, 1/1/1
=====
```

Authentication Details

```
-----
Status                : Authenticated
Type                  : Pass-Through
EAP-Method            : MD5
Time Since Last State Change : 10s
```

Authentication Statistics

```
-----
Authentication                : 0
Authentication Timeout        : 0
EAP-Start While Authenticating : 0
EAP-Logoff While Authenticating : 0
Successful Authentication      : 0
Failed Authentication          : 0
Re-Authentication              : 0
Successful Re-Authentication   : 0
Failed Re-Authentication       : 0
EAP-Start When Authenticated   : 0
EAP-Logoff When Authenticated  : 0
Re-Auths When Authenticated    : 0
Cached Re-Authentication       : 0
```

```
Client  9A:B4:59:97:D0:7E, janedoe, 1/1/1
=====
```

Authentication Details

```
-----
Status                : Authenticated
Type                  : Pass-Through
EAP-Method            : TLS
Time Since Last State Change : 5s
```

Authentication Statistics

```
-----
```

```

Authentication : 0
Authentication Timeout : 0
EAP-Start While Authenticating : 0
EAP-Logoff While Authenticating : 0
Successful Authentication : 0
Failed Authentication : 0
Re-Authentication : 0
Successful Re-Authentication : 0
Failed Re-Authentication : 0
EAP-Start When Authenticated : 0
EAP-Logoff When Authenticated : 0
Re-Auths When Authenticated : 0
Cached Re-Authentication : 0

```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---------------------------------|
| 10.11 | Command introduced on the 8325 |
| 10.11 | Command introduced on the 10000 |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|-----------------------------|--|
| 8325
8325H
8325P
10000 | Operator (>) or Manager (#) | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

show aaa authentication port-access dot1x authenticator interface port-statistics

```
show aaa authentication port-access dot1x authenticator interface {all|<IF-NAME>} port-statistics
```

Description

Shows information about 802.1X ports. The output can be filtered by interface.

| Parameter | Description |
|-----------|-------------------------------|
| all | Specifies all interfaces. |
| <IF-NAME> | Specifies the interface name. |

Examples

Showing information for all ports.

```
switch# show aaa authentication port-access dot1x authenticator interface all
port-statistics
```

```
Port 1/1/1
=====
```

Client Details

| | |
|-----------------------------------|-----|
| Number of Clients | : 1 |
| Number of Authenticated Clients | : 1 |
| Number of Unauthenticated Clients | : 0 |
| Number of authenticating clients | : 0 |

Statistics

| | |
|--|-----|
| EAPOL Frames Received | : 4 |
| EAPOL Frames Transmitted | : 3 |
| EAPOL Start Frames Received | : 1 |
| EAPOL Logoff Frames Received | : 0 |
| EAPOL Response ID Frames Received | : 2 |
| EAPOL Response Frames Received | : 1 |
| EAPOL Request ID Frames Transmitted | : 2 |
| EAPOL Request Frames Transmitted | : 1 |
| EAPOL Invalid Frames Received | : 0 |
| EAPOL EAP Length Error Frames Received | : 0 |
| EAPOL Last Received Frame Version | : 0 |
| EAPOL Last Received Frame Client MAC | : 0 |

```
Port 1/1/2
=====
```

Client Details

| | |
|-----------------------------------|-----|
| Number of Clients | : 1 |
| Number of Authenticated Clients | : 1 |
| Number of Unauthenticated Clients | : 0 |

Statistics

| | |
|--|-----|
| EAPOL Frames Received | : 4 |
| EAPOL Frames Transmitted | : 3 |
| EAPOL Start Frames Received | : 1 |
| EAPOL Logoff Frames Received | : 0 |
| EAPOL Response ID Frames Received | : 2 |
| EAPOL Response Frames Received | : 1 |
| EAPOL Request ID Frames Transmitted | : 2 |
| EAPOL Request Frames Transmitted | : 1 |
| EAPOL Invalid Frames Received | : 0 |
| EAPOL EAP Length Error Frames Received | : 0 |
| EAPOL Last Received Frame Version | : 0 |
| EAPOL Last Received Frame Client MAC | : 0 |



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---------------------------------|
| 10.11 | Command introduced on the 8325 |
| 10.11 | Command introduced on the 10000 |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|-----------------------------|--|
| 8325
8325H
8325P
10000 | Operator (>) or Manager (#) | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

Port access MAC authentication commands

aaa authentication port-access allow-lldp-auth

```
aaa authentication port-access allow-lldp-auth
    mac chassis-mac|source-mac
    no...
```

Description

By default authentication is allowed via LLDP packets which are received on the port. Use the **no** version of this command to prevent authentication using LLDP packets received on the port. Chassis MAC and Source MAC addresses can be used for authentication via LLDP frames.

Examples

Configuring authentication via LLDP packets:

```
switch(config)# interface 1/1/1
switch(config-if)# aaa authentication port-access allow-lldp-auth
< pd platform="4100i,6000,6100,6200,6300,6400,8100,8360" >
switch(config)# interface lag 1
switch(config-lag-if)# aaa authentication port-access allow-lldp-auth
< /pd >
```

Enabling authentication via LLDP packets on a MAC source:

```
switch(config)# interface 1/1/1
switch(config-if)# aaa authentication port-access allow-lldp-auth mac
source-mac

switch(config-if)# aaa authentication port-access allow-lldp-auth mac
chassis-mac
```

Enabling authentication via LLDP BDU packets:

```
switch(config-if)# aaa authentication port-access
```

```

allow-lldp-auth          Allow or block authentication on LLDP BPDU. (Default:
allow)

switch(config-if)# no aaa authentication port-access
allow-lldp-auth          Allow or block authentication on LLDP BPDU. (Default:
allow)

switch(config-if)# aaa authentication port-access allow-lldp-auth
switch(config-if)# no aaa authentication port-access allow-lldp-auth

```

Configuring MAC via LLDP packets:

```

switch(config-if)# aaa authentication port-access allow-lldp-auth
mac          Configure the MAC to use for LLDP based authentication (Default: chassis-
mac)

switch(config-if)# aaa authentication port-access allow-lldp-auth mac
chassis-mac   Use the chassis MAC in LLDP TLV.
source-mac    Use the source MAC in the LLDP frame.

```

Disabling authentication via LLDP packets on a MAC source:

```

switch(config-if)# no aaa authentication port-access allow-lldp-auth mac
chassis-mac   Use the chassis MAC in LLDP TLV.
source-mac    Use the source MAC in the LLDP frame.

```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|--------------------|
| 10.13 | Command introduced |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|-----------------|--|
| 8325
8325H
8325P
10000 | config-if | Administrators or local user group members with execution rights for this command. |

aaa authentication port-access mac-auth

```

aaa authentication port-access mac-auth {enable | disable}
no aaa authentication port-access mac-auth {enable | disable}

```

Description

Enables or disables MAC authentication globally or at the port-level.

Examples

Enabling MAC authentication on all interfaces:

```
switch(config)# aaa authentication port-access mac-auth
switch(config-macauth)# enable
```

Disabling MAC authentication on all interfaces:

```
switch(config)# aaa authentication port-access mac-auth
switch(config-macauth)# disable
```

Enabling MAC authentication on an interface:

```
switch(config-if)# aaa authentication port-access mac-auth
switch(config-if-macauth)# enable
```

Disabling MAC authentication on an interface:

```
switch(config-if)# aaa authentication port-access mac-auth
switch(config-if-macauth)# disable
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---------------------------------|
| 10.11 | Command introduced on the 8325 |
| 10.11 | Command introduced on the 10000 |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|---------------------|--|
| 8325
8325H
8325P
10000 | config
config-if | Administrators or local user group members with execution rights for this command. |

aaa authentication port-access mac-auth addr-format

```
aaa authentication port-access mac-auth addr-format {no-delimiter | single-dash |
multi-dash |multi-colon | no-delimiter-uppercase | single-dash-uppercase |
multi-dash-uppercase | multi-colon-uppercase}
no aaa authentication port-access mac-auth addr-format {no-delimiter | single-dash |
multi-dash |multi-colon | no-delimiter-uppercase | single-dash-uppercase |
multi-dash-uppercase | multi-colon-uppercase}
```

Description

Configures the MAC address format that the switch must use in the RADIUS request message. The **no** form of the command resets the MAC address format to the default, **no-delimiter**.

Examples

Setting the MAC address format on the switch:

```
switch(config)# aaa authentication port-access mac-auth  
switch(config-macauth)# addr-format single-dash
```

Resetting the MAC address format on the switch to its default:

```
switch(config)# aaa authentication port-access mac-auth  
switch(config-macauth)# no addr-format
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---------------------------------|
| 10.11 | Command introduced on the 8325 |
| 10.11 | Command introduced on the 10000 |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|-----------------|--|
| 8325
8325H
8325P
10000 | config | Administrators or local user group members with execution rights for this command. |

aaa authentication port-access mac-auth auth-method

```
aaa authentication port-access mac-auth auth-method {chap | pap}  
no aaa authentication port-access mac-auth auth-method
```

Description

Configures the RADIUS authentication method for MAC authentication.

Following are the MAC authentication methods supported:

- CHAP
- PAP



The PEAP-MSCHAPv2 method of authentication is not supported.

The **no** form of the command resets the authentication method to the default, **chap**.

Examples

Configuring the RADIUS authentication method on the switch:

```
switch# config  
switch(config)# aaa authentication port-access mac-auth  
switch(config-macauth)# auth-method pap
```

Resetting the RADIUS authentication method on the switch:

```
switch(config)# no aaa authentication port-access mac-auth auth-method
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---------------------------------|
| 10.11 | Command introduced on the 8325 |
| 10.11 | Command introduced on the 10000 |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|-----------------|--|
| 8325
8325H
8325P
10000 | config | Administrators or local user group members with execution rights for this command. |

aaa authentication port-access mac-auth cached-reauth

```
aaa authentication port-access mac-auth cached-reauth  
no aaa authentication port-access mac-auth cached-reauth
```

Description

Enables cached reauthentication on a port. Cached reauthentication allows MAC reauthentications to succeed when the RADIUS server is unavailable. Users who are already authenticated, retain their currently assigned RADIUS attributes.

The **no** form of the command disables cached reauthentication.

Examples

Enabling cached reauthentication on a port:

```
switch(config-if)# aaa authentication port-access mac-auth  
switch(config-if-macauth)# cached-reauth
```

Disabling cached reauthentication on a port:

```
switch(config-if)# aaa authentication port-access mac-auth
switch(config-if-macauth)# no cached-reauth
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---------------------------------|
| 10.11 | Command introduced on the 8325 |
| 10.11 | Command introduced on the 10000 |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|-----------------|--|
| 8325
8325H
8325P
10000 | config-if | Administrators or local user group members with execution rights for this command. |

aaa authentication port-access mac-auth cached-reauth-period

```
aaa authentication port-access mac-auth cached-reauth-period <PERIOD>
no aaa authentication port-access mac-auth cached-reauth-period
```

Description

Configures the period during which an authenticated client, which has failed to reauthenticate because the RADIUS server is unreachable, remains authenticated.

The **no** form of the command resets the cached reauthentication period to the default, 3600 seconds.

| Parameter | Description |
|-----------|---|
| <PERIOD> | Specifies the cached reauthentication period (in seconds). Default: 3600. Range: 1 to 4294967295. |

Examples

Configuring cached reauthentication period on a port:

```
switch(config-if)# aaa authentication port-access mac-auth
switch(config-if-macauth)# cached-reauth-period 300
```

Resetting the cached reauthentication period to the default value:

```
switch(config-if)# aaa authentication port-access mac-auth
switch(config-if-macauth)# no cached-reauth-period
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---------------------------------|
| 10.11 | Command introduced on the 8325 |
| 10.11 | Command introduced on the 10000 |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|-----------------|--|
| 8325
8325H
8325P
10000 | config-if | Administrators or local user group members with execution rights for this command. |

aaa authentication port-access mac-auth password

```
aaa authentication port-access mac-auth password {plaintext|ciphertext}<PASSWORD>
no aaa authentication port-access mac-auth password
```

Description

Enables and configures the global password that the switch must use for MAC authentication. The password can be either in ciphertext or plaintext format.

The **no** form of the command disables the password for MAC authentication.

| Parameter | Description |
|----------------------------------|--|
| {plaintext ciphertext}<PASSWORD> | Specifies the global password to be used by all MAC authenticating devices in either plaintext or ciphertext format. |

Examples

Setting the MAC authentication password:

```
switch(config)# aaa authentication port-access mac-auth
switch(config-macauth)# password plaintext maX99J#
```

Disabling the MAC authentication password:

```
switch(config)# aaa authentication port-access mac-auth
switch(config-macauth)# no password
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------------|---------------------------------|
| 10.11 | Command introduced on the 8325 |
| 10.11 | Command introduced on the 10000 |
| 10.07 or earlier | -- |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|-----------------|--|
| 8325
8325H
8325P
10000 | config | Administrators or local user group members with execution rights for this command. |

aaa authentication port-access mac-auth quiet-period

```
aaa authentication port-access mac-auth quiet-period <PERIOD>
no aaa authentication port-access mac-auth quiet-period
```

Description

Configures the period during which the switch does not try to authenticate a rejected client. The **no** form of the command resets the quiet period to the default, 60 seconds.

| Parameter | Description |
|-----------|--|
| <PERIOD> | Specifies the quiet period (in seconds). Default: 60. Range: 0 to 65535. |

Examples

Configuring the quiet period on a port:

```
switch(config-if)# aaa authentication port-access mac-auth
switch(config-if-macauth)# quiet-period 65
```

Resetting the quiet period on a port to default:

```
switch(config-if)# aaa authentication port-access mac-auth
switch(config-if-macauth)# no quiet-period
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---------------------------------|
| 10.11 | Command introduced on the 8325 |
| 10.11 | Command introduced on the 10000 |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|-----------------|--|
| 8325
8325H
8325P
10000 | config-if | Administrators or local user group members with execution rights for this command. |

aaa authentication port-access mac-auth radius server-group

```
aaa authentication port-access mac-auth radius server-group <GROUP-NAME>
no aaa authentication port-access mac-auth radius server-group <GROUP-NAME>
```

Description

Configures the MAC authentication server group globally or for a particular port.

The **no** form of the command resets the authentication server group to the default value, **radius**.

When configured on a port, the **no** form of the command resets the server group on that port to the globally configured group. If no global RADIUS server group is configured, the **no** form of the command resets the configuration to the default group, **radius**.



When the RADIUS server group for MAC authentication is updated on a port, any existing clients on the port that were authenticated using the previous globally configured group will associate with the new group for the port during the next re-authentication cycle. Any new client that is onboarding on the port after the server group update will associate with the new group immediately.

| Parameter | Description |
|--------------|--|
| <GROUP-NAME> | Specifies the name of the MAC authentication server group. |

Examples

Configuring the RADIUS server group for MAC authentication globally:

```
switch# config
switch(config)# aaa authentication port-access mac-auth
switch(config-macauth)# radius server-group group1
```

Configuring the RADIUS server group for MAC authentication on **1/1/5**:

```
switch(config)# interface 1/1/5
switch(config-if)# aaa authentication port-access mac-auth
switch(config-if-macauth)# radius server-group group2
```

Resetting the RADIUS server group configuration on **1/1/5**:

```
switch(config)# interface 1/1/5
switch(config-if)# aaa authentication port-access mac-auth
switch(config-if-macauth)# no radius server-group
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---------------------------------------|
| 10.12 | Command is now configurable on a port |
| 10.11 | Command introduced on the 8325 |
| 10.11 | Command introduced on the 10000 |

Command Information

| Platforms | Command context | Authority |
|-----------|-------------------|--|
| 8325 | config | Administrators or local user group members with execution rights for this command. |
| 8325H | config-macauth | |
| 8325P | config-if-macauth | |
| 10000 | | |

aaa authentication port-access mac-auth reauth

```
aaa authentication port-access mac-auth reauth
no aaa authentication port-access mac-auth reauth
```

Description

Enables periodic MAC reauthentication of authenticated clients on the port.

The **no** form of the command disables periodic MAC reauthentication on the port.

Examples

Enabling reauthentication on a port:

```
switch(config-if)# aaa authentication port-access mac-auth
switch(config-if-macauth)# reauth
```

Disabling reauthentication on a port:

```
switch(config-if)# aaa authentication port-access mac-auth
switch(config-if-macauth)# no reauth
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---------------------------------|
| 10.11 | Command introduced on the 8325 |
| 10.11 | Command introduced on the 10000 |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|-----------------|--|
| 8325
8325H
8325P
10000 | config-if | Administrators or local user group members with execution rights for this command. |

aaa authentication port-access mac-auth reauth-period

```
aaa authentication port-access mac-auth reauth-period <PERIOD>
no aaa authentication port-access mac-auth reauth-period
```

Description

Configures the period after which MAC authenticated clients must be reauthenticated on the port. You must first enable MAC reauthentication on the port before configuring the MAC reauthentication period. The **no** form of the command resets the MAC reauthentication period to the default, 3600 seconds.

| Parameter | Description |
|-----------|--|
| <PERIOD> | Specifies the MAC reauthentication period (in seconds). Default: 3600. Range: 1 to 4294967295. |

Examples

Configuring the MAC reauthentication period on a port:

```
switch(config-if)# aaa authentication port-access mac-auth
switch(config-if-macauth)# reauth-period 60
```

Resetting the MAC reauthentication period to its default:

```
switch(config-if)# aaa authentication port-access mac-auth
switch(config-if-macauth)# no reauth-period
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---------------------------------|
| 10.11 | Command introduced on the 8325 |
| 10.11 | Command introduced on the 10000 |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|-----------------|--|
| 8325
8325H
8325P
10000 | config-if | Administrators or local user group members with execution rights for this command. |

clear mac-auth statistics

```
clear mac-auth statistics [interface <IF-NAME>]
```

Description

Clears the MAC authentication statistics associated with the port and all the authenticator state machines associated to this port.

If no interface is specified, the statistics is cleared for all MAC authentication enabled ports.

| Parameter | Description |
|-----------|-------------------------------|
| <IF-NAME> | Specifies the interface name. |

Examples

Clearing MAC authentication statistics on all ports:

```
switch# clear mac-auth statistics
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---------------------------------|
| 10.11 | Command introduced on the 8325 |
| 10.11 | Command introduced on the 10000 |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|-----------------------------|--|
| 8325
8325H
8325P
10000 | Operator (>) or Manager (#) | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

show aaa authentication port-access mac-auth interface client-status

```
show aaa authentication port-access mac-auth interface {all|<IF-NAME>}
client-status [mac <MAC-ADDRESS>]
```

Description

Shows information about MAC authentication clients status. The output can be filtered by interface or MAC address.

| Parameter | Description |
|---------------|-----------------------------------|
| all | Specifies all interfaces. |
| <IF-NAME> | Specifies the interface name. |
| <MAC-ADDRESS> | Specifies the client MAC address. |

Examples

Showing client status information for all ports:

```
switch# show aaa authentication port-access mac-auth interface all client-status
```

```
Port Access Client Status Details
```

```
Client AB:CD:DE:FF:AA:BB, 1/1/1
```

```
=====
```

```
Authentication Details
```

```
-----
```

```
Status                : Authenticated
Type                  : Pass-Through
Auth-Method           : CHAP
Time Since Last State Change : 10 secs
```

```
Authentication Statistics
```

```
-----
```

```
Authentication                : 1
Authentication Timeout        : 0
Successful Authentication     : 1
Failed Authentication         : 0
Re-Authentication             : 0
Successful Re-Authentication  : 0
Failed Re-Authentication      : 0
Re-Auths When Authenticated   : 0
Cached Re-Authentication      : 0
```

```
Client DD:CD:AB:CS:EE:OI, 1/1/2
```

```
=====
```

```
Authentication Details
```

```
-----
```

```
Status                : Unauthenticated
Type                  : Pass-Through
Auth-Method           : CHAP
Auth Failure reason    : Server reject/ Server timeout
Time Since Last State Change : 15 secs
```

```
Authentication Statistics
```

```
-----
```

```
Authentication                : 1
Authentication Timeout        : 0
Successful Authentication     : 0
Failed Authentication         : 1
```

```

Re-Authentication           : 0
Successful Re-Authentication : 0
Failed Re-Authentication    : 0
Re-Auths When Authenticated : 0
Cached Re-Authentication    : 0

```

Showing status information for a client:

```

switch# show aaa authentication port-access mac-auth interface 1/1/1 client-status
mac ab:cd:de:ff:aa:bb

Port Access Client Status Details

Client AB:CD:DE:FF:AA:BB, 1/1/1
=====
Authentication Details
-----
      Status                      : Authenticated
      Type                        : Pass-Through
      Auth-Method                 : CHAP
      Time Since Last State Change : 10 secs

Authentication Statistics
-----
      Authentication              : 1
      Authentication Timeout      : 0
      Successful Authentication   : 1
      Failed Authentication       : 0
      Re-Authentication          : 0
      Successful Re-Authentication : 0
      Failed Re-Authentication   : 0
      Re-Auths When Authenticated : 0
      Cached Re-Authentication    : 0

```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---------------------------------|
| 10.11 | Command introduced on the 8325 |
| 10.11 | Command introduced on the 10000 |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|-----------------------------|--|
| 8325
8325H
8325P
10000 | Operator (>) or Manager (#) | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

show aaa authentication port-access mac-auth interface port-statistics

show aaa authentication port-access mac-auth interface {all|<IF-NAME>} port-statistics

Description

Shows information about MAC authentication ports. The output can be filtered by interface.

| Parameter | Description |
|-----------|-------------------------------|
| all | Specifies all interfaces. |
| <IF-NAME> | Specifies the interface name. |

Examples

Showing information for all ports.

```
switch# show aaa authentication port-access mac-auth interface all port-statistics

Port 1/1/1
=====

Client Details
-----
Number of Clients           : 3
Number of authenticated clients : 2
Number of unauthenticated clients : 1
Number of authenticating clients : 0

Port 1/1/2
=====

Client Details
-----
Number of Clients           : 4
Number of authenticated clients : 2
Number of unauthenticated clients : 2
Number of authenticating clients : 0
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---------------------------------|
| 10.11 | Command introduced on the 8325 |
| 10.11 | Command introduced on the 10000 |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|-----------------------------|--|
| 8325
8325H
8325P
10000 | Operator (>) or Manager (#) | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

Port access general commands

aaa authentication port-access allow-lldp-auth

```
aaa authentication port-access allow-lldp-auth
    mac chassis-mac|source-mac
no...
```

Description

This command is an extension of **aaa authentication port-access allow-lldp-auth**. By default, authentication on chassis-mac is allowed via LLDP packets which are received on the port. Use the Chassis MAC shown in the LLDP TLV or the source MAC in the LLDP frame.

Use the **no** version of this command to prevent authentication using LLDP packets received on the port.

| Parameter | Description |
|-------------|---|
| mac | (Optional) Specify the LLDP authentication-mac type. |
| chassis-mac | Configure LLDP authentication-mac type as a chassis MAC address. This is the default value. |
| source-mac | Configure LLDP authentication-mac type as an interface MAC address |
| no ... | Negates any configured parameter |

Examples

Enabling/disabling authentication via LLDP BPDU packets:

```
switch(config-if)# aaa authentication port-access
allow-lldp-auth Allow or block authentication on LLDP BPDU. (Default:
allow)
switch(config-if)# no aaa authentication port-access
allow-lldp-auth Allow or block authentication on LLDP BPDU. (Default:
allow)
switch(config-if)# aaa authentication port-access allow-lldp-auth
switch(config-if)# no aaa authentication port-access allow-lldp-auth

switch(config-if)# aaa authentication port-access
block-lldp-auth Allow or block authentication on LLDP BPDU. (Default:
block)
switch(config-if)# no aaa authentication port-access
block-lldp-auth Allow or block authentication on LLDP BPDU. (Default:
block)
```

Configuring the MAC to use for authentication:


```
switch(config)# interface 1/1/1
switch(config-if)# aaa authentication port-access allow-lldp-auth mac source-mac
switch(config-if)# aaa authentication port-access allow-lldp-auth mac chassis-mac
```

```
switch(config-if)# aaa authentication port-access allow-lldp-auth
mac      Configure the MAC to use for LLDP based authentication (Default:
chassis-mac)
```

```
switch(config-if)# aaa authentication port-access allow-lldp-auth mac
chassis-mac      Use the chassis MAC in LLDP TLV.
source-mac       Use the source MAC in the LLDP frame.
```

Disabling authentication via LLDP packets based on MAC source:

```
switch(config-if)# no aaa authentication port-access allow-lldp-auth mac
chassis-mac      Use the chassis MAC in LLDP TLV.
source-mac       Use the source MAC in the LLDP frame.
```

Disabling authentication via LLDP packets on a LAG port:

```
switch (config) interface lag 1
switch(config-lag if)# no aaa authentication port-access allow-lldp-auth
```

When a client such as dual-homed access points and switches, connects to the switch over multiple physical interfaces and use LLDP packets to onboard, it is recommended to use LLDP authentication MAC as the source MAC on the interfaces. This prevents the switch from learning the client MAC from the chassis MAC in the LLDP TLV (default), similarly to the LLDP BPDUs received on all interfaces connected to the same device. If the MAC learned is the chassis MAC, it will cause the switch to treat the client as moving between the different interfaces each time a LLDP BPDU is received on an interface. Additionally, using a different LLDP authentication MAC type on interfaces connecting to the same device may lead to undesired behavior.

For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|--------------------|
| 10.09 | Command introduced |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|-----------------|--|
| 8325
8325H
8325P
10000 | config-if | Administrators or local user group members with execution rights for this command. |

aaa authentication port-access allow-cdp-auth

```
aaa authentication port-access allow-cdp-auth
no aaa authentication port-access allow-cdp-auth
```

Description

By default authentication is allowed via CDP packets which are received on the port. Use the **no** version of this command to prevent authentication using CDP packets received on the port.

Examples

Disabling authentication via CDP packets:

```
switch(config-if)# no aaa authentication port-access allow-cdp-auth
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|--------------------|
| 10.09 | Command introduced |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|-----------------|--|
| 8325
8325H
8325P
10000 | config-if | Administrators or local user group members with execution rights for this command. |

aaa authentication port-access auth-mode

```
aaa authentication port-access auth-mode {client-mode | device-mode}
```

Description

Configures the authentication mode for the port. By default, client mode is enabled.

| Parameter | Description |
|-------------|--|
| client-mode | Selects client mode. In this mode, all clients connecting to the port are sent for authentication. The maximum number of clients allowed to connect to the port is limited by the client limit value configured with the aaa authentication port-access client-limit command. |
| device-mode | Selects device mode. In this mode, only the first client connecting to the port is sent for authentication. Once this client is authenticated, the port is considered as open and all subsequent clients trying to connect on that port are not sent for authentication. |

Examples

Configuring device mode authentication for interface 1/1/1:

```
switch(config)# interface 1/1/1
switch(config-if)# aaa authentication port-access auth-mode device-mode
```

Configuring device mode authentication for a LAG port:

```
switch(config)# interface lag 1
switch(config-lag-if)# aaa authentication port-access auth-mode device-mode
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---------------------------------|
| 10.11 | Command introduced on the 8325 |
| 10.11 | Command introduced on the 10000 |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|-----------------|--|
| 8325
8325H
8325P
10000 | config-if | Administrators or local user group members with execution rights for this command. |

aaa authentication port-access auth-precedence

```
aaa authentication port-access auth-precedence [dot1x mac-auth | mac-auth dot1x]
no aaa authentication port-access auth-precedence [dot1x mac-auth | mac-auth dot1x]
no aaa authentication port-access auth-precedence
```

Description

Configures the per port authentication precedence using the space separator.

By default, 802.1X authentication (**dot1x**) takes a higher precedence than MAC authentication (**mac-auth**).

The **no** form of the command resets the port access authentication precedence to the default, 802.1X authentication followed by MAC authentication.

| Parameter | Description |
|----------------|---|
| dot1x mac-auth | Specifies that the port access authentication precedence is 802.1X authentication followed by MAC authentication. |
| mac-auth dot1x | Specifies that the port access authentication precedence is MAC authentication followed by 802.1X authentication. |

Examples

Configuring MAC authentication precedence on a port:

```
switch(config-if)# aaa authentication port-access auth-precedence mac-auth dot1x
```

Resetting the authentication precedence to the default value:

```
switch(config-if)# no aaa authentication port-access auth-precedence mac-auth dot1x
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---------------------------------|
| 10.11 | Command introduced on the 8325 |
| 10.11 | Command introduced on the 10000 |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|-----------------|--|
| 8325
8325H
8325P
10000 | config-if | Administrators or local user group members with execution rights for this command. |

aaa authentication port-access auth-priority

```
aaa authentication port-access auth-priority [dot1x mac-auth | mac-auth dot1x]  
no aaa authentication port-access auth-priority [dot1x mac-auth | mac-auth dot1x]  
no aaa authentication port-access auth-priority
```

Description

Configures the authentication priority using the space separator to specific interface.

Default **auth-priority** with concurrent onboarding is 802.1X followed by MAC authentication. With authentication precedence, the default **auth-priority** follows the **auth-precedence** order.

The **no** form of the command resets the port access authentication priority to the default, is same as the configured **auth-precedence** order.

The authentication priority is useful in deployments where clients such as wireless access points (APs), IT-compliant-laptops or phones, or laptops without pre-loaded supplicant software must download the supplicant software or firmware patches before attempting 802.1X authentication. In such cases, configure the MAC authentication as the primary authentication method followed by 802.1X for the authentication order. Meanwhile, configure 802.1X as the primary authentication priority and MAC authentication as secondary to enforce access based on 802.1X. Thus the client (or end access device) will initially be authenticated by MAC authentication with the access required to onboard and install the software or patches, and subsequently attempt the 802.1X authentication.

Reauthentication will be triggered for all high priority methods and not just the final successful authentication method.

| Parameter | Description |
|----------------|---|
| dot1x mac-auth | Specifies that the port access authentication precedence is 802.1X authentication followed by MAC authentication. |
| mac-auth dot1x | Specifies that the port access authentication precedence is MAC authentication followed by 802.1X authentication. |

Examples

Configuring MAC authentication priority on a port:

```
switch(config-if)# aaa authentication port-access auth-priority mac-auth dot1x
```

Resetting the authentication priority to the default value:

```
switch(config-if)# no aaa authentication port-access auth-priority mac-auth dot1x  
switch(config-if)# no aaa authentication port-access auth-priority
```

Sample configuration:

```
interface 1/1/1  
  no shutdown  
  no routing  
  vlan access 1  
  aaa authentication port-access auth-precedence mac-auth dot1x  
  aaa authentication port-access auth-priority dot1x mac-auth
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---------------------------------|
| 10.11 | Command introduced on the 8325 |
| 10.11 | Command introduced on the 10000 |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|-----------------|--|
| 8325
8325H
8325P
10000 | config-if | Administrators or local user group members with execution rights for this command. |

aaa authentication port-access auth-role

```
aaa authentication port-access [critical-role|preauth-role|reject-role|
auth-role|critical-voice-role] <ROLE-NAME>
no aaa authentication port-access [critical-role|preauth-role|reject-role|
auth-role|critical-voice-role]
```

Description

Configures the role to assign to the clients depending on the client authentication state.

The **no** form of the command disassociates the roles that you assign to clients based on the authentication state.

| Parameter | Description |
|---------------|---|
| critical-role | Specifies the role that is applied when the RADIUS server is unreachable for authentication or when there is a request timeout. |
| preauth-role | Specifies the role that is applied when authentication is still in progress. |
| reject-role | Specifies the role that is applied when authentication has failed. |
| auth-role | Specifies the role that is applied to authenticated clients when a specific role is not assigned in the RADIUS server. |
| <ROLE-NAME> | Specifies the role name. |

Examples

Configuring critical role for clients:

```
switch(config-if)# aaa authentication port-access critical-role role1
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---------------------------------|
| 10.11 | Command introduced on the 8325 |
| 10.11 | Command introduced on the 10000 |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|-----------------|--|
| 8325
8325H
8325P
10000 | config-if | Administrators or local user group members with execution rights for this command. |

aaa authentication port-access client-auto-log-off final-authentication-failure

```
aaa authentication port-access client-auto-log-off final-authentication-failure
no aaa authentication port-access client-auto-log-off final-authentication-failure
```

Description

Use this command to automatically remove a client when authentication fails due to any reason except **server-reject** or **server-timeout**. This feature is disabled by default.

The **no** form of this command disables this feature if it has been previously enabled.



Automatic client log-off is not supported on Layer-3 interfaces.

Examples

Configuring the client-auto-log-off feature on interface 1/1/1:

```
switch(config)# interface 1/1/1
switch(config-if)# aaa authentication port-access client-auto-log-off final-
authentication-failure
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------|--------------------|
| 10.08.1090 | Command introduced |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|-----------------|--|
| 8325
8325H
8325P
10000 | config-if | Administrators or local user group members with execution rights for this command. |

aaa authentication port-access client-limit

```
aaa authentication port-access client-limit <CLIENTS>
no aaa authentication port-access client-limit
```

Description

Configures the maximum number of clients that can simultaneously connect to a port.

The **no** form of this command resets the number of clients to the default.

| Parameter | Description |
|-----------|--|
| <CLIENTS> | Specifies the maximum number of clients. Default: 1. Range: 1 to 32 (8325, 10000). |

Examples

Configuring the client limit for on port **1/1/1**:

```
switch(config)# interface 1/1/1
switch(config-if)# aaa authentication port-access client-limit 25
```

Configuring the client limit for on a LAG port:

```
switch(config)# interface lag 1
switch(config-lag-if)# aaa authentication port-access client-limit 25
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---------------------------------|
| 10.11 | Command introduced on the 8325 |
| 10.11 | Command introduced on the 10000 |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|-----------------|--|
| 8325
8325H
8325P
10000 | config-if | Administrators or local user group members with execution rights for this command. |

port-access allow-flood-traffic

```
port-access allow-flood-traffic {enable | disable}
```

Description

Enables or disables transmission of flood traffic, such as broadcast, multicast, and unknown unicast messages through a security enabled port on which no client has been authenticated. By default, transmission of flood traffic is disabled.

Usage

This command can be used to allow Wake-on-LAN packets on security enabled ports, before a client is authenticated.

Examples

Enabling flood traffic on a port on interface 1/1/1:

```
switch(config)# interface 1/1/1
switch(config-if)# port-access allow-flood-traffic
```

Enabling flood traffic on a port on a LAG port:

```
switch(config)# interface lag 1
switch(config-lag-if)# port-access allow-flood-traffic
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---------------------------------|
| 10.11 | Command introduced on the 8325 |
| 10.11 | Command introduced on the 10000 |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|-----------------|--|
| 8325
8325H
8325P
10000 | config-if | Administrators or local user group members with execution rights for this command. |

port-access client-move

```
port-access client-move {enable | disable | secure}
```

Description

When client move is enabled (the default), a port access client can move to other port access-enabled interfaces, at which time they will be re-authenticated on the new interface.

When client move is disabled, a client cannot move to other port access-enabled interfaces.



An authenticated client will be moved immediately if the new port to which the client will move has a pre-auth role configured, even when client move is enabled as secure.

| Parameter | Description |
|-----------|---|
| enable | Enables this feature so port access clients can move to other port access-enabled interfaces. |
| disable | Disables this feature so port access clients cannot move to other port access-enabled interfaces. |

| Parameter | Description |
|-----------|--|
| secure | <p>Use this configuration setting to stop a potential attacker from denying a genuine client access by spoofing the client's MAC on a different port-access enabled port of the switch.</p> <p>An authenticated client will be moved immediately if the new port to which the client moved has a pre-authentication role configured, even when client-move is enabled as secure.</p> <p>NOTE: Secure client move is enabled by default.</p> |

Examples

Enabling client move:

```
switch(config)# port-access client-move enable
```

Enabling secure client move:

```
switch(config)# port-access client-move enable secure
```

Disabling client move:

```
switch(config)# port-access client-move disable
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---------------------------------|
| 10.11 | Command introduced on the 8325 |
| 10.11 | Command introduced on the 10000 |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|-----------------|--|
| 8325
8325H
8325P
10000 | config | Administrators or local user group members with execution rights for this command. |

port-access event-log client

```
port-access event-log client
no port-access event-log client
```

Description

Enables port access informational event logs for the client. These event logs help with client telemetry on a remote management station such as Aruba Central. By default, these informational event logs are disabled.



Starting with AOS-CX 10.10, the event IDs 10510 and 10511 are logged when the port access informational event log configuration is enabled.

The **no** form of the command disables port access informational event logs for the client.

Example

Enabling port access event log:

```
switch(config) # port-access event-log client
```

Disabling port access event log:

```
switch(config) # no port-access event-log client
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---------------------------------|
| 10.11 | Command introduced on the 8325 |
| 10.11 | Command introduced on the 10000 |
| 10.10 | Command introduced |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|-----------------|--|
| 8325
8325H
8325P
10000 | config | Administrators or local user group members with execution rights for this command. |

port-access fallback-role

```
port-access fallback-role <ROLE-NAME>  
no port-access fallback-role <ROLE-NAME>
```

Description

Configures the fallback role to assign to the clients onboarding on a port. This role is applied only when no derived role is applied to the clients.

The **no** form of the command resets the fallback role.

| Parameter | Description |
|--------------------------------|---|
| <code><ROLE-NAME></code> | Specifies the fallback role name. The maximum number of characters supported is 64. |

Usage

Following are the conditions for the fallback role to be applied on onboarding devices:

- The device profile local MAC match feature with block-until-profile-applied mode is configured.
- Device profile along with AAA is configured but no match was found for the device profile client.
- AAA method with no reject or critical role is configured, and the connection to RADIUS server failed.
- 802.1X authentication is enabled on the port, but the supplicant of the device timed out to respond to the authentication request.

Example

Configuring fallback role for a port:

```
switch(config)# interface 1/1/3
switch(config-if)# port-access fallback-role fallback01
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---------------------------------|
| 10.11 | Command introduced on the 8325 |
| 10.11 | Command introduced on the 10000 |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|-----------------|--|
| 8325
8325H
8325P
10000 | config-if | Administrators or local user group members with execution rights for this command. |

port-access log-off client

```
port-access log-off client mac <MAC-ADDRESS>
port-access log-off client interface <INTERFACE-NAME>
port-access log-off client role <ROLE-NAME>
```

Description

Logs off the client connected to a port access-enabled interface.

| Parameter | Description |
|------------------|-----------------------------------|
| <MAC-ADDRESS> | Specifies the client MAC address. |
| <INTERFACE-NAME> | Specifies the client interface. |
| <ROLE-NAME> | Specifies the client MAC address. |

Example

Logging a client off from the switch, specifying the MAC address:

```
switch# port-access log-off client mac 00:50:56:bd:04:2d
```

Logging a client off from the switch, specifying the interface:

```
switch# port-access log-off client interface 1/1/1
```

Logging a client off from the switch, specifying the role:

```
switch# port-access log-off client role r1
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---------------------------------|
| 10.11 | Command introduced on the 8325 |
| 10.11 | Command introduced on the 10000 |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|-----------------|--|
| 8325
8325H
8325P
10000 | Manager (#) | Administrators or local user group members with execution rights for this command. |

port-access onboarding-method precedence

```
port-access onboarding-method precedence [aaa device-profile | device-profile aaa]
no port-access onboarding-method precedence [aaa device-profile | device-profile aaa]
```

Description

Configures the precedence for the method to be used to authenticate onboarding devices for each interface.

The **no** form of the command resets the authentication method precedence to the default precedence of AAA followed by device profile.

AAA includes the 802.1X and MAC authentication methods whose precedence can be configured using the **aaa authentication port-access auth-precedence** command. Here, the default precedence is 802.1X authentication.

For example, if you configure AAA (both 802.1X and MAC) authentication methods and device profile on a port, by default, the authentication precedence would be 802.1X, then MAC, and lastly device profile.



aaa in the parameters refers to the authentication precedence configured using the **aaa authentication port-access auth-precedence** command.

| Parameter | Description |
|--------------------|--|
| aaa device-profile | Specifies that the precedence for per port onboarding authentication method is AAA followed by device profile. |
| device-profile aaa | Specifies that the precedence for per port onboarding authentication method is device profile followed by AAA. |

Examples

Configuring AAA method precedence on a port:

```
switch(config)# interface 1/1/1
switch(config-if)# port-access onboarding-method precedence device-profile aaa
```

Resetting the authentication method precedence:

```
switch(config)# interface 1/1/1
switch(config-if)# no port-access onboarding-method precedence device-profile aaa
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---------------------------------|
| 10.11 | Command introduced on the 8325 |
| 10.11 | Command introduced on the 10000 |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|-----------------|--|
| 8325
8325H
8325P
10000 | config-if | Administrators or local user group members with execution rights for this command. |

port-access onboarding-method concurrent

port-access onboarding-method concurrent <enable | disable>

Description

Configures all methods to start concurrently for faster onboarding process. If authentication priority is not configured when enabling concurrent onboarding, the priority will be 802.1X followed by **mac-auth** and **device-profile**.

Default priority for concurrent onboarding is 802.1X followed by **mac-auth** and **device-profile**.

When enabling concurrent onboarding on the port, existing clients will be de-authenticated and freshly onboarded concurrently.

When concurrent onboarding is enabled, then auth-precedence will be ignored.

If concurrent onboarding is configured, the client will stay in pre-auth role till it gets succeeded by one authentication method or gets failed by all the authentication methods.

When the authentication method with the highest priority fails, the profile of the next successful authentication method is applied.

If all methods fail, the reject or critical role is applied based on the 802.1X authentication failure reason and continues to reauthenticate with the 802.1X method.

Reauthentication will be triggered for all high priority methods and not just the final successful authentication method.

Some RADIUS server may block the client when it receives two requests, **mac-auth** and 802.1X, from the same client at the same time. This is because the RADIUS server allows only one authentication request. In such cases, concurrent onboarding is not feasible. To prevent such scenarios, configure **auth-precedence** with **auth-priority**.

| Parameter | Description |
|-----------|---|
| enable | Enable clients to be onboarded concurrently. |
| disable | Disable clients to be onboarded concurrently. |

Examples

Enabling concurrent onboarding on a port:

```
switch(config)# interface 1/1/1
switch(config-if)# port-access onboarding-method concurrent enable
```

Disabling concurrent onboarding on a port:

```
switch(config)# interface 1/1/1
switch(config-if)# port-access onboarding-method concurrent disable
```

Sample configuration:

```
interface 1/1/1
  no shutdown
  no routing
  vlan access 999
```

```
!aaa authentication port-access auth-precedence mac-auth dot1x
port-access onboarding-method concurrent enable
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---------------------------------|
| 10.11 | Command introduced on the 8325 |
| 10.11 | Command introduced on the 10000 |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|-----------------|--|
| 8325
8325H
8325P
10000 | config-if | Administrators or local user group members with execution rights for this command. |

port-access reauthenticate interface

```
port-access reauthenticate interface <INTERFACE-NAME>
```

Description

Forcefully reauthenticates all clients connected to an interface.



Clients that are in the **HELD** state are ignored.

| Parameter | Description |
|------------------|-------------------------------|
| <INTERFACE-NAME> | Specifies the interface name. |

Examples

Configuring reauthentication of all clients on a port:

```
switch# port-access reauthenticate interface 1/1/1
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---------------------------------|
| 10.11 | Command introduced on the 8325 |
| 10.11 | Command introduced on the 10000 |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|-----------------|--|
| 8325
8325H
8325P
10000 | Manager (#) | Administrators or local user group members with execution rights for this command. |

show aaa authentication port-access interface client-status

```
show aaa authentication port-access interface {all | <IFRANGE>}
client-status [mac <MAC-ADDRESS>]
```

Description

Shows information about the status of the role applied on ports. RADIUS overridden user roles are suffixed with *. The role name is not displayed for clients that do not use local, downloaded, or RADIUS overridden role.

| Parameter | Description |
|---------------|-----------------------------------|
| all | Specifies all interfaces. |
| <IFRANGE> | Specifies the interface name. |
| <MAC-ADDRESS> | Specifies the client MAC address. |

Examples

Showing information about a client:

```
switch# show aaa authentication port-access interface all client-status
Port Access Client Status Details
RADIUS overridden user roles are suffixed with '*'
Client 00:50:56:96:93:d6, John Doe
=====

Session Details
-----
Port          : 1/1/13
Session Time  : 30s
IPv4 Address  : 10.0.0.1
IPv6 Address  :

Authentication Details
-----
Status          : dot1x Authenticated
Auth Precedence : dot1x - Authenticated, mac-auth - Not attempted
Auth History    : dot1x    - Authenticated, 5s ago
```

```

mac-auth - Unauthenticated, Server-Reject, 10s ago
mac-auth - Unauthenticated, Server-Reject, 15s ago
dot1x    - Unauthenticated, Server-Timeout, 15s ago
dot1x    - Attempted, 20s ago

Authorization Details
-----
Role      : Employee*
Status    : Applied

Client 00:50:56:96:50:28
=====
Session Details
-----
Port       : 1/1/14
Session Time : 10s
IPv4 Address : 10.0.0.2
IPv6 Address :

Authentication Details
-----
Status      : mac-auth Authenticated
Auth Precedence : dot1x - Unauthenticated, mac-auth - Authenticated
Auth History   : dot1x    - Unauthenticated, Server-Reject, 5s ago
mac-auth - Authenticated, 10s ago

Authorization Details
-----
Status      : Applied

```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---|
| 10.12 | Command output modified to be suffixed with * for RADIUS overridden user roles. The role name will not be displayed for clients that do not use local, downloaded, or RADIUS overridden role. |
| 10.11 | Command introduced on the 8325 |
| 10.11 | Command introduced on the 10000 |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|-----------------------------|--|
| 8325
8325H
8325P
10000 | Operator (>) or Manager (#) | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

show port-access clients

show port-access clients [dhcp-info|ubt|vxlan] [interface <INTERFACE-NAME>] [mac <MAC-ADDRESS>]

Description

Shows summarized active port access client information.

The **User-Role** column in the output will not display any value for clients not using local, downloaded or RADIUS overridden role. When an explicit client name is not available, only the MAC address of the client will be displayed.

The VLANs in the output display the tags, **u**, **t**, and **multi** to indicate untagged VLAN, single tagged VLAN, and multiple VLANs respectively.

| Parameter | Description |
|------------------|--|
| <i>dhcp</i> | Shows DHCP information of port access clients.

NOTE: To view the DHCP information of port access clients, either client IP tracker or DHCP snooping must be enabled. If client IP tracker is enabled, then the command does not display the lease time. This command does not display information about tagged VLAN. |
| <i>ubt</i> | Shows port access information about UBT clients.

NOTE: The output displays information only about untagged VLAN. |
| <i>vxlan</i> | Shows port access information about VXLAN clients.

NOTE: The output displays information about both tagged and untagged VLAN without the tags, u and t . |
| <INTERFACE-NAME> | Specifies the interface name. |
| <MAC-ADDRESS> | Specifies the client MAC address. |

Examples

Showing information for all clients:

```
switch# show port-access clients
Port Access Clients jhdoadjfoadk

Status Codes: d device-mode, c client-mode
```

```
-----
-----
Port      MAC-Address      Onboarding      Status      Role
Device Type                                Method
-----
-----
```

```

c 1/1/4      00:50:56:bd:04:c8 port-security Success
c 1/1/5      00:50:56:bd:32:07 Success reject-role, reject
c 1/1/5      00:50:56:bd:32:08 Fail critical-...,
critical
c 1/1/6      00:50:56:bd:50:43 mac-auth Success auth-role, auth
c 1/1/6      00:50:56:bd:50:45 dot1x Success RADIUS_773420618
c 1/1/19     08:97:34:ad:e4:00 device-profile Success ap-role
c 1/1/20     00:50:56:bd:32:08 In-Progress preauth-role, preauth
c 1/1/20     00:50:56:bd:32:06 In-Progress
c 1/1/20     00:50:56:bd:32:09 Fail
d 1/1/25     08:97:34:ad:f4:03 mac-auth Success RADIUS_453420632
c 1/1/212    00:60:56:bd:50:43 mac-auth Success fallback-role,
fallback
m 1/1/7      00:50:56:bd:50:45 dot1x Success RADIUS_773420620
data
m 1/1/7      00:50:56:bd:50:c5 dot1x Success RADIUS_773420621
voice
m 1/1/8      00:50:56:bd:50:c6 dot1x Fail test-voice,critical
voice voice

```

Showing information for clients on a particular interface:

```

switch# show port-access clients interface 1/1/5

Port Access Clients

Status codes: d device-mode, c client-mode

-----
-
Port          MAC Address          Onboarded          Status          Role
              Device Type          Method
-----
-
c 1/1/5      00:50:56:bd:32:07          Success          reject-role, Reject
c 1/1/5      00:50:56:bd:32:08          Fail             critical-...,
Critical

```

Showing information for all clients including multidomain mode clients:

```

switch# show port-access clients

Port Access Clients

Status codes: d device-mode, c client-mode, m multi-domain

-----
-----
Port          MAC-Address          Onboarding          Status          VLAN          Role
              Device Type          Method
-----
-----
c 1/1/4      00:50:56:bd:04:c8 port-security Success
c 1/1/5      00:50:56:bd:32:07          Success          10          reject-role,
reject
c 1/1/5      00:50:56:bd:32:08          Fail             20          critical-...,
critical
c 1/1/6      00:50:56:bd:50:43 mac-auth Success          auth-role,

```

```

auth
c 1/1/6      00:50:56:bd:50:45 dot1x      Success    20      RADIUS_
773420618
c 1/1/19     08:97:34:ad:e4:00 device-profile Success
c 1/1/20     00:50:56:bd:32:08      In-Progress 10      ap-role
preauth-role,
preauth
c 1/1/20     00:50:56:bd:32:06      In-Progress
c 1/1/20     00:50:56:bd:32:09      Fail
d 1/1/25     08:97:34:ad:f4:03 mac-auth    Success    10      RADIUS_
453420632
c 1/1/212    00:60:56:bd:50:43 mac-auth    Success
fallback-
role, fallback
m 1/1/7      00:50:56:bd:50:45 dot1x      Success    21      RADIUS_
773420620      data
m 1/1/7      00:50:56:bd:50:c5 dot1x      Success    22      RADIUS_
773420621      voice
m 1/1/8      00:50:56:bd:50:c6 dot1x      Fail       23      test-
voice,critical voice voice

```

Showing information for all clients including multidomain mode clients and UBT fallback role applied:

```

switch# show port-access clients
Port Access Clients

Status codes: d device-mode

-----
-----
Port      MAC-Address      Onboarding      Status      Role
Device Type
Method
-----
-----
1/1/4      00:50:56:bd:04:c8 port-security    Success
1/1/5      00:50:56:bd:32:07 Success
1/1/5      00:50:56:bd:32:08 Fail          reject-role, reject
critical    critical-...,
1/1/6      00:50:56:bd:50:43 mac-auth        Success        auth-role, auth
1/1/6      00:50:56:bd:50:45 dot1x          Success        RADIUS_773420618
1/1/19     08:97:34:ad:e4:00 device-profile  Success        ap-role
1/1/20     00:50:56:bd:32:08      In-Progress    preauth-role, preauth
1/1/20     00:50:56:bd:32:06      In-Progress
1/1/20     00:50:56:bd:32:09      Fail
d 1/1/25     08:97:34:ad:f4:03 mac-auth        Success        RADIUS_453420632
1/1/212    00:60:56:bd:50:43 mac-auth        Success        fallback-role,
fallback
1/1/7      00:50:56:bd:50:45 dot1x          Success        RADIUS_773420620
data
1/1/7      00:50:56:bd:50:c5 dot1x          Success        RADIUS_773420621
voice
1/1/8      00:50:56:bd:50:c6 dot1x          Fail          test-voice,critical
voice voice
1/1/21     00:50:56:bd:32:13 mac-auth        Success        ubt-role, ubt-
fallback

```

Showing information about a specific client:

```

switch# show port-access clients mac 00:50:56:bd:50:43
Port Access Clients

```

RADIUS overridden user roles are suffixed with '*'

Flags: Onboarding-Method|Mode|Device-Type|Status

Onboarding-Method: 1x 802.1X, ma MAC-Auth, ps Port-Security, dp Device-Profile, m Multi-Domain

Mode: c Client-Mode, d Device-Mode, p Proxy-Mode, m Multi-Domain

Device-Type: d Data, v Voice

Status: s Success, f Failed, p In-Progress, d Role-Download-Failed

```
-----
-----
Port      Client-Name      IPv4-Address      User-Role
VLAN      Flags
-----
1/1/5     00:50:56:bd:50:43      reject-role, reject
(u)1234, (t)1000 1x|c|-|s
```

Showing information for clients on a particular interface:

```
switch# show port-access clients interface 1/1/5
```

Port Access Clients

RADIUS overridden user roles are suffixed with '*'

Flags: Onboarding-Method|Mode|Device-Type|Status

Onboarding-Method: 1x 802.1X, ma MAC-Auth, ps Port-Security, dp Device-Profile

Mode: c Client-Mode, d Device-Mode, p Proxy-Mode, m Multi-Domain

Device-Type: d Data, v Voice

Status: s Success, f Failed, p In-Progress, d Role-Download-Failed

```
-----
-----
Port      Client-Name      IPv4-Address      User-Role
VLAN      Flags
-----
1/1/5     00:50:56:bd:32:07      reject-role, reject
(u)1234, (t)1000 1x|c|-|s
1/1/5     test              critical-..., critical
(u)56      1x|c|-|f
1/1/9     00:50:56:bd:50:c7      rp-role
rp|p|-|s
```

Showing DHCP information of port access clients:

```
switch# show port-access clients dhcp-info
```

Port Access Clients

```
-----
-----
Port      Client-Name      IP-Address
VLAN      Lease-Time
```

```

-----
1/1/1    Camera-1023          10.10.10.10          10
268
1/1/2    CAP-8-G22              aaaa:bbbb:cccc:dddd:eeee:1234:5678:abcd  20
500
...

```

Showing port access information about UBT clients:

```

switch# show port-access clients ubt
Port Access Clients
RADIUS overridden user roles are suffixed with '*'

Flags: Onboarding-Method|Mode|Device-Type|Status

Onboarding-Method: 1x 802.1X, ma MAC-Auth, ps Port-Security, dp Device-Profile
Mode: c Client-Mode, d Device-Mode, m Multi-Domain
Device-Type: d Data, v Voice
Status: s Success, f Failed, p In-Progress, d Role-Download-Failed

-----
Port      Client-Name      IPv4-Address      User-Role      Gateway-Role
Zone      UBT              VLAN  Flags
-----
1/1/12    00:50:56:96:93:d6  10.10.10.10      test_role      authenticated
zone1     10      ma|c|-|s
1/1/10    CAP-8-G22         10.10.10.11      student
authenticated_gate... zone1      9857 1x|c|-|s

```

Showing port access information about VXLAN clients:

```

switch# show port-access clients vxlan
Port Access Clients
RADIUS overridden user roles are suffixed with '*'

Flags: Onboarding-Method|Mode|Device-Type|Status

Onboarding-Method: 1x 802.1X, ma MAC-Auth, ps Port-Security, dp Device-Profile
Mode: c Client-Mode, d Device-Mode, m Multi-Domain
Device-Type: d Data, v Voice
Status: s Success, f Failed, p In-Progress, d Role-Download-Failed

-----
Port      Client-Name      IPv4-Address      User-Role
VLAN  VNI  Flags
-----

```

| | | | |
|--------|-------------------|-------------|----------|
| 1/1/21 | 00:50:56:96:93:d6 | 10.10.10.10 | student |
| 5678 | 2432 ma c - s | | |
| 1/1/21 | user_12@gmail.com | | employee |
| 9857 | 4678 1x c - s | | |

Command History

| Release | Modification |
|---------|---|
| 10.12 | The following changes were introduced: <ul style="list-style-type: none"> ▪ The dhcp-info, ubt, and vxlan parameters were introduced. ▪ Command output modified to display only Port, Client-Name, IPv4-Address, User-Role, VLAN, and Flags. |
| 10.11 | Command introduced on the 8325 |
| 10.11 | Command introduced on the 10000 |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|-----------------------------|--|
| 8325
8325H
8325P
10000 | Operator (>) or Manager (#) | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

show port-access clients detail

```
show port-access clients [interface <INTERFACE-NAME>] [mac <MAC-ADDRESS>] detail
```

Description

Shows detailed active port access clients information including the VLAN association for each of the authenticated clients. The output can be filtered by interface or MAC address.



When this command is issued from a RADIUS-proxy switch, the output of this command will not show IP information for gleaned RADIUS-proxy clients, as the port-access clients learned at the aggregator are not directly connected clients.

| Parameter | Description |
|------------------|-----------------------------------|
| <INTERFACE-NAME> | Specifies the interface name. |
| <MAC-ADDRESS> | Specifies the client MAC address. |

Examples

Showing detailed information for clients on a particular interface (one client):

```
switch# show port-access clients interface 1/1/7 detail
Port Access Client Status Detail
```

Client 2c:41:38:7f:35:c8, Jamie Doe
=====

Session Details

Port : 1/1/8
Session Time : 33s
IPv4 Address :
IPv6 Address :

VLAN Details

VLANs Assigned : 10,20,30
Access :
Native Untagged : 10
Alllowed Trunk : 20,30

Authentication Details

Status : mac-auth Authenticated
Auth Precedence : dot1x - Unauthenticated, mac-auth - Authenticated
Auth History : mac-auth - Authenticated, 5s ago
dot1x - Unauthenticated, Server-Timeout, 10s ago

Authorization Details

Role : RADIUS_Overridden_3029903100
Status : Applied

Attributes overridden by RADIUS are prefixed by '*'.

Name : RADIUS_Overridden_3598790787
Type : radius
Base Role : local, Fri Jul 09 14:34:29 IST 2021

| | |
|--------------------------------|-------------|
| Reauthentication Period | : 600 secs |
| Cached Reauthentication Period | : |
| Authentication Mode | : |
| Session Timeout | : 800 secs |
| Client Inactivity Timeout | : 1000 secs |
| Description | : |
| *Gateway Zone | : stdn_ctrl |
| Access VLAN | : |
| Native VLAN | : |
| *Allowed Trunk VLANs | : 5 |
| Access VLAN Name | : |
| Native VLAN Name | : |
| Allowed Trunk VLAN Names | : |
| *MTU | : 9198 |
| QOS Trust Mode | : |
| STP Administrative Edge Port | : |
| PoE Priority | : |
| Policy | : |
| GBP | : |
| Device Type | : |

switch# **show port-access clients interface 1/1/7 detail**
Port Access Client Status Detail

Client 2c:41:38:7f:35:c8, Jamie Doe

=====

Session Details

Port : 1/1/8
Session Time : 33s
IPv4 Address :
IPv6 Address :

VLAN Details

VLAN Group Name :
VLANs Assigned : 10,20,30
Access :
Native Untagged : 10
Allowed Trunk : 20,30

Authentication Details

Status : mac-auth Authenticated
Auth Precedence : dot1x - Unauthenticated, mac-auth - Authenticated
Auth History : mac-auth - Authenticated, 5s ago
dot1x - Unauthenticated, Server-Timeout, 10s ago

Authorization Details

Role : RADIUS_Overridden_3029903100
Status : Applied

Attributes overridden by RADIUS are prefixed by '*'.

Name : RADIUS_Overridden_3598790787
Type : radius
Base Role : MixedRole_XX00_LUR_1, local, Fri Jul 09 14:34:29 IST 2021

| | |
|--------------------------------|-------------------------------|
| Reauthentication Period | : 600 secs |
| Cached Reauthentication Period | : |
| Authentication Mode | : |
| Session Timeout | : 800 secs |
| Client Inactivity Timeout | : 1000 secs |
| Description | : |
| *Gateway Zone | : stdn_ctrl |
| *UBT Gateway Role | : stdn-authenticated-vrfl_dur |
| UBT Gateway Clearpass Role | : |
| Access VLAN | : |
| Native VLAN | : |
| *Allowed Trunk VLANs | : 5 |
| Access VLAN Name | : |
| Native VLAN Name | : |
| Allowed Trunk VLAN Names | : |
| VLAN Group Name | : |
| *MTU | : 9198 |
| QOS Trust Mode | : |
| STP Administrative Edge Port | : |
| PoE Priority | : |
| PVLAN Port Type | : |
| Captive Portal Profile | : |
| Policy | : |
| GBP | : |
| Device Type | : |

```
switch# show port-access clients interface 1/1/7 detail
```

```
Port Access Client Status Detail
```

```
-----
```

```
Client 2c:41:38:7f:35:c8, Jamie Doe
```

```
=====
```

```
Session Details
```

```
-----
```

```
Port          : 1/1/8
Session Time   : 33s
IPv4 Address   :
IPv6 Address   :
```

```
VLAN Details
```

```
-----
```

```
VLAN Group Name :
VLANs Assigned  : 10,20,30
Access          :
Native Untagged : 10
Allowed Trunk   : 20,30
```

```
Authentication Details
```

```
-----
```

```
Status          : mac-auth Authenticated
Auth Precedence  : dot1x - Unauthenticated, mac-auth - Authenticated
Auth History     : mac-auth - Authenticated, 5s ago
                  dot1x   - Unauthenticated, Server-Timeout, 10s ago
```

```
Authorization Details
```

```
-----
```

```
Role   : RADIUS_Overridden_3029903100
Status : Applied
```

```
Attributes overridden by RADIUS are prefixed by '*'.
```

```
Name      : RADIUS_Overridden_3598790787
```

```
Type      : radius
```

```
Base Role : MixedRole_XX00_LUR_1, local, Fri Jul 09 14:34:29 IST 2021
```

```
-----
```

```
Reauthentication Period      : 600 secs
Cached Reauthentication Period :
Authentication Mode           :
Session Timeout               : 800 secs
Client Inactivity Timeout     : 1000 secs
Description                   :
*Gateway Zone                 : stdn_ctrl
*UBT Gateway Role             : stdn-authenticated-vrfl_dur
UBT Gateway Clearpass Role    :
Access VLAN                   :
Native VLAN                   :
*Allowed Trunk VLANs          : 5
Access VLAN Name              :
Native VLAN Name              :
Allowed Trunk VLAN Names      :
VLAN Group Name               :
*MTU                           : 9198
QOS Trust Mode                :
STP Administrative Edge Port   :
PoE Priority                   :
PVLAN Port Type               :
Captive Portal Profile        :
```

```
Policy :
GBP :
Device Type :
```

```
switch# show port-access clients interface 1/1/7 detail
```

```
Port Access Client Status Detail
```

```
-----
```

```
Client 2c:41:38:7f:35:c8, Jamie Doe
```

```
=====
```

```
Session Details
```

```
-----
```

```
Port : 1/1/8
Session Time : 33s
IPv4 Address :
IPv6 Address :
```

```
VLAN Details
```

```
-----
```

```
VLAN Group Name :
VLANs Assigned : 10,20,30
Access :
Native Untagged : 10
Allowed Trunk : 20,30
```

```
Authentication Details
```

```
-----
```

```
Status : mac-auth Authenticated
Auth Precedence : dot1x - Unauthenticated, mac-auth - Authenticated
Auth History : mac-auth - Authenticated, 5s ago
              dot1x - Unauthenticated, Server-Timeout, 10s ago
```

```
Authorization Details
```

```
-----
```

```
Role : RADIUS_Overridden_3029903100
Status : Applied
```

```
Attributes overridden by RADIUS are prefixed by '*'.
```

```
Name : RADIUS_Overridden_3598790787
```

```
Type : radius
```

```
Base Role : MixedRole_XX00_LUR_1, local, Fri Jul 09 14:34:29 IST 2021
```

```
-----
```

```
Reauthentication Period : 600 secs
Cached Reauthentication Period :
Authentication Mode :
Session Timeout : 800 secs
Client Inactivity Timeout : 1000 secs
Description :
Access VLAN :
Native VLAN :
*Allowed Trunk VLANs : 5
Access VLAN Name :
Native VLAN Name :
Allowed Trunk VLAN Names :
VLAN Group Name :
*MTU : 9198
QOS Trust Mode :
STP Administrative Edge Port :
PoE Priority :
```

| | |
|-------------|---|
| Policy | : |
| GBP | : |
| Device Type | : |

Showing information for a particular client MAC address:

```
switch# show port-access clients mac 00:00:00:00:00:c8 detail
Port Access Client Status Details:
Client 00:00:00:00:00:c8, 00:00:00:00:00:c8
=====
Session Details
-----
Port          : 1/1/1
Session Time  : 888s
IPv4 Address  :
IPv6 Address  :
VLAN Details
-----
VLAN Group Name : test_group
VLANs Assigned  : 22
Access         : 22
Native Untagged :
Allowed Trunk   :
Authentication Details
-----
Status          : mac-auth Authenticated
Auth Precedence : dot1x - Unauthenticated, mac-auth - Authenticated
Auth History    : mac-auth - Authenticated, 288s ago
dot1x - Unauthenticated, Supplicant-Timeout, 703s ago
dot1x - Unauthenticated, 798s ago
mac-auth - Authenticated, 888s ago
Authorization Details
-----
Role   : RADIUS_2801090107
Status : Applied
Role Information:
Name   : RADIUS_2801090107
Type   : radius
-----
Reauthentication Period           : 600 secs
Cached Reauthentication Period    :
Authentication Mode               :
Session Timeout                   :
Client Inactivity Timeout         :
Description                       :
Gateway Zone                     :
UBT Gateway Role                  :
UBT Gateway Clearpass Role        :
Access VLAN                      :
Native VLAN                      :
Allowed Trunk VLANs               :
Access VLAN Name                  :
Native VLAN Name                  :
Allowed Trunk VLAN Names          :
VLAN Group Name                   : test_group
MTU                               :
QOS Trust Mode                    :
STP Administrative Edge Port      :
PoE Priority                       :
Captive Portal Profile            :
Policy                           :
```

```
GBP
switch#
```

```
:
```

Showing detailed information for clients on a particular interface:

```
switch# show port-access clients interface 1/1/7-1/1/8 detail
Port Access Client Status Details:
-----

RADIUS overridden user roles are suffixed with '*'

Client 2c:41:38:7f:35:b9, John Doe
=====
Session Details
-----
Port          : 1/1/7
Session Time  : 203s
IPv4 Address  : 10.10.10.10
IPv6 Address  :

Authentication Details
-----
Status          : mac-auth Authenticated
Auth Precedence : dot1x - Unauthenticated, mac-auth - Authenticated
Auth History    : mac-auth - Authenticated, 5s ago
dot1x          : Unauthenticated, Server-Reject, 10s ago

Authorization Details
-----
Status : Applied

RADIUS Attributes
-----
User-Name                : Student
Filter-ID                : DHCP, WebServices-Student, DataCenter-Student,
RemoteAccess-Student, Printer-Student
Framed-MTU               : 1500 bytes
Session-Timeout          : 500 seconds
Idle-Timeout             : 200 seconds
Termination-Action       : RADIUS-Request
Egress-VLAN-ID           : 10(t), 15(t), 20(u)
Egress-VLAN-Name         : VLAN100(t), VLAN200(u)
Tunnel-Type              : 13
Tunnel-Medium-Type       : 6
Tunnel-Private-Group-ID  : 20
NAS-Filter-Rule           : permit in 17 from any to any
deny in tcp from any to 10.10.10.3/8
Aruba-Captive-Portal-URL  : http://arubanetworks.com/student/captiveportal.php
Aruba-PoE-Priority       : Low
Aruba-Port-Auth-Mode      : client-mode
Aruba-NAS-Filter-Rule     : deny in icmp from 10.10.10.1 to any 27
Aruba-QoS-Trust-Mode     : dscp
Aruba-UBT-Gateway-Role   : gateway_student_role
Aruba-Gateway-Zone        : student_zone
Aruba-STP-Admin-Edge-Port : false
Aruba-UBT-Gateway-CPPM-Role : ubt_gateway_cppm_student_role
Aruba-Device-Traffic-Class : data
Aruba-PVLAN-Port-Type    : secondary
RADIUS Role Name : RADIUS_115315236
```

Showing information for a particular client MAC address:

```
switch# show port-access clients mac 2c:41:38:7f:35:c8 detail
Port Access Client Status Detail
-----
RADIUS overridden user roles are suffixed with '*'
Client 2c:41:38:7f:35:c8, John Doe
=====

Session Details
-----
Port           : 1/1/8
Session Time   : 33s
IPv4 Address   :
IPv6 Address   :

VLAN Details
-----
VLAN Group Name :
VLANs Assigned  : 10,20,30
Access          :
Native Untagged : 10
Alllowed Trunk  : 20,30

Authentication Details
-----
Status          : mac-auth Authenticated
Auth Precedence : dot1x - Unauthenticated, mac-auth - Authenticated
Auth History    : mac-auth - Authenticated, 5s ago
dot1x           - Unauthenticated, Server-Timeout, 10s ago

Authorization Details
-----
Role            : student
Status          : Applied
Role Information:
-----
Name           : student
Type           : local
-----
Reauthentication Period      : 333 secs
Authentication Mode          : device
Native VLAN                  : 10
Allowed Trunk VLANs          : 20,30
PoE Allocation method        : usage
PoE Priority                  : low
Captive Portal Profile       : testcpprof_29451201
Policy                     : PERMIT-ALL_87364653

Captive Portal Profile Configuration:
-----
Name                       : testcpprof_29451201
Type                       : local
URL                        : http://google.com
URL Hash Key               : SWNGWyMeYubHPDgVIirpEUwNK5Uf+r1vmhBIncQPw1Y=

Access Policy Details:
-----
```

```

Policy Name      : PERMIT-ALL_87364653
Policy Type      : Local
Policy Status    : Applied
Base Policy      : N/A
ACL Names        : N/A
SEQUENCE        CLASS                                TYPE ACTION
-----
10               dns                                ipv4 permit
20               dhcp                                ipv4 permit

```

Class Details:

```

-----
class ip dns
10 match tcp any any
class ip dhcp
20 match any any any

```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---|
| 10.12 | The following changes were introduced: <ul style="list-style-type: none"> Command output modified to display RADIUS attributes for clients not using local, downloaded or RADIUS overridden role. Command output modified to display Base Policy and ACL Names. |
| 10.11 | Command introduced on the 8325 |
| 10.11 | Command introduced on the 10000 |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|-----------------------------|--|
| 8325
8325H
8325P
10000 | Operator (>) or Manager (#) | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

show port-access clients onboarding-method

```
show port-access clients onboarding-method <METHOD>
```

Description

Shows active port access client information for the specified onboarding method.

| Parameter | Description |
|-----------|---|
| <METHOD> | Selects the onboarding method. Available methods: device-profile, dot1x, mac-auth, port-security . |

Examples

Showing information for clients onboarded using MAC authentication.

```
switch# show port-access clients onboarding-method mac-auth

Port Access Clients

Status codes: device-mode

-----
-      Port      MAC-Address      Onboarding      Status      Role
-      -      -      -      -      -
-      1/1/6      00:50:56:bd:50:43  mac-auth      Success      auth-role, auth
-      1/1/212    00:60:56:bd:50:43  mac-auth      Success      fallback-role,
fallback
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---------------------------------|
| 10.11 | Command introduced on the 8325 |
| 10.11 | Command introduced on the 10000 |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|-----------------------------|--|
| 8325
8325H
8325P
10000 | Operator (>) or Manager (#) | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

Port access debugging and troubleshooting

Debugging and troubleshooting Information for RADIUS, MAC authentication, and 802.1X authentication is provided as follows:

- [Radius server reachability debugging and troubleshooting](#)
- [Port access MAC authentication debugging and troubleshooting](#)
- [Port access 802.1X authentication debugging and troubleshooting](#)

Radius server reachability debugging and troubleshooting

Ensure that a valid RADIUS server is correctly identified to the switch and that the RADIUS server is reachable in the network.

Command **radius-server host** is used to identify the RADIUS server to the switch.

The following command sequences show how the RADIUS server is identified to the switch (using command **radius-server host**) and then ping is used to confirm that the RADIUS server is reachable from the switch. Also, RADIUS server information is displayed with related show commands.

```
switch-4# show running-config | in radi
radius-server host cec-cp.ectme.net key ciphertext AQBapdAz4irj...BQAAADY26liu
  tracking enable tracking-mode dead-only clearpass-username cecdur
  clearpass-password ciphertext AQBapXi8CEcB...BgAAAPMfbjuQtw==
radius dyn-authorization enable
ip source-interface radius 192.168.2.4
ipv6 source-interface radius fd00:4:1::b
switch-4#

switch-4# ping cec-cp.ectme.net
PING cec-cp.ectme.net (192.168.8.50) 100(128) bytes of data.
108 bytes from 192.168.8.50: icmp_seq=1 ttl=62 time=0.314 ms
108 bytes from 192.168.8.50: icmp_seq=2 ttl=62 time=0.331 ms
108 bytes from 192.168.8.50: icmp_seq=3 ttl=62 time=0.355 ms
108 bytes from 192.168.8.50: icmp_seq=4 ttl=62 time=0.424 ms
108 bytes from 192.168.8.50: icmp_seq=5 ttl=62 time=0.341 ms

--- cec-cp.ectme.net ping statistics ---
5 packets transmitted, 5 received, 0% packet loss, time 4098ms
rtt min/avg/max/mdev = 0.314/0.353/0.424/0.037 ms

switch-4#
switch-4# show radius-server
Unreachable servers are preceded by *
***** Global RADIUS Configuration *****
Shared-Secret: None
Timeout: 5
Auth-Type: pap
Retries: 1
TLS Timeout: 5
Tracking Time Interval (seconds): 300
Tracking Retries: 1
Tracking User-name: radius-tracking-user
Tracking Password: None
Number of Servers: 1
-----
SERVER NAME | TLS | PORT | VRF
```

```

-----
*cec-cp.ectme.net                               |           | 1812 | default
-----

switch-4# show radius-server detail
***** Global RADIUS Configuration *****

Shared-Secret: None
Timeout: 5
Auth-Type: pap
Retries: 1
TLS Timeout: 5
Tracking Time Interval (seconds): 300
Tracking Retries: 1
Tracking User-name: radius-tracking-user
Tracking Password: None
Number of Servers: 1
***** RADIUS Server Information *****
Server-Name           : cec-cp.ectme.net
Auth-Port             : 1812
Accounting-Port       : 1813
VRF                   : default
TLS Enabled           : No
Shared-Secret         : AQBapdAz4irjSK6lZg/CFArsNYWKbn1LObqDD/v9SH1eMQ6DY26liu
Timeout               : 5
Retries               : 1
Auth-Type             : pap
Server-Group          : radius
Default-Priority      : 1
ClearPass-Username    : cecdur
ClearPass-Password    : AQBapXi8CEcBRKUSLT70WhU6oy+ULtKCc6j9oNBgAAAPMfbjuQtw==
Tracking              : enabled
Tracking-Mode         : dead-only
Reachability-Status   : unreachable, Since Sun Oct 03 23:09:26 PDT 2021
Tracking-Last-Attempted : Sun Oct 03 23:09:16 PDT 2021
Next-Tracking-Request : 234 seconds

```

Port access MAC authentication debugging and troubleshooting

Using show commands

Use command **show aaa authentication port-access mac-auth interface all client-status** to help debug the client/server failure reason.

Example 1: Server timeout (typically caused when RADIUS server becomes unreachable):

```

switch# show aaa authentication port-access mac-auth interface all client-status

Port Access Client Status Details

Client  AB:CD:DE:FF:AA:BB, 1/1/1
=====
Authentication Details
-----
Status           : Unauthenticated
Auth-Method      : CHAP
Auth Failure reason : Server-Timeout
Time Since Last State Change : 200 secs

```

...

Example 2: Server reject (typically caused by invalid user credentials):

```
switch# show aaa authentication port-access mac-auth interface all client-status

Port Access Client Status Details

Client  AB:CD:DE:FF:AA:BB, 1/1/1
=====
Authentication Details
-----
Status                : Unauthenticated
Auth-Method            : CHAP
Auth Failure reason    : Server-reject
Time Since Last State Change : 30 secs
...
```

Example 3: Held (caused by a user authentication attempt made sooner than allowed after an earlier failed authentication attempt):

```
switch# show aaa authentication port-access mac-auth interface all client-status

Port Access Client Status Details

Client  AB:CD:DE:FF:AA:BB, 1/1/1
=====
Authentication Details
-----
Status                : Unauthenticated
Auth-Method            : CHAP
Auth Failure reason    : Held
Time Since Last State Change : 30 secs
...
```

Using debug commands

The following command sequences illustrate how the debug command can be used to help debug port access MAC authentication:

```
# debug portaccess macauth all
mac      MAC address to filter debug logs
port     PORT name to filter debug logs
severity Minimum log severity to filter debug logs
<cr>
```

Step 1:

```
switch(config-macauth)# 2020-08-02T06:00:05.356+00:00 port-accesssd[3250]:
debug|LOG_DEBUG|MSTR|1|PORTACCESS|PORTACCESS_MACAUTH_CONFIG|logID=8378 Posting
event 'MAC-Auth Global Enable' to '15'
2020-08-02T06:00:05.356+00:00 port-accesssd[3250]: debug|LOG_
DEBUG|MSTR|1|PORTACCESS|PORTACCESS_MACAUTH_CONFIG|logID=8378 Creating event 'MAC-
Auth Global Enable' for port '(null)'
2020-08-02T06:00:05.356+00:00 port-accesssd[3250]: debug|LOG_
```

```

DEBUG|MSTR|1|PORTACCESS|PORTACCESS_MACAUTH_CONFIG|logID=8378 Posting event 'MAC-Auth Global Enable' to '16'
2020-08-02T06:00:05.356+00:00 port-accesssd[3250]: debug|LOG_
DEBUG|MSTR|1|PORTACCESS|PORTACCESS_MACAUTH_PROTOCOL|logID=8379 logID=8379 Handling
event 'MAC-Auth Global Enable' in state 'DISABLED'
2020-08-02T06:00:05.357+00:00 port-accesssd[3250]: debug|LOG_
DEBUG|MSTR|1|PORTACCESS|PORTACCESS_MACAUTH_PROTOCOL|logID=8379 logID=8379 macauth
SM State transition [DISABLED] -> [ENABLED] for object with key 'null'

```

Step 2:

```

switch(config-macauth)# addr-format multi-colon
switch(config-macauth)# 2020-08-02T06:00:39.986+00:00 port-accesssd[3250]:
debug|LOG_DEBUG|MSTR|1|PORTACCESS|PORTACCESS_MACAUTH_CONFIG|logID=8416 Posting
event 'MAC-Auth Address Format Change' to '15'
2020-08-02T06:00:39.986+00:00 port-accesssd[3250]: debug|LOG_
DEBUG|MSTR|1|PORTACCESS|PORTACCESS_MACAUTH_PROTOCOL|logID=8417 logID=8417 Handling
event 'MAC-Auth Address Format Change' in state 'ENABLED'

```

Step 3:

```

switch(config)# interface 1/1/2
switch(config-if)# aaa authentication port-access mac-auth
switch(config-if-macauth)# enable
switch(config-if-macauth)# 2020-08-02T06:01:26.918+00:00 port-accesssd[3250]:
debug|LOG_DEBUG|MSTR|1|PORTACCESS|PORTACCESS_MACAUTH_CONFIG|logID=8464 Posting
event 'MAC-Auth Enabled on Port' to '16'
2020-08-02T06:01:26.918+00:00 port-accesssd[3250]: debug|LOG_
DEBUG|MSTR|1|PORTACCESS|PORTACCESS_MACAUTH_PROTOCOL|logID=8465 logID=8465 Handling
event 'MAC-Auth Enabled on Port' for MACAuthPort '1/1/2' in state 'NULL'
2020-08-02T06:01:26.919+00:00 port-accesssd[3250]: debug|LOG_
DEBUG|MSTR|1|PORTACCESS|PORTACCESS_MACAUTH_PROTOCOL|logID=8465 logID=8465
macauthport SM State transition [INITIALIZED] -> [UP] for object with key '1/1/2'
2020-08-02T06:01:26.919+00:00 port-accesssd[3250]: debug|LOG_
DEBUG|MSTR|1|PORTACCESS|PORTACCESS_MACAUTH_PROTOCOL|logID=8465 logID=8465
switch(config)# interface 1/1/2
switch(config-if)# aaa authentication port-access mac-auth
switch(config-if-macauth)# enable
switch(config-if-macauth)# 2020-08-02T06:01:26.918+00:00 port-accesssd[3250]:
debug|LOG_DEBUG|MSTR|1|PORTACCESS|PORTACCESS_MACAUTH_CONFIG|logID=8464 Posting
event 'MAC-Auth Enabled on Port' to '16'
2020-08-02T06:01:26.918+00:00 port-accesssd[3250]: debug|LOG_
DEBUG|MSTR|1|PORTACCESS|PORTACCESS_MACAUTH_PROTOCOL|logID=8465 logID=8465 Handling
event 'MAC-Auth Enabled on Port' for MACAuthPort '1/1/2' in state 'NULL'
2020-08-02T06:01:26.919+00:00 port-accesssd[3250]: debug|LOG_
DEBUG|MSTR|1|PORTACCESS|PORTACCESS_MACAUTH_PROTOCOL|logID=8465 logID=8465
macauthport SM State transition [INITIALIZED] -> [UP] for object with key '1/1/2'
2020-08-02T06:01:26.919+00:00 port-accesssd[3250]: debug|LOG_
DEBUG|MSTR|1|PORTACCESS|PORTACCESS_MACAUTH_PROTOCOL|logID=8465 logID=8465 Event
handler of MACAuthPort '1/1/2' for event 'MAC-Auth Enabled on Port' in state
'NULL' returned 'OK'

```

Port access 802.1X authentication debugging and troubleshooting

Using show commands

Use command **show aaa authentication port-access dot1x authenticator interface all client-status** to help debug the client/server failure reason.

Example 1: Server timeout (typically caused when RADIUS server becomes unreachable):

```
switch# show aaa authentication port-access dot1x authenticator interface all
client-status

Client  FE:04:D7:50:89:37, userxx1, 1/1/1
=====

Authentication Details
-----
      Status                        : Unauthenticated
      Type                          : Pass-Through
      EAP-Method                    : MD5

      Auth Failure reason           : Server-Timeout
      Time Since Last State Change  : 200s

Authentication Statistics
-----
      Authentication                : 0
      Authentication Timeout         : 205
      EAP-Start While Authenticating : 0
      EAP-Logoff While Authenticating : 0
      Successful Authentication      : 0
      Failed Authentication          : 1
      Re-Authentication              : 0
      Successful Re-Authentication   : 0
      Failed Re-Authentication       : 0
      EAP-Start When Authenticated   : 0
      EAP-Logoff When Authenticated  : 0
      Re-Auths When Authenticated    : 0
      Cached Re-Authentication       : 0
      ...
```

Example 2: Server reject (typically caused by invalid user credentials):

```
switch# show aaa authentication port-access dot1x authenticator interface all
client-status

Client  FE:04:D7:50:89:37, userxx1, 1/1/1
=====

      Status                        : Unauthenticated
      Type                          : Pass-Through
      EAP-Method                    : MD5
      Auth Failure reason           : Server-reject
      Time Since Last State Change  : 30s

Authentication Statistics
-----
      Authentication                : 0
      Authentication Timeout         : 33
      EAP-Start While Authenticating : 0
      EAP-Logoff While Authenticating : 0
      Successful Authentication      : 0
      Failed Authentication          : 1
      Re-Authentication              : 0
      Successful Re-Authentication   : 0
      Failed Re-Authentication       : 0
      EAP-Start When Authenticated   : 0
      EAP-Logoff When Authenticated  : 0
```

```

Re-Auths When Authenticated      : 0
Cached Re-Authentication        : 0
...

Client  FE:04:D7:50:89:37, userxx1, 1/1/1
=====

Status          : Unauthenticated
Type            : Pass-Through
EAP-Method      : MD5
Auth Failure reason : Server-reject
Time Since Last State Change : 30s

Authentication Statistics
-----
Authentication          : 0
Authentication Timeout  : 33
EAP-Start While Authenticating : 0
EAP-Logoff While Authenticating : 0
Successful Authentication : 0
Failed Authentication    : 1
Re-Authentication       : 0
Successful Re-Authentication : 0
Failed Re-Authentication : 0
EAP-Start When Authenticated : 0
EAP-Logoff When Authenticated : 0
Re-Auths When Authenticated : 0
Cached Re-Authentication : 0
...

```

Example 3: Supplicant timeout (typically occurs when supplicant stops responding):

```

switch# show aaa authentication port-access dot1x authenticator interface all
client-status

Client  FE:04:D7:50:89:37, userxx1, 1/1/1
=====

Status          : Unauthenticated
Type            : Pass-Through
EAP-Method      : MD5
Auth Failure reason : Supplicant-Timeout
Time Since Last State Change : 576s

Authentication Statistics
-----
Authentication          : 631
Authentication Timeout  : 631
EAP-Start While Authenticating : 0
EAP-Logoff While Authenticating : 0
Successful Authentication : 0
Failed Authentication    : 0
Re-Authentication       : 0
Successful Re-Authentication : 0
Failed Re-Authentication : 0
EAP-Start When Authenticated : 0
EAP-Logoff When Authenticated : 0
Re-Auths When Authenticated : 0
Cached Re-Authentication : 0
...

```

Show the EAP handshake statistics:

```

switch# show aaa authentication port-access dot1x authenticator interface all
port-statistics

Port 1/1/1
=====

Authentication Details
-----
Number of Clients : 2
Number of Authenticated Clients : 1
Number of Unauthenticated Clients : 1
Number of authenticating clients : 0

Authentication Statistics
-----
EAPOL Frames Received : 25033
EAPOL Frames Transmitted : 36305
EAPOL Start Frames Received : 6012
EAPOL Logoff Frames Received : 0
EAPOL Response ID Frames Received : 18258
EAPOL Response Frames Received : 763
EAPOL Request ID Frames Transmitted : 34408
EAPOL Request Frames Transmitted : 1137
EAPOL Invalid Frames Received : 0
EAPOL EAP Length Error Frames Received : 0
EAPOL Last Received Frame Version : 0
EAPOL Last Received Frame Client MAC : 0
...

```

Using other commands

The **debug portaccess dot1x** command:

```

# debug portaccess dot1x
all      Enable all debug modules
config   Enable 802.1X configuration handling logs
packet   Enable 802.1X packet handling logs
protocol Enable 802.1X protocol handling logs
radius   Enable 802.1X RADIUS request/response logs

```

The **show tech dot1x** and **show events -e|in port-accessd** commands are also available.

Port access FAQ

1. What 802.1X (dot1x) version is supported?

AOS-CX switches support the 2010 version of 802.1X.

2. What is port access authentication mode client mode?

In client mode, all clients connecting to the port are sent for authentication.

The maximum number of clients allowed to connect to the port is limited by the client limit value configured with the **aaa authentication port-access client-limit** command.

3. What is port access authentication mode device mode?

In device mode, only the first client connecting to the port is sent for authentication. Once this client is authenticated, the port is considered as open and all subsequent clients trying to connect on that port are not sent for authentication.

4. What is default authentication precedence?

The default authentication precedence is 802.1X authentication then MAC authentication. This can be configured differently.

5. What special port access roles are supported?

AOS-CX switches support the following special port access roles:

- Critical role: the role that is applied when the RADIUS server is unreachable for authentication.
- Preauth role: the role that is applied when authentication is still in progress.
- Reject role: the role that is applied when authentication has failed.
- Auth role: the role that is applied to authenticated clients when a specific role is not assigned in the RADIUS server.

6. How do I log off specific interface clients?

Use command **port-access log-off client interface** to log-off any specific interface or all clients.

References

- [AOS-CX Switch Simulator](#)

Port access security violation

A security violation state of a port indicates whether the port is in a state where its client limit has been violated. This state is reset in one of the following ways:

- When the port is shutdown administratively.
- When the port security or authentication method is disabled on the port.
- When the port comes up automatically because of auto recovery.
- When violation action configuration is changed on the port.

Port access security violation commands

port-access security violation action

```
port-access security violation action {notify | shutdown}  
no port-access security violation action
```

Description

Configures the action that the switch must take whenever a security violation occurs at a port, such as the number of clients exceeding the configured client limit.

The **no** form of the command resets the action to the default action, notify.

| Parameter | Description |
|-----------|---|
| notify | Specifies that the switch notifies any security violation as an event |

| Parameter | Description |
|-----------|--|
| | <p>or log in the syslog server, and also sends an SNMP trap notification. This action is the default.</p> <p>The format of the event log that is generated for notifying the security violation is:</p> <p>Client limit exceeded on port <PORT>, caused by an unauthenticated client <MAC-ADDRESS>.</p> |
| shutdown | <p>Specifies that the switch shuts down the port where the client limit has exceeded.</p> <p>A port that is shut down can be configured to auto-recover after a recovery period that can be configured with the port-access security violation action shutdown auto-recovery and port-access security violation action shutdown recovery-timer commands.</p> |

Examples

Configuring the shutdown security violation action for interface 1/1/1:

```
switch(config)# interface 1/1/1
switch(config-if)# port-access security violation action shutdown
```

Resetting the security violation action to the default value:

```
switch(config-if)# no port-access security violation action
```

Configuring the shutdown security violation action for a LAG port:

```
switch(config)# interface lag 1
switch(config-lag-if)# port-access security violation action shutdown
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---------------------------------|
| 10.11 | Command introduced on the 8325 |
| 10.11 | Command introduced on the 10000 |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|-----------------|--|
| 8325
8325H
8325P
10000 | config-if | Administrators or local user group members with execution rights for this command. |

port-access security violation action shutdown auto-recovery

```
port-access security violation action shutdown auto-recovery {enable | disable}  
no port-access security violation action shutdown auto-recovery {enable | disable}
```

Description

Configures auto-recovery of the port when the security violation action is configured as shutdown.

This configuration allows the port, that is shut down when a security violation occurs, to be automatically enabled after the recovery timer expires.

The **no** form of the command resets auto-recovery to the default, disable.

| Parameter | Description |
|-----------|--|
| enable | Enables auto-recovery of port when the security violation action is configured as shutdown. |
| disable | Disables auto-recovery of port when the security violation action is configured as shutdown. |

Examples

Enabling auto-recovery of port:

```
switch(config-if) # port-access security violation action shutdown auto-recovery  
enable
```

Disabling auto-recovery of port:

```
switch(config-if) # no port-access security violation action shutdown auto-recovery
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---------------------------------|
| 10.11 | Command introduced on the 8325 |
| 10.11 | Command introduced on the 10000 |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|-----------------|--|
| 8325
8325H
8325P
10000 | config-if | Administrators or local user group members with execution rights for this command. |

port-access security violation action shutdown recovery-timer

```
port-access security violation action shutdown recovery-timer <RECOVERY-TIME>
```

```
no port-access security violation action shutdown recovery-timer
```

Description

Configures security violation recovery timer for the port when the security violation action is configured as shutdown.

The **no** form of the command resets the shutdown recovery timer to the default, 10.

| Parameter | Description |
|------------------------------------|--|
| <code><RECOVERY-TIME></code> | Specifies the recovery timer (in seconds) after which the port, which is shut down because of security violation, is automatically enabled. Default: 10. Range: 10 to 600. |

Examples

Configuring the shutdown recovery-timer on a port:

```
switch(config-if)# port-access security violation action shutdown recovery-timer 60
```

Resetting the shutdown recovery-timer to the default value:

```
switch(config-if)# no port-access security violation action shutdown recovery-timer
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---------------------------------|
| 10.11 | Command introduced on the 8325 |
| 10.11 | Command introduced on the 10000 |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|-----------------|--|
| 8325
8325H
8325P
10000 | config-if | Administrators or local user group members with execution rights for this command. |

show interface (security violation)

```
show interface <INTERFACE-NAME>
```

Description

Displays active configurations and operational status information for interfaces including the reason for the port shutdown because of a security violation at the port.

| Parameter | Description |
|------------------|-------------------------------|
| <INTERFACE-NAME> | Specifies the interface name. |

Examples

The following example shows the status of the interface when it is shutdown because of security violation:

```
switch# show interface 3/1/35

Interface 3/1/25 is down
Admin state is up
State information: Disabled by port-access
Link state: down for 53 minutes (since Tue Jun 01 01:27:28 UTC 2021)
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---------------------------------|
| 10.11 | Command introduced on the 8325 |
| 10.11 | Command introduced on the 10000 |

Command Information

| Platforms | Command context | Authority |
|---------------|-----------------------------|--|
| All platforms | Operator (>) or Manager (#) | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

show port-access aaa violation interface

```
show port-access aaa violation interface {all|<INTERFACE>}
```

Description

Shows information about violations that have occurred and the count of violations for port access authentication methods at the interfaces.

| Parameter | Description |
|-------------|--|
| all | Specifies all interfaces. |
| <INTERFACE> | Specifies the interface name or a comma-separated list of interfaces, or a hyphen-separated interface range. |

Examples

Showing information for violations for all interfaces:

```
switch# show port-access aaa violation interface all
```

Client limit exceeded violation status

| Port | Violation | Violation-Count |
|-------|-----------|-----------------|
| 1/1/1 | No | 0 |
| 1/1/2 | Yes | 10 |
| 1/1/5 | No | 10 |

Showing information for violations on interfaces 1/1/1 to 1/1/2:

```
switch# show port-access aaa violation interface 1/1/1-1/1/2
```

Client limit exceeded violation status

| Port | Violation | Violation-Count |
|-------|-----------|-----------------|
| 1/1/1 | No | 0 |
| 1/1/2 | Yes | 10 |

Showing information when no violation action is configured:

```
switch# show port-access aaa violation interface 1/1/1
```

Port-access aaa violation is not configured



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---------------------------------|
| 10.11 | Command introduced on the 8325 |
| 10.11 | Command introduced on the 10000 |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|-----------------------------|--|
| 8325
8325H
8325P
10000 | Operator (>) or Manager (#) | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

show port-access port-security violation client-limit-exceeded interface

```
show port-access port-security violation client-limit-exceeded interface  
{all|<INTERFACE>}
```

Description

Shows information on the number of client-limit-exceeded security violations that have occurred. The output can be filtered by interface.

| Parameter | Description |
|-------------|--|
| all | Specifies all interfaces. |
| <INTERFACE> | Specifies the interface name or a comma-separated list of interfaces, or a hyphen-separated interface range. |

Examples

Showing information for all ports:

```
switch# show port-access port-security violation client-limit-exceeded interface
all

Client limit exceeded violation status

-----
Port          Violation      Violation-Count
-----
1/1/1         No             0
1/1/2         Yes            10
1/1/5         No             10
```

Showing information for a port range:

```
switch# show port-access port-security violation client-limit-exceeded interface
1/1/1-1/1/2

Client limit exceeded violation status

-----
Port          Violation      Violation-Count
-----
1/1/1         No             0
1/1/2         Yes            10
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---------------------------------|
| 10.11 | Command introduced on the 8325 |
| 10.11 | Command introduced on the 10000 |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|-----------------------------|--|
| 8325
8325H
8325P
10000 | Operator (>) or Manager (#) | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

Port access policy

Port access policy allows network administrators to define a set of rules. These rules are used to restrict or alter the passage of traffic for clients onboarding to a switch that has port security (802.1X, MAC authentication) enabled.

Unlike classifier policies, which are associated with individual front plane port, Link Aggregation Group (LAG), and VLAN or tunnel interface, port-access policies are associated with roles. Based on the role associated with a user after authentication, the policy is applied to the user.

The switch can obtain policies from any of the following sources:

- **Local:** Policies configured locally on the switch.
- **RADIUS:** Policies configured using the NAS-Filter-Rule or Aruba-NAS-Filter-Rule RADIUS attributes.



Both local and downloaded type of policies do not have any standards associated with them. Policies that are obtained from the RADIUS server must support all criteria that can be defined using the **NAS-Filter-Rule** attribute.

Classes and actions supported by port access policies

Port access policies support IPv4- and IPv6-based classes, and the following actions.

- **cir:** Set the bandwidth limit for guaranteed traffic.
- **drop:** Drop the packet.
- **dscp:** Remark the 6-bit field in the IP header for packet classification.
- **ip-precedence:** Remark the 3-bit field in the IP header which denotes the priority of the datagram.
- **local-priority:** Change the internal priority that is used to queue the packets for transmission.

RADIUS policies

A RADIUS policy is a port-access policy derived from the combination of the following RADIUS attributes for a client:

- Filter-ID (IETF attribute, Type=11)
- NAS-Filter-Rule (IETF attribute, Type=92)
- Aruba-NAS-Filter-Rule (Aruba VSA, Type=51)

The name of a RADIUS policy is prefixed with RADIUS_. Clients with identical values for these attributes will share the same RADIUS policy on the system. A RADIUS policy cannot be modified by an administrator and is deleted when the last client referring the policy is removed from the system (or switches to a different policy).



The **Base Policy** in **show port-access policy** is the policy associated with the base role that is RADIUS overridden. For non-RADIUS type policies and policies derived from RADIUS attributes (Filter-ID/[Aruba-]NAS-Filter-Rule), N/A (Not Applicable) is shown against the **Base Policy**.



For RADIUS policies derived from the Filter-ID attribute the name associated with each Filter-ID (ACL names) is shown against ACL names. For non-RADIUS policies and policies derived from [Aruba-]NAS-Filter-Rule attribute, an N/A (Not Applicable) is shown against ACL names.

Filter-ID

The Filter-ID attribute is used to apply an existing ACL on the system to a client. Only ACLs of type IPv4 and IPv6 are supported. MAC type ACLs are not supported.

ACLs that match on any of the following fields are not supported:

- Source/destination MAC
- Ether-type
- PCP
- VLAN
- Source/destination IP group
- Source/destination L4 port group

The set of Filter-IDs passed for a client is translated to a RADIUS policy by the system and applied to the client using the ACL definition at that point in time. A change in the ACL after the RADIUS policy is applied will not take affect. The filter-ID attribute can't co-exist with NAS-Filter-Rule or Aruba-NAS-Filter-Rule.

NAS-Filter-Rule

The syntax followed for NAS-Filter-Rule is according to RFC 3588 section 4.3. The syntax is as follows:

action dir proto from src to dst [options]

The keywords supported for each field of a NAS-Filter-Rule are:

- action - (permit|deny)
- dir - in
- proto - (icmp|igmp|tcp|udp|sctp|ah|esp|gre|ospf|pim|ip) and IP protocols from 0 to 255
- src and dst - Both IPV4 and IPV6 address are supported with an optional mask. The keyword "any" is also supported. The L4 port range is supported which is an optional field (0 to 65535). Currently only consecutive port ranges are supported.
- Options:
 - frag
 - ipoptions (ssrr|lsrr|rr|ts) - Not supported.
 - tcptoptions (mss|window|sack|ts|cc) - Not supported.
 - established - This will work only with TCP packets.
 - setup - Not supported.
 - tcpflags (fin|syn|rst|psh|ack|urg) - Only supported with TCP packets. The comma is used to provide more than one TCP flag.

- icmp types (0|3|4|5|8|9|10|11|12|13|14|15|16|17|18|echo reply|destination unreachable|source quench|redirect|echo request|router advertisement|router solicitation|time-to-live exceeded|ip header bad|timestamp request|timestamp reply|information request|information reply|address mask request|address mask reply) - This will work only with the ICMP packets. The comma is used to provide more than one ICMP type.

These options can be used in any order after the **dst** field of the NAS-Filter-Rule. All of these keywords are case-sensitive.

Examples

- NAS-Filter-Rule = "permit in 10 from any to any"
- NAS-Filter-Rule = "permit in udp from any 10-100 to 192.10.10.1/24"
- NAS-Filter-Rule = "deny in icmp from 10.10.10.1 to any 27"
- NAS-Filter-Rule = "permit in pim from 10.10.10.1/8 1000 to 192.10.10.1/24 23000"
- NAS-Filter-Rule = "deny in tcp from any 10 to 10.0.10.10 tcpflags ack,fin,rst frag established"
- NAS-Filter-Rule = "permit in icmp from 10.10.10.1 to any 27 icmp types 0, redirect"
- NAS-Filter-Rule = "deny in tcp from any 50000-55000 to fe80::d1:1/120 65055-65535"
- NAS-Filter-Rule = "permit in udp from any 7,9,17-50,65530-65535 to 40.40.40.3"
- NAS-Filter-Rule = "permit in udp from any to 40.40.40.10 41-58,59,180-224"
- NAS-Filter-Rule = "permit in udp from any 11,13,20-23 to 40.40.40.100 38,39,41-43"

Aruba-NAS-Filter-Rule

The syntax for Aruba-NAS-Filter-Rule is similar to NAS-Filter-Rule with the following extensions:

- cp-redirect - A new action to redirect packets matching the rule to the captive-portal service.
- cnt - Track hit counts for the entry.
- v4/v6 - Create an IPv4 (for v4) or IPv6 (for v6) only entry for a filter rule. When both source and destination IP addresses are wildcarded, hardware entries are created for both IPv4 and IPv6 classes. Use this option to restrict the switch to only create hardware entries for the specific IP type and save space in the hardware.

Aruba-NAS-Filter-Rule VSA can co-exist with the NAS-Filter-Rule. The system will combine entries across both the attributes and create a single RADIUS policy.

Examples

- Aruba-NAS-Filter-Rule = "cp-redirect in 10 from any to any"
- Aruba-NAS-Filter-Rule = "permit in sctp from 10.0.0.1 to 10.0.0.4"
- Aruba-NAS-Filter-Rule = "permit in icmp from any to any cnt"
- Aruba-NAS-Filter-Rule = "permit in tcp from any to any v4"
- Aruba-NAS-Filter-Rule = "permit in sctp from any to any v6"



A single IPv4 rule consumes 2 hardware entries while a single IPv6 rule consumes 4 hardware entries. If an IPv4-only rule is configured, 4 hardware entries otherwise used to match IPv6 frames are saved. Similarly if an IPv6-only rule is configured, 2 hardware entries otherwise used to match IPv4 frames are saved.

ICMP support with reflexive policy

ICMP is not a session based protocol. To enable reflexive policy support for ICMP, IP flows must be created for ICMP.

If a rule is configured as **icmp any any relexive** or **ip any any reflexive**, ping from client to server works. However, in cases of ICMP error responses for a TCP session would get dropped if the client has not initiated ICMP request with server. To overcome such issues, use the following recommendations while configuring ICMP as reflexive:

Configure ICMP responses as a non-reflexive rule above reflexive rules that match ICMP.

Configure ICMP echo as reflexive.

Examples

The following are examples for recommendation 1:

```
icmp any any icmp-type 3 allow
icmp any any icmp-type 11 allow
icmp any any reflexive
```

or

```
icmp any any icmp-type 3 allow
icmp any any icmp-type 11 allow
ip any any reflexive
```

The following is an example for recommendation 2:

```
icmp any any icmp-type echo reflexive
icmp any any icmp-type 42 reflexive
Type 42 is associated with extended-echo.
```

Limitations

- If a downloaded role containing one or more unused classes or policies is downloaded again within 30 seconds then client authorization will fail. It is recommended to not have unused classes or policies in a downloaded role.
- When a port-access policy is updated while the port-access daemon is not running all the clients associated with the policy will be logged off when the daemon restarts.
- RADIUS policies can have up to 128 entries in a single class and up to 128 entries in the policy.
- The maximum number of NAS-Filter-Rule attributes in a single RADIUS Access-Accept frame is either the number of rules that can fit inside a single RADIUS packet (4KB) or 128, whichever is lower. RADIUS servers may truncate rules if the frame size goes beyond 4KB. If that occurs then the switch will mark those roles as Invalid and clients associated with those roles will be unauthorized on the switch.

Port access policy commands

port-access policy

```
port-access policy <POLICY-NAME>
[<SEQUENCE-NUMBER>]
```

```

class {ip|ipv6} <CLASS-NAME> action {<REMARK-ACTIONS> | <POLICE-ACTIONS> | <OTHER-
ACTIONS>}
comment <text>

```

Description

Creates or modifies a policy and policy entries. A policy is made up of one or more policy entries ordered and prioritized by sequence numbers. Each entry has an IPv4/IPv6 class and one or more policy actions associated with it.

A policy must be applied to a role using the **associate policy** command.

The **no** form of the command can be used to delete either a policy (use **no** with the policy command) or an individual policy entry (use **no** with the sequence number).

| Parameter | Description |
|------------------------------|---|
| <POLICY-NAME> | Specifies the policy name. |
| <SEQUENCE-NUMBER> | Specifies the policy entry sequence number. Range: 1 to 4294967295. |
| class {ip ipv6} <CLASS-NAME> | Specifies the class type and name. |
| <REMARK-ACTIONS> | <p>These remark actions are available:</p> <p>ip-precedence <IP-PRECEDENCE-VALUE>
 Specifies the numeric IP precedence value. Range: 0 to 7.</p> <p>dscp <DSCP-VALUE>
 Specifies a Differentiated Services Code Point (DSCP) value. Enter either a keyword or numeric value (0 to 63). See <i>DSCP keywords and corresponding values</i> below.</p> <p>pcp <PCP-VALUE>
 Specifies a pcp value.</p> <p>local-priority <LOCAL-PRIORITY-VALUE>
 Specifies a local priority value. Range: 0 to 7.</p> |
| <POLICE-ACTIONS> | <p>These police actions are available:</p> <p>cir kbps <RATE-KBPS>
 Specifies a Committed Information Rate (CIR) value in kbps. Range: 1 to 4294967295.</p> <p>cbs <BYTES>
 Specifies a Committed Burst Size (CBS) value in bytes. Range: 1 to 4294967295.</p> <p>exceed
 Specifies the action to take on packets that exceed the rate limit.</p> |
| <OTHER-ACTIONS> | <p>These other actions are available:</p> <p>drop
 Selects drop of all traffic.</p> <p>redirect
 Selects redirect of all traffic to a captive portal server.</p> |
| comment | Specifies a policy entry comment. |

DSCP keywords and corresponding values

| Keyword | Value | Description |
|---------|-------|---|
| AF11 | 10 | DSCP 10 (Assured Forwarding Class 1, low drop probability) |
| AF12 | 12 | DSCP 12 (Assured Forwarding Class 1, medium drop probability) |
| AF13 | 14 | DSCP 14 (Assured Forwarding Class 1, high drop probability) |
| AF21 | 18 | DSCP 18 (Assured Forwarding Class 2, low drop probability) |
| AF22 | 20 | DSCP 20 (Assured Forwarding Class 2, medium drop probability) |
| AF23 | 22 | DSCP 22 (Assured Forwarding Class 2, high drop probability) |
| AF31 | 26 | DSCP 26 (Assured Forwarding Class 3, low drop probability) |
| AF32 | 28 | DSCP 28 (Assured Forwarding Class 3, medium drop probability) |
| AF33 | 30 | DSCP 30 (Assured Forwarding Class 3, high drop probability) |
| AF41 | 34 | DSCP 34 (Assured Forwarding Class 4, low drop probability) |
| AF42 | 36 | DSCP 36 (Assured Forwarding Class 4, medium drop probability) |
| AF43 | 38 | DSCP 38 (Assured Forwarding Class 4, high drop probability) |
| CS0 | 0 | DSCP 0 (Class Selector 0: Default) |
| CS1 | 8 | DSCP 8 (Class Selector 1: Scavenger) |
| CS2 | 16 | DSCP 16 (Class Selector 2: OAM) |
| CS3 | 24 | DSCP 24 (Class Selector 3: Signaling) |
| CS4 | 32 | DSCP 32 (Class Selector 4: Real time) |
| CS5 | 40 | DSCP 40 (Class Selector 5: Broadcast video) |
| CS6 | 48 | DSCP 48 (Class Selector 6: Network control) |
| CS7 | 56 | DSCP 56 (Class Selector 7) |
| EF | 46 | DSCP 46 (Expedited Forwarding) |

Usage

- An applied policy processes the packet sequentially against policy and class entries in the list, until either the last policy entry in the list has been evaluated or the packet matches an entry. If there is no match, the packet will be dropped by one of the implicit **deny all** IPv4 and IPv6 entries.
- Entering an existing **<POLICY-NAME>** value will cause the existing policy to be modified, with any new **<SEQUENCE-NUMBER>** value creating an additional policy entry, and any existing **<SEQUENCE-NUMBER>** value replacing the existing policy entry with the same sequence number.

- If no sequence number is specified, a new policy entry will be appended to the end of the entry list with a sequence number equal to the highest policy entry currently in the list plus 10. The sequence numbers may be reordered with the **port-access policy <POLICY-NAME> resequence <STARTING-SEQ-NUM> <INCREMENT>** command.
- If a policy is configured without any action, the default action, **permit**, is applied for that policy.

Examples

Creating a policy with several class entries:

```
switch(config)# port-access policy POL1
switch(config-pa-policy)# 10 class ip dns
switch(config-pa-policy)# 20 class ip dhcp
switch(config-pa-policy)# 30 class ip test action cir kbps 1024 exceed drop
switch(config-pa-policy)# exit
switch(config)# show port-access policy POL1
```

Access Policy Details:
=====

| Policy Name | : POL1 | | |
|---------------|---------|-------|------------------------------------|
| Policy Type | : Local | | |
| Policy Status | : | | |
| SEQUENCE | CLASS | TYPE | ACTION |
| ----- | ----- | ----- | ----- |
| 10 | dns | ipv4 | permit |
| 20 | dhcp | ipv4 | permit |
| 30 | test | ipv4 | cir kbps 1024 cbs 2048 exceed drop |

Adding a comment to an existing class entry:

```
switch(config)# port-access policy POL1
switch(config-pa-policy)# 20 comment DHCP-PERMIT
switch(config-pa-policy)# exit
switch(config)# show run port-access policy POL1
```

```
port-access policy POL1
  10 class ip dns
  20 class ip dhcp
  20 comment DHCP-PERMIT
  30 class ip test action cir kbps 1024 cbs 2048 exceed drop
```

Removing a comment from an existing class entry:

```
switch(config)# port-access policy POL1
switch(config-pa-policy)# no 20 comment
switch(config-pa-policy)# exit
switch(config)# show run port-access policy POL1
```

```
port-access policy POL1
  10 class ip dns
  20 class ip dhcp
  30 class ip test action cir kbps 1024 cbs 2048 exceed drop
```

Modifying a policy by replacing one class with another at the same sequence number:

```

switch(config)# port-access policy POL1
switch(config-pa-policy)# 10 class ip mds action dscp af21
switch(config-pa-policy)# exit
switch(config)# show port-access policy POL1

Access Policy Details:
=====

Policy Name      : POL1
Policy Type      : Local
Policy Status    : Applied

SEQUENCE    CLASS                                TYPE ACTION
-----
10          mds                                ipv4 dscp AF21
20          dhcp                                ipv4 permit
30          test                                ipv4 cir kbps 1024 cbs 2048 exceed drop

```

Removing a class:

```

switch(config)# port-access policy POL1
switch(config-pa-policy)# no 10
switch(config-pa-policy)# exit
switch(config)# show port-access policy POL1

Access Policy Details:
=====

Policy Name      : POL1
Policy Type      : Local
Policy Status    : Applied

SEQUENCE    CLASS                                TYPE ACTION
-----
20          dhcp                                ipv4 permit
30          clearpass-web                        ipv4 cir kbps 1024 cbs 2048 exceed drop

```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|--|
| 10.13 | Added support for 8325 and 10000 switches. |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|--|--|
| 8325
8325H
8325P
10000 | config
The <code>policy</code> command takes you into the <code>config-pa-policy</code> context where you enter the policy entries. | Administrators or local user group members with execution rights for this command. |

port-access policy copy

port-access policy <POLICY-NAME> copy <DESTINATION-POLICY>

Description

Copies an existing policy to a new policy.

| Parameter | Description |
|----------------------|--|
| <POLICY-NAME> | Specifies the existing policy name. |
| <DESTINATION-POLICY> | Specifies the destination policy name. |

Examples

Copying a policy:

```
switch(config)# port-access policy POL1 copy POL1_copy
switch(config)# show port-access policy
```

```
Access Policy Details:
=====
```

```
Policy Name   : POL1
Policy Type   : Local
Policy Status : Applied
```

| SEQUENCE | CLASS | TYPE | ACTION |
|----------|-------|------|---------------------------|
| 20 | dhcp | ipv4 | permit |
| 30 | test | ipv4 | cir kbps 1024 exceed drop |

```
Policy Name   : POL1_copy
Policy Type   : Local
Policy Status : Applied
```

| SEQUENCE | CLASS | TYPE | ACTION |
|----------|-------|------|---------------------------|
| 20 | dhcp | ipv4 | permit |
| 30 | test | ipv4 | cir kbps 1024 exceed drop |



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|--|
| 10.13 | Command introduced on the 8325 and 10000 |

Command Information

| Platforms | Command context | Authority |
|---------------|-----------------|--|
| 8325
8325H | config | Administrators or local user group members with execution rights for this command. |

| Platforms | Command context | Authority |
|----------------|-----------------|-----------|
| 8325P
10000 | | |

port-access policy resequence

port-access policy <POLICY-NAME> resequence <STARTING-SEQ-NUM> <INCREMENT>

Description

Resequences numbering in a policy.

| Parameter | Description |
|--------------------|---|
| <POLICY-NAME> | Specifies the policy to be resequenced. |
| <STARTING-SEQ-NUM> | Specifies the starting sequence number. Range: 1 to 4294967295. |
| <INCREMENT> | Specifies the sequence number increment. |

Examples

Resequencing a policy starting at 5 with an increment of 10:

```
switch(config)# port-access policy POL1 resequence 5 10
switch(config)# show port-access policy POL1
```

```
Access Policy Details:
=====
```

```
Policy Name      : POL1
Policy Type      : Local
Policy Status    : Applied
```

| SEQUENCE | CLASS | TYPE ACTION |
|----------|-------|--------------------------------|
| 5 | dhcp | ipv4 permit |
| 15 | test | ipv4 cir kbps 1024 exceed drop |



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|--|
| 10.13 | Command introduced on the 8325 and 10000 |

Command Information

| Platforms | Command context | Authority |
|---------------|-----------------|--|
| 8325
8325H | config | Administrators or local user group members with execution rights for this command. |

| Platforms | Command context | Authority |
|----------------|-----------------|-----------|
| 8325P
10000 | | |

port-access policy reset

port-access policy <POLICY-NAME> reset

Description

Resets the policy configuration to match the current hardware configuration of the policy.

| Parameter | Description |
|---------------|---|
| <POLICY-NAME> | Specifies the name of the policy to be reset. |

Examples

Resetting a policy:

```
switch(config)# port-access policy POL2
switch(config-pa-policy)# 20 class ip dhcp
switch(config-pa-policy)# 40 class test2 action cir kbps 1024 exceed drop
switch(config-pa-policy)# exit
switch(config)# show port-access policy POL1-V2

Access Policy Details:
=====

Policy Name      : POL2
Policy Type      : Local
Policy Status    : Applied

SEQUENCE    CLASS                                TYPE ACTION
-----
20          dhcp                                ipv4 permit
40          test2                               ipv4 cir kbps 1024 exceed drop

switch(config)# port-access policy POLV2
switch(config-pa-policy)# 50 class ip test3 action cir kbps 1024 exceed drop
switch(config-pa-policy)# no 20
switch(config-pa-policy)# exit
switch(config)# show port-access policy POL2

Access Policy Details:
=====

Policy Name      : POL2
Policy Type      : Local
Policy Status    : Rejected

SEQUENCE    CLASS                                TYPE ACTION
-----
40          test2                               ipv4 cir kbps 1024 exceed drop
50          test3                               ipv4 cir kbps 1024 exceed drop

switch(config)# port-access policy POL2 reset
Following policy entries will be removed:
class ip test3 action cir kbps 1024 exceed drop
```

```
Following policy entries will be added:
20 class ip dhcp

Do you want to continue (y/n)? y
switch(config)# show port-access policy POL2
```

```
Access Policy Details:
=====
```

```
Policy Name      : POL1-V2
Policy Type      : Local
Policy Status    : Applied
```

| SEQUENCE | CLASS | TYPE | ACTION |
|----------|-------|------|---------------------------|
| 20 | dhcp | ipv4 | permit |
| 40 | test2 | ipv4 | cir kbps 1024 exceed drop |



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|--|
| 10.13 | Command introduced on the 8325 and 10000 |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|-----------------|--|
| 8325
8325H
8325P
10000 | config | Administrators or local user group members with execution rights for this command. |

clear port-access policy hitcounts

```
clear port-access policy <POLICY-NAME> hitcounts {port|client}
```

Description

Clears statistics and conform rate of a policy applied on a port or client.

| Parameter | Description |
|---------------|----------------------------|
| <POLICY-NAME> | Specifies the policy name. |
| port | Selects port mode. |
| client | Selects client mode. |

Examples

Clearing policy hit counts:

```
switch# show port-access policy POL6 hitcounts port
```

```
Port Access Policy Hit-Counts Details:
```

```
=====
```

```
Policy Name   : POL4  
Policy Type   : Local  
Policy Status : Applied
```

| SEQUENCE | CLASS | TYPE ACTION | CUR-RATE (kbps) |
|----------|-------|--------------------------------|-----------------|
| 3 | test8 | ipv4 cir kbps 1024 exceed drop | 512 |

```
Class Name : dhcp  
Class Type : ipv4
```

| SEQUENCE | CLASS-ENTRY | HIT-COUNT |
|----------|--------------------------|-----------|
| 10 | match icmp any any count | 0 |

```
Class Name : clearpass-web  
Class Type : ipv4
```

| SEQUENCE | CLASS-ENTRY | HIT-COUNT |
|----------|-------------------------|-----------|
| 15 | match udp any any count | 15101830 |

```
Class Name : web-traffic  
Class Type : ipv4
```

| SEQUENCE | CLASS-ENTRY | HIT-COUNT |
|----------|---|-----------|
| 10 | match any any any count | 241 |
| 20 | match any 10.1.1.1 10.1.1.2 dscp AF11 count | 50 |

```
Class Name : class6  
Class Type : ipv6
```

| SEQUENCE | CLASS-ENTRY | HIT-COUNT |
|----------|--|-----------|
| 10 | match any any any count | 173 |
| 20 | match icmpv6 2001:db8:a::123 2001:db8:a::125 dscp AF11 count | 32 |

```
switch#  
switch# clear port-access policy POL6 hitcounts port  
switch#  
switch# show port-access policy POL6 hitcounts port
```

```
Port Access Policy Hit-Counts Details:
```

```
=====
```

```
Policy Name   : POL4  
Policy Type   : Local  
Policy Status : Applied
```

| SEQUENCE | CLASS | TYPE ACTION | CUR-RATE (kbps) |
|----------|-------|--------------------------------|-----------------|
| 3 | test8 | ipv4 cir kbps 1024 exceed drop | 512 |

```
Class Name : dhcp  
Class Type : ipv4
```

```

SEQUENCE      CLASS-ENTRY      HIT-COUNT
-----
10            match icmp any any count      0

Class Name : clearpass-web
Class Type : ipv4

SEQUENCE      CLASS-ENTRY      HIT-COUNT
-----
15            match udp any any count      0

Class Name : web-traffic
Class Type : ipv4

SEQUENCE      CLASS-ENTRY      HIT-COUNT
-----
10            match any any any count      0
20            match any 10.1.1.1 10.1.1.2 dscp AF11 count      0

Class Name : class6
Class Type : ipv6

SEQUENCE      CLASS-ENTRY      HIT-COUNT
-----
10            match any any any count      0
20            match icmpv6 2001:db8:a::123 2001:db8:a::125 dscp AF11
count      0

```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|--|
| 10.13 | Command introduced on the 8325 and 10000 |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|--------------------------------|--|
| 8325
8325H
8325P
10000 | Operator (>) or Manager
(#) | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

show port-access policy

show port-access policy [<POLICY-NAME>]

Description

Shows various aspects of policies and their current usage. Details of a policy including the content of a specific policy is shown.

Policy type values:

- **Local**—User configured policy
- **Downloaded**—Downloaded user policy
- **RADIUS**—Policy obtained from the RADIUS server

Policy status values:

- **Applied**—Policy is successfully applied in the hardware.
- **Rejected**—Policy is not supported in the hardware.
- **In-Progress**—Policy is being processed in the hardware.
- **Failed**—Displayed when the switch fails to apply the policy configuration because the TCAM resources are unavailable or full.

Base Policy Values:

- **Name of the policy**—Policy associated with the RADIUS overridden base role.
- **N/A**—Non-RADIUS policy or policy derived from RADIUS attributes such as Filter ID or [Aruba-]NAS-Filter-Rule

ACL Names Values:

- **Name of the ACL**—Name of the ACL associated with the RADIUS policy derived from RADIUS Filter-ID attribute.
- **N/A**—Non-RADIUS policy or policy derived from [Aruba-]NAS-Filter-Rule RADIUS attribute.



If a policy is configured without any action, the **show** command will represent such an entry with the **permit** action .

| Parameter | Description |
|---------------|----------------------------|
| <POLICY-NAME> | Specifies the policy name. |

Examples

Showing information for all policies:

```
switch(config)# show port-access policy

Access Policy Details:
=====

Policy Name      : POL1
Policy Type      : Local
Policy Status    : Applied
Base Policy:     N/A
ACL Name:        N/A

SEQUENCE    CLASS                                TYPE ACTION
-----
20           dhcp                                ipv4 permit
30           test                                ipv4 cir kbps 1024 exceed drop

Policy Name      : POL1_copy
Policy Type      : Local
```

```
Policy Status : Applied
Base Policy: N/A
ACL Name: N/A
```

| SEQUENCE | CLASS | TYPE ACTION |
|----------|-------|--------------------------------|
| 20 | dhcp | ipv4 permit |
| 30 | test | ipv4 cir kbps 1024 exceed drop |

Showing information for a particular policy:

```
switch(config)# show port-access policy RADIUS_115315236
Access Policy Details:
```

```
-----
Policy Name      : RADIUS_115315236
Policy Type      : Radius
Policy Status    : Applied
Base Policy      : N/A
ACL Names       : DHCP, WebServices-Student
```

| SEQUENCE | CLASS | TYPE ACTION |
|----------|------------------------------|-------------|
| 10 | RADIUS_3241199543_2521983626 | ipv4 permit |

```
switch(config)# show port-access policy RADIUS_407949976
Access Policy Details:
```

```
-----
Policy Name      : RADIUS_407949976
Policy Type      : Radius
Policy Status    : Applied
Base Policy      : test_policy_test_cppm_role-3006-1
ACL Names       : N/A
```

| SEQUENCE | CLASS | TYPE ACTION |
|----------|-----------------------------|-------------|
| 10 | RADIUS_407949976_4016176641 | ipv4 permit |



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|--|
| 10.13 | Command introduced on the 8325 and 10000 |
| 10.12 | Command output modified to display Base Policy and ACL Names . |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|-----------------------------|--|
| 8325
8325H
8325P
10000 | Operator (>) or Manager (#) | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

show port-access policy hitcounts

show port-access policy <POLICY-NAME> hitcounts {port | client}

Description

Shows port access hit count statistics.

| Parameter | Description |
|---------------|----------------------------|
| <POLICY-NAME> | Specifies the policy name. |
| port | Selects port mode. |
| client | Selects client mode. |

Examples

Showing policy hit counts (statistics) with current rate:

```
switch# show port-access policy POL6 hitcounts port

Port Access Policy Hit-Counts Details:
=====

Policy Name      : POL1
Policy Type      : Local
Policy Status    : Applied

SEQUENCE CLASS      TYPE ACTION                                CUR-RATE (kbps)
-----
30      test8      ipv4 cir kbps 1024 exceed cbs 2048 drop                    512

Class Name : dhcp
Class Type : ipv4

SEQUENCE CLASS-ENTRY                                HIT-COUNT
-----
10      match icmp any any count                        982150

Class Name : clearpass-web
Class Type : ipv4

SEQUENCE CLASS-ENTRY                                HIT-COUNT
-----
70      match udp any any count                        15101830
Class Name : web-traffic
Class Type : ipv4

SEQUENCE CLASS-ENTRY                                HIT-COUNT
-----
4      match any any any count                          3194
5      match any 10.1.1.1 10.1.1.2 dscp AF11 count      1716
```



```
Class Name : class6
Class Type : ipv6
```

| SEQUENCE | CLASS-ENTRY | HIT-COUNT |
|----------|--|-----------|
| 10 | match any any any count | 0 |
| 20 | match icmpv6 2001:db8:a::123 2001:db8:a::125 dscp AF11 count | 0 |



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|--|
| 10.13 | Command introduced on the 8325 and 10000 |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|-----------------------------|--|
| 8325
8325H
8325P
10000 | Operator (>) or Manager (#) | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

Port access role

Every device that connects to a port is associated with a role. Roles are associated with all clients, both authenticated and unauthenticated, and applied to each user session. By default, roles are enabled on a switch.

Following are a few examples of user role names and the access privileges that can be configured:

- Employee—Provide complete access to network resources.
- Contractor—Provide limited access to network resources.
- Guest—Provide only Internet browsing access.

Each user role determines the client network privileges, frequency of reauthentication, applicable bandwidth contracts, and other permissions.



Active user roles applied on clients are created only on Ternary Content-Addressable Memory (TCAM) resource availability of the switch.



On the 8325 and 10000 Switch Series, the TCAM group for port access will not be created automatically with a default configuration. Only after enabling any port access feature does the TCAM group for port access get created. If all the TCAM entries are occupied by other features such as ACLs or policies, the TCAM group for port access will not be created and therefore the port access features will not work.

A user role consists of the following optional parameters:

- `inactivity-timeout`
The inactivity timeout period in seconds with a range of 300 to 4294967295 for the authenticated client for an implicit logoff.
- `reauth-period`
Sets the reauthentication period in seconds or 0 to disable.
- `vlan access`
Sets the untagged VLAN ID.
- `vlan trunk`
Sets the tagged VLAN ID.
- `auth-mode`
Configures the authentication mode for the clients that are associated with the current role. Available modes are: **client-mode**, **device-mode**.
- `mtu`
Configures the MTU support for the client.
- `vlan trunk allowed`
Specifies the list of tagged VLANs configured for the interface.
- `trust-mode`
Configures the QoS trust mode for the client.
- `private-vlan`
Configures PVLAN port type for a user role. The following are the attributes:
 - `promiscuous`
Configures the port type as promiscuous.
 - `secondary`
Configures the port type as secondary.

Operational notes

Following are some of the operational notes to be considered for port access roles:

- On the 8325 and 10000 Switch Series, a maximum of 4096 authenticated clients are supported.
- When roles are enabled, they are applied to all devices connected to ports where authentication is configured.
- Special roles, such as, critical, reject, pre-auth, and auth are applied depending on the authentication state of the device.
- Roles can be applied in one of the following two ways:
 - Vendor-Specific Attribute (VSA)-Derived Role
Type: **RADIUS: Aruba**
Name: **Aruba-User-Role**
ID: **25**
Value: `<myUserRole>`
See [Vendor-Specific Attributes in session authorization](#).
The RADIUS server (ClearPass Policy Manager server) determines how the VSA-Derived Role is applied to the user. The role is sent to the switch through a RADIUS VSA. The VSA derived role will have the same precedence order as the authentication type (802.1X, MAC authentication).

- User Derived Role (UDR)

The UDR is applied when the roles are enabled.

UDR will have the same precedence order as the authentication type (802.1X, MAC authentication).

- On the 8325 and 10000 Switch Series, it is not recommended to use a VxLAN-bound VLAN as the access VLAN in the client role because doing so may cause clients on-boarded on the port to experience traffic loss. This traffic loss is likely to only be experienced when there are multiple clients on-boarded on the port. Instead, it is best to use a non-VxLAN bound VLAN as the access VLAN in the client role.

Downloadable user roles

Downloadable user roles enable AOS-CX switches to download user roles, policy, and class from the ClearPass Policy Manager server. The download facilitates the configuration of policies and attributes for a specific user role which can then be stored locally on the switch. New users can then be assigned the same locally stored version of the user role in ClearPass Policy Manager server, enabling the administrator to save time in reconfiguring each user individually.

The command **radius-server host WORD clearpass-username WORD clearpass-password (plaintext | ciphertext)** can only be used if the user role is going to be downloaded from the ClearPass Policy Manager server.



Avoid unused classes or policies in a downloaded role, as a downloadable user role that contains one or more unused classes or policies can cause client authorization to fail.

Special roles

Special roles are always local roles that are created to support instances when the deployments are not yet complete. They are also helpful when any network issues occur during authentication of devices. Special roles are always purpose-based, that is, they are applied only in instances such as the RADIUS server is not reachable for authentication or when a single role has to be applied across all switches.

The following special roles are available:

- Critical role
- Reject role
- Pre-authentication role
- Auth-role
- Fallback role

Critical role

The critical role is applied to devices when the RADIUS server is unreachable during the first authentication process or during reauthentication. This role helps ensure that the devices have limited access to the network even though the authentication is not completed. Once the RADIUS server is available for authentication, the devices are authenticated and the ultimate role is applied.

Reject role

The reject role is applied when the RADIUS server rejects a device during authentication. The reject role gives restricted access to the device compared to a full access role.

Pre-authentication role

The pre-authentication (pre-auth) role allows a device, such as an IP phone, to have network access before the device is authenticated. The pre-auth role is triggered when a MAC-based client is connected to a switch before being authenticated by the RADIUS server. Devices must be assigned a VLAN to provide network connectivity. Two new VLANs are created for pre-auth role functionality, one for voice traffic and one for data traffic. Pre-auth role VLANs can be configured on the switch individually or within a user-role. Devices that can be connected to the switch without authentication are divided into two categories:

- Devices that send voice traffic.
- Devices that send data traffic.



Either one of pre-auth role VLANs (voice and/or data) or a pre-auth role can be configured for a port. However, both a VLAN and role cannot coexist for an interface. Initial traffic on the port is restricted only by Access Control Lists (ACLs) configured for the port or for VLANs or ACLs in the role.

Impact of pre-auth role on existing features

Unauthenticated devices

Configuring pre-auth role VLAN will change the behavior of unauthenticated devices. Normally, authentication-enabled ports will not provide unauthenticated client any network access until the device is authenticated by the RADIUS server. With pre-auth role VLAN configured, the client will be assigned to the pre-auth role VLAN until the RADIUS server authenticates the device.

Unauthenticated clients will be placed into the VLAN specified in the pre-auth role. After authenticated by the RADIUS server, the client will be placed into the VLAN specified in the RADIUS authentication command string or as specified in the RADIUS authentication accept string.

LLDP-bypass

When LLDP-bypass is enabled on the switch, HPE Aruba Networking APs are not authenticated. Therefore pre-auth role VLAN is not applicable.

Bypass using device-identity

Pre-auth role VLAN is not applicable to VoIP devices because they do not need authentication. It is applicable to PCs that need authentication.

ACLs applied on an interface

If an ACL rule is applied on an interface, which is part of a pre-auth role VLAN, traffic coming through that interface will be affected. Traffic will be affected based on the rule in the ACL.

ACLs applied on a VLAN

If an ACL rule is applied on a pre-auth role VLAN, traffic entering that VLAN will be affected. Traffic will be affected based on the rule in the ACL.

Rate-limiting on an interface

If the traffic is rate-limited on an interface as part of a pre-auth role VLAN, the traffic will be impacted. The traffic will be affected based on the rule in the rate-limiting configuration command.

Authenticated or rejected clients

Clients that are authenticated or rejected by the RADIUS server are given different VLANs. These clients are moved from pre-auth role to new VLANs based on the authentication by the RADIUS server.

MAC pinning

Clients whose MAC addresses are pinned and have undergone authentication will always be treated as authenticated. Pre-auth role VLAN is not applicable in this scenario.

Effect of RADIUS tracking on pre-auth role

If RADIUS tracking is enabled and no RADIUS server is available for authentication, the port will be changed from a pre-auth role VLAN to a critical VLAN. The time taken to move from pre-auth role VLAN to critical VLAN depends on the time it takes for RADIUS tracker to inform the subsystem.

Restrictions

The pre-auth role restrictions are as follows:

- It will not support more than one tagged or untagged VLAN membership either through direct VLAN configuration or through user-roles.
- It is not applicable for authentication methods other than MAC-based.
- It is not available to be configured from WebUI, Menu, or REST.

Auth-role

After the RADIUS server authenticates a device, if no role is configured on the server, it sends an empty access accept packet to the switch. The switch translates this empty packet to assign an auth-role to the device. The switch then checks if an auth-role is configured on that port and assigns this role to the device.

Fallback role

The fallback role is applied to onboarding devices when there is no derived role available for the devices. Following are the conditions for the fallback role to be applied on onboarding devices:

- The device profile local MAC match feature with block-until-profile-applied mode is configured.
- Device profile along with AAA is configured but no match was found for the device profile client.
- AAA method with no reject or critical role is configured, and the connection to RADIUS server failed.
- 802.1X authentication is enabled on the port, but the supplicant of the device timed out to respond to the authentication request.

Port access role commands

auth-mode

```
auth-mode {client-mode | device-mode}
```

Description

Configures the authentication mode for the clients that are associated with the current role.

| Parameter | Description |
|-------------|--|
| client-mode | Selects client mode. In this mode, all clients connecting to the port are sent for authentication. |
| device-mode | Selects device mode. In this mode, only the first client connecting to the port is sent for authentication. Once this client is authenticated, the port is considered as open and all subsequent clients trying to connect on that port are not sent for authentication. |

Examples

Configuring the client authentication mode:

```
switch(config-pa-role)# auth-mode client-mode
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---------------------------------|
| 10.11 | Command introduced on the 8325 |
| 10.11 | Command introduced on the 10000 |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|---|--|
| 8325
8325H
8325P
10000 | config-pa-role
The <code>port-access role</code> command takes you into the <code>config-pa-role</code> context. | Administrators or local user group members with execution rights for this command. |

cached-reauth-period

```
cached-reauth-period [<PERIOD>]  
no cached-reauth-period
```

Description

Enables cached reauthentication, setting the period after which clients that associated with the current role must be reauthenticated.

The **no** form of this command disables cached authentication.

| Parameter | Description |
|-----------|---|
| <PERIOD> | Specifies the cached reauthentication period (in seconds) for clients associated with the role. Default: 30. Range: 30 to 4294967295. |

Examples

Enabling cached reauthentication and setting its period to 200 seconds:

```
switch(config-pa-role)# cached-reauth-period 200
```

Disabling cached reauthentication:

```
switch(config-pa-role)# no cached-reauth-period
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---------------------------------|
| 10.11 | Command introduced on the 8325 |
| 10.11 | Command introduced on the 10000 |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|---|--|
| 8325
8325H
8325P
10000 | config-pa-role
The port-access role command takes you into the config-pa-role context. | Administrators or local user group members with execution rights for this command. |

client-inactivity timeout

```
client-inactivity timeout {<CLIENT-INACTIVITY-PERIOD> | none}  
no client-inactivity timeout
```

Description

Configures the period that the switch waits for a response from a client after which it removes the client from the role.

The **no** form of the command resets the timeout period to the default.

| Parameter | Description |
|----------------------------|---|
| <CLIENT-INACTIVITY-PERIOD> | Specifies the client inactivity time (in seconds). Default: Dynamic client age-out. Range: 60 to 4294967295 |
| none | Selects no client deletion due to inactivity. |

Examples

Configuring client inactivity timer for a role:

```
switch(config-pa-role)# client-inactivity timeout 3600
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---|
| 10.14 | The range of the command has been modified from 60 to 4294967295 seconds. |
| 10.11 | Command introduced on the 8325 |

| Release | Modification |
|---------|---------------------------------|
| 10.11 | Command introduced on the 10000 |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|--|--|
| 8325
8325H
8325P
10000 | <code>config-pa-role</code>
The <code>port-access role</code> command takes you into the <code>config-pa-role</code> context. | Administrators or local user group members with execution rights for this command. |

description (role)

`description <ROLE-DESCRIPTION>`

Description

Configures the role description.

| Parameter | Description |
|---------------------------------------|--|
| <code><ROLE-DESCRIPTION></code> | Specifies the role description. Range: Up to 255 characters. |

Examples

Configuring the role description:

```
switch(config-pa-role)# description student role
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---------------------------------|
| 10.11 | Command introduced on the 8325 |
| 10.11 | Command introduced on the 10000 |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|--|--|
| 8325
8325H
8325P
10000 | <code>config-pa-role</code>
The <code>port-access role</code> command takes you into the <code>config-pa-role</code> context. | Administrators or local user group members with execution rights for this command. |

mtu (port access)

mtu <MTU-SIZE>

Description

Configures the MTU (maximum transmission unit) size of a client for a role.

| Parameter | Description |
|------------|---|
| <MTU-SIZE> | Specifies the MTU size in bytes. Range: 68 to 9198. |

Examples

Configuring client MTU size:

```
switch(config-pa-role)# mtu 9198
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---------------------------------|
| 10.11 | Command introduced on the 8325 |
| 10.11 | Command introduced on the 10000 |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|---|--|
| 8325
8325H
8325P
10000 | config-pa-role
The port-access role command takes you into the config-pa-role context. | Administrators or local user group members with execution rights for this command. |

port-access role

```
port-access role <ROLE-NAME>  
no port-access role <ROLE-NAME>
```

Description

Creates a new port access role or modifies an existing role. This command takes you into the **config-pa-role** context. A maximum of 32 port access roles can be created.

The **no** form of this command deletes a role.

| Parameter | Description |
|-------------|--|
| <ROLE-NAME> | Specifies the role name. Range: Up to 64 characters. |

Examples

Creating a new role:

```
switch(config)# port-access role basic01
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---------------------------------|
| 10.11 | Command introduced on the 8325 |
| 10.11 | Command introduced on the 10000 |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|-----------------|--|
| 8325
8325H
8325P
10000 | config | Administrators or local user group members with execution rights for this command. |

reauth-period

```
reauth-period <PERIOD>  
no reauth-period
```

Description

Configures the period after which clients that associated with the current role must be reauthenticated.



The reauthentication period configured here takes precedence over the reauthentication period configured at the port level.

| Parameter | Description |
|-----------|---|
| <PERIOD> | Specifies the reauthentication period (in seconds) for clients associated with the role. Default: None. Range: 1 to 4294967295. A reauthentication period of less than 60 seconds is not recommended. |

Examples

Configuring reauthentication period:

```
switch(config-pa-role)# reauth-period 3000
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---------------------------------|
| 10.11 | Command introduced on the 8325 |
| 10.11 | Command introduced on the 10000 |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|---|--|
| 8325
8325H
8325P
10000 | config-pa-role
The port-access role command takes you into the config-pa-role context. | Administrators or local user group members with execution rights for this command. |

session timeout (port access)

```
session-timeout <SESSION-TIMEOUT>  
no session-timeout
```

Description

Configures the session timeout for the role. After the timeout period, the session is disconnected.

| Parameter | Description |
|-------------------|---|
| <SESSION-TIMEOUT> | Specifies the session timeout (in seconds). Range: 1 to 4294967295. A timeout of less than 60 seconds is not recommended. |

Examples

Configuring session timeout for a role:

```
switch(config-pa-role)# session timeout 3600
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---------------------------------|
| 10.11 | Command introduced on the 8325 |
| 10.11 | Command introduced on the 10000 |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|---|--|
| 8325
8325H
8325P
10000 | config-pa-role
The port-access role command takes you into the config-pa-role context. | Administrators or local user group members with execution rights for this command. |

show aaa authentication port-access interface client-status (role)

```
show aaa authentication port-access interface {all | <IF-NAME>}
client-status [mac <MAC-ADDRESS>]
```

Description

Shows information about the status of the role applied on ports.

| Parameter | Description |
|---------------|-----------------------------------|
| all | Specifies all interfaces. |
| <IF-NAME> | Specifies the interface name. |
| <MAC-ADDRESS> | Specifies the client MAC address. |

Examples

Showing information about a client:

```
switch# show aaa authentication port-access interface all client-status mac
00:00:00:00:00:01

Port Access Client Status Details

Client 00:00:00:00:00:01
=====
Session Details
-----
Port          : 1/7/24
Session Time  : 151s

Authentication Details
-----
Status          : mac-auth Authenticated
Auth Precedence : mac-auth - Authenticated, dot1x - Not attempted

Authorization Details
-----
Role   : UserRole_1
Status : Applied
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---------------------------------|
| 10.11 | Command introduced on the 8325 |
| 10.11 | Command introduced on the 10000 |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|-----------------------------|--|
| 8325
8325H
8325P
10000 | Operator (>) or Manager (#) | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

show port-access role

```
show port-access role {local | clearpass | radius | name <ROLE-NAME>}
```

Description

Shows information about roles configured locally, or downloaded from ClearPass Policy Manager and the RADIUS server.

Displays information only about the attributes defined for the role. The base policy name will be suffixed with * for RADIUS overridden roles.

| Parameter | Description |
|-------------|---|
| local | Shows information about locally configured roles. |
| clearpass | Shows information about roles downloaded from ClearPass Policy Manager. |
| radius | Shows information about roles downloaded from the RADIUS server. |
| <ROLE-NAME> | Specifies the role name. |

Examples

Showing locally configured role information:

```
switch# show port-access role local
Role Information:
Name  : local_role_01
Type  : local
-----
Reauthentication Period      : 333 secs
Cached Reauthentication Period : 300 secs
Access VLAN Name            : Hpe
VLAN Group Name              : group1
PoE Priority                  : low
Policy                       : deny-http-policy
Private-VLAN Port-Type       : secondar
```

Showing information for roles downloaded from ClearPass Policy Manager:

```
June 2020: Replaced original ClearPass example with a new one from Girish G.  
switch# show port-access role clearpass
```

Role Information:

```
Name   : CP_GIRI_DUR_GUEST_ROLE-3058-7  
Type   : clearpass  
Status: Completed
```

```
-----  
Reauthentication Period      : 300 secs  
Authentication Mode          :  
Session Timeout              : 1000000 secs  
Client Inactivity Timeout    :  
Description                   : Guest role for CP6  
Gateway Zone                 :  
UBT Gateway Role             :  
Access VLAN                  : 20  
Native VLAN                  :  
Allowed Trunk VLANs          :  
Access VLAN Name             : vlan20  
Native VLAN Name             :  
Allowed Trunk VLAN Names     :  
MTU                           :  
QOS Trust Mode               :  
STP Administrative Edge Port : true  
PoE Priority                  :  
Captive Portal Profile       : CP6_CP_GIRI_DUR_GUEST_ROLE-3058-7  
Policy                       : CP6_CP_GIRI_DUR_GUEST_ROLE-3058-7
```

Showing locally configured role information:

```
switch# show port-access role local
```

Role Information:

```
Name   : local_role_01  
Type   : local
```

```
-----  
Reauthentication Period      : 333 secs  
Cached Reauthentication Period : 300 secs  
Access VLAN Name            : Hpe  
VLAN Group Name              : group1  
PoE Priority                  : low  
Policy                       : deny-http-policy  
Private-VLAN Port-Type       : secondary
```

Showing information for roles downloaded from a RADIUS server:

```
switch# show port-access role radius
```

Role Information:

Attributes overridden by RADIUS are prefixed by '*'.

```
Name : RADIUS_21963402  
Type : radius
```

```
-----  
Reauthentication Period: 333 secs  
Access VLAN: 10
```

```
VLAN Group Name: group1
STP Administrative Edge Port : true
PoE Priority : low
Captive Portal Profile : testcprof_29451201
Policy : PERMIT-ALL_87364653
Private-VLAN Port-Type : secondary
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|--|
| 10.12 | The following changes were introduced: <ul style="list-style-type: none">Command output updated to display information only about the attributes defined for the role.The base policy name will be suffixed with * for RADIUS overridden roles. |
| 10.11 | Command introduced on the 8325 |
| 10.11 | Command introduced on the 10000 |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|-----------------------------|--|
| 8325
8325H
8325P
10000 | Operator (>) or Manager (#) | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

stp-admin-edge-port

```
stp-admin-edge-port
no stp-admin-edge-port
```

Description

Configures the port as a spanning tree administrative edge port for the role. This configuration removes the port participation from STP interactions when onboarding devices. This in turn helps in faster onboarding of devices.

The **no** form of the command disables STP edge port functionality.



If the port receives STP BPDU on the STP administrative edge configured port, the port will move to the STP state. You must configure the port as an STP administrative edge port only if you are sure that the connected device will not participate in STP interactions.

Example

Configuring STP edge port for a role:

```
switch(config)# port-access role role01
switch(config-pa-role)# stp-admin-edge-port
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---------------------------------|
| 10.11 | Command introduced on the 8325 |
| 10.11 | Command introduced on the 10000 |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|---|--|
| 8325
8325H
8325P
10000 | config-pa-role
The port-access role command takes you into the config-pa-role context. | Administrators or local user group members with execution rights for this command. |

trust-mode

```
trust-mode [dscp | cos | none]
no trust-mode
```

Description

Configures QoS trust mode for the role.

The **no** form of this command configures the default trust mode for the role.

| Parameter | Description |
|-----------|---|
| dscp | Selects trust DSCP and retain 802.1p priority. |
| cos | Selects trust 802.1p and retain DSCP or IP-ToS. |
| none | Selects no trusting of priority fields. |

Examples

Configuring DSCP trust mode for a role:

```
switch(config)# port-access role role01
switch(config-pa-role)# trust-mode dscp
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---------------------------------|
| 10.11 | Command introduced on the 8325 |
| 10.11 | Command introduced on the 10000 |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|---|--|
| 8325
8325H
8325P
10000 | config-pa-role
The port-access role command takes you into the config-pa-role context. | Administrators or local user group members with execution rights for this command. |

vlan (port access)

```
vlan {access | trunk native | trunk allowed} <VLAN-ID>
no vlan {access | trunk native | trunk allowed} <VLAN-ID>
```

```
vlan {access name | trunk native name | trunk allowed name} <VLAN-NAME>
no vlan {access name | trunk native name | trunk allowed name} [<VLAN-NAME>]
```

Description

Configures VLAN IDs or VLAN names, and VLAN modes for a port access role. You can configure either VLAN IDs or VLAN names, or a combination of both for a role.

The **no** form of the command deletes the VLAN configuration from the role. For trunk allowed VLAN names, you can delete the VLAN names individually or all names at once.

| Parameter | Description |
|--------------------------------|--|
| access <VLAN-ID> | Specifies the VLAN ID for the access VLAN. Supports a single VLAN ID in the range 1 to 4094. |
| trunk native <VLAN-ID> | Specifies the native VLAN ID on the trunk interface. Supports a single VLAN ID. Range: 1 to 4094. |
| trunk allowed <VLAN-ID> | Specifies the list of tagged or allowed VLANs on the trunk interface. Supports a list of VLAN IDs. Range: 1 to 4094. |
| access name <VLAN-NAME> | Specifies the VLAN name for the access VLAN. Supports a single VLAN name. Range: Up to 32 characters. |
| trunk native name <VLAN-NAME> | Specifies the native VLAN name on the trunk interface. Supports a single VLAN name. Range: Up to 32 characters |
| trunk allowed name <VLAN-NAME> | Specifies the tagged or allowed VLAN name on the trunk interface. Supports a single VLAN name. Range: Up to 32 characters. The switch supports a maximum of 50 trunk allowed VLAN names. |

Usage

Note the following points when configuring the VLAN IDs and names for a role:

- For VLAN access and VLAN trunk native respectively, it is recommended to configure only one of either VLAN ID or name for a role. In case both VLAN ID and name are configured, then VLAN ID takes precedence and is applied with the role.

| Platform | Maximum VLAN IDs per role | Maximum VLAN Names per role | Total VLANs (ID + Name) per role |
|------------------------|---------------------------|-----------------------------|----------------------------------|
| 8325
8325H
8325P | 1024 | 50 | 1024 |
| 10000 | 1024 | 50 | 1024 |

Examples

Configuring VLAN modes and VLAN IDs for a new role:

```
switch(config)# port-access role role01
switch(config-pa-role)# vlan trunk native 10
switch(config-pa-role)# vlan trunk allowed 11-15
switch(config-pa-role)# vlan access 50
```

Configuring VLAN modes and VLAN names for a new role:

```
switch(config)# port-access role role10
switch(config-pa-role)# vlan trunk native name hpe01
switch(config-pa-role)# vlan trunk allowed name data
switch(config-pa-role)# vlan trunk allowed name voice
switch(config-pa-role)# vlan trunk allowed name video
```

Deleting VLAN configuration from a role:

```
switch(config-pa-role)# no vlan trunk native 10
switch(config-pa-role)# no vlan trunk allowed 10-15
switch(config-pa-role)# no vlan access 50
```

Deleting trunk allowed VLAN names from a role individually:

```
switch(config-pa-role)# no vlan trunk native name hpe01
switch(config-pa-role)# no vlan trunk allowed name data
switch(config-pa-role)# no vlan trunk allowed name voice
switch(config-pa-role)# no vlan trunk allowed name video
```

Deleting trunk allowed VLAN names from a role all at once:

```
switch(config-pa-role)# no vlan trunk native name hpe01
switch(config-pa-role)# no vlan trunk allowed name
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---------------------------------|
| 10.11 | Command introduced on the 8325 |
| 10.11 | Command introduced on the 10000 |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|--|--|
| 8325
8325H
8325P
10000 | <code>config-pa-role</code>
The <code>port-access role</code> command takes you into the <code>config-pa-role</code> context. | Administrators or local user group members with execution rights for this command. |

Supported RADIUS attributes

AOS-CX supports various RADIUS server attributes to be applied during authentication of clients. This section lists the attributes supported in the following features:

- 802.1X authentication
- MAC authentication
- Dynamic authorization
- Session authorization in 802.1X and MAC authentication, and CoA
- RADIUS server tracking
- RADIUS network accounting



The following terms are used in the list of attributes:

- **Tx:** Attribute added in the request packets that are sent to the RADIUS server.
- **Rx:** Attribute processed in the response packets received from the RADIUS server.

Attributes supported in 802.1X authentication

Following are the RADIUS attributes supported in 802.1X authentication:

| Attribute name | Tx | Rx | Notes |
|-------------------------|----|----|---|
| ----- | | | |
| User-name | Y | N | RFC2865 |
| Calling-station-id | Y | N | RFC2865/3580 |
| Called-station-id | Y | N | RFC2865/3580 |
| NAS-port-id | Y | N | RFC2869 |
| NAS-port | Y | N | RFC2865 |
| Service-Type | Y | N | RFC2865 |
| EAP-Message | Y | N | RFC2869 |
| Class | N | Y | RFC2865 |
| State | Y | Y | RFC2865 |
| Session-Timeout | N | Y | RFC2865 - Used as EAP timeout in Challenge packet |
| NAS-IP-Address | Y | N | RFC2865 |
| NAS-Identifier | Y | N | RFC2865 |
| NAS-Ipv6-Address | Y | N | RFC3162 |
| Message-Authenticator | Y | Y | RFC2869 |
| Tunnel-Type | Y | Y | RFC2868 |
| Tunnel-Medium-Type | Y | Y | RFC2868 |
| Tunnel-Private-Group-Id | Y | Y | RFC2868 |

Attributes supported in MAC authentication

Following are the RADIUS attributes supported in MAC authentication:

| Attribute name | Tx | Rx | Notes |
|--------------------|----|----|--------------|
| ----- | | | |
| User-name | Y | N | RFC2865 |
| Calling-station-id | Y | N | RFC2865/3580 |

| | | | |
|-------------------------|---|---|--------------|
| Called-station-id | Y | N | RFC2865/3580 |
| NAS-port-id | Y | N | RFC2869 |
| NAS-port | Y | N | RFC2865 |
| Service-Type | Y | N | RFC2865 |
| State | Y | Y | RFC2865 |
| Class | N | Y | RFC2865 |
| NAS-IP-Address | Y | N | RFC2865 |
| NAS-Identifier | Y | N | RFC2865 |
| NAS-IPv6-Address | Y | N | RFC3162 |
| Message-Authenticator | Y | Y | RFC2869 |
| Chap-Challenge | Y | N | RFC2865 |
| Chap-Password | Y | N | RFC2865 |
| User-Password | Y | N | RFC2865 |
| Tunnel-Type | Y | Y | RFC2868 |
| Tunnel-Medium-Type | Y | Y | RFC2868 |
| Tunnel-Private-Group-Id | Y | Y | RFC2868 |

Attributes supported in dynamic authorization

Following are the RADIUS attributes supported in dynamic authorization:

| Attribute name | Tx | Rx | Notes |
|-------------------------|----|----|--------------|
| ----- | | | |
| User-name | N | Y | RFC2865 |
| Calling-station-id | N | Y | RFC2865/3580 |
| Called-station-id | N | Y | RFC2865/3580 |
| NAS-port-id | N | Y | RFC2869 |
| NAS-port | N | Y | RFC2865 |
| NAS-IP-Address | N | Y | RFC2865 |
| NAS-Identifier | N | Y | RFC2865 |
| NAS-IPv6-Address | N | Y | RFC3162 |
| Error-cause | Y | N | RFC5176 |
| Acct-Terminate-Cause | Y | Y | RFC2866 |
| Acct-Session-Id | N | Y | RFC2866 |
| Message-Authenticator | N | Y | RFC2869 |
| Event-Timestamp | N | Y | RFC2869 |
| State | Y | Y | RFC2865 |
| Proxy-State | Y | Y | RFC2865 |
| Class | N | Y | RFC2865 |
| Tunnel-Type | Y | Y | RFC2868 |
| Tunnel-Medium-Type | Y | Y | RFC2868 |
| Tunnel-Private-Group-Id | Y | Y | RFC2868 |

- One or more of the following attributes, **NAS-IP-Address**, **NAS-Identifier**, **NAS-IPv6-Address**, is mandatory for processing Change of Authorization (CoA) requests from dynamic authorization clients.
- Either **Acct-Session-Id** attribute, or one or both of **NAS-port** and **NAS-port-id** attributes and the **Calling-station-id** attribute is mandatory to identify the user session for processing CoA requests from dynamic authorization clients.
- The **User-name** attribute is mandatory for processing all CoA requests.
- The **Acct-Terminate-Cause** attribute is used in the CoA disconnect request and response messages.
- All session authorization attributes (both VSA and standard) are supported in the CoA message only, including **Aruba-Port-Bounce**.

Session authorization attributes supported in 802.1X and MAC authentication, and CoA

Standard session attributes supported

Following are the standard session attributes supported in 802.1X and MAC authentication, and CoA:

| Attribute name | ID | Type | Notes |
|-------------------------|----|--------|---------|
| Egress-VLANID | 56 | Octet | RFC4675 |
| Egress-VLAN-Name | 58 | String | RFC4675 |
| Tunnel-Type | 64 | Octet | RFC2868 |
| Tunnel-Medium-Type | 65 | Octet | RFC2868 |
| Tunnel-Private-Group-ID | 81 | String | RFC2868 |
| Framed-MTU | 12 | Octet | RFC2865 |
| Session-Timeout | 27 | Octet | RFC2865 |
| Terminate-Action | 29 | Octet | RFC2865 |
| Idle-Timeout | 28 | Octet | RFC2865 |



When multiple clients request a different MTU value using the **Framed-MTU** attribute, the highest MTU value requested among the clients will be programmed on the port.

Vendor-Specific Attributes in session authorization

Following are the Vendor-Specific Attributes (VSAs) supported in session authorization:

| Attribute Name | Length | Type | Aruba Vendor ID | Aruba Attribute Type |
|------------------------------|--------|---------|-----------------|----------------------|
| Aruba-PoE-Priority | 4 | integer | 14823 | 49 |
| Aruba-Port-Auth-Mode | 4 | integer | 14823 | 50 |
| Aruba-QoS-Trust-Mode | 4 | integer | 14823 | 52 |
| Aruba-User-Role | <=63 | string | 14823 | 1 |
| Aruba-Port-Bounce | 4 | Integer | 14823 | 40 |
| Aruba-STP-Admin-Edge-Port | 4 | Integer | 14823 | 55 |
| Aruba-UBT-Gateway-CPPM-Role | <=128 | string | 14823 | 59 |
| Aruba-Device-Traffic-Class | 4 | Integer | 14823 | |
| Aruba-User-Mgmt-Interface | <=32 | string | 14823 | 69 |
| Aruba-PoE-Allocate-By-Method | 4 | Integer | 14823 | 70 |



- Change of Authorization of specific attributes in the user role is not supported. Only entire role can be changed.
- Similarly if the session is using RADIUS attributes, CoA can change only the RADIUS session attributes.
- Change of Authorization to user role for a session using RADIUS attributes is not supported either. If this action is attempted, a NAK message is sent.

Description of VSAs

Aruba-PoE-Priority

Specifies the PoE priority of onboarding devices post authentication. Following are the supported values:

- 0: Critical
- 1: Medium
- 2: Low

This attribute overrides the PoE priority configured on the port where the device onboards. This attribute is typically used for infrastructure devices. When multiple clients request different priorities,

the critical priority takes precedence over medium priority and the medium priority takes precedence over low priority setting.

Aruba-Port-Auth-Mode

Specifies the authentication mode of the port post authentication. Following are the supported values:

- **1**: Device mode—In this mode, an infrastructure device, for example, switch or access point, is authenticated first, and all devices connecting to this authenticated device are allowed access. Here, the policy and VLAN attributes are applied at the port-level. In device mode, it is expected that only one device is active and authenticated at any instant. Untagged VLAN will override the port VLAN ID and the tagged VLANs will override the tagged VLANs that are configured on the port using the CLI.
- **2**: Client mode—In this mode, all devices trying to onboard on that port are authenticated. Here, the policy and VLAN attributes are applied per client. Untagged VLAN is configured using MAC-based VLAN. Tagged VLANs are arbitrated among all clients and the result is applied to the port.
- **3**: Multi-domain authentication Mode — This mode is used to allow only one voice device to be authenticated along with the configured data devices. To authorize a voice device, the AAA server must be configured to send an Aruba Attribute-Value (AV) **Aruba-Device-Traffic-Class** with value 1 or the role to be applied should have device type that indicates the voice device
- **4**: Proxy Mode—This mode is used to onboard an infrastructure device such as a switch or access point. Once the device is authenticated, all the clients behind the infrastructure device will be authorized if the client is gleaned by the RADIUS proxy service.

Aruba-QoS-Trust-Mode

Specifies how the switch assigns local priority values to ingress packets. Following are the supported values:

- **0**: Trust mode DSCP
- **1**: Trust mode QoS
- **2**: No trust mode configuration

This attribute overrides the trust mode configured on the port where the device onboards. This attribute is typically used for infrastructure devices. When multiple clients request different trust modes, the DSCP trust mode takes precedence over QoS trust mode and the QoS trust mode takes precedence over no trust mode configuration setting.

Aruba-User-Role

Specifies the role that must be applied for the devices post authentication. The role must be defined on the switch. All the session attributes can be defined in the role. Session authorization attributes (both standard and VSAs) sent with this attribute are ignored.

Aruba-Port-Bounce

Used in the CoA message to signal the switch to shut down the port for the duration specified.

Aruba-STP-Admin-Edge-Port

When enabled, the port will be treated as STP edge port. Even if STP is configured on the port, it will not be executed. Traffic forwarding will occur immediately when a device connects to the port and completes authentication. Following are the supported values:

- **0:** Disable STP admin edge port.
- **1:** Enable STP admin edge port.

Aruba-PoE-Allocate-By-Method

This attribute is used to set the PoE power allocation method for onboarding devices post authentication. Following are the supported values:

- **1:** Class
- **2:** Usage

This feature allows you to change the default PoE allocation method on the port. If multiple clients connected to the same port request different allocation methods, `Class` is given priority.

Attributes supported in RADIUS network accounting

Following are the attributes supported in RADIUS network accounting:

| Attribute name | Tx | Rx | Notes |
|-------------------------|----|----|------------------------------------|
| ----- | | | |
| User-name | N | N | RFC2865 |
| Calling-station-id | Y | N | RFC2865 |
| NAS-port-id | Y | N | RFC2869 |
| NAS-port | Y | N | RFC2865 |
| NAS-port-Type | Y | N | RFC2865 |
| Service-Type | Y | N | RFC2865 |
| NAS-IP-Address | Y | N | RFC2865 |
| NAS-Identifier | Y | N | RFC2865 |
| NAS-Ipv6-Address | Y | N | RFC3162 |
| Acct-Authentic | Y | N | RFC2866 |
| Acct-Session-Id | Y | N | RFC2866 |
| Acct-Status-Type | Y | N | RFC2866 |
| Acct-Input-Octets | Y | N | RFC2866 - In Interim and stop pkts |
| Acct-Output-Octets | Y | N | RFC2866 - In Interim and stop pkts |
| Acct-Input-Packets | Y | N | RFC2866 - In Interim and stop pkts |
| Acct-Output-Packets | Y | N | RFC2866 - In Interim and stop pkts |
| Acct-Input-Gigawords | Y | N | RFC2869 - In Interim and stop pkts |
| Acct-Output-Gigawords | Y | N | RFC2869 - In Interim and stop pkts |
| Acct-Session-Time | Y | N | RFC2866 - In Interim and stop pkts |
| Acct-Terminate-Cause | Y | N | RFC2866 - in Stop Pkt |
| Class | Y | N | RFC2865 |
| Tunnel-Type | Y | N | RFC2868 |
| Tunnel-Medium-Type | Y | N | RFC2868 |
| Tunnel-Private-Group-Id | Y | N | RFC2868 |

Attributes supported in RADIUS server tracking

Following are the attributes supported for MAC authentication in RADIUS server tracking:

| Attribute name | Tx | Rx | Notes |
|------------------|----|----|---------|
| ----- | | | |
| User-name | Y | N | RFC2865 |
| NAS-IP-Address | Y | N | RFC2865 |
| NAS-Identifier | Y | N | RFC2865 |
| NAS-Ipv6-Address | Y | N | RFC3162 |
| Chap-Challenge | Y | N | RFC2865 |
| Chap-Password | Y | N | RFC2865 |
| User-Password | Y | N | RFC2865 |



Port security applies to the 8325 and 10000 Switch Series but not the 8320, 8400, or 9300 Switch Series.



On the 10000 Switch Series PSM / Distributed Services (DSS) cannot be enabled at the same time as port security. If you attempt to enable PSM / DSS and port security is already enabled, the following message is displayed:

Distributed Services and Port Security cannot be enabled on the system at the same time.

Port security enables you to configure each switch port with a unique list of the MAC addresses of devices that are authorized to access the network through that port. This security enables individual ports to detect, prevent, and log attempts by unauthorized devices to communicate through the switch. MAC Lockdown, also known as Static Addressing, is used to prevent station movement and MAC address hijacking, by allowing a given MAC address to use only an assigned port on the switch. MAC Lockdown also restricts the client device to a specific VLAN.



Port security does not prevent intruders from receiving broadcast and multicast traffic. MAC Lockdown has a higher priority over port security.

Port-security sticky MAC

Sticky MAC is a port security feature that learns MAC addresses on an interface and retains the MAC information. When sticky learning is enabled on a port, all non-static MAC addresses are considered as sticky MACs. Also, all newly on-boarded clients are considered as sticky MACs. The sticky authorized clients are not affected by a switch reboot or link-flap once the MAC addresses are learnt. When disabled, all sticky MACs on the port are made as dynamic clients.

Sticky MACs can be configured statically (sticky-static) and also be learned dynamically (sticky-dynamic) on a sticky-learn enabled port.



- If the same MAC address is configured as sticky-static and static on a sticky learning port, sticky MAC configuration takes precedence.
- Static non-sticky MAC addition is supported on a sticky learning enabled port.
- Existing static port-security MACs on a port are not changed to sticky MAC on enabling the sticky MAC feature.
- Moving sticky MAC clients from one port to another is a violation. You can view the violation information using the **show port-access security violation sticky-mac-client-move interface** command. Also, the following event log message will be displayed: **Port security sticky client move violation triggered on port {port} for client with MAC address {mac_addr}**.
- Downgrading AOS-CX from 10.07 or later versions to earlier versions after learning port-security sticky MACs and upgrading it back to 10.07 or later versions might cause unstable behavior of sticky MACs. So, it is recommended to disable port-security configuration at the global context during migration of software image back to 10.07 or later versions in such scenarios.

Basic operation

Default port security operation

The default port security setting for each port is dynamic mode in which the switch learns addresses from inbound traffic from any connected device.

Intruder protection

A port that detects an intruder blocks the intruding device from transmitting to the network through that port.

General operation for port security

On a per-port basis, you can configure security measures to block unauthorized devices, and to send notice of security violations. Once port security is configured, you can then monitor the network for security violations through one or more of the following:

- Alert flags captured by network management tools.
- Alert Log entries in the WebAgent
- Event Log entries in the console interface

For any port, you can configure the following:


- Action—Used when a port detects an intruder. Specifies whether to send an SNMP trap to a network management station and whether to disable the port.
- Address limit—Sets the number of authorized MAC addresses allowed on the port.
- Static—Enables you to set a fixed limit on the number of MAC addresses authorized for the port and to specify some or all the authorized addresses. (If you specify only some of the authorized addresses, the port learns the remaining authorized addresses from the traffic it receives from connected devices.)
- Configured—Requires that you specify all MAC addresses authorized for the port. The port is not allowed to learn addresses from inbound traffic.

- Authorized (MAC) Addresses—Specify up to eight devices (MAC addresses) that are allowed to send inbound traffic through the port. This feature:
 - Closes the port to inbound traffic from any unauthorized devices that are connected to the port.
 - Provides the option for sending an SNMP trap notifying of an attempted security violation to a network management station and, optionally, disables the port.
- Port Access—Allows only the MAC address of a device authenticated through the switch 802.1X Port-Based access control.

Blocking unauthorized traffic

Unless you configure the switch to disable a port on which a security violation is detected, the switch security measures block unauthorized traffic without disabling the port. This implementation enables you to apply the security configuration to ports on which hubs, switches, or other devices are connected, and to maintain security while also maintaining network access to authorized users.

Figure 1 *How port security controls access*

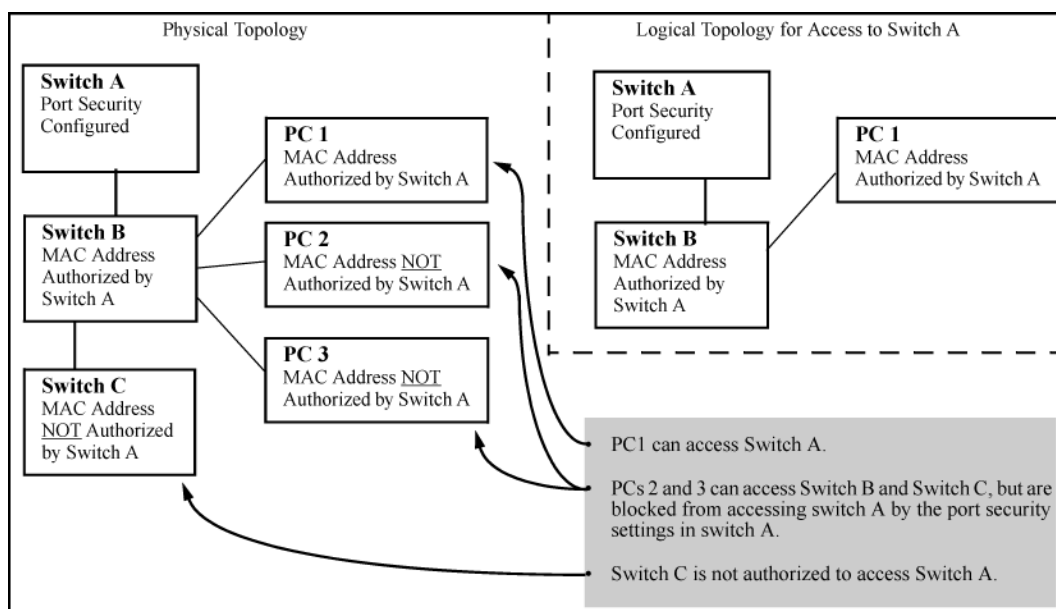

Broadcast and Multicast traffic is always allowed, and can be read by intruders connected to a port on which you have configured port security.

Trunk group exclusion

Port security does not operate on either a static or dynamic trunk group. If you configure port security on one or more ports that are later added to a trunk group, the switch resets the port security parameters for those ports to the factory default configuration. Ports configured for either Active or Passive LACP, and which are not members of a trunk, can be configured for port security.

Port security commands

port-access port-security

```
port-access port-security {enable | disable}
```

```
no port-access port-security {enable | disable}
```

Description

Enables or disables port security globally or at the port level.

Examples

Enabling port security globally:

```
switch(config)# port-access port-security enable
```

Disabling port security globally:

```
switch(config)# port-access port-security disable
```

Enabling port security on a port:

```
switch(config-if)# port-access port-security enable
```

Disabling port security on a port:

```
switch(config-if)# port-access port-security disable
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---------------------------------|
| 10.11 | Command introduced on the 8325 |
| 10.11 | Command introduced on the 10000 |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|---------------------|--|
| 8325
8325H
8325P
10000 | config
config-if | Administrators or local user group members with execution rights for this command. |

port-access port-security client-limit

```
port-access port-security client-limit <CLIENTS>  
no port-access port-security client-limit
```

Description

Configures the maximum number of clients that are allowed on a port. After configuring the maximum clients limit, the MAC addresses of the clients can be learned by one of the following methods:

- User can manually configure all MAC addresses by using the **mac-address** command.
- User can allow the port to dynamically learn all MAC addresses.
- User can configure a fixed number of MAC addresses and allow the switch to learn the remaining addresses dynamically.

The **no** form of the command resets the number of clients to the default, 1.

| Parameter | Description |
|------------------------------|---|
| <code><CLIENTS></code> | <p>Specifies the maximum number of clients. Default: 1.
Range: 0 to 32 (4100i, 6000, 6100, 5420, 6200). 0 to 64 (6300, 6400, 8100, 8325, 8325H, 8325P, 8360, 10000).</p> <p>NOTE: If client limit is configured to 0, the port will not learn any MAC address from inbound traffic and will be blocked indefinitely. An administrator can use this along with the port-access security violation configuration to get notified of a client attempting to connect to a port.</p> |

Examples

Configuring client limit on a port:

```
switch(config-if)# port-access port-security enable
switch(config-if-port-security)# client-limit 24
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---------------------------------|
| 10.11 | Command introduced on the 8325 |
| 10.11 | Command introduced on the 10000 |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|-------------------------|--|
| 8325
8325H
8325P
10000 | config-if-port-security | Administrators or local user group members with execution rights for this command. |

port-access port-security mac-address

```
port-access port-security mac-address <MAC-ADDRESS>
no port-access port-security mac-address <MAC-ADDRESS>
```

Description

Configures a static client (current interface (port) context) MAC address.

The **no** form of this command removes an authorized static client from the port.

| Parameter | Description |
|----------------------------------|--|
| <code><MAC-ADDRESS></code> | Specifies the static client MAC address. |

Examples

Configuring a static client on a port:

```
switch(config-if) # port-access port-security
switch(config-if-port-security) # mac-address aa:bb:cc:dd:ee:ff
```

Deleting a static client on a port:

```
switch(config-if) # port-access port-security
switch(config-if-port-security) # no mac-address aa:bb:cc:dd:ee:ff
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---------------------------------|
| 10.11 | Command introduced on the 8325 |
| 10.11 | Command introduced on the 10000 |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|-------------------------|--|
| 8325
8325H
8325P
10000 | config-if-port-security | Administrators or local user group members with execution rights for this command. |

show port-access port-security interface client-status

```
show port-access port-security interface {all|<IF-NAME>}
      client-status [mac <MAC-ADDRESS>]
```

Description

Shows port security clients status information for the ports. The output can be filtered by interface or MAC address.

| Parameter | Description |
|-----------|-------------------------|
| all | Selects all interfaces. |

| Parameter | Description |
|---------------|-----------------------------------|
| <IF-NAME> | Specifies the interface name. |
| <MAC-ADDRESS> | Specifies the client MAC address. |

Examples

Showing client status information for all ports:

```
switch# show port-access port-security interface all client-status
```

Port Security Client Status Details

| Authorized-Clients | Type | Port |
|--------------------|----------------|-------|
| AB:CD:DE:FF:AA:BB | static | 1/1/1 |
| DD:CD:AB:CD:EE:01 | dynamic | 1/1/2 |
| 00:50:56:96:7e:fc | sticky-dynamic | 1/3/2 |

Showing client status information with sticky-learning enabled for all ports:

```
switch# show port-access port-security interface all client-status
```

Port Security Client Status Details

| Authorized-Clients | Type | Port |
|--------------------|----------------|-------|
| AB:CD:DE:FF:AA:BB | sticky-static | 1/1/1 |
| DD:CD:AB:CD:EE:01 | sticky-dynamic | 1/1/2 |
| DE:CD:AB:BB:EE:02 | sticky-dynamic | 1/1/2 |

Showing client status information for a client:

```
switch# show port-access port-security interface 1/3/2 client-status mac 00:50:56:96:7e:fc
```

Port Security Client Status Details

| Authorized-Clients | Type | Port |
|--------------------|----------------|-------|
| 00:50:56:96:7e:fc | sticky-dynamic | 1/3/2 |

Showing client status information for a port:

```
switch# show port-access port-security interface 1/3/2 client-status
```

Port Security Client Status Details

| Authorized-Clients | Type | Port |
|--------------------|----------------|-------|
| 00:50:56:96:7e:fc | sticky-dynamic | 1/3/2 |



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---------------------------------|
| 10.11 | Command introduced on the 8325 |
| 10.11 | Command introduced on the 10000 |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|-----------------------------|--|
| 8325
8325H
8325P
10000 | Operator (>) or Manager (#) | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

show port-access port-security interface port-statistics

show port-access port-security interface {all|<IF-NAME>} port-statistics

Description

Shows port security statistics for the ports in a switch. The output can be filtered by interface.

| Parameter | Description |
|-----------|-------------------------------|
| all | Selects all interfaces. |
| <IF-NAME> | Specifies the interface name. |

Examples

Showing information for all ports.

```
switch# show port-access port-security interface all port-statistics

Port 1/1/1
=====

Client Details
-----
Number of authorized clients      : 0
Number of sticky authorized clients : 2
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---------------------------------|
| 10.11 | Command introduced on the 8325 |
| 10.11 | Command introduced on the 10000 |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|-----------------------------|--|
| 8325
8325H
8325P
10000 | Operator (>) or Manager (#) | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

sticky-learn enable

```
sticky-learn enable
no sticky-learn enable
```

Description

Enables sticky learning on the port. All the existing and new MACs learned on the port are made sticky. The **no** form of this command disables the sticky learning on the port.

Examples

Enabling sticky learning on the port:

```
switch(config)# interface 1/1/1
switch(config-if)# port-access port-security
switch(config-if-port-security)# sticky-learn enable
```

Disabling sticky learning on the port:

```
switch(config)# interface 1/1/1
switch(config-if)# port-access port-security
switch(config-if-port-security)# no sticky-learn enable
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---------------------------------|
| 10.11 | Command introduced on the 8325 |
| 10.11 | Command introduced on the 10000 |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|-------------------------|--|
| 8325
8325H
8325P
10000 | config-if-port-security | Administrators or local user group members with execution rights for this command. |

sticky-learn mac

```
sticky-learn mac <MAC-ADDRESS> [vlan <VLAN-ID>]  
no sticky-learn mac <MAC-ADDRESS> [vlan <VLAN-ID>]
```

Description

Configures the MAC addresses of sticky static clients. After configuring, clients are directly added to the MAC address table.

The **no** form of this command removes an authorized sticky static client from the port.

| Parameter | Description |
|----------------|---|
| <MAC-ADDRESS> | Specifies the static sticky client MAC address. |
| vlan <VLAN-ID> | Specifies the static sticky client VLAN ID. |

Examples

Configuring a sticky static client on a port:

```
switch(config)# interface 1/1/1  
switch(config-if)# port-access port-security  
switch(config-if-port-security)# sticky-learn mac-address aa:bb:cc:dd:ee:ff
```

Configuring a sticky static client with a VLAN ID on a port:

```
switch(config)# interface 1/1/1  
switch(config-if)# port-access port-security  
switch(config-if-port-security)# sticky-learn mac-address aa:bb:cc:dd:ee:ff vlan 4
```

Removing a sticky static client from a port:

```
switch(config)# interface 1/1/1  
switch(config-if)# port-access port-security  
switch(config-if-port-security)# no sticky-learn mac-address aa:bb:cc:dd:ee:ff
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---------------------------------|
| 10.11 | Command introduced on the 8325 |
| 10.11 | Command introduced on the 10000 |

Command Information

| Platforms | Command context | Authority |
|---------------|-------------------------|--|
| 8325
8325H | config-if-port-security | Administrators or local user group members with execution rights for this command. |

| Platforms | Command context | Authority |
|----------------|-----------------|-----------|
| 8325P
10000 | | |

show port-access security violation sticky-mac-client-move interface

show port-access security violation sticky-mac-client-move interface {all|<IF-NAME>}

Description

Shows information about the sticky-mac client move violation. The output can be filtered by interface.

| Parameter | Description |
|-----------|-------------------------------|
| all | Selects all interfaces. |
| <IF-NAME> | Specifies the interface name. |

Examples

Showing information for all ports.

```
switch# show port-access port-security violation sticky-mac-client-move
interface all
```

Sticky MAC Client Move Violation Status Details

| Port | Violation | Violation-Count |
|-------|-----------|-----------------|
| 1/1/1 | No | 0 |
| 1/1/2 | Yes | 10 |
| 1/1/5 | No | 10 |

Showing information for a particular port.

```
switch# show port-access port-security violation sticky-mac-client-move
interface 1/1/1
```

Sticky MAC Client Move Violation Status Details

| Port | Violation | Violation-Count |
|-------|-----------|-----------------|
| 1/1/1 | No | 10 |



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---------------------------------|
| 10.11 | Command introduced on the 8325 |
| 10.11 | Command introduced on the 10000 |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|-----------------------------|--|
| 8325
8325H
8325P
10000 | Operator (>) or Manager (#) | Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only. |

AOS-CX switches include automatic detection and control for certain link errors and excessive traffic conditions. Fault monitor can be used to log an event or send SNMP traps for these conditions and temporarily disable the port to protect the network. Monitoring can be enabled for all recognized faults or for individual faults, and actions and thresholds for each fault can be configured.

Fault monitor applies only to physical ports and not to LAGs, tunnels, VSF links, or other types of interfaces. Fault monitoring can be applied to the individual members of a LAG.

Fault monitoring conditions

The following fault conditions are available for monitoring:

Excessive broadcasts

An excessive broadcast (broadcast storm) fault is reported when the average ingress traffic rate of broadcast packets exceeds the configured threshold in a 20 second interval.

The default threshold level is configured as a percentage of the bandwidth of the port. Larger the frame size, smaller the converted threshold value in PPS. Hence larger frames require lower threshold percent configurations to hit the fault.

Excessive multicasts

An excessive multicasts (multicast storm) fault is reported when the average ingress traffic rate of multicast packets exceeds the configured threshold in a 20 second interval.

Excessive link flaps

An excessive link flaps fault is reported when the count of transitions between link-up and link-down state exceeds the configured threshold in a 10 second interval.

Excessive oversize packets

An excessive oversized packet fault is reported when the number of ingress oversized frames per 10,000 received frames exceeds the configured threshold value in a 20 second interval. In an oversize packet fault, the packets size is more than the configured MTU on the interface with good cyclic redundancy check (CRC).

Excessive jabbers

An excessive jabbers fault is reported when the number of ingress jabber frames per 10,000 received frames exceeds the configured threshold value in a 20 second interval. In a jabbers fault, the packets size is more than the configured MTU on the interface with bad CRC.

Excessive fragments

An excessive fragments fault is reported when the number of ingress fragment frames per 10,000 received frames exceeds the configured threshold value in a 20 second interval. In a fragments fault, the packet size is less than 64 bytes with bad CRC.

Excessive CRC errors

An excessive CRC errors fault is reported when the number of ingress `crc-error` frames per 10,000 received frames exceeds the configured threshold value in a 20 second interval.

Excessive late collisions

An excessive late collisions fault is reported when ingress `late-collision` frames per 10,000 received frames exceeds the configured threshold value in a 300 second interval.

Excessive collisions

An excessive collisions fault is an example of over bandwidth, it gets reported when egress `collision` frames per 10,000 transmitted frames exceeds the configured threshold value in a 20 second interval.

Excessive TX drops

An excessive TX drops fault is reported when egress dropped packets per 10,000 transmitted frames exceeds the configured threshold value in a 20 second interval.

Excessive alignment errors

An excessive alignment errors (full duplex mismatch) fault is reported when ingress `alignment-error` frames per 10,000 received frames exceeds the configured threshold value in a 20 second interval.

Excessive flow control watchdog triggers

(Applies to the 8325, 9300, 10000 Switch Series.)

An excessive flow control watchdog triggers fault is reported when the count of flow control watchdog triggers exceeds the configured threshold in a 20 second interval. For the fault monitor to detect an excessive flow control watchdog triggers fault, it is necessary to enable flow control watchdog on an interface using command `flow-control watchdog`.

Fault monitor commands

(Fault enabling/disabling)

```
{all | <FAULT>}  
no {all | <FAULT>}
```

Description

Within the selected fault monitor profile context, enables all faults or specific faults for monitoring.



By default, all faults are disabled in a profile and remain disabled until enabled as described here. Configuring the action and threshold does not enable the fault.

Faults enabled with this command use default actions and thresholds unless the actions and thresholds are configured. For information on configuring actions and thresholds for a fault, respectively see [action](#) and [threshold](#).

The **no** form of this command disables faults for monitoring.

| Parameter | Description |
|----------------------------|---|
| <code>all</code> | Selects all faults. |
| <code><FAULT></code> | Selects a specific fault. Available fault names:
excessive-broadcasts
excessive-multicasts
excessive-link-flaps
excessive-oversize-packets
excessive-jabbers
excessive-fragments
excessive-crc-errors
excessive-late-collisions
excessive-collisions
excessive-tx-drops
excessive-alignment-errors
excessive-fc-watchdog-triggers (applies to HPE Aruba Networking 8325, 9300/9300S, 10000 Switch series) |

Examples

Enabling all faults:

```
switch(config-fault-monitor-profile)# all
```

Disabling all faults:

```
switch(config-fault-monitor-profile)# no all
```

Enabling individual faults:

```
switch(config-fault-monitor-profile)# excessive-broadcasts  
switch(config-fault-monitor-profile)# excessive-multicasts  
switch(config-fault-monitor-profile)# excessive-link-flaps  
switch(config-fault-monitor-profile)# excessive-oversize-packets  
switch(config-fault-monitor-profile)# excessive-jabbers  
switch(config-fault-monitor-profile)# excessive-fragments  
switch(config-fault-monitor-profile)# excessive-crc-errors  
switch(config-fault-monitor-profile)# excessive-late-collisions  
switch(config-fault-monitor-profile)# excessive-collisions  
switch(config-fault-monitor-profile)# excessive-tx-drops
```

```
switch(config-fault-monitor-profile) # excessive-alignment-errors
switch(config-fault-monitor-profile) # excessive-fc-watchdog-triggers
```

Disabling individual faults:

```
switch(config-fault-monitor-profile) # no excessive-broadcasts
switch(config-fault-monitor-profile) # no excessive-multicasts
switch(config-fault-monitor-profile) # no excessive-link-flaps
switch(config-fault-monitor-profile) # no excessive-oversize-packets
switch(config-fault-monitor-profile) # no excessive-jabbers
switch(config-fault-monitor-profile) # no excessive-fragments
switch(config-fault-monitor-profile) # no excessive-crc-errors
switch(config-fault-monitor-profile) # no excessive-late-collisions
switch(config-fault-monitor-profile) # no excessive-collisions
switch(config-fault-monitor-profile) # no excessive-tx-drops
switch(config-fault-monitor-profile) # no excessive-alignment-errors
switch(config-fault-monitor-profile) # no excessive-fc-watchdog-triggers
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------|---|
| 10.12 | Added excessive-fc-watchdog-triggers on the 8325, 9300, and 10000. |
| 10.11.1000 | Command introduced on the 8320, 8325, 8360, 9300 and 10000. |
| 10.08.1010 | Command introduced on the 8400. |

Command Information

| Platforms | Command context | Authority |
|---------------|------------------------------|--|
| All platforms | config-fault-monitor-profile | Administrators or local user group members with execution rights for this command. |

action

```
{all | <FAULT>} action {notify | notify-and-disable [auto-enable <TIMEOUT>]}
```

```
no {all | <FAULT>} action {notify | notify-and-disable [auto-enable <TIMEOUT>]}
```

Description

Within the selected fault monitor profile context, configures the fault monitoring action for the specified fault. Default action: **notify** with **auto-enable** disabled.

The no form of this command removes the action and disables **auto-enable**.

| Parameter | Description |
|-----------------------|---|
| all | Selects all faults. |
| <FAULT> | Selects a specific fault. Available fault names:
excessive-broadcasts
excessive-multicasts
excessive-link-flaps
excessive-oversize-packets
excessive-jabbers
excessive-fragments
excessive-crc-errors
excessive-late-collisions
excessive-collisions
excessive-tx-drops
excessive-alignment-errors
excessive-fc-watchdog-triggers (applies to HPE Aruba Networking 8325, 9300/9300S, 10000 Switch series) |
| notify | Selects the notify action. Notifies through events, DLOGs, and SNMP trap. This action is enabled by default. |
| notify-and-disable | Selects the action as notify-and-disable . Notifies through events, DLOGs, and SNMP trap, and then disables the port. |
| auto-enable <TIMEOUT> | Sets the number of seconds after which a port disabled by the notify-and-disable action is automatically re-enabled. Range: 1 to 604800 seconds. |



The fault parameter values are saved even after a fault is disabled in the profile. The saved values will be used if the fault is later re-enabled in the profile again.

Examples

Configuring the **notify** action for all faults within a given profile:

```
switch(config-fault-monitor-profile)# all action notify
```

Configuring the **notify-and-disable** action for all faults within a given profile:

```
switch(config-fault-monitor-profile)# all action notify-and-disable
```

Configuring the **notify-and-disable** action for all faults with **auto-enable** within a given profile:

```
switch(config-fault-monitor-profile)# all action notify-and-disable auto-enable 80
```

Disabling all fault monitoring for this profile:

```
switch(config-fault-monitor-profile)# no all
```

Restoring all fault monitoring to the default action **notify** within a given profile:

```
switch(config-fault-monitor-profile) # no all action
```

Unconfiguring the auto-enable timer for all fault monitoring within a given profile:

```
switch(config-fault-monitor-profile) # no all action notify-and-disable auto-enable
```

Configuring the **notify** action for specific faults within a given profile:

```
switch(config-fault-monitor-profile) # excessive-oversize-packets action notify
switch(config-fault-monitor-profile) # excessive-late-collisions action notify-and-
disable
switch(config-fault-monitor-profile) # excessive-collisions action notify-and-
disable
switch(config-fault-monitor-profile) # excessive-fc-watchdog-triggers notify
```

Configuring the **notify-and-disable** action for specific faults within a given profile:

```
switch(config-fault-monitor-profile) # excessive-link-flaps action notify-and-
disable
switch(config-fault-monitor-profile) # excessive-fragments action notify-and-
disable
switch(config-fault-monitor-profile) # excessive-crc-errors action notify-and-
disable
switch(config-fault-monitor-profile) # excessive-alignment-errors action notify-
and-disable
```

Configuring the **notify-and-disable** action with **auto-enable** for specific faults within a given profile:

```
switch(config-fault-monitor-profile) # excessive-broadcasts action notify-and-
disable auto-enable 80
switch(config-fault-monitor-profile) # excessive-multicasts action notify-and-
disable auto-enable 100
switch(config-fault-monitor-profile) # excessive-tx-drops action notify-and-disable
auto-enable 70
switch(config-fault-monitor-profile) # excessive-jabbers action notify-and-disable
auto-enable 60
```

Restoring fault monitoring to the default action **notify** within a given profile:

```
switch(config-fault-monitor-profile) # no excessive-fc-watchdog-triggers action
switch(config-fault-monitor-profile) # no excessive-oversize-packets action
switch(config-fault-monitor-profile) # no excessive-jabbers action
switch(config-fault-monitor-profile) # no excessive-oversize-packets action notify-
and-disable
```

Unconfiguring the auto-enable timer within a given profile:

```
switch(config-fault-monitor-profile) # no excessive-jabbers action notify-and-
disable auto-enable
switch(config-fault-monitor-profile) # no excessive-collisions action notify-and-
disable auto-enable
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------|---|
| 10.12 | Added excessive-fc-watchdog-triggers on the 8325, 9300, and 10000. |
| 10.11.1000 | Command introduced on the 8320, 8325, 8360, 9300 and 10000. |
| 10.08.1010 | Command introduced on the 8400. |

Command Information

| Platforms | Command context | Authority |
|---------------|------------------------------|--|
| All platforms | config-fault-monitor-profile | Administrators or local user group members with execution rights for this command. |

apply fault-monitor profile

```
apply fault-monitor profile <PROFILE-NAME>
no apply fault-monitor profile [<PROFILE-NAME>]
```

Description

Applies a fault monitoring profile to the selected interface or interface range.

The **no** form of this command removes the fault monitoring profile from the selected interface or interface range.

| Parameter | Description |
|----------------|--|
| <PROFILE-NAME> | Specifies the fault monitor profile name. Range: Up to 64 alphanumeric and special characters. |

Examples

Applying the fault monitoring profile to a interface:

```
switch(config)# interface 1/1/1
switch(config-if)# apply fault-monitor profile noisy-ports
```

Applying the fault monitoring profile to a interface range:

```
switch(config)# interface 1/1/2-1/1/24
switch(config-if)# apply fault-monitor profile quiet-ports
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------|---|
| 10.11.1000 | Command introduced on the 8320, 8325, 8360, 9300 and 10000. |
| 10.08.1010 | Command introduced on the 8400. |

Command Information

| Platforms | Command context | Authority |
|---------------|-----------------|--|
| All platforms | config-if | Administrators or local user group members with execution rights for this command. |

fault-monitor profile

```
fault-monitor profile <PROFILE-NAME>
no fault-monitor profile <PROFILE-NAME>
```

Description

Creates a fault monitoring profile and enters its context which is indicated as **(config-fault-monitor-profile)**. If the profile already exists, this command enters the profile context. A maximum of 16 fault monitoring profiles are supported.

For information on enabling a fault within a fault monitor profile, see [Fault enabling/disabling](#).

For information on configuring actions and thresholds for a fault, respectively see [action](#) and [threshold](#).

For information on applying a fault monitor profile to a interface or interface range, see [apply fault-monitor profile](#).

The **no** form of this command deletes the fault monitoring profile.



By default, all faults are disabled in a profile.

| Parameter | Description |
|----------------|--|
| <PROFILE-NAME> | Specifies the fault monitor profile name. Range: Up to 64 alphanumeric and special characters. |

Examples

Creating a fault monitor profile and entering its context:

```
switch(config)# fault-monitor profile noisy-ports
switch(config-fault-monitor-profile)#
```

Deleting a fault monitor profile:

```
switch(config)# no fault-monitor profile noisy-ports
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------|---|
| 10.11.1000 | Command introduced on the 8320, 8325, 8360, 9300 and 10000. |
| 10.08.1010 | Command introduced on the 8400. |

Command Information

| Platforms | Command context | Authority |
|---------------|-----------------|--|
| All platforms | config | Administrators or local user group members with execution rights for this command. |

show fault-monitor profile

show fault-monitor profile <PROFILE-NAME>

Description

Shows fault monitoring profile information for all profiles or a specific profile.

| Parameter | Description |
|----------------|--|
| <PROFILE-NAME> | Specifies the fault monitor profile name. Range: Up to 64 alphanumeric and special characters. |

Example

Showing information for all fault monitoring profiles:

```
switch# show fault-monitor profile
-----
Fault monitor profile: noisy-ports
-----
Auto
Fault                               Enabled  Threshold  Action                Enable
-----
excessive-broadcasts                yes      5%          notify-and-disable    --
excessive-multicasts                yes      1000 pps    notify-and-disable    --
excessive-link-flaps                yes      7           notify-and-disable    --
excessive-oversize-packets          yes      25          notify-and-disable    --
excessive-jabbers                   yes      25          notify-and-disable    --
excessive-fragments                 yes      25          notify-and-disable    --
excessive-crc-errors                yes      25          notify-and-disable    --
excessive-late-collisions            yes      25          notify-and-disable    --
excessive-collisions                yes      25          notify-and-disable    --
excessive-tx-drops                  yes      25          notify-and-disable    --
excessive-alignment-errors          yes      25          notify-and-disable    --
excessive-fc-watchdog-triggers      yes      1           notify-and-disable    --
-----
Fault monitor profile: quiet-ports
-----
Auto
Fault                               Enabled  Threshold  Action                Enable
-----
```

| | | | | |
|--------------------------------|-----|-----------|--------------------|-----|
| excessive-broadcasts | yes | 20% | notify-and-disable | -- |
| excessive-multicasts | yes | 25000 pps | notify-and-disable | 40 |
| excessive-link-flaps | yes | 7 | notify | -- |
| excessive-oversize-packets | yes | 30 | notify-and-disable | -- |
| excessive-jabbers | no | 30 | notify-and-disable | 100 |
| excessive-fragments | yes | 30 | notify-and-disable | -- |
| excessive-crc-errors | yes | 30 | notify-and-disable | -- |
| excessive-late-collisions | yes | 30 | notify-and-disable | -- |
| excessive-collisions | yes | 30 | notify-and-disable | -- |
| excessive-tx-drops | yes | 30 | notify-and-disable | -- |
| excessive-alignment-errors | yes | 30 | notify-and-disable | -- |
| excessive-fc-watchdog-triggers | yes | 25 | notify-and-disable | -- |

Showing information for a particular fault monitoring profile:

```
switch# show fault-monitor profile noisy-ports
-----
Fault monitor profile: noisy-ports
-----
Auto
Fault                               Enabled  Threshold  Action                Enable
-----
excessive-broadcasts                yes      5%          notify-and-disable    --
excessive-multicasts                yes      1000 pps    notify-and-disable    --
excessive-link-flaps                yes      7           notify-and-disable    --
excessive-oversize-packets          yes      25          notify-and-disable    --
excessive-jabbers                   yes      25          notify-and-disable    --
excessive-fragments                 yes      25          notify-and-disable    --
excessive-crc-errors                yes      25          notify-and-disable    --
excessive-late-collisions            yes      25          notify-and-disable    --
excessive-collisions                yes      25          notify-and-disable    --
excessive-tx-drops                  yes      25          notify-and-disable    --
excessive-alignment-errors          yes      25          notify-and-disable    --
excessive-fc-watchdog-triggers      yes      1           notify-and-disable    --
-----
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------|---|
| 10.12 | Added excessive-fc-watchdog-triggers on the 8325, 9300, and 10000. |
| 10.11.1000 | Command introduced on the 8320, 8325, 8360, 9300 and 10000. |
| 10.08.1010 | Command introduced on the 8400. |

Command Information

| Platforms | Command context | Authority |
|---------------|-----------------|--|
| All platforms | Manager (#) | Administrators or local user group members with execution rights for this command. |

show interface fault-monitor profile

show interface [<INTERFACE>|<IF-RANGE>] fault-monitor profile

Description

Shows fault monitoring profile configuration information for all or specific interfaces.

| Parameter | Description |
|-------------|-------------------------------|
| <INTERFACE> | Specifies a single interface. |
| <IF-RANGE> | Specifies a interface range, |

Example

Showing all interfaces with applied fault monitoring profiles:

```
switch# show interface fault-monitor profile
```

```
-----  
Port      Fault Monitor Profile  
-----
```

```
1/1/1     noisy-ports  
1/1/2     quiet-ports  
1/1/4     quiet-ports  
1/1/5     noisy-ports  
1/1/6     noisy-ports  
1/1/7     quiet-ports
```

Showing a range of interfaces with applied fault monitoring profiles:

```
switch# show interface 1/1/1-1/1/2,1/1/6 fault-monitor profile
```

```
-----  
Port      Fault Monitor Profile  
-----
```

```
1/1/1     noisy-ports  
1/1/2     quiet-ports  
1/1/6     noisy-ports
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------|---|
| 10.11.1000 | Command introduced on the 8320, 8325, 8360, 9300 and 10000. |
| 10.08.1010 | Command introduced on the 8400. |

Command Information

| Platforms | Command context | Authority |
|---------------|-----------------|--|
| All platforms | Manager (#) | Administrators or local user group members with execution rights for this command. |

show interface fault-monitor status

`show interface [<INTERFACE>|<IF-RANGE>] fault-monitor status`

Description

Shows active fault information for all or specific interfaces.

| Parameter | Description |
|--------------------------------|-------------------------------|
| <code><INTERFACE></code> | Specifies a single interface. |
| <code><IF-RANGE></code> | Specifies a interface range, |

Example

Showing active fault information for all interfaces with applied fault monitoring profiles:

```
switch# show interface fault-monitor status
```

| Port | Fault | Fault Elapsed Time | Port State | Time Left |
|-------|----------------------------|------------------------------|------------|-----------|
| 1/1/1 | excessive-broadcasts | Tue Apr 14 14:29:09 UTC 2020 | down | 60 |
| | excessive-jabbers | Tue Apr 15 14:29:09 UTC 2020 | -- | -- |
| 1/1/2 | excessive-oversize-packets | Tue Apr 16 14:29:09 UTC 2020 | down | -- |

Showing active fault information for a range of interfaces with applied fault monitoring profiles:

```
switch# show interface 1/3/1,1/3/3 fault-monitor status
```

| Port | Fault | Occurring Since | Port State | Time Left |
|-------|----------------------|------------------------------|------------|-----------|
| 1/1/4 | excessive-broadcasts | Tue Apr 14 14:29:09 UTC 2020 | down | 60 |
| | excessive-jabbers | Tue Apr 15 14:29:09 UTC 2020 | -- | 100 |



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------|---|
| 10.11.1000 | Command introduced on the 8320, 8325, 8360, 9300 and 10000. |
| 10.08.1010 | Command introduced on the 8400. |

Command Information

| Platforms | Command context | Authority |
|---------------|-----------------|--|
| All platforms | Manager (#) | Administrators or local user group members with execution rights for this command. |

show running-config

```
show running-config [interface <IFNAME> | current-context | all]
```

Description

Shows the running configuration including any fault-monitor profile configurations and profile-names applied to an interface. The below examples focus on fault monitor-related configuration items. Other configuration items that may be present are represented by an ellipsis (. . .).

| Parameter | Description |
|--------------------|---|
| interface <IFNAME> | Shows running configuration information for only the specified interface. |
| current-context | Shows running configuration information for only the current context. |
| all | Shows all running configuration information. |

Examples

Showing the running configuration for a particular interface:

```
switch# show running-config interface 1/1/1
interface 1/1/1
...
    apply fault-monitor profile noisy-ports
...
```

Showing the running configuration for a particular fault monitor profile current context:

```
switch# fault-monitor profile noisy-ports
switch(config-fault-monitor-profile)# show running-config current-context
fault-monitor profile noisy-ports
    excessive-broadcasts
    excessive-broadcasts threshold pps 10000
    excessive-broadcasts action notify-and-disable auto-enable 2000
    excessive-multicasts
    excessive-multicasts threshold pps 10000
    excessive-link-flaps
    excessive-link-flaps action notify-and-disable auto-enable 2000
```

Showing all running configuration:

```
switch# show running-config all
...
fault-monitor profile noisy-ports
    excessive-broadcasts
    excessive-broadcasts threshold pps 10000
```

```

excessive-broadcasts action notify-and-disable auto-enable 2000
excessive-multicasts
excessive-multicasts threshold pps 10000
excessive-multicasts action notify
excessive-link-flaps
excessive-link-flaps threshold count 7
excessive-link-flaps action notify-and-disable auto-enable 2000
no excessive-oversize-packets
excessive-oversize-packets threshold value 25
excessive-oversize-packets action notify
no excessive-jabbers
excessive-jabbers threshold value 25
excessive-jabbers action notify
no excessive-fragments
excessive-fragments threshold value 25
excessive-fragments action notify
no excessive-crc-errors
excessive-crc-errors threshold value 25
excessive-crc-errors action notify
no excessive-late-collisions
excessive-late-collisions threshold value 25
excessive-late-collisions action notify
no excessive-collisions
excessive-collisions threshold value 25
excessive-collisions action notify
no excessive-tx-drops
excessive-tx-drops threshold value 25
excessive-tx-drops action notify
no excessive-alignment-errors
excessive-alignment-errors threshold value 25
excessive-alignment-errors action notify
excessive-fc-watchdog-triggers
excessive-fc-watchdog-triggers threshold count 1
excessive-fc-watchdog-triggers action notify-and-disable
...
interface 1/1/1
...
    apply fault-monitor profile noisy-ports
...

```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------|---|
| 10.12 | Added excessive-fc-watchdog-triggers on the 8325, 9300, and 10000. |
| 10.11.1000 | Command introduced on the 8320, 8325, 8360, 9300 and 10000. |
| 10.08.1010 | Command introduced on the 8400. |

Command Information

| Platforms | Command context | Authority |
|---------------|-----------------|--|
| All platforms | Manager (#) | Administrators or local user group members with execution rights for this command. |

threshold

```
<FAULT> threshold value <VALUE>
no <FAULT> threshold [value <VALUE>]

excessive-link-flaps threshold count <COUNT>
no excessive-link-flaps threshold [count <COUNT>]

excessive-fc-watchdog-triggers threshold count <COUNT>
no excessive-fc-watchdog-triggers threshold [count <COUNT>]

{excessive-broadcasts | excessive-multicasts}
  threshold {percent <BW-PERCENT> | pps <PPS>}
no {excessive-broadcasts | excessive-multicasts}
  threshold [{percent <BW-PERCENT> | pps <PPS>}]

no all threshold
```

Description

Within the selected fault monitor profile context, sets the specified fault threshold.

The **no** form of this command resets the threshold to its default value.

| Parameter | Description |
|---|--|
| <pre><FAULT> threshold value <VALUE></pre> <p>With <FAULT> set to any of these names:</p> <pre>excessive-oversize-packets excessive-jabbers excessive-fragments excessive-crc-errors excessive-late-collisions excessive-collisions excessive-tx-drops excessive-alignment-errors</pre> | <p>Sets the threshold number of bad frames per 10000 good frames received or per 10000 good frames sent (depending on the fault), to be considered a fault. Range: 1 to 10000. Default: 25.</p> |
| <pre>excessive-link-flaps threshold count <COUNT></pre> | <p>Sets the threshold count of interface link flaps, during a 10 second sampling interval, to be considered a fault. Range: 1 to 100. Default: 7.</p> |
| <pre>excessive-fc-watchdog-triggers threshold count <COUNT></pre> | <p>(Applies to the HPE Aruba Networking 8325, 9300/9300S, 10000 Switch Series.)</p> <p>Sets the fault threshold as a count of the minimum number of flow-control watchdog triggers within a 20-second sampling interval that is considered to be a fault. Range: 1 to 10000. Default: 1.</p> |
| <pre>{excessive-broadcasts excessive-multicasts} threshold percent <BW-PERCENT></pre> | <p>Sets the fault threshold as a percentage of port bandwidth for minimum sized packets that is considered to be a fault. Range: 1 to 100. Default 5.</p> |

| Parameter | Description |
|--|--|
| <code>{excessive-broadcasts excessive-multicasts} threshold pps <PPS></code> | Sets the fault threshold in packets per second. Range: 1 to 195312500. |

If excessive-broadcast or excessive-multicast faults are configured with the threshold higher than the `rate-limit` threshold, the following occurs:

- Fault reporting still happens as the port has actually received packets at a rate that violated its threshold.
- Traffic gets shaped as per `rate-limit` configuration and any packet exceeding the `rate-limit` threshold gets dropped.

Examples

Setting thresholds:

```
switch(config-fault-monitor-profile) # excessive-oversize-packets threshold value 40
switch(config-fault-monitor-profile) # excessive-jabbers threshold value 30
switch(config-fault-monitor-profile) # excessive-fragments threshold value 50
switch(config-fault-monitor-profile) # excessive-crc-errors threshold value 35
switch(config-fault-monitor-profile) # excessive-late-collisions threshold value 30
switch(config-fault-monitor-profile) # excessive-collisions threshold value 40
switch(config-fault-monitor-profile) # excessive-tx-drops threshold value 20
switch(config-fault-monitor-profile) # excessive-alignment-errors threshold value 50

switch(config-fault-monitor-profile) # excessive-link-flaps threshold count 14
switch(config-fault-monitor-profile) # excessive-fc-watchdog-triggers threshold count 5
switch(config-fault-monitor-profile) # excessive-broadcasts threshold percent 40
switch(config-fault-monitor-profile) # excessive-multicasts threshold pps 7500
```

Resetting all thresholds to their defaults:

```
switch(config-fault-monitor-profile) # no all threshold
```

Resetting individual thresholds to their defaults:

```
switch(config-fault-monitor-profile) # no excessive-oversize-packets threshold
switch(config-fault-monitor-profile) # no excessive-jabbers threshold
switch(config-fault-monitor-profile) # no excessive-fragments threshold
switch(config-fault-monitor-profile) # no excessive-crc-errors threshold
switch(config-fault-monitor-profile) # no excessive-late-collisions threshold
switch(config-fault-monitor-profile) # no excessive-collisions threshold
switch(config-fault-monitor-profile) # no excessive-tx-drops threshold
switch(config-fault-monitor-profile) # no excessive-alignment-errors threshold

switch(config-fault-monitor-profile) # no excessive-link-flaps threshold
switch(config-fault-monitor-profile) # no excessive-fc-watchdog-triggers threshold

switch(config-fault-monitor-profile) # no excessive-broadcasts threshold
```

```
switch(config-fault-monitor-profile) # no excessive-multicasts threshold
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------|---|
| 10.12 | Added excessive-fc-watchdog-triggers on the 8325, 9300, and 10000. |
| 10.11.1000 | Command introduced on the 8320, 8325, 8360, 9300 and 10000. |
| 10.08.1010 | Command introduced on the 8400. |

Command Information

| Platforms | Command context | Authority |
|---------------|------------------------------|--|
| All platforms | config-fault-monitor-profile | Administrators or local user group members with execution rights for this command. |

vsx-sync (fault monitor)

```
vsx-sync  
no vsx-sync
```

Description

Within the selected fault monitor profile context, configures VSX synchronization for the selected fault monitoring profile.

The **no** form of this command removes the VSX synchronization for a fault monitoring profile.

Example

Configuring VSX synchronization for a fault monitoring profile:

```
switch(config-fault-monitor-profile) # vsx-sync
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------|---|
| 10.11.1000 | Command introduced on the 8320, 8325, 8360, 9300 and 10000. |
| 10.08.1010 | Command introduced on the 8400. |

Command Information

| Platforms | Command context | Authority |
|--|------------------------------|--|
| 8320
8325
8325H
8325P
8400
9300
9300S
10000 | config-fault-monitor-profile | Administrators or local user group members with execution rights for this command. |

Chapter 22

Group based policy (GBP)



The 8325 and 10000 Switch Series support relaying the GBP tag in the core network layer. GBP policy is not supported. For the core to support GBP relay, you must enable GBP with the command `gbp enable`. It is important to note that the GBP policy enforcement is not supported.

Group Based Policies (GBP) are used to segment user traffic in a network by grouping the users into roles based on user authentication at the source or ingress VXLAN tunnel endpoint (VTEP). Source-based roles will remain effective even if a device authenticates at a different location, or if the device is assigned a different IP address. Users can be local authenticated, MAC authenticated, or 802.1X authenticated clients. After authentication a Group Policy ID is mapped based on the role applied.

Dynamic Segmentation or Virtual Network Based Tunneling (VNBT) helps in segmentation of user traffic over a VXLAN overlay based network and GBP helps by providing segmentation of user traffic in the same domain based on user role (determined during authentication). Segmentation using GBP feature performs the following actions:

- Allows micro-segmentation of the user traffic on the same VLAN by classifying the user traffic based on user role. The role is then converted into Group Policy IDs and carried in the VXLAN header.
- At egress, the switch determines if the traffic from the source role (as carried in the Group Policy ID) is permitted to the destination role (as determined from the destination MAC) and accordingly either forwards or drops the traffic. Even the intra-role communication is determined by the switch and it is denied by default.
- In a gateway scenario, the traffic on a VXLAN tunnel may get terminated and enter another VXLAN tunnel. In such scenarios, the Group Policy ID must be transported to the new tunnel for the final destination to enforce role-based policies.

The port-access group-based policies support GBP-MAC, GBP-IPv4 and GBP-IPv6 based classes. These classes cannot be configured under classifier or port-access policies as match criteria. All the destination roles in the class entries match condition should be the same role.

Group based port-access policies (GBP) are configured and applied globally via local user roles (LUR) to the clients. GBP does not support downloadable user roles (DUR). Classes in group based policies should have a destination role that is the same as the associated user role. If the associated role is not the same, the clients will not be onboarded.

Limitations and considerations

- CPU-generated packets are assigned the **infra** role as source role, but packets re-forwarded by the CPU (such as CPU tx-to-port packets) are assigned the **default** role as the source role.
- The following applications) re-forward packets, so GBP policies for the default role are required to egress the packet: DHCP Snooping (both IPv4 and IPv6), Captive Portal, ND snooping, RA Guard, IGMP, MLD and mDNS.
- When a GBP is updated while the port-access daemon is not running, all the clients associated with the GBP will be logged off when the daemon restarts.

- New system roles **internet(3)**, **intranet(4)**, and **isl(5)** are introduced in 10.13. If you upgrade from a release earlier than 10.14, make sure that reserved system role id's are available. Any user defined role names conflicting with newly introduced system role names should be removed. If any existing user defined or system roles using role id's 3,4,5 should be re-configured with different role-id.
- Data packets can get an **Intranet** role assigned as a source role based on an Intranet role object group mapping, where the object group contains list of IPv4/IPv6 prefixes. Data packets have the **Intranet** role assigned as the source role as intranet role if the source IPv4/IPv6 address of the packet matches any of IPv4/IPv6 prefixes specified in the object group that is mapped to the **intranet** role. Traffic destined to subnets associated with intranet role object groups are permitted unless explicitly denied.



Host prefixes /32 or /128 configured in the object group are not included in matching prefix list to match against source IPV4/IPV6 address of the packet while assigning the role.

gbp enable

gbp enable
no gbp enable

Description

Enables group based policy (GBP).

The **no** form of this command disables group based policy (GBP).

Examples

Enabling group based policy:

```
switch(config)# gbp enable
```

Disabling group based policy:

```
switch(config)# no gbp enable
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---|
| 10.12 | Added support for the 8325 and 10000 Switch Series. |
| 10.08 | Command introduced. |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|---|--|
| 8325
8325H
8325P
10000 | config
config-class- <i><CLASS-TYPE></i> | Administrators or local user group members with execution rights for this command. |

gbp role infra

```
gbp role infra <TAG-VALUE>
no gbp role infra [<TAG-VALUE>]
```

Description

Sets the GBP infra (infrastructure) role tag value for CPU-generated packets. Prior to AOS-CX 10.09, CPU generated traffic and non-secure port traffic was tagged with a default tag of 0.

This does not apply to CPU re-forwarded packets (DHCP snooping (v4, v6), ND snooping, RA guard, IGMP, MLD, and mDNS).

The **no** form of this command resets the GBP infra tag value to its default of 2.



The same GBP infra role tag value must be used across the VXLAN network fabric.

| Parameter | Description |
|--------------------------|---|
| <i><TAG-VALUE></i> | Specifies the infra tag value to use for CPU-generated packets. Range: 1 to 8191. Default: 2. |

Examples

Setting the GBP infra tag value to 10:

```
switch(config)# gbp role infra 10
```

Resetting the GBP infra tag value to its default of 2:

```
switch(config)# no gbp role infra
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|---------|---|
| 10.12 | Added support for the 8325 and 10000 Switch Series. |
| 10.08 | Command introduced. |

Command Information

| Platforms | Command context | Authority |
|---------------------------------|---------------------|--|
| 8325
8325H
8325P
10000 | <code>config</code> | Administrators or local user group members with execution rights for this command. |

Several measures can be taken to enhance switch security, including setting secure mode to enhanced in the Service OS. For maximum security, perform all the configuration described in this chapter.

Configuring enhanced security

Prerequisites

If you have switch configuration that you want to retain, create a backup. This procedure erases all configuration, including the current running configuration, the startup configuration, and all historical configuration checkpoints.

Procedure

1. Set enhanced security mode:
 - a. Reboot the switch into the Service OS with command `boot system serviceos`. If on an 8400 Switch with both Management Modules:
 - i. Issue the **boot** command only on the active Management Module. This command ensures that both Management Modules are booted into the Service OS.
 - ii. Perform steps b to e on both modules starting with the active module.
 - b. Log in to the Service OS as **admin**.
 - c. Enter command **secure-mode enhanced**.
 - d. When prompted about the mode change, respond with **y** for "yes."
 - e. Wait for the reboot and zeroization to complete. The switch firmware boots automatically.
2. Ensure adequate password requirements:
 - a. Before adding users, enable and configure password complexity as described in [password complexity](#). To maintain enhanced security, configure the **password complexity** subcommand settings no smaller than their defaults.
 - b. Configure passwords for all users, including **admin**. To make your password complexity settings applicable to the default admin user, change the admin password after enabling password complexity. The new admin password must respect your password complexity settings.
3. Ensure proper login management as follows:
 - a. Configure local user session management as described in [CLI user session management commands](#) using **cli-session** and its subcommands **max-per-user**, **timeout**, and **tracking-range** to achieve the wanted configuration. To maintain enhanced security, configure **cli-session** subcommand settings no smaller than their defaults.
 - b. Restrict remote SSH connections to only use certified crypto algorithms using **ssh certified-algorithms-only**.
 - c. Configure pre- and post-login banners using respectively, **banner motd**, and **banner exec**.

4. Ensure that the switch date and time is accurately set using `clock datetime <DATE> <TIME>`.
5. When logging to a remote syslog server is required, ensure that the connection to the server is cryptographically secure. See [Configuring remote logging using SSH reverse tunnel](#).

To ensure that enhanced security is maintained, also respect these requirements:

- Do not configure remote logging with a remote server directly without setting up an SSH tunnel.
- Do not configure passwords and secret keys using the plaintext option.



When in enhanced security mode, the switch (Product OS) `start-shell` command is disabled for security purpose. If you attempt to use this command while in enhanced security mode, it is rejected and the following error message is displayed:

```
The start-shell command is not available in enhanced secure mode.
```



When in enhanced security mode, the following Service OS commands are disabled for security purposes: **config-clear**, **password**, **sh**, and **update**. If you attempt to use any of these Service OS commands while in enhanced security mode, the command is rejected and an error message is displayed.

Configuring remote logging using SSH reverse tunnel

Logging to a remote syslog server can be made cryptographically secure by using SSH reverse tunnel. The `syslog` daemon on the switch forwards log messages to the SSH tunnel, and the SSH tunnel endpoint on the remote server host forwards messages to the listening `syslog` server.



This procedure includes sample configuration commands for a user-supplied syslog server based on Ubuntu 14.04.5 LTS with `rsyslog`. It is up to the user to check their server documentation and adjust the sample commands as required. Optionally see your server documentation for information on how to use the `systemd` and `autossh` services to automatically restore the SSH tunnel after system reboot.

Prerequisites

The user-supplied remote syslog server must be on a network that can reach the switch management interface.

Procedure

1. Configure SSH server on the switch.
 - a. Enter these commands (although this example uses the `mgmt` VRF, other VRFs can be used):

```
switch(config)# interface mgmt
switch(config-if-mgmt)# no shutdown
switch(config-if-mgmt)# ip address <switch_mgmt_IP>
switch(config-if-mgmt)# exit
switch(config)# ssh server vrf mgmt
```

- b. If public key authentication is desired for remote SSH users, configure it on the switch:

```
switch(config)# user admin authorized-key <PUBKEY>
```

2. Configure logging on the switch to forward to localhost:

```
switch(config)# logging localhost tcp <switch_tcp_port> vrf mgmtinclude-auditable-events
```

3. Configure the **rsyslog** server on the remote host:
 - a. Make **rsyslog** accept TCP connections and specify the log file, by adding the following to **/etc/rsyslog.conf**:

```
$ModLoad imtcp
$InputTCPServerRun <server_tcp_port>
$template RemoteLogs, "/var/log/remote.log"
*. * ?RemoteLogs
```

- b. To activate the added configuration, restart the **rsyslog** server

```
root@Ubuntu4479:~#sudo service rsyslog restart
```

4. Establish an SSH reverse tunnel from the remote host to the switch:

```
root@Ubuntu4479:~#ssh -nNTx -R
<switch_tcp_port>:127.0.0.1:<server_tcp_port>
admin@<switch_mgmt_IP>
```

CLI user session management commands

cli-session

```
cli-session
no cli-session
```

Description

Enters the CLI session context (shown in the switch prompt as **config-cli-session**) for the purpose of configuring CLI user session management. Session management enhances security by enforcing specific CLI user session requirements. The following information is provided at time of successful login:

- When applicable, the number of failed login attempts since the most recent successful login.
- The date, time, and location (console or IP address or hostname) of the most recent previous successful login.
- The count of successful logins within the past (configurable) time period.

For example:

```
switch login: admin
Password:
```

```
There were 3 failed login attempts since the last successful login
Last login: 2019-04-20 08:51:33 from the console
User "admin" has logged in 73 times in the past 30 days
```

The no form of this command disables concurrent CLI user session restrictions and reverts **timeout** and **tracking-range** to their default values.



To ensure that enhanced security is maintained, it is recommended that you keep CLI user session management fully enabled by setting **max-per-user** to a nondefault value.



The **cli-session** command applies only to SSH/console login connection types. It does not apply to other connection types such as REST.

Subcommands

These subcommands are available within the CLI session context.

[no] **max-per-user** <SESSIONS>

Specifies the maximum number of concurrent CLI sessions per user. The no form of this subcommand disables concurrent CLI user session restrictions. Default: Disabled (no value). Range: 1 to 5.



When the same user name is configured for both local and remote authentication, both users, regardless of privilege level, are considered to be the same user for the purpose of counting concurrent CLI sessions. For example, with **max-per-user** set to 1 and user **admin1** configured for local and remote authentication, only the local user **admin1** or the remote user **admin1** can be logged in at any given moment. Both **admin1** users cannot be logged in simultaneously unless **max-per-user** is increased to at least 2.

[no] **timeout** <MINUTES>

Specifies the number of minutes a CLI session can be idle before the session is automatically terminated and the user is logged out. A value of 0 minutes disables the session timeout. The no form of this subcommand sets the timeout value to the default. Default 30: Range 0 to 4320.



This subcommand is the recommended replacement for the **session-timeout** command.

[no] **tracking-range** <DAYS>

Specifies the maximum number of days to track CLI user session logins. The no form of this subcommand resets the value to its default. Default 30: Range 1 to 30.

exit

Exits the CLI session context.

end

Exits the CLI session context and then the config context.

Examples

Configuring CLI user session settings for a maximum of one concurrent session, a 20-minute timeout, and tracking for a maximum of 25 days.

```
switch(config)# cli-session
switch(config-cli-session)# max-per-user 1
switch(config-cli-session)# timeout 20
switch(config-cli-session)# tracking-range 25
switch# exit
```

After successful earlier logins, logging in from the console without any intervening unsuccessful logins.

```
switch login: admin1
Password:

Last login: 2019-04-15 14:10:21 from the console
User 'admin1' has logged in 65 times in the past 25 days
```

Attempting to log in as `admin1` when already logged in as **admin1** from elsewhere.

```
switch login: admin1
Password:
Too many logins for 'admin1'
```

After successful earlier logins, attempting to log in twice with an invalid password, followed by a successful login.

```
switch login: admin1
Password:

Login incorrect
switch login: admin1
Password:

Login incorrect
switch login: admin1
Password:

There were 2 failed login attempts since the last successful login
Last login: 2019-04-15 17:22:45 from 192.168.1.1
User 'admin1' has logged in 72 times in the past 25 days
```



For more information on features that use this command, refer to the Security Guide for your switch model.

Command History

| Release | Modification |
|------------------|--------------|
| 10.07 or earlier | -- |

Command Information

| Platforms | Command context | Authority |
|---------------|-----------------|--|
| All platforms | config | Administrators or local user group members with execution rights for this command. |

Chapter 24

Auditors and auditing tasks

The **auditors** group enables administrators to create users that can perform auditing tasks without allowing those users the authority to view or change the switch configuration.

As is the case for other users, auditors can access the switch using the Web UI, REST API, or the CLI.

Auditing tasks (CLI)

When you log on to the switch CLI as a user with auditor rights, you have access to the auditor command context only.

```
auditor>
```

The tasks that can be performed by auditors are as follows. The commands listed are the only commands auditors can execute other than session commands like `print`, `list`, and `exit`. However, auditors can use all command options except as noted. See the command description for each command for complete information about the command.

| Task | Command name | Example |
|---|----------------------------------|--|
| Show event log contents | <code>show events</code> | <code>show events -a -r</code> |
| Show local accounting log contents | <code>show accounting log</code> | <code>show accounting log last 10</code> |
| Copy command output to a remote server or to a local USB drive. | <code>copy command-output</code> | <code>copy command-output "show events -a -r" tftp://10.100.0.12/file</code> |

When using the `copy command-output` command, users with auditor rights can specify the following commands only:

```
show accounting log
show events
```

Auditing tasks (Web UI)

Auditors have access to the Log page only. When you log on to the switch Web UI as a user with auditor rights, the Log page is displayed.

From the Log page, you can view and export event log entries.

The Web UI does not provide access to the accounting logs.

REST requests and accounting logs

All REST requests—including GET requests—are logged to the accounting (audit) log.

The URI of the REST API resource for accounting logs is the following:

`/rest/v10.04/logs/audit`

In an accounting log entry for a REST request:

- `service=https-server` indicates that the log entry is a result of a REST API request or a Web UI action.
- The string value of `data` identifies the REST API request that was executed.

For more information about accounting log entries, see the description of the `show accounting log` CLI command.

Accessing HPE Aruba Networking Support

| | |
|---|---|
| HPE Aruba Networking Support Services | https://www.hpe.com/us/en/networking/hpe-aruba-networking-support-services.html |
| AOS-CX Switch Software Documentation Portal | https://arubanetworking.hpe.com/techdocs/AOS-CX/help_portal/Content/home.htm |
| HPE Aruba Networking Support Portal | https://networkingsupport.hpe.com/home |
| North America telephone | 1-800-943-4526 (US & Canada Toll-Free Number)
+1-650-750-0350 (Backup—Toll Number) |
| International telephone | https://www.hpe.com/psnow/doc/a50011948enw |

Be sure to collect the following information before contacting Support:

- Technical support registration number (if applicable)
- Product name, model or version, and serial number
- Operating system name and version
- Firmware version
- Error messages
- Product-specific reports and logs
- Add-on products or components
- Third-party products or components

Other useful sites

Other websites that can be used to find information:

| | |
|--|---|
| HPE Aruba Networking Developer Hub | https://developer.arubanetworks.com/hpe-aruba-networking-aoscx/docs/about |
| Airheads social forums and Knowledge Base | https://community.arubanetworks.com/ |
| AOS-CX Software Technical Update channel on YouTube. | Videos on new features introduced in this release:
https://www.youtube.com/playlist?list=PLsYGHuNuBZcbWPEjjHuVMqP-Q_UL3CskS |

| | |
|---|---|
| HPE Aruba Networking Hardware Documentation and Translations Portal | https://arubanetworking.hpe.com/techdocs/hardware/DocumentationPortal/Content/home.htm |
| HPE Aruba Networking software | https://networkingsupport.hpe.com/downloads |
| Software licensing and Feature Packs | https://licensemanagement.hpe.com/ |
| End-of-Life information | https://networkingsupport.hpe.com/end-of-life |

Accessing Updates

You can access updates from the HPE Aruba Networking Support Portal at <https://networkingsupport.hpe.com>.

Some software products provide a mechanism for accessing software updates through the product interface. Review your product documentation to identify the recommended software update method.

To subscribe to eNewsletters and alerts:

<https://networkingsupport.hpe.com/notifications/subscriptions> (requires an active HPE Aruba Networking Support Portal account to manage subscriptions). Security notices are viewable without an HPE Aruba Networking Support Portal account.

Warranty Information

To view warranty information for your product, go to <https://www.arubanetworks.com/support-services/product-warranties/>.

Regulatory Information

To view the regulatory information for your product, view the *Safety and Compliance Information for Server, Storage, Power, Networking, and Rack Products*, available at <https://www.hpe.com/support/Safety-Compliance-EnterpriseProducts>

Additional regulatory information

HPE Aruba Networking is committed to providing our customers with information about the chemical substances in our products as needed to comply with legal requirements, environmental data (company programs, product recycling, energy efficiency), and safety information and compliance data, (RoHS and WEEE). For more information, see <https://www.arubanetworks.com/company/about-us/environmental-citizenship/>.

Documentation Feedback

HPE Aruba Networking is committed to providing documentation that meets your needs. To help us improve the documentation, send any errors, suggestions, or comments to Documentation Feedback

(docsfeedback-switching@hpe.com). When submitting your feedback, include the document title, part number, edition, and publication date located on the front cover of the document. For online help content, include the product name, product version, help edition, and publication date located on the legal notices page.