



AOS-CX 10.18.xxxx ACLs and Classifier Policies Guide (832x, 93xx, 100xx Switch series)

AOS-CX 10.18.xxxx ACLs and Classifier Policies Guide (832x, 93xx, 100xx Switch series)

Published: May 2026

© Copyright 2026 – Hewlett Packard Enterprise Development LP

Notices

The information provided here is subject to change without notice. Hewlett Packard Enterprise's products and services are covered only by the express warranty statements that come with them. This document does not constitute an additional warranty. Hewlett Packard Enterprise is not responsible for any technical or editorial errors or omissions in this document.

Confidential computer software. You must have a valid license from Hewlett Packard Enterprise to possess, use, or copy the software. In accordance with FAR 12.211 and 12.212, Commercial Computer Software, Computer Software Documentation, and Technical Data for Commercial Items are licensed to the U.S. Government under the vendor's standard commercial license.

Links to third-party websites will take you outside of the Hewlett Packard Enterprise website. Hewlett Packard Enterprise has no control over and is not responsible for the information outside the Hewlett Packard Enterprise website.

Open source code

This product includes code licensed under certain open source licenses which require source compliance. The corresponding source for these components is available upon request. This offer is valid to anyone in receipt of this information and shall expire three years following the date of the final distribution of this product version by Hewlett Packard Enterprise Company. To obtain such source code, please check if the code is available in the HPE Software Center at <https://myenterpriselicense.hpe.com/cwp-ui/software> but, if not, send a written request for specific software version and product for which you want the open source code. Along with the request, please send a check or money order in the amount of US \$10.00 to:

Hewlett Packard Enterprise Company

Attn: General Counsel

WW Corporate Headquarters

1701 E Mossy Oaks Rd, Spring, TX 77389

United States of America.



Legal disclaimer

The resource assets in this document may include abbreviated and/or legacy terminology for products. See [**www.arubanetworks.com**](http://www.arubanetworks.com) for current and complete product lines and names.

Table of contents

About this document.....	7
Applicable products.....	7
Latest version available online.....	7
Command syntax notation conventions.....	8
About the examples.....	9
Identifying switch ports and interfaces.....	9
Access Control Lists.....	10
ACL usage tips.....	12
About address and port object groups.....	14
VLAN ACLs and interaction with VXLAN traffic.....	14
ACL and ACE-related tasks.....	16
Object group-related tasks.....	19
Active ACL configuration versus user-specified configuration	20
ACL commands.....	22
access-list copy	23
access-list ip	28
access-list ipv6	44
access-list log-timer	55
access-list mac	58
access-list resequence	66
access-list reset	70
access-list secure-update	74
ACL application.....	75
apply access-list control-plane	78
apply access-list (to interface or LAG)	79
apply access-list (to interface VLAN)	82
apply access-list (to subinterface)	84
apply access-list (to L3 VNI)	87
apply access-list (to VLAN)	89
clear access-list hitcounts	91
clear access-list hitcounts control-plane	93
object-group address resequence	94
object-group address reset	96
object-group all reset	97

object-group ip address	97
object-group ipv6 address	101
object-group port	103
object-group port resequence	106
object-group port reset	108
show access-list	109
show access-list control-plane	116
show access-list hitcounts	119
show access-list hitcounts control-plane	124
show access-list secure-update	125
show capacities	126
show capacities-status	128
show object-group	134
ACL configuration examples.....	138
IPv4 ACL example overview.....	138
Defining and applying an IPv4 ACL.....	139
IPv6 ACL example overview.....	140
Defining and applying an IPv6 ACL.....	141
Classifier policies.....	142
Traffic policing.....	143
Types of policy actions.....	144
How policy matching works.....	145
Active class configuration versus user-specified configuration	146
Active policy configuration versus user-specified configuration	147
Considerations for when a policy is applied per interface.....	148
Classifier policy application.....	150
Classifier policy commands.....	154
Classifier policy application.....	155
apply policy (config-if, config-lag-if, config-if-vlan, config-vlan)	159
apply policy	163
class copy	165
class ip	167
class ipv6	179
class mac	187
class resequence	193
class reset	195
clear policy hitcounts	196
policy	199

policy copy	204
policy resequence	206
policy reset	207
show class	208
show policy	211
Classifier policies configuration example.....	221
Configuring the classifier policies example.....	222
ACL and Policy hardware resource considerations.....	224
Show Resources.....	225
Event Logs.....	225
Limitations and exclusions.....	226
TCAM resource consumption and lookups.....	226
For the 8320 Switch series:.....	227
Egress TCAM.....	233
For the 8325 and 10000 Switch series:.....	233
Egress TCAM.....	239
For the 9300/9300S and 10040 Switch series:.....	240
Egress TCAM.....	249
Matching precedence order.....	250
Policer Action Considerations and Limitations.....	251
Subinterface Application Considerations.....	253
Metering and Remarking.....	253
L4 port ranges.....	253
ACL and Policy hardware resource commands.....	255
show resources	255
Support and Other Resources.....	261
Accessing HPE Aruba Networking Support.....	261
Accessing Updates.....	262
Warranty Information.....	263
Regulatory Information.....	263
Documentation Feedback.....	263

About this document

This document describes features of the AOS-CX network operating system. It is intended for administrators responsible for installing, configuring, and managing HPE Aruba Networking switches on a network.

Subtopics

Applicable products

Latest version available online

Command syntax notation conventions

About the examples

Identifying switch ports and interfaces

Applicable products

This document applies to the following products:

- HPE Aruba Networking 8320 Switch Series (JL479A, JL579A, JL581A)
- HPE Aruba Networking 8325 Switch Series (JL624A, JL625A, JL626A, JL627A)
- HPE Aruba Networking 8325H Switch Series (S4B20A, S4B21A, S4B22A, S4B23A, S2T42A, S2T46A, S2T47A, S2T48A)
- HPE Aruba Networking 8325P Switch Series (S0G12A, S4A48A)
- HPE Aruba Networking 9300 Switch Series (R9A29A, R9A30A, R8Z96A, S0F81A, S0F82A, S0F83A)
- HPE Aruba Networking 9300S Switch Series (S0F81A, S0F82A, S0F83A, S0F84A, S0F85A, S0F86A, S0F88A, S0F95A, S0F96A)
- HPE Aruba Networking 10000 Switch Series (R8P13A, R8P14A)
- HPE Aruba Networking 10040 Switch Series (S4R58A, S4R59A)

Latest version available online

Updates to this document can occur after initial publication. For the latest versions of product documentation, see the links provided in [Support and Other Resources](#).

Command syntax notation conventions

Convention	Usage
example - text	Identifies commands and their options and operands, code examples, filenames, pathnames, and output displayed in a command window. Items that appear like the example text in the previous column are to be entered exactly as shown and are required unless enclosed in brackets ([]).
example - text	In code and screen examples, indicates text entered by a user.
Any of the following: • <example - text> • <i><example - text></i> • example - text • <i>example - text</i>	Identifies a placeholder—such as a parameter or a variable—that you must substitute with an actual value in a command or in code: • For output formats where italic text cannot be displayed, variables are enclosed in angle brackets (< >). Substitute the text—including the enclosing angle brackets—with an actual value. • For output formats where italic text can be displayed, variables might or might not be enclosed in angle brackets. Substitute the text including the enclosing angle brackets, if any, with an actual value.
	Vertical bar. A logical OR that separates multiple items from which you can choose only one. Any spaces that are on either side of the vertical bar are included for readability and are not a required part of the command syntax.
{ }	Braces. Indicates that at least one of the enclosed items is required.
[]	Brackets. Indicates that the enclosed item or items are optional.
... or ...	Ellipsis: • In code and screen examples, a vertical or horizontal ellipsis indicates an omission of information. • In syntax using brackets and braces, an ellipsis indicates items that can be repeated. When an item

m followed by ellipses is enclosed in brackets, zero or more items can be specified.

About the examples

Examples in this document are representative and might not match your particular switch or environment.

The slot and port numbers in this document are for illustration only and might be unavailable on your switch.

Understanding the CLI prompts

When illustrating the prompts in the command line interface (CLI), this document uses the generic term **switch**, instead of the host name of the switch. For example:

```
switch>
```

The CLI prompt indicates the current command context. For example:

```
switch>
```

Indicates the operator command context.

```
switch#
```

Indicates the manager command context.

```
switch(CONTEXT-NAME) #
```

Indicates the configuration context for a feature. For example:

```
switch(config-if) #
```

Identifies the **interface** context.

Variable information in CLI prompts

In certain configuration contexts, the prompt may include variable information. For example, when in the VLAN configuration context, a VLAN number appears in the prompt:

```
switch(config-vlan-100) #
```

When referring to this context, this document uses the syntax:

```
switch(config-vlan-<VLAN-ID>) #
```

Where <VLAN-ID> is a variable representing the VLAN number.

Identifying switch ports and interfaces

Physical ports on the switch and their corresponding logical software interfaces are identified using the format: **member/slot/port**.

On the HPE Aruba Networking 8xxx, 93xx, and 10xxx Switch Series

- member: Always 1. VSF is not supported on this switch.
- slot: Always 1. This is not a modular switch, so there are no slots.
- port: Physical number of a port on the switch.

For example, the logical interface **1/1/4** in software is associated with physical port 4 on the switch.



NOTE

If using breakout cables, the port designation changes to x:y, where x is the physical port and y is the lane when split. For example, the logical interface 1/1/4:2 in software is associated with lane 2 on physical port 4 in slot 1 on member 1.

Access Control Lists

Access Control Lists (ACLs) let a network administrator permit or deny passage of traffic based on network addresses, protocols, service ports, and other packet attributes. ACLs are composed of one or more Access Control Entries (called ACEs). Each ACE defines a filter criteria and an action, either **permit** or **deny**. If the traffic matches the filter criteria, the specified action is taken. The **permit** action permits the traffic to continue through the switch. The **deny** action causes the traffic to be discarded (dropped). ACEs can also log or count matching traffic.

Three ACL types are supported; IPv4, IPv6, and MAC. Each ACL type is focused on relevant frame or packet characteristics.

ACLs must be applied (using an **apply access-list** command) to take effect. ACLs can be applied to interfaces (including LAGs), VLANs, or the Control Plane.

Access Control Entries (ACEs) are listed according to priority by sequence number and processed in lowest to highest sequence number order. Each ACE attempts to match on one or more attributes of the particular traffic type. Attempted ACE matching ceases upon the first successful match. For a match to be considered successful, a packet must match all the criteria, qualifiers, and attributes of a particular ACE. Higher-numbered ACEs are only processed if no lower-numbered ACE matches. If the traffic matches no ACE in the entire ACL, the default action **deny** is taken, causing the traffic to be discarded (dropped).

When defining an ACE, if the sequence number is omitted, the ACE is auto-assigned a new sequence number that is 10 greater than the existing highest ACE sequence number. The first auto-assigned sequence number is 10. If you choose to include the ACE sequence numbers, you can use any number you like, however it is suggested that you follow the practice of entering them as 10, 20, 30, and so on. Regardless

of the order in which ACEs are entered, they are stored in low-to-high sequence number order. If you enter three ACEs numbered 10, 30, 20, when creating an ACL, the ACEs are stored in the ACL as 10, 20, 30.

This simple ACL definition permits traffic passage for a particular address range and otherwise counts all nonmatching (dropped) traffic:

```
switch(config)# access-list ip network-A-udp-only
switch(config-acl-ip)# 10 permit udp any 172.16.1.0/24
switch(config-acl-ip)# 20 deny any any any count
switch(config-acl-ip)# exit
```

The main traffic characteristics that ACEs can filter on are as follows (see the full list in the ACE parameters list of the ACL commands):

- Protocol such as: ICMP, TCP, UDP
- Source and/or destination addresses (IPv4, IPv6, or MAC)
- Source and/or destination TCP/UDP ports (if applicable to the specified protocol)

A few real-world uses of ACLs are as follows:

- Restrict traffic arriving on a routed port, destined to a particular address or subnet by applying an ACL that matches on a destination IP address or an IP address and a mask.
- Prevent an entire subnet from routing through a port by applying an ACL that matches on IP source address and a mask.
- Prevent certain protocols from using a particular multicast MAC address (advertising through a port) by applying an ACL that matches on the destination MAC address.
- Prevent any IP host from accessing a particular IP port/application on a specific server by applying an ACL that matches on IP addresses and Layer 4 port.



NOTE

See also [ACL and Policy Hardware Resource Considerations](#).

Subtopics

[ACL usage tips](#)

[About address and port object groups](#)

[VLAN ACLs and interaction with VXLAN traffic](#)

[ACL and ACE-related tasks](#)

[Object group-related tasks](#)

[Active ACL configuration versus user-specified configuration](#)

[ACL commands](#)

ACL usage tips

When using the `access-list ip` or `access-list ipv6` commands, if you enter an existing `ACL-NAME`, the existing ACL is modified as follows:

- Any ACE entered with a new sequence-number creates an additional ACE.
- Any ACE entered with an existing sequence-number replaces the existing ACE.

If you modify an ACL that has already been applied, it is possible that packets, blocked by the previous ACL, will briefly pass through the switch during the ACL reconfiguration.



NOTE

In a highly secure environment, it is safest to first bring down interfaces and VLANs to which an ACL has been applied before modifying the ACL. Then bring the targets of ACL application back up after completing the ACL modification. Respecting this recommendation ensures that an ACL is never partially programmed while traffic is passing through the switch.

About applying ACLs to interfaces or LAGs

You can apply an ACL to an interface or LAG to affect or control the traffic arriving on that interface or LAG (inbound) or leaving the interface or LAG (outbound), or both. A given interface or LAG supports the application of a single ACL per type, per direction. ACLs can be applied to interfaces or LAGs as follows:

- One MAC ACL inbound
- One IPv4 ACL inbound
- One IPv4 ACL outbound
- One IPv6 ACL inbound

Different ACLs of the same type can be used in opposite directions for IPv4. If you apply an ACL of a particular type, in a direction that is already in use, the switch replaces the current ACL with the new ACL.

About applying ACLs to VLANs

ACLs can be applied to VLANs only in the inbound (ingress) direction.

Sequence numbering

If no sequence number is specified, the software appends new ACEs to the end of the ACL with a sequence number equal to the highest ACE currently in the list plus 10.

The sequence numbers may be resequenced using the `access-list resequence` command.

ACL Logging

Deny ACLs

If multiple ACLs of different types are applied in the same direction, a deny ACE, whether explicit or implicit, in one ACL overrides a permit ACL in another. A deny ACE is an ACE within an ACL that uses the `deny` action keyword.

Denied ping requests

A ping request is denied when an ACL is applied on ingress or egress unless the request is explicitly permitted.

```
switch# ping 100.1.2.10
PING 100.1.2.10 (100.1.2.10) 100(128) bytes of data.
ping: sendmsg: Operation not permitted
ping: sendmsg: Operation not permitted
ping: sendmsg: Operation not permitted
ping: sendmsg: Operation not permitted
ping: sendmsg: Operation not permitted
```

ACL failure behaviors

- In the event of a failed ACL application to a VLAN or VLAN interface during a switch reboot, all of the ports will shut down. The switch must be restarted to recover from the failure. Modifying the VLAN, VLAN interface, or ACL configuration will not cause the switch to be restarted.
- In the event of a failed ACL application to a subinterface during switch reboot, the subinterface will be shut down. The switch must be restarted to recover from the failure. Modifying the subinterface or ACL configuration will not cause the switch to be restarted.
- In the event of a failed ACL application to a subinterface during hotswap or switch reboot, the subinterface will be shut down. The line card or stack member must be restarted or hotswapped to recover from the failure. Modifying the subinterface or ACL configuration will not cause the line card or stack member to be restarted. In the event of a failed ACL application to one or more added subinterface LAG members, the subinterface will be shut down. For this to occur, the ACL must already be successfully applied to existing subinterface LAG members. This is done to prevent traffic from circumventing the ACL by passing through new LAG members where the ACL was not successfully applied. The line card or stack member must be restarted or hotswapped to recover from the failure. Modifying the subinterface or ACL configuration will not cause the line card or stack member to be restarted.

ACLs and VXLAN Traffic

ACLs applied to an SVI will not match on VxLAN traffic over a VNI.

About address and port object groups

Object groups are useful for defining groups of IP addresses and Layer 4 ports for use exclusively in the two ACL-defining commands `access-list ip` and `access-list ipv6`.

Often, common groups of addresses and ports or port ranges are used repeatedly in many ACL definitions. Without address and port object groups, the same addresses and ports must be repeated in each ACL definition that uses them.

With address and port object groups, the IP addresses and ports can be defined once, using any of these commands:

- `object-group ip address`
- `object-group ipv6 address`
- `object-group port`

Once an object group is defined, the group is available for inclusion by name as the `<ADDRESS-GROUP>` and `<PORT-GROUP>` parameters in the `access-list ip` and `access-list ipv6` ACL-definition commands.

Object groups simplify the ACL definition process and help ensure consistent address and port specification across many ACLs.



NOTE

Keep in mind that it is possible to consume many hardware resource entries when using the object group commands. For example, in a typical situation, an ACE that uses object groups with 3 source addresses, 3 source L4 ports, 3 destination addresses, and 3 destination L4 ports, a total of 81 hardware entries are consumed ($3 * 3 * 3 * 3 = 81$).

VLAN ACLs and interaction with VXLAN traffic



NOTE

This section applies to these AOS-CX platforms that support VXLAN and VXLAN ACLs: 5420, 6200, 6300, 6400, 8100, 8325, 8360, 9300/9300S, 10040, 10000. VLAN policies applied to an SVI will not match VXLAN traffic over a VNI.

Interactions with VXLAN traffic on an L2 VNI

About this task

The way VLAN ACLs interact with VLAN traffic carried by VXLAN tunnels depends on the AOS-CX platform.

For the purposes of this discussion, VLAN traffic is Ethernet traffic with an IP payload. VXLAN traffic includes a VXLAN header, encapsulating the Ethernet frame and IP header into the VXLAN UDP packet. VLAN traffic can be considered to be "normal" L2 traffic, and VXLAN traffic can be considered to be "tunneled" (encapsulated) L2 traffic.

VLAN ACL matching of VLAN traffic arriving through a VXLAN tunnel is available on the various AOS-CX platforms as follows:

- On the 5420, 6200, 6400, 6400, 8100, and 8360, VLAN ACLs are able to match decapsulated VLAN traffic arriving through a VXLAN tunnel, however, VLAN ACLs are unable to match VLAN traffic leaving the switch through a VXLAN tunnel.
- On the 8325, 9300/9300S, 10040, and 10000, ingress VLAN ACLs are able to match decapsulated VLAN traffic arriving through a VXLAN tunnel.
- On the 8325, 9300/9300S, 10040, and 10000, egress VLAN ACLs are not able to match decapsulated VLAN traffic leaving through a VXLAN tunnel. VLAN ACLs are able to match on the VXLAN IP in this case (packets egressing to the VXLAN tunnel).
- On the 8400, ingress VLAN ACLs are not able to match decapsulated VLAN traffic arriving through a VXLAN tunnel. The 8400 does not support egress VLAN ACLs. Instead they can match on the VXLAN IP.

**NOTE**

VLAN ACLs do not match on the inner VXLAN header (encapsulated packet).

Consider the following two-node VXLAN L2 bridging topology:

```
Host-1 <--> Switch-1 <--> Switch-2 <--> Host-2
```

Each switch has a single VLAN, connected with VXLAN VTEPs, and each host is connected to the VLAN on the respective switch. The four relevant control points for ACL application are as follows:

Procedure

1. Switch-1 Ingress
2. Switch-1 Egress
3. Switch-2 Ingress
4. Switch-2 Egress

Results

For traffic initiated from Host-1 to Host-2:

1. At Switch-1 (Ingress) the packet from Host-1 is still a normal VLAN packet, therefore Ingress VLAN ACLs can be applied here.

2. At Switch-1 (Egress) the packet from Host-1 has been encapsulated into a VXLAN UDP tunnel packet, and therefore Egress VLAN ACLs cannot be applied here.
3. At Switch-2 (Ingress) the packet from Host-1 is decapsulated from its VXLAN header so that it can be delivered to the local VLAN associated with the VXLAN VTEP. On AOS-CX platforms that support it, ingress VLAN ACLs can be applied here.
4. At Switch-2 (Egress) the packet which arrived from Switch-1 has been decapsulated and becomes a normal VLAN packet on egress, and therefore, on AOS-CX platforms that support it, Egress VLAN ACLs can be applied here.

Separately, consider this three-switch topology:

```
Host-1 <--> Switch-1 <--> Switch-M <--> Switch-2 <--> Host-2
```

In this topology, traffic from the hosts is never decapsulated on the middle switch, Switch-M. Therefore, Switch-M simply forwards the VXLAN UDP frames back and forth. Since the packet is not decapsulated, the VLAN ACLs cannot be applied on Switch-M.

On the other hand, egress VLAN ACLs cannot be applied to VLANs linked to a VNI, nor can VNIs be linked to VLANs that have an egress ACL applied.

Interactions with VxLAN traffic on an L3 VNI

All VNIs that have routing enabled are considered L3 VNIs. A common use case for an L3 VNI would be a symmetric IRB topology. Symmetric IRB uses the same layer-3 VNI for bidirectional traffic between two hosts on different VNIs.

Policies applied to VLANs do not match on traffic being routed over an L3 VNI.

To match on traffic routed between L3 VNIs over a VxLAN, a VNI policy may be used. Policy applications are supported on VNIs that have routing enabled only in the routed-inbound direction.

ACL and ACE-related tasks

Common ACL and ACE-related tasks are as follows:

Task	Command name	Example
Creating an IPv4 ACL	<code>access-list ip</code>	<pre>access-list ip MY_IP_ACL 10 permit udp any 172.16.1.0/24 20 permit tcp 172.16.2.0/16 gt 1023 any</pre>

Task	Command name	Example
		<pre> 30 deny any any any count </pre>
Creating an IPv6 ACL	<code>access-list ipv6</code>	<pre> access-list ipv6 MY_IPV6_ACL 10 permit udp any 2001::1/64 20 permit tcp 2001:2011::1/64 any 30 deny any any any count </pre>
Creating a MAC ACL	<code>access-list mac</code>	<pre> access-list mac MY_MAC_ACL 10 permit any any appletalk vlan 40 20 deny any any any count </pre>
Applying an IPv6 ACL to an interface	<code>apply access-list</code> (to interface or LAG)	<pre> interface 1/1/1 apply access-list ipv6 MY_IPV6_ACL in </pre>
Applying an IPv4 ACL to a LAG	<code>apply access-list</code> (to interface or LAG)	<pre> interface lag 100 apply access-list ip MY_IP_ACL in </pre>
Applying an IPv4 ACL to a VLAN	<code>apply access-list</code> (to VLAN)	<pre> vlan 10 apply access-list ip MY_IP_ACL in </pre>
Applying a MAC ACL to a VLAN	<code>apply access-list</code> (to VLAN)	<pre> vlan 40 apply access-list mac MY_MAC_ACL in </pre>
Applying an IPv4 ACL to the Control Plane (OOBM)	<code>apply access-list control-plane</code>	<pre> apply access-list ip MY_IP_ACL control-plane vrf mgmt </pre>
Removing application of an ACL from an interface	<code>apply access-list</code> (to interface or LAG)	<pre> interface 1/1/1 no apply access- list ipv6 MY_IPV6_ACL in </pre>
Removing application of an ACL from a VLAN	<code>apply access-list</code> (to VLAN)	<pre> vlan 40 no apply access- list mac MY_MAC_ACL in </pre>

Task	Command name	Example
Removing application of an ACL from the Control Plane (OOBM)	<code>apply access-list control-plane</code>	<code>no apply access-list ip MY_IP_ACL control-plane vrf mgmt</code>
Showing all ACLs	<code>show access-list</code>	<code>show access-list</code>
Showing all IPv6 ACLs	<code>show access-list</code>	<code>show access-list ipv6</code>
Showing all ACLs applied to interface 1/1/1	<code>show access-list</code>	<code>show access-list interface 1/1/1</code>
Showing all ACLs applied to VLAN 10	<code>show access-list</code>	<code>show access-list vlan 10</code>
Showing all ACLs applied to the Control Plane	<code>show access-list control-plane</code>	<code>show access-list control-plane</code>
Showing a particular ACL	<code>show access-list</code>	<code>show access-list ip MY_ACL</code>
Showing an ACL as commands	<code>show access-list</code>	<code>show access-list ip MY_ACL commands</code>
Showing ACL hit counts for an ACL applied to an interface	<code>show access-list hitcounts</code>	<code>show access-list hitcounts ip MY_ACL interface 1/1/1</code>
Showing ACL hit counts for an ACL applied to a VLAN	<code>show access-list hitcounts</code>	<code>show access-list hitcounts ip MY_ACL vlan 10</code>
Showing ACL hit counts for an ACL applied to the Control Plane	<code>show access-list hitcounts control-plane</code>	<code>show access-list hitcounts ip MY_ACL control-plane vrf mgmt</code>
Clearing ACL hit counts	<code>clear access-list hitcounts</code>	<code>clear access-list hitcounts ip MY_ACL vlan 10</code>
Clearing ACL hit counts for Control Plane	<code>clear access-list hitcounts control-plane</code>	<code>clear access-list hitcounts control-plane vrf mgmt</code>
Copying an ACL	<code>access-list copy</code>	<code>access-list ipv6 MY_IPV6_ACL copy MY_IPV6_ACL2</code>

Task	Command name	Example
Resequencing the ACEs of an ACL	<code>access-list resequence</code>	<code>access-list ip MY_IP_ACL resequence 1 1</code>
Resetting an ACL	<code>access-list reset</code>	<code>access-list ip MY_IP_ACL reset</code>
Setting the ACL log timer frequency	<code>access-list log-timer</code>	<code>access-list log-timer 30</code>

Object group-related tasks

Object groups are useful for defining groups of addresses and ports for use exclusively in the two ACL-defining commands `access-list ip` and `access-list ipv6`.

Common object group-related tasks are as follows:

Task	Command name	Example
Creating an IPv4 address object group	<code>object-group ip address</code>	<code>object-group ip address my_ipv4_addr_group</code>
Creating an IPv6 address object group	<code>object-group ipv6 address</code>	<code>object-group ipv6 address my_ipv6_addr_group</code>
Creating a port object group	<code>object-group port</code>	<code>object-group port my_port_group</code>
Showing an IPv4 address object group	<code>show object-group</code>	<code>show object-group ip address my_ipv4_addr_group</code>
Showing all IPv6 address object groups	<code>show object-group</code>	<code>show object-group ipv6 address</code>
Showing a port object group	<code>show object-group</code>	<code>show object-group port my_port_group</code>
Showing all port object groups as commands	<code>show object-group</code>	<code>show object-group port commands</code>

Task	Command name	Example
Resequencing an IPv4 address object group	<code>object-group ip address</code>	<code>object-group ip address my_ipv4_addr_group resequence 100 10</code>
Resequencing a port object group	<code>object-group port</code>	<code>object-group port my_port_group resequence 200 5</code>
Resetting an IPv6 address object group	<code>object-group ipv6 address</code>	<code>object-group ipv6 address my_ipv6_addr_group reset</code>
Resetting a port object group	<code>object-group port</code>	<code>object-group port my_port_group reset</code>

Active ACL configuration versus user-specified configuration

The **show access-list** command shows the active configuration of the switch. The active configuration is the ACLs that have been configured and accepted by the system. The active configurations are the interfaces on which the ACLs have successfully been programmed in the hardware.

The output of the `show access-list` command with the **configuration** parameter shows the ACLs that have been configured. The output of this command may not be the same as what was programmed in the hardware or what is active on the switch. The situation might occur because of one or more of the following:

- Unsupported command parameters might have been configured.
- Unsupported applications might have been specified.
- Applying an ACL might have been unsuccessful due to lack of hardware resources.

To determine if a discrepancy exists between what was configured and what is active, run the `show access-list` command with the `configuration` parameter.

If the active ACLs and configured ACLs are not the same, the switch shows a warning message in the output of the show command:

```
! access-list ip MY_IP_ACL user configuration does not match active
configuration.
! run 'access-list TYPE NAME reset' to reset access-list to match active
configuration.
```

If the configured ACL is processing, the switch shows an in-progress warning.

```
! access-list ip MY_IP_ACL user configuration currently being processed
! run 'access-list TYPE NAME reset' to reset access-list to match active
configuration.
```

If the switch shows a warning message or in-progress message, additional changes can be made until the error message is no longer shown in the show command, or you can run the `access-list {all|ip <ACL-NAME>|ipv6 <ACL-NAME>|mac <ACL-NAME>} reset` command. The `access-list reset` command changes the user-specified configuration to match the active configuration. For details, see [access-list reset](#).



NOTE

The `show running-config` command also shows a warning about ACLs that are in progress or failed.

Examples

Applying an ACL with TCP acknowledgments (ACKs) on ingress, which is unsupported by the hardware:

```
switch(config-acl)# 10 permit tcp 172.16.2.0/16 any ack
```

Showing the user-specified configuration:

```
switch(config)# do show access-list ip TEST_ACL
      10 permit tcp 172.16.2.0/16 any ack
interface 1/1/1
! access-list ip TEST_ACL user configuration does not match active
configuration.
! run 'show access-list [commands]' to display active access-list
configuration.
      apply access-list ip TEST_ACL in
switch(config)# do show access-list commands
access-list ip TEST_ACL
      10 permit tcp 172.16.2.0/16 any ack
! access-list ip TEST_ACL user configuration does not match active
configuration.
! run 'access-list all reset' to reset all access-lists to match active
configuration.
switch(config)# do show access-list commands configuration
access-list ip TEST_ACL
      10 permit tcp 172.16.2.0/16 any ack
! access-list ip TEST_ACL user configuration does not match active
configuration.
! run 'access-list all reset' to reset all access-lists to match active
configuration.
interface 1/1/1
      apply access-list ip TEST_ACL in
```

```
switch(config)# do show access-list
```

```
Type      Name
Sequence  Comment
          Action                      L3 Protocol
          Source IP Address           Source L4 Port(s)
          Destination IP Address       Destination L4 Port(s)
          Additional Parameters

-----
---
```

Type	Name	Sequence	Comment	Action	L3 Protocol	Source IP Address	Source L4 Port(s)	Destination IP Address	Destination L4 Port(s)	Additional Parameters
IPv4	TEST_ACL	10	permit		tcp	172.16.2.0/16		any		ack

Resetting the user-specified configuration to match the active configuration:

```
switch(config)# access-list all reset
```

Showing the updated user-specified configuration:

```
switch(config)# do show access-list commands configuration
access-list ip TEST_ACL
10 permit tcp 172.16.2.0/16 any ack
```

ACL commands

Select a command from the list in the left navigation menu.

Subtopics

[access-list copy](#)

[access-list ip](#)

[access-list ipv6](#)

[access-list log-timer](#)

[access-list mac](#)

[access-list resequence](#)

[access-list reset](#)

[access-list secure-update](#)

[ACL application](#)

[apply access-list control-plane](#)

[apply access-list \(to interface or LAG\)](#)

[apply access-list \(to interface VLAN\)](#)

[apply access-list \(to subinterface\)](#)

[apply access-list \(to L3 VNI\)](#)

[apply access-list \(to VLAN\)](#)
[clear access-list hitcounts](#)
[clear access-list hitcounts control-plane](#)
[object-group address resequence](#)
[object-group address reset](#)
[object-group all reset](#)
[object-group ip address](#)
[object-group ipv6 address](#)
[object-group port](#)
[object-group port resequence](#)
[object-group port reset](#)
[show access-list](#)
[show access-list control-plane](#)
[show access-list hitcounts](#)
[show access-list hitcounts control-plane](#)
[show access-list secure-update](#)
[show capacities](#)
[show capacities-status](#)
[show object-group](#)

access-list copy

Syntax

```
access-list {ip|ipv6|mac} <ACL-NAME> copy <DESTINATION-ACL>
```

Description

Copies an IPv4, IPv6, or MAC ACL to a new destination ACL or overwrites an existing ACL.

Parameter	Description
{ip ipv6 mac}	Specifies the type of ACL.
<ACL-NAME>	Specifies the name of the ACL to be copied.
	Specifies the name of the destination ACL.

Parameter	Description
<DESTINATION-ACL>	

Examples

Copying MY_IP_ACL to MY_IP_ACL2:

```
switch(config)# access-list ip MY_IP_ACL copy MY_IP_ACL2
switch(config-acl-ip)# exit
switch(config)# do show access-list
```

Type	Name	Sequence	Comment	Action	L3 Protocol	Source IP Address	Source L4 Port(s)	Destination IP Address	Destination L4 Port(s)	Additional Parameters

IPv4	MY_IP_ACL	1	permit	any	udp	172.16.1.0/255.255.255.0				
		2	permit	any	tcp	172.16.2.0/255.255.0.0	> 1023			
		3	permit	any	tcp	172.26.1.0/255.255.255.0				
				dscp: AF11						
				ack						
				syn						
		4	deny	any	any					
				any						
				Hit-counts: enabled						

IPv4	MY_IP_ACL2	1	permit	any	udp	172.16.1.0/255.255.255.0				
		2	permit	any	tcp	172.16.2.0/255.255.0.0	> 1023			


```

    any
3 permit                                tcp
    172.26.1.0/255.255.255.0
    any
    dscp: AF11
    ack
    syn
4 deny                                  any
    any
    any
Hit-counts: enabled

```

Copying MY_IPV6_ACL to MY_IPV6_ACL2:

```

switch(config)# access-list ipv6 MY_IPV6_ACL copy MY_IPV6_ACL2
switch(config-acl-ip)# exit
switch(config)# do show access-list
Type          Name
Sequence      Comment
Action                               L3 Protocol
Source IP Address                     Source L4 Port(s)
Destination IP Address                 Destination L4 Port(s)
Additional Parameters

-----
---
IPv6          MY_IPV6_ACL
1 permit                                udp
    any
    2001::1/64
2 Permit all TCP ephemeral ports
  permit                                tcp
    2001:2001::2:1                      > 1023
    any
3 permit                                tcp
    2001:2011::1/64
    any
4 deny                                  any
    any
    any
Hit-counts: enabled

-----
---
IPv6          MY_IPV6_ACL2
1 permit                                udp
    any

```

```

2001::1/64
2 Permit all TCP ephemeral ports
  permit                                tcp
  2001:2001::2:1                        > 1023
  any
3 permit                                tcp
  2001:2011::1/64
  any
4 deny                                  any
  any
  any
Hit-counts: enabled

```

Copying MY_MAC_ACL to MY_MAC_ACL2:

```

switch(config)# access-list mac MY_MAC_ACL copy MY_MAC_ACL2
switch(config-acl-mac)# exit
switch(config)# do show access-list

```

Type	Name	Sequence	Comment	Action	EtherType	Source MAC Address	Destination MAC Address	Additional Parameters

MAC	MY_MAC_ACL	1	permit	ipv6		1122.3344.5566/ffff.ffff.0000		
			any					
		2	permit	any		aaaa.bbbb.cccc		
						1111.2222.3333		
								QoS Priority Code Point: 4
		3	Permit all vlan-1 tagged Appletalk traffic					
			permit	appletalk				
			any					
			any					
			VLAN: 1					
		4	deny	any				
			any					
			any					
								Hit-counts: enabled


```

MAC      MY_MAC_ACL2
1 permit                                ipv6
  1122.3344.5566/ffff.ffff.0000
  any
2 permit                                any
  aaaa.bbbb.cccc
  1111.2222.3333
  QoS Priority Code Point: 4
3 Permit all vlan-1 tagged Appletalk traffic
  permit                                appletalk
  any
  any
  VLAN: 1
4 deny                                  any
  any
  any
  Hit-counts: enabled
Type      Name
Sequence  Comment
          Action                                EtherType
          Source MAC Address
          Destination MAC Address
          Additional Parameters

```

```

---
MAC      MY_MAC_ACL
1 permit                                ipv6
  1122.3344.5566/ffff.ffff.0000
  any
2 permit                                any
  aaaa.bbbb.cccc
  1111.2222.3333
  QoS Priority Code Point: 4
3 Permit all vlan-1 tagged Appletalk traffic
  permit                                appletalk
  any
  any
  VLAN: 1
4 deny                                  any
  any
  any
  Hit-counts: enabled

```

```

---
MAC          MY_MAC_ACL2
1 permit          ipv6
  1122.3344.5566/ffff.ffff.0000
  any
2 permit          any
  aaaa.bbbb.cccc
  1111.2222.3333
  QoS Priority Code Point: 4
3 Permit all vlan-1 tagged Appletalk traffic
  permit          appletalk
  any
  any
  VLAN: 1
4 deny          any
  any
  any
Hit-counts: enabled

```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

access-list ip

Syntax

Syntax to create an IPv4 ACL and enter its context. Plus syntax to remove an ACL:

```
access-list ip <ACL-NAME>
no access-list ip <ACL-NAME>
```

Syntax (within the ACL context) for creating or removing ACEs for protocols **ah**, **eigrp**, **esp**, **gre**, **igmp**, **l2tp**, **ospf**, **pim**, **vrrp**, (**ip** is available as an alias for **any**):

```
[<SEQUENCE-NUMBER>]
{permit|deny}
{any|ah|eigrp|esp|gre|igmp|ip|l2tp|ospf|pim|vrrp|<IP-PROTOCOL-NUM>}
{any|<SRC-IP-ADDRESS>[/<PREFIX-LENGTH>|<SUBNET-MASK>]}|<ADDRESS-GROUP>}
{any|<DST-IP-ADDRESS>[/<PREFIX-LENGTH>|<SUBNET-MASK>]}|<ADDRESS-GROUP>}
[dscp <DSCP-SPECIFIER>] [ecn <ECN-VALUE>] [ip-precedence <IP-PRECEDENCE-VALUE>]
[tos <TOS-VALUE>] [fragment] [vlan <VLAN-ID>] [ttl <TTL-VALUE>] [ip-
option <ANY>]
[count] [log]
no <SEQUENCE-NUMBER>
```

Syntax (within the ACL context) for creating or removing ACEs for protocols **sctp**, **tcp**, **udp**:

```
[<SEQUENCE-NUMBER>]
{permit|deny}
{sctp|tcp|udp}
{any|<SRC-IP-ADDRESS>[/<PREFIX-LENGTH>|<SUBNET-MASK>]}|<ADDRESS-GROUP>}
[{eq|gt|lt} <PORT>|range <MIN-PORT>
<MAX-PORT>|group <PORT-GROUP>]
{any|<DST-IP-ADDRESS>[/<PREFIX-LENGTH>|<SUBNET-MASK>]}|<ADDRESS-GROUP>}
[{eq|gt|lt} <PORT>|range <MIN-PORT>
<MAX-PORT>|group <PORT-GROUP>]
[urg] [ack] [psh] [rst] [syn] [fin] [established]
[dscp <DSCP-SPECIFIER>] [ecn <ECN-VALUE>] [ip-precedence <IP-PRECEDENCE-VALUE>]
[tos <TOS-VALUE>] [fragment] [vlan <VLAN-ID>] [ttl <TTL-VALUE>] [ip-
option <ANY>]
[count] [log]
no <SEQUENCE-NUMBER>
```

Syntax (within the ACL context) for creating or removing ACEs for protocol **icmp**:

```
[<SEQUENCE-NUMBER>]
{permit|deny}
{icmp}
{any|<SRC-IP-ADDRESS>[/<PREFIX-LENGTH>|<SUBNET-MASK>]}|<ADDRESS-GROUP>}
{any|<DST-IP-ADDRESS>[/<PREFIX-LENGTH>|<SUBNET-MASK>]}|<ADDRESS-GROUP>}
[icmp-type {echo|echo-reply|<ICMP-TYPE-VALUE>}] [icmp-code <ICMP-CODE-VALUE>]
```

```

VALUE>]
  [dscp <DSCP-SPECIFIER>] [ecn <ECN-VALUE>] [ip-precedence <IP-PRECEDENCE-
VALUE>]
  [tos <TOS-VALUE>] [fragment] [vlan <VLAN-ID>] [ttl <TTL-VALUE>] [ip-
option <ANY>]
  [count] [log]
  no <SEQUENCE-NUMBER>

```

Syntax (within the ACL context) for ACE comments:

```

[<SEQUENCE-NUMBER>] comment <TEXT-STRING>
no <SEQUENCE-NUMBER> comment

```

Description

Creates an IPv4 Access Control List (ACL) comprised of one or more Access Control Entries (ACEs) ordered and prioritized by sequence number. The lowest sequence number is the highest prioritized ACE.

The **no** form of this command deletes the entire ACL, or deletes an ACE identified by sequence number, or deletes only the comment from the ACE identified by sequence number.

Parameter	Description
<ACL-NAME>	Specifies the name of this ACL.
<SEQUENCE-NUMBER>	Specifies a sequence number for the ACE. Range: 1 to 4294967295.
{permit deny}	Specifies whether to permit or deny traffic matching this ACE.
<IP-PROTOCOL-NUM>	Specifies the protocol as its Internet Protocol number. For example, 2 corresponds to the IGMP protocol. Range: 0 to 255.
{any <SRC-IP-ADDRESS>[/<PREFIX-LENGTH> <SUBNET-MASK>]} <ADDRESS-GROUP>}	Specifies the source IPv4 address. any - specifies any source IPv4 address. <SRC - IP - ADDRESS> - specifies the source IPv4 host address. <PREFIX - LENGTH> - specifies the address bits to mask (CIDR subnet mask notation). Range: 1 to 32.

Parameter	Description
	◦ <SUBNET - MASK> - specifies the address bits to mask (dotted decimal notation). • <ADDRESS - GROUP> - specifies an IPv4 address group defined with object - group ip address.
<pre>{any <DST-IP-ADDRESS>[/ <PREFIX-LENGTH> <SUBNET-MASK>}] <ADDRESS- GROUP> }</pre>	Specifies the destination IPv4 address. • any - specifies any destination IPv4 address. • <DST - IP - ADDRESS> - specifies the destination IPv4 host address. ◦ <PREFIX - LENGTH> - specifies the address bits to mask (CIDR subnet mask notation). Range: 1 to 32. ◦ <SUBNET - MASK> - specifies the address bits to mask (dotted decimal notation). • <ADDRESS - GROUP> - specifies an IPv4 address group that you defined earlier with <code>object-group ip address</code>.
<pre>[{eq gt lt} <PORT> range <MIN-PORT> <MAX-PORT> group <PORT-GROUP>]</pre>	Specifies the port, port range, or port group. Port numbers are in the range of 0 to 65535. • eq <PORT> - specifies the Layer 4 port. • gt <PORT> - specifies any Layer 4 port greater than the indicated port. • lt <PORT> - specifies any Layer 4 port less than the indicated port. • range <MIN - PORT> <MAX - PORT> - specifies the Layer 4 port range. • group <PORT - GROUP> - specifies the Layer 4 port group that you defined earlier with <code>object-group port</code>.  NOTE Upon application of the ACL, ACEs with L4 port ranges may consume more than one hardware entry.
urg	Specifies matching on the TCP Flag: Urgent . (Applies only to the "in" (ingress) direction.)
ack	Specifies matching on the TCP Flag: Acknowledgment . (Applies only to the "in" (ingress) direction.)

Parameter	Description
psh	Specifies matching on the TCP Flag: Push buffered data to receiving application . (Applies only to the "in" (ingress) direction.)
rst	Specifies matching on the TCP Flag: Reset the connection . (Applies only to the "in" (ingress) direction.)
syn	Specifies matching on the TCP Flag: Synchronize sequence numbers . (Applies only to the "in" (ingress) direction.)
fin	Specifies matching on the TCP Flag: Finish connection . (Applies only to the "in" (ingress) direction.)
established	Specifies matching on the TCP Flag: Established connection. (Applies only to the "in" (ingress) direction.)
[icmp-type {echo echo-reply <ICMP-TYPE-VALUE>}]	Specifies the ICMP type. • echo - specifies an ICMP echo request packet. • echo - reply - specifies an ICMP echo reply packet. • <ICMP - TYPE - VALUE> - specifies an ICMP type value. Range: 0 to 255.
[icmp-code <ICMP-CODE-VALUE>]	Specifies the ICMP code value. Range: 0 to 255.
dscp <i>DSCP-SPECIFIER</i>	Specifies the Differentiated Services Code Point (DSCP), either a numeric <DSCP - VALUE> (0 to 63) or one of these keywords : • AF11 - DSCP 10 (Assured Forwarding Class 1, low drop probability) • AF12 - DSCP 12 (Assured Forwarding Class 1, medium drop probability) • AF13 - DSCP 14 (Assured Forwarding Class 1, high drop probability) • AF21 - DSCP 18 (Assured Forwarding Class 2, low drop probability) • AF22 - DSCP 20 (Assured Forwarding Class 2, medium drop probability) • AF23 - DSCP 22 (Assured Forwarding Class 2, high drop probability) • AF31 - DSCP 26 (Assured Forwarding Class 3, low drop probability) • AF32 - DSCP 28 (Assured Forwarding Class 3, medium drop probability)

Parameter	Description
	• AF33 - DSCP 30 (Assured Forwarding Class 3, high drop probability) • AF41 - DSCP 34 (Assured Forwarding Class 4, low drop probability) • AF42 - DSCP 36 (Assured Forwarding Class 4, medium drop probability) • AF43 - DSCP 38 (Assured Forwarding Class 4, high drop probability) • CS0 - DSCP 0 (Class Selector 0: Default) • CS1 - DSCP 8 (Class Selector 1: Scavenger) • CS2 - DSCP 16 (Class Selector 2: OAM) • CS3 - DSCP 24 (Class Selector 3: Signaling) • CS4 - DSCP 32 (Class Selector 4: Real time) • CS5 - DSCP 40 (Class Selector 5: Broadcast video) • CS6 - DSCP 48 (Class Selector 6: Network control) • CS7 - DSCP 56 (Class Selector 7) • EF - DSCP 46 (Expedited Forwarding)
ecn <ECN-VALUE>	Specifies an Explicit Congestion Notification value. Range: 0 to 3.
ip-precedence <IP-PRECEDENCE-VALUE>	Specifies an IP precedence value. Range: 0 to 7.
tos <TOS-VALUE>	Specifies the Type of Service value. Range: 0 to 31.
fragment	Specifies a fragment packet.
vlan <VLAN-ID>	Specifies VLAN tag to match on. 802.1Q VLAN ID.
 NOTE This parameter cannot be used in any ACL that will be applied to a VLAN.	
ttl <TTL-VALUE>	Specifies a time - to - live (hop limit) value. Range: 0 to 255.
ip-option <ANY>	(For 8325 and 1000 Switch series) Specifies the IP option.
count	Keeps the hit counts of the number of packets matching this ACE.

Parameter	Description
log	Keeps a log of the number of packets matching this ACE. Works with <code>deny</code> actions but not with <code>permit</code> actions. Works with ACLs applied on ingress, or Control Plane, but not with ACLs applied on egress.
[<SEQUENCE-NUMBER> comment <TEXT-STRING>	Adds a comment to an ACE. The no form removes only the comment from the ACE.

Usage

- If the <IP-PROTOCOL-NUM> parameter is used instead of a protocol name, ensure that any needed ACE-definition parameters specific to the selected protocol are also provided.
- When using multiple ACL types (IPv4, IPv6, or MAC) with logging on the same interface, the first packet that matches an ACE with **log** option is logged. Until the log-timer wait-period is over, any packets matching other ACL types do not create a log. At the end of the wait-period, the switch creates a summary log for all the ACLs that were matched, regardless of type.
- For more information about mitigating potential attacks by denying or logging packets using the **ip-option** parameter, refer to the video on the [HPE Aruba Networking Airheads Broadcasting Channel](#).

Examples

Creating an IPv4 ACL with four entries:

```
switch(config)# access-list ip MY_IP_ACL
switch(config-acl-ip)# 10 permit udp any 172.16.1.0/24
switch(config-acl-ip)# 20 permit tcp 172.16.2.0/16 gt 1023 any
switch(config-acl-ip)# 30 permit tcp 172.26.1.0/24 any syn ack dscp 10
switch(config-acl-ip)# 40 deny any any any count
switch(config-acl-ip)# exit
switch(config)# show access-list
```

Type	Name	Sequence	Comment	Action	L3 Protocol	Source IP Address	Source L4 Port(s)	Destination IP Address	Destination L4 Port(s)	Additional Parameters
IPv4	MY_IP_ACL	10	permit	any	udp					

```

172.16.1.0/255.255.255.0
20 permit                                tcp
172.16.2.0/255.255.0.0                  > 1023
any
30 permit                                tcp
172.26.1.0/255.255.255.0
any
dscp: AF11
ack
syn
40 deny                                  any
any
any
Hit-counts: enabled

```

Adding a comment to an existing IPv4 ACE:

```

switch(config)# access-list ip MY_IP_ACL
switch(config-acl-ip)# 20 comment Permit all TCP ephemeral ports
switch(config-acl-ip)# exit
switch(config)# show access-list

```

```

Type      Name
Sequence Comment
Action          L3 Protocol
Source IP Address Source L4 Port(s)
Destination IP Address Destination L4 Port(s)
Additional Parameters

```

```

-----
---
IPv4      MY_IP_ACL
10 permit                                udp
any
172.16.1.0/255.255.255.0
20 Permit all TCP ephemeral ports
permit                                tcp
172.16.2.0/255.255.0.0                  > 1023
any
30 permit                                tcp
172.26.1.0/255.255.255.0
any
dscp: AF11
ack
syn
40 deny                                  any
any

```

```
any
Hit-counts: enabled
```

Removing a comment from an existing IPv4 ACE:

```
switch(config)# access-list ip MY_IP_ACL
switch(config-acl-ip)# no 20 comment
switch(config-acl-ip)# exit
switch(config)# show access-list
Type          Name
Sequence      Comment
              Action          L3 Protocol
              Source IP Address Source L4 Port(s)
              Destination IP Address Destination L4 Port(s)
              Additional Parameters
-----
---
IPv4          MY_IP_ACL
10 permit                                udp
   any
   172.16.1.0/255.255.255.0
20 permit                                tcp
   172.16.2.0/255.255.0.0          > 1023
   any
30 permit                                tcp
   172.26.1.0/255.255.255.0
   any
   dscp: AF11
   ack
   syn
40 deny                                any
   any
   any
Hit-counts: enabled
```

Adding an ACE (insert line 25) to an existing IPv4 ACL:

```
switch(config)# access-list ip MY_IP_ACL
switch(config-acl-ip)# 25 permit icmp 172.16.2.0/16 any
switch(config-acl-ip)# exit
switch(config)# show access-list
Type          Name
Sequence      Comment
              Action          L3 Protocol
              Source IP Address Source L4 Port(s)
              Destination IP Address Destination L4 Port(s)
              Additional Parameters
```

```

-----
---
IPv4      MY_IP_ACL
10 permit                                udp
    any
    172.16.1.0/255.255.255.0
20 permit                                tcp
    172.16.2.0/255.255.0.0          > 1023
    any
25 permit                                icmp
    172.16.2.0/255.255.0.0 any
30 permit                                tcp
    172.26.1.0/255.255.255.0
    any
    dscp: AF11
    ack
    syn
40 deny                                    any
    any
    any
Hit-counts: enabled

```

Replacing an ACE in an existing IPv4 ACL:

```

switch(config)# access-list ip MY_IP_ACL
switch(config-acl-ip)# 25 permit icmp 172.17.1.0/16 any
switch(config-acl-ip)# exit
switch(config)# show access-list

```

Type	Name	Sequence	Comment	Action	L3 Protocol	Source IP Address	Source L4 Port(s)	Destination IP Address	Destination L4 Port(s)	Additional Parameters
IPv4	MY_IP_ACL	10	permit		udp	any		172.16.1.0/255.255.255.0		
		20	permit		tcp	172.16.2.0/255.255.0.0	> 1023			
		25	permit		icmp	172.17.1.0/255.255.0.0				

```

30 permit                                     tcp
    172.26.1.0/255.255.255.0
    any
    dscp: AF11
    ack
    syn
40 deny                                     any
    any
    any
    Hit-counts: enabled
Type      Name
Sequence Comment
Action
Source IP Address      L3 Protocol
Destination IP Address Source L4 Port(s)
Additional Parameters  Destination L4 Port(s)
-----
---
IPv4      MY_IP_ACL
10 permit                                     udp
    any
    172.16.1.0/255.255.255.0
20 permit                                     tcp
    172.16.2.0/255.255.0.0      > 1023
    any
25 permit                                     icmp
    172.17.1.0/255.255.0.0
30 permit                                     tcp
    172.26.1.0/255.255.255.0
    any
    dscp: AF11
    ack
    syn
40 deny                                     any
    any
    any
    Hit-counts: enabled

```

Removing an ACE from an IPv4 ACL:

```

switch(config)# access-list ip MY_IP_ACL
switch(config-acl-ip)# no 25
switch(config-acl-ip)# exit
switch(config)# show access-list
Type      Name

```

Sequence	Comment		
	Action		L3 Protocol
	Source IP Address		Source L4 Port(s)
	Destination IP Address		Destination L4 Port(s)
	Additional Parameters		

IPv4	MY_IP_ACL		
10	permit		udp
	any		
	172.16.1.0/255.255.255.0		
20	permit		tcp
	172.16.2.0/255.255.0.0		> 1023
	any		
30	permit		tcp
	172.26.1.0/255.255.255.0		
	any		
	dscp: AF11		
	ack		
	syn		
40	deny		any
	any		
	any		
	Hit-counts: enabled		
Type	Name		
Sequence	Comment		
	Action		L3 Protocol
	Source IP Address		Source L4 Port(s)
	Destination IP Address		Destination L4 Port(s)
	Additional Parameters		

IPv4	MY_IP_ACL		
10	permit		udp
	any		
	172.16.1.0/255.255.255.0		
20	permit		tcp
	172.16.2.0/255.255.0.0		> 1023
	any		
30	permit		tcp
	172.26.1.0/255.255.255.0		
	any		
	dscp: AF11		

```

        ack
        syn
40 deny                                any
    any
    any
Hit-counts: enabled

```

Copy an IPv4 ACL:

```

switch(config)# access-list ip MY_IP_ACL copy MY_IP_ACL2
switch(config)# show access-list
Type           Name
Sequence Comment
Action                                     L3 Protocol
Source IP Address                         Source L4 Port(s)
Destination IP Address                   Destination L4 Port(s)
Additional Parameters

-----
---
IPv4           MY_IP_ACL
10
    permit                                     udp
    any
    172.16.1.0/255.255.255.0
20
    permit                                     tcp
    172.16.2.0/255.255.0.0                   > 1023
    any
30
    permit                                     tcp
    172.26.1.0/255.255.255.0
    any
    dscp: AF11
    ack
    syn
40
    deny                                     any
    any
    any
Hit-counts: enabled

-----
---
IPv4           MY_IP_ACL2
10
    permit                                     udp

```



```

        any
        172.16.1.0/255.255.255.0
20
    permit                                tcp
        172.16.2.0/255.255.0.0          > 1023
    any
30
    permit                                tcp
        172.26.1.0/255.255.255.0
    any
    dscp: AF11
    ack
    syn
40
    deny                                any
    any
    any
    Hit-counts: enabled switch(config)# access-list ip MY_IP_ACL
copy MY_IP_ACL2
switch(config)# show access-list
Type          Name
Sequence      Comment
Action        L3 Protocol
Source IP Address      Source L4 Port(s)
Destination IP Address Destination L4 Port(s)
Additional Parameters

-----
---
IPv4          MY_IP_ACL
10
    permit                                udp
    any
    172.16.1.0/255.255.255.0
20
    permit                                tcp
        172.16.2.0/255.255.0.0          > 1023
    any
30
    permit                                tcp
        172.26.1.0/255.255.255.0
    any
    dscp: AF11
    ack

```

```

        syn
40      deny                                any
        any
        any
        Hit-counts: enabled
-----
---
IPv4    MY_IP_ACL2
10      permit                                udp
        any
        172.16.1.0/255.255.255.0
20      permit                                tcp
        172.16.2.0/255.255.0.0                > 1023
        any
30      permit                                tcp
        172.26.1.0/255.255.255.0
        any
        dscp: AF11
        ack
        syn
40      deny                                any
        any
        any
        Hit-counts: enabled

```

Removing an IPv4 ACL:

```

switch(config)# no access-list ip MY_IP_ACL
switch(config)# show access-list
Type      Name
Sequence  Comment
          Action                                L3 Protocol
          Source IP Address                    Source L4 Port(s)
          Destination IP Address                Destination L4 Port(s)
          Additional Parameters
-----
---
IPv4      MY_IP_ACL2
1 permit                                udp
        any

```

```

172.16.1.0/255.255.255.0
2 permit                                tcp
172.16.2.0/255.255.0.0                > 1023
any
3 permit                                tcp
172.26.1.0/255.255.255.0
any
dscp: AF11
ack
syn
4 deny                                any
any
any
Hit-counts: enabled

```

Configuring an ACE with a source L4 port group and a destination L4 port group to match on any ip-option:

```

switch(config-acl-ip)# permit sctp any group my_port_group any ip-option ?
any Any IP option

```

Command History

Release	Modification
10.17.1000	Added support for EIGRP, L2TP and VRRP protocols.
10.15	The <code>ip-option</code> parameter is introduced on the 8325 and 10000 switches.
10.12	Allow ACLs applied to the Control Plane to be logged.
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	config The access - list ip < ACL - NAME > command takes you into the named ACL context where you enter the ACEs.	Administrators or local user group members with execution rights for this command.

access-list ipv6

Syntax

Syntax to create an IPv6 ACL and enter its context. Plus syntax to remove an ACL:

```
access-list ipv6 <ACL-NAME>
no access-list ipv6 <ACL-NAME>
```

Syntax (within the ACL context) for creating or removing ACEs for protocols **ah**, **eigrp**, **esp**, **gre**, **l2tp**, **ospf**, **pim**, **vrrp** (**ipv6** is available as an alias for **any**):

```
[<SEQUENCE-NUMBER>]
{permit|deny}
{any|ah|eigrp|esp|gre|ipv6|l2tp|ospf|pim|vrrp|<IP-PROTOCOL-NUM>}
{any|<SRC-IP-ADDRESS>[/<PREFIX-LENGTH>]|<ADDRESS-GROUP>}
{any|<DST-IP-ADDRESS>[/<PREFIX-LENGTH>]|<ADDRESS-GROUP>}
[dscp <DSCP-SPECIFIER>] [ecn <ECN-VALUE>] [ip-precedence <IP-PRECEDENCE-VALUE>]
[tos <TOS-VALUE>] [fragment] [vlan <VLAN-ID>] [ttl <TTL-VALUE>] [count]
[log]
no <SEQUENCE-NUMBER>
```

Syntax (within the ACL context) for creating or removing ACEs for protocols **sctp**, **tcp**, **udp**:

```
[<SEQUENCE-NUMBER>]
{permit|deny}
{sctp|tcp|udp}
{any|<SRC-IP-ADDRESS>[/<PREFIX-LENGTH>]]|<ADDRESS-GROUP>}
[{eq|gt|lt} <PORT>|range <MIN-PORT>
    <MAX-PORT>|group <PORT-GROUP>]
{any|<DST-IP-ADDRESS>[/<PREFIX-LENGTH>]|<ADDRESS-GROUP>}
[{eq|gt|lt} <PORT>|range <MIN-PORT>
    <MAX-PORT>|group <PORT-GROUP>]
[urg] [ack] [psh] [rst] [syn] [fin] [established]
[dscp <DSCP-SPECIFIER>] [ecn <ECN-VALUE>] [ip-precedence <IP-PRECEDENCE-VALUE>]
[tos <TOS-VALUE>] [fragment] [vlan <VLAN-ID>] [ttl <TTL-VALUE>] [count]
[log]
no <SEQUENCE-NUMBER>
```

Syntax (within the ACL context) for creating or removing ACEs for protocol **icmpv6**:

```
[<SEQUENCE-NUMBER>]
{permit|deny}
{icmpv6}
```

```

{any|<SRC-IP-ADDRESS>[/<PREFIX-LENGTH>]|<ADDRESS-GROUP>}
{any|<DST-IP-ADDRESS>[/<PREFIX-LENGTH>]|<ADDRESS-GROUP>}
[icmp-type {echo|echo-reply|<ICMP-TYPE-VALUE>}] [icmp-code <ICMP-CODE-VALUE>]
[dscp <DSCP-SPECIFIER>] [ecn <ECN-VALUE>] [ip-precedence <IP-PRECEDENCE-VALUE>]
[tos <TOS-VALUE>] [fragment] [vlan <VLAN-ID>] [ttl <TTL-VALUE>] [count]
[log]
no <SEQUENCE-NUMBER>

```

Syntax (within the ACL context) for ACE comments:

```

[<SEQUENCE-NUMBER>] comment <TEXT-STRING>
no <SEQUENCE-NUMBER> comment

```

Description

Creates an IPv6 Access Control List (ACL). The ACL is made of one or more Access Control Entries (ACEs) ordered and prioritized by sequence number. The lowest sequence number is the highest prioritized ACE.

The **no** form of this command deletes the entire ACL, or deletes an ACE identified by sequence number, or deletes only the comment from the ACE identified by sequence number.

Parameter	Description
<ACL-NAME>	Specifies the name of this ACL.
<SEQUENCE-NUMBER>	Specifies a sequence number for the ACE. Range: 1 to 4294967295.
{permit deny}	Specifies whether to permit or deny traffic matching this ACE.
<IP-PROTOCOL-NUM>	Specifies the protocol as its Internet Protocol number. For example, 2 corresponds to the IGMP protocol. Range: 0 to 255.
{any <SRC-IP-ADDRESS>[/<PREFIX-LENGTH>] <ADDRESS-GROUP> }	Specifies the source IPv6 address. any - specifies any source IPv6 address. <SRC - IP - ADDRESS> - specifies the source IPv6 host address.

Parameter	Description
	◦ <PREFIX - LENGTH> - specifies the address bits to mask (CIDR subnet mask notation). Range: 1 to 128. • <ADDRESS - GROUP> - specifies an IPv6 address group that you defined earlier with object - group ipv6 address.
<code>{any <DST-IP-ADDRESS>[/<PREFIX-LENGTH>] <ADDRESS-GROUP> }</code>	Specifies the destination IPv6 address. • any - specifies any destination IPv6 address. • <DST - IP - ADDRESS> - specifies the destination IPv6 host address. ◦ <PREFIX - LENGTH> - specifies the address bits to mask (CIDR subnet mask notation). Range: 1 to 128. • <ADDRESS - GROUP> - specifies an IPv6 address group that you defined earlier with <code>object-group ipv6 address</code>.
<code>[{eq gt lt} <PORT> range <MIN-PORT> <MAX-PORT> group <PORT-GROUP>]</code>	Specifies the port, port range, or port group. Port numbers are in the range of 0 to 65535. • eq <PORT> - specifies the Layer 4 port. • gt <PORT> - specifies any Layer 4 port greater than the indicated port. • lt <PORT> - specifies any Layer 4 port less than the indicated port. • range <MIN - PORT> <MAX - PORT> - specifies the Layer 4 port range. • group <PORT - GROUP> - specifies the Layer 4 port group that you defined earlier with <code>object-group port</code>.  NOTE Upon application of the ACL, ACEs with L4 port ranges may consume more than one hardware entry.
<code>urg, ack, psh, rst, syn, fin, established</code>	These TCP flag - matching parameters are not supported.
<code>[icmp-type {echo echo-reply <ICMP-TYPE-VALUE>}]</code>	Specifies the ICMP type. • echo - specifies an ICMP echo request packet. • echo - reply - specifies an ICMP echo reply packet.

Parameter	Description
	• <ICMP - TYPE - VALUE> - specifies an ICMP type value. Range: 0 to 255.
<code>[icmp-code <ICMP-CODE-VALUE>]</code>	Specifies the ICMP code value. Range: 0 to 255.
<code>dscp DSCP-SPECIFIER></code>	Specifies the Differentiated Services Code Point (DSCP), either a numeric <DSCP - VALUE> (0 to 63) or one of these keywords : • AF11 - DSCP 10 (Assured Forwarding Class 1, low drop probability) • AF12 - DSCP 12 (Assured Forwarding Class 1, medium drop probability) • AF13 - DSCP 14 (Assured Forwarding Class 1, high drop probability) • AF21 - DSCP 18 (Assured Forwarding Class 2, low drop probability) • AF22 - DSCP 20 (Assured Forwarding Class 2, medium drop probability) • AF23 - DSCP 22 (Assured Forwarding Class 2, high drop probability) • AF31 - DSCP 26 (Assured Forwarding Class 3, low drop probability) • AF32 - DSCP 28 (Assured Forwarding Class 3, medium drop probability) • AF33 - DSCP 30 (Assured Forwarding Class 3, high drop probability) • AF41 - DSCP 34 (Assured Forwarding Class 4, low drop probability) • AF42 - DSCP 36 (Assured Forwarding Class 4, medium drop probability) • AF43 - DSCP 38 (Assured Forwarding Class 4, high drop probability) • CS0 - DSCP 0 (Class Selector 0: Default) • CS1 - DSCP 8 (Class Selector 1: Scavenger) • CS2 - DSCP 16 (Class Selector 2: OAM) • CS3 - DSCP 24 (Class Selector 3: Signaling) • CS4 - DSCP 32 (Class Selector 4: Real time) • CS5 - DSCP 40 (Class Selector 5: Broadcast video) • CS6 - DSCP 48 (Class Selector 6: Network control) • CS7 - DSCP 56 (Class Selector 7)

Parameter	Description
	EF - DSCP 46 (Expedited Forwarding)
<code>ecn <ECN-VALUE></code>	Specifies an Explicit Congestion Notification value. Range: 0 - 3.
<code>ip-precedence <IP-PRECEDENCE-VALUE></code>	Specifies an IP precedence value. Range: 0 - 7.
<code>tos <TOS-VALUE></code>	Specifies the Type of Service value. Range: 0 - 31.
<code>fragment</code>	Not supported.
<code>vlan <VLAN-ID></code>	Not supported.
<code>ttl <TTL-VALUE></code>	Not supported.
<code>count</code>	Keeps the hit counts of the number of packets matching this ACE.
<code>log</code>	Keeps a log of the number of packets matching this ACE. Works with <code>deny</code> actions but not with <code>permit</code> actions. Works with ACLs applied on ingress, or Control Plane, but not with ACLs applied on egress.
<code>[<SEQUENCE-NUMBER>] comment <TEXT-STRING></code>	Adds a comment to an ACE. The no form removes only the comment from the ACE.

Usage

- If the `<IP-PROTOCOL-NUM>` parameter is used instead of a protocol name, ensure that any needed ACE-definition parameters specific to the selected protocol are also provided.
- When using multiple ACL types (IPv4, IPv6, or MAC) with logging on the same interface, the first packet that matches an ACE with `log` option is logged. Until the log-timer wait-period is over, any packets matching other ACL types do not create a log. At the end of the wait-period, the switch creates a summary log all the ACLs that were matched, regardless of type.

Examples

Creating an IPv6 ACL with four entries:

```
switch(config)# access-list ipv6 MY_IPV6_ACL
switch(config-acl-ipv6)# 10 permit udp any 2001::1/64
switch(config-acl-ipv6)# 20 permit tcp 2001:2001::2:1/128 gt 1023 any
switch(config-acl-ipv6)# 30 permit tcp 2001:2011::1/64 any
```



```

switch(config-acl-ipv6)# 40 deny any any any count
switch(config-acl-ipv6)# exit
switch(config)# do show access-list
Type          Name
Sequence      Comment
              Action          L3 Protocol
              Source IP Address Source L4 Port(s)
              Destination IP Address Destination L4 Port(s)
              Additional Parameters
-----
---
IPv6          MY_IPV6_ACL
              10 permit          udp
                any
                2001::1/64
              20 permit          tcp
                2001:2001::2:1    > 1023
                any
              30 permit          tcp
                2001:2011::1/64
                any
              40 deny          any
                any
                any
              Hit-counts: enabled

```

Adding a comment to an existing IPv6 ACE:

```

switch(config)# access-list ipv6 MY_IPV6_ACL
switch(config-acl-ipv6)# 20 comment Permit all TCP ephemeral ports
switch(config-acl-ipv6)# exit
switch(config)# do show access-list
Type          Name
Sequence      Comment
              Action          L3 Protocol
              Source IP Address Source L4 Port(s)
              Destination IP Address Destination L4 Port(s)
              Additional Parameters
-----
---
IPv6          MY_IPV6_ACL
              10 permit          udp
                any
                2001::1/64
              20 Permit all TCP ephemeral ports

```

```

        permit                                tcp
        2001:2001::2:1                        > 1023
        any
30 permit                                tcp
        2001:2011::1/64
        any
40 deny                                any
        any
        any
Hit-counts: enabled

```

Removing a comment from an existing IPv6 ACE:

```

switch(config)# access-list ipv6 MY_IPV6_ACL
switch(config-acl-ipv6)# no 20 comment
switch(config-acl-ipv6)# exit
switch(config)# do show access-list

```

Type	Name	Sequence	Comment	Action	L3 Protocol	Source IP Address	Source L4 Port(s)	Destination IP Address	Destination L4 Port(s)	Additional Parameters

IPv6	MY_IPV6_ACL	10	permit		udp	any		2001::1/64		
		20	permit		tcp	2001:2001::2:1	> 1023	any		
		30	permit		tcp	2001:2011::1/64		any		
		40	deny		any	any		any		
										Hit-counts: enabled

Adding an ACE to an existing IPv6 ACL:

```

switch(config)# access-list ipv6 MY_IPV6_ACL
switch(config-acl-ipv6)# 25 permit icmpv6 2001::1/64 any
switch(config-acl-ipv6)# exit
switch(config)# do show access-list

```

Type	Name
------	------

Sequence	Comment	Action	L3 Protocol
		Source IP Address	Source L4 Port(s)
		Destination IP Address	Destination L4 Port(s)
		Additional Parameters	

IPv6	MY_IPV6_ACL		
10	permit	any	udp
		2001::1/64	
20	permit	2001:2001::2:1	tcp
		any	> 1023
25	permit	2001::1/64	icmpv6
		any	
30	permit	2001:2011::1/64	tcp
		any	
40	deny	any	any
		any	
	Hit-counts: enabled		

Replacing an ACE in an existing IPv6 ACL:

```

switch(config)# access-list ipv6 MY_IPV6_ACL
switch(config-acl-ipv6)# 25 permit icmpv6 2001::2:1/64 any
switch(config-acl-ipv6)# exit
switch(config)# do show access-list

```

Type	Name	Sequence	Comment	Action	L3 Protocol
				Source IP Address	Source L4 Port(s)
				Destination IP Address	Destination L4 Port(s)
				Additional Parameters	

IPv6	MY_IPV6_ACL				
		10	permit	any	udp
				2001::1/64	
		20	permit	2001:2001::2:1	tcp
					> 1023

```

        any
25 permit                                icmpv6
    2001::2:1/64
        any
30 permit                                tcp
    2001:2011::1/64
        any
40 deny                                  any
    any
    any
Hit-counts: enabled
Type      Name
Sequence Comment
Action                                          L3 Protocol
Source IP Address                            Source L4 Port(s)
Destination IP Address                       Destination L4 Port(s)
Additional Parameters

-----
---
IPv6      MY_IPV6_ACL
10 permit                                udp
    any
    2001::1/64
20 permit                                tcp
    2001:2001::2:1                          > 1023
    any
25 permit                                icmpv6
    2001::2:1/64
    any
30 permit                                tcp
    2001:2011::1/64
    any
40 deny                                  any
    any
    any
Hit-counts: enabled

```

Removing an ACE from an IPv6 ACL:

```

switch(config)# access-list ipv6 MY_IPV6_ACL
switch(config-acl-ipv6)# no 25
switch(config-acl-ipv6)# exit
switch(config)# do show access-list
Type      Name
Sequence Comment

```

	Action	L3 Protocol
	Source IP Address	Source L4 Port(s)
	Destination IP Address	Destination L4 Port(s)
	Additional Parameters	

IPv6	MY_IPV6_ACL	
	10 permit	udp
	any	
	2001::1/64	
	20 permit	tcp
	2001:2001::2:1	> 1023
	any	
	30 permit	tcp
	2001:2011::1/64	
	any	
	40 deny	any
	any	
	any	
	Hit-counts: enabled	
Type	Name	
Sequence	Comment	
	Action	L3 Protocol
	Source IP Address	Source L4 Port(s)
	Destination IP Address	Destination L4 Port(s)
	Additional Parameters	

IPv6	MY_IPV6_ACL	
	10 permit	udp
	any	
	2001::1/64	
	20 permit	tcp
	2001:2001::2:1	> 1023
	any	
	30 permit	tcp
	2001:2011::1/64	
	any	
	40 deny	any
	any	
	any	
	Hit-counts: enabled	

Removing an IPv6 ACL:

```

switch(config)# no access-list ipv6 MY_IPV6_ACL
switch(config)# do show access-list
Type           Name
Sequence Comment
              Action                      L3 Protocol
              Source IP Address          Source L4 Port(s)
              Destination IP Address      Destination L4 Port(s)
              Additional Parameters
-----
---
IPv6           MY_IPV6_ACL2
1 permit                                udp
  any
  2001::1/64
2 Permit all TCP ephemeral ports
  permit                                tcp
  2001:2001::2:1                        > 1023
  any
3 permit                                tcp
  2001:2011::1/64
  any
4 deny                                              any
  any
  any
Hit-counts: enabled

```

Command History

Release	Modification
10.17.1000	Added support for EIGRP, L2TP and VRRP protocols.
10.12	Allow ACLs applied to the Control Plane to be logged.
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	config The access - list ipv6 < ACL - NAME> command	Administrators or local user group members with execution rights for this command.

Platforms	Command context	Authority
	takes you into the named ACL context where you enter the ACEs.	

access-list log-timer

Syntax

```
access-list log-timer {default|<INTERVAL>}
```

Description

Sets the log timer interval for all ACEs that have the **log** parameter configured.

Parameter	Description
default	Resets the log timer to its default 300 seconds.
<INTERVAL>	Specifies the log timer interval in seconds. Range: 5 to 300.

Usage

- ACL logging keeps a log of the number of packets matching this ACE. Works with **deny** actions but not with **permit** actions. Works with ACLs applied on ingress, or Control Plane, but not with ACLs applied on egress.
- The first packet that matches an ACE with the **log** parameter within an ACL log timer window (configured with the **access-list log-timer** command) has its header contents extracted and sent to the configured logging destination, such as the console and syslog server. Each time the ACL log timer expires, a summary of all ACEs with **log** configured are sent to the logging destination. This capability allows throttling of logging ACL hits.
- If no further log messages are generated in the wait-period, the switch suspends the timer and resets itself to log as soon as a new match occurs.
- When using multiple ACL types (IPv4, IPv6, or MAC) with logging on the same interface, the first packet that matches an ACE with the **log** option is logged. Any packets, matching other ACL types, do not

create a log until the log-timer wait-period is over. At the end of the wait-period, a summary log is made of all the ACLs that were matched, regardless of type.

- You may see a minor discrepancy between the ACL logging statistics and the hit counts statistics due to the time required to record the log message.

Examples



NOTE

Although these examples use debug logging, you can alternatively use event logging.

Enabling debug logging for the ACL logging module:

```
switch# debug acl log severity info
switch# show debug
-----
module sub_module severity vlan port ip mac instance vrf
-----
acl acl_log info -----
```

Setting the debug destination to console with the minimum security level of info:

```
switch# debug destination console severity info
switch# show debug destination
```

```
-----
show debug destination
-----
CONSOLE:info
```

Setting the access list log-timer to 30 seconds:

```
switch(config)# access-list log-timer 30
switch(config)# do show access-list log-timer
ACL log timer length (frequency): 30 seconds
```

Creating an IPv4 ACL with one entry with the log parameter:

```
switch(config)# access-list ip MY_IP_ACL
switch(config-acl-ip)# deny icmp 1.1.1.1 1.1.1.2 log
switch(config-acl-ip)# do show access-list
Type      Name
Sequence Comment
          Action          L3 Protocol
          Source IP Address Source L4 Port(s)
          Destination IP Address Destination L4 Port(s)
          Additional Parameters
-----
---
```



```
IPv4      MY_IP_ACL
          10 deny                               icmp
            1.1.1.1
            1.1.1.2
            Logging: enabled
            Hit-counts: enabled
```

Enabling interface 1/1/1 and applying the ACL:

```
switch(config)# interface 1/1/1
switch(config-if)# no shutdown
switch(config-if)# no routing
switch(config-if)# apply access-list ip MY_IP_ACL in
switch(config-if)# do show running-config interface 1/1/1
interface 1/1/1
  no shutdown
  apply access-list ip MY_IP_ACL in
  no routing
  vlan access 1
  exit
switch(config)# interface 1/1/1
switch(config-if)# apply access-list ip MY_IP_ACL in
switch(config-if)# do show running-config interface 1/1/1
interface 1/1/1
  no shutdown
  apply access-list ip MY_IP_ACL in
  no routing
  vlan access 1
  exit
```

Sending packets that will match the ACE and observe the ACL logging message on the console:

```
2017-10-10T20:13:36.044+00:00 ops-switchd[875]: debug|LOG_INFO|AMM|1/5|ACL|
ACL_LOG|
List MY_IP_ACL, seq# 10 denied icmp 1.1.1.1 -> 1.1.1.2 type 8 code 0,
on vlan 1, port 1/1/1, direction in
```

When the access list log-timer expires, the summary message is printed on the console. The number 30 is the number of packets received during the last access list log-timer window.

```
2017-10-10T20:14:06.051+00:00 ops-switchd[875]: debug|LOG_INFO|AMM|1/5|ACL|
ACL_LOG|
MY_IP_ACL on 1/1/1 (in): 30 10 deny icmp 1.1.1.1 1.1.1.2 log count
```

Resetting the ACL log timer to the default value:

```
switch(config)# access-list log-timer default
```

Command History

Release	Modification
10.12	Allow ACLs applied to the Control Plane to be logged.
10.09	<INTERVAL> parameter range changed to 5 to 300 . Was 30 to 300.
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

access-list mac

Syntax

```
access-list mac <ACL-NAME>
no access-list mac <ACL-NAME>
[<SEQUENCE-NUMBER>]
{permit|deny}
{any|<SRC-MAC-ADDRESS>[/<ETHERNET-MASK>]}
{any|<DST-MAC-ADDRESS>[/<ETHERNET-MASK>]}
{any|aarp|appletalk|arp|fcoe|fcoe-init|ip|ipv6|
    ipx-arpa|ipx-non-arpa|is-is|lldp|mpls-multicast|mpls-unicast|q-in-q|
    rbridge|trill|wake-on-lan|<NUMERIC-ETHERTYPE>}
[pcp <PCP-VALUE>] [vlan <VLAN-ID>] [count] [log]
no <SEQUENCE-NUMBER>
[<SEQUENCE-NUMBER>] comment <TEXT-STRING>
no <SEQUENCE-NUMBER> comment
```

Description

Creates a MAC Access Control List (ACL). The ACL is made of one or more Access Control Entries (ACEs) ordered and prioritized by sequence numbers. The lowest sequence number is the highest prioritized ACE.

The **no** form of this command deletes the entire ACL, or deletes an ACE identified by sequence number, or deletes only the comment from the ACE identified by sequence number.

Parameter	Description
<code><ACL-NAME></code>	Specifies the name of this ACL.
<code><SEQUENCE-NUMBER></code>	Specifies a sequence number for the ACE. Range: 1 to 4294967295.
<code>{permit deny}</code>	Specifies whether to permit or deny traffic matching this ACE.
<code>comment</code>	Specifies storing the remaining entered text as an ACE comment.
<code>{any <SRC-MAC-ADDRESS>[/<ETHERNET-MASK>]}]</code>	Specifies the source host MAC address (xxxx.xxxx.xxxx), OUI, or the keyword <code>any</code> . You can optionally include the following: <code><ETHERNET-MASK></code> - The address bits to mask (xxxx.xxx.xxxx).
<code>{any <DST-MAC-ADDRESS>[/<ETHERNET-MASK>]}]</code>	Specifies the destination host MAC address (xxxx.xxxx.xxxx), OUI, or the keyword <code>any</code> . You can optionally include the following: <code><ETHERNET-MASK></code> - The address bits to mask (xxxx.xxx.xxxx).
<code>{any arp appletalk ... wake-on-lan <NUMERIC-ETHERTYPE>}</code>	Specifies the protocol encapsulated in the Ethernet frame. The encapsulated protocol is identified by the EtherType Ethernet field. The EtherType is specified in one of the following three ways: <code>any</code> - any EtherType. <code><NUMERIC-ETHERTYPE></code> - the numerical EtherType protocol number. Range: 0x600 to 0xffff. - One of these EtherType protocol name keywords: <code>arp</code> <code>appletalk</code> <code>arp</code> <code>fcoe</code> <code>fcoe-init</code> <code>ip</code> <code>ipv6</code> <code>ipx-arpa</code> <code>ipx-non-arpa</code> <code>is-is</code> <code>lldp</code>

Parameter	Description
	◦ <code>mpls-multicast</code> ◦ <code>mpls-unicast</code> ◦ <code>q-in-q</code> ◦ <code>rbridge</code> ◦ <code>trill</code> ◦ <code>wake-on-lan</code>
<code>pcp <PCP-VALUE></code>	Specifies 802.1Q QoS Priority Code Point value. Range: 0 to 7.
<code>vlan <VID></code>	Specifies a VLAN ID. The VLAN ID must exist.
 NOTE This parameter cannot be used in any ACL that will be applied to a VLAN.	
<code>count</code>	Keeps the hit counts of the number of packets matching this ACE.
<code>log</code>	Keeps a log of the number of packets matching this ACE. Works with <code>deny</code> actions but not with <code>permit</code> actions. Works with ACLs applied on ingress but not with ACLs applied on egress.

Usage

When using multiple ACL types (IPv4, IPv6, or MAC) with logging on the same interface, the first packet that matches an ACE with `log` option is logged. Until the log-timer wait-period is over, any packets matching other ACL types do not create a log. At the end of the wait-period, the switch creates a summary log all the ACLs that were matched, regardless of type.

Examples

Creating a MAC ACL with four entries:

```
switch(config)# access-list mac MY_MAC_ACL
switch(config-acl-ip)# 10 permit 1122.3344.5566/ffff.ffff.0000 any ipv6
switch(config-acl-ip)# 20 permit aaaa.bbbb.cccc 1111.2222.3333 any pcp 4
switch(config-acl-ip)# 30 permit any any appletalk vlan 40
switch(config-acl-ip)# 40 deny any any any count
switch(config-acl-ip)# exit
switch(config)# do show access-list
```

Type	Name
Sequence	Comment
	Action
	EtherType
	Source MAC Address

```

Destination MAC Address
Additional Parameters
-----
---
MAC      MY_MAC_ACL
10 permit                               ipv6
    1122.3344.5566/ffff.ffff.0000
    any
20 permit                               any
    aaaa.bbbb.cccc
    1111.2222.3333
    QoS Priority Code Point: 4
30 permit                               appletalk
    any
    any
    VLAN: 40
40 deny                                 any
    any
    any
    Hit-counts: enabled

```

Adding a comment to an existing MAC ACE:

```

switch(config)# access-list mac MY_MAC_ACL
switch(config-acl-ip)# 30 comment Permit all vlan-40 tagged Appletalk
traffic
switch(config-acl-ip)# exit
switch(config)# do show access-list
Type      Name
Sequence Comment
          Action          EtherType
          Source MAC Address
          Destination MAC Address
          Additional Parameters
-----
---
MAC      MY_MAC_ACL
10 permit                               ipv6
    1122.3344.5566/ffff.ffff.0000
    any
20 permit                               any
    aaaa.bbbb.cccc
    1111.2222.3333
    QoS Priority Code Point: 4
30 Permit all vlan-40 tagged Appletalk traffic

```

```

        permit                                appletalk
        any
        any
        VLAN: 40
40 deny                                any
        any
        any
        Hit-counts: enabled

```

Removing a comment from an existing MAC ACE:

```

switch(config)# access-list mac MY_MAC_ACL
switch(config-acl-mac)# no 30 comment
switch(config-acl-mac)# exit
switch(config)# do show access-list
Type          Name
Sequence      Comment
              Action                      EtherType
              Source MAC Address
              Destination MAC Address
              Additional Parameters
-----
---
MAC           MY_MAC_ACL
10 permit                                ipv6
   1122.3344.5566/ffff.ffff.0000
   any
20 permit                                any
   aaaa.bbbb.cccc
   1111.2222.3333
   QoS Priority Code Point: 4
30 permit                                appletalk
   any
   any
   VLAN: 1
40 deny                                any
   any
   any
   Hit-counts: enabled

```

Adding an ACE to an existing MAC ACL:

```

switch(config)# access-list mac MY_MAC_ACL
switch(config-acl-ip)# 35 permit any aabb.cc11.1234 0xffee
switch(config-acl-ip)# exit
switch(config)# do show access-list
Type          Name

```

Sequence	Comment	Action	EtherType
		Source MAC Address	Destination MAC Address
		Additional Parameters	

MAC	MY_MAC_ACL		
10	permit		ipv6
		1122.3344.5566/ffff.ffff.0000	
		any	
20	permit		any
		aaaa.bbbb.cccc	
		1111.2222.3333	
		QoS Priority Code Point: 4	
30	permit		appletalk
		any	
		any	
		VLAN: 1	
35	permit		0xffee
		any	
		aabb.cc11.1234	
40	deny		any
		any	
		any	
		Hit-counts: enabled	

Replacing an ACE in an existing MAC ACL:

```

switch(config)# access-list mac MY_MAC_ACL
switch(config-acl-ip)# 35 permit any aabb.cc11.1234 0xeeee
switch(config-acl-ip)# exit
switch(config)# do show access-list

```

Type	Name
Sequence	Comment
	Action
	EtherType
	Source MAC Address
	Destination MAC Address
	Additional Parameters

MAC	MY_MAC_ACL
10	permit
	1122.3344.5566/ffff.ffff.0000
	any

```

20 permit                                any
    aaaa.bbbb.cccc
    1111.2222.3333
    QoS Priority Code Point: 4
30 permit                                appletalk
    any
    any
    VLAN: 1
35 permit                                0xeeee
    any
    aabb.cc11.1234
40 deny                                  any
    any
    any
Hit-counts: enabled

```

Removing an ACE from an MAC ACL:

```

switch(config)# access-list mac MY_MAC_ACL
switch(config-acl-ip)# no 35
switch(config-acl-ip)# exit
switch(config)# do show access-list

```

Type	Name	Sequence	Comment	Action	EtherType	Source MAC Address	Destination MAC Address	Additional Parameters

MAC	MY_MAC_ACL	10	permit	ipv6	1122.3344.5566/ffff.ffff.0000	any		
		20	permit	any	aaaa.bbbb.cccc	1111.2222.3333	QoS Priority Code Point: 4	
		30	permit	appletalk	any	any	VLAN: 1	
		40	deny	any	any			


```
any
Hit-counts: enabled
```

Removing a MAC ACL:

```
switch(config)# no access-list mac MY_MAC_ACL
switch(config)# do show access-list
Type           Name
Sequence Comment
              Action                      EtherType
              Source MAC Address
              Destination MAC Address
              Additional Parameters
-----
---
MAC           MY_MAC_ACL2
1 permit                                ipv6
  1122.3344.5566/ffff.ffff.0000
  any
2 permit                                any
  aaaa.bbbb.cccc
  1111.2222.3333
  QoS Priority Code Point: 4
3 Permit all vlan-40 tagged Appletalk traffic
  permit                                appletalk
  any
  any
  VLAN: 1
4 deny                                any
  any
  any
Hit-counts: enabled
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	<code>config</code> The <code>access-list</code> command takes you into the named ACL context where you enter the ACEs.	Administrators or local user group members with execution rights for this command.

access-list resequence

Syntax

```
access-list {ip|ipv6|mac} <ACL-NAME> resequence <STARTING-SEQUENCE-NUMBER> <INCREMENT>
```

Description

Resequences the ACE sequence numbers in an ACL.

Parameter	Description
<code>{ip ipv6 mac}</code>	Specifies the ACL type.
<code><ACL-NAME></code>	Specifies the ACL name.
<code><STARTING-SEQUENCE-NUMBER></code>	Specifies the starting sequence number.
<code><INCREMENT></code>	Specifies the sequence number increment.

Examples

Resequencing an IPv4 ACL to start at 1 with an increment of 1:

```
switch(config)# access-list ip MY_IP_ACL resequence 1 1
switch(config-acl-ip)# exit
switch(config)# do show access-list
```

Type	Name	Sequence	Comment	Action	L3 Protocol	Source IP Address	Source L4 Port(s)	Destination IP Address	Destination L4 Port(s)	Additional Parameters

IPv4	MY_IP_ACL									
		1	permit		udp	any		172.16.1.0/255.255.255.0		
		2	permit		tcp	172.16.2.0/255.255.0.0	> 1023	any		
		3	permit		tcp	172.26.1.0/255.255.255.0		any		
				dscp: AF11						
				ack						
				syn						
		4	deny		any	any		any		
										Hit-counts: enabled

Resequencing an IPv6 ACL to start at 1 with an increment of 1:

```
switch(config)# access-list ipv6 MY_IPV6_ACL resequence 1 1
switch(config-acl-ip)# exit
switch(config)# do show access-list
```

Type	Name	Sequence	Comment	Action	L3 Protocol	Source IP Address	Source L4 Port(s)	Destination IP Address	Destination L4 Port(s)	Additional Parameters


```

IPv6      MY_IPV6_ACL
1 permit                                udp
   any
   2001::1/64
2 Permit all TCP ephemeral ports
   permit                                tcp
   2001:2001::2:1                        > 1023
   any
3 permit                                tcp
   2001:2011::1/64
   any
4 deny                                    any
   any
   any
Hit-counts: enabled
Type      Name
Sequence  Comment
          Action                                L3 Protocol
          Source IP Address                    Source L4 Port(s)
          Destination IP Address                Destination L4 Port(s)
          Additional Parameters

-----
---
IPv6      MY_IPV6_ACL
1 permit                                udp
   any
   2001::1/64
2 Permit all TCP ephemeral ports
   permit                                tcp
   2001:2001::2:1                        > 1023
   any
3 permit                                tcp
   2001:2011::1/64
   any
4 deny                                    any
   any
   any
Hit-counts: enabled

```

Resequencing a MAC ACL to start at 1 with an increment of 1:

```

switch(config)# access-list mac MY_MAC_ACL resequence 1 1
switch(config-acl-mac)# exit
switch(config)# do show access-list
Type      Name

```

Sequence	Comment		
	Action		EtherType
	Source MAC Address		
	Destination MAC Address		
	Additional Parameters		

MAC	MY_MAC_ACL		
1	permit		ipv6
	1122.3344.5566/ffff.ffff.0000		
	any		
2	permit		any
	aaaa.bbbb.cccc		
	1111.2222.3333		
	QoS Priority Code Point: 4		
3	Permit all vlan-40 tagged Appletalk traffic		
	permit		appletalk
	any		
	any		
	VLAN: 1		
4	deny		any
	any		
	any		
	Hit-counts: enabled		

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

access-list reset

Syntax

```
access-list {all|ip <ACL-NAME>|ipv6 <ACL-NAME>|mac <ACL-NAME>} reset
```

Description

Changes the user-specified ACL configuration to match the active ACL configuration. Use this command when a discrepancy exists between what the user configured and what is active and accepted by the system.

Parameter	Description
<code>all ip <ACL-NAME> ipv6 <ACL-NAME> mac <ACL-NAME></code>	Specifies one of the following: • a reset of <code>all</code> ACLs. • a reset of a named IPv4 ACL. • a reset of a named IPv6 ACL. • a reset of a named MAC ACL.

Usage

The output of the **show access-list** command displays the active configuration of the product. The active configuration is the ACLs that have been configured and accepted by the system. The output of the **show access-list** command with the **configuration** parameter, displays the ACLs that have been configured. The output of this command may not be the same as what was programmed in hardware or what is active on the product.

If the active ACLs and user-configured ACLs are not the same, a warning message is displayed in the output of the show command. Modify the user-configured ACL until the warning message is no longer displayed or run the **access-list reset** command to change the user-specified configuration to match the active configuration.

Examples

Apply an ACL with TCP acknowledgments (ACKs) on ingress, which is unsupported by hardware:

```
switch(config-acl)# 10 permit tcp 172.16.2.0/16 any ack
```

Displaying the user-specified configuration:

```
switch(config)# do show access-list commands
! access-list ip TEST_ACL user configuration does not match active
configuration.
! run 'access-list TYPE NAME reset' to reset access-list to match active
configuration.
access-list ip TEST_ACL
! access-list ip TEST_ACL user configuration does not match active
```

```

configuration.
! run 'access-list TYPE NAME reset' to reset access-list to match active
configuration.
interface 1/1/1
    apply access-list ip TEST_ACL in
switch(config)# do show access-list commands configuration
! access-list ip TEST_ACL user configuration does not match active
configuration.
! run 'access-list TYPE NAME reset' to reset access-list to match active
configuration.
access-list ip TEST_ACL
    10 permit tcp 172.16.2.0/255.255.0.0 any ack
! access-list ip TEST_ACL user configuration does not match active
configuration.
! run 'access-list TYPE NAME reset' to reset access-list to match active
configuration.
interface 1/1/1
    apply access-list ip TEST_ACL in
switch(config)# do show access-list
Type          Name
Sequence Comment
              Action                      L3 Protocol
              Source IP Address          Source L4 Port(s)
              Destination IP Address      Destination L4 Port(s)
              Additional Parameters
-----
---
% Warning: TEST_ACL user configuration does not match active configuration.
%          run 'access-list TYPE NAME reset' to reset access-list to match
active configuration.
IPv4          TEST_ACL
switch(config)# do show access-list configuration
Type          Name
Sequence Comment
              Action                      L3 Protocol
              Source IP Address          Source L4 Port(s)
              Destination IP Address      Destination L4 Port(s)
              Additional Parameters
-----
---
% Warning: TEST_ACL user configuration does not match active configuration.
%          run 'access-list TYPE NAME reset' to reset access-list to match
active configuration.

```

```

IPv4      TEST_ACL
      10
      permit                                tcp
      172.16.2.0/255.255.0.0
      any
      ack
! access-list ip TEST_ACL user configuration does not match active
configuration.
! run 'access-list TYPE NAME reset' to reset access-list to match active
configuration.
access-list ip TEST_ACL
! access-list ip TEST_ACL user configuration does not match active
configuration.
! run 'access-list TYPE NAME reset' to reset access-list to match active
configuration.
interface 1/1/1
    apply access-list ip TEST_ACL in
switch(config)# do show access-list commands configuration
! access-list ip TEST_ACL user configuration does not match active
configuration.
! run 'access-list TYPE NAME reset' to reset access-list to match active
configuration.
access-list ip TEST_ACL
    10 permit tcp 172.16.2.0/255.255.0.0 any ack
! access-list ip TEST_ACL user configuration does not match active
configuration.
! run 'access-list TYPE NAME reset' to reset access-list to match active
configuration.
interface 1/1/1
    apply access-list ip TEST_ACL in
switch(config)# do show access-list
Type      Name
Sequence Comment
          Action                                L3 Protocol
          Source IP Address                    Source L4 Port(s)
          Destination IP Address                Destination L4 Port(s)
          Additional Parameters
-----
---
% Warning: TEST_ACL user configuration does not match active configuration.
%          run 'access-list TYPE NAME reset' to reset access-list to match
active configuration.
IPv4      TEST_ACL

```



```

switch(config)# do show access-list configuration
Type          Name
Sequence Comment
Action          L3 Protocol
Source IP Address Source L4 Port(s)
Destination IP Address Destination L4 Port(s)
Additional Parameters

-----
---
% Warning: TEST_ACL user configuration does not match active configuration.
%          run 'access-list TYPE NAME reset' to reset access-list to match
active configuration.
IPv4          TEST_ACL
10
    permit          tcp
    172.16.2.0/255.255.0.0
    any
    ack

```

Resetting the user-specified configuration to match the active configuration.

```

switch(config)# access-list ip TEST_ACL reset

```

Displaying the updated user-specified configuration.

```

switch(config)# do show access-list commands
access-list ip TEST_ACL
interface 1/1/1
    apply access-list ip TEST_ACL in
switch(config)# do show access-list commands configuration
access-list ip TEST_ACL
interface 1/1/1
    apply access-list ip TEST_ACL in
switch(config)# do show access-list
Type          Name
Sequence Comment
Action          L3 Protocol
Source IP Address Source L4 Port(s)
Destination IP Address Destination L4 Port(s)
Additional Parameters

-----
---
IPv4          TEST_ACL
switch(config)# do show access-list configuration
Type          Name
Sequence Comment

```

Action	L3 Protocol
Source IP Address	Source L4 Port(s)
Destination IP Address	Destination L4 Port(s)
Additional Parameters	

IPv4	TEST_ACL

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

access-list secure-update

Syntax

```
access-list secure-update
no access list secure-update
```

Description

This command determines if access lists are updated using the secure-update feature. Secure-update is enabled by default.

When secure update is enabled and an ACL is updated or replaced, one or more override entries are installed in the TCAM table(s) containing the ACL that is being modified. As a result, all traffic of the same type as the currently configured ACL will be denied on the interfaces to which the ACL is applied. This ensures that traffic is not temporarily allowed while modifying an ACL. Upon completion of the update, the TCAM override entries are uninstalled and traffic resumes ACL matching.

The **no** version of this command disables this feature. If secure-update is disabled, there will be no override entry installed. This results in the faster modification of an ACL and ensures that there is no interruption to previously permitted traffic, but may temporarily allow previously denied traffic to pass through the switch. Once the ACL has been modified, traffic will be processed by the updated ACL.

Examples

Disabling secure update:

```
switch(config)# no access-list secure-update
```

Reenabling secure update:

```
switch(config)# access-list secure-update
```

Related Commands

Command	Description
<code>vsx-sync acl-secure-update</code>	If this setting is enabled and the primary VSX node has configurations with the access list secure - update feature enabled, this configuration can synchronize to the secondary peer. This setting is disabled by default. Refer to the VSX Guide for details.

Command History

Release	Modification
10.13	Command introduced

Command Information

Platforms	Command context	Authority
All platforms	<code>config</code>	Administrators or local user group members with execution rights for this command.

ACL application

ACLs can be applied as follows:

ACL type	IPv4+6	IPv4	IPv6	MAC
Direction	In	Out	Out	In
L2 interface (port)	Yes			Yes

ACL type Direction	IPv4+6 In	IPv4 Out	IPv6 Out	MAC In
L2 LAG	Yes			Yes
L3 interface (port)	Yes	Yes		Yes
L3 LAG	Yes	Yes		Yes
L3 interface (port) s ubinterface (not ap plicable to the HPE Aruba Networking 8320, 9300/9300S Switch Series)	Yes			Yes
L3 LAG subinterfac e (not applicable to the HPE Aruba Net working 8320, 930 0/9300S Switch Ser ies)	Yes			Yes
VLAN	Yes	Yes	Yes	Yes
Interface VLAN	Yes (routed)	Yes (routed)	Yes (routed)	
Management interfa ce	Yes			

ACL type Direction	IPv4+6 In	IPv4 Out	IPv6 Out	MAC In
Control Plane (per VRF)	Yes			



NOTE

HPE Aruba Networking 8325, 9300/9300S, 10000 Switch Series:

ACLs cannot match multicast packets on the routed in direction.

The following match criteria are not supported. If any of these match criteria are attempted to be configured, an error message will be displayed and the action will not be completed.

TCP flags CWR and ECE

TCP flags and TTL (hop limit) on IPv6 ACLs

TCP flags and fragment on outbound ACLs

Fragment on IPv6 VLAN ACLs

VLAN ID on VLAN ACLs

IPv4 AH on outbound ACLs

IPv6 AH on outbound ACLs

ESP on outbound ACLs

IPv4 AH on routed-outbound ACLs

IPv6 AH on routed-outbound ACLs

ESP on routed-outbound ACLs

To apply IPv4 and/or IPv6 ACLs to the management interface, apply them to the Control Plane on the management VRF.



NOTE

8320 Switch Series: ACLs cannot match multicast packets on the routed in direction.

The following match criteria are not supported. If any of these match criteria are attempted to be configured, an error message will be displayed and the action will not be completed.

IPv4 AH on inbound ACLs

IPv4 AH routed-inbound ACLs

IPv4 AH on outbound ACLs

IPv6 AH on outbound ACLs

IPv4 AH on routed-outbound ACLs

IPv6 AH on routed-outbound ACLs

To apply IPv4 and/or IPv6 ACLs to the management interface, apply them to the Control Plane on the management VRF.

apply access-list control-plane

Syntax

```
apply access-list {ip|ipv6} <ACL-NAME> control-plane vrf <VRF-NAME>
no apply access-list {ip|ipv6} <ACL-NAME> control-plane vrf <VRF-NAME>
```

Description

Applies an ACL to the specified VRF.

The **no** form of this command removes application of the ACL from the specified VRF.

Parameter	Description
ip ipv6	Specifies the ACL type: <code>ip</code> for IPv4, or <code>ipv6</code> for IPv6.
<ACL-NAME>	Specifies the ACL name.
vrf <VRF-NAME>	Specifies the VRF name.

Usage

Only one ACL per type (**ip**, or **ipv6**) may be applied to a Control Plane VRF at a time. Therefore, using the **apply access-list control-plane** command on a VRF with an already-applied ACL of the same type, will replace the applied ACL.

Examples

Applying **My_ip_ACL** to Control Plane traffic on the default VRF:

```
switch(config)# apply access-list ip My_ip_ACL control-plane vrf default
```

Replacing **My_ip_ACL** with **My_Replacement_ACL** on the default VRF:

```
switch(config)# apply access-list ip My_Replacement_ACL control-plane vrf default
```

Remove (unapply) the **My_Replacement_ACL** from the default VRF. Any other interfaces or VLANs with **My_Replacement_ACL** applied are unaffected.

```
switch(config)# no apply access-list ip My_Replacement_ACL control-plane vrf default
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

apply access-list (to interface or LAG)

Syntax

```
no apply access-list {ip | ipv6 | mac} <ACL-NAME> {in | out}
```

Description

Applies an ACL to the interface (Individual front plane port) or Link Aggregation Group (LAG) identified by the current interface or LAG context.

The **no** form of this command removes application of the ACL from the current interface or LAG identified by the current interface or LAG context.

Parameter	Description
ip ipv6 mac	Specifies the ACL type: <code>ip</code> for IPv4, <code>ipv6</code> for IPv6, or <code>mac</code> for MAC ACL.
<code><ACL-NAME></code>	Specifies the ACL name.
in	Selects the inbound (ingress) traffic direction.
out	Selects the outbound (egress) traffic direction. Only for IPv4 ACLs applied to route - only ports. Not available for ACLs applied

Parameter	Description
	to IPv4 bridged ports, IPv6 ports, or MAC ACLs applied to ports

Usage

- Each ACL of a given type can be applied to the same interface or LAG once in each direction. Therefore, using the **apply access-list** command on an interface or LAG with an already-applied ACL of the same type will replace the currently applied ACL.
- An ACL can be applied to an individual front plane port or to a Link Aggregation Group (LAG).
- A port that is a member of a LAG with an applied ACL cannot have a different ACL applied to that member port.
- When the port membership of a LAG with an applied ACL is changed, the LAG ACL is automatically applied or removed from that port depending on the modification type.
- No ACLs (including ACLs for IPv4, IPv6, and MAC) are supported in egress on the Layer 2 interface. Egress ACLs can only be applied to Layer 3 (route-only) interfaces. Applying an egress ACL to a Layer 2 interface results in an error.
- Logging on outbound (egress) traffic is also not supported. An error message will be displayed if an ACL with any logging ACEs is attempted to be applied on egress.

Examples

Applying **My_IP_ACL** to ingress traffic on interface range 1/1/10 to 1/1/12:

```
switch(config)# int 1/1/10-1/1/12
switch(config-if-<1/1/10-1/1/12>)# apply access-list ip My_IP_ACL in
switch(config-if-<1/1/10-1/1/12>)# exit
```

Applying **MY_IP_ACL** to ingress traffic on LAG 100 and egress traffic on interface 1/1/2:

```
switch(config)# interface lag 100
switch(config-lag-if)# apply access-list ip MY_IP_ACL in
switch(config-lag-if)# exit
switch(config)# interface 1/1/2
switch(config-if)# apply access-list ip MY_IP_ACL out
switch(config-if)# exit
switch(config)#
```

Applying **MY_IPV6_ACL** to ingress traffic on interface 1/1/1 and to ingress traffic on LAG 100:

```
switch(config)# interface 1/1/1
switch(config-if)# apply access-list ipv6 MY_IPV6_ACL in
switch(config-if)# exit
```



```
switch(config)# interface lag 100
switch(config-lag-if)# apply access-list ipv6 MY_IPV6_ACL in
switch(config-lag-if)# exit
switch(config)#
```

Applying **MY_MAC_ACL** to ingress traffic on interface 1/1/1 and ingress traffic on interface 1/1/2:

```
switch(config)# interface 1/1/1
switch(config-if)# apply access-list mac MY_MAC_ACL in
switch(config-if)# exit
switch(config)# interface 1/1/2
switch(config-if)# apply access-list mac MY_MAC_ACL in
switch(config-if)# exit
switch(config)#
switch(config)# interface 1/1/1
switch(config-if)# apply access-list mac MY_MAC_ACL out
switch(config-if)# exit
switch(config)# interface 1/1/2
switch(config-if)# apply access-list mac MY_MAC_ACL out
switch(config-if)# exit
switch(config)#
```

Replacing **MY_IP_ACL** with **MY_REPLACEMENT_ACL** on interface 1/1/2:

```
switch(config)# interface 1/1/2
switch(config-if)# apply access-list ip MY_REPLACEMENT_ACL out
switch(config-if)# exit
switch(config)#
```

Unapplying **MY_REPLACEMENT_ACL** from interface 1/1/2 (out):

```
switch(config)# interface 1/1/2
switch(config-if)# no apply access-list ip MY_REPLACEMENT_ACL out
switch(config-if)# exit
switch(config)#
```

Command History

Release	Modification
10.11	Egress support extended to 9300 platform.
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	config-if config-lag-if	Administrators or local user group members with execution rights for this command.

apply access-list (to interface VLAN)

Syntax

```
apply access-list {ip|ipv6} <ACL-NAME> {routed-in|routed-out}  
no apply access-list {ip|ipv6} <ACL-NAME> {routed-in|routed-out}
```

Description

Applies an ACL to the interface VLAN (or range of interface VLANs) identified by the current interface VLAN context. Using the apply access-list command on an interface VLAN interface with an already-applied ACL of the same direction and type will replace the currently-applied ACL.

The **no** form of this command removes application of the ACL from the interface VLAN (or range of interface VLANs) identified by the current interface VLAN context.

Parameter	Description
ip ipv6	Specifies the ACL type: ip for IPv4, ipv6 for IPv6.
<ACL-NAME>	Specifies the ACL name.
routed-in	Selects the routed inbound (routed ingress) traffic direction.
routed-out	Selects the routed outbound (routed egress) traffic direction.

Examples

Creating an IPv4 ACL and applying it to routed ingress traffic on interface VLAN vlan100:

```
switch(config)# access-list ip test  
switch(config-acl-ip)# 10 permit any 1.1.1.2 2.2.2.2 count  
switch(config-acl-ip)# 20 permit any 1.1.1.2 2.2.2.1 count
```

```
switch(config-acl-ip)# 30 permit any 2.2.2.2 1.1.1.2 count
switch(config-acl-ip)# 40 permit any 2.2.2.2 1.1.1.1 count
switch(config-acl-ip)# 50 permit any any any count
switch(config-acl-ip)# exit
switch(config)#
switch(config)# interface vlan100
switch(config-if-vlan)# apply access-list ip test routed-in
```

Applying My_ip_ACL to routed ingress traffic on interface VLAN 10:

```
switch(config)# interface vlan 10
switch(config-if-vlan)# apply access-list ip My_ip_ACL routed-in
```

Applying My_ipv6_ACL to routed ingress traffic on interface VLAN 10:

```
switch(config)# interface vlan 10
switch(config-if-vlan)# apply access-list ipv6 My_ip_ACL routed-in
```

Applying My_ip_ACL to routed ingress traffic on interface VLANs 20 to 25:

```
switch(config)# interface vlan 20-25
switch(config-if-vlan-<20-25>)# apply access-list ip My_ip_ACL routed-in
```

Replacing My_ipv6_ACL with My_Replacement_ACL on interface VLAN 10 (following the above examples):

```
switch(config)# interface vlan 10
switch(config-if-vlan)# apply access-list ipv6 My_Replacement_ACL routed-in
```

Removing (unapplying) My_Replacement_ACL on interface VLAN 10. Any other interfaces or VLANs with My_Replacement_ACL applied are not affected:

```
switch(config)# interface vlan 10
switch(config-if-vlan)# no apply access-list ipv6 My_Replacement_ACL routed-in
```

Removing (unapplying) My_ip_ACL on interface VLANs 20 to 25. Any other interfaces or VLANs with My_ip_ACL applied are not affected:

```
switch(config)# interface vlan 20-25
switch(config-if-vlan-<20-25>)# no apply access-list ip My_ip_ACL routed-in
```

Applying My_ip_ACL to routed egress traffic on interface VLAN 30:

```
switch(config)# interface vlan 30
switch(config-if-vlan)# apply access-list ip My_ip_ACL routed-out
```

Applying My_ip_ACL to routed egress traffic on interface VLANs 40 to 50:

```
switch(config)# interface vlan 40-50  
switch(config-if-vlan-<40-50>)# apply access-list ip My_ip_ACL routed-out
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8320	config-if-vlan	Administrators or local user group members with execution rights for this command.
8325		
8325H		
8325P		
9300		
9300S		
10000		
10040		

apply access-list (to subinterface)

Syntax

```
apply access-list {ip|ipv6|mac} <ACL-NAME> {in|out}  
no apply access-list {ip|ipv6|mac} <ACL-NAME> {in|out}  
apply access-list {ip|ipv6|mac} <ACL-NAME> in  
no apply access-list {ip|ipv6|mac} <ACL-NAME> in
```

Description

Applies an ACL to the current port or LAG subinterface context or subinterface context range.

The **no** form of this command removes application of the ACL from the current port or LAG subinterface context or subinterface context range.



NOTE

An ACL cannot be applied to the parent interface of one or more subinterfaces. This also means that a subinterface cannot be added to an interface if there is an ACL applied.



NOTE

ACE VLAN IDs cannot be added to ACLs applied to subinterfaces. This also means that an ACL with an ACE matching on a VLAN ID cannot be applied to a subinterface.

Parameter	Description
ip ipv6 mac	Specifies the ACL type: ip for IPv4, ipv6 for IPv6, or mac for MAC ACL.
<ACL-NAME>	Specifies the ACL name.
in	Selects the traffic direction.

Usage

- Each ACL of a given type can be applied to the same subinterface once. Therefore, using the apply access-list command on a subinterface with an already-applied ACL of the same type will replace the currently applied ACL.
- In the case of a failed ACL application to a subinterface during switch reboot or hotswap, the subinterface will be shut down. Fixing the failure will cause the subinterface to come back up.
- In the case of a failed ACL application to an added subinterface LAG member(s), the entire LAG subinterface will be shut down. Fixing the failure will cause the LAG subinterface to come back up. For this case to occur, the ACL must already be successfully applied to existing subinterface LAG members. This is done to prevent traffic from circumventing the ACL by passing through new LAG members where the ACL was not successfully applied. This only occurs when the LAG spans more than one line card or stack member.

Examples

Applying My_ip_ACL to ingress traffic on subinterface 1/1/1.10:

```
switch(config)# interface 1/1/1.10
switch(config-subif)# apply access-list ip My_ip_ACL in

switch(config)# interface 1/1/2.8
switch(config-subif)# apply access-list ip My_ip_ACL_egr out
```

Applying My_ipv6_ACL to ingress traffic on subinterface 1/1/1.10:

```
switch(config)# interface 1/1/1.10
switch(config-subif)# apply access-list ipv6 My_ipv6_ACL in
```

Applying My_ip_ACL to ingress traffic on subinterface range 1/1/1.11 to 1/1/1.15:

```
switch(config)# interface 1/1/1.11-1/1/1.15
switch(config-subif-<1/1/1.11-1/1/1.15>)# apply access-list ip My_ip_ACL in
```

Replacing My_ipv6_ACL with My_Replacement_ACL on subinterface 1/1/1.10 (following the above examples):

```
switch(config)# interface 1/1/1.10
switch(config-subif)# apply access-list ipv6 My_Replacement_ACL in
```

Removing (unapplying) My_Replacement_ACL on subinterface 1/1/1.10. Any other interfaces or VLANs with My_Replacement_ACL applied are not affected.

```
switch(config)# interface 1/1/1.10
switch(config-subif)# no apply access-list ipv6 My_Replacement_ACL in
```

Removing (unapplying) My_ip_ACL on subinterface 1/1/1.11 to 1/1/1.15. Any other interfaces or VLANs with My_ip_ACL applied are not affected.

```
switch(config)# interface 1/1/1.11-1/1/1.15
switch(config-subif-<1/1/1.11-1/1/1.15>)# no apply access-list ip My_ip_ACL in
```

Applying My_ip_ACL to ingress traffic on subinterface lag1.10:

```
switch(config)# interface lag1.10
switch(config-subif)# apply access-list ip My_ip_ACL in
```

Removing (unapplying) My_ip_ACL from subinterface lag1.10:

```
switch(config)# interface lag1.10
switch(config-subif)# no apply access-list ip My_ip_ACL in
```

Command History

Release	Modification
10.17	Command introduced on the 9300 and 9300S Switch Series.
10.11	Command introduced on the 8325.
10.11	Command introduced on the 10000.
10.08	Command introduced.

Command Information

Platforms	Command context	Authority
8325 8325H 8325P 9300 9300S 10000	config-subif	Administrators or local user group members with execution rights for this command.

apply access-list (to L3 VNI)

Syntax

Description

Applies an ACL to the current L3 VNI. Only one direction (‘routed-in’) and one type (IPv4/IPv6) of an ACL may be applied to an L3 VNI at a time, thus the **apply** command on an L3 VNI with an already applied ACL of the same direction and type replaces the currently-applied ACL.

The **no** form of this command removes application of the ACL from the L3 VNI identified by the current L3 VNI context.

Parameter	Description
ip ipv6	Specifies the ACL type: ip for IPv4 or ipv6 for IPv6.

Parameter	Description
<code><ACL-NAME></code>	Specifies the ACL name.
<code>routed-in</code>	Selects the routed - inbound (routed ingress) traffic direction.

Usage

- Each ACL of a given type can be applied to the same L3 VNI interface once in each direction. Therefore, using the **apply access-list** command on an L3 VNI interface with an already-applied ACL of the same type, will replace the applied ACL.

-

Examples

Applying `My_ip_ACL` to routed ingress traffic on VNI 10:

```
switch(config)# interface vxlan 1
switch(config-vxlan-if)# vni 10
switch(config-vni-10)# vrf red
switch(config-vni-10)# routing
switch(config-vni-10)# apply access-list ip My_ip_ACL routed-in
switch(config-vni-10)# exit
switch(config-vxlan-if)# exit
switch(config)#
```

Applying `My_ipv6_ACL` to routed ingress traffic on VNI 10:

```
switch(config)# interface vxlan 1
switch(config-vxlan-if)# vni 10
switch(config-vni-10)# vrf red
switch(config-vni-10)# routing
switch(config-vni-10)# apply access-list ipv6 My_ipv6_ACL routed-in
switch(config-vni-10)# exit
switch(config-vxlan-if)# exit
switch(config)#
```

Replacing `My_ipv6_ACL` with `My_Replacement_ACL` on VNI 10 (following the preceding examples):

```
switch(config)# interface vxlan 1
switch(config-vxlan-if)# vni 10
switch(config-vni-10)# apply access-list ipv6 My_Replacement_ACL routed-in
switch(config-vni-10)# exit
```



```
switch(config-vxlan-if)# exit  
switch(config)#
```

Removing **My_Replacement_ACL** on interface **VNI 10**. Any other interfaces, VLANs, or VNIs with **My_ip_ACL** applied are not affected:

```
switch(config)# interface vxlan 1  
switch(config-vxlan-if)# vni 10  
switch(config-vni-10)# no apply access-list ipv6 My_Replacement_ACL routed-  
in  
switch(config-vni-10)# exit  
switch(config-vxlan-if)# exit  
switch(config)#
```

Command History

Release	Modification
10.16	Added support for 8325 and 8325H switch series.
10.14	Added support for L3 VNI ACLs.
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8325 8325H	Operator (>) or Manage r (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this c ommand from the operator context (>) only.

apply access-list (to VLAN)

Syntax

```
apply access-list {ip|ipv6|mac} <ACL-NAME> {in|out}  
no apply access-list {ip|ipv6|mac} <ACL-NAME> {in|out}
```

Description

Applies an ACL to the VLAN identified by the current VLAN context.

The **no** form of this command removes application of the ACL from the VLAN identified by the current VLAN context.

Parameter	Description
<code>ip ipv6 mac</code>	Specifies the ACL type: ip for IPv4, ipv6 for IPv6, or mac for MAC ACL.
<code><ACL-NAME></code>	Specifies the ACL name.
<code>in</code>	Selects the inbound (ingress) traffic direction.
<code>out</code>	Selects the outbound (egress) traffic direction.



NOTE

For HPE Aruba Networking 6000 and 6100 Switch series, the outbound (egress) traffic direction is supported only for MAC ACLs.

Usage Each ACL of a given type can be applied to the same VLAN once in each direction. Therefore, using the **apply access-list** command on a VLAN with an already-applied ACL of the same type, will replace the applied ACL.

Examples

Applying My_ip_ACL to ingress traffic on VLAN range 20 to 25:

```
switch(config)# vlan 20-25  
switch(config-vlan-<20-25>)# apply access-list ip My_ip_ACL in
```

Applying My_ip_ACL to egress traffic on VLAN range 40 to 50:

```
switch(config)# vlan 40-50.  
switch(config-vlan-<40-50>)# apply access-list ip My_ip_ACL out
```

Applying My_ip_ACL to ingress traffic on VLAN 10:

```
switch(config)# vlan 10  
switch(config-vlan-10)# apply access-list ip My_ip_ACL in
```

Applying My_ipv6_ACL to ingress traffic on VLAN 10:

```
switch(config)# vlan 10
switch(config-vlan-10)# apply access-list ipv6 My_ipv6_ACL in
```

Applying My_mac_ACL to ingress traffic on VLAN 10:

```
switch(config)# vlan 10
switch(config-vlan-10)# apply access-list mac My_mac_ACL in
```

Replacing My_ipv6_ACL with My_Replacement_ACL on VLAN 10 (following the preceding examples):

```
switch(config)# vlan 10
switch(config-vlan-10)# apply access-list ipv6 My_Replacement_ACL in
```

Removing (unapplying, Specifies the ACL type: **ip** for IPv4, **ipv6** for IPv6, or **mac** for MAC ACL.) several ACLs on VLAN 10:

```
switch(config)# vlan 10
switch(config-vlan-10)# no apply access-list ipv6 My_Replacement_ACL in
switch(config-vlan-10)# no apply access-list mac My_mac_ACL in
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	config-vlan	Administrators or local user group members with execution rights for this command.

clear access-list hitcounts

Syntax

```
clear access-list hitcounts { all | [{ip|ipv6|mac} <ACL-NAME>]
                             [interface <IF-NAME>| vlan <VLAN-ID>] [in|out|routed-in|
routed-out] }
```

Description

Clears the hit counts for ACLs with ACEs that include the `count` keyword.

Parameter	Description
<code>all</code>	Selects all ACLs.
<code>ip ipv6 mac</code>	Specifies the ACL type: <code>ip</code> for IPv4, <code>ipv6</code> for IPv6, or <code>mac</code> for MAC.
<code><ACL-NAME></code>	Specifies the ACL name.
<code>interface <IF-NAME></code>	Specifies the interface name (port or LAG).
<code>vlan <VLAN-ID></code>	Specifies the VLAN.
<code>in</code>	Selects the inbound (ingress) traffic direction.
<code>out</code>	Selects the outbound (egress) traffic direction. Available for IPv4 and IPv6 ACLs applied to VLANs and for IPv4 ACLs applied to route - only ports. Not available for ACLs applied to either IPv4 bridged ports or IPv6 ports, or for MAC ACLs applied to ports or VLANs.
<code>routed-in routed-out</code>	Selects the routed traffic direction on which the ACL is applied.



NOTE

This is only available for IPv4 and IPv6 ACLs applied to interface VLANs.

- **routed - in** selects the routed inbound (routed ingress) traffic direction.
- **routed - out** selects the routed outbound (routed egress) traffic direction.

Examples

Clearing the hit counts for My_ip_ACL applied to port 1/1/2 (egress):

```
switch# clear access-list hitcounts ip My_ip_ACL interface 1/1/2 out
```

Clearing the hit counts for My_ip_ACL applied to VLAN 10 (ingress):

```
switch# clear access-list hitcounts ip My_ip_ACL vlan 10 in
```

Clearing the hit counts for all ACLs:

```
switch# clear access-list hitcounts all
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

clear access-list hitcounts control-plane

Syntax

```
clear access-list hitcounts [{ip|ipv6} <ACL-NAME>] control-plane vrf <VRF-NAME>
```

Description

Clears the hit counts for ACLs applied to the Control Plane VRF.

Parameter	Description
ip ipv6	Specifies the ACL type: ip for IPv4, or ipv6 for IPv6.
	Specifies the ACL name.

Parameter	Description
<ACL-NAME>	
vrf <VRF-NAME>	Specifies the VRF name.

Examples

Clearing the hit counts for an IPv4 ACL applied to the Control Plane default VRF:

```
switch# clear access-list hitcounts ip My_ipv4_ACL control-plane vrf default
```

Clearing the hit counts for an IPv6 ACL applied to the Control Plane default VRF:

```
switch# clear access-list hitcounts ipv6 My_ipv6_ACL control-plane vrf default
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

object-group address resequence

Syntax

```
object-group {ip|ipv6} address <OBJECT-GROUP-NAME> resequence <STARTING-SEQUENCE-NUMBER> <INCREMENT>
```

Description

Reorders the sequence numbers in an address object group.

Parameter	Description
<code>ip ipv6</code>	Specifies the object group IP address type, either <code>ip</code> or <code>ipv6</code> .
<code><OBJECT-GROUP-NAME></code>	Specifies the address object group name.
<code><STARTING-SEQUENCE-NUMBER></code>	Specifies the starting sequence number.
<code><INCREMENT></code>	Specifies the sequence number increment.

Examples

Resequencing address object group `my_ipv4_addr_group` to use sequence numbers 5, 10, 15 and so on:

```
switch(config)# object-group address my_ipv4_addr_group resequence 5 5
switch(config)#
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	<code>config</code>	Administrators or local user group members with execution rights for this command.

object-group address reset

Syntax

```
object-group {ip|ipv6} address <OBJECT-GROUP-NAME> reset
```

Description

Resets the user configuration back to the active configuration. This command takes immediate effect, it is not saved in the user configuration. Use this command if misconfiguration of an address object group has occurred.

Parameter	Description
ip ipv6	Specifies the object group IP address type, either <code>ip</code> or <code>ipv6</code> .
<OBJECT-GROUP-NAME>	Specifies the address object group name.

Examples

Resetting IPv4 address object group my_ipv4_group:

```
switch(config)# object-group ip address my_ip_group reset
switch(config)#
```

Resetting IPv6 address object group my_ipv6_group:

```
switch(config)# object-group ipv6 address my_ipv6_group reset
switch(config)#
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

object-group all reset

Syntax

```
object-group all reset
```

Description

Resets the user configuration back to the active configuration for all object types (address and port). This command takes immediate effect, it is not saved in the user configuration. Use this command if misconfiguration of address object groups and port object groups has occurred. Individual address and port object groups can be reset respectively with the **object-group address reset** and **object-group port reset** commands.

Examples

Resetting the user configuration for all object types (address and port):

```
switch(config) # object-group all reset
switch(config) #
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

object-group ip address

Syntax

Syntax to create an IPv4 address object group and enter its context:

```
object-group ip address <OBJECT-GROUP-NAME>
no object-group ip address <OBJECT-GROUP-NAME>
```

Syntax (within the address object-group context) for creating or removing IPv4 address entries :

```
[<SEQUENCE-NUMBER>] <IP-ADDRESS>[/{<PREFIX-LENGTH>|<SUBNET-
MASK>}]
no <SEQUENCE-NUMBER>
```

Description

Creates an IPv4 address object group comprised of one or more address entries. Address groups are used solely as a shorthand way of specifying groups of addresses in the ACEs that make up ACLs. IPv4 address groups can be used only in the **access-list ip** command. Entering **object-group ip address** with an existing address group name, enables you to modify an existing address group.

The **no** form of this command deletes the entire address group or deletes a particular address group entry identified by sequence number.

Parameter	Description
<OBJECT-GROUP-NAME>	Specifies the address object group name.
<SEQUENCE-NUMBER>	Specifies a sequence number for the address entry. Range: 1 to 4294967295. When omitted, a sequence number 10 larger than the current highest sequence number is auto - assigned. Default auto - assigned sequence numbers are 10, 20, 30, and so on.
<IP-ADDRESS> [/{ <PREFIX-LENGTH> <SUBNET-MASK>	Specifies the IPv4 address. • <IP - ADDRESS> - specifies the IPv4 host address. • <PREFIX - LENGTH> - specifies the address bits to mask (CIDR subnet mask notation). Range: 1 to 32. • <SUBNET - MASK> - specifies the address bits to mask (dotted decimal notation).

Parameter	Description
}]	

Examples

Creating an IPv4 address group with two entries:

```
switch(config)# object-group ip address my_ipv4_addr_group
switch(config-addrgrp-ip)# 10 192.168.0.1
switch(config-addrgrp-ip)# 20 192.168.0.2
switch(config-addrgrp-ip)# exit
switch(config)# show object-group
Type          Name
Sequence L4 Port(s)/IP Address
-----
---
IPv4         my_ipv4_addr_group
            10 192.168.0.1
            20 192.168.0.2
```

Adding an entry to an existing IPv4 address group:

```
switch(config)# object-group ip address my_ipv4_addr_group
switch(config-addrgrp-ip)# 30 192.168.0.3
switch(config-addrgrp-ip)# exit
switch(config)# show object-group
Type          Name
Sequence L4 Port(s)/IP Address
-----
---
IPv4         my_ipv4_addr_group
            10 192.168.0.1
            20 192.168.0.2
            30 192.168.0.3

switch(config)# object-group ip address net_group
switch(config-addrgrp-ip)# vrf red
switch(config-addrgrp-ip)# 10 7.7.7.0/24
switch(config-addrgrp-ip)# 20 8.8.8.0/24

object-group ip address obj1
vsx-sync
!
vrf VRF_1
!
```

```
10 5.5.5.5
20 6.6.6.0/255.255.255.0
30 7.7.0.0/255.255.0.0
40 20.0.0.10
```

Removing an entry (20) from an existing IPv4 address group:

```
switch(config)# object-group ip address my_ipv4_addr_group
switch(config-addrgroup-ip)# no 20
switch(config-addrgroup-ip)# exit
switch(config)# show object-group
Type          Name
Sequence L4 Port(s)/IP Address
-----
---
IPv4          my_ipv4_addr_group
              10 192.168.0.1
              30 192.168.0.3
```

Removing an IPv4 address group:

```
switch(config)# no object-group ip address my_ipv4_addr_group
switch(config)# show object-group
No object group found.
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	config The object - group ip address command takes you into the named address group context (with prompt switch (config - address group - ip)#) where you enter the addresses.	Administrators or local user group members with execution rights for this command.

object-group ipv6 address

Syntax

Syntax to create an IPv6 address object group and enter its context:

```
object-group ipv6 address <OBJECT-GROUP-NAME>
no object-group ipv6 address <OBJECT-GROUP-NAME>
```

Syntax (within the address object-group context) for creating or removing IPv6 address entries :

```
[<SEQUENCE-NUMBER>] <IP-ADDRESS>[/{<PREFIX-LENGTH>|<SUBNET-
MASK>}]
no <SEQUENCE-NUMBER>
```

Description

Creates an IPv6 address object group comprised of one or more address entries. Address groups are used solely as a shorthand way of specifying groups of addresses in the ACEs that make up ACLs. IPv6 address groups can be used only in the `access-list ipv6` command. Entering `object-group ipv6 address` with an existing address group name, enables you to modify an existing address group.

The **no** form of this command deletes the entire address group or deletes a particular address group entry identified by sequence number.

Parameter	Description
<code><OBJECT-GROUP-NAME></code>	Specifies the address object group name.
<code><SEQUENCE-NUMBER></code>	Specifies a sequence number for the address entry. Range: 1 to 4294967295. When omitted, a sequence number 10 larger than the current highest sequence number is auto - assigned. Default auto - assigned sequence numbers are 10, 20, 30, and so on.
<code><IP-ADDRESS></code> <code>[/{</code> <code><PREFIX-LENGTH></code>	Specifies the IPv6 address. <code><IP-ADDRESS></code> - specifies the IPv6 host address. <code><PREFIX-LENGTH></code> - specifies the address bits to mask (CIDR subnet mask notation). Range: 1 to 128. <code><SUBNET-MASK></code> - specifies the address bits to mask (dotted decimal notation).

Parameter	Description
<pre> <SUBNET-MASK> }] </pre>	

Examples

Creating an IPv6 address group with two entries:

```

switch(config)# object-group ipv6 address my_ipv6_addr_group
switch(config-addrgroup-ipv6)# 10 1000::1
switch(config-addrgroup-ipv6)# 20 1000::2
switch(config-addrgroup-ipv6)# exit
switch(config)# show object-group
Type          Name
Sequence L4 Port(s)/IP Address
-----
---
IPv6         my_ipv6_addr_group
            10 1000::1
            20 1000::2

```

Adding an entry to an existing IPv6 address group:

```

switch(config)# object-group ipv6 address my_ipv6_addr_group
switch(config-addrgroup-ipv6)#
switch(config-addrgroup-ipv6)# 30 1000::3
switch(config-addrgroup-ipv6)# exit
switch(config)# show object-group
Type          Name
Sequence L4 Port(s)/IP Address
-----
---
IPv6         my_ipv6_addr_group
            10 1000::1
            20 1000::2
            30 1000::3

switch(config)# object-group ipv6 address net_group
switch(config-addrgroup-ip)# vrf red
switch(config-addrgroup-ip)# 10 1000::1
switch(config-addrgroup-ip)# 20 1000::2

```

Removing an entry (20) from an existing IPv6 address group:

```

switch(config)# object-group ipv6 address my_ipv6_addr_group
switch(config-addrgroup-ipv6)# no 20
switch(config-addrgroup-ipv6)# exit
switch(config)# show object-group
Type          Name
Sequence L4 Port(s)/IP Address
-----
---
IPv6          my_ipv6_addr_group
              10 1000::1
              30 1000::3

```

Removing an IPv6 address group:

```

switch(config)# no object-group ipv6 address my_ipv6_addr_group
switch(config)# show object-group
No object group found.

```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	config The object - group ipv6 address command takes you into the named address group context (with prompt switch(config - addrgroup - ipv6)#) where you enter the addresses.	Administrators or local user group members with execution rights for this command.

object-group port

Syntax

Syntax to create a Layer 4 port object group and enter its context:

```
object-group port <OBJECT-GROUP-NAME>
no object-group port <OBJECT-GROUP-NAME>
```

Syntax (within the port object-group context) for creating or removing Layer 4 port entries:

```
[<SEQUENCE-NUMBER>] { {eq|gt|lt} <PORT>|range <MIN-PORT>
                        <MAX-PORT> }
no <SEQUENCE-NUMBER>
```

Description

Creates a Layer 4 port object group comprised of one or more port entries. Port groups are used solely as a shorthand way of specifying groups of ports in the ACEs that make up ACLs. Layer 4 port groups can be used only in the **access-list ip** and **access-list ipv6** commands. Entering **object-group port** with an existing port group name, enables you to modify an existing port group.

The **no** form of this command deletes the entire port group or deletes a particular port group entry identified by sequence number.

Parameter	Description
<OBJECT-GROUP-NAME>	Specifies the port object group name.
<SEQUENCE-NUMBER>	Specifies a sequence number for the port entry. Range: 1 to 4294967295. When omitted, a sequence number 10 larger than the current highest sequence number is auto - assigned. Default auto - assigned sequence numbers are 10, 20, 30, and so on.
{ {eq gt lt} <PORT> range <MIN-PORT> <MAX-PORT>	Specifies the port or port range. Port numbers are in the range of 0 to 65535. • eq <PORT> - specifies the Layer 4 port. • gt <PORT> - specifies any Layer 4 port greater than the indicated port. • lt <PORT> - specifies any Layer 4 port less than the indicated port. • range MIN - PORT> <MAX - PORT> - specifies the Layer 4 port range.  NOTE

Parameter

Description

```
}
```



When ACLs using ACEs defined with port groups are applied, the same number of hardware resources are consumed as when the ports are specified directly in the ACEs and not in a group. Keep this in mind when creating port groups that include many ports. Although hardware resource consumption is the same, with or without port groups used, it may not be immediately obvious that some port groups that you have defined, include many ports. It is recommended that you name port groups in a manner that reminds you that a group includes many ports.

Examples

Creating a port group with two entries to cover port 80 plus ports 0 through 50:

```
switch(config)# object-group port my_port_group
switch(config-portgroup)# 10 eq 80
switch(config-portgroup)# 20 range 0 50
switch(config-portgroup)# exit
switch(config)# show object-group
Type          Name
Sequence L4 Port(s)/IP Address
-----
---
Port        my_port_group
            10 eq 80
            20 range 0 50
```

Adding an entry for ports greater than 65525 (covers ports 65526 through 65535):

```
switch(config)# object-group port my_port_group
switch(config-portgroup)# 30 gt 65525
switch(config-portgroup)# exit
switch(config)# show object-group
Type          Name
Sequence L4 Port(s)/IP Address
-----
---
Port        my_port_group
            10 eq 80
            20 range 0 50
            30 gt 65525
```

Removing an entry (#20) from the port group:

```

switch(config)# object-group port my_port_group
switch(config-portgroup)# no 20
switch(config-portgroup)# exit
switch(config)# show object-group
Type          Name
Sequence L4 Port(s)/IP Address
-----
---
Port          my_port_group
              10 eq 80
              30 gt 65525

```

Removing the port group:

```

switch(config)# no object-group port my_port_group
switch(config)# show object-group
No object group found.

```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	config The object - group ip port command takes you in to the named port group context (with prompt switch(config - portgroup)#) where you specify the ports.	Administrators or local user group members with execution rights for this command.

object-group port resequence

Syntax

```
object-group port <OBJECT-GROUP-NAME> resequence <STARTING-SEQUENCE-NUMBER>
<INCREMENT>
```

Description

Reorders the sequence numbers in a port object group.

Parameter	Description
<OBJECT-GROUP-NAME>	Specifies the port object group name.
<STARTING-SEQUENCE-NUMBER>	Specifies the starting sequence number.
<INCREMENT>	Specifies the sequence number increment.

Examples

Resequencing port object group my_port_group to use sequence numbers 110, 120, 130 and so on:

```
switch(config)# object-group port my_port_group resequence 110 10
switch(config)#
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

object-group port reset

Syntax

```
object-group port <OBJECT-GROUP-NAME> reset
```

Description

Resets the user configuration back to the active configuration. This command takes immediate effect, it is not saved in the user configuration. Use this command if misconfiguration of a port object group has occurred.

Parameter	Description
<OBJECT-GROUP-NAME>	Specifies the port object group name.

Examples

Resetting port object group my_port_group:

```
switch(config)# object-group port my_port_group reset
switch(config)#
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

show access-list

Syntax

10.05 reviewer comment: Added routed-in and routed-out for FL, GL, ML, TL and routed-in only for XL. Removed exclusion of IPv4/IPv6 egress VLANs for GL and TL. 10.05 May 28 2020: SME Kyle Klockenbrink (Julie). Added routed-in for FL GL TL XL and routed-out for FL GL TL (NOT XL). ML gains NEITHER routed-in or routed-out.

```
show access-list [interface <IF-NAME> | vlan <VLAN-ID> | vni <VNI-ID> |  
interface vlan <VLAN-ID> | interface lag <LAG-ID>] [in|out|routed-in|routed-  
out][ip|ipv6|mac] [<ACL-NAME>] [commands] [configuration]  
show access-list [ip|ipv6|mac] [<ACL-NAME>] control-plane [vrf <VRF-NAME>]  
[commands] [configuration]  
  
[vsx-peer]
```

Description

Shows information about your defined ACLs and where they have been applied. When **show access-list** is entered without parameters, information for all ACLs is shown. The parameters filter the list of ACLs for which information is shown.

Available filtering includes:

- The content of a specific ACL.
- All ACLs of a specific type.
- The ACL applied in a particular direction.
- The ACL applied to a specific interface (port or split port or LAG).
- The ACL applied to a specific VLAN.

- The ACL applied to specific interface VLAN (routed-in or routed-out).
- The control-plane ACL applied to a specific VRF.

Parameter	Description
<code>interface <IF-NAME></code>	Specifies the interface name (port or LAG).
<code>vlan <VLAN-ID></code>	Specifies the VLAN.
<code>vni <VNI-ID></code>	Specifies the ID of the VNI.
<code>interface vlan <VLAN-ID></code>	Specifies a valid 802.1Q VLAN ID. Range: 1 to 4094.
<code>interface lag <LAG-ID></code>	Specifies a valid LAG ID. Range: 1 to 256.
<code>in</code>	Selects the inbound (ingress) traffic direction.
<code>out</code>	Selects the outbound (egress) traffic direction. Available for IPv4 and IPv6 ACLs applied to VLANs and for IPv4 ACLs applied to route - only ports. Not available for ACLs applied to either IPv4 bridged ports or IPv6 ports, or for MAC ACLs applied to ports or VLANs.
<code>routed-in</code>	Selects the routed inbound (routed ingress) traffic direction.  NOTE This is only available for IPv4 and IPv6 ACLs applied to interface VLANs.
<code>routed-out</code>	Selects the routed outbound (routed egress) traffic direction.  NOTE This is only available for IPv4 and IPv6 ACLs applied to interface VLANs.
<code>ip ipv6 mac</code>	Specifies the ACL type: • ip for IPv4, • ipv6 for IPv6, or • mac for MAC.
	Specifies the ACL name.

Parameter	Description
<ACL-NAME>	
commands	Specifies that the ACL definition is to be shown as the commands and parameters used to create it rather than in tabular form.
configuration	Specifies that the user - configured ACLs be shown as entered, even if the ACLs are not active due to ACE - definition command issues or hardware issues. This parameter is useful if there is a mismatch between the entered configuration and the previous successfully programmed (active) ACLs configuration.
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Examples

Creating an IPv4 ACL, applying it to an interface VLAN (routed in), and then showing ACL information filtered for that interface VLAN:

```
switch(config)# access-list ip test
switch(config-acl-ip)# 10 permit any 1.1.1.2 2.2.2.2 count
switch(config-acl-ip)# 20 permit any 1.1.1.2 2.2.2.1 count
switch(config-acl-ip)# 30 permit any 2.2.2.2 1.1.1.2 count
switch(config-acl-ip)# 40 permit any 2.2.2.2 1.1.1.1 count
switch(config-acl-ip)# 50 permit any any any count
switch(config-acl-ip)# exit
switch(config)#
switch(config)# interface vlan100
switch(config-if-vlan)# apply access-list ip test routed-in
switch(config-if-vlan)# exit
switch(config)# show access-list interface vlan100 ip routed-in
Direction
Type      Name
Sequence Comment
          Ac   L3 Protocol
          Source IP Address          Source L4 Port(s)
          Destination IP Address      Destination L4 Port(s)
          Additional Parameters
-----
---
Routed Inbound
IPv4      test
```

```

10
    permit                                any
    1.1.1.2
    2.2.2.2
    Hit-counts: enabled
20
    permit                                any
    1.1.1.2
    2.2.2.1
    Hit-counts: enabled
30
    permit                                any
    2.2.2.2
    1.1.1.2
    Hit-counts: enabled
40
    permit                                any
    2.2.2.2
    1.1.1.1
    Hit-counts: enabled
50
    permit                                any
    any
    any
    Hit-counts: enabled
-----
---
```

Showing an IPv4 ACL:

```
switch# show access-list ip MY_ACL
```

Type	Name	Sequence	Comment	Action	L3 Protocol	Source IP Address	Source L4 Port(s)	Destination IP Address	Destination L4 Port(s)	Additional Parameters
IPv4	MY_ACL	10	permit	any	udp	172.16.1.0/255.255.255.0				
		20	permit	172.16.2.0/255.255.0.0	tcp		> 1023			


```

    any
30 permit                                tcp
    172.26.1.0//255.255.255.0
    any
    syn
    ack
    dscp 10
40 deny                                any
    any
    any
Hit-counts: enabled

```

Showing an IPv4 ACL as commands:

```

switch# show access-list ip MY_ACL commands
access-list ip MY_ACL
  10 permit udp any 172.16.1.0/255.255.255.0
  20 permit tcp 172.16.2.0/255.255.0.0 gt 1023 any
  30 permit tcp 172.26.1.0/255.255.255.0 any syn ack dscp 10
  40 deny any any any count

```

```

switch# show access-list interface 1/1/2.1 mac in

```

Direction

Type	Name
Sequence	Comment
	Action
	EtherType
	Source MAC Address
	Destination MAC Address
	Additional Parameters

Inbound

MAC	My_mac_ACL
10	
	permit
	1122.3344.5566/ffff.ffff.0000
	any
20	
	permit
	aaaa.bbbb.cccc
	1111.2222.3333
	QoS Priority Code Point: 4
30	
	deny
	any

```
any
any
Hit-counts: enabled
-----
---
```

Showing IPv4 ACLs applied to VLAN 10, inbound:

```
switch# show access-list vlan 10 ip in
```

Type	Name		
Sequence	Comment		
	Action		L3 Protocol
	Source IP Address		Source L4 Port(s)
	Destination IP Address		Destination L4 Port(s)
	Additional Parameters		

--			
IPv4	My_ip_ACL		
10	permit		udp
	any		
	172.16.1.0/255.255.255.0		
20	permit		tcp
	172.16.2.0/255.255.0.0		> 1023
	any		
30	permit		tcp
	172.26.1.0//255.255.255.0		
	any		
	syn		
	ack		
	dscp 10		
40	deny		any
	any		
	any		
	Hit-counts: enabled		

--			

Showing IPv6 ACLs applied to LAG 128, inbound:

```
switch# show access-list interface lag128 ipv6 in
```

Type	Name		
Sequence	Comment		
	Action		L3 Protocol
	Source IP Address		Source L4 Port(s)
	Destination IP Address		Destination L4 Port(s)
	Additional Parameters		

```
--
IPv6      MY_IPV6_ACL
10 permit                udp
    any
    2001::1/64
20 permit                tcp
    2001:2001::2:1/128    > 1023
    any
30 permit                tcp
    2001:2011::1/64
40 deny                  any
    any
    any
    Hit-counts: enabled
-----
--
```

Showing an IPv6 ACL as commands:

```
switch# show access-list ipv6 MY_IPV6_ACL commands
access-list ipv6 MY_IPV6_ACL
  10 permit udp any 2001::1/64
  20 permit tcp 2001:2001::2:1/128 gt 1023 any
  40 deny any any any count
```

Showing a MAC ACL:

```
switch# show access-list mac MY_MAC_ACL
Type      Name
Sequence  Comment
          Action                      EtherType
          Source MAC Address
          Destination MAC Address
          Additional Parameters
-----
--
MAC       MY_MAC_ACL
10 permit                ipv6
    1122.3344.5566/ffff.ffff.0000
    any
20 permit                any
    aaaa.bbbb.cccc
    1111.2222.3333
    QoS Priority Code Point: 4
30 deny                  any
    any
    any
```

```
Hit-counts: enabled
```

Showing a MAC ACL as commands:

```
switch# show access-list mac MY_MAC_ACL commands
access-list mac MY_MAC_ACL
  10 permit 1122.3344.5566/ffff.ffff.0000 any ipv6
  20 permit aaaa.bbbb.cccc 1111.2222.3333 any pcp 4
  30 deny any any any count
```

Command History

Release	Modification
10.17	Added new parameters for the 9300 and 9300S Switch Series.
10.07 or earlier	Command introduced.

Command Information

Platforms	Command context	Authority
All platforms	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show access-list control-plane

Syntax

```
show access-list [ip|ipv6] [<ACL-NAME>] control-plane [vrf <VRF-NAME>]
                  [commands] [configuration] [vsx-peer]
```

Description

Shows information about your defined ACLs that have been applied to the Control Plane. When **show access-list control-plane** is entered without parameters, information for all ACLs applied to the Control Plane is shown. The parameters filter the list of ACLs for which information is shown.

Available filtering includes:

- The content of a specific ACL that has been applied to the Control Plane.
- All ACLs of a specific type that have been applied to the Control Plane.
- All ACLs applied to the Control Plane for a specific VRF.

Parameter	Description
<code>ip ipv6</code>	Specifies the ACL type: <code>ip</code> for IPv4, or <code>ipv6</code> for IPv6.
<code><ACL-NAME></code>	Specifies the ACL name.
<code>vrf <VRF-NAME></code>	Specifies the VRF name.
<code>[commands]</code>	Specifies that the ACL definition is to be shown as the commands and parameters used to create it rather than in tabular form.
<code>[configuration]</code>	Specifies that the user - configured ACLs be shown as entered, even if the ACLs are not active due to ACE - definition command issues or hardware issues. This parameter is useful if there is a mismatch between the entered configuration and the previous successfully programmed (active) ACLs configuration.
<code>vsx-peer</code>	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Examples

Showing an IPv4 ACL applied to the Control Plane `default` VRF:

```
switch# show access-list ip My_ipv4_ACL control-plane vrf default
Type      Name
Sequence  Comment
          Action                L3 Protocol
          Source IP Address      Source L4 Port(s)
          Destination IP Address  Destination L4 Port(s)
          Additional Parameters
-----
--
IPv4      My_ipv4_ACL
          10 permit                udp
```

```

    any
    172.16.1.0/24
20 permit                                tcp
    172.16.2.0/16                        > 1023
    any
30 permit                                tcp
    172.26.1.0/24
    any
    syn
    ack
    dscp 10
40 deny                                  any
    any
    any
    Hit-counts: enabled
-----
--

```

Showing an IPv6 ACL applied to the Control Plane `default` VRF:

```
switch# show access-list ipv6 My_ipv6_ACL control-plane vrf default
```

```

Type      Name
Sequence  Comment
          Action                L3 Protocol
          Source IP Address      Source L4 Port(s)
          Destination IP Address Destination L4 Port(s)
          Additional Parameters
-----
--
IPv6      My_ipv6_ACL
10 permit                                udp
    any
    2001::1/64
20 permit                                tcp
    2001:2001::2:1/128              > 1023
    any
30 permit                                tcp
    2001:2011::1/64
40 deny                                  any
    any
    any
    Hit-counts: enabled
-----
--

```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show access-list hitcounts

Syntax

```
show access-list hitcounts { [{ip|ipv6|mac} <ACL-NAME>] [interface <IF-NAME> | vlan <VLAN-ID> | vni <VNI-ID> | interface vlan <VLAN-ID> | interface lag <LAG-ID>] [in|out|routed-in|routed-out]] [vsx-peer] }
```

Description

Shows the hit count of the number of times an ACL has matched a packet or frame for ACEs with the **count** keyword. For ACEs without the **count** keyword, a dash is shown in place of a hit count.

Parameter	Description
ip ipv6 mac	Specifies the ACL type: ip for IPv4, ipv6 for IPv6, or mac for MAC.
<ACL-NAME>	Specifies the ACL name.
interface <IF-NAME>	Specifies the interface name (port or split port or LAG).
vlan <VLAN-ID>	Specifies the VLAN.

Parameter	Description
<code>vni <VNI-ID></code>	Specifies the ID of the VNI.
<code>interface vlan <VLAN-ID></code>	Specifies a valid 802.1Q VLAN ID. Range: 1 to 4094.
<code>interface lag <LAG-ID></code>	Specifies a valid LAG ID. Range: 1 to 256.
<code>in</code>	Selects the inbound (ingress) traffic direction.
<code>out</code>	Selects the outbound (egress) traffic direction. Available for IPv4 and IPv6 ACLs applied to VLANs and for IPv4 ACLs applied to route - only ports. Not available for ACLs applied to either IPv4 bridged ports or IPv6 ports, or for MAC ACLs applied to ports or VLANs.
<code>routed-in</code>	Selects the routed inbound (routed ingress) traffic direction.
<code>routed-out</code>	Selects the routed outbound (routed egress) traffic direction.
<code>vsx-peer</code>	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Usage

- ACL hit counts are aggregated across all:
 - Physical interfaces to which the ACL is applied to on ingress.
 - Physical interfaces to which the ACL is applied to on egress.
 - VLANs to which the ACL is applied to on ingress.
 - VLANs to which the ACL is applied to on egress.
 - Interface VLANs to which the IPv4 or IPv6 ACL is applied on routed ingress.
 - Interface VLANs to which the IPv4 or IPv6 ACL is applied on routed egress.
- If an ACL with an ACE with the **count** keyword is applied to multiple physical interfaces or VLANs, the hit counts are aggregated. There is one aggregation for physical interfaces and another for VLANs.
- Accumulated hit counts for an applied ACL are cleared upon any modification of the ACL.

Examples

Showing the hit counts for **My_ip_ACL** applied to port 1/1/2:


```

switch# show access-list hitcounts ip My_ip_ACL interface 1/1/2
Statistics for ACL My_ip_ACL (ipv4):
interface 1/1/1-1/1/2,lag1 (out):
    Matched Packets  Configuration
                    - 10 permit udp any 172.16.1.0/255.255.255.0
                    0 20 permit tcp 172.16.2.0/255.255.0.0 gt 1023 any count
                    - 30 permit tcp 172.26.1.0/255.255.255.0 any dscp AF11
ack syn
                    0 implicit deny any any any count

```

Showing the hit counts for **My_ip_ACL** applied to VLAN 10:

```

switch# show access-list hitcounts ip My_ip_ACL vlan 10
Statistics for ACL My_ip_ACL (ipv4):
vlan 10,20-100,300 (in):
    Matched Packets  Configuration
                    - 10 permit udp any 172.16.1.0/255.255.255.0
                    0 20 permit tcp 172.16.2.0/255.255.0.0 gt 1023 any count
                    - 30 permit tcp 172.26.1.0/255.255.255.0 any dscp AF11
ack syn
                    0 implicit deny any any any count

```

```

switch# show access-list hitcounts ip My_ip_ACL interface 1/1/4.1
Statistics for ACL My_ip_ACL (ipv4):
interface 1/1/4.1,1/1/10.10 (in):
    Matched Packets  Configuration
                    - 10 permit udp any 172.16.1.0/255.255.255.0
                    0 20 permit tcp 172.16.2.0/255.255.0.0 gt 1023 any count
                    - 30 permit tcp 172.26.1.0/255.255.255.0 any dscp AF11
ack syn
                    0 implicit deny any any any count

```

```

switch# show access-list hitcounts ip My_ip_ACL2 interface lag1.3
Statistics for ACL My_ip_ACL2 (ipv4):
interface lag1.3-lag1.4 (in):
    Matched Packets  Configuration
                    0 10 deny icmp any 192.168.42.1 count
3884 100 permit any any any count
                    0 implicit deny any any any count

```

Showing the hit counts for **My_ip_ACL** applied to interface VLAN 10:

```

switch# show access-list hitcounts ip My_ip_ACL vlan 10
Statistics for ACL My_ip_ACL (ipv4):
interface vlan 10,20,30 (routed-in):
    Matched Packets  Configuration
                    - 10 permit udp any 172.16.1.0/255.255.255.0
                    0 20 permit tcp 172.16.2.0/255.255.0.0 gt 1023 any count
                    - 30 permit tcp 172.26.1.0/255.255.255.0 any dscp AF11

```

ack syn

0 implicit deny any any any count

Showing the hit counts for My_ip_ACL applied on any interface and direction:

switch# **show access-list hitcounts ip My_ip_ACL vlan 10**

switch# show access-list hitcounts ip My_ip_ACL

Statistics for ACL My_ip_ACL (ipv4):

interface 1/1/1 (in):

Matched Packets	Configuration
-----------------	---------------

- 10	permit udp any 172.16.1.0/255.255.255.0
------	---

0 20	permit tcp 172.16.2.0/255.255.0.0 gt 1023 any count
------	---

- 30	permit tcp 172.26.1.0/255.255.255.0 any dscp AF11
------	---

ack syn

0 implicit deny any any any count

interface 1/1/4.1,1/1/10.10 (in):

Matched Packets	Configuration
-----------------	---------------

- 10	permit udp any 172.16.1.0/255.255.255.0
------	---

0 20	permit tcp 172.16.2.0/255.255.0.0 gt 1023 any count
------	---

- 30	permit tcp 172.26.1.0/255.255.255.0 any dscp AF11
------	---

ack syn

0 implicit deny any any any count

interface vlan 10,20,30 (routed-in):

Matched Packets	Configuration
-----------------	---------------

- 10	permit udp any 172.16.1.0/255.255.255.0
------	---

0 20	permit tcp 172.16.2.0/255.255.0.0 gt 1023 any count
------	---

- 30	permit tcp 172.26.1.0/255.255.255.0 any dscp AF11
------	---

ack syn

0 implicit deny any any any count

interface vlan 80-85 (routed-out):

Matched Packets	Configuration
-----------------	---------------

- 10	permit udp any 172.16.1.0/255.255.255.0
------	---

0 20	permit tcp 172.16.2.0/255.255.0.0 gt 1023 any count
------	---

- 30	permit tcp 172.26.1.0/255.255.255.0 any dscp AF11
------	---

ack syn

0 implicit deny any any any count

vlan 10,20-100,300 (in):

Matched Packets	Configuration
-----------------	---------------

- 10	permit udp any 172.16.1.0/255.255.255.0
------	---

0 20	permit tcp 172.16.2.0/255.255.0.0 gt 1023 any count
------	---

- 30	permit tcp 172.26.1.0/255.255.255.0 any dscp AF11
------	---

ack syn

0 implicit deny any any any count

```
vrf blue,default,red (control-plane):
    Matched Packets    Configuration
                        - 10 permit udp any 172.16.1.0/255.255.255.0
                        0 20 permit tcp 172.16.2.0/255.255.0.0 gt 1023 any count
                        - 30 permit tcp 172.26.1.0/255.255.255.0 any dscp AF11
ack syn
                        0 implicit deny any any any count
```

Showing hit counts for **My_ip_ACL** applied to L3 VNIs.

```
switch# show access-list hitcounts ip My_ip_ACL vni 10
Statistics for ACL My_ip_ACL (ipv4):
vni 10 (routed-in):
    Matched Packets    Configuration
                        - 10 permit udp any 172.16.1.0/255.255.255.0
                        0 20 permit tcp 172.16.2.0/255.255.0.0 gt 1023 any count
                        - 30 permit tcp 172.26.1.0/255.255.255.0 any dscp AF11
ack syn
                        0 implicit deny any any any count
```

Command History

Release	Modification
10.17	Added support for L3 VNI ACLs on the 9300 and 9300S Switch Series.
10.16	Added support for L3 VNI ACLs on the 8325 and 10000 switch series.
10.07 or earlier	Updated command output to use interface and VLAN ranges to reflect aggregation.

Command Information

Platforms	Command context	Authority
All platforms	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show access-list hitcounts control-plane

Syntax

```
show access-list hitcounts [{ip|ipv6} <ACL-NAME>] control-plane vrf <VRF-NAME>
                               [vsx-peer]
```

Description

Shows the hit count of the number of times an ACL (applied to the Control Plane) has matched a packet for ACEs with the `count` keyword. For ACEs without the `count` keyword, a dash is shown in place of a hit count.

Parameter	Description
ip ipv6	Specifies the ACL type: ip for IPv4, or ipv6 for IPv6.
<ACL-NAME>	Specifies the ACL name.
vrf <VRF-NAME>	Specifies the VRF name.
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Usage

- ACL hit counts are aggregated across all VRFs to which the ACL is applied to on ingress.
- Accumulated hit counts for an applied ACL are cleared upon any modification of the ACL.

Examples

Showing the hit counts for an IPv4 ACL applied to the Control Plane default VRF:

```
switch# show access-list hitcounts ip My_ipv4_ACL control-plane vrf default
Statistics for ACL My_ip_ACL (ipv4):
vrf default (control-plane):
    Matched Packets  Configuration
    - 10 permit udp any 172.16.1.0/255.255.255.0
    0 20 permit tcp 172.16.2.0/255.255.0.0 gt 1023 any count
```

```

ack syn
- 30 permit tcp 172.26.1.0/255.255.255.0 any dscp AF11
0 implicit deny any any any count

```

Command History

Release	Modification
---------	--------------

10.07 or earlier	- -
------------------	-----

Command Information

Platforms	Command context	Authority
All platforms	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show access-list secure-update

Syntax

```
show access-list secure-update
```

Description

Use this command to determine if access lists are updated using the secure-update feature. Secure update is enabled by default.

Examples

Displaying the status of the access list secure-update feature when that feature is enabled:

```

switch(config)# show access-list secure-update
Access-list secure-update is enabled

```

Displaying the status of the access list secure-update feature when that feature is disabled:

```

switch(config)# show access-list secure-update
Access-list secure-update is disabled

```

Related Commands

Command	Description
<code>access-list secure-update</code>	This command determines if access lists are updated using the secure - update feature. Secure - update is enabled by default.

Command History

Release	Modification
10.13	Command introduced

Command Information

Platforms	Command context	Authority
All platforms	<code>config</code>	Administrators or local user group members with execution rights for this command.

show capacities

Syntax

```
show capacities <FEATURE>
                [vsx-peer]
```

Description

Shows system capacities and their values for all features or a specific feature.

Parameter	Description
<code><FEATURE></code>	Specifies a feature. For example, aaa or vrrp .
<code>vsx-peer</code>	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Usage

Capacities are expressed in user-understandable terms. Thus they may not map to a specific hardware or software resource or component. They are not intended to define a feature exhaustively.

Examples

Showing all available capacities for BGP:

```
switch# show capacities bgp
System Capacities: Filter BGP
Capacities Name
Value
-----
-----
Maximum number of AS numbers in as-path
attribute                               32
...
```

Showing all available capacities for mirroring:

```
switch# show capacities mirroring
System Capacities: Filter Mirroring
Capacities Name
Value
-----
-----
Maximum number of Mirror Sessions configurable in a
system                                     4
Maximum number of enabled Mirror Sessions in a
system                                    4
```

Showing all available capacities for MSTP:

```
switch# show capacities mstp
System Capacities: Filter MSTP
Capacities Name
Value
-----
-----
Maximum number of mstp instances configurable in a
system                                    64
```

Showing all available capacities for VLAN count:

```
switch# show capacities vlan-count
System Capacities: Filter VLAN Count
Capacities Name
Value
-----
```

```

-----
Maximum number of VLANs supported in the
system                               4094      /switch# show capacities
vlan-count
System Capacities: Filter VLAN Count
Capacities Name
Value
-----
-----
Maximum number of VLANs supported in the
system                               4094

```

Command History

Release	Modification
---------	--------------

10.07 or earlier	- -
------------------	-----

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

show capacities-status

Syntax

```

show capacities-status <FEATURE>
                        [vsx-peer]

```

Description

Shows system capacities status and their values for all features or a specific feature.

Parameter	Description
<FEATURE>	Specifies the feature, for example aaa or vrrp for which to display capacities, values, and status. Required.
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

The number of IP neighbors (IPv4+IPv6) entries section in the output of the **show capacities-status l3-resources** command lists the maximum number of neighbors supported by the platform (with both IPv4 and IPv6 neighbors combined). On HPE Aruba Networking 8320, 8325, 8400, 9300/9300S, 10000, 10040 Switch series, IPv6 neighbors will count a value of two for each neighbor, as they take up twice the space in hardware as compared to IPv4 neighbors. In previous releases, the output the **show capacities-status l3-resources** command counted IPv4 and IPv6 neighbors as consuming the same number of resources/space in hardware.



NOTE

For Spine and L3-core profiles on HPE Aruba Networking 8320, 8325 and 10000 Switch series, the IPv6 Route entry size is still one for each neighbor. For Leaf and L3-agg profiles, the entry size is also one for IPv6 routes with a prefix greater than 64.

Examples

Showing the system capacities status for all features:

```
switch# show capacities-status
System Capacities Status
Capacities Status Name
Value Maximum
-----
-----
Number of active gateway mac addresses in a
system                                0      16
Number of aspath-lists
configured                             0      64
Number of community-lists
configured                             0      64
...
switch# show capacities-status
System Capacities Status
Capacities Status Name
```

```

Value Maximum
-----
-----
Number of Access Control Entries currently configured
0      4096
Number of Access Control Lists currently configured
0      512
Number of class entries currently configured
0      4096
Number of classes currently configured
0      512
Number of policies currently configured
0      512
Number of policy entries currently configured
0      4096
Number of dynamic VLANs currently learnt using MVRP
0      256
Number of IP neighbor (IPv4+IPv6) entries
1      1024
Number of IPv4 neighbor(ARP) entries
1      1024
Number of IPv6 neighbor(ND) entries
0      512
Number of L3 Groups for IP Tunnels and ECMP Groups currently configured
0      1
Number of L3 Destinations for Routes, Nexthops in ECMP groups and Tunnels
currently configured
0      1024
Number of Mirror Sessions currently configured
0      4
Number of Mirror Sessions currently enabled
0      4
Number of mstp instances currently configured
0      16
Number of RPVST VLANs currently configured
0      16
Number of routes (IPv4+IPv6) currently configured
1      512
Number of IPv4 routes currently configured
1      512
Number of IPv6 routes currently configured with prefix 0-64
0      512
Number of IPv6 routes currently configured with prefix 65-127

```

```

0      512
Number of VLANs currently configured
1      512

```

Showing the system capacities status for BGP:

```

switch# show capacities-status bgp
System Capacities Status: Filter BGP
Capacities Status Name                                     Value
Maximum
-----
-----
Number of aspath-lists configured                           0
64
Number of community-lists configured                       0
64
Number of neighbors configured across all VRFs              0
50
Number of peer groups configured across all VRFs            0
25
Number of prefix-lists configured                           0
64
Number of route-maps configured                             0
64
Number of routes in BGP RIB                                 0
256000
Number of route reflector clients configured across all VRFs 0
16

```

Showing the system capacities status for L3:

```

switch# show capacities-status l3
System Capacities Status: Filter L3 resources
Capacities Status Name                                     Value Maximum
-----
-----
Number of IP neighbor (IPv4+IPv6) entries
4      49152
Number of IP Directed Broadcast neighbor entries
0      4096
Number of IPv6 Long Prefix Routes currently configured
3      5000
Number of IPv6 neighbor (ND) entries
4      49152
Number of L3 Groups for IP Tunnels and ECMP Groups currently configured
1      2047

```

```

Number of L3 Destinations for Routes, Nexthops in ECMP groups and
Tunnels currently configured
4      2045
Number of routes (IPv4+IPv6) currently configured
5      65536
Number of IPv4 routes currently configured
0      65536
Number of IPv6 routes currently configured with prefix 0-64
4      13312
Number of IPv6 routes currently configured with prefix 65-127
2      510
switch# show capacities-status 13
System Capacities Status: Filter L3 resources
Capacities Status Name
Value Maximum
-----
-----
Number of IP neighbor (IPv4+IPv6) entries
4      49152
Number of IP Directed Broadcast neighbor entries
0      4096
Number of IPv6 Long Prefix Routes currently configured
3      5000
Number of IPv6 neighbor(ND) entries
4      49152
Number of L3 Groups for IP Tunnels and ECMP Groups currently configured
1      2047
Number of L3 Destinations for Routes, Nexthops in ECMP groups and
Tunnels currently configured
4      2045
Number of routes (IPv4+IPv6) currently configured
5      65536
Number of IPv4 routes currently configured
0      65536
Number of IPv6 routes currently configured with prefix 0-64
4      13312
Number of IPv6 routes currently configured with prefix 65-127
2      510

```

Showing the system capacities status for OSPFv2:

```

switch# show capacities-status ospfv2

System Capacities Status: Filter OSPFv2
Capacities Status Name

```

Value Maximum

```
-----  
-----  
Number of OSPFv2 areas configured in the  
system                                0      128  
Number of OSPFv2 interfaces (active + passive) configured in the  
system                                0      1024  
Number of OSPFv2 active interfaces configured in the  
system                                0      128  
Number of OSPFv2 passive interfaces configured in the  
system                                0      1024
```

Showing the system capacities status for OSPFv3:

```
switch# show capacities-status ospfv3
```

System Capacities Status: Filter OSPFv3

Capacities Status Name

Value Maximum

```
-----  
-----  
Number of OSPFv3 areas configured in the  
system                                0      128  
Number of OSPFv3 interfaces (active + passive) configured in the  
system                                0      1024  
Number of OSPFv3 active interfaces configured in the  
system                                0      128  
Number of OSPFv3 passive interfaces configured in the  
system                                0      1024
```

Showing the system capacities status for OSPFv3-AF:

```
switch# show capacities-status ospfv3-af
```

System Capacities Status: Filter OSPFV3 AF

Capacities Status

Name

Value Maximum

```
-----  
-----  
Number of OSPFv3 AF IPv4 areas configured in the  
system                                0      128  
Number of OSPFv3 AF IPv4 interfaces (active + passive) configured in the  
system                                0      1024  
Number of OSPFv3 AF IPv4 active interfaces configured in the  
system                                0      128  
Number of OSPFv3 AF IPv4 passive interfaces configured in the  
system                                0      1024
```

```

Number of OSPFv3 AF IPv6 areas configured in the
system                                0      128
Number of OSPFv3 AF IPv6 interfaces (active + passive) configured in the
system    0      1024
Number of OSPFv3 AF IPv6 active interfaces configured in the
system                                0      128
Number of OSPFv3 AF IPv6 passive interfaces configured in the
system                                0      1024

```

Command History

Release	Modification
10.18	New examples added for show capacities-status ospfv2 , show capacities-status ospfv3 , and show capacities-status ospfv3-af .
10.13	Updated to show newly supported configuration of IPv6 routes on the ASIC.
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	Manager (#)	Administrators or local user group members with execution rights for this command.

show object-group

Syntax

```

show object-group [{ip|ipv6} address | port] [<OBJECT-GROUP-NAME>]
[commands] [configuration]

```

Description

Shows information about your defined object groups. When **show object-group** is entered without parameters, information for all object groups is shown. The parameters filter the list of object groups for which information is shown.

Parameter	Description
<code>[{ip ipv6} address port]</code>	Specifies the object group type, either address for an IP address, or port .
<code><OBJECT-GROUP-NAME></code>	Specifies the object group name.
<code>[commands]</code>	Specifies that the object group definition is to be shown as the commands and parameters used to create it rather than in tabular form.
<code>[configuration]</code>	Specifies that the user - configured object groups be shown as configured. The output of the command with this parameter may not be the same as what is active on the switch due to a misconfigured object group. See Examples in this topic.
<code>vsx-peer</code>	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Examples

Showing configured object groups:

```
switch# show object-group
Type      Name
Sequence L4 Port(s)/IP Address
-----
---
IPv4      my_address_group
          10 192.168.0.1
          20 192.168.0.3
Port      my_port_group
          10 eq 80
          20 gt 65525
switch#
switch# show object-group commands
object-group ip address my_address_group
    10 192.168.0.1
    20 192.168.0.3
object-group port my_port_group
```

```
10 eq 80
20 gt 65525
```

Showing a misconfigured object group:

```
switch# show object-group
Type          Name
Sequence L4 Port(s)/IP Address
-----
---
! object-group ip address My_ip_object_group user configuration does not
match
! the active hardware configuration. Run 'object-group ip address NAME
reset'
! to reset the object group to match the active hardware configuration.
IPv4          my_address_group
switch#
switch#
Type          Name
Sequence L4 Port(s)/IP Address
-----
---
! object-group ip address My_ip_object_group user configuration does not
match
! the active hardware configuration. Run 'object-group ip address NAME
reset'
! to reset the object group to match the active hardware configuration.
IPv4          my_address_group
switch#
switch# show object-group configuration
Type          Name
Sequence L4 Port(s)/IP Address
-----
---
! object-group ip address My_ip_object_group user configuration does not
match
! the active hardware configuration. Run 'object-group ip address NAME
reset'
! to reset the object group to match the active hardware configuration.
IPv4          my_address_group
              10 192.168.0.1
              20 192.168.0.3
switch#
switch# show object-group commands
! object-group ip address My_ip_object_group user configuration does not
```



```

match
! the active hardware configuration. Run 'object-group ip address NAME
reset'
! to reset the object group to match the active hardware configuration.
switch#
switch# show object-group commands configuration
! object-group ip address My_ip_object_group user configuration does not
match
! the active hardware configuration. Run 'object-group ip address NAME
reset'
! to reset the object group to match the active hardware configuration.
object-group ip address my_address_group
    10 192.168.0.1
    20 192.168.0.3

```

Resetting a misconfigured object group:

```

switch(config)# object-group all reset
switch(config)# exit
switch# show object-group
Type          Name
Sequence L4 Port(s)/IP Address
-----
---
IPv4          my_address_group
switch#
switch# show object-group configuration
Type          Name
Sequence L4 Port(s)/IP Address
-----
---
IPv4          my_address_group

```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

ACL configuration examples

This chapter shows examples for defining and applying IPv4 and IPv6 ACLs.

Subtopics

[IPv4 ACL example overview](#)

[Defining and applying an IPv4 ACL](#)


[IPv6 ACL example overview](#)

[Defining and applying an IPv6 ACL](#)

IPv4 ACL example overview

This example:

- Defines and applies an ACL to interface 1/1/1 on Switch A (see image in this topic) so that Host A is not able to send traffic to Host B, but it can communicate with all other devices in the network.
- Counts blocked packets.

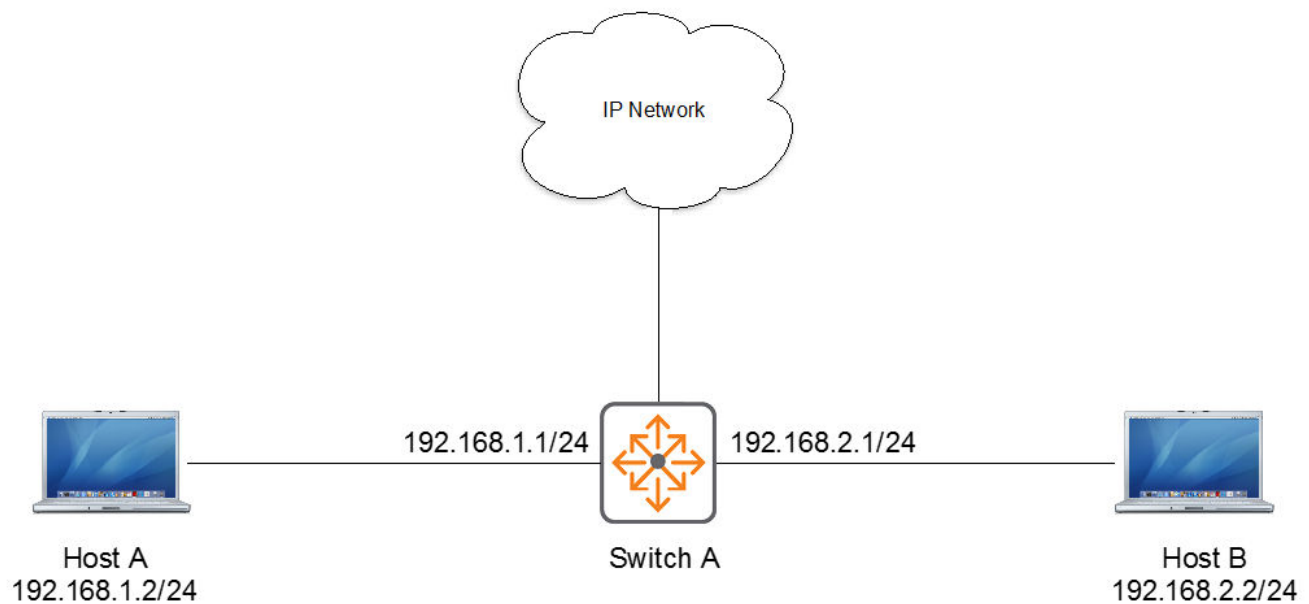

Defining and applying an IPv4 ACL

Procedure

1. Begin defining an IPv4 ACL named FILTER_TO_HOST_B:
switch(config)# **access-list ip FILTER_TO_HOST_B**
2. Add an ACE that denies access from IP address 192.168.1.2 (Host A) to 192.168.2.2 (Host B):
switch(config-acl-ip)# **deny any 192.168.1.2 192.168.2.2 log**
3. Add an ACE that allows access from all other IP addresses:
switch(config-acl-ip)# **permit any any any**
4. Exit the ACL definition:
switch(config-acl-ip)# **exit**
5. Enter the context of the interface to which you will apply the ACL:
switch(config)# **interface 1/1/1**
6. Apply the FILTER_TO_HOST_B ACL to inbound (ingress) traffic:
switch(config-if)# **apply access-list ip FILTER_TO_HOST_B in**
7. Show your ACL:

```
switch(config-if)# exit
switch# show access-list ip FILTER_TO_HOST_B
Type          Name
```


Sequence	Comment		
	Action	L3 Protocol	
	Source IP Address	Source L4 Port(s)	
	Destination IP Address	Destination L4 Port(s)	
	Additional Parameters		

IPv4	FILTER_TO_HOST_B		
10	deny	any	
	192.168.1.2		
	192.168.2.2		
	Logging: enabled		
	Hit-counts: enabled		
20	permit	any	
	any		
	any		

IPv6 ACL example overview

This example:

- Defines and applies an ACL to interface 1/1/1 on Switch A (see image in this topic) so that Host A is not able to send traffic to Host B, but it can communicate with all other devices in the network.
- Counts blocked packets.

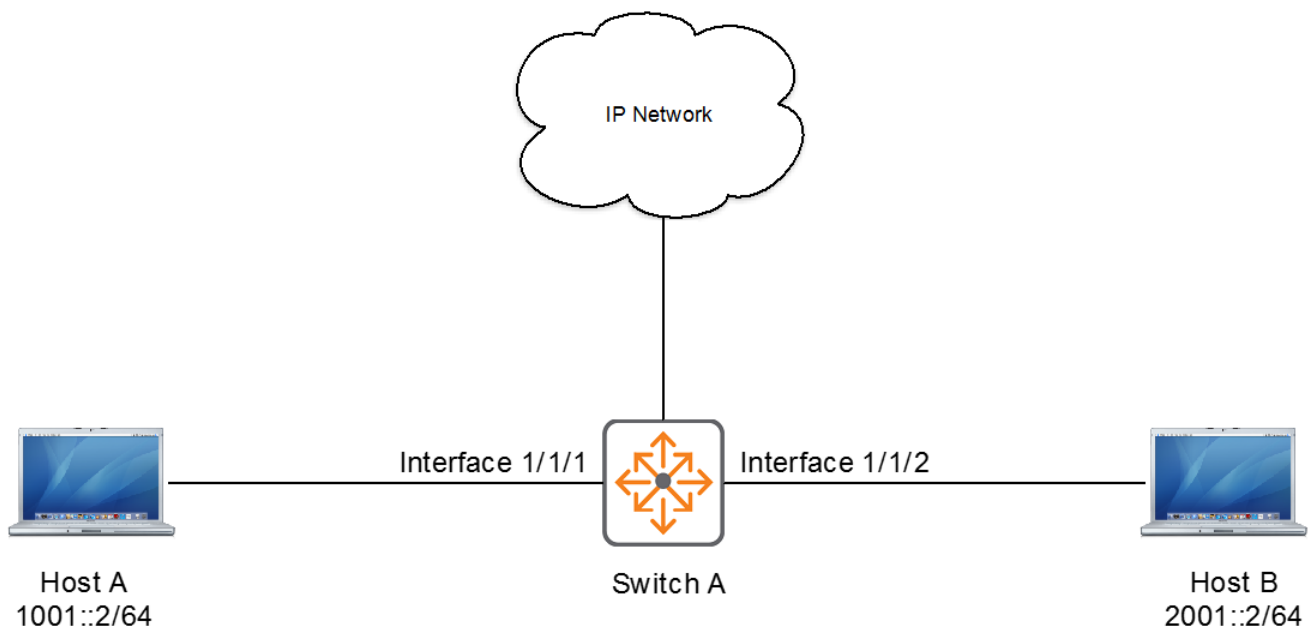

Defining and applying an IPv6 ACL

Procedure

1. Begin defining an IPv6 ACL named V6_INPUT_FILTER:
switch(config)# **access-list ipv6 V6_INPUT_FILTER**
2. Add an ACE that denies access to an IP addresses 1001::2 through 2001::2 (includes Host B):
switch(config-acl-ipv6)# **deny any 1001::2 2001::2 log**
3. Add an ACE that allows access from all other IP addresses:
switch(config-acl-ipv6)# **permit any any any**
4. Exit the ACL definition:
switch(config-acl-ipv6)# **exit**
5. Enter the interface to which you will apply the ACL:
switch(config)# **interface 1/1/1**
6. Apply the V6_INPUT_FILTER ACL to inbound (ingress) traffic:
switch(config-if)# **apply access-list ipv6 V6_INPUT_FILTER in**
7. Show your ACL:

```
switch(config-if)# exit  
switch# show access-list interface 1/1/1  
Direction
```

Type	Name		
Sequence	Comment		
	Action		L3 Protocol
	Source IP Address		Source L4 Port(s)
	Destination IP Address		Destination L4 Port(s)
	Additional Parameters		

Inbound			
IPv6	V6_INPUT_FILTER		
10			
	deny	any	
	1001::2		
	2001::2		
	Logging: enabled		
	Hit-counts: enabled		
20			
	permit	any	
	any		
	any		

Classifier policies

Classifier policies let a network administrator define sets of rules based on network traffic addressing or other header content, and use these rules to restrict or alter the passage of traffic through the switch. Choosing the rule criteria is called Classification, and one such rule, or list, is called a policy. Classification is achieved by creating a traffic class. The types of classes (IPv4, and IPv6) are each focused on relevant frame/packet characteristics. Classes can be configured to match or ignore almost any frame or packet header field. Network traffic passing through a switch can be classified based on many different frame/packet characteristics including, but not limited to:

- Frame ingress VLAN ID
- Source and/or destination IPv4, or IPv6 address
- Layer 2 (EtherType) and Layer 3 (IP) protocol
- Layer 4 application ports

A policy contains one or more policy entries, which are listed according to priority by sequence number. A single policy entry contains a class and corresponding policy action. Policy action is taken on traffic matched

by its corresponding class. A policy can be applied to an individual front plane port, a Link Aggregation Group (LAG) interface, or a VLAN.

**NOTE**

See also [ACL and Policy Hardware Resource Considerations](#).

Subtopics

Traffic policing

Types of policy actions

How policy matching works

Active class configuration versus user-specified configuration


Active policy configuration versus user-specified configuration

Classifier policy application

Classifier policy commands

Traffic policing

Traffic policing supports policing of the inbound traffic. A typical application of traffic policing is to supervise the specification of traffic entering a network and limit it within a reasonable range. Another application is to "discipline" the extra traffic to prevent aggressive use of network resources by an application. For example, you can limit bandwidth for HTTP packets to less than 50% of the total. If the traffic of a session exceeds the limit, traffic policing can drop the packets or reset the IP precedence of the packets. In the following illustrated example, outbound traffic is policed:

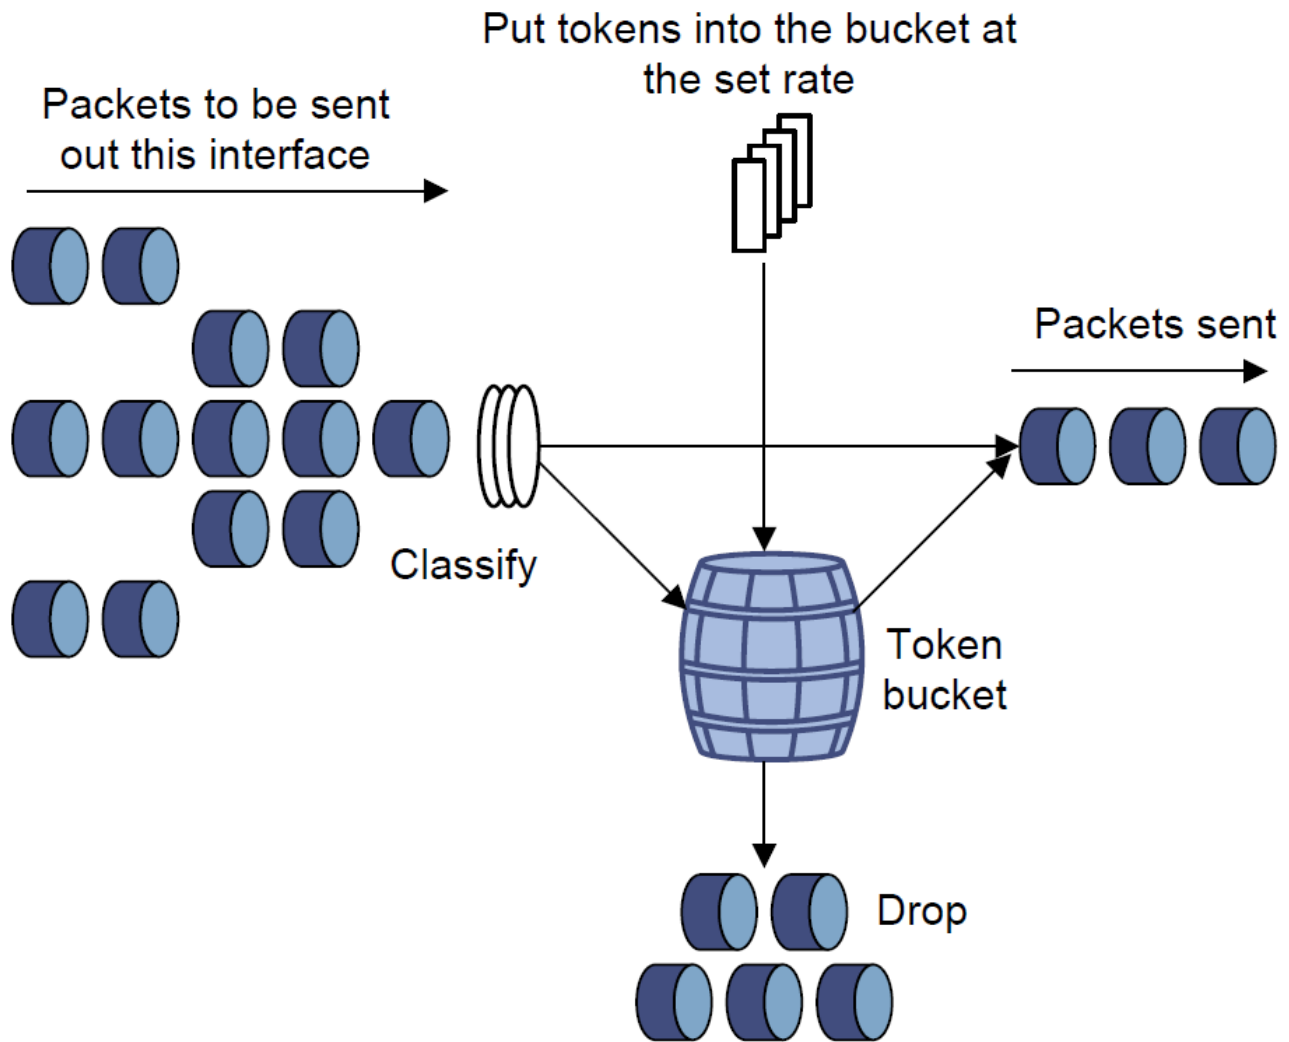

Traffic policing is widely used in policing traffic entering the ISP networks. It can classify the policed traffic and take predefined policing actions on each packet depending on the evaluation result:

- Forwarding the packet if the evaluation result is "conforming."
- Dropping the packet if the evaluation result is "excess."
- Forwarding the packet with its precedence remarked when the evaluation result is "conforming."

Types of policy actions

The policy actions are broadly classified in the following categories:

- Remark actions
- Police actions
- Other actions

Each policy entry can have a combination of policy actions from these multiple categories, which are executed in the order of configuration.

Remark actions

This category contains the following actions:

- **Priority Code Point (PCP):** 3-bit field in layer 2 802.1Q header refers to a class of service and maps to a frame priority level.
- **IP precedence:** 3-bit field in IP header which denotes the importance or priority of the datagram.
- **IP Differentiated Services Code Point (DSCP):** 6-bit field in IP header for packet classification.
- **Local Priority:** Change the internal priority used to queue the packets for transmission. Local priority can be used to rewrite the priority of traffic classes local to the system based on the QoS mapping settings without changing the IP header or the 802.1Q header. Remark actions other than local priority only change packets as they leave the switch. The local priority action can be combined with the other remark actions to remark packets and change the internal priority to reflect the new priority.

Police actions

Traffic policing meters inbound traffic on an interface or VLAN based on the following traffic parameters:

- Committed information rate (CIR): Bandwidth limit for guaranteed traffic.
- Committed burst size (CBS): Maximum packet size permitted for bursts of data that exceed the CIR.

Based on these parameters, packets are dropped when traffic exceeds the bandwidth limit (CIR) and the burst size for guaranteed traffic (CBS).

Other actions

Other actions include Drop: Drop the packet, and Mirror: Mirror the packets to a specified mirroring session. For details, see the Monitoring Guide .

How policy matching works

A policy can be applied to an interface or VLAN to affect/control traffic arriving on that interface or VLAN (inbound (ingress)). A single policy entry matches on one or more characteristics of the particular traffic type and has a configured action to continue through the switch. This matching occurs by beginning with the entry with the lowest sequence number. The entry is then compared against the incoming frame to its particular match characteristics. If there is a match, the action is taken.

If there is no match, the match characteristics of the next sequence are compared to the relevant frame/packet details. If there is a match, the specified actions are taken. This process continues until a match is found; otherwise, the packet is permitted to flow through the switch unaltered. The "implicit permit" behavior of policy matching differs from the "implicit deny" behavior of ACL matching.

Active class configuration versus user-specified configuration

Syntax

The output of the `show class` command displays the active class configurations. Active class configurations are the classes that have been configured and accepted by the system.

The output of the `show class` command with the `configuration` parameter, displays the classes that have been configured by the user.

Discrepancies might occur between the active class configurations and the user-specified configurations. In the user-specified class configurations, unsupported command parameters may have been configured, or class can be modified after policy application and may have been unsuccessful due to lack of hardware resources.

To determine if a discrepancy exists between what was configured and what is active, run any variant of the `show class` command. If the active classes and configured classes are not the same, a warning message is displayed.

```
! class MY_CLASS user configuration does not match active configuration.  
! run 'class TYPE NAME reset' to reset class to match active configuration.
```

If the configured class is processing and you entered the `show class` command with parameters, the following in-progress message is displayed:

```
! class ip MY_CLASS user configuration currently being processed  
! run 'class TYPE NAME reset' to reset class to match active configuration.
```

If the configured class is processing and you entered the `show class` command without parameters, the following in-progress message is displayed:

```
% Warning: MY_CLASS user configuration currently being processed  
% run 'class TYPE NAME reset' to reset class to match active configuration.
```

If the warning message or in-progress message is displayed, additional changes may be made until the error message is no longer displayed. Or you can use the `class {all|ip <class-name>|ipv6 <class-name> |mac <class-name> } reset` command to change the user-specified configuration to match the active configuration.



NOTE

The `show running-config` command also shows a warning about classes that are in progress or failed.

Example

Resetting the user-specified class configuration to the active configuration:

```
switch(config)# class all reset
```

Active policy configuration versus user-specified configuration

Syntax

The output of the `show policy` command displays the active policy configurations. Active policy configurations are the policies that have been configured and accepted by the system. With applied policies, the active configuration displays the interfaces on which the policies have successfully been programmed in hardware.

The output of the `show policy` command with the `configuration` parameter, displays the policies that have been configured by the user.

Discrepancies might exist between the active policy configurations and the user-specified configurations. In the user-specified policy configurations, unsupported command parameters might have been configured, or an application of a policy might have been unsuccessful because of a lack of hardware resources.

To determine if a discrepancy exists between the configuration and what is active, run any variant of the `show policy` command. If the active policies and configured policies are not the same, a warning message is displayed in the output of the `show` command.

```
! policy MY_POLICY user configuration does not match active configuration.  
! run 'policy NAME reset' to reset policy to match active configuration.
```

The switch displays an `in progress` message while it processes the configured policy:

```
! policy MY_POLICY user configuration currently being processed  
! run 'policy NAME reset' to reset policy to match active configuration.
```

If the warning message or in progress message is displayed, additional changes may be made until the error message is no longer displayed. Or you can use the `policy <policy-name> reset` command to change the user-specified configuration to match the active configuration.

Example

Resetting `MY_POLICY`:

```
switch(config)# policy MY_POLICY reset
```

Subtopics

Considerations for when a policy is applied per interface

Considerations for when a policy is applied per interface



NOTE

This section is only applicable to policies applied to physical interfaces and LAGs using the `per-interface` parameter.

The `reset` command (mentioned in the previous section) is not useful if one or more unique instances of a policy created using the `per-interface` parameter fail to update in hardware even though the parent policy does update. If this occurs, you can make additional changes to the policy and its applications to correct the discrepancy until the error messages are no longer displayed. Alternatively consider using command `checkpoint-rollback` as described in the AOS-CX Fundamentals Guide.

Policies using the `per-interface` parameter have slightly different warning and in-progress messages due to unique instances of the policy being created and applied to individual physical interfaces and LAGs.

For example, this is how the warning messages will appear if the unique instances of the policy for interfaces 1/1/2-1/1/3 fail to update while the unique instances of the policy for interfaces 1/1/1,1/1/4 successfully update.

```
switch(config)# show policy commands
! policy my_policy user configuration does not match active configuration
on interface 1/1/2 for ingress.
! policy my_policy user configuration does not match active configuration
on interface 1/1/3 for ingress.
policy my_policy
  10 class ip my_ip_class action drop
interface 1/1/1
  apply policy my_policy in per-interface
! policy my_policy user configuration does not match active configuration.
interface 1/1/2
  apply policy my_policy in per-interface
! policy my_policy user configuration does not match active configuration.
interface 1/1/3
  apply policy my_policy in per-interface
interface 1/1/4
  apply policy my_policy in per-interface
switch(config)# show policy
      Name
Sequence Comment
      Class Type
              action
-----
---
% Warning: my_policy user configuration does not match active configuration
```

```

on interface 1/1/2 for ingress.
% Warning: my_policy user configuration does not match active configuration
on interface 1/1/3 for ingress.
    my_policy
    10
    my_ip_class ipv4
        drop

```

This is how the in-progress messages will appear if the child policies for interfaces 1/1/2-1/1/3 are currently updating while the child policies for interfaces 1/1/1,1/1/4 have successfully updated.

```

switch(config)# show policy commands
! policy my_policy user configuration currently being processed on
interface 1/1/2 for ingress.
! policy my_policy user configuration currently being processed on
interface 1/1/3 for ingress.
! run 'show policy [commands]' to display active policy configuration.
policy my_policy
    10 class ip my_ip_class action drop
interface 1/1/1
    apply policy my_policy in per-interface
! policy my_policy user configuration currently being processed
! run 'show policy [commands]' to display active policy configuration.
interface 1/1/2
    apply policy my_policy in per-interface
! policy my_policy user configuration currently being processed
! run 'show policy [commands]' to display active policy configuration.
interface 1/1/3
    apply policy my_policy in per-interface
interface 1/1/4
    apply policy my_policy in per-interface
switch(config)# show policy
      Name
Sequence Comment
      Class Type
              action
-----
---
% Warning: my_policy user configuration currently being processed on
interface 1/1/2 for ingress.
% Warning: my_policy user configuration currently being processed on
interface 1/1/3 for ingress.
%      run 'show policy [commands]' to display active policy
configuration.

```

```

    my_policy
10
    my_ip_class ipv4
        drop

```

This is how the warning messages will appear if the child policies for interfaces 1/1/2-1/1/3 failed to apply or replace while the child policies for interfaces 1/1/1,1/1/4 have successfully applied or replaced.

```

switch(config)# show policy commands
policy my_policy
    10 class ip my_ip_class action drop
interface 1/1/1
    apply policy my_policy in per-interface
! policy my_policy user configuration does not match active configuration.
! run 'policy NAME reset' to reset policy to match active configuration.
interface 1/1/2
    apply policy my_policy in per-interface
! policy my_policy user configuration does not match active configuration.
! run 'policy NAME reset' to reset policy to match active configuration.
interface 1/1/3
    apply policy my_policy in per-interface
interface 1/1/4
    apply policy my_policy in per-interface
switch(config)# show policy
      Name
Sequence Comment
      Class Type
              action
-----
---
      my_policy
10
      my_ip_class ipv4
          drop

```

Classifier policy application

Policy type Direction	IPv4+6 In	IPv4+6 Rt - In	IPv4+6 Out	MAC In	MAC Out
L2 interface (port)	Yes		Yes	Yes	Yes

Policy type Direction	IPv4+6 In	IPv4+6 Rt - In	IPv4+6 Out	MAC In	MAC Out
L2 LAG	Yes		Yes	Yes	Yes
L3 interface (port)	Yes	Yes	Yes	Yes	Yes
L3 LAG	Yes	Yes	Yes	Yes	Yes
L3 interface (port) subinterface	Yes		Yes		
L3 LAG subinterface	Yes		Yes		
VLAN	Yes		Yes	Yes	Yes
Interface VLAN		Yes (PBR)			



NOTE

The following match criteria is not supported. If this match criteria is attempted to be configured, an error message will be displayed and the action will not be completed.

PCP on MAC classes

Policy type Direction	IPv4+6 In	IPv4+6 Rt - In	IPv4+6 Out	MAC In	MAC Out
L2 interface (port)	Yes		Yes	Yes	Yes
L2 LAG	Yes		Yes	Yes	Yes
L3 interface (port)	Yes	Yes	Yes	Yes	Yes
L3 LAG	Yes	Yes	Yes	Yes	Yes
VLAN	Yes		Yes	Yes	Yes

Policy type Direction	IPv4+6 In	IPv4+6 Rt - In	IPv4+6 Out	MAC In	MAC Out
Interface VLAN		Yes (PBR)			



NOTE

The following match criteria is not supported. If this match criteria is attempted to be configured, an error message will be displayed and the action will not be completed.

PCP on MAC classes

Policy type Direction	IPv4 In	IPv6 In
L2 interface (port)	Yes	Yes
L2 LAG	Yes	Yes
VLAN	Yes	Yes



NOTE

Port policies and port-access client policies cannot be configured at the same time.

Policy type Direction	IPv4 In	IPv6 In	MAC in
L2 interface (port)	Yes	Yes	Yes
L2 LAG	Yes	Yes	Yes
VLAN	Yes	Yes	Yes



NOTE

Port policies and port-access client policies cannot be configured at the same time.

Classifier policies can be applied as follows ("Rt-In" = "Routed-In"):

Policy type Direction	IPv4+6 In	IPv4+6 Rt - In	MAC In
L2 interface (port)	Yes		Yes
L2 LAG	Yes		Yes
L3 interface (port)	Yes	Yes	Yes
L3 LAG	Yes	Yes	Yes
L3 interface (port) subin- terface (not applicable to the HPE Aruba Networki- ng 8320, 9300/9300S, 1- 0040 Switch Series)	Yes	Yes	Yes
L3 LAG subinterface (not applicable to the HPE Ar- uba Networking 8320, 93- 00/9300S, 10040 Switch Series)	Yes	Yes	Yes
VLAN	Yes		Yes
Interface VLAN		Yes (PBR)	



NOTE

Policies cannot match multicast packets on the routed in direction.

The following match criteria are not supported. If any of these match criteria are attempted to be configured, an error message will be displayed and the action will not be completed.

HPE Aruba Networking 8320, 8325, 9300/9300S, 10000, 10040 Switch Series:

- TCP flags CWR and ECE

- TCP flags and TTL (hop limit) on IP classes

- Fragment on IPv6 classes in VLAN policies

- VLAN ID in VLAN policies

HPE Aruba Networking 8320 Switch Series only:

- IPv4 AH on inbound classes

Policy type Direction	IPv4+6 In	IPv4+6 Rt - In	MAC In
L2 interface (port)	Yes		Yes
L2 LAG	Yes		Yes
L3 interface (port)	Yes	Yes	Yes
L3 LAG	Yes	Yes	Yes
VLAN	Yes		Yes
Interface VLAN		Yes (PBR)	



NOTE

The following match criteria are not supported. If any of these match criteria are attempted to be configured, an error message will be displayed and the action will not be completed.

TCP flags CWR and ECE

TCP flags and TTL (hop limit) on IP classes

Fragment on IPv6 classes in VLAN policies

VLAN ID in VLAN policies

Classifier policy commands

Select a command from the list in the left navigation menu.

Subtopics

Classifier policy application

apply policy (config-if, config-lag-if, config-if-vlan, config-vlan)

apply policy

class copy

class ip

class ipv6

class mac

class resequence

class reset

clear policy hitcounts

policy

policy copy
policy resequence
policy reset
show class
show policy

Classifier policy application

Policy type Direction	IPv4+6 In	IPv4+6 Rt - In	IPv4+6 Out	MAC In	MAC Out
L2 interface (port)	Yes		Yes	Yes	Yes
L2 LAG	Yes		Yes	Yes	Yes
L3 interface (port)	Yes	Yes	Yes	Yes	Yes
L3 LAG	Yes	Yes	Yes	Yes	Yes
L3 interface (port) subinterface	Yes		Yes		
L3 LAG subinterface	Yes		Yes		
VLAN	Yes		Yes	Yes	Yes
Interface VLAN		Yes (PBR)			



NOTE

The following match criteria is not supported. If this match criteria is attempted to be configured, an error message will be displayed and the action will not be completed.

PCP on MAC classes

Policy type Direction	IPv4+6 In	IPv4+6 Rt - In	IPv4+6 Out	MAC In	MAC Out
L2 interface (port)	Yes		Yes	Yes	Yes
L2 LAG	Yes		Yes	Yes	Yes
L3 interface (port)	Yes	Yes	Yes	Yes	Yes
L3 LAG	Yes	Yes	Yes	Yes	Yes
VLAN	Yes		Yes	Yes	Yes
Interface VLAN		Yes (PBR)			



NOTE

The following match criteria is not supported. If this match criteria is attempted to be configured, an error message will be displayed and the action will not be completed.

PCP on MAC classes

Policy type Direction	IPv4 In	IPv6 In
L2 interface (port)	Yes	Yes
L2 LAG	Yes	Yes
VLAN	Yes	Yes



NOTE

Port policies and port-access client policies cannot be configured at the same time.

Policy type Direction	IPv4 In	IPv6 In	MAC in
L2 interface (port)	Yes	Yes	Yes

Policy type Direction	IPv4 In	IPv6 In	MAC in
L2 LAG	Yes	Yes	Yes
VLAN	Yes	Yes	Yes



NOTE

Port policies and port-access client policies cannot be configured at the same time.

Classifier policies can be applied as follows ("Rt-In" = "Routed-In"):

Policy type Direction	IPv4+6 In	IPv4+6 Rt - In	MAC In
L2 interface (port)	Yes		Yes
L2 LAG	Yes		Yes
L3 interface (port)	Yes	Yes	Yes
L3 LAG	Yes	Yes	Yes
L3 interface (port) subin- terface (not applicable to the HPE Aruba Networki- ng 8320, 9300/9300S, 1- 0040 Switch Series)	Yes	Yes	Yes
L3 LAG subinterface (not applicable to the HPE Ar- uba Networking 8320, 93- 00/9300S, 10040 Switch Series)	Yes	Yes	Yes
VLAN	Yes		Yes

Policy type Direction	IPv4+6 In	IPv4+6 Rt - In	MAC In
Interface VLAN		Yes (PBR)	



NOTE

Policies cannot match multicast packets on the routed in direction.

The following match criteria are not supported. If any of these match criteria are attempted to be configured, an error message will be displayed and the action will not be completed.

HPE Aruba Networking 8320, 8325, 9300/9300S, 10000, 10040 Switch Series:

TCP flags CWR and ECE

TCP flags and TTL (hop limit) on IP classes

Fragment on IPv6 classes in VLAN policies

VLAN ID in VLAN policies

HPE Aruba Networking 8320 Switch Series only:

IPv4 AH on inbound classes

Policy type Direction	IPv4+6 In	IPv4+6 Rt - In	MAC In
L2 interface (port)	Yes		Yes
L2 LAG	Yes		Yes
L3 interface (port)	Yes	Yes	Yes
L3 LAG	Yes	Yes	Yes
VLAN	Yes		Yes
Interface VLAN		Yes (PBR)	



NOTE

The following match criteria are not supported. If any of these match criteria are attempted to be configured, an error message will be displayed and the action will not be completed.

TCP flags CWR and ECE

TCP flags and TTL (hop limit) on IP classes

Fragment on IPv6 classes in VLAN policies

VLAN ID in VLAN policies

apply policy (config-if, config-lag-if, config-if-vlan, config-vlan)

Syntax

Context config-if, config-lag-if:

```
apply policy <POLICY-NAME> {in|out|routed-in} [per-interface]
no apply policy <POLICY-NAME> {in|out|routed-in} [per-interface]
```

Context config-vlan:

```
apply policy <POLICY-NAME> {in|out}
no apply policy <POLICY-NAME> {in|out}
```

Context config-if-vlan:

```
apply policy <POLICY-NAME> routed-in
no apply policy <POLICY-NAME> routed-in
```

Description

Applies a policy to the current physical interface port or LAG or VLAN context.

Only one direction of a policy can be applied to an interface or VLAN at a time, thus using the apply command on an interface or VLAN with an already-applied policy of the same direction will replace the currently applied policy.



NOTE

The VLAN context supports the **in** and **out** directions, which apply to both bridged and routed traffic. The Interface VLAN context only supports the **routed-in** direction which applies only to routed traffic.

The **no** form of this command removes a policy from the interface or VLAN specified by the current context.

Parameter	Description
<code><POLICY-NAME></code>	Specifies the policy to apply.
<code>in</code>	Selects the inbound (ingress) traffic direction.
<code>out</code>	Selects the outbound (egress) traffic direction. Not applicable to subinterfaces.

Parameter	Description
<code>routed-in</code>	Selects routed in traffic.
<code>per-interface</code>	Specifies that unique instances of the policy be applied to each interface or LAG rather than the default of sharing the policy across all interfaces and LAGs.

Usage (applies to `config-if`, `config-lag-if` contexts)

- The subinterface can optionally be specified after the interface or LAG, preceded by a period. For example, **1/1/1.10** or **lag 125.4**.
- Subinterfaces only support the ingress (**in** and **routed-in**) directions. Ingress on subinterfaces is supported on the HPE Aruba Networking 8325 and 10000 Switch series but not on the HPE Aruba Networking 8320, 9300, 9300S Switch series.
- When **per-interface** is included, unique instances of the policy are applied to each physical interface port or LAG rather than the default of sharing the policy across all interfaces and LAGs. The unique instance of a policy has a parent-child relationship with the policy from which it was created. The **per-interface** option is useful when you want unique policers to be created for each interface or LAG rather than using shared policers. It is also useful when you want the statistics (hit counts and conform rate) to be specific to an interface or LAG rather than being aggregated. Because **per-interface** creates more hardware instances of a policy, resource consumption may increase significantly. It is recommended that you use **show resources** to monitor resource utilization as configuration is applied.

Usage (applies to `config-vlan` context)

- Only one policy type may be applied to a VLAN at a time. Therefore, using the **apply policy** command on a VLAN with an already-applied policy of the same type, will replace the applied policy.

Examples On the HPE Aruba Networking 6400 Switch Series, interface identification differs. Applying a policy to an interface (ingress):

```
switch(config) # interface 1/1/1
switch(config-if) # apply policy MY_POLICY1 in
```

Applying a policy to an interface (ingress) specifying **per-interface**:

```
switch(config) # interface 1/1/2
switch(config-if) # apply policy MY_POLICY1 in per-interface
```

Applying a policy to an interface (egress):

```
switch(config) # interface 1/1/2
switch(config-if) # apply policy MY_POLICY2 out
```

Applying a policy to an interface (egress) specifying `per-interface`:


```
switch(config)# interface 1/1/2  
switch(config-if)# apply policy MY_POLICY2 out per-interface
```

Applying a policy to an interface range (ingress):

```
switch(config)# interface 1/1/3-1/1/6  
switch(config-if-<1/1/2-1/1/5>)# apply policy MY_POLICY3 in
```

Applying a policy to an interface range (ingress) specifying **per-interface**:

```
switch(config)# interface 1/1/7-1/1/9  
switch(config-if-<1/1/2-1/1/5>)# apply policy MY_POLICY4 in per-interface
```

Removing a policy from an interface (ingress):

```
switch(config)# interface 1/1/1  
switch(config-if)# no apply policy MY_POLICY1 in
```

Removing a policy from an interface range (ingress):

```
switch(config)# interface 1/1/3-1/1/6  
switch(config-if-<1/1/3-1/1/6>)# no apply policy MY_POLICY3 in
```

Applying a policy to a subinterface (ingress):

```
switch(config)# interface 1/1/1.10  
switch(config-if)# apply policy MY_POLICY1 in
```

Applying a policy to a subinterface (egress):

```
switch(config)# interface 1/1/2.8  
switch(config-if)# apply policy MY_POLICY1_egr out
```

Applying a policy to a LAG (ingress):

```
switch(config)# interface lag 100  
switch(config-lag-if)# apply policy MY_POLICY5 in
```

Applying a policy to a LAG (ingress) specifying **per-interface**:

```
switch(config)# interface lag 200  
switch(config-lag-if)# apply policy MY_POLICY5 in per-interface
```

Removing a policy from a LAG (ingress):

```
switch(config)# interface lag 100  
switch(config-lag-if)# no apply policy MY_POLICY5 in
```

Applying a policy to a LAG subinterface (ingress):

```
switch(config)# interface lag 125.4
```

```
switch(config-lag-if)# apply policy MY_POLICY5 in
```

Applying a policy to a LAG subinterface (egress):

```
switch(config)# interface lag 150.8  
switch(config-lag-if)# apply policy MY_POLICY5 out
```

Applying a policy to a VLAN (ingress):

```
switch(config)# vlan 1  
switch(config-vlan)# apply policy MY_POLICY6 in
```

Applying a policy to a VLAN (egress):

```
switch(config)# vlan 1  
switch(config-vlan)# no apply policy my_policy out
```

Applying a policy to multiple VLANs (ingress):

```
switch(config)# vlan 10,20  
switch(config-vlan-<10,20>)# apply policy MY_POLICY7 in
```

Applying a policy to an interface VLAN routed (ingress):

```
switch(config)# vlan 1  
switch(config-if-vlan)# apply policy MY_POLICY8 routed-in
```

Applying a policy to an interface VLAN range routed (ingress):

```
switch(config)# vlan 2-5  
switch(config-if-vlan-<2-5>)# apply policy MY_POLICY8 routed-in
```

Removing a policy from a VLAN (ingress):

```
switch(config)# vlan 1  
switch(config-vlan)# no apply policy MY_POLICY6 in
```

Removing a policy from multiple VLANs (ingress):

```
switch(config)# vlan 10,20  
switch(config-vlan-<10,20>)# no apply policy MY_POLICY7 in
```

Removing a policy from an interface VLAN routed (ingress):

```
switch(config)# vlan 1  
switch(config-if-vlan)# no apply policy MY_POLICY8 routed-in
```

Removing a policy from an interface VLAN range routed (ingress):

```
switch(config)# vlan 2-5  
switch(config-if-vlan-<2-5>)# no apply policy MY_POLICY8 routed-in
```

Command History

Release	Modification
10.16	Added support for egress on all interfaces on the 8325 switch series.
10.16	Added support for egress on all interfaces on the 10000 switch series.
10.11	Added support for ingress on subinterfaces on the 8325 switch series.
10.11	Added support for ingress on subinterfaces on the 10000 switch series.
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	config-if config-lag-if config-vlan config-if-vlan	Administrators or local user group members with execution rights for this command.

apply policy

Syntax

```
apply policy <POLICY-NAME> {in}  
no apply policy <POLICY-NAME> {in}
```

Description

Applies a policy to the global config context.

Only one policy can be globally applied at a time. Applying a policy globally again, replaces the previous globally applied policy.

The **no** form of this command removes application of the global policy.

Parameter	Description
<code><POLICY-NAME></code>	Specifies the policy to apply.
<code>in</code>	Selects the inbound (ingress) traffic direction.

Examples

Applying policy global1 to the global config context:

```
switch(config) # apply policy global1 in
```

Removing application of policy global1 from the global config context:

```
switch(config) # no apply policy global1 in
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8320	<code>config</code>	Administrators or local user group members with execution rights for this command.
8325		
8325H		
8325P		
9300		
9300S		
10000		
10040		

class copy

Syntax

```
class {ip|ipv6|mac} <CLASS-NAME> copy <DESTINATION-CLASS>
```

Description

Copies a class to a new destination class or overwrites an existing class. Copying a class copies all entries as well.

Parameter	Description
<pre>{ip ipv6 mac } <CLASS-NAME></pre>	Specifies the type and name of the class to be copied.
<pre><DESTINATION-CLASS></pre>	Specifies the name of the destination class.

Examples

Copying an IPv4 class. Copying a class with entries copies all its entries as well:

```
switch(config)# class ip MY_IP_CLASS copy MY_IP_CLASS2
switch(config)# do show class
Type           Name
Sequence      Comment
              Action                               L3 Protocol
              Source IP Address                     Source L4 Port(s)
              Destination IP Address or FQDN         Destination L4 Port(s)
              Additional Parameters
-----
---
IPv4           MY_IP_CLASS
              11 ignore                               udp
```

```

any
any
21 match tcp
192.168.0.1
192.168.0.2
-----
---
IPv4 MY_IP_CLASS2
11 ignore udp
any
any
21 match tcp
192.168.0.1
192.168.0.2

```

Copying an IPv6 class:

```

switch(config)# class ipv6 MY_IPV6_CLASS copy MY_IPV6_CLASS2
switch(config)# do show class
Type      Name
Sequence Comment
          Action          L3 Protocol
          Source IP Address      Source L4 Port(s)
          Destination IP Address or FQDN  Destination L4 Port(s)
          Additional Parameters
-----
---
IPv6 MY_IPV6_CLASS
2 ignore udp
any
any
-----
---
IPv6 MY_IPV6_CLASS2
2 ignore udp
any
any

```

Copying a MAC class:

```

switch(config)# class mac MY_MAC_CLASS copy MY_MAC_CLASS2
switch(config)# do show class
Type      Name
Sequence Comment
          Action          EtherType
          Source MAC Address
          Destination MAC Address

```

Additional Parameters

```
-----
---
MAC          MY_MAC_CLASS
             2 ignore          arp
             any
             any
-----
---
MAC          MY_MAC_CLASS2
             2 ignore          arp
             any
             any
```

Command History

Release	Modification
10.17.1000	Added support for FQDN.
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

class ip

Syntax

Syntax to create an IPv4 class and enter its context. Plus syntax to remove a class:

```
class ip <CLASS-NAME>
no class ip <CLASS-NAME>
```

Syntax (within the class context) for creating or removing class entries for protocols **ah**, **eigrp**, **esp**, **gre**, **igmp**, **l2tp**, **ospf**, **pim**, **vrrp** (**ip** is available as an alias for **any**):

```

[<SEQUENCE-NUMBER>]
{match|ignore}
{any|ah|eigrp|esp|gre|igmp|ip|l2tp|ospf|pim|vrrp|<IP-PROTOCOL-NUM>}
{any|<SRC-IP-ADDRESS>[/<PREFIX-LENGTH>|<SUBNET-MASK>]]}
{any|<DST-IP-ADDRESS>[/<PREFIX-LENGTH>|<SUBNET-MASK>]]|fqdn <fqdn>}
[dscp <DSCP-SPECIFIER>] [ecn <ECN-VALUE>] [ip-precedence <IP-PRECEDENCE-
VALUE>]
[tos <TOS-VALUE>] [fragment] [vlan <VLAN-ID>] [ttl <TTL-VALUE>] [count]
no <SEQUENCE-NUMBER>

```

Syntax (within the class context) for creating or removing class entries for protocols **sctp**, **tcp**, **udp**:

```

[<SEQUENCE-NUMBER>]
{match|ignore}
{sctp|tcp|udp}
{any|<SRC-IP-ADDRESS>[/<PREFIX-LENGTH>|<SUBNET-MASK>]]}
[{eq|gt|lt} <PORT>|range <MIN-PORT>
<MAX-PORT>]
{any|<DST-IP-ADDRESS>[/<PREFIX-LENGTH>|<SUBNET-MASK>]]|fqdn <fqdn>}
[{eq|gt|lt} <PORT>|range <MIN-PORT>
<MAX-PORT>]
[cwr][ece] [urg] [ack] [psh] [rst] [syn] [fin] [established]
[dscp <DSCP-SPECIFIER>] [ecn <ECN-VALUE>] [ip-precedence <IP-PRECEDENCE-
VALUE>]
[tos <TOS-VALUE>] [fragment] [vlan <VLAN-ID>] [ttl <TTL-VALUE>] [count]
no <SEQUENCE-NUMBER>

```

Syntax (within the class context) for creating or removing class entries for protocol **icmp**:

```

[<SEQUENCE-NUMBER>]
{match|ignore}
{icmp}
{any|<SRC-IP-ADDRESS>[/<PREFIX-LENGTH>|<SUBNET-MASK>]]}
{any|<DST-IP-ADDRESS>[/<PREFIX-LENGTH>|<SUBNET-MASK>]]|fqdn <fqdn>}
[icmp-type {echo|echo-reply|<ICMP-TYPE-VALUE>}] [icmp-code <ICMP-CODE-
VALUE>]
[dscp <DSCP-SPECIFIER>] [ecn <ECN-VALUE>] [ip-precedence <IP-PRECEDENCE-
VALUE>]
[tos <TOS-VALUE>] [fragment] [vlan <VLAN-ID>] [ttl <TTL-VALUE>] [count]
no <SEQUENCE-NUMBER>

```

Syntax (within the class context) for class entry comments:

```

[<SEQUENCE-NUMBER>] comment <TEXT-STRING>
no <SEQUENCE-NUMBER> comment

```


Description

Creates or modifies an IPv4 traffic class to match specified packets. Class is composed of one or more class entries ordered and prioritized by sequence numbers. With this command, the class can classify traffic based on IPv4 header information.

The **no** form of the command can be used to delete either an IPv4 traffic class (use **no** with the class command) or an individual IPv4 traffic class entry (use **no** with the sequence number).

Parameter	Description
<code>ip</code>	Specifies create or modify an IPv4 class.
<code><CLASS-NAME></code>	Specifies the name of this class.
<code><SEQUENCE-NUMBER></code>	Specifies a sequence number for the class entry. Optional. Range: 1 - 4294967295.
<code>{match ignore}</code>	Creates a rule to match or ignore specified packets.
<code><IP-PROTOCOL-NUM></code>	Specifies the protocol as its Internet Protocol number. For example, 2 corresponds to the IGMP protocol. Range: 0 to 255.
<code>{any <SRC-IP-ADDRESS> [/ {<PREFIX-LENGTH> <SUBNET-MASK>}] }</code>	Specifies the source IPv4 address. • any - specifies any source IPv4 address. • <SRC - IP - ADDRESS> - specifies the source IPv4 host address. ◦ <PREFIX - LENGTH> - specifies the address bits to mask (CIDR subnet mask notation). Range: 1 to 32. ◦ <SUBNET - MASK> - specifies the address bits to mask (dotted decimal notation).
<code>{any <DST-IP-ADDRESS> [/ {<PREFIX-LENGTH> <SUBNET-MASK>}] }</code>	Specifies the destination IPv4 address, network address, fqdn or any. • any - specifies any destination IPv4 address. • <DST - IP - ADDRESS> - specifies the destination IPv4 host address. ◦ <PREFIX - LENGTH> - specifies the address bits to mask (CIDR subnet mask notation). Range: 1 to 32. ◦ <SUBNET - MASK> - specifies the address bits to mask (dotted decimal notation).

Parameter	Description
<code>[{eq gt lt} <PORT> range <MIN-PORT> <MAX-PORT>]</code>	Specifies the port or port range. Port numbers are in the range of 0 to 65535. • eq <PORT> - specifies the Layer 4 port. • gt <PORT> - specifies any Layer 4 port greater than the indicated port. • lt <PORT> - specifies any Layer 4 port less than the indicated port. • range <MIN - PORT> <MAX - PORT> - specifies the Layer 4 port range.
<code>cwr</code>	Specifies matching on the TCP Flag CWR : Congestion Window Reduced
<code>ece</code>	Specifies matching on the TCP Flag ECE : Explicit Congestion Notification [ECN] - Echo
<code>urg</code>	Specifies matching on the TCP Flag: Urgent.
<code>ack</code>	Specifies matching on the TCP Flag: Acknowledgment.
<code>psh</code>	Specifies matching on the TCP Flag: Push buffered data to receiving application.
<code>rst</code>	Specifies matching on the TCP Flag: Reset the connection.
<code>syn</code>	Specifies matching on the TCP Flag: Synchronize sequence numbers.
<code>fin</code>	Specifies matching on the TCP Flag: Finish connection.
<code>established</code>	Specifies matching on the TCP Flag: Established connection.
<code>dscp <DSCP-SPECIFIER></code>	Specifies the Differentiated Services Code Point (DSCP), either a numeric <code><DSCP-VALUE></code> (0 to 63) or one of these keywords: • AF11 - DSCP 10 (Assured Forwarding Class 1, low drop probability) • AF12 - DSCP 12 (Assured Forwarding Class 1, medium drop probability) • AF13 - DSCP 14 (Assured Forwarding Class 1, high drop probability) • AF21 - DSCP 18 (Assured Forwarding Class 2, low drop probability)

Parameter	Description
	• AF22 - DSCP 20 (Assured Forwarding Class 2, medium drop probability) • AF23 - DSCP 22 (Assured Forwarding Class 2, high drop probability) • AF31 - DSCP 26 (Assured Forwarding Class 3, low drop probability) • AF32 - DSCP 28 (Assured Forwarding Class 3, medium drop probability) • AF33 - DSCP 30 (Assured Forwarding Class 3, high drop probability) • AF41 - DSCP 34 (Assured Forwarding Class 4, low drop probability) • AF42 - DSCP 36 (Assured Forwarding Class 4, medium drop probability) • AF43 - DSCP 38 (Assured Forwarding Class 4, high drop probability) • CS0 - DSCP 0 (Class Selector 0: Default) • CS1 - DSCP 8 (Class Selector 1: Scavenger) • CS2 - DSCP 16 (Class Selector 2: OAM) • CS3 - DSCP 24 (Class Selector 3: Signaling) • CS4 - DSCP 32 (Class Selector 4: Real time) • CS5 - DSCP 40 (Class Selector 5: Broadcast video) • CS6 - DSCP 48 (Class Selector 6: Network control) • CS7 - DSCP 56 (Class Selector 7) • EF - DSCP 46 (Expedited Forwarding)
<code>ecn <ECN-VALUE></code>	Specifies an Explicit Congestion Notification value. Range: 0 to 3.
<code>ip-precedence <IP-PRECEDENCE-VALUE></code>	Specifies an IP precedence value. Range: 0 to 7.
<code>tos <TOS-VALUE></code>	Specifies the Type of Service value. Range: 0 to 31.
<code>fragment</code>	Specifies a fragment packet.
<code>vlan <VLAN-ID></code>	Specifies VLAN tag to match on. 802.1Q VLAN ID.



NOTE

Parameter	Description
	This parameter cannot be used in any class that will be applied to a VLAN.
<code>ttl <TTL-VALUE></code>	Specifies a time - to - live (hop limit) value. Range: 0 to 255.
<code>count</code>	Keeps the hit counts of the number of packets matching this class entry.
<code>[<SEQUENCE-NUMBER>] comment <TEXT-STRING></code>	Adds a comment to a class entry. The no form removes only the comment from the class entry.

Usage

- Entering an existing **<CLASS-NAME>** value will cause the existing class to be modified, with any new **<SEQUENCE-NUMBER>** value creating an additional class entry, and any existing **<SEQUENCE-NUMBER>** value replacing the existing class entry with the same sequence number.
- If no sequence number is specified, a new class entry will be appended to the end of the class with a sequence number equal to the highest class entry currently in the list plus 10.
- If the **<IP-PROTOCOL-NUM>** parameter is used instead of a protocol name, ensure that any needed class entry-definition parameters specific to the selected protocol are also provided.

The following match criteria are not supported on HPE Aruba Networking 8320, 8325 and 10000 Switch series:

- TCP flags **CWR** and **ECE**
- **TTL** (hop limit)
- A VLAN ID in VLAN policies

The following match criteria are not supported for use in egress policies on HPE Aruba Networking 9300, 9300S, 10040 Switch series:

- **TTL** (hop limit)

Examples

Creating an IPv4 class with invalid fqdn:

```
switch(config)# class ip my_ip_class
switch(config-class-ip)# match any any fqdn-group abc
Invalid destination FQDN address.
```

Creating an IPv4 class with three entries:

```

switch(config)# class ip my_ip_class
switch(config-class-ip)# 1 match icmp any any
switch(config-class-ip)# 2 ignore udp any any
switch(config-class-ip)# 3 match tcp 192.168.0.1 192.168.0.2
switch(config-class-ip)# exit
switch(config)# show class ip my_ip_class
Type          Name
Sequence Comment
              Action                      L3 Protocol
              Source IP Address           Source L4 Port(s)
              Destination IP Address or FQDN Destination L4 Port(s)
              Additional Parameters
-----
---
IPv4          my_ip_class
              1 match                      icmp
              any
              any
              2 ignore                      udp
              any
              any
              3 match                      tcp
              192.168.0.1
              192.168.0.2

```

Adding a comment to an existing IPv4 class entry:

```

switch(config)# class ip my_ip_class
switch(config-class-ip)# 3 comment myipClass
switch(config-class-ip)# exit
switch(config)# show class ip my_ip_class
Type          Name
Sequence Comment
              Action                      L3 Protocol
              Source IP Address           Source L4 Port(s)
              Destination IP Address or FQDN Destination L4 Port(s)
              Additional Parameters
-----
---
IPv4          my_ip_class
              1 match                      icmp
              any
              any
              2 ignore                      udp
              any

```

```

any
3 myipClass
match                                tcp
192.168.0.1
192.168.0.2

```

Removing a comment from an existing IPv4 class entry:

```

switch(config)# class ip my_ip_class
switch(config-class-ip)# no 3 comment
switch(config-class-ip)# exit
switch(config)# show class ip my_ip_class

```

Type	Name	Sequence	Comment	Action	L3 Protocol	Source IP Address	Source L4 Port(s)	Destination IP Address or FQDN	Destination L4 Port(s)	Additional Parameters
------	------	----------	---------	--------	-------------	-------------------	-------------------	--------------------------------	------------------------	-----------------------

```

-----
---
IPv4      my_ip_class
1 match                                icmp
  any
  any
2 ignore                                udp
  any
  any
3 match                                tcp
  192.168.0.1
  192.168.0.2

```

Type	Name	Sequence	Comment	Action	L3 Protocol	Source IP Address	Source L4 Port(s)	Destination IP Address	Destination L4 Port(s)	Additional Parameters
------	------	----------	---------	--------	-------------	-------------------	-------------------	------------------------	------------------------	-----------------------

```

-----
---
IPv4      my_ip_class
1 match                                icmp
  any
  any
2 ignore                                udp
  any
  any

```

```

3 match                                tcp
192.168.0.1
192.168.0.2

```

Replacing an IPv4 class entry in an existing class:

```

switch(config)# class ip my_ip_class
switch(config-class-ip)# 10 match igmp any any
switch(config-class-ip)# exit
switch(config)# show class ip my_ip_class

```

Type	Name	Sequence	Comment	Action	L3 Protocol	Source IP Address	Source L4 Port(s)	Destination IP Address or FQDN	Destination L4 Port(s)	Additional Parameters

IPv4	my_ip_class									
		10	match		igmp					
			any							
			any							
		20	ignore		udp					
			any							
			any							
		30	match		tcp					
			192.168.0.1							
			192.168.0.2							

Removing an IPv4 class entry:

```

switch(config)# class ip MY_IP_CLASS
switch(config-class-ip)# no 10
switch(config-class-ip)# exit
switch(config)# show class ip my_ip_class

```

Type	Name	Sequence	Comment	Action	L3 Protocol	Source IP Address	Source L4 Port(s)	Destination IP Address or FQDN	Destination L4 Port(s)	Additional Parameters

IPv4	my_ip_class									
		20	ignore		udp					
			any							
			any							

```

30 match
    192.168.0.1
    192.168.0.2
tcp

```

Removing an IPv4 class. Removing a class with entries removes all its entries as well. If a class associated with a policy entry (or multiple policy entries) is removed, the corresponding entries are also removed.



NOTE

The corresponding entries are only removed if the class is unused by all policy entries.

Creating an IPv4 class with FQDN:

```

switch(config)# class ip my_ip_class
switch(config-class-ip)# 1 match icmp any fqdn www.example.com
switch(config-class-ip)# exit
switch(config-class-ip)# show class ip my_ip_class
Type          Name
Sequence      Comment
              Action                      L3 Protocol
              Source IP Address           Source L4 Port(s)
              Destination IP Address or FQDN Destination L4
Port(s)
              Additional Entry Parameters
-----
---
IPv4          my_ip_class
              1 match                      icmp
              any
              www.example.com

```

Modifying an existing class to include FQDN:

```

switch(config)# class ip my_ip_class
switch(config-class-ip)# 2 match udp any fqdn www.anotherexample.com
switch(config-class-ip)# exit
switch(config-class-ip)# show class ip my_ip_class
Type          Name
Sequence      Comment
              Action                      L3 Protocol
              Source IP Address           Source L4 Port(s)
              Destination IP Address or FQDN Destination L4
Port(s)
              Additional Parameters
-----
---

```



```
IPv4      my_ip_class
1 match                                     icmp
    any
    www.example.com
2 match                                     udp
    any
    www.anotherexample.com
```

Creating an IPv4 class with a long FQDN:

```
switch(config)# class ip my_long_fqdn_class
switch(config-class-ip)# 1 match icmp any fqdn
www.longsubdomainnamefornetworkconfigurationandtestingpurposes
withadditionaldetailsincludedforexampleusage.com
switch(config-class-ip)# exit
switch(config-class-ip)# show class ip my_long_fqdn_class
Type      Name
Sequence Comment
          Action                      L3 Protocol
          Source IP Address           Source L4 Port(s)
          Destination IP Address or FQDN Destination L4
Port(s)
          Additional Entry Parameters
-----
---
IPv4      my_long_fqdn_class
1 match                                     icmp
    any
    www.longsubdomainnamefornetworkconfigurationandtestingpur...
```

Creating an IPv6 class FQDN:

```
switch(config)# class ipv6 my_ipv6_class
switch(config-class-ip)# 1 match icmpv6 any fqdn www.example.com
switch(config-class-ip)# exit
switch(config-class-ip)# show class ipv6 my_ipv6_class
Type      Name
Sequence Comment
          Action                      L3 Protocol
          Source IP Address           Source L4 Port(s)
          Destination IP Address or FQDN Destination L4
Port(s)
          Additional Entry Parameters
-----
---
IPv6      my_ipv6_class
1 match                                     icmpv6
```

```
any
www.example.com
```

Modifying an existing class to include FQDN (IPv6):

```
switch(config)# class ipv6 my_ipv6_class
switch(config-class-ip)# 2 match any any fqdn www.anotherexample.com
switch(config-class-ip)# exit
switch(config-class-ip)# show class ipv6 my_ipv6_class
```

Type	Name
Sequence	Comment
Action	L3 Protocol
Source IP Address	Source L4 Port(s)
Destination IP Address or FQDN	Destination L4
Port(s)	
Additional Parameters	

```
-----
---
IPv6      my_ipv6_class
1 match                                     icmpv6
   any
   www.example.com
2 match                                     any
   any
   www.anotherexample.com
```

Command History

Release	Modification
10.17.1000	Added support for FQDN. Added support for EIGRP, L2TP and VRRP protocols.
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	<code>config</code> The class ip <CLASS - NAME> command takes you into the config - class - ipconfig - class - ip	Administrators or local user group members with execution rights for this command.

context where you enter
the class entries.

class ipv6

Syntax

Syntax to create an IPv6 class and enter its context. Plus syntax to remove a class:

```
class ipv6 <CLASS-NAME>
no class ipv6 <CLASS-NAME>
```

Syntax (within the class context) for creating or removing class entries for protocols **ah**, **eigrp**, **esp**, **gre**, **l2tp**, **ospf**, **pim**, **vrrp**, (**ipv6** is available as an alias for **any**):

```
[<SEQUENCE-NUMBER>]
{match|ignore}
{any|ah|eigrp|esp|gre|ipv6|l2tp|ospf|pim|vrrp|<IP-PROTOCOL-NUM>}
{any|<SRC-IP-ADDRESS>[/<PREFIX-LENGTH>|<SUBNET-MASK>]}
{any|<DST-IP-ADDRESS>[/<PREFIX-LENGTH>|<SUBNET-MASK>]}
[dscp <DSCP-SPECIFIER>] [ecn <ECN-VALUE>] [ip-precedence <IP-PRECEDENCE-VALUE>]
[tos <TOS-VALUE>] [fragment] [vlan <VLAN-ID>] [ttl <TTL-VALUE>] [count]
no <SEQUENCE-NUMBER>
```

Syntax (within the class context) for creating or removing class entries for protocols **sctp**, **tcp**, **udp**:

```
[<SEQUENCE-NUMBER>]
{match|ignore}
{sctp|tcp|udp}
{any|<SRC-IP-ADDRESS>[/<PREFIX-LENGTH>|<SUBNET-MASK>]}
[{eq|gt|lt} <PORT>|range <MIN-PORT> <MAX-PORT>]
{any|<DST-IP-ADDRESS>[/<PREFIX-LENGTH>|<SUBNET-MASK>]}
[{eq|gt|lt} <PORT>|range <MIN-PORT> <MAX-PORT>]
[urg] [ack] [psh] [rst] [syn] [fin] [established]
[dscp <DSCP-SPECIFIER>] [ecn <ECN-VALUE>] [ip-precedence <IP-PRECEDENCE-VALUE>]
[tos <TOS-VALUE>] [fragment] [vlan <VLAN-ID>] [ttl <TTL-VALUE>] [count]
no <SEQUENCE-NUMBER>
```

Syntax (within the class context) for creating or removing class entries for protocol **icmpv6**:

```
[<SEQUENCE-NUMBER>]
{permit|deny}
{icmpv6}
{any|<SRC-IP-ADDRESS>[/ {<PREFIX-LENGTH>|<SUBNET-MASK>} ] }
{any|<DST-IP-ADDRESS>[/ {<PREFIX-LENGTH>|<SUBNET-MASK>} ] }
[icmp-type {echo|echo-reply|<ICMP-TYPE-VALUE>}] [icmp-code <ICMP-CODE-VALUE>]
[dscp <DSCP-SPECIFIER>] [ecn <ECN-VALUE>] [ip-precedence <IP-PRECEDENCE-VALUE>]
[tos <TOS-VALUE>] [fragment] [vlan <VLAN-ID>] [ttl <TTL-VALUE>] [count]
no <SEQUENCE-NUMBER>
```

Syntax (within the class context) for class entry comments:

```
[<SEQUENCE-NUMBER>] comment <TEXT-STRING>
no <SEQUENCE-NUMBER> comment
```

Description

Creates or modifies an IPv6 traffic class to match specified packets. Class is composed of one or more class entries ordered and prioritized by sequence numbers. With this command, each class can classify traffic based on IPv6 header information.

The **no** form of the command deletes either an IPv6 traffic class (use **no** with the class command) or an individual IPv6 traffic class entry (use **no** with the sequence number).

Parameter	Description
ipv6	Specifies create or modify an IPv6 class.
<CLASS-NAME>	Specifies the name of this class.
<SEQUENCE-NUMBER>	Specifies a sequence number for the class entry. Optional. Range: 1 - 4294967295.
{match ignore}	Creates a rule to match or ignore specified packets.
<IP-PROTOCOL-NUM>	Specifies the protocol as its Internet Protocol number. For example, 2 corresponds to the IGMP protocol. Range: 0 to 255.
{any <SRC-IP-ADDRESS>[/ {<PREFIX-LENGTH> <SUBNET-MASK>}] }	Specifies the source IPv6 address. • any - specifies any source IPv6 address. • <SRC - IP - ADDRESS> - specifies the source IPv4 host address.

Parameter	Description
	◦ <PREFIX - LENGTH> - specifies the address bits to mask (CIDR subnet mask notation). Range: 1 to 32. ◦ <SUBNET - MASK> - specifies the address bits to mask (dotted decimal notation).
<code>{any <DST-IP-ADDRESS>[/ {<PREFIX-LENGTH> <SUBNET-MASK>}]}</code>	Specifies the destination IPv4 address. • any - specifies any destination IPv6 address. • <DST - IP - ADDRESS> - specifies the destination IPv6 host address. ◦ <PREFIX - LENGTH> - specifies the address bits to mask (CIDR subnet mask notation). Range: 1 to 32. ◦ <SUBNET - MASK> - specifies the address bits to mask (dotted decimal notation).
<code>[{eq gt lt} <PORT> range <MIN-PORT><MAX-PORT>]</code>	Specifies the port or port range. Port numbers are in the range of 0 to 65535. • eq <PORT> - specifies the Layer 4 port. • gt <PORT> - specifies any Layer 4 port greater than the indicated port. • lt <PORT> - specifies any Layer 4 port less than the indicated port. • range <MIN - PORT> <MAX - PORT> - specifies the Layer 4 port range.
cwr	Specifies matching on the TCP Flag CWR : Congestion Window Reduced
ece	Specifies matching on the TCP Flag ECE : Explicit Congestion Notification [ECN] - Echo
urg	Specifies matching on the TCP Flag: Urgent.
ack	Specifies matching on the TCP Flag: Acknowledgment.
psh	Specifies matching on the TCP Flag: Push buffered data to receiving application.
rst	Specifies matching on the TCP Flag: Reset the connection.
syn	Specifies matching on the TCP Flag: Synchronize sequence numbers.
fin	Specifies matching on the TCP Flag: Finish connection.

Parameter	Description
established	Specifies matching on the TCP Flag: Established connection.
dscp <DSCP-SPECIFIER>	Specifies the Differentiated Services Code Point (DSCP), either a numeric <DSCP-VALUE> (0 to 63) or one of these keywords: • AF11 - DSCP 10 (Assured Forwarding Class 1, low drop probability) • AF12 - DSCP 12 (Assured Forwarding Class 1, medium drop probability) • AF13 - DSCP 14 (Assured Forwarding Class 1, high drop probability) • AF21 - DSCP 18 (Assured Forwarding Class 2, low drop probability) • AF22 - DSCP 20 (Assured Forwarding Class 2, medium drop probability) • AF23 - DSCP 22 (Assured Forwarding Class 2, high drop probability) • AF31 - DSCP 26 (Assured Forwarding Class 3, low drop probability) • AF32 - DSCP 28 (Assured Forwarding Class 3, medium drop probability) • AF33 - DSCP 30 (Assured Forwarding Class 3, high drop probability) • AF41 - DSCP 34 (Assured Forwarding Class 4, low drop probability) • AF42 - DSCP 36 (Assured Forwarding Class 4, medium drop probability) • AF43 - DSCP 38 (Assured Forwarding Class 4, high drop probability) • CS0 - DSCP 0 (Class Selector 0: Default) • CS1 - DSCP 8 (Class Selector 1: Scavenger) • CS2 - DSCP 16 (Class Selector 2: OAM) • CS3 - DSCP 24 (Class Selector 3: Signaling) • CS4 - DSCP 32 (Class Selector 4: Real time) • CS5 - DSCP 40 (Class Selector 5: Broadcast video) • CS6 - DSCP 48 (Class Selector 6: Network control) • CS7 - DSCP 56 (Class Selector 7) • EF - DSCP 46 (Expedited Forwarding)

Parameter	Description
ecn <ECN-VALUE>	Specifies an Explicit Congestion Notification value. Range: 0 to 3.
ip-precedence <IP-PRECEDENCE-VALUE>	Specifies an IP precedence value. Range: 0 to 7.
tos <TOS-VALUE>	Specifies the Type of Service value. Range: 0 to 31.
fragment	Specifies a fragment packet.
vlan <VLAN-ID>	Specifies VLAN tag to match on. 802.1Q VLAN ID.
 NOTE This parameter cannot be used in any class that will be applied to a VLAN.	
ttl <TTL-VALUE>	Specifies a time - to - live (hop limit) value. Range: 0 to 255.
count	Keeps the hit counts of the number of packets matching this class entry.
[<SEQUENCE-NUMBER> comment <TEXT-STRING>	Adds a comment to a class entry. The no form removes only the comment from the class entry.

Usage

- If you enter an existing **<CLASS-NAME>** value, the existing class is modified with any new **<SEQUENCE-NUMBER>** value. This action creates an additional class entry. Any existing **<SEQUENCE-NUMBER>** value replaces the existing class entry with the same sequence number.
- If no sequence number is specified, a new class entry is appended to the end of the class with a sequence number equal to the highest class entry currently in the list plus 10.
- If the **<IP-PROTOCOL-NUM>** parameter is used instead of a protocol name, ensure that any needed class entry-definition parameters specific to the selected protocol are also provided.
The following match criteria are not supported on HPE Aruba Networking 8320, 8325 and 10000 Switch series:
 - TCP flags **CWR** and **ECE**
 - **TTL** (hop limit)

- **Fragment** in VLAN policies
- A VLAN ID in VLAN policies
- **TTL** (hop limit)

Examples

Creating an IPv6 class with two entries:

```
switch(config)# class ipv6 MY_IPV6_CLASS
switch(config-class-ipv6)# 10 match icmpv6 any any
switch(config-class-ipv6)# 20 ignore udp any any
switch(config-class-ipv6)# exit
switch(config)# do show class
```

Type	Name	Sequence	Comment	Action	L3 Protocol	Source IP Address	Source L4 Port(s)	Destination IP Address	Destination L4 Port(s)	Additional Parameters

IPv6	MY_IPV6_CLASS	10	match		icmpv6					
			any							
			any							
		20	ignore		udp					
			any							
			any							

Adding a comment to an existing IPv6 class entry:

```
switch(config)# class ipv6 MY_IPV6_CLASS
switch(config-class-ipv6)# 10 match icmpv6 any any
switch(config-class-ipv6)# 20 ignore udp any any
switch(config-class-ipv6)# 20 comment myipv6class
switch(config-class-ipv6)# exit
switch(config)# do show class
```

Type	Name	Sequence	Comment	Action	L3 Protocol	Source IP Address	Source L4 Port(s)	Destination IP Address	Destination L4 Port(s)	Additional Parameters


```

IPv6      MY_IPV6_CLASS
10 match
    any
    any
20 myipv6class
    ignore
    any
    any

```

Removing a comment from an existing IPv6 class entry:

```

switch(config)# class ipv6 MY_IPV6_CLASS
switch(config-class-ipv6)# no 20 comment
switch(config-class-ipv6)# exit
switch(config)# do show class

```

Type	Name	Sequence	Comment	Action	L3 Protocol	Source IP Address	Source L4 Port(s)	Destination IP Address	Destination L4 Port(s)	Additional Parameters

IPv6	MY_IPV6_CLASS	10	match		icmpv6					
			any							
			any							
		20	ignore		udp					
			any							
			any							
Type	Name	Sequence	Comment	Action	L3 Protocol	Source IP Address	Source L4 Port(s)	Destination IP Address	Destination L4 Port(s)	Additional Parameters

IPv6	MY_IPV6_CLASS	10	match		icmpv6					
			any							
			any							
		20	ignore		udp					
			any							
			any							

Replacing an IPv6 class entry in an existing IPv6 class:

```
switch(config)# class ipv6 MY_IPV6_CLASS
switch(config-class-ipv6)# 10 match any any 1020::
switch(config-class-ipv6)# exit
switch(config)# do show class
```

Type	Name	Sequence	Comment	Action	L3 Protocol	Source IP Address	Source L4 Port(s)	Destination IP Address	Destination L4 Port(s)	Additional Parameters

IPv6	MY_IPV6_CLASS									
		10	match				any			
		20	ignore				udp			

Removing an IPv6 class entry:

```
switch(config)# class ipv6 MY_IPV6_CLASS
switch(config-class-ipv6)# no 10
switch(config-class-ipv6)# exit
switch(config)# do show class
```

Type	Name	Sequence	Comment	Action	L3 Protocol	Source IP Address	Source L4 Port(s)	Destination IP Address	Destination L4 Port(s)	Additional Parameters

IPv6	MY_IPV6_CLASS									
		20	ignore				udp			

Removing an IPv6 class. Removing a class with entries removes all its entries as well. If a class associated with a policy entry (or multiple policy entries) is removed, the corresponding entries are also removed.



NOTE

The corresponding entries are only removed if the class is unused by all policy entries.

```
switch(config)# no class ipv6 MY_IPV6_CLASS
switch(config)# do show class
No Class found.
```

Command History

Release	Modification
10.17.1000	Added support for EIGRP, L2TP and VRRP protocols.
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	config The class ipv6 <CLASS - NAME> command takes you into the config - class - ipv6 command context where you enter the class entries.	Administrators or local user group members with execution rights for this command.

class mac

Syntax

```
class mac <CLASS-NAME>
  [<SEQUENCE-NUMBER>]
  {match|ignore}
  {any|<SRC-MAC-ADDRESS> [/<ETHERNET-MASK>] } }
  {any|<DST-MAC-ADDRESS> [/<ETHERNET-MASK>] } }
```

```

{any|aarp|appletalk|arp|fcoe|fcoe-init|ip|ipv6|ipx-arpa|ipx-non-arpa|is-
is|
    lldp|mpls-multicast|mpls-unicast|q-in-q|rbridge|trill|wake-on-lan|
    <NUMERIC-ETHERTYPE>}
[pcp <PCP-VALUE>] [vlan <VLAN-ID>] [count]
[<SEQUENCE-NUMBER>] comment <TEXT-STRING>

```

Description

Creates or modifies a MAC traffic class to match specified packets. Class is composed of one or more class entries ordered and prioritized by sequence numbers. With this command, each class can classify traffic based on MAC header information.

The **no** form of the command can be used to delete either a MAC traffic class (use **no** with the class command) or an individual MAC traffic class entry (use **no** with the sequence number).

Parameter	Description
mac	Specifies create or modify a MAC class.
<CLASS-NAME>	Specifies the name of this class.
<SEQUENCE-NUMBER>	Specifies a sequence number for the class entry. Optional. Range: 1 - 4294967295.
{match ignore}	Creates a rule to match or ignore specified packets.
comment	Stores the remaining entered text as a class comment.
{any <SRC-MAC-ADDRESS> [/<ETHERNET-MASK>] }	Specifies the source host MAC address (xxxx.xxxx.xxxx), OUI, or the keyword any . You can optionally include the following: <ETHERNET-MASK> - The address bits to mask (xxxx.xx xx.xxxx).
{any <DST-MAC-ADDRESS> [/<ETHERNET-MASK>] }	Specifies the destination host MAC address (xxxx.xxxx.xxxx), OUI, or the keyword any . You can optionally include the following: <ETHERNET-MASK> - The address bits to mask (xxxx.xx xx.xxxx).
Protocol	Select an ethertype protocol from the following (enter one only):

Parameter	Description
	• any - Any ethernet protocol • <NUMERIC-ETHERTYPE> - Enter an Ethernet protocol number. Range: 0x600 - 0xffff. • Or enter an Ethernet protocol name from the following list: ◦ aarp ◦ appletalk ◦ arp ◦ coae ◦ coae - init ◦ ip ◦ ipv6 ◦ ipx - arpa ◦ ipx - non - arpa ◦ is - is ◦ lldp ◦ mpls - multicast ◦ mpls - unicast ◦ q - in - q ◦ rbridge ◦ trill ◦ wake - on - lan
<code>pcp <PCP-VALUE></code>	Specifies matching on QoS Priority Code Point. Range: 0 - 7.
<code>vlan <VLAN-ID></code>	Specifies matching on a VLAN ID. Enter a VLAN ID or the VLAN name, if configured.
 NOTE This parameter cannot be used in any class that will be applied to a VLAN.	
<code>count</code>	Keeps the hit counts of the number of packets matching this class entry.

Examples

Creating a MAC class:

```

switch(config)# class mac MY_MAC_CLASS
switch(config-class-mac)# match any any lldp
switch(config-class-mac)# ignore any any arp
switch(config-class-mac)# exit
switch(config)# do show class

```

Type	Name	Sequence	Comment	Action	EtherType	Source MAC Address	Destination MAC Address	Additional Parameters

MAC	MY_MAC_CLASS							
		10	match		lldp			
			any					
			any					
		20	ignore		arp			
			any					
			any					

Adding a comment to an existing MAC class entry:

```

switch(config)# class mac MY_MAC_CLASS
switch(config-class-mac)# 10 comment MY_CLASS_ENTRY10 comment MY_CLASS_ENTRY
switch(config-class-mac)# exit
switch(config)# do show class

```

Type	Name	Sequence	Comment	Action	EtherType	Source MAC Address	Destination MAC Address	Additional Parameters

MAC	MY_MAC_CLASS							
		10	MY_CLASS_ENTRY					
			match		lldp			
			any					
			any					
		20	ignore		arp			
			any					
			any					

Removing a comment from an existing MAC class entry:

```

switch(config)# class mac MY_MAC_CLASS
switch(config-class-mac)# no 10 comment MY_CLASS_ENTRY
switch(config-class-mac)# exit
switch(config)# do show class
Type          Name
Sequence Comment
              Action                      EtherType
              Source MAC Address
              Destination MAC Address
              Additional Parameters
-----
---
MAC          MY_MAC_CLASS
              10 match                      lldp
                  any
                  any
              20 ignore                      arp
                  any
                  any

```

Replacing a MAC class entry in an existing MAC class:

```

switch(config)# class mac MY_MAC_CLASS
switch(config-class-mac)# 10 match any any any
switch(config-class-mac)# exit
switch(config)# do show class
Type          Name
Sequence Comment
              Action                      EtherType
              Source MAC Address
              Destination MAC Address
              Additional Parameters
-----
---
MAC          MY_MAC_CLASS
              10 match                      any
                  any
                  any
              20 ignore                      arp
                  any
                  any

```

Removing a MAC class entry:

```

switch(config)# class mac MY_MAC_CLASS
switch(config-class-mac)# no 1
switch(config-class-mac)# exit

```

```

switch(config)# do show class
Type          Name
Sequence      Comment
              Action                      EtherType
              Source MAC Address
              Destination MAC Address
              Additional Parameters
-----
---
MAC           MY_MAC_CLASS
              2 ignore                      arp
              any
              any

```

Removing a MAC class. Removing a class with entries removes all its entries as well. If a class associated with a policy entry (or multiple policy entries) is removed, the corresponding entries are also removed.



NOTE

The corresponding entries are only removed if the class is unused by all policy entries.

```

switch(config)# no class mac MY_MAC_CLASS
switch(config)# do show class
No Class found.

```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8320	config	Administrators or local user group members with execution rights for this command.
8325	The class mac <CLASS	
8325H	- NAME> command takes you into the config	
8325P	- class - mac context where you enter the class entries.	
9300		
9300S		

Platforms	Command context	Authority
10000		
10040		

class resequence

Syntax

```
class {ip|ipv6|mac} <CLASS-NAME> resequence <STARTING-SEQUENCE-NUMBER>
<INCREMENT>
```

Description

Resequencing numbering in an IPv4, or IPv6, or MAC class.

Parameter	Description
<pre>{ip ipv6 mac } <CLASS-NAME></pre>	Specifies the class where you want to resequence class entries.
<pre><STARTING-SEQUENCE-NUMBER></pre>	Specifies the sequence number to start resequencing from.
<pre><INCREMENT></pre>	Specifies how much to increment the sequence numbers by.

Examples

Resequencing an IPv4 class:

```

switch(config)# class ip MY_IP_CLASS resequence 1 10
switch(config)# do show class
Type          Name
Sequence Comment
              Action                      L3 Protocol
              Source IP Address           Source L4 Port(s)
              Destination IP Address       Destination L4 Port(s)
              Additional Parameters
-----
---
IPv4          MY_IP_CLASS
              1 match                      igmp
                any
                any
              11 ignore                     udp
                any
                any
              21 match                      tcp
                192.168.0.1
                192.168.0.2

```

Resequencing an IPv6 class:

```

switch(config)# class ipv6 MY_IPV6_CLASS resequence 1 1
switch(config-class-ipv6)# exit
switch(config)# do show class
Type          Name
Sequence Comment
              Action                      L3 Protocol
              Source IP Address           Source L4 Port(s)
              Destination IP Address       Destination L4 Port(s)
              Additional Parameters
-----
---
IPv6          MY_IPV6_CLASS
              1 match                      any
                any
                1020::
              2 ignore                     udp
                any
                any

```

Resequencing a MAC class:

```

switch(config)# class mac MY_MAC_CLASS resequence 1 1
switch(config)# do show class
Type          Name

```

Sequence	Comment		
	Action		EtherType
	Source MAC Address		
	Destination MAC Address		
	Additional Parameters		

MAC	MY_MAC_CLASS		
1	match		any
	any		
	any		
2	ignore		arp
	any		
	any		

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

class reset

Syntax

```
class { all | ip <CLASS-NAME> | ipv6 <CLASS-NAME>
      |mac <CLASS-NAME>
      } reset
```

Description

Changes the user-specified class configuration to match the active class configuration. Use this command when there is a discrepancy between what the user configured and what is active and accepted by the system.

Parameter	Description
<pre>{ all ip <CLASS-NAME> ipv6 <CLASS-NAME> mac <CLASS-NAME> }</pre>	Specifies either all classes be reset or specifies the type (ip for IPv4, ipv6 for IPv6 or mac for MAC ACL) and name of the class to be reset.

Examples

Resetting the user-specified configuration to the active configuration:

```
switch(config)# class all reset
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

clear policy hitcounts

Syntax

```
clear policy hitcounts { all | [<POLICY-NAME>] [[interface <IF-NAME> [in|
routed-in]] | [vlan <VLAN-ID> [in]]] | global }
```

Description

Clears the policy hit count statistics.

Parameter	Description
all	Selects all policies.
<POLICY-NAME>	Specifies the policy name.
interface <IF-NAME>	Specifies the interface name.
vlan <VLAN-ID>	Specifies the VLAN.
in	Specifies the inbound (ingress) traffic direction.
routed-in	Selects the routed in traffic direction. Not applicable to a policy applied to a VLAN.
global	Selects the globally applied policy.

Examples

Clearing policy hit counts and then showing the policy hit counts (statistics):

```
switch#
```

```
clear policy hitcounts my_policy int 1/1/1 in
```

```
switch#
```

```
show policy hitcounts my_policy
```

Statistics for Policy my_policy: Interface 1/1/1* (in): Hit Count Configuration 10 class ipv6 my_class1 action dscp af21 action drop 0 10 match any any any count * policy statistics are shared among each context type (interface, VLAN). For routed ingress, they are only shared within the same VRF. Use 'policy NAME copy' to create a new policy for separate statistics.

```
switch#
```

```
clear policy hitcounts my_policy int 1/1/1 in
```

```
switch#
```

```
show policy hitcounts my_policy
```

Statistics for Policy my_policy: Interface 1/1/1* (in): Hit Count Configuration 10 class ipv6 my_class1 action dscp af21 action drop 0 10 match any any any count * policy statistics are shared among each context type (interface, VLAN). Use 'policy NAME copy' to create a new policy for separate statistics.

```
switch#
```

```
clear policy hitcounts global
```

```
switch#
```

show policy hitcounts global

Statistics for Policy global1: Global Policy: Hit Count Configuration 10 class ipv6 my_class1 action mirror 0 10 match any any any count * policy statistics are shared among each context type (interface, VLAN). For routed ingress, they are only shared within the same VRF. Use 'policy NAME copy' to create a new policy for separate statistics.

Clearing the globally applied policy hit counts and then showing the global policy hit counts (statistics):

```
switch#
```

clear policy hitcounts global

```
switch#
```

show policy hitcounts global

Statistics for Policy global1: Global Policy: Hit Count Configuration 10 class ipv6 my_class1 action mirror 0 10 match any any any count * policy statistics are shared among each context type (interface, VLAN). For routed ingress, they are only shared within the same VRF. Use 'policy NAME copy' to create a new policy for separate statistics.

```
switch#
```

clear policy hitcounts global

```
switch#
```

show policy hitcounts global

Statistics for Policy global1: Global Policy: Hit Count Configuration 10 class ipv6 my_class1 action mirror 0 10 match any any any count * policy statistics are shared among each context type (interface, VLAN). Use 'policy NAME copy' to create a new policy for separate statistics.

Clearing hit counts for policy **MY_IPv6_Policy** applied to VLAN 10 (ingress):

```
switch# clear policy hitcounts My_IPv6_Policy vlan 10 in
```

Clearing hit counts for all policies:

```
switch# clear policy hitcounts all
```

Command History

Release

Modification

10.07 or earlier

- -

Command Information

Platforms	Command context	Authority
All platforms	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

policy

Syntax

```
policy <POLICY-NAME>
  [<SEQUENCE-NUMBER>]
  class {ip|ipv6|mac} <CLASS-NAME>
    action {<REMARK-ACTIONS> | <POLICE-ACTIONS> | <OTHER-ACTIONS>}
    [{<REMARK-ACTIONS> | <POLICE-ACTIONS> | <OTHER-ACTIONS>}]
  [<SEQUENCE-NUMBER>]
  comment ...
```

Description

Creates or modifies classifier policy and policy entries. A policy is made up of one or more policy entries ordered and prioritized by sequence numbers. Each entry has an IPv4/IPv6/MAC class and zero or more policy actions associated with it.

A policy must be applied using the **apply** command.

The **no** form of the command can be used to delete either a policy (use **no** with the policy command) or an individual policy entry (use **no** with the sequence number).

Parameter	Description
<code><POLICY-NAME></code>	Specifies the name of the policy.
<code><SEQUENCE-NUMBER></code>	Specifies a sequence number for the policy entry. Optional. Range: 1 to 4294967295.

Parameter	Description
<code>comment</code>	Stores the remaining entered text as a policy entry comment.
<code>class {ip ipv6 mac} <CLASS-NAME></code>	Specifies a type of class, ip for IPv4, ipv6 for IPv6 and mac for a MAC policy. And specifies a class name.
<code><REMARK-ACTIONS></code>	Remark actions can be any of the following options: { <code>pcp <PRIORITY></code> <code>ip - precedence <IP - PRECEDENCE_VALUE></code> <code>dscp <DSCP - VALUE></code> <code>local - priority <LOCAL - PRIORITY - VALUE></code> } where:
<code>pcp <PCP-VALUE></code>	Specifies the Priority Code Point (PCP) value. Range: 0 to 7.
<code>ip-precedence <IP-PRECEDENCE-VALUE></code>	Specifies the numeric IP precedence value. Range: 0 to 7.
<code>dscp <DSCP-VALUE></code>	Specifies a Differentiated Services Code Point (DSCP) value. Enter either a numeric value (0 to 63) or a keyword as follows: • AF11 - DSCP 10 (Assured Forwarding Class 1, low drop probability) • AF12 - DSCP 12 (Assured Forwarding Class 1, medium drop probability) • AF13 - DSCP 14 (Assured Forwarding Class 1, high drop probability) • AF21 - DSCP 18 (Assured Forwarding Class 2, low drop probability) • AF22 - DSCP 20 (Assured Forwarding Class 2, medium drop probability) • AF23 - DSCP 22 (Assured Forwarding Class 2, high drop probability) • AF31 - DSCP 26 (Assured Forwarding Class 3, low drop probability) • AF32 - DSCP 28 (Assured Forwarding Class 3, medium drop probability) • AF33 - DSCP 30 (Assured Forwarding Class 3, high drop probability) • AF41 - DSCP 34 (Assured Forwarding Class 4, low drop probability) • AF42 - DSCP 36 (Assured Forwarding Class 4, medium drop probability)

Parameter	Description
	• AF43 - DSCP 38 (Assured Forwarding Class 4, high drop probability) • CS0 - DSCP 0 (Class Selector 0: Default) • CS1 - DSCP 8 (Class Selector 1: Scavenger) • CS2 - DSCP 16 (Class Selector 2: OAM) • CS3 - DSCP 24 (Class Selector 3: Signaling) • CS4 - DSCP 32 (Class Selector 4: Real time) • CS5 - DSCP 40 (Class Selector 5: Broadcast video) • CS6 - DSCP 48 (Class Selector 6: Network control) • CS7 - DSCP 56 (Class Selector 7) • EF - DSCP 46 (Expedited Forwarding)
local-priority <LOCAL-PRIORITY-VALUE>	Specifies a local priority value. Range: 0 to 7.
<POLICE-ACTIONS>	Police actions can be the following { cir <RATE - BPS> cbs < BYTES > exceed } where:
cir kbps <RATE-KBPS>	Specifies a Committed Information Rate value in Kilobits per se cond. Range: 1 to 4294967295.
cbs <BYTES>	Specifies a Committed Burst Size value in bytes. Range: 1 to 4294967295.
exceed	Specifies action to take on packets that exceed the rate limit.
<OTHER-ACTIONS>	Other actions can be the following:
drop	Specifies drop traffic.

Usage

- An applied policy will process a packet sequentially against policy entries in the list until the last policy entry in the list has been evaluated or the packet matches an entry.
- Entering an existing <POLICY-NAME> value will cause the existing policy to be modified, with any new <SEQUENCE-NUMBER> value creating an additional policy entry, and any existing <SEQUENCE-NUMBER> value replacing the existing policy entry with the same sequence number.

- If no sequence number is specified, a new policy entry will be appended to the end of the entry list with a sequence number equal to the highest policy entry currently in the list plus 10.

Examples

Creating a policy with several entries:

```
switch(config)# policy MY_POLICY
switch(config-policy)# 10 class ipv6 MY_CLASS1 action dscp af21 action drop
switch(config-policy)# 20 class ip MY_CLASS3 action mirror 1
switch(config-policy)# exit
switch(config)# show policy
```

Name	Sequence	Comment	Class	Type	action

MY_POLICY	10		MY_CLASS1	ipv6	drop dscp AF21
	20		MY_CLASS3	ip	mirror 1

Adding a comment to an existing policy entry:

```
switch(config)# policy MY_POLICY
switch(config-policy)# 20 comment MY_TEST_POLICY
switch(config-policy)# exit
switch(config)# show policy
```

Name	Sequence	Comment	Class	Type	action

MY_POLICY	10		MY_CLASS1	ipv6	drop dscp AF21
	20	MY_TEST_POLICY	MY_CLASS3	ip	mirror 1

Removing a comment from an existing policy entry:

```
switch(config)# policy MY_POLICY
switch(config-policy)# no 20 comment
switch(config-policy)# exit
switch(config)# show policy
```

Name	Sequence	Comment	Class	Type	action

MY_POLICY	10	MY_CLASS1	ipv6	drop	dscp AF21
	20	MY_CLASS3	ipv4	mirror	1

Adding/Replacing a policy entry in an existing policy:

```
switch(config)# policy MY_POLICY
switch(config-policy)# 10 class ip MY_CLASS3 action drop action dscp af21
switch(config-policy)# exit
switch(config)# show policy
```

Name	Sequence	Comment	Class	Type	action

MY_POLICY	10		MY_CLASS3	ipv4	drop
					dscp AF21
	20		MY_CLASS3	ipv4	mirror 1

Removing a policy entry:

```
switch(config)# policy MY_POLICY
switch(config-policy)# no 10
switch(config-policy)# exit
switch(config)# show policy
```

Name	Sequence	Comment	Class	Type	action

MY_POLICY	20		MY_CLASS3	ipv4	mirror 1

Removing a policy:

```
switch(config)# no policy MY_POLICY
switch(config)# show policy
```

Name	Sequence	Comment	Class	Type	action

```
MY_POLICY    22                                MY_CLASS3    ipv4    mirror 1
```

The policer **exceed** DSCP action cannot be combined with other actions in the same policy entry, but other entries in the policy may use other actions.

For example, this configuration is valid:

```
switch(config)# policy my_policy
switch(config-policy)# 10 class ip my_class action cir kbps 1000 cbs 15625
exceed dscp EF
```

But this is not because it adds a secondary action within the same policy entry:

```
6300(config-policy)# 10 class ip my_class action cir kbps 1000 cbs 15625
exceed dscp EF action mirror 1
```

Invalid input: action

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	<code>config</code> The policy command takes you into the config - policy context where you enter the policy entries.	Administrators or local user group members with execution rights for this command.

policy copy

Syntax

```
policy <POLICY-NAME> copy <DESTINATION-POLICY>
```

Description

Copies a policy to a new destination policy or overwrites an existing policy. Copying a policy copies all its entries as well.

Parameter	Description
<POLICY-NAME>	Specifies the policy to be copied.
<DESTINATION-POLICY>	Specifies the name of the destination policy.

Examples

Copying a policy:

```
switch(config)# policy MY_POLICY copy MY_POLICY2
switch(config)# do show policy
      Name
Sequence Comment
      Class Type
              action
-----
---
      MY_POLICY
2
      my_class3 ipv4
              mirror 1
-----
---
      MY_POLICY2
2
      my_class3 ipv4
              mirror 1
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

policy resequence

Syntax

```
policy <POLICY-NAME> resequence <STARTING-SEQ-NUM>  
                                <INCREMENT>
```

Description

Resequences numbering in a policy.

Parameter	Description
<POLICY-NAME>	Specifies the policy where you want to resequence policy entries.
<STARTING-SEQ-NUM>	Specifies the sequence number to start resequencing from.
<INCREMENT>	Specifies how much to increment the sequence numbers by.

Examples

Resequencing a policy:

```
switch(config)# policy MY_POLICY resequence 1 1  
switch(config)# do show policy  
Name
```

Sequence	Comment
	Class Type
	action

	MY_POLICY
1	MY_CLASS3 ipv4
	drop
	dscp AF21
2	MY_CLASS3 ipv4
	mirror 1

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

policy reset

Syntax

```
policy <POLICY-NAME> reset
```

Description

Changes the user-specified policy configuration to match the active policy configuration. Use this command when a discrepancy exists between what the user configured and what is active and accepted by the system.

Parameter	Description
<POLICY-NAME>	Specifies the policy to be reset.

Examples

Resetting a policy:

```
switch(config)# policy MY_POLICY reset
```

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	config	Administrators or local user group members with execution rights for this command.

show class

Syntax

```
show class [ip | ipv6 | mac] [<CLASS-NAME>] [commands] [configuration] [vsx-peer]
```

Description

Shows class configuration information.

All parameters are optional.

Parameter	Description
[ip ipv6 mac]	Selects the class type for the display: ip for IPv4, ipv6 for IPv6, or mac for MAC classes.
<CLASS-NAME>	Specifies the class name.
commands	Specifies whether to display output as the CLI commands showing the configured class entries.
configuration	Specifies whether to display classes that have been configured by the user, even if they are not active due to issues with the command parameters or hardware issues. This parameter is useful during a mismatch between the entered configuration and the previous successfully programmed (active) classes.
vsx-peer	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Examples

Showing all class configuration:

```
switch# show class

User Configured ipv4 classes:
=====
Type Name
  Sequence Comment
      action                    L3 Protocol
      Source IP address         Source L4 Port(s)
      Destination IP address or FQDN Destination L4 Port(s)
      Additional Parameters
-----
ipv4 MY_IPV4_CLASS
  10 my first class entry comment
    match                    icmp
    192.168.0.1/255.255.255.0
    192.168.1.1/255.255.255.0
    VLAN: 1
  20 my second class entry comment
```

```

ignore                                tcp
10.100.0.10/255.255.255.0    < 3000
10.100.1.10/255.255.255.0    > 2000
VLAN: 1
-----

```

Showing class configuration for the IPv4 class MY_IPV4_CLASS as CLI commands:

```

switch# show class ip MY_IPV4_CLASS commands
class ip "MY_IPV4_CLASS"
  10 match icmp 192.168.0.1/255.255.255.0 192.168.1.1/255.255.255.0 vlan 1
  10 comment my first class entry comment
  20 ignore tcp 10.100.0.10/255.255.255.0 lt 3000 10.100.1.10/255.255.255.0
  gt 2000 vlan 1
  20 comment my second class entry comment

```

Showing class configuration for my_ip_class

```

switch# show class ip my_ip_class
Type      Name
Sequence Comment
          Action                      L3 Protocol
          Source IP Address           Source L4 Port(s)
          Destination IP Address or FQDN Destination L4
Port(s)
          Additional Parameters
-----
---
IPv4      my_ip_class
          1 match                      icmp
          any
          www.example.com

switch# show class ip my_ip_class commands
class ip my_ip_class
  1 match icmp any fqdn www.example.com

```

Command History

Release	Modification
10.17.1000	Added support for FQDN.
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
All platforms	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

show policy

Syntax

Syntax that shows information for all policies:

```
show policy [commands] [configuration] [vsx-peer]
```

Syntax that filters by policies applied to an interface or VLAN:

```
show policy [interface <IF-NAME> [in | out | routed-in] | vlan <VLAN-ID>
[in] | vni <VNI-ID> [routed-in]]
[commands] [configuration] [vsx-peer]
```

Syntax that filters by the named policy:

```
show policy <POLICY-NAME> [commands] [configuration] [vsx-peer]
```

Syntax that filters by the globally applied policy:

```
show policy global [commands] [configuration] [vsx-peer]
```

Syntax that shows statistical information in the form of hit counts:

```
show policy hitcounts <POLICY-NAME> [interface <IF-NAME> [in | routed-in] |
vlan <VLAN-ID> [in] | vni <VNI-ID> [routed-in]] [vsx-peer]
```

Syntax that shows statistical information in the form of hit counts for the globally applied policy:

```
show policy hitcounts global [vsx-peer]
```

Description

Shows information about your defined policies and where they have been applied. When **show policy** is entered without parameters, information for all policies is shown. The parameters filter the list of policies for which information is shown.

Available filtering includes:

- The content of a specific policy.
- All policies applied to a specific interface.
- All policies applied to a specific VLAN.
- All policies applied to a specific VNI.
- The globally applied policy.

To display policy statistics, use the **show policy hitcounts** form of this command.



NOTE

When a policy is applied to a physical interface or lag using command **apply policy**, with the **per-interface** parameter included, unique instances of the policy are applied to each physical interface port or LAG. The unique instance of a policy has a parent-child relationship with the policy from which it was created. The **show policy** command shows information about the parent policy not the unique instances.



NOTE

If a policy contains any class entries with the count keyword and policy entries with the **cir** action, and the policy is applied to multiple physical or virtual interfaces in the same direction, except for the routed ingress direction, the statistics will be aggregated. In the routed ingress direction, the statistics will be aggregated in multiple physical or virtual interfaces in the same VRF. If separate statistics for different physical or virtual interfaces are required, then another policy should be created. Alternatively, in the case of physical interfaces or LAGs, a policy applied with **per-interface** set can be used.

Parameter	Description
<code>interface <IF-NAME></code>	Specifies the interface name.
<code>vlan <VLAN-ID></code>	Specifies the VLAN.
<code>vni<VNI-ID></code>	Specifies the VNI.
<code>in</code>	Selects the inbound (ingress) traffic direction.
<code>routed-in</code>	Selects the routed in traffic direction. Not applicable to a policy applied to a VLAN.

Parameter	Description
<code><POLICY-NAME></code>	Specifies the policy name.
<code>commands</code>	Causes the policy definition to be shown as the commands and parameters used to create it rather than in tabular form.
<code>configuration</code>	Causes the user - configured policies be shown as entered, even if the policies are not active due to policy - definition command issues or hardware issues. This parameter is useful if there is a mismatch between the entered configuration and the previous successfully programmed (active) policies configuration.
<code>global</code>	Selects the globally applied policy.
<code>hitcounts</code>	Selects the policy hit counts (statistics). The switch displays the number of accepted bytes/conformed bytes (green and yellow bytes) as 0 kbps.
<code>vsx-peer</code>	Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Examples

Showing information for all policies:

```
switch# show policy
      Name
Sequence Comment
      Class Type
              action
-----
---
      my_policy
10 QOS class
      class1 ipv4
              dscp af21
              drop
20 PBR policy.
      class2 ipv4
              pbr mypbr
```

```
-----  
---
```

Showing a policy as commands:

```
switch# show policy commands  
policy my_policy  
    10 class ip class1 action dscp af21 action drop  
    20 class ip class2 action pbr mypbr
```

Showing the globally applied policy:

```
switch# show policy global commands  
policy global1  
    10 class ip my_class1 action drop  
apply policy my_policy in
```

Showing policy hit counts (statistics) for the globally applied policy :

```
switch# show policy hitcounts global  
Statistics for Policy My_Policy:  
global (in):  
    Matched Packets  Configuration  
10 class ip My_ip_Class  
    0 10 match tcp any any ack count  
    - 20 match udp any lt 8 any  
    0 30 match icmp any 10.1.1.10 count  
20 class ipv6 My_ipv6_Class action cir kbps 1000000 cbs 1000000 exceed drop  
    0 10 match tcp any any count [ 0 kbps conform ]  
    0 20 match icmpv6 1000::10 any count [ 0 kbps conform ]
```

```
switch# show policy hitcounts My_Policy  
Statistics for Policy My_Policy:  
Interface 1/1/1,lag1 (in):  
    Matched Packets  Configuration  
10 class ip My_ip_Class  
    0 10 match tcp any any ack count  
    - 20 match udp any lt 8 any  
    0 30 match icmp any 10.1.1.10 count  
20 class ipv6 My_ipv6_Class action cir kbps 1000000 cbs 1000000 exceed  
drop [ 0 kbps conform ]  
    - 10 match tcp any any ack  
    0 20 match icmpv6 1000::10 any count  
Interface 1/1/4 (in):  
    Matched Packets  Configuration  
10 class ip My_ip_Class  
    0 10 match tcp any any ack count  
    - 20 match udp any lt 8 any  
    0 30 match icmp any 10.1.1.10 count
```

```

20 class ipv6 My_ipv6_Class action cir kbps 1000000 cbs 1000000 exceed
drop [ 0 kbps conform ]
    - 10 match tcp any any ack
    0 20 match icmpv6 1000::10 any count
Interface 1/1/5 (in):
    Matched Packets Configuration
10 class ip My_ip_Class
    0 10 match tcp any any ack count
    - 20 match udp any lt 8 any
    0 30 match icmp any 10.1.1.10 count
20 class ipv6 My_ipv6_Class action cir kbps 1000000 cbs 1000000 exceed
drop [ 0 kbps conform ]
    - 10 match tcp any any ack
    0 20 match icmpv6 1000::10 any count
interface 1/1/2.10,1/1/3.10 (in):
    Matched Packets Configuration
10 class ip My_ip_Class
    0 10 match tcp any any ack count
    - 20 match udp any lt 8 any
    0 30 match icmp any 10.1.1.10 count
20 class ipv6 My_ipv6_Class action cir kbps 1000000 cbs 1000000 exceed
drop [ 0 kbps conform ]
    - 10 match tcp any any ack
    0 20 match icmpv6 1000::10 any count
...

```

Showing policy hit counts (statistics) for a policy applied everywhere (with 1/1/1 and 1/1/5 being applied per interface):

```

switch# show policy hitcounts My_Policy
Statistics for Policy My_Policy:
Interface 1/1/1,lag1 (in):
    Matched Packets Configuration
10 class ip My_ip_Class
    0 10 match tcp any any ack count
    - 20 match udp any lt 8 any
    0 30 match icmp any 10.1.1.10 count
20 class ipv6 My_ipv6_Class action cir kbps 1000000 cbs 1000000 exceed
drop
    - 10 match tcp any any ack
    0 20 match icmpv6 1000::10 any count [ 0 kbps conform ]
Interface 1/1/4 (in):
    Matched Packets Configuration
10 class ip My_ip_Class
    0 10 match tcp any any ack count

```

```

        - 20 match udp any lt 8 any
        0 30 match icmp any 10.1.1.10 count
20 class ipv6 My_ipv6_Class action cir kbps 1000000 cbs 1000000 exceed drop
        0 10 match tcp any any count [ 0 kbps conform ]
        0 20 match icmpv6 1000::10 any count [ 0 kbps conform ]
Interface 1/1/5 (in):
    Matched Packets  Configuration
10 class ip My_ip_Class
        0 10 match tcp any any ack count
        - 20 match udp any lt 8 any
        0 30 match icmp any 10.1.1.10 count
20 class ipv6 My_ipv6_Class action cir kbps 1000000 cbs 1000000 exceed drop
        0 10 match tcp any any count [ 0 kbps conform ]
        0 20 match icmpv6 1000::10 any count [ 0 kbps conform ]
interface 1/1/2.10,1/1/3.10 (in):
    Matched Packets  Configuration
10 class ip My_ip_Class
        0 10 match tcp any any ack count
        - 20 match udp any lt 8 any
        0 30 match icmp any 10.1.1.10 count
20 class ipv6 My_ipv6_Class action cir kbps 1000000 cbs 1000000 exceed
drop
        - 10 match tcp any any ack
        0 20 match icmpv6 1000::10 any count [ 0 kbps conform ]
...
Statistics for Policy My_Policy:
Interface 1/1/1,lag1 (in):
    Matched Packets  Configuration
10 class ip My_ip_Class
        0 10 match tcp any any ack count
        - 20 match udp any lt 8 any
        0 30 match icmp any 10.1.1.10 count
20 class ipv6 My_ipv6_Class action cir kbps 1000000 cbs 1000000 exceed
drop
        - 10 match tcp any any ack
        0 20 match icmpv6 1000::10 any count [ 0 kbps conform ]
Interface 1/1/4 (in):
    Matched Packets  Configuration
10 class ip My_ip_Class
        0 10 match tcp any any ack count
        - 20 match udp any lt 8 any
        0 30 match icmp any 10.1.1.10 count
20 class ipv6 My_ipv6_Class action cir kbps 1000000 cbs 1000000 exceed drop

```



```

0 10 match tcp any any count [ 0 kbps conform ]
0 20 match icmpv6 1000::10 any count [ 0 kbps conform ]
Interface 1/1/5 (in):
    Matched Packets  Configuration
10 class ip My_ip_Class
    0 10 match tcp any any ack count
    - 20 match udp any lt 8 any
    0 30 match icmp any 10.1.1.10 count
20 class ipv6 My_ipv6_Class action cir kbps 1000000 cbs 1000000 exceed drop
    0 10 match tcp any any count [ 0 kbps conform ]
    0 20 match icmpv6 1000::10 any count [ 0 kbps conform ]
interface 1/1/2.10,1/1/3.10 (in):
    Matched Packets  Configuration
10 class ip My_ip_Class
    0 10 match tcp any any ack count
    - 20 match udp any lt 8 any
    0 30 match icmp any 10.1.1.10 count
20 class ipv6 My_ipv6_Class action cir kbps 1000000 cbs 1000000 exceed
drop
    - 10 match tcp any any ack
    0 20 match icmpv6 1000::10 any count [ 0 kbps conform ]
...

```

```

switch# show policy hitcounts My_Policy interface 1/1/1
Statistics for Policy My_Policy:
Interface 1/1/1,lag1 (in):
    Matched Packets  Configuration
10 class ip My_ip_Class
    0 10 match tcp any any ack count
    - 20 match udp any lt 8 any
    0 30 match icmp any 10.1.1.10 count
20 class ipv6 My_ipv6_Class action cir kbps 1000000 cbs 1000000 exceed
drop [ 0 kbps conform ]
    - 10 match tcp any any ack
    0 20 match icmpv6 1000::10 any count

```

Showing policy hit counts (statistics) for a policy applied on physical interfaces and LAGs:

```

switch# show policy hitcounts My_Policy interface 1/1/1
Statistics for Policy My_Policy:
Interface 1/1/1,lag1 (in):
    Matched Packets  Configuration
10 class ip My_ip_Class
    0 10 match tcp any any ack count
    - 20 match udp any lt 8 any
    0 30 match icmp any 10.1.1.10 count

```

```

20 class ipv6 My_ipv6_Class action cir kbps 1000000 cbs 1000000 exceed drop
    0 10 match tcp any any count [ 0 kbps conform ]
    0 20 match icmpv6 1000::10 any count [ 0 kbps conform ]

switch# show policy hitcounts My_Policy vlan 10
Statistics for Policy My_Policy:
vlan 10,20-30 (in):
    Matched Packets  Configuration
10 class ip My_ip_Class
    0 10 match tcp any any ack count
    - 20 match udp any lt 8 any
    0 30 match icmp any 10.1.1.10 count
20 class ipv6 My_ipv6_Class action cir kbps 1000000 cbs 1000000 exceed
drop [ 0 kbps conform ]
    - 10 match tcp any any ack
    0 20 match icmpv6 1000::10 any count

Statistics for Policy My_Policy:
vlan 10,20-30 (in):
    Matched Packets  Configuration
10 class ip My_ip_Class
    0 10 match tcp any any ack count
    - 20 match udp any lt 8 any
    0 30 match icmp any 10.1.1.10 count
20 class ipv6 My_ipv6_Class action cir kbps 1000000 cbs 1000000 exceed
drop [ 0 kbps conform ]
    - 10 match tcp any any ack
    0 20 match icmpv6 1000::10 any count

```

Showing policy hit counts (statistics) for a policy applied on VLANs:

```

switch# show policy hitcounts My_Policy vlan 30
Statistics for Policy My_Policy:
vlan 30 (in):
    Matched Packets  Configuration
10 class ip My_ip_Class
    0 10 match tcp any any ack count
    - 20 match udp any lt 8 any
    0 30 match icmp any 10.1.1.10 count
20 class ipv6 My_ipv6_Class action cir kbps 1000000 cbs 1000000 exceed drop
    0 10 match tcp any any count [ 0 kbps conform ]
    0 20 match icmpv6 1000::10 any count [ 0 kbps conform ]

switch# show policy hitcounts My_Policy interface vlan10
Statistics for Policy My_Policy:
VRF red
interface vlan 10,30 (routed-in):
    Matched Packets  Configuration

```

```

10 class ip My_ip_Class
    0 10 match tcp any any ack count
    - 20 match udp any lt 8 any
    0 30 match icmp any 10.1.1.10 count
20 class ipv6 My_ipv6_Class action cir kbps 1000000 cbs 1000000 exceed
drop [ 0 kbps conform ]
    - 10 match tcp any any ack
    0 20 match icmpv6 1000::10 any count
show policy hitcounts My_Policy vni 1000
Statistics for Policy My_Policy:
vni 1000 (routed-in):
    Matched Packets Configuration
10 class ip My_ip_Class
    0 10 match tcp any any ack count
    - 20 match udp any lt 8 any
    0 30 match icmp any 10.1.1.10 count
20 class ipv6 My_ipv6_Class action cir kbps 1000000 cbs 1000000 exceed drop
    0 10 match tcp any any count [ 0 kbps conform ]
    0 20 match icmpv6 1000::10 any count [ 0 kbps
conform ]show policy hitcounts My_Policy vni 1000
Statistics for Policy My_Policy:
vni 1000 (routed-in):
    Matched Packets Configuration
10 class ip My_ip_Class
    0 10 match tcp any any ack count
    - 20 match udp any lt 8 any
    0 30 match icmp any 10.1.1.10 count
20 class ipv6 My_ipv6_Class action cir kbps 1000000 cbs 1000000 exceed drop
    0 10 match tcp any any count [ 0 kbps conform ]
    0 20 match icmpv6 1000::10 any count [ 0 kbps conform ]

```

Showing policy hit counts (statistics) for a policy applied on interface VLANs:

```

switch# show policy hitcounts My_Policy interface vlan10
Statistics for Policy My_Policy:
VRF red
interface vlan 10 (routed-in):
    Matched Packets Configuration
10 class ip My_ip_Class
    0 10 match tcp any any ack count
    - 20 match udp any lt 8 any
    0 30 match icmp any 10.1.1.10 count
20 class ipv6 My_ipv6_Class action cir kbps 1000000 cbs 1000000 exceed drop
    0 10 match tcp any any count [ 0 kbps conform ]
    0 20 match icmpv6 1000::10 any count [ 0 kbps conform ]

```

```

switch# show policy hitcounts My_Policy vrf green routed-in
Statistics for Policy My_Policy:
VRF green
interface vlan 20,25 (routed-in):
    Matched Packets  Configuration
10 class ip My_ip_Class
    0 10 match tcp any any ack count
    - 20 match udp any lt 8 any
    0 30 match icmp any 10.1.1.10 count
20 class ipv6 My_ipv6_Class action cir kbps 1000000 cbs 1000000 exceed
drop [ 0 kbps conform ]
    - 10 match tcp any any ack
    0 20 match icmpv6 1000::10 any count

```

Showing policy hit counts (statistics) for a policy applied on interface VLANs for a specific VRF:

```

switch# show policy hitcounts My_Policy vrf red routed-in
Statistics for Policy My_Policy:
VRF red
interface vlan 10 (routed-in):
    Matched Packets  Configuration
10 class ip My_ip_Class
    0 10 match tcp any any ack count
    - 20 match udp any lt 8 any
    0 30 match icmp any 10.1.1.10 count
20 class ipv6 My_ipv6_Class action cir kbps 1000000 cbs 1000000 exceed drop
    0 10 match tcp any any count [ 0 kbps conform ]
    0 20 match icmpv6 1000::10 any count [ 0 kbps conform ]
Statistics for Policy My_Policy:
VRF red
interface vlan 10 (routed-in):
    Matched Packets  Configuration
10 class ip My_ip_Class
    0 10 match tcp any any ack count
    - 20 match udp any lt 8 any
    0 30 match icmp any 10.1.1.10 count
20 class ipv6 My_ipv6_Class action cir kbps 1000000 cbs 1000000 exceed drop
    0 10 match tcp any any count [ 0 kbps conform ]
    0 20 match icmpv6 1000::10 any count [ 0 kbps conform ]

```

Command History

Release	Modification
10.08	Added [per - interface] information. Updated examples.

Release	Modification
10.07 or earlier	- -


Command Information

Platforms	Command context	Authority
All platforms	Operator (>) or Manager (#)	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Classifier policies configuration example

This example configures traffic policing on:

- A 10-Gbit Ethernet of Switch A meeting the following requirements:
 - Police the rate of packets from the server to 102,400 kbps. Traffic 102,400 kbps or less is forwarded. The traffic more than 102,400 kbps is dropped.
 - Police the rate of packets from Host A to 25,600 kbps. Traffic 25,600 kbps or less is forwarded. The traffic more than 25,600 kbps is dropped.
- A 10-Gbit Ethernet 1/2/1 of Switch B limiting the incoming traffic rate of HTTP packets on 10-Gbit Ethernet 1/1/1 to the data rate of 204,800 kbps and dropping excess packets.

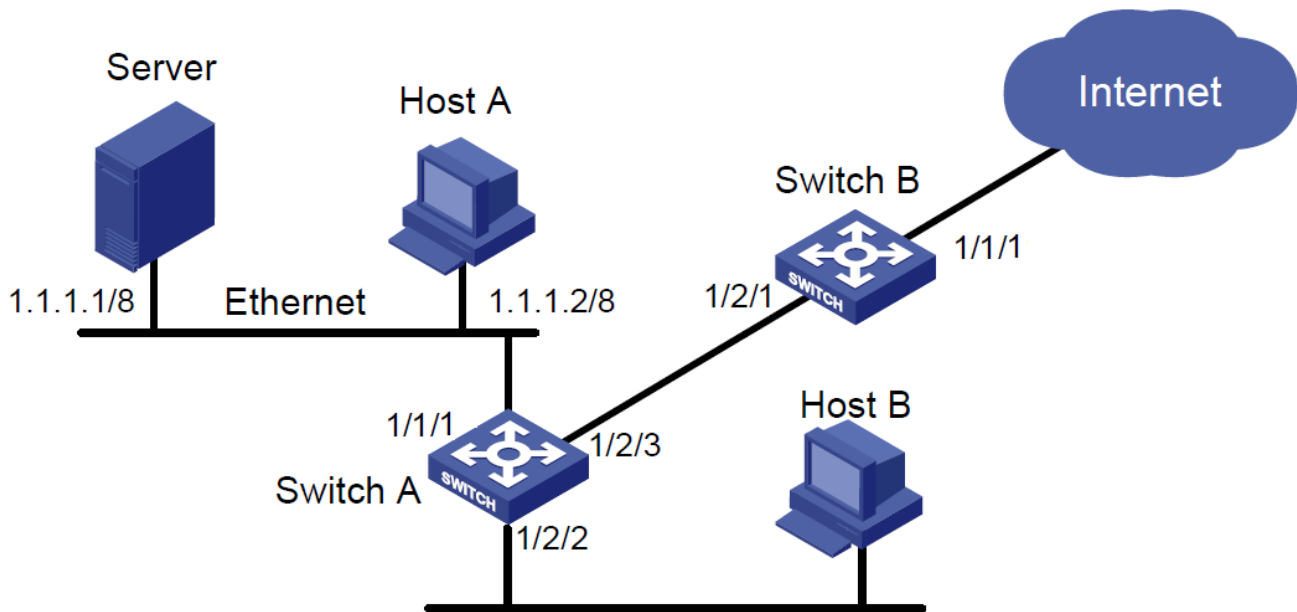

Subtopics

Configuring the classifier policies example

Configuring the classifier policies example

These steps are part of the classifier policies configuration example.

Procedure

1. Configure Switch A.

Create traffic classes named SERVER_TRAFFIC and HOST_A_TRAFFIC for matching the packets from the server and Host A:

```

switch# configure
switch(config)# class ip SERVER_TRAFFIC
switch(config-class-ip)# match any 1.1.1.1 any
switch(config-class-ip)# exit
switch(config)# class ip HOST_A_TRAFFIC
switch(config-class-ip)# match any 1.1.1.2 any
switch(config-class-ip)# exit

```

2. Create a classifier policy named RATE_LIMIT_POLICY:

```

switch(config)# policy RATE_LIMIT_POLICY

```

3. Configure the policy RATE_LIMIT_POLICY, so that 102,400 kbps of traffic, matching the class SERVER_TRAFFIC, is forwarded and the excess is dropped:

```
switch(config-policy)# class ip SERVER_TRAFFIC action cir kbps 102400  
exceed drop
```

4. Configure the policy RATE_LIMIT_POLICY so that 25,600 kbps of traffic, matching the class HOST_A_TRAFFIC, is forwarded and the excess is dropped:

```
switch(config-policy)# class ip HOST_A_TRAFFIC action cir kbps 25600  
exceed drop  
switch(config-policy)# exit
```

5. Apply RATE_LIMIT_POLICY to interface 1/1/1 for the inbound traffic:

```
switch(config)# int 1/1/1  
switch(config-if)# apply policy RATE_LIMIT_POLICY in  
switch(config-if)# exit
```

6. To view the configuration with the RATE_LIMIT_POLICY applied:

```
switch# show running-config  
Current configuration:  
!  
...  
class ip SERVER_TRAFFIC  
    10 match any 1.1.1.1 any  
class ip HOST_A_TRAFFIC  
    10 match any 1.1.1.2 any  
policy RATE_LIMIT_POLICY  
    10 class ip SERVER_TRAFFIC action cir kbps 102400 exceed drop  
    20 class ip HOST_A_TRAFFIC action cir kbps 25600 exceed drop  
interface 1/1/1  
    apply policy RATE_LIMIT_POLICY in
```

7. Configure Switch B.

Create a traffic class named HTTP_TRAFFIC and configure it to match traffic to port 80:

```
switch(config)# class ip HTTP_TRAFFIC  
switch(config-class-ip)# match tcp any any eq 80  
switch(config-class-ip)# exit
```

8. Create a classifier policy named RATE_LIMIT_HTTP:

```
switch(config)# policy RATE_LIMIT_HTTP
```

9. Configure the policy RATE_LIMIT_HTTP so that 204,800 kbps of traffic, matching the class HTTP_TRAFFIC, is forwarded and the excess is dropped:

```
switch(config-policy)# class ip HTTP_TRAFFIC action cir kbps 204800  
exceed drop  
switch(config-policy)# exit
```

10. Apply RATE_LIMIT_HTTP to interface 1/1/1 for inbound traffic:

```
switch(config)# int 1/1/1  
switch(config-if)# apply policy RATE_LIMIT_HTTP in  
switch(config-if)# exit
```

11. Show the running configuration with RATE_LIMIT_HTTP applied:

```
switch# show running-config  
Current configuration:  
!  
...  
class ip HTTP_TRAFFIC  
    10 match tcp any any eq 80  
policy RATE_LIMIT_HTTP  
    10 class ip HTTP_TRAFFIC action cir kbps 204800 exceed drop  
interface 1/1/1  
    apply policy RATE_LIMIT_HTTP in  
switch# show running-config  
Current configuration:  
!  
...  
class ip HTTP_TRAFFIC  
    10 match tcp any any eq 80  
policy RATE_LIMIT_HTTP  
    10 class ip HTTP_TRAFFIC action cir kbps 204800 exceed drop  
interface 1/1/1  
    apply policy RATE_LIMIT_HTTP in
```

ACL and Policy hardware resource considerations

Switches have finite (TCAM and other) hardware resources used in the application of ACLs and Classifier policies to packets being processed in switch hardware. ADC (analytics data collection) also consumes TCAM lookups. Take the considerations described in this chapter into account when deciding what ACL and classifier policy-related features to use at the same time.

Subtopics

Show Resources

TCAM resource consumption and lookups

Matching precedence order

Policer Action Considerations and Limitations

L4 port ranges

ACL and Policy hardware resource commands

Show Resources

The **show resources** command allows users to see hardware resource consumption in the switch.

These hardware resources include the following:

- TCAM entries
- Policers
- High-Capacity TCAM entries

On the 4100i, 6000, 6100, 8320, 8325, and 8360 switch series, these resources are reported for the entire switch. On the 9300 switch series, resources are reported per pipe. The 9300 switch series has four pipes and the 9300s and 10040 switch series has two pipes.

The usage of high capacity TCAM can be viewed specifically using **show system high-capacity-tcam**. This command displays the feature that is currently configured, pending configuration, and the default feature present in high capacity TCAM.

Subtopics

Event Logs

Limitations and exclusions

Event Logs

The following event logs are displayed when the TCAM runs out of resources:

Daemon	Event ID	Severity	Message
ops - switchd	10214	ERROR	TCAM Context Group selectors have been exhausted

Daemon	Event ID	Severity	Message
ops - switchd	10215	ERROR	TCAM Context Group IDs have been exhausted
ops - switchd	10216	ERROR	Policer resources have been exhausted
ops - switchd	10217	ERROR	TCAM entries have been exhausted
ops - switchd	10218	ERROR	TCAM tables have been exhausted
ops - switchd	10219	ERROR	TCAM ranges have been exhausted
ops - switchd	10220	ERROR	TCAM counters have been exhausted

Limitations and exclusions

On the 4100i, 6000, 6100, 8320, 8325, and 8400X switch series, resources utilized by the CoPP Lookup are created by default when the system is booted. These entries show up in the used column and may not directly correspond to configured entries.

Resources reserved for one lookup cannot be shared or used by other lookups.

TCAM resource consumption and lookups

TCAM entries and lookups are consumed by features that deal with the classification of packets using the TCAM. TCAM lookups are a finite hardware resource used in the application of ACLs and policies to packets processed in switch hardware. ADC (analytics data collection) also consumes TCAM lookups. A switch can support a limited number of ACL and policy features at the same time. Use the command **show resources** to monitor TCAM resources and lookups.

Certain platforms have additional resources that features may consume, such as L4 port range checkers, context group selectors, policers, and counters. Different platforms consume these resources at different

rates. There are a limited number of features that use TCAM that can be enabled simultaneously on the same line card.

**NOTE**

In the following TCAM lookup lists, **IP** means both IPv4 and IPv6.

TCAM lookup behaviors vary by switch type.

Subtopics

For the 8320 Switch series:

For the 8325 and 10000 Switch series:

For the 9300/9300S and 10040 Switch series:

For the 8320 Switch series:

A slice is the unit of TCAM resource allocation for features. Some features may require multiple slices as designated by their width. Furthermore, slices can be used for additional entries for a previously configured feature. There are twelve slices available to use for ingress features.

In the ingress TCAM, slices are organized into clusters or rows, which can be visualized as follows:

Figure 1. 8320 switch series slices

Cluster-0 (2048)	Slice 0	Slice 1
Cluster-1 (2048)	Slice 2	Slice 3
Cluster-2 (1024)	Slice 4	Slice 5
Cluster-3 (1024)	Slice 6	Slice 7
Cluster-4 (1024)	Slice 8	Slice 9
Cluster-5 (1024)	Slice 10	Slice11

In [Figure: 8320 switch series slices](#), Clusters 0 and 1 have twice as many TCAM entries as clusters 2-5.

One ingress TCAM feature is always installed at switch boot for CoPP and CPU-RX. The entries for this feature are double width and always occupy two slices in a cluster that only has 1024 entries per slice.

A feature will initially reserve the minimum number of slices required by the feature's width. The slices must reside within the same cluster. If the required number of slices cannot be reserved within the same cluster for a double-width feature, it will fail to install. Large slices (in clusters 0 or 1) are allocated to user-configured

features first as they have more TCAM entries per slice at 2048. Small slices (in clusters 2-5) have 1024 TCAM entries each.

The following features use one slice when enabled:

- Ingress IPv4 Analytics Data Collection (ADC)
- Ingress IPv4 VSX
- Ingress L3 RX Statistics
- Ingress Port IPv4 ACL
- Ingress Port MAC ACL
- Ingress routed Port Policy with IPv4 classes
- Ingress Routed VLAN IPv4 ACL
- Ingress Routed VLAN Policy with IPv4 classes
- Ingress VLAN IPv4 ACL
- Ingress VLAN MAC ACL

The following features use two slices when enabled:

- Ingress Control Plane Policing (installed by default)
- Ingress Global Policy with IPv4 and/or MAC classes
- Ingress Global Policy with IPv6 classes
- Ingress IP Lockdown IPv4
- Ingress IP Lockdown IPv6
- Ingress IPv6 Analytics Data Collection (ADC)
- Ingress IPv6 VSX
- Ingress Port IPv6 ACL
- Ingress Port Policy with IPv4 and/or MAC classes
- Ingress Port Policy with IPv6 classes
- Ingress Routed Port Policy with IPv6 classes
- Ingress Routed VLAN IPv6 ACL
- Ingress Routed VLAN Policy with IPv6 classes
- Ingress VLAN IPv6 ACL

- Ingress VLAN Policy with IPv4 and/or MAC classes
- Ingress VLAN Policy with IPv6 classes

In the following example configuration, there is an IPv4 port ACL already installed in slice 0, a double-width feature cannot reserve slice 1 and slice 2 because they are in different clusters. Instead, the double width feature, in this case, an IPv6 port ACL, could reserve slices 2 and 3 in the TCAM as illustrated by [Figure: Double width feature](#).

```
access-list ip test
  10 deny any any any
  20 deny any any any
  30 deny any any any
access-list ipv6 v6_acl
  10 deny any any any
  20 deny any any any
interface 1/1/1
  apply access-list ip test in
interface 1/1/2
  apply access-list ipv6 v6_acl in
```

Figure 2. Double width feature

Cluster-0 (2048)	v4PACL	Slice 1
Cluster-1 (2048)	v6PACL	v6PACL
Cluster-2 (1024)	Slice 4	Slice 5
Cluster-3 (1024)	Slice 6	Slice 7
Cluster-4 (1024)	Slice 8	Slice 9
Cluster-5 (1024)	*CoPP*	*CoPP*

However, if enough entries in one feature are configured to exhaust the initial reservation, an attempt to reserve more slices occurs. In this configuration, too many IPv6 Port ACL entries have been configured to fit in to slices 2 and 3. Because IPv6 Port ACL is a double-width feature, the TCAM reserves another two slices. [Figure: Double width feature reservation](#) displays an example of this TCAM.

```

access-list ip test
  10 deny any any any
access-list ipv6 v6_acl
  10 deny any any any
  20 deny any any any
  ...
  20480 deny any any any
  20490 deny any any any
  20500 deny any any any
interface 1/1/1
  apply access-list ip test in
interface 1/1/2
  apply access_list ipv6 v6_acl in

```

Figure 3. Double width feature reservation

Cluster-0 (2048)	IPv4 Port ACL	Slice 1
Cluster-1 (2048)	IPv6 Port ACL	IPv6 Port ACL
Cluster-2 (1024)	IPv6 Port ACL	IPv6 Port ACL
Cluster-3 (1024)	Slice 6	Slice 7
Cluster-4 (1024)	Slice 8	Slice 9
Cluster-5 (1024)	*CoPP*	*CoPP*

The following configuration is an example of when **show resources** displays that there are available TCAM entries due to Slice 1 being free. However, these available resources cannot be utilized by a double-width feature. Neither a previously installed feature, such as IPv6 Port ACLs, nor a double-width feature, such as VLAN Policy with IPv6 classes, can use these available resources. Only a single-width feature can utilize them. Expanding the resources used by IPv4 Port ACLs or adding a new single-width feature are eligible uses of the available TCAM entries. [Figure: Free slice usage](#) displays an example of this TCAM.

```

access-list ip test
  10 deny any any any
access-list ipv6 v6_acl

```

```

10 deny any any any
20 deny any any any
...
20480 deny any any any
20490 deny any any any
20500 deny any any any
access-list ipv6 small_v6_acl
10 deny any any any
20 deny any any any
class ip c
10 match any any any
policy p
10 class ip c action drop
vlan 100
    apply access-list ipv6 small_v6_acl in
interface 1/1/1
    apply access-list ip test in
interface 1/1/2
    apply access_list ipv6 v6_acl in
interface 1/1/3
    apply policy p in

```

Figure 4. Free slice usage

Cluster-0 (2048)	IPv4 Port ACL	Slice 1
Cluster-1 (2048)	IPv6 Port ACL	IPv6 Port ACL
Cluster-2 (1024)	IPv6 Port ACL	IPv6 Port ACL
Cluster-3 (1024)	MAC+IPv4 Port Policy	MAC+IPv4 Port Policy
Cluster-4 (1024)	IPv6 VLAN ACL	IPv6 VLAN ACL
Cluster-5 (1024)	*CoPP*	*CoPP*

Subtopics


Egress TCAM

Egress TCAM

There are four slices of 256 entries each that are available on egress for features that use one or two slices each. However, the egress CoPP feature always consumes two of these slices. As a result, only two slices are free and applying both IPv4 and IPv6 ACLs on egress or routed-egress at the same time is not permitted.

The egress TCAM only has one cluster of four slices as illustrated in [Figure: Egress TCAM](#).

Figure 1. Egress TCAM

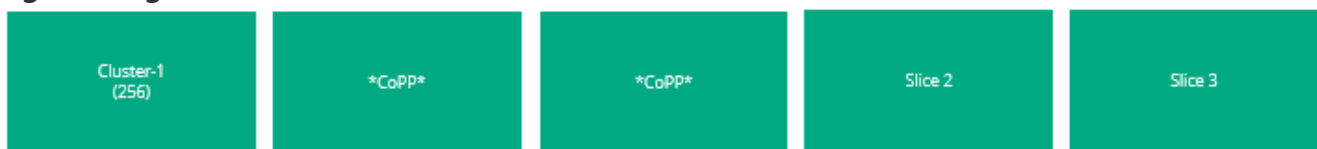

These egress features use one slice each:

- Egress Port IPv4 ACL
- Egress Routed VLAN IPv4 ACL
- Egress VLAN IPv4 ACL
- Egress L3 TX statistics

These egress features use two slices each:

- Egress Routed VLAN IPv6 ACL
- Egress VLAN IPv6 ACL

The egress TCAM consumes resources similarly to the ingress TCAM. However, only two slices are available for user configured features. This means that a user could configure one double-width feature, two single-width features, or one single-width feature that requires enough resources to expand to a second slice.

For the 8325 and 10000 Switch series:

A slice is the unit of TCAM resource allocation for features. Some features may require multiple slices as designated by their width. Furthermore, slices can be used for additional entries for a previously configured feature. There are twelve slices of 768 entries each which are available to use for ingress features.

In the ingress TCAM, slices are organized into clusters or rows, as illustrated in [Figure: TCAM slices](#).

Figure 1. TCAM slices

Cluster-0 (768)	Slice 0	Slice 1	Slice 2
Cluster-1 (768)	Slice 3	Slice 4	Slice 5
Cluster-2 (768)	Slice 6	Slice 7	Slice 8
Cluster-3 (768)	Slice 9	Slice 10	Slice 11

One ingress TCAM feature is always installed at switch boot for CoPP and CPU-RX. The entries for this feature are triple width, so CoPP consumes three slices. For example, if slices 0, 1 and 2 are used for CoPP, there are nine remaining slices to allocate to ingress features.

A feature initially reserves the minimum number of slices required by the feature's width. The slices must reside within the same cluster. If the required number of slices cannot be reserved within the same cluster for a double or triple-width feature, it fails to install.

The following features use one slice when enabled:

- Ingress IPv4 and/or IPv6 VSX*
- Ingress VLAN MAC ACL
- Ingress VXLAN Relay

The following features use two slices when enabled:

- Ingress L3 RX Statistics
- Ingress Port MAC ACL

The following features use three slices when enabled. Features denoted by an * can share ingress TCAM slices if they are IPv4 and IPv6 features of the same application type. In the **show resources** output, they display as separate features with an * in the Reserved entries column to denote that an IPv4 and an IPv6 feature of the same application type are sharing TCAM slices.

- Ingress Control Plane Policing (installed by default)
- Ingress Global Policy with IPv4 and/or MAC classes
- Ingress Global Policy with IPv6 classes
- Ingress IPv4 and/or IPv6 Analytics Data Collection (ADC)*
- Ingress IPv4 IP Lockdown


- Ingress IPv6 IP Lockdown
- Ingress PAC Policy
- Ingress Port IPv4 and/or IPv6 ACL*
- Ingress Port Policy with IPv4 and/or MAC classes
- Ingress Port Policy with IPv6 classes
- Ingress Routed Port Policy with IPv4 and/or IPv6 classes*
- Ingress Routed VLAN IPv4 and/or IPv6 ACL*
- Ingress Routed VLAN Policy with IPv4 and/or IPv6 classes*
- Ingress VLAN IPv4 and/or IPv6 ACL*
- Ingress VLAN Policy with IPv4 and/or MAC classes
- Ingress VLAN Policy with IPv6 classes

For example, if there is a configuration with a MAC port ACL already installed in slices 3 and 4, a new triple-width feature cannot reserve slices 5, 6, and 7 because they are not in the same cluster. Instead, the new triple-width feature can reserve slices 6, 7, and 8 in the TCAM.

```
access-list mac test
  10 deny any any any
  20 deny any any any
  30 deny any any any
access-list ip v4_acl
  10 deny any any any
  20 deny any any any
access-list ipv6 v6_acl
  10 deny any any any
  20 deny any any any
interface 1/1/1
  apply access-list mac test in
interface 1/1/2
  apply access-list ip v4_acl in
interface 1/1/3
  apply access-list ipv6 v6_acl in
```

This can be seen in [Figure: Triple width features](#).

Figure 2. Triple width features

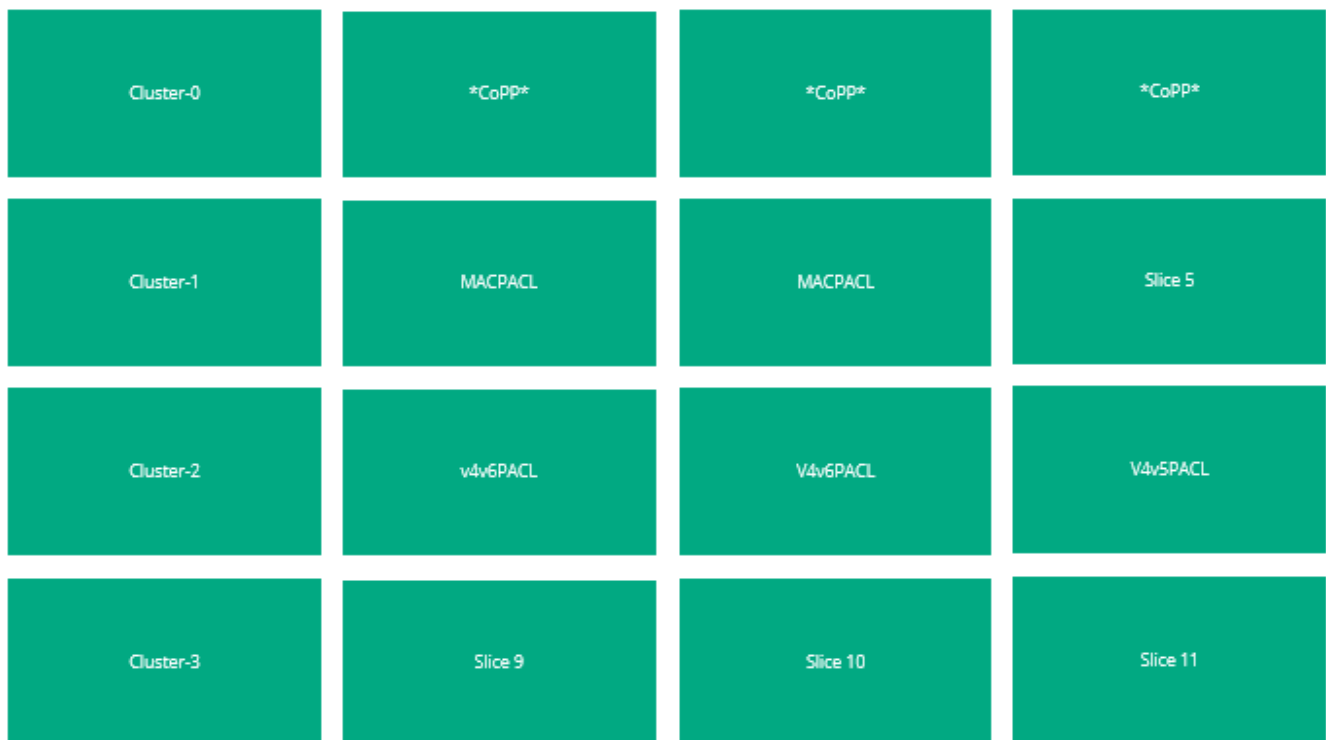

In this configuration, the output from **show resources** is as follows:

```
8325(config)# show resources
```

```
Resource Usage:
```

```
Mod  Description
```

	Resource	Width	Used	Reserved	Free

1/1	Ingress MAC Port ACL				
	Ingress TCAM Entries	2	8	1536	
	Ingress IPv4 Port ACL				
	Ingress TCAM Entries	3	9	2304	
	Ingress IPv6 Port ACL				
	Ingress TCAM Entries	3	9	*	
	Ingress Control Plane Policing				
	Ingress TCAM Entries	3	408	2304	
	Egress Control Plane Policing				
	Egress TCAM Entries	2	96	1024	
	Pre Ingress Control Plane Policing				
	Total				
	Ingress TCAM Entries		434	6144	3072
	Egress TCAM Entries		96	1024	1024

Policers	0	6144
Ingress L4 Port Ranges	0	32



NOTE

In this example configuration, the * in the Reserved column of the Ingress IPv6 Port ACL feature denotes that this feature is sharing reserved slices with the preceding feature, Ingress IPv4 Port ACL.

However, once enough entries are configured in one feature to exhaust its initial reserved entries, an attempt to reserve more slices occurs.

```
access-list mac test
  10 deny any any any
  20 deny any any any
  ...
  7700 deny any any any
access-list ip v4_acl
  10 deny any any any
  20 deny any any any
access-list ipv6 v6_acl
  10 deny any any any
  20 deny any any any
interface 1/1/1
  apply access-list mac test in
interface 1/1/2
  apply access-list ip v4_acl in
interface 1/1/3
  apply access-list ipv6 v6_acl in
```

In this scenario, too many MAC Port ACL entries have been configured to fit in slices 3 and 4. Since MAC Port ACL is a double-width feature, the TCAM reserves another two slices as shown in [Figure: TCAM slice reservation](#)

Figure 3. TCAM slice reservation

Cluster-0	*CoPP*	*CoPP*	*CoPP*
Cluster-1	MACPACL	MACPACL	Slice 5
Cluster-2	v4v6PACL	V4v6PACL	V4v5PACL
Cluster-3	MACPACL	MACPACL	Slice 11

With this configuration, the **show resources** output is as follows:

```
8325(config)# show resources
```

Resource Usage:

Mod	Description	Width	Used	Reserved	Free

--					
1/1	Ingress MAC Port ACL				
	Ingress TCAM Entries	2	1542	3072	
	Ingress IPv4 Port ACL				
	Ingress TCAM Entries	3	9	2304	
	Ingress IPv6 Port ACL				
	Ingress TCAM Entries	3	9	*	
	Ingress Control Plane Policing				
	Ingress TCAM Entries	3	408	2304	
	Egress Control Plane Policing				
	Egress TCAM Entries	2	96	1024	
	Pre Ingress Control Plane Policing				
	Total				
	Ingress TCAM Entries		1959	7680	1536
	Egress TCAM Entries		96	1024	1024
	Policers		0		6144
	Ingress L4 Port Ranges		0		32

Although there are 1536 Free Ingress TCAM Entries, there are only two single-width slices available. Only features that are single-width on these platforms can install successfully. Any non-single-width features that the user attempts to configure or expand fail as there are no consecutive free slices available within a single cluster.

Subtopics


Egress TCAM

Egress TCAM

There are four total slices with 512 entries each which are available on egress for the features listed below. However, the egress CoPP feature always consumes two of these slices. Since only two slices are free, applying both IPv4 and IPv6 ACLs in the egress direction at the same time is not permitted.

The egress TCAM has only one cluster of four slices as shown in [Figure: Egress TCAM on the 8325 and 10000 switch series](#).

Figure 1. Egress TCAM on the 8325 and 10000 switch series

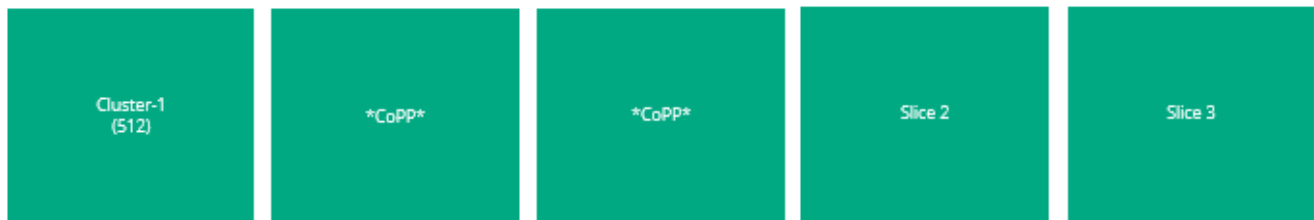

Egress features that use one slice:

- Egress Routed Port IPv4 ACL
- Egress Routed VLAN IPv4 ACL
- Egress VLAN IPv4 ACL
- Egress L3 TX Statistics

Egress features that use two slices:

- Egress VLAN IPv6 ACL
- Egress Routed VLAN IPv6 ACL

The egress TCAM consumes resources similarly to the ingress TCAM. However, only two slices are available for user configured features. This means that one double-width feature, two single-width features, or one single-width feature that requires enough resources to expand to a second slice can be configured.

For the 9300/9300S and 10040 Switch series:

A **slice** is the unit of TCAM resource allocation for features. Some features may require multiple slices as designated by their width. Furthermore, a switch can use slices for additional entries for a previously configured feature. There are twelve slices available to use for ingress features. These are grouped into three rows of four slices each, with each row defined as a cluster.

For the 9300 switch series, the slices are 2048 entries each. This is displayed in [GUID-2AE6F40D-168D-44E3-A7E7-C39AFB9BA723.html#GUID-2AE6F40D-168D-44E3-A7E7-C39AFB9BA723_FIG_D65E1_D66E1_D67E1_D68E1_D69E1_D70E1_1E010F97565C4046A33D2804C37DBDFA](#).

Figure 1. TCAM slices on the 9300 switch series



For the 9300S and 10040 switch series, slices in Cluster-0 have 2048 entries each and the slices in Cluster-1 and Cluster-2 have 1024 entries each. This is displayed in [GUID-2AE6F40D-168D-44E3-A7E7-C39AFB9BA723.html#GUID-2AE6F40D-168D-44E3-A7E7-C39AFB9BA723_FIG_D72E1_D73E1_D74E1_D75E1_D76E1_D77E1_C2B3B9312DE647099318703A4A8BOB2D](#).

Figure 2. TCAM slices on the 9300S switch series



CoPP and **CPU-RX** always add entries to the TCAM table at switch boot. The entries in this table are of a triple width, and always occupy slices **0**, **1**, and **2**. As a result, the switch has nine remaining slices to allocate to ingress features.

A feature initially reserves the minimum number of slices required by the width of the feature. The slices must be adjacent to one another and reside within the same cluster. If the feature cannot reserve the required number of slices within the same cluster for a feature that has a width of double or greater, it fails to install. These platforms also divide physical interfaces, such as ports, into multiple pipes. Each pipe has independent TCAM resources. For the 9300 switch series, there are four pipes across which the port interfaces are spread. For the 9300s switch series, there are two pipes across which the port interfaces are spread. Applications that could be present on any port, such as VLAN applications, are applied to all pipes. Run **show resources** to display which port interfaces are part of each pipe. The following is an example of the **show resources** output displaying port interfaces and pipes on the 9300 switch series:

```
9300# show resources
Resource Usage:
Mod   Description
Resource                                Width    Used Reserved    Free
-----
--
1/1   Global
      Total
      Destination Field Processor Entries          0         0    1024
1/1-0 Ports 9-12,21-24
      Ingress Control Plane Policing
      Ingress TCAM Entries          3     420     6144
      Total
      Ingress TCAM Entries          420     6144    18432
      Egress TCAM Entries           0         0    2048
      VLAN Field Processor Entries          0         0    1024
1/1-1 Ports 1-8
      Ingress Control Plane Policing
      Ingress TCAM Entries          3     420     6144
      Total
      Ingress TCAM Entries          420     6144    18432
      Egress TCAM Entries           0         0    2048
      VLAN Field Processor Entries          0         0    1024
1/1-2 Ports 13-20
      Ingress Control Plane Policing
      Ingress TCAM Entries          3     420     6144
      Total
      Ingress TCAM Entries          420     6144    18432
      Egress TCAM Entries           0         0    2048
      VLAN Field Processor Entries          0         0    1024
1/1-3 Ports 25-32
      Ingress Control Plane Policing
      Ingress TCAM Entries          3     420     6144
      Total
      Ingress TCAM Entries          420     6144    18432
```

Egress TCAM Entries	0	0	2048
VLAN Field Processor Entries	0	0	1024

The following is an example of the **show resources** output displaying port interfaces and pipes on the 9300S switch series:

```
9300s# show resources
Resource Usage:
Mod   Description
      Resource                               Width   Used Reserved   Free
-----
--
1/1   Global
      Total
      Destination Field Processor Entries      0         0    1024
1/1-0 Ports 1-20
      Ingress Control Plane Policing
      Ingress TCAM Entries                    3     420     6144
      Total
      Ingress TCAM Entries                    420     6144    10240
      Egress TCAM Entries                     0         0    2048
      VLAN Field Processor Entries             0         0    1024
1/1-1 Ports 21-40
      Ingress Control Plane Policing
      Ingress TCAM Entries                    3     420     6144
      Total
      Ingress TCAM Entries                    420     6144    10240
      Egress TCAM Entries                     0         0    2048
      VLAN Field Processor Entries             0         0    1024
```

In the outputs above, the number following **1/1-** is the pipe number. In the example for the 9300S switch series, pipe **0** contains port interfaces 1-20.

Each of the following features uses three slices when enabled. No more than two of these features can be configured at the same time. Ingress Control Plane Policing does not count towards the two features that may be configured.

- Ingress Control Plane Policing (installed by default)
- Ingress Global Policy with IPv4 and/or MAC classes
- Ingress Global Policy with IPv6 classes
- Ingress IPv6 Lockdown
- Ingress Port IPv6 ACL
- Ingress Port Policy with IPv4 and/or MAC classes
- Ingress Port Policy with IPv6 classes

- Ingress Routed Port Policy with IPv4 and/or IPv6 classes
- Ingress Routed VLAN IPv6 ACL
- Ingress Routed VLAN Policy with IPv4 and/or IPv6 classes
- Ingress VLAN IPv6 ACL
- Ingress VLAN Policy with IPv4 and/or MAC classes
- Ingress VLAN Policy with IPv6 classes

Each of the following features uses two slices when enabled. No more than four of the listed features can be configured at the same time.

- Ingress IPv4 IP Lockdown
- Ingress Port IPv4 ACL
- Ingress VLAN IPv4 ACL
- Ingress Routed VLAN IPv4 ACL
- Ingress IPv4 Analytics Data Collection (ADC)
- Ingress IPv6 Analytics Data Collection (ADC)

Each of the following features uses one slice when enabled. No more than nine of the listed features can be configured at the same time.

- Bidirectional Forwarding Detection (BFD)
- Ingress ARP VSX
- Ingress IPv4 VSX
- Ingress IPv6 VSX
- Ingress Port MAC ACL
- Ingress VLAN MAC ACL

Multiple width features must span slices in the same cluster. In this configuration and in [GUID-2AE6F40D-168D-44E3-A7E7-C39AFB9BA723.html#GUID-2AE6F40D-168D-44E3-A7E7-C39AFB9BA723_FIG_D79E1_D80E1_D81E1_D82E1_D83E1_D84E1_EB753F3C9E49412BA8A2DCF3B205E4B8](#), IPv4 Port ACLs has a width of 2, so it must use slices in cluster 1 or 2 since cluster 0 only has one slice available. Only a feature with a width of 1 can use slice 3. IPv4 Port ACLs could technically consume slice 6 and 7 instead of 4 and 5. Similarly, slices 8 and 9, 9 and 10, or 10 and 11 in cluster 2 also satisfy the requirement that a feature's slices be adjacent to one another and reside in the same cluster.

```
access-list ip test
  10 deny any any any
  20 deny any any any
```

```

30 deny any any
interface 1/1/1
  apply access-list ip test in

```

Figure 3. Double width features on the 9300 switch series



In the following **show resources** output, only one of the pipes has consumed TCAM resources associated with the IPv4 Port ACL.

```

9300# show resources
Resource Usage:
Mod   Description
Resource                                Width    Used Reserved    Free
-----
--
1/1   Global
      Total
      Destination Field Processor Entries          0         0    1024
1/1-0 Ports 9-12,21-24
      Ingress Control Plane Policing
      Ingress TCAM Entries              3      420     6144
      Total
      Ingress TCAM Entries                420     6144    18432
      Egress TCAM Entries                  0         0     2048
      VLAN Field Processor Entries          0         0     1024
1/1-1 Ports 1-8
      Ingress IPv4 Port ACL

```

```

    Ingress TCAM Entries          2      10      4096
Ingress Control Plane Policing
    Ingress TCAM Entries          3     420      6144
    Total
    Ingress TCAM Entries          420    10240    14336
    Egress TCAM Entries           0         0     2048
    VLAN Field Processor Entries   0         0     1024
1/1-2 Ports 13-20
    Ingress Control Plane Policing
    Ingress TCAM Entries          3     420      6144
    Total
    Ingress TCAM Entries          420    6144    18432
    Egress TCAM Entries           0         0     2048
    VLAN Field Processor Entries   0         0     1024
1/1-3 Ports 25-32
    Ingress Control Plane Policing
    Ingress TCAM Entries          3     420      6144
    Total
    Ingress TCAM Entries          420    6144    18432
    Egress TCAM Entries           0         0     2048
    VLAN Field Processor Entries   0         0     1024

```

9300s# **show resources**

Resource Usage:

Mod Description

Resource	Width	Used	Reserved	Free

--				
1/1 Global				
Total				
Destination Field Processor Entries		0	0	1024
1/1-0 Ports 1-20				
Ingress IPv4 Port ACL				
Ingress TCAM Entries	2	10	2048	
Ingress Control Plane Policing				
Ingress TCAM Entries	3	420	6144	
Total				
Ingress TCAM Entries		430	8192	8192
Egress TCAM Entries		0	0	2048
VLAN Field Processor Entries		0	0	1024
1/1-1 Ports 21-40				
Ingress Control Plane Policing				
Ingress TCAM Entries	3	420	6144	
Total				

Ingress TCAM Entries	420	6144	10240
Egress TCAM Entries	0	0	2048
VLAN Field Processor Entries	0	0	1024

```

access-list ip my_ip_acl
  10 permit any any any
class ipv6 test
  10 match any any any
policy p
  10 class ipv6 test action drop
vlan 100
  apply access-list ip my_ip_acl in
interface 1/1/1
  apply policy p in

```

Figure 4. Ingress TCAM on Pipe with interface 1/1/1



Figure 5. Ingress TCAM on Pipe without interface 1/1/1



In this example, an IPv4 ACL has been applied to a VLAN. This application consumes resources on all Pipes as VLANs exist across all Pipes on a switch. Additionally, there is a Policy with an IPv6 class applied to interface 1/1/1. The interface 1/1/1 only exists on a single Pipe, so the TCAM resources only need to

be allocated for the TCAM on that Pipe. This results in **show resources** reporting that less ingress TCAM entries are free for the Pipe with interface 1/1/1 than for other Pipe(s) that do not have the interface 1/1/1.

```
9300# show resources
```

```
Resource Usage:
```

```
Mod   Description
```

	Resource	Width	Used	Reserved	Free

1/1	Global				
	Total				
	Destination Field Processor Entries		0	0	1023
1/1-0	Ports 9-12,21-24				
	Ingress IPv4 VLAN ACL				
	Ingress TCAM Entries	2	12	4096	
	Ingress Control Plane Policing				
	Ingress TCAM Entries	3	420	6144	
	Total				
	Ingress TCAM Entries		432	10240	14336
	Egress TCAM Entries		0	0	2048
	VLAN Field Processor Entries		0	0	1024
1/1-1	Ports 1-8				
	Ingress IPv4 VLAN ACL				
	Ingress TCAM Entries	2	12	4096	
	Ingress IPv6 Port Policy				
	Ingress TCAM Entries	3	6	6144	
	Ingress Control Plane Policing				
	Ingress TCAM Entries	3	420	6144	
	Total				
	Ingress TCAM Entries		438	16384	8192
	Egress TCAM Entries		0	0	2048
	VLAN Field Processor Entries		0	0	1024
1/1-2	Ports 13-20				
	Ingress IPv4 VLAN ACL				
	Ingress TCAM Entries	2	12	4096	
	Ingress Control Plane Policing				
	Ingress TCAM Entries	3	420	6144	
	Total				
	Ingress TCAM Entries		432	10240	14336
	Egress TCAM Entries		0	0	2048
	VLAN Field Processor Entries		0	0	1024
1/1-3	Ports 25-32				
	Ingress IPv4 VLAN ACL				
	Ingress TCAM Entries	2	12	4096	

Ingress Control Plane Policing				
Ingress TCAM Entries	3	420	6144	
Total				
Ingress TCAM Entries		432	10240	14336
Egress TCAM Entries		0	0	2048
VLAN Field Processor Entries		0	0	1024
9300s# show resources				
Resource Usage:				
Mod	Description			
	Resource	Width	Used	Reserved Free

--				
1/1	Global			
	Total			
	Destination Field Processor Entries		0	0 1023
1/1-0	Ports 1-20			
	Ingress IPv4 Port ACL			
	Ingress TCAM Entries	2	12	2048
	Ingress IPv6 Port Policy			
	Ingress TCAM Entries	3	6	3072
	Ingress Control Plane Policing			
	Ingress TCAM Entries	3	420	6144
	Total			
	Ingress TCAM Entries		438	11264 5120
	Egress TCAM Entries		0	0 2048
	VLAN Field Processor Entries		0	0 1024
1/1-1	Ports 21-40			
	Ingress IPv4 VLAN ACL			
	Ingress TCAM Entries	2	12	2048
	Ingress Control Plane Policing			
	Ingress TCAM Entries	3	420	6144
	Total			
	Ingress TCAM Entries		430	8192 8192
	Egress TCAM Entries		0	0 2048
	VLAN Field Processor Entries		0	0 1024

In this configuration, attempts to apply an IPv6 ACL to a VLAN fail because not all Pipes have three adjacent slices available in the same cluster. However, if the user instead attempts to apply the IPv6 ACL to a port that is not on the same Pipe as 1/1/1, the application succeeds, as other Pipes do have three adjacent slices available in the same cluster.

Subtopics

Egress TCAM

Egress TCAM

There are four slices in one cluster, each of which have 512 entries that are available for egress features. This is displayed in [Figure: Egress TCAM on a 9300 or 10040 switch series](#).

Figure 1. Egress TCAM on a 9300 or 10040 switch series



The following egress features use three slices when enabled:

- Egress Port IPv6 ACL
- Egress VLAN IPv6 ACL
- Egress Routed VLAN IPv6 ACL
- Egress Port IPv6 Policy
- Egress VLAN IPv6 Policy

The following egress features use two slices when enable:

- Egress Port IPv4+MAC Policy
- Egress VLAN IPv4+MAC Policy

The following egress features use one slice when enabled:

- Egress Port IPv4 ACL
- Egress Port MAC ACL
- Egress VLAN IPv4 ACL
- Egress Routed VLAN IPv4 ACL
- Egress VLAN MAC ACL

The egress TCAM consumes resources similarly to the ingress TCAM. The egress TCAM also has independent resources for each Pipe.

There are further restrictions as it relates to egress features. You may configure a maximum of one policy feature at a time and a maximum of two total egress features at a time.

Examples of valid combinations of configured egress features include:

- Egress VLAN IPv4 ACL

- Egress Port IPv4+MAC Policy
- Egress Port IPv4 ACL
- Egress Port IPv6 ACL

Examples of invalid combinations of configured egress features include:

- Egress Port IPv4+MAC Policy
- Egress VLAN IPv4+MAC Policy
- Egress Port IPv4 ACL
- Egress Port MAC ACL
- Egress VLAN MAC ACL

Matching precedence order

When a packet is matched by multiple TCAM Lookups with the same action, a precedence order is followed.

For example, if a packet matches feature 1 with an action to change DSCP to **x** and a feature 2 with an action to change DSCP to **y**, the feature 2 action takes precedence and DSCP of the packet will change to **y** (given that the precedence of feature 2 is greater than that of feature 1). Count-related exception: If a packet matches an IPv4 ACL, a MAC ACL, and a policy with count actions, all the counters increment. Regardless of precedence, if a packet is to be dropped by a configured feature, it will be dropped. Ingress packets do not take precedence over egress packets nor do egress packets take precedence over ingress packets.

The egress TCAM can only increment one counter for the ACLs or policies applied on egress. Only the counter with the highest precedence increments.

The precedence order from highest to lowest is as follows:

```
Ingress Port IPv6 ACL
Ingress Routed VLAN IPv6 ACL
Ingress VLAN IPv6 ACL
Ingress Port IPv4 ACL
Ingress Routed VLAN IPv4 ACL
Ingress VLAN IPv4 ACL
Ingress Port MAC ACL
Ingress VLAN MAC ACL
Ingress IPv6 Analytics Data Collection (ADC)
Ingress IPv4 Analytics Data Collection (ADC)
Ingress Port Policy with IPv6 classes
Ingress Port Policy with IPv4 and/or MAC classes
Ingress VLAN Policy with IPv6 classes
```

```
Ingress VLAN Policy with IPv4 and/or MAC classes
Ingress Global Policy with IPv6 classes
Ingress Global Policy with IPv4 and/or MAC classes
IPv6 Control Plane Policing
IPv4 Control Plane Policing
MAC Control Plane Policing
Ingress Control Plane Policing
Ingress Routed Port IPv6 Policy
Ingress Routed Port IPv4 Policy
Ingress Routed VLAN IPv6 Policy
Ingress Routed VLAN IPv4 Policy
Ingress L3 Statistics
Ingress IPv6 VSX
Ingress IPv4 VSX
Ingress ARP VSX
Ingress MAC VSX
Egress Routed Port IPv4 ACL
Egress Routed VLAN IPv6 ACL
Egress VLAN IPv6 ACL
Egress Routed VLAN IPv4 ACL
Egress VLAN IPv4 ACL
Egress Control Plane Policing
Egress L3 Statistics
```

Policer Action Considerations and Limitations

The policer **exceed remark** DSCP action is supported on the following platforms:

- 8325
- 9300
- 10000

Policer **exceed remark** DSCP action cannot be combined with other actions in the same policy entry, but other entries in the policy may use other actions.

For example, this configuration is allowed:

```
switch(config)# policy my_policswitch
(config-policy)# 10 class ip my_class action cir kbps 1000 cbs 15625 exceed
dscp EF
```

But this is not because it adds a secondary action within the same policy entry:

```

switch(config-policy)# 10 class ip my_class action cir kbps 1000 cbs 15625
exceed dscp EF action mirror 1
Invalid input: action
policy my_ingress_policy
    10 class ip my_class action dscp EF
interface 1/1/1
qos dscp 46
    apply policy my_ingress_policy in
policy my_egress_policy
    10 class ip my_class action cir kbps 1000 cbs 15625 exceed dscp CS1
interface 1/1/2
    apply policy my_egress_policy out

```

Packets with a low drop precedence value (green packets) can be remarked using a QoS remark of all traffic on ingress on ports and LAGs.

```

policy my_ingress_policy
    10 class ip my_class action cir kbps 1000 cbs 15625 exceed dscp CS1
interface 1/1/1
    qos dscp 46
    apply policy my_ingress_policy in

```

Packets can be statically remarked by a separate switch before they reach the switch with the **exceed remark** DSCP action.

Switch 1 example configuration:

```

policy my_ingress_policy
    10 class ip my_class action dscp EF
interface 1/1/1
    qos dscp 46
    ! OR
    apply policy my_ingress_policy in

```

Switch 2 example configuration:

```

policy my_ingress_policer_policy
    10 class ip my_class action cir kbps 1000 cbs 15625 exceed dscp CS1
interface 1/1/1
    apply policy my_ingress_policer_policy in

```

Subtopics

Subinterface Application Considerations Metering and Remarking

Subinterface Application Considerations

For multiple subinterfaces in the same direction, a single policer will be shared for all the subinterfaces on the same line card/stack member and data pipeline, if applicable.

The HPE ANW 8325 and 1000 Switch series have two data pipelines with physical interfaces split between the two pipelines.

The HPE ANW 9300-32D 32-port 100/200/400G QSFP-DD 2-port 10G Switch platform has four data pipelines and HPE ANW 9300 32x100G-QSFP28 8x400G-QDD 2x10G-SFP+ Switch has two data pipelines. If separate policers for different Subinterfaces are required, then another Policy should be created because the per-interface keyword is not available in the subinterface context.

Metering and Remarking

When the same policy is applied across multiple ports, each port the policy is applied to contributes traffic to the rate limit. Policers are shared among all ports with the same policy applied as long as they are on the same line card and vrf member.

The HPE ANW 8325 and 1000 Switch series have two data pipelines with physical interfaces split between the two that do not share policers.

The Aruba 9300-32D 32-port 100/200/400G QSFP-DD 2-port 10G Switch platform has four data pipelines with physical interfaces split between the four. The four data pipelines do not share policers.

The HPE ANW 9300 32x100G-QSFP28 8x400G-QDD 2x10G-SFP+ Switch has two data pipelines with physical interfaces split between the two. The two data pipelines do not share policers.

L4 port ranges

On platforms that support the use of dedicated resources called **L4 Port Ranges**, any ACE that uses **lt**, **gt**, **range**, or port groups attempts to use these dedicated hardware resources. L4 port ranges are used to reduce the number of TCAM entries needed to cover an L4 port range. For example, range 50000 50005 could be covered by a single L4 port range or by two TCAM entries using the following value/masks:

Entry number	L4 port range	Value/Mask
1	range 50000 50003	0xC350/0xFFFC
2	range 50004 50005	0xC354/0xFFFE

The problem gets multiplied when an ACE matches on two L4 port ranges. The TCAM entries used to cover a source and destination L4 port range must cover all possibilities. For example, for this ACE,

```
10 permit tcp any range 100 200 any range 50000 50005
```

The `range 100 200` needs six value masks. As a result, this ACE needs 12 ($6*2=12$) TCAM entries. However, if the TCAM group uses L4 port ranges then the ACE only needs one TCAM entry that matches on two L4 port ranges.

On the 8320, 8325, and 10000 switch series, TCAM entries can share an L4 port range given the following conditions:

- The min and max of the L4 port range are the same
- The L4 port range type (either source or destination L4 ports) is the same
- The TCAM entries are on the same ingress packet processing pipeline

The TCAM entries do not need to be in the same TCAM group.

L4 port ranges are not allocated if the L4 port range can be covered by a single value/mask. For example, **eq 1** and **lt 1024** do not allocate an L4 port range. As a result, the L4 port range allocation can be reduced if the L4 port range is split into multiple ACEs that can each be covered by a single value/mask. For example, the following ACE:

```
10 permit tcp any any range 50000 50005
```

can be split into these two ACEs with L4 port ranges that can each be covered by a single value/mask:

```
10 permit tcp any any range 50000 50003
```

```
11 permit tcp any any range 50004 50005
```

Reducing the number of L4 port ranges needed by a config can be desirable if the config requires more L4 port ranges than are available in the hardware and there are available TCAM entries to absorb the additional ACEs.

On the 8320, 8325, and 10000 switch series, there are 32 available L4 port ranges. L4 port ranges are only supported on the following features:

- Ingress Global Policy with IPv4 and/or MAC classes
- Ingress IPv6 Analytics Data Collection (ADC)
- Ingress PAC Policy (on the 8325 and 10000 switch series only)
- Ingress Port IPv4 and/or IPv6 ACL
- Ingress Port Policy with IPv4 and/or MAC classes
- Ingress Port Policy with IPv6 classes
- Ingress Routed Port Policy with IPv4 and/or IPv6 classes
- Ingress Routed VLAN IPv4 ACL
- Ingress Routed VLAN Policy with IPv4 and/or IPv6 classes

- Ingress VLAN IPv4 ACL
- Ingress VLAN Policy with IPv4 and/or MAC classes

Any unsupported feature may use more than one hardware entry to represent the range of L4 ports.

On the 6200, 6300, 6400, 8100, 8360, 9300, and 9300S switch series, any ACE that uses **lt**, **gt**, **range**, or a port group, may use more than one hardware entry to represent the range of L4 ports. L4 port ranges are not supported on these platforms.



NOTE

On 9300 Switch series, an ACE does not match L4 Ports with the SCTP protocol due to hardware limitations.

ACL and Policy hardware resource commands

Select a command from the list in the left navigation menu.

Subtopics

[show resources](#)

show resources

Syntax

```
show resources [vsx-peer]
```

Description

Shows hardware resource consumption on the switch. Resource data is updated every 10 seconds.

Hardware resource consumption information is shown for:

- TCAM entries
- Policers
- L4 Port Ranges

Parameter

Description

vsx-peer

Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output f

Parameter

Description

rom the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Examples

```
switch# show resources
```

```
Resource Usage:
```

```
Mod  Description
```

```
Resource                                Used Reserved    Free
```

```
-----  
1/1  Total
```

```
Ingress TCAM Entries                    0          0  20480
```

```
Egress TCAM Entries                    0          0   8192
```

```
Ingress Lookups                        0              9
```

```
Egress Lookups                        0              4
```

```
Ingress Policers                      0          2048
```

```
Egress Policers                      0          2048
```

```
switch# show resources 1/1
```

```
Resource Usage:
```

```
Mod  Description
```

```
Resource                                Width  Used Reserved    Free
```

```
-----  
1/1  Total
```

```
Ingress TCAM Entries                    0          0  20480
```

```
Egress TCAM Entries                    0          0   8192
```

```
Ingress Lookups                        0              9
```

```
Egress Lookups                        0              4
```

```
Ingress Policers                      0          2048
```

```
Egress Policers                      0          2048
```

```
switch# show resources
```

```
Resource Usage:
```

```
Mod  Description
```

```
Resource                                Used Reserved    Free
```

```
-----  
1/3  Total
```

```
      Ingress TCAM Entries                    0          0  20480
```

```
      Egress TCAM Entries                    0          0
```

```
8192      Ingress Lookups
```

```
0          9
```

```
      Egress Lookups                        0              4
```

```
      Ingress Policers                      0          2048
```

```
      Egress Policers                      0          2048
```



```

1/5  Total
      Ingress TCAM Entries           0         0  20480
      Egress TCAM Entries            0         0   8192
      Ingress Lookups                0             9
      Egress Lookups                 0             4
      Ingress Policers               0          2048
      Egress Policers                0          2048

```

switch# **show resources 1/3**

Resource Usage:

Mod Description

Resource	Used	Reserved	Free

1/3 Total			
Ingress TCAM Entries	0	0	20480
Egress TCAM Entries	0	0	
8192			Ingress Lookups
0		9	
Egress Lookups	0		4
Ingress Policers	0		2048
Egress Policers	0		2048

switch# **show resources**

Resource Usage:

Mod Description

Resource	Used	Reserved	Free

1 Total			
Ingress TCAM Entries	0	0	18432
Egress TCAM Entries	0	0	5120
Ingress Lookups	0		10
Ingress Flex Loopkups		0	1
Egress Lookups	0		4
Ingress Policers	0		5119
Egress Policers	0		2047

switch# **show resources**

Resource Usage:

Mod Description

Resource	Used	Reserved	Free

1/1 Ingress IP CPURX Lookup			
Ingress TCAM Entries	148	256	
Ingress Policers	20		
Total			
Ingress TCAM Entries	148	256	3832

	Ingress Lookups		1		31
	Ingress Policers		20		2028
switch# show resources 1/1					
Resource Usage:					
Mod	Description				
	Resource		Used	Reserved	Free

1/1	Ingress IP CPURX Lookup				
	Ingress TCAM Entries		148	256	
	Ingress Policers		20		
	Total				
	Ingress TCAM Entries		148	256	3832
	Ingress Lookups		1		31
	Ingress Policers		20		2028
switch# show resources					
Resource Usage:					
Mod	Description				
Resource		Width	Used	Reserved	Free

1/1	Ingress IPv4 Port ACL				
	High-Capacity TCAM/LPM Entries		2	0	262144
	MAC Control Plane Policing				
	TCAM Entries		2	16	256
	IPv4 Control Plane Policing				
	TCAM Entries		2	70	256
	IPv6 Control Plane Policing				
	TCAM Entries		2	72	*
	IPv4 Unicast Route				
	High-Capacity TCAM/LPM Entries		1	0	131072
	IPv6 Unicast Route				
	High-Capacity TCAM/LPM Entries		2	0	262144
	IPv4 Multicast Route				
	High-Capacity TCAM/LPM Entries		2	0	65536
	IPv6 Multicast Route				
	High-Capacity TCAM/LPM Entries		4	0	65536
	Total				
	TCAM Entries			158	512
49664					
	High-Capacity TCAM/LPM Entries			0	786432
258048					
	Policers			0	
65536					

Ingress L4 Port Ranges

0

24

*This feaature shares reserved resources with the preceeding feature.

switch# **show resources 1/1**

Resource Usage:

Mod	Description	Width	Used	Reserved	Free
Resource					
1/1	Ingress IPv4 Port ACL				
	High-Capacity TCAM/LPM Entries	2	0	262144	
	MAC Control Plane Policing				
	TCAM Entries	2	16	256	
	IPv4 Control Plane Policing				
	TCAM Entries	2	70	256	
	IPv6 Control Plane Policing				
	TCAM Entries	2	72	*	
	IPv4 Unicast Route				
	High-Capacity TCAM/LPM Entries	1	0	131072	
	IPv6 Unicast Route				
	High-Capacity TCAM/LPM Entries	2	0	262144	
	IPv4 Multicast Route				
	High-Capacity TCAM/LPM Entries	2	0	65536	
	IPv6 Multicast Route				
	High-Capacity TCAM/LPM Entries	4	0	65536	
	Total				
	TCAM Entries		158	512	49664
	High-Capacity TCAM/LPM Entries		0	786432	258048
	Policers		0		65536
	Ingress L4 Port Ranges		0		24
	* This feature shares reserved resources with the preceding feature.				

Showing hardware resource consumption on a 9300 switch:

switch# **show resources**

Resource Usage:

Mod	Description	Width	Used	Reserved	Free
Resource					
1/1	Global				
	Total				
	Destination Field Processor Entries		0	0	1024
1/1-0	Ports 9-12,21-24				
	Ingress Control Plane Policing				
	Ingress TCAM Entries		3	375	6144
	Total				
	Ingress TCAM Entries			375	6144 18432

	VLAN Field Processor Entries	0	0	1024
1/1-1	Ports 1-8			
	Ingress Control Plane Policing			
	Ingress TCAM Entries	3	375	6144
	Total			
	Ingress TCAM Entries		375	6144
18432				
	VLAN Field Processor Entries		0	0
1024				
1/1-2	Ports 13-20			
	Ingress Control Plane Policing			
	Ingress TCAM Entries	3	375	6144
	Total			
	Ingress TCAM Entries		375	6144
18432				
	VLAN Field Processor Entries		0	0
1024				
1/1-3	Ports 25-32			
	Ingress Control Plane Policing			
	Ingress TCAM Entries	3	375	6144
	Total			
	Ingress TCAM Entries		375	6144
18432				
	VLAN Field Processor Entries		0	0
1024				

Command History

Release	Modification
10.07 or earlier	- -

Command Information

Platforms	Command context	Authority
8320	Operator (>) or Manage	Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.
8325	r (#)	
8325H		
8325P		
9300		

Platforms	Command context	Authority
9300S		
10000		
10040		

Support and Other Resources

Access HPE Aruba Networking support and updates, and view warranty and regulatory information

Subtopics

[Accessing HPE Aruba Networking Support](#)

[Accessing Updates](#)

[Warranty Information](#)

[Regulatory Information](#)

[Documentation Feedback](#)

Accessing HPE Aruba Networking Support

HPE Aruba Networking Support Services	<u>https://www.hpe.com/us/en/networking/hpe - aruba - networking - support - services.html</u>
AOS - CX Switch Software Documentation Portal	<u>https://arubanetworking.hpe.com/techdocs/Aruba DocPortal/content/new-portal/aoscx.html</u>
HPE Aruba Networking Support Portal	<u>https://networkingsupport.hpe.com/home</u>
North America telephone	1 - 800 - 943 - 4526 (US & Canada Toll - Free Number) +1 - 650 - 750 - 0350 (Backup—Toll Number)
International telephone	<u>https://www.hpe.com/psnow/doc/a50011948enw</u>

Be sure to collect the following information before contacting Support:

- Technical support registration number (if applicable)
- Product name, model or version, and serial number
- Operating system name and version
- Firmware version
- Error messages
- Product-specific reports and logs
- Add-on products or components
- Third-party products or components

Other useful sites

Other websites that can be used to find information:

HPE Aruba Networking Developer Hub	https://developer.arubanetworks.com/hpe - aruba - networking - aoscx/docs/about
Airheads social forums and Knowledge Base	https://community.arubanetworks.com/
AOS - CX Software Technical Update channel on YouTube.	Videos on new features introduced in this release : https://www.youtube.com/playlist?list=PLsYGHuNuBZcbWPEjjHuVMqP - Q_UL3CskS
HPE Aruba Networking Hardware Documentation and Translations Portal	
HPE Aruba Networking software	https://networkingsupport.hpe.com/downloads https://networkingsupport.hpe.com/downloads
Software licensing and Feature Packs	https://licensemanagement.hpe.com/
End - of - Life information	https://networkingsupport.hpe.com/end - of - life

Accessing Updates

You can access updates from the HPE Aruba Networking Support Portal at <https://networkingsupport.hpe.com>.

Some software products provide a mechanism for accessing software updates through the product interface. Review your product documentation to identify the recommended software update method.

To subscribe to eNewsletters and alerts:

<https://networkingsupport.hpe.com/notifications/subscriptions> (requires an active HPE Aruba Networking Support Portal account to manage subscriptions). Security notices are viewable without an HPE Aruba Networking Support Portal account.

Warranty Information

To view warranty information for your product, go to **<https://www.arubanetworks.com/support-services/product-warranties/>**.

Regulatory Information

To view the regulatory information for your product, view the Safety and Compliance Information for Server, Storage, Power, Networking, and Rack Products, available at **<https://www.hpe.com/support/Safety-Compliance-EnterpriseProducts>**

Additional regulatory information

HPE Aruba Networking is committed to providing our customers with information about the chemical substances in our products as needed to comply with legal requirements, environmental data (company programs, product recycling, energy efficiency), and safety information and compliance data, (RoHS and WEEE). For more information, see **<https://www.arubanetworks.com/company/about-us/environmental-citizenship/>**.

Documentation Feedback

HPE Aruba Networking is committed to providing documentation that meets your needs. To help us improve the documentation, send any errors, suggestions, or comments to Documentation Feedback (**docsfeedback-switching@hpe.com**). When submitting your feedback, include the document title, part number, edition, and publication date located on the front cover of the document. For online help content, include the product name, product version, help edition, and publication date located on the legal notices page.