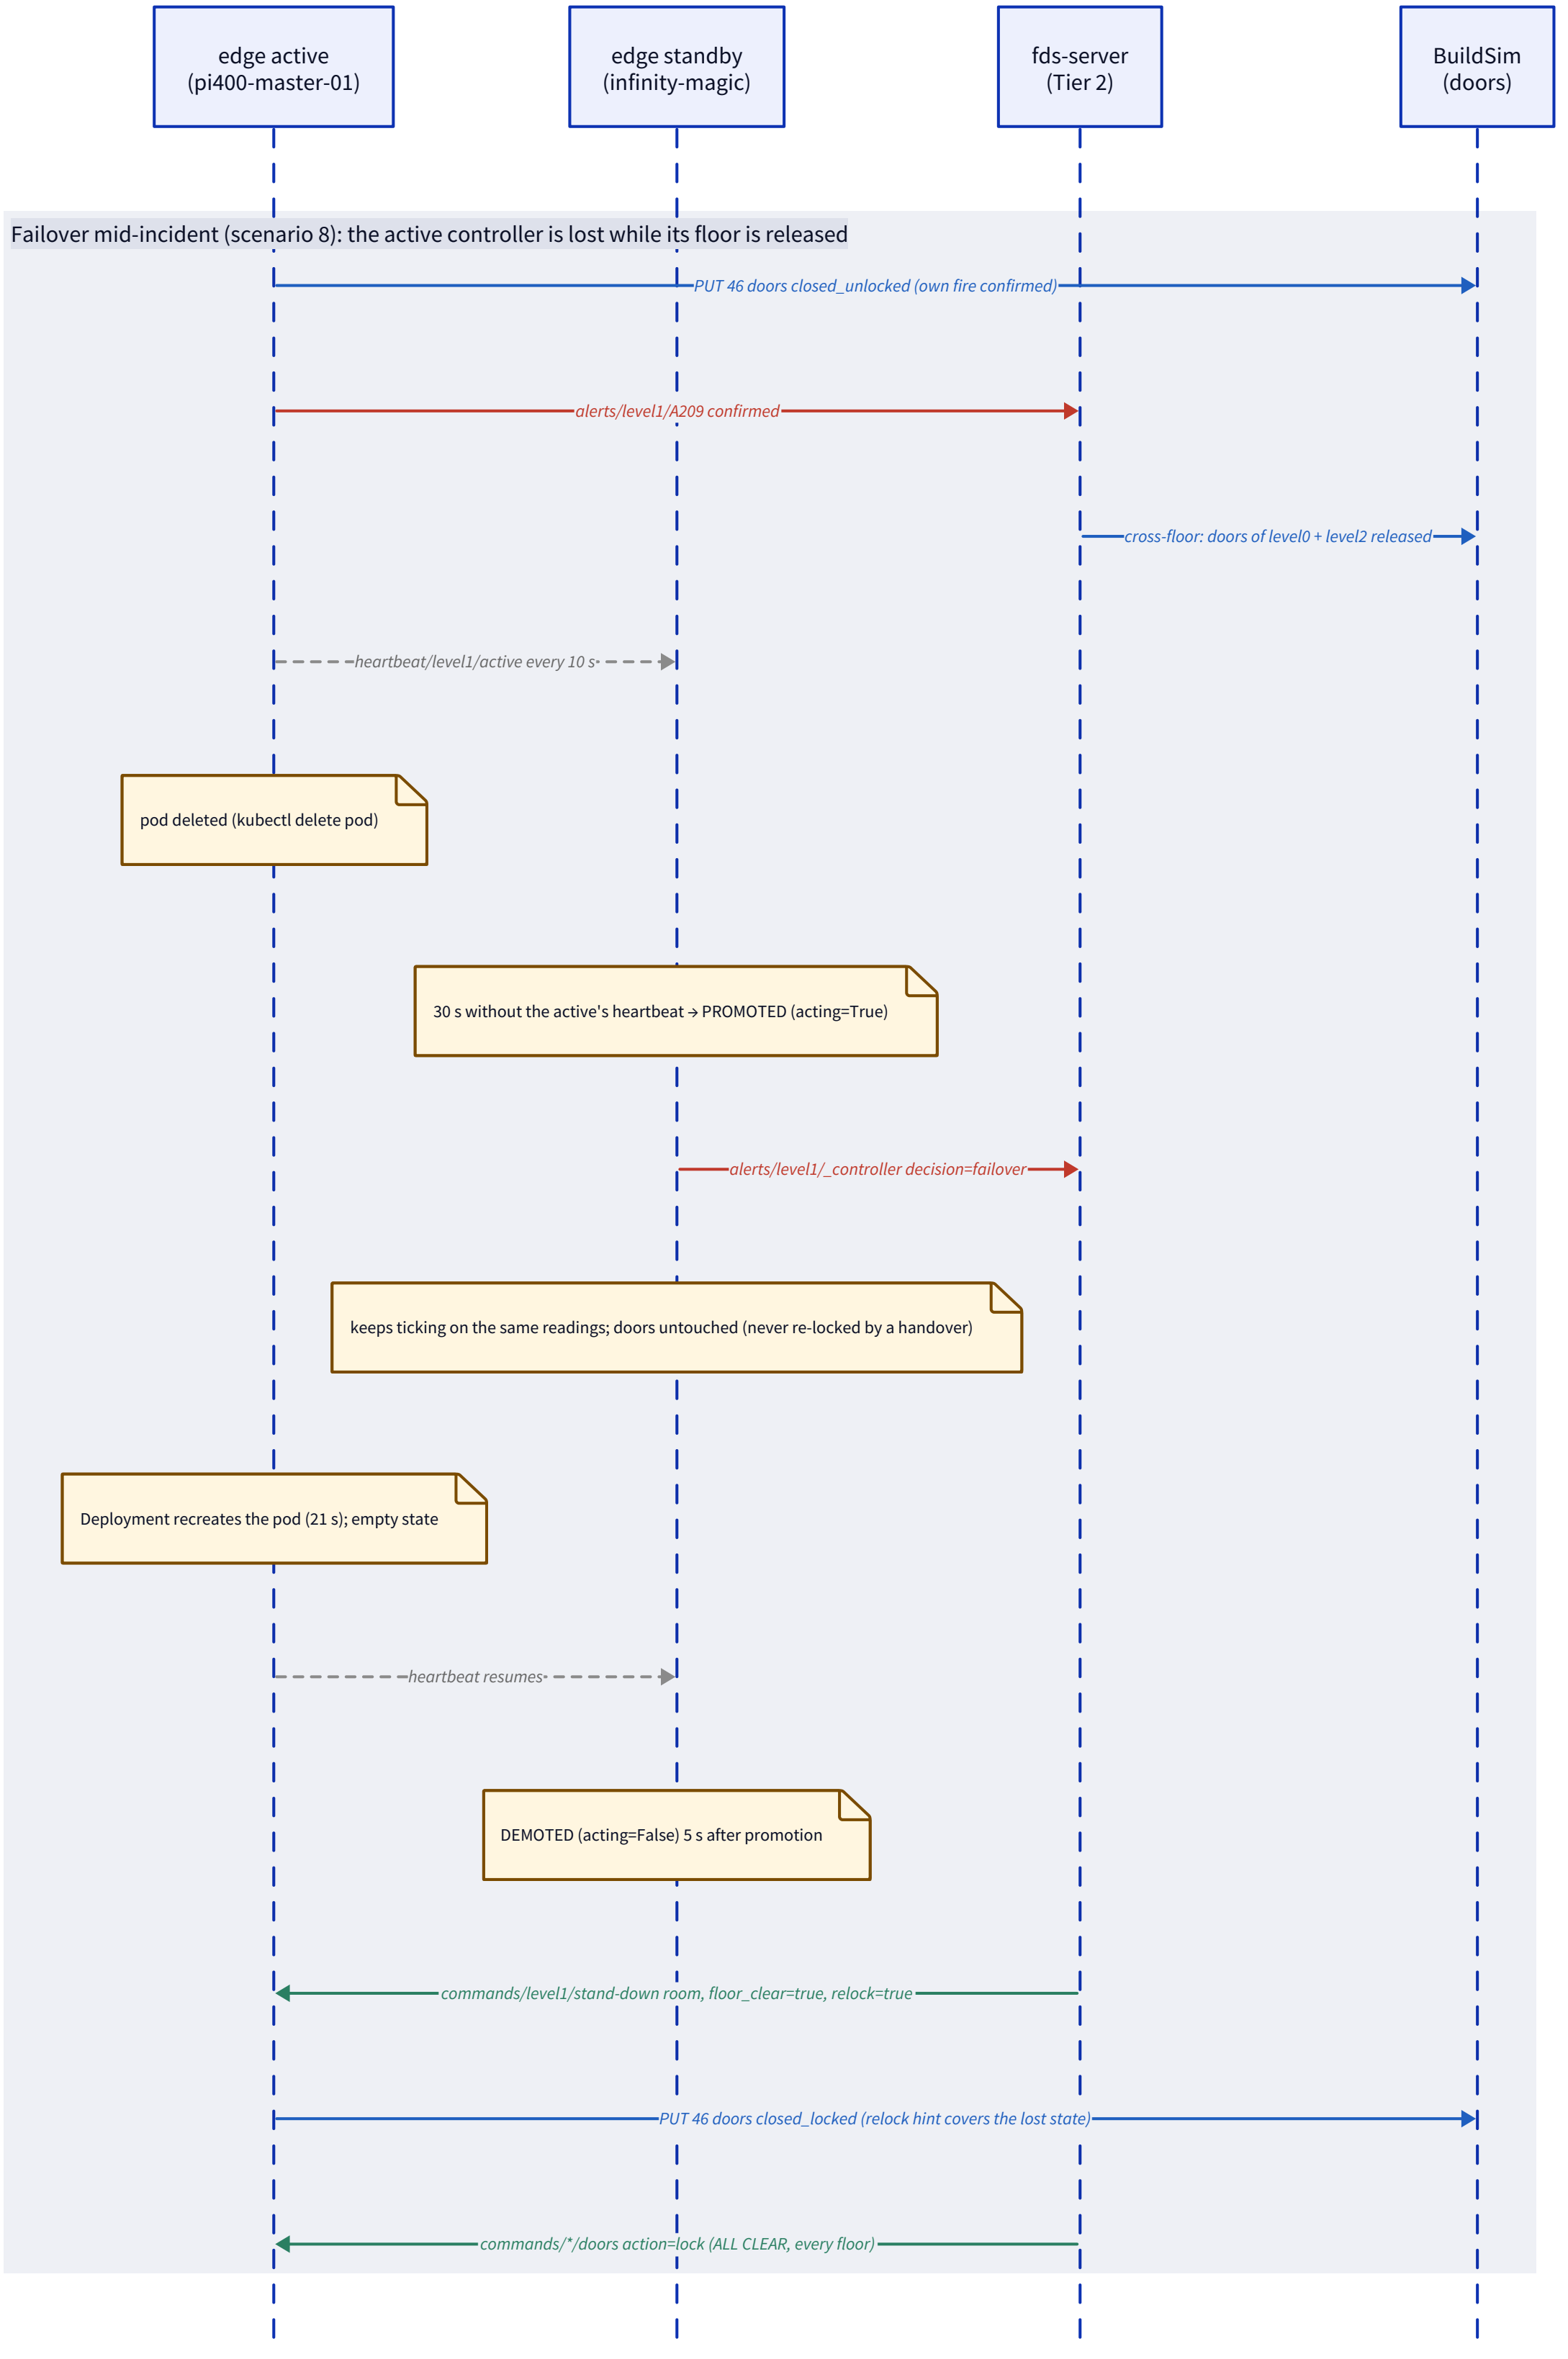

edge active
(pi400-master-01)
edge standby
(infinity-magic)
fds-server
(Tier 2)
BuildSim
(doors)
Failover mid-incident (scenario 8): the active controller is lost while its floor is released
PUT 46 doors closed_unlocked (own fire confirmed)
alerts/level1/A209 confirmed
cross-floor: doors of level0 + level2 released
heartbeat/level1/active every 10 s
pod deleted (kubectl delete pod)
30 s without the active's heartbeat → PROMOTED (acting=True)
alerts/level1/_controller decision=failover
keeps ticking on the same readings; doors untouched (never re-locked by a handover)
Deployment recreates the pod (21 s); empty state
heartbeat resumes
DEMOTED (acting=False) 5 s after promotion
commands/level1/stand-down room, floor_clear=true, relock=true
PUT 46 doors closed_locked (relock hint covers the lost state)
commands/*/doors action=lock (ALL CLEAR, every floor)