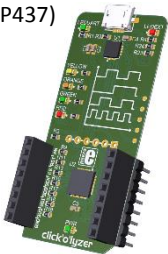Please use ExtraPuTTY 0.29+

Use CP437 codepage

(PuTTY Session Configuration -> Window -> translation -> Remote character set -> CP437)

Try commands:

DVM
LS FREQ=1M
LED RED=13

Please use ExtraPuTTY 0.29+

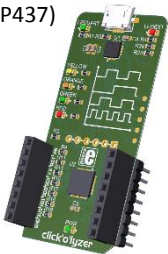Use CP437 codepage

(PuTTY Session Configuration ->
Window -> translation -> Remote
character set -> CP437)

Try commands:

DVM
LS FREQ=1M
LED RED=13

Please use ExtraPuTTY 0.29+

Use CP437 codepage

(PuTTY Session Configuration -> Window -> translation -> Remote character set -> CP437)

Try commands:

DVM
LS FREQ=1M
LED RED=13

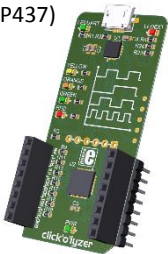Please use ExtraPuTTY 0.29+
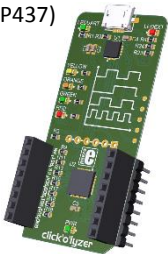
Use CP437 codepage

(PuTTY Session Configuration ->
Window -> translation -> Remote
character set -> CP437)

Try commands:

DVM
LS FREQ=1M
LED RED=13

Please use ExtraPuTTY 0.29+
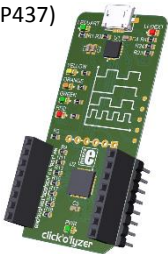
Use CP437 codepage

(PuTTY Session Configuration ->
Window -> translation -> Remote
character set -> CP437)

Try commands:

DVM
LS FREQ=1M
LED RED=13

Please use ExtraPuTTY 0.29+
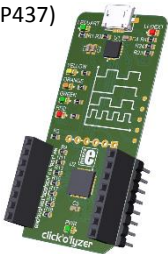
Use CP437 codepage

(PuTTY Session Configuration -> Window -> translation -> Remote character set -> CP437)

Try commands:

DVM
LS FREQ=1M
LED RED=13

Please use ExtraPuTTY 0.29+
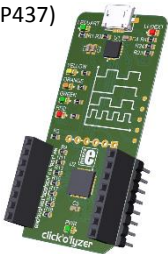
Use CP437 codepage

(PuTTY Session Configuration ->
Window -> translation -> Remote
character set -> CP437)

Try commands:

DVM
LS FREQ=1M
LED RED=13

Please use ExtraPuTTY 0.29+
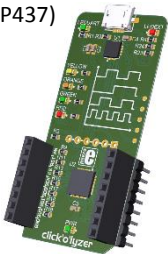
Use CP437 codepage

(PuTTY Session Configuration -> Window -> translation -> Remote character set -> CP437)

Try commands:

DVM
LS FREQ=1M
LED RED=13

Please use ExtraPuTTY 0.29+
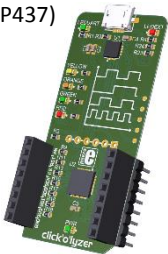
Use CP437 codepage

(PuTTY Session Configuration ->
Window -> translation -> Remote
character set -> CP437)

Try commands:

DVM
LS FREQ=1M
LED RED=13

Please use ExtraPuTTY 0.29+
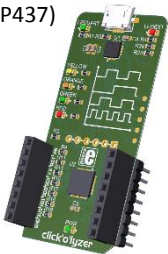
Use CP437 codepage

(PuTTY Session Configuration ->
Window -> translation -> Remote
character set -> CP437)

Try commands:

DVM
LS FREQ=1M
LED RED=13

Please use ExtraPuTTY 0.29+
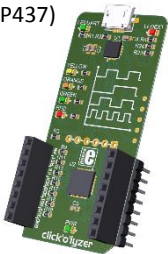
Use CP437 codepage

(PuTTY Session Configuration -> Window -> translation -> Remote character set -> CP437)

Try commands:

DVM
LS FREQ=1M
LED RED=13

Please use ExtraPuTTY 0.29+

Use CP437 codepage

(PuTTY Session Configuration -> Window -> translation -> Remote character set -> CP437)

Try commands:

DVM
LS FREQ=1M
LED RED=13