




120mm/240mm/360mm


LCAZ-120R-ARGB / LCAZ-240R-ARGB / LCAZ-360R-ARGB

USER MANUAL

Package Contents

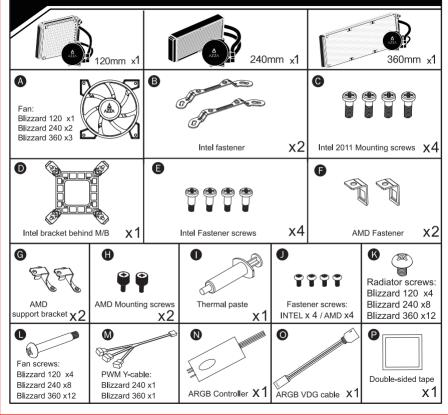


Pump Dimensions

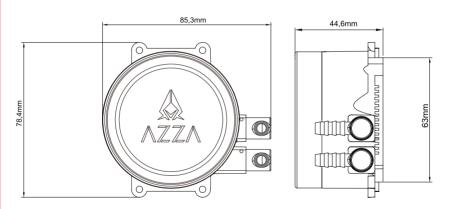


**AZZA provides a 3-year warranty toward the product.
The warranty starts from your initial purchase (according to the date on your receipt).
Repair service does not cover man-caused damage.


INTEL [LGA1366/ 115X/ 775] Bracket Behind M/B

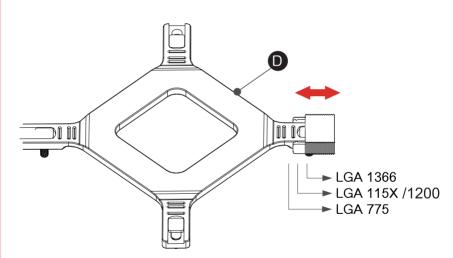


1. INTEL / AMD

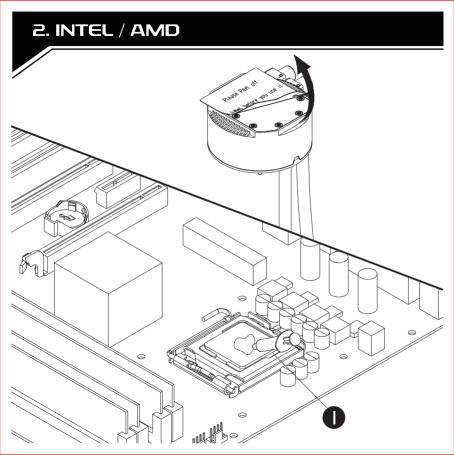


3. INTEL [LGA2066/ 2011/ 2011-3]

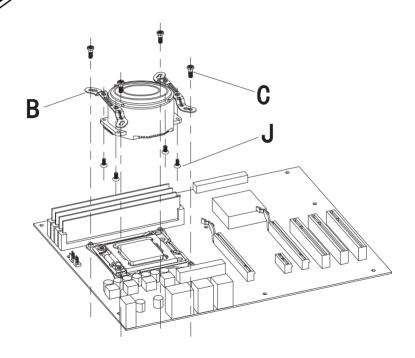

4. INTEL [LGA1366/ 115X/ 775]

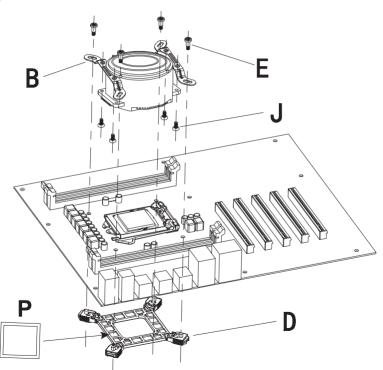


5. AMD

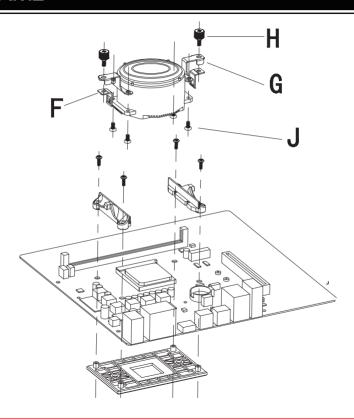

ARGB Motherboard Instruction


ASUS


(Sync software: ASUS™ AURA SYNC)

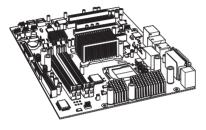


MSI

(Sync software: MSI™ MYSTIC LIGHT SYNC)

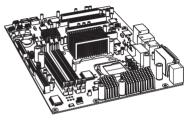







ARGB Motherboard Instruction

ASRock


(Sync software: ASROCK™ POLYCHROME SYNC)






GIGABYTE


(Sync software: GIGABYTE™ RGB FUSION)




**Please plug in the correct side, otherwise, it can potentially cause damage.



ARGB Motherboard Connection

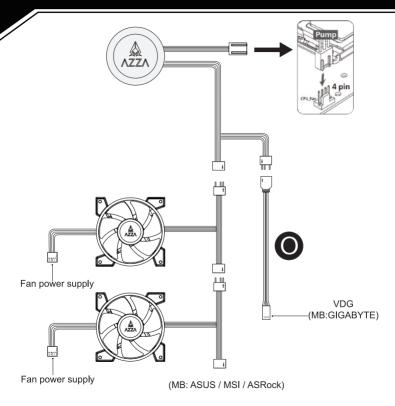

ARGB Controller Connection

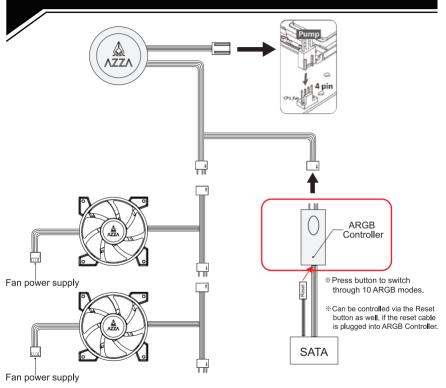

PWM Y-Cable Instruction (Fan Power Supply)

