Safety Warnings & Leak Patching

Mandatory Safety Warnings



⚠ Active Adult Supervision: Children and non-swimmers require continuous, active supervision by a competent adult at all times. Never leave minors unattended.



⚠ NO DIVING / NO JUMPING: This is a shallow, above-ground pool. Do not dive, jump, or slide into the pool; doing so can lead to severe spinal injuries, paralysis, or death!



⚠ Do Not Walk on Walls: Never stand, sit, walk, climb, or bounce on the drop-stitch pool walls.



⚠ Remove Ladders & Toys: Remove all floating toys from the pool after use to avoid attracting children. Remove or secure the ladder when the pool is unoccupied.

⚠ Electrical Safety: Maintain safe electrical clearance around the pool; disconnect all electrical pump equipment from power before performing cleaning or maintenance.

Leak Detection & Patch Repairs

Leak Detection: If internal air pressure drops unusually fast, brush soapy water over seams and valve perimeters; air bubbling identifies the leak origin.

Patching Procedure:

1. Completely drain, deflate, clean, and dry the damaged area.

2. Cut a circular or rounded PVC patch extending at least 2–3 cm beyond the puncture edge.

3. Apply an even layer of repair adhesive to both surfaces, press the patch firmly onto the area, and smooth out all trapped air bubbles.

4. Clamp or weight the patch down and allow it to cure undisturbed for at least 24 hours before reinflating or filling with water.



DROP-STITCH INFLATABLE POOL

USER MANUAL & SETUP GUIDE



Material: High-density Drop-Stitch Fabric & Reinforced PVC
Recommended Pressure：5 – 8 PSI
Max Pressure - DO NOT EXCEED：10 PSI
Operating Water Temp：0°C – 40°C

Please read this manual carefully before setup. Retain for future reference.

Exercise extreme caution when using cutting tools to avoid puncturing the pool body or storage bag. Verify that the package contains the following items:



Pool Body



Electric Air Pump



Repair Kit

Site Preparation & Ground Requirements

1. Level & Hard Surface: The setup ground must be completely flat, level, and sufficiently firm to support the total weight of the filled pool. Never install the pool on mud, sand, or soft soil.

2. No Elevated Setup: Do not set up the pool on roofs, balconies, or suspended decks; the substantial water weight can cause structural collapse.

3. Ground Clearing: Remove all sharp debris, stones, and aggressive weeds. Unroll the protective ground mat over the cleared area first, then unfold the pool flat on top of the mat without wrinkles.

4. Safety Clearance: Position the pool at least 1.5–2.0 meters away from any structures or objects that children could use to climb inside.


Valve Operation & Inflation

Step 1: Valve Preparation
Unscrew the outer valve cover counterclockwise. Verify that the center valve push-pin is in the UP position (closed/inflation mode) to prevent air leakage when removing the hose.




Step 2: Connection & Controlled Inflation
Connect the air pump hose to the inflation valve and twist it a quarter-turn clockwise until firmly locked.
Operate the pump; the pool walls will take shape and become rigid. Monitor with a pressure gauge and inflate gradually to the recommended operating pressure of 5 – 8 PSI (0.34 – 0.55 bar).
WARNING: Never exceed 15 PSI (1.03 bar)! Direct solar heating increases internal pressure; verify pressure and release air slightly during hot days.



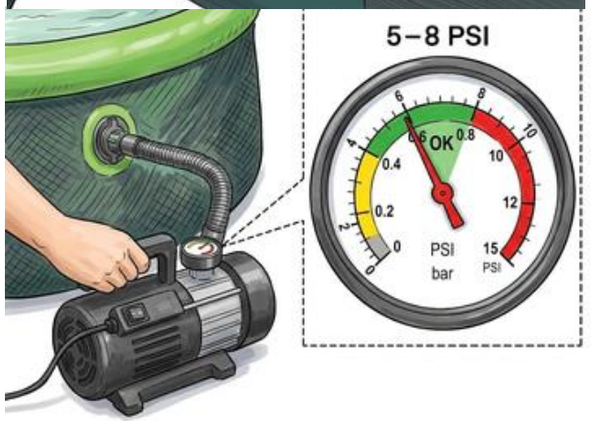


Step 3: Sealing & Valve Tightening
Disconnect the hose counterclockwise. If slight seepage occurs around the valve port, insert the specialized wrench into the valve notches, hold the valve body firmly, and rotate clockwise to secure (do not overtighten). Reinstall and tighten the protective cap.

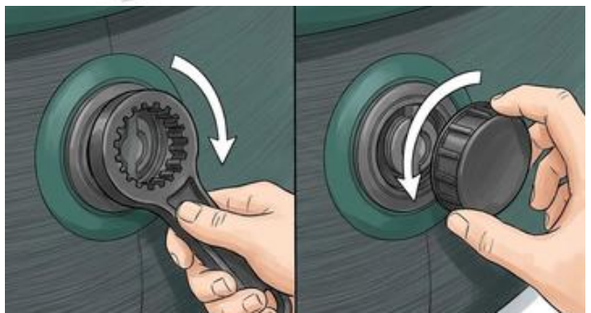


System Connection & Water Filling


Step 4: Filtration System Connection
Prior to filling, connect external sand filter or circulating pump hoses firmly to the corresponding "Inlet" and "Outlet" ports. If operating without a filtration system, tightly secure all unused ports with their dedicated screw-on caps.

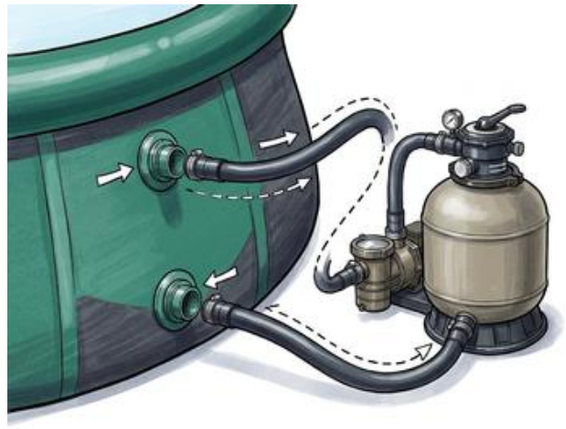

Step 5: Filling & Water Level Control
Fill the pool gradually, inspecting continuously for evenness and vertical stability of the pool body.

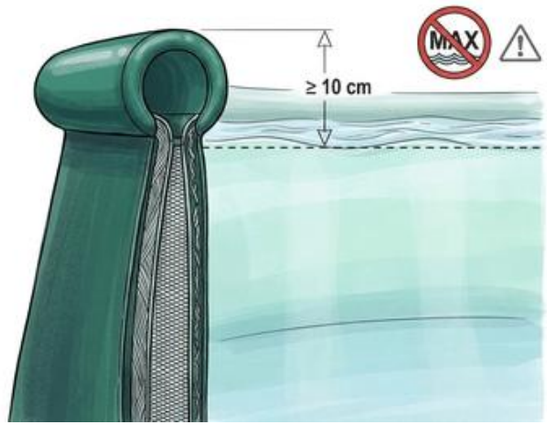


Step 6: Accessories & Pool Cover
Erect and secure the pool ladder on a stable, level surface. Fit and secure the protective cover with integrated straps whenever the pool is not in use. The cover must be completely removed prior to any person entering the pool.

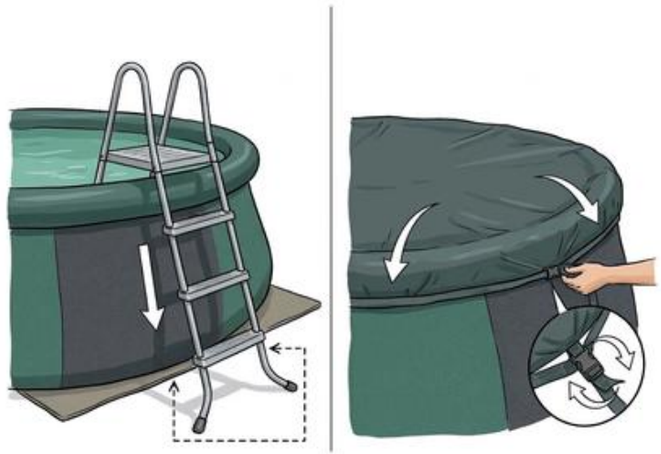

Draining & Storage

Step 1: Complete Draining
Attach a discharge hose to the red "Water Out" drain port to direct water safely away, or drain using a submersible sump pump. Disconnect all external hoses and fittings upon completion.

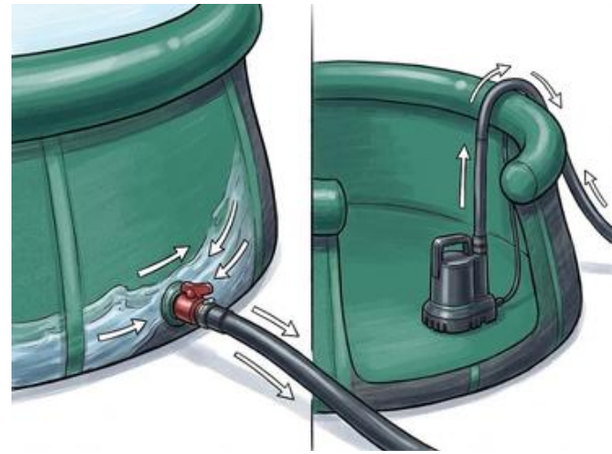

Step 2: Cleaning & Complete Drying
Clean both interior and exterior surfaces. Allow the deflated pool to dry completely prior to packing; improper moist storage accelerates wear and fosters mold growth.



Step 3: Complete Deflation
Open the valve cap, depress the center pin, and turn it clockwise to lock into the down/deflation position. Connect the pump hose to the Deflation Port of the air pump to extract all residual air flat.

Step 4: Folding & Storage
Fold the section opposite the connection ports inward, fold both side sections inward, and fold flat while avoiding creasing over hard valves and fittings. Fasten with the strap, pack into the storage bag, and store in a cool, dry place away from heat sources and sharp objects.

