

2.11 DHT Temperature and humidity

DHT Temperature and humidity

Overview

In this tutorial we will learn how to use a DHT11 Temperature and Humidity Sensor.

It's accurate enough for most projects that need to keep track of humidity and temperature readings.

Again we will be using a Library specifically designed for these sensors that will make our code short and easy to write.

Component Required:

(1)x Elegoo ESP32

(1)x DHT11 Temperature and Humidity module


(2) x 400 Tie Points Breadboard

(4) x F-M wires (Female to Male DuPont wires)

Component Introduction

Temp and humidity sensor:

DHT11 digital temperature and humidity sensor is a composite Sensor which contains a calibrated digital signal output of the temperature and humidity. The dedicated digital modules collection technology and the temperature and humidity sensing technology are applied to ensure that the product has high reliability and excellent long-term stability. The sensor includes a resistive moisture sensor and a NTC temperature measurement devices, and connects with a high-performance 8-bit microcontroller.

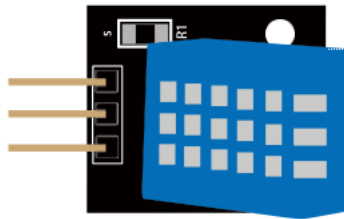

Applications: HVAC, dehumidifier, testing and inspection equipment, consumer goods, automotive, automatic control, data loggers, weather stations, home appliances, humidity regulator, medical and other humidity measurement and control.


Product parameters

Humidity Parameters		Temperature Parameters	
Parameter	Specification	Parameter	Specification
Relative humidity	1m / s air 6s Hysteresis:	Response time	1 / e (63%) 10S
Resolution	8Bit	Resolution	8Bit
Repeatability	±1% RH	Repeatability	±0.2°C
Accuracy	At 25°C ±5% RH	Range	At 0°C ±50°C
Long-term stability	< ±0.5% RH / yr in	Power supply	DC 3.5~5.5V
Interchangeability	fully interchangeable	Supply Current	measurement 0.3mA standby 60μA
Response time	1 / e (63%) of 25°C 6s	Sampling period	more than 2 seconds


Pin Description:

1. the VDD power supply 3.5~5.5V DC.
2. DATA serial data, a single bus.
3. GND ground, the negative power.

Connection Schematic

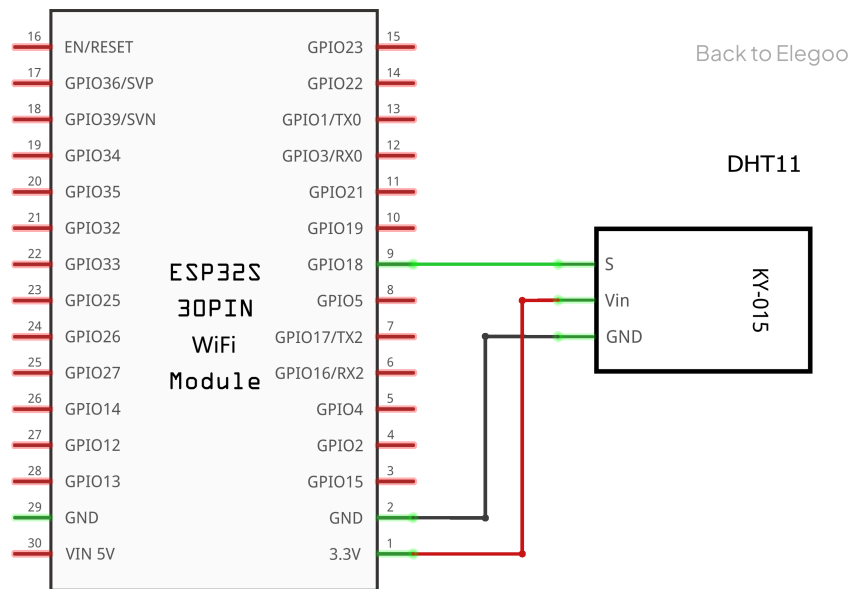

Wiring diagram

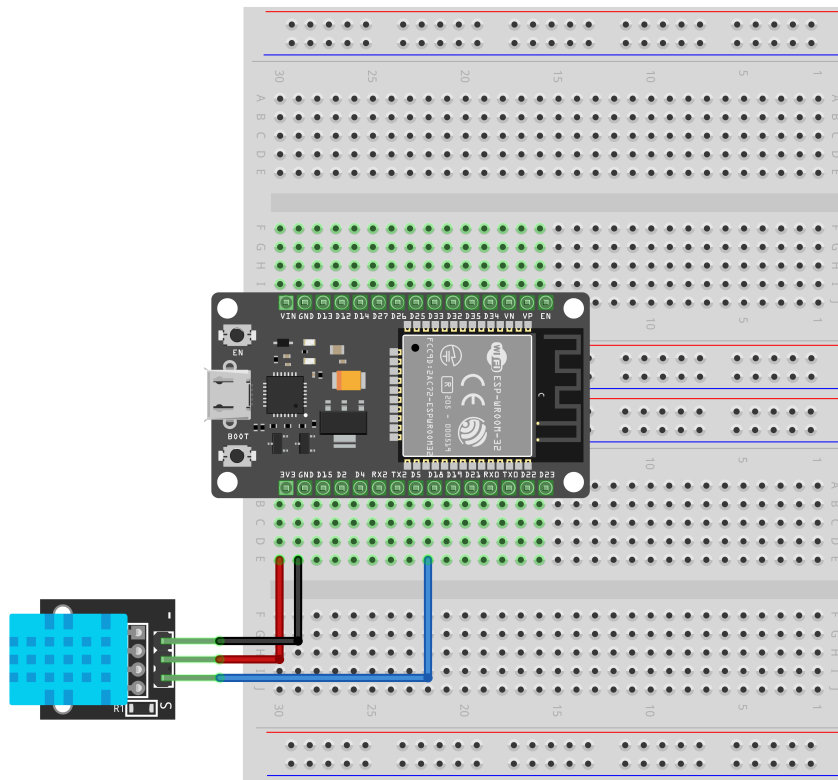

Code

You can click the blue text link to download the program file to your local device, and double-click the file to open it after the download is complete. Please note: Before opening the file, ensure that you have installed the Arduino IDE development environment and completed the installation of relevant components such as the board support package and driver corresponding to the ESP32 development board. If you have any questions about this operation process, you can refer to the "part 1" chapter of the document for detailed guidance.

[DOWNLOAD dht11_example.zip](#)

This example has placed the dht_nonblocking library files ([dht_nonblocking.h](#) and [dht_nonblocking.cpp](#)) directly in the same directory as the [.ino](#) file. The code uses `#include "dht_nonblocking.h"` (double-quote form) to reference the local header file, so no additional library installation is required before compiling and uploading.

With this code, the ESP32 board will read temperature and humidity data from a DHT11 sensor every 3 seconds and display the results on the serial monitor of the Arduino software once the code is compiled and uploaded to the ESP32 board.

Click the Serial Monitor button to turn on the serial monitor. The basics about the serial monitor are introduced in details in tutorial 4 in part 2.

```

1 | #include "dht_nonblocking.h"
2 |
3 | #define DHT_SENSOR_TYPE DHT_TYPE_11
4 |
5 | static const int DHT_SENSOR_PIN = 2;
6 |
7 | DHT_nonblocking dht_sensor(DHT_SENSOR_PIN, DHT_SENSOR_TYPE);

```

Library and Sensor Configuration:

- ▶ `#include "dht_nonblocking.h"` : Uses double-quote form to include the local non-blocking DHT sensor library header file in the current directory (as opposed to the `<>` form used for system libraries)
- ▶ `#define DHT_SENSOR_TYPE DHT_TYPE_11` : Defines the sensor type as DHT11
- ▶ `static const int DHT_SENSOR_PIN = 2` : Sets the D2 where the DHT sensor is connected
- ▶ `DHT_nonblocking dht_sensor(DHT_SENSOR_PIN, DHT_SENSOR_TYPE)` : Creates a DHT sensor object using the specified pin and sensor type

```

1 | void setup()
2 | {
3 |   Serial.begin(9600);
4 | }

```

setup() Function: Initializes the serial communication with a baud rate of 9600 to allow communication with the computer's serial monitor.

```

1 | static bool measure_environment(float *temperature, float *humidity)
2 | {
3 |   static unsigned long measurement_timestamp = millis();
4 |
5 |   if(millis() - measurement_timestamp > 3000ul)
6 |   {
7 |     if(dht_sensor.measure(temperature, humidity) == true)
8 |     {
9 |       measurement_timestamp = millis();
10 |      return(true);
11 |    }
12 |  }
13 |
14 |  return(false);
15 | }

```

measure_environment() Function: A static helper function that measures temperature and humidity in a non-blocking manner.

- ▶ `static unsigned long measurement_timestamp` : Tracks the time of the last successful measurement
- ▶ `millis() - measurement_timestamp > 3000ul` : Checks if at least 3 seconds have passed since the last measurement
- ▶ `dht_sensor.measure(temperature, humidity)` : Attempts to read sensor data
- ▶ Returns `true` if a valid measurement was successfully taken

Pointer Usage:

In the function definition `static bool measure_environment(float *temperature, float *humidity)`, the parameters `float *temperature` and `float *humidity` are pointers to float variables. This means they store the memory addresses of variables rather than their actual values.

- ▶ Pointers allow the function to modify variables outside of its scope
- ▶ In this case, the `dht_sensor.measure()` method uses the pointers to store the measured temperature and humidity values directly in the variables provided by the caller
- ▶ This avoids the need to use global variables or return complex data structures

```

1 | void loop()
2 | {
3 |   float temperature;
4 |   float humidity;
5 |
6 |   if(measure_environment(&temperature, &humidity) == true)
7 |   {
8 |     Serial.print("T = ");
9 |     Serial.print(temperature, 1);
10 |    Serial.print(" deg. C, H = ");
11 |

```

```
12 | Serial.print(humidity, 1);  
13 | Serial.println("%");  
14 | }  
   | }
```

[Back to Elegoo](#)

loop() Function: The main loop that continuously checks and displays sensor data.

- `float temperature, humidity` : Variables to store the measured values
- `&temperature, &humidity` : The `&` operator takes the memory address of a variable, converting it to a pointer for use in the function call
- `Serial.print(temperature, 1)` : Prints the float value with 1 decimal place for readability
- `Serial.println("%")` : Prints a percentage sign and moves to the next line on the serial monitor

float Data Type:

The float data type is a single-precision floating-point type that can represent decimal numbers (numbers with fractional parts). In this code:

- It is used to store temperature readings (e.g., 25.5°C)
- It is used to store humidity readings (e.g., 65.3%)
- It provides greater precision than integer types (like int) for sensor measurements
- The `float` type uses 4 bytes of memory and can represent numbers from approximately $\pm 1.4E-45$ to $\pm 3.4E38$ with about 6 decimal digits of precision

Non-blocking Measurement Approach:

This code uses a non-blocking approach to sensor measurements:

- The `measure_environment()` function checks the time since the last measurement
- It only performs a new measurement if at least 3 seconds have passed
- This allows other code (if added) to continue running without delays
- The `static` keyword used with `measurement_timestamp` ensures the variable retains its value between function calls


millis() Function:

The `millis()` function returns the number of milliseconds since the Arduino board started running the current program. It is used here for timekeeping:

- `static unsigned long measurement_timestamp = millis();` Records the time when the function is first called
- `millis() - measurement_timestamp > 3000ul` Checks if 3000 milliseconds (3 seconds) have elapsed
- The `ul` suffix indicates that 3000 is an unsigned long constant

Upload the program then open the monitor, we can see the data as below:

(It shows the temperature of the environment, we can see it is 27 to 25 degrees with 45.0% humidity)!

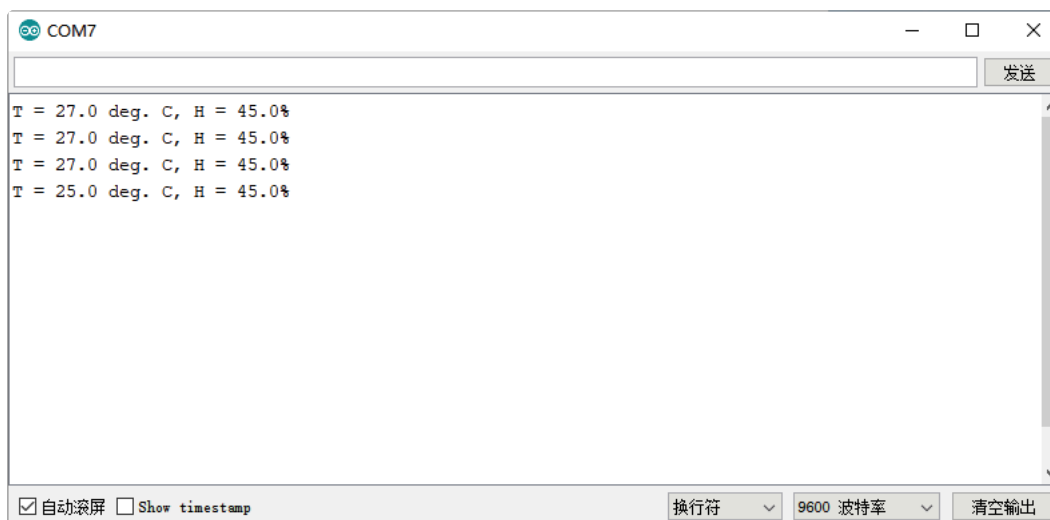

← Membrane Keypad

Joystick→