

SGVP Serial Kit Connection Method

1. Connect the cross cable that is connected to the PC to the RS-232C connector as shown in the figure. If the HyperTerminal connection settings are performed correctly, the LED will light up (For details regarding the HyperTerminal connection settings, refer to the Evaluation Board Manual).

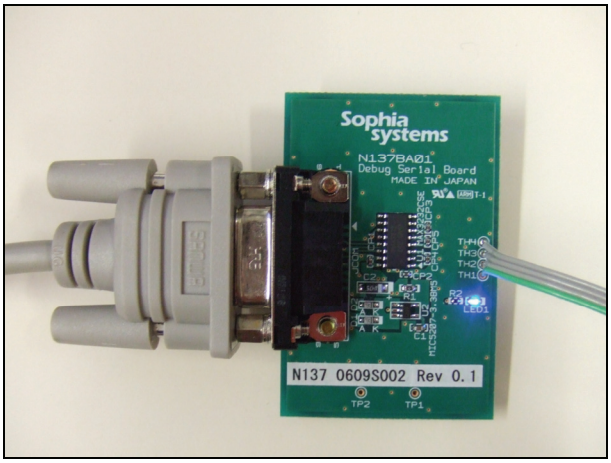

RS-232C cross cable connection

2. Insert the headset jack board connector into the evaluation board headset jack to be debugged as shown in the following figure. When inserting the headset connector, hold the connector by both sides and carefully insert it without applying force.

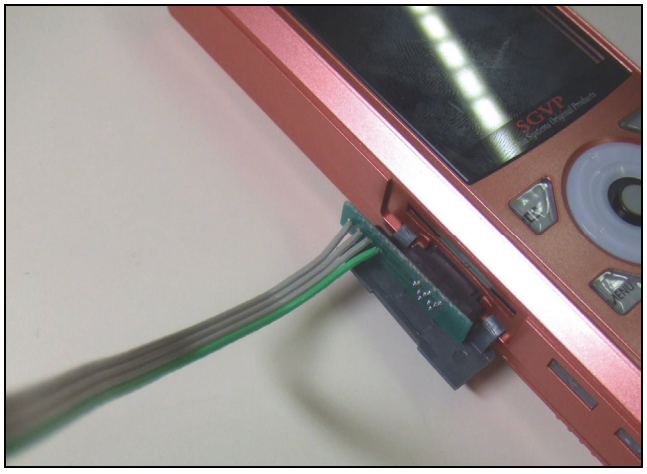

Headset connector connection (The screen shows a connection to SGVP as an example.)

3. When disconnecting the connector, disconnect the headset connector from the evaluation board headset jack and then disconnect the RS-232C cross cable. When disconnecting the headset connector, hold the connector by both sides and carefully pull it out without applying force. Pulling it

too hard could pull out the wires connected to the main board or could pull off the headset connector from the headset jack board.