SGVP and ICE Connection Method

1. Open the battery cover and insert the cable into the SGVP connector as shown in Fig. 1. First remove the battery before inserting the cable.



Fig. 1 Connector connection

2. Close the SGVP battery cover as shown in Fig. 2.
   The SGVP power will not be supplied unless the battery cover is completely closed.

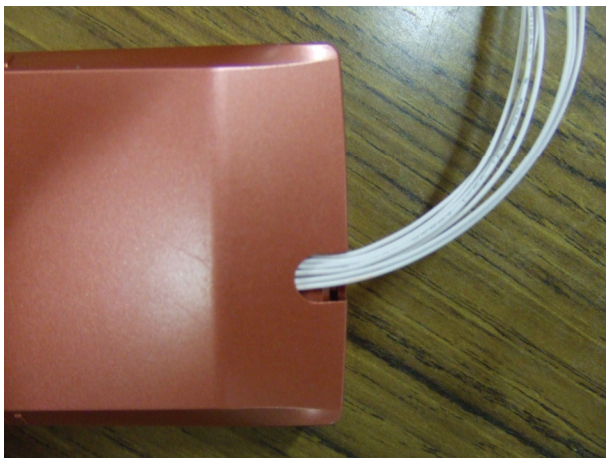


Fig. 2 How to close the battery cover

3. Connect the JTAG connector as shown in Fig. 3.
   Make the connection by matching up the No. 1 pin of the JTAG cable connector and the pin printed in red on the cable.

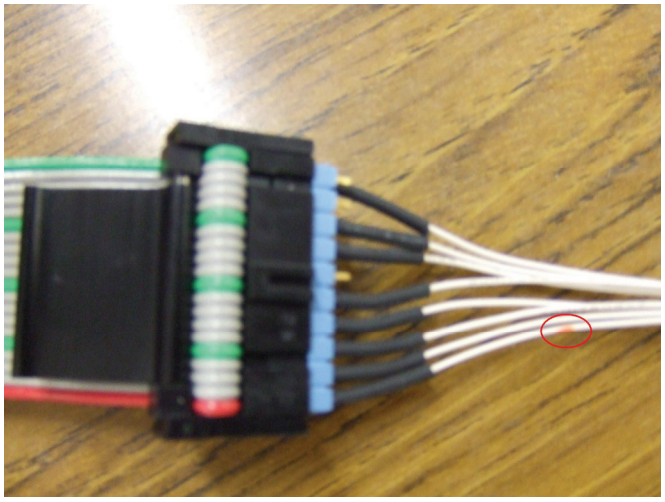


Fig. 3 JTAG connector connection

After making the connection, confirm that the P-ON LED of ICE is lit up red.



This completes the connection.