

one touch Fire
4012X

www.alcatelonetouch.com



For more information on how to use the phone, please go to www.alcatelonetouch.com and download the complete user manual. On the website you can also find answers to frequently asked questions, and so much more.

ALCATEL one touch

Firefox OS

ALCATEL one touch




Table of Contents

Safety and use.....	3
General information	10
1 Your mobile	12
1.1 Keys and connectors.....	12
1.2 Getting started	14
1.3 Home screen.....	17
2 Phone call, Call log and Contacts.....	20
2.1 Make a call	20
2.2 Call log.....	21
2.3 Contacts.....	22
3 Messages, Email.....	25
3.1 SMS.....	25
3.2 Email	27
4 Calendar, Clock, Calculator	29
4.1 Calendar	29
4.2 Clock.....	30
4.3 Calculator.....	31
5 Multimedia applications	32
5.1 Camera	32
5.2 Gallery	33
5.3 YouTube.....	34
5.4 Music	34
5.5 Video Player.....	35
5.6 FM Radio.....	36
6 Getting connected	37
6.1 Connecting to the Internet	37


6.2 Browser	38
6.3 Adaptive App Search.....	38
6.4 Connecting to Bluetooth devices	39
6.5 Sharing your phone's mobile data connection	40
7 Settings	42
7.1 Network & Connectivity.....	42
7.2 Personalization.....	44
7.3 Privacy & Security	46
7.4 Device	47
8 Marketplace	48
9 ALCATEL Help	49
10 Usage	49
11 Telephone warranty.....	50
12 Accessories	52
13 Troubleshooting	53
14 Specifications.....	58

This product meets applicable national SAR limits of 2.0W/kg. The specific maximum SAR values can be found on page 7 of this user guide.



www.sar-tick.com

When carrying the product or using it while worn on your body, either use an approved accessory such as a holster or otherwise maintain a distance of 10 mm from the body to ensure compliance with RF exposure requirements. Note that the product may be transmitting even if you are not making a phone call.



Safety and use.....

We recommend that you read this chapter carefully before using your phone. The manufacturer disclaims any liability for damage, which may result as a consequence of improper use or use contrary to the instructions contained herein.

• TRAFFIC SAFETY:

Given that studies show that using a mobile phone while driving a vehicle constitutes a real risk, even when the hands-free kit is used (car kit, headset...), drivers are requested to refrain from using their mobile when the vehicle is not parked.

When driving, do not use your phone and headphone to listen to music or to the radio. Using a headphone can be dangerous and forbidden in some areas.

When switched on, your phone emits electromagnetic waves that can interfere with the vehicle's electronic systems such as ABS anti-lock brakes or airbags. To ensure that there is no problem:

- do not place your phone on top of the dashboard or within an airbag deployment area,
- check with your car dealer or the car manufacturer to make sure that the dashboard is adequately shielded from mobile phone RF energy.

• CONDITIONS OF USE:

You are advised to switch off the telephone from time to time to optimise its performance.

Switch the phone off before boarding an aircraft.

Switch the phone off when you are in health care facilities, except in designated areas. As with many other types of equipment now in regular use, mobile telephones can interfere with other electrical or electronic devices, or equipment using radio frequency.

Switch the phone off when you are near gas or flammable liquids. Strictly obey all signs and instructions posted in a fuel depot, petrol station, or chemical plant, or in any potentially explosive atmosphere.

When the phone is switched on, it should be kept at least 15 cm from any medical device such as a pacemaker, a hearing aid or insulin pump, etc. In particular when using the phone, you should hold it against the ear on the opposite side to the device, if any. To avoid hearing impairment, pick up the call before holding your phone to your ear. Also move the handset away from your ear while using the "hands-free" mode because the amplified volume might cause hearing damage.

Do not let children use the phone and/or play with the telephone and accessories without supervision.

When replacing the cover please note that your phone may contain substances that could create an allergic reaction.

Always handle your phone with care and keep it in a clean and dust-free place.

Do not allow your phone to be exposed to adverse weather or environmental conditions (moisture, humidity, rain, infiltration of liquids, dust, sea air, etc.). The manufacturer's recommended operating temperature range is -10°C to +55°C.

At over 55°C the legibility of the phone's display may be impaired, though this is temporary and not serious.

Emergency call numbers may not be reachable on all cellular networks. You should never rely only on your phone for emergency calls.

Do not open, dismantle or attempt to repair your mobile phone yourself.

Do not drop, throw or bend your mobile phone.

Do not use the phone if the glass made screen is damaged, cracked or broken to avoid any injury.

Do not paint it.


Use only batteries, battery chargers, and accessories which are recommended by TCT Mobile Limited and its affiliates and are compatible with your phone model. TCT Mobile Limited and its affiliates disclaim any liability for damage caused by the use of other chargers or batteries.

Remember to make back-up copies or keep a written record of all important information stored in your phone.

Some people may suffer epileptic seizures or blackouts when exposed to flashing lights, or when playing video games. These seizures or blackouts may occur even if a person never had a previous seizure or blackout. If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult your doctor before playing video games on your phone or enabling a flashing-lights feature on your phone.

Parents should monitor their children's use of video games or other features that incorporate flashing lights on the phones. All persons should discontinue use and consult a doctor if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation. To limit the likelihood of such symptoms, please take the following safety precautions:

- Do not play or use a flashing-lights feature if you are tired or need sleep.
- Take a minimum of a 15-minute break hourly.
- Play in a room in which all lights are on.



- Play at the farthest distance possible from the screen.
- If your hands, wrists, or arms become tired or sore while playing, stop and rest for several hours before playing again.
- If you continue to have sore hands, wrists, or arms during or after playing, stop the game and see a doctor.

When you play games on your phone, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. Follow the instructions to avoid problems such as tendonitis, carpal tunnel syndrome, or other musculoskeletal disorders.



PROTECT YOUR HEARING

To prevent possible hearing damage, do not listen at high volume levels for long periods. Exercise caution when holding your device near your ear while the loudspeaker is in use.

• PRIVACY:

Please note that you must respect the laws and regulations in force in your jurisdiction or other jurisdiction(s) where you will use your mobile phone regarding taking photographs and recording sounds with your mobile telephone. Pursuant to such laws and regulations, it may be strictly forbidden to take photographs and/or to record the voices of other people or any of their personal attributes, and duplicate or distribute them, as this may be considered to be an invasion of privacy. It is the user's sole responsibility to ensure that prior authorisation be obtained, if necessary, in order to record private or confidential conversations or take a photograph of another person; the manufacturer, the seller or vendor of your mobile phone (including the operator) disclaim any liability which may result from the improper use of the mobile phone.

• BATTERY:

Observe the following precautions for battery use:

- Do not attempt to open the battery (due to the risk of toxic fumes and burns).
- Do not puncture, disassemble or cause a short-circuit in a battery.
- Do not burn or dispose of a used battery in household rubbish or store it at temperatures above 60°C.

Batteries must be disposed of in accordance with locally applicable environmental regulations. Only use the battery for the purpose for which it was designed. Never use damaged batteries or those not recommended by TCT Mobile Limited and/or its affiliates.



This symbol on your telephone, the battery and the accessories means that these products must be taken to collection points at the end of their life:

- Municipal waste disposal centres with specific bins for these items of equipment
- Collection bins at points of sale.

They will then be recycled, preventing substances being disposed of in the environment, so that their components can be reused.

In European Union countries:

These collection points are accessible free of charge.

All products with this sign must be brought to these collection points.

In non European Union jurisdictions:

Items of equipment with this symbol are not to be thrown into ordinary bins if your jurisdiction or your region has suitable recycling and collection facilities; instead they are to be taken to collection points for them to be recycled.

CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

• CHARGERS


Mains powered chargers will operate within the temperature range of: 0°C to 40°C. The chargers designed for your mobile phone meet with the standard for safety of information technology equipment and office equipment use. They are also compliant to the ecodesign directive 2009/125/EC. Due to different applicable electrical specifications, a charger you purchased in one jurisdiction may not work in another jurisdiction. They should be used for this purpose only.

• RADIO WAVES:

Proof of compliance with international standards (ICNIRP) or with European Directive 1999/5/EC (R&TTE) is required of all mobile phone models before they can be put on the market. The protection of the health and safety for the user and any other person is an essential requirement of these standards or this directive.

THIS DEVICE MEETS INTERNATIONAL GUIDELINES FOR EXPOSURE TO RADIO WAVES.

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves (radio frequency electromagnetic fields) recommended by international guidelines. The guidelines were developed by an independent scientific organization (ICNIRP) and include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.



The radio wave exposure guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg.

Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested frequency bands. The highest SAR values under the ICNIRP guidelines for this device model are:

Maximum SAR for this model and conditions under which it was recorded.		
Head SAR	UMTS 2100 + Bluetooth + Wi-Fi	1.16 W/kg
Body-worn SAR	UMTS 2100 + Bluetooth + Wi-Fi	1.18 W/kg

During use, the actual SAR values for this device are usually well below the values stated above. This is because, for purposes of system efficiency and to minimize interference on the network, the operating power of your mobile device is automatically decreased when full power is not needed for the call. The lower the power output of the device, the lower its SAR value.

Body-worn SAR testing has been carried out at a separation distance of 10 mm. To meet RF exposure guidelines during body-worn operation, the device should be positioned at least this distance away from the body. If you are not using an approved accessory ensure that whatever product is used is free of any metal and that it positions the phone the indicated distance away from the body.

Organizations such as the World Health Organization and the US Food and Drug Administration have stated that if people are concerned and want to reduce their exposure they could use a hands-free device to keep the phone away from the head and body during phone calls, or reduce the amount of time spent on the phone.

For more information you can go to www.alcatelontouch.com

Additional information about electromagnetic fields and public health are available on the following site: <http://www.who.int/peh-emf>.

Your telephone is equipped with a built-in antenna. For optimal operation, you should avoid touching it or degrading it.

As mobile devices offer a range of functions, they can be used in positions other than against your ear. In such circumstances the device will be compliant with the guidelines when used with headset or USB data cable. If you are using another accessory ensure that whatever product is used is free of any metal and that it positions the phone at least 10 mm away from the body.

• Regulatory information

The following approvals and notices apply in specific regions as noted.



TCT Mobile Europe SAS
55 Avenue des Champs Pierrreux,
Immeuble Le Capitole 92000 Nanterre, France
+33 1 49 52 61 00

EC declaration of conformity / Déclaration de conformité CE

Product / Produit : HSDPA/HSUPA/UMTS dual band / GSM quad bands handheld station with bluetooth technology, WiFi and FM radio / Portatif HSDPA/HSUPA/UMTS binaire / GSM quadribandes avec technologie Bluetooth, WiFi et radio FM

Product identification / Identification du produit : ALCATELONE TOUCH 4012X type Beetle Lite FF

We / Nous TCT Mobile Europe SAS
55 avenue des Champs Pierrreux
92000 Nanterre
France

Declare under our sole responsibility that the product above mentioned is conform to the applicable essential requirements of the directive 1999/5/EC and that all essential radio test suites have been carried out. Conformity assessment procedure : annex IV of the directive. *I déclare sous notre entière responsabilité que le produit ci-dessus est en conformité avec les exigences essentielles applicables de la directive 1999/5/CE et que toutes les séries d'essais radio essentielles ont été effectuées. Procédure d'évaluation de la conformité indiquée à l'annexe IV de la directive.*

Applied standards / Normes appliquées :

- Item 3.1.a (protection of the health and of the safety of the user) / Article 3.1.a (protection de la santé et de la sécurité de l'utilisateur)
 - EN 60950-1:2006 + A11:2009 + A1:2010 + A12:2011
 - EN 62209-1 (2006)
 - EN 62209-2 (2010)
 - EN 62209-3 (2006)
 - EN 62311:2008+C2:2008, Council recommendation 1690/2010/EC (July 99)
- Item 3.1.b (protection requirements with respect to electromagnetic compatibility) / Article 3.1.b (exigences de protection en ce qui concerne la compatibilité électromagnétique)
 - EN 301 489-1 v.19.2 (2011-09), EN 301 489-3 -1.4.1 (2002-08), EN 301 489-7 v.1.3.1 (2005-11), EN 301 489-17 v.2.1.1 (2009-05), EN 301 489-24 V1.5.1 (2010-10)
- Item 3.2.c (effective use of spectrum so as to avoid harmful interference) / Article 3.2.c (utilisation efficace du spectre radioélectrique pour éviter les interférences dommageables)
 - EN 300 328-1 v.1.7.1 (2003-03), EN 301 908-1 v.5.2.1 (2011-06), EN 301 908-2 v.5.2.1 (2011-07), EN 300 328 v.1.7.1 (2006-10), EN 300 440-1 v.1.6.1 (2010-08), EN 300 440-2 v.1.4.1 (2010-08)

This product also conforms to the applicable requirements of following directives. / Ce produit est en conformité avec les directives suivantes,

- directive 2004/108/EC (electromagnetic compatibility). / Ce produit est en conformité avec la directive 2004/108/EC (compatibilité électromagnétique)
 - EN 55013:2001+A2:2006
 - EN 55020:2007
 - directive 2011/65/EU (RoHS - restriction of the use of certain hazardous substances)

This product can connect with a Common Mobile Phone Charger which complies with below standards: (Ce produit peut être utilisé avec un chargeur universel pour téléphone portable conforme aux standards suivants.)

- EN 300 489-34 v.1.1.1 (2010-10)
- EN 300 440-1

Conformity of this product has been reviewed by the following Notified body of directive 1999/5/EC. / La conformité de ce produit a été vérifiée par l'organisme de certification (notified body) suivant.

American Certification Body, Inc.
Suite C110, Whittier Avenue 6731, 22101 McLean, Virginia, United States.
Identification number: 1588
Date 2013-06-20
Signature

55, avenue des Champs Pierrreux
92000 Nanterre - FRANCE

Chambre de Commerce et d'Industrie de Nanterre


TCT Mobile Europe SAS/Deputy General Manager (EMEA)

CE 1588

TCT Mobile Europe SAS - Siège social : 55 Avenue des Champs Pierrreux, Immeuble Le Capitole 92000 Nanterre France
SAS au capital de 23 031 072 euros - RCS Nanterre B 440 038 222 - Siret 440 038 222 000 38 APE 4552Z

55 Avenue des Champs Pierrreux, Immeuble Le Capitole 92000 Nanterre, France
+33 1 49 52 61 00

Siret 440 038 222 000 38 APE 4552Z



• LICENCES



microSD Logo is a trademark.



The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by TCT Mobile Limited and its affiliates is under license. Other trademarks and trade names are those of their respective owners.

ONE TOUCH 4012X Bluetooth QD ID B020131



The Wi-Fi Logo is a certification mark of the Wi-Fi Alliance.

You have purchased a product which uses the open source (<http://opensource.org/>) programs mtd, msdosfs, netfilter/iptables and inotify in object code and other open source programs licensed under the GNU General Public License and Apache License.

We will provide you with a complete copy of the corresponding source codes upon request within a period of three years from the distribution of the product by TCT.

You may download the source codes from <http://sourceforge.net/projects/alcatel/files/>. The provision of the source code is free of charge from the internet.

General information

• **Internet address:** www.alcatelonetouch.com

• **Hot Line Number:** see "TCT Mobile Services" leaflet or go to our website.

• **Address:** Room 1910-12A, Tower 3, China HK City, 33 Canton Road, Tsimshatsui, Kowloon, Hong Kong

On our website, you will find our FAQ (Frequently Asked Questions) section. You can also contact us by e-mail to ask any questions you may have.

An electronic version of this user guide is available in English and other languages according to availability on our server: www.alcatelonetouch.com

Your telephone is a transceiver that operates on GSM/GPRS/EDGE in quad-band with 850/900/1800/1900 MHz or UMTS in dual band with 900/2100 MHz.


CE 1588

This equipment is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. The entire copy of the Declaration of Conformity for your telephone can be obtained through our website: www.alcatelonetouch.com.

Protection against theft⁽¹⁾

Your telephone is identified by an IMEI (phone serial number) shown on the packaging label and in the phone's memory. We recommend that you note the number the first time you use your telephone by entering *#06# and keep it in a safe place. It may be requested by the police or your operator if your telephone is stolen. This number allows your mobile telephone to be blocked preventing a third person from using it, even with a different SIM card.

⁽¹⁾ Contact your network operator to check service availability.



Disclaimer


There may be certain differences between the user manual description and the phone's operation, depending on the software release of your telephone or specific operator services.


TCT Mobile shall not be held legally responsible for such differences, if any, nor for their potential consequences, which responsibility shall be borne by the operator exclusively.

This handset may contain materials, including applications and software in executable or source code form, which is submitted by third parties for inclusion in this handset ("Third Party Materials"). All third party materials in this handset are provided "as is", without warranty of any kind, whether express or implied, including the implied warranties of merchantability, fitness for a particular purpose or use/third party application, interoperability with other materials or applications of the purchaser and non-infringement of copyright. The purchaser undertakes that TCT Mobile has complied with all quality obligations incumbent upon it as a manufacturer of mobile devices and handsets in complying with Intellectual Property rights. TCT Mobile will at no stage be responsible for the inability or failure of the Third Party Materials to operate on this handset or in interaction with any other devices of the purchaser. To the maximum extent permitted by law, TCT Mobile disclaims all liability for any claims, demands, suits or actions, and more specifically – but not limited to – tort law actions, under any theory of liability, arising out of the use, by whatever means, or attempts to use, such Third Party Materials. Moreover, the present Third Party Materials, which are provided free of charge by TCT Mobile, may be subject to paid updates and upgrades in the future; TCT Mobile waives any responsibility regarding such additional costs, which shall be borne exclusively by the purchaser. The availability of the applications may vary depending on the countries and the operators where the handset is used; in no event shall the list of possible applications and software provided with the handsets be considered as an undertaking from TCT Mobile; it shall remain merely as information for the purchaser. Therefore, TCT Mobile shall not be held responsible for the lack of availability of one or more applications wished for by the purchaser, as its availability depends on the country and the operator of the purchaser. TCT mobile reserves the right at any time to add or remove Third Party Materials from its handsets without prior notice; in no event shall TCT Mobile be held responsible by the purchaser for any consequences that such removal may have on the purchaser regarding the use or attempt to use such applications and Third Party Materials.

Your mobile.....

1.1 Keys and connectors

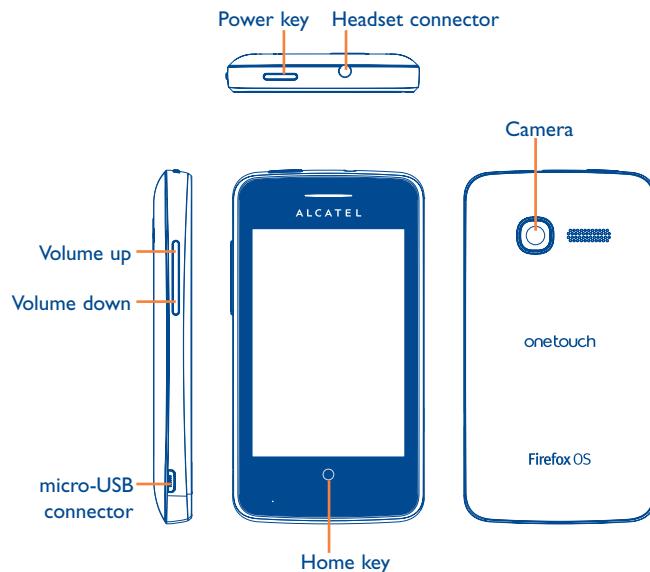



Home key

- From any application or screen, touch to return to the Home screen

Power key

- Press: Lock the screen/Light up the screen
- Press and hold: Show the pop-up menu to select from Turn on airplane mode, Audio profiles, Restart and Power off
- Press and hold: Power on
- Press and hold the Power key and Home key to capture a screenshot.


Volume key

- In call mode, adjust the earpiece or headset volume
- In Music/Video/Streaming mode, adjust the media volume.
- In general mode, adjust the ringtone volume
- Mute the ringtone of an incoming call

1.2 Getting started


1.2.1 Set-up

Removing or installing the back cover

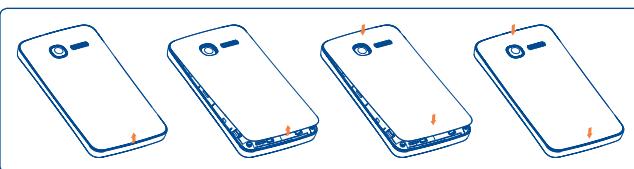


Inserting or removing the SIM card


You must insert your SIM card to make phone calls. Please power off your phone and remove battery before inserting or removing the SIM card.

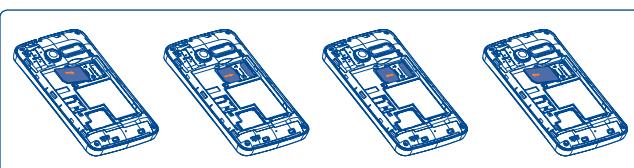

Place the SIM card with the chip facing downwards and slide it into its housing. Make sure that it is correctly inserted. To remove the card, press and slide it out.




Installing and removing the microSD card

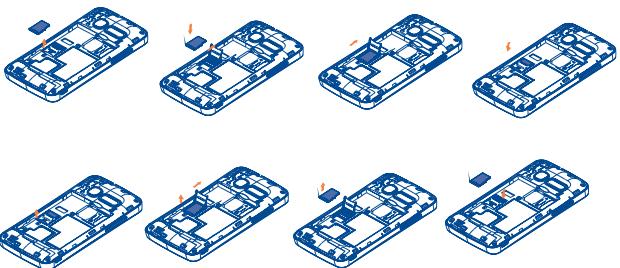

To release the microSD card holder, slide it in the direction of the arrow and lift it. Then insert the microSD card with the golden contact downwards. Finally, lower the microSD holder and slide it in the opposite direction to lock it.


Installing or removing the battery

Please power off your phone before removing the battery.

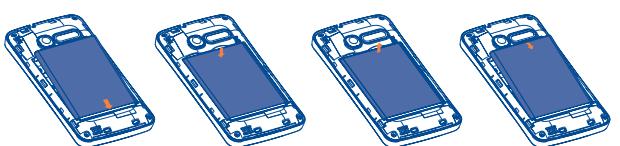

- Insert and click the battery into place, then close the phone cover.
- Unclip the cover, then remove the battery.

Charging the battery

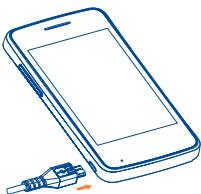

Connect the battery charger to your phone.

- Make sure the battery is correctly inserted before connecting the charger.
- When using your telephone for the first time, charge the battery fully (approximately 5 hours).




If the battery is very low, there will be no indication that power is being received until the charge is sufficient to show the charging status bar. To reduce power consumption and energy waste, when battery is fully charged, disconnect your charger from the plug; switch off Wi-Fi, GPS, Bluetooth or background applications when not in use; reduce the backlight time, etc.

1.2.2 Power on your phone

Hold down the **Power** key until the phone powers on, unlock your phone (Slide up and touch the unlock icon , input your passcode) if necessary and confirm. The Home screen is displayed.

1.2.3 Power off your phone

Hold down the **Power** key until the pop-up menu appears, select **Power off**.



1.3 Home screen

Home screen is provided in an extended format to allow more space for adding applications. Slide the Home screen horizontally left and right to get a complete view. An orange line on the top left and right of the screen indicates which screen you are viewing.


1.3.1 Status bar

From the status bar, you can view both phone status (on the right side) and notification information (to the left side).

	GPRS connected		Receiving location data from GPS
	GPRS in use		Roaming
	EDGE connected		No SIM card inserted
	EDGE in use		Vibrate mode
	3G connected		Ringer is silenced
	3G in use		Battery is very low
	HSPA (3G+) connected		Battery is low
	HSPA (3G+) in use		Battery is partially drained
	Connected to a Wi-Fi network		Battery is full
	Bluetooth is on		Battery is charging
	Connected to a Bluetooth device		Headset connected
	Airplane mode		No signal (gray)
	Alarm is set		Signal strength (white)
	GPS is on		

1.3.2 Notification panel

Touch and drag down the status bar to open the notification panel. Touch and drag up to close it. From the notification panel, you can open items and other reminders indicated by notification icons or view wireless service information.

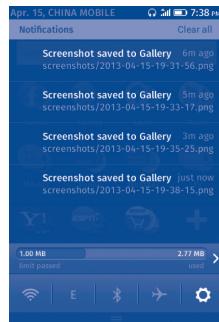

Touch the Settings icon to access **Settings**.

1.3.3 Lock/Unlock your screen


To protect your phone and privacy, you can lock the phone screen by creating a passcode.

To create a screen unlock passcode

- Touch **Settings** from the application list, then touch **Phone lock\Passcode lock**
- Set your passcode.

To lock phone screen

Press the Power key once to lock the screen.



To unlock phone screen

Drag up the arrow and touch the unlock icon to wake up the screen. If you have set a passcode, when you unlock the screen, you'll need to enter your passcode after touching the unlock icon .

1.3.4 Personalise your home screen

Reposition

Touch and hold the item to be repositioned to activate the move mode, drag the item to the desired position and then release.

Remove

Touch and hold the item to be removed to activate the move mode, then touch the red cross to confirm deletion of the item.

Wallpaper customisation

If you touch and hold an empty screen area, a popup window named **Select from** will appear, offering a range of options. **Wallpaper** includes all preset wallpapers in the phone. **Gallery** includes pictures you have taken, cropped or downloaded. You can touch **Camera** to take photos which can be set as wallpaper.

1.3.5 Volume adjustment


Press the **Volume up/down** key to adjust the volume. While in the lowest volume level, your phone will be switched to vibrate/silent mode.⁽¹⁾

2 Phone call, Call log and Contacts

2.1 Make a call


The user can easily start a call using the Phone application.

Enter this menu by touching **Phone** on the bottom of the screen.

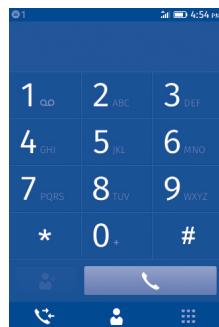

Enter the desired number from the keyboard directly, then touch to place the call. You can also make a call by selecting a contact/number from Call log or Contacts .

⁽¹⁾ The phone setting will vary depending on the changes made to sound settings in **Settings|Sound**.



If you make a mistake, you can delete the incorrect digits by touching the button.

To hang up a call, touch .

If you want to place an international call, make sure to check with your carrier for international rates and roaming charges. You may also want to check the international dialling code as well as the area dialling code to place the call properly.

2.2 Call log

You can access your call memory by touching from the dialling keyboard. Touch the contact/number to place a call directly.

There are three kinds of calls in the Call log:

- Missed calls
- Incoming calls
- Outgoing calls

You can touch a contact/number to view information or do further operations.

You can view detailed information of a call, launch a new call or send a message to a contact/number, or add a number to **Contacts** (only available for phone numbers), etc.

To clear the entire call memory, press the menu icon then touch **Select All** and **Delete**.

2.3 Contacts

The **Contacts** application enables quick and easy access to the people you want to reach.

You can view and create contacts on your phone or SIM and synchronise these with your Facebook contacts or other applications on the web or on your phone.

2.3.1 Consult your Contacts


To access your Contacts, touch **Contacts** on the application list.

2.3.2 Importing Contacts

If you wish to import contacts from either your SIM or Facebook, touch the settings icon inside the Contacts app.

On the resulting screen either touch **Import from SIM** or **Enable Facebook**.





If you touch Enable Facebook a new screen will open and direct you to the Facebook login screen. Once you have been authenticated, you will be returned to the Contacts app and be presented with a screen similar to the following:



This screen allows you to import all your Facebook contacts or only a select few.

2.3.3 Adding a contact

Touch the **+** icon in the contact list to create a new contact.

You are required to enter the contact's name and other contact information. By scrolling up and down the screen, you can move from one field to another easily.



When finished, touch **Done** to save.

Add to /remove from Favourites

To add a contact to favourites (only available for phone contacts), touch a contact to display the contact's option menu, then touch **Add as Favourite** (the star will turn black in colour).

To remove a contact from favourites, select **Remove as Favourite** on the contact's option menu or touch the black star on the contact details screen.

2.3.4 Editing your contacts

To edit contact information, touch the contact whose information is to be edited, then touch . When finished, touch **Update**.


If you want to delete a contact, tap and touch **Delete contact** from contact details screen. Touch **Remove** to confirm.

2.3.5 Communicating with your contacts

From the contacts list, you can communicate with your contacts by making a call or exchanging messages.

To launch a call to a contact, touch the contact to enter the detail screen, then touch the number.

To send a message to a contact, touch the contact to enter the detail screen, then touch the icon on the right side of the number.



3 Messages, Email

3.1 SMS

To open the SMS application, tap the SMS icon which is the second icon in the screenshot below, located at the bottom of the screen.



Once the SMS application has opened, you will be taken to a screen where your sent and received messages are.

Write message

On the message list screen, touch to write message.

Sending a message

Enter the mobile phone number of the recipient on the recipient bar or touch to add a recipient, touch Message bar to enter the text of the message. When finished, touch to send the text message.

After that, you will be taken to the thread of the messages sent and received between you and the recipient. Beside your sent messages you may see a spinning circle . The spinning circle lets you know that the message is being sent.

View your messages

You can view your sent and received messages by touching the SMS icon. From there, you will be taken to your messages.




Touch the message in the list you would like to view and you will be taken to the thread of sent and received messages as shown below.



Delete your messages

To select message(s) for deletion, touch the delete messages icon .

You can select which message threads to delete by touching , the dot will then be filled red with a checkmark as shown .



An alternative way to delete all messages is by touching the **Select all** button. To deselect all, tap **Deselect all**.

When you are ready to delete the selected messages, touch the delete button on the top right of the screen. Then you will be prompted to confirm the deletion. Touch **OK** to confirm.



To set notifications for messages, go to your settings.

3.2 Email

To access this function, touch from the application list.

If this is the first time you have run the email app, you will be presented with the new account wizard with a selection of email providers.

If this is not the first time, touch and then touch and then touch Add Account.

Touch the email provider for your account.


Enter your name, email address and password on the **New account** screen. Touch **Next** and then your email account will be setup.



Your phone must be connected to the internet via WiFi or 3G in order to create your account. The email app doesn't allow you to create a new email account. It only allows you to add an existing email account. If you need a new email account, please create a new account at your email provider's website before adding it to the email app. Only certain email providers are supported.

To create and send emails

- Touch the icon from the Inbox screen
- Enter recipient(s) email address(es) in the **To** field.
- If necessary, touch **CC/BCC** to add a copy or a blind carbon copy to the message.
- Enter the subject and the content of the message.



4 Calendar, Clock, Calculator.

4.1 Calendar

Use the Calendar to keep track of important meetings, appointments, etc.

To access this function, touch **Calendar** on the application list.

To import a calendar

Touch the icon to import a calendar.

A sliding panel will appear which will allow you to choose your calendar provider:



In this scenario we are going to choose Google as our provider. Enter your Google account name and password. When finished, touch **Save** at the top left of the screen. Once you have been successfully authenticated, a list of available calendars will load, allowing you to choose which calendars you wish to sync to FirefoxOS. Select the calendar you wish to import and touch the settings icon on the lower left hand corner to set accounts and Sync Calendar time. Touch **Done** and then your calendar events will be added and visible.

To create new events

- Touch from the Calendar screen
- Fill in all required information for this new event. There is also room to add any additional comments you might want to associate with the event. If it is a whole day event, you can touch beside **All day event**.
- When finished, touch **Save** from the top of the screen.

4.2 Clock

Your mobile phone has a built-in clock.

To access this function, touch **Clock** on the application list.

Add a new alarm


Touch on the top of the screen to add a new alarm. The following options will appear:

- **Label** Touch to set a name for the alarm
- **Repeat** Touch to select days you want alarm to work
- **Sound** Touch to select a ringtone for the alarm
- **Snooze** Touch to set snooze interval

When finished, touch **Done** to confirm.

To delete an alarm

Touch the alarm you set and enter to Edit alarm screen. Touch to delete the selected alarm.



4.3 Calculator

With the calculator, you can solve many mathematical problems.

To access this function, touch **Calculator** on the application list.



Enter a number and the arithmetic operation to be performed, enter the second number, then touch "=" to display the result. Touch [C] to delete all.

31

5 Multimedia applications.....

5.1 Camera

Your mobile phone is fitted with a Camera for taking photos and shooting videos.

Before using the Camera, please ensure that a microSD card where all pictures and videos can be stored is correctly installed. Also, be sure to tear off the protective lens cover before use to avoid it affecting your picture quality.


To access this function, touch **Camera** on application list.



To take a picture

The screen acts as the viewfinder. First position the object or landscape in the viewfinder, touch the icon to take the picture which will then be automatically saved.

32



To shoot a video

Switch Camera mode to Video mode. First position the object or landscape in the viewfinder, and touch the icon to start recording. Touch the icon to stop recording. The video will be automatically saved.

Further operations when viewing a picture/video you have taken

- Touch the icon to share the photo or video you have taken by E-mail, Bluetooth, etc.
- Touch the photo to access **Gallery**.

5.2 Gallery

Gallery acts as a media player for you to view photos and playback videos. In addition, a set of further operations to pictures and videos are available for your choice.

To access this function, touch **Gallery** on application list.



To working with pictures

You can work with pictures by cropping them, sharing them with friends, setting them as wallpaper, etc.

Locate the picture you want to work on, touch the picture from full-screen picture view. Touch the icon to enter all pictures and videos list, touch the icon to open camera, touch the icon to edit the picture, touch the icon to share pictures, touch the icon to delete the picture.

5.3 YouTube

YouTube is an online video-sharing service where the user can download, share and view videos. It supports a streaming function that allows you to start watching videos almost as soon as they begin downloading from the Internet.



As an online video service, your phone must have a network connection to access YouTube.

All videos in YouTube are grouped into several categories, like Most Popular, Most Discussed, Featured Videos, etc.


For details about these features, please visit the YouTube website: www.YouTube.com

5.4 Music

Using this menu, you can play music files stored on the microSD card in your phone. Music files can be downloaded from your computer to the microSD card using a USB cable.


To access this function, touch **Music** on the application list.

You will find four libraries in which all songs are classified: Songs , Playlists , Artists and Albums . Touch a category and view the list.



Playing music

From any of the four library screens, touch a song to play it back.

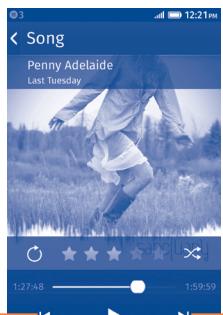

Touch to skip to the previous track in the album or playlist

Touch to skip to the next track in the album or playlist

Touch to pause/resume playback

5.5 Video Player

To access this function, touch **Video** on application list.

Video is a small built-in video player that lists all your videos.

Touch an item from the list to play it. While playing, use Pause and Start functional icons as required, touch a point on the timeline to jump to and play from.

5.6 FM Radio


Your phone is equipped with a radio⁽¹⁾ with RDS⁽²⁾ functionality. You can use the application as a traditional radio with saved channels or with parallel visual information related to the radio program on the display if you turn to stations that offer Visual Radio service.

To access this function, touch **FM Radio** on the application list.



To use it, you must plug in your headset, which works as an antenna connected with your phone.

You can save your favourite stations by pressing the star next to it. You can delete saved stations by doing the same thing.

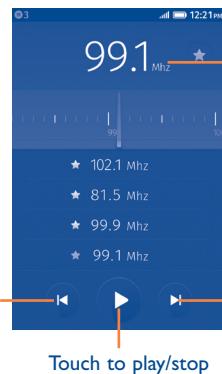

Touch to add the current station to favourites


Touch to go to previous saved channel

Touch to go to next saved channel

Touch to play/stop

⁽¹⁾ The quality of the radio depends on the coverage of the radio station in that particular area.

⁽²⁾ Depending on your network operator and market.



6 Getting connected.....

To connect to the internet with this phone, you can use GPRS/EDGE/3G networks or Wi-Fi, whichever is most convenient.

6.1 Connecting to the Internet

6.1.1 GPRS/EDGE/3G

The first time you turn on your phone with a SIM card inserted, it will automatically configure the network service: GPRS, EDGE or 3G. If the network is not connected, you can touch on the notification panel.

To activate/deactivate Data roaming

When roaming, you can decide to connect/disconnect to a data service.

- Touch **Settings\Cellular & Data\Data roaming** to activate or deactivate data roaming.
- When Data roaming is deactivated, you can still perform data exchange with a Wi-Fi connection.

6.1.2 Wi-Fi

Using Wi-Fi, you can connect to the Internet when your phone is within range of a wireless network. Wi-Fi can be used on your phone even without a SIM card inserted.

To turn Wi-Fi on and connect to a wireless network

- Drag down the notification panel and touch to access **Settings**.
- Touch **Wi-Fi** and the switch beside Wi-Fi to turn on/off Wi-Fi.
- Turn on Wi-Fi, the detailed information of any detected Wi-Fi networks are displayed in the **Available networks** section.

- Touch a Wi-Fi network to connect. If the network you selected is secured, you are required to enter a password. When finished, touch **OK**.

6.2 Browser

Using the Browser, you can enjoy surfing the Web.

To access this function, touch **Browser** on the application tab.

On the Browser screen, touch the URL bar at the top, enter the address of the web page, then touch . You can also select a URL from these three tabs: **Top sites**, **Bookmark** and **History**.

Touch the star at the bottom of the browser to add a bookmark.




6.2.1 View web pages

When a website has been opened, you can navigate its pages by sliding your finger on the screen in any direction to locate the information you want to view. You can pinch the current web page to zoom in/out.

6.3 Adaptive App Search

You can also search for things with Everthing.me.

- Swipe right to find the dynamic app search screen.



- Touch a category or type a keyword into the search box at the top. Apps with relevant mobile content will then appear on the screen.
- Touch any app to discover everything you want to know and more.

6.4 Connecting to Bluetooth devices⁽¹⁾

Bluetooth is a short-range wireless communications technology that you can use to exchange data, or connect to other Bluetooth devices for various uses.

To access this feature, touch **Settings\Bluetooth**

To turn on Bluetooth

- Touch **Settings\Bluetooth**
- Touch the switch  to activate/deactivate this function.

⁽¹⁾ You are recommended to use ALCATEL ONETOUCH Bluetooth headsets, which have been tested and proven to be compatible with your phone. You can go to www.alcatelonetouch.com for more information about ALCATEL ONETOUCH Bluetooth headset.

To change device name

To make your phone more recognizable, you can change your phone name which is visible to others.

- Touch **Settings\Bluetooth\Rename my device**
- Enter a name, and touch **OK**

To make device visible

- Touch **Settings\Bluetooth**
- Touch the switch  to activate/deactivate this function

To pair/connect your phone with a Bluetooth device

To exchange data with another device, you need to turn Bluetooth on and pair your phone with the Bluetooth device with which you want to exchange data.


- Touch **Settings\Bluetooth**
- Touch **Search for devices**
- Select a Bluetooth device you want to be paired with in the list.
- Read Bluetooth pairing request, and then touch **Pair**.

6.5 Sharing your phone's mobile data connection

You can share your phone's mobile data connection with a single computer via a USB cable (USB tethering) or with up to eight devices at once by turning your phone into a portable Wi-Fi hotspot.



The functions below may incur additional network charges from your network operator. Extra fees may also be charged in roaming areas.



To share your phone's data connection as a portable Wi-Fi hotspot

- Touch **Settings\Internet sharing**
- Touch the switch next to **Wi-Fi hotspot** to activate/deactivate this function.

To share your phone's data connection via USB

Use the USB cable that came with your phone to connect the phone to a USB port on your computer.

- Touch **Settings\Internet sharing**
- Touch the switch next to **USB tethering** to activate/deactivate this function

To rename or secure your portable hotspot

When portable Wi-Fi hotspot is activated, you can change the name of your phone's Wi-Fi network (SSID) and secure its Wi-Fi network.

- Touch **Settings\Internet sharing**
- Touch **Hotspot settings** to change the network SSID or set your network security
- Touch **OK**

7 Settings

To access this function, touch **Settings** on the application list, or you can also drag down the notification panel and touch the icon.

7.1 Network & Connectivity

7.1.1 Airplane mode

Mark the check box of **Airplane mode** to simultaneously disable all wireless connections including Wi-Fi, Bluetooth and more.

7.1.2 GPS

Use your phone's global positioning system (GPS) satellite receiver to pinpoint your location within an accuracy as close as several meters ("street level").


7.1.3 Wi-Fi

Using Wi-Fi you can now surf the Internet without using your SIM card whenever you are in range of a wireless network. Wi-Fi can be used on your phone even without a SIM card inserted.

For detailed information, please refer to the **Wi-Fi** section..

7.1.4 Call Settings

Use Call settings to configure normal phone call settings and other special features offered by your carrier. You can also use Call settings to configure the phone so that it can place outgoing calls only to a fixed set of phone numbers.



Call waiting

Touch the switch to turn on call waiting and touch **Set** to confirm.

Call forwarding

Configure how your calls are forwarded when you are busy, unable to answer or unreachable. There are four forwarding methods, including **Always forward**, **Forward when busy**, **Forward when unanswered**, **Forward when unreachable**.

7.1.5 Cellular & Data

You can enable or disable your data connection by touching **Settings** | **Cellular & Data**.

Touch the switch to enable or disable your data connection and data roaming settings.

Use the app on your home screen to check your data usage and to set notifications when you reach low levels.

7.1.6 Bluetooth

Bluetooth allows your phone to exchange data (videos, images, music, etc.) in a small range with another Bluetooth supported device (phone, computer, printer, headset, car kit, etc.)

For more information on Bluetooth, please refer to the **Connecting to Bluetooth devices** section.

7.2 Personalisation

7.2.1 Sound

Touch **Settings** | **Sound** to modify the sound settings.

- **Vibrate** Touch the switch so that the phone vibrates when receiving incoming calls.
- **Volume** Touch to set volume for ringtone & notifications, and alarm.
- **Tones** Touch to set your default ringtone.
- **Other sounds** Touch to set keypad, camera shutter and unlock screen sounds.

7.2.2 Display


Wallpaper Touch to set wallpaper

Brightness Touch to adjust the brightness of the screen

Screen timeout Touch to set screen timeout

7.2.3 Notification

There are three notification configurations: **Show on lock screen**, **Ring** and **Vibrate**.



7.2.4 Date & Time

Use Date & Time settings to customise your preferences for how date and time are displayed.

Set automatically

Touch the switch to use network-provided values, or touch the icon to set all values manually.

Date

Touch to open a dialog where you can manually set the phone's date.

Time

Open a dialog where you can set the phone's time.

Select time zone

Touch to open a dialog where you can manually set the phone's time zone.

7.2.5 Language

Touch **Settings\Language** to select the phone's language.

7.2.6 Keyboard

Touch **Settings\Keyboard** to configure the onscreen keyboard.

7.3 Privacy & Security

7.3.1 Phone lock

Set up screen lock

Lock Screen Touch the switch to activate lock screen

Passcode lock Touch the switch to create a passcode

7.3.2 SIM security


Opens a screen where you can configure the PIN required to use the phone, and where you can change the SIM PIN.

7.3.3 App permissions

You use the applications settings to view details about the applications installed on your phone, and to set whether you want to permit installation of applications that you obtain from web sites and email.

7.3.4 Do Not Track

When you turn on Do Not Track, your device tells every website and app that you don't want your behavior tracked.



7.4 Device

7.4.1 Device information

Actually this contains information about a lot of things including Phone number, Model, Software, Last Updated, Software updates.

7.4.2 Battery

Touch to view the current amount of power. From here you can also set **Power save mode**.

7.4.3 Device storage

Display the amount of phone storage used by the operating system.

7.4.4 Media storage

Display the amount of music, pictures and movie space and left space in the SD card.

8 Marketplace.....

Marketplace is an online software store, where you can download and install applications and games to your phone.

Touch Should be one word - Marketplace. on the application list to open this function.

To download & install


- Navigate to the item you want to download and enter the details screen from which you can read its overall rating or comments, view developer's information, etc.
- Touch **Free** on the details screen and then touch **Install**.

To open the application you have downloaded

- Touch the downloaded app on the application list

To delete application

- Touch the application that you want to remove and hold for a while
- Touch the that shows up at the top left of the app's icon
- Select **Delete** to remove the app



9 ALCATEL Help

To access this function, touch **ALCATEL Help** on the application list.

ALCATEL Help provides help when you have questions or need assistance when using the phone.

10 Usage

To open the Cost Control app, touch Usage on the application list.

Usage helps to check the data you have used, including data usage and Wi-Fi usage.

Telephone warranty

Your phone is warranted against any defect or malfunctioning which may occur in conditions of normal use during the warranty period of twelve (12) months⁽¹⁾ from the date of purchase as shown on your original invoice.

Batteries⁽²⁾ and accessories sold with your phone are also warranted against any defect which may occur during the first six (6) months⁽¹⁾ from the date of purchase as shown on your original invoice.


In case of any defect of your phone which prevents you from normal use thereof, you must immediately inform your vendor and present your phone with your proof of purchase.

If the defect is confirmed, your phone or part thereof will be either replaced or repaired, as appropriate. Repaired phone and accessories are entitled to a one (1) month warranty for the same defect. Repair or replacement may be carried out using reconditioned components offering equivalent functionality.

This warranty covers the cost of parts and labor but excludes any other costs.

⁽¹⁾ The warranty period may vary depending on your country.

⁽²⁾ The life of a rechargeable mobile phone battery in terms of conversation time, standby time, and total service life, will depend on the conditions of use and network configuration. Batteries being considered expendable supplies, the specifications state that you should obtain optimal performance for your phone during the first six months after purchase and for approximately 200 more recharges.



This warranty shall not apply to defects to your phone and/or accessory due to (without any limitation):

- 1) Non-compliance with the instructions for use or installation, or with technical and safety standards applicable in the geographical area where your phone is used,
- 2) Connection to any equipment not supplied or not recommended by TCT Mobile Limited,
- 3) Modification or repair performed by individuals not authorised by TCT Mobile Limited or its affiliates or your vendor,
- 4) Modification, adjustment or alteration of software or hardware performed by individuals not authorized by TCT Mobile Limited,
- 5) Inclement weather, lightning, fire, humidity, infiltration of liquids or foods, chemical products, download of files, crash, high voltage, corrosion, oxidation...

Your phone will not be repaired in cases where labels or serial numbers (IMEI) have been removed or altered.

There are no express warranties, whether written, oral or implied, other than this printed limited warranty or the mandatory warranty provided by your country or jurisdiction.

In no event shall TCT Mobile Limited or any of its affiliates be liable for indirect, incidental or consequential damages of any nature whatsoever, including but not limited commercial or financial loss or damage, loss of data or loss of image to the full extent those damages can be disclaimed by law.

Some countries/states do not allow the exclusion or limitation of indirect, incidental or consequential damages, or limitation of the duration of implied warranties, so the preceding limitations or exclusions may not apply to you.


12 Accessories

The latest generation of ALCATEL ONE TOUCH mobile phones offers a built-in handsfree feature that allows you to use the telephone from a distance, placed on a table for example. For those who prefer to keep their conversations confidential, an earpiece is also available known as the headset.

1. Charger
2. Battery
3. USB cable
4. Stereo headset



Only use your telephone with the ALCATEL ONE TOUCH batteries, chargers and accessories in your box.



13 Troubleshooting.....

Before contacting the service centre, you are advised to follow the instructions below:

- You are advised to fully charge (充電) the battery for optimal operation.
- Avoid storing large amounts of data in your phone as this may affect its performance.
- Use **Factory data reset** and the upgrade tool to perform phone formatting or software upgrading (to reset factory data, hold down the **Power** key and the **Volume up** key at the same time). ALL User phone data: contacts, photos, messages, files and downloaded applications will be lost permanently.

and carry out the following checks:

My phone is frozen or cannot switch on

- Check the battery contacts, remove and reinstall your battery, then turn your phone on.
- Check the battery power level, charge for at least 20 minutes.
- If it still does not work, please reset the phone using the **Power** key and the **Volume up** key.

My phone has not responded for several minutes

- Restart your phone by pressing and holding the **Power** key.
- Remove and re-install the battery, then restart the phone.

My phone turns off by itself

- Check that your screen is locked when you are not using your phone, and make sure the **Power** key is not mis-contacted due to unlocked screen.
- Check the battery charge level.

My phone cannot charge properly

- Make sure you are using an ALCATEL ONE TOUCH battery and the charger from the box.
- Make sure your battery is inserted properly and clean the battery contact if it's dirty. It must be inserted before plugging in the charger.
- Make sure that your battery is not completely discharged; if the battery power is empty for a long time, it may take around 20 minutes to display the battery charger indicator on the screen.
- Make sure charging is carried out under normal conditions (0°C to +40°C).
- When abroad, check that the voltage input is compatible.

My phone cannot connect to a network or "No service" is displayed


- Try connecting in another location.
- Verify the network coverage with your operator.
- Check with your operator that your SIM card is valid.
- Try selecting the available network(s) manually (see "**6.1 Connection to the Internet**")
- Try connecting at a later time if the network is overloaded.

My phone cannot connect to the Internet

- Check that the IMEI number (press *#06#) is the same as the one printed on your warranty card or box.
- Make sure that the internet access service of your SIM card is available.
- Check your phone's internet connection settings.
- Make sure you are in a place with network coverage.
- Try connecting at a later time or another location.

Invalid SIM card

- Make sure the SIM card has been correctly inserted (see "**Inserting or removing the SIM card**").
- Make sure the chip on your SIM card is not damaged or scratched.
- Make sure the service of your SIM card is available.



Unable to make outgoing calls

- Make sure you have dialled a valid number and have touched .
- For international calls, check the country and area codes.
- Make sure your phone is connected to a network, and the network is not overloaded or unavailable.
- Check your subscription status with your operator (credit, SIM card valid, etc.).
- Make sure you have not barred outgoing calls.
- Make sure that your phone is not in flight mode.

Unable to receive incoming calls

- Make sure your phone is switched on and connected to a network (check for overloaded or unavailable network).
- Check your subscription status with your operator (credit, SIM card valid, etc.).
- Make sure you have not forwarded incoming calls.
- Make sure that you have not barred certain calls.
- Make sure that your phone is not in flight mode.

The caller's name/number does not appear when a call is received

- Check that you have subscribed to this service with your operator.
- Your caller has concealed his/her name or number.

I cannot find my contacts

- Make sure your SIM card is not broken.
- Make sure your SIM card is inserted properly.
- Import all contacts stored in SIM card to phone.

The sound quality of the calls is poor

- You can adjust the volume during a call by pressing the **Volume Up/Down key**.
- Check the network strength .
- Make sure that the receiver, connector or speaker on your phone is clean.

I am unable to use the features described in the manual

- Check with your operator to make sure that your subscription includes this service.
- Make sure this feature does not require an ALCATEL ONE TOUCH accessory.

When I select a number from my contacts, the number cannot be dialled

- Make sure that you have correctly recorded the number in your file.
- Make sure that you have selected the country prefix when calling a foreign country.

I am unable to add a contact in my contacts

- Make sure that your SIM card contacts are not full; delete some files or save the files in the phone contacts (i.e. your professional or personal directories).

My callers are unable to leave messages on my voicemail

- Contact your network operator to check service availability.

I cannot access my voicemail


- Make sure your operator's voicemail number is correctly entered in "Voicemail number".
- Try later if the network is busy.

SIM card PIN locked

- Contact your network operator to obtain the PUK code (Personal Unblocking Key).

I am unable to download new files

- Make sure there is sufficient phone memory for your download.
- Select the microSD card as the location to store downloaded files.
- Check your subscription status with your operator.



The phone cannot be detected by others via Bluetooth

- Make sure that Bluetooth is turned on and your phone is visible to other users (see "6.4 Connecting to Bluetooth devices").
- Make sure that the two phones are within Bluetooth's detection range.

How to make your battery last longer

- Make sure you follow the complete charge time (minimum 4 hours).
- After a partial charge, the battery level indicator may not be exact. Wait for at least 20 minutes after removing the charger to obtain an exact indication.
- Switch on the backlight upon request.
- Extend the email auto-check interval for as long as possible.
- Update news and weather information on manual demand, or increase their auto-check interval.
- Exit background-running applications if they are not being used for a long time.
- Deactivate Bluetooth, Wi-Fi, or GPS when not in use.


The phone will become warm following prolonged calls, game playing, internet surfing or running other complex applications.

- This heating is a normal consequence of the CPU handling excessive data. Ending above actions will make your phone return to normal temperatures.

* A portion of this guide was loosely based on contributions from Mozilla's end users, posting to a public guide. The screennames used in said contributions can be found at: https://support.mozilla.org/zh-CN/kb/firefox-os-user-guide#w_acknowledgements

4 Specifications

Processor	Qualcomm MSM7227A-0-576NSP-AA
Platform	Firefox OS
Memory	ROM: 512 MB RAM: 256 MB
Dimensions (LxWxT)	115 x 62.3 x 12.2 mm
Weight	Around 108 grams with battery
Display	3.5" TFT LCD, full touch screen with HVGA (320*480) capacity resolution, capacitive.
Network	UMTS: Dual band 900/2100 (EU); Tri-band 850/1900/2100 (US) GSM Qua-band (850/900/1800/1900)
GPS	GPS, with AGPS
Connectivity	<ul style="list-style-type: none">• Bluetooth 3.0, without A2DP• Wi-Fi: IEEE 802.11 b/g/n• 3.5 mm audio jack• Micro-USB
Camera	3.2 Mpxl, Mipi style
Audio supported formats	AAC, AAC+, AAC Enhanced, AMR-WB, MP3



Video supported formats	MPEG-4, H.264
Battery⁽¹⁾	<ul style="list-style-type: none">• Rechargeable Lithium-ion battery,• Capacity: 1400 mAh
Expansion Slot	microSD memory card, (availability of microSD card depends on market).
Special Features	G-sensor, Proximity Sensor

Note: Specifications are subject to change without prior notice.

ALCATEL is a trademark of Alcatel-Lucent
and is used under license by
TCT Mobile Limited.

© Copyright 2013 TCT Mobile Limited
All rights reserved

TCT Mobile Limited reserves
the right to alter material
or technical specification
without prior notice.

English - CJA3350ALAAA

⁽¹⁾ The original battery has undergone rigorous safety inspections to meet qualification standards, the use of non-original batteries may be dangerous.