

AGRINDO- ISEKI

PARTS LIST

Paddy Husker

HEAD HC600A2/A9/Aw



P.T. AGRINDO


Jl. Raya Bambe km. 19.3
Kec Driyorejo. Kab Gresik – 61177
Eastern Java – Indonesia
PO.BOX 19
Phone (031) 7508070, 7501830, 7507097, 7507098
Fax (031) 7507368, 7590319, 7590689, 7591293

DAFTAR ISI

1. GEAR BOX AND GEAR SECTION	1
2. ROLL CASE AND FUNNEL SECTION	5

1. GEAR BOX

agrindo-ISEKI
PADDY HUSKER
HEAD HC600A2

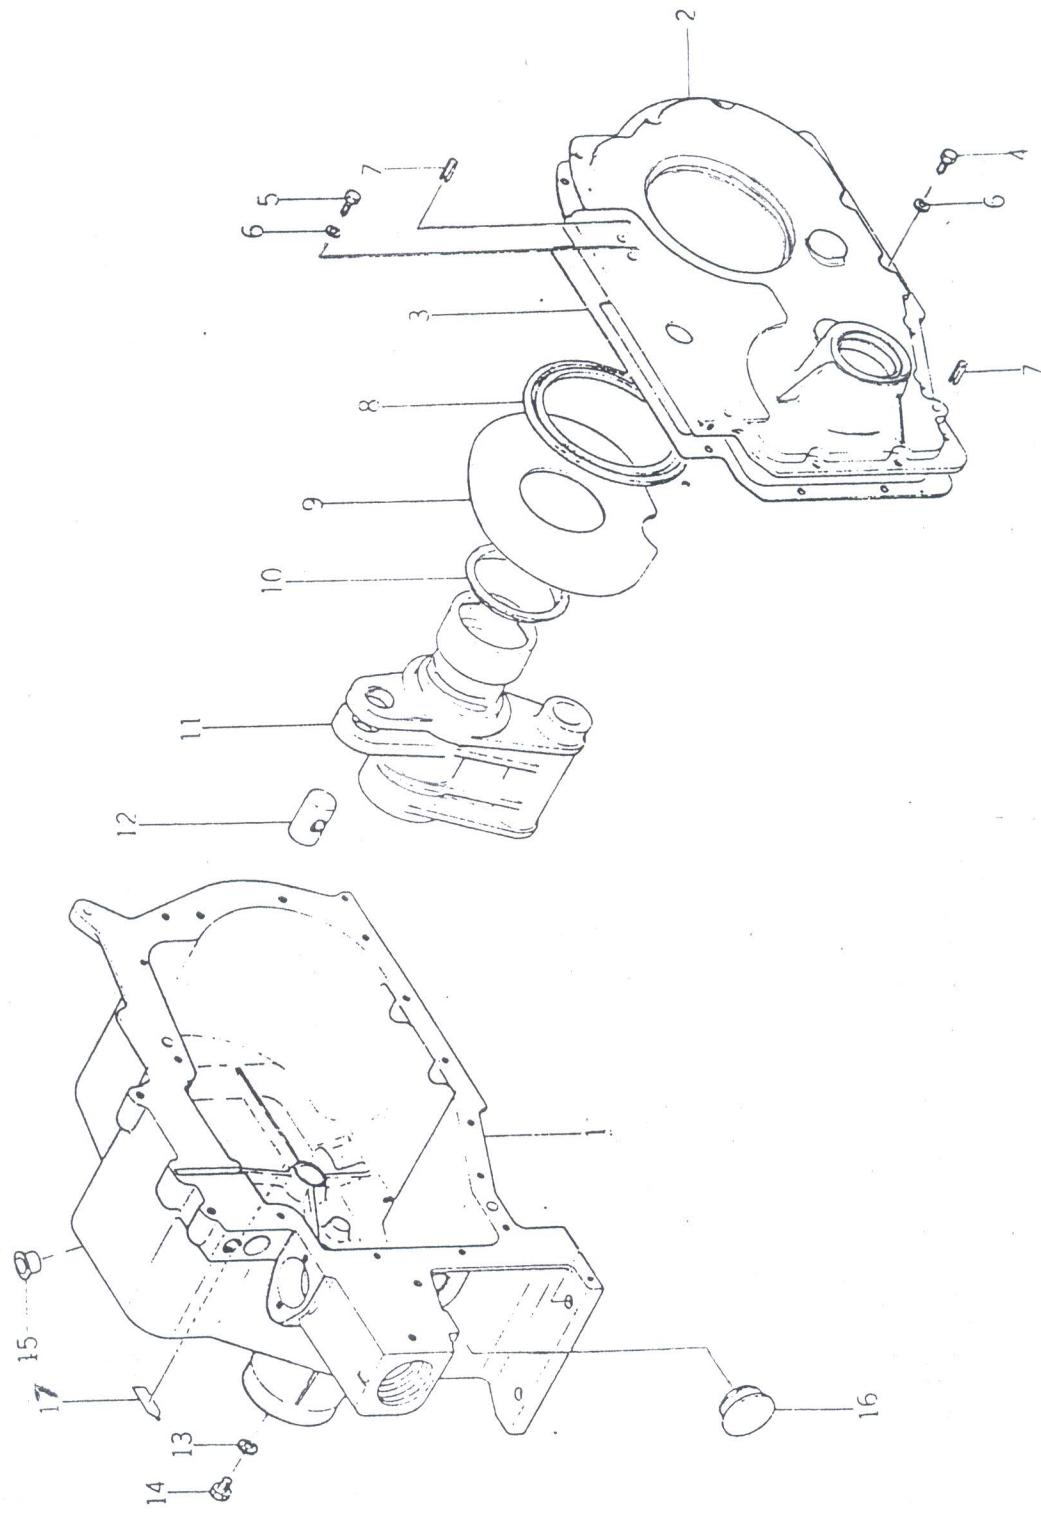

1. GEAR BOX


agrindo-ISEKI
PADDY HUSKER
HEAD HC600A2

KEY NO.	PARTS NO.	PARTS NAME	QTY	STANDARD	REMARK
1 - 1	4123-102-0010-1	Box gear	1		
1 - 2	4123-102-0190-1	Cover gear box	1		
1 - 3	4123-102-0220-0	Packing gear box	1		
1 - 4	V20026-06200	Bolt /M6x20	11	M6x20	
1 - 5	V20026-06300	Bolt /M6x30	2	M6x30	
1 - 6	V40116-000600	Washer spring / M6	13	M6	
1 - 7	V58014-080200	Pin spring / W8x20	2	8x20	
1 - 8	4123-102-0210-0	Seal slide	1		
1 - 9	4123-102-0180-0	Plate slide	1		
1 - 10	4123-102-0170-0	Seal press	1		
1 - 11	4123-102-0160-0	Metal swing	1		
1 - 12	4123-105-0010-0	Pin	1		
1 - 13	3207-301-0160-0	Packing plug	1		
1 - 14	V20126-08120	Bolt / M8x12	1	M8x12	
1 - 15	4110-102-0042-0	Plug oiling / 18	1		
1 - 16	4123-102-0260-0	Cap	1		
1 - 17	4150-301-0050-0	Plate oil lub	1		

2. GEAR SYSTEM

agrindo-ISEKI

PADDY HUSKER
HEAD HG600A2

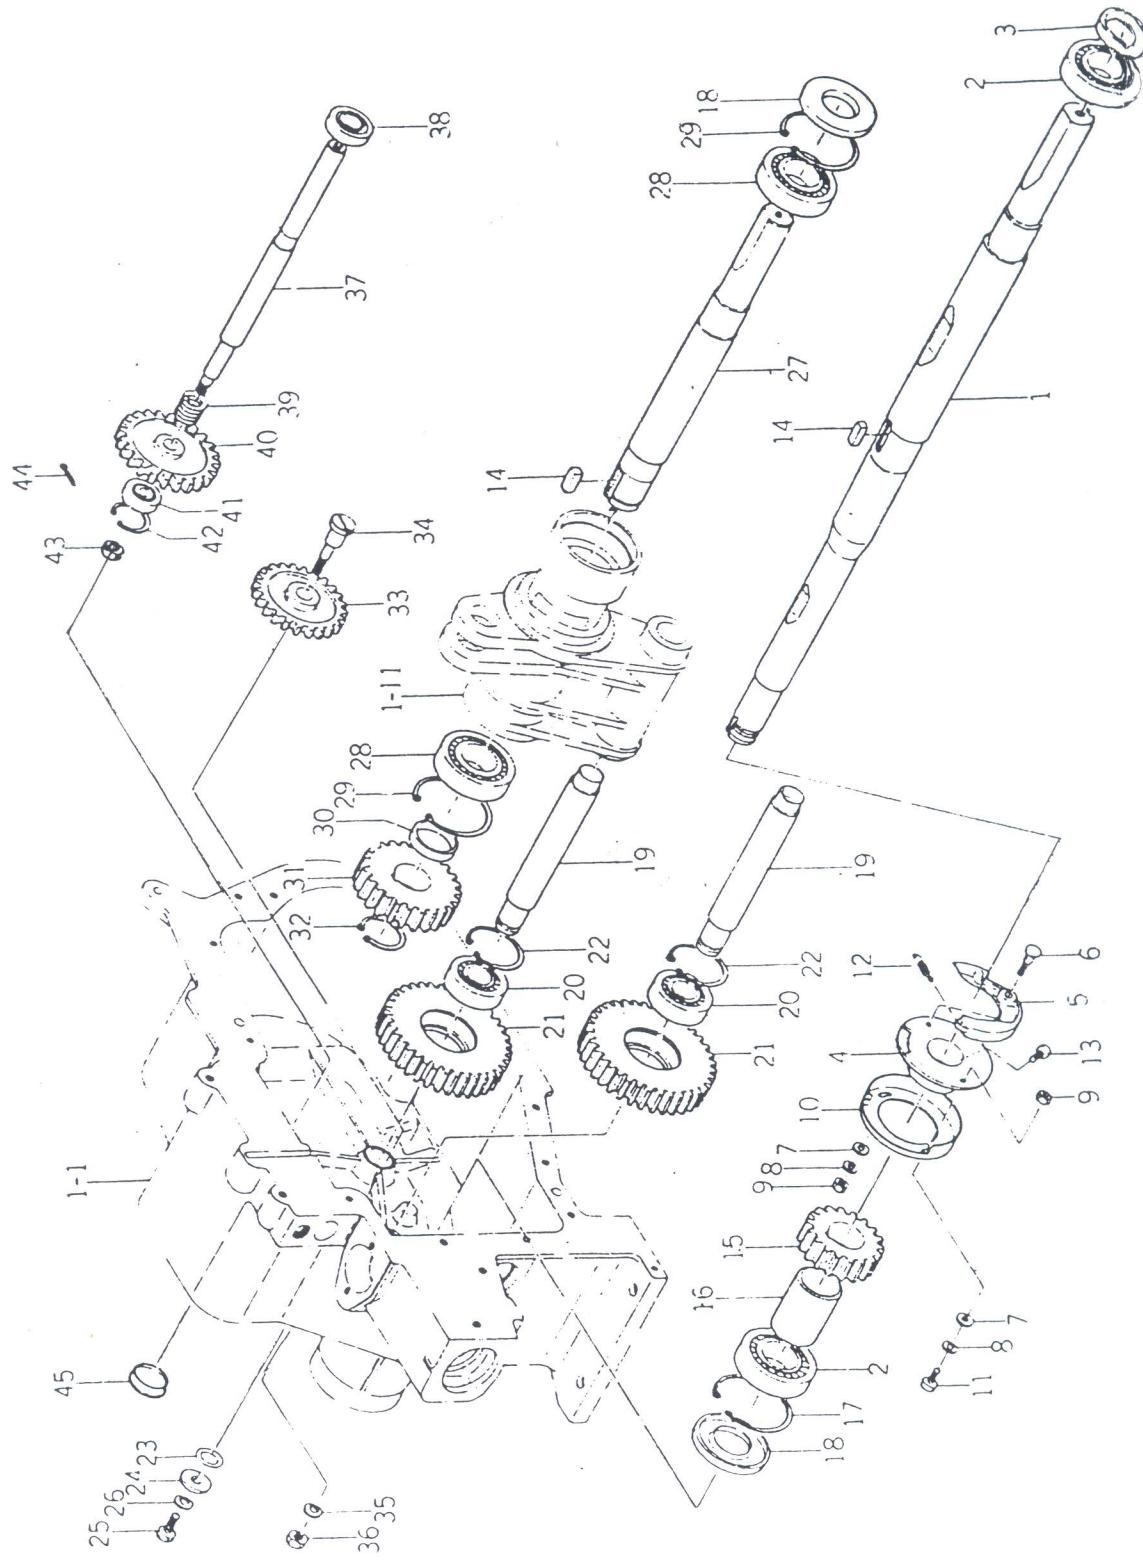

2. GEAR SYSTEM

agrindo-ISEKI
 PADDY HUSKER
 HEAD HC600A2

KEY NO.	PARTS NO.	PARTS NAME	QTY	STANDARD	REMARK
2 - 1	4168-102-0010-0	Shaft main	1		
2 - 2	V60011-062060	Bearing , RB / 6206	2	6206	
2 - 3	V74213-050080	Seal oil / VC30508	1	VC30508	
2 - 4	4114-104-0011-0	Metal governor	1		
2 - 5	4101-104-0031-0	Weight governor	1		
2 - 6	4114-104-0020-0	Pin governor	1		
2 - 7	V41236-000500	Washer plate / M5	2	M5	
2 - 8	V40116-000500	Washer spring / M5	2	M5	
2 - 9	V30026-000500	Nut / M5 P=0.8	2	M5 P=0.8	
2 - 10	4101-104-0021-0	Case governor	1		
2 - 11	V11116-500100	Screw / M5x10 P=0.8	1	M5x10 P=0.8	
2 - 12	4101-104-0051-0	Spring governor	1		
2 - 13	4116-104-0040-0	Bolt set / M8x16	1	M8x16	
2 - 14	4123-102-0050-0	Key gear	2		
2 - 15	4123-102-0030-0	Gear main shaft	1		
2 - 16	4123-102-0040-0	Collar main shaft	1		
2 - 17	V70514-006200	Ring snap / C62	1	C62	
2 - 18	V74213-062050	Seal oil / VC30625	2	VC30625	
2 - 19	4123-102-0080-0	Pin idle	2		
2 - 20	V60011-062040	Bearing RB / 6204	2	6204	
2 - 21	4123-102-0070-0	Gear idle	2		
2 - 22	V70514-004700	Ring snap / C47	2	C47	
2 - 23	V72010-240160	O-ring/P16	2	P16	
2 - 24	4101-102-0380-1	Washer	2		
2 - 25	V20126-080200	Bolt / M8x20	2	M8x20	
2 - 26	V40116-000800	Washer spring / M8	2	M8	
2 - 27	4123-102-0090-0	Shaft sub	1		
2 - 28	V60011-062060	Bearing RB / 6206	2	6206	
2 - 29	V70514-006200	Ring snap / C62	2	C62	
2 - 30	4123-102-0120-0	Collar shaft sub	1		
2 - 31	4123-102-0110-0	Gear sub shaft	1		
2 - 32	V70414-003000	Ring snap / C30	1	C30	
2 - 33	4123-102-0130-0	Gear idle	1		
2 - 34	4123-102-0060-0	Pin idle	1		
2 - 35	V40116-000800	Washer spring / M8	1	M8	
2 - 36	V30026-000800	Nut / M8	1	M8	


2. GEAR SYSTEM

agrindo-ISEKI
PADDY HUSKER
HEAD HC600A2

KEY NO.	PARTS NO.	PARTS NAME	QTY	STANDARD	REMARK
2 - 37	4123-102-0140-0	Shaft rice feeding	1		
2 - 38	V60012-062020	Bearing RB / 6202 Z	1	6202 Z	
2 - 39	4112-102-0130-0	Spring	1		
2 - 40	4123-102-0150-0	Gear rice feeding	1		
2 - 41	V60011-062000	Bearing RB / 6200	1	6200	
2 - 42	V70514-003000	Ring snap / C30	1	30	
2 - 43	V32126-001000	Nut slotted / M10	1	M10	
2 - 44	V50015-200200	Pin split / 2x20	1	Ø2x20	
2 - 45	4110-102-0060-0	Seal oil	1		

3. ROLL CASE SYSTEM

agrindo-ISEKI
PADDY HUSKER
HEAD HC600A2

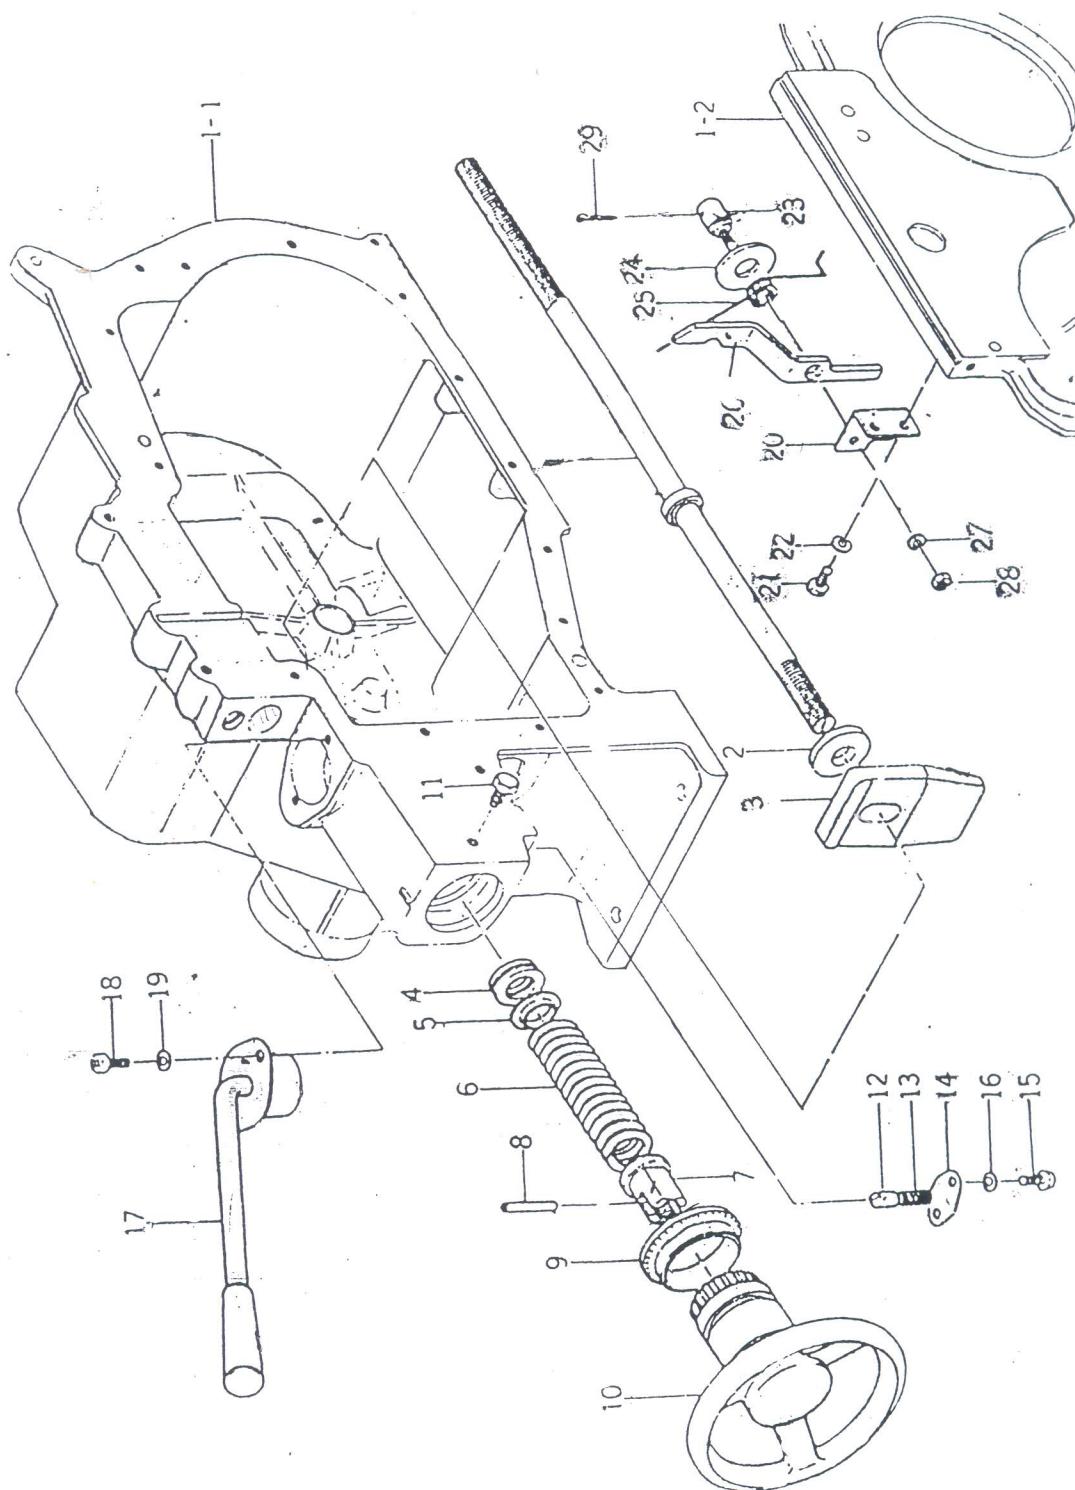


3. ROLL CASE SYSTEM

agrindo-ISEKI
PADDY HUSKER •
HEAD HC600A2

KEY NO.	PARTS NO.	PARTS NAME	QTY	STANDARD	REMARK
3 - 1	4123-105-2000-0	Shaft roll	1		
3 - 2	4123-105-0020-0	Washer, (B)	1		
3 - 3	4123-105-0030-0	Stopper	1		
3 - 4	V61011-511020	Bearing, TB / 51102	1	51102	
3 - 5	4106-105-0031-0	Washer, (A)	1		
3 - 6	4123-105-0040-0	Spring	1		
3 - 7	413-105-0050-0	Nut, Spring adjusting	1		
3 - 8	V58014-040340	Pin, Spring / W4x34	1	Ø4x34	
3 - 9	4106-105-0080-0	Dial, Roll clearance	1		
3 - 10	4123-105-0060-0	Handle roll	1		
3 - 11	4116-105-0010-0	Bolt set / M8x12	1	M8x12	
3 - 12	4101-202-0370-0	Stopper window power adjusting	1		
3 - 13	4101-202-0380-0	Spring window power adjusting	1		
3 - 14	4123-105-0070-1	Stopper spring	1		
3 - 15	V11116-600120	Screw / M6x12	2	M6x12	
3 - 16	V40116-000600	Washer spring / M6	2	M6	
3 - 17	4123-105-2100-0	Cam roll opening	1		
3 - 18	V11116-600120	Screw / M6x12	2	M6x12	
3 - 19	V40116-000600	Washer spring / M6	2	M6	
3 - 20	4123-104-0011-0	Bracket	1		
3 - 21	V20026-060120	Bolt / M6x12	2	M6x12	
3 - 22	V40116-000600	Washer spring / M6	2	M6	
3 - 23	4123-104-0020-0	Pin	1		
3 - 24	V41326-001400	Washer / M14	1	M14	
3 - 25	4123-104-0040-0	Spring	1		
3 - 26	4123-104-0030-0	Rod	1		
3 - 27	V40116-000600	Washer spring / M6	1	M6	
3 - 28	V30026-000600	Nut / M6	1	M6	
3 - 29	V50015-300250	Pin split / 3x25	1	3x25	

4. ROLL CASE SYSTEM

agrindo-ISEKI
PADDY HUSKER
HEAD HC600A2

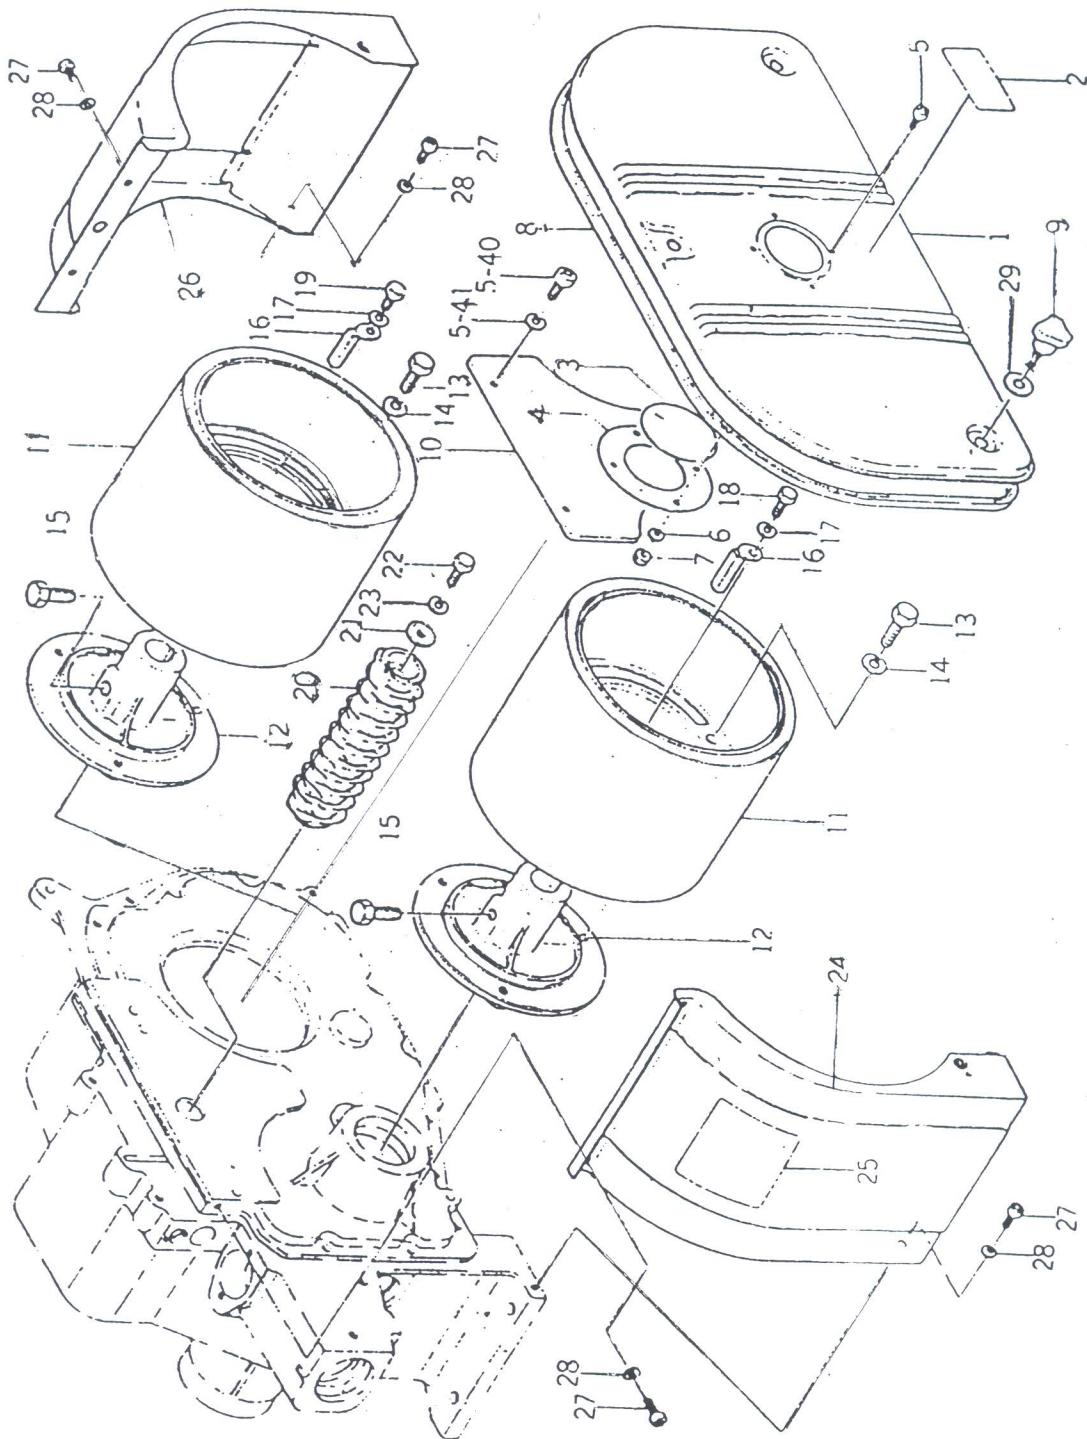

4. ROLL CASE SYSTEM


agrindo ISEKI
PADDY HUSKER
HEAD HC600A2

KEY NO.	PARTS NO.	PARTS NAME	QTY	STANDARD	REMARK
4 - 1	4168-103-2000-0	Cover roll	1		
4 - 2	4168-901-0010-0	Mark model	1		
4 - 3	4123-103-0010-0	Plate window	1		
4 - 4	4123-103-0020-1	Stopper	1		
4 - 5	V11116-500100	Screw / M5x10 P=0.8	4	M5x10 P=0.8	
4 - 6	V40116-000500	Washer spring / M5	4	M5	
4 - 7	V30026-000500	Nut / M5 P=0.8	4	M5 P=0.8	
4 - 8	4123-103-0030-0	Seal , roll cover	1		
4 - 9	3256-702-0010-0	Bolt knob / M8	3	M8	
4 - 10	4123-101-0050-1	Plate	1		
4 - 11	4101-103-6000-0	Roll white 60	2		
4 - 12	4114-103-0010-1	Boss drum	2		
4 - 13	V20126-100200	Bolt / M10x20	6	M10x20	
4 - 14	V40116-001000	Washer spring / M10	6	M10	
4 - 15	4123-103-0040-0	Bolt set / M12x25	2	M12x25	
4 - 16	4101-103-4000-0	Key roll	2		
4 - 17	V40116-000600	Washer spring / M6	2	M6	
4 - 18	4116-103-0020-0	Screw / M6x16	1	M6x16	
4 - 19	V20026-000120	Bolt / M6x12	1	M6x12	
4 - 20	4123-102-0230-1	Roll rice feeding	1		
4 - 21	4101-102-0380-1	Washer	1		
4 - 22	V20126-080200	Bolt / M8x20	1	M8x20	
4 - 23	V40116-000800	Washer spring / M8	1	M8	
4 - 24	4123-103-2000-1	Case roll F	1		
4 - 25	4168-901-0040-0	Mark	1		
4 - 26	4123-103-2100-1	Case roll R	1		
4 - 27	V11116-600120	Screw / M6x12	8	M6x12	
4 - 28	V40116-000600	Washer spring / M6	8	M6	
4 - 29	V41316-000800	Washer plate / M8	3	M8	

5. FUNNEL SYSTEM

agrindo-ISEKI

PADDY HUSKER
HEAD HC600A2

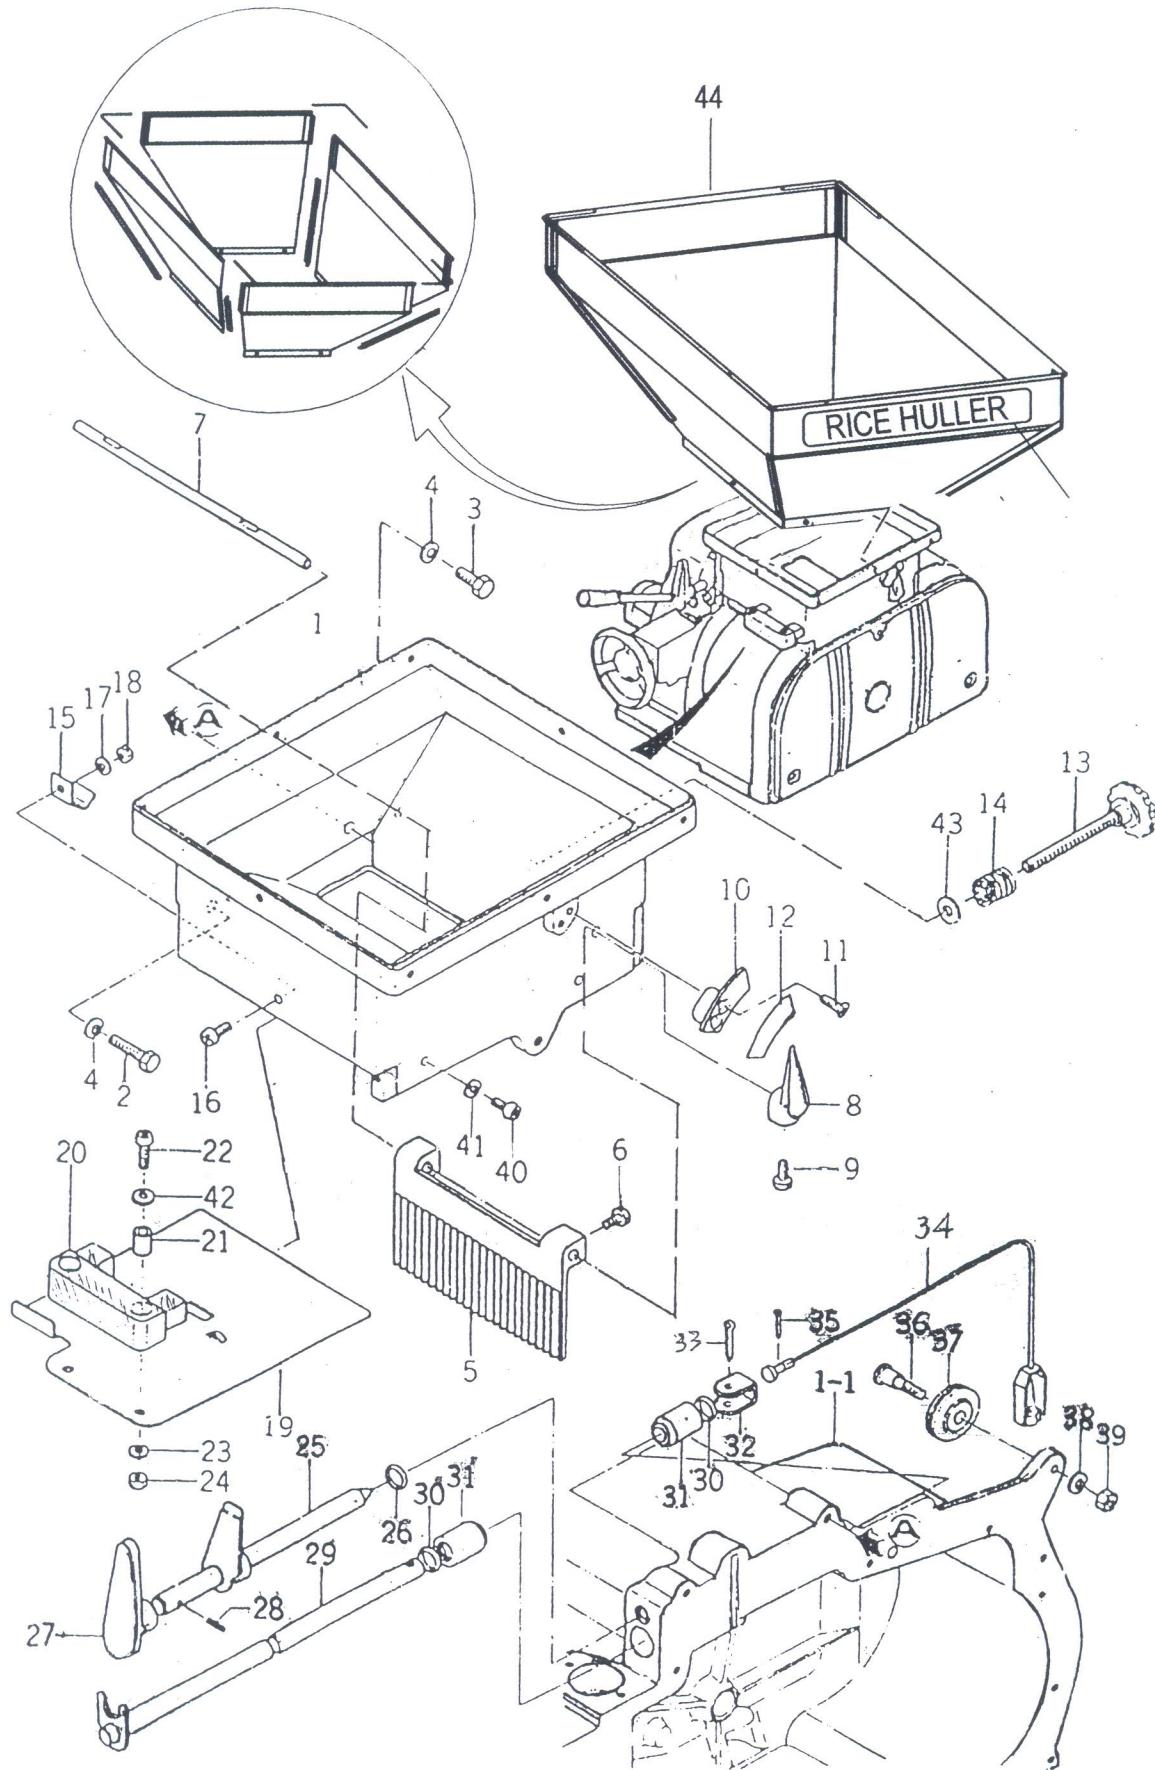

5. FUNNEL SYSTEM

agindo-ISEKI
PADDY HUSKER
HEAD HC600A2

KEY NO.	PARTS NO.	PARTS NAME	QTY	STANDARD	REMARK
5 - 1	4168-101-0010-0	Funnel large	1		
5 - 2	V20126-080350	Bolt / M8x35	1	M8x35	
5 - 3	V20126-080250	Bolt / M8x25	1	M8x25	
5 - 4	V40116-000800	Washer spring / M8	2	M8	
5 - 5	4123-101-0020-1	Plate opening adjusting	1		
5 - 6	V20026-060120	Bolt / M6x12	2	M6x12	
5 - 7	4123-101-0030-0	Shaft	1		
5 - 8	4114-101-0030-0	Indicator opening	1		
5 - 9	V20026-060160	Bolt / M6x16	1	M6x16	
5 - 10	4150-101-0061-0	Plate dial LH	1		
5 - 11	V11216-500250	Screw / M5x25 P=0.8	2	M5x25 P=0.8	
5 - 12	4150-301-0031-0	Namer LH	1		
5 - 13	4123-101-0070-0	Handle adjusting	1		
5 - 14	4101-101-0050-0	Spring	1		
5 - 15	4123-101-0060-0	Spring shutter	1		
5 - 16	V11116-600160	Screw / M6x16	1	M6x16	
5 - 17	V40116-00060	Washer spring / M6	1	M6	
5 - 18	V30026-000600	Nut / M6	1	M6	
5 - 19	4123-101-0040-0	Shutter	1		
5 - 20	3728-362-0060-0	Grip	1		
5 - 21	3728-362-0070-0	Pipe grip	1		
5 - 22	V11116-600250	Screw / M6x25	2	M6x25	
5 - 23	V40116-000600	Washer spring / M6	2	M6	
5 - 24	V30026-000600	Nut / M6	2	M6	
5 - 25	4123-104-2000-0	Shaft shutter up	1		
5 - 26	V72010-240140	O - ring / P14	1	P14	
5 - 27	4123-104-0080-1	Lever shutter	1		
5 - 28	V58014-030250	Pin spring / W3x25	1	W3x25	
5 - 29	4123-104-2100-0	Shaft shutter	1		
5 - 30	V72010-240140	O - ring / P14	2	P14	
5 - 31	4123-102-2050-0	Bush shutter shaft	2		
5 - 32	4123-104-0050-0	Plate wire conn	1		
5 - 33	V50015-400250	Pin split / 4x25	1	4x25	
5 - 34	4123-104-2200-0	Wire	1		
5 - 35	V50015-200150	Pin split / 2x15	1	2x15	
5 - 36	4123-104-0060-0	Pin pulley	1		

5. FUNNEL SYSTEM


agrindo-ISEKI

PADDY HUSKER
HEAD HC600A2

KEY NO.	PARTS NO.	PARTS NAME	QTY	STANDARD	REMARK
5-37	4123-104-0070-0	Pulley	1		
5-38	V40116-000800	Washer spring / M8	1	M8	
5-39	V30026-000800	Nut / M8	1	M8	
5-40	V11116-600200	Screw / M6x20	2	M6x20	
5-41	V40116-000600	Washer spring / M6	2	M6	
5-42	V41316-000600	Washer plate / M6	2	M6	
5-43	4101-102-0380-0	Washer	1		
5-44	4168-101-0020-0	Inlet hopper	1		
5-45	4168-901-0030-0	Mark	2		

6. MAIN SHAFT PULLEY SYSTEM

agrindo-ISEKI
PADDY HUSKER
HEAD HC600A2

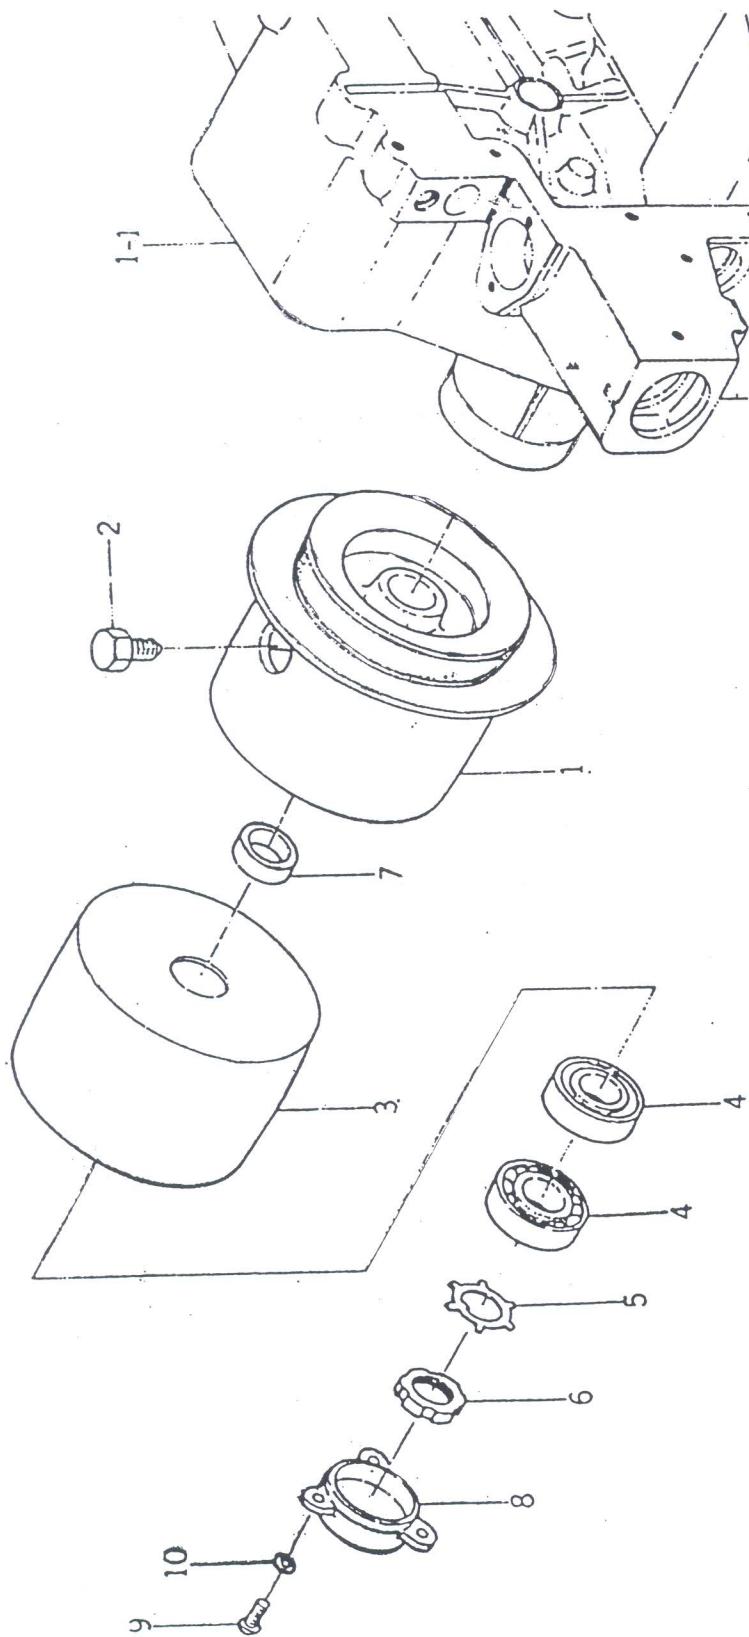

6. MAIN SHAFT PULLEY SYSTEM



KEY NO.	PARTS NO.	PARTS NAME	QTY	STANDARD	REMARK
6 - 1	4165-102-0030-0	Pulley main shaft	1		
6 - 2	4123-103-0040-0	Bolt set / M12x25	1	M12x25	
6 - 3	4165-102-0040-0	Pulley loose	1		
6 - 4	V60012-062050	Bearing RB / 6205 Z	2	6205 Z	
6 - 5	V67130-000500	Washer adapter / AW 05	1	AW 05	
6 - 6	V67020-000500	Nut adapter / AN 05	1	AN 05	
6 - 7	4150-102-0050-0	Collar loose pulley	1		
6 - 8	4150-102-0060-0	Cover bearing	1		
6 - 9	V11116-600160	Screw / M6x16	3	M6x16	
6 - 10	V40116-000600	Washer spring / M6	3	M6	