


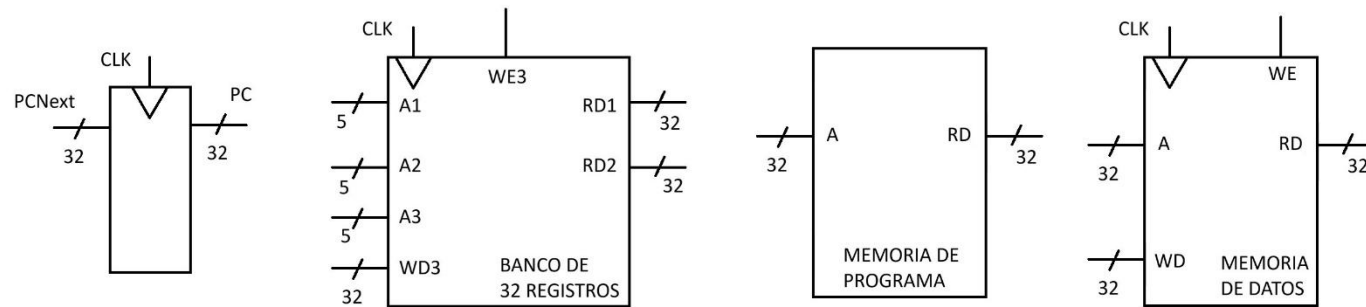

Dirección	Instrucción	Tipo	Campos				Lenguaje de máquina			
			imm	rs1	f3	rd	op			
0x1000	L7: lw x6, -4(x9)	I	111111111100	01001	010	00110	0000011	ffc4a303		
			imm	rs2	rs1	f3	imm	op		
0x1004	sw x6, 8(x9)	S	00000000 00110	01001	010	01000	0100011	0064a423		
			f7	rs2	rs1	f3	rd	op		
0x1008	or x4, x5, x6	R	00000000 00110	00101	110	00100	0110011	0062e233		
			imm	rs2	rs1	f3	imm	op		
0x100c	beq x4, x4, L7	B	11111111 00100	00100	000	10101	1100011	fe420ae3		

inicialmente:
x5 = 6
x9 = 0x2004

dirección 2000 contiene 10