## Color coding

Cables and connectors are color-coded to facilitate correct connection. The color codes are:

- Backbone is blue.
- Spurs are white.

A power cable is also provided and is color-coded with a red strip.

## Important: you must fit Terminators

In order to ensure correct data transmission through a SeaTalk^ng system, **a Terminator is required at each end of the backbone cable run.** Dedicated Terminators are available for this purpose. **Do NOT attempt to run a system that is not correctly terminated.**

## Available parts

The following parts are available:

**Backbone cable**

Part numbers: 1 ft 3 in (400 mm) - A06033
3 ft 3 in (1 m) - A06034
9 ft 10 in (3 m) - A06035
16 ft 4 in (5 m) - A06036
65 ft 7 in(20 m) - A06037

**Spur cable**

Part numbers: 1 ft 3 in (400 mm) - A06038,
3 ft 3 in (1 m) - A06039
9 ft 10 in (3 m) - A06040
16 ft 4 in (5 m) - A06041

**T-Piece**

Connects spur to backbone.

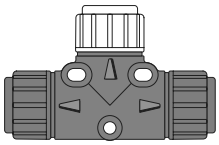

Part number: A06028

**5-Way Connector**

Connects spurs to backbone



Part number: A06064

**Backbone Extender**

Connects two backbone cables

Part number: A06030

**Terminator**

Fitted at each end of backbone



Part number: A06031

**Blanking Plug**

Inserted into unused spur connector positions in 5-way connector & T Piece



Part number: A06032

**Elbow Spur cable** (1 ft 3 in (400 mm))

For spurs in confined spaces



Part number: A06042

**SPX Spur cable**

Connects SeaTalk$^{ng}$ to Raymarine SPX Course Computers

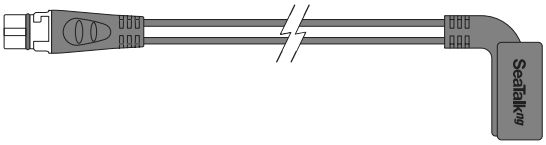


Part number: To be announced

**Power cable**

Connects SeaTalk$^{ng}$ 12 V dc supply



Part number: A06049

**Stripped End Spur cable**

Connects products which do not have plug-in connectors (e.g. transducer pods)

Part numbers: 1 m - A06043, 3 m - A06044

**SeaTalk Adaptor cable**

Connects SeaTalk$^{ng}$ products to SeaTalk(1)




Part number: A06047

**SeaTalk$^2$ adaptor cable**

Connects SeaTalk$^{ng}$ products to SeaTalk$^2$




Part number: A06048

**DeviceNet female adaptor cable**

Connects SeaTalk$^{ng}$ products to NMEA2000

Part number: A06045

| | |
|---|---|
| **DeviceNet male adaptor cable**<br>Connects SeaTalk$^{ng}$ products to NMEA2000 |  <br>Part number: A06046 |
| **E-Series Adaptor cable**<br>Connects SeaTalk$^{ng}$ products to Raymarine E-Series Displays |  <br>Part number: A06061 |
| **SeaTalk$^{ng}$ Reference Manual** | Part number: 81300-1 |
| **Backbone Kit** | Part number: A25062<br>Comprises: Two terminators<br>One 65 ft 7 in (20 m) Backbone cable<br>Two 16 ft 4 in (5 m) Backbone cables<br>Four T Piece connectors<br>One Power Cable<br>One SeaTalk$^{ng}$ Reference Manual (this book) |

### Other cables

In addition to the parts listed, a range of connector cables is available from your Raymarine dealer to connect to other Raymarine products and systems.

### Connectors

SeaTalk$^{ng}$ connectors are lockable to ensure reliable, secure connectivity. Keyways on the connectors ensure correct orientation. Locking collars on the SeaTalk$^{ng}$ T-Piece, 5-Way Connector and Backbone Extender rotate to lock the connections. Molded arrow indicators on the connectors align to show when the connector is unlocked.

## 1.3 Using SeaTalk$^{ng}$

A complete SeaTalk$^{ng}$ backbone comprises two or more backbone cables connected in series. There must be only one backbone and this must be terminated with two terminators, one at each end of the backbone. Do NOT connect a terminator to any spur.

In a SeaTalk$^{ng}$ system and any system to which it is connected:

- As a general rule, there must only be one data source (transducer) for each data type. Although some products may be permitted as secondary data sources, do not duplicate the source for any data unless permission is specifically given in the relevant product documents.
- There must be only one power source.

It is particularly important to be aware of these requirements when connecting to another system. For example, in Raymarine SeaTalk(1), power is often supplied from the system autopilot.