


Tergeo™

Dust to Tergeo, Time to Life.

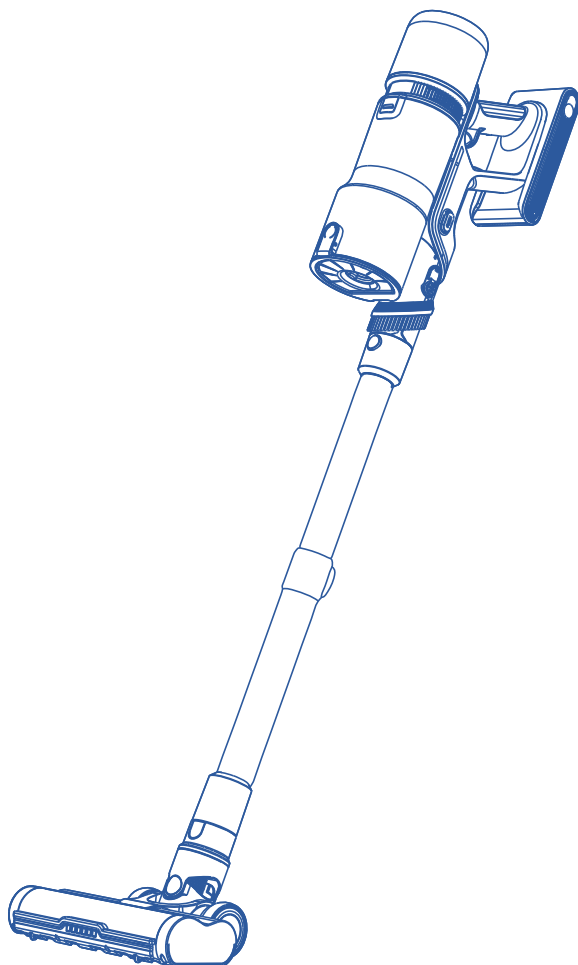

USER MANUAL

V40 Cordless Vacuum Cleaner

▲ Please read this carefully and keep it in a safe place for future reference.

CONTENTS

Important Safety Instructions 01

Getting to Know Your Vacuum..... 04

Product Assembly..... 05

Use of Vacuum..... 07

Maintenance..... 09

Troubleshooting..... 10

Warranty..... 11

Package Contents

- 1x Vacuum Body
- 1x Integrated Brush
- 1x Floor Brush
- 1x Wall-Mount
- 2x Accessory Holder
- 1x Crevice Tool
- 1x 2-in-1 Pet Tool
- 1x Clean Brush Tool
- 2x Filter Sponge
- 1x Power Adaptor
- 3x Screw
- 3x Wall Anchor
- 1x User Manual

Specification

Model	V40001	
Battery Input	29.6V=2200mAh Li-ion battery	
Rated Power	450W*	
Charging Input	100–240V~ 50/60Hz 0.5A	
Dimensions Product	9.84 x10.23 x 47.24 in / 25 x 26 x 120 cm	
Battery Operating Conditions	Charging Temperature: 39.2°–104°F / 4°–40°C Storage Temperature: 32°–77°F /0°–25°C Storage Humidity: 65%±20%	
Weight (Vacuum Body + Battery)	3.88 lb / 1.76kg	
Runtime** (Using Floor Brush)	ECO (I)	45 minutes
	MID (II)	30 minutes
	TURBO (III)	15 minutes
Runtime** (Using Crevice Tool)	ECO (I)	60 minutes
	MID (II)	35 minutes
	TURBO(III)	17 minutes
Charging Time	4-5 hours	

* May vary +/- 10W.

** Tested at room temperature.

IMPORTANT SAFETY INSTRUCTIONS

When using this vacuum, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE

WARNING – To reduce the risk of fire, electric shock, or injury:

- **CAUTION:** Risk of injury. Roller brush may start unexpectedly. Remove battery pack before cleaning or servicing.
- **Do not** leave the vacuum unattended while it is on. Unplug from outlet when not charging and before servicing.
- **Do not** use outdoors or on wet surfaces.
- Children should be supervised to ensure that they do not play with the vacuum.
- **Do not** allow to be used as a toy. Close attention is necessary when used by or near children.
- This vacuum is not to be used by persons (including children) with reduced physical, sensory, or mental capacities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children should not clean or perform maintenance on the vacuum without supervision.
- **Only** use the vacuum as described in this manual.
- **Always** turn the vacuum off before connecting or disconnecting the stick, nozzles, brushes, or vacuum head.
- Use **only** manufacturer's recommended attachments.
- **Do not** use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- **Do not** handle the charger or vacuum with wet hands.
- **Do not** put any object into any opening. **Do not** use the vacuum with any opening blocked. Keep free of dust, lint, hair, or anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all body parts away from openings and moving parts.
- Use extra care when cleaning on stairs.
- **Do not vacuum the following** (or use where they may be present):
 - Sharp objects such as glass shards, metallic nails, metal paper clips, or pins;
 - Ultrafine particles such as lime, cement, sawdust, gypsum powder, or ashes;
 - Hazardous materials or chemicals such as solvents, drain cleaner, strong acids, or strong alkalis.
- **Never** place the charger or its cable near any heat source.

- **Do not** vacuum water or any liquids.
- **Do not** vacuum anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- **Do not** use without dust bin and filters in place.
- **Do not** point the vacuum at any person or animal while it is on.
- Store the vacuum on a small stand or hang it from the wall.
- **Do not** use the vacuum in temperatures above 104°F (40°C) or below 39.2°F (4°C).
- Disconnect the battery pack from the appliance before making any adjustments, changing accessories, or storing appliance. Such preventive safety measures reduce the risk of starting the appliance accidentally.
- **Do not** unplug by pulling on cord. To unplug, grasp the plug, not the cord. Turn off all controls before unplugging.
- Keep the charging cable out of areas where people walk often. Place the cable where it will not be tripped over.

Battery & Charger

WARNING: Read all safety warnings and instructions. Failure to follow the warnings and instructions may result in electric shock, fire, and/or serious injury.

- **Do not** pull or carry the vacuum by the charging cable, use the cable as a handle, close a door on the cable, or pull the cable around sharp edges or corners. **Do not** run any appliance over the cable.
- Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the appliance. Carrying the appliance with your finger on the switch or energizing appliance that have the switch on invites accidents.
- When the battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws, or other small metal objects that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.
- **Do not** use the charger to charge other appliances besides this vacuum.
- **Only** recharge the vacuum with the charger specified by our corporation. A charger that is suitable for one type of appliance may create a risk of fire when used with a different battery pack. For use only with the CZH015360050USWP. Please contact us for more information. **Customer Support** (see back cover)
- **Only** use the battery pack specifically designed for this vacuum. Use of any other battery packs may create a risk of injury and fire. **Customer Support** (see back cover)
- **Do not** expose the battery pack or vacuum to fire or excessive temperatures. The battery used in this device may present a risk of fire or chemical burn if mistreated. **Do not** disassemble, short contacts, heat above 140°F (60°C), or incinerate. Exposure to fire or temperatures above 266°F (130°C) may cause an explosion.

- Under abusive conditions, liquid may be ejected from the battery. Avoid contact. If contact occurs, flush with water. If liquid contacts eyes, immediately flush with water and seek medical help. Liquid ejected from the battery may cause irritation or burns.
- **Do not** use the battery pack or vacuum if they are damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosions, or risk of injury.
- Have servicing performed **only** by a qualified repair person using identical replacement parts. This will ensure that the safety of the vacuum is maintained.
- **Do not** modify or attempt to repair the vacuum or the battery pack except as indicated in the manual.
- Follow all charging instructions and **do not** charge the battery pack or vacuum outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.
- **WARNING: Do not** use with non-rechargeable batteries.
- **Do not** use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- **Do not** use without dust bag and/or filters in place.

FCC Compliance Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: (1) Reorient or relocate the receiving antenna. (2) Increase the separation between the equipment and receiver. (3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. (4) Consult the dealer or an experienced radio/ TV technician for help.

SAVE THESE INSTRUCTIONS


NOT FOR COMMERCIAL USE

HOUSEHOLD USE ONLY

Getting to Know Your Vacuum

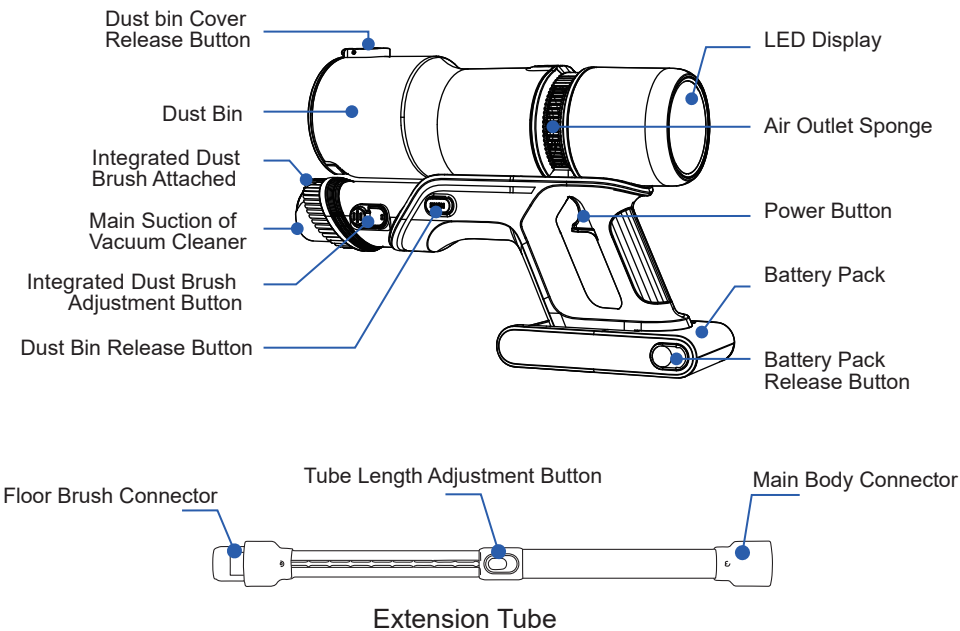

Wall Mount with Accessory Holder




2-in-1 Pet Tool




Crevice Tool




Filter Sponge

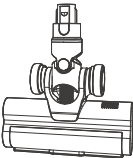

Floor Brush



Rechargeable Lithium Battery Pack



Power Adaptor



Clean Brush Tool



Screws Wall Anchors

PRODUCT ASSEMBLY





Notes

- The power supply of the vacuum cleaner needs to be shut off before installing and replacing accessories.

1. Battery installation and removal


Installation: Insert the battery pack into the main body and hear a “click” sound of the battery pack release button.

Removal: Press the battery pack release button and pull out the battery pack.

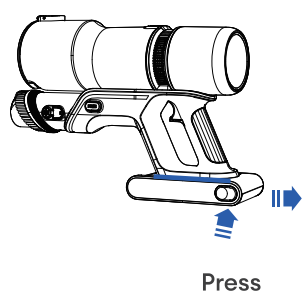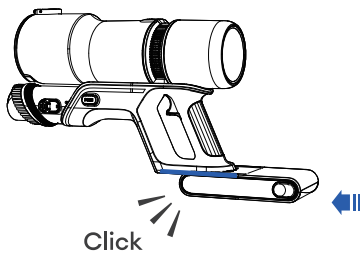

2.Install the tube and floor brush


Connect the extension tube and the floor brush to the main body in turn. The “click” sounds of the connectors indicate that the connection is done properly, as shown in the figure.You can adjust vacuum height by adjusting the extension tube length to meet your cleaning needs.

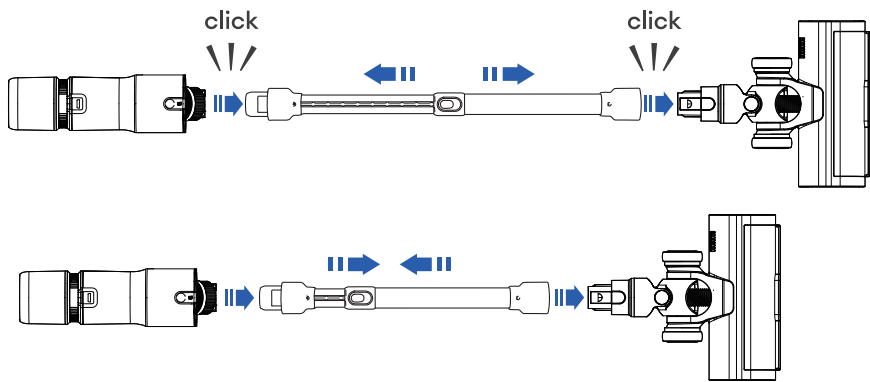

PRODUCT ASSEMBLY

3. Install accessories of vacuum cleaner



As shown in the picture, the product supports the installation of accessories, such as 2-in-1 pet tool. Install the crevice tool and hear a "click" sound to indicate that the installation is complete. When needed, press the adjustment button to extend the integrated dust brush; press the button again to retract it.

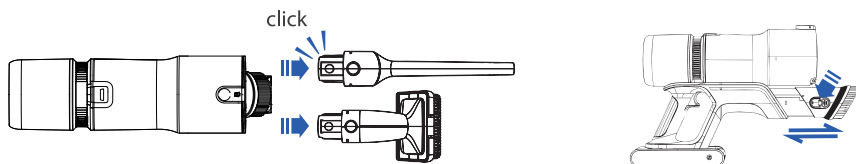

4. Remove and install the dust bin

Remove the dust bin: Press the dust bin release button with one hand, and remove the dust bin upwards with the other hand.

Install the dust bin: Align the dust bin limit buckle, press down the dust bin, hear the "click" sound, the dust bin installation is complete.


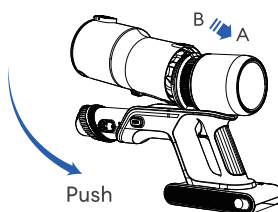
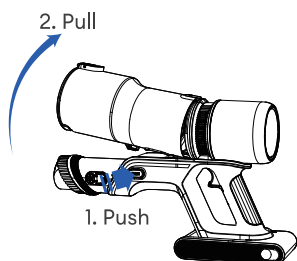


5. Use the wall mount

Install the wall mount: Insert the wall anchors into the pre-mounting holes on the wall, thread three fixing screws through the three mounting holes of the wall mount, align the fixing screws with the wall anchors holes, insert the fixing screws into the wall anchors holes, and tighten the screws clockwise.


Install the accessory holder with wall mount: Align the accessory holder **R** and accessory holder **L** hook to wall mount two sides slot, and push and locked them into position.

using the wall mount and Tools Storage: once the wall mount is fixed, place the vacuum on the wall mount as shown in the picture. Put the crevice tool and 2-in-1 pet tool on the accessory holder, you can put them on the top of the holder or click them on the holder as shown in the picture. Always store the vacuum on the wall mount.

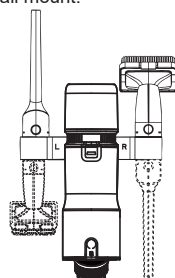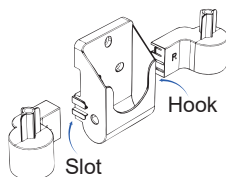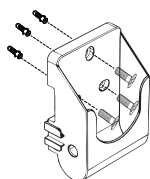


USE OF VACUUM


1. Charging the vacuum

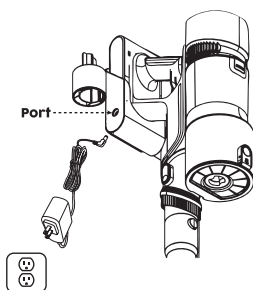

I .Put the vacuum body with battery pack directly on the wall mount, insert the charging adapter plug into the AC outlet, and insert the power adapter socket into the charging port on the wall mount & vacuum battery pack, and start charging.

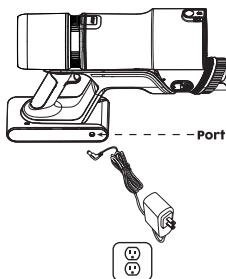


II . Insert the charging adapter plug into the AC outlet, and then insert the adapter charging head into the vacuum body for direct charging.

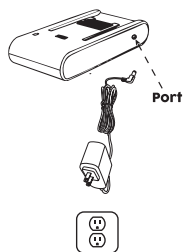

III . You can also dismantle the battery pack and use the adapter to charge it separately.

2. Switching on and off and switching suction mode for your different use

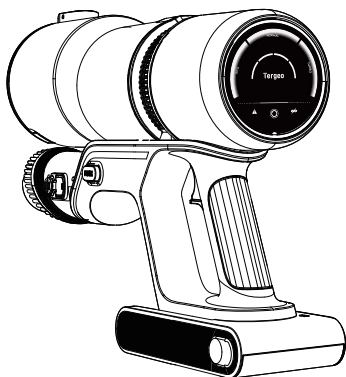

Power button. Click the power button to turn on the machine, and click again to turn off the machine.

Suction mode button. “” The machine defaults to Normal mode, click the button again and it switch to Turbo, and click it to ECO mode under power on condition. Click the button again- the cycle repeats.


USE OF VACUUM

3. Lamp display situation


OPERATIONAL USE

Press the Power Button to start and stop cleaning. It automatically defaults to Normal Mode, Use the Mode selection Button to choose from 3 different Modes: ECO Mode, Normal Mode, Turbo Mode.

LED DISPLAY

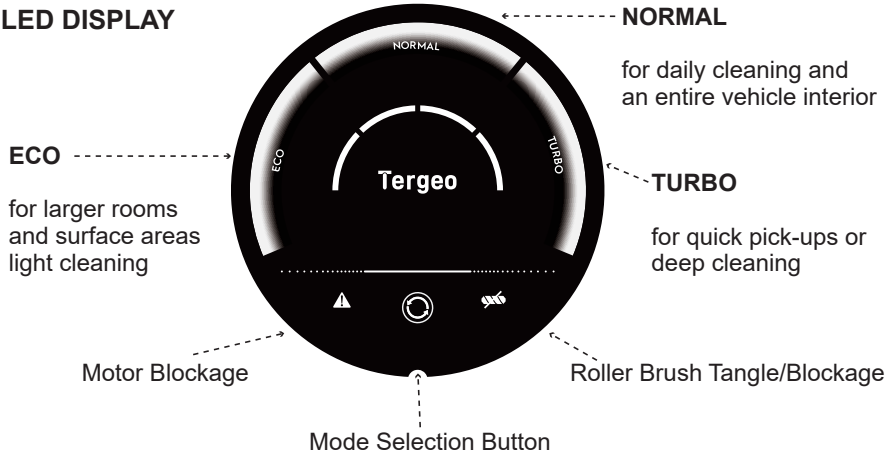


STATUS OF BATTERY INDICATOR

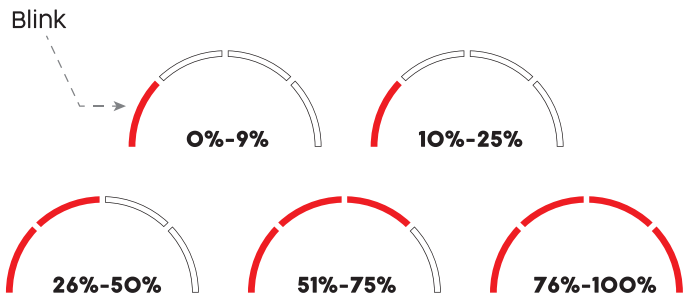


MAINTENANCE

Clean the dust bin and filter

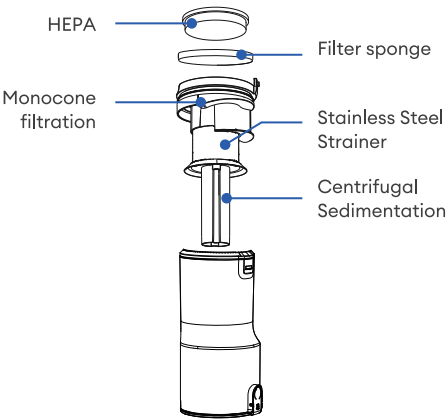

Clean the HEPA and filter sponge:

If the vacuum cleaner is blocked or the suction drops significantly during Normal operation, the HEPA should be cleaned. Take down the dust bin of the vacuum cleaner, take out the HEPA from the dust bin, remove the dust from the HEPA, knock the HEPA or wash it with clean water, and then dry the HEPA in the sun, then put it back into the dust bin after the HEPA is completely dried. Don't bend or twist the HEPA during cleaning or rinsing. The HEPA can only be used after been completely dried.




Cleaning of power floor brush

1. As shown in the picture, push the button to unlock the floor brush, and rotate the end cover of roller brush to unlocked state, and pull out the whole brush roller .

Note: when pulled out, some of the dusts will fall.

2. As shown in the picture, clean up the tangled hair or debris on the roller brush then put the roller brush back to the floor head, and press down the end cover to lock position.

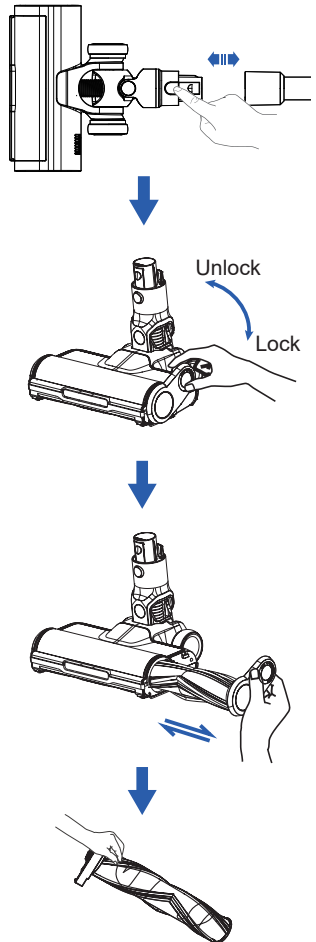

TROUBLESHOOTING

Fault	Possible Issues	Solution
The machine can not be started	The battery is not installed correctly	Please install the battery correctly
	The battery is dead	Charge the battery
Vacuum cleaner has no suction/suction becomes smaller	The dust bin is full	Please empty the rubbish in the dust bin
	The suction of the dust pipe or floor brush is blocked	Clean up the suction of the dust pipe or floor brush
	Dust bin or HEPA is not installed correctly	Reinstall the dust bin and HEPA
	HEPA blockage	Clean HEPA and filter sponge, dry it completely and put it back
Dust is leaking from the air outlet	HEPA is not installed correctly	Install HEPA correctly according to the manual
The roller brush stops turning, and the floor brush blockage indicator lights up in red	The roller brush is entangled or stuck, resulting in protection	Clear the winding or blockage and turn it back on
The exclamation point lights up in Red	Vacuum is blocked	Check for blockage inside the vacuum body, floor brush suction port, pipe, and the extension tube, remove any blockage.
Vacuum makes an abnormal noise	The brush roller is entangled or abnormally assembled.	Check the floor brush, clean the brush roller, assemble it to correct position .
	Vacuum is blocked	Check for blockage inside the vacuum body, floor brush suction port, pipe, and the extension tube, remove any blockage.

Note:

- . This vacuum cleaner must be used with the original battery and power adapter.
- . Do not use the battery for any purpose other than this vacuum cleaner.

Tergeo™

Dust to Tergeo, Time to Life.

To ensure you get better after-sale guarantee



Web: www.tergeoclean.com

We are always here to protect your rights



Email: support@tergeoclean.com

Company Address:

Room A305, Unit 101, Building 53, No. 998 Pangnan Road, Wujiang District, Suzhou, Jiangsu, China 215299