
Tergeo™

Dust to Tergeo, Time to Life.

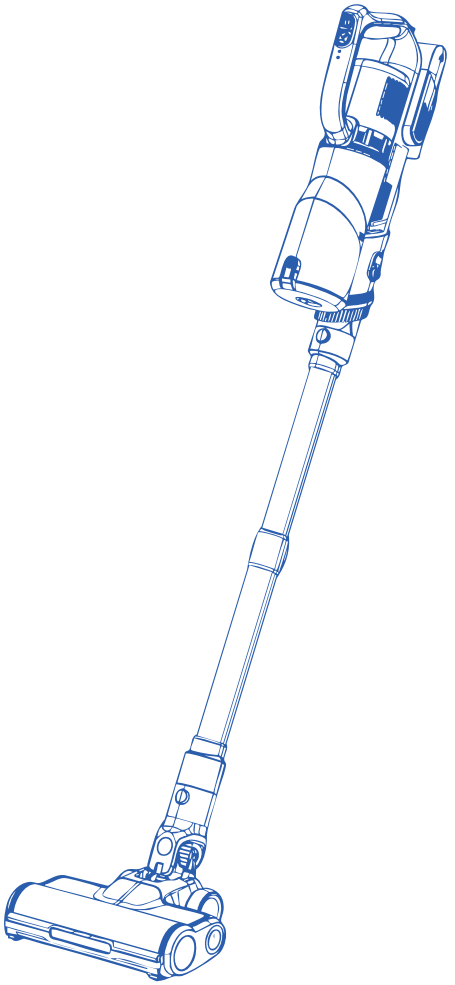

USER MANUAL

V50 Cordless Vacuum Cleaner

⚠ Please read this carefully and keep it in a safe place for future reference.

CONTENTS

Important Safety Instructions 01
Getting to Know Your Vacuum..... 04
Product Assembly..... 05
Use of Vacuum..... 07
Maintenance..... 08
Troubleshooting..... 10
Warranty..... 11

Package Contents

1x Vacuum Body
1x Integrated Brush
1x Floor Brush
1x Wall-Mount
1x 2-in-1 Crevice Tool
1x Clean Brush Tool
2x Filter Sponge
1x Power Adaptor
3x Screw
3x Wall Anchor
1x User Manual

Specification

Model	V50001	
Battery Input	22.2V=2200mAh Li-ion battery	
Rated Power	250W*	
Charging Input	100–240V~ 50/60Hz 0.5A	
Dimensions Product	9.84 x10.23 x 47.24 in / 25 x 26 x 120 cm	
Battery Operating Conditions	Charging Temperature: 32°F–113°F / 0°C–45°C Storage Temperature: -4°F–77°F /-20°C–25°C Storage Humidity: Maximum 80%	
Weight (Vacuum Body + Battery)	3.09 lb / 1.4kg	
Runtime** (Using Floor Brush)	ECO (I)	35 minutes
	NORMAL (II)	20 minutes
	TURBO (III)	12 minutes
Runtime** (Using Crevice Tool)	ECO (I)	45 minutes
	NORMAL (II)	25 minutes
	TURBO(III)	15 minutes
Charging Time	4-5 hours	

* May vary +/- 10W.
** Tested at room temperature.

IMPORTANT SAFETY INSTRUCTIONS

When using this vacuum, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE

WARNING – To reduce the risk of fire, electric shock, or injury:

- **CAUTION:** Risk of injury. Roller brush may start unexpectedly. Remove battery pack before cleaning or servicing.
- **Do not** leave the vacuum unattended while it is on. Unplug from outlet when not charging and before servicing.
- **Do not** use outdoors or on wet surfaces.
- Children should be supervised to ensure that they do not play with the vacuum.
- **Do not** allow to be used as a toy. Close attention is necessary when used by or near children.
- This vacuum is not to be used by persons (including children) with reduced physical, sensory, or mental capacities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children should not clean or perform maintenance on the vacuum without supervision.
- **Only** use the vacuum as described in this manual.
- **Always** turn the vacuum off before connecting or disconnecting the stick, nozzles, brushes, or vacuum head.
- Use **only** manufacturer's recommended attachments.
- **Do not** use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- **Do not** handle the charger or vacuum with wet hands.
- **Do not** put any object into any opening. **Do not** use the vacuum with any opening blocked. Keep free of dust, lint, hair, or anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all body parts away from openings and moving parts.
- Use extra care when cleaning on stairs.
- **Do not vacuum the following** (or use where they may be present):
  - Sharp objects such as glass shards, metallic nails, metal paper clips, or pins;
  - Ultrafine particles such as lime, cement, sawdust, gypsum powder, or ashes;
  - Hazardous materials or chemicals such as solvents, drain cleaner, strong acids, or strong alkalis.
  - **Never** place the charger or its cable near any heat source.

- **Do not** vacuum water or any liquids.
- **Do not** vacuum anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- **Do not** use without dust bin and filters in place.
- **Do not** point the vacuum at any person or animal while it is on.
- Store the vacuum on a small stand or hang it from the wall.
- **Do not** use the vacuum in temperatures above 113°F (45°C) or below 32°F (0°C).

Battery & Charger

WARNING: Read all safety warnings and instructions. Failure to follow the warnings and instructions may result in electric shock, fire, and/or serious injury.

- **Do not** pull or carry the vacuum by the charging cable, use the cable as a handle, close a door on the cable, or pull the cable around sharp edges or corners. **Do not** run any appliance over the cable.
- Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the appliance. Carrying the appliance with your finger on the switch or energizing appliance that have the switch on invites accidents.
- When the battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws, or other small metal objects that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.
- Disconnect the battery pack from the appliance before making any adjustments, changing accessories, or storing appliance. Such preventive safety measures reduce the risk of starting the appliance accidentally.
- **Do not** unplug by pulling on cord. To unplug, grasp the plug, not the cord. Turn off all controls before unplugging.
- Keep the charging cable out of areas where people walk often. Place the cable where it will not be tripped over.
- **Do not** use the charger to charge other appliances besides this vacuum.
- **Only** recharge the vacuum with the charger specified by our corporation. A charger that is suitable for one type of appliance may create a risk of fire when used with a different battery pack.For use only with the CZH013260050USWA or ZD012M260050US. Please contact us for more information.

  Customer Support (see back cover)
- **Only** use the battery pack specifically designed for this vacuum. Use of any other battery packs may create a risk of injury and fire.
  Customer Support (see back cover)
- **Do not** expose the battery pack or vacuum to fire or excessive temperatures. The battery used in this device may present a risk of fire or chemical burn if mistreated. **Do not** disassemble, short contacts, heat above 140°F(60°C), or incinerate. Exposure to fire or temperatures above 266°F (130°C) may cause an explosion.

- Under abusive conditions, liquid may be ejected from the battery. Avoid contact. If contact occurs, flush with water. If liquid contacts eyes, immediately flush with water and seek medical help. Liquid ejected from the battery may cause irritation or burns.
- **Do not** use the battery pack or vacuum if they are damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosions, or risk of injury.
- Have servicing performed **only** by a qualified repair person using identical replacement parts. This will ensure that the safety of the vacuum is maintained.
- **Do not** modify or attempt to repair the vacuum or the battery pack except as indicated in the manual.
- Follow all charging instructions and **do not** charge the battery pack or vacuum outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.
- **WARNING: Do not** use with non-rechargeable batteries.
- **Do not** use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- **Do not** use without dust bag and/or filters in place.

FCC Compliance Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.


Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


Note: This equipment has been tested and found to comply with the limits for a Class B digital device,pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: (1) Reorient or relocate the receiving antenna. (2) Increase the separation between the equipment and receiver. (3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. (4) Consult the dealer or an experienced radio/ TV technician for help.

SAVE THESE INSTRUCTIONS


NOT FOR COMMERCIAL USE
HOUSEHOLD USE ONLY

Getting to Know Your Vacuum

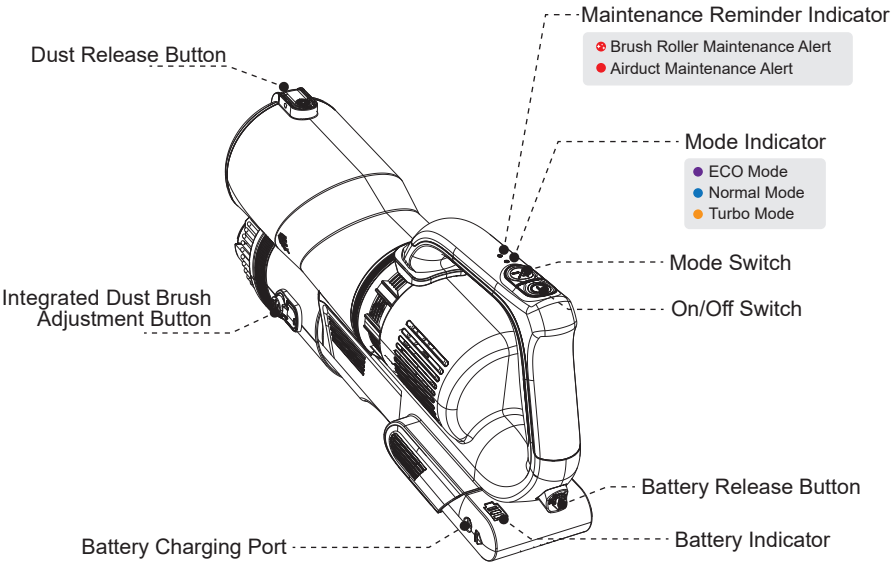

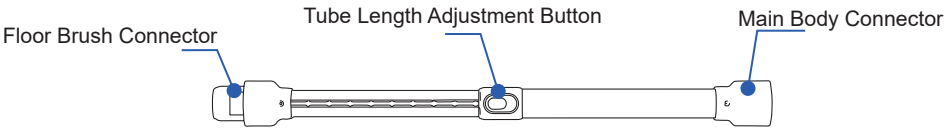

Extension Tube




Wall Mount




2-in-1
Crevice Nozzle




Filter Sponge



Power Adaptor

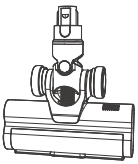

Floor Brush



Rechargeable
Lithium Battery Pack



Clean Brush Tool



Screws
Wall Anchors

PRODUCT ASSEMBLY


Notes


· The power supply of the vacuum cleaner needs to be shut off before installing and replacing accessories.

1. Battery installation and removal

Installation: Insert the battery pack into the main body and hear a “click” sound of the battery pack release button.


Removal: Press the battery pack release button and pull out the battery pack.

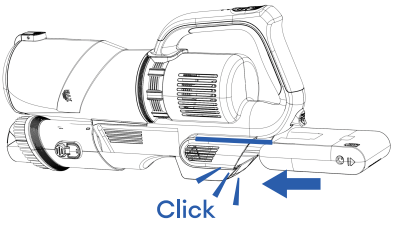

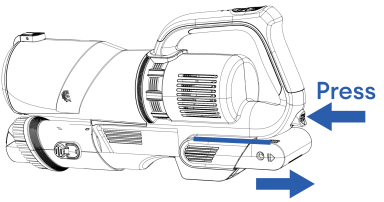

2.Install the tube and floor brush


Connect the extention tube and the floor brush to the main body in turn. The “click” sounds of the connectors indicate that the connection is done properly, as shown in the figure.You can adjust vacuum height by adjusting the extension tube length to meet your cleaning needs.

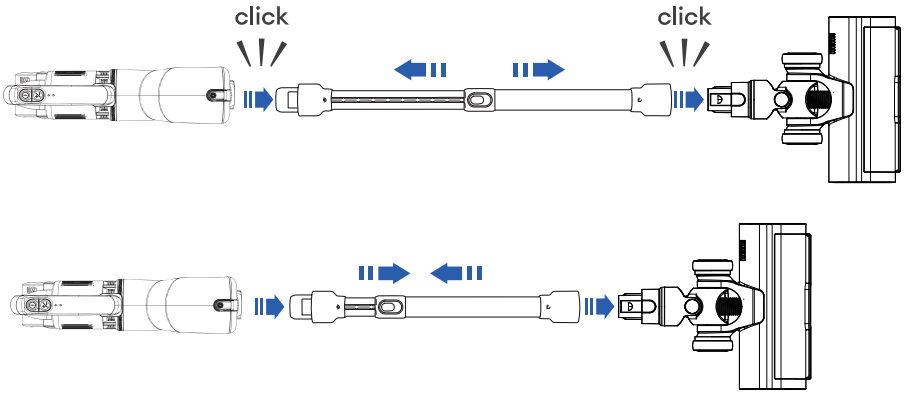

PRODUCT ASSEMBLY

3. Install accessories of vacuum cleaner


As shown in the picture, the product supports the installation of accessories, such as 2-in-1 Crevice Nozzle. Install the crevice tool and hear a “click” sound to indicate that the installation is complete. When needed, press the adjustment button to extend the integrated dust brush; press the button again to retract it.

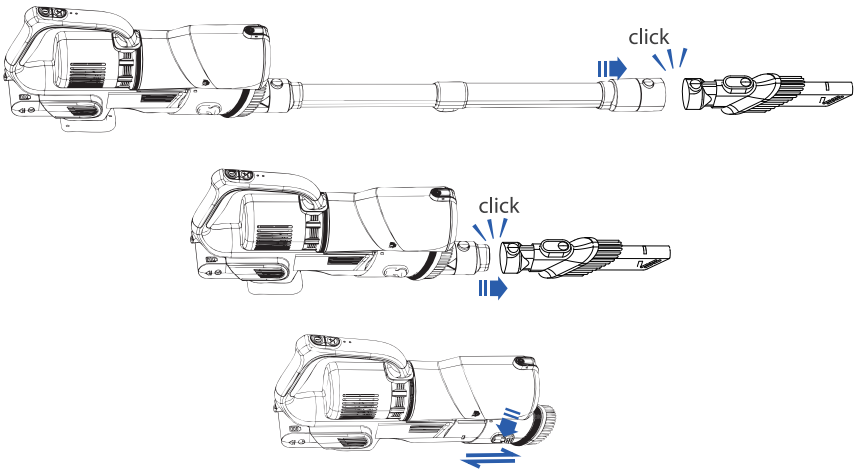


4. Remove and install the dust bin

Remove the dust bin: I. Hold the handle with one hand and the dust bin with the other. Rotate the dust bin as shown by the arrow until the unlock arrow aligns with the mark on the main unit, then remove the bin.


Install the dust bin: II. Hold the handle with one hand and the dust bin with the other. Align the dust bin with the mark on the main unit, then rotate as shown by the arrow until the marks align and the bin is securely installed.

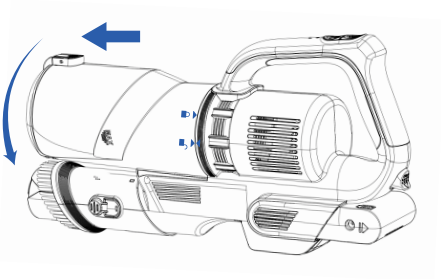

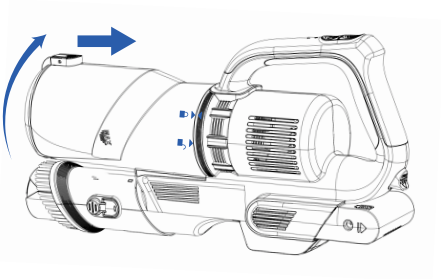


USE OF VACUUM


1. Charging the vacuum

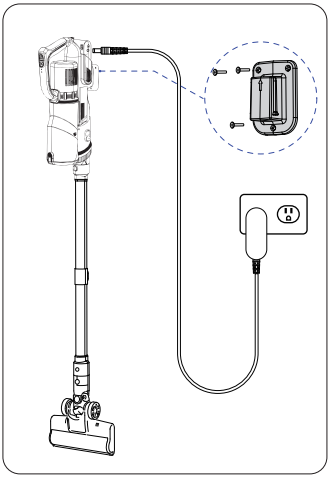

Ⅰ.Put the vacuum body with battery pack directly on the wall mount, insert the charging adapter plug into the AC outlet, and insert the power adapter socket into the charging port on vacuum battery pack, and start charging.

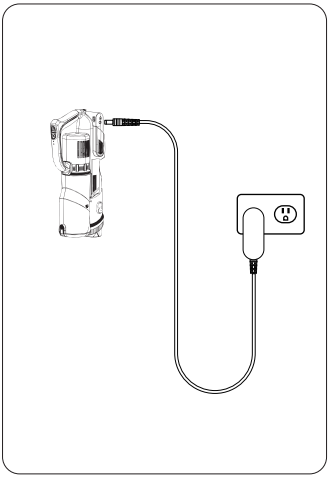

Ⅱ. Insert the charging adapter plug into the AC outlet, and insert the power adapter socket into the charging port on vacuum battery pack, and start charging.

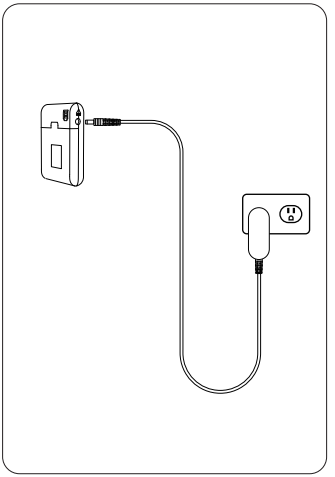


Ⅲ. You can also dismantle the battery pack and use the adapter to charge it separately.

During Use



While Charging

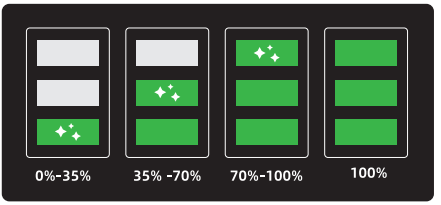


Notes

- Charge the battery promptly when the power is low.
- Only charge the vacuum cleaner indoors.
- Do not charge the battery when the temperature is below 0°C or above 40°c.
- The battery may become hot after extensive or repeated use. After use, allow it to cool naturally at room temperature and wait approximately one hour before charging.


MAINTENANCE

Clean the dust bin and filter

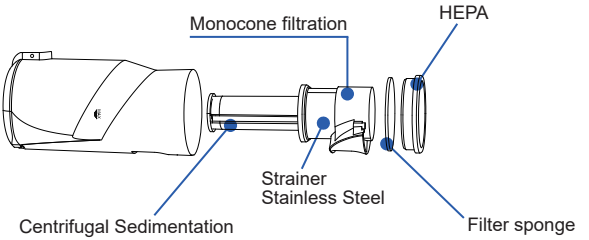


Clean the HEPA and filter sponge:
If the vacuum cleaner is blocked or the suction drops significantly during Normal operation, the HEPA should be cleaned. Take down the dust bin of the vacuum cleaner, take out the HEPA from the dust bin, remove the dust from the HEPA, knock the HEPA or wash it with clean water, and then dry the HEPA in the sun, then put it back into the dust bin after the HEPA is completely dried. Don't bend or twist the HEPA during cleaning or rinsing. The HEPA can only be used after been completely dried.


STEP 1

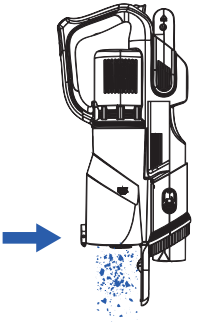


STEP 2

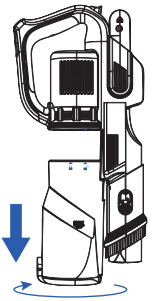

STEP 3

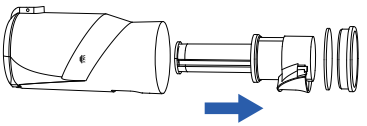


STEP 4

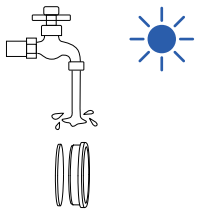

MAINTENANCE

Install the dust bin and filter

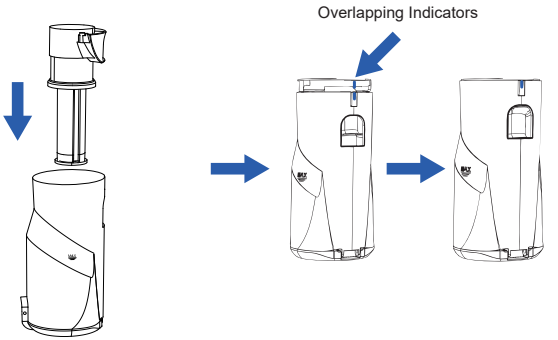


Cleaning of power floor brush

1. As shown in the picture,push the button to unlock the floor brush, and rotate the end cover of roller brush to unlocked state, and pull out the whole brush roller .

   Note: when pulled out, some of the dusts will fall.

2. As shown in the picture, clean up the tangled hair or debris on the roller brush then put the roller brush back to the floor head, and press down the end cover to lock position.

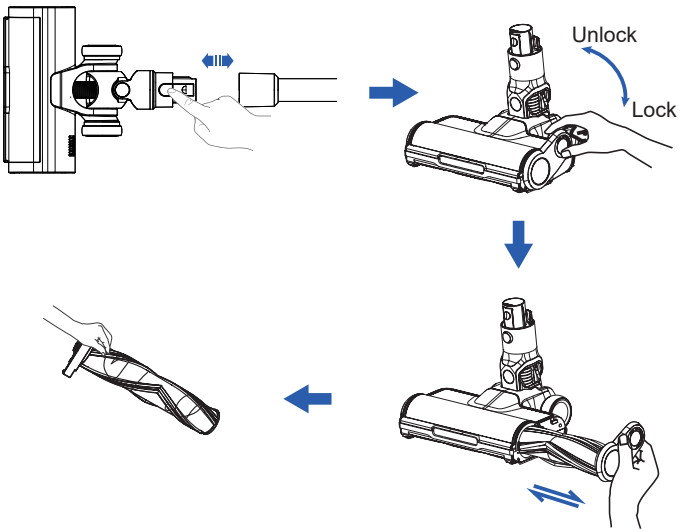

Troubleshooting

Fault	Possible Issues	Solution
The machine can not be started	The battery is not installed correctly	Please install the battery correctly
	The battery is dead	Charge the battery
Vacuum cleaner has no suction/suction becomes smaller	The dust bin is full	Please empty the rubbish in the dust bin
	The suction of the dust pipe or floor brush is blocked	Clean up the suction of the dust pipe or floor brush
	Dust bin or HEPA is not installed correctly	Reinstall the dust bin and HEPA
	HEPA blockage	Clean HEPA and filter sponge, dry it completely and put it back
Dust is leaking from the air outlet	HEPA is not installed correctly	Install HEPA correctly according to the manual
The roller brush stops turning, and the floor brush blockage indicator lights up in red	The roller brush is entangled or stuck, resulting in protection	Clear the winding or blockage and turn it back on
The exclamation point lights up in Red	Vacuum is blocked	Check for blockage inside the vacuum body, floor brush suction port, pipe, and the extension tube, remove any blockage.
Vacuum makes an abnormal noise	The brush roller is entangled or abnormally assembled.	Check the floor brush, clean the brush roller,assemble it to correct position .
	Vacuum is blocked	Check for blockage inside the vacuum body, floor brush suction port, pipe, and the extension tube, remove any blockage.

Note:
. This vacuum cleaner must be used with the original battery and power adapter.
. Do not use the battery for any purpose other than this vacuum cleaner.

Tergeo™

Dust to Tergeo, Time to Life.

To ensure you get better after-sale guarantee

Web：www.tergeoclean.com

We are always here to protect your rights

Email:support@tergeoclean.com

Company Address:

Room A305, Unit 101, Building 53, No. 998 Pangnan Road, Wujiang District, Suzhou, Jiangsu, China 215299