


Section : Login

Purpose

This guide will walk you through the process of logging into the Nemo FMS platform, provide tips for effective use, and offer troubleshooting advice for common issues.

How to Guide

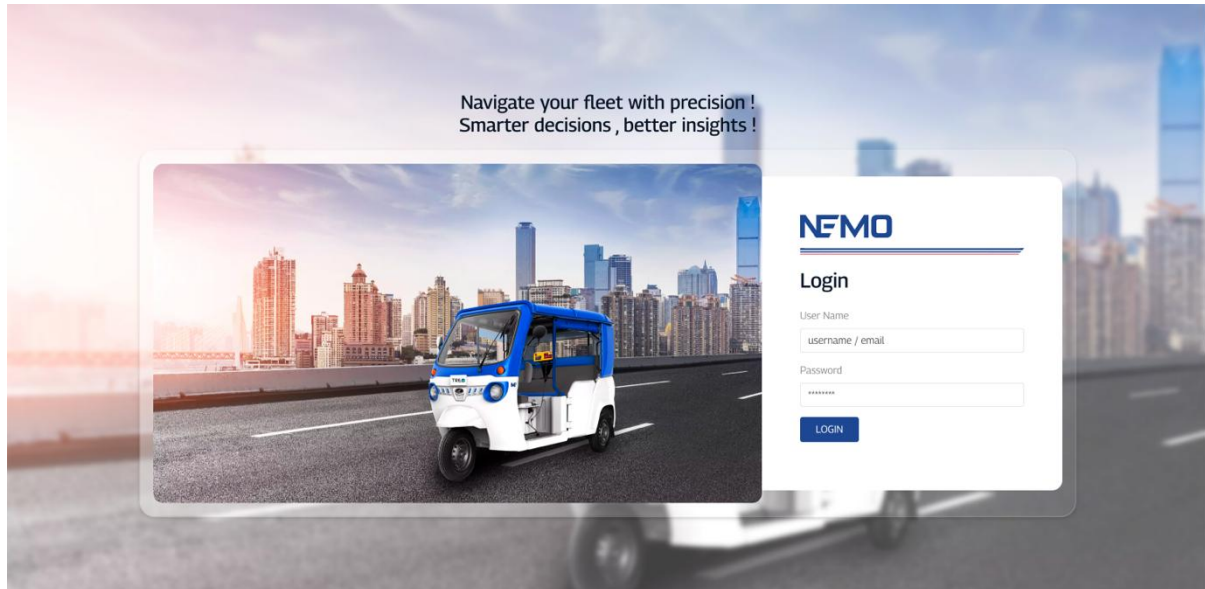

Step 1: Access the Login Page

1. Open your web browser and navigate to the Nemo FMS login page. (<https://nemo.mahindraelectric.com/authentication/login/fms>)
2. You should see a screen similar to the one in the image above, featuring a login form on the right side and a visual of a fleet vehicle on the left.

Step 2: Enter Your Credentials

1. In the "User Name" field, enter your username or email address associated with your Nemo FMS account that have been provided you via email.
2. In the "Password" field, enter your password.
3. Double-check that your credentials are correct to avoid any login issues.

Step 3: Log In

1. Click the blue "LOGIN" button below the password field.
2. If your credentials are correct, you will be redirected to the Nemo FMS dashboard where you can start managing your fleet.

Tips for Effective Use

- **Keep Your Credentials Secure:** Always ensure that your username and password are kept secure to prevent unauthorized access.
- **Regularly Update Your Password:** For added security, change your password periodically.
- **Familiarize Yourself with the Dashboard:** Spend some time exploring the Nemo FMS dashboard to understand all the features and tools available to you.

- **Utilize Support Resources:** If you have any questions or need assistance, make use of the support resources provided by Nemo FMS, such as user manuals, FAQs, and customer support.

Troubleshooting Guide

Issue: Unable to Log In

- **Incorrect Credentials:** Double-check that you have entered the correct username/email and password. Ensure there are no typos.
- **Forgot Password:** If you have forgotten your password, look for a "Forgot Password" link on the login page to reset it.
- **Account Lockout:** After multiple failed login attempts, your account may be temporarily locked. Wait for a few minutes before trying again or contact customer support for assistance.

Issue: Page Not Loading

- **Internet Connection:** Ensure that your internet connection is stable and working properly.
- **Browser Compatibility:** Make sure you are using a compatible web browser. Nemo FMS may work best on the latest versions of popular browsers like Chrome, Firefox, or Edge.
- **Clear Cache:** Sometimes, clearing your browser's cache can resolve loading issues. Go to your browser settings and clear the cache and cookies.

Issue: Different Login Page

- **URL:** Please ensure you are using correct url.

Section : Fleet Overview

Purpose

Fleet Overview is designed to help fleet managers monitor and manage their fleet of vehicles efficiently. It provides real-time data on vehicle status, location, and performance, enabling better decision-making and operational efficiency.

How to Guide

Accessing the Dashboard

1. **Login:** Open your web browser and navigate to the NEMO Fleet Management Dashboard. Enter your login credentials to access the dashboard.

Navigating the Dashboard

1. **Dashboard Overview:** Upon logging in, you will see the main dashboard with a map displaying the locations of all vehicles in your fleet.
2. **Fleet Overview:** Click on "Fleet Overview" in the left-hand menu to get a summary of your fleet's status, including the total number of vehicles, those driving, disconnected, with low SOC (State of Charge), charging, and idle.

Viewing Vehicle Details

1. **Listed Vehicles:** On the right side of the dashboard, you will see a list of all vehicles in your fleet.
2. **Vehicle Information:** Click on any vehicle to view detailed information, including:
 - Odometer reading
 - SOC (State of Charge)
 - DTE (Distance to Empty)
 - Speed
 - Last connected time

Using Additional Features

1. **Navigate:** Use the "Navigate" option in the left-hand menu to get directions to a specific vehicle or location.
2. **Notifications:** Click on "Notifications" to view alerts and updates related to your fleet.
3. **Fleet Performance:** Access "Fleet Performance" to analyze the overall performance metrics of your fleet.
4. **Trip Overview:** Use "Trip Overview" to review trip details and history for each vehicle.
5. **Charge Overview:** Click on "Charge Overview" to monitor the charging status and history of your vehicles.
6. **Fleet Utilisation:** Use "Fleet Utilisation" to understand how effectively your fleet is being used.
7. **Fleet Reports:** Generate detailed reports on various aspects of your fleet by clicking on "Fleet Reports."
8. **Maintenance:** Track and schedule maintenance activities for your vehicles under the "Maintenance" section.
9. **Accounting:** Manage financial aspects related to your fleet in the "Accounting" section.

Tips

- **Regular Monitoring:** Regularly check the dashboard to stay updated on the status and performance of your fleet.

- **Set Alerts:** Configure notifications to receive alerts for critical events such as low SOC or maintenance due.
- **Data Analysis:** Use the performance and utilization reports to identify areas for improvement and optimize fleet operations.

Troubleshooting Guide

- **Unable to Login:** Ensure you are using the correct login credentials. If you have forgotten your password, use the "Forgot Password" option to reset it.
- **Vehicle Not Updating:** If a vehicle's data is not updating, check its connectivity status. It may be disconnected or out of network coverage.
- **Dashboard Not Loading:** Ensure you have a stable internet connection. Try refreshing the page or clearing your browser cache.
- **Incorrect Data:** If you notice any discrepancies in the data, verify the vehicle's sensors and connectivity. Contact support if the issue persists.

By following this guide, you can effectively use the NEMO Fleet Management Dashboard to monitor and manage your fleet, ensuring optimal performance and efficiency.

Purpose

The NEMO Vehicle Monitoring System is designed to help fleet managers and operators monitor the status, location, and performance of their vehicles in real-time. This system provides critical information such as the state of charge (SOC), distance to empty (DTE), speed, and last connected time for each vehicle in the fleet. The purpose of this guide is to help users understand how to navigate and utilize the NEMO system effectively.

How to Guide

1. Accessing the Dashboard

- **Login:** Open the NEMO application and log in with your credentials.
- **Dashboard Overview:** Once logged in, you will be directed to the main dashboard, which displays a map with the locations of all vehicles in your fleet.

2. Understanding the Dashboard

- **Map View:** The map shows the geographical locations of all vehicles. Each vehicle is represented by an icon, and the color of the icon indicates its status (e.g., driving, idle, charging, low SOC, disconnected).
- **Vehicle Status Summary:** At the bottom of the map, a summary provides the total number of vehicles and their current statuses (e.g., driving, idle, charging).

3. Viewing Vehicle Details

- **Vehicle List:** On the right side of the dashboard, there is a list of all vehicles in the fleet.
- **Vehicle Information:** Click on any vehicle in the list to view detailed information, including:
 - **Odometer:** Total distance traveled by the vehicle.
 - **SOC (State of Charge):** Current battery charge percentage.
 - **DTE (Distance to Empty):** Estimated distance the vehicle can travel with the remaining charge.
 - **Speed:** Current speed of the vehicle.
 - **Last Connected:** The last time the vehicle was connected to the system.

4. Navigating the Sidebar Menu

- **Icons:** The left sidebar contains various icons for different functionalities:
 - **Home:** Return to the main dashboard.

- **Reports:** Access detailed reports on vehicle performance and usage.
- **Alerts:** View alerts and notifications related to vehicle status.
- **Settings:** Configure system settings and preferences.
- **Help:** Access help and support resources.

Tips

- **Regular Monitoring:** Regularly check the dashboard to stay updated on the status of your fleet.
- **Set Alerts:** Configure alerts for critical events such as low SOC or vehicle disconnection to take timely action.
- **Use Reports:** Utilize the reporting feature to analyze vehicle performance and optimize fleet operations.
- **Map Zoom:** Use the zoom in/out feature on the map to get a detailed view of specific areas or an overview of the entire fleet.

Troubleshooting Guide

- **Vehicle Not Updating:** If a vehicle's status is not updating, check the last connected time. If it has been a while, the vehicle might be out of network coverage or powered off.
- **Incorrect Data:** If the data displayed seems incorrect, try refreshing the dashboard. If the issue persists, contact technical support.
- **Login Issues:** Ensure you are using the correct credentials. If you have forgotten your password, use the 'Forgot Password' option to reset it.
- **System Errors:** For any system errors or technical issues, contact NEMO support for assistance.

By following this guide, you should be able to effectively monitor and manage your fleet using the NEMO Vehicle Monitoring System.

Purpose

The NEMO Vehicle Management Dashboard is designed to help fleet managers monitor and manage their fleet of vehicles in real-time. The dashboard provides detailed information about each vehicle's status, location, and performance metrics, enabling efficient fleet operations and timely decision-making.

How to Use the NEMO Vehicle Management Dashboard

Step 1: Access the Dashboard

1. Open your web browser and navigate to the NEMO Vehicle Management Dashboard URL.
2. Log in using your credentials (username and password).

Step 2: Understand the Dashboard Layout

- **Map View:** The central part of the dashboard displays a map with icons representing the vehicles in your fleet. Each icon's color and shape indicate the vehicle's status (e.g., driving, idle, charging, low SOC, disconnected).
- **Vehicle List:** On the right side of the dashboard, there is a list of all vehicles with detailed information such as odometer reading, state of charge (SOC), distance to empty (DTE), speed, and last connected time.

Step 3: Monitor Vehicle Status

- **Total Vehicles:** At the bottom of the map, you can see the total number of vehicles in your fleet and their current status (e.g., driving, idle, charging).
- **Vehicle Details:** Click on any vehicle icon on the map or any vehicle entry in the list to view more detailed information about that specific vehicle.

Step 4: Use the Sidebar Menu

- **Console:** Access the console for advanced settings and configurations.
- **Legal Information:** View legal information related to the use of the dashboard.
- **Logout:** Log out of the dashboard when you are done.

Step 5: Additional Features

- **Zoom and Pan:** Use the zoom in/out buttons and drag the map to focus on specific areas.
- **Filter Vehicles:** Use the filter options to display only certain types of vehicles or statuses.

Tips

- Regularly check the SOC and DTE of your vehicles to ensure they are adequately charged and can complete their routes.
- Use the map view to quickly identify the location and status of all vehicles in your fleet.
- Set up alerts for low SOC or other critical statuses to take timely action.

Troubleshooting Guide

- **Unable to Log In:** Ensure you are using the correct username and password. If you have forgotten your password, use the "Forgot Password" option to reset it.
- **Vehicle Not Updating:** If a vehicle's status or location is not updating, check the vehicle's connectivity and ensure it is properly connected to the network.
- **Dashboard Not Loading:** Refresh the page or try accessing the dashboard from a different browser or device. Ensure your internet connection is stable.
- **Incorrect Information:** If you notice any discrepancies in the vehicle information, verify the data from the vehicle's onboard system and contact support if necessary.