
JLG

SERVICE AND MAINTENANCE MANUAL

Model 1930ES Electric Scissor Lift

Rev. C, January 2025

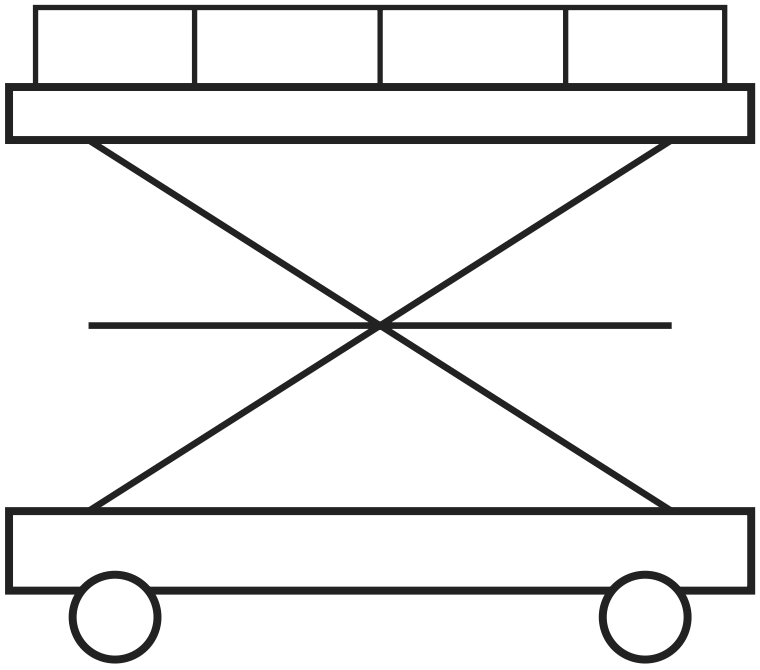

Fleet units	FL-112, FL-113, FL-118
Fleet	Mid-County Rental
Pages in excerpt	6

Contents

1	Safety notes	2
2	Specifications	3
4.3	Lift cylinder seal replacement	4
5	Hydraulic schematic	5
6	Troubleshooting	6

1 Safety notes

WARNING

- Lower the platform fully and fit the maintenance prop before working under it.
- Turn the key switch off and disconnect the battery before any hydraulic work.
- Hydraulic fluid under pressure can penetrate skin. Relieve pressure before opening any line.
- Wear eye protection and gloves. Dispose of used oil and filters per local rules.

Only trained and authorized technicians may service this machine. Read the operator manual before operating the lift.

2 Specifications

ITEM	VALUE
Working height	25 ft (7.62 m)
Platform height	19 ft (5.79 m)
Platform capacity	500 lb (227 kg)
Machine weight	3,280 lb (1,488 kg)
Drive power	24V DC, 4 batteries 6V 220 Ah
Hydraulic reservoir	1.3 gal (4.9 L)
System relief pressure	2,600 psi (179 bar)
Lift time, up / down	22 s / 30 s
Hydraulic fluid	AW32 hydraulic oil

Torque values


FASTENER	TORQUE
Gland nut, lift cylinder	220 ft lb
Cylinder pins, retaining bolt	35 ft lb
Wheel lug nuts	90 ft lb
Pump mounting bolts	18 ft lb

4.3 Lift cylinder seal replacement

Use seal kit JLG-4120-118 when the platform drifts down or fluid is visible on the cylinder rod.

1. Raise the platform, fit the maintenance prop and lower the platform onto the prop.
2. Turn the key switch off, disconnect the battery and tag the machine out of service.
3. Relieve system pressure by operating the manual lowering knob for 10 seconds.
4. Disconnect the hose at the cylinder base and cap both ends. Catch the fluid in a drain pan.
5. Remove the rod end and base pins and lift the cylinder clear with a hoist rated for 150 lb.
6. Unscrew the gland nut, withdraw the rod and remove the old seals. Fit the new JLG-4120-118 seals, lubricated with AW32 oil.
7. Reassemble, torque the gland nut to 220 ft lb, refit the cylinder and bleed the system.
8. Cycle the platform 3 times to full height. Check for leaks and drift of more than 2 in over 10 minutes.


Figure 4-3 Lift cylinder, exploded view

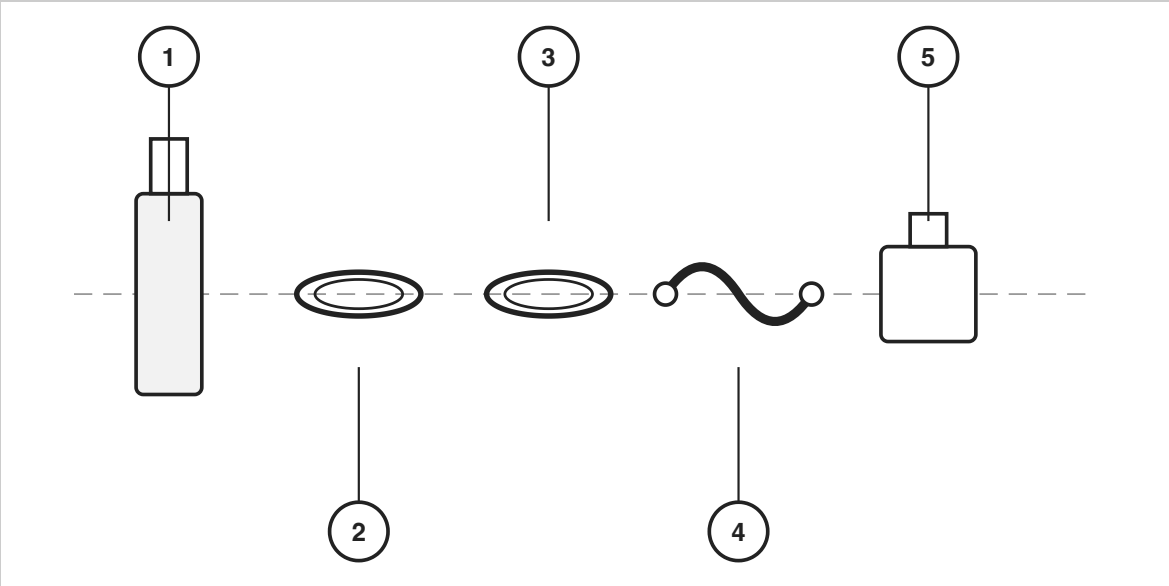

ITEM	PART NUMBER	DESCRIPTION	QTY
1	JLG–4120–204	Lift cylinder barrel and rod	1
2	JLG–4120–118	Lift cylinder seal kit	1
3	JLG–4120–118	Rod wiper (in seal kit)	1
4	JLG–4120–520	Lift cylinder hose	1
5	JLG–4120–402	Lowering valve, solenoid	1

5 Hydraulic schematic

The pump feeds the lift cylinder through the pressure line. The relief valve limits system pressure. To lower, the lowering valve opens and fluid returns through the filter to the tank.

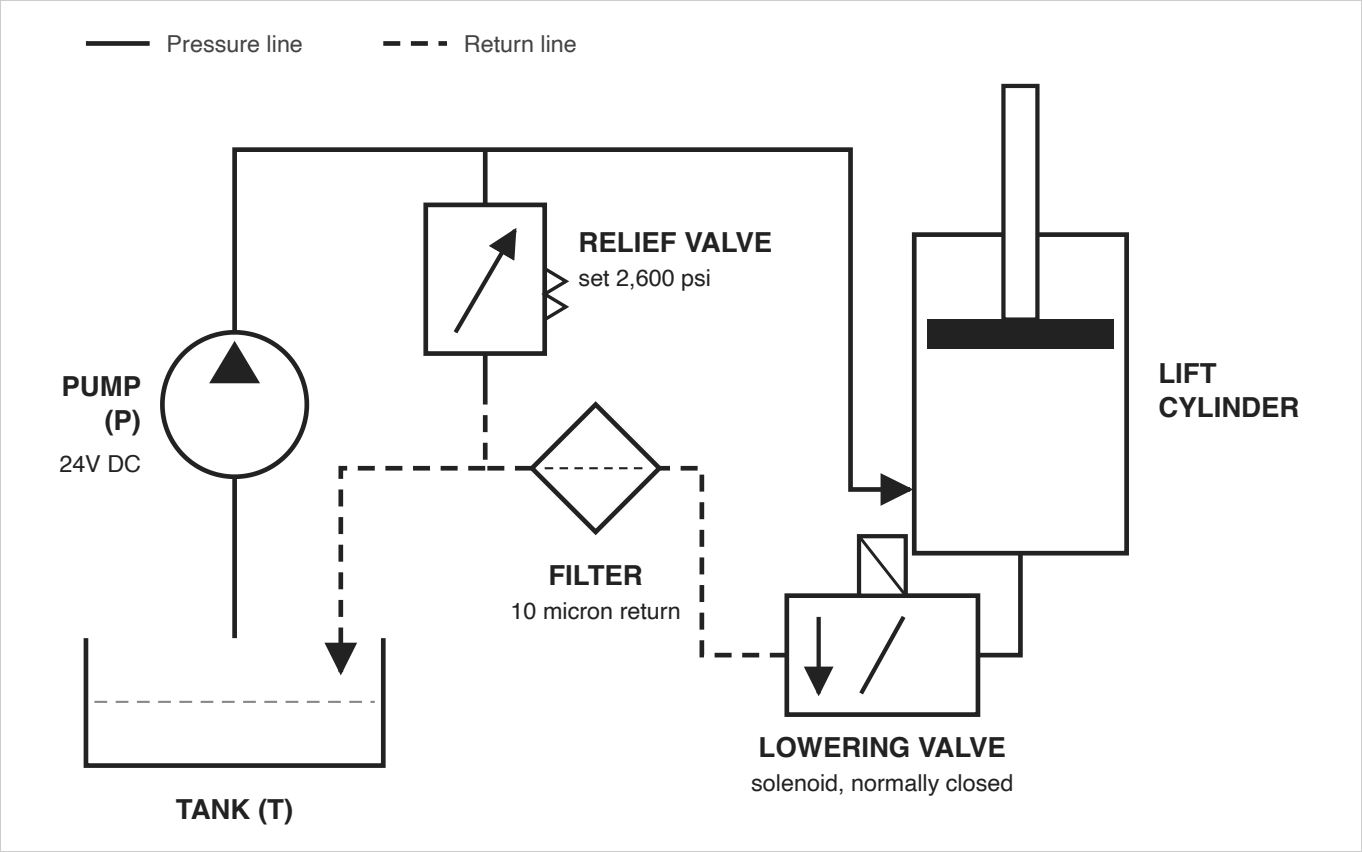

COMPONENT	PART NUMBER	NOTE
Pump, 24V DC	JLG-4120-311	Brush set JLG-4120-329
Lowering valve	JLG-4120-402	See bulletin SB-2026-047
Return filter	JLG-4120-415	Replace every 250 h
Lift cylinder	JLG-4120-204	Seal kit JLG-4120-118

6 Troubleshooting

SYMPTOM	LIKELY CAUSE	ACTION
Platform does not rise	Low battery charge	Charge batteries fully, check voltage at 24V
Platform does not rise	Relief valve set too low	Check pressure at test port, reset to spec
Platform drifts down	Lowering valve not seating	Clean or replace lowering valve, see bulletin SB-2026-047
Platform drifts down	Worn lift cylinder seals	Replace seals, see section 4.3
Slow lift speed	Clogged return filter	Replace filter element
Pump noisy	Low fluid level or air in system	Top up AW32 oil, cycle platform 3 times
Fluid on cylinder rod	Rod seal leak	Replace seal kit