
GPS Tracking

User Guide & Feature Overview

Live vehicle tracking, trip reports, driving behaviour, geofence alerts and engine cut-off — on the web, Android and iPhone. Everything you need to know to start using it.

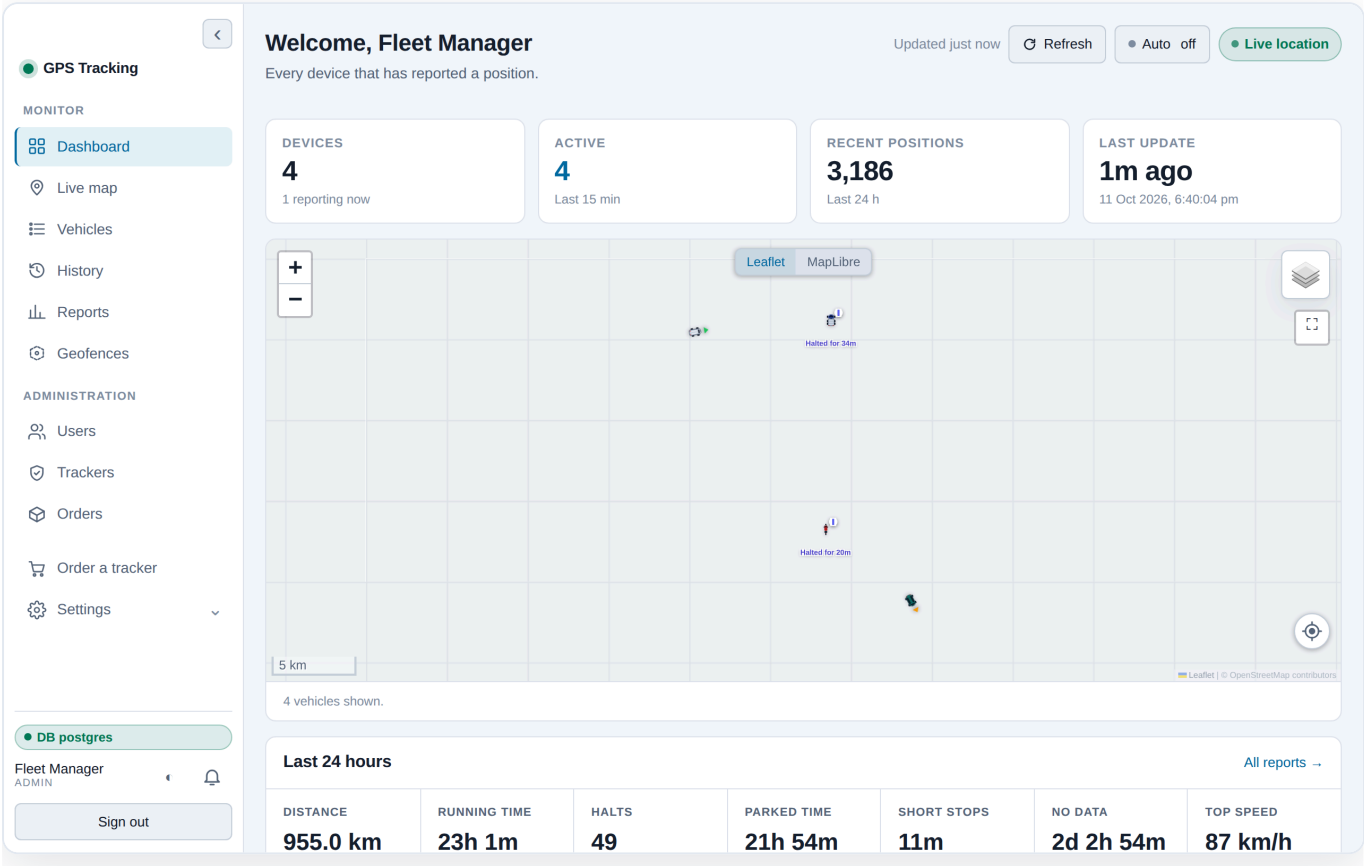

For vehicle owners and fleet managers

Edition: October 2026

OVERVIEW

What you get

A GT06 GPS tracker fitted in your vehicle sends its position every few seconds. The app turns that into a live map, a full history and clear daily reports — in one place, for one vehicle or a whole fleet.

◉ Live tracking
Every vehicle on one map, updated live, with speed, heading and how long it has been parked.

↺ History & replay
Replay any day's route like a video, at up to 3600× speed, with every stop marked.

▤ Trip reports
Distance, running time, halts, parked time and top speed per vehicle — today, yesterday, 7 or 30 days.

★ Driving score
A 0–100 score per vehicle from overspeeding, sudden braking, night driving and idling.

⬡ Geofences
Draw areas such as a depot or customer site and get alerted when a vehicle enters or leaves.

🔔 Loud alerts
Ignition on/off, started/stopped and geofence alerts with a loud alarm, on the phone and the web.

⏻ Engine cut-off
Immobilise a stolen vehicle remotely — safely, only while its ignition is off.

↗ Share live location
Send a link; anyone can watch the vehicle approach without an account.

📱 Apps & 7 languages
Web, Android and iPhone. English, Hindi, Kannada, Marathi, Tamil, Malayalam and Urdu.

Contents


The menu, item by item
1 · Getting started
2 · Dashboard
3 · Live map
4 · Vehicles & the vehicle page
5 · History & route replay
6 · Reports: fleet report
7 · Reports: driving behaviour
8 · Reports: geofences
9 · Alerts & notifications
10 · Engine cut-off & tracker settings
11 · Sharing live location
12 · Phone apps & languages
13 · Ordering a tracker
14 · For administrators
15 · Questions & glossary

Screenshots in this guide show demo vehicles around Bengaluru. Map backgrounds are simplified; in the app the map shows streets, satellite or terrain.

THE MENU

The menu, item by item

Every screen is one tap away in the side menu (on a phone, tap ☰ at the top left). Here is what each item is for.

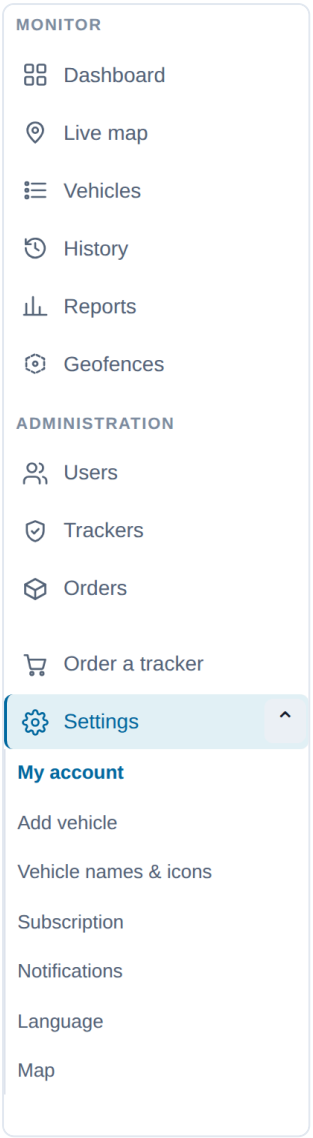

An administrator's menu, with Settings opened.

MENU	WHAT YOU DO THERE
MONITOR — EVERYONE	
Dashboard	Fleet summary, every vehicle on a map and the last 24 hours' totals. *Section 2*
Live map	Watch vehicles move live; follow one; show geofences. *Section 3*
Vehicles	All vehicles with status; open one for its route, replay, engine and subscription. *Section 4*
History	Pick a day and replay where a vehicle went. *Section 5*
Reports	Fleet report, driving behaviour score and geofence report. *Sections 6–8*
Geofences	Draw areas and see every entry and exit by day. *Section 8*
ADMINISTRATION — ADMINISTRATORS ONLY	
Users	Create accounts, assign vehicles, switch accounts off. *Section 14*
Trackers	Approve new trackers, or auto-approve them. *Section 14*
Orders	Products on sale and customers' orders. *Section 14*
EVERYONE	
Order a tracker	Buy a tracker, cash on delivery, and follow the order. *Section 13*
Settings	Your account and preferences — see below.

THE MENU

Settings

Open **Settings** in the menu; its sections are listed right under it.


SETTINGS ITEM	WHAT IT DOES
My account	Your name, email, mobile number and password.
Add vehicle	Add another tracker to your account by its IMEI.
Vehicle names & icons	Name each vehicle (e.g. its registration number) and choose its map icon: car, bike, auto, van, truck or bus.
Subscription	Each vehicle's subscription status and expiry date.
Notifications	Phone notifications, which alerts you want, the loud alert sound and a test button. *Section 9*
Language	English, Hindi, Kannada, Marathi, Tamil, Malayalam or Urdu.
Map	Choose the map style used across the app.

At the bottom of the menu: your name, the bell (recent alerts) and Sign out. Customers see the same menu without the Administration group.

Create your account

Open the app (website, Android or iPhone) and sign up. It takes a minute.

1. **Tap “Sign up”** on the sign-in page.
2. **Choose a username and password**, and add your name, email and mobile number.
3. **Already have a tracker?** Type the IMEI printed on its label. The tracker must be switched on and reporting. Your vehicle appears straight away.
4. **No tracker yet?** Leave the IMEI empty. You will land on *Order a tracker* to buy one (see section 13).

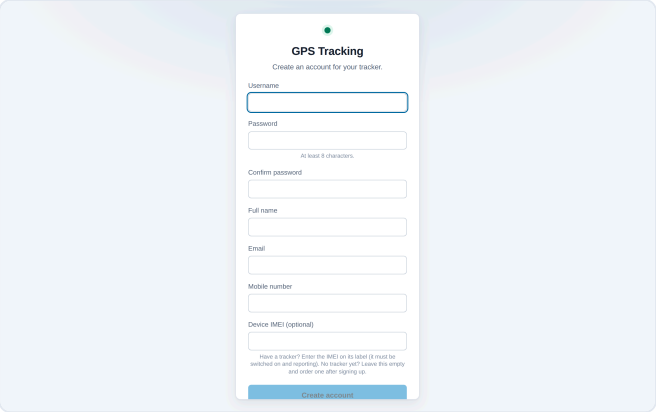

Sign up — the tracker IMEI is optional.

> **Adding more vehicles later:** go to *Settings* → *Add vehicle* and type the next tracker's IMEI.


Signing in

Use your username and password. You stay signed in on that device until you sign out. If your account is switched off by your administrator, access stops immediately.

2 · DASHBOARD

Your fleet at a glance

The first screen after signing in: how many vehicles you have, which are reporting, every vehicle on a map, and today's totals.

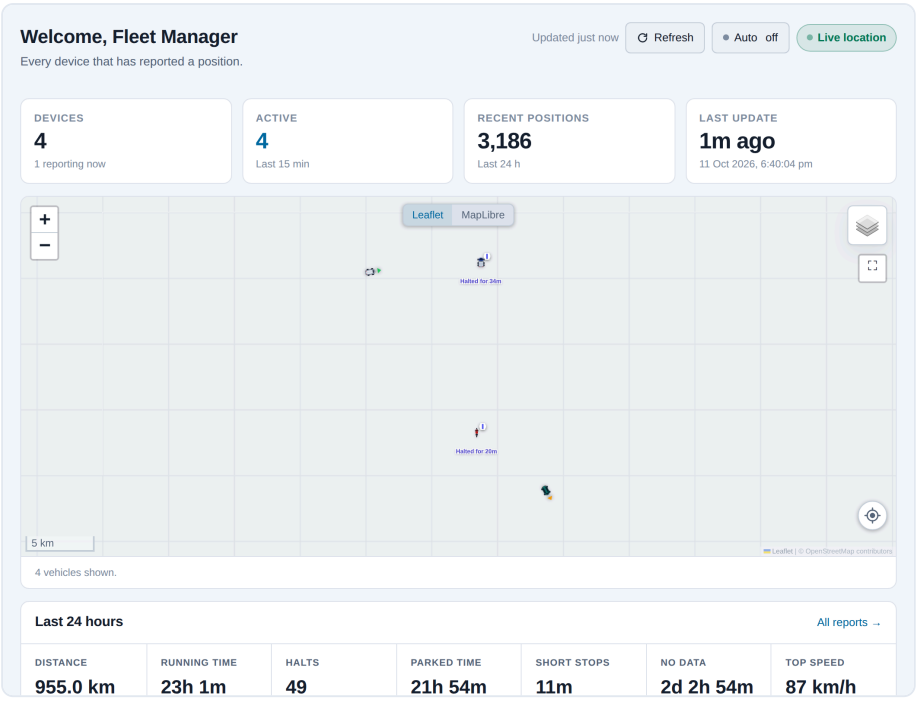


Dashboard — summary tiles, the fleet map and the last 24 hours.

ITEM	WHAT IT TELLS YOU
Devices	Vehicles on your account, and how many are reporting right now.
Active	Vehicles that sent a position in the last 15 minutes.
Recent positions	Positions received in the last 24 hours — a quick health check of your trackers.
Map	Each vehicle with its own icon (car, bike, auto, van, truck, bus). Parked vehicles show “Halted for 30m”.
Last 24 hours	Fleet totals: distance, running time, halts, parked time and top speed. Tap *All reports* for detail.
Refresh / Auto	Refresh fetches the latest positions now; Auto keeps refreshing on its own.

3 · LIVE MAP

Watch vehicles move live

A full-screen map that updates on its own. The list on the left shows every vehicle with its status, speed and when it last reported.

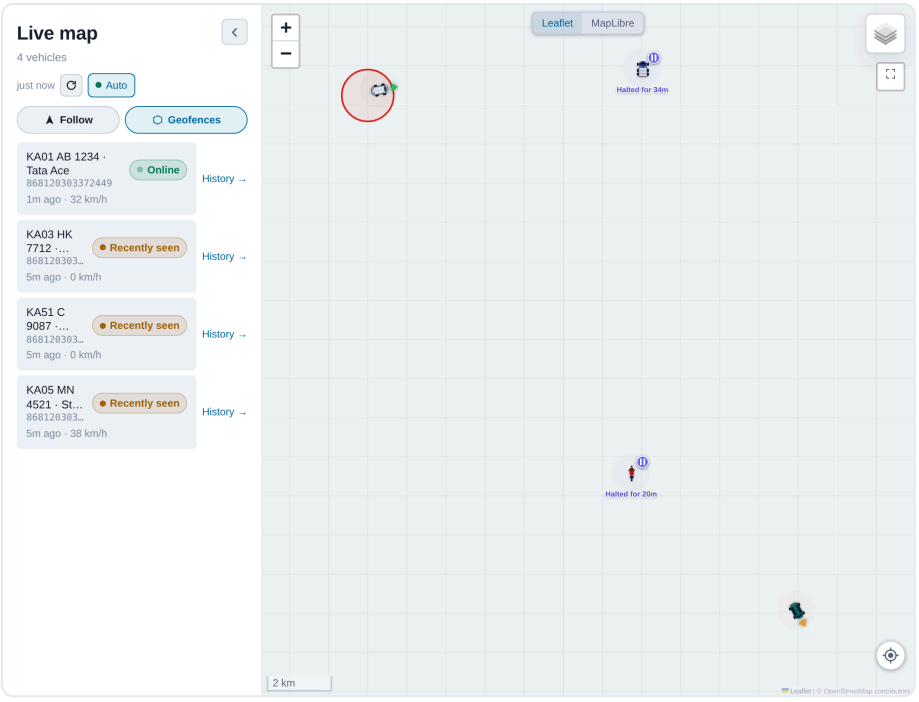


Live map — tap a vehicle to centre on it; “Follow” keeps it in view as it moves.

- **Online / Recently seen / Offline** — whether the tracker is reporting right now.
- **Follow** — the map keeps the selected vehicle centred and turns with its heading.
- **Geofences** — show your geofence areas on the map.
- **Layers** (top right) — switch between street map, satellite and terrain.
- **History →** — jump to that vehicle's route for today.


4 · VEHICLES

Vehicles and the vehicle page

The Vehicles list shows every vehicle with its status, last report and current speed. Tap one to open its own page.

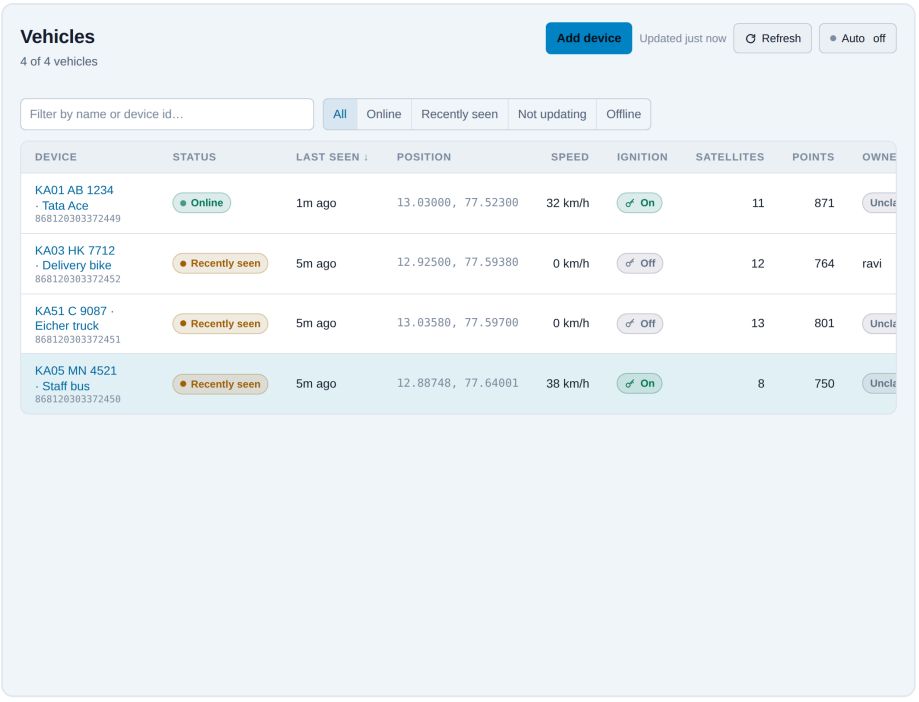

Vehicles — search by name or IMEI.

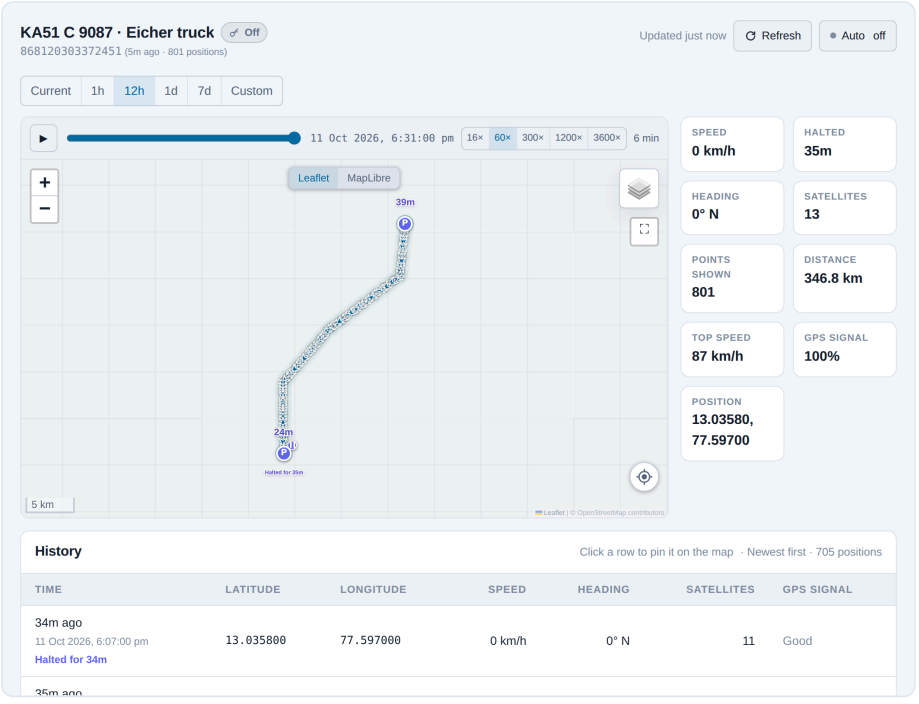


Vehicle page — pick a range (1h, 12h, 1d, 7d or custom) to see the route, then press ▶ to replay it.

4 · VEHICLES

On the vehicle page

PART	WHAT IT DOES
Range buttons	*Current* shows where it is now; *1h · 12h · 1d · 7d · Custom* draw the route for that period.
Replay bar	▶ plays the route as an animation at 16×, 60×, 300×, 1200× or 3600× speed. Drag the slider to any moment.
P markers	Places where the vehicle parked, with how long (e.g. “39m”).
Reading tiles	Speed, how long halted, heading, satellites, GPS signal, distance and top speed for the chosen range.
History table	Every position with time, coordinates, speed and signal. Tap a row to pin it on the map.
Ignition badge	Next to the name: whether the ignition is on or off right now.
Engine	Remote engine cut-off — see section 10.
Tracker reporting	How often the tracker reports while moving and parked — see section 10.
Subscription	Status, expiry date, installation date and SIM expiry, plus the share-location code.

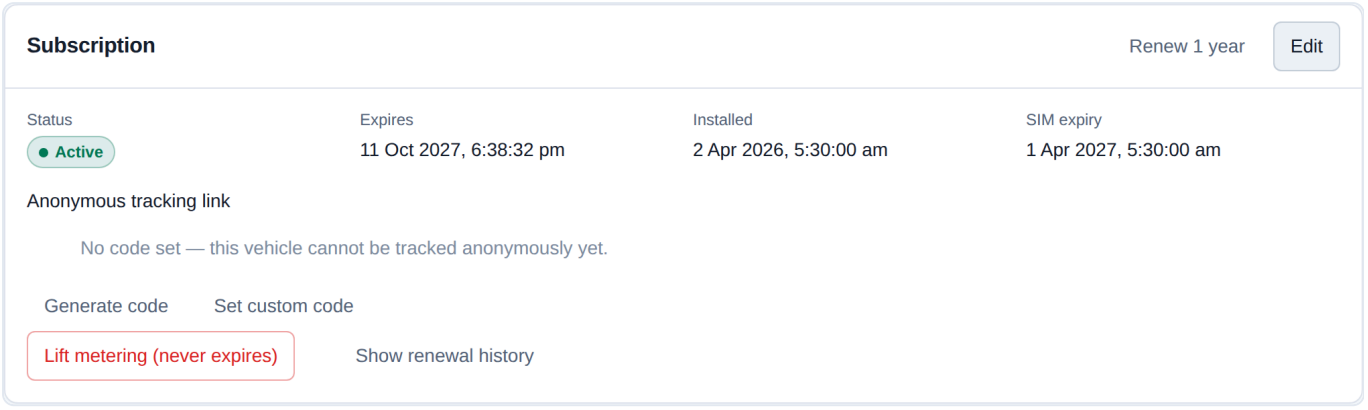


Subscription — when it expires and when the SIM needs renewing.

Name your vehicles: *Settings → Vehicle names & icons* lets you give each vehicle a name (e.g. its registration number) and pick its map icon.

5 · HISTORY

History & route replay

Pick a day, then a vehicle, and replay where it went — useful for checking a delivery round, a customer complaint or an unexpected trip.

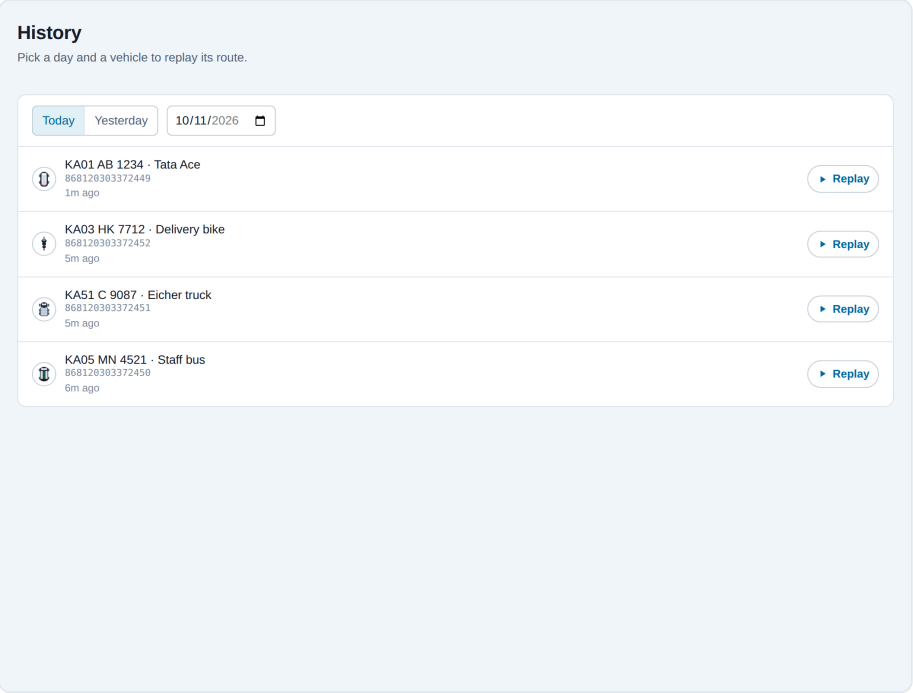


History — Today, Yesterday, or any date up to 90 days back.

1. Choose **Today**, **Yesterday** or a date.
2. Tap **Replay** next to the vehicle.
3. Press ▶. The vehicle drives its route on the map; parked places are marked with how long it stood there.

> **Good to know:** routes leave out bad GPS readings (no satellite lock, or a jump that is impossible at the reported speed), so the line follows the real road instead of zig-zagging.

Fleet report

How far each vehicle went, how long it drove, and where the time went — for Today, Yesterday, 7 days, 30 days or any date.

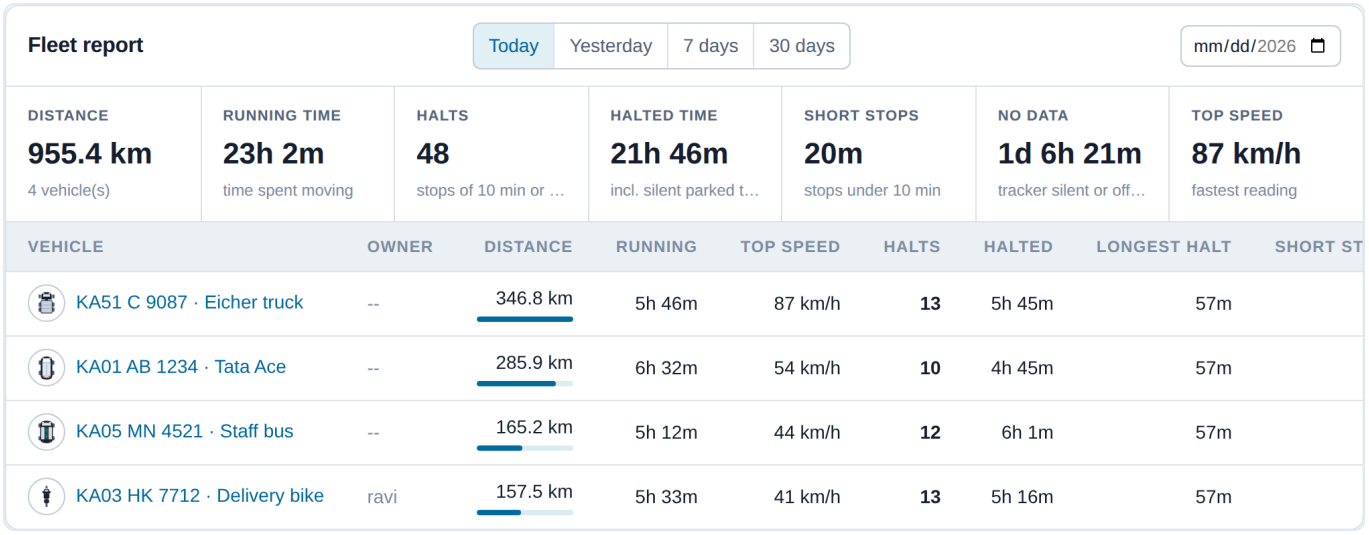


Fleet report — totals at the top, one row per vehicle below.

FIGURE	MEANING
Distance	Kilometres driven, measured along the cleaned route.
Running time	Time spent moving.
Halts	Number of stops of **10 minutes or more**.
Halted time	Total time in those halts, including parked time when the tracker goes quiet to save power.
Longest halt	The single longest stop.
Short stops	Time in stops **under 10 minutes** — traffic signals, quick drops.
No data	Time the tracker was silent or offline (no power, no network). Running + halted + short stops + no data = the whole period.
Top speed	Fastest reliable reading.

Every minute of the period is accounted for, so the figures always add up to the full day (or week).

Driving behaviour

A score from 0 to 100 for each vehicle, so you can see at a glance who drives safely and who needs a word.

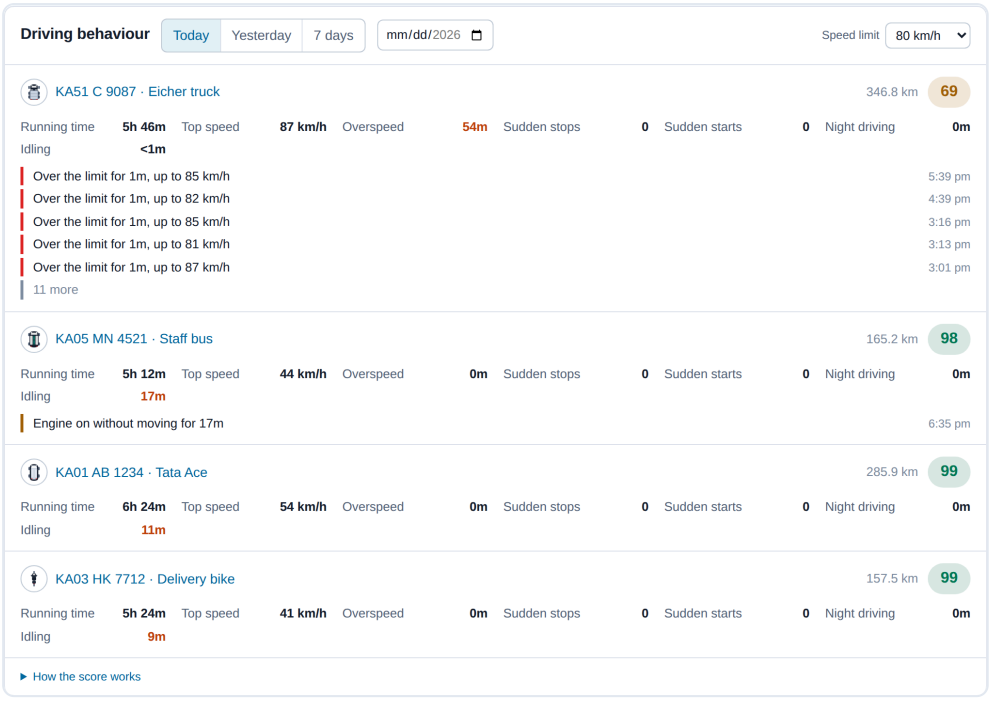

Driving behaviour — the truck lost points for 54 minutes above the 80 km/h limit; each overspeed is listed with its time.

How the score works


Every vehicle starts at **100** and loses points for:

ITEM	COUNTED AS	MAX. POINTS LOST
Overspeed	Time driven above the speed limit you choose: 60, 80, 100 or 120 km/h.	40
Sudden stops & starts	Speed changing by 40 km/h or more within 15 seconds, per 100 km.	30
Night driving	Time driven between 11 pm and 5 am.	15
Idling	Engine on while the vehicle is not moving.	15

A vehicle needs at least 5 minutes of driving in the period to be scored. Pick the speed limit at the top right of the card.

Geofence report

How often vehicles entered and left each geofence, and how long they spent inside — handy for depot turnaround times and site visits.

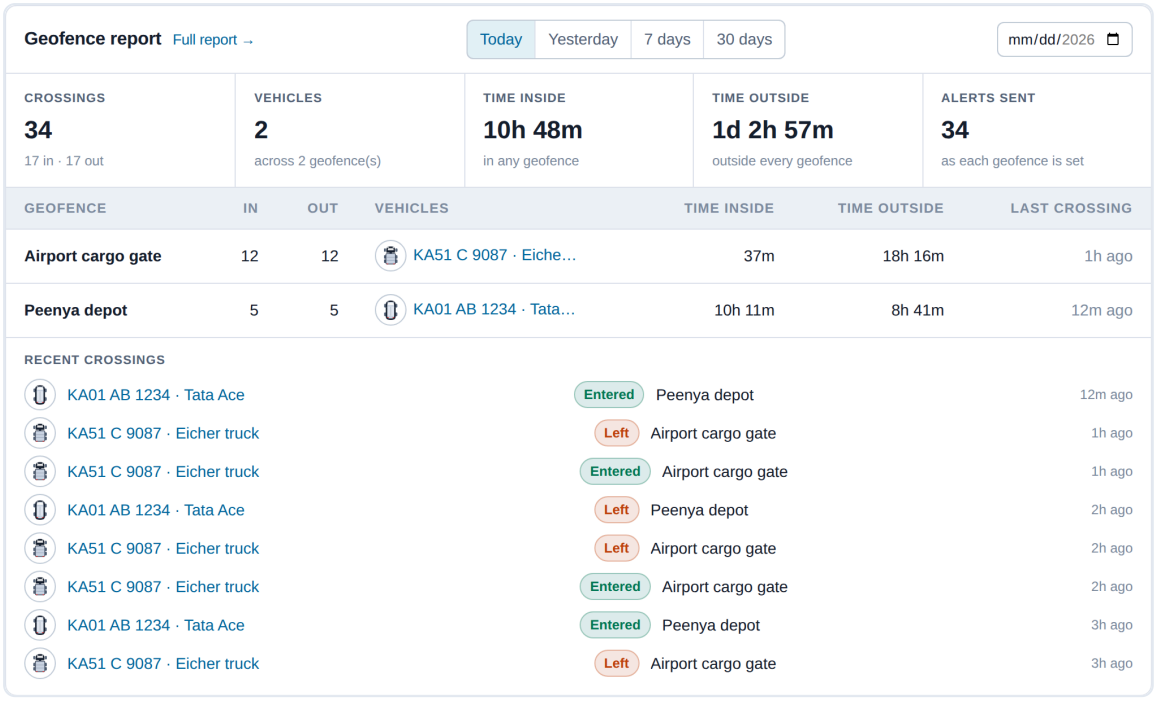


Geofence report — crossings, time inside and outside, and the latest entries and exits.

FIGURE	MEANING
Crossings	Entries plus exits in the period.
Time inside	Time vehicles spent inside any geofence.
Time outside	The rest of the period — inside + outside = the whole period for each vehicle.
Alerts sent	Alerts raised, following each geofence's own settings.

Tap **Full report** → for a day-by-day timeline on the Geofences page.

Drawing geofences

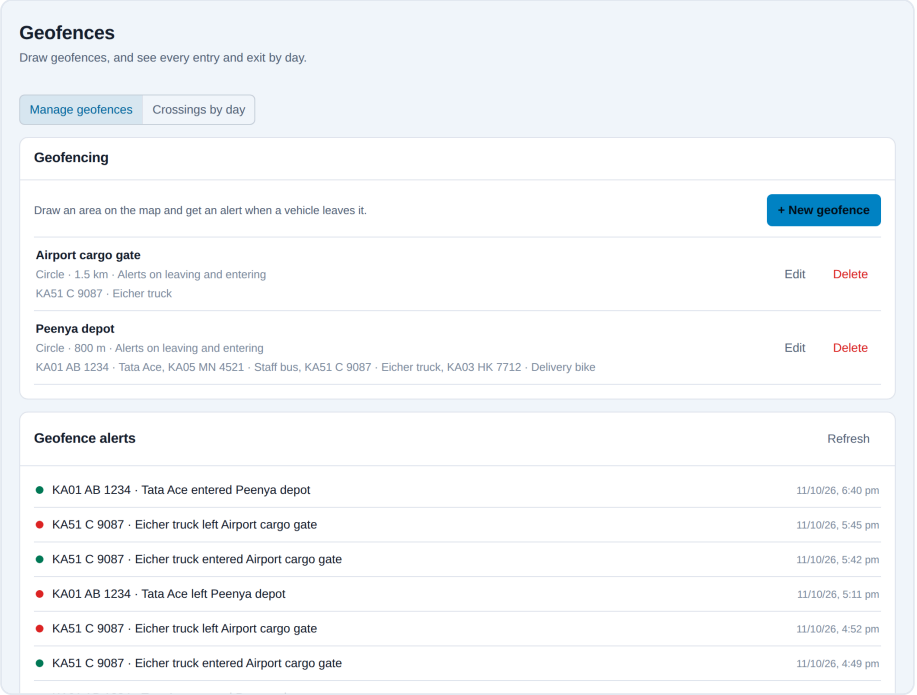


Geofences — your areas, and every entry and exit as it happened.

1. Open **Geofences** and tap **+ New geofence**.
2. Draw a **circle** (radius from 50 m to 50 km) or a **polygon** around the area on the map, and give it a name.
3. Choose the vehicles to watch, and whether to alert on **leaving**, **entering**, or both.
4. Save. Every crossing is recorded and, if you asked for it, alerted.


Alerts & notifications

The app tells you the moment something happens: ignition on or off, a vehicle starting or stopping, or a geofence being crossed.

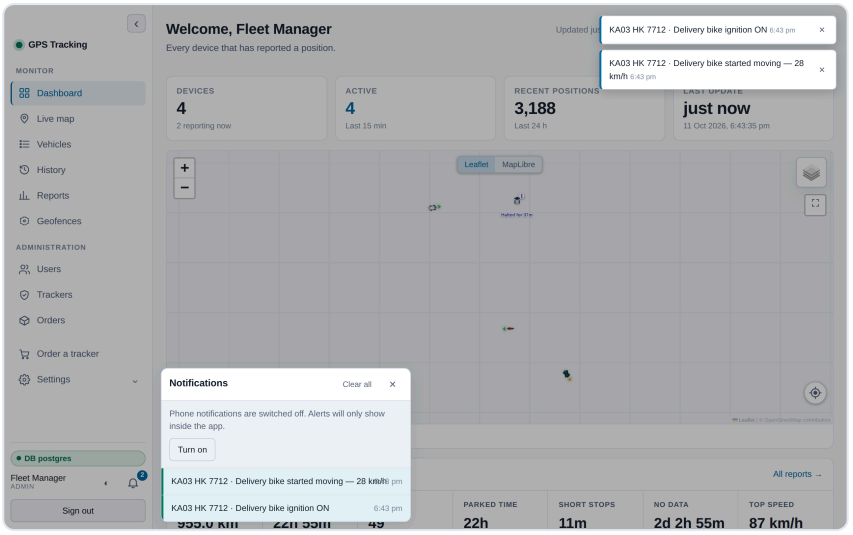

An alert pops up at the top right, sounds a loud alarm, and is kept in the Notifications panel (the bell).

- **Loud alarm** — a sharp two-tone alarm at full volume, so everyone nearby hears it. Switch it off or play a test in *Settings → Notifications*.
- **Phone notifications** — turn on in *Settings → Notifications*. On Android and iPhone the notification plays the same loud alarm and pops up over other apps.
- **Choose which alerts** — ignition, start/stop and geofence alerts can each be switched on or off in the app.
- **Notifications panel** — the bell keeps a list of recent alerts; tap one to open that vehicle.

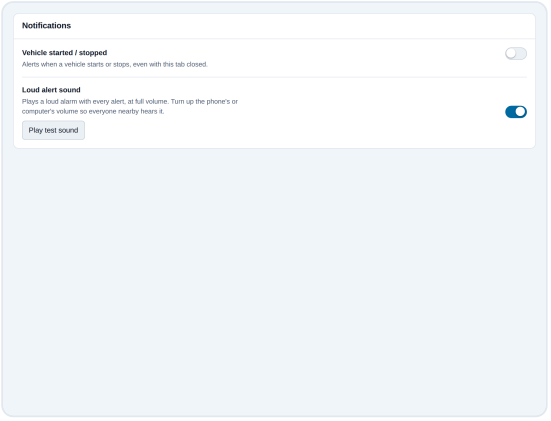


Settings → Notifications.

> **Tip:** keep the phone's notification volume up and Do Not Disturb off. Phone alerts arrive while the app is open or recently used.

10 · ENGINE CUT-OFF

Engine cut-off & tracker settings

With a relay fitted, the tracker can stop the engine from starting — for example after a theft. Restore lets it start again.

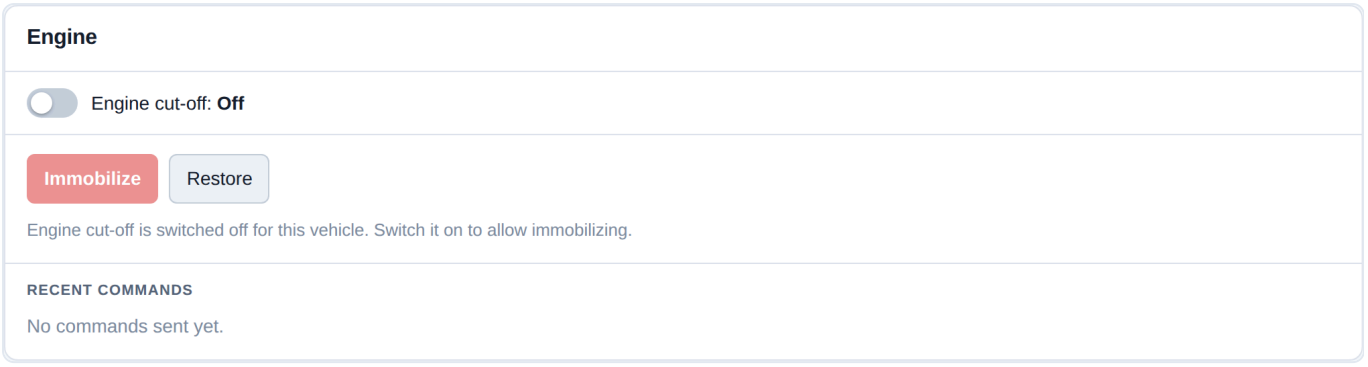

Engine panel on the vehicle page.

Safety first

- Engine cut-off is **off by default**; an administrator switches it on per vehicle.
- **Immobilize** only works while the **ignition is off** — a moving vehicle is never cut.
- A command waits at most **5 minutes** for the tracker; after that it expires.
- Every command and the tracker's reply is kept as a record under *Recent commands*.

Tracker reporting

Set how often the tracker sends its position while **moving** (e.g. every 10 seconds) and while **parked** (e.g. every hour). Shorter intervals give routes that follow every turn; longer ones save data. *Read settings* asks the tracker for its current values.


11 · SHARING

Share a vehicle's live location

Send a link to a customer, family member or school parent. They can watch the vehicle live — no account, no app.

1. Open the vehicle page and scroll to **Subscription → Anonymous tracking link**.
2. Tap **Generate code**, or **Set custom code** to choose an easy one such as `ACE-1234`.
3. Share the link *…/track/ACE-1234*. It shows the vehicle, its speed, heading and when it last reported, updating every 10 seconds.
4. To stop sharing, change or remove the code — the old link stops working.


> **Anyone** with the link can see where the vehicle is, but nothing else: no history, no other vehicles, no account details.

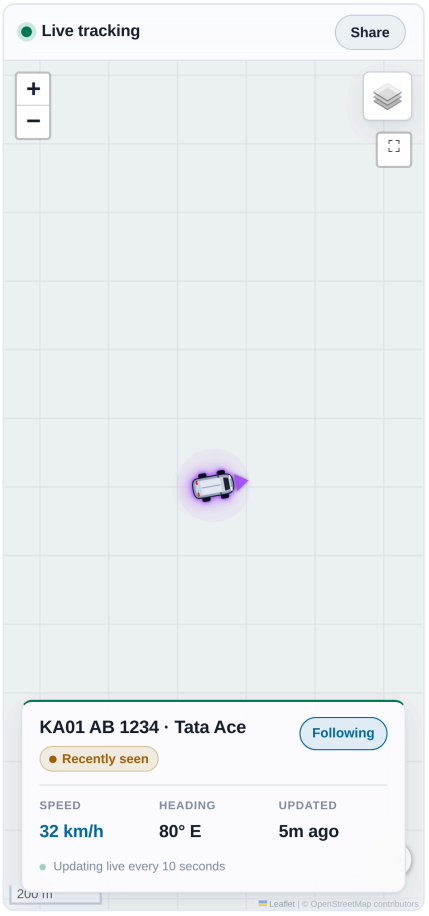

What the person you share with sees.

On your phone, in your language


The same features on the website, the Android app and the iPhone app. Pages open instantly and fill in as data arrives.

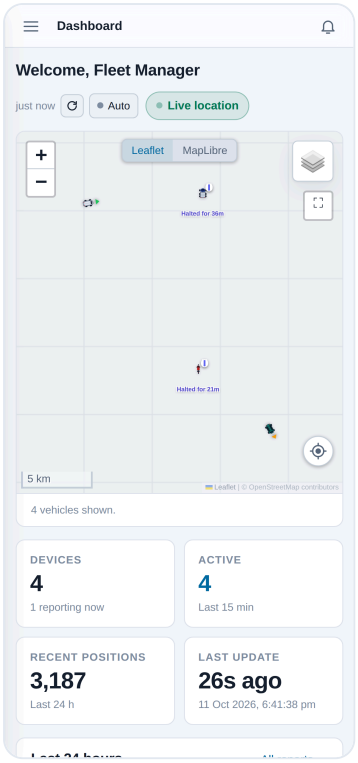

Dashboard




Live map

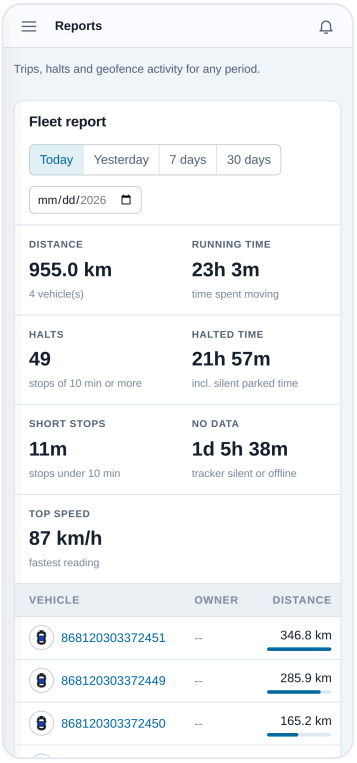

Reports

Seven languages

English, हिन्दी (Hindi), ಕನ್ನಡ (Kannada), मराठी (Marathi), தமிழ் (Tamil), മലയാളം (Malayalam) and اردو (Urdu). Change it in *Settings → Language*; menus, alerts and reports switch at once.

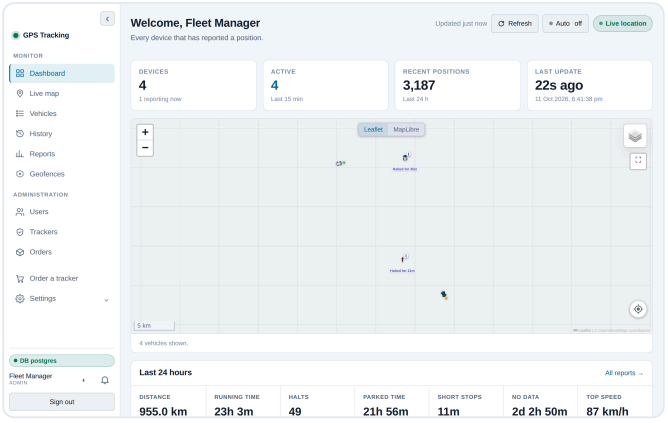


The dashboard in Hindi.

13 · ORDERING


Order a tracker in the app

No tracker yet? Order one from *Order a tracker* in the menu. It is delivered to your door and you pay cash on delivery.

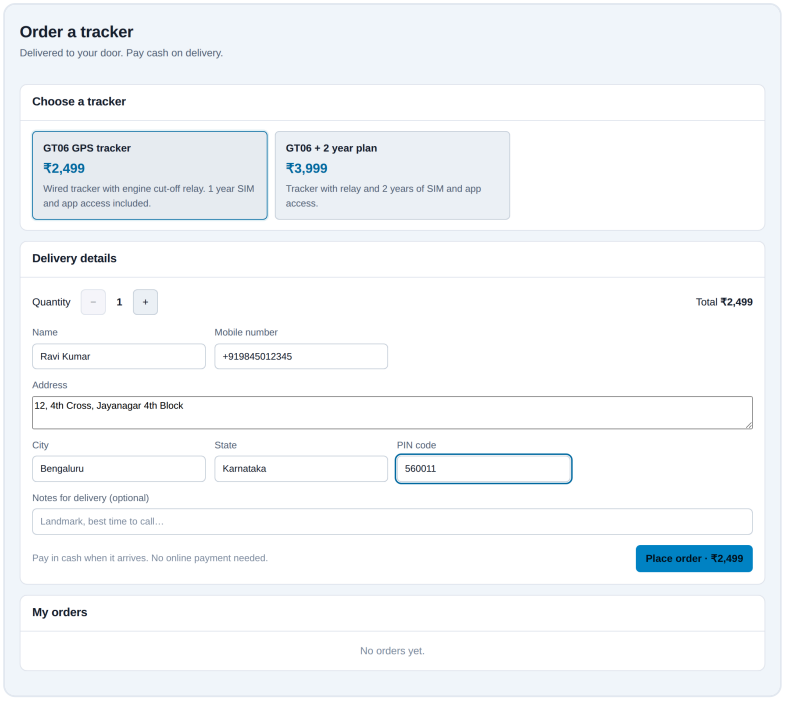

Pick a tracker, choose a quantity and enter the delivery address.

1. Choose a **tracker** and the **quantity**. The total updates as you go.
2. Enter your **name, mobile number and address** with the 6-digit PIN code.
3. Tap **Place order**. You will be called to confirm.
4. Follow it under **My orders**: Placed → Confirmed → Shipped → Delivered, with the courier tracking number.
5. When it ships, the tracker is **added to your account automatically** — no IMEI to type.

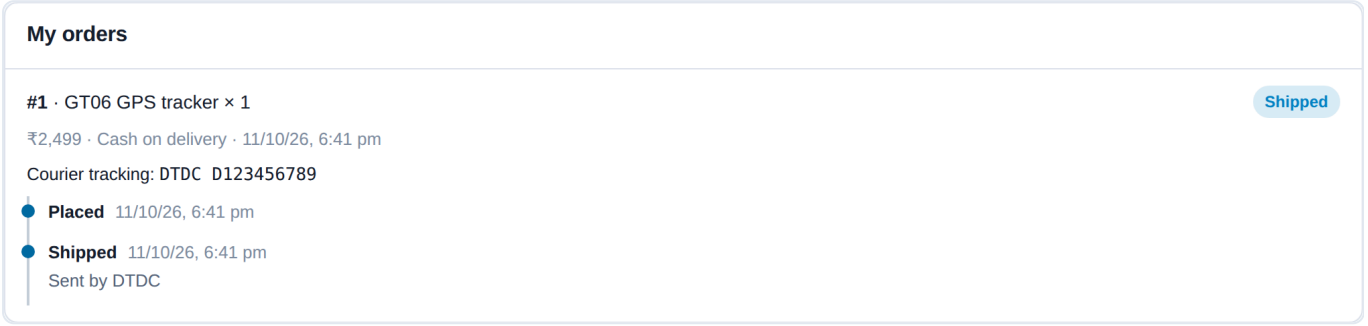

My orders — progress, courier tracking and the trackers added to your account. You can cancel while an order is still “Placed”.


14 · ADMINISTRATION

For administrators

Administrators see every vehicle and manage accounts, trackers and orders. Customers only ever see their own vehicles.

Users


Create accounts, assign vehicles, make someone an administrator, or switch an account off (it stops working at once).

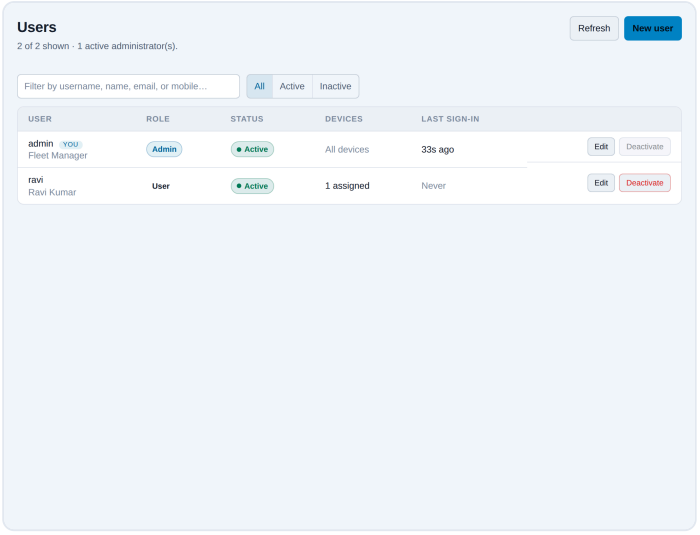

Users.

Trackers

Only approved trackers can connect. New trackers wait here for approval — or switch on **Auto-approve** to accept every new tracker automatically.

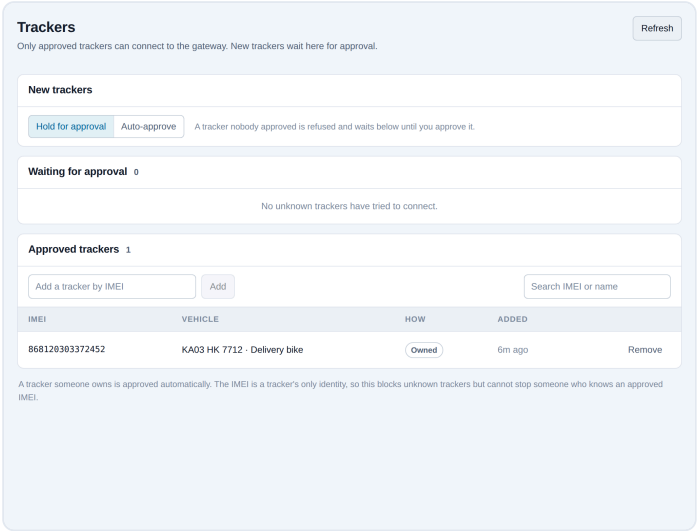


Trackers — waiting for approval, and approved.

14 · ADMINISTRATION

Orders and products

Add the trackers you sell with their prices, then fulfil customers' orders: confirm, ship with the courier tracking number and the IMEIs of the trackers sent, and mark delivered. The customer sees each step, and the trackers appear in their account when shipped.

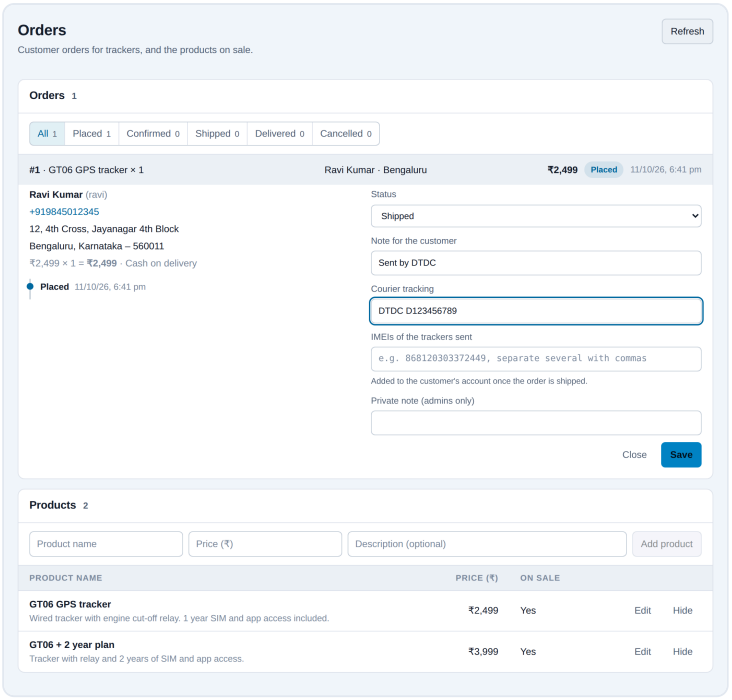

Orders — open an order to update it; products are managed below.

STATUS	MEANING
Placed	The customer ordered; the customer can still cancel.
Confirmed	You called and confirmed the order.
Shipped	Sent with the courier. Entered IMEIs are added to the customer's account.
Delivered	Received and paid. Final.
Cancelled	Cancelled by the customer or by you. Final.

Questions & glossary

My vehicle shows “Offline”.

The tracker has not reported recently. Check that it has power (vehicle battery connected) and mobile signal. Underground parking blocks GPS and network.

Why is there “No data” time in my report?

The tracker was silent — switched off, out of network, or the vehicle battery was disconnected. That time is shown separately instead of being guessed.

The route cuts across a corner.

The tracker reported less often there. Shorten the *while moving* interval in *Tracker reporting* (section 10).

I'm not getting phone alerts.

Turn on *Settings* → *Notifications*, allow notifications when the phone asks, keep the volume up and Do Not Disturb off. Use *Play test sound* to check.

My subscription expired.

Position data is hidden until it is renewed; the vehicle stays in your list. Contact your provider to renew — history is kept.

Glossary

TERM	MEANING
IMEI	The 15-digit number printed on the tracker's label; identifies your tracker.
Halt	A stop of 10 minutes or more.
Short stop	A stop under 10 minutes.
Running time	Time the vehicle was moving.
Geofence	An area you draw on the map, such as a depot or customer site.
Engine cut-off	Stops the engine from starting, through a relay on the tracker.
GPS signal	How good the satellite fix was; poor fixes are left out of routes and reports.