


# EMOO: Using a MOOER Pedal with Tap Button and Momentary Foot Switch

As there is no connection to the PCB on the lower part of the panel and any pressure on the knobs and the potentiometer will bend the PCB downwards, you'll need to attach the PCB to the panel with a screw:

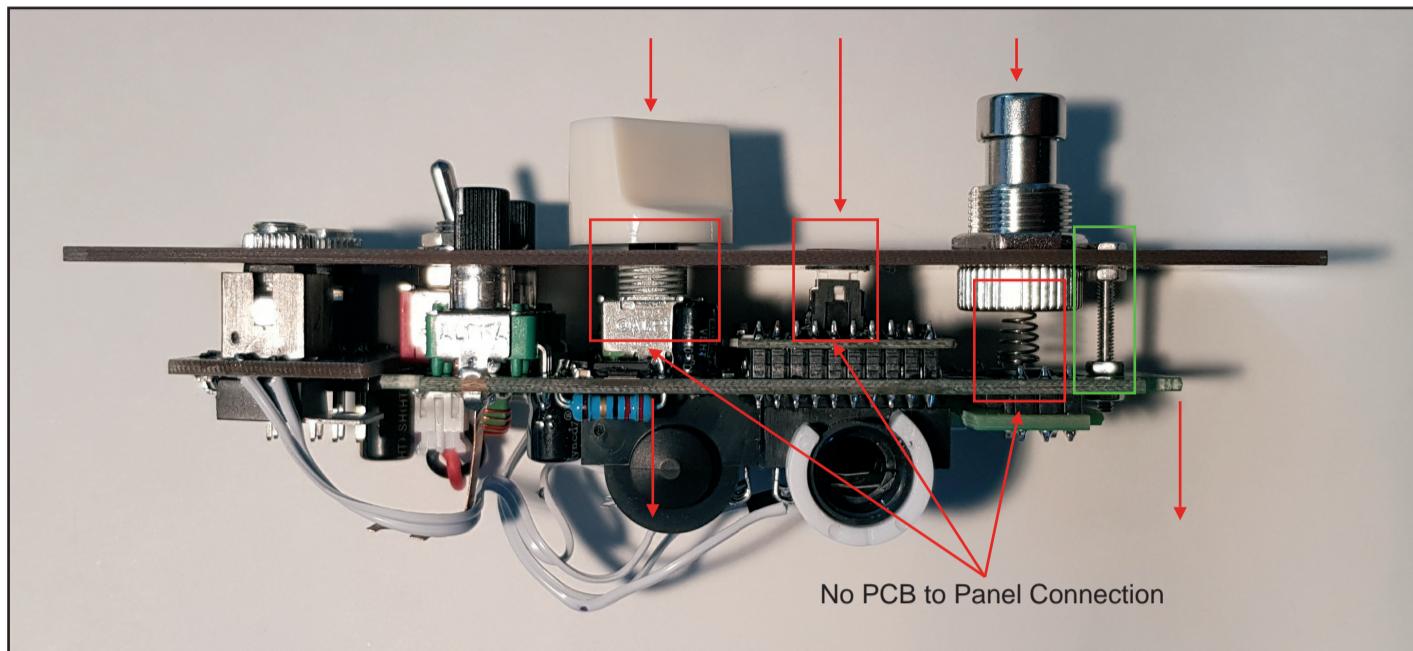

Drill a hole of 2.0mm just below the foot switch.  
Make sure you just keep enough distance that the nut of the foot switch and the screw can still be turned later on.

