

Document Title	Specification of
	Communication
Document Owner	AUTOSAR
Document Responsibility	AUTOSAR
Document Identification No	015
Document Classification	Standard
Document Status	Final
Part of AUTOSAR Standard	Classic Platform
Part of Standard Release	4.3.0

	Document Change History			
Date	Release	Changed by	Change Description	
2016-11-30	4.3.0	AUTOSAR	updated TX-confirmation handling	
		Release	 revised Signal Based Gateway 	
		Management	 Com-Stack API harmonization 	
			 minor corrections / clarifications / 	
			editorial changes; For details please	
			refer to the ChangeDocumentation	
2015-07-31	4.2.2	AUTOSAR	minor corrections / clarifications /	
		Release	editorial changes; For details please	
		Management	refer to the ChangeDocumentation	
2014-10-31	4.2.1	AUTOSAR	added support for Sender/ Receiver	
		Release	Serialization	
		Management	updated to support CAN FD	
			minor corrections	
2014-03-31	4.1.3	AUTOSAR	Several correction, clarifications and	
		Release	editioral changes	
		Management	No major functional changes or im-	
			provements	
2013-10-31	4.1.2	AUTOSAR	Removed TP-restriction for dynamic	
		Release	length I-PDUs	
		Management	Added parameter to globally enable	
			or disable the cancellation support	
			Many bug fixes, clarifications and	
			harmonization with the other COM-	
			Stack modules	
			Editorial changes Demoved changes	
			Removed chapter(s) on change degree attains	
			documentation	



	Document Change History			
Date	Release	Changed by	Change Description	
2013-03-15	4.1.1	AUTOSAR Administration	 Reworked according to the new SWS BSW General added support for postbuild loadable configuration harmonization of COM-Stack APIs (TP-APIs & callouts) many corrections and clarifications 	
2011-12-22	4.0.3	AUTOSAR Administration	 Several minor changes and bug-fixes Clarification and minor extensions of transmission mode usage and activation Clarification and extension of transfer properties Added retry mechanism for failed transmission requests 	



	Document Change History		
Date	Release	Changed by	Change Description
Date 2010-09-30			 Update: SWS_Com_00696, SWS_Com_00697, SWS_Com_00442, ECUC_Com_00017 and SWS_Com_00550, SWS_Com_0015, SWS_Com_0015, SWS_Com_00708, ECUC_Com_00709, SWS_Com_00469, SWS_Com_00469, SWS_Com_00702, SWS_Com_00703, SWS_Com_00704, SWS_Com_00705 , SWS_Com_00706, ECUC_Com_00700, SWS_Com_00700, SWS_Com_00346, SWS_Com_00198, SWS_Com_00691, SWS_Com_00655, SWS_Com_00692,
			SWS_Com_00692, SWS_Com_00693, SWS_Com_00459 (Table 12), SWS_Com_0005, SWS_Com_00673, ECUC_Com_00175, SWS_Com_00401,



	Document Change History			
Date	Release	Changed by	Change Description	
			 Com_lpduGroupVector in Chapter 8.2.5, SWS_Com_00495, SWS_Com_00469, ECUC_Com_00263, ECUC_Com_00232, SWS_Com_00707 Remove SWS_Com_00626, SWS_Com_00329 Add SWS_Com_00731, SWS_Com_00734, SWS_Com_00732 	
2010-02-02	3.1.4	AUTOSAR Administration	 Added support for large data types Added support for communication protection Revised mode management interface Many clarifications and corrections based on SWS improvement, validation and conformance test activities Legal disclaimer revised 	
2008-08-13	3.1.1	AUTOSAR Administration	Legal disclaimer revised	
2008-02-01	3.0.2	AUTOSAR Administration	Removed Figure 19, which was in- cluded twice	
2007-12-21	3.0.1	AUTOSAR Administration	 Removal of Internal Communication feature Revision of AUTOSAR COM MOD-ULE configuration Revision of Signal Gateway configuration Enhanced maximal I-PDU length for FlexRay Harmonization of callback-interface to RTE Clarifications and bug fixes Document meta information extended Small layout adaptations made 	



	Document Change History		
Date	Release	Changed by	Change Description
2007-01-24	2.1.15	AUTOSAR Administration	 Clarifications of requirements throughout the whole document. Chapter 11 contains a detailed list of the made modifications. No new major features were added since re- lease 2.0. "Advice for users" revised "Revision Information" added Legal disclaimer revised
2006-05-16	2.0	AUTOSAR Administration	 Document structure adapted to common Release 2.0 SWS Template. Integration of signal gateway Major updates in configuration, error handling, filtering, transmission mode switches, callouts, updatebits, deadline monitoring and initialization
2005-05-31	1.0	AUTOSAR Administration	Initial release



Disclaimer

This specification and the material contained in it, as released by AUTOSAR, is for the purpose of information only. AUTOSAR and the companies that have contributed to it shall not be liable for any use of the specification.

The material contained in this specification is protected by copyright and other types of Intellectual Property Rights. The commercial exploitation of the material contained in this specification requires a license to such Intellectual Property Rights.

This specification may be utilized or reproduced without any modification, in any form or by any means, for informational purposes only. For any other purpose, no part of the specification may be utilized or reproduced, in any form or by any means, without permission in writing from the publisher.

The AUTOSAR specifications have been developed for automotive applications only. They have neither been developed, nor tested for non-automotive applications.

The word AUTOSAR and the AUTOSAR logo are registered trademarks.

Advice for users

AUTOSAR specifications may contain exemplary items (exemplary reference models, "use cases", and/or references to exemplary technical solutions, devices, processes or software).

Any such exemplary items are contained in the specifications for illustration purposes only, and they themselves are not part of the AUTOSAR Standard. Neither their presence in such specifications, nor any later documentation of AUTOSAR conformance of products actually implementing such exemplary items, imply that intellectual property rights covering such exemplary items are licensed under the same rules as applicable to the AUTOSAR Standard.



Table of Contents

1	Intro	oduction and Functional Overview	11
2	Acre	onyms, Abbreviations and Definitions	12
	2.1 2.2	Acronyms and Abbreviations Definitions	
3	Rela	ated Documentation	14
	3.1 3.2 3.3	Deliverables of AUTOSAR	15
4	Cor	straints and Assumptions	16
	4.1 4.2	Limitations	
5	Dep	endencies to Other Modules	17
	5.1 5.2 5.3 5.3.	PDU Router Runtime Environment (RTE) File Structure 1 Header File Structure	18 19
6	Red	uirements Traceability	21
7	Fun	ctional Specification	32
	7.1 7.2 7.2. 7.2. 7.2. 7.2.	2 Signal Values	32 32 33 34
	7.2. 7.3 7.3.	5 Signal Gateway Normal Operation	38 39
	7.3. 7.3. 7.3. 7.3.	De-Initialization	40 40 49 51
	7.3. 7.4 7.4. 7.4.	Signal Groups - Complex Data Types	62 63
	7.4. 7.4. 7.4.	ReceptionNotificationsAttributes of a Signal Group	63 64 65
	7.4. 7.5 7.5. 7.5.	Large Data Types	67 68
	7.6 7.6.	Dynamic Length Signals	69



7.6.2		
	nterface between AUTOSAR COM Module and the PDU Router	
7.8 l	Jpdate-Bits	
7.8.1		
7.8.2		
	Data Sequence Control	
7.9.1	Sender Side	
7.9.2		
	Communication Protection	
7.10.		
7.10.		
7.10.		
	Signal Gateway	
7.11.		
7.11.		
7.11.		
7.11.		
7.11.	1 3 3	
	Error Classification	
7.12.		
7.12.		
7.12.		
7.12.		
7.12.		
	Error Notification	
	Error Handling AUTOSAR COM Module's Interaction Model	
8 APIS	Specification	86
8.1 I	mported Types	86
8.2	Type Definitions	86
8.2.1	= 71 -	
	Com_SignalIdType	
8.2.3	= 3	
8.2.4	=1 71	
8.2.5	= 1	
8.2.6	= 5 71	
	Function Definitions	
8.3.1	Return Codes	
8.3.2	· · · · · · · · · · · · · · · · · · ·	
8.3.3		
	Callback Functions and Notifications	
8.4.1	Com_TriggerTransmit	
8.4.2		
8.4.3	- !	
8.4.4		
8.4.5	= 1	
8.4.6		
8.4.7		
8.4.8	Com CopyTxData	107



	8.5 S	cheduled Functions	108
	8.5.1	Com_MainFunctionRx	
	8.5.2	Com MainFunctionTx	
	8.5.3	Com_MainFunctionRouteSignals	
		xpected Interfaces	
	8.6.1	Mandatory Interfaces	
	8.6.2	Optional Interfaces	
	8.6.3	Configurable Interfaces	
9	Sequ	ence Diagrams	116
	9.1 Ir	nterface between the AUTOSAR COM Module and the PDU Router	116
		Confirmation Handling between the PDU Router, the AUTOSAR COM	110
		Module and the RTE	118
		ndication Handling between the PDU Router, the AUTOSAR COM	
		Indule and the RTE	119
1(guration Specification	
11	`	•	
		Containers and Configuration Parameters	120
	10.1.		121
	10.1.2		
	10.1.3		
	10.1.4		
	10.1.5		
	10.1.6		
	10.1.7		
	10.1.8		
	10.1.9	I I	
	10.1.1		
	10.1.1		
	10.1.1	3	
	10.1.1	3 1	
	10.1.1		
	10.1.	Com A word of the contract of	
	10.1.		
	10.1.		
	10.1.	11 0	
	10.1.		
	10.1.2	·	
	10.1.2		
	10.1.2		
		Configuration Rules	
	10.2.	•	
	10.2.2		
	10.2.3	- 3 9	
	10.2.4		
	10.2.5	<u> </u>	
	10.2.6		
	10.2.7	<u> </u>	
	10.2.8		
	10.2.9		





	10.2.10	I-PDU group	179
11	Not Applica	able Requirements	180
12	Appendix A		181



1 Introduction and Functional Overview

This specification is the AUTOSAR COM module Software Specification. It is based on the AUTOSAR COM SRS [7]. It specifies how the requirements of the AUTOSAR COM SRS shall be realized. That means that the functionality and the API of the AUTOSAR COM module are described in this document.

Within the AUTOSAR Layered Architecture the AUTOSAR COM module is placed between RTE and the PDU Router, see [1].

The AUTOSAR COM module is derived from [17]. For details, see Chapter 7.2.1. The AUTOSAR COM module provides signal gateway functionality. For details, see Chapter 7.2.5.

Main Features:

- Provision of signal oriented data interface for the RTE
- Packing of AUTOSAR signals to I-PDUs to be transmitted
- Unpacking of received I-PDUs and provision of received signals to RTE
- Routing of signals from received I-PDUs into I-PDUs to become transmitted
- Routing of signal groups from received I-PDUs into I-PDUs to become transmitted
- Communication transmission control (start/ stop of I-PDU groups)
- Replications of send requests
- Guarantee of minimum distances between transmit I-PDUs
- Monitoring of receive signals (signals timeout)
- Filter mechanisms for incoming signals
- · Different notification mechanisms
- Provision of init values and update indications
- Byte order conversion
- Sign extension
- Support of two different transmission modes per I-PDU
- Signal based gateway
- Support of large and dynamic length data types
- Support of I-PDU counters and I-PDU replication



2 Acronyms, Abbreviations and Definitions

2.1 Acronyms and Abbreviations

Acronym:	Description:
AUTOSAR COM	The AUTOSAR COM module is derived from OSEK COM [17]. For details,
	see Chapter 7.2.1.
DM	Deadline Monitoring, for details see Chapter 7.3.6
I-PDU	Interaction Layer Protocol Data Unit
	An I-PDU carries signals. It is defined in [17].
L-PDU	Data Link Layer Protocol Data Unit. In AUTOSAR, the Data Link Layer is equivalent to the Communication Hardware Abstraction and Microcontroller Abstraction Layer.
MDT	A detailed description of the Minimum Delay Timer (MDT) can be found in [17]. See also Chapter 7.3.5.5.
OSEK COM	Open systems and the corresponding interfaces for automotive electronics – communication [17].
PDU Router	The PDU Router is a module transferring I-PDUs from one module to another module. The PDU Router can be utilized for gateway operations and for internal routing purposes.
SDU	Service Data Unit
	For a description see [1] Chapter 4.
TM	Transmission Mode
TMC	Transmission Mode Condition, see Chapter 7.3.3.2
TMS	Transmission Mode Selector, see Chapter 7.3.3.2

2.2 Definitions

Term:	Description:
Confirmation	With a Confirmation, the PDU Router reports that a request by the AUTOSAR COM module has been completed successfully. It is a reaction to a request of COM. E.g. when a PDU has been successfully transmitted.
Data Invalid Value	Value sent by the AUTOSAR COM module to indicate that the sender side AUTOSAR Software Component is not able to provide a valid value.
Dynamic Length Sig- nal	A dynamic length signal is a signal which length can vary at run-time.
Dynamic Length I-PDU	A dynamic length I-PDU is an I-PDU containing a dynamic length signal. It length varies depending on the length of the included dynamic length signal.
Group signal	A group signal is a signal that is contained in a signal group.
Indication	An Indication is asynchronous information from PDU Router to COM, e.g. to acknowledge that something has been received.
Init Value	I-PDUs and signals are set to the Init Value by the AUTOSAR COM module after start-up. This value is used until it is overwritten.
I-PDU group	An I-PDU Group is an arbitrary collection of I-PDUs of the same direction (i.e. send or receive) in the COM module.
Inter-ECU – communication	Communication between two or more ECUs for example via a CAN network
Intra-ECU – communication	Communication between Software components that reside on the same ECU
Large Signal	A large signal is a signal that is too large to fit into a single L-PDU of the underlying communication protocol.
Large I-PDU	Large I-PDU are I-PDU that do not fit into a single L-PDU of the underlying



Term:	Description:
	communication protocol. Large I-PDU will be transmitted via TP.
Message	OSEK-COM uses always the synonym <i>message</i> . In AUTOSAR, <i>message</i> is replaced by <i>signal</i> but with the same meaning.
Metadata	For some I-PDUs, e.g. J1939 I-PDUs, the payload is extended with additional metadata containing for example the CAN-ID.
Notification	Information by the AUTOSAR COM module to RTE, e.g. when new data is available, an error occurred.
Signal	A signal in the AUTOSAR COM module's context is equal to a message in OSEK COM; see also [7].
Signal group	In AUTOSAR, so called complex data types are used. Inside a complex data type, there are one or more data elements (primitive data types), like in a C struct. The data consistency of such complex data types must be ensured. The RTE decomposes the complex data type in single signals and sends them to the AUTOSAR COM module. As these signals altogether need to be treated consistently, they are called <i>signal group</i> .
	See also [7].
Update-bit	A mechanism supported by the AUTOSAR COM module with that the receiver of a signal/ signal group could identify whether the sender has updated the data in this signal/ signal group before sending. See Chapter 7.8.



3 Related Documentation

3.1 Deliverables of AUTOSAR

- [1] AUTOSAR Layered Architecture AUTOSAR_EXP_LayeredSoftwareArchitecture.pdf
- [2] Specification of Communication Stack Types AUTOSAR_SWS_CommunicationStackTypes.pdf
- [3] General Requirements on Basic Software Modules AUTOSAR_SRS_BSWGeneral.pdf
- [4] Basic Software UML Model
 AUTOSAR_MOD_BSWUMLModel.eap
- [5] Specification of Standard Types AUTOSAR_SWS_StandardTypes.pdf
- [6] Specification of the Virtual Functional Bus AUTOSAR_EXP_VFB.pdf
- [7] Requirements on Communication AUTOSAR_SRS_COM.pdf
- [8] Software Component Template
 AUTOSAR_TPS_SoftwareComponentTemplate.pdf
- [9] Requirements on Gateway AUTOSAR_SRS_Gateway.pdf
- [10] Specification of PDU Router AUTOSAR_SWS_PDURouter.pdf
- [11] Specification of Operating System AUTOSAR_SWS_OS.pdf
- [12] System Template AUTOSAR_TPS_SystemTemplate.pdf
- [13] Specification of RTE Software AUTOSAR_SWS_RTE.pdf
- [14] Specification of ECU Configuration AUTOSAR_TPS_ECUConfiguration.pdf



- [15] Specification of Communication Manager AUTOSAR_SWS_COMManager.pdf
- [16] AUTOSAR Basic Software Module Description Template AUTOSAR_TPS_BSWModuleDescriptionTemplate.pdf
- [19] Specification of CAN Transport Layer AUTOSAR_SWS_CANTransportLayer.pdf
- [20] Specification of FlexRay Transport Layer AUTOSAR_SWS_FlexRayTransportLayer.pdf
- [21] List of Basic Software Modules, AUTOSAR_TR_BSWModuleList.pdf
- [22] Generic Structure Template
 AUTOSAR_TPS_GenericStructureTemplate.pdf
- [23] General Specification of Basic Software Modules AUTOSAR_SWS_BSWGeneral.pdf

3.2 Related Standards and Norms

- [17] OSEK/ VDX Communication Version 3.0.3 OSEKCOM303.pdf
- [18] OSEK implementation language Version 2.5 OIL25.pdf

3.3 Related Specification

AUTOSAR provides a General Specification on Basic Software modules [23] (SWS BSW General), which is also valid for COM.

Thus, the specification SWS BSW General shall be considered as additional and required specification for COM.



4 Constraints and Assumptions

This document is applicable for AUTOSAR release 4.1.

4.1 Limitations

The AUTOSAR COM module is based on [17]. Nevertheless not all features of [17] are included and some features are different. See SWS_Com_00013 for a list of not included features.

4.2 Applicability to Car Domains

No restrictions.



5 Dependencies to Other Modules

This chapter lists all the features from other modules that are used by the AUTOSAR COM module and functionalities that are provided by the AUTOSAR COM module to other modules. For the placement of the AUTOSAR COM module in the communication stack, see Figure 1.

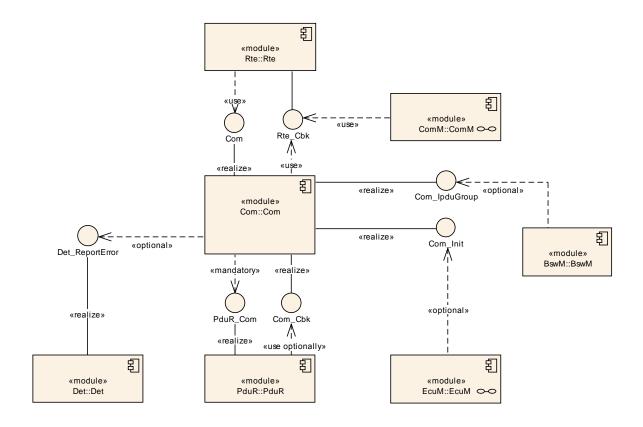


Figure 1: AUTOSAR COM module's context view

5.1 PDU Router

The AUTOSAR COM module uses the union of both sets of PDU Router's upper layer module APIs. That is the APIs for upper layer modules that uses TP and the APIs for upper layer modules that do not use TP. This is necessary since the AUTOSAR COM module transports I-PDUs either unfragmented via simple L-PDUs or fragmented via TP.

The following summarizes the functionality of the AUTOSAR COM module needs from the underlying layer PDU Router:



- Indication of incoming I-PDUs
- Sending interface for outgoing I-PDUs including the confirmation if an I-PDU has been sent by the communication controller
- Trigger interface to enable the PDU router to cause a transmission from the AUTOSAR COM module
- Buffer handling for TP communication

Chapter 7.5 and Chapter 9.1 include a detailed description of the interfaces to the PDU Router. For further information, see [10].

5.2 Runtime Environment (RTE)

The RTE uses the capabilities of the AUTOSAR COM module to send and receive signals. In AUTOSAR, the RTE is the higher layer above the AUTOSAR COM module. For further information, see [13].



5.3 File Structure

5.3.1 Header File Structure

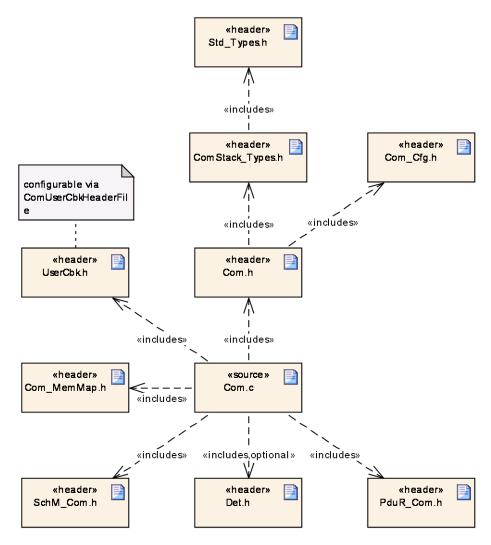


Figure 2: Include file structure

[SWS_Com_00220] [The Com.c file shall include:

- Com.h
- Com_MemMap.h
- PduR_Com.h
- SchM_Com.h
- all user callback header files as configured per ComUserCbkHeaderFile (ECUC_Com_10001)

(SRS_BSW_00300, SRS_BSW_00415)

[SWS_Com_00796] [The Com.h file shall include:

- Com_Cfg.h
- ComStack_Types.h



| (SRS_BSW_00346, SRS_BSW_00381, SRS_BSW_00412)



6 Requirements Traceability

The following table references the requirements specified in [3], [7], [17] and [9] and links to the fulfillment of these. Requirements that are not fulfilled by this document are linked to SWS_Com_00999.

Requirement	Description	Satisfied by
SRS_BSW_00003	All software modules shall provide version and identification information	SWS_Com_00426
SRS_BSW_00005	Modules of the μC Abstraction Layer (MCAL) may not have hard coded horizontal interfaces	SWS_Com_00999
SRS_BSW_00006	The source code of software modules above the μC Abstraction Layer (MCAL) shall not be processor and compiler dependent.	SWS_Com_00999
SRS_BSW_00009	All Basic SW Modules shall be documented according to a common standard.	SWS_Com_00999
SRS_BSW_00010	The memory consumption of all Basic SW Modules shall be documented for a defined configuration for all supported platforms.	SWS_Com_00999
SRS_BSW_00101	The Basic Software Module shall be able to initialize variables and hardware in a separate initialization function	SWS_Com_00015, SWS_Com_00059, SWS_Com_00098, SWS_Com_00117, SWS_Com_00128, SWS_Com_00217, SWS_Com_00328, SWS_Com_00432, SWS_Com_00484, SWS_Com_00850
SRS_BSW_00161	The AUTOSAR Basic Software shall provide a microcontroller abstraction layer which provides a standardized interface to higher software layers	SWS_Com_00999
SRS_BSW_00162	The AUTOSAR Basic Software shall provide a hardware abstraction layer	SWS_Com_00999
SRS_BSW_00164	The Implementation of interrupt service routines shall be done by the Operating System, complex drivers or modules	SWS_Com_00999
SRS_BSW_00167	All AUTOSAR Basic Software Modules shall provide configuration rules and constraints to enable plausibility checks	SWS_Com_00497



SRS_BSW_00168	SW components shall be tested by a function defined in a common API in the Basis-SW	SWS_Com_00999
SRS_BSW_00170	The AUTOSAR SW Components shall provide information about their dependency from faults, signal qualities, driver demands	SWS_Com_00999
SRS_BSW_00171	Optional functionality of a Basic-SW component that is not required in the ECU shall be configurable at pre- compile-time	SWS_Com_00999
SRS_BSW_00300	All AUTOSAR Basic Soft- ware Modules shall be identified by an unambi- guous name	SWS_Com_00220
SRS_BSW_00301	All AUTOSAR Basic Soft- ware Modules shall only import the necessary infor- mation	SWS_Com_00609
SRS_BSW_00302	All AUTOSAR Basic Software Modules shall only export information needed by other modules	SWS_Com_00999
SRS_BSW_00306	AUTOSAR Basic Software Modules shall be compiler and platform independent	SWS_Com_00999
SRS_BSW_00307	Global variables naming convention	SWS_Com_00999
SRS_BSW_00308	AUTOSAR Basic Software Modules shall not define global data in their header files, but in the C file	SWS_Com_00999
SRS_BSW_00309	All AUTOSAR Basic Software Modules shall indicate all global data with readonly purposes by explicitly assigning the const keyword	SWS_Com_00999
SRS_BSW_00312	Shared code shall be re- entrant	SWS_Com_00321
SRS_BSW_00314	All internal driver modules shall separate the interrupt frame definition from the service routine	SWS_Com_00999
SRS_BSW_00321	The version numbers of AUTOSAR Basic Software Modules shall be enumerated according specific rules	SWS_Com_00999
SRS_BSW_00325	The runtime of interrupt service routines and functions that are running in	SWS_Com_00999



	interrupt context shall be kept short	
SRS_BSW_00327	Error values naming convention	SWS_Com_00442
SRS_BSW_00328	All AUTOSAR Basic Soft- ware Modules shall avoid the duplication of code	SWS_Com_00999
SRS_BSW_00331	All Basic Software Modules shall strictly separate error and status information	SWS_Com_00194
SRS_BSW_00333	For each callback function it shall be specified if it is called from interrupt context or not	SWS_Com_00999
SRS_BSW_00334	All Basic Software Modules shall provide an XML file that contains the meta data	SWS_Com_00999
SRS_BSW_00335	Status values naming convention	SWS_Com_00819
SRS_BSW_00336	Basic SW module shall be able to shutdown	SWS_Com_00129, SWS_Com_00130
SRS_BSW_00337	Classification of develop- ment errors	SWS_Com_00803, SWS_Com_00804
SRS_BSW_00341	Module documentation shall contains all needed informations	SWS_Com_00999
SRS_BSW_00344	BSW Modules shall support link-time configuration	SWS_Com_00432
SRS_BSW_00346	All AUTOSAR Basic Soft- ware Modules shall provide at least a basic set of modu- le files	SWS_Com_00796
SRS_BSW_00347	A Naming seperation of different instances of BSW drivers shall be in place	SWS_Com_00999
SRS_BSW_00348	All AUTOSAR standard types and constants shall be placed and organized in a standard type header file	SWS_Com_00865
SRS_BSW_00353	All integer type definitions of target and compiler specific scope shall be placed and organized in a single type header	SWS_Com_00999
SRS_BSW_00358	The return type of init() functions implemented by AUTOSAR Basic Software Modules shall be void	SWS_Com_00432
SRS_BSW_00359	All AUTOSAR Basic Soft- ware Modules callback functions shall avoid return	SWS_Com_00468, SWS_Com_00491, SWS_Com_00536, SWS_Com_00554, SWS_Com_00555, SWS_Com_00556



	types other than void if possible	
SRS_BSW_00360	AUTOSAR Basic Software Modules callback functions are allowed to have para- meters	SWS_Com_00468, SWS_Com_00491, SWS_Com_00536, SWS_Com_00554, SWS_Com_00555, SWS_Com_00556
SRS_BSW_00361	All mappings of not stan- dardized keywords of com- piler specific scope shall be placed and organized in a compiler specific type and keyword header	SWS_Com_00999
SRS_BSW_00369	All AUTOSAR Basic Soft- ware Modules shall not return specific development error codes via the API	SWS_Com_00442
SRS_BSW_00375	Basic Software Modules shall report wake-up reasons	SWS_Com_00999
SRS_BSW_00377	A Basic Software Module can return a module specific types	SWS_Com_00865
SRS_BSW_00378	AUTOSAR shall provide a boolean type	SWS_Com_00999
SRS_BSW_00381	The pre-compile time parameters shall be placed into a separate configuration header file	SWS_Com_00796
SRS_BSW_00383	The Basic Software Module specifications shall specify which other configuration files from other modules they use at least in the description	SWS_Com_00999
SRS_BSW_00384	The Basic Software Module specifications shall specify at least in the description which other modules they require	SWS_Com_00669, SWS_Com_00670
SRS_BSW_00385	List possible error notifications	SWS_Com_00442
SRS_BSW_00386	The BSW shall specify the configuration for detecting an error	SWS_Com_00999
SRS_BSW_00404	BSW Modules shall support post-build configuration	SWS_Com_00432, SWS_Com_00825
SRS_BSW_00405	BSW Modules shall support multiple configuration sets	SWS_Com_00432
SRS_BSW_00407	Each BSW module shall provide a function to read out the version information of a dedicated module	SWS_Com_00426



	implementation	
SRS_BSW_00409	All production code error ID symbols are defined by the Dem module and shall be retrieved by the other BSW modules from Dem configuration	SWS_Com_00999
SRS_BSW_00410	Compiler switches shall have defined values	SWS_Com_00999
SRS_BSW_00412	References to c- configuration parameters shall be placed into a sepa- rate h-file	SWS_Com_00796
SRS_BSW_00413	An index-based accessing of the instances of BSW modules shall be done	SWS_Com_00999
SRS_BSW_00414	Init functions shall have a pointer to a configuration structure as single parameter	SWS_Com_00432, SWS_Com_00805, SWS_Com_00837
SRS_BSW_00415	Interfaces which are provided exclusively for one module shall be separated into a dedicated header file	SWS_Com_00220
SRS_BSW_00416	The sequence of modules to be initialized shall be configurable	SWS_Com_00999
SRS_BSW_00417	Software which is not part of the SW-C shall report error events only after the DEM is fully operational.	SWS_Com_00999
SRS_BSW_00423	BSW modules with AUTO- SAR interfaces shall be describable with the means of the SW-C Template	SWS_Com_00999
SRS_BSW_00424	BSW module main processing functions shall not be allowed to enter a wait state	SWS_Com_00999
SRS_BSW_00425	The BSW module description template shall provide means to model the defined trigger conditions of schedulable objects	SWS_Com_00359, SWS_Com_00398, SWS_Com_00399, SWS_Com_00400, SWS_Com_00664, SWS_Com_00665, SWS_Com_00666
SRS_BSW_00426	BSW Modules shall ensure data consistency of data which is shared between BSW modules	SWS_Com_00999
SRS_BSW_00427	ISR functions shall be defi- ned and documented in the BSW module description template	SWS_Com_00999
SRS_BSW_00428	A BSW module shall state if	SWS_Com_00999



	Ī	
	its main processing func- tion(s) has to be executed in a specific order or sequence	
SRS_BSW_00429	BSW modules shall be only allowed to use OS objects and/or related OS services	SWS_Com_00999
SRS_BSW_00432	Modules should have separate main processing functions for read/receive and write/transmit data path	SWS_Com_00359, SWS_Com_00398, SWS_Com_00399, SWS_Com_00400, SWS_Com_00466
SRS_BSW_00433	Main processing functions are only allowed to be called from task bodies provided by the BSW Scheduler	SWS_Com_00999
SRS_BSW_00437	Memory mapping shall provide the possibility to define RAM segments which are not to be initialized during startup	SWS_Com_00999
SRS_BSW_00441	Naming convention for type, macro and function	SWS_Com_00820, SWS_Com_00821, SWS_Com_00822, SWS_Com_00823, SWS_Com_00825, SWS_Com_00865
SRS_BSW_00452	Classification of runtime errors	SWS_Com_00864
SRS_Com_00177	AUTOSAR COM and LargeDataCOM shall sup- port multiple configuration stages	SWS_Com_00853, SWS_Com_00856
SRS_Com_00192	The AUTOSAR COM modu- le shall support enabling and disabling reception deadline monitoring of I- PDU groups	SWS_Com_00224, SWS_Com_00225, SWS_Com_00486, SWS_Com_00534, SWS_Com_00616, SWS_Com_00617, SWS_Com_00618, SWS_Com_00752, SWS_Com_00772
SRS_Com_00218	The AUTOSAR COM module shall support starting and stopping multiple I-PDU groups during runtime	SWS_Com_00114, SWS_Com_00115, SWS_Com_00222, SWS_Com_00223, SWS_Com_00228, SWS_Com_00229, SWS_Com_00334, SWS_Com_00444, SWS_Com_00479, SWS_Com_00684, SWS_Com_00685, SWS_Com_00713, SWS_Com_00714, SWS_Com_00733, SWS_Com_00751, SWS_Com_00751, SWS_Com_00782, SWS_Com_00783, SWS_Com_00783, SWS_Com_00782, SWS_Com_00782, SWS_Com_00782, SWS_Com_00782, SWS_Com_00782, SWS_Com_00782, SWS_Com_00782, SWS_Com_00782, SWS_Com_00840, SWS_Com_00822, SWS_Com_00840, SWS_Com_00871
SRS_Com_02030	The AUTOSAR COM module shall support to detect if a received signal or signal group was updated by the sender	SWS_Com_00055, SWS_Com_00059, SWS_Com_00061, SWS_Com_00062, SWS_Com_00067, SWS_Com_00117, SWS_Com_00310, SWS_Com_00324, SWS_Com_00577, SWS_Com_00578, SWS_Com_00702, SWS_Com_00703, SWS_Com_00704, SWS_Com_00705, SWS_Com_00706, SWS_Com_00801, SWS_Com_00802



		_
SRS_Com_02037	AUTOSAR COM module shall be based on the functionality and APIs of OSEK COM 3.0.3	SWS_Com_00010, SWS_Com_00011, SWS_Com_00012, SWS_Com_00013, SWS_Com_00132, SWS_Com_00138, SWS_Com_00197, SWS_Com_00198, SWS_Com_00231, SWS_Com_00303, SWS_Com_00302, SWS_Com_00325, SWS_Com_00346, SWS_Com_00348, SWS_Com_00380, SWS_Com_00381, SWS_Com_00388, SWS_Com_00388, SWS_Com_00395, SWS_Com_00396, SWS_Com_00449, SWS_Com_00445, SWS_Com_00445, SWS_Com_00441, SWS_Com_00471, SWS_Com_00603, SWS_Com_00604, SWS_Com_00624, SWS_Com_00625, SWS_Com_00631, SWS_Com_00694, SWS_Com_00695, SWS_Com_00696, SWS_Com_00696, SWS_Com_00700, SWS_Com_00719, SWS_Com_00762, SWS_Com_00774, SWS_Com_00775, SWS_Com_00776, SWS_Com_00775, SWS_Com_00776, SWS_Com_00789, SWS_Com_00793, SWS_Com_00820, SWS_Com_00861, SWS_Com_00862, SWS_Com_00868, SWS_Com_00867, SWS_Com_00868, SWS_Com_00867, SWS_Com_00866, SWS_Com_00867, SWS_Com_00868
SRS_Com_02041	configured by using XML as configuration language The AUTOSAR module shall handle complex data types as a consistent set of data	SWS_Com_00050, SWS_Com_00051, SWS_Com_00200, SWS_Com_00201, SWS_Com_00461, SWS_Com_00513, SWS_Com_00635, SWS_Com_00637, SWS_Com_00638, SWS_Com_00639, SWS_Com_00676, SWS_Com_00677, SWS_Com_00678, SWS_Com_00679, SWS_Com_00821, SWS_Com_00851, SWS_Com_00852, SWS_Com_00854, SWS_Com_00855, SWS_Com_00857
SRS_Com_02042	The AUTOSAR COM module shall fill unused areas/bits within an I-PDU with a configurable value	SWS_Com_00015
SRS_Com_02043	AUTOSAR COM and LargeDataCOM shall provi- de a receive indication function	SWS_Com_00123
SRS_Com_02044	AUTOSAR COM and LargeDataCOM shall provi- de a transmit confirmation function	SWS_Com_00124
SRS_Com_02045	AUTOSAR COM and	SWS_Com_00001, SWS_Com_00475,



	T	•
	LargeDataCOM shall provide a function to request the transmit buffer data for lower layer triggered transmission	SWS_Com_00647, SWS_Com_00869
SRS_Com_02046	The AUTOSAR COM modu- le shall support immediate and deferred signal based notification to the RTE	SWS_Com_00300, SWS_Com_00301, SWS_Com_00574, SWS_Com_00575, SWS_Com_00794, SWS_Com_00870
SRS_Com_02058	The AUTOSAR COM modu- le shall support deadline monitoring for updated signals/signal groups on receiver side	SWS_Com_00117, SWS_Com_00290, SWS_Com_00291, SWS_Com_00292, SWS_Com_00715, SWS_Com_00716
SRS_Com_02067	AUTOSAR COM and LargeDataCOM shall define rules for checking the con- sistency of configuration data	SWS_Com_00102, SWS_Com_00105, SWS_Com_00310, SWS_Com_00365, SWS_Com_00373, SWS_Com_00384, SWS_Com_00401, SWS_Com_00402, SWS_Com_00443, SWS_Com_00465, SWS_Com_00535, SWS_Com_00553, SWS_Com_00732, SWS_Com_00785, SWS_Com_00790, SWS_Com_00817
SRS_Com_02077	The AUTOSAR COM modu- le shall support invalidation of signals at sender side	SWS_Com_00099, SWS_Com_00203, SWS_Com_00557, SWS_Com_00642, SWS_Com_00643, SWS_Com_00645
SRS_Com_02078	The AUTOSAR COM modu- le shall support endianness conversion	SWS_Com_00007, SWS_Com_00221, SWS_Com_00352, SWS_Com_00472, SWS_Com_00580, SWS_Com_00674, SWS_Com_00675, SWS_Com_00810
SRS_Com_02079	The AUTOSAR COM modu- le shall support an optional notification when receiving invalidated data	SWS_Com_00536, SWS_Com_00680, SWS_Com_00681, SWS_Com_00682, SWS_Com_00717, SWS_Com_00718, SWS_Com_00859, SWS_Com_00860
SRS_Com_02080	The AUTOSAR COM modu- le shall cancel outstanding repetitions in case of a new send request	SWS_Com_00279
SRS_Com_02082	The AUTOSAR COM modu- le shall support defining two different transmission mo- des for each I-PDU	SWS_Com_00032, SWS_Com_00238, SWS_Com_00239, SWS_Com_00244, SWS_Com_00495, SWS_Com_00582, SWS_Com_00784, SWS_Com_00799
SRS_Com_02083	The AUTOSAR COM module shall support multiple transmission modes	SWS_Com_00135, SWS_Com_00305, SWS_Com_00308, SWS_Com_00330, SWS_Com_00392, SWS_Com_00467, SWS_Com_00478, SWS_Com_00494, SWS_Com_00602, SWS_Com_00734, SWS_Com_00739, SWS_Com_00741, SWS_Com_00742, SWS_Com_00743, SWS_Com_00767, SWS_Com_00768, SWS_Com_00769, SWS_Com_00770
SRS_Com_02084	The AUTOSAR COM module shall support a configurable signal data based selection mechanism of the two transmission modes	SWS_Com_00032, SWS_Com_00245, SWS_Com_00605, SWS_Com_00677, SWS_Com_00678, SWS_Com_00679, SWS_Com_00763, SWS_Com_00799, SWS_COM_00813



SRS_Com_02086	The AUTOSAR COM module shall support signextension	SWS_Com_00008, SWS_Com_00352, SWS_Com_00579, SWS_Com_00723, SWS_Com_00829
SRS_Com_02087	The AUTOSAR COM modu- le shall support an optional substitution of received invalidated data	SWS_Com_00470, SWS_Com_00500, SWS_Com_00681, SWS_Com_00683, SWS_Com_00859, SWS_Com_00860
SRS_Com_02088	The AUTOSAR COM modu- le shall support substituting the last received value by the init value in case of a signal timeout	SWS_Com_00470, SWS_Com_00875, SWS_Com_00876
SRS_Com_02089	The AUTOSAR COM modu- le shall provide two configu- rable options to handle signal timeouts	SWS_Com_00290, SWS_Com_00291, SWS_Com_00292, SWS_Com_00333, SWS_Com_00738, SWS_Com_00744
SRS_Com_02090	The AUTOSAR COM module shall define a datastructure allowing efficiently starting and stopping of I-PDU groups	SWS_Com_00623, SWS_Com_00749, SWS_Com_00750, SWS_Com_00823
SRS_Com_02091	AUTOSAR COM and LargeDataCOM shall not support splitting of large signals into different I-PDUs	SWS_Com_00754, SWS_Com_00755, SWS_Com_00756
SRS_Com_02092	The AUTOSAR COM module shall support at most one dynamic length signal per I-PDU	SWS_Com_00690, SWS_Com_00711, SWS_Com_00712, SWS_Com_00724, SWS_Com_00754
SRS_Com_02093	Dynamic length signal must be placed last in I-PDU	SWS_Com_00755, SWS_Com_00757, SWS_Com_00758, SWS_Com_00832
SRS_Com_02094	Dynamic length signals must be of type UINT8[n]	SWS_Com_00675, SWS_Com_00753
SRS_Com_02095	AUTOSAR COM and LargeDataCOM shall use the TP to fragment and reassemble large signals	SWS_Com_00627, SWS_Com_00628, SWS_Com_00629, SWS_Com_00630, SWS_Com_00650, SWS_Com_00654, SWS_Com_00655, SWS_Com_00657, SWS_Com_00662, SWS_Com_00690, SWS_Com_00691, SWS_Com_00692, SWS_Com_00693, SWS_Com_00720, SWS_Com_00721, SWS_Com_00725, SWS_Com_00818, SWS_Com_00838, SWS_Com_00839, SWS_Com_00863, SWS_Com_00874
SRS_Com_02096	The AUTOSAR COM modu- le shall not support frag- mentation towards the RTE	SWS_Com_00759, SWS_Com_00760
SRS_Com_02097	AUTOSAR COM and LargeDataCOM shall sup- port dynamical signals with a static maximum length	SWS_Com_00756
SRS_Com_02098	The AUTOSAR COM module shall distinct normal and	SWS_Com_00753



large signals via its configuration	
The AUTOSAR COM modu- le shall provide a mecha- nism to detect out of se- quence received I-PDUs	SWS_Com_00587
The AUTOSAR COM modu- le shall support the incre- menting and checking of the I-PDU Counter	SWS_Com_00588, SWS_Com_00687, SWS_Com_00688
The AUTOSAR COM modu- le shall support the detec- tion of out of sequence I- PDUs	SWS_Com_00590, SWS_Com_00726, SWS_Com_00727, SWS_Com_00834
The AUTOSAR COM modu- le shall provide a mecha- nism to detect corrupted received I-PDUs and to recover from this failure mode	SWS_Com_00596, SWS_Com_00597
The AUTOSAR COM module shall support transmission and reception of replicated I-PDUs	SWS_Com_00596, SWS_Com_00597
The AUTOSAR COM modu- le shall support the detec- tion of failures when recei- ving replicated I-PDUs	SWS_Com_00596, SWS_Com_00597
The AUTOSAR COM modu- le shall cancel transmission requests in case of expired transmissions	SWS_Com_00708
AUTOSAR COM shall provide a uint8-array based API for signal groups	SWS_Com_00841, SWS_Com_00842, SWS_Com_00843, SWS_Com_00844, SWS_Com_00845, SWS_Com_00846, SWS_Com_00847, SWS_Com_00848, SWS_Com_00849, SWS_Com_00850, SWS_Com_00851, SWS_Com_00852, SWS_Com_00854, SWS_Com_00855
The routing configuration shall be updateable at postbuild time	SWS_Com_00357, SWS_Com_00361, SWS_Com_00373
The signal gateway shall provide a mechanism to route individual signals between I-PDUs in a 1:n fashion	SWS_Com_00377, SWS_Com_00539, SWS_Com_00598, SWS_Com_00872, SWS_Com_00873
Signal Groups shall be routed	SWS_Com_00361, SWS_Com_00383, SWS_Com_00735, SWS_Com_00833
Routers shall map only signals	SWS_Com_00360, SWS_Com_00361, SWS_Com_00362
The signal gateway shall be scalable to zero size and	SWS_Com_00370
	ration The AUTOSAR COM module shall provide a mechanism to detect out of sequence received I-PDUs The AUTOSAR COM module shall support the incrementing and checking of the I-PDU Counter The AUTOSAR COM module shall support the detection of out of sequence I-PDUs The AUTOSAR COM module shall provide a mechanism to detect corrupted received I-PDUs and to recover from this failure mode The AUTOSAR COM module shall support transmission and reception of replicated I-PDUs The AUTOSAR COM module shall support the detection of failures when receiving replicated I-PDUs The AUTOSAR COM module shall cancel transmission requests in case of expired transmissions AUTOSAR COM shall provide a uint8-array based API for signal groups The routing configuration shall be updateable at postbuild time The signal gateway shall provide a mechanism to route individual signals between I-PDUs in a 1:n fashion Signal Groups shall be routed Routers shall map only signals The signal gateway shall be routed



	zero resource usage when signal routing is not required	
SRS_PduR_06089	The timeout of a deadline monitored signal shall be ignored by the SigG	SWS_Com_00377, SWS_Com_00701, SWS_Com_00872, SWS_Com_00873
SRS_PduR_06097	A configuration shall be identified by an unique ID number	SWS_Com_00487
SRS_PduR_06098	Signal Gateway Error shall be handled with signal routing	SWS_Com_00442
SRS_PduR_06099	Signal Gateway Error shall be handled with signal group routing	SWS_Com_00442



7 Functional Specification

7.1 Introduction

7.2 General Functionality

7.2.1 OSEK-COM

OSEK COM 3.0.3 is the functional basis of the AUTOSAR COM module.

[SWS_Com_00010] [The AUTOSAR COM module shall implement all the functionality and all the APIs of OSEK/ VDX Communication Version 3.0.3 [17] except the features and APIs mentioned in SWS_Com_00013.| (SRS_Com_02037)

[SWS_Com_00011] [If this AUTOSAR COM specification defines functionality in a different way compared to definitions in [17], the AUTOSAR COM module shall implement the functionality defined in this AUTOSAR COM specification.] (SRS_Com_02037)

[SWS_Com_00012] [The AUTOSAR COM module shall in addition implement all those features, that are defined in this AUTOSAR COM specification and that are not part of [17].] (SRS_Com_02037)

[SWS_Com_00013] [The AUTOSAR COM module may implement the following features of [17]. If they are implemented in a specific AUTOSAR COM module, the configuration shall disable them by default. This also applies for all other additional features a specific implementation may provide.] (SRS_Com_02037)

OSEK-COM feature	Rationale	related OSEK COM API
Mapping of a received network message (within an I-PDU) to more than one message data objects (1:n splitting mechanism)	not required, done by the RTE, see [13]	none
Mapping of an internal message to more than one message data objects (1:n splitting mechanism)	not required, done by the RTE, see [13]	none
Mapping an only locally send message to both an external send message object and an internal receive message object (1:n splitting mechanism)	not required, done by the RTE, see [13]	none
M:1 sending; mapping of messages from multiple senders to one and the same message object	not required, ensured by RTE, see [13]	SendMessage
Queued messages	not required, done by the RTE, see [13]	GetMessageStatus
Zero size messages	it is possible to set up com- munication without them	SendZeroMessage



OSEK-COM feature	Rationale	related OSEK COM API
	functionality is partly covered	
	by Com_TriggerTransmit	
Notification mechanisms TASK,	not required, done by the	none
FLAG and EVENT	RTE, see [13]	
Overlapping messages in an I-PDU	no use case, dangerous	none
	concept	
Usage of OIL	The OSEK OIL is not used to	None
	configure the AUTOSAR	
A 11 (1	COM module.	
Application modes	not needed	GetComApplicationMode
Start-up behavior	replaced by	StartCOM, StopCOM,
	Com_Init Com_Datait	StartCOMExtensions, InitMessage
	Com_Delnit Com_InduCroupControl	muviessaye
Ctart and aton of pariodia manages	Com_lpduGroupControl no use case, is realized by	Start Dariadia Stan Dariadia
Start and stop of periodic messages	I-PDU group mechanism	StartPeriodic, StopPeriodic
Reentrancy	Not all of the AUTOSAR API	See Chapter 8.3.
Recitiancy	calls are reentrant. See	See Chapter 6.5.
	Chapter 8.3.	
Interface to OSEK indirect NM	not needed	I_MessageTransfer,
		I_MessageTimeOut
Sender side filtering	no use case, the filter condi-	none
-	tions are still used in the	
	selection of the transmission	
	mode but there is no signal	
	filtering	
Network-order message callout	Only I-PDU callouts with a	None
CDI Lordor magaza colleut	defined AUTOSAR interface	
CPU-order message callout	are supported by the AU- TOSAR COM module. This is	
	to avoid proprietary solutions.	
Error hook routine	The AUTOSAR COM module	COMErrorHook
2.13. Hook foddilo	defines an own interface for	COMError_Name1_Name2
	error reporting instead of	macros
	using the OSEK COM error	COMErrorGetServiceId
	hook	
Interface for callback routines	The signatures for the used	COMCallback
	callback function of the AU-	
	TOSAR COM module will be	
	explicitly defined within the	
	AUTOSAR COM module's	
Internal communication	specification.	CondMagaga
Internal communication	not required, ensured by RTE, see [13]	SendMessage, ReceiveMessage
	NIE, SEE [IS]	Receivelviessage

Table 1: Excluded OSEK COM features in the AUTOSAR COM module

7.2.2 Signal Values

The signals sent by the AUTOSAR COM module respectively received by the AUTOSAR COM module could have the values defined in Table 2.

Signal value	Remark
init value	See Chapter 7.3.1.4 for details.



Signal value	Remark
Data invalid value	See Chapter 7.3.4 for details.
<value></value>	This is the normal case: A valid value after initialization phase, which is sent by the AUTOSAR COM module respectively, received by AUTOSAR COM module.

Table 2: Possible signal values

7.2.3 Endianness Conversion and Sign Extension

[SWS_Com_00675] [The AUTOSAR COM module shall support the following data types:

- boolean
- uint8
- uint16
- uint32
- uint64
- sint8
- sint16
- sint32
- sint64
- uint8[n]
- float32
- float64

The type uint8[n] is mapped to either ComSignalType *UINT8_N* or *UINT8_DYN*.] (SRS_Com_02078, SRS_Com_02094)

[SWS_Com_00007] [The AUTOSAR COM module shall support endianness conversion for all supported signed and unsigned integer data types (see SWS_Com_00675).] (SRS_Com_02078)

[SWS_Com_00810] [The AUTOSAR COM module shall treat non-integer data types (e.g. uint8[n] or float32) either like integer data types of the matching size or leave their contents uninterpreted in case their ComSignalEndianness is configured to *OPAQUE*.| (SRS_Com_02078)

[SWS_Com_00472] [The AUTOSAR COM module shall interpret opaque data as uint8[n] and shall always map it to an n-bytes sized signal.] (SRS Com 02078)

For opaque data endianness, conversion has to be configured to *OPAQUE* (see ECUC_Com_00157).

[SWS_Com_00674] [The AUTOSAR COM module shall extend the endianness conversion defined in [17] Chapter 2.4 to signed data types.] (SRS_Com_02078)



In [17] Chapter 2.4 defines the endianness conversion for unsigned data types. The associated configurations can be found in Chapter 10. See also ECUC_Com_00127 and ECUC_Com_00157.

[SWS_Com_00829] [The AUTOSAR COM module shall extend the endianness conversion defined in [17] Chapter 2.4 to signals of signal groups.] (SRS_Com_02086)

AUTOSAR COM handles signals and group signals equally with respect to endianness conversion.

[SWS_Com_00008] [The AUTOSAR COM module shall extend received data to the size of the ComSignalType of the receive signal (sign extension).] (SRS_Com_02086)

The platform specific representation of signed data has to be taken into account. Negative values of signed data will be mapped correctly.

Example: A 10-Bit signed signal is received and copied by Com_ReceiveSignal to a 16-Bit signed integer variable. If (-3)_{decimal} is received, the received 10-Bit signal has a value of 11111111101b. While copying it to the 16-Bit integer variable the value will be extended to 11111111111111101b.

[SWS_Com_00723] [The AUTOSAR COM module shall extend the init value (ComSignalInitValue) of a signal to the size of its ComSignalType.] (SRS_Com_02086)

Note that the AUTOSAR COM module will not need to perform sign extensions on sender side as it is guaranteed that the values to be transmitted will always be sign-extended. See also SWS_Com_00785.

[SWS_Com_00579] [The AUTOSAR COM module shall not support sign extension for float32 and float64 data types.] (SRS Com 02086)

[SWS_Com_00221] [The AUTOSAR COM module shall perform endianness conversion before the I-PDU callout on sender side. For an overview, see Chapter 7.15.] (SRS_Com_02078)

[SWS_Com_00352] [The AUTOSAR COM module shall perform sign extensions and endianness conversion before performing filtering and notification detection on receiver side.] (SRS_Com_02078, SRS_Com_02086)

[SWS_Com_00580] [Beside endianness conversion, the AUTOSAR COM module shall not support further conversions for signals with ComSignalType FLOAT32 or FLOAT64. That is endianness conversion shall be supported but complex conversion or normalizations of fractions, exponents, signs or bias values shall not be supported.] (SRS_Com_02078)



7.2.4 Filtering

[SWS_Com_00694] [The AUTOSAR COM module shall evaluate each filtering condition to either true or false.] (SRS_Com_02037)

[SWS_Com_00695] [The AUTOSAR COM module shall filter out signals only at receiver side.] (SRS_Com_02037)

[SWS_Com_00602] [The AUTOSAR COM module shall use filtering mechanisms on sender side for Transmission Mode Conditions (TMC) but it shall not filter out signals on sender side.] (SRS_Com_02083)

For Transmission Mode Selection (TMS) see Chapters 7.3.3.2 and 7.3.3.3.

The AUTOSAR COM module only provides the following ComFilterAlgorithms of that which are defined in [17], see ECUC_Com_00146:

- ALWAYS
- NEVER
- MASKED_NEW_EQUALS_X
- MASKED NEW DIFFERS X
- MASKED_NEW_DIFFERS_MASKED_OLD
- NEW IS WITHIN
- NEW IS OUTSIDE
- ONE EVERY N

To reduce complexity the AUTOSAR COM module does not support all filters defined in [17]. The not supported filters are either obsolete or special cases of other filters. For example, the filter NEW_IS_DIFFERENT is a special case of MASKED_NEW_-DIFFERS_MASKED_OLD with a fully set mask.

[SWS_Com_00325] [The AUTOSAR COM module shall support all filter mechanisms listed in ECUC_Com_00146, considering the exceptions defined in SWS_Com_00380 and SWS_Com_00439.] (SRS_Com_02037)

[SWS_Com_00380] [For signals with ComSignalType *FLOAT32*, *FLOAT64*, *UINT8_N* or *UINT8_DYN*, the AUTOSAR COM module shall only support ComFilterAlgorithm configured to *ALWAYS*, *NEVER* or ONE_EVERY_N.] (SRS_Com_02037)

[SWS_Com_00439] [For signals with ComSignalType configured to *BOOLEAN*, the AUTOSAR COM module shall only support ComFilterAlgorithm configured to:

- ALWAYS
- NEVER
- MASKED NEW EQUALS X
- MASKED NEW DIFFERS X
- MASKED_NEW_DIFFERS_MASKED_OLD
- ONE EVERY N

(SRS_Com_02037)



[SWS_Com_00764] [For signals and group signals with ComBitSize configured to 0, the AUTOSAR COM module shall not support the filter algorithm *Masked_New_-Differs_Masked_Old.*] (SRS_Com_02037)

[SWS_Com_00866] [In case the configured filter condition is MASKED_-NEW_DIFFERS_X, MASKED_NEW_EQUALS_X, NEW_IS_OUTSIDE or NEW_IS_-WITHIN, the AUTOSAR COM module shall calculate the reception filter by using only the least significant ComBitSize bits of the filter parameters.] (SRS_Com_02037)

[SWS_Com_00273] [If the AUTOSAR COM module filters out a signal on receiver side, i.e. filter condition evaluates to false, the AUTOSAR COM module shall discard that signal and shall not process it. See also SWS_Com_00303.] (SRS_Com_02037)

[SWS_Com_00836] [If the AUTOSAR COM module filters out a group signal on receiver side, i.e. filter condition evaluates to false, the AUTOSAR COM module shall discard the whole signal group and shall not process it.] (SRS_Com_02037)

[SWS_Com_00132] [The AUTOSAR COM module shall support the filtering mechanisms as defined in ECUC_Com_00146 also for signed data types.] (SRS_Com_02037)

In the case a filter is evaluated before a send-API has written the corresponding signal, there needs to be a way to determine the filter state of this signal. Some of the filters require a *new_value* to evaluate the filter. However, this is only available <u>after</u> the signal has been updated using a send-API. Therefore, it is necessary to define the value used by the filter for *new_value* in the period before the first send takes place.

[SWS_Com_00603] [The AUTOSAR COM module shall set the *old_value* of the filtering mechanisms for each signal to the ComSignalInitValue (ECUC_Com_00170) during start-up. See also [17].] (SRS_Com_02037)

[SWS_Com_00604] [Until the application has not updated the *new_value* of the filtering mechanisms for a signal, the AUTOSAR COM module shall use the ComSignalInitValue as the *new_value* for that signal.] (SRS_Com_02037)

The next two requirements clarify the definitions of [17] according to the update of the *old value* of filters.

[SWS_Com_00302] [If the AUTOSAR COM module evaluates a filter for a signal to true, (value is not filtered out) then the AUTOSAR COM module shall place the value of that signal into *old_value* (as defined in [17]).| (SRS_Com_02037)

[SWS_Com_00303] [When a value is being filtered, if the filter does not allow the passage of the value (i.e. the filter evaluates to false) then the AUTOSAR COM module shall not place that value into *old_value* (as defined in [17]).] (SRS_Com_02037)

[SWS_Com_00231] [In the case of ComFilterAlgorithm is configured to ONE EVERY N, the AUTOSAR COM module shall



- set OCCURRENCE to zero when OCCURRENCE == PERIOD
- set FILTER to true, when OCCURRENCE == OFFSET
- increment OCCURRENCE after filter processing
 (ODD) (ODD)

| (SRS_Com_02037)

For definition of OCCURRENCE, FILTER, OFFSET and PERIOD see [17].

Configuring ComFilterAlgorithm to *ONE_EVERY_N* for a signal has the effect that the signal is passed by the filter (i.e. the filter returns true) once every PERIOD calls of the filter. If the OFFSET parameter is zero then the first time the filter is used the signal is allowed to pass (i.e. filter returns true). If the OFFSET is greater than zero then more than one signal must pass through the filter before it returns true.

In case the I-PDU is started by Com_IpduGroupControl with parameter initialize set to true, the OCCURRENCE is also set to zero, see SWS_Com_00787.

This definition exists to clarify the description of the ONE EVERY N filter in [17].

The associated configuration items can be found in Chapter 10, see ECUC_Com_00339.

[SWS_Com_00793] [For a signal with a configured reception filter MASKED_NEW_DIFFERS_MASKED_OLD, the AUTOSAR COM module shall treat the first value received for this signal after a reception deadline monitoring timeout occurred for this signal the same way as if the value has passed the filter criteria.] (SRS_Com_02037)

Hence, the AUTOSAR COM module will let pass any value for the filter MASKED_NEW_DIFFERS_MASKED_OLD after an RX deadline timeout for the associated I-PDU.

7.2.5 Signal Gateway

The AUTOSAR COM module provides an integrated Signal Gateway for forwarding signals and signal groups in a 1:n manner.

The routing relations are be statically configured via the ComGwMapping configuration container (see ECUC_Com_00544).

As shown in Figure 5 and Figure 6, the integrated Signal Gateway acts as a receiver for all signals or signal groups which are configured as a source for gatewayed signals.

After the Signal Gateway received signal or signal groups for routing, it acts immediately as a sender for these signals or signal groups respectively. This is shown in Figure 4 and Figure 6. The signal processing does not differ if the integrated Signal Gateway forwards a signal/ signal group or if a Software Component sends it.



Since the gateway relations are statically configured, an optimized Signal Gateway might skip some processing stages for concrete configurations. For example, the endianness conversion is not necessary in certain cases. Of course, such optimizations should not lead to any different logical behavior or different representations on the target bus. Optimizations may only be introduced to increase the Signal Gateway's performance.

As shown in Figure 5 a received signal or signal group might be received on the local ECU and be a source for a gateway action at the same time.

Figure 4 and Figure 5 show shadow buffers only for signal groups that are received by the RTE. The integrated Signal Gateway has of course to ensure to handle signal groups consistently but there is no predetermined way in which this must be implemented.

[SWS_Com_00370] [The Signal Gateway of the AUTOSAR COM module shall scale down to no size if no signal routing functionality is needed.] (SRS_PduR_06064)

7.3 Normal Operation

7.3.1 Start-Up Behavior

This chapter describes the actions that will be performed during Com_Init.

[SWS_Com_00217] [The AUTOSAR COM module shall initialize each I-PDU during execution of Com_Init (SWS_Com_00432), firstly byte wise with the ComTxIPduUnusedAreasDefault value and then bit wise according to initial values (ComSignalInitValue) of the contained signals and the update-bits (see SWS_Com_00117).] (SRS_BSW_00101)

7.3.1.1 Preconditions

The C initialization code, also known as *start-up code*, initializes global and static variables with the initial values. It must be executed before any call of an AUTOSAR COM module's service.

7.3.1.2 Initialization

[SWS_Com_00128] [The AUTOSAR COM module's initialization function Com_Init (SWS_Com_00432) shall initialize all internal data that is not yet initialized by the *start-up code* e.g. C-structs.] (SRS_BSW_00101)

[SWS_Com_00328] [The AUTOSAR COM module's initialization function Com_Init (SWS_Com_00432) shall not enable Inter-ECU communication.] (SRS_BSW_00101)

This initialization chapter is not complete. Details about initialization of some AUTOSAR COM module's features are described within the different feature chapters.



7.3.1.3 Initialization of Not Used Areas of an I-PDU

[SWS_Com_00015] [The AUTOSAR COM module shall fill not used areas within an I-PDU with a value determined by configuration parameter ComTxIPduUnusedAreasDefault (ECUC_Com_00017) e.g. 0xFF.] (SRS_BSW_00101, SRS_Com_02042)

7.3.1.4 Initialization of Signals and Update-Bits

[SWS_Com_00098] [The AUTOSAR COM module shall initialize each signal of n-bit sized signal type on sender and receiver side with the lower n-bits of its configuration parameter ComSignalInitValue (ECUC_Com_00170).] (SRS_BSW_00101)

The configured ComSignalInitValues (ECUC_Com_00170) are also used for the initialization of the signal in the related I-PDU; see SWS_Com_00217.

The ComSignalInitValue (ECUC_Com_00170) of a signal can be identical to its ComSignalDataInvalidValue (ECUC_Com_00391). These can be different for each signal.

[SWS_Com_00117] [The AUTOSAR COM module shall clear all update-bits during initialization. See also SWS_Com_00059.] (SRS_BSW_00101, SRS_Com_02030, SRS_Com_02058)

7.3.1.5 Initialization of I-PDU Groups

[SWS_Com_00444] [By default, all I-PDU groups shall be in the state stopped and they shall not be started automatically by a call to Com_Init (SWS_Com_00432).] (SRS_Com_00218)

7.3.2 De-Initialization

The AUTOSAR COM module provides the API function Com_Delnit (SWS_Com_00130) for de-initialization of the COM layer. This means, after de-initialization of the layer, no communication via the AUTOSAR COM module is possible and all started I-PDU groups are stopped, see also SWS Com 00129.

7.3.3 Communication Modes

This chapter defines the signal flow in the AUTOSAR COM module. It further defines the different transmission modes provided by the AUTOSAR COM module. Chapter 7.3.3.2 defines a mechanism to switch between two transmission modes for one I-PDU. The replication of signals is defined in Chapter 7.3.3.4.

Explemary communication use cases that the AUTOSAR COM module can deal with are shown in Chapter 12.



7.3.3.1 Transfer Properties and I-PDU Transmission Mode

7.3.3.1.1 **Signals**

The AUTOSAR COM module supports several *transfer properties* for signals and several *transmission modes* for I-PDUs. The definitions in this chapters are based on and are to be completed with the definitions in [17] Chapter 2.3.3.

[SWS_Com_00330] [At any send request of a signal with ComTransferProperty *TRIGGERED* assigned to an I-PDU with ComTxModeMode *DIRECT* or *MIXED*, the AUTOSAR COM module shall immediately (within the next main function at the latest) initiate ComTxModeNumberOfRepetitions plus one transmissions of the assigned I-PDU.] (SRS Com 02083)

[SWS_Com_00767] [At any send request of a signal with ComTransferProperty *TRIGGERED_WITHOUT_REPETITION* assigned to an I-PDU with ComTx-ModeMode *DIRECT* or *MIXED*, the AUTOSAR COM module shall immediately (within the next main function at the latest) initiate one transmission of the assigned I-PDU.] (SRS_Com_02083)

[SWS_Com_00734] [At a send request of a signal with ComTransferProperty *TRIGGERED_ON_CHANGE* assigned to an I-PDU with ComTxModeMode *DIRECT* or *MIXED*, the AUTOSAR COM module shall immediately (within the next main function at the latest) initiate ComTxModeNumberOfRepetitions plus one transmissions of the assigned I-PDU, if the new sent signal differs to the locally stored (last sent or init) in length or value.] (SRS_Com_02083)

[SWS_Com_00768] [At a send request of a signal with ComTransferProperty TRIG-GERED_ON_CHANGE_WITHOUT_REPETITION assigned to an I-PDU with ComTxModeMode DIRECT or MIXED, the AUTOSAR COM module shall immediately (within the next main function at the latest) initiate one transmission of the assigned I-PDU, if the new sent signal differs to the locally stored (last sent or init) in length or value.] (SRS_Com_02083)

[SWS_Com_00762] [The AUTOSAR COM module shall not support the transfer properties *TRIGGERED_ON_CHANGE* and *TRIGGERED_ON_CHANGE_WITH-OUT_REPETITION* for signals and group signals with ComBitSize configured to 0.] (SRS Com 02037)

The support of the transfer properties TRIGGERED_ON_CHANGE and TRIGGERED_ON_CHANGE_WITHOUT_REPETITION is not restricted to certain signal types. Hence, they are supported for all possible signal types. This includes even the byte array types, e.g. UINT8_N.

The details of the transmission replication mechanism are specified in Chapter 7.3.3.4.



[SWS_Com_00135] [The AUTOSAR COM module shall not initiate transmissions for I-PDUs that have the ComTxModeMode (ECUC_Com_00137) *NONE*.] (SRS_Com_02083)

It is possible to request I-PDUs with ComTxModeMode NONE via Com_Trigger-Transmit.

A pending signal associated with an I-PDU is transmitted if the I-PDU's transmission is triggered for any reason. For example, if a signal with ComTransferProperty *TRIGGERED* within the same I-PDU is sent or the I-PDU sending is scheduled because of ComTxModeMode *PERIODIC* or *MIXED*.

The bus-timing of I-PDUs can be controlled by send requests of the RTE in combination with the transmission mode and the transfer property as described above. Additionally, the PDU Router, especially in case of FlexRay and LIN, can control it with the service Com_TriggerTransmit. In the latter case, the PDU Router requests I-PDUs to be sent from the AUTOSAR COM module.

The function Com_TriggerTransmit can be called for any I-PDU regardless of its transmission mode. This allows LIN and FlexRay to use all the available transmission modes, particularly for sporadic communication. The NM also uses this mechanism to send user data.

7.3.3.1.2 **Signal Groups**

In AUTOSAR COM also signal groups and group signals may have a transfer property, defining in combination with the transmission mode, if the I-PDU is sent out in case of an update of a signal group or group signal, respectively.

[SWS_Com_00741] [At any send request of a signal group with ComTransferProperty *TRIGGERED* assigned to an I-PDU with ComTxModeMode *DIRECT* or *MIXED*, the AUTOSAR COM module shall immediately (within the next main function at the latest) initiate ComTxModeNumberOfRepetitions plus one transmissions of the assigned I-PDU.] (SRS_Com_02083)

[SWS_Com_00769] [At any send request of a signal group with ComTransferProperty *TRIGGERED_WITHOUT_REPETITION* assigned to an I-PDU with ComTx-ModeMode *DIRECT* or *MIXED*, the AUTOSAR COM module shall initiate one transmission of the assigned I-PDU within the next main function at the latest.] (SRS_Com_02083)

[SWS_Com_00742] [Regarding signal groups with ComTransferProperty *TRIG-GERED_ON_CHANGE* which do not contain any signals that have an own ComTransferProperty configured:

At any send request of such a signal group assigned to an I-PDU with ComTx-ModeMode *DIRECT* or *MIXED*, the AUTOSAR COM module shall immediately (within the next main function at the latest) initiate ComTxModeNumberOfRepetitions plus one transmissions of the assigned I-PDU, if at least one new sent group signal differs to the locally stored (last sent or init) in length or value.] (SRS_Com_02083)



[SWS_Com_00743] [Regarding signal groups with ComTransferProperty *TRIGGERED_ON_CHANGE* which contain any signals that have an own ComTransferProperty configured:

At any send request of such a signal group assigned to an I-PDU with ComTxModeMode *DIRECT* or *MIXED*, the AUTOSAR COM module shall immediately (within the next main function at the latest) initiate ComTxModeNumberOfRepetitions plus one transmissions of the assigned I-PDU, if at least one new sent group signal configured with ComTransferProperty *TRIGGERED_ON_CHANGE* differs to the locally stored (last sent or init) in length or value.] (SRS_Com_02083)

[SWS_Com_00770] [At a send request of a signal group with ComTransferProperty *TRIGGERED_ON_CHANGE_WITHOUT_REPETITION* assigned to an I-PDU with ComTxModeMode *DIRECT* or *MIXED*, the AUTOSAR COM module shall immediately (within the next main function at the latest) initiate one transmission of the assigned I-PDU, if at least one new sent group signal differs to the locally stored (last sent or init) in length or value.] (SRS_Com_02083)

7.3.3.2 Selection of the Transmission Mode for one specific I-PDU

I-PDUs carry signals. Because an I-PDU can contain more than one signal, in the following, a method is defined to derive the I-PDU's transmission mode from the state of the signals that are contained in one specific I-PDU.

The AUTOSAR COM module allows configuring statically two different transmission modes for each I-PDU (see SWS_Com_00032). The transmission mode of an I-PDU that is valid at a specific point in time is selected using only the values of the signals that are mapped to this I-PDU.

The signals of one I-PDU that contribute to the selection of one of the two transmission modes as well as the conditions used for the selection of the transmission mode are configured statically, see SWS Com 00676.

For the selection of the transmission mode, the AUTOSAR COM module treats group signals like normal signals.

[SWS_Com_00676] [For the evalutation of a TMS, the AUTOSAR COM module shall take all those (group) signals into account which configuration include a configured ComFilter container. See included containers of ComSignal and ComGroupSignal.] (SRS_Com_02041)

If a signal of an I-PDU with ComIPduDirection configured to *SEND* has a configuration container ComFilter included, the signal is named to *contribute* to the TMS of this I-PDU. If the configuration container for that signal has no assigned configuration container ComFilter, then it does *not contribute* to a TMS.

[SWS_Com_00677] [If no signal within an I-PDU contributes to the calculation of the TMS, then the AUTOSAR COM module shall evaluate the TMS of this I-PDU as true.] (SRS_Com_02084, SRS_Com_02041)



[SWS_Com_00678] [If the AUTOSAR COM module evaluates the TMC of a contributing signal as true, then the AUTOSAR COM module shall evaluate the TMS as true.] (SRS_Com_02084, SRS_Com_02041)

[SWS_Com_00679] [If the AUTOSAR COM module evaluates no TMC of a contributing signal as true, then the AUTOSAR COM module shall evaluate the TMS as false.] (SRS_Com_02084, SRS_Com_02041)

[SWS_Com_00605] [The AUTOSAR COM module shall define a Transmission Mode Selector, for each I-PDU. See definition of TMS above.] (SRS_Com_02084)

[SWS_Com_00245] [The AUTOSAR COM module shall re-calculate the TMS for an I-PDU, after a contained signal was updated by a call to Com_SendSignal or Com_SendSignalGroup.] (SRS_Com_02084)

[SWS_Com_00763] [For the calculation of the transmission mode with the configured condition *MASKED_NEW_DIFFERS_MASKED_OLD*, the AUTOSAR COM module shall use the least significant ComBitSize bits only.] (SRS_Com_02084)

[SWS_COM_00813] [For the calculation of the transmission mode with a configured condition *MASKED_NEW_DIFFERS_X*, *MASKED_NEW_EQUALS_X*, *NEW_IS_OUTSIDE* or *NEW_IS_WITHIN*, the AUTOSAR COM module shall use all bits of the configured ComSignalType.] (SRS_Com_02084)

Note that a signal with ComFilterAlgorithm configured to *ALWAYS*, will always set the TMS of the respective I-PDU to true. Therefore, care must be taken when defining the signals that contribute to the TMS.

[SWS_Com_00032] [If the TMS of an I-PDU evaluates to true, then the AUTOSAR COM module shall use the ComTxModeMode defined in configuration container ComTxModeTrue (ECUC_Com_00455) for that I-PDU.] (SRS_Com_02082, SRS_Com_02084)

[SWS_Com_00799] [If the TMS for an I-PDU evaluates to false, then the AUTOSAR COM module shall use the ComTxModeMode defined in configuration container ComTxModeFalse (ECUC_Com_00454) for that I-PDU.] (SRS_Com_02082, SRS_Com_02084)

[SWS_Com_00238] [In each of the two TMS states, the rules for combination of transfer properties of signals and transmission modes of I-PDUs shall apply as defined in [17] Section 2.3.| (SRS_Com_02082)

[SWS_Com_00239] [When the TMS state of an I-PDU changes, the AUTOSAR COM module shall use the now valid transmission mode immediately (within the next main function at the latest). That means, first the AUTOSAR COM module shall perform the mode change and after that, the AUTOSAR COM module shall execute any resulting calls to PduR_ComTransmit caused by mode change.] (SRS_Com_02082)



[SWS_Com_00244] [If a change of the TMS causes a change of the transmission mode for an I-PDU, then the AUTOSAR COM module shall restart the timer for the cycle time of the transmission mode PERIODIC and MIXED.] (SRS_Com_02082)

[SWS_Com_00495] [When a call to Com_SendSignal or Com_SendSignalGroup results into a change of the transmission mode of a started I-PDU to the transmission mode PERIODIC or MIXED, then the AUTOSAR COM module shall start the new transmission cycle with a call to PduR_ComTransmit within the next main function at the latest. The transmission shall be initiated regardless of the transfer property of the signal or signal group that caused the transmission mode switch. The minimum delay time and ComTxModeTimeOffset shall still be respected. See also Figure 5 The AUTOSAR COM module's interaction model for reception] (SRS_Com_02082)

[SWS_Com_00582] [If a change of the TMS causes a change to the transmission mode *DIRECT*, an immediate (within the next main function at the latest unless shifted due to the MDT) direct/ n-times transmission to the underlying layer shall be initiated.] (SRS_Com_02082)

The above requirement clarifies the behavior in case the TMS-switch to ComTx-ModeMode *DIRECT* was triggered by a signal with ComTransferProperty *PENDING*.

If the ComTxModeMode of an I-PDU is configured to *NONE* no transmission will be initiated by AUTOSAR COM. This can be used to prevent transmitting an I-PDU, for example in case the TMS evaluates to false.

[SWS_Com_00478] [The AUTOSAR COM module shall send out an I-PDU at most once within one call of Com_MainFunctionTx.] (SRS_Com_02083)

7.3.3.3 Signal Flow and Transmission Mode Selection

After a send request from the RTE for a specific signal, the signal is written to the appropriate I-PDU buffer as defined by configuration, and the selection of the transmission mode of the I-PDUs is done according to Chapter 7.3.3.2.

Figure 3 shows the signal flow:



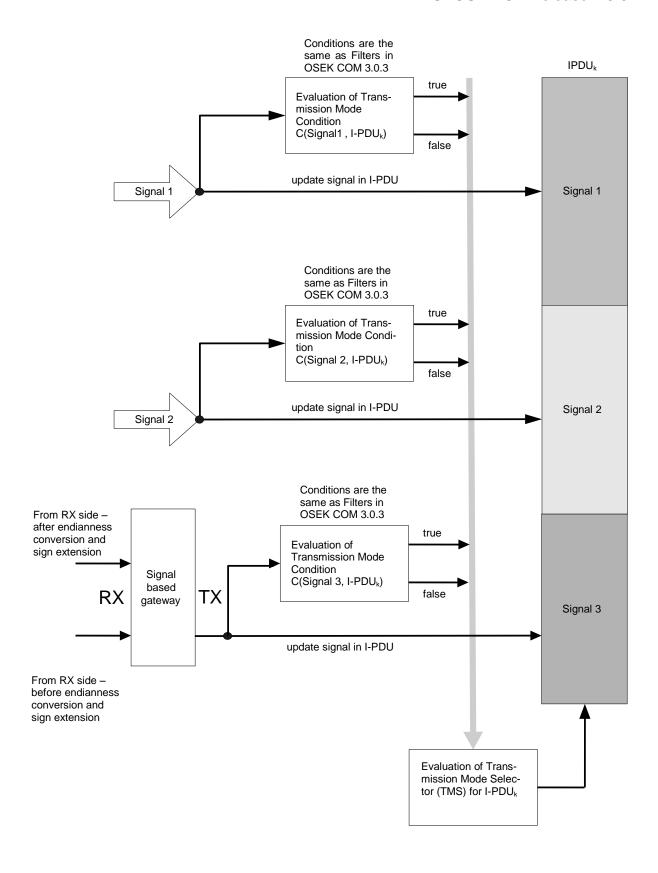


Figure 3: Logical signal flow in the AUTOSAR COM module shown for two signals (Signal1 and Signal2) that are mapped to one I-PDU (IPDU_k)



7.3.3.4 Replication of Signal Transmission Requests

The number of repetitions of transmission requests in the ComTxModeMode *DIRECT* or *MIXED* for a send request by the RTE is defined by configuration parameter ComTxModeNumberOfRepetitions (ECUC_Com_00281).

[SWS_Com_00467] [If ComRetryFailedTransmitRequests is not set to TRUE and an I-PDU with ComTxModeMode DIRECT or MIXED and ComTxModeNumberOfRepetitions set to 0 is triggered for sending, the AUTOSAR COM module shall invoke PduR_ComTransmit for this I-PDU just once, independently of the result of the confirmation.] (SRS_Com_02083)

Configuring ComTxModeNumberOfRepetitions to 0 imitates the original OSEK direct transmission mode.

[SWS_Com_00279] [If a new send request is received from the RTE while sending n transmissions belonging together (e.g. after the 3rd of 5 repetitions, see SWS_Com_00305) the AUTOSAR COM module shall cancel the outstanding transmission repetitions and start processing the new request within the next main function at the latest, see Appendix A use-case 4.] (SRS_Com_02080)

[SWS_Com_00305] [In case of sending an I-PDU with ComTxModeMode *DIRECT* or *MIXED* and ComTxModeNumberOfRepetitions greater than 0, the AUTOSAR COM module shall call PduR_ComTransmit periodically, with period ComTx-ModeRepetitionPeriod until *ComTxModeNumberOfRepetitions plus one* successful confirmations for this send-request are received.] (SRS_Com_02083)

SWS_Com_00305 assumes that CAN does not have a queue for these I-PDUs. There is a race condition in the interaction between the CAN driver, interface and hardware that may cause an extra transmission to occur in certain unlikely circumstances.

If the underlying layer returns E_NOT_OK while an N-Times transmission is in progress, this error notification will be ignored, unless ComRetryFailedTransmitRequests is set to true (see also SWS_Com_00773). As SWS_Com_00305 specifies, only confirmed transmissions are counted for the N-Times transmission, erroneous send request can safely be ignored.

If the N-Times transmission is requested in transmission mode *MIXED* after a cyclic transmission of the *MIXED* transmission mode with a pending confirmation, the confirmation of the cyclic transmission will be assigned to the N-Times transmission. In this case, only n-1 transmissions of the new value of the N-Times request are observed. The transmission deadline monitoring timer will then be reset earliest after the N-Times request is completed. This must be respected when configuring the transmission deadline monitoring timer in conjunction with the *MIXED* transmission mode and N-Times transmission.

[SWS_Com_00494] [If within the transmission mode *MIXED* an N-Times transmission request overlaps with the cyclic part of the mixed transmission the cyclic trans-



mission shall be counted as the corresponding transmission of the N-Times transmission request. (SRS_Com_02083)

[SWS_Com_00392] [If a transmission deadline monitoring timeout occurs before the N-Times transmission is complete, then the AUTOSAR COM module shall not initiate further transmissions for this N-Times transmission.] (SRS_Com_02083)

The minimum delay time will always be taken into account as defined in [17] Chapter 2.3.4.

To avoid bursts in start-up a time offset can be configured per I-PDU. See ECUC_Com_00180 for details.

The time between two repetitions is configured by configuration parameter ComTx-ModeRepetitionPeriod (ECUC_Com_00282).

If the transmission mode change leads to the start of the *MIXED* transmission mode by sending a triggered signal and ComTxModeNumberOfRepetitions is configured greater than or equal to 1, then there will be at least ComTxModeNumberOfRepetitions plus one transmission requests to the PDU Router at the beginning of the *MIXED* transmission mode. See also SWS Com 00305.

7.3.3.5 Retry Failed Transmission Requests

[SWS_Com_00773] [If ComRetryFailedTransmitRequests is set to TRUE, the return value of PduR_ComTransmit shall be evaluated. If the return value of PduR_ComTransmit is not equal to E_OK, the AUTOSAR COM Module shall invoke PduR_ComTransmit for the not sent I-PDU again within the next Com_MainFunctionTx.| (SRS_Com_02037)

If the I-PDU is updated in between, the new data will be sent.

SWS_Com_00773 may lead to multiple retries for the same failed transmission request.

SWS_Com_00773 is not affected by transmission mode changes.

SWS_Com_00773 has no influence on a potential repetition period. Any repetitions will occur as if no retry had taken place.

[SWS_Com_00774] [The AUTOSAR COM module shall start the transmission deadline monitoring independently of possible retries. Subsequent retries shall not affect transmission deadline monitoring.] (SRS_Com_02037)

[SWS_Com_00775] [If ComRetryFailedTransmitRequests is set to True and a transmission deadline monitoring timeout occurs for an I-PDU, the AUTOSAR COM module shall expire any pending transmission request for this I-PDU.] (SRS_Com_02037)



[SWS_Com_00776] [The cycle timer for a cyclic transmission shall always start with the first transmit attempt.] (SRS_Com_02037)

7.3.4 Signal Invalidation

The AUTOSAR COM module provides the possibility for the sender to indicate that it is not able to provide a valid value for a corresponding signal, for example in case a sensor is faulty. The AUTOSAR COM module allows defining a ComSignalDataInvalidValue (ECUC_Com_00391) during configuration.

7.3.4.1 Transmission of an Invalidated Signal

[SWS_Com_00099] [By a call to Com_InvalidateSignal, the AUTOSAR COM module shall perform internally a Com_SendSignal with the configured ComSignalData-InvalidValue (ECUC_Com_00391).] (SRS_Com_02077)

The ComTransferProperty and the transmission mode determine the transmission of the ComSignalDataInvalidValue on the bus. The internally performed Com_Send-Signal with the data invalid value leads to data invalid value to be used as current value for filters and TMS.

The data invalid values are configured per group signal see ECUC_Com_00520.

The VFB defines only one attribute for a complex data type. Therefore, the best mapping of an invalidated complex data type to an invalidated signal group is to invalidate all group signals of a signal group. Therefore, the RTE can also request to invalidate the complete signal group by a call to Com_InvalidateSignalGroup (SWS Com 00557).

7.3.4.2 Reception of an Invalidated Signal

[SWS_Com_00680] [If the configured ComSignalDataInvalidValue (ECUC_Com_00391) is received for a signal and the ComDataInvalidAction (ECUC_Com_00314) is configured to **NOTIFY** for this signal, the AUTOSAR COM module shall notify the RTE via the configured ComInvalidNotification function (ECUC_Com_00315). In this case, no other signal processing like filtering or the normal signal indication shall take place.] (SRS_Com_02079)

The reception deadline monitoring timer is also restarted in case of receiving an invalid signal or signal group, see SWS_Com_00738.

[SWS_Com_00681] [If the configured ComSignalDataInvalidValue (ECUC_Com_00391) is received for a signal and the ComDataInvalidAction (ECUC_Com_00314) is configured to **REPLACE** for this signal, the AUTOSAR COM module shall replace the signal's value by its configured ComSignalInitValue (ECUC_Com_00170). After the replacement, the normal signal processing like filtering and notification shall take place as if the ComSignalInitValue would have been



received instead of the ComSignalDataInvalidValue.] (SRS_Com_02079, SRS Com_02087)

[SWS_Com_00682] [If the configured ComSignalDataInvalidValue (ECUC_Com_00391) is received for at least one group signal of a signal group and the ComDataInvalidAction (ECUC_Com_00314) is configured to **NOTIFY** for this signal group, the AUTOSAR COM module shall notify the RTE via the configured ComInvalidNotification function (ECUC_Com_00315). In this case, no other signal group/ group signal processing like the normal indication shall take place.] (SRS_Com_02079)

[SWS_Com_00683] [If the configured ComSignalDataInvalidValue (ECUC_Com_00391) is received for at least one group signal of a signal group and the ComDataInvalidAction (ECUC_Com_00314), is configured to *REPLACE* for this signal group, the AUTOSAR COM module shall replace all group signals of this signal group by their configured ComSignalInitValue values. After the replacement, the normal signal group/ group signal processing like reception notification shall take place as if the ComSignalInitValue would have been received for all group signals.] (SRS_Com_02087)

[SWS_Com_00717] [If the configured ComSignalDataInvalidValue is received for a signal and its ComDataInvalidAction is configured to **NOTIFY**, the AUTOSAR COM module shall not store the received ComSignalDataInvalidValue into the signal object.] (SRS_Com_02079)

The next call to Com_ReceiveSignal will return the last valid received signal or the ComSignalInitValue in case no signal was received yet respectively.

[SWS_Com_00718] [If the configured ComSignalDataInvalidValue is received for at least one group signal of a signal group and its ComDataInvalidAction is configured to **NOTIFY**, the AUTOSAR COM module shall not store any of the received group signals into the signal objects.] (SRS_Com_02079)

The next call to Com_ReceiveSignalGroup will copy the last valid received group signals or the ComSignalInitValues in case the signal group was not received yet respectively into the shadow buffer.



7.3.5 Handling of I-PDUs

7.3.5.1 I-PDU Group Definitions

For an I-PDU group the following rules apply:

- 1. An I-PDU can belong to any I-PDU group.
- An I-PDU is active (started) if it belong to a started I-PDU group (see SWS_Com_00771) or it does not belong to any I-PDU group and it was started implicitly (see SWS_Com_00840).
- 3. The maximum number of I-PDU groups is pre-compile configurable.
- 4. I-PDU groups may contain only I-PDUs of the same direction (i.e. send or receive), see SWS_Com_00871.

Rules 1 and 3 are supported by the COM configuration. The maximum number of supported I-PDU groups can be configured via ComSupportedIpduGroups (ECUC_Com_00710).

[SWS_Com_00771] [An I-PDU is active (started) if at least one I-PDU group is active (started) it belongs to.| (SRS_Com_00218)

For the AUTOSAR COM module, the nesting of I-PDU groups is purely conceptual and must be resolved by an appropriate configuration and/ or usage of the AUTOSAR COM module.

For example, if an I-PDU "BUS1 RX Function1" belongs to I-PDU group "BUS1 RX" and I-PDU group "BUS1 RX" is included in I-PDU group "BUS1" then I-PDU "BUS1 RX Function1" must also be included in I-PDU group "BUS1". Such dependencies need to be resolved at configuration time.

Once again, the COM module does not know or handle any grouping of I-PDUs. Any I-PDU grouping must be handeld either via configuration or by the calling module.

Further, it is expected that the complete state handling of I-PDU groups is done outside of the AUTOSAR COM module, e.g. within the Basic Software Mode Manager. In case of a state change, the module managing the I-PDU group states passes the consistent state of all I-PDU groups via Com_IpduGroupControl to the AUTOSAR COM module, which then starts and stops the single I-PDUs accordingly.

The state of I-PDUs that are not assigned to any I-PDU group cannot be changed, therefore they are started implicitly:

[SWS_Com_00840] [If an I-PDU is not assigned to any I-PDU group, the AUTOSAR COM shall start this I-PDU within Com_Init as if it would be started by Com_IpduGroupControl with parameter Initialize set to true (see Chapter 7.3.5.2).] (SRS_Com_00218)

Since the AUTOSAR COM never stops such an I-PDU implicitely and it is not assigned to any I-PDU group, such an I-PDU can never be stopped.



7.3.5.2 Starting of I-PDU Groups

By default all I-PDU groups are stopped, see SWS_Com_00444. A call to Com_lpdu-GroupControl starts an I-PDU group if its requested activation state is started and the I-PDU group was previously stopped.

[SWS_Com_00114] [If an I-PDU is started as result of a call to Com_lpduGroup-Control, the AUTOSAR COM module shall permit to transmit/ receive its signals and signal groups, see also Table 4.| (SRS_Com_00218)

[SWS_Com_00787] [If an I-PDU is started as result of a call Com_lpduGroupControl, the AUTOSAR COM module shall always initialize the following attributes of this I-PDU:

- 1) ComMinimumDelayTime of I-PDUs in transmission mode *DIRECT* or *MIXED*
- 2) timeout attributes of I-PDUs for deadline monitoring aspect: all timeout timers (ComFirstTimeout, ComTimeout) shall restart
- 3) all included update-bits shall be cleared
- 4) reset OCCURRENCE of filter with ComFilterAlgorithm ONE_EVERY_N
- 5) set the I-PDU counter to 0 for I-PDUs with ComIPduDirection configured to SEND
- 6) accept for I-PDUs with ComIPduDirection configured to *RECEIVED* any next incoming I-PDU counter (SRS Com 00218)

[SWS_Com_00222] [If an I-PDU is started as result of a call Com_IpduGroupControl with parameter Initialize set to true, the AUTOSAR COM module shall additionally to SWS_Com_00787 initialize the following attributes of this I-PDU:

- 1) the data of the I-PDU as defined in SWS_Com_00217
- 2) the shadow buffers of included signal groups
- 3) old_value of the filtering mechanisms for each signal to the ComSignalInit-Value
- 4) ComTxModeTimePeriod and ComTxModeTimeOffset of I-PDUs in Periodic or MIXED transmission mode| (SRS_Com_00218)

[SWS_Com_00223] [If an I-PDU is started as result of a call to Com_IpduGroupControl, the AUTOSAR COM module shall determine its transmission mode according to its current data content.] (SRS_Com_00218)

[SWS_Com_00228] [In some cases, an I-PDU is started as result of a call to Com_IpduGroupControl before all its contained signals have been written. In this case, the AUTOSAR COM module shall use the ComSignalInitValue for the missing signal data.] (SRS Com 00218)

[SWS_Com_00229] [When an I-PDU is started and one or more signals in that I-PDU have already been written via one of the send APIs by the upper layer, the AUTOSAR COM module shall use the most recently obtained values to determine the TMS of the I-PDU.] (SRS_Com_00218)

[SWS_Com_00733] [If an I-PDU is started as result of a call to Com_IpduGroupControl and the I-PDU contains signals that have deadline monitoring configured (ECUC_Com_00183, ECUC_Com_00263), the AUTOSAR COM



module shall start the deadline monitoring for these signals independently of the value of the initialize parameter. (SRS_Com_00218)

Note, in case an I-PDU is started by a call to Com_IpduGroupControl and the parameter initialize is set to false, the internal buffers are not changed and the I-PDU contains the last the last set or init values. Particulary, if the I-PDU is started for the first time and initilaize is set to false, the COM operates on the init-values set by Com_Init.

7.3.5.3 Stopping of I-PDU Groups

A call to Com_IpduGroupControl stops an I-PDU group if its requested activation state is stopped and the I-PDU group was previously started.

In order to disable the transmission of an I-PDU, all I-PDU groups containing this I-PDU needs to be stopped. Hence, to implement *listen-only-mode*, all I-PDU groups containing transmission I-PDUs needs to be stopped. Receiving of I-PDUs may also be stopped.

[SWS_Com_00334] [By a call to the functions: Com_SendSignal, Com_SendSignalGroup, or Com_InvalidateSignal, the AUTOSAR COM module shall update the values of its internal buffers even for stopped I-PDUs. See also Table 3.] (SRS_Com_00218)

If a signal written to a stopped I-PDU would trigger the transmission of this I-PDU if it were not stopped, then this trigger is not stored. After re-starting the corresponding I-PDU group, such an old trigger does not lead to an immediate transmission of the I-PDU.

[SWS_Com_00777] [If an I-PDU is stopped as result of a call to Com_lpduGroupControl, the AUTOSAR COM module shall cancel any outstanding transmission requests for this I-PDU. This includes cancelling any potential retries with respect to ComRetryFailedTransmitRequests.] (SRS_Com_00218)

[SWS_Com_00115] [If an I-PDU is stopped as result of a call to Com_IpduGroupControl, the AUTOSAR COM module shall cancel the deadline monitoring for all pending confirmations.] (SRS_Com_00218)

[SWS_Com_00800] [The AUTOSAR COM module shall ignore any transmit confirmations for a stopped I-PDU.] (SRS_Com_00218)

The AUTOSAR COM module cannot prohibit the invocation of the Com_Trigger-Transmit function. However, in case of a stopped I-PDU, the function Com_Trigger-Transmit returns E_NOT_OK. See SWS_Com_00001.

[SWS_Com_00684] [If an I-PDU is stopped as result of a call to Com_lpduGroupControl, the AUTOSAR COM module shall disable its reception processing.] (SRS_Com_00218)



[SWS_Com_00713] [If a large I-PDU is stopped as result of a call to Com_IpduGroupControl, the AUTOSAR COM module shall stop the reception process and ignore the partly received I-PDU. | (SRS_Com_00218)

[SWS_Com_00685] [If an I-PDU is stopped as result of a call to Com_lpduGroupControl, the AUTOSAR COM module shall cancel its deadline monitoring.] (SRS_Com_00218)

[SWS_Com_00479] [If an I-PDU is stopped as result of a call to Com_lpduGroupControl, the AUTOSAR COM module shall immediately invoke the configured ComErrorNotification (ECUC_Com_00499), for outstanding not confirmed transmitted signals/ signal groups of the stopped I-PDU.| (SRS_Com_00218)

[SWS_Com_00714] [If a large I-PDU is stopped while its transmission is already in progress, the AUTOSAR COM module shall stop the transmission process immediately.] (SRS_Com_00218)

Table 3 gives an overview of the behavior of stopped I-PDUs:

Behavior of stopped I-PDUs		
Receiver side (RX)	Transmitter side (TX)	
 Disable RX deadline monitoring No action on a Com_RxIndication to RTE, no storing of the I-PDU Return code COM_SERVICE_NOT_AVAILABLE on Com_ReceiveSignal and Com_ReceiveSignalGroup and the last known value (or init value) is given back as data 	 Disable sending Disable TX deadline monitoring Ignore Com_TxConfirmation: On a call of Com_SendSignal, Com_SendSignalGroup, Com_InvalidateSignal and the values in the AUTOSAR COM module's internal buffers are still up-dated but the return code COM_SERVICE_NOT_AVAILABLE is returned Outstanding transmission request (e.g. N-Times) will be cancelled Return code E_NOT_OK on Com_TriggerTransmit 	
	For periodic (TX)	
	Do not send any more	

Table 3: Behavior of stopped I-PDUs

Table 4 gives an overview of the behavior of started I-PDUs:



Behavior of started I-PDUs		
Receiver side (RX)	Transmitter side (TX)	
 Reinitialize timeouts if Initialize==true (ComSignalFirstTimeout, ComSignal- Timeout) Normal reaction on Com_RxIndication/ Com_TpRxIndication Normal reaction on Com_ReceiveSignal, and Com_ReceiveSignalGroup 	 Normal reaction on Com_InvalidateSignal, Com_SendSignal, and Com_SendSignalGroup No transmission timeout notification until next send Normal reaction on Com_TxConfirmation/ Com_TpTxConfirmation Normal reaction on Com_TriggerTransmit 	
	For periodic (TX)	
	Start at 0	

Table 4 Behavior of started I-PDUs

7.3.5.4 Signal Indication (Unpacking of I-PDUs)

In order to support both interrupt-driven and polled systems, it can be configured when the signal indication takes place. There are two configurable signal indication modes *IMMEDIATE* and *DEFERRED* configurable via ComIPduSignalProcessing. See ECUC_Com_00119.

[SWS_Com_00300] [If ComIPduSignalProcessing for an I-PDU is configured to *IM-MEDIATE*, the AUTOSAR COM module shall invoke the configured ComNotifications for the included signals and signal groups within the Com_RxIndication, or Com_TpRxIndication function respectively.] (SRS_Com_02046)

[SWS_Com_00301] [If ComIPduSignalProcessing for an I-PDU is configured to *DE-FERRED*, the AUTOSAR COM module shall first copy the I-PDU's data within the Com_RxIndication function or the related TP reception functions respectively from the PduR into COM. Then the AUTOSAR COM module shall invoke the configured ComNotifications for the included signals and signal groups asynchronously during the next call to Com_MainFunctionRx.| (SRS_Com_02046)

If in *DEFERRED* mode a call to Com_ReceiveSignal is made before the deferred unpacking takes place, the previous not updated values are returned.

A sequence chart with both indication options can be found in Chapter 9.3. The configuration of these modes is defined in ECUC Com 00119.

[SWS_Com_00574] [When unpacking an I-PDU, the AUTOSAR COM module shall check the received data length (PduInfoPtr->SduLength) and unpack and notify only completely received signals via ComNotification.] (SRS_Com_02046)

[SWS_Com_00870] [In case of receiving a smaller I-PDU than the length derived via the parameter ComPduldRef, signals with size 0 shall be received if and only if their configured position is less or equal to the received size of the partially received I-PDU.] (SRS_Com_02046)



[SWS_Com_00794] [In case of receiving of a smaller I-PDU than expected results into receiving a signal without its configured update-bit, the AUTOSAR COM module shall treat this signal as if its update bit was set and interpret such a signal as updated.] (SRS_Com_02046)

If the received I-PDU length is smaller than the configured/ expected I-PDU length, it needs to be prevented that signals are updated partially. On the other hand all completely received signals should be received and notified to the upper layer.

[SWS_Com_00575] [When unpacking an I-PDU, the AUTOSAR COM module shall check the received data length (PduInfoPtr->SduLength) and in case a signal group is received only partially, such a signal group and all included group signals shall not be unpacked or notified via ComNotification.] (SRS_Com_02046)

The above requirement prevents inconsistently received signal groups and therefore inconsistently received complex data types.

The AUTOSAR COM module does not copy or handle additional received data for not configured signals in case the received data length is greater than expected.

7.3.5.5 Minimum Delay Timer (MDT)

The AUTOSAR COM module inherits the minimum delay timer mechanism as defined [17]. The OSEK COM mechanism is clarified and detailed in this chapter.

When an I-PDU is started, the MDT is re-initialized. Therefore, the MDT can be violated by stopping and starting I-PDUs rapidly.

The behavior of the transmission deadline monitoring timer is not affected by any transmission delay caused by the minimum delay time supervision.

[SWS_Com_00471] [No minimum delay time monitoring shall take place, if ComMinimumDelayTime is omitted or configured to 0.] (SRS_Com_02037)

[SWS_Com_00789] [If ComEnableMDTForCyclicTransmission (ECUC_Com_00788) is configured to false, the minimum delay timer shall not be (re)started in the following cases:

- I-PDUs with ComTxModeMode PERIODIC
- the cyclic part of I-PDUs with ComTxModeMode MIXED
- repeated transmissions for I-PDUs in case ComTxModeNumberOfRepetitions > 0

I (SRS_Com_02037)

In case the minimum delay timer is currently not started, there is no way for the minimum delay timer to expire. Thus, optimized implementations might for example omit monitoring the minimum delay time for periodic I-PDUs completely in case ComEnableMDTForCyclicTransmission is configured to false, since the minimum delay timer never gets started.



[SWS_Com_00698] [If ComMinimumDelayTime of an I-PDU is configured greater than 0 and ComRetryFailedTransmitRequests is set to *FALSE*, the AUTOSAR COM module shall load and start the minimum delay time counter upon transmission of that I-PDU to the PDU Router via PduR ComTransmit.] (SRS Com 02037)

[SWS_Com_00828] [If ComMinimumDelayTime of an I-PDU is configured greater than 0 and ComRetryFailedTransmitRequests is set to *TRUE*, the AUTOSAR COM module shall load and start the minimum delay time counter upon transmission of that I-PDU to the PDU Router via PduR_ComTransmit only in case PduR_ComTransmit returns E_OK.| (SRS_Com_02037)

[SWS_Com_00469] [If ComMinimumDelayTime of an I-PDU is configured greater than 0, the AUTOSAR COM module shall (re-)load an already running and not yet elapsed minimum delay time counter of that I-PDU with ComMinimumDelayTime on a successful transmit confirmation.] (SRS_Com_02037)

The running minimum delay timer is reloaded upon the reception of a successful TX-confirmation of that I-PDU, unless the transmission was already delayed longer than ComMinimumDelayTime at the reception of the confirmation. In normal case, there will be no further transmission of that I-PDU by the AUTOSAR COM module unless the loaded and started minimum delay has expired. See also Figures 2-4, 2-5 and 2-7 in [17]. However, some exception exists: According to SWS_Com_00475 Com_TriggerTransmit does not interfere with the minimum delay timer. Further, the minimum delay timer is reset if the transmission deadline monitoring timer expires; see Chapter 2.3.4 in [17]. In addition, starting an I-PDU group resets the minimum delay time timer of the included I-PDUs.

[SWS_Com_00812] [If the minimum delay timer of an I-PDU is reset because the transmission deadline monitoring timer expires and a postponed request for this I-PDU exists, the AUTOSAR COM module shall immediately transmit this I-PDU.] (SRS_Com_02037)

7.3.6 Deadline Monitoring

Deadline monitoring for signals is defined in [17].

In the context of deadline monitoring for a signal group, it is handled like a signal. The deadline monitoring parameters ComFirstTimeout and ComTimeout can be defined in the configuration container ComSignal or ComSignalGroup.

The corresponding timeout notification callback functions can be defined in parameter ComTimeoutNotification in the configuration container ComSignal or ComSignal-Group.

[SWS_Com_00333] [If the configuration parameter ComTimeout for a signal or signal group is omitted or configured to 0, the AUTOSAR COM module shall not monitor this signal or signal group. It also shall ignore the ComFirstTimeout.] (SRS_Com_02089)



7.3.6.1 Reception Deadline Monitoring

The reception deadline monitoring can be enabled and disabled by the control of I-PDU groups analogous to Chapter 7.3.5.1.

[SWS_Com_00772] [The reception deadline monitoring of an I-PDU is enabled if and only if it is contained in an I-PDU group that has reception deadline monitoring enabled. Otherwise, the reception deadline monitoring of the I-PDU is *disabled*.] (SRS_Com_00192)

[SWS_Com_00292] [In the case where reception deadline monitoring is configured for signals with update-bits, the AUTOSAR COM module shall perform a separate reception deadline monitoring for each signal/ signal group with an update-bit. For configuration of ComTimeout, see ECUC_Com_00263.] (SRS_Com_02089, SRS_Com_02058)

[SWS_Com_00290] [The AUTOSAR COM module shall perform an I-PDU based reception deadline monitoring for signals without an update-bit.] (SRS_Com_02089, SRS_Com_02058)

[SWS_Com_00291] [For all signals and signal groups without update-bits within the same I-PDU, the AUTOSAR COM module shall perform the reception deadline monitoring of the I-PDU using the smallest configured non-zero timeout parameter (Com-FirstTimeout, ComTimeout) of the associated signals and signal groups.] (SRS_Com_02089, SRS_Com_02058)

If all signals within an I-PDU with configured reception deadline monitoring have also an update-bit configured, no reception deadline monitoring on I-PDU base needs to be performed.

In case of an Rx-timeout, the ComRxDataTimeoutAction parameter determines whether the AUTOSAR COM module replaces the signal/ signal group value with the initial value or substitute value or maintains the last received value. See ECUC Com 00412.

[SWS_Com_00470] [If ComRxDataTimeoutAction is set to *REPLACE* (see ECUC_Com_00412), the AUTOSAR COM module shall replace the signal's value by its ComSignalInitValue (see ECUC_Com_00170) when the reception deadline monitoring timer of a signal expires.] (SRS_Com_02087, SRS_Com_02088)

In case the ComSignalInitValue replaces the last received value, the last received value is overwritten and gets lost. Therefore, the AUTOSAR COM module returns the ComSignalInitValue for this signal until a new value is received.

[SWS_Com_00875] [If ComRxDataTimeoutAction is set to SUBSTITUTE (see ECUC_Com_00412), the AUTOSAR COM module shall replace the signal's value by its ComTimeoutSubstitutionValue (see ECUC_Com_10006) when the reception deadline monitoring timer of a signal expires.] (SRS_Com_02088)



[SWS_Com_00500] [If the reception deadline monitoring timer of a signal or signal group expires and the configuration parameter ComRxDataTimeoutAction for this signal or signal group is either omitted or configured to *NONE*, the AUTOSAR COM module shall not replace the signal or the signals of the signal groups respectively.] (SRS_Com_02087)

[SWS_Com_00513] [If ComRxDataTimeoutAction is set to *REPLACE* (see ECUC_Com_00412), the AUTOSAR COM module shall replace the values of all included group signals by their ComSignalInitValues (see ECUC_Com_00170), when the reception deadline monitoring timer of a signal group expires.] (SRS_Com_02041)

The Rx-timeout-indication can be combined and configured separately from ECUC Com 00412.

[SWS_Com_00876] [If ComRxDataTimeoutAction is set to SUBSTITUTE (see ECUC_Com_00412), the AUTOSAR COM module shall replace the values of all included group signals by their ComTimeoutSubstitutionValue (see ECUC_Com_10006), when the reception deadline monitoring timer of a signal group expires.] (SRS_Com_02088)

[SWS_Com_00715] [When a (large) I-PDU with a configured reception deadline monitoring is received successfully, the AUTOSAR COM module shall reset the reception deadline monitoring timer for this (large) I-PDU at invocation of the function Com_RxIndication or Com_TpRxIndication respectively.] (SRS_Com_02058)

[SWS_Com_00716] [If the configuration parameter ComFirstTimeout for a signal or signal group is omitted or configured to 0, the AUTOSAR COM module shall not monitor the reception of this signal or signal group respectively from the start of the corresponding I-PDU until the first reception.] (SRS_Com_02058)

[SWS_Com_00738] [The reception deadline monitoring timer mechanism shall not take the values of the signals into account. Hence, the AUTOSAR COM module shall restart the reception deadline monitoring timer also in case of receiving an invalid value.] (SRS Com 02089)

7.3.6.1.1 En-/Disable Reception Deadline Monitoring

When reception deadline monitoring of an I-PDU is disabled and the timer expires, no error indication will be given to the RTE.

Disabling reception deadline monitoring does not stop the reception of an I-PDU.

[SWS_Com_00224] [If the reception deadline monitoring state of an I-PDU is changed by a call to Com_ReceptionDMControl from disabled to enabled, the AU-TOSAR COM module shall set the reception deadline monitoring timer for the included signals and signal groups to the configured ComFirstTimeout value.] (SRS_Com_00192)



[SWS_Com_00486] [The AUTOSAR COM module shall silently ignore setting the reception deadline monitoring of an I-PDU to enabled by a call to Com_ReceptionDMControl, in case the reception deadline monitoring is already enabled for this I-PDU.] (SRS_Com_00192)

Enabling reception deadline monitoring implies that timeout notifications of deadline monitoring expiry are notified to the RTE for signals or signal groups with a configured ComTimeoutNotification (ECUC_Com_00552).

[SWS_Com_00534] [If Com_ReceptionDMControl is invoked on an I-PDU group containing Tx-I-PDUs, then the AUTOSAR COM module shall silently ignore this request.] (SRS_Com_00192)

[SWS_Com_00225] [The AUTOSAR COM module shall silently ignore setting the reception deadline monitoring of an I-PDU to disabled by a call to Com_ReceptionDMControl, in case the reception deadline monitoring is already disabled for this I-PDU.] (SRS_Com_00192)

7.3.6.2 Transmission Deadline Monitoring

For transmission deadline monitoring, there is no difference between signals with update-bits and signals without update-bits. Therefore, transmission deadline monitoring can be performed on I-PDU base. Nevertheless, notification about detected transmission deadline violations on sender side is done per signal. See [17] for further details.

[SWS_Com_00481] [The AUTOSAR COM module shall perform the transmission deadline monitoring (if configured) for all signals and signal groups independently from the transfer property and independently from the transmission modes of the I-PDU the signal / signal group belongs to.] (SRS_Com_02037)

The AUTOSAR COM module makes no distinction between signals with ComTransferProperty *PENDING* or *TRIGGERED* with respect to transmission deadline monitoring.

[SWS_Com_00445] [If different ComTimeout parameters of the associated signals/ signal groups of an I-PDU are configured, the AUTOSAR COM module shall use the smallest value as timeout parameter for the transmission deadline monitoring of the I-PDU.] (SRS_Com_02037)

Transmission deadline monitoring should only be configured in the AUTOSAR COM module for busses that support the generation of transmit confirmations. Otherwise, the transmission deadline monitoring would always notify a transmission error.

[SWS_Com_00696] [In case transmission deadline monitoring is configured for an I-PDU with transmission mode *NONE* only, the AUTOSAR COM module shall start the transmission deadline monitoring timer for this I-PDU upon the start of the I-PDU group to which the I-PDU belongs to.] (SRS Com 02037)



[SWS_Com_00835] [In case transmission deadline monitoring is configured for an I-PDU with transmission mode *NONE* and another transmission mode, the transmission deadline monitoring shall be disabled whenever the transmission mode *NONE* is active.] (SRS_Com_02037)

[SWS_Com_00697] [In case transmission deadline monitoring is configured for an I-PDU with transmission mode *NONE* only, the AUTOSAR COM module shall reset the transmission deadline monitoring timer for this I-PDU when a successful transmit confirmation is received.] (SRS_Com_02037)

In case of a signal group, it is only possible to configure transmission deadline monitoring for the whole signal group and not for group signals, see ECUC_Com_00345 and ECUC_Com_00520.

[SWS_Com_00708] [In case the transmission deadline monitoring timer expires for an I-PDU with ComIPduCancellationSupport configured to *TRUE*, the AUTOSAR COM module shall invoke PduR_ComCancelTransmit for that I-PDU.] (SRS_Com_02107)

The invocation of PduR_ComCancelTransmit is done in addition to the normal timeout handling of Com, which notifies the SW-C, if configured.

The AUTOSAR COM ignores the return code of PduR ComCancelTransmit.

7.3.6.2.1 Clarification of the OSEK COM specification

The following requirement SWS_Com_00304 states the behavior of the transmission deadline monitoring in the *MIXED* transmission mode defined in [17] more precisely.

[SWS_Com_00304] [If the transmission does not occur, i.e. there is no successful transmit confirmation for an I-PDU transmission, then the transmission deadline monitoring timer elapses and the AUTOSAR COM module shall notify the RTE by invoking the configured ComTimeoutNotification, see ECUC_Com_00552.] (SRS_Com_02037)

If the transmission deadline monitoring timer runs out there will be a timeout notification regardless of the reason. The notification will take place even if the transmission was postponed because of the MDT or if the I-PDU was filtered out by an I-PDU callout.

In the case that there are any contradictions between text and diagrams in [17] the text is the normative part.

In [17] is defined that in *DIRECT* transmission mode (here *DIRECT*/N-times with n == 0): "The monitoring timer is started upon completion of the call to the SendMessage, SendDynamicMessage or SendZeroMessage API service."

Clarification: The transmission deadline monitoring timer should only be reset if the corresponding signal has transmission deadline monitoring timeouts configured. Sig-



nals that have not configured transmission deadline monitoring should not interfere in the I-PDU based monitoring process.

7.3.6.2.2 Transmission Deadline Monitoring with N-Times Transmission Mode

As defined in [17] the monitoring timer has to be started upon completion of a call to Com_SendSignal or Com_SendSignalGroup respectively if transmission deadline monitoring is configured for the corresponding signal or signal group respectively.

For the transmission mode *DIRECT* and *MIXED*, it should be ensured that all ComTxModeNumberOfRepetitions requests could be made within the configured period (see Chapter 7.3.3.4).

As defined in [17], if the monitoring timer expires the RTE is notified with the configured notification mechanism about that failure.

[SWS_Com_00308] [For an I-PDU with ComTxModeMode *DIRECT* and ComTx-ModeNumberOfRepetitions > 0, the AUTOSAR COM module shall cancel the transmission deadline monitoring timer after *ComTxModeNumberOfRepetitions plus one* successfully received transmit confirmations.] (SRS_Com_02083)

If the timer is cancelled after *ComTxModeNumberOfRepetitions plus one* confirmations, the transmission was successful and then the transmission confirmation is sent to the RTE. See also SWS_Com_00305.

[SWS_Com_00739] [For an I-PDU with ComTxModeMode DIRECT and ComTx-ModeNumberOfRepetitions > 0, the AUTOSAR COM module shall reset an already running transmission deadline monitoring timer in case another send request for this I-PDU is initiated.] (SRS_Com_02083)

7.4 Signal Groups - Complex Data Types

To support the AUTOSAR concept of complex data types the AUTOSAR COM module provides signal groups. The AUTOSAR COM module transmits and receives signal groups consistently to provide the necessary consistency for complex data types.

Signal groups can be configured statically. For each signal group a symbolic name can be configured. See ECUC_Com_00345 for the configuration details.

The AUTOSAR COM module achieves the consistency of a signal group by means of a shadow buffer mechanism, i.e. the RTE accesses the group signals in the shadow buffer. If the shadow buffer needs to be synchronized with the I-PDU, the RTE can trigger this explicitly with Com_SendSignalGroup or Com_ReceiveSignalGroup. The synchronization is performed atomically.

An alternative approach to signal group consistency is to enable the signal group array APIs Com_SendSignalGroupArray (SWS_Com_00851) and



Com_ReceiveSignalGroupArray (SWS_Com_00854). The deviations of this approach are described in Chapter 7.4.6.

7.4.1 Initialization

[SWS_Com_00484] [By a call to Com_Init, the AUTOSAR COM module shall initialize the shadow buffer of a signal group on sender-side.] (SRS_BSW_00101)

Since it is not suspected that a well-formed SWC tries to read a group signal before a call to Com ReceiveSignalGroup, SWS Com 00484 applies to the sender side only.

7.4.2 Transmission

If Com_SendSignal or Com_InvalidateSignal is called for a signal that belongs to a signal group, then the AUTOSAR COM will only update the shadow buffer of this signal group. There is no need for any further I-PDU processing like TMS evaluation, unless the I-PDU contents changed.

[SWS_Com_00050] [If Com_SendSignalGroup is called for the signal group, the AUTOSAR COM module shall copy the shadow buffer atomically to the I-PDU buffer.] (SRS_Com_02041)

Example with two group signals signal_a and signal_b, which belong to group_x:

```
/* copy a to shadow buffer */
Com_SendSignal (signal_a, &a);

/* copy b to shadow buffer */
Com_SendSignal (signal_b, &b);

/* copy shadow buffer to I-PDU */
Com_SendSignalGroup (group_x);
```

7.4.3 Reception

A group signal can be received from the shadow buffer by calling the function Com_ReceiveSignal after the signal group data has been copied to the shadow buffer by Com_ReceiveSignalGroup.

[SWS_Com_00051] [If Com_ReceiveSignalGroup is called for a signal group, the AUTOSAR COM module shall copy the data atomically from the I-PDU buffer to the shadow buffer.] (SRS_Com_02041)

Example with two group signals signal_a and signal_b, which belong to group_x:



/* copy I-PDU to shadow buffer */
Com_ReceiveSignalGroup (group_x);
/* copy a from shadow buffer */
Com_ReceiveSignal (signal_a, &a);
/* copy b from shadow buffer */
Com_ReceiveSignal (signal_b, &b);

7.4.4 Notifications

Table 5 shows that all notification functions are only configurable for signal groups but not for individual group signals. Chapter 7.3 defines the functional logic of the notification methods for signals and signal groups. The prototypes for the configurable notification functions are defined in Chapter 8.6.3.1.



7.4.5 Attributes of a Signal Group

Table 5 gives an overview of the attributes of a signal group:

Attribute	Per group signal	Per signal group
Update-bit	No	Yes, associated on the whole group (see Chapter 7.8)
Signal Notification (sender side)	No	Yes
Signal Notification (receiver side)	No	Yes
Error Notification (sender side)	No	Yes
Timeout Notification (sender side)	No	Yes
Timeout Notification (receiver side)	No	Yes
Invalid Notification (receiver side)	No	Yes
Data access (receiver side)	Yes	Yes, see SWS_Com_00201
Data access (sender side)	Yes	Yes, see SWS_Com_00200, SWS_Com_00557
Data Filtering (receiver side)	Yes, see Chapter 7.2.4	No
Data Filtering (sender side)	No	No
TMS on sender side	Each signal, according to TMS selection definition. (see Chapter 7.3.3.2)	No

Table 5: Attributes of signal groups

7.4.6 UINT8-array based access to signal groups

An alternative approach to signal group consistency is to enable the signal group array APIs Com_SendSignalGroupArray (SWS_Com_00851) and Com_ReceiveSignalGroupArray (SWS_Com_00854) via the COM configuration parameter ComSignalGroupArrayAccess (ECUC_Com_10003). The serialization of the composite data is then done outside of the COM module but resulting in the same layout as COM would use to place the group signals in the I-PDU.

In this approach, no shadow buffer is used. The serialized data is directly provided to the COM module as a uint8-array representation of the signal group.

[SWS_Com_00841] [The UINT8-array based access to signal groups shall only be used if the following preconditions apply:

- Uses only fix sized data types for the composite data.
- Signal groups, which are mapped byte aligned to the I-PDU.
- Signal groups where all group signals are mapped consecutively to the I-PDU on transmission side. I (SRS Com 02112)

[SWS_Com_00842] [In case a signal group has ComSignalGroupArrayAccess (ECUC_Com_10003) defined, no shadow buffer shall be allocated for that signal group.] (SRS Com 02112)



[SWS_Com_00843] [In case a signal group has ComSignalGroupArrayAccess (ECUC_Com_10003) defined, the call to the following APIs is not supported for that signal group:

- Com_SendSignal and Com_ReceiveSignal for any of the group signals of that signal group
- Com_SendSignalGroup and Com_ReceiveSignalGroup for that signal group I (SRS_Com_02112)

The above requirement defines that certain APIs are not supported for signal groups with array access. That is, these APIs must not be called for signal groups with array access. If they are called illegally, the behavior is undefined.

7.4.6.1 Basic functionality

In case the AUTOSAR Transformer approach is used the serialization and further data processing is already done in the transformer chain. Since the transformer chain already deals with a uint8-array representation of the communication data, the uint8-array based access to signal groups allows to use the already serialized data and to place it into the I-PDU without the need for COM to serialize the data again.

The AUTOSAR System Template [12] defines which signal group shall be handled in the uint8-array based approach. If the System Template enables the uint8-array based approach the Ecu configuration parameter ComSignalGroupArrayAccess (ECUC_Com_10003) is set to true.

[SWS_Com_00844] [The start position of the uint8-array representation of the communication data shall be the byte offset of the group signal in this signal group with the smallest ComBitPosition.] (SRS_Com_02112)

[SWS_Com_00845] [The length of the uint8-array representation of the communication data shall be the number of bytes which all the ComGroupSignals in this ComSignalGroup occupy in the ComIPdu.] (SRS_Com_02112)

Please note that for reception, the signal group may not be consecutive and other signals may be interleaved in the uint8-array representation of the received signal group.

7.4.6.2 Initialization

[SWS_Com_00850] [By a call to Com_Init, the AUTOSAR COM module shall initialize the respective I-PDU buffer section of a signal group, that has ComSignalGroupArrayAccess (ECUC_Com_10003) configured *true*, based on the ComSignalInitValue of all included ComGroupSignals.] (SRS_Com_02112, SRS_BSW_00101)



7.4.6.3 Transmission

[SWS_Com_00846] [When Com_SendSignalGroupArray is called a data pointer to the uint8-array representation of the signal group is provided. The AUTOSAR COM module shall copy the data into the I-PDU based on the start position defined in SWS_Com_00844 and the size defined in SWS_Com_00845.] (SRS_Com_02112)

[SWS_Com_00847] [The AUTOSAR COM module shall handle a call of Com_SendSignalGroupArray equally to Com_SendSignalGroup with respect to

- Chapter 7.3.3.1.2 Signal Groups (Transfer Properties and I-PDU Transmission Mode)
- Chapter 7.3.3.2 Selection of the Transmission Mode for one specific I-PDU
- Chapter 7.3.3.3 Signal Flow and Transmission Mode Selection

I (SRS Com 02112)

Since the signal group is provided in the uint8-array representation the transmission mode selection needs to cope with this data representation when analyzing the group signals.

In order to ease the Transmission Mode Selection only a subset of the filters from SWS_Com_00602 are supported.

Two filters are exluded from the support of TMS for Com_SendSignalGroupArray:

- NEW IS WITHIN
- NEW_IS_OUTSIDE

[SWS_Com_00848] [The call of Com_SendSignalGroupArray shall support the following filters for Transmission Mode Selection (TMS)

- ALWAYS
- NEVER
- MASKED_NEW_EQUALS_X
- MASKED_NEW_DIFFERS_X
- MASKED_NEW_DIFFERS_MASKED_OLD
- ONE EVERY N

| (SRS_Com_02112)

7.4.6.4 Reception

[SWS_Com_00849] [When Com_ReceiveSignalGroupArray is called a data pointer to the uint8-array representation of the signal group is provided. The AUTOSAR COM module shall copy the data to the data pointer position of the I-PDU based on the start position defined in SWS_Com_00844 and the size defined in SWS_Com_00845.] (SRS_Com_02112)

7.5 Large Data Types

A *large signal* is a signal that is too large to fit into a single L-PDU of the underlying communication protocol. For example, a large signal on CAN would exceed 8 bytes or 64 bytes for CAN FD. For FlexRay the situation is more complex, since one frame



can contain several I-PDUs. Hence, a signal may be a large signal for FlexRay even if it does not exceed the size of a FlexRay frame.

Large signals in AUTOSAR require configuring a *large I-PDU* that will be transmitted via the transport protocol of the underlying bus. It is not imperative that a large I-PDU contains one or more large signals.

Using this concept the I-PDU length and hence the signal size will is limited according to the bus-specific transport protocol, see ECUC_Com_00437.

UINT8_N is the only signal type that supports signals of a static size larger than 8 bytes. For dynamic length signals see Chapter 7.6.

Since the AUTOSAR COM module is not aware of the underlying bus properties, it has to be configured if an I-PDU can be transmitted within a single L-PDU, e.g. one CAN frame, or if it needs to be transmitted via TP, see also ECUC_Com_00761.

The AUTOSAR COM module is not able to prevent or to detect if too large I-PDUs are sent to a specific bus transport protocol, because the AUTOSAR COM module uses the bus-independent PDU Router interface. However, the AUTOSAR COM module allows that the maximum length of the N-SDU of the underlying TPs can be used and therefore the AUTOSAR COM module does not introduce any additional length restrictions.

7.5.1 Transmission of Large Signals/ I-PDUs

The AUTOSAR COM module sends large I-PDUs via the generic PduR APIs for upper layer modules that use transport protocol. For details of the AUTOSAR COM module – PDU Router interface see Chapter 7.7. According to [10] the call-sequence is:

- PduR ComTransmit: for initiating the send request
- one or more callbacks to Com_CopyTxData: for copying the data
- callback to Com TpTxConfirmation: for confirming the transmission

[SWS_Com_00662] [After successful initiation of a transmission of a large I-PDU via PduR_ComTransmit, the AUTOSAR COM module shall not modify the data of its internal transmit buffer of this I-PDU unless the AUTOSAR COM module is notified about either the successful transmission or an error indicating that the transmission was aborted.] (SRS_Com_02095)

The I-PDUs within the AUTOSAR COM module are statically configured. Therefore, the complete memory of the I-PDU, even for very large I-PDUs, will be allocated. This approach was taken in order to reduce the complexity of the large data type handling.

If the utilized transportation protocol is also used for diagnosis, or other services, it must support multiple users. This is at least supported by CAN TP and FlexRay TP.

[SWS_Com_00863] [In case a large I-PDU is currently transmitted and the same I-PDU is triggered for transmission again, the AUTOSAR COM shall skip the addi-



tionally send request and report the runtime error COM_E_SKIPPED_-TRANSMISSION.| (SRS Com 02095)

This could for example happen in case a large I-PDU is sent out periodically and the transmission is delayed over the next cycle.

7.5.2 Reception of Large Signals/ I-PDUs

The AUTOSAR COM module receives large I-PDUs via the generic PDU Router's APIs for upper layer modules that use transport protocol. For details of the AUTOSAR COM module – PDU Router interface see Chapter 7.8. According to [10] the call-sequence is:

- call to Com_StartOfReception: for initiating the RX request
- one or more callbacks to Com_CopyRxData: copying the receive data to the AUTOSAR COM module's internal receive buffer
- call to Com_TpRxIndication: indicating the correct, or incorrect, end of the reception process

[SWS_Com_00838] [In case Com_TpRxIndication is called with value E_NOT_OK for the parameter result, the AUTOSAR COM module shall treat all signals of the received large I-PDU exactly like invalidated signals. That is, the AUTOSAR COM module shall execute all configured ComDataInvalidActions for all included signals and signal groups.] (SRS_Com_02095)

7.6 Dynamic Length Signals

A **dynamic length signal** is a signal which length can vary at run-time. The maximal length of a dynamic length signal needs to be specified at configuration time. A dynamic length signal has to be transmitted in a **dynamic length I-PDU**.

[SWS_Com_00753] [For dynamic length signals, the AUTOSAR COM module shall only support the ComSignalType *UINT8_DYN*.] (SRS_Com_02094, SRS_Com_02098)

Restricting the type to an UINT8-array type also restricts the placement of the dynamic length signal to byte boundaries.

All other signals, potentially including large signals, must be packed in front of the dynamic length signal (see SWS_Com_00754, SWS_Com_00755 and SWS_Com_00756). Therefore, it is not required to encode the length of the dynamic length signal within the I-PDU. On receiver side, the length of the dynamic length signal can be calculated from the length of the received I-PDU.

It is allowed to configure an update-bit for a dynamic length signal. In this case, the update-bit must be located in front of the dynamic length signal, see also SWS_Com_00755.



There is no restriction in the AUTOSAR COM module preventing the usage of signal groups in combination with large or dynamic length signals.

Dynamic length signals are not restricted to be sent via transport protocol. However, the maximum length of the I-PDU containing the dynamic length signal must respect the bus-specifc restrictions.

In case of I-PDUs with dynamic length signals that shall be sent via CAN FD it is recommended to use the Multi PDU Mapping feature of the IpduM. This avoids misinterpretation of the received length due to the discrete data lengths of CAN FD frames.

7.6.1 Transmission of Dynamic Length Signals/ I-PDUs

For sending a dynamic length signal, the RTE needs to specify the actual length at the send call. The corresponding API is Com_SendDynSignal (SWS_Com_00627).

[SWS_Com_00757] [At a call to Com_SendDynSignal, the AUTOSAR COM module shall set the length of the corresponding dynamic length I-PDU to the smallest length that includes the dynamic length signal. The length of the dynamic signal shall be equal to the value of input parameter "Length" passed in the API Com_SendDynSignal.| (SRS_Com_02093)

The AUTOSAR COM module is able to send dynamic length I-PDUs via normal or large I-PDUs. In any case, it needs to pass the length of the dynamic I-PDU to the lower layers.

[SWS_Com_00832] [When the AUTOSAR COM module invokes PduR_ComTransmit for a dynamic length I-PDU, the SduLength of the PduInfoType shall be set according the last update (or init value if not yet sent) of the included dynamic length signal.] (SRS Com 02093)

7.6.2 Reception of Dynamic Length Signals/ I-PDUs

For receiving a dynamic length signal, the RTE needs to be informed about the actual size.

[SWS_Com_00758] [At reception of a dynamic length I-PDU, the AUTOSAR COM module shall calculate the length of the contained dynamic length signal, by:

- <dynamic signal length in bytes> = <received I-PDU length in bytes>
- <ComBitPosition of dynamic length signal> / 8

| (SRS_Com_02093)

Com_ReceiveDynSignal (SWS_Com_00690) returns the length of a dynamic length signal, calculated as defined by SWS_Com_00758.

Since, the length of a dynamic length signal is derived from the received length of the I-PDU, the AUTOSAR COM module does not support the combination of dynamic length I-PDUs and I-PDUs with metadata, see SWS_Com_00817.



7.7 Interface between AUTOSAR COM Module and the PDU Router

OSEK COM leaves the interface between OSEK COM and the lower layers undefined. In AUTOSAR, the only lower layer that the AUTOSAR COM module interfaces to is the PDU Router.

The AUTOSAR COM module uses the PDU Router in two different modes, depending on the type of the I-PDU it will be transported with the bus-specific transport protocol or without. If an I-PDU is supposed to be sent via TP, is configured per configuration parameter ComIPduType.

[SWS_Com_00138] [The AUTOSAR COM module shall send out I-PDUs by a calling the PduR_ComTransmit function.] (SRS_Com_02037)

[SWS_Com_00759] [If the AUTOSAR COM module sends out an I-PDU with ComIPduType configured to *NORMAL*, the AUTOSAR COM module shall expect to be called by the PDU Router using Com's interfaces for modules that do not use TP. See column *normal I-PDUs* in **Table 6**.] (SRS_Com_02096)

[SWS_Com_00760] [If the AUTOSAR COM module sends out an I-PDU with ComIPduType configured to *TP*, the AUTOSAR COM module shall expect to be called by the PDU Router using Com's interfaces for modules that use TP. See column *TP I-*PDUs in **Table 6.**] (SRS_Com_02096)

The interaction diagram in Chapter 9.1 shows the interaction between the PDU Router module and the AUTOSAR COM module for normal I-PDUs.

Table 6 gives an overview, which API between the AUTOSAR COM module and the PDU Router is used for a concrete I-PDU with respect to the configured value of ComIPduType. The API description itself is specified in Chapter 8.

API	normal I-PDUs	TP I-PDUs
PduR_ComTransmit	Х	Х
Com_TxConfirmation	Х	-
Com_RxIndication	X	-
Com_TriggerTransmit	Х	-
Com_TpTxConfirmation	-	X
Com_TpRxIndication	-	Х
Com_StartOfReception	-	Х
Com_CopyRxData	-	Х
Com_CopyTxData	-	X

Table 6: API to PDU Router with respect to ComlPduType

7.8 Update-Bits

To enable the receiver of a signal/ signal group to identify whether the sender has updated the data in this signal/ signal group before sending, the AUTOSAR COM module supports *update-bits*.



The update-bits indicate whether the RTE on sender-side has updated a signal value, before the I-PDU, containing that signal, was transmitted to the PDU Router.

Update-bits are not allowed if transmission mode *DIRECT* is used with ComTxMode-NumberOfRepetitions greater or equal 1 (see SWS_Com_00310).

By configuration on sender- and on receiver-side, it is possible to add separately for each signal and/or separately for each signal group at most one update-bit.

The position of the update-bit is configurable by configuration parameter Co-mUpdateBitPosition (ECUC_Com_00257). ComUpdateBitPosition is included within the configuration container ComSignal. Hence, it is ensured that the signal/ signal group and the corresponding update-bit are always part of the same I-PDU.

[SWS_Com_00055] [The AUTOSAR COM module shall handle the update-bit only internally and not as part of the signal or signal group.] (SRS_Com_02030)

The update-bits are not directly visible or accessible by AUTOSAR Software Components.

[SWS_Com_00059] [The AUTOSAR COM module shall interpret the update-bit as defined in Table 7.| (SRS_BSW_00101, SRS_Com_02030)

Update-BIT	
0	cleared/ data has not been updated
1	set/ data has been updated

Table 7 update-bit interpretation

7.8.1 Sender Side

The initialization of update-bits is defined by SWS_Com_00117.

[SWS_Com_00061] [If the RTE updates the value of a signal by calling Com_SendSignal, the AUTOSAR COM module shall set the update-bit of this signal.] (SRS Com 02030)

[SWS_Com_00801] [If the RTE updates a signal group by calling Com_Send-SignalGroup, the AUTOSAR COM module shall set the update-bit of this signal group.] (SRS_Com_02030)

[SWS_Com_00062] [If the parameter ComTxIPduClearUpdateBit of an I-PDU is configured to *Transmit*, the AUTOSAR COM module shall clear all update-bits of all contained signals and signal groups after this I-PDU was sent out via PduR ComTransmit and PduR ComTransmit returned E OK.] (SRS Com 02030)

[SWS_Com_00577] [If the parameter ComTxIPduClearUpdateBit of an I-PDU is configured to Confirmation, the AUTOSAR COM module shall clear all update-bits of all contained signals and signal groups after this I-PDU was sent out via PduR_ComTransmit, PduR_ComTransmit returned E_OK and the I-PDU was successfully confirmed.] (SRS_Com_02030)



[SWS_Com_00578] [If the parameter ComTxIPduClearUpdateBit of an I-PDU is configured to *TriggerTransmit*, the AUTOSAR COM module shall clear all update-bits of all contained signals and signal groups after the contents of this I-PDU was successfully requested by Com_TriggerTransmit.] (SRS_Com_02030)

7.8.2 Receiver Side

[SWS_Com_00324] [If a signal or signal group with an attached update bit is received, the AUTOSAR COM module shall only process this signal, i.e. filter, notification, signal based gateway, byte swapping, if the signal's update bit is set.] (SRS_Com_02030)

[SWS_Com_00802] [If a signal or signal group with an attached update bit is received and the update-bit is not set, the AUTOSAR COM module shall discard this signal.] (SRS Com 02030)

If the signal has not been updated, the signal will not be routed via the signal gateway. It will only be discarded.

If the RTE reads a signal with an associated cleared update-bit, the init value or the last received value is returned.

[SWS_Com_00067] [The AUTOSAR COM module shall interpret a signal/ signal group as *updated* if the signal has an update-bit attached, and the value of the update-bit is set.] (SRS_Com_02030)

For the behavior of reception deadline monitoring on signals with update-bits, see Chapter 7.3.6.1.

7.9 Data Sequence Control

The AUTOSAR COM module provides mechanisms of data sequence control in the form of I-PDU Counters. *Out of sequence* I-PDUs, those are repeated I-PDUs or I-PDUs received after missing I-PDUs, will be detected and discarded.

I-PDU counters are optional and can be configured per I-PDU. For the corresponding configuration container see ECUC_Com_00592.

7.9.1 Sender Side

[SWS_Com_00687] [For all I-PDUs with ComIPduDirection configured to SEND that have a configured ComIPduCounter, the AUTOSAR COM module shall set the I-PDU counter to 0, after the I-PDU was initialized by Com_Init or reinitialized by Com_IpduGroupControl.] (SRS_Com_02101)

[SWS_Com_00688] [The AUTOSAR COM module shall increase the I-PDU counter of an I-PDU by one, with respect to counter wrap around, directly before the I-PDU is



sent out by PduR_ComTransmit. In case the return value of PduR_ComTransmit is not equal to E_OK the update of the I-PDU counter shall be revoked (by decrementing the I-PDU counter by one). (SRS Com 02101)

If Com_TriggerTransmit fetches an I-PDU containing an I-PDU counter, no incrementation takes place. Hence, care must be taken if I-PDU counters are used on combination with Com_TriggerTransmit. If Com_TriggerTransmit is called multiple times after the corresponding PduR_ComTransmit all I-PDUs will contain the same counter value. Thus, a deferred TriggerTransmit transmission can work, but a pure lower layer driven TriggerTransmit use-case would not work in combination with an I-PDU counter.

7.9.2 Receiver Side

[SWS_Com_00587] [For all I-PDUs with ComIPduDirection configured to RECEIVE that have a configured ComIPduCounter, the AUTOSAR COM module shall accept any incoming I-PDU, regardless of the value of the I-PDU counter, after the I-PDU was initialized by Com_Init or reinitialized by Com_IpduGroupControl.] (SRS_Com_02099)

[SWS_Com_00588] [At reception of an I-PDU containing an I-PDU counter, the AUTOSAR COM module shall set the next expected value to the value following the received value with respect to counter wrap-around.] (SRS_Com_02101)

Example: If the I-PDU counter has 4 bits its possible values are 0 - 15. If an I-PDU with a 4-bit sized counter is received and the received counter value is 15 the next expected value is 0. The new expected value needs to be updated regardless if the received value matches the actual expected value or not.

[SWS_Com_00590] [At reception of an I-PDU containing an I-PDU counter, the AU-TOSAR COM module shall discard the I-PDU, after setting the next expected value as defined in SWS_Com_00588, if no I-PDU replication for this I-PDU is configured and:

received I-PDU counter < expected I-PDU counter OR received I-PDU counter > expected I-PDU counter + ComIPduCounterThreshold with respect to counter wrap-around.| (SRS_Com_02102)

[SWS_Com_00727] [In case a mismatch of the expected and the received I-PDU counter is detected, the AUTOSAR COM module shall notify this mismatch by the configured ComIPduCounterErrorNotification (ECUC_Com_00003) notification function.] (SRS_Com_02102)

The counter error notification is triggered indepently of the configured ComIPduCounterThreshold.

The signature of this I-PDU counter error notification function is defined in SWS Com 00726.



Example: In the example in Table 8, the I-PDU counter is 4-bit wide (values 0-15) and ComIPduCounterThreshold is configured to 1:

Expected I-PDU counter	Received counter value	Action
6	6	normal reception
6	7	normal reception
6	8	discarded
6	1	discarded
15	15	normal reception
15	0	normal reception
15	1	discarded

Table 8 Example I-PDU counter handling

7.10 Communication Protection

Safety related I-PDUs might need to be replicated in multiple L-PDUs in order to prevent corruption and loss of data. In AUTOSAR the replication of I-PDUs is realized by the PDU Router. The comparison and voting of replicated I-PDUs is performed in AUTOSAR COM. Since the replicated I-PDUs have no checksum or signature for comparison it is needed to store and compare the complete I-PDUs at the receiver. The AUTOSAR COM allows configuring two additional replicated I-PDUs via ComIPduReplicaRef (ECUC_Com_00601).

The number of successfully equally received I-PDUs needed for a qualified reception can be configured via ComIPduReplicationQuorum (ECUC_Com_00600) from 1 to 3. The PDU Router module does not support 1:n routing of I-PDUs which are sent or received via a TP module and require multiple frames for transmission. Hence, the AUTOSAR COM stack does currently not support replication of large or dynamic I-PDUs or data types.

7.10.1 Sender Side

Since the replication itself is done by the PduR, there is no special handling on sender side for AUTOSAR COM. However, it must be ensured that replicated I-PDUs have configured an I-PDU counter, see SWS_Com_00834. This is required since the voting at the receiver relies on the I-PDU counter.

7.10.2 Receiver Side

At receiver side, the AUTOSAR COM module performs a voting about the multiple replicated I-PDUs. The AUTOSAR COM module passes only signals of successfully confirmed I-PDUs to the RTE. As stated above replicated I-PDUs need to have an I-PDU counter configured. However, the ComIPduCounterThreshold must be configured to 0, see ECUC_Com_00595. There is no use-case of mixing these two features and the voting would be more complex.



[SWS_Com_00596] [Only when the AUTOSAR COM module has received at least *ComlPduReplicationQuorum* identical copies of a replicated I-PDU, it shall provide the signals and/ or signal groups out of this I-PDU to the RTE.] (SRS_Com_02103, SRS_Com_02105, SRS_Com_02106)

A replicated I-PDU is configured as a normal I-PDU within the AUTOSAR COM module's configuration. The fan-out on sender-side is configured within the PduR configuration. On reception-side, additionally up to two replicas of PDU-R PDUs (see ECUC_Com_00601 ComIPduReplicaRef) and the necessary number of identically received I-PDUs for successfully voting (see ECUC_Com_00600 ComIPduReplicationQuorum) can be configured within the AUTOSAR COM module's configuration.

[SWS_Com_00597] [When the AUTOSAR COM module has received at least *ComlPduReplicationQuorum* identical copies of a replicated I-PDU, it shall notify the RTE only once with respect to the signals and/or signal groups out of this I-PDU.] (SRS_Com_02103, SRS_Com_02105, SRS_Com_02106)

The I-PDU counter will be handled for each replicated I-PDU separately as defined in Chapter 7.9.

Since the I-PDUs do not contain a special checksum, it is expected, that the comparison is performed by comparing the complete I-PDU byte by byte.

For I-PDU replication, the ComIPduCounterThreshold needs to be configured to 0, see SWS_Com_00834. Hence, *ComIPduReplicaRef* + 1 buffers are sufficient to store the I-PDUs for a successful voting.

7.10.3 Constraints

Due to the approach of reusing already existing functionality, that is using the PduR for the fan out, care must be taken to set up the system correctly. The PduR allows fanning out the replicated I-PDUs on different busses. On the receiver side, these I-PDUs are indicated to COM with the same I-PDU id. However, Com_RxIndication (SWS_Com_00123) may not be called reentrant for the same I-PDU id. An easy way to prevent this is to ensure that all I-PDUs are received by the same Interface module, which results in using the same bus for all replicas. For the current AUTOSAR stack, this is the recommend method. However, the system integrator could also synchronize the reception path by other means.

Furthermore, since there is no mechanism to prevent updates from the upper layer to an I-PDU, this approach of communication protection does not work in combination of decoupled transmission, i.e. I-PDUs requested via Com_TriggerTransmit.

7.11 Signal Gateway

The signal gateway is an integrated part of the AUTOSAR COM module. Any external modules, except the cyclic task call, cannot access the signal gateway.



The AUTOSAR COM module's signal gateway works with (group) signals and signal groups.

The AUTOSAR COM module's signal gateway supports only static routing for the ComGwMapping configuration container (ECUC_Com_00544). It is only possible to configure routes independently of the contents of the routed signals and signal groups.

The destination of a signal or signal group can be configured either per ComGwDestinationDescription container (ECUC_Com_00549), or via ComGwSignal reference (ECUC_Com_00551). The transmission mode will be selected based on the TMCs of other associated signals of the I-PDU. In case no signal contributes to the TMS calculation, the transmission mode ComTxModeTrue (SWS_Com_00677) will be used.

[SWS_Com_00377] [The AUTOSAR COM module's signal gateway shall copy the value of signals/ signal groups to be routed to the signals/ signal groups for transmission according to configuration, see ECUC_Com_00544.] (SRS_PduR_06055, SRS_PduR_06089)

The ComGwMapping configuration allows to configure routing a signal/ signal group from one source signal/ signal group to zero (no signal gateway functionality) or more destinations (1:n).

The AUTOSAR COM module's signal gateway does not support to process signals or signal groups that are contained within a large I-PDU, see SWS_Com_00598.

[SWS_Com_00872] [The Signal Gateway shall support the following I-PDU/ signal-processing stages on the receiver side (see also Figure 6):

- I-PDU based deadline monitoring
- I-PDU callout
- check of update-bits
- endianness conversion and sign extension

| (SRS_PduR_06055, SRS_PduR_06089)

[SWS_Com_00873] [The Signal Gateway shall support the following I-PDU/ signal-processing stages on the sender side (see also Figure 6):

- · set of update-bits
- endianness conversion and sign extension
- I-PDU transmission mode selection
- I-PDU callout

] (SRS_PduR_06055, SRS_PduR_06089)

7.11.1 Dealing with Signals

[SWS_Com_00357] [The AUTOSAR COM module shall forward signals to be routed from received I-PDUs to transmit I-PDUs. For configuration, see ECUC_Com_00544 configuration container ComGwMapping.] (SRS_PduR_06002)



Stopping the receive I-PDU after the signals to be routed have been forwarded to the transmit I-PDU will not prevent the transmit I-PDU from being transmitted unless it is stopped as well.

[SWS_Com_00360] [If the endianness of a received signal to be routed differs from the endianness of a related destination signal, the AUTOSAR COM module shall convert its endianness to the endianness of the destination signal.] (SRS_PduR_06061)

7.11.2 Dealing with Signal Groups

[SWS_Com_00361] [The AUTOSAR COM module shall forward to be routed signal groups from received I-PDUs to transmit I-PDUs. See also configuration container ComGwMapping (ECUC_Com_00544).] (SRS_PduR_06002, SRS_PduR_06056, SRS_PduR_06061)

Stopping the receive I-PDU after the signals groups to be routed have been forwarded to the transmit I-PDU will not prevent the transmit I-PDU from being transmitted unless it is stopped as well.

[SWS_Com_00383] [The AUTOSAR COM module shall route signal groups in a consistent manner. Therefore, the AUTOSAR COM module shall transfer the data of a signal group as one consistent set of data during a routing operation.] (SRS_PduR_06056)

[SWS_Com_00735] [The AUTOSAR COM module shall support routing consistently a subset of group signals of a source signal group into a reduced target signal group.] (SRS_PduR_06056)

[SWS_Com_00833] [The AUTOSAR COM module shall support routing of individual group signals of a source signal group to a individual target signals (which are not part of signal group).] (SRS_PduR_06056)

[SWS_Com_00362] [If the endianness of a received group signal to be routed differs from the endianness of a related destination (group) signal, the AUTOSAR COM module shall convert its endianness to the endianness of the destination (group) signal.] (SRS_PduR_06061)

7.11.3 Routing of Out-Timed Signals and Signal Groups

[SWS_Com_00701] [The AUTOSAR COM module's signal gateway shall route signal and signal groups even if any configured reception deadline monitoring timeout expired.] (SRS_PduR_06089)

In case of a not in time received signal or signal group the AUTOSAR COM module's signal gateway will route these signal or signal group anyway.



7.11.4 Handling of Update-Bits

[SWS_Com_00702] [If both, the received signal/ signal group and the destination signal/ signal group have an update-bit (ComUpdateBitPosition) configured and the update-bit of the received signal/ signal group is set, the AUTOSAR COM module shall route the signal/ signal group with the set update-bit and clear the update-bit of the destination signal/ signal group after it was sent.] (SRS_Com_02030)

[SWS_Com_00703] [If the received signal/ signal group and the destination signal/ signal group have an update-bit (ComUpdateBitPosition) configured, and the update-bit of the received signal/ signal group is not set, the AUTOSAR COM module shall not route this signal/ signal group. | (SRS_Com_02030)

[SWS_Com_00704] [If the received signal/ signal group has an update-bit (ComUpdateBitPosition) configured, but the destination signal has no update-bit configured, and the update-bit is set, the AUTOSAR COM module shall route this signal/ signal group without the update-bit.] (SRS_Com_02030)

[SWS_Com_00705] [If the received signal/ signal group has an update-bit (ComUpdateBitPosition) configured, but the destination signal has no update-bit configured, and the update-bit is not set, the AUTOSAR COM module shall not route this signal/ signal group.] (SRS_Com_02030)

[SWS_Com_00706] [If the received signal/ signal group has no update-bit (ComUpdateBitPosition) configured and the destination signal/ signal group has an update-bit configured, the AUTOSAR COM module shall set the update-bit of the destination signal when a new signal/ signal group was received and clear it after sending of the destination signal/ signal group. | (SRS_Com_02030)

7.11.5 Decoupling Signal Gateway

To protect interrupt routines used for I-PDU reception from incalculable and perhaps expensive time usage, it is necessary to decouple the AUTOSAR COM module's signal gateway from interrupt routines.

[SWS_Com_00359] [The AUTOSAR COM module shall execute all functions of its signal gateway during the function call Com_MainFunctionRouteSignals (SWS_Com_00400). During this function call, the AUTOSAR COM module's signal gateway shall check received and to be routed signals and signal groups and forward them from the related receive I-PDUs to the related transmit I-PDUs.] (SRS_BSW_00425, SRS_BSW_00432)

[SWS_Com_00466] [Within Com_MainFunctionRouteSignals, the AUTOSAR COM module shall evaluate the transfer properties and transmission modes and perform its routing actions in the following sequence, see also Figure 3:

- 1. copy all gated signals from the source to the target I-PDUs
- 2. evaluate the TMC of all gated signals
- 3. evaluate the TMS for the target I-PDUs

(SRS_BSW_00432)



In the case, that a target I-PDU contains gated signals with ComTransferProperty TRIGGERED that are newly received, the sending may be performed in either Com_MainFunctionTx or Com_MainFunctionRouteSignals.

[SWS_Com_00539] [The AUTOSAR COM module shall sent out an I-PDU at most once while one call to Com_MainFunctionRouteSignals.] (SRS_PduR_06055)

7.12 Error Classification

7.12.1 Development Errors

Type of error	Related error code	Value [hex]
[SWS_Com_00803] [API service called with wrong parameter] (SRS_BSW_00337)	COM_E_PARAM	0x01
[SWS_Com_00804] [Error code if any other API service, except Com_GetStatus, is called before the AUTOSAR COM module was initialized with Com_Init or after a call to Com_Deinit] (SRS_BSW_00337)	COM_E_UNINIT	0x02
[SWS_Com_00805] [NULL pointer checking] (SRS_BSW_00414)	COM_E_PARAM_POINTER	0x03
[SWS_Com_00837] [Invalid configuration set selection] (SRS_BSW_00414)	COM_E_INIT_FAILED	0x04

7.12.2 Runtime Errors

Type of error	Related error code	Value [hex]
[SWS_Com_00864] [Transmission request was skipped] (SRS_BSW_00452)	COM_E_SKIPPED_ TRANSMISSION	0x05

7.12.3 Transient Faults

There are no transient faults.

7.12.4 Production Errors

There are no production errors.

7.12.5 Extended Production Errors

There are no extended production errors.



7.13 Error Notification

[SWS_Com_00442] [When a development error is detected, the function Det_ReportError of the Default Error Tracer shall be called with:

- 50 as the AUTOSAR COM's ModuleId
- 0 as Instanceld
- the service ID of the AUTOSAR COM module's API in which the error was detected as Apild
- the error ID as defined in Chapter 7.12.1as Errorld

J (SRS_BSW_00369, SRS_BSW_00385, SRS_BSW_00327, SRS_PduR_06098, SRS_PduR_06099)

7.14 Error Handling

AUTOSAR COM supports supervision of the communication with deadline monitoring, see Chapter 7.3.6. Further, the AUTOSAR COM supports data sequence control see Chapter 7.9 and communication protection see Chapter 7.10.

The concrete reaction of the AUTOSAR COM module with respect to error and return values of called APIs is stated within the corresponding functional requirements.

7.15 AUTOSAR COM Module's Interaction Model

This chapter corresponds to the chapter *Functional Model of Interaction Layer* of [17]. The following figures illustrate the behavior of the Interaction layer for external reception and external transmission. The complete functionality is shown but it depends on the configuration what parts are present/ used in a concrete implementation.

[SWS_Com_00396] [A received signal can be configured to have filtering, data invalidation and notification. The AUTOSAR COM module shall execute these services, if configured, in the following order:

- 1) Data invalidation
- 2) Filtering
- 3) Notification

I (SRS Com 02037)

[SWS_Com_00744] [In case both a ComRxDataTimeoutAction and a ComTimeout-Notification is configured for a ComSignal or a ComSignalGroup, the AUTOSAR COM module shall first call the configured ComRxDataTimeoutAction and then call the configured ComTimeoutNotification.] (SRS_Com_02089)



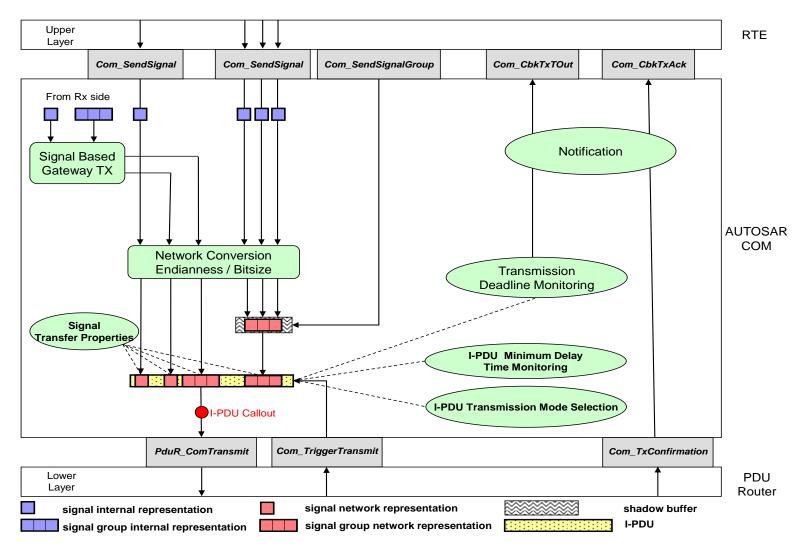


Figure 4 The AUTOSAR COM module's interaction model for transmission



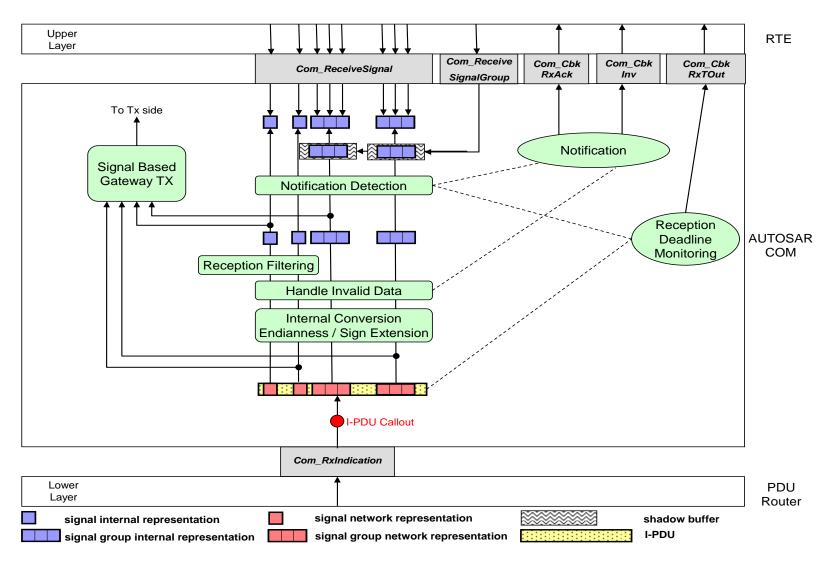


Figure 5 The AUTOSAR COM module's interaction model for reception



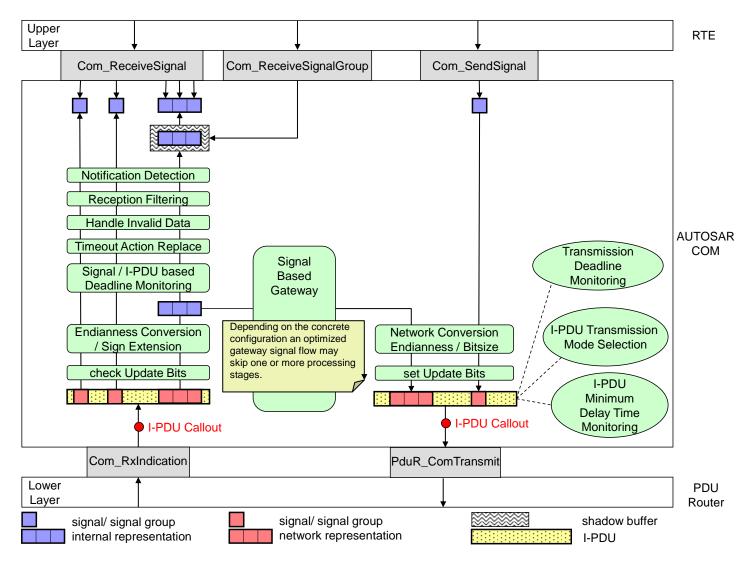


Figure 6: The AUTOSAR COM module's interaction model for integrated Signal Gateway



The endianness conversion and sign extension on receiver side are needed to feed the TMS with a correct data format. This endianness conversion is only necessary if the endianness of the Rx-bus differs from the endianness of the CPU. The endianness conversion on the sender side is only necessary if the endianness of the Rx-bus differs from the endianness of the Tx-bus.



8 API Specification

8.1 Imported Types

In this chapter, all types included from the following files are listed:

[SWS_Com_00609] [

5.1.6_6.500000]		
Module	Imported Type	
ComStack_Types	BufReq_ReturnType	
	PduldType	
	PduInfoType	
	PduLengthType	
	RetryInfoType	
Std_Types	Std_ReturnType	
	Std_VersionInfoType	

(SRS_BSW_00301)

8.2 Type Definitions

8.2.1 Com_StatusType

[SWS_Com_00819] [

	1		
Name:	Com_StatusType		
Туре:	Enumeration		
Range:	COM_INIT	-	The AUTOSAR COM module is initialized and usable.
	COM_UNINIT		The AUTOSAR COM module is not initialized or not usable. This shall be the default value after reset. This status shall have the value 0.
Description:	This is a status value	retu	rned by the API service Com_GetStatus().

(SRS_BSW_00335)

8.2.2 Com_SignalIdType

[SWS_Com_00820] [

Name:	Com_SignalIdType
Type:	uint16
Range:	0 <signalidmax> Zero-based integer number</signalidmax>
Description:	The AUTOSAR COM module's signal object identifier.

(SRS_Com_02037, SRS_BSW_00441)

8.2.3 Com_SignalGroupIdType

[SWS_Com_00821] [

Name:	Com_SignalGroupIdType
Type:	uint16



Range:	0 <signalgroupidmax> Zero-based integer number</signalgroupidmax>
Description:	The AUTOSAR COM module's signal group object identifier.

| (SRS_Com_02041, SRS_BSW_00441)

8.2.4 Com_lpduGroupIdType

[SWS_Com_00822] [

Name:	Com_lpduGroupIdTy	ре	
Type:	uint16		
•	0 <lpdugroupid- max></lpdugroupid- 	Zero-based integer number; where IpduGroupId-max < ComSupportedIPduGroups	
Description:	The AUTOSAR COM I-PDU module's group object identifier.		

| (SRS_Com_00218, SRS_BSW_00441)

8.2.5 Com_lpduGroupVector

[SWS_Com_00823] [

Name:	Com_lpduGroupVec	tor	
	uint8[(ComSupportedIPduGroups-1)/8+1]		
Range:	bitfield	The bitfield is an array of uint8[(ComSupportedIPduGroups - 1)/8 + 1], i.e. there are bit0 - bit <comsupportedipdugroups -="" 1=""></comsupportedipdugroups>	
-	This type can be used to store a flag (bit) for each I-PDU group within the system. It is used for setting the activation state and deadline monitoring state for I-PDU groups within one function call		

(SRS_Com_02090, SRS_BSW_00441)

8.2.6 Com_ConfigType

[SWS Com 00825] [

Name:	Com_ConfigType			
Type:	Structure			
Range:		The content of the initialization data structure is implementation specific		
Description:	This is the type of th	This is the type of the data structure containing the initialization data for COM.		

I (SRS_BSW_00404, SRS_BSW_00441)

8.3 Function Definitions

[SWS_Com_00321] [Non-reentrant functions do not have to check if they are called reentrant.| (SRS_BSW_00312)

Most of the COM functions are non-reentrant with respect to a concrete object. E.g. Com_SendSignal is not reentrant for the same signal, but reentrant for different signals. Hence, if there are multiple callers of the AUTOSAR COM module they need to be synchronized on a system level, for example by using disjoint sets of signals and I-PDU groups.



8.3.1 Return Codes

The AUTOSAR COM module does not define a special COM return type. The API services return errors either by using the Std_ReturnType as defined in [5] or via a uint8 value mapped according to Table 9.

Return codes of the AUTOSAR COM module are defined in Table 9.

[SWS Com 00865][

Name	Description	Туре	Value	Defined in
E_OK	the service has been accepted	#define	0x00	Std_Types.h
E_NOT_OK	invocation of service failed	#define	0x01	Std_Types.h
COM_SERVICE_ NOT_AVAILABLE	the service is currently not available e.g. the corresponding I-PDU group is stopped (or a development error has been detect- ed)	#define	0x80	Com.h
COM_BUSY	Successful execution of this function is currently not possible, because a resource is currently in use. For example, the buffer of a large I-PDU is locked. COM_BUSY might, but must not, be returned whenever a signal of a large I-PDU is accessed.	#define	0x81	Com.h

| (SRS_BSW_00348, SRS_BSW_00377, SRS_BSW_00441)

Table 9: Mapping of AUTOSAR COM module's return codes

8.3.2 Start-Up and Control Services

8.3.2.1 Com_Init

[SWS Com 00432] [

<u>[0110_0000+</u>	<u>1 </u>		
Service name:	Com_Init		
Syntax:	<pre>void Com_Init(const Com_ConfigType* config)</pre>		
Service ID[hex]:	0x01		
Sync/Async:	Synchronous		
Reentrancy:	Non Reentrant		
Parameters (in):	config Pointer to the AUTOSAR COM module's configuration data.		
Parameters (in- out):	None		
Parameters (out):	None		
Return value:	None		
	This service initializes internal and external interfaces and variables of the AUTO-SAR COM module layer for the further processing. After calling this function the inter-ECU communication is still disabled.		

J (SRS_BSW_00344, SRS_BSW_00404, SRS_BSW_00405, SRS_BSW_00101, SRS_BSW_00358, SRS_BSW_00414)

The behavior of the AUTOSAR COM module is unspecified until a correct call to Com_Init is made.



Caveats of Com_Init: It is not foreseen that Com_Init pre-empts any other AUTOSAR COM module's function. The AUTOSAR COM module can relies on the rest of the system that Com_Init is not called in such a way.

8.3.2.2 Com Delnit

[SWS_Com_00130] [

[3443 _Com_0on	, o j i		
Service name:	Com_DeInit		
Syntax:	void Com_Delnit(
	void		
Service ID[hex]:	0x02		
Sync/Async:	Synchronous		
Reentrancy:	Non Reentrant		
Parameters (in):	None		
Parameters (in-	None		
out):			
Parameters (out):	None		
Return value:	None		
Description:	This service stops the inter-ECU communication. All started I-PDU groups are		
	stopped and have to be started again, if needed, after Com_Init is called.		
	By a call to Com_DeInit the AUTOSAR COM module is put into an not initialized		
	state.		

] (SRS_BSW_00336)

[SWS_Com_00129] [The AUTOSAR COM module's function Com_Delnit shall stop all started I-PDU groups.] (SRS_BSW_00336)

Caveats of Com_Delnit: It is not foreseen that Com_Delnit pre-empts any AUTOSAR COM module's function. The AUTOSAR COM module can relies on the rest of the system that Com_Delnit is not called in such a way.

8.3.2.3 Com_lpduGroupControl

[SWS_Com_00751] [

Service name:	Com_lpduGroupControl		
Syntax:	void Com_IpduGroupControl(Com_IpduGroupVector, boolean initialize)		
Service ID[hex]:	0x03		
Sync/Async:	Synchronous		
Reentrancy:	Non Reentrant		
Parameters (in):		I-PDU group vector containing the activation state (stopped = 0/ started = 1) for all I-PDU groups.	
	initialize	flag to request initialization of the I-PDUs which are newly started	
Parameters (in- out):	None		
Parameters (out):	None		
Return value:	None		
Description:	This service starts I-PDU groups.		



| (SRS_Com_00218)

[SWS_Com_00792] [At invocation of the function Com_lpduGroupControl, the AUTOSAR COM module shall start/stop every ComlPdu according to the passed states of the ComlpduGroups in the parameter ipduGroupVector.] (SRS_Com_00218)

The correct ipduGroupVector can be constructed with the helper functions Com_ClearlpduGroupVector and Com_SetIpduGroup. This allows using the symbolic names of the ComIPduGroups.

8.3.2.4 Com_ReceptionDMControl

[SWS_Com_00752] [

<u>[0110_00001</u>	· 4		
Service name:	Com_ReceptionDMControl		
Syntax:	void Com_ReceptionDMControl(Com_IpduGroupVector)		
Service ID[hex]:	0x06		
Sync/Async:	Synchronous		
Reentrancy:	Non Reentrant		
Parameters (in):	ipduGroupVector I-PDU group vector containing the requested deadline monitoring state (disabled = 0/ enabled = 1) for all I-PDU groups.		
Parameters (in- out):	None		
Parameters (out):	None		
Return value:	None		
Description:	This service enables or disables I-PDU group Deadline Monitoring.		

| (SRS_Com_00192)

[SWS_Com_00616] [First, the function Com_ReceptionDMControl shall set the reception deadline monitoring state of all I-PDU groups to the requested state.] (SRS Com 00192)

[SWS_Com_00617] [Second, the function Com_ReceptionDMControl shall start or stop the reception deadline monitoring for all I-PDUs that change their reception deadline monitoring state because of this call of Com_ReceptionDMControl respectively.] (SRS Com_00192)

[SWS_Com_00618] [For all I-PDUs that do not change their deadline monitoring state the function, Com_ReceptionDMControl shall do nothing.] (SRS_Com_00192)

8.3.2.5 Com GetStatus

[SWS Com 00194] [

<u> </u>	- · <u> </u>
Service name:	Com_GetStatus
Syntax:	Com_StatusType Com_GetStatus(void)
Service ID[hex]:	0x07



Sync/Async:	Synchronous		
Reentrancy:	Reentrant		
Parameters (in):	None		
Parameters (in-	None		
out):			
Parameters (out):	None		
Return value:	Com_StatusType COM_UNINIT: the AUTOSAR COM module is not initialized and not usable		
	COM_INIT: the AUTOSAR COM module is initialized and usable		
Description:	Returns the status of the AUTOSAR COM module.		

[(SRS_BSW_00331)

8.3.2.6 Com_GetVersionInfo

[SWS_Com_00426] [

Service name:	Com_GetVersionInfo		
Syntax:	void Com_GetVersionInfo(
	Std_VersionInfoType* versioninfo		
	V		
Service ID[hex]:	0x09		
Sync/Async:	Synchronous		
Reentrancy:	Reentrant		
Parameters (in):	None		
Parameters (in-	None		
out):			
Parameters (out):	versioninfo Pointer to where to store the version information of this module.		
Return value:	None		
Description:	Returns the version information of this module.		

J (SRS_BSW_00407, SRS_BSW_00003)

For configuration of Com_GetVersionInfo see SWS_Com_00026.

8.3.2.7 Com_ClearlpduGroupVector

[SWS_Com_00749] [

Service name:	Com_ClearlpduGroupVector		
Syntax:	void Com_ClearlpduGroupVector(Com_IpduGroupVector ipduGroupVector)		
Service ID[hex]:	0x1c		
Sync/Async:	Synchronous		
Reentrancy:	Non Reentrant		
Parameters (in):	None		
Parameters (in- out):	ipduGroupVector I-PDU group vector to be cleared		
Parameters (out):	None		
Return value:	None		
Description:	This service sets all bits of the given Com_lpduGroupVector to 0.		
(ODO O 000			

] (SRS_Com_02090)



8.3.2.8 Com_SetIpduGroup

[SWS_Com_00750] [

<u>[0110_00111_0011</u>]			
Service name:	Com_SetIpduGroup			
Syntax:	void Com_SetIpduGroup(Com_IpduGroupVector ipduGroupVector, Com_IpduGroupIdType ipduGroupId, boolean bitval)			
Service ID[hex]:	0x1d			
Sync/Async:	Synchronous			
Reentrancy:	Non Reentrant	Non Reentrant		
Parameters (in):		ipduGroup used to identify the corresponding bit in the I-PDU group vector		
	bitval	New value of the corresponding bit		
Parameters (in- out):	ipduGroupVector	I-PDU group vector to be modified		
	None			
Return value:	None			
Description:	This service sets the value of a bit in an I-PDU group vector.			

(SRS_Com_02090)

[SWS_Com_00623] [The function Com_SetIpduGroup shall set the bit of the given I-PDU group vector that corresponds to the given I-PDU group, that is the n-th bit for the I-PDU group with ID n, to bitval.] (SRS_Com_02090)

8.3.3 Communication Services

8.3.3.1 Com_SendSignal

[SWS_Com_00197] [

0 '	00		
Service name:	Com_SendSignal		
Syntax:	uint8 Com_SendSignal(
	Com_SignalIdType SignalId, const void* SignalDataPtr		
)		
Service ID[hex]:	0x0a		
Sync/Async:	Asynchronous		
Reentrancy:	Non Reentrant for the same signal. Reentrant for different signals.		
Parameters (in):	Signalld Id of signal to be sent.		
Parameters (m).	SignalDataPtrReference to the signal data to be transmitted.		
	None		
out):			
Parameters (out):	None		
Return value:	uint8 E_OK: service has been accepted COM_SERVICE_NOT_AVAILABLE: corresponding I-PDU group was stopped (or service failed due to development error) COM_BUSY: in case the TP-Buffer is locked for large data types handling		
Description:	The service Com_SendSignal updates the signal object identified by Signalld with the signal referenced by the SignalDataPtr parameter.		

| (SRS_Com_02037)



[SWS_Com_00624] [The service Com_SendSignal shall update the signal object identified by SignalId with the signal referenced by the SignalDataPtr parameter.] (SRS_Com_02037)

[SWS_Com_00625] [If the updated signal has the ComTransferProperty TRIG-GERED and it is assigned to an I-PDU with ComTxModeMode DIRECT or MIXED, then Com_SendSignal shall perform an immediate transmission (within the next main function at the latest) of that I-PDU, unless the sending is delayed or prevented by other COM mechanisms.] (SRS_Com_02037)

Related mechanisms are for example the minimum delay timer (ComMinimum-DelayTime) or the transmission offset (ComTxModeTimeOffset).

8.3.3.2 Com SendDynSignal

[SWS Com 00627] [

SWS_Com_00627]				
Service name:	Com_SendDy	Com_SendDynSignal		
Syntax:	uint8 Com_SendDynSignal(Com_SignalIdType SignalId, const void* SignalDataPtr, uint16 Length)			
Service ID[hex]:	0x21			
Sync/Async:	Asynchronous	Asynchronous		
Reentrancy:	Non Reentran	Non Reentrant for the same signal. Reentrant for different signals.		
	Signalld	ld of signal to be sent.		
Parameters (in):	SignalDataPtr	Reference to the signal data to be transmitted.		
	Length	Length of the dynamic length signal		
Parameters (in- out):	None			
Parameters (out):	None			
Return value:	uint8	E_OK: service has been accepted E_NOT_OK: in case the Length is greater than the configured ComSignalLength of this sent signal COM_SERVICE_NOT_AVAILABLE: corresponding I-PDU group was stopped (or service failed due to development error) COM_BUSY: in case the TP-Buffer is locked		
Description:	The service Com_SendDynSignal updates the signal object identified by SignalId with the signal referenced by the SignalDataPtr parameter.			

| (SRS_Com_02095)

[SWS_Com_00628] [The service Com_SendDynSignal shall update the signal object identified by SignalId with the signal referenced by the SignalDataPtr parameter.] (SRS_Com_02095)

[SWS_Com_00629] [If the updated signal (see SWS_Com_00628) has the ComTransferProperty *TRIGGERED*, then the function Com_SendDynSignal shall perform an immediate transmission (within the next main function at the latest) of the I-PDU associated with the signal except when the signal is packed into an I-PDU with Periodic transmission mode.] (SRS_Com_02095)



[SWS_Com_00630] [If the updated signal, see SWS_Com_00628, has the ComTransferProperty *PENDING*, then the function Com_SendDynSignal shall not perform a transmission of the I-PDU associated with the signal.] (SRS_Com_02095)

There is no restriction regarding the minimal length of a dynamic length signal. Hence, it is allowed that a dynamic length signal has zero length.

8.3.3.3 Com_ReceiveSignal

[SWS Com 00198] [

3442_Com_00130]			
Service name:	Com_ReceiveSignal		
Syntax:	uint8 Com_ReceiveSignal(Com_SignalIdType SignalId, void* SignalDataPtr)		
Service ID[hex]:	0x0b		
Sync/Async:	Synchronous		
Reentrancy:	Non Reentrant for the same signal. Reentrant for different signals.		
Parameters (in):	Signalld	ld of signal to be received.	
Parameters (in-	None		
out):			
Parameters (out):	SignalDataPtr	Reference to the location where the received signal data shall be stored	
Return value:	uint8	E_OK: service has been accepted COM_SERVICE_NOT_AVAILABLE: corresponding I-PDU group was stopped (or service failed due to development error) COM_BUSY: in case the TP-Buffer is locked for large data types handling	
Description:	Com_ReceiveSignal copies the data of the signal identified by SignalId to the location specified by SignalDataPtr.		

I (SRS Com 02037)

[SWS_Com_00631] [The service Com_ReceiveSignal shall copy the data of the signal object identified by SignalId to the position referenced by SignalDataPtr.] (SRS_Com_02037)

Caveats of Com_ReceiveSignal: The AUTOSAR COM module relies on the fact the SignalDataPtr is properly aligned with respect to the data type of the signal with the given SignalId. The caller of Com_ReceiveSignal has to ensure this.

8.3.3.4 Com_ReceiveDynSignal

[SWS_Com_00690] [

Service name:	Com_ReceiveDynSignal
Syntax:	uint8 Com_ReceiveDynSignal(Com_SignalIdType SignalId, void* SignalDataPtr, uint16* Length)
Service ID[hex]:	0x22
Sync/Async:	Synchronous



Reentrancy:	Non Reentrant for the same signal. Reentrant for different signals.		
Parameters (in):	Signalld Id of signal to be received.		
Parameters (in-		in: maximum length that could be received	
out):	out: length of the dynamic length signal		
Parameters (out):	SignalDataPtr	reference to the location where the received signal data shall be	
raiailleters (out).		stored	
Return value:	uint8 E_OK: service has been accepted E_NOT_OK: in case the Length (as in-parameter) is smaller than the received length of the dynamic length signal COM_SERVICE_NOT_AVAILABLE: corresponding I-PDU group was stopped (or service failed due to development error) COM_BUSY: in case the TP-Buffer is locked		
	Com_ReceiveDynSignal copies the data of the signal identified by SignalId to the location specified by SignalDataPtr and stores the length of the dynamical length signal at the position given by the Length parameter.		

(SRS_Com_02092, SRS_Com_02095)

[SWS_Com_00711] [The service Com_ReceiveDynSignal shall copy the data of the signal object identified by SignalId to the position referenced by SignalDataPtr.] (SRS_Com_02092)

[SWS_Com_00712] [The service Com_ReceiveDynSignal shall return the calculated length (see SWS_Com_00758) of the dynamic length signal identified by Signalld in parameter Length.] (SRS_Com_02092)

[SWS_Com_00724] [In case, the Length (as in-parameter) is smaller than the received length of the dynamic length signal, Com_ReceiveDynSignal shall not copy any data to the position referenced by SignalDataPtr. | (SRS Com 02092)

8.3.3.5 Com_SendSignalGroup

[SWS Com 00200] [

<u> </u>	1		
Service name:	Com_SendSignalGroup		
Syntax:	uint8 Com_SendSignalGroup(Com_SignalGroupIdType SignalGroupId)		
Service ID[hex]:	0x0d		
Sync/Async:	Asynchronous		
Reentrancy:	Non Reentrant for the same group signal. Reentrant for different group signals.		
Parameters (in):	SignalGroupIdId of signal group to be sent.		
Parameters (in-	<i>n-</i> None		
out):			
Parameters (out):	None		
Return value:	uint8 E_OK: service has been accepted COM_SERVICE_NOT_AVAILABLE: corresponding I-PDU group was stopped (or service failed due to development error) COM_BUSY: in case the TP-Buffer is locked for large data types handling		
Description:	The service Com_SendSignalGroup copies the content of the associated shadow buffer to the associated I-PDU.		

| (SRS_Com_02041)



[SWS_Com_00635] [The service Com_SendSignalGroup shall copy the content of the shadow buffer referenced by parameter SignalGroupId to the associated I-PDU.] (SRS_Com_02041)

[SWS_Com_00637] [Configuration of Com_SendSignalGroup: A signal group must be configured before this call. See ECUC_Com_00345 for details.] (SRS_Com_02041)

8.3.3.6 Com_ReceiveSignalGroup

[SWS_Com_00201] [

<u> 0110_00111_0021</u>	· ·]		
Service name:	Com_ReceiveSignalGroup		
Syntax:	uint8 Com_ReceiveSignalGroup(
	Com_SignalGroupIdType SignalGroupId)		
Service ID[hex]:	0x0e		
Sync/Async:	Synchronous		
Reentrancy:	Non Reentrant for the same group signal. Reentrant for different group signals.		
Parameters (in):	SignalGroupIdId of signal group to be received.		
Parameters (in-	None		
out):			
Parameters (out):	None		
Return value:	uint8 E_OK: service has been accepted COM_SERVICE_NOT_AVAILABLE: corresponding I-PDU group was stopped (or service failed due to development error) COM_BUSY: in case the TP-Buffer is locked for large data types handling		
Description:	The service Com_ReceiveSignalGroup copies the received signal group from the I-PDU to the shadow buffer.		

(SRS_Com_02041)

[SWS_Com_00638] [The service Com_ReceiveSignalGroup shall copy the received signal group from the I-PDU to the shadow buffer.] (SRS_Com_02041)

After this call, the group signals could be copied from the shadow buffer to the RTE by calling Com_ReceiveSignal.

[SWS_Com_00639] [Configuration of Com_ReceiveSignalGroup: A signal group must be configured before this call. See ECUC_Com_00345 for details.] (SRS_Com_02041)

[SWS_Com_00461] [The AUTOSAR COM module shall always copy the last known data, or the ComSignalInitValue(s) if not yet written, of the I-PDU to the shadow buffer by a call to Com_ReceiveSignalGroup even if the I-PDU is stopped and COM_SERVICE_NOT_AVAILABLE is returned.] (SRS_Com_02041)

8.3.3.7 Com_SendSignalGroupArray

[SWS Com 00851] [

Service name:	Com_SendSignalGroupArray
Syntax:	uint8 Com_SendSignalGroupArray(



	Com_SignalGroupIdType SignalGroupId,		
	const uint8* SignalGroupArrayPtr		
Service ID[hex]:	0x23		
Sync/Async:	Asynchronous		
Reentrancy:	Non Reentrant for the	same signal group. Reentrant for different signal groups.	
Doromotoro (in)	SignalGroupId	ld of signal group to be sent.	
Parameters (in):	SignalGroupArrayPtr	Reference to the signal group array.	
Parameters (in-	s (in-None		
out):			
Parameters (out):	None		
Return value:	uint8	E_OK: service has been accepted COM_SERVICE_NOT_AVAILABLE: corresponding I-PDU group was stopped (or service failed due to development error) COM_BUSY: in case the TP-Buffer is locked for large data types handling	
	The service Com_SendSignalGroupArray copies the content of the provided SignalGroupArrayPtr to the associated I-PDU. The provided data shall correspond to the array representation of the signal group.		

(SRS_Com_02112, SRS_Com_02041)

[SWS_Com_00852] [The service Com_SendSignalGroupArray shall copy the content designated by the SignalGroupArrayPtr to the associated I-PDU.] (SRS_Com_02112, SRS_Com_02041)

[SWS_Com_00853] [The Com_SendSignalGroupArray API shall only be available when the configuration switch ComEnableSignalGroupArrayApi is enabled.] (SRS_Com_00177)

8.3.3.8 Com_ReceiveSignalGroupArray

[SWS_Com_00854] [

<u>,0110_00000</u> .	· <u> </u>		
Service name:	Com_ReceiveSignalC	GroupArray	
Syntax:	uint8 Com_ReceiveSignalGroupArray(Com_SignalGroupIdType SignalGroupId, uint8* SignalGroupArrayPtr)		
Service ID[hex]:	0x24		
Sync/Async:	Synchronous		
Reentrancy:	Non Reentrant for the same signal group. Reentrant for different signal groups.		
Parameters (in):	SignalGroupId	ld of signal group to be received.	
Parameters (in- out):	None		
Parameters (out):	, ,	reference to the location where the received signal group array shall be stored	
Return value:		E_OK: service has been accepted COM_SERVICE_NOT_AVAILABLE: corresponding I-PDU group was stopped (or service failed due to development error) COM_BUSY: in case the TP-Buffer is locked for large data types handling	
Description:	The service Com_ReceiveSignalGroupArray copies the received signal group		



array representation from the PDU to the location designated by SignalGroupAr-
rayPtr.

J (SRS_Com_02112, SRS_Com_02041)

[SWS_Com_00855] [The service Com_ReceiveSignalGroupArray shall copy the array representation of the received signal group from the I-PDU to the location designated by SignalGroupArrayPtr.| (SRS_Com_02112, SRS_Com_02041)

[SWS_Com_00856] [The Com_ReceiveSignalGroupArray API shall only be available when the configuration switch ComEnableSignalGroupArrayApi is enabled.] (SRS_Com_00177)

[SWS_Com_00857] [The AUTOSAR COM module shall always copy the last known data, or the ComSignalInitValues if not yet written, of the I-PDU to the SignalGroupArrayPtr by a call to Com_ReceiveSignalGroupArray even if the I-PDU is stopped and COM_SERVICE_NOT_AVAILABLE is returned.] (SRS_Com_02041)

8.3.3.9 Com_InvalidateSignal

[SWS_Com_00203] [

[<u>3442_COIII_002</u>			
Service name:	Com_InvalidateSignal		
Syntax:	uint8 Com_InvalidateSignal(Com_SignalIdType SignalId		
Service ID[hex]:	0x10		
Sync/Async:	Asynchronous		
Reentrancy:	Non Reentrant for the same signal. Reentrant for different signals.		
Parameters (in):	Signalld Id of signal to be invalidated.		
Parameters (in-	None		
out):			
Parameters (out):	None		
Return value:	luint8 E_OK: service has been accepted COM_SERVICE_NOT_AVAILABLE: corresponding I-PDU group is stopped, no ComSignalDataInvalidValue is configured for the given signalId or service fails due to development error COM_BUSY: in case the TP-Buffer is locked		
Description:	The service Com_InvalidateSignal invalidates the signal with the given SignalId by setting its value to its configured ComSignalDataInvalidValue.		

| (SRS_Com_02077)

See Chapter 7.4.4 for further information about the signal invalidation mechanism.

[SWS_Com_00642] [After invaliding the signal data, the function Com_Invalidate-Signal shall perform a call of Com_SendSignal internally, for details see SWS_Com_00099.] (SRS_Com_02077)

[SWS_Com_00643] [Com_InvalidateSignal shall return COM_SERVICE_NOT_-AVAILABLE in case no ComSignalDataInvalidValue (ECUC_Com_00391) is configured for the signal with the given SignalId.] (SRS_Com_02077)



8.3.3.10 Com_InvalidateSignalGroup

[SWS_Com_00557] [

Service name:	Com_InvalidateSignalGroup		
Syntax:	uint8 Com_InvalidateSignalGroup(
Service ID[hex]:	0x1b		
Sync/Async:	Asynchronous		
Reentrancy:	Non Reentrant for the same signal group. Reentrant for different signal groups.		
Parameters (in):	SignalGroupIdId of signal group to be invalidated.		
Parameters (in-	(in-None		
out):			
Parameters (out):	None		
Return value:	uint8 E_OK: service has been accepted COM_SERVICE_NOT_AVAILABLE: corresponding I-PDU group is stopped, no ComSignalDataInvalidValue is configured for any of the group signals or service fails due to development error COM_BUSY: in case the TP-Buffer is locked		
Description:	The service Com_InvalidateSignalGroup invalidates all group signals of the signal group with the given SignalGroupId by setting their values to their configured ComSignalDataInvalidValues.		

| (SRS_Com_02077)

For further information about the signal invalidation mechanism, see Chapter 7.4.4.

[SWS_Com_00645] [After invaliding the signal group data, the function Com_InvalidateSignalGroup shall perform a call of Com_SendSignalGroup internally.] (SRS_Com_02077)

8.3.3.11 Com_TriggerIPDUSend

[SWS_Com_00348] [

Service name:	Com_TriggerIPDUSend			
Syntax:		Com_TriggerIPDUSend(
	PduldType Pdu	PduldType Pduld		
))		
Service ID[hex]:	0x17	0x17		
Sync/Async:	Synchronous			
Reentrancy:	Non Reentrant	Non Reentrant		
Parameters (in):	Pduld	The I-PDU-ID of the I-PDU that shall be triggered for sending		
Parameters (in-	Parameters (in-None			
out):				
Parameters (out):	None			
	Std ReturnType	E_OK: I-PDU was triggered for transmission		
Return value:		E_NOT_OK: I-PDU is stopped, the transmission could not be		
		triggered		
Description:	By a call to Com	TriggerIPDUSend the I-PDU with the given ID is triggered for		
-	transmission.	5 55		

| (SRS_Com_02037)



[SWS_Com_00861] [By a call to Com_TriggerIPDUSend, the AUTOSAR COM shall trigger the I-PDU with the given ID for transmission only if the I-PDU is started.] (SRS_Com_02037)

In case a stopped I-PDU is triggered for transmission, just E_NOT_OK is returned. For stopped I-PDUs no triggers are stored for a later execution after a potential (re-) starting of the I-PDU.

[SWS_Com_00388] [When an I-PDU is transmitted because of the function Com_TriggerIPDUSend or Com_TriggerIPDUSendWithMetaData, the AUTOSAR COM module shall only take the minimum delay time into account. That is the AUTOSAR COM module shall postpone transmissions if necessary and reset the minimum delay timer in case of transmissions. The AUTOSAR COM module shall not take into account all other transmission mode related parameters like ComTxModeNumberOfRepetitions.] (SRS_Com_02037)

[SWS Com 00492] [If an I-PDU by Com_TriggerIPDUSend triggered configured I-PDU-callout. Com TriggerIPDUSendWithMetaData has а ECUC_Com_00387, then the function Com_TriggerIPDUSend or Com_Trigger-IPDUSendWithMetaData repectively shall also call this I-PDU-Callout.I (SRS Com 02037)

If within the Com_TriggerIPDUSend function, another call to Com_TriggerIPDUSend is invoked the application programmer must take care to not create infinite recursions. Both, direct recursions by invoking Com_TriggerIPDUSend with the same ComPduld again and indirect recursions with longer recursion paths are theoretically possible.

The previous paragraph is also true for Com_TriggerIPDUSendWithMetaData as well as for combinations of these two I-PDU triggering functions.

[SWS_Com_00867] [In case a large I-PDU is triggered for transmission by Com_TriggerIPDUSend and the buffer of the large I-PDU is currently locked, the AUTOSAR COM shall store the transmit request and transmit the I-PDU when the buffer is available again.] (SRS_Com_02037)

8.3.3.12 Com_TriggerIPDUSendWithMetaData

[SWS_Com_00858] [

Service name:	Com_TriggerIPDUSendWithMetaData		
Syntax:	Std_ReturnType Com_TriggerIPDUSendWithMetaData(PduIdType PduId, uint8* MetaData)		
Service ID[hex]:	0x28		
Sync/Async:	Synchronous		
Reentrancy:	Non Reentrant		
Parameters (in):	Pduld	The I-PDU-ID of the I-PDU that shall be triggered for sending	
	MetaData	A pointer to the metadata for the triggered send-request	



	None
out):	
Parameters (out):	None
Return value:	Std_ReturnType E_OK: I-PDU was triggered for transmission E_NOT_OK: I-PDU is stopped, the transmission could not be triggered
	By a call to Com_TriggerIPDUSendWithMetaData the AUTOSAR COM module updates its internal metadata for the I-PDU with the given ID by copying the metadata from the given position and with respect to length of the globally configured MetaDataType of this I-PDU. Then the I-PDU is triggered for transmission.

| (SRS_Com_02037)

[SWS_Com_00862] [By a call to Com_TriggerIPDUSendWithMetaData, the AUTOSAR COM shall trigger the I-PDU with the given ID for transmission only if the I-PDU is started.] (SRS_Com_02037)

In case a stopped I-PDU is triggered for transmission, just E_NOT_OK is returned. There is no mechanism in COM to store the triggering and to execute it after a potential (re-)starting of the I-PDU.

[SWS_Com_00868] [In case a large I-PDU is triggered for transmission by Com_TriggerIPDUSendWithMetaData and the buffer of the large I-PDU is currently locked, the AUTOSAR COM shall store the transmit request with the given MetaData and transmit the I-PDU when the buffer is available again.] (SRS_Com_02037)

8.3.3.13 Com_SwitchlpduTxMode

[SWS_Com_00784] [

<u> </u>				
Service name:	Com_S	Com_SwitchIpduTxMode		
Syntax:	void Com_SwitchIpduTxMode(PduIdType PduId, boolean Mode)			
Service ID[hex]:	0x27			
Sync/Async:	Synchro	nous		
Reentrancy:	Reentra	nt for different Pdulds. Non reentrant for the same Pduld.		
Doromotoro (in):	Pduld	ld of the I-PDU of which the transmission mode shall be changed.		
Parameters (in):	Mode	the transmission mode that shall be set.		
Parameters (in- out):	None			
Parameters (out):	None			
Return value:	None			
Description:	The service Com_SwitchIpduTxMode sets the transmission mode of the I-PDU referenced by PduId to Mode. In case the transmission mode changes, the new mode shall immediately be effective (see SWS_Com_00239). In case the requested transmission mode was already active for this I-PDU, the call will have no effect.			

| (SRS_Com_02082)

By mixing the signal based TMS and explicit TMS by Com_SwitchIpduTxMode for the same I-PDU, it must be noted that the signal base TMS might switch back the manual set mode during a call to Com_SendSignal or Com_SendSignalGroup for



this I-PDU. Therefore, mixing explicit and manual TMS for one I-PDU must be carefully designed, if used at all.

8.4 Callback Functions and Notifications

8.4.1 Com_TriggerTransmit

[SWS Com 00001] [

<u>[0110_00111_0001</u>	·]		
Service name:	Com_TriggerTrai	nsmit	
Syntax:	Std_ReturnType Com_TriggerTransmit(PduIdType TxPduId, PduInfoType* PduInfoPtr)		
Service ID[hex]:	0x41		
Sync/Async:	Synchronous		
Reentrancy:	Reentrant for diff	erent Pdulds. Non reentrant for the same Pduld.	
Parameters (in):	TxPduld	ID of the SDU that is requested to be transmitted.	
Parameters (in- out):	PduInfoPtr	Contains a pointer to a buffer (SduDataPtr) to where the SDU data shall be copied, and the available buffer size in SduLengh. On return, the service will indicate the length of the copied SDU data in SduLength.	
Parameters (out):	None		
Return value:		E_OK: SDU has been copied and SduLength indicates the number of copied bytes. E_NOT_OK: No SDU data has been copied. PduInfoPtr must not be used since it may contain a NULL pointer or point to invalid data.	
	Within this API, the upper layer module (called module) shall check whether the available data fits into the buffer size reported by PduInfoPtr->SduLength. If it fits, it shall copy its data into the buffer provided by PduInfoPtr->SduDataPtr and update the length of the actual copied data in PduInfoPtr->SduLength. If not, it returns E_NOT_OK without changing PduInfoPtr.		

| (SRS_Com_02045)

[SWS_Com_00647] [Within the function Com_TriggerTransmit, the AUTOSAR COM module shall copy the contents of its I-PDU transmit buffer to the L-PDU buffer given by PduInfoPtr->SduDataPtr and update PduInfoPtr->SduLength with length of the copied data accordingly.] (SRS_Com_02045)

[SWS_Com_00869] [In case the given PduInfoPtr->SduLength is smaller than the actual PDU-length, Com_TriggerTransmit shall not copy any data and return E_NOT_OK.| (SRS_Com_02045)

[SWS_Com_00475] [Com_TriggerTransmit is not interfered by the I-PDU minimum delay time and shall not reset the minimum delay timer, see ECUC_Com_00181.] (SRS_Com_02045)

The function Com_TriggerTransmit behaves independent of the configured transmission mode.



Use case: This function is used e.g. by the LIN Master for sending out a LIN frame. In this case, the trigger transmit can be initiated by the Master schedule table itself or a received LIN header. The FlexRay Interface for requesting PDUs to be sent in static part (synchronous to the FlexRay global time) also uses this function.

Once the PDU Router has successfully sent the I-PDU, the PDU Router will call Com_TxConfirmation.

Caveats of Com_TriggerTransmit: This function might be called in interrupt context.

8.4.2 Com_RxIndication

[SWS_Com_00123] [

<u>[0110_00111_0011</u>				
Service name:	Com_RxIn	Com_RxIndication		
Syntax:	void Com_RxIndication(PduldType RxPduld, const PduInfoType* PduInfoPtr)			
Service ID[hex]:	0x42			
Sync/Async:	Synchrono	Synchronous		
Reentrancy:	Reentrant	Reentrant for different Pdulds. Non reentrant for the same Pduld.		
	RxPduld	ID of the received PDU.		
Parameters (in):		Contains the length (SduLength) of the received PDU, a pointer to a buffer (SduDataPtr) containing the PDU, and the MetaData related to this PDU.		
Parameters (in-	None			
out):				
Parameters (out):	None			
Return value:	None			
Description:	Indication of	of a received PDU from a lower layer communication interface module.		

| (SRS_Com_02043)

Caveats of Com_RxIndication: This function might be called in interrupt context.

8.4.3 Com TpRxIndication

[SWS_Com_00650] [

Service name:	Com_TpRxIndication		
Syntax:	void Com_TpRxIndication(PduIdType id, Std_ReturnType result)		
Service ID[hex]:	0x45		
Sync/Async:	Synchronous		
Reentrancy:	Reentrant		
Parameters (in):	id Identification of the received I-PDU.		
rarameters (m).	result	Result of the reception.	
Parameters (in-	None		
out):			
Parameters (out):	None		



Return value:	None
Description:	Called after an I-PDU has been received via the TP API, the result indicates whe-
	ther the transmission was successful or not.

| (SRS_Com_02095)

Caveats of Com_TpRxIndication: This function might be called in interrupt context.

8.4.4 Com_TxConfirmation

[SWS_Com_00124] [

<u>[0110_0000</u>			
Service name:	Com_TxConfirmation		
Syntax:	void Com_TxConfirmation(PduIdType TxPduId, Std_ReturnType result)		
Service ID[hex]:	0x40		
Sync/Async:	Synchronous		
Reentrancy:	Reentrant for d	ifferent Pdulds. Non reentrant for the same Pduld.	
	TxPduld	ID of the PDU that has been transmitted.	
Parameters (in):	result	E_OK: The PDU was transmitted. E_NOT_OK: Transmission of the PDU failed.	
Parameters (in-	None		
out):			
Parameters (out):	None		
Return value:	None		
Description:	The lower layer communication interface module confirms the transmission of a PDU, or the failure to transmit a PDU.		

| (SRS_Com_02044)

Caveats of Com_TxConfirmation: This function might be called in interrupt context, e.g. from transmit interrupt.

8.4.5 Com_TpTxConfirmation

[SWS_Com_00725] [

Service name:	Com_TpTxConfirmation			
Syntax:	void Com_TpTxConfirmation(PduIdType id, Std_ReturnType result)			
Service ID[hex]:	0x48			
Sync/Async:	Synchronou	IS		
Reentrancy:	Reentrant	Reentrant		
Parameters (in):	id	Identification of the transmitted I-PDU.		
Parameters (III).	result	Result of the transmission of the I-PDU.		
Parameters (in-	None			
out):				
Parameters (out):	None			
Return value:	None			
Description:	This function is called after the I-PDU has been transmitted on its network, the result indicates whether the transmission was successful or not.			

| (SRS_Com_02095)



8.4.6 Com_StartOfReception

[SWS_Com_00691] [

[3W3_C0III_008		
Service name:	Com_StartOfRecepti	
Syntax:	BufReq_ReturnType PduIdType id, const PduInfoType PduLengthType T PduLengthType* b)	oSduLength,
Service ID[hex]:	0x46	
Sync/Async:	Synchronous	
Reentrancy:	Reentrant	
	id	Identification of the I-PDU.
Parameters (in):	info	Pointer to a PduInfoType structure containing the payload data (without protocol information) and payload length of the first frame or single frame of a transport protocol I-PDU reception, and the MetaData related to this PDU. If neither first/single frame data nor MetaData are available, this parameter is set to NULL_PTR.
	TpSduLength	Total length of the N-SDU to be received.
Parameters (in- out):	None	
Parameters (out):		Available receive buffer in the receiving module. This parameter will be used to compute the Block Size (BS) in the transport protocol module.
Return value:		BUFREQ_OK: Connection has been accepted. bufferSizePtr indicates the available receive buffer; reception is continued. If no buffer of the requested size is available, a receive buffer size of 0 shall be indicated by bufferSizePtr. BUFREQ_E_NOT_OK: Connection has been rejected; reception is aborted. bufferSizePtr remains unchanged. BUFREQ_E_OVFL: No buffer of the required length can be provided; reception is aborted. bufferSizePtr remains unchanged.
Description:	fragmented into mult consist of a single N-	d at the start of receiving an N-SDU. The N-SDU might be iple N-PDUs (FF with one or more following CFs) or might PDU (SF). The service shall provide the currently available when invoked with TpSduLength equal to 0.

I (SRS Com 02095)

[SWS_Com_00654] [If ComRxPduld corresponds to a large I-PDU and TpSduLength is greater than the configured length of this I-PDU then the function Com_StartOfReception shall return BUFREQ_E_OVFL.] (SRS_Com_02095)

[SWS_Com_00655] [If ComRxPduId corresponds to a dynamic length I-PDU and TpSduLength is greater than the configured maximum length of this I-PDU then the function Com_StartOfReception shall return BUFREQ_E_OVFL.] (SRS_Com_02095)

[SWS_Com_00657] [If the internal AUTOSAR COM module's buffer is currently not locked and the parameter TpSduLength does not exceed the (maximum) expected length, the function Com_StartOfReception shall write the complete size of the AUTOSAR COM module's internal I-PDU buffer of the I-PDU with handle ComRxPduld to the position given by RxBufferSizePtr.] (SRS_Com_02095)



[SWS_Com_00721] [Com_StartOfReception shall return BUFREQ_E_NOT_OK, in case ComRxPduId refers to a stopped I-PDU.] (SRS_Com_02095)

[SWS_Com_00818] [In case Com_StartOfReception returnes BUFREQ_E_NOT_-OK or BUFREQ_E_OVFL, the AUTOSAR COM module shall not expect a call to Com_TpRxIndication and hence shall not lock its internal buffer.] (SRS_Com_02095)

[SWS_Com_00874] [In case Com_StartOfReception is called with TpSduLength equal to 0, the AUTOSAR COM module shall return the configured (maximum) length of this I-PDU via the bufferSizePtr.| (SRS_Com_02095)

A TpSduLength equal to 0 indicates an unknown message length.

8.4.7 Com_CopyRxData

[SWS Com 00692] [

[2002_Com_006	92]	
Service name:	Com_CopyRxData	
Syntax:	BufReq_ReturnType PduldType id, const PdulnfoType PduLengthType* b)	e* info,
Service ID[hex]:	0x44	
Sync/Async:	Synchronous	
Reentrancy:	Reentrant	
	id	Identification of the received I-PDU.
Parameters (in):		Provides the source buffer (SduDataPtr) and the number of bytes to be copied (SduLength). An SduLength of 0 can be used to query the current amount of available buffer in the upper layer module. In this case, the SduDataPtr may be a NULL_PTR.
Parameters (in- out):	None	
Parameters (out):	bufferSizePtr	Available receive buffer after data has been copied.
Return value:	,	BUFREQ_OK: Data copied successfully BUFREQ_E_NOT_OK: Data was not copied because an error occurred.
Description:	This function is called to provide the received data of an I-PDU segment (N-PDU) to the upper layer. Each call to this function provides the next part of the I-PDU data. The size of the remaining data is written to the position indicated by bufferSizePtr.	

I (SRS Com 02095)

Caveats of Com_CopyRxData: This function might be called in interrupt context. Therefore, data consistency must be ensured.

[SWS_Com_00782] [Com_CopyRxData shall copy no data and return BU-FREQ_E_NOT_OK in case the given Pduld refers to a stopped I-PDU.] (SRS_Com_00218)



8.4.8 Com_CopyTxData

[SWS_Com_00693] [

[<u>SWS_Com_0069</u>	93]	
Service name:	Com_CopyTxData	
Syntax:	BufReq_ReturnType of PduldType id, const PdulnfoType RetryInfoType* retryPduLengthType* av)	* info, y,
Service ID[hex]:	0x43	
Sync/Async:	Synchronous	
Reentrancy:	Reentrant	
recontrainey?	id	Identification of the transmitted I-PDU.
Parameters (in):	retry	Provides the destination buffer (SduDataPtr) and the number of bytes to be copied (SduLength). If not enough transmit data is available, no data is copied by the upper layer module and BUFREQ_E_BUSY is returned. The lower layer module may retry the call. An SduLength of 0 can be used to indicate state changes in the retry parameter or to query the current amount of available data in the upper layer module. In this case, the SduDataPtr may be a NULL_PTR. This parameter is used to acknowledge transmitted data or to retransmit data after transmission problems. If the retry parameter is a NULL_PTR, it indicates that the transmit data can be removed from the buffer immediately after it has been copied. Otherwise, the retry parameter must point to a valid RetryInfoType element. If TpDataState indicates TP_CONFPENDING, the previously copied data must remain in the TP buffer to be available for error recovery. TP_DATACONF indicates that all data that has been copied before this call is confirmed and can be removed from the TP buffer. Data copied by this API call is excluded and will be confirmed later. TP_DATARETRY indicates that this API call shall copy previously copied data in order to recover from an error. In
		this case TxTpDataCnt specifies the offset in bytes from the current data copy position.
Parameters (in- out):	None	partonic data copy position.
Parameters (out):		Indicates the remaining number of bytes that are available in the upper layer module's Tx buffer. availableDataPtr can be used by TP modules that support dynamic payload lengths (e.g. FrIsoTp) to determine the size of the following CFs.
Return value:		BUFREQ_OK: Data has been copied to the transmit buffer completely as requested. BUFREQ_E_BUSY: Request could not be fulfilled, because the required amount of Tx data is not available. The lower layer module may retry this call later on. No data has been copied. BUFREQ_E_NOT_OK: Data has not been copied. Request failed.
Description:	This function is called	to acquire the transmit data of an I-PDU segment (N-PDU). ion provides the next part of the I-PDU data unless retry-



>TpDataState is TP_DATARETRY. In this case the function restarts to copy the
data beginning at the offset from the current position indicated by retry-
>TxTpDataCnt. The size of the remaining data is written to the position indicated
by availableDataPtr.

| (SRS_Com_02095)

Caveats of Com_CopyTxData: This function might be called in interrupt context.

[SWS_Com_00783] [Com_CopyTxData shall copy no data and return BU-FREQ_E_NOT_OK in case the given Pduld refers to a stopped I-PDU.] (SRS_Com_00218)

8.5 Scheduled Functions

8.5.1 Com_MainFunctionRx

[SWS_Com_00398] [

Service name:	Com_MainFunctionRx
Syntax:	void Com_MainFunctionRx(
	void)
Service ID[hex]:	0x18
	This function performs the processing of the AUTOSAR COM module's receive processing that are not directly handled within the COM's functions invoked by the PDU-R, for example Com_RxIndication.

(SRS_BSW_00425, SRS_BSW_00432)

[SWS_Com_00664] [A call to Com_MainFunctionRx shall simply return if the AUTOSAR COM module was not previously initialized with a call to Com_Init.] (SRS_BSW_00425)

Configuration of Com_MainFunctionRx: see ECUC_Com_00186.

8.5.2 Com MainFunctionTx

[SWS_Com_00399] [

Service name:	Com_MainFunctionTx
Syntax:	void Com_MainFunctionTx(
	void
Service ID[hex]:	0x19
	This function performs the processing of the AUTOSAR COM module's transmission activities that are not directly handled within the COM's function invoked by the RTE, for example Com_SendSignal.

(SRS_BSW_00425, SRS_BSW_00432)

[SWS_Com_00665] [A call to Com_MainFunctionTx shall simply return if the AUTOSAR COM module was not previously initialized with a call to Com_Init.] (SRS_BSW_00425)



Configuration: see ECUC_Com_00186.

8.5.3 Com_MainFunctionRouteSignals

[SWS_Com_00400] [

Service name:	Com_MainFunctionRouteSignals
Syntax:	void Com_MainFunctionRouteSignals(
	void
Service ID[hex]:	0x1a
Description:	Calls the signal gateway part of the AUTOSAR COM module to forward received
	signals to be routed.

(SRS_BSW_00425, SRS_BSW_00432)

[SWS_Com_00666] [A call to Com_MainFunctionRouteSignals shall simply return if the AUTOSAR COM module was not previously initialized with a call to Com_Init.] (SRS_BSW_00425)

Caveats of Com_MainFunctionRouteSignals:

- The time between two consecutive calls (perhaps the related task/thread cycle) affects directly the signal gateway latency.
- The insertion of this call is necessary for decoupling receive interrupts and signal gateway tasks.
- Normally a cyclic task/ thread to call this function is configured. The cycle of this task/thread directly affects the latency of the signal gateway.

8.6 Expected Interfaces

8.6.1 Mandatory Interfaces

This chapter defines all interfaces, which are required to fulfill the core functionality of the module.

[SWS_Com_00669] [

API function	Description
PduR_ComTransmit	Requests transmission of a PDU.

(SRS_BSW_00384)

8.6.2 Optional Interfaces

This chapter defines all interfaces that are required to fulfill an optional functionality of the module.

[SWS_Com_00670] [

API function	Description
Det_ReportError	Service to report development errors.
Det_ReportRuntimeError	Service to report runtime errors. If a callout has been configured then this callout shall be called.



PduR_ComCancelTransmit	Requests cancellation of an ongoing transmission of a PDU in a lower
	layer communication module.

| (SRS_BSW_00384)

The associated configuration parameter for API function Det_ReportError is ComConfigurationUseDet (ECUC_Com_00141).

The API function PduR_ComCancelTransmit must be included if at least one I-PDU has configured ComIPduCancellationSupport to TRUE, see ECUC Com 00709.

8.6.3 Configurable Interfaces

8.6.3.1 Callback/ Notification Functions

Caveats of configurable interfaces: A callback routine runs either on interrupt level or on task level. Thus, the OS restrictions of usage of system functions for interrupt service routines as well as for tasks apply.

[SWS_Com_00468] [

Service name:	Com_CbkTxAck
Syntax:	void Com_CbkTxAck(
	void
Sync/Async:	Synchronous
Reentrancy:	don't care
Parameters (in):	None
Parameters (in-	None
out):	
Parameters (out):	None
Return value:	None
Description:	This callback represents notification class 2 of [17]. It is called immediately after
	successful transmission of the I-PDU containing the message.

(SRS BSW 00359, SRS BSW 00360)

Com_CbkTxAck is called on sender side only. It can be configured for signals and signal groups.

Com_CbkTxAck corresponds to Rte_COMCbkTAck_<sn> or Rte_COMCbkTAck_<sg> respectively.

The callback function name must be configured by ComNotification (ECUC_Com_00498).

[SWS Com 00491] [

<u> </u>	
Service name:	Com_CbkTxErr
Syntax:	void Com_CbkTxErr(void)



Sync/Async:	Synchronous
Reentrancy:	don't care
Parameters (in):	None
Parameters (in-	None
out):	
Parameters (out):	None
Return value:	None
Description:	This callback corresponds to notification class 4 of [17]. It is called in case the
	transmission is not possible because the corresponding I-PDU group is stopped.

| (SRS_BSW_00359, SRS_BSW_00360)

Com_CbkTxErr is called on sender side only. This callback function corresponds to Rte_COMCbkTErr_<sn> or Rte_COMCbkTErr_<sg> respectively.

The callback function name must be configured by ComErrorNotification (ECUC Com 00499).

[SWS_Com_00554] [

Service name:	Com_CbkTxTOut
Syntax:	void Com_CbkTxTOut(
	void
Sync/Async:	Synchronous
Reentrancy:	don't care
Parameters (in):	None
Parameters (in-	None
out):	
Parameters (out):	None
Return value:	None
Description:	This callback corresponds to notification class 4 of [17]. It is called immediately
	after a message transmission error has been detected by the deadline monitoring
	mechanism.

(SRS_BSW_00359, SRS_BSW_00360)

Com_CbkTxTOut is called on sender side only. It can be configured for signals and signal groups.

This callback function corresponds to Rte_COMCbkTxTOut_<sn> or Rte_COMCbkTxTOut_<sg> respectively.

The callback function name must be configured by ComTimeoutNotification (ECUC_Com_00552).

[SWS_Com_00555] [

Service name:	Com_CbkRxAck
Syntax:	void Com_CbkRxAck(
	void
Sync/Async:	Synchronous
Reentrancy:	don't care
Parameters (in):	None
Parameters (in-	None
out):	



Parameters (out):	None
Return value:	None
Description:	This callback represents notification class 1 of [17]. It is called immediately after
	the message has been stored in the receiving message object.

| (SRS_BSW_00359, SRS_BSW_00360)

Com_CbkRxAck is called on receiver side only. It can be configured for signals and signal groups.

Com_CbkRxAck corresponds to Rte_COMCbk_<sn> or Rte_COMCbk_<sg> respectively.

The callback function name must be configured by ComNotification (ECUC_Com_00498).

[SWS Com 00556] [

<u>.0110_00000</u> .	
Service name:	Com_CbkRxTOut
Syntax:	void Com_CbkRxTOut(
	void
Sync/Async:	Synchronous
Reentrancy:	don't care
Parameters (in):	None
Parameters (in-	None
out):	
Parameters (out):	None
Return value:	None
Description:	This callback corresponds to notification class 3 of [17]. It is called immediately
	after a message reception error has been detected by the deadline monitoring
	mechanism.
	ODO DOW

(SRS_BSW_00359, SRS_BSW_00360)

Com_CbkRxTOut is called on receiver side only. It can be configured for signals and signal groups.

This callback function corresponds to Rte_COMCbkRxTOut_<sn> or Rte_COMCbkRxTOut_<sg> respectively.

The callback function name must be configured by ComTimeoutNotification (see ECUC Com 00552).

[SWS_Com_00536] [

Service name:	Com_CbkInv
Syntax:	void Com_CbkInv(
	void
Sync/Async:	Synchronous
Reentrancy:	don't care
Parameters (in):	None
Parameters (in-	None
out):	
Parameters (out):	None



Return value:	None
Description:	This callback function corresponds to SWS_Com_00680. It is called after recepti-
	on of an invalid signal or signal group respectively.

| (SRS_BSW_00359, SRS_BSW_00360, SRS_Com_02079)

Com_CbkInv is called on receiver side only. It can be configured for signals, group signals and signal groups.

This callback function corresponds to Rte_COMCbkInv_<sn> (for signals and group signals) and Rte_COMCbkInv_<sg> respectively.

The callback function name must be configured by ComInvalidNotification (ECUC_Com_00315).

[SWS Com 00726] [

<u> </u>	<u>~1 </u>			
Service name:	Com_CbkCounterErr			
Syntax:	void Com_CbkCounterErr(PduIdType ComPduId, uint8 ExpectedCounter, uint8 ReceivedCounter)			
Sync/Async:	Synchronous			
Reentrancy:	don' t care	don' t care		
	ComPduld	ld of the I-PDU for that a counter mismatch was detected		
Parameters (in):	ExpectedCounter	The expected counter value		
	ReceivedCounter	The received counter value		
Parameters (in- out):	None			
Parameters (out):	None			
Return value:	None			
Description:	This function is called immediately, if the AUTOSAR COM module receives an I-PDU counter that differs from the expected one.			

I (SRS Com 02102)

Com_CbkCounterErr is called on receiver side only. It can be configured per I-PDU counter. The callback function name must be configured by ComIPduCounterError-Notification (ECUC_Com_00003).

8.6.3.2 I-PDU Callout Functions

As stated in SWS_Com_00013 Network-order message callout and CPU-order message callout are not supported by the AUTOSAR COM module. The only callout method supported by the AUTOSAR COM module therefore is the I-PDU callout. The AUTOSAR COM module supports I-PDU callouts on sender and on receiver side.

As specified in OSEK COM, if the I-PDU callout returns false the I-PDU will not be processed any further.

[SWS Com 00700] [

Service name:	Com_RxlpduCallout
Syntax:	boolean Com_RxlpduCallout(



	PduldType Pduld, const PdulnfoType* PdulnfoPtr		
)		
Service ID[hex]:	0x2A		
Sync/Async:	Synchrono	us	
Reentrancy:	don't care		
	Pduld	ID of the received I-PDU.	
Parameters (in):		Contains the length (SduLength) of the received I-PDU and a pointer to the data of the I-PDU (SduDataPtr).	
Parameters (in- out):	None		
Parameters (out):	None		
Return value:	ooolean true: I-PDU will be processed normal false: I-PDU will not be processed any further		
Description:	The I-PDU callout on receiver side can be configured to implement user-defined receive filtering mechanisms.		

J (SRS_Com_02037)

The callout function name must be configured by ComIPduCallout (ECUC_Com_00387).

[SWS_Com_00816] [The AUTOSAR COM module shall forward all data of the received I-PDU (i.e. the complete I-PDU as provided by the PduR) in the Com_RxlpduCallout.] (SRS_Com_02037)

[SWS_Com_00346] [

<u>[0110_00111_003</u> -	. •]			
Service name:	Com_Txlpdu	Com_TxlpduCallout		
Syntax:	boolean Com_TxIpduCallout(PduIdType PduId, PduInfoType* PduInfoPtr)			
Service ID[hex]:	0x29			
Sync/Async:	Synchronous	3		
Reentrancy:	don't care			
Parameters (in):	Pduld	ID of the transmitted I-PDU.		
Parameters (in- out):	PduInfoPtr Contains the length (SduLength) of the transmitted I-PDU and a pointer to the data of the I-PDU (SduDataPtr).			
Parameters (out):	None			
Return value:	boolean true: I-PDU will be processed normal false: I-PDU will not be processed any further			
	The I-PDU callout on sender side can be configured for example to implement user-defined transmission filtering or user-defined pre-transmission-processing of the outgoing I-PDU.			

| (SRS_Com_02037)

The callout function name must be configured either by ComIPduCallout (ECUC_Com_00387) or by ComIPduTriggerTransmitCallout (ECUC_Com_00765).

The AUTOSAR COM module implements no means to detect or prevent possible recursions that may occur when I-PDUs are triggered by actions within an I-PDU callout. It is solely in the responsibility of the implementer of an I-PDU callout and the system integrator that unwanted or endless chains of I-PDU callouts are avoided.



[SWS_Com_00381] [The AUTOSAR COM module shall not support that other AUTOSAR COM module's APIs than Com_TriggerIPDUSend, Com_TriggerIPDUSend-WithMetaData, Com_SendSignal and Com_SendSignalGroup can be called out of an I-PDU callout.] (SRS_Com_02037)

[SWS_Com_00766] [In case a ComIPduTriggerTransmitCallout is configured for an I-PDU and the I-PDU is started, the AUTOSAR COM module shall invoke this I-PDU callout within every execution of Com_TriggerTransmit for this I-PDU.] (SRS_Com_02037)

[SWS_Com_00395] [When Com_TriggerTransmit is called, the AUTOSAR COM module shall ignore the return value from the ComIPduTriggerTransmitCallout.] (SRS_Com_02037)

[SWS_Com_00719] [In case a ComlPduCallout is configured for an I-PDU with ComlPduDirection configured to *SEND*, the AUTOSAR COM module shall invoke this I-PDU callout diretly before the I-PDU is transmitted via PduR_ComTransmit.] (SRS_Com_02037)

For TP I-PDUs, the I-PDU callout functions are handled similar to the I-PDU callout functions of normal I-PDUs and are supported both on transmitter and receiver side. Note that for example the requirement SWS_Com_00719 does not consider the configured ComIPduType.

[SWS_Com_00720] [When a large I-PDU is received successfully via the TP interface, the I-PDU callout shall take place within the invocation of Com_TpRxIndication.] (SRS_Com_02095)

[SWS_Com_00839] [When the I-PDU callout in context of Com_TpRxIndication returns false, the I-PDU shall be considered as incorrectly received and therefore all included signals shall be treated exactly like invalidated signals. That is, the AUTOSAR COM module shall execute all configured ComDataInvalidActions for all included signals and signal groups.] (SRS_Com_02095)



9 Sequence Diagrams

A sequence diagram of the underlying OSEK COM communication stack can be found in [17].

9.1 Interface between the AUTOSAR COM Module and the PDU Router

The following chart shows the communication between the AUTOSAR COM module and the PDU Router.



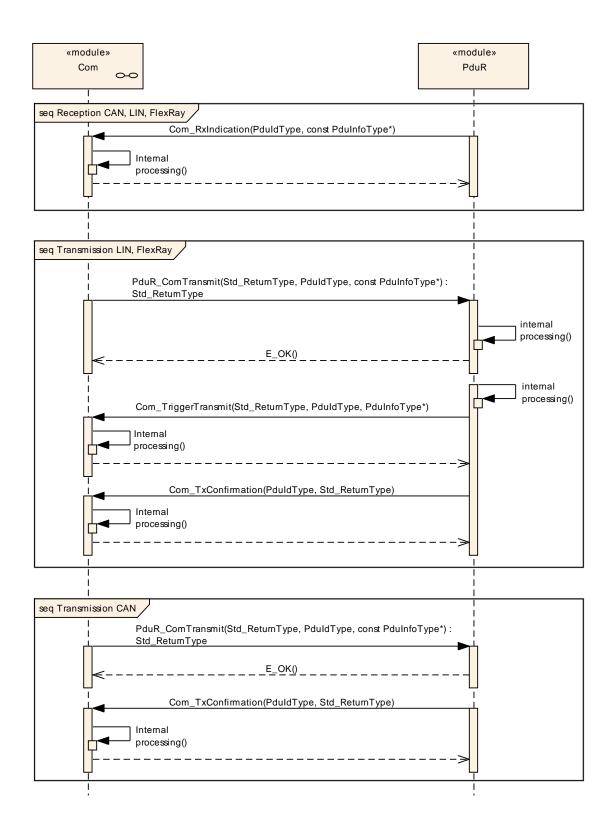


Figure 7: Interactions between the AUTOSAR COM module and the PDU router



9.2 Confirmation Handling between the PDU Router, the AUTOSAR COM Module and the RTE

The following chart shows the confirmation handling with respect to the two different IPDU-processing modes. (See also Chapter 7.3.5.4.)

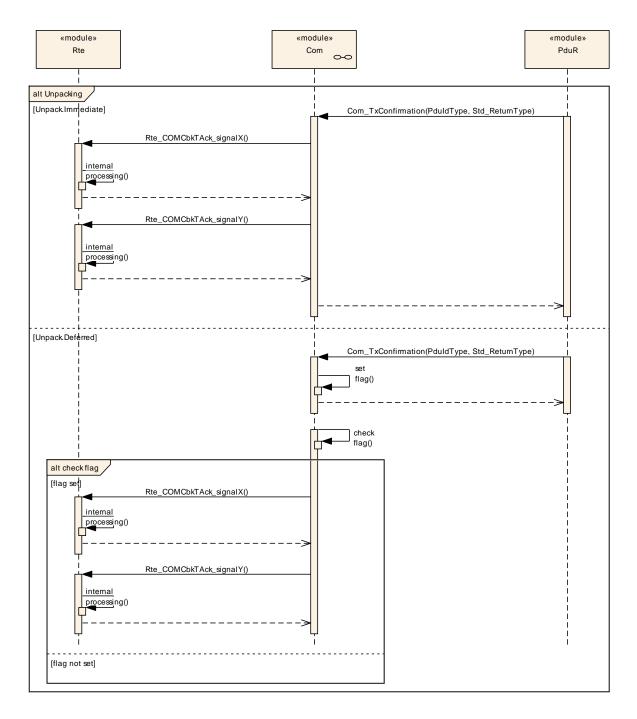


Figure 8: Confirmation handling between the PDU Router, the AUTOSAR COM module and the RTE



9.3 Indication Handling between the PDU Router, the AUTOSAR COM Module and the RTE

The following chart shows the indication handling with respect to the two different unpacking modes. (See also Chapter 7.3.5.4.)

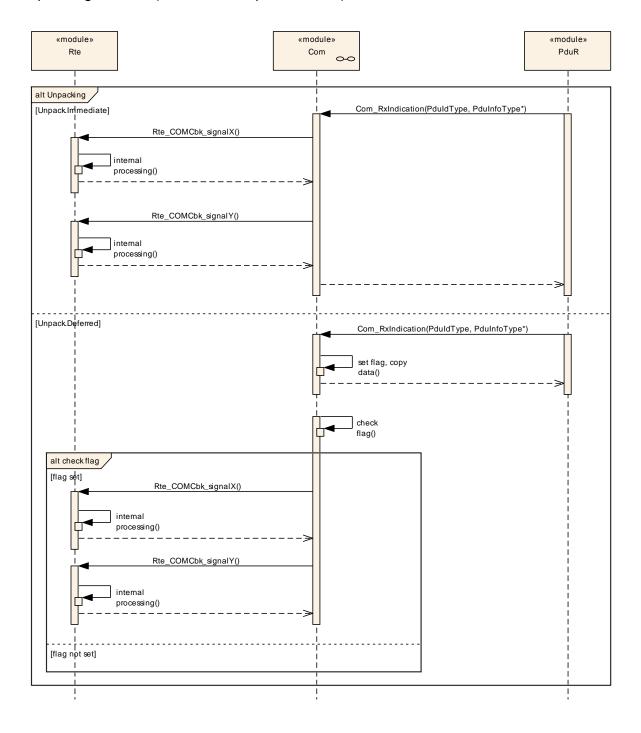


Figure 9: Indication handling between the PDU Router, the AUTOSAR COM module and the RTE



10 Configuration Specification

10.1 Containers and Configuration Parameters

The following chapters summarize all configuration parameters. The detailed meanings of the parameters are described in Chapter 7 and Chapter 8.

[SWS_Com_00006] [The configuration parameters are based on [18]. All parameters shall be stored in an XML format.] (SRS_Com_02040)



10.1.1 Configuration of the AUTOSAR COM Module

For an overview of the AUTOSAR COM module's configuration, see Figure 10.

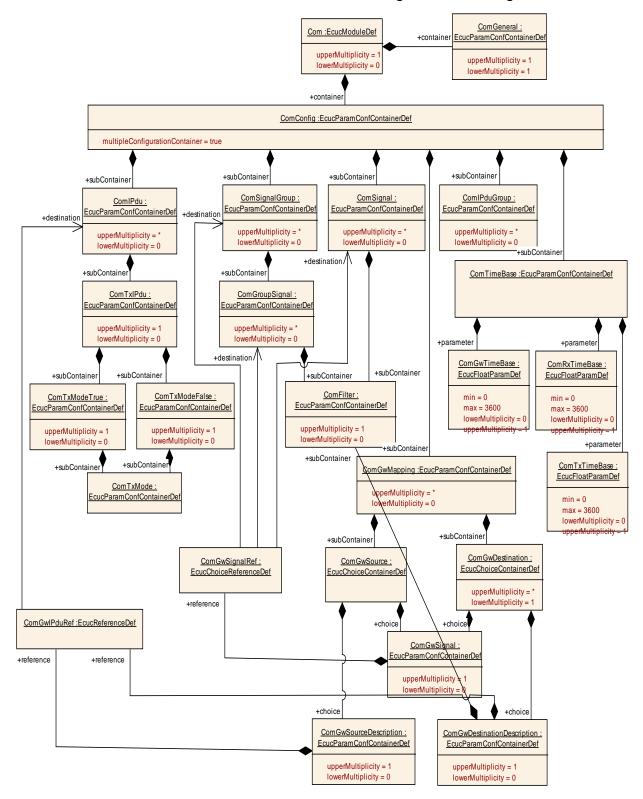


Figure 10: The AUTOSAR COM module's Configuration Overview



10.1.2 Com

SWS Item	ECUC_Com_00540:
Module Name	Com
Module Description	Configuration of the AUTOSAR COM module.
Post-Build Variant Support	true
Supported Config Variants	VARIANT-LINK-TIME, VARIANT-POST-BUILD, VARIANT-PRE-COMPILE

Included Containers				
Container Name	Multiplicity	Scope / Dependency		
ComConfig	1	This container contains the configuration parameters and sub containers of the AUTOSAR COM module. This container is a MultipleConfigurationContainer, i.e. this container and its subcontainers exist once per configuration set.		
ComGeneral		Contains the general configuration parameters of the AUTO-SAR COM module.		

10.1.3 ComGeneral

SWS Item	ECUC_Com_00541:
Container Name	ComGeneral
Description	Contains the general configuration parameters of the module.
Configuration Parameters	

SWS Item	ECUC_Com_10000:			
Name	ComCancellationSupport			
Description	This parameter enables/disa	ıbles t	the cancellation feature:	
	true: enabled false: disabled			
Multiplicity	01			
Туре	EcucBooleanParamDef			
Default value	true			
Post-Build Variant Multipli- city	false			
Post-Build Variant Value	false			
Multiplicity Configuration	Pre-compile time	Χ	All Variants	
Class	Link time			
	Post-build time			
Value Configuration Class	Pre-compile time	Χ	All Variants	
	Link time			
	Post-build time			
Scope / Dependency	scope: local			

SWS Item	ECUC_Com_00141:
Name	ComConfigurationUseDet
Description	The error hook shall contain code to call the Det. If this parameter is configured COM_DEV_ERROR_DETECT shall be set to ON as output of the configuration tool. (as input for the source code).
Multiplicity	01



Туре	EcucBooleanParamDef		
Default value			
Post-Build Variant Multipli- city	false		
Post-Build Variant Value	false		
Multiplicity Configuration	Pre-compile time	Χ	All Variants
Class	Link time		
	Post-build time		
Value Configuration Class	Pre-compile time	Χ	All Variants
	Link time		
	Post-build time		
Scope / Dependency	scope: local		

SWS Item	ECUC_Com_00788:		
Name	ComEnableMDTForCyclicTransmission		
Description	Enables globally for the whole Com module the minimum delay time monitoring for cyclic and repeated transmissions (ComTxModeModeMode=PERIODIC or ComTxModeMode=MIXED for the cyclic transmissions, ComTxModeNumberOfRepetitions > 0 for repeated transmissions).		
Multiplicity	01		
Туре	EcucBooleanParamDef		
Default value	true		
Post-Build Variant Multipli- city	false		
Post-Build Variant Value	false		
Multiplicity Configuration	Pre-compile time	Χ	All Variants
Class	Link time	1	
	Post-build time		
Value Configuration Class	Pre-compile time X All Variants		
	Link time		
	Post-build time		
Scope / Dependency	scope: local		

SWS Item	ECUC_Com_10002:			
Name	ComEnableSignalGroupArra	уАрі		
Description	Activate/Deactivate the signal group array access APIs (Com_SendSignalGroupArray, Com_ReceiveSignalGroupArray).			
	true: signal group array acce	ss AF	Pls activated	
	false: signal group array acc	ess A	PIs deactivated	
Multiplicity	1	1		
Туре	EcucBooleanParamDef			
Default value	false			
Post-Build Variant Value	false			
Value Configuration Class	Pre-compile time X All Variants			
	Link time			
	Post-build time			
Scope / Dependency	scope: local			

SWS Item	ECUC_Com_10004:
Name	ComMetaDataSupport
	This parameter enables/disables the support of meta-data feature including the API Com_TriggerIPDUSendWithMetaData. true: enabled



	false: disabled		
Multiplicity	D1		
Туре	EcucBooleanParamDef		
Default value	false		
Post-Build Variant Multipli- city	false		
Post-Build Variant Value	false		
Multiplicity Configuration	Pre-compile time	Χ	All Variants
Class	Link time		
	Post-build time		
Value Configuration Class	Pre-compile time	Χ	All Variants
	Link time		
	Post-build time		
Scope / Dependency	scope: local		

SWS Item	ECUC_Com_00780:			
Name	ComRetryFailedTransmitRequests			
	If this Parameter is set to true, retry of failed transmission requests is enabled. If this Parameter is not present, the default value is assumed.			
Multiplicity	01			
Туре	EcucBooleanParamDef			
Default value	false			
Post-Build Variant Multipli- city	false			
Post-Build Variant Value	false			
Multiplicity Configuration	Pre-compile time	Χ	All Variants	
Class	Link time			
	Post-build time			
Value Configuration Class	Pre-compile time	Χ	All Variants	
	Link time			
	Post-build time			
Scope / Dependency	scope: local			

SWS Item	ECUC_Com_00710:			
Name	ComSupportedIPduGroups	ComSupportedIPduGroups		
Description	Defines the maximum numb	er of s	supported I-PDU groups.	
Multiplicity	1			
Туре	EcucIntegerParamDef			
Range	0 65535	0 65535		
Default value				
Post-Build Variant Value	false			
Value Configuration Class	Pre-compile time	Χ	All Variants	
	Link time			
	Post-build time			
Scope / Dependency	scope: local			

SWS Item	ECUC_Com_10001:
Name	ComUserCbkHeaderFile
Description	Defines the header files for callback functions which shall be included by the COM module.
Multiplicity	0*
Туре	EcucStringParamDef
Default value	
maxLength	32
minLength	1
regularExpression	



Post-Build Variant Multipli- city	false		
Post-Build Variant Value	false		
Multiplicity Configuration	Pre-compile time	Χ	All Variants
Class	Link time		
	Post-build time		
Value Configuration Class	Pre-compile time	Χ	All Variants
	Link time		
	Post-build time		
Scope / Dependency	scope: local		

SWS Item	ECUC_Com_00438:			
Name	ComVersionInfoApi			
Description	Activate/Deactivate the version information API (Com_GetVersionInfo).			
	True: version information API activated False: version information API deactivated			
Multiplicity	1			
Туре	EcucBooleanParamDef			
Default value	false			
Post-Build Variant Value	false			
Value Configuration Class	Pre-compile time	Χ	All Variants	
	Link time			
	Post-build time			
Scope / Dependency	scope: local			

10.1.4 ComConfig

SWS Item	ECUC_Com_00337:
Container Name	ComConfig
	This container contains the configuration parameters and sub containers of the AUTOSAR COM module.
Configuration Parameters	

SWS Item	ECUC_Com_00783:			
Name	ComDataMemSize			
	Size of internal Com data in units of bytes (static memory allocation) - memory required by post-build configuration must be smaller than this constant. This parameter is needed only in case of post-build loadable implementation using static memory allocation.			
Multiplicity	01			
Туре	EcucIntegerParamDef			
Range	0 18446744073709551615			
Default value				
Post-Build Variant Multipli- city	false			
Post-Build Variant Value	false			
Multiplicity Configuration	Pre-compile timeXVARIANT-PRE-COMPILELink timeXVARIANT-LINK-TIME, VARIANT-POS			
Class				



			BUILD
	Post-build time	I	
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE
	Link time	Χ	VARIANT-LINK-TIME, VARIANT-POST-
			BUILD
	Post-build time	1	
Scope / Dependency	scope: local		

SWS Item	ECUC_Com_00782 :			
Name	ComMaxIPduCnt			
Description	Maximum number of IPdus. This parameter is needed only in case of post- build loadable implementation using static memory allocation.			
	01	ni usii	ig static memory anocation.	
Туре	EcucIntegerParamDef			
Range	0 18446744073709551615			
Default value				
Post-Build Variant Multipli- city	false			
Post-Build Variant Value	false	false		
Multiplicity Configuration	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
Class	Link time	Х	VARIANT-LINK-TIME, VARIANT-POST- BUILD	
	Post-build time			
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
	Link time	Х	VARIANT-LINK-TIME, VARIANT-POST- BUILD	
	Post-build time			
Scope / Dependency	scope: local	·		

Included Containers		
Container Name	Multiplicity	Scope / Dependency
ComGwMapping		Each instance of this container defines one mapping of the integrated Signal Gateway.
ComIPdu	0*	See ECUC_Com_00340, if there is no ComIpdu container included no IPDUs are defined. In this case no communication via the AUTOSAR COM module is possible.
ComIPduGroup	0*	See ECUC_Com_00341, if there is no ComIPduGroup container included then no IPDU group is defined. In this case no communication via the AUTOSAR COM module is possible.
ComSignal		See ECUC_Com_00344, if there is no ComSignal container included no single signals are defined.
ComSignalGroup		See ECUC_Com_00345, if there is no ComSignalGroup container included no signal groups are defined.
ComTimeBase	1	Contains the timebase parameters for Tx, Rx and routing.

10.1.5 ComTimeBase

SWS Item	ECUC_Com_00730 :	
Container Name	ComTimeBase	
Description Contains the timebase parameters for Tx, Rx and routing.		
Configuration Parameters		



SWS Item	ECUC_Com_00729 :				
Name	ComGwTimeBase				
	The period between successive calls to Com_MainFunctionRouteSignals in seconds. This parameter may be used by the COM generator to transform the values of the signal gateway related timing configuration parameters of the COM module to internal implementation specific counter or tick values. The COM module's internal timing handling is implementation specific.				
	The COM module (generator) might rely on the fact that Com_MainFunctionRouteSignals is scheduled according to the value configured here.				
Multiplicity	01				
Туре	EcucFloatParamDef				
Range]0 INF[
Default value					
Post-Build Variant Multipli- city	false				
Post-Build Variant Value	false				
Multiplicity Configuration	Pre-compile time	Х	VARIANT-PRE-COMPILE		
Class	Link time	Х	VARIANT-LINK-TIME, VARIANT-POST- BUILD		
	Post-build time				
Value Configuration Class	Pre-compile time	Х	VARIANT-PRE-COMPILE		
	Link time	Х	VARIANT-LINK-TIME, VARIANT-POST- BUILD		
	Post-build time				
Scope / Dependency	scope: ECU				

SWS Item	ECUC_Com_00728 :			
Name	ComRxTimeBase			
Description	The period between successive calls to Com_MainFunctionRx in seconds. This parameter may be used by the COM generator to transform the values of the reception related timing configuration parameters of the COM module to internal implementation specific counter or tick values. The COM module's internal timing handling is implementation specific. The COM module (generator) may rely on the fact that Com_MainFunctionRx is scheduled according to the value configured here.			
Multiplicity	01			
Туре	EcucFloatParamDef			
Range]0 INF[
Default value				
Post-Build Variant Multipli- city	false			
Post-Build Variant Value	false			
Multiplicity Configuration	Pre-compile time	X	VARIANT-PRE-COMPILE	
Class	Link time	X	VARIANT-LINK-TIME, VARIANT-POST- BUILD	
	Post-build time			
Value Configuration Class	Pre-compile time	Х	VARIANT-PRE-COMPILE	
	Link time	Х	VARIANT-LINK-TIME, VARIANT-POST- BUILD	
	Post-build time			
Scope / Dependency	scope: ECU			



SWS Item	ECUC_Com_00186 :			
Name	ComTxTimeBase			
Description	The period between successive calls to Com_MainFunctionTx in seconds. This parameter may be used by the COM generator to transform the values of the transmission related timing configuration parameters of the COM module to internal implementation specific counter or tick values. The COM module's internal timing handling is implementation specific.			
	The COM module (generato Com_MainFunctionTx is sch		y rely on the fact that ad according to the value configured here.	
Multiplicity	01			
Туре	EcucFloatParamDef			
Range]0 INF[
Default value				
Post-Build Variant Multipli- city	false			
Post-Build Variant Value	false			
Multiplicity Configuration	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
Class	Link time	Х	VARIANT-LINK-TIME, VARIANT-POST- BUILD	
	Post-build time			
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
	Link time	Х	VARIANT-LINK-TIME, VARIANT-POST- BUILD	
	Post-build time			
Scope / Dependency	scope: ECU			

10.1.6 ComFilter

SWS Item	ECUC_Com_00339:
Container Name	ComFilter
Description	This container contains the configuration parameters of the AUTOSAR COM module's Filters.
	Note: On sender side the container is used to specify the transmission mode conditions.
Configuration Parameters	

SWS Item	ECUC_Com_00146:			
Name	ComFilterAlgorithm			
Description	The range of values is specified in the [17] specification, chapter 2.2.2, Reception Filtering.			
Multiplicity	1	1		
Туре	EcucEnumerationParamDef	EcucEnumerationParamDef		
Range	ALWAYS			
	MASKED_NEW_DIFFERS_MASKED_OLD			
	MASKED_NEW_DIFFERS_X	MASKED_NEW_DIFFERS_X		
	MASKED_NEW_EQUALS_X			
	NEVER			
	NEW_IS_OUTSIDE			



	NEW_IS_WITHIN		
	ONE_EVERY_N	ŀ	
Post-Build Vari- ant Value	false		
Value Configura-	Pre-compile time	Χ	VARIANT-PRE-COMPILE
tion Class	Link time		VARIANT-LINK-TIME, VARIANT-POST-BUILD
	Post-build time	ŀ	
Scope / Depen- dency	scope: local		

SWS Item	ECUC_Com_00235:			
Name	ComFilterMask			
Description	The name of this attribute corresponds to the parameter name in the [17] specification of Reception Filtering.			
Multiplicity	01			
Туре	EcucIntegerParamDef			
Range	-2147483648 4294967295			
Default value				
Post-Build Variant Multipli- city	false			
Post-Build Variant Value	false			
Multiplicity Configuration	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
Class	Link time	Х	VARIANT-LINK-TIME, VARIANT-POST- BUILD	
	Post-build time			
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
	Link time	Х	VARIANT-LINK-TIME, VARIANT-POST- BUILD	
	Post-build time			
Scope / Dependency	scope: local			

SWS Item	ECUC Com 00317:			
Name	ComFilterMax			
Description	The name of this attribute corresponds to the parameter name in the [17] specification of Reception Filtering.			
Multiplicity	01			
Туре	EcucIntegerParamDef			
Range	-2147483648 4294967295			
Default value				
Post-Build Variant Multiplicity	false			
Post-Build Variant Value	false			
Multiplicity Configuration	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
Class	Link time	Х	VARIANT-LINK-TIME, VARIANT-POST- BUILD	
	Post-build time	1		
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
	Link time	X	VARIANT-LINK-TIME, VARIANT-POST- BUILD	
	Post-build time	1		
Scope / Dependency	scope: local			

SWS Item	ECUC_Com_00318:



Name	ComFilterMin			
Description	The name of this attribute corresponds to the parameter name in the [17] specification of Reception Filtering.			
Multiplicity	01			
Туре	EcucIntegerParamDef			
Range	-2147483648 4294967295			
Default value				
Post-Build Variant Multipli- city	false			
Post-Build Variant Value	false			
Multiplicity Configuration	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
Class	Link time	Х	VARIANT-LINK-TIME, VARIANT-POST- BUILD	
	Post-build time			
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
	Link time	Х	VARIANT-LINK-TIME, VARIANT-POST- BUILD	
	Post-build time			
Scope / Dependency	scope: local			

SWS Item	ECUC_Com_00313:	ECUC_Com_00313:			
Name	ComFilterOffset				
Description	The name of this attribute corresponds to the parameter name in the [17] specification of Reception Filtering.				
	Range = 0(ComFilterPeriod	d-1)			
Multiplicity	01				
Туре	EcucIntegerParamDef				
Range	0 4294967294				
Default value					
Post-Build Variant Multipli- city	false				
Post-Build Variant Value	false				
Multiplicity Configuration	Pre-compile time	Χ	VARIANT-PRE-COMPILE		
Class	Link time	Х	VARIANT-LINK-TIME, VARIANT-POST- BUILD		
	Post-build time				
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE		
	Link time	Х	VARIANT-LINK-TIME, VARIANT-POST- BUILD		
	Post-build time				
Scope / Dependency	scope: local dependency: ECUC_Com_00312				

SWS Item	ECUC_Com_00312:	
Name	ComFilterPeriod	
Description	This parameter defines the period of the ComFilterAlgorithm O-NE_EVERY_N.	
Multiplicity	01	
Туре	EcucIntegerParamDef	
Range	2 4294967295	
Default value		
Post-Build Variant Multipli- city	true	
Post-Build Variant Value	true	



Multiplicity Configuration	Pre-compile time	Χ	VARIANT-PRE-COMPILE
Class	Link time	Χ	VARIANT-LINK-TIME
	Post-build time	Χ	VARIANT-POST-BUILD
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE
	Link time	Χ	VARIANT-LINK-TIME
	Post-build time	Χ	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

SWS Item	ECUC_Com_00147 :		
Name	ComFilterX		
Description	The name of this attribute corresponds to the parameter name in the [17] specification of Reception Filtering.		
Multiplicity	01		
Туре	EcucIntegerParamDef		
Range	-2147483648 4294967295		
Default value			
Post-Build Variant Multipli- city	false		
Post-Build Variant Value	false		
Multiplicity Configuration	Pre-compile time	Χ	VARIANT-PRE-COMPILE
Class	Link time	X	VARIANT-LINK-TIME, VARIANT-POST- BUILD
	Post-build time		
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE
	Link time	Х	VARIANT-LINK-TIME, VARIANT-POST- BUILD
	Post-build time		
Scope / Dependency	scope: local		

10.1.7 ComIPdu

SWS Item	ECUC_Com_00340:		
Container Name	ComIPdu		
Description	Contains the configuration parameters of the AUTOSAR COM module's I-PDUs.		
Post-Build Variant Multipli- city	true		
Multiplicity Configuration	Pre-compile time X VARIANT-PRE-COMPILE		
Class	Link time X VARIANT-LINK-TIME		
	Post-build time X VARIANT-POST-BUILD		
Configuration Parameters			

SWS Item	ECUC_Com_00387:
Name	ComIPduCallout
Description	This parameter defines the existence and the name of a callout function for the corresponding I-PDU. If this parameter is omitted no I-PDU callout shall take place for the corresponding I-PDU.
Multiplicity	01
Туре	EcucFunctionNameDef
Default value	



maxLength				
minLength				
regularExpression				
Post-Build Variant Multipli- city	false			
Post-Build Variant Value	false			
Multiplicity Configuration	Pre-compile time	Χ	All Variants	
Class	Link time			
	Post-build time			
Value Configuration Class	Pre-compile time	Χ	All Variants	
	Link time			
	Post-build time			
Scope / Dependency	scope: local	•		

SWS Item	ECUC_Com_00709:			
Name	ComIPduCancellationSupport			
Description	Defines for I-PDUs with ComIPduType NORMAL: If the underlying IF-			
	modul supports cancellation	of trai	nsmit requests.	
	Defines for I-PDUs with ComIPduType TP: If the underlying TP-module			
	supports RX and TX cancella	ation o	of ongoing requests.	
Multiplicity	01			
Туре	EcucBooleanParamDef			
Default value	false			
Post-Build Variant Multipli-	li- _{truo}			
city	li de			
	true			
Multiplicity Configuration	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
Class	Link time			
	Post-build time	Χ	VARIANT-POST-BUILD	
Value Configuration Class	Pre-compile time X VARIANT-PRE-COMPILE			
	Link time Post-build time X VARIANT-POST-BUILD			
Scope / Dependency	scope: ECU			
	dependency: This parameter shall not be set to true if ComCancellation-			
	Support is set to false			

SWS Item	ECUC_Com_00493 :		
Name	ComIPduDirection		
Description	The direction defines if this I-PDU, and therefore the contributing signals and signal groups, shall be sent or received.		
Multiplicity	1		
Туре	EcucEnumerationParamDef		
Range	RECEIVE		
	SEND		
Post-Build Variant Value	false		
Value Configurati-	Pre-compile time	Χ	VARIANT-PRE-COMPILE
on Class	Link time		VARIANT-LINK-TIME, VARIANT- POST-BUILD
	Post-build time		
dency	scope: local dependency: If configured to Sent also a see ECUC_Com_00496	Cor	mTxlpdu container shall be included,

SWS Item	ECUC_Com_00175:



Name	ComIPduHandleId				
Description	The numerical value used as the ID of this I-PDU. The ComIPduHandleId is required by the API calls Com_RxIndication, Com_TpRxIndication, Com_StartOfReception and Com_CopyRxData to receive I-PDUs from the PduR (ComIP-duDirection: Receive), as well as the PduId passed to an Rx-I-PDU-callout. For Tx-I-PDUs (ComIPduDirection: Send), this handle Id is used for the APIs calls Com_TxConfirmation, Com_TriggerTransmit, Com_TriggerIPDUSend or Com_TriggerIPDUSendWithMetaData, Com_CopyTxData and Com_TpTxConfirmation to transmit respectively confirm transmissions of I-PDUs, as well as the PduId passed to the Tx-I-PDU-callout configured with ComIPduCallout and/or ComIPduTrigger-TransmitCallout.				
Multiplicity	01				
Туре		oolic l	Name generated for this parameter)		
Range	0 65535				
Default value					
Post-Build Variant Multipli- city	false				
Post-Build Variant Value	false				
	Pre-compile time	Χ	All Variants		
Class	Link time				
	Post-build time				
Value Configuration Class	Pre-compile time	Χ	All Variants		
	Link time				
	Post-build time				
Scope / Dependency	scope: ECU				

SWS Item	ECUC_Com_00119:			
Name	ComIPduSignalProcessing			
Description	For the definition of the two modes Imm	ediate	e and Deferred.	
Multiplicity	1	1		
Туре	EcucEnumerationParamDef			
Range	DEFERRED signal indication / confirmations are defer- red for example to a cyclic task			
		the signal indications / confirmations are performed in Com_RxIndication/ Com_TxConfirmation		
Post-Build Variant Value	ITTI I A			
Value Configurati-	Pre-compile time	ΧV	/ARIANT-PRE-COMPILE	
on Class	Link time	ΧV	/ARIANT-LINK-TIME	
	Post-build time	X VARIANT-POST-BUILD		
Scope / Depen- dency	scope: local			

SWS Item	ECUC_Com_00765:	
Name	ComIPduTriggerTransmitCallout	
	If there is a trigger transmit callout defined for this I-PDU this parameter contains the name of the callout function.	
Multiplicity	01	
Туре	EcucFunctionNameDef	
Default value		
maxLength		
minLength		
regularExpression		
Post-Build Variant Multipli- city	false	



Post-Build Variant Value	false		
Multiplicity Configuration	Pre-compile time	Χ	All Variants
Class	Link time		
	Post-build time		
Value Configuration Class	Pre-compile time	Χ	All Variants
	Link time		
	Post-build time		
Scope / Dependency	scope: local		

SWS Item	ECUC_Com_00761 :	
Name	ComIPduType	
Description		nat can be sent unfragmented or if this is a
	large I-PDU that shall be sent via the Tra	Insport Protocol of the underlying bus.
Multiplicity	1	
Туре	EcucEnumerationParamDef	
Range	NORMAL	sent or received via normal L-PDU
	TP	sent or received via TP
Post-Build Variant Value	true	
Value Configurati-	Pre-compile time	X VARIANT-PRE-COMPILE
on Class	Link time	X VARIANT-LINK-TIME
	Post-build time	X VARIANT-POST-BUILD
Scope / Depen- dency	scope: local	

SWS Item	ECUC_Com_00206:					
Name	ComIPduGroupRef					
Description	Reference to the I-PDU grou	ps thi	s I-PDU belongs to.			
Multiplicity	0*					
Туре	Reference to [ComIPduGro	nb]				
Post-Build Variant Multipli- city	true					
Post-Build Variant Value	true	true				
Multiplicity Configuration	Pre-compile time	Pre-compile time X VARIANT-PRE-COMPILE				
Class	Link time	Link time X VARIANT-LINK-TIME				
	Post-build time X VARIANT-POST-BUILD					
Value Configuration Class	Pre-compile time X VARIANT-PRE-COMPILE					
	Link timeXVARIANT-LINK-TIMEPost-build timeXVARIANT-POST-BUILD					
Scope / Dependency	scope: local					

SWS Item	ECUC_Com_00519:				
Name	ComIPduSignalGroupRef	ComIPduSignalGroupRef			
Description	References to all signal grou	ps co	ntained in this I-Pdu		
Multiplicity	0*				
Туре	Reference to [ComSignalGr	oup]			
Post-Build Variant Multipli- city	true				
Post-Build Variant Value	true				
Multiplicity Configuration	Pre-compile time X VARIANT-PRE-COMPILE				
Class	Link time X VARIANT-LINK-TIME				
	Post-build time	Χ	VARIANT-POST-BUILD		
Value Configuration Class	Pre-compile time X VARIANT-PRE-COMPILE				
	Link time X VARIANT-LINK-TIME				
	Post-build time X VARIANT-POST-BUILD				
Scope / Dependency	scope: local				



SWS Item	ECUC_Com_00518:			
Name	ComIPduSignalRef			
Description	References to all signals con	tained	d in this I-PDU.	
Multiplicity	0*			
Туре	Reference to [ComSignal]			
Post-Build Variant Multipli- city	true			
Post-Build Variant Value	true	true		
Multiplicity Configuration	Pre-compile time X VARIANT-PRE-COMPILE			
Class	Link time X VARIANT-LINK-TIME			
	Post-build time	Χ	VARIANT-POST-BUILD	
Value Configuration Class	Pre-compile time X VARIANT-PRE-COMPILE			
	Link time X VARIANT-LINK-TIME			
	Post-build time X VARIANT-POST-BUILD			
Scope / Dependency	scope: local			

SWS Item	ECUC_Com_00711:			
Name	ComPduldRef			
Description	Reference to the "global" Pdu structure to allow harmonization of handle IDs in the COM-Stack.			
Multiplicity	1			
Туре	Reference to [Pdu]			
Post-Build Variant Value	false			
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
	Link time X VARIANT-LINK-TIME, VARIANT-POST-BUILD			
	Post-build time			
Scope / Dependency				

Included Containers		
Container Name	Multiplicity	Scope / Dependency
ComIPduCounter		This optional container contains the configuration parameters of PDU Counter.
ComIPduReplication		This optional container contains the information needed for each I-PDU replicated.
ComTxIPdu	() 1	This container must be included if COM_IPDU_DIRECTION is configured to SEND.

[SWS_Com_00497] [A ComTxIPdu container must be included if ComIPduDirection is configured to SEND.] (SRS_BSW_00167)

10.1.8 ComIPduCounter

SWS Item	ECUC_Com_00592:
Container Name	ComIPduCounter
II)escription	This optional container contains the configuration parameters of PDU Counter.
Configuration Parameters	

SWS Item	ECUC_Com_00003:
Name	ComIPduCounterErrorNotification
Description	Name of Com_CbkCounterErr callback function to be called. If this



	parameter is omitted no I-PDU counter mismatch notification shall take place.				
Multiplicity	01				
Туре	EcucFunctionNameDef				
Default value					
maxLength					
minLength					
regularExpression		•			
Post-Build Variant Multipli- city	false				
Post-Build Variant Value	false	false			
Multiplicity Configuration	Pre-compile time	Χ	VARIANT-PRE-COMPILE		
Class	Link time	Χ	VARIANT-LINK-TIME, VARIANT-POST- BUILD		
	Post-build time				
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE		
	Link time	Х	VARIANT-LINK-TIME, VARIANT-POST- BUILD		
	Post-build time				
Scope / Dependency	scope: local				

SWS Item	ECUC_Com_00593 :			
Name	ComIPduCounterSize			
Description	Size of PDU Counter expres	sed in	bits	
Multiplicity	1			
Туре	EcucIntegerParamDef			
Range	1 8			
Default value				
Post-Build Variant Value	false			
Value Configuration Class	Pre-compile time	Pre-compile time X All Variants		
	Link time			
	Post-build time			
Scope / Dependency	scope: local		·	

SWS Item	ECUC_Com_00594:		
Name	ComIPduCounterStartPosition		
Description	Position of PDU counter expressed in bits from start position of data content		
	of I-PDU (SDU). Note that PDU counter is not allowed to cross a byte border. The parameter ComIPduCounterStartPosition shall define the bit0 of the		
	first byte like in little endian byte order.		
Multiplicity	1		
Туре	EcucIntegerParamDef		
Range	0 4294967295		
Default value			
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time X All Variants		
	Link time		
	Post-build time		
Scope / Dependency	scope: local		

SWS Item	ECUC_Com_00595:
Name	ComIPduCounterThreshold



Description	Threshold value of I-PDU counter algorithm, see ECUC_Com_00590.		
Multiplicity	01		
Туре	EcucIntegerParamDef		
Range	0 255		
Default value	0		
Post-Build Variant Multipli- city	false		
Post-Build Variant Value	false		
Multiplicity Configuration	Pre-compile time	Χ	All Variants
Class	Link time		
	Post-build time		
Value Configuration Class	Pre-compile time	Χ	All Variants
	Link time		
	Post-build time		
Scope / Dependency	scope: local		

10.1.9 ComIPduReplication

SWS Item	ECUC_Com_00599:
Container Name	ComIPduReplication
II Jescrintion	This optional container contains the information needed for each I-PDU replicated.
Configuration Parameters	

SWS Item	ECUC_Com_00600:			
Name	ComIPduReplicationQuorum			
Description	The number of identical I-PD	The number of identical I-PDUs needed for successful voting.		
Multiplicity	1			
Туре	EcucIntegerParamDef			
Range	13			
Default value				
Post-Build Variant Value	false			
Value Configuration Class	Pre-compile time	Χ	All Variants	
	Link time	Link time		
	Post-build time			
Scope / Dependency	scope: local			
	dependency: This value must be less or equal to the multiplicity of (Co-mlPduReplicaRef + 1).			

SWS Item	ECUC_Com_00601:			
Name	ComIPduReplicaRef			
Description	Reference to replicas PduR	PDUs	of this IPDU.	
Multiplicity	12	12		
Туре	Reference to [Pdu]			
Post-Build Variant Multipli- city	false			
Post-Build Variant Value	false	false		
Multiplicity Configuration	Pre-compile time	Χ	All Variants	
Class	Link time			
	Post-build time			
Value Configuration Class	Pre-compile time	Χ	All Variants	



	Link time	
	Post-build time	
Scope / Dependency	scope: ECU	

No books to al Ocatobacas	
No Included Containers	
no morado Comamoro	

10.1.10 ComTxIPdu

SWS Item	ECUC_Com_00496:
Container Name	ComTxIPdu
	This container contains additional transmission related configuration parameters of the AUTOSAR COM module's I-PDUs.
Configuration Parameters	

SWS Item	ECUC_Com_10005:			
Name	ComMetaDataDefault			
Description	In case an I-PDU refers to a globally configured MetaDataType and no explicit meta data is given for a send request (e.g. by using Com_TriggerIPDUSendWithMetaData), the AUTOSAR COM module uses this configured default meta data for sending.			
	The configured string shall be interpreted as a decimal representation of the characters separated by blanks, e.g. "97 98 100" means a string "abd", where the char "a" is in byte 0(lowest address), "b" is in byte 1, and "d" is in byte 2 and (highest address).			
Multiplicity	01			
Туре	EcucStringParamDef			
Default value				
maxLength				
minLength				
regularExpression				
Post-Build Variant Multipli- city	false			
Post-Build Variant Value	false			
Multiplicity Configuration	Pre-compile time	Χ	All Variants	
Class	Link time			
	Post-build time			
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
	Link time		VARIANT-LINK-TIME, VARIANT-POST- BUILD	
	Post-build time			
Scope / Dependency	scope: ECU dependency: This parameter shall only be used in case ComMetaDataSupport is enabled. The length of the default meta data shall match the globally configured MetaDataLength of this I-PDU.			

SWS Item	ECUC_Com_00181:
Name	ComMinimumDelayTime
Description	Defines the Minimum Delay Time (MDT) between successive transmissions of this I-PDU in seconds. The MDT is independent of the possible different transmission modes. There is only one minimum delay time parameter for one I-PDU. The minimum delay timer is not reset by changing the transmission mode. Hence, it is not allowed to violate the minimum delay time by transmission mode changes. It is not possible to monitor the



	minimum delay time for I-PDUs that are requested using the			
	Com_TriggerTransmit API.			
Multiplicity	01			
Туре	EcucFloatParamDef			
Range	[0 3600]			
Default value				
Post-Build Variant Multipli-	truo			
city	uue			
Post-Build Variant Value	true			
Multiplicity Configuration	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
Class	Link time	Χ	VARIANT-LINK-TIME	
	Post-build time	Χ	VARIANT-POST-BUILD	
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
	Link time	Χ	VARIANT-LINK-TIME	
	Post-build time	Χ	VARIANT-POST-BUILD	
Scope / Dependency	scope: local			

SWS Item	ECUC_Com_00576:			
Name	ComTxIPduClearUpdateBit			
Description	Defines when the update-bits of signals or signal groups, contained in this I-PDU, will be cleared.			
Multiplicity	01			
Туре	EcucEnumerationParamDef			
Range	Confirmation	The update-bits are cleared when the transmission of the I-PDU was confirmed. In case of Direct/N-Times transmission mode the update bits will be cleared with respect to the confirmation behaviour of ECUC_Com_00305.		
	Transmit	The update-bits are cleared directly after the invocation of PduR_ComTransmit.		
	TriggerTransmit	The update-bits are cleared after the I-PDU was fetched via Com_TriggerTransmit.		
Post-Build Variant Multiplicity				
Post-Build Variant Value	true			
Multiplicity Confi-	Pre-compile time	X VARIANT-PRE-COMPILE		
guration Class	Link time	X VARIANT-LINK-TIME		
	Post-build time	X VARIANT-POST-BUILD		
Value Configurati-	Pre-compile time	X VARIANT-PRE-COMPILE		
on Class	Link time	X VARIANT-LINK-TIME		
	Post-build time	X VARIANT-POST-BUILD		
Scope / Depen- dency	scope: local			

SWS Item	ECUC_Com_00017:			
Name	ComTxIPduUnusedAreasDefault			
Description	The AUTOSAR COM module fills not used areas of an I-PDU with this byte pattern. This attribute is mandatory to avoid undefined behaviour. This byte-pattern will be repeated throughout the I-PDU before any init-values or update-bits were set.			
Multiplicity	1			
Туре	EcucIntegerParamDef			
Range	0 255			
Default value				
Post-Build Variant Value	false			



Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE
	Link time		VARIANT-LINK-TIME, VARIANT-POST- BUILD
	Post-build time		
Scope / Dependency	scope: local		

Included Containers		
Container Name	Multiplicity	Scope / Dependency
ComTxModeFalse	01	The referenced transmission mode object that is used when the filtering state for this I-PDU evaluates to false. The default is transmission mode None.
ComTxModeTrue	0.1	The referenced transmission mode object that is used when the filtering state for this I-PDU evaluates to true.

10.1.11 ComlPduGroup

SWS Item	ECUC_Com_00341:		
Container Name	ComIPduGroup		
Description	Contains the configuration parameters of the AUTOSAR COM module's I-PDU groups.		
Post-Build Variant Multipli- city	true		
Multiplicity Configuration	Pre-compile time X VARIANT-PRE-COMPILE		
Class	Link time X VARIANT-LINK-TIME		
	Post-build time X VARIANT-POST-BUILD		
Configuration Parameters			

SWS Item	ECUC_Com_00184:			
Name	ComIPduGroupHandleId			
Description	The numerical value used as the ID of this I-PDU Group.			
	The ComIPduGroupHandleId is required by the API calls to start and stop I-PDU Groups. Range: 0 (ComSupportedIPduGroups-1)			
Multiplicity	1		,	
Туре	EcucIntegerParamDef (Symbolic Name generated for this parameter)			
Range	0 65535			
Default value				
Post-Build Variant Value	false			
Value Configuration Class	Pre-compile time X All Variants			
	Link time			
	Post-build time			
Scope / Dependency	scope: ECU			

SWS Item	ECUC_Com_00185:
Name	ComIPduGroupGroupRef
	References to all I-PDU groups that includes this I-PDU group. If this reference is omitted this I-PDU group does not belong to another I-PDU group.
Multiplicity	0*
Туре	Reference to [ComIPduGroup]
Post-Build Variant Multipli- city	true



Post-Build Variant Value	true			
Multiplicity Configuration	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
Class	Link time	Χ	VARIANT-LINK-TIME	
	Post-build time	Χ	VARIANT-POST-BUILD	
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
	Link time	Χ	VARIANT-LINK-TIME	
	Post-build time	Χ	VARIANT-POST-BUILD	
Scope / Dependency	scope: local			

10.1.12 ComSignal

SWS Item	ECUC_Com_00344:			
Container Name	ComSignal			
Description	Contains the configuration parameters of the AUTOSAR COM module's signals.			
Post-Build Variant Multipli- city	true			
Multiplicity Configuration	Pre-compile time X VARIANT-PRE-COMPILE			
Class	Link time X VARIANT-LINK-TIME			
	Post-build time X VARIANT-POST-BUILD			
Configuration Parameters				

SWS Item	ECUC_Com_00259:			
Name	ComBitPosition			
Description	Starting position within the I-PDU. This parameter refers to the position in the I-PDU and not in the shadow buffer. If the endianness conversion is configured to Opaque the parameter ComBitPosition shall define the bit0 of the first byte like in little endian byte order			
Multiplicity	1			
Туре	EcucIntegerParamDef			
Range	0 4294967295			
Default value				
Post-Build Variant Value	true			
Value Configuration Class	Pre-compile time X VARIANT-PRE-COMPILE			
	Link time X VARIANT-LINK-TIME			
	Post-build time X VARIANT-POST-BUILD			
Scope / Dependency	scope: local			

SWS Item	ECUC_Com_00158:			
Name	ComBitSize			
Description	Size in bits, for integer signal types. For ComSignalType UINT8_N and UINT8_DYN			
	the size shall be configured by ComSignalLength. For ComSignalTypes FLOAT32 and FLOAT64 the size is already defined by the signal type and therefore may be omitted.			
Multiplicity	01			
Туре	EcucIntegerParamDef			
Range	0 64			
Default value				



Post-Build Variant Multipli- city	true			
Post-Build Variant Value	true			
Multiplicity Configuration	n Pre-compile time X VARIANT-PRE-COMPILE			
Class	Link time	Χ	VARIANT-LINK-TIME	
	Post-build time	Χ	VARIANT-POST-BUILD	
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
	Link time	Χ	VARIANT-LINK-TIME	
	Post-build time	Χ	VARIANT-POST-BUILD	
Scope / Dependency	scope: local			

SWS Item	ECUC_Com_00314 :		
Name	ComDataInvalidAction		
Description	This parameter defines the action performed upon reception of an invalid signal.		
	Relating to signal groups the action in ca	se i	f one of the included signals is an
	invalid signal.		
	If Replace is used the ComSignalInitValu	ıe w	vill be used for the replacement.
Multiplicity	01		
Туре	EcucEnumerationParamDef		
Range	NOTIFY	ŀ	
	REPLACE	Lite	ral for DataInvalidAction
Post-Build Variant Multiplicity			
Post-Build Variant Value	false		
	Pre-compile time	Χ	VARIANT-PRE-COMPILE
guration Class	Link time		VARIANT-LINK-TIME, VARIANT- POST-BUILD
	Post-build time		
Value Configurati-	Pre-compile time	Χ	VARIANT-PRE-COMPILE
on Class	Link time	Χ	VARIANT-LINK-TIME, VARIANT-
			POST-BUILD
	Post-build time	-	
Scope / Depen- dency	scope: local		

SWS Item	ECUC_Com_00499:		
Name	ComErrorNotification		
•	Only valid on sender side: Name of Com_CbkTxErr callback function to be called.		
	If this parameter is omitted n	o erro	r notification shall take place.
Multiplicity	01		
Туре	EcucFunctionNameDef		
Default value			
maxLength			
minLength			
regularExpression			
Post-Build Variant Multipli- city	false		
Post-Build Variant Value	false		
Multiplicity Configuration	Pre-compile time	Χ	VARIANT-PRE-COMPILE
Class	Link time	Х	VARIANT-LINK-TIME, VARIANT-POST- BUILD
	Post-build time		



Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE
	Link time		VARIANT-LINK-TIME, VARIANT-POST- BUILD
	Post-build time	-	
Scope / Dependency	scope: local		

SWS Item	ECUC_Com_00183 :		
Name	ComFirstTimeout		
Description	Defines the length of the first deadline monitoring timeout period in seconds. This timeout is used immediately after start (or restart) of the deadline monitoring service. The timeout period of the successive periods is configured by ECUC_Com_00263.		
Multiplicity	01		
Туре	EcucFloatParamDef		
Range	[0 3600]		
Default value			
Post-Build Variant Multipli- city	true		
Post-Build Variant Value	true		
Multiplicity Configuration	Pre-compile time	Χ	VARIANT-PRE-COMPILE
Class	Link time	Χ	VARIANT-LINK-TIME
	Post-build time	Χ	VARIANT-POST-BUILD
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE
	Link time	Χ	VARIANT-LINK-TIME
	Post-build time	Χ	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

SWS Item	ECUC Com 00165:		
Name	ComHandleId		
Description	The numerical value used as the ID.		
	This ID identifies signals and signal groups in the COM APIs using Com_SignalIdType or Com_SignalGroupIdType parameter respectively.		
Multiplicity	01		
Туре	EcucIntegerParamDef (Symbolic Name generated for this parameter)		
Range	0 65535		
Default value			
Post-Build Variant Multipli- city	false		
Post-Build Variant Value	false		
Multiplicity Configuration	Pre-compile time	Χ	All Variants
Class	Link time		
	Post-build time		
Value Configuration Class	Pre-compile time	Χ	All Variants
	Link time		
	Post-build time		
Scope / Dependency	scope: ECU		

SWS Item	ECUC_Com_00811 :
Name	ComInitialValueOnly
Description	This parameter defines that the respective signal's initial value shall be put into the respective PDU but there will not be any update of the value through the RTE. Thus the Com implementation does not need to expect any API calls for this signal (group).
Multiplicity	01
Туре	EcucBooleanParamDef



Default value	false		
Post-Build Variant Multipli- city	false		
Post-Build Variant Value	false		
Multiplicity Configuration	Pre-compile time	Χ	VARIANT-PRE-COMPILE
Class	Link time	Χ	VARIANT-LINK-TIME, VARIANT-POST-
			BUILD
	Post-build time		
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE
	Link time	Χ	VARIANT-LINK-TIME, VARIANT-POST-
			BUILD
	Post-build time		
Scope / Dependency	scope: local		

SWS Item	ECUC_Com_00315:		
Name	ComInvalidNotification		
Description	Only valid on receiver side: Name of Com_CbkInv callback function to be called. Name of the function which notifies the RTE about the reception of an invalidated signal/ signal group. Only applicable if ComDataInvalidAction is configured to NOTIFY.		
Multiplicity	01		
Туре	EcucFunctionNameDef		
Default value			
maxLength			
minLength			
regularExpression			
Post-Build Variant Multipli- city	false		
Post-Build Variant Value	false		
Multiplicity Configuration	Pre-compile time	Х	VARIANT-PRE-COMPILE
Class	Link time	Х	VARIANT-LINK-TIME, VARIANT-POST- BUILD
	Post-build time		
Value Configuration Class	Pre-compile time	Х	VARIANT-PRE-COMPILE
	Link time	Х	VARIANT-LINK-TIME, VARIANT-POST- BUILD
	Post-build time		
Scope / Dependency	scope: local		

SWS Item	ECUC_Com_00498:		
Name	ComNotification		
Description	On sender side: Name of Com_CbkTxAck callback function to be called.		
	On receiver side: Name of Com_CbkRxAck callback function to be called. If this parameter is omitted no notification shall take place.		
Multiplicity	01		
Туре	EcucFunctionNameDef		
Default value			
maxLength			
minLength			
regularExpression			
Post-Build Variant Multipli- city	false		
Post-Build Variant Value	false		
Multiplicity Configuration	Pre-compile time X VARIANT-PRE-COMPILE		



Class	Link time		VARIANT-LINK-TIME, VARIANT-POST- BUILD
	Post-build time	-	
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE
	Link time		VARIANT-LINK-TIME, VARIANT-POST- BUILD
	Post-build time	-	
Scope / Dependency	scope: local		

SWS Item	ECUC Com 00412:			
	ComRxDataTimeoutAction			
Description	This parameter defines the action performed upon expiration of the reception dead- line monitoring timer.			
Multiplicity	01			
Туре	EcucEnumerationParamDef			
Range	NONE	no r	eplacement shall take place	
	REPLACE signals shall be replaced by their ComSi			
	SUBSTITUTE	tSubstitutionValue		
Post-Build Variant Multiplicity				
Post-Build Variant Value	false			
Multiplicity Confi-	Pre-compile time	Х	VARIANT-PRE-COMPILE	
guration Class	Link time	Х	VARIANT-LINK-TIME, VARIANT-POST- BUILD	
	Post-build time			
Value Configurati-	Pre-compile time	Х	VARIANT-PRE-COMPILE	
on Class	Link time	Х	VARIANT-LINK-TIME, VARIANT-POST- BUILD	
	Post-build time			
Scope / Depen- dency	scope: local			

SWS Item	ECUC_Com_00391:
Name	ComSignalDataInvalidValue
Description	Defines the data invalid value of the signal.
	In case the ComSignalType is UINT8, UINT16, UINT32, UINT64, SINT8, SINT16, SINT32, SINT64 the string shall be interpreted as defined in the chapter Integer Type in the AUTOSAR EcuC specification. In case the ComSignalType is FLOAT32, FLOAT64 the string shall be interpreted as defined in the chapter Float Type in the AUTOSAR EcuC specification. In case the ComSignalType is BOOLEAN the string shall be interpreted as defined in the chapter Boolean Type in the AUTOSAR EcuC specification. In case the ComSignal is a UINT8_N, UINT8_DYN the string shall be interpreted as a decimal representation of the characters separated by blanks, e.g. "97 98 100" means a string "abd", where the char "a" is in byte 0(lowest address), "b" is in byte 1, and "d" is in byte 2 and (highest address). For the ComSignalType UINT8_DYN the dynamic length shall be set to the number of configured characters. An empty string "" shall be interpreted as 0-sized dynamic signal.
Multiplicity	01
Туре	EcucStringParamDef



5 6 1/4 1	l			
Default value				
maxLength				
minLength				
regularExpression				
Post-Build Variant Multipli- city	false			
Post-Build Variant Value	false			
Multiplicity Configuration	Pre-compile time X VARIANT-PRE-COMPILE			
Class	Link time	Χ	VARIANT-LINK-TIME, VARIANT-POST-	
			BUILD	
	Post-build time			
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
	Link time	Χ	VARIANT-LINK-TIME, VARIANT-POST-	
			BUILD	
	Post-build time			
Scope / Dependency	scope: local			
	dependency: In case of UINT8_N the length of ComSignalDataInvalid			
	lue has to be the same as ComSignalLength.			

SWS Item	ECUC_Com_00157 :	
	ComSignalEndianness	
	Defines the endianness of the signal's netw	ork representation.
Multiplicity	1	·
Туре	EcucEnumerationParamDef	
Range	BIG_ENDIAN	
	LITTLE_ENDIAN	
	OPAQUE	
Post-Build Variant Value	true	
Value Configurati-	Pre-compile time	X VARIANT-PRE-COMPILE
on Class	Link time	X VARIANT-LINK-TIME
	Post-build time	X VARIANT-POST-BUILD
Scope / Depen- dency	scope: local	

SWS Item	ECUC_Com_00170:
Name	ComSignalInitValue
Description	Initial value for this signal. In case of UINT8_N the default value is a string of length ComSignalLength with all bytes set to 0x00. In case of UINT8_DYN the initial size shall be 0.
	In case the ComSignalType is UINT8, UINT16, UINT32, UINT64, SINT8, SINT16, SINT32, SINT64 the string shall be interpreted as defined in the chapter Integer Type in the AUTOSAR EcuC specification. In case the ComSignalType is FLOAT32, FLOAT64 the string shall be interpreted as defined in the chapter Float Type in the AUTOSAR EcuC specification.
	In case the ComSignalType is BOOLEAN the string shall be interpreted as defined in the chapter Boolean Type in the AUTOSAR EcuC specification. In case the ComSignal is a UINT8_N, UINT8_DYN the string shall be interpreted as a decimal representation of the characters separated by blanks, e.g. "97 98 100" means a string "abd", where the char "a" is in byte 0(lowest address), "b" is in byte 1, and "d" is in byte 2 and (highest address).
	For the ComSignalType UINT8_DYN the dynamic length shall be set to the number of configured characters. An empty string "" shall be interpreted as 0-sized dynamic signal.



Multiplicity	01		
Туре	EcucStringParamDef		
Default value	0		
maxLength			
minLength			
regularExpression			
Post-Build Variant Multipli-	true		
city	rue		
Post-Build Variant Value	true		
Multiplicity Configuration	Pre-compile time X VARIANT-PRE-COMPILE		
Class	Link time	Χ	VARIANT-LINK-TIME
	Post-build time	Χ	VARIANT-POST-BUILD
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE
	Link time	Χ	VARIANT-LINK-TIME
	Post-build time	Χ	VARIANT-POST-BUILD
	scope: local dependency: In case of UINT8_N the length of ComSignalInitValue has to be the same as ComSignalLength.		

SWS Item	ECUC_Com_00437 :			
Name	ComSignalLength			
Description	Description:			
	For ComSignalType UINT8_	N this	parameter specifies the length n in	
			_DYN it specifies the maximum length in	
	bytes. For all other types this	s para	meter shall be ignored.	
	Range: 08 for normal CAN	/ LIN I	-PDUs	
	064 for CAN FD I-PDUs,		. 200,	
		PDUs	(all of ComIPduType NORMAL),	
	04294967295 for I-PDUs with ComIPduType TP.			
Multiplicity	01			
Туре	EcucIntegerParamDef			
Range	0 4294967295			
Default value				
Post-Build Variant Multipli-	l false			
city				
	false			
	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
Class	Link time	Χ	VARIANT-LINK-TIME, VARIANT-POST-	
			BUILD	
	Post-build time			
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
	Link time	Χ	VARIANT-LINK-TIME, VARIANT-POST-	
			BUILD	
	Post-build time			
Scope / Dependency	scope: local			

SWS Item	ECUC_Com_00127:
Name	ComSignalType
Description	The AUTOSAR type of the signal. Whether or not the signal is signed or unsigned can be found by examining the value of this attribute. This type could also be used to reserved appropriate storage in AUTOSAR COM.
Multiplicity	1
Туре	EcucEnumerationParamDef



Range	BOOLEAN		
	FLOAT32		
	FLOAT64	-	
	SINT16		
	SINT32		
	SINT64		
	SINT8	-	
	UINT16	-	
	UINT32		
	UINT64	-	
	UINT8		
	UINT8_DYN	ŀ	
	UINT8_N		
Post-Build Variant Value	false		
Value Configurati-	Pre-compile time	Χ	VARIANT-PRE-COMPILE
on Class	Link time		VARIANT-LINK-TIME, VARIANT-
			POST-BUILD
	Post-build time	-	
Scope / Depen- dency	scope: local		

SWS Item	ECUC_Com_00263:			
Name	ComTimeout			
Description	Defines the length of the deadline monitoring timeout period in seconds.			
	The period for the first timeout period can be configured separately by			
NA-14:1::	ECUC_Com_00183.			
Multiplicity	01			
Туре	EcucFloatParamDef			
Range	[0 3600]			
Default value				
Post-Build Variant Multipli- city	true			
Post-Build Variant Value	true			
Multiplicity Configuration	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
Class	Link time	Χ	VARIANT-LINK-TIME	
	Post-build time	Χ	VARIANT-POST-BUILD	
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
	Link time	Χ	VARIANT-LINK-TIME	
	Post-build time	Χ	VARIANT-POST-BUILD	
Scope / Dependency	scope: local	•		

SWS Item	ECUC_Com_00552:
Name	ComTimeoutNotification
Description	On sender side: Name of Com_CbkTxTOut callback function to be called.
	On receiver side: Name of Com_CbkRxTOut callback function to be called.
Multiplicity	01
Туре	EcucFunctionNameDef
Default value	
maxLength	
minLength	
regularExpression	
Post-Build Variant Multipli- city	false
Post-Build Variant Value	false



Multiplicity Configuration	Pre-compile time	Χ	VARIANT-PRE-COMPILE
Class	Link time		VARIANT-LINK-TIME, VARIANT-POST- BUILD
	Post-build time	ł	
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE
	Link time	Χ	VARIANT-LINK-TIME, VARIANT-POST-
			BUILD
	Post-build time	1	
Scope / Dependency	scope: local		

Name Description						
Description		<u>je</u>	ComTimeoutSubstitutionValue			
	The signal substitution value will be used in case of a timeout and ComRxDataTimeoutAction is set to SUBSTITUTE.					
	In case of UINT8_N the default value is a string of length ComSignalLength with all bytes set to 0x00.					
	In case ofUINT8_DYN the in	itial s	ize shall be 0.			
		e strin	NT8, UINT16, UINT32, UINT64, SINT8, and shall be interpreted as defined in the SAR EcuC specification.			
			OAT32, FLOAT64 the string shall be ter Float Type in the AUTOSAR EcuC			
	In case the ComSignalType is BOOLEAN the string shall be interpreted as defined in the chapter Boolean Type in the AUTOSAR EcuC specification.					
	In case the ComSignal is a UINT8_N, UINT8_DYN the string shall be interpreted as a decimal representation of the characters separated by blanks, e.g. "97 98 100" means a string "abd", where the char "a" is in byte 0(lowest address), "b" is in byte 1, and "d" is in byte 2 and (highest address). For the ComSignalType UINT8_DYN the dynamic length shall be set to the number of configured characters. An empty string "" shall be interpreted as 0-sized dynamic signal.					
Multiplicity	01					
Туре	EcucStringParamDef					
Default value						
maxLength						
minLength						
regularEverssion						
Post-Build Variant Multiplicity	true					
Post-Build Variant Value	true					
Multiplicity Configuration	Pre-compile time	Χ	VARIANT-PRE-COMPILE			
Class	Link time	Χ	VARIANT-LINK-TIME			
	Post-build time X VARIANT-POST-BUILD					
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE			
	Link time	Χ	VARIANT-LINK-TIME			
	Post-build time	Χ	VARIANT-POST-BUILD			
Scope / Dependency	scope: local					

SWS Item	ECUC_Com_00232:
Name	ComTransferProperty



Description	Defines if a write access to this signal can trigger the trans	amission of the correspon
Description	Defines if a write access to this signal can trigger the transding I-PDU. If the I-PDU is triggered, depends also on the	
	corresponding I-PDU.	transmission mode of the
Multiplicity	01	
	EcucEnumerationParamDef	
Туре		ΙΛ
Range	PENDING	A write access to this
		signal never triggers the
		transmission of the cor-
	TDIOOFDED	responding I-PDU.
	TRIGGERED	Depending on the trans-
		mission mode, a write
		access to this signal can
		trigger the transmission of
	TDICOEDED ON CHANCE	the corresponding I-PDU.
	TRIGGERED_ON_CHANGE	Depending on the trans-
		mission mode, a write
		access to this signal can
		trigger the transmission of
		the corresponding I-PDU, but only in case the written
		value is different to the
		locally stored (last sent or
		initial value) in length or value.
	TRICOFRED ON CHANCE WITHOUT DEDETITION	
	TRIGGERED_ON_CHANGE_WITHOUT_REPETITION	Depending on the trans-
		mission mode, a write
		access to this signal can
		trigger the transmission of
		the corresponding I-PDU just once without a repeti-
		tion, but only in case the
		written value is different to
		the locally stored (last sent
		or initial value) in length or
		value.
	TRIGGERED_WITHOUT_REPETITION	Depending on the trans-
	INGOERED_WITHOUT_REFEITHION	mission mode, a write
		access to this signal can
		trigger the transmission of
		the corresponding I-PDU
		just once without a repeti-
		tion.
Post-Build Vari-	4	•
Post-Build Vari-	4	
ant Value	rrue	
Multiplicity	Pre-compile time	X VARIANT-PRE-
Configuration		COMPILE
Class	Link time	X VARIANT-LINK-TIME
	Post-build time	X VARIANT-POST-BUILD
Value Configu-	Pre-compile time	X VARIANT-PRE-
ration Class	i io compile anic	COMPILE
lation oldss	Link time	X VARIANT-LINK-TIME
	Post-build time	X VARIANT-POST-BUILD
Scope / Depen-		IVIANIZIAI - I OO I-DOILD
dency	poupe. Ioual	
uency	<u>l</u>	

SWS Item	ECUC_Com_00257:



Name	ComUpdateBitPosition				
Description	Bit position of update-bit inside I-PDU.				
			e is no update-bit. This setting must be		
	consistently on sender and o	n rece	eiver side.		
	Range: 063 for CAN and L	N			
	0511 for CAN FD,	IV,			
	02031 for FlexRay,				
	04294967295 for TP.				
Multiplicity	01				
Туре	EcucIntegerParamDef	EcucIntegerParamDef			
Range	0 4294967295				
Default value	r -				
Post-Build Variant Multipli-	true				
city					
	true				
Multiplicity Configuration	-	Χ	VARIANT-PRE-COMPILE		
Class	Link time	Χ	VARIANT-LINK-TIME		
	Post-build time	Χ	VARIANT-POST-BUILD		
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE		
	Link time X VARIANT-LINK-TIME				
	Post-build time X VARIANT-POST-BUILD				
Scope / Dependency	scope: local				

SWS Item	ECUC_Com_00002:				
Name	ComSystemTemplateSystemSignalRef				
Description	Reference to the ISignalToIPduMapping that contains a reference to the ISignal (System Template) which this ComSignal (or ComGroupSignal) represents.				
Multiplicity	01	01			
Туре	Foreign reference to [I-SIGN	IAL-T	O-I-PDU-MAPPING]		
Post-Build Variant Multipli- city	true				
Post-Build Variant Value	true				
Multiplicity Configuration	Pre-compile time	Χ	VARIANT-PRE-COMPILE		
Class	Link time	Χ	VARIANT-LINK-TIME		
	Post-build time	Χ	VARIANT-POST-BUILD		
Value Configuration Class	Pre-compile time X VARIANT-PRE-COMPILE				
	Link time	Χ	VARIANT-LINK-TIME		
	Post-build time X VARIANT-POST-BUILD				
Scope / Dependency	scope: ECU				

Included Containers		
Container Name	Multiplicity	Scope / Dependency
ComFilter		This container contains the configuration parameters of the AUTOSAR COM module's Filters.
Compile		Note: On sender side the container is used to specify the transmission mode conditions.



10.1.13 ComSignalGroup

SWS Item	ECUC_Com_00345:			
Container Name	ComSignalGroup			
Description	Contains the configuration parameters of the AUTOSAR COM module's signal groups.			
Post-Build Variant Multipli- city	true			
Multiplicity Configuration	Pre-compile time X VARIANT-PRE-COMPILE			
Class	Link time X VARIANT-LINK-TIME			
	Post-build time X VARIANT-POST-BUILD			
Configuration Parameters				

SWS Item	ECUC Com 00314:		
Name	ComDataInvalidAction		
Description	This parameter defines the action performed upon reception of an invalid signal.		
	Relating to signal groups the action in ca	se i	f one of the included signals is an
	invalid signal.		
	If Replace is used the ComSignalInitValu	ie w	rill be used for the replacement.
Multiplicity	01		
Туре	EcucEnumerationParamDef		
Range	NOTIFY		
	REPLACE	Lite	ral for DataInvalidAction
Post-Build Variant Multiplicity			
Post-Build Variant Value	false		
Multiplicity Confi-	Pre-compile time	Χ	VARIANT-PRE-COMPILE
guration Class	Link time		VARIANT-LINK-TIME, VARIANT- POST-BUILD
	Post-build time		
Value Configurati-	Pre-compile time	Χ	VARIANT-PRE-COMPILE
on Class	Link time		VARIANT-LINK-TIME, VARIANT-
			POST-BUILD
	Post-build time		
Scope / Depen- dency	scope: local		

SWS Item	ECUC_Com_00499:		
Name	ComErrorNotification		
-	Only valid on sender side: Name of Com_CbkTxErr callback function to be called.		
	If this parameter is omitted n	o erro	r notification shall take place.
Multiplicity	01		
Туре	EcucFunctionNameDef		
Default value			
maxLength			
minLength			
regularExpression			
Post-Build Variant Multipli- city	false		
Post-Build Variant Value	false		
Multiplicity Configuration	Pre-compile time	Χ	VARIANT-PRE-COMPILE
Class	Link time	Χ	VARIANT-LINK-TIME, VARIANT-POST-



			BUILD
	Post-build time		
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE
	Link time	Χ	VARIANT-LINK-TIME, VARIANT-POST-
			BUILD
	Post-build time		
Scope / Dependency	scope: local		

SWS Item	ECUC_Com_00183:			
Name	ComFirstTimeout			
	Defines the length of the first deadline monitoring timeout period in seconds. This timeout is used immediately after start (or restart) of the deadline monitoring service. The timeout period of the successive periods is configured by ECUC_Com_00263.			
Multiplicity	01			
Туре	EcucFloatParamDef			
Range	[0 3600]			
Default value				
Post-Build Variant Multipli- city	true			
Post-Build Variant Value	true			
	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
Class	Link time	Χ	VARIANT-LINK-TIME	
	Post-build time	Χ	VARIANT-POST-BUILD	
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
	Link time	Χ	VARIANT-LINK-TIME	
	Post-build time	Χ	VARIANT-POST-BUILD	
Scope / Dependency	scope: local			

SWS Item	ECUC_Com_00165 :		
Name	ComHandleId		
Description	The numerical value used as the ID.		
	This ID identifies signals and signal groups in the COM APIs using Com_SignalIdType or Com_SignalGroupIdType parameter respectively.		
Multiplicity	01		
Туре	EcucIntegerParamDef (Sym	olic 1	Name generated for this parameter)
Range	0 65535		
Default value			
Post-Build Variant Multipli- city	false		
Post-Build Variant Value	false		
Multiplicity Configuration	Pre-compile time	Χ	All Variants
Class	Link time		
	Post-build time		
Value Configuration Class	Pre-compile time	Χ	All Variants
	Link time		
	Post-build time		
Scope / Dependency	scope: ECU		

SWS Item	ECUC_Com_00811:
Name	ComInitialValueOnly
Description	This parameter defines that the respective signal's initial value shall be put into the respective PDU but there will not be any update of the value through the RTE. Thus the Com implementation does not need to expect any API calls for this signal (group).



Multiplicity	01		
Туре	EcucBooleanParamDef		
Default value	false		
Post-Build Variant Multipli- city	false		
Post-Build Variant Value	false		
Multiplicity Configuration	Pre-compile time	Χ	VARIANT-PRE-COMPILE
Class	Link time	Х	VARIANT-LINK-TIME, VARIANT-POST- BUILD
	Post-build time		
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE
	Link time	Х	VARIANT-LINK-TIME, VARIANT-POST- BUILD
	Post-build time		
Scope / Dependency	scope: local		

SWS Item	ECUC_Com_00315 :			
Name	ComInvalidNotification			
Description	Only valid on receiver side: Name of Com_CbkInv callback function to be called. Name of the function which notifies the RTE about the reception of an invalidated signal/ signal group. Only applicable if ComDataInvalidAction is configured to NOTIFY.			
Multiplicity	01			
Туре	EcucFunctionNameDef			
Default value				
maxLength				
minLength				
regularExpression				
Post-Build Variant Multipli- city	false			
Post-Build Variant Value	false			
Multiplicity Configuration	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
Class	Link time	Χ	VARIANT-LINK-TIME, VARIANT-POST- BUILD	
	Post-build time			
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
	Link time	Х	VARIANT-LINK-TIME, VARIANT-POST- BUILD	
	Post-build time			
Scope / Dependency	scope: local			

SWS Item	ECUC_Com_00498:
Name	ComNotification
Description	On sender side: Name of Com_CbkTxAck callback function to be called.
	On receiver side: Name of Com_CbkRxAck callback function to be called. If this parameter is omitted no notification shall take place.
Multiplicity	01
Туре	EcucFunctionNameDef
Default value	
maxLength	
minLength	
regularExpression	
Post-Build Variant Multipli- city	false



Post-Build Vari	ant Value	false		
Multiplicity C	onfiguration	Pre-compile time	Χ	VARIANT-PRE-COMPILE
Class		Link time	Χ	VARIANT-LINK-TIME, VARIANT-POST-
				BUILD
		Post-build time	-	
Value Configure	ation Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE
		Link time		VARIANT-LINK-TIME, VARIANT-POST- BUILD
		Post-build time		
Scope / Depend	dency	scope: local		

SWS Item	ECUC_Com_00412 :			
Name	ComRxDataTimeoutAction			
Description	This parameter defines the action performed upon expiration of the reception dead- line monitoring timer.			
Multiplicity	01			
Туре	EcucEnumerationParamDef			
Range	NONE	no r	eplacement shall take place	
	REPLACE		hals shall be replaced by their ComSignall- falue	
	SUBSTITUTE		nals shall be replaced by their ComTimeou- ostitutionValue	
Post-Build Variant Multiplicity				
Post-Build Variant Value	false			
Multiplicity Confi-	Pre-compile time	Х	VARIANT-PRE-COMPILE	
guration Class	Link time		VARIANT-LINK-TIME, VARIANT-POST- BUILD	
	Post-build time			
Value Configurati-	Pre-compile time	Х	VARIANT-PRE-COMPILE	
on Class	Link time	Х	VARIANT-LINK-TIME, VARIANT-POST- BUILD	
	Post-build time			
Scope / Depen- dency	scope: local			

SWS Item	ECUC_Com_10003:		
Name	ComSignalGroupArrayAccess		
Description		ray ba	ased access shall be used for this Com-
	SignalGroup.		
Multiplicity	01		
Туре	EcucBooleanParamDef		
Default value			
Post-Build Variant Multipli-	false		
city	laise		
Post-Build Variant Value	false		
Multiplicity Configuration	Pre-compile time	Χ	All Variants
Class	Link time		
	Post-build time		
Value Configuration Class	Pre-compile time	Χ	All Variants
	Link time		
	Post-build time		
Scope / Dependency			

SWS Item	ECUC_Com_00263:



Name	ComTimeout			
Description	Defines the length of the deadline monitoring timeout period in seconds. The period for the first timeout period can be configured separately by ECUC_Com_00183.			
Multiplicity	01			
Туре	EcucFloatParamDef			
Range	[0 3600]	[0 3600]		
Default value				
Post-Build Variant Multipli- city	true			
Post-Build Variant Value	true			
Multiplicity Configuration	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
Class	Link time	Χ	VARIANT-LINK-TIME	
	Post-build time	Χ	VARIANT-POST-BUILD	
Value Configuration Class	Pre-compile time X VARIANT-PRE-COMPILE			
	Link time	Χ	VARIANT-LINK-TIME	
	Post-build time	Χ	VARIANT-POST-BUILD	
Scope / Dependency	scope: local			

SWS Item	ECUC_Com_00552:			
Name	ComTimeoutNotification			
Description	On sender side: Name of Com_CbkTxTOut callback function to be called.			
	On receiver side: Name of C	om_C	CbkRxTOut callback function to be called.	
Multiplicity	01			
Туре	EcucFunctionNameDef			
Default value				
maxLength				
minLength				
regularExpression				
Post-Build Variant Multipli-	false			
city				
	false			
	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
Class	Link time	Х	VARIANT-LINK-TIME, VARIANT-POST- BUILD	
	Post-build time			
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
	Link time	Х	VARIANT-LINK-TIME, VARIANT-POST- BUILD	
	Post-build time			
Scope / Dependency	scope: local			

SWS Item	ECUC_Com_00232 :			
Name	ComTransferProperty	ComTransferProperty		
Description	Defines if a write access to this signal can trigger the transmission of the corresponding I-PDU. If the I-PDU is triggered, depends also on the transmission mode of the corresponding I-PDU.			
Multiplicity	01			
Туре	EcucEnumerationParamDef			
Range	PENDING	A write access to this signal never triggers the transmission of the corresponding I-PDU.		
	TRIGGERED	Depending on the trans- mission mode, a write		



Post-Build Vari-		tion.
	TRIGGERED_WITHOUT_REPETITION	Depending on the trans- mission mode, a write access to this signal can trigger the transmission of the corresponding I-PDU just once without a repeti-
	TRIGGERED_ON_CHANGE_WITHOUT_REPETITION	Depending on the transmission mode, a write access to this signal can trigger the transmission of the corresponding I-PDU just once without a repetition, but only in case the written value is different to the locally stored (last sent or initial value) in length or value.
	TRIGGERED_ON_CHANGE	access to this signal can trigger the transmission of the corresponding I-PDU. Depending on the transmission mode, a write access to this signal can trigger the transmission of the corresponding I-PDU, but only in case the written value is different to the locally stored (last sent or initial value) in length or value.

SWS Item	ECUC_Com_00257:			
Name	ComUpdateBitPosition			
Description	Bit position of update-bit inside I-PDU.			
	If this attribute is omitted then there is no update-bit. This setting must be consistently on sender and on receiver side.			
	Range: 063 for CAN and LIN, 0511 for CAN FD, 02031 for FlexRay, 04294967295 for TP.			
Multiplicity	01			



Туре	EcucIntegerParamDef		
Range	0 4294967295		
Default value			
Post-Build Variant Multipli- city	true		
	true		
Multiplicity Configuration	Pre-compile time	Χ	VARIANT-PRE-COMPILE
Class	Link time	Χ	VARIANT-LINK-TIME
	Post-build time	Χ	VARIANT-POST-BUILD
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE
	Link time	Χ	VARIANT-LINK-TIME
	Post-build time	Χ	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

SWS Item	ECUC_Com_00001:			
Name	ComSystemTemplateSignalGroupRef			
Description	Reference to the ISignalToIPduMapping that contains a reference to the ISignalGroup (SystemTemplate) which this ComSignalGroup represents.			
Multiplicity	01			
Туре	Foreign reference to [I-SIGN	VAL-T	O-I-PDU-MAPPING]	
Post-Build Variant Multipli- city	ost-Build Variant Multipli- true			
Post-Build Variant Value	true			
Multiplicity Configuration	Pre-compile time X VARIANT-PRE-COMPILE			
Class	Link time	Χ	VARIANT-LINK-TIME	
	Post-build time	Χ	VARIANT-POST-BUILD	
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
	Link time	Χ	VARIANT-LINK-TIME	
	Post-build time	Χ	VARIANT-POST-BUILD	
Scope / Dependency	scope: ECU			

Included Containers				
Container Name	Multiplicity	Scope / Dependency		
ComGroupSignal		This container contains the configuration parameters of group signals. I.e. signals that are included within a signal group.		

10.1.14 ComGroupSignal

SWS Item	ECUC_Com_00520:			
Container Name	ComGroupSignal			
Description	This container contains the configuration parameters of group signals. I.e. signals that are included within a signal group.			
Post-Build Variant Multipli- city	true			
Multiplicity Configuration	Pre-compile time X VARIANT-PRE-COMPILE			
Class	Link time	Χ	VARIANT-LINK-TIME	
	Post-build time	Χ	VARIANT-POST-BUILD	
Configuration Parameters				

SWS Item	ECUC_Com_00259:
Name	ComBitPosition
Description	Starting position within the I-PDU. This parameter refers to the position in the I-PDU and not in the shadow buffer. If the endianness conversion is



	configured to Opaque the parameter ComBitPosition shall define the bit0 of the first byte like in little endian byte order			
Multiplicity	1			
Туре	EcucIntegerParamDef			
Range	0 4294967295			
Default value				
Post-Build Variant Value	true			
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
	Link time X VARIANT-LINK-TIME			
	Post-build time	Χ	VARIANT-POST-BUILD	
Scope / Dependency	scope: local			

SWS Item	ECUC_Com_00158:			
Name	ComBitSize			
Description	Size in bits, for integer signal types. For ComSignalType UINT8_N and UINT8_DYN			
	the size shall be configured by ComSignalLength. For ComSignalTypes FLOAT32 and FLOAT64 the size is already defined by the signal type and therefore may be omitted.			
Multiplicity	01			
Туре	EcucIntegerParamDef			
Range	0 64			
Default value				
Post-Build Variant Multipli- city	li- true			
Post-Build Variant Value	true			
Multiplicity Configuration	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
Class	Link time	Χ	VARIANT-LINK-TIME	
	Post-build time	Χ	VARIANT-POST-BUILD	
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
	Link time	Χ	VARIANT-LINK-TIME	
	Post-build time	Χ	VARIANT-POST-BUILD	
Scope / Dependency	scope: local	•		

SWS Item	ECUC_Com_00165 :			
Name	ComHandleId			
Description	The numerical value used as the ID.			
	This ID identifies signals and	d signa	al groups in the COM APIs using	
	Com_SignalIdType or Com_	Signa	alGroupIdType parameter respectively.	
Multiplicity	01			
Туре	EcucIntegerParamDef (Symbolic Name generated for this parameter)			
Range	0 65535			
Default value				
Post-Build Variant Multipli-	false			
city	laise			
Post-Build Variant Value	false			
Multiplicity Configuration	Pre-compile time	Χ	All Variants	
Class	Link time	-		
	Post-build time	-		
Value Configuration Class	Pre-compile time	Χ	All Variants	
	Link time	-		
	Post-build time			
Scope / Dependency	scope: ECU			



SWS Item	ECUC_Com_00391:			
Name	ComSignalDataInvalidValue			
Description	Defines the data invalid value of the signal.			
	In case the ComSignalType is UINT8, UINT16, UINT32, UINT64, SINT8, SINT16, SINT32, SINT64 the string shall be interpreted as defined in the chapter Integer Type in the AUTOSAR EcuC specification. In case the ComSignalType is FLOAT32, FLOAT64 the string shall be interpreted as defined in the chapter Float Type in the AUTOSAR EcuC specification. In case the ComSignalType is BOOLEAN the string shall be interpreted as			
	defined in the chapter Boole	an Ty	pe in the AUTOSAR EcuC specification. _N, UINT8_DYN the string shall be	
	blanks, e.g. "97 98 100" mea 0(lowest address), "b" is in b	ans a	tation of the characters separated by string "abd", where the char "a" is in byte and "d" is in byte 2 and (highest	
	address). For the ComSignalType UIN	T8_D	YN the dynamic length shall be set to the	
	number of configured characters. An empty string "" shall be interpreted as			
	0-sized dynamic signal.			
Multiplicity	01			
Туре	EcucStringParamDef			
Default value				
maxLength				
minLength				
regularExpression				
Post-Build Variant Multipli- city	false			
Post-Build Variant Value	false			
Multiplicity Configuration	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
Class	Link time	X	VARIANT-LINK-TIME, VARIANT-POST- BUILD	
	Post-build time	-		
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
	Link time	Х	VARIANT-LINK-TIME, VARIANT-POST- BUILD	
	Post-build time	-		
	scope: local dependency: In case of UINT8_N the length of ComSignalDataInvalidValue has to be the same as ComSignalLength.			

SWS Item	ECUC_Com_00157:		
Name	ComSignalEndianness		
Description	Defines the endianness of the signal's netw	ork representation.	
Multiplicity	1		
Туре	EcucEnumerationParamDef		
Range	BIG_ENDIAN		
	LITTLE_ENDIAN		
	OPAQUE		
Post-Build Variant Value	true		
Value Configurati-	Pre-compile time	X VARIANT-PRE-COMPILE	
on Class	Link time	X VARIANT-LINK-TIME	
	Post-build time	X VARIANT-POST-BUILD	
-	scope: local		
dency			



SWS Item	ECUC_Com_00170:				
Name	ComSignalInitValue				
Description	Initial value for this signal. In case of UINT8_N the default value is a string of length ComSignalLength with all bytes set to 0x00. In case of UINT8_DYN the initial size shall be 0.				
	In case the ComSignalType is UINT8, UINT16, UINT32, UINT64, SINT8, SINT16, SINT32, SINT64 the string shall be interpreted as defined in the chapter Integer Type in the AUTOSAR EcuC specification. In case the ComSignalType is FLOAT32, FLOAT64 the string shall be interpreted as defined in the chapter Float Type in the AUTOSAR EcuC specification. In case the ComSignalType is BOOLEAN the string shall be interpreted as defined in the chapter Boolean Type in the AUTOSAR EcuC specification. In case the ComSignal is a UINT8_N, UINT8_DYN the string shall be interpreted as a decimal representation of the characters separated by blanks, e.g. "97 98 100" means a string "abd", where the char "a" is in byte 0(lowest address), "b" is in byte 1, and "d" is in byte 2 and (highest address).				
	For the ComSignalType UINT8_DYN the dynamic length shall be set to the				
	number of configured characters. An empty string "" shall be interpreted as 0-sized dynamic signal.				
Multiplicity	01				
Туре	EcucStringParamDef				
Default value	0				
maxLength	<u></u>				
minLength	<u></u>				
regularExpression					
Post-Build Variant Multipli-					
city	true				
Post-Build Variant Value	true				
	Pre-compile time	Х	VARIANT-PRE-COMPILE		
Class	Link time	X	VARIANT-LINK-TIME		
	Post-build time	X	VARIANT-POST-BUILD		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE		
land comigaration olds	Link time	X	VARIANT-LINK-TIME		
	Post-build time	X	VARIANT-POST-BUILD		
Scope / Dependency	scope: local		17.1.W. 11. 1 OO! BOILD		
Cooper Dependency	dependency: In case of UINT8_N the length of ComSignalInitValue has to be the same as ComSignalLength.				

SWS Item	ECUC_Com_00437:		
Name	ComSignalLength		
Description	Description:		
	For ComSignalType UINT8_N this parameter specifies the length n in bytes. For ComSignalType UINT8_DYN it specifies the maximum length in bytes. For all other types this parameter shall be ignored.		
	Range: 08 for normal CAN/ LIN I-PDUs, 064 for CAN FD I-PDUs, 0254 for normal FlexRay I-PDUs (all of ComIPduType NORMAL), 04294967295 for I-PDUs with ComIPduType TP.		
Multiplicity	01		
Туре	EcucIntegerParamDef		
Range	0 4294967295		
Default value			



Post-Build Variant Multipli- city	false		
Post-Build Variant Value	false		
Multiplicity Configuration	Pre-compile time	Χ	VARIANT-PRE-COMPILE
Class	Link time		VARIANT-LINK-TIME, VARIANT-POST- BUILD
	Post-build time		
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE
	Link time		VARIANT-LINK-TIME, VARIANT-POST- BUILD
	Post-build time		
Scope / Dependency	scope: local		

SWS Item	ECUC_Com_00127 :		
Name	ComSignalType		
Description	The AUTOSAR type of the signal. Whether or not the signal is signed or unsigned can be found by examining the value of this attribute. This type could also be used to reserved appropriate storage in AUTOSAR COM.		
Multiplicity	1		
Туре	EcucEnumerationParamDef		
Range	BOOLEAN		
	FLOAT32		
	FLOAT64		
	SINT16		
	SINT32		
	SINT64		
	SINT8		
	UINT16		
	UINT32		
	UINT64		
	UINT8		
	UINT8_DYN		
	UINT8_N		
Post-Build Variar Value	nt _{ralse}		
Value Configurat	i-Pre-compile time	X VARIANT-PRE-COMPILE	
on Class	Link time	X VARIANT-LINK-TIME, VARIANT- POST-BUILD	
	Post-build time		
Scope / Deper	scope: local		

SWS Item	ECUC_Com_10006:	
Name	ComTimeoutSubstitutionValue	
Description	The signal substitution value will be used in case of a timeout and ComRxDataTimeoutAction is set to SUBSTITUTE.	
	In case of UINT8_N the default value is a string of length ComSignalLength with all bytes set to 0x00.	
	In case of UINT8_DYN the initial size shall be 0.	
	In case the ComSignalType is UINT8, UINT16, UINT32, UINT64, SINT8, SINT16, SINT32, SINT64 the string shall be interpreted as defined in the chapter Integer Type in the AUTOSAR EcuC specification.	



	In case the ComSignalType is FLOAT32, FLOAT64 the string shall be interpreted as defined in the chapter Float Type in the AUTOSAR EcuC specification. In case the ComSignalType is BOOLEAN the string shall be interpreted as				
			pe in the AUTOSAR EcuC specification.		
	In case the ComSignal is a UINT8_N, UINT8_DYN the string shall be interpreted as a decimal representation of the characters separated by blanks, e.g. "97 98 100" means a string "abd", where the char "a" is in byte 0(lowest address), "b" is in byte 1, and "d" is in byte 2 and (highest address). For the ComSignalType UINT8_DYN the dynamic length shall be set to the number of configured characters. An empty string "" shall be interpreted as 0-sized dynamic signal.				
Multiplicity	01				
Туре	EcucStringParamDef				
Default value					
maxLength					
minLength					
regularExpression					
Post-Build Variant Multipli- city	true				
Post-Build Variant Value	true				
	Pre-compile time	Χ	VARIANT-PRE-COMPILE		
Class	Link time	Χ	VARIANT-LINK-TIME		
	Post-build time X VARIANT-POST-BUILD				
Value Configuration Class					
	Link time	Χ	VARIANT-LINK-TIME		
	Post-build time	Χ	VARIANT-POST-BUILD		
Scope / Dependency	scope: local				

SWS Item	ECUC_Com_00560:		
Name	ComTransferProperty		
Description	Optionally defines whether this group signal shall contribute to the TRIGGE-RED_ON_CHANGE transfer property of the signal group. If at least one group signal of a signal group has the "ComTransferProperty" configured all other group signals of that signal group shall have the attribute configured as well.		
Multiplicity	01		
Туре	EcucEnumerationParamDef		
Range	PENDING	A change of the value of this group signal shall not be considered in the evaluation of the signal groups Com-TransferProperty.	
	TRIGGERED_ON_CHANGE	A change of the value of this group signal shall be considered in the evaluation of the signal groups ComTransferProperty.	
Post-Build Variant Multiplicity			
Post-Build Variant Value	true		
Multiplicity Confi- guration Class	Pre-compile time	X VARIANT-PRE-COMPILE	
	Link time	X VARIANT-LINK-TIME	
	Post-build time	X VARIANT-POST-BUILD	
Value Configura- tion Class	•	X VARIANT-PRE-COMPILE	
	Link time	X VARIANT-LINK-TIME	
	Post-build time	X VARIANT-POST-BUILD	



Scope	/	Depen-	scope: local
dency			

SWS Item	ECUC_Com_00002:		
Name	ComSystemTemplateSystemSignalRef		
Description	Reference to the ISignalToIPduMapping that contains a reference to the ISignal (System Template) which this ComSignal (or ComGroupSignal) represents.		
Multiplicity	01		
Туре	Foreign reference to [I-SIGNAL-TO-I-PDU-MAPPING]		
Post-Build Variant Multipli- city	true		
Post-Build Variant Value	true		
Multiplicity Configuration	Pre-compile time	Χ	VARIANT-PRE-COMPILE
Class	Link time	Χ	VARIANT-LINK-TIME
	Post-build time	Χ	VARIANT-POST-BUILD
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE
	Link time	Χ	VARIANT-LINK-TIME
	Post-build time	Χ	VARIANT-POST-BUILD
Scope / Dependency	scope: ECU		

Included Containers				
Container Name Multiplicity Scope / Dependency				
ComFilter	01	This container contains the configuration parameters of the AUTOSAR COM module's filters. Note: On sender side the container is used to specify the transmission mode conditions.		

10.1.15 ComTxMode

SWS Item	ECUC_Com_00351:
Container Name	ComTxMode
	This container contains the configuration parameters of the AUTOSAR COM module's transmission modes.
Configuration Parameters	

SWS Item	ECUC_Com_00137:			
Name	ComTxModeMode			
-	The available transmission modes described in [18] shall be extended by the additional mode None.			
	The transmission mode None shall not have any further sub-attributes in the ComTxMode object.			
Multiplicity	1			
Туре	EcucEnumerationParamDef			
Range	DIRECT			
	MIXED			
	NONE	Literal for TxMode		
	PERIODIC			
Post-Build Variant Value	true			
Value Configurati-	ti-Pre-compile time X VARIANT-PRE-COMPILE			
on Class	Link time	X VARIANT-LINK-TIME		



			Post-build time	Χ	VARIANT-POST-BUILD
Scope dency	/	Depen-	scope: local		

SWS Item	ECUC_Com_00281:			
Name	ComTxModeNumberOfRepetitions			
Description	Defines the number of repetitions for the transmission mode DIRECT and the event driven part of transmission mode MIXED.			
Multiplicity	01			
Туре	EcucIntegerParamDef			
Range	0 255			
Default value				
Post-Build Variant Multipli- city	true			
Post-Build Variant Value	true			
	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
Class	Link time X VARIANT-LINK-TIME			
	Post-build time X VARIANT-POST-BUILD			
Value Configuration Class	Pre-compile time X VARIANT-PRE-COMPILE			
	Link time X VARIANT-LINK-TIME			
	Post-build time X VARIANT-POST-BUILD			
Scope / Dependency	scope: local	•		

SWS Item	ECUC_Com_00282:				
Name	ComTxModeRepetitionPeriod				
Description	Defines the repetition period in seconds of the multiple transmissions in case ComTxModeNumberOfRepetitions is configured greater than or equal to 1 and ComTxModeMode is configured to DIRECT or MIXED. In case of the mixed transmission mode only the event driven part is affected.				
Multiplicity	01				
Туре	EcucFloatParamDef				
Range	[0 3600]				
Default value					
Post-Build Variant Multipli- city	true				
Post-Build Variant Value	true				
Multiplicity Configuration	Pre-compile time	Χ	VARIANT-PRE-COMPILE		
Class	Link time X VARIANT-LINK-TIME				
	Post-build time X VARIANT-POST-BUILD				
Value Configuration Class	Pre-compile time X VARIANT-PRE-COMPILE				
	Link time X VARIANT-LINK-TIME				
	Post-build time X VARIANT-POST-BUILD				
Scope / Dependency	scope: local				

SWS Item	ECUC_Com_00180:
Name	ComTxModeTimeOffset
Description	Defines the period in seconds between the start of the I-PDU by Com_IpduGroupControl and the first transmission request in case ComTxModeMode is configured to PERIODIC or MIXED. In case of the mixed transmission mode only the periodic part is affected. In case ComTxModeTimeOffset is omitted or configured to 0, the first periodic transmission shall be transmitted within the next invocation of Com_MainFunctionTx.
Multiplicity	01
Туре	EcucFloatParamDef



Range	[0 3600]			
Default value				
Post-Build Variant Multipli-	ost-Build Variant Multipli-			
city	li de			
Post-Build Variant Value	true			
Multiplicity Configuration	Pre-compile time X VARIANT-PRE-COMPILE			
Class	Link time	Χ	VARIANT-LINK-TIME	
	Post-build time	Χ	VARIANT-POST-BUILD	
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
	Link time	Χ	VARIANT-LINK-TIME	
	Post-build time	Χ	VARIANT-POST-BUILD	
Scope / Dependency	scope: local	·		

SWS Item	ECUC_Com_00178:				
Name	ComTxModeTimePeriod	ComTxModeTimePeriod			
Description	Defines the repetition period in seconds of the periodic transmission requests in case ComTxModeMode is configured to PERIODIC or MIXED. In case of the mixed transmission mode only the periodic part is affected.				
Multiplicity	01				
Туре	EcucFloatParamDef				
Range	[0 3600]				
Default value					
Post-Build Variant Multipli- city	true				
Post-Build Variant Value	true				
Multiplicity Configuration	Pre-compile time	Χ	VARIANT-PRE-COMPILE		
Class	Link time	Χ	VARIANT-LINK-TIME		
	Post-build time X VARIANT-POST-BUILD				
Value Configuration Class	Class Pre-compile time X VARIANT-PRE-COMPIL				
	Link time	Χ	VARIANT-LINK-TIME		
	Post-build time	Χ	VARIANT-POST-BUILD		
Scope / Dependency	scope: local				

No Included Containers

10.1.16 ComTxModeTrue

SWS Item	ECUC_Com_00455:
Container Name	ComTxModeTrue
Description	This container contains the configuration parameters of the AUTOSAR COM module's transmission modes in the case the ComFilter evaluates to true.
Configuration Parameters	

Included Containers		
Container Name	Multiplicity	Scope / Dependency
ComTxMode	1 1	This container contains the configuration parameters of the AUTOSAR COM module's transmission modes.



10.1.17 ComTxModeFalse

SWS Item	ECUC_Com_00454:
Container Name	ComTxModeFalse
	This container contains the configuration parameters of the AUTOSAR COM module's transmission modes in the case the ComFilter evaluates to false.
Configuration Parameters	

Included Containers		
Container Name	Multiplicity	Scope / Dependency
ComTxMode		This container contains the configuration parameters of the AUTOSAR COM module's transmission modes.

10.1.18 ComGwMapping

SWS Item	ECUC_Com_00544:		
Container Name ComGwMapping			
Description	Each instance of this container defines one mapping of the integrated Signal Gateway.		
Post-Build Variant Multipli- city	true		
Multiplicity Configuration	Pre-compile time X VARIANT-PRE-COMPILE		
Class	Link time X VARIANT-LINK-TIME		VARIANT-LINK-TIME
	Post-build time X VARIANT-POST-BUILD		
Configuration Parameters			

Included Containers				
Container Name	Multiplicity	Scope / Dependency		
ComGwDestination	1*	Each instance of this choice container allows to define one routing destination either by reference to an already configured COM signal / signal group or by a destination description container.		
ComGwSource	1	This choice container allows the definition of the gateway source signal either by reference to an already configured COM signal / signal group or by a source description container.		

10.1.19 ComGwSource

SWS Item	ECUC_Com_00545:
Choice container Name	ComGwSource
Description	This choice container allows the definition of the gateway source signal either by reference to an already configured COM signal / signal group or by a source description container.

Container Choices		
Container Name	Multiplicity	Scope / Dependency
ComGwSignal	01	This container allows specifying a gateway source or destination respectively with a reference to a ComSignal, a ComGroupSignal or a ComSignalGroup.



ComGwSourceDescription	01	Description of a gateway source. This container allows defining a gateway source without the configuration of a complete COM signal. This allows adding / changing gateway relations post build without the configuration of new signals.
------------------------	----	---

10.1.20 ComGwSourceDescription

SWS Item	ECUC_Com_00548:
Container Name	ComGwSourceDescription
Description	Description of a gateway source. This container allows defining a gateway source without the configuration of a complete COM signal. This allows adding / changing gateway relations post build without the configuration of new signals.
Configuration Parameters	

SWS Item	ECUC_Com_00259:			
Name	ComBitPosition			
Description	Starting position within the I-PDU. This parameter refers to the position in the I-PDU and not in the shadow buffer. If the endianness conversion is configured to Opaque the parameter ComBitPosition shall define the bit0 of the first byte like in little endian byte order			
Multiplicity	1			
Туре	EcucIntegerParamDef			
Range	0 4294967295			
Default value				
Post-Build Variant Value	true			
Value Configuration Class	Pre-compile time X VARIANT-PRE-COMPILE			
	Link time X VARIANT-LINK-TIME			
	Post-build time X VARIANT-POST-BUILD			
Scope / Dependency	scope: local			

SWS Item	ECUC_Com_00158:			
Name	ComBitSize			
Description	Size in bits, for integer signal types. For ComSignalType UINT8_N and UINT8_DYN			
	the size shall be configured by ComSignalLength. For ComSignalTypes FLOAT32 and FLOAT64 the size is already defined by the signal type and therefore may be omitted.			
Multiplicity	01			
Туре	EcucIntegerParamDef			
Range	0 64			
Default value				
Post-Build Variant Multipli- city	true			
Post-Build Variant Value	true			
	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
Class	Link time	Χ	VARIANT-LINK-TIME	
	Post-build time	Χ	VARIANT-POST-BUILD	
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
	Link time	Χ	VARIANT-LINK-TIME	
	Post-build time	Χ	VARIANT-POST-BUILD	
Scope / Dependency	scope: local			



SWS Item	ECUC_Com_00157 :		
Name	ComSignalEndianness		
Description	Defines the endianness of the signal's netw	vork representation.	
Multiplicity	1		
Туре	EcucEnumerationParamDef		
Range	BIG_ENDIAN		
	LITTLE_ENDIAN		
	OPAQUE		
Post-Build Variant Value	true		
Value Configurati-	Pre-compile time	X VARIANT-PRE-COMPILE	
on Class	Link time	X VARIANT-LINK-TIME	
	Post-build time	X VARIANT-POST-BUILD	
Scope / Depen- dency	scope: local		

SWS Item	ECUC_Com_00437 :			
Name	ComSignalLength			
Description	Description:			
			parameter specifies the length n in	
			_DYN it specifies the maximum length in	
	bytes. For all other types this	s para	meter shall be ignored.	
	Range: 08 for normal CAN/	' LINLI:	-PDI Is	
	064 for CAN FD I-PDUs,		1 200,	
		PDUs	(all of ComIPduType NORMAL),	
	04294967295 for I-PDUs w			
Multiplicity	01			
Туре	EcucIntegerParamDef			
Range	0 4294967295			
Default value				
Post-Build Variant Multipli-	false			
City				
	false			
	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
Class	Link time	Χ	VARIANT-LINK-TIME, VARIANT-POST-	
			BUILD	
	Post-build time			
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
	Link time	Χ	VARIANT-LINK-TIME, VARIANT-POST-	
			BUILD	
	Post-build time			
Scope / Dependency	scope: local			

SWS Item	ECUC_Com_00127 :		
Name	ComSignalType		
·	The AUTOSAR type of the signal. Whether or not the signal is signed or unsigned can be found by examining the value of this attribute. This type could also be used to reserved appropriate storage in AUTOSAR COM.		
Multiplicity	1		
Туре	EcucEnumerationParamDef		
Range	BOOLEAN		
	FLOAT32		
	FLOAT64		



	SINT16		
	SINT32		
	SINT64		
	SINT8		
	UINT16		
	UINT32		
	UINT64		
	UINT8	-	
	UINT8_DYN		
	UINT8_N	-	
Post-Build Variant Value	false		
Value Configurati-	Pre-compile time	Х	VARIANT-PRE-COMPILE
on Class	Link time	Х	VARIANT-LINK-TIME, VARIANT-
			POST-BUILD
	Post-build time		
Scope / Depen- dency	scope: local		

SWS Item	ECUC_Com_00257 :			
Name	ComUpdateBitPosition			
Description	Bit position of update-bit inside I-PDU.			
			e is no update-bit. This setting must be	
	consistently on sender and c	n rec	eiver side.	
	Range: 063 for CAN and LI	N,		
	0511 for CAN FD,			
	02031 for FlexRay,			
	04294967295 for TP.			
Multiplicity	01			
Туре	EcucIntegerParamDef			
Range	0 4294967295			
Default value				
Post-Build Variant Multipli- city	true			
Post-Build Variant Value	true			
	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
Class	Link time	Χ	VARIANT-LINK-TIME	
	Post-build time	Χ	VARIANT-POST-BUILD	
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
	Link time	Χ	VARIANT-LINK-TIME	
	Post-build time	Χ	VARIANT-POST-BUILD	
Scope / Dependency	scope: local			

SWS Item	ECUC_Com_00550:			
Name	ComGwlPduRef			
Description	Reference to an I-PDU of a Signal Gateway source or destination description.			
Multiplicity	1			
Туре	Reference to [ComIPdu]			
Post-Build Variant Value	true			
Value Configuration Class	Pre-compile time	Pre-compile time X VARIANT-PRE-COMPILE		
	Link time X VARIANT-LINK-TIME			
	Post-build time X VARIANT-POST-BUILD			
Scope / Dependency				



No Included Containers

10.1.21 ComGwDestination

SWS Item	ECUC_Com_00546:			
Choice container Name	ComGwDestination			
	Each instance of this choice container allows to define one routing destination either by reference to an already configured COM signal / signal group or by a destination description container.			
Post-Build Variant Multiplicity	true			
Multiplicity Configuration	Pre-compile time X VARIANT-PRE-COMPILE			
Class	Link time X VARIANT-LINK-TIME			
	Post-build time X VARIANT-POST-BUILD			

Container Choices				
Container Name	Multiplicity	Scope / Dependency		
ComGwDestinationDescription	01	Description of a gateway destination. This container allows defining a gateway destination without the configuration of a complete COM signal. This allows adding / changing gateway relations post build without the configuration of new signals.		
ComGwSignal		This container allows specifying a gateway source or destination respectively with a reference to a ComSignal, a ComGroupSignal or a ComSignalGroup.		

10.1.22 ComGwDestinationDescription

SWS Item	ECUC_Com_00549:
Container Name	ComGwDestinationDescription
Description	Description of a gateway destination. This container allows defining a gateway destination without the configuration of a complete COM signal. This allows adding / changing gateway relations post build without the configuration of new signals.
Configuration Parameters	

SWS Item	ECUC_Com_00259:			
Name	ComBitPosition			
Description	Starting position within the I-PDU. This parameter refers to the position in the I-PDU and not in the shadow buffer. If the endianness conversion is configured to Opaque the parameter ComBitPosition shall define the bitO of the first byte like in little endian byte order			
Multiplicity	1			
Type	EcucIntegerParamDef	EcucIntegerParamDef		
Range	0 4294967295			
Default value				
Post-Build Variant Value	true			
Value Configuration Class	Pre-compile time X VARIANT-PRE-COMPILE			
	Link time X VARIANT-LINK-TIME			
	Post-build time X VARIANT-POST-BUILD			



Scope / Dependency	scope: id	ocal
Scone / Dependency	looono: lo	and and

SWS Item	ECUC_Com_00157:		
Name	ComSignalEndianness		
Description	Defines the endianness of the signal's netw	ork representation.	
Multiplicity	1		
Туре	EcucEnumerationParamDef		
Range	BIG_ENDIAN		
	LITTLE_ENDIAN		
	OPAQUE	PAQUE	
Post-Build Variant Value	true		
Value Configurati-	Pre-compile time	X VARIANT-PRE-COMPILE	
on Class	Link time	X VARIANT-LINK-TIME	
	Post-build time	X VARIANT-POST-BUILD	
Scope / Depen- dency	scope: local		

SWS Item	ECUC_Com_00170:			
Name	ComSignalInitValue			
Description	Initial value for this signal. In case of UINT8_N the default value is a string of length ComSignalLength with all bytes set to 0x00. In case of UINT8_DYN the initial size shall be 0.			
	In case the ComSignalType is UINT8, UINT16, UINT32, UINT64, SINT8, SINT16, SINT32, SINT64 the string shall be interpreted as defined in the chapter Integer Type in the AUTOSAR EcuC specification. In case the ComSignalType is FLOAT32, FLOAT64 the string shall be interpreted as defined in the chapter Float Type in the AUTOSAR EcuC specification. In case the ComSignalType is BOOLEAN the string shall be interpreted as defined in the chapter Boolean Type in the AUTOSAR EcuC specification.			
	In case the ComSignal is a UINT8_N, UINT8_DYN the string shall be interpreted as a decimal representation of the characters separated by blanks, e.g. "97 98 100" means a string "abd", where the char "a" is in byte 0(lowest address), "b" is in byte 1, and "d" is in byte 2 and (highest address). For the ComSignalType UINT8_DYN the dynamic length shall be set to the number of configured characters. An empty string "" shall be interpreted as 0-sized dynamic signal.			
Multiplicity	01			
Туре	EcucStringParamDef			
Default value	0			
maxLength				
minLength				
regularExpression				
Post-Build Variant Multipli- city	true			
Post-Build Variant Value	true			
	DI Pre-compile time X VARIANT-PRE-COMPILE Link time X VARIANT-LINK-TIME			
Class				
	Post-build time	Χ	VARIANT-POST-BUILD	
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
•	Link time	Х	VARIANT-LINK-TIME	
	Post-build time	Х	VARIANT-POST-BUILD	
Scope / Dependency	scope: local dependency: In case of UIN	Γ8 N	the length of ComSignalInitValue has to	



be the same as ComSignalLength.

SWS Item	ECUC_Com_00232 :	
Name	ComTransferProperty	
	Defines if a write access to this signal can trigger the trans ding I-PDU. If the I-PDU is triggered, depends also on the corresponding I-PDU.	
Multiplicity	01	
Туре	EcucEnumerationParamDef	
Range	PENDING	A write access to this signal never triggers the transmission of the corresponding I-PDU.
	TRIGGERED	Depending on the transmission mode, a write access to this signal can trigger the transmission of the corresponding I-PDU.
	TRIGGERED_ON_CHANGE	Depending on the transmission mode, a write access to this signal can trigger the transmission of the corresponding I-PDU, but only in case the written value is different to the locally stored (last sent or initial value) in length or value.
	TRIGGERED_ON_CHANGE_WITHOUT_REPETITION	Depending on the transmission mode, a write access to this signal can trigger the transmission of the corresponding I-PDU just once without a repetition, but only in case the written value is different to the locally stored (last sent or initial value) in length or value.
	TRIGGERED_WITHOUT_REPETITION	Depending on the transmission mode, a write access to this signal can trigger the transmission of the corresponding I-PDU just once without a repetition.
	true	
Post-Build Vari- ant Value	true	
Multiplicity Configuration Class	Pre-compile time Link time	X VARIANT-PRE- COMPILE X VARIANT-LINK-TIME
	Post-build time	X VARIANT-POST-BUILD
Value Configu- ration Class	Pre-compile time	X VARIANT-PRE- COMPILE
	Link time	X VARIANT-LINK-TIME
	Post-build time	X VARIANT-POST-BUILD



Scope / Depen-	scope: local
dency	

SWS Item	ECUC_Com_00257 :	ECUC Com 00257:		
Name	ComUpdateBitPosition			
Description	Bit position of update-bit insi	de I-F	PDU.	
			e is no update-bit. This setting must be	
	consistently on sender and o	n rec	eiver side.	
	Dangar O. 62 for CAN and LI	N I		
	Range: 063 for CAN and LI 0511 for CAN FD,	IN,		
	02031 for FlexRay,			
	04294967295 for TP.			
Multiplicity	01			
Туре	EcucIntegerParamDef			
Range	0 4294967295			
Default value				
Post-Build Variant Multipli-	true			
city	ude			
Post-Build Variant Value	true			
Multiplicity Configuration	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
Class	Link time	Χ	VARIANT-LINK-TIME	
	Post-build time X VARIANT-POST-BUILD			
Value Configuration Class	Pre-compile time X VARIANT-PRE-COMPILE			
	Link time X VARIANT-LINK-TIME			
	Post-build time X VARIANT-POST-BUILD			
Scope / Dependency	scope: local			

SWS Item	ECUC_Com_00550:			
Name	ComGwlPduRef			
Description	Reference to an I-PDU of a Signal Gateway source or destination description.			
Multiplicity	1			
Туре	Reference to [ComIPdu]			
Post-Build Variant Value	true			
Value Configuration Class	Pre-compile time	Х	VARIANT-PRE-COMPILE	
	Link time X VARIANT-LINK-TIME			
	Post-build time X VARIANT-POST-BUILD			
Scope / Dependency				

Included Containers			
Container Name	Multiplicity	Scope / Dependency	
ComFilter		This container contains the configuration parameters of the AUTOSAR COM module's Filters.	
		Note: On sender side the container is used to specify the transmission mode conditions.	

10.1.23 ComGwSignal

SWS Item	ECUC_Com_00551:
Container Name	ComGwSignal
Description	This container allows specifying a gateway source or destination respec-



	tively with a reference to a ComSignal, a ComGroupSignal or a ComSignalGroup.
Configuration Parameters	

SWS Item	ECUC_Com_00547 :		
Name	ComGwSignalRef		
Description	Reference to an object of a gateway relation. Either to a ComSignal, ComGroupSignal or to a SignalGroup.		
Multiplicity	1		
Туре	Choice reference to [ComGroupSignal , ComSignal , ComSignalGroup]		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE
	Link time	Χ	VARIANT-LINK-TIME
	Post-build time	Χ	VARIANT-POST-BUILD
Scope / Dependency			

A	I I I I	Containers
Δ	INCILIADA	L'Antainarc
	IIIGIUU C U	CUITAILLE

10.2 Configuration Rules

10.2.1 General Rules

[SWS_Com_00401] [It is illegal for any two of the following parameters to have the same value:

- shortName of a ComSignal
- shortName of a ComSignalGroup
- shortName of a ComGroupSignal
- shortName of a ComIPdu
- shortName of a ComIPduGroup

(SRS_Com_02067)

[SWS_Com_00732] [It is illegal for any of the following five parameters:

- ComNotification
- ComErrorNotification
- ComTimeoutNotification
- ComInvalidNotification
- ComIPduCallout

to have the same value as any of the following five parameters

- Com_<shortName of a ComSignal>
- Com_<shortName of a ComSignalGroup>
- Com <shortName of a ComGroupSignal>
- Com_<shortName of a ComIPdu>
- Com <shortName of a ComIPduGroup>

| (SRS_Com_02067)

[SWS_Com_00402] [It is illegal for any of the following parameters not to be formulated according to C's identifier rules:



- shortName of a ComSignal
- shortName of a ComSignalGroup
- shortName of a ComGroupSignal
- shortName of a ComIPdu
- shortName of a ComIPduGroup
- ComNotification
- ComErrorNotification
- ComTimeoutNotification
- ComInvalidNotification
- ComIPduCallout

I(SRS Com 02067)

10.2.2 Signal Configuration

More than one signal can be packed into an I-PDU as long as the following packing rules are fulfilled:

[SWS_Com_00102] [ComSignal/ ComGroupSignal are not allowed to overlap each other.] (SRS_Com_02067)

It is explicitly allowed that a ComSignal/ ComGroupSignal may have the size 0, see ECUC Com 00158.

A signal of size 0 never overlaps other signals. Therefore, it can be configured to an arbitrary position within the I-PDU. The position of a zero sized signal is only relevant in case receiving an I-PDU partially.

[SWS_Com_00105] [ComSignal/ ComGroupSignal of ComSignalType UINT8_N and UINT8_DYN shall be byte aligned (ComBitPosition is a multiple of 8).] (SRS_Com_02067)

[SWS_Com_00443] [A ComSignal/ ComGroupSignal of type uint8[n] shall always be mapped to an n-bytes sized ComSignal/ ComGroupSignal.] (SRS_Com_02067)

[SWS_Com_00553] [A ComSignal/ ComGroupSignal of type uint8[n] shall be configured to have OPAQUE endianness.] (SRS Com 02067)

[SWS_Com_00754] [A dynamic length I-PDU shall contain at most one dynamic length signal.] (SRS_Com_02091, SRS_Com_02092)

[SWS_Com_00755] [The dynamic length signal shall be placed last in a dynamic length I-PDU.] (SRS_Com_02091, SRS_Com_02093)

[SWS_Com_00756] [The ComSignalLength parameter shall be configured to the maximum size/ length for dynamic length signals.] (SRS_Com_02091, SRS_Com_02097)



[SWS_Com_00310] [For I-PDUs with transmission mode *DIRECT* or *MIXED* with ComTxModeNumberOfRepetitions greater or equal 1 no update-bit (ComUpdateBit-Position) shall be configured.](SRS Com 02067, SRS Com 02030)

[SWS_Com_00785] [The ComBitSize of a (group) signal shall not extend past the size of its configured ComSignalType.] (SRS_Com_02067)

For example, the ComBitSize of a signal with ComSignalType UINT8 shall not exceed 8 bits.

[SWS_Com_00790] [The configured string of ComSignalInitValues/ ComSignalData-InvalidValue shall be interpreted according to the definitions of [22] for the boolean and all numerical types.] (SRS_Com_02067)

[SWS_Com_00859] [In case a ComSignalDataInvalidValue is configured for a ComSignal that is included in a ComIPdu with ComIPduDirection *RECEIVE*, the ComDataInvalidAction shall also be configured for this ComSignal.] (SRS_Com_02079, SRS_Com_02087)

10.2.3 Signal Group Configuration

[SWS_Com_00365] [It shall not be allowed to configure signal groups for routing with data type differences between receive and transmit signal group. A sub-setting of signal groups (as defined in SWS_Com_00735) shall be supported.] (SRS_Com_02067)

How the signals of signal groups are placed within an I-PDU is not restricted. It is allowed to define interlaced signal groups, or to place other signals within the wholes of a signal group.

[SWS_Com_00860] [In case a ComSignalDataInvalidValue is configured for at least one ComGroupSignal of a ComSignalGroup that is included in a ComIPdu with ComIPduDirection *RECEIVE*, the ComDataInvalidAction shall also be configured for this ComSignalGroup.] (SRS_Com_02079, SRS_Com_02087)

10.2.4 Transmission Mode Configuration

[SWS_Com_00465] [Every ComTxModeTrue or ComTxModeFalse that is a potential result of the configured/ calculated TMS must be configured. Within the ComTxIPdu, at least one of the containers ComTxModeTrue or ComTxModeFalse has to be included.] (SRS_Com_02067)

10.2.5 Signal Gateway Configuration

[SWS_Com_00384] [The ComBitSize of a received and to be routed ComSignal shall not differ.] (SRS_Com_02067)



[SWS_Com_00598] [A signal or signal group contained in an I-PDU with ComIPdu-Type configured as TP shall not be configured as source or destination within the ComGwMapping configuration container.] (SRS_PduR_06055)

Additionally to reception deadline monitoring of a ComSignal, to be routed by the Signal Gateway, it is possible to configure update-bits via ComUpdateBitPosition, for the transmit signal. In this case, the receiving node can detect if the sender has really updated the signal or it is just repeated by the Signal Gateway. If this is necessary depends on the use-case.

10.2.6 Filter Configuration

[SWS_Com_00535] [For the ComFilterAlgorithm *ONE_EVERY_N*, the ComFilterOffset shall be configured to a value lesser than ComFilterPeriod.] (SRS_Com_02067)

10.2.7 Post Build Configuration

[SWS_Com_00373] [The post-build time configuration part (post-compile and post-link time) can only be updated when it is not in use.] (SRS_Com_02067, SRS_PduR_06002)

[SWS_Com_00487] [The complete post-build time configurable configuration shall be identifiable by a unique identifier.] (SRS_PduR_06097)

10.2.8 Dynamic Length I-PDUs

[SWS_Com_00817] [I-PDUs including metadata shall not be configured as dynamic length I-PDUs.] (SRS_Com_02067)

The above restriction is necessary, since the length of the dynamic length signal could not be derived correctly, when the I-PDU contains additional metadata.

Since the FlexRay Interface does only support even values for the I-PDU length, it is not recommend to configure dynamic length I-PDU to be send via FrIf. Instead, the FlexRay TP module should be used to transport dynamic length I-PDUs via FlexRay.

10.2.9 Replicated I-PDUs

[SWS_Com_00834] [If an I-PDU is configured for replication (includes a ComIPduReplication), this I-PDU shall also have configured an I-PDU counter (ComIPduCounter) with a counter threshold (ComIPduCounterThreshold) set to 0.] (SRS_Com_02102)

For further information on this constraint see 7.10.



10.2.10 I-PDU group

[SWS_Com_00871] [All I-PDUs that are contained within one I-PDU group shall have the same ComIPduDirection.] (SRS_Com_00218)

Since the nesting of I-PDU groups is only conceptual (see Chapter 7.3.5.1), the above requirements restricts also all nested I-PDU groups to have the same ComIPduDirection.



11 Not Applicable Requirements

[SWS_Com_00999] [These requirements are not applicable to this specification.] (SRS_BSW_00171, SRS_BSW_00170, SRS_BSW_00383, SRS_BSW_00375, SRS_BSW_00416, SRS_BSW_00437, SRS_BSW_00168, SRS_BSW_00423, SRS_BSW_00424, SRS_BSW_00426, SRS_BSW_00427, SRS_BSW_00428, SRS_BSW_00429, SRS_BSW_00433, SRS_BSW_00417, SRS_BSW_00409, SRS_BSW_00386, SRS_BSW_00161, SRS_BSW_00162, SRS_BSW_00005, SRS_BSW_00164, SRS_BSW_00325, SRS_BSW_00413, SRS_BSW_00347, SRS_BSW_00307, SRS_BSW_00410, SRS_BSW_00314, SRS_BSW_00353, SRS_BSW_00361, SRS_BSW_00302, SRS_BSW_00328, SRS_BSW_00006, SRS_BSW_00378, SRS_BSW_00306, SRS_BSW_00308, SRS_BSW_00309, SRS_BSW_00009, SRS_BSW_00010, SRS_BSW_00333, SRS_BSW_00321, SRS_BSW_00341, SRS_BSW_00334)



12 Appendix A

This appendix contains use cases with different transmission modes and the necessary configuration for these. Table 10 shows the notation of the use case diagrams.

Notation	Description
t_c , t_{c1} , t_{c2}	cycle times
t _d	cycle time of N-Times sent signals
t _r	minimum SW reaction time of COM-Layer due to internal main cycle time
V	Value: x stands for an arbitrary value/ value range, aw for specific values / value ranges, defined by the user, with a <> b, range a is disjoint from range b.
∇	request from RTE to the COM-Layer
↓	request from COM-Layer to PDU Router
†	potential but skipped request from COM-Layer to PDU Router (e.g. because of a new send request by the RTE or delayed due to minimum delay time)
dt	minimum delay time: minimum distance between two requests to PDU Router
without TMS switch	without switching of the TMS (see 7.3.3.2) from true to false or vice versa
with TMS switch	with switching of the TMS (see 7.3.3.2) from <i>true</i> to <i>false</i> or vice versa (from TM 1 to TM 2); one TM is named before the "+" and one behind in the description

Table 10: Legend for use case diagrams.

Use case 1 shows an I-PDU that is sent out cyclically with a cycle time t_c . This I-PDU consists of signals that all have the ComTransferProperty *PENDING*. It is configured that the transmission takes place when the TMS evaluates to true.

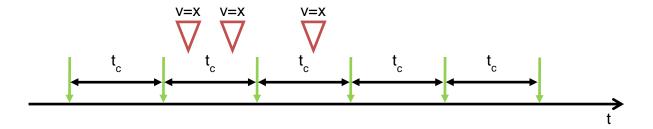


Figure 11: Use case 1, TM periodic (without TMS switch, see Chapter 7.3.3.2)

ComSignal	
• •	PENDING or TRIGGERED (TRIGGERED has no influence)
ComFilter	



ComFilterAlgorithm	ALWAYS
ComlPdu	
ComlPduDirection	SEND
ComTxModeTrue	
ComTxModeTimePeriod	tc
ComTxModeMode	PERIODIC
ComTxIPdu	
ComMinimumDelayTime	0 or omitted

Table 11: Relevant I-PDU transmission configuration for use case 1

Because of the configuration of the parameter ComFilterAlgorithm *ALWAYS* of the ComFilter, there is no need to configure a transmission mode for the case that the TMS evaluates to false.

It does not make any difference in the behavior whether the ComFilterAlgorithm parameter of the ComFilter is set for all the signals within the I-PDU to *ALWAYS* or if the ComFilter is not defined (does not contribute to the evaluation of the TMS), see SWS_Com_00255.



Use case 2 shows an I-PDU which is sent out three times whenever a value is given by the upper (Com_SendSignal or Com_SendSignalGroup). The time between two transmissions is t_d . This I-PDU consists of signals, which all have the ComTransfer-Property TRIGGERED. It is configured that the transmission takes place when the TMS evaluates to true.

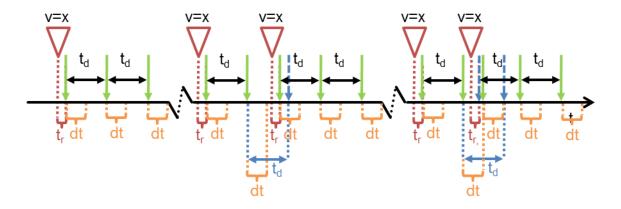


Figure 12: Use case 2, TM DIRECT (N-Times) here n = 2 (without TMS switch)

ComGeneral	
ComEnableMDTForCyclicTransmission	true
ComSignal	
ComTransferProperty	TRIGGERED
ComFilter	
ComFilterAlgorithm	ALWAYS
ComlPdu	
ComlPduDirection	SEND
ComTxModeTrue	
ComTxModeMode	DIRECT
ComTxModeNumberOfRepetitions	2
ComTxModeRepetitionPeriod	t_d
ComTxIPdu	
ComMinimumDelayTime	dt

Table 12: Relevant I-PDU transmission configuration for use case 2

If there is a new send request by the RTE before the ongoing repetition cycle is completed, the new repetition cycle is started and the rest of the last one is discarded.



Use case 3 shows an I-PDU which is send out cyclically with a cycle time t_{c1} if value v = a (TMS evaluates to true) and with a cycle time t_{c2} if value v = b (TMS evaluates to false). The I-PDU consists of signals, which all have the ComTransferProperty *PENDING*.

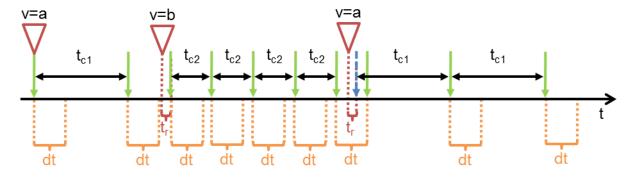


Figure 13: Use case 3, TM periodic + periodic (with TMS switch)

ComGeneral	
ComEnableMDTForCyclicTransmission	true
ComSignal	
ComTransferProperty	PENDING or TRIGGERED (TRIGGERED has no influence)
ComFilter	
ComFilterAlgorithm	any filter mapping value a to true and value b to false
ComlPdu	
ComlPduDirection	SEND
ComTxModeTrue	
ComTxModeMode	PERIODIC
ComTxModeTimePeriod	t _{c1}
ComTxModeFalse	
ComTxModeMode	PERIODIC
ComTxModeTimePeriod	t _{c2}
ComTxIPdu	
ComMinimumDelayTime	dt

Table 13: Relevant I-PDU transmission configuration for use case 3

The TMS switch caused by the new value v = b, starts a new cycle within the next main function and the new value is sent out. Nevertheless, the minimum delay time dt has to be taken into account, since ComEnableMDTForCyclicTransmission is set to true.

For the parameter ComFilterAlgorithm, the following OSEK COM defined filters can be used for this use-case:

- MASKED_NEW_EQUALS_X
- MASKED NEW DIFFERS X
- MASKED NEW DIFFERS MASKED OLD
- NEW_IS_WITHIN
- NEW IS OUTSIDE



Use case 4 shows an I-PDU which is send out cyclically with a cycle time t_c if value v = a (TMS evaluates to true) and if value v = b (TMS evaluates to false) it is sent out three times whenever the value is given by the RTE. The time between two transmissions is t_d . The I-PDU consists of signals that all have the ComTransferProperty *TRIGGERED*.

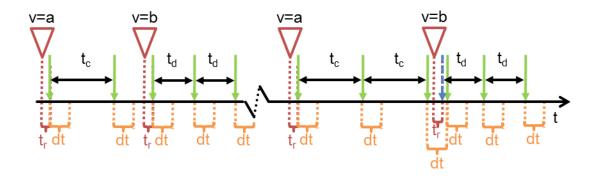


Figure 14: Use case 4 scenario a, TM periodic + DIRECT/N-Times, here n = 2 (with TMS switch)

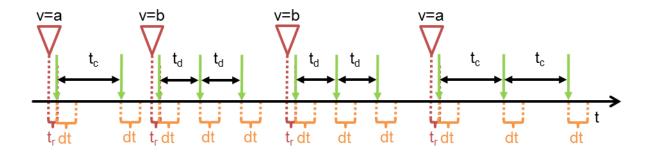


Figure 15: Use case 4 scenario b, TM periodic + DIRECT/N-Times, here n = 2 (with TMS switch)

ComGeneral	
ComEnableMDTForCyclicTransmission	True
ComSignal	
ComTransferProperty	TRIGGERED
ComFilter	
ComFilterAlgorithm	any filter mapping value a to true and value b to false
ComlPdu	
ComlPduDirection	SEND
ComTxModeTrue	
ComTxModeMode	PERIODIC
ComTxModeTimePeriod	t _c
ComTxModeFalse	
ComTxModeMode	DIRECT
ComTxModeNumberOfRepetitions	2
ComTxModeRepetitionPeriod	t_d
ComTxIPdu	
ComMinimumDelayTime	dt

Table 14: Relevant I-PDU transmission configuration for use case 4



After the switch from ComTxModeMode *DIRECT* to *PERIODIC* the cycle is started within the next main function and the new value a is sent out with respect to ComMinimumDelayTime dt.

Use case 5 shows an I-PDU which is send out cyclically with a cycle time t_c and if the value (the same or a new one) is given by the RTE it is also sent out directly three times. The time between two of these three transmissions is always t_d . The I-PDU consists of signals that all have the ComTransferProperty TRIGGERED.

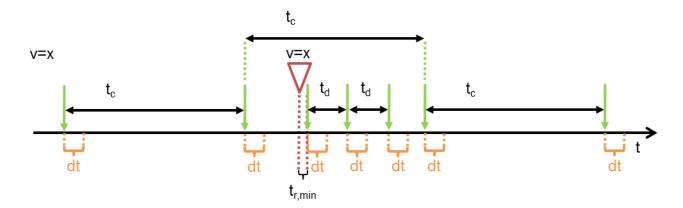


Figure 16: Use case 5 scenario a, TM MIXED, here n = 2 (without TMS switch)

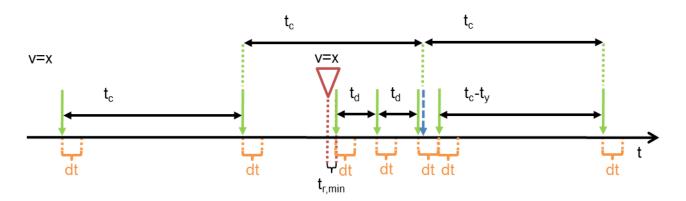


Figure 17: Use case 5 scenario b, TM MIXED, here n = 2 (without TMS switch)

ComGeneral	
ComEnableMDTForCyclicTransmission	true
ComSignal	
ComTransferProperty	TRIGGERED
ComFilter	
ComFilterAlgorithm	ALWAYS
ComlPdu	
ComlPduDirection	SEND
ComTxModeTrue	
ComTxModeMode	MIXED
ComTxModeTimePeriod	t _c



ComTxModeNumberOfRepetitions	2
ComTxModeRepetitionPeriod	t_d
ComTxIPdu	
ComMinimumDelayTime	dt

Table 15: Relevant I-PDU transmission configuration for use case 5

If the next transmission caused by the periodic part of the ComTxModeMode *MIXED* should take place within the timeout dt (ComMinimumDelayTime) after a transmission of the *DIRECT* (N-Times) part, this sent out is delayed until the minimum delay time is elapsed. However, after that the next period of the periodic part is shortened so that there is only an intermediate phase shift of the periodic part but no continuous one.

Use case 6 shows an I-PDU which is send out cyclically with a cycle time t_{c2} if value v = b (TMS evaluates to false). If value v = a (TMS evaluates to true) it is sent out cyclically with a cycle time t_{c1} and whenever the value v = a is given by the RTE it is also sent out directly three times. The time between two of these three transmissions is always $t_{d.}$ The I-PDU consists of signals that all have the ComTransferProperty TRIGGERED.

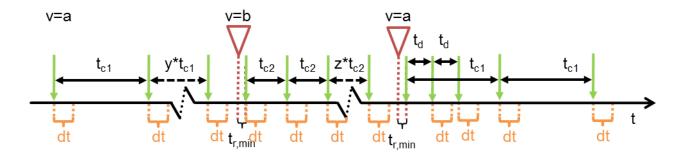


Figure 18: Use Case 6, TM MIXED, here n= 2 + periodic (with TMS switch)

ComGeneral	
ComEnableMDTForCyclicTransmission	true
ComSignal	
ComTransferProperty	TRIGGERED
ComFilter	
ComFilterAlgorithm	any filter mapping value a to true and value b to false
ComlPdu	
ComlPduDirection	SEND
ComTxModeTrue	
ComTxModeMode	MIXED
ComTxModeTimePeriod	t _{c1}
ComTxModeNumberOfRepetitions	2
ComTxModeRepetitionPeriod	t_d
ComTxModeFalse	
ComTxModeMode	PERIODIC
ComTxModeTimePeriod	t _{c2}
ComTxIPdu	
ComMinimumDelayTime	dt



Table 16: Relevant I-PDU transmission configuration for use case 6

A usage of this in practice is for example the signal of the button that controls the window-lift motor. If the button is not pressed, there is a long cycle time t_{c1} with this information. If it is pressed this information is distributed with a short cycle time t_{c2} . If the button is released again, starting with the next main function this information is distributed three times with t_d and after that, again the long cycle time is used.

Use case 7 is similar to use case 5 but with ComEnableMDTForCyclicTransmission disabled and ComTxModeNumberOfRepetitions set to one.

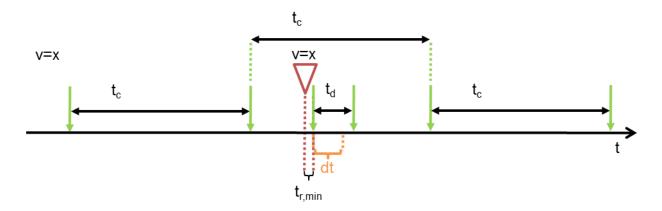


Figure 19: Use case 7 scenario a, TM MIXED, here n = 1 (without TMS switch)

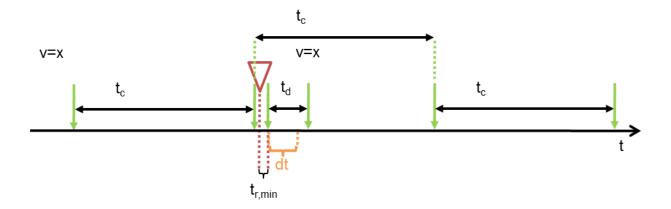


Figure 20: Use case 7 scenario b, TM MIXED, here n = 1 (without TMS switch)



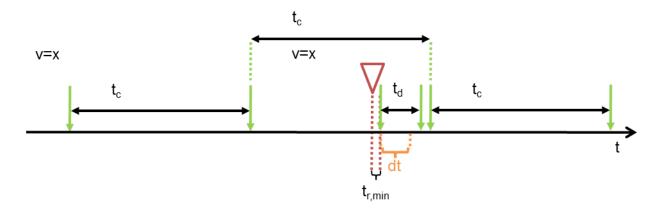


Figure 21: Use case 7 scenario c, TM MIXED, here n = 1 (without TMS switch)

ComGeneral	
ComEnableMDTForCyclicTransmission	False
ComSignal	
ComTransferProperty	TRIGGERED
ComFilter	
ComFilterAlgorithm	ALWAYS
ComlPdu	
ComlPduDirection	SEND
ComTxModeTrue	
ComTxModeMode	MIXED
ComTxModeTimePeriod	t _c
ComTxModeNumberOfRepetitions	1
ComTxModeRepetitionPeriod	t_d
ComTxIPdu	
ComMinimumDelayTime	dt

Table 17: Relevant I-PDU transmission configuration for use case 7

In contrary to use case 5, here the minimum delay timer is neither started for the periodic transmissions of the cyclic part nor for the repeated transmissions of the direct part of the Mixed mode. This can result in two consecutive transmissions within the timespan dt as shown in the scenarios b and c.