



STEP 1 Mounting the Caster Wheel

Gather the Parts



Prepare 1 caster wheel, 4 brass standoffs, and 8 small screws.

STEP 2 Mounting the Caster Wheel

Insert the Screws



Insert 4 screws through the caster plate, one in each corner hole.

STEP 3 Mounting the Caster Wheel


Attach a Standoff



Thread the brass standoff onto the screw on the caster wheel.

STEP 4 Mounting the Caster Wheel


Install All 4 Standoffs

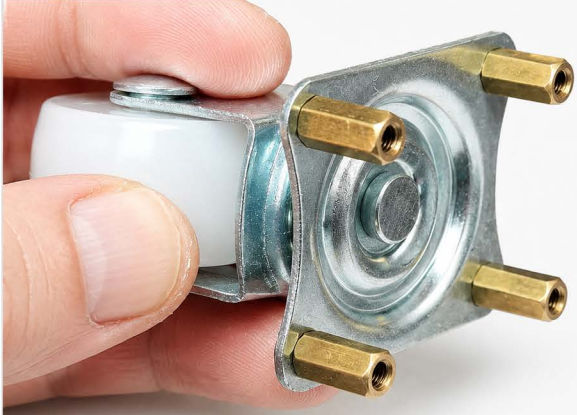

Repeat until all 4 brass standoffs are attached.

STEP 5 Mounting the Caster Wheel

Find the Mounting Holes

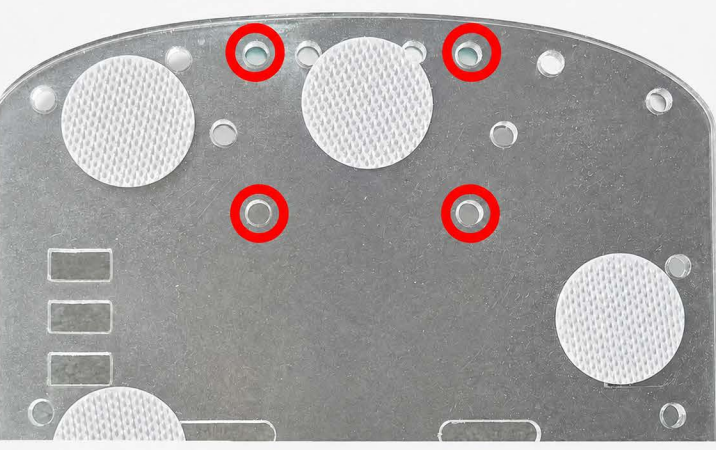

Use these 4 holes to mount the caster wheel.


STEP 6 Mounting the Caster Wheel

Fasten it securely with screws




Fasten all 4 screws securely to ensure the caster wheel is firmly mounted.

STEP 1 Gather the required parts.

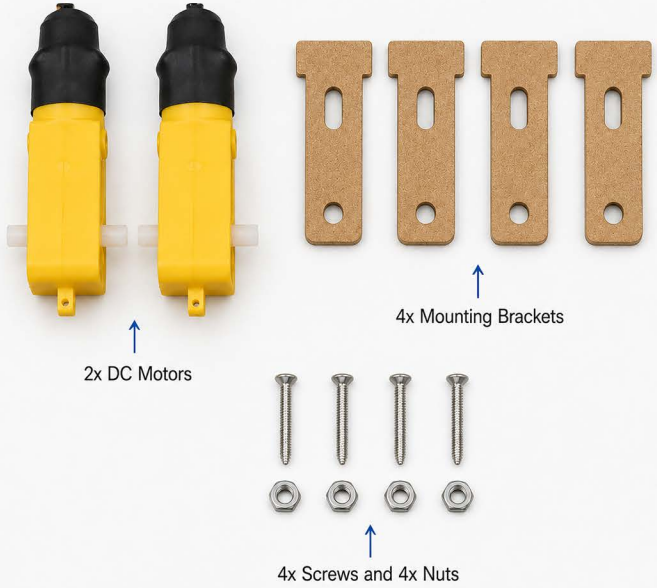


STEP 2 Attach the mounting bracket

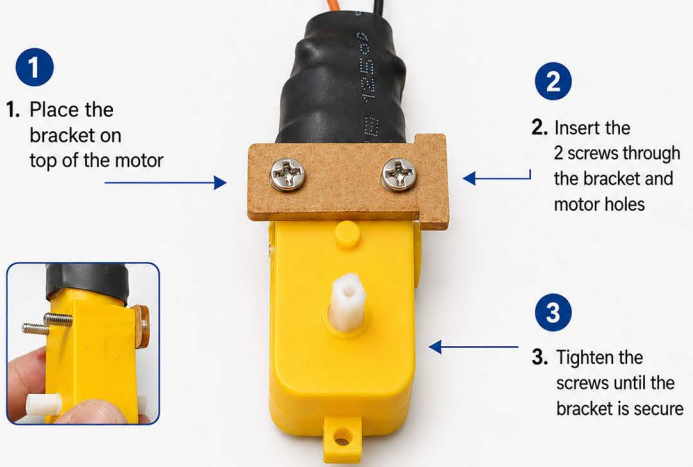

Final output: bracket mounted securely on the motor. Repeat for the second motor.

STEP 3 Mount the motor on the chassis

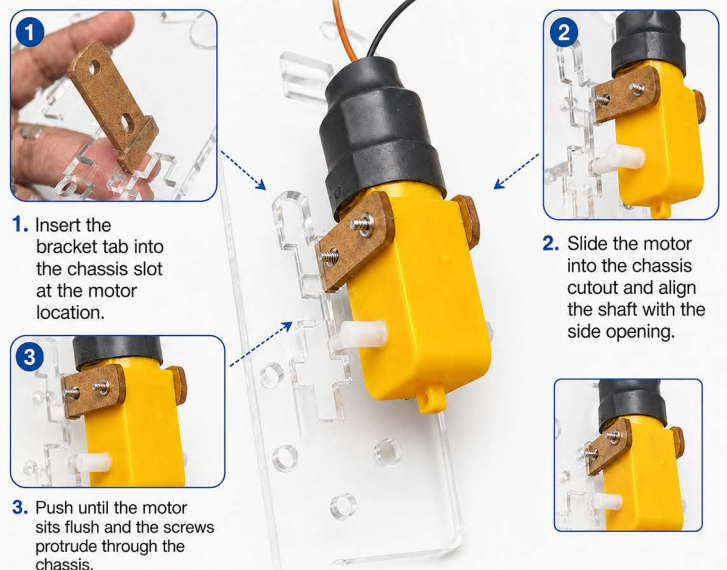


Final output: motor mounted correctly on the chassis. Repeat for the second motor.

STEP 4 Connect the wheels to the motors



Final output: wheel connected securely to the motor. Repeat for the second wheel.

STEP 5 Place the battery holder and PCB board

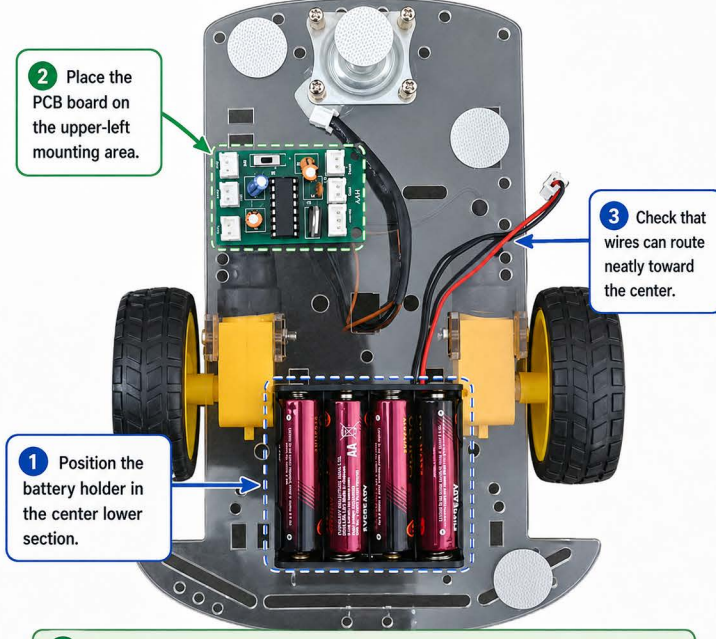

Final output: battery holder and PCB board mounted in the correct positions.