

IxNetwork

Release 10.25

Getting Started Guide

Notices

Copyright Notice

© Keysight Technologies 2006–2024

No part of this document may be reproduced in any form or by any means (including electronic storage and retrieval or translation into a foreign language) without prior agreement and written consent from Keysight Technologies, Inc. as governed by United States and international copyright laws.

Warranty

The material contained in this document is provided "as is," and is subject to being changed, without notice, in future editions. Further, to the maximum extent permitted by applicable law, Keysight disclaims all warranties, either express or implied, with regard to this manual and any information contained herein, including but not limited to the implied warranties of merchantability and fitness for a particular purpose. Keysight shall not be liable for errors or for incidental or consequential damages in connection with the furnishing, use, or performance of this document or of any information contained herein. Should Keysight and the user have a separate written agreement with warranty terms covering the material in this document that conflict with these terms, the warranty terms in the separate agreement shall control.

Technology Licenses

The hardware and/or software described in this document are furnished under a license and may be used or copied only in accordance with the terms of such license.

U.S. Government Rights

The Software is "commercial computer software," as defined by Federal Acquisition Regulation ("FAR") 2.101. Pursuant to FAR 12.212 and 27.405-3 and Department of Defense FAR Supplement ("DFARS") 227.7202, the U.S. government acquires commercial computer software under the same terms by which the software is customarily provided to the public. Accordingly,

Keysight provides the Software to U.S. government customers under its standard commercial license, which is embodied in its End User License Agreement (EULA), a copy of which can be found at <http://www.keysight.com/find/sweula>. The license set forth in the EULA represents the exclusive authority by which the U.S. government may use, modify, distribute, or disclose the Software. The EULA and the license set forth therein, does not require or permit, among other things, that Keysight: (1) Furnish technical information related to commercial computer software or commercial computer software documentation that is not customarily provided to the public; or (2) Relinquish to, or otherwise provide, the government rights in excess of those rights customarily provided to the public to use, modify, reproduce, release, perform, display, or disclose commercial computer software or commercial computer software documentation. No additional government requirements beyond those set forth in the EULA shall apply, except to the extent that those terms, rights, or licenses are explicitly required from all providers of commercial computer software pursuant to the FAR and the DFARS and are set forth specifically in writing elsewhere in the EULA. Keysight shall be under no obligation to update, revise or otherwise modify the Software. With respect to any technical data as defined by FAR 2.101, pursuant to FAR 12.211 and 27.404.2 and DFARS 227.7102, the U.S. government acquires no greater than Limited Rights as defined in FAR 27.401 or DFAR 227.7103-5 (c), as applicable in any technical data. 52.227-14 (June 1987) or DFAR 252.227-7015 (b)(2) (November 1995), as applicable in any technical data.

Contacting us

Keysight headquarters

1400 Fountaingrove Parkway
 Santa Rosa, CA 95403-1738
 Email address: support@keysight.com
 Website: <https://support.ixiacom.com/contact>

Support

Location	Phone number	Local time
<i>Americas</i>		
US, Canada	1-888-829-5558	8h00 – 17h00
Brazil	0800-892-0522	8h00 – 17h00
Mexico	001-888-829-5558	8h00 – 17h00
Other	+1-719-273-6516	8h00 – 17h00
<i>EMEA</i>		
Belgium	0800-18686	8h30 – 17h30
Finland	0800-913-352	8h30 – 17h30
France	0800-917228	8h30 – 17h30
Germany	0800-0824099	8h30 – 17h30
India	1800-18-02552	8h30 – 17h30
Ireland	1800-949245	8h30 – 17h30
Israel	1-809-454975	8h30 – 17h30
Italy	0800-790571	8h30 – 17h30
Luxembourg	0800-25112	8h30 – 17h30
Netherlands	0800-022-9086	8h30 – 17h30

Romania	0213 015 699	8h30 – 17h30
Spain	800-654386	8h30 – 17h30
Sweden	0201-202266	8h30 – 17h30
United Kingdom	0800-0293882	8h30 – 17h30
<i>Asia and Australia</i>		
Australia	1-800-370-558	8h30 – 17h00
China Mainland	800-810-0005	8h30 – 17h30
	400-810-0005	8h30 – 17h30
Hong Kong	800-931-613	9h00 – 18h00
Japan	0120-421-621	9h00 – 17h30
Malaysia	1800-819 092	8h30 – 17h30
South Korea	080-770-0800	8h30 – 17h30
Singapore	800-101-3797	8h30 – 17h30
Taiwan	0800-699-880	9h00 – 18h00
Other	+65 6215 7600	8h30 – 17h30 (Singapore)

Last updated: 1 August 2024

Documentation conventions

The following documentation conventions are used in this guide:

Describing interactions with the UI

You can interact with products by using different input methods: keyboard, mouse, touch, and more. So in most parts of the user documentation, generic verbs have been used that work with any input method. In cases where input-neutral verbs do not work, mouse-specific verbs are used as the first choice, followed by touch-specific verbs as the second choice.

See the following table for examples on how you can interpret the different input methods.

Input-neutral	Mouse	Touch
Select Modify .	Click Modify .	Tap Modify .
Select Accounts > Other accounts > Add an account .	Click Accounts > Other accounts > Add an account .	Tap Accounts > Other accounts > Add an account .
To open the document in Outline view, select View > Outline .	To open the document in Outline view, click View > Outline .	To open the document in Outline view, tap View > Outline .
Select Protocols .	Click the Protocols tab.	Tap Protocols .
-NA-	Double-click the Client wizard.	Double-tap the Client wizard.
Open the Packages context menu.	Right-click Packages to open the shortcut menu.	Long tap Packages to open the shortcut menu.

Deprecated words

The following words have been replaced with new words, considering the audience profile, our modern approach to voice and style, and our emphasis to use input-neutral terms that support all input methods.

Old usage...	New usage...
shortcut menu, right-click menu	context menu
click, right-click	select
drag and drop	drag

This page intentionally left blank.

Table of Contents

Contacting us	3
Documentation conventions	5
About This Guide	10
Typographical conventions	10
Textual conventions	10
Related documentation	11
Chapter 1 Introduction to IxNetwork	1
Features of IxNetwork	1
GUI Framework	1
Enhanced Port Management	2
Enhanced Protocol Configuration	3
Traffic Wizard	4
Test Composer	7
Enhanced Statistics Reporting	8
Log View Window	8
Application Traffic	9
Quick Tests	9
Flow Tracking	10
Capture Settings	11
Analyzer	12
Data Miner	13
Chapter 2 Installation and Licensing	15
General Licensing Steps	15
Chassis Installation	16
IxNetwork International Language Support	16
IxNetwork Installation	16

Configuring IxNetwork for Silent Installation	25
Preparing a Keysight Chassis for Silent Installation	25
IxNetwork Silent Install using .exe Package	26
Features	27
Properties	27
IxNetwork setup.exe Package Examples	28
Install IxNetwork on a Physical Chassis	29
Uninstall/Modify a Current Installation	29
Silent Repair/Modify	29
IxNetwork Linux Installation	29
Installation using IxOS Binary Installer	29
Installation using IxOS tgz Package	30
Installation/Uninstallation Commands	30
Installation Sequence using the Console Mode	31
Installation Sequence Using the GUI Mode	52
Shell Wrapper Installation	55
TCL Automation Setup	55
Python Automation Setup	56
Perl Automation Setup	57
Versions Supported by IxNetwork	57
Chapter 3 Running a Test with IxNetwork	59
Requirements	59
A Simple IxNetwork Test	60
Connect the Ports	60
Start IxNetwork	60
Select the Ports	62
Configure the Protocol	64
Review the Protocol Configuration	69
Ping the DUT	70
Start the BGP Protocol	71
Configure Traffic	72

Set Up the Test Composer	80
Set Up CSV Logging	85
Set Up a QuickTest	85
Chapter 4 IxNetwork Licensing	87
IxNetwork-Specific License Information	87
Types of Licenses	88
Node-Locked Licenses	88
Floating Licenses	88
Evaluation Licenses	88
Licensing Models	88
Subscription Licenses	88
Perpetual Licenses	89
Prerequisites	89
AppLibrary Licensing	89
Index	91

About This Guide

This section contains information that explains the typographical conventions used in this documentation. This information help aid you in using the documentation most effectively. Also provided is a list of related documentation that you may find useful.

Typographical conventions

The following table describes the typographical conventions used in this document.

Convention	Description
bold text	<p>Bold text indicates:</p> <ul style="list-style-type: none"> Graphical user interface element names (such as dialog boxes, buttons, menu selections, and so forth). Command line interface commands and options. The name of a field, option, or parameter when used as part of an instruction. <p>For example: "Select the Inner Priority value."</p>
<i>Italic text</i>	<p>Italic text indicates:</p> <ul style="list-style-type: none"> A text reference to the name of a field, option, or parameter. Document and book titles. The first reference to a new term. Special identification or emphasis in a statement.
monospace text	<p>Text shown in a monospace font is used to indicate:</p> <ul style="list-style-type: none"> Text that you input. For example: Enter <code>cd project1</code> Code samples, including keywords and variables within text and as separate paragraphs, and user-defined program elements within text. Text file content or examples, such as lines of text from an .ini file.

Textual conventions

The following table describes the typographical conventions used in this document.

Convention	Description
Boolean text	<p>Words that represent Boolean notation are written in all uppercase text.</p> <p>For example: 1010 OR 1100.</p>
Keystrokes	<p>Simultaneous keystrokes are shown by joining the key names with a plus sign (+).</p> <p>For example, CTRL+Q.</p>

Convention	Description
> (right angle bracket)	Separates levels in a hierarchy of menu selections. For example: "Select Administration > Users ."

Related documentation

Refer to the following product documentation for additional information:

- Release Notes
- All other documents in the document suite for the product
 - IxNetwork Help
 - IxNetwork API Guide
- Third-Party license agreements

IMPORTANT The documentation is available from the **Help** pull-down menu in IxNetwork.

Keysight user documentation is also available in the **Support & Services > User Guides** area of <https://support.ixiacom.com/>. User login is required to view this online documentation.

This page intentionally left blank.

CHAPTER 1

Introduction to IxNetwork

IxNetwork is specifically targeted for the performance and functionality testing of high-speed, high-capacity routers and switches. IxNetwork operates only on port-CPU-based test modules of Keysight. With these modules, each test port supports an independent PowerPC that runs Windows and protocol state machines.

IxNetwork provides a powerful, yet easy-to-use, graphical user interface (GUI) that you can use to configure and run complex tests. With IxNetwork, you can quickly and easily configure protocol variables and parameters to suit a particular device under test (DUT). Combined with Keysight family of chassis and port-CPU-based load modules, you can use IxNetwork to create a test environment that is tailored to your specific requirements.

IxNetwork offers the flexibility to customize the application to meet a wide range of requirements for testing complex network topologies, consisting of thousands of routing or switching devices. You can emulate millions of routes and reachable hosts within the topology. You can also easily scale the size of the emulated topologies by adding additional test ports.

IxNetwork also provides with the ability to customize millions of traffic flows to stress the data plane performance. You can create sophisticated configurations by using powerful wizards and grid controls in the GUI. With its enhanced real-time analysis and statistics, IxNetwork is capable of reporting comprehensive protocol status and detailed per-flow traffic performance metrics.

Features of IxNetwork


The following sections describe the features of IxNetwork:

- [GUI Framework](#)
- [Enhanced Port Management](#)
- [Enhanced Protocol Configuration](#)
- [Traffic Wizard](#)
- [Test Composer](#)
- [Enhanced Statistics Reporting](#)
- [Log View Window](#)
- [Application Traffic](#)
- [Quick Tests](#)
- [Flow Tracking](#)
- [Capture Settings](#)
- [Analyzer](#)
- [Data Miner](#)

GUI Framework


IxNetwork provides a GUI framework with a main IxNetwork window that shows sub-windows for Port Configuration, Protocol Configuration, Creation of QuickTests, and Traffic Configuration (for L2-L3 Traffic or Application Traffic). Additional panels show Statistics and Captures. You can toggle the

Configuration and Statistics information view on and off. With this design, you can simultaneously view protocol configurations, statistics for traffic and protocols, and statistics information. **GUI framework** is shown as an example in the following image:

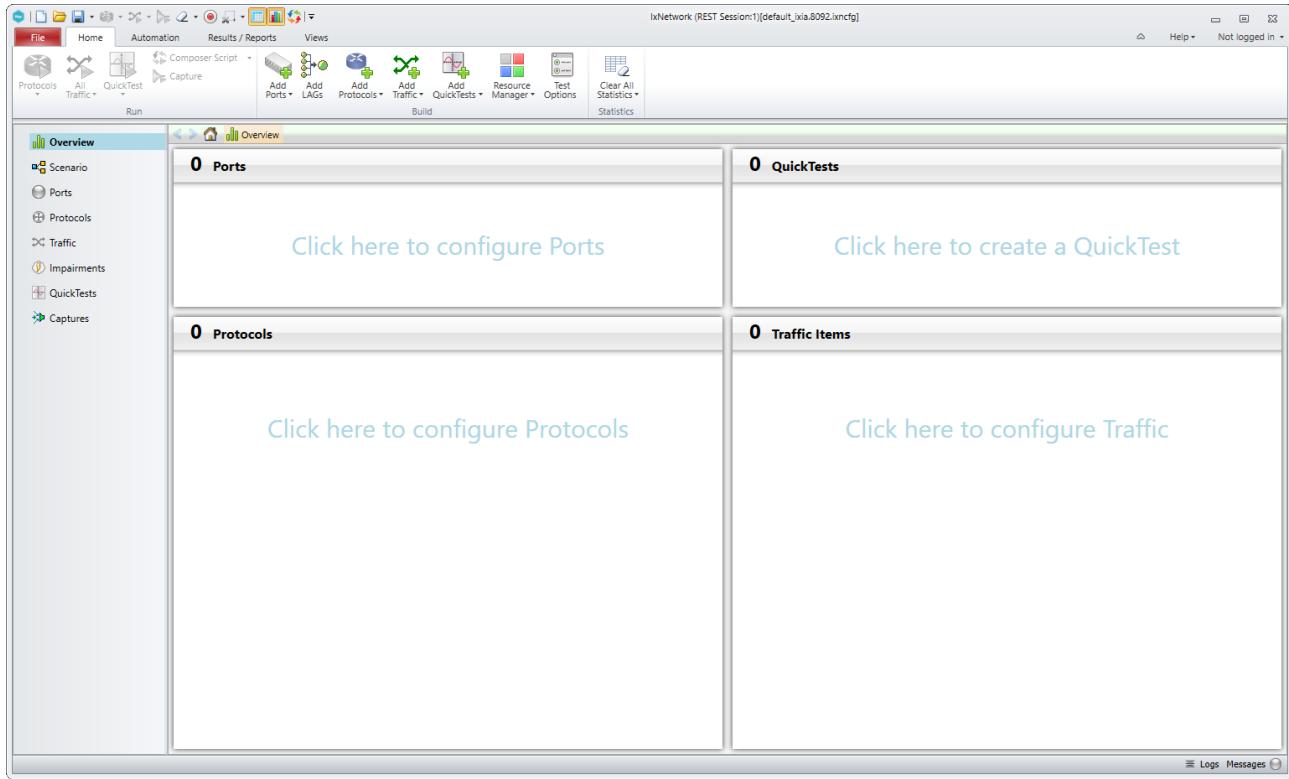

Enhanced Port Management

The IxNetwork Port Management feature allows you to assign physical ports for immediate configuration. As an alternative, you can create a port configuration image for a port type, such as ethernet, without tying up an actual physical port. You can configure protocols for this test port and save the resulting configuration for later use on a physical port. **Port Selection** is shown as an example in the following image:

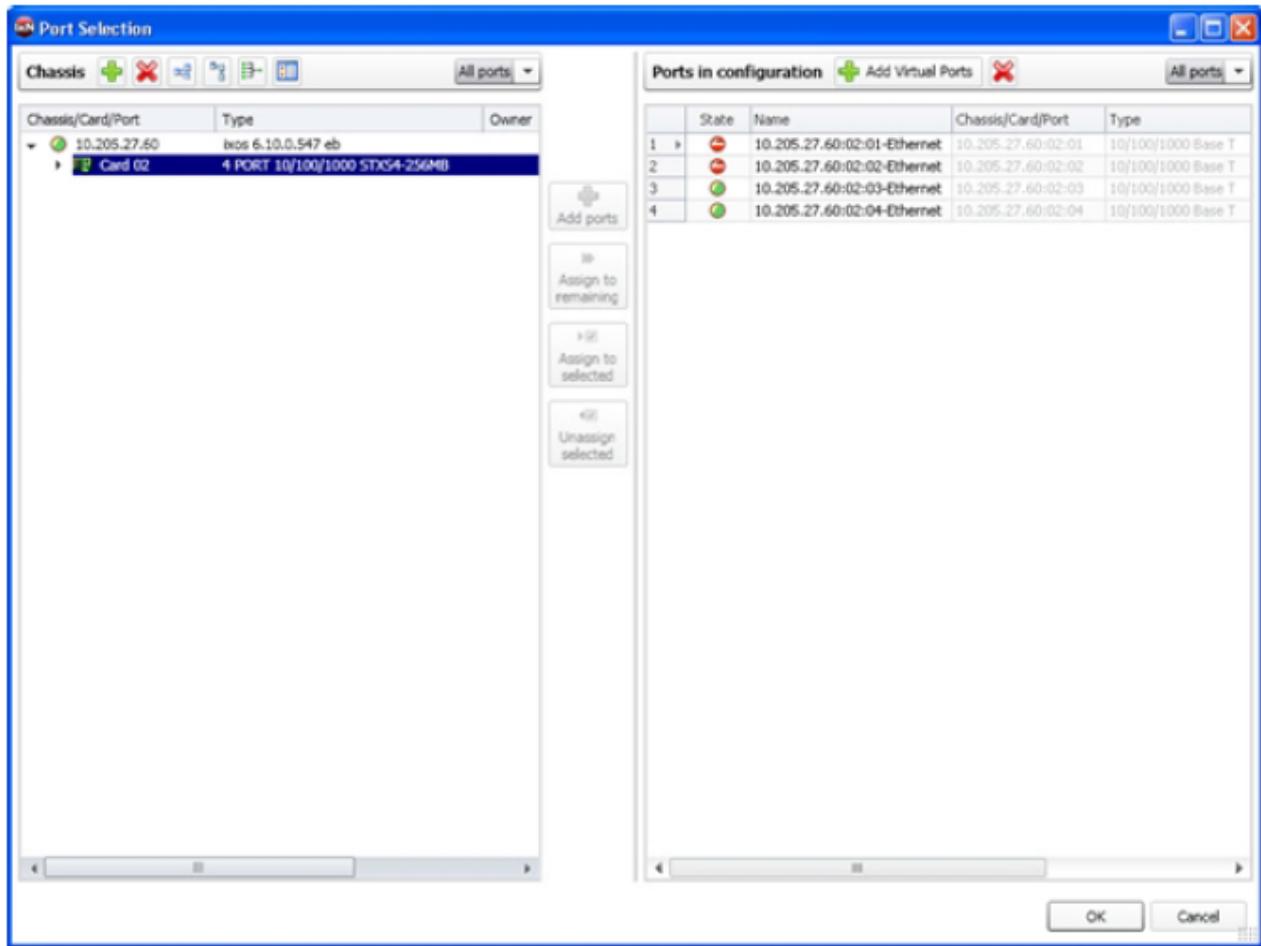


Enhanced Protocol Configuration

IxNetwork supports emulation of Internet-scale routing topologies to determine the scalability limits, and is designed to emulate a wide variety of bridging and routing protocols. Easy-to-use *Protocol Wizards* allow you to quickly and precisely set up complex topologies, in a step-by-step process for initial setup of small to large-scale test topologies across multiple ports. The wizards simplify the setup of complex network scenarios across multiple protocols simultaneously. In addition, IxNetwork spreadsheet GUI paradigm provides the entry, editing, and viewing of large configurations across multiple test ports. Once you create a network topology, you can copy it easily across any supported test port. An example of an IxNetwork configuration wizard is shown in the following image:

BFD, L2TP, and PPPoX protocol support are present in IxNetwork. Authentication support for DHCP, Static IP, and MAC addresses are also present. Protocol wizard is enhanced with the addition of BGP VPLS (Kompella Draft) to the L2 VPN wizard. Support for use of RSVP-TE and ISIS together in wizards is added.

You can integrate previously configured protocol interfaces into Interface Groups and use in setting up traffic configurations, with filtering based on IP version, presence of VLANs, or the type of ATM encapsulation (in case of ATM ports). Support to protocol interfaces for Stacked VLANs (QinQ) is also present.

Traffic Groups option is present, which you can automatically configure and view in the Traffic Group window while configuring L2 and L3 VPNs, and Multicast VPNs (MVPNs) using the protocol wizards. You can also manually configure Traffic Groups in the Traffic Group window, as shown in the following image. The use of Traffic Groups simplifies the setup of traffic for complex topologies such as L2 and L3 VPNs, and MVPNs.

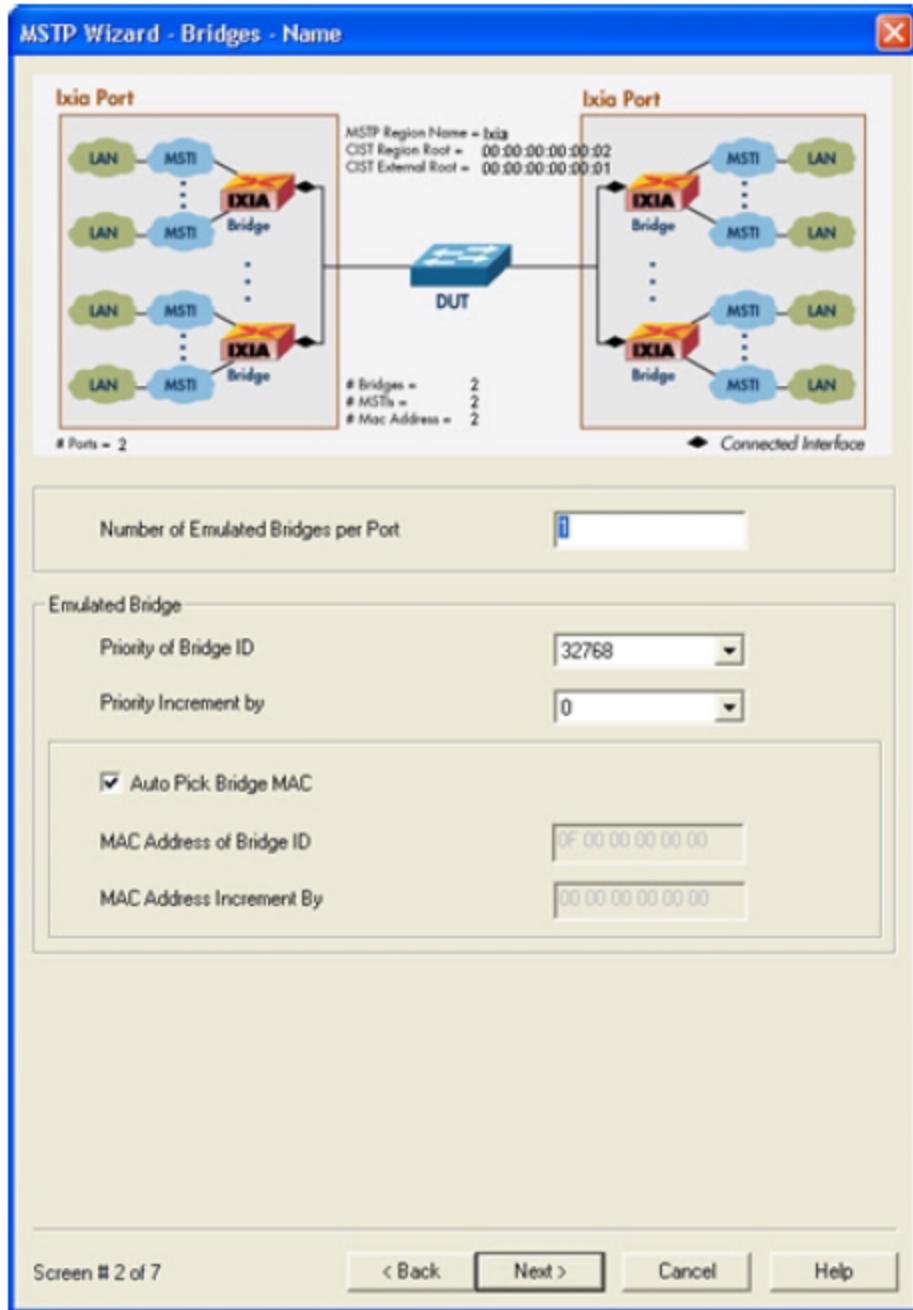


Traffic Wizard

The *Basic Traffic Wizard* and *AdvancedTraffic Wizard* allow you to create millions of traffic flows for validating emulated networks and hosts. The wizards provide great flexibility to set up wire-rate


traffic streams to validate every reachable network and host.

With the help of the Basic Traffic Wizard you can configure traffic with endpoints that have the same encapsulation type. You can configure bi-directional traffic movement easily and quickly with the help of the newly introduced checkbox. Multi-field tracking also can be enabled easily with the Basic Traffic Wizard. IxNetwork **Basic Traffic Wizard** is shown as an example in the following image:

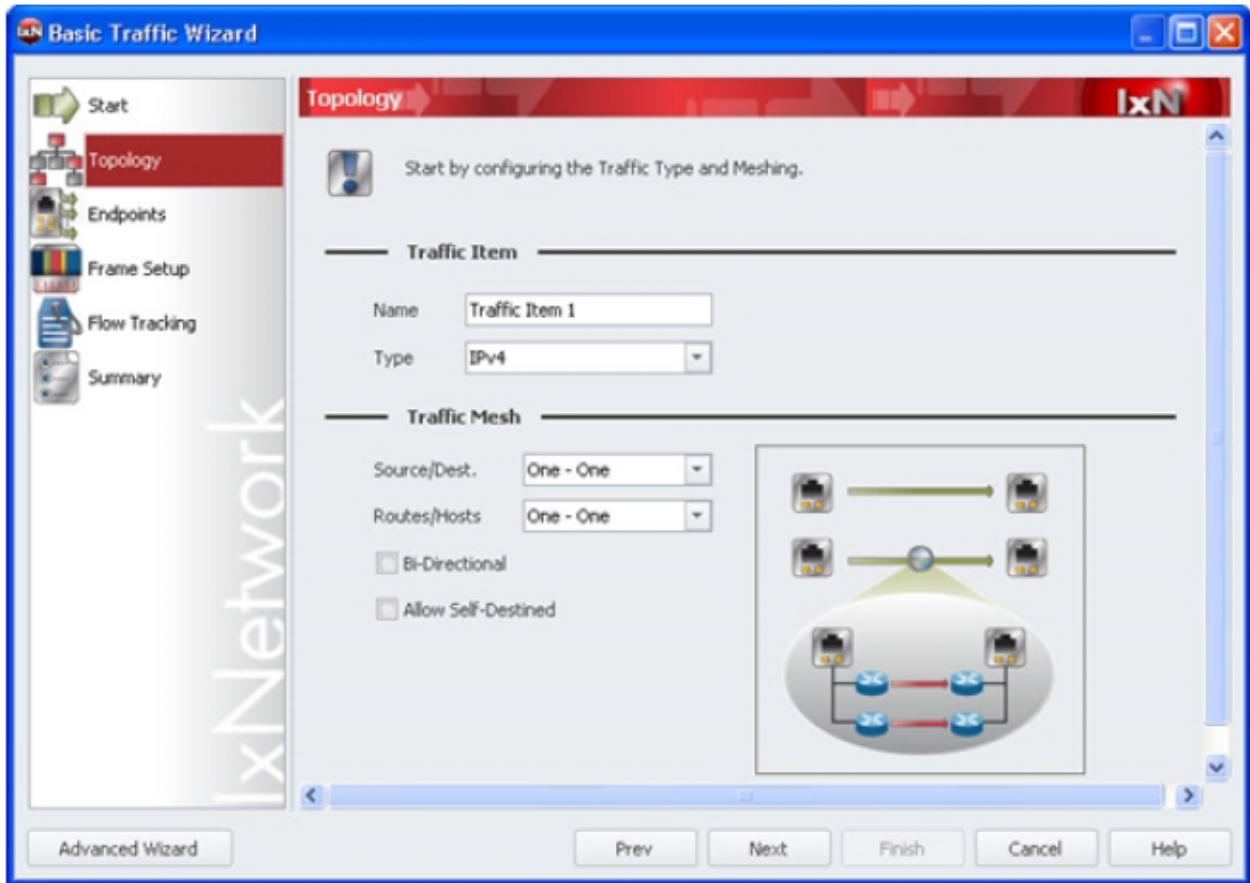


The *Advanced Traffic Wizard* allows to configure flexible traffic set-ups. It has the ability to support mixed encapsulation types and allows bi-directional traffic movement. The *Advanced Wizard* allows to edit and increment field values for optimized QoS testing with the help of the Packet Editor.

Flow Groups feature provides the ability to create traffic groups based on selected criteria such as rate, frame size, and transmit properties. Unique traffic profiles can be created with the help of this function. IxNetwork **Advanced Traffic Wizard** is shown as an example in the following image:

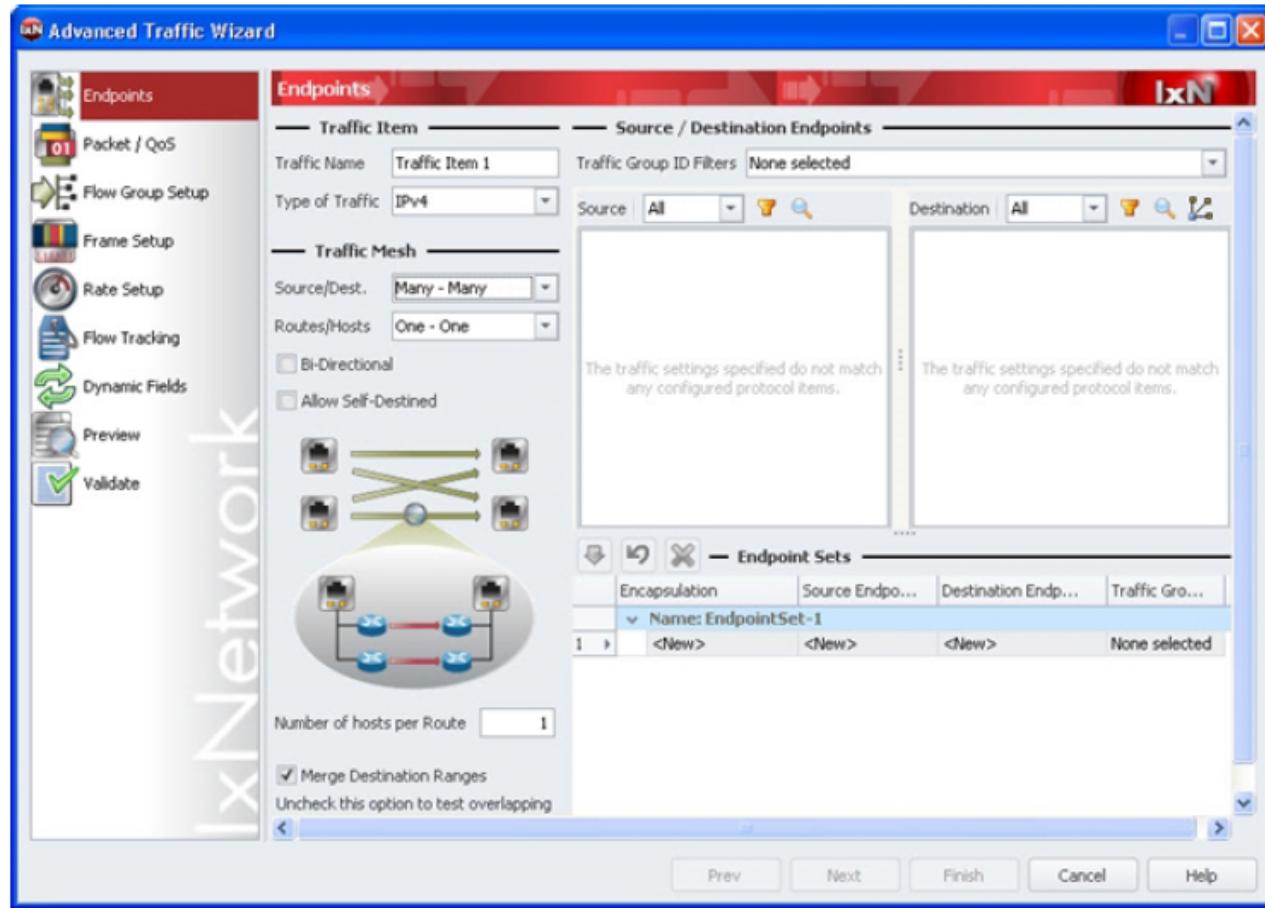

The final step of the traffic wizard is to set up the receive ports to track the traffic flows with detailed QoS measurements of packet loss, throughput, and latency. You can track the traffic flow based on MAC addresses, IP addresses, TOS/DSCP, MPLS labels, or custom fields. The traffic wizard also provides optional capability for custom-editing the actual packet headers in the new version of the Packet Editor window, such as inserting additional layers of protocol headers. Much of the packet customization capability provided by IxExplorer, included in the traffic wizard. **Advanced Traffic Wizard -Packet QoSEditor** is shown as an example in following image:

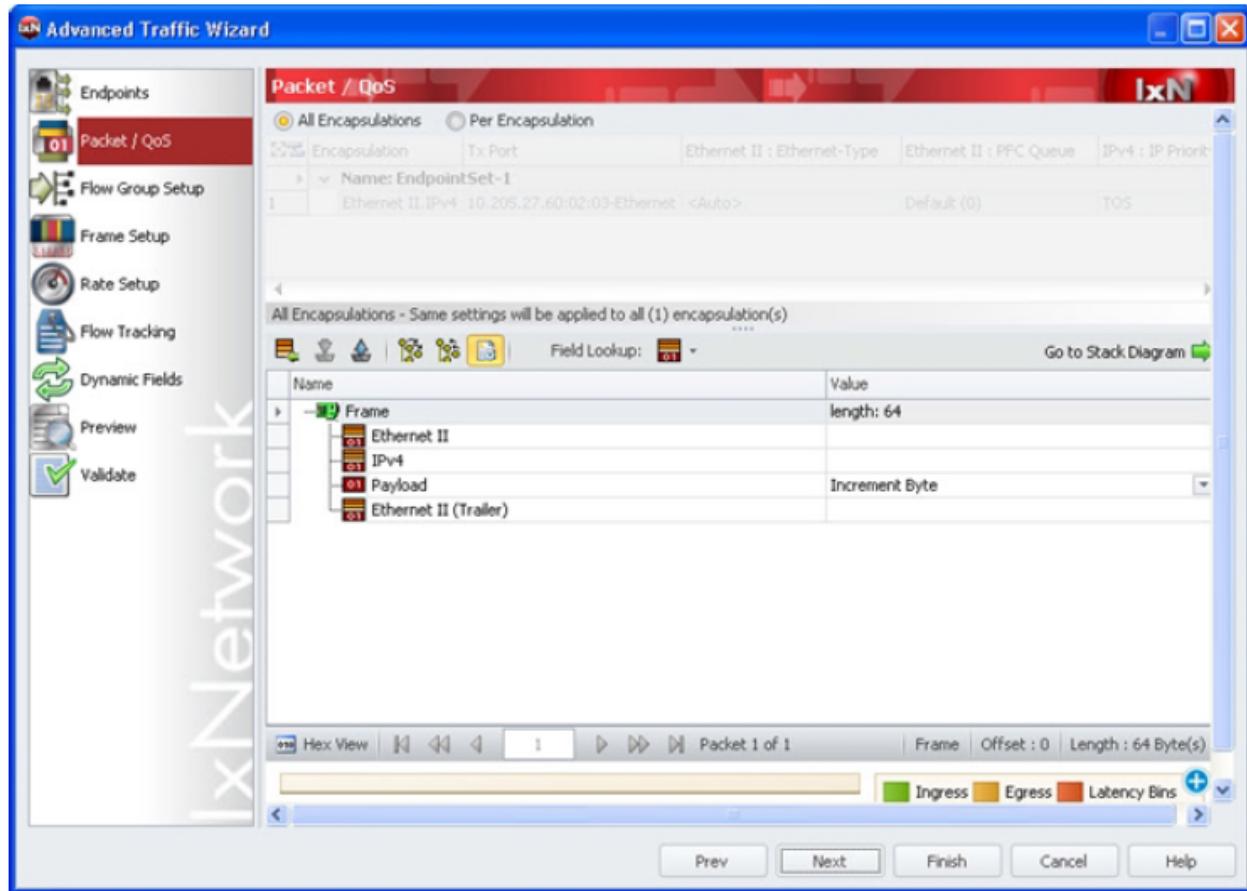

Test Composer

Test Composer is a software component, integrated into IxNetwork that permits the creation of complex multi-step test scripts integrating events, DUT configuration commands, local or external procedure calls, and flow control instructions that permit branching the script flow based on a step result evaluation.


Test scripts created using the Test Composer plug-in support multiple simultaneous connections to test devices that can be configured using a variety of protocol interfaces: Telnet, TL1, SSH1/SSH2/SSHAuto, CmdTool, TclSh, Raw, SNMP, Syslog, and COM.

In addition to these protocol interfaces, Test Composer scripts also support a default session of the IxNetwork type. For this default IxNetwork session that is automatically created for every Test Composer script, a number of pre-configured events are available for configuring chassis ports, applying test configuration files, starting protocol traffic, launching tests, and retrieving test run results.

The *TestComposer Online Help* provides detailed information on the Test Composer window features. Press F1 to access the online help in the Test Composer window.


Enhanced Statistics Reporting

Statistics reporting for protocols has been greatly expanded, to provide far more detailed information about the protocol setup process. Available statistics views include port statistics, global protocol statistics, traffic statistics, quicktests, and individual statistic views for each of the protocols that you configure. You can tile up to four statistic windows for simultaneous viewing. IxNetwork **Statistics** window, is shown as an example in the following image:

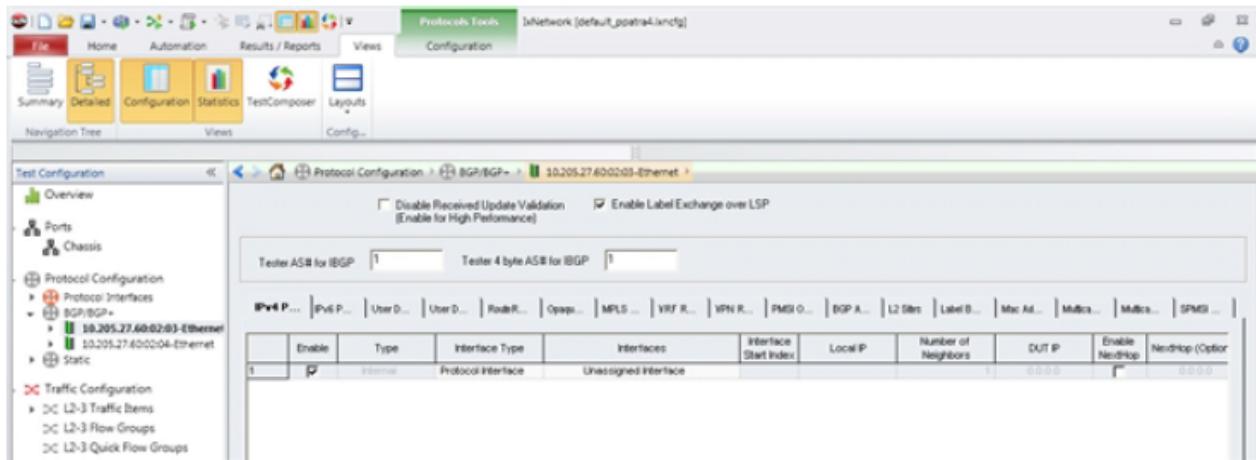

Log View Window


A global LogView window provides real-time information about the status of Port Management, Interfaces, Traffic, Test Composer, and Statistics. You can save the information in this window for later evaluation. In addition, the PortTrace window found in IxNetwork is still available at the port level for every protocol listed in the Protocol Window. IxNetwork LogView window, showing the progress of **Port Manager**, is shown as an example in the following image:

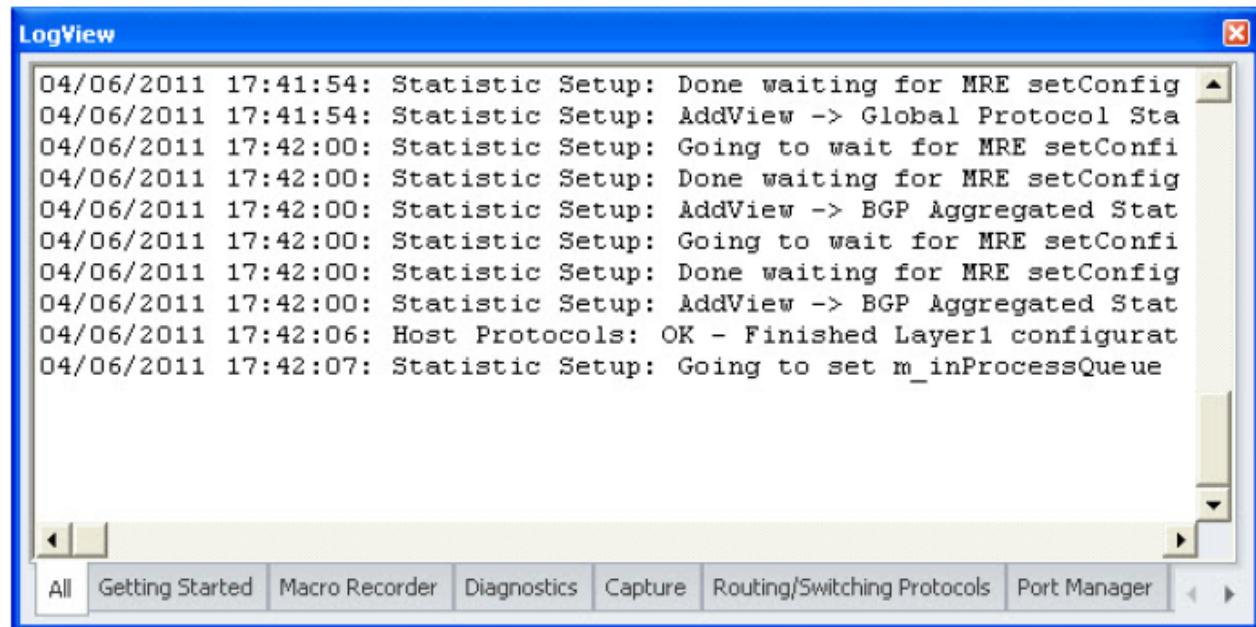

Application Traffic


The IxNetwork Traffic Wizard allows the user to create traffic flows for Layer 4 through Layer 7 Application traffic, for transmission over protocol routes, by providing a subset of the IxLoad capabilities within IxNetwork. This subset of the IxLoad features is called IxLoadLite. Refer to the *IxLoad User Guide* for additional information on the use of the IxLoadLite features.

When used for Application Traffic, the traffic wizard provides a step-by-step procedure to set up traffic between IPv4 Application endpoints, running over routes that have been set up through one of the routing protocols, such as BGP. You can select which source and destination items send and receive traffic, how they are mapped to each item (one-to-one or fully-meshed), and how the flows are generated between advertised routes (one-to-one or fully-meshed). The traffic wizard automatically creates fully-meshed or one-to-one application flows between all participating endpoints. After the traffic endpoint type and source/destination pair has been set up, an Application Traffic Profile can be selected to emulate the Layer 4-7 scenario. The traffic window for **Application Traffic** is shown as an example in the following image:

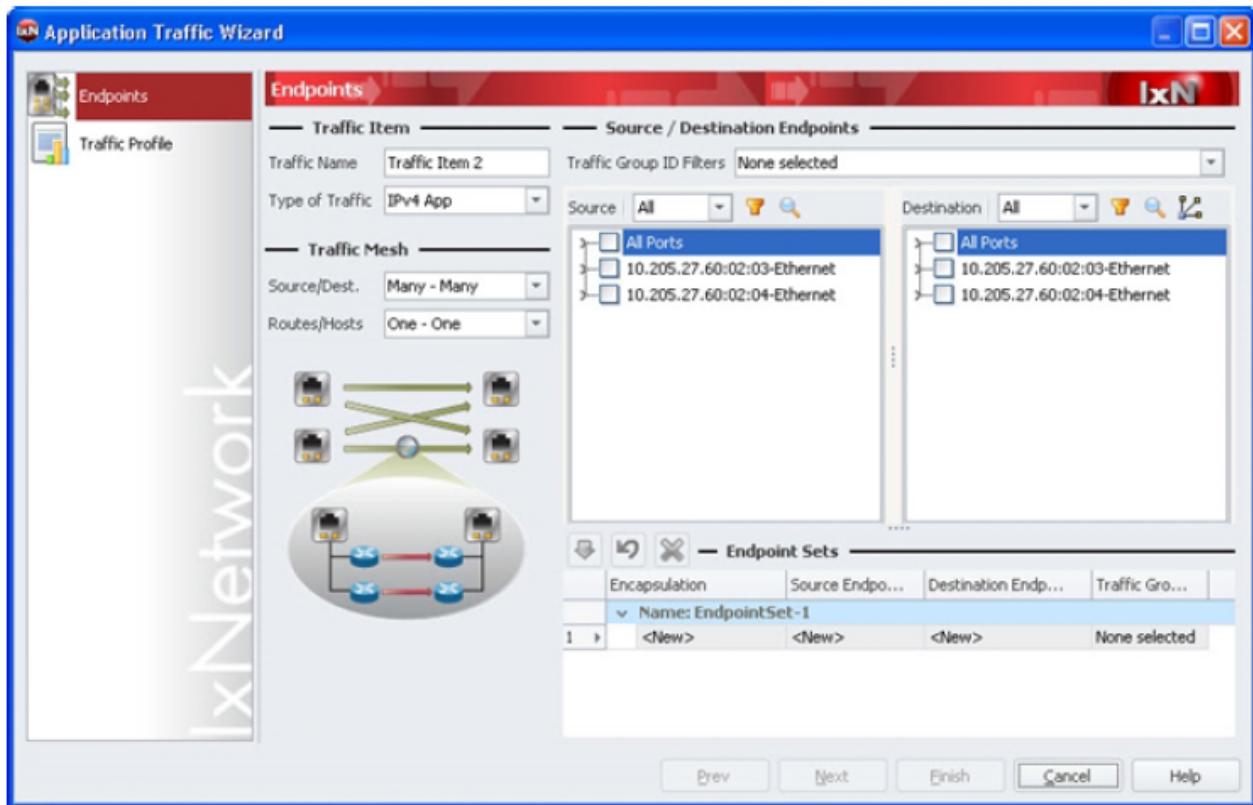


Quick Tests

The *Quick Tests* feature allows you to use pre-defined tests. You can add, access, run, and customize these tests according to your requirements. Step-by-step wizards allow you to set up the Quick Tests. You can view the results of current tests, and previously run tests, and compare them in the Results window. **Quick Tests** is shown as an example in the following image:

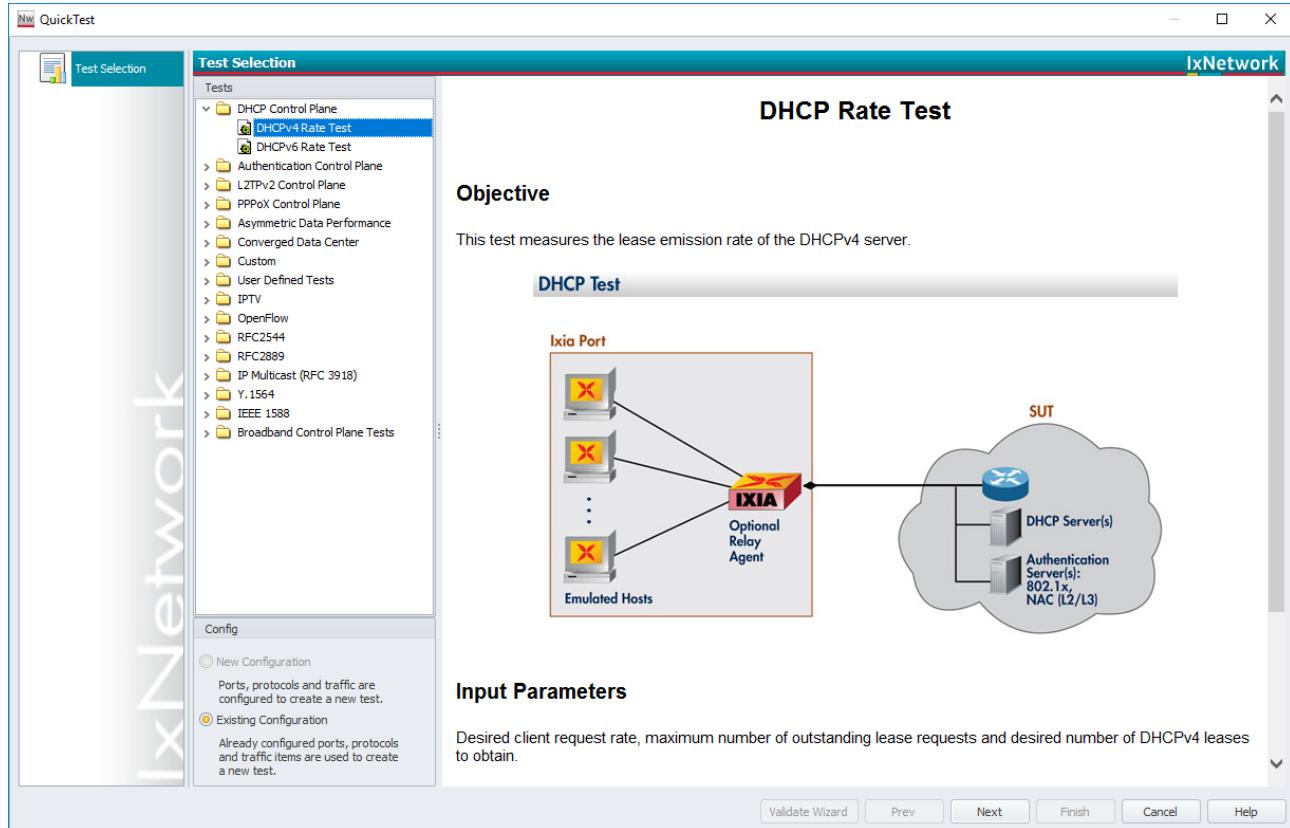


Flow Tracking

The Flow Tracking feature in the Traffic wizard allows a Keysight interface to track flows based on one or more fields. This feature enables a Traffic window to be opened from Statistics; this view shows L2-L3 statistics for a single flow. The flow tracking settings apply to all traffic items transmitted to a particular port. Ingress tracking by source/destination endpoint pair, egress tracking by VLAN, and latency tracking is shown as an example in the following image:

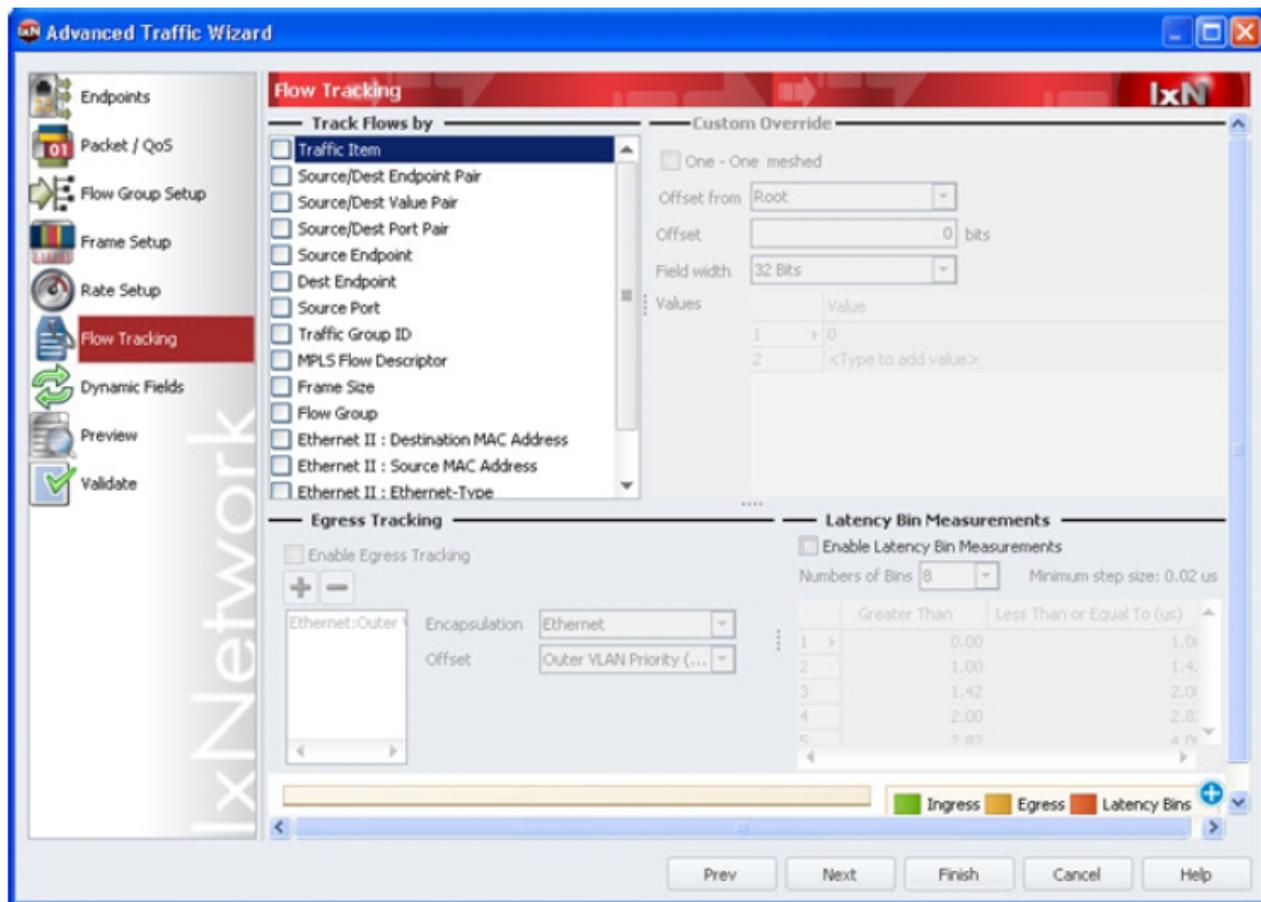

Capture Settings

You can access the Capture settings by selecting **Captures** on the **Test Configuration** pane. They control the various capture options available for both control and data packets, and allows the creation of capture filters. You can set capture options for each port, chassis, or for each packet type. **Capture Settings** is shown as an example in the following image:

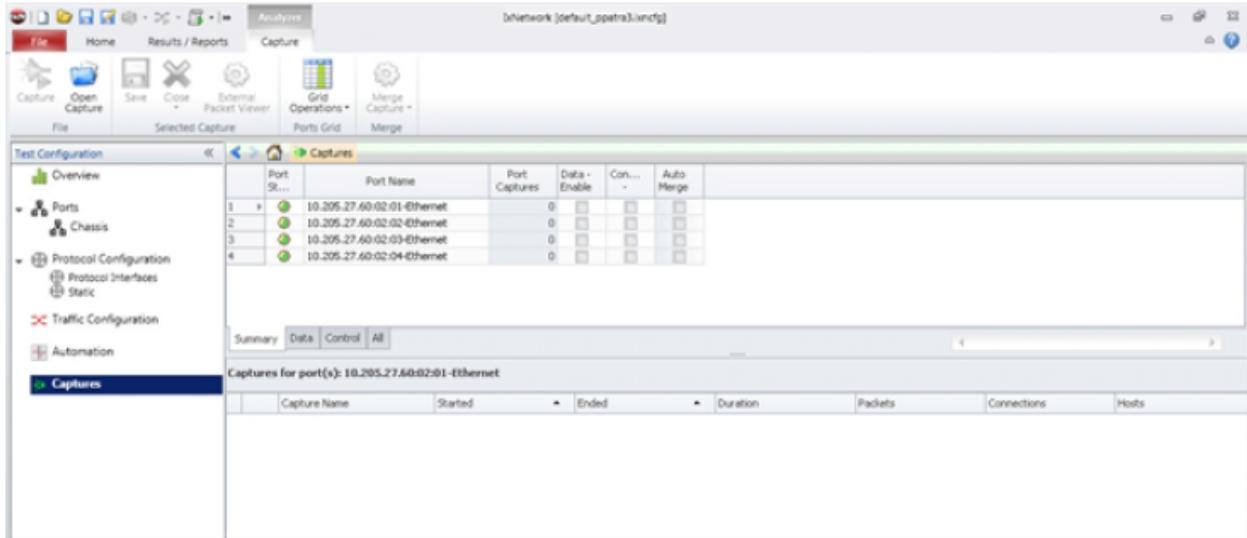


Analyzer

Analyzer allows you to select a captured traffic stream and examine the contents of each packet in




detail. You can access this feature by selecting **Open Capture** on the **Packet Capture** tab. You can save streams and export these streams to IxNetwork's traffic controls and then re-send. The Analyzer view is shown in the following image:

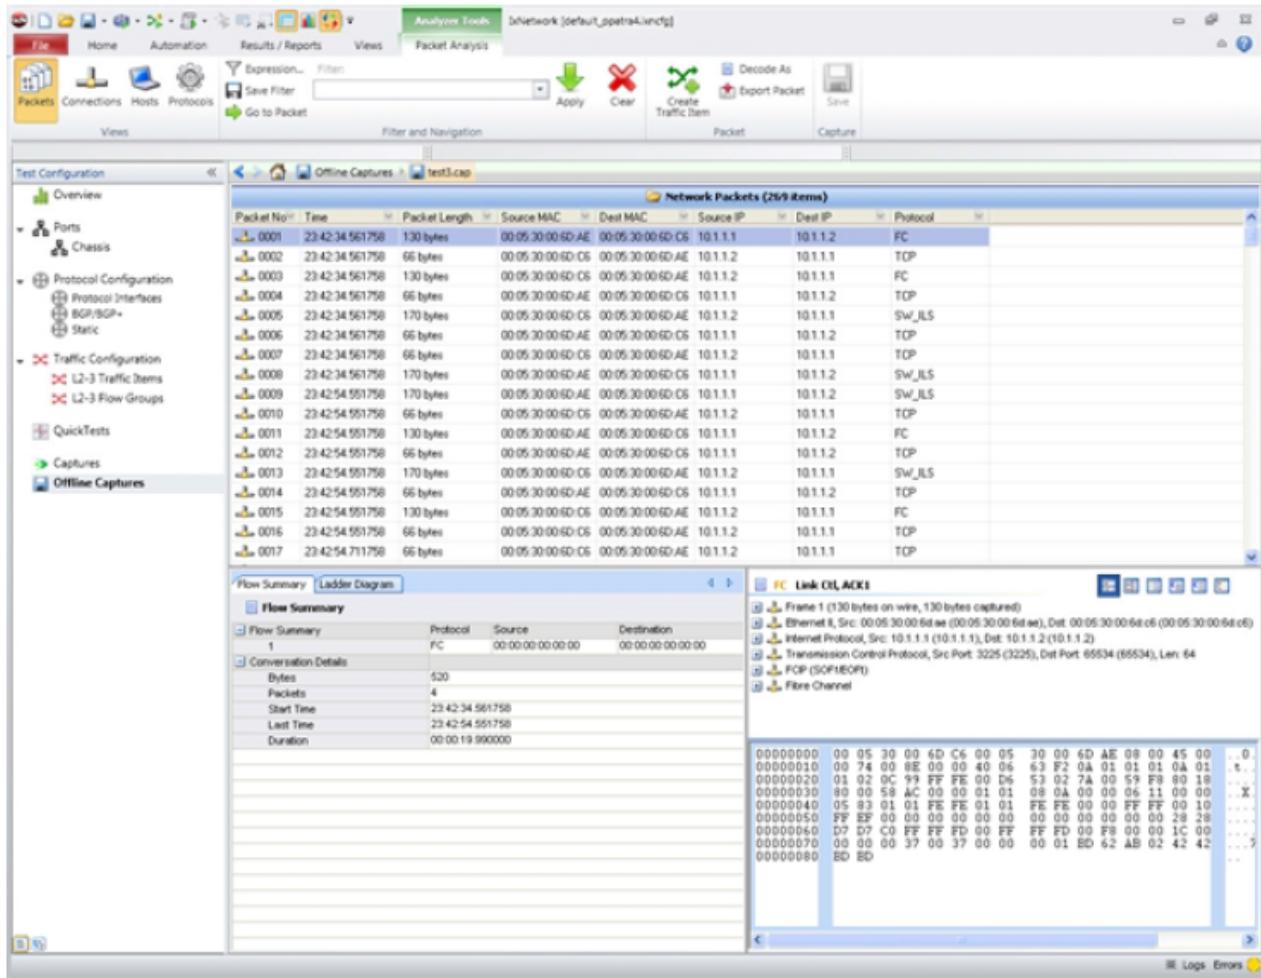

Data Miner

Data Miner allows you to inspect the results of an integrated test. You can access Data Miner by selecting the **Results/Reports** tab. The *DataMiner* dialog box is shown in the following image:

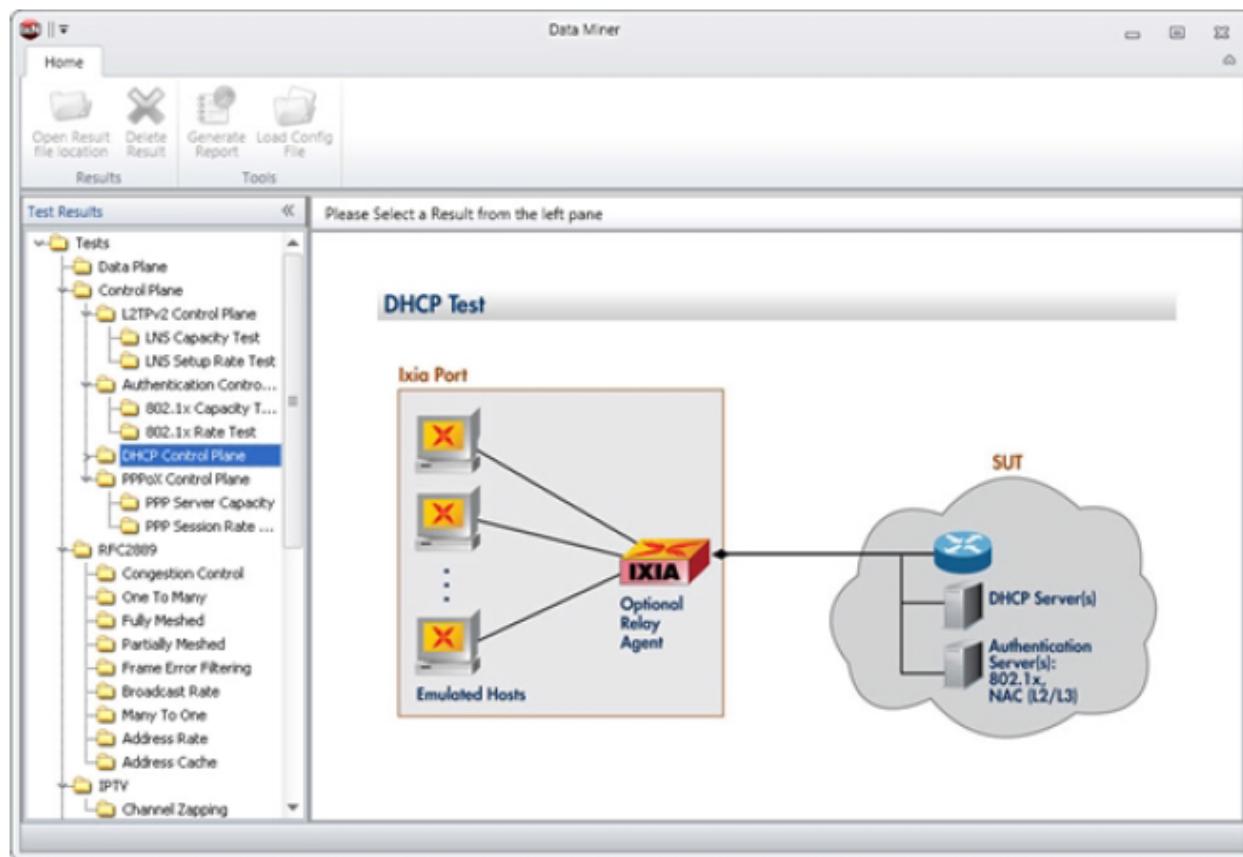

CHAPTER 2

Installation and Licensing

The procedures explained in this chapter helps to install IxNetwork and the licenses necessary to run IxNetwork. For more detailed information on licensing, refer to [IxNetwork Licensing](#) and the *Keysight License Management User Guide*.

The topics covered in this chapter are:

- [General Licensing Steps](#)
- [Chassis Installation](#)
- [IxNetwork International Language Support](#)
- [IxNetwork Installation](#)
- [Configuring IxNetwork for Silent Installation](#)
- [IxNetwork Linux Installation](#)
- [Shell Wrapper Installation](#)
- [TCL Automation Setup](#)
- [Python Automation Setup](#)
- [Perl Automation Setup](#)
- [Versions Supported by IxNetwork](#)

NOTE The minimum resolution for viewing the IxNetwork GUI is 1024x768, with a DPI setting of Normal Size (96 DPI).

General Licensing Steps

The following steps indicate the general sequence to use when installing and licensing IxNetwork. These steps assume that you are installing the license server on your Keysight chassis. If you are using a dedicated or standalone PC as a licensing server, see the *Keysight License Management User Guide* for detailed instructions. The Keysight license installation utility is included in the IxNetwork CD build or download file.

To avoid licensing problems, be careful as you proceed through the licensing utility program. Simply do not select Next to proceed through the program, or licensing might fail and you will not be able to use IxNetwork. You must read each installer screen and provide the requested information. Although the installer takes you through the license installation process, the overview information here is provided to ensure that you do not overlook important installation details. For more detailed information on each step, refer to the *License Management User Guide*.

IMPORTANT The IxNetwork installer must be run on both the Keysight chassis and the client PC. When the installer is run on the chassis, it installs the license server component and the statistics engine. However, it does not install the client GUI software. When the installer is run on the client PC, the client software is installed.

NOTE There is a separate IxNetwork chassis installer available that is significantly faster than the full installer. Both version can be used to install IxNetwork on the chassis.

Chassis Installation

To install an IxNetwork license onto a Keysight chassis:

1. Download IxNetwork to Keysight chassis from the Keysight Web site or the IxNetwork CD.
2. Launch the installer and answer the questions as required.
3. Once IxNetwork is installed on the chassis, licensing is installed as well.
4. When prompted with "Do you want the Keysight application to automatically find your license on the chassis?", select **Yes**. If using a license server, follow the steps in the *License Management User Guide* for registering on a license server.
5. Complete the license installation procedure by selecting **Finish**.

IxNetwork International Language Support

IxNetwork can be installed and run on the following language versions of each of the supported Windows operating systems:

- US English
- Hebrew
- German
- Italian
- French
- Swedish
- Japanese
- Simplified Chinese
- Traditional Chinese
- Spanish

NOTE

IxNetwork software and documentation are provided in English only.

IxNetwork Installation

IxNetwork protocol emulation software is available for download from Keysight Web site. Licensing is now used with IxNetwork. See [General Licensing Steps](#), for an overview.

IMPORTANT

You must have administration privileges to install IxNetwork, on both the chassis and the client machine.

Detailed information on obtaining and installing licenses for IxNetwork is described in [IxNetwork Licensing](#) in this guide, and in the *Keysight License Management User Guide*.

IxOS/IxServer and IxNetwork must be installed on the chassis prior to IxNetwork installation on the Client PC.


There is a separate IxNetwork chassis installer available that is significantly faster than the full installer. Both the versions can be used to install IxNetwork on the chassis. The chassis only version provides a panel for feature selection to the users. Only the selected features are installed.

The benefits of chassis only installer are as below:

- It consumes less disk space on a chassis for storing the IxiaInstallerCache files as compared to the main installer since we bundle only the chassis specific components along with it.
- Installation is faster on a chassis due to the time saved in extracting less number of files.


To install IxNetwork, do the following:

1. Close IxServer if it is running (and if it is installed on the chassis).
2. On a Windows PC, select the installation.exe file to start the installation. The installation wizard appears as shown in the following image:

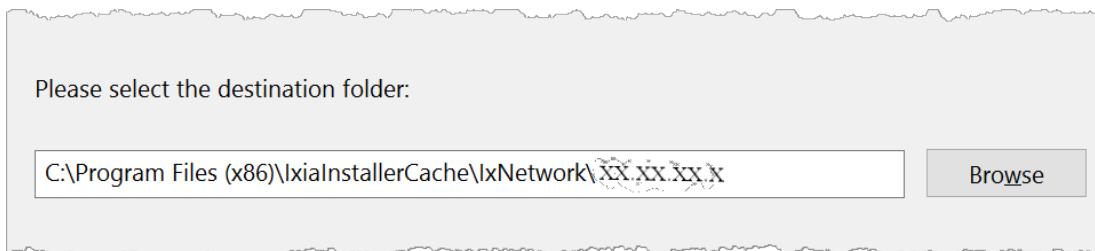

3. Select the destination folder for installer extraction and select **Next**.

The Welcome dialog box appears as shown in the following image:

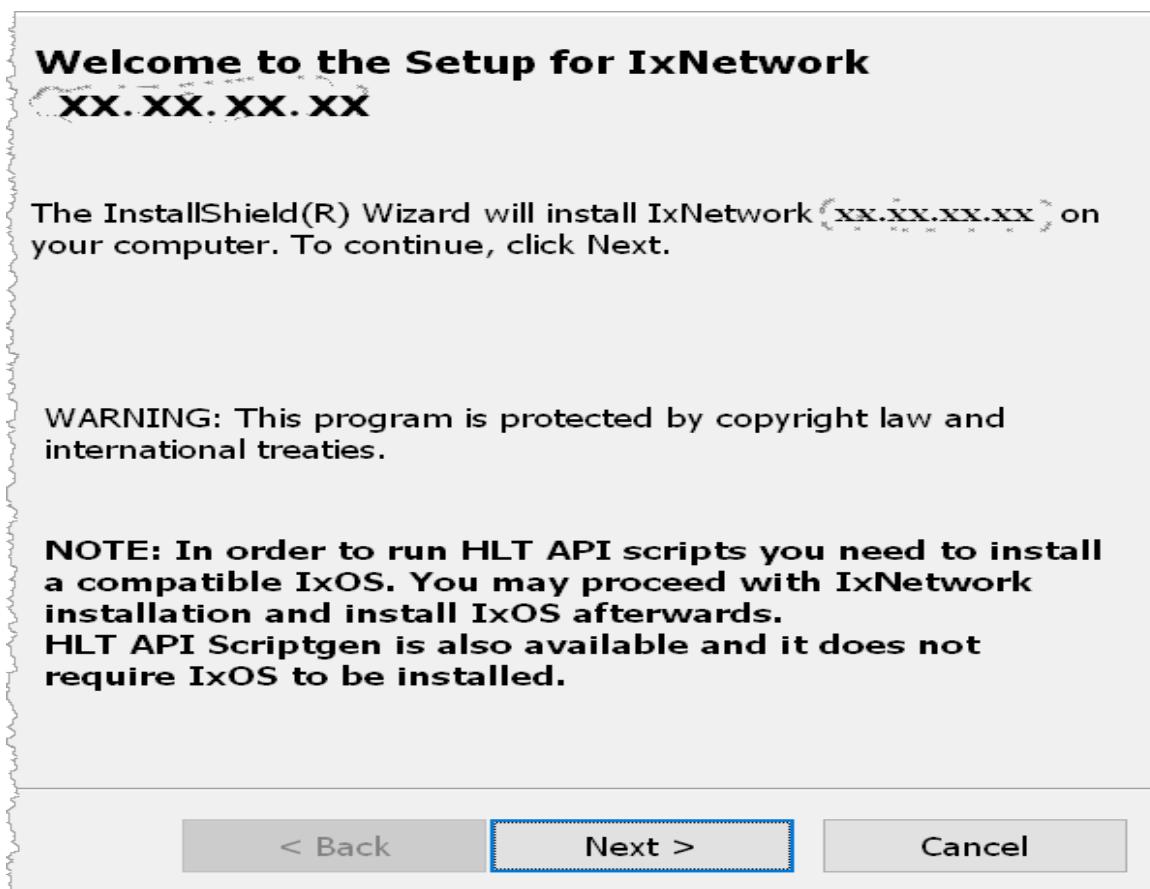

NOTE

To run HLTAPI scripts, you need to install an IxOS version that is compatible with the IxNetwork version you are installing. You can install IxOS after IxNetwork installation. You need not install IxOS if you work with HLTAPI scriptgen.

4. Select **Next** to go ahead with the installation. The **License Agreement** dialog box appears next.
5. Select **I accept the terms in the license agreement** to accept the license agreement. The **License Warning** dialog box appears next.
6. Select the **I acknowledge this message** check box to proceed with the installation.

Note that if multiple versions of IxNetwork are installed on your computer, a **Program Maintenance** dialog box appears.

NOTE

Before installing the program, you can cancel the installation by selecting **Cancel**. You can then remove the existing version installed on your computer by selecting **Remove**.

NOTE

To modify the program features installed on your computer, select **Modify**.

NOTE


To repair installation errors like missing files or registry entries, select **Repair**.

7. Select **Next** to continue with the installation. The **License Warning** dialog box appears. BE SURE to read the information in the License Warning window regarding license requirements.
8. Select the **I acknowledge this message** check box.


NOTE

If you do not select the check box, **Next** is not available and the installation cannot continue.

9. Select **Next** to continue the installation. The **Setup Type** dialog box appears, as shown in the following image:

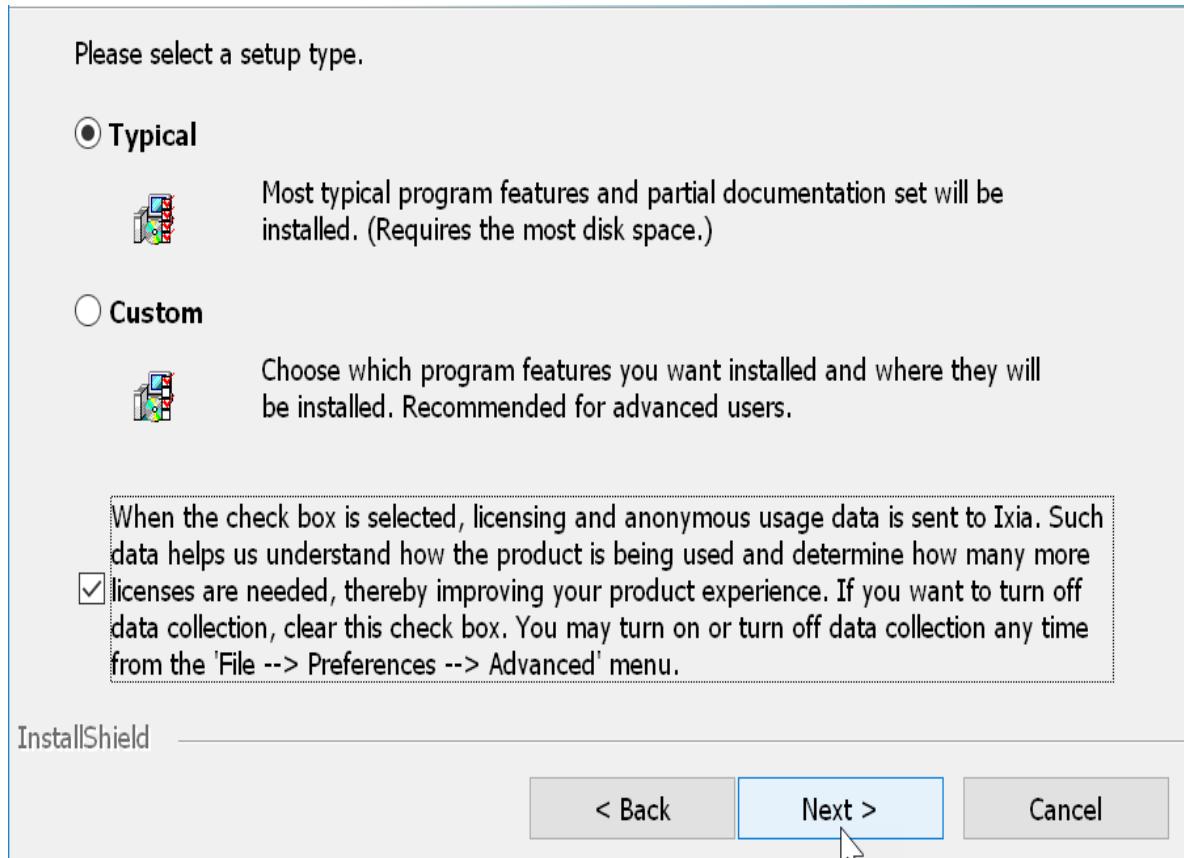

10. Select one from the following:
 - *Typical*: Select this option to install the most typical features of IxNetwork.
 - *Custom*: Select this option to select the features you want to install.
11. The check box below this section is selected by default. When it remains selected, licensing and anonymous usage data is sent to Keysight. To turn off data selection, clear this check box. Data collection can be turned on or turned off any time from the 'File > Preferences > Advanced' menu.
12. Select **Next** to continue. If **Custom** setup is selected, the **Custom Setup for Bundle Features** dialog box appears next, as shown in the following image:

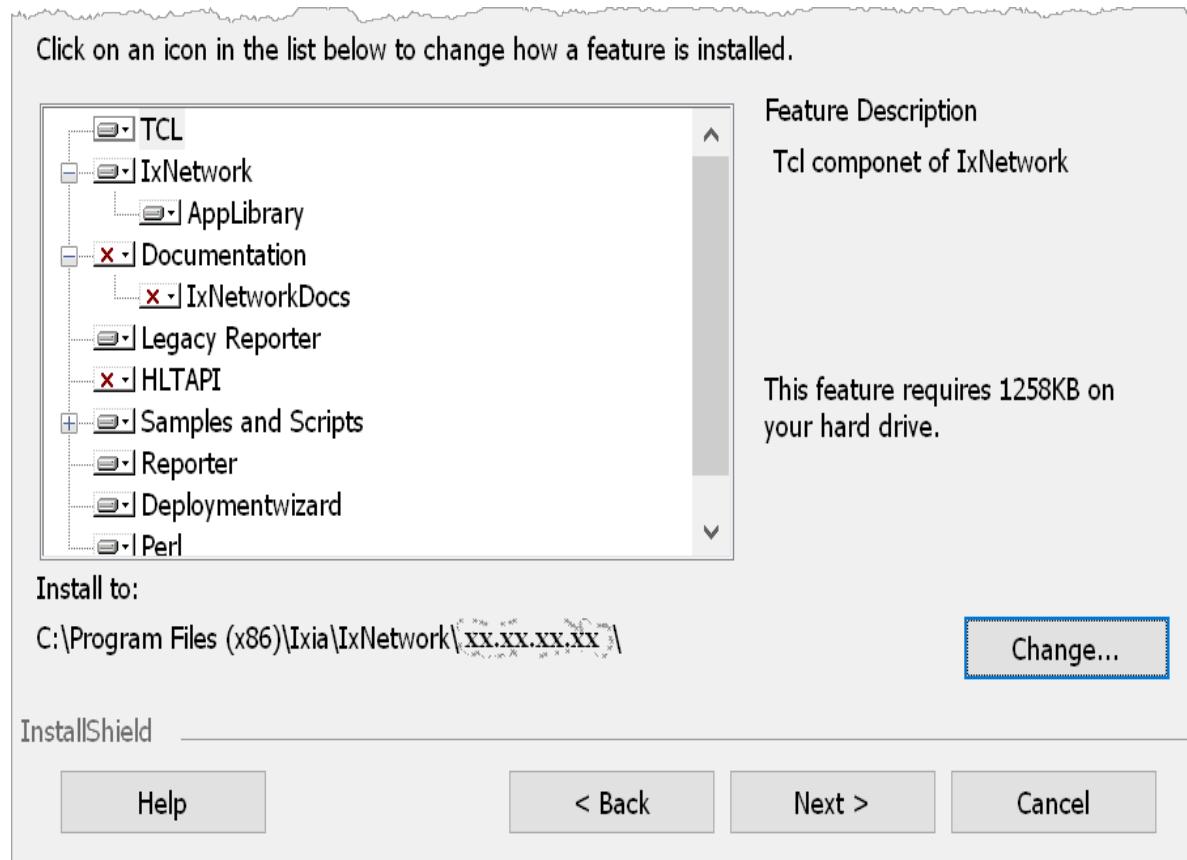

13. Select the feature you want to install and select **Next.**


Starting with IxNetwork 7.50 EA, HLTAPI and Sample Scripts are optional features. To install them, you must select them in the Custom Setup for Bundle Features dialog box.

If you select **Documentation**, the IxNetwork documents and Help files gets installed along with the program. For windows 7 and earlier versions, these documents are available under **Advanced Information Manager** located under **Keysight** in the Program group.

From IxNetwork 7.30, on Windows 2012 and Windows 8.1 and later versions, these documents are available under the **Docs** folder in respective IxNetwork build number in the Program group. See Accessing IxNetwork Documentation for guidance on how to access the IxNetwork help files.

If IxOS is not installed with IxVM Server, IxVM Server Chassis feature is not selected by default. Even if you select it, you will not be able to proceed further and a message appears informing you that IxOS needs to be installed along with IxVM Server.

If you are using a server Operating System like Windows 2008 or Windows 2012, the Connection Manager Service Installation Type dialog box appears as shown in the following image:

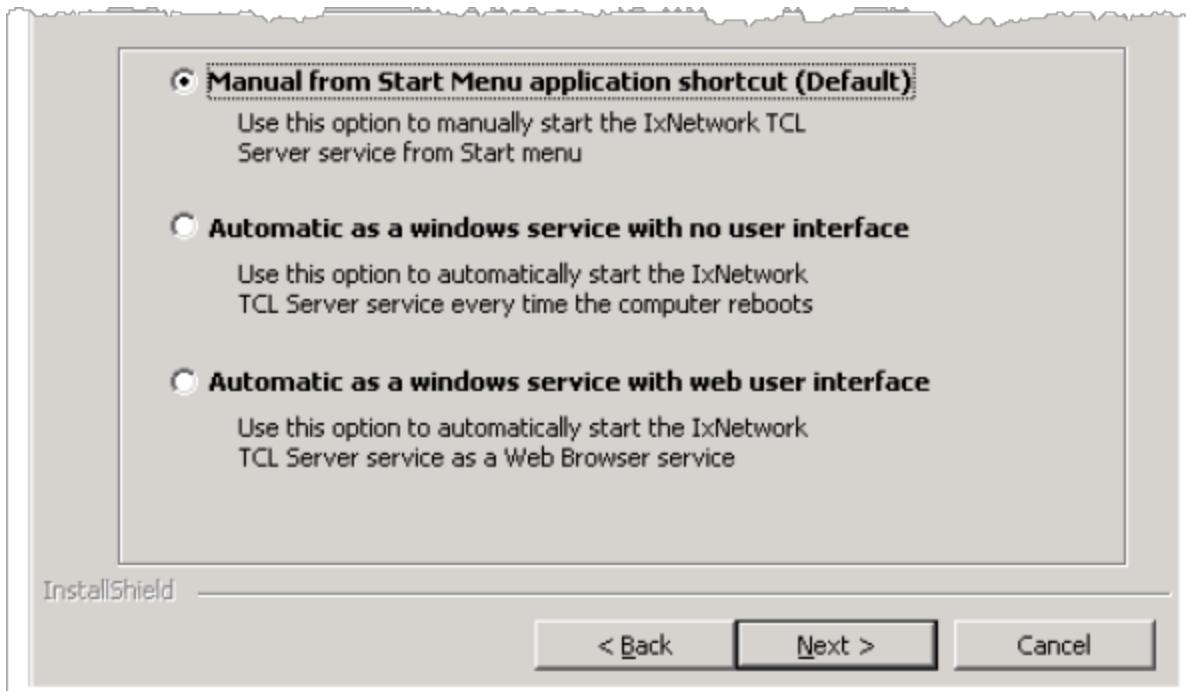

14. Select one of the options to start the Connection Manager Service. Options include the following:

- **Manual from Start Menu application shortcut**

Select this option to start the Connection Manager Service manually from the **Start** menu.

The shortcut is available under IxNetwork. This option is selected by default.

After IxNetwork is installed, select **All Programs** from the **Start** menu of your computer.

Select **IxNetwork** under **Keysight**. Select **Connection Manager** to open the **Connection Manager** window.

- **Automatic as a windows service with no user interface**


Select this option to install Connection Manager as a Windows Service which starts automatically. It is accessible from Windows Service Manager. This option assumes that there is no HTTP port available. To make changes to the settings, the executable needs to be run again.

- **Automatic as a windows service with web user interface**


Select this to install Connection Manager as a Windows Service which starts automatically. However, in this case, the Connection Manager Settings can be managed on a web page. If you select this option, the **Web user interface** port box appears as shown in the following image:

NOTE


This text box is available only when **Automatic as a windows service with web user interface** is selected.

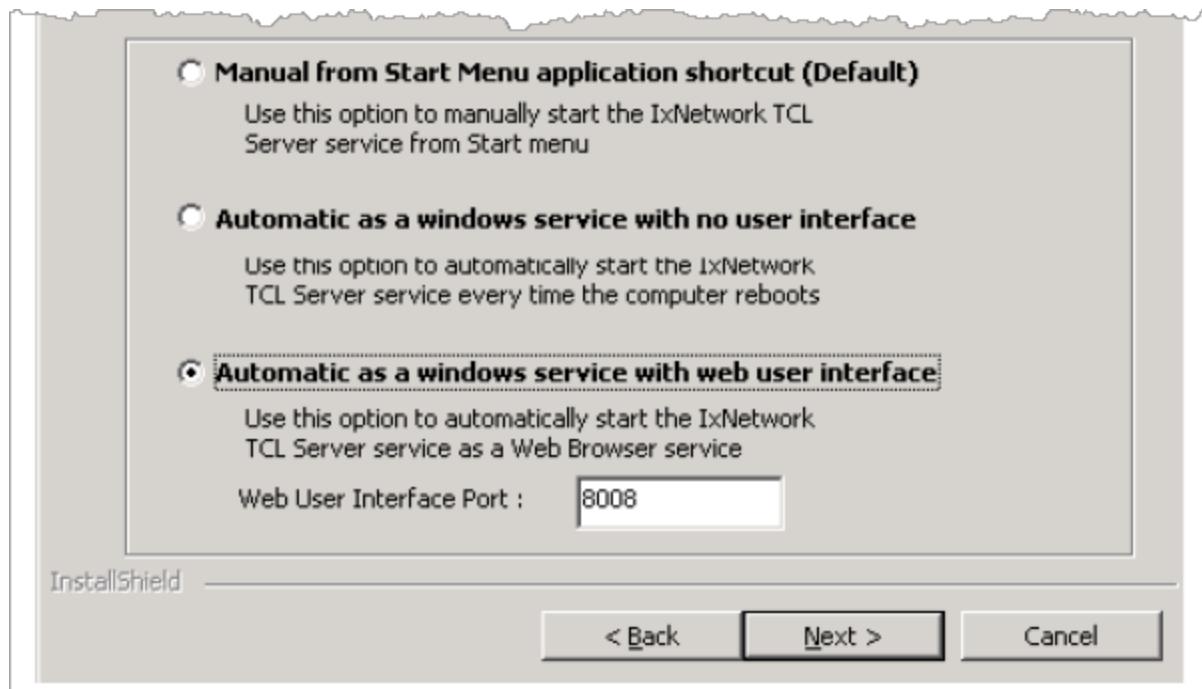

15. Type the HTTP port number in the **Web user interface port** box. **8008** is specified by default.
16. Select **Next**. The **Ready to Install the Program** dialog box appears as shown in the following image.

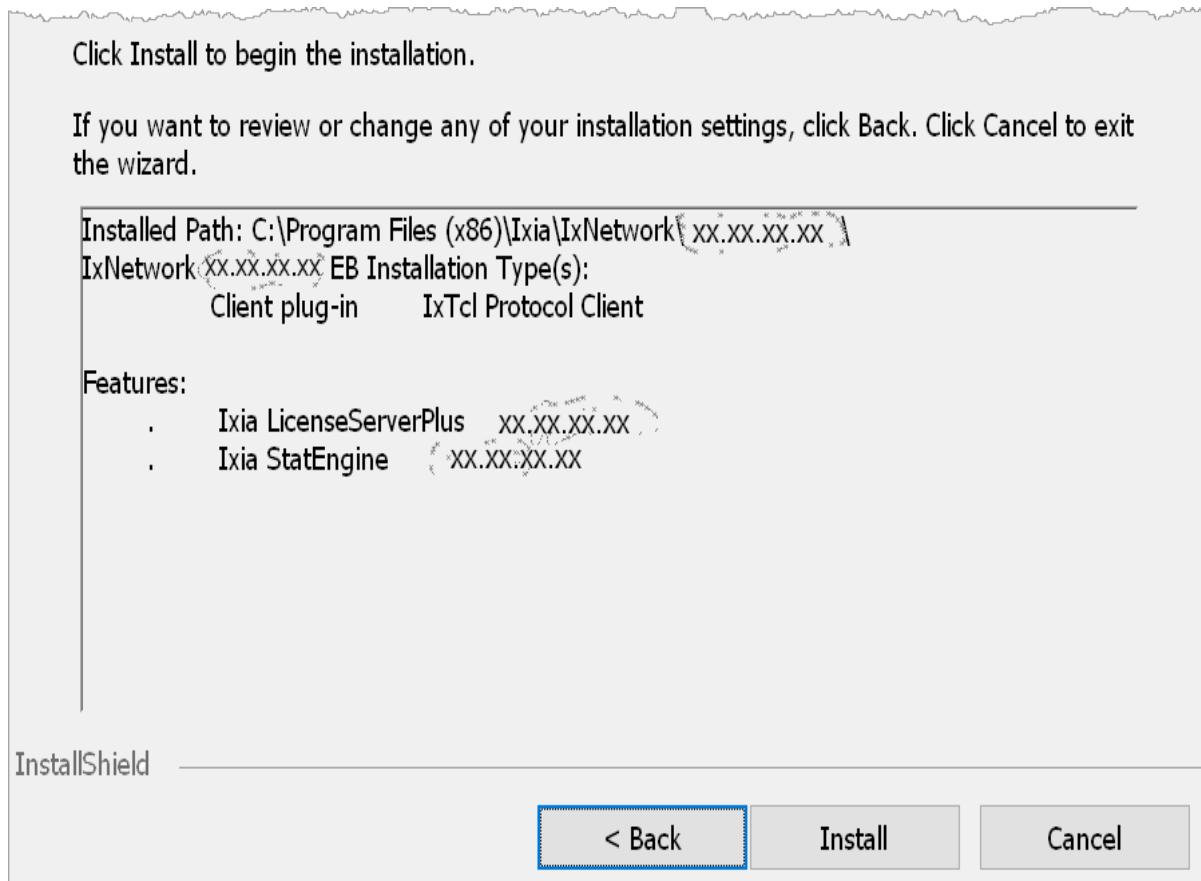

17. Select **Install** to proceed with the installation of the program. The **Installing IxNetwork <version number>** dialog box appears, showing the progress of the installation.
18. The **Keysight setup** dialog box appears all through the installation. The dialog box runs in the background and verifies if the installation is including all the items successfully. The installation continues automatically. Once it is complete, the Setup Completed dialog box appears, as shown in the following image:

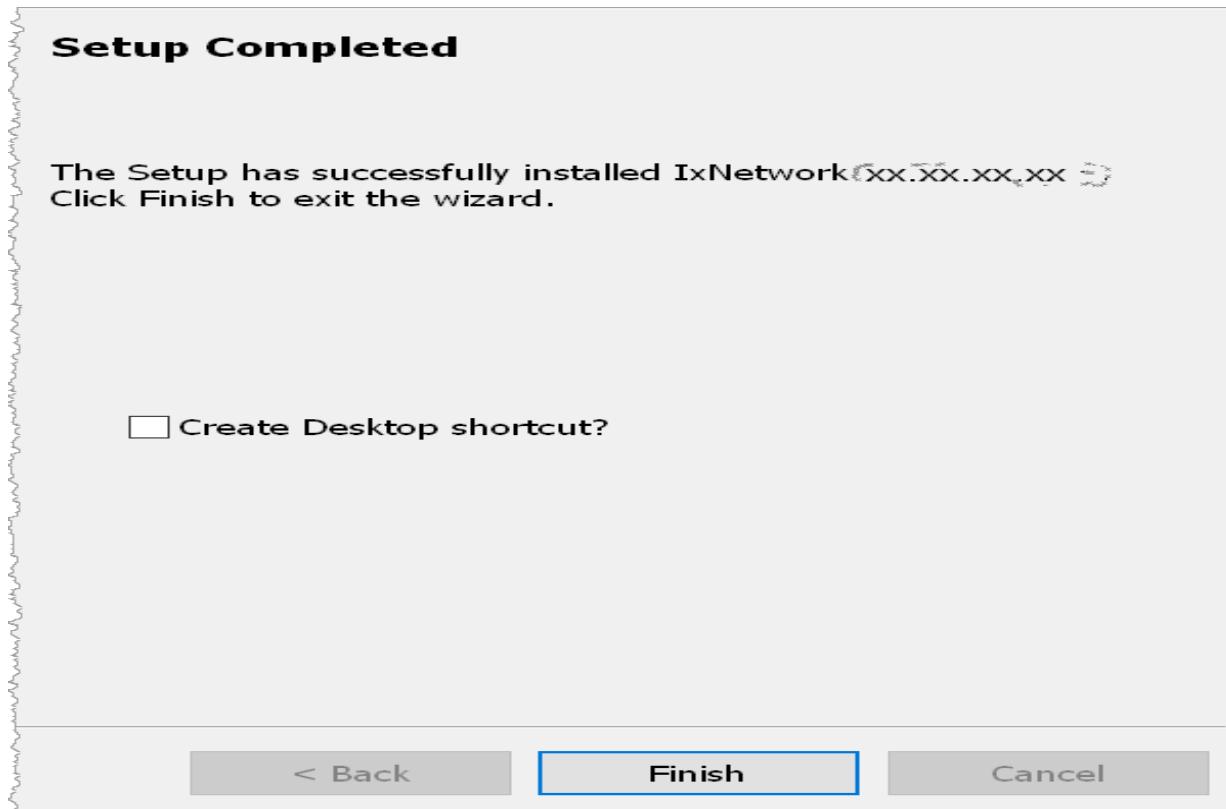

19. Select the **Create Desktop shortcut?** check box to create an IxNetwork icon on your desktop, if required.
20. Select **Finish** to complete the installation and restart the system.

IxNetwork TCP Ports

Keep the TCP ports specified in the following table open for IxNetwork use:

Component	Direction	Port
Off Chassis HWM	HWM Machine <--> Chassis	6809
IxProxy		1080
IxNetwork TCL	Wish --> TCL Sever (client)	Default is 8009, user configurable
StatViewer	Client --> Chassis	9102
IxOS	Client --> Chassis, File download Client --> Chassis, Telnet	4500 23
IxLicensing		
License Management	Client --> Chassis	SOCKS 1080

noded service	Client < -- > License Server	4501
FNP Server (Imgrd)	Client --> License Server	27000- 27009
LicenseServerPlus		
FNE Server	Client --> License Server	Client --> License Server
Keysight Licensing Service (RPF server)	Client --> License Server	8880

NOTE

While installing IxNetwork in lab environments, the firewall may need to be configured to allow traffic flow among network segments. Keep the following ports open for IxNetwork use:

- 1080
- 7768
- 7769
- 21653
- Ports that are used in IxNetwork command line as TCI port, Rest port, and SDM port, like:

```
IxNetwork.exe -tclPort 8009 -sdmPort 9009 -restPort 11009
```

Configuring IxNetwork for Silent Installation

IxNetwork Silent Install is a feature which enables you to install IxNetwork software unattended. A silent installation of IxNetwork is ideal for test scenarios or as part of a large-scale enterprise deployment.

If you want to use Silent Installation to install IxNetwork software on a Keysight chassis, you must change the policy that controls Silent Installation. See [Preparing a Keysight Chassis for Silent Installation](#) below.

IxNetwork product silent install setup is discussed in [IxNetwork Silent Install using .exe Package](#) on the facing page.

Preparing a Keysight Chassis for Silent Installation

If you try to run a Silent Install on a Keysight Chassis with Windows installed, the following warning message appears for the Keysight kernel driver:

Signature Not Found

To prevent this warning, you must change the Windows policy that governs the installation of unsigned drivers. Perform the following steps. You need to perform this procedure only once.

1. On the Keysight chassis, select **Start**, select **Run**, type **MMC**, and select **OK**.
2. Select **Add/Remove Snap-in**, on the **Console** menu.
3. Select **Add**, select **Group Policy**, and select **Add**.

4. Select **Finish/Close/OK**.
5. Navigate down the following tree:
 - Console Root
 - Local Computer Policy
 - Computer Configuration
 - Windows Settings
 - Security Settings
 - Local Policies
 - Security Options
6. You can select **unsigned driver installation behavior** from the context menu, and then select **Security**.
7. Change the **Local policy setting** to: **Silently succeed**.
8. Select **OK**.

Restart the chassis after this operation.

IxNetwork Silent Install using .exe Package

Setting up the silent install for IxNetwork for a chassis involves activating specific features included in the product package, and specifying the server operation mode through a command line dialog box.

The available features and properties (operation modes) are delivered as part of the installer. Table [Features on the next page](#) lists the features available, and Table [Properties](#) lists the properties.

To run the IxNetwork installer silently, run IxNetwork<version><release>.exe -e command in order to extract the exe, where <version> is the version of the software, and <release> is the release number for the particular package. The .exe is extracted to %ProgramFiles%\IxiaInstallerCache\IxNetwork\<full_version> folder by providing a -e switch, for example, IxNetwork<version><release>.exe -e. The setup.exe file is located in this folder.

Perform the following steps to set up silent installation using the .exe package.

1. Open a command line window.
2. Enter the following command line argument, in one line:

```
setup.exe [-s|-q] [-n] [i|x|r] [F.Feature1=Yes|No [F.Feature2=Yes|No]] [P.Prop1-1=Val1 [P.Prop2=Val2]]
```

3. See [IxNetwork setup.exe Package Examples](#) below for examples of using the command line to set up silent installation.

NOTE Earlier silent installation of IxNetwork was a two step process in which you had to first extract the setup (example: IxNetwork_8.10_EA.exe -e) and then had to provide the silent installation switch on a command line (example: setup.exe i -s). Now you can install IxNetwork silently using a single command line.
Example: IxNetwork_8.10_EA.exe i -s.

Setup.exe Switches

Switch	Definition
--------	------------

-s	silent (progress bar only)
-q	quiet (no GUI at all)
-n	external controlled (by IxAdmin)
no switch (default)	GUI installation

Setup.exe Actions

Switch	Definition
i	install
x	uninstall
r	repair
no action (default)	install

Features

F.Feature1=Yes – install the named feature.

These features represent installer components and are detailed in config.xml file, in the ConfigOptions/CannedConfig section. If no features are provided, a default configuration is used.

Features represent the installer components that can be selected from the GUI in standalone mode. The command line allows the combinations of these features.

Features

Feature	Definition
F.Client	Install Client components
F.Server	Install Chassis components
F.Tcl	Install Tcl components
F.IxVM_Chassis	Install IxVM components
F. Docs	Install documentation
F. OldReporter	Install Legacy Reporter
F. HLTAPI	Install Hltapi
F. Samples	Install Samples and Scripts for IxNetwork Client

Properties

P.Prop1 =Val1 – pass to the installer a certain property.

If no properties provided, default properties are used.

Properties correspond with settings from the installation GUI, but do not represent the standard features from the feature selection dialog box, however, the options are presented as radio buttons, check box or edit fields (like the choice of TCL version in IxNetwork). A special property is InstallDir which (if accepted by the application installer) sets the installation folder.

Properties

Property	Definition
P.INSTALL_STANDALONE	Install IxNetwork
P.INSTALL_SERVER	Install Chassis Components
P.INSTALL_DOCS	Install Documentation
P.INSTALL_OLDREPORTER	Install Legacy Reporter

IxNetwork setup.exe Package Examples

The following examples demonstrate various options for setting up silent installation using the *setup.exe* package:

- Silent installation of IxNetwork:

```
setup.exe -s P.INSTALL_STANDALONE=Yes
```

- Quiet installation of IxNetwork:

```
setup.exe -q P.INSTALL_STANDALONE=Yes
```

- Silent Uninstall (any config)

```
setup.exe -s x
```

The following table represents the detailed list of the configuration and corresponding command lines for IxNetwork.

IxNetwork configuration to install	Command line
Install IxNetwork	Silent: setup.exe -s P.INSTALL_STANDALONE=Yes P.INSTALL_ OLDREPORTER=Yes Quiet: setup.exe -q P.INSTALL_STANDALONE=Yes P.INSTALL_ OLDREPORTER=Yes
Install IxNetwork and Docs	Silent: setup.exe -s P.INSTALL_STANDALONE=Yes P.INSTALL_ OLDREPORTER=Yes P.INSTALL_DOCS=Yes Quiet: setup.exe -q P.INSTALL_STANDALONE=Yes P.INSTALL_ OLDREPORTER=Yes P.INSTALL_DOCS=Yes
Install IxNetwork, Docs and IxVM	Silent: setup.exe -s P.INSTALL_STANDALONE=Yes

Server Chassis	<pre>P.INSTALL_ OLDREPORTER=Yes P.INSTALL_DOCS=Yes P.INSTALL_ SERVER=Yes Quiet: setup.exe -q P.INSTALL_STANDALONE=Yes P.INSTALL_ OLDREPORTER=Yes P.INSTALL_DOCS=Yes P.INSTALL_ SERVER=Yes</pre>
----------------	---

Install IxNetwork on a Physical Chassis

To install IxNetwork on a physical Keysight chassis:

1. Type `IxNetworkChassis_7.40_EA.exe -e` at the command line.
2. Run `setup.exe -s` from the extracted folder.

Uninstall/Modify a Current Installation

To remove silently or uninstall the current version of IxNetwork, enter the following argument at the command line:

```
Setup.exe -s x
```

To modify an existing installation, first uninstall it, and then reinstall it with the required features.

Silent Repair/Modify

Silent repair is the same as running silent install on a current installation. Enter the following at the command line:

```
setup.exe -s r
```

IxNetwork Linux Installation

The following section gives information about IxNetwork installation in Linux environment.

NOTE Root-level permission is required to run IxNetwork binary installer.

To be able to install and use IxNetwork, IxOS must be first installed on your Linux system.

To install Linux IxOS, you can choose from binary installer or tar.gz format.

Installation using IxOS Binary Installer

1. Copy the IxOS<version>Linux.bin file to the system.
2. Change the file's attribute to make it executable.
Example: `chmod +x IxOS<version>Linux.bin`
3. Run the IxOS installer file (use the `-i console` option if installing through console or remote shell).
Example: `./IxOS<version>Linux.bin`

4. When the installer prompts, select Tcl version 8.5 (required) and the install location.
5. Follow the rest of the instructions to complete the installation.

Installation using IxOS tgz Package

1. Create the destination folder.
2. Extract and copy all folders and files from the tgz package into the destination folder.

Installation/Uninstallation Commands

The installation commands are in the following mode.

1. GUI Mode:

```
./<Installer_name> -i gui
```

Example:

```
./IxNetworkTclClient7.50.68.514Linux.bin -i gui  
./IxNetworkTclClient7.50.68.514Linux64.bin -i gui
```

2. Console Mode:

```
./<Installer_Name>  
./<Installer_Name> -i console
```

Example:

```
./IxNetworkTclClient7.50.68.514Linux.bin  
./IxNetworkTclClient7.50.68.514Linux.bin -i console  
./IxNetworkTclClient7.50.68.514Linux64.bin  
./IxNetworkTclClient7.50.68.514Linux64.bin -i console
```

3. Silent Mode :

```
<Installer_Name> -DUSER_INSTALL_DIR=<Specify_Installation_Path> -i silent
```

Example:

```
./IxNetworkTclClient7.50.68.514Linux.bin -DUSER_INSTALL_DIR=/  
home/<user_name>/ixos-3 -i silent
```

Uninstallation Command

The uninstallation command is given below with an example.

```
./<Installation_Dir>/Uninstall_<Product_Name>/Uninstall_<Product_Name>
```

Example:

```
./IxNetworkTclClient7.50.68.515-EB/Uninstall_IxNetworkTclClient7.50.68.515/Uninstall_  
IxNetworkTclClient7.50.68.515
```

Location of Log Files

```
<Users_Home_Dir>/logs
```

Example:

```
-/home/<user_name>/logs
```

NOTE IxOS is mandatory only during installation through GUI and Console modes. Silent installation does not check for IxOS.

NOTE During installation through GUI and Console modes, IxNetwork installation folder should be same as the installation folder of an IxOS build and all the IxNetwork resources are installed under lib folder of IxOS.

Installation Sequence using the Console Mode

This is the default installation mode. The steps are given below:

```
anupam@anupamUbuntuServer:/home/builds$ ./IxNetworkAPI9.10.0.334Linux64.bin
Preparing to install
Extracting the JRE from the installer archive...
Unpacking the JRE...
Extracting the installation resources from the installer archive...
Configuring the installer for this system's environment...

Launching installer...

=====
IxNetworkTclClient9.10.0.334           (created with InstallAnywhere)
-----

Preparing CONSOLE Mode Installation...

=====
Introduction
-----
InstallAnywhere will guide you through the installation of
IxNetworkTclClient9.10.0.334.

It is strongly recommended that you quit all programs before continuing with
this installation.

Respond to each prompt to proceed to the next step in the installation. If
you want to change something on a previous step, type 'back'.

You may cancel this installation at any time by typing 'quit'.

PRESS <ENTER> TO CONTINUE:

=====
Please Wait
```

=====

IMPORTANT NOTE

=====

Please note that the installation should be done using a root account or you need at least rwx on /opt

PRESS <ENTER> TO CONTINUE:

=====

License Agreement

=====

Installation and Use of IxNetworkTclClient9.10.0.334 Requires Acceptance of the Following License Agreement:

This KEYSIGHT IXNETWORK SOFTWARE END USER LICENSE AGREEMENT (this "Agreement") is a legal agreement between you (a business entity and not an individual) ("Licensee") and Keysight Technologies, Inc. ("Keysight") for Keysight's Ixia branded software product(s) identified in the related Keysight invoice or in connection with which this Agreement appears, including all associated media (collectively, the "SOFTWARE," as further defined below). By checking and/or clicking the "I Accept" or similar box or button at the beginning of the SOFTWARE download and/or installation process, and/or by installing the SOFTWARE or having the SOFTWARE installed (for example, and not by way of limitation, by permitting Keysight to install the SOFTWARE on hardware owned, controlled, or operated by Licensee), and/or by using the SOFTWARE or a program containing the SOFTWARE, and/or by downloading the SOFTWARE and/or by activating the SOFTWARE with any associated license key, as applicable, you are binding the business entity that you represent (i.e., Licensee) to the terms and conditions of this Agreement.

If Licensee does not agree to be bound by the terms of this Agreement, Licensee may not use the SOFTWARE in any way, and Licensee (either itself or through any of its employees) must not check and/or click any "I Accept" or similar box or button associated with this Agreement during the SOFTWARE installation, activation, and/or download process, as applicable, and must promptly return the SOFTWARE (including, without limitation, any software

PRESS <ENTER> TO CONTINUE:

media), unused, to Keysight.

1. KEYSIGHT PRODUCT

The Keysight product may contain any combination of the following six categories of software:

- (a) "Server Software" is software that is intended for use on a server in conjunction with use of Client Software.
- (b) "Client Software" is software that is intended for use on a computer workstation, and that allows an end user to access and utilize the services of Server Software.
- (c) "Console Software" refers to that portion of the IxChariot Software that is intended for use on a computer workstation, and that allows an end user to control Endpoint Software. For the avoidance of doubt, in no event shall Console Software be deemed to be Server Software or Client Software.
- (d) "Endpoint Software" refers to the Performance Endpoint Software and/or the Qcheck Software.

PRESS <ENTER> TO CONTINUE:

- (e) "License Management Software" is software that provides certain software license management services on a computer server.
- (f) "GPL Software" consists of open source software as selected by Keysight for inclusion in the Keysight product. GPL Software is not owned by Keysight. Notwithstanding anything in this Agreement to the contrary, GPL Software is distributed by Keysight to Licensee for Licensee's use solely under the terms of the GNU General Public License, Version 2, June 1991, a copy of which accompanies this Agreement. The GNU General Public License governs the GPL Software and the copying, distribution, and modification of the GPL Software. GPL Software source code is available upon request, consistent with the requirements of the GNU General Public License.

2. GRANT OF LICENSE

Subject to the terms, conditions, and restrictions in this Agreement, Keysight grants to Licensee a non-exclusive, non-transferable, and non-sublicensable license to (i) install and use the Server Software, the Client Software, the Console Software, the Endpoint Software and/or the License Management Software (collectively, and together with any copies thereof made in accordance with this Agreement, the "SOFTWARE") for which Licensee has paid or will pay to Keysight any required license fees, in object code form only, and (ii) use the

PRESS <ENTER> TO CONTINUE:

provided end user documentation, whether printed or electronic (together with any copies thereof made in accordance with this Agreement, the "Documentation"), in support of Licensee's use of the SOFTWARE. The license(s) granted above are subject to the following terms and conditions, as well as all other terms and conditions in this Agreement and in the applicable Keysight invoice:

(a) Server Software. Any Server Software included in the SOFTWARE may be installed and/or used only on a hardware product for which such Server Software is designated.

(b) Client Software. Except as otherwise provided in the applicable Keysight invoice, any Client Software included in the SOFTWARE may be installed and/or used on an unlimited number of computer workstations. Such use is subject to any further restrictions in the applicable Keysight invoice, including but not limited to any restrictions limiting the number of Client Software copies that can concurrently access and utilize the services of a particular copy of Server Software.

(c) Console Software. Except as otherwise provided below, any Console Software included in the SOFTWARE may be installed and/or used only on the number of designated computer workstations corresponding with the total number of

PRESS <ENTER> TO CONTINUE:

licenses specified in the applicable Keysight invoice. Notwithstanding the foregoing, if Licensee has purchased one or more "floating licenses" for the IxChariot Software, then Licensee may install the corresponding Console Software on an unlimited number of computer workstations, but may only use concurrently the number of copies of such Console Software that is equal to the number of such "floating licenses" purchased by Licensee. Licensee's use of Console Software is subject to any further restrictions in the applicable Keysight invoice, including but not limited to any restrictions limiting the number of simultaneous tests that may be run with such Console Software.

(d) Endpoint Software. Notwithstanding anything in this Agreement to the contrary, Licensee may install and use the Endpoint Software on an unlimited number of computers and may make an unlimited number of copies of such SOFTWARE for backup and archival purposes.

(e) License Management Software. Any License Management Software included in the SOFTWARE may be installed and/or used only on the number of designated servers corresponding with the total number of licenses specified in the applicable Keysight invoice.

(f) Updates and Releases. To the extent that, under the Keysight Limited Warranty or any Keysight Extended Warranty, Keysight provides Licensee with

PRESS <ENTER> TO CONTINUE:

any revised, modified, or replacement SOFTWARE, or additional or supplemental SOFTWARE, or any updates, releases, error correction, or bug fixes related to the SOFTWARE, the same shall become part of the "SOFTWARE" licensed hereunder when delivered to Licensee and shall be subject to all of the terms and conditions contained herein. With respect to any technical information Licensee provides to Keysight in connection with the license(s) granted to Licensee hereunder, Keysight may use such information for any purpose without restriction, including, without limitation, for product support and development. Keysight will not use such technical information in a form that identifies Licensee.

(g) Media; License Keys. Licensee may receive the SOFTWARE in more than one medium, or Licensee may receive copies of the SOFTWARE that are compatible with operating systems not specified on the applicable Keysight invoice. Regardless, Licensee may use the SOFTWARE only as expressly permitted in this Agreement. Licensee acknowledges and agrees that installation and/or use of certain SOFTWARE may be subject to activation by license key.

(h) Copies. Except as is otherwise expressly provided in this Agreement, Licensee may make only one copy of the SOFTWARE, and may use that copy only for backup and archival purposes. Licensee may copy the Documentation to the limited extent reasonably necessary to facilitate Licensee's use of the

PRESS <ENTER> TO CONTINUE:

SOFTWARE in accordance with this Agreement.

(i) Reservation of Rights. Keysight reserves all rights not expressly granted herein.

3. TITLE; COPYRIGHT; PATENTS; NO SALE

(a) Ownership. Certain of the SOFTWARE contains or is based upon software and/or other materials licensed to Keysight by third party licensors (e.g., Cisco Systems, Inc.). Licensee acknowledges and agrees that the SOFTWARE (including but not limited to any proprietary protocols implemented therein) constitutes valuable trade secrets of Keysight, its affiliates, and/or its licensors (as applicable). Licensee further acknowledges and agrees that Keysight, its affiliates, and/or its licensors (as applicable) own all right, title, and interest in and to the SOFTWARE (including, without limitation, any all copies, extracts, and associated media thereof, all concepts, logic, protocols, and specifications related thereto, and all images, "applets," photographs, animations, video, audio, and/or text incorporated therein), as well as all patents, trademarks, trade names, inventions, copyrights, know-how, trade secrets, and other intellectual and industrial property

rights, and any related applications or extensions, relating to the design, manufacture, operation, or service of the SOFTWARE.

PRESS <ENTER> TO CONTINUE:

(b) Copyright; Copies. Licensee acknowledges and agrees that the SOFTWARE is protected by United States copyright laws and international treaty provisions. Licensee must treat the SOFTWARE like any other copyrighted material except as otherwise provided herein with respect to making copies of the SOFTWARE.

(c) Licensed Not Sold. Licensee acknowledges and agrees that the SOFTWARE has been licensed to Licensee pursuant to the terms and conditions of this Agreement and that the SOFTWARE has not been sold to Licensee.

(d) PESQ; PAMS/PESQ; PAMS/PESQ/PSQM+; PAMS/PSQM. Licensee acknowledges that any PESQ, PAMS/PESQ, or PAMS/PESQ/PSQM+ software included in the SOFTWARE is protected by copyright and by UK, European, U.S., and other patents and is provided under licenses from Psytechs Limited and Malden Electronics Limited. Licensee also acknowledges that any PAMS/PSQM software included in the SOFTWARE was developed by KPN Research, the Netherlands, and is used by permission under license from OPTICOM Dilp.-Ing. M. Keyhl GmbH, Erlangen, Germany.

4. RESTRICTIONS AND LIMITATIONS

(a) General Use Restrictions. Licensee shall not use, copy, merge, or transfer

PRESS <ENTER> TO CONTINUE:

copies of the SOFTWARE or the Documentation except as may be expressly and specifically authorized in this Agreement. Licensee shall not knowingly take any action that would cause the SOFTWARE to be placed in the public domain.

(b) No Reverse Engineering; No Modification. Licensee may not, under any circumstances, reverse engineer, decompile, disassemble, or otherwise attempt to discover, reconstruct, or identify the source code for the SOFTWARE or any user interface techniques, algorithms, logic, protocols, or specifications included, incorporated, or implemented therein. Furthermore, Licensee may not, under any circumstances and except as expressly authorized by Keysight in the Documentation, modify, port, translate, or create derivative works of the SOFTWARE.

(c) Rental; Leasing. Licensee may not, and agrees that it will not, transfer, assign, rent, lease, lend, resell, or in any way distribute or transfer any rights in this Agreement or the SOFTWARE to third parties, including by operation of law, without Keysight's prior written approval and subject to written agreement by the recipient to the terms of this Agreement.

(d) Export Restrictions; Compliance with Laws. Licensee agrees that Licensee will not, directly or indirectly, export or transmit the SOFTWARE to any country to which such export or transmission is restricted by any applicable

PRESS <ENTER> TO CONTINUE:

U.S. regulation or statute, without the prior written consent, if required, of the Bureau of Export Administration of the U.S. Department of Commerce or such other governmental entity as may have jurisdiction over such export or transmission. Licensee agrees to comply with and conform to all applicable laws, regulations, ordinances, and executive orders relating to Licensee's use of the SOFTWARE.

5. USE AUDIT

Keysight shall have the right, upon reasonable notice, to conduct and/or have an independent accounting firm to conduct, during normal business hours on Licensee's premises under Licensee's reasonable supervision, an audit to verify Licensee's compliance with the terms of this Agreement.

6. TERM AND TERMINATION

(a) General. Except as provided below with respect to evaluation and limited term licenses, this Agreement and the license(s) granted herein will remain effective until terminated. Licensee may terminate this Agreement and the license(s) granted herein by ceasing all use of the SOFTWARE and any related Documentation, and returning all copies of the SOFTWARE and the related Documentation to Keysight. The license(s) granted to Licensee under this

PRESS <ENTER> TO CONTINUE:

Agreement will automatically terminate if Licensee fails to comply with any term or condition of this Agreement.

(b) Evaluation and Term Licenses. If SOFTWARE has been licensed to Licensee for evaluation purposes, this Agreement will be effective only until the end of the designated evaluation period. If SOFTWARE has been licensed to Licensee for a limited term as specified in the applicable invoice or otherwise, then this Agreement will be effective only until the end of such term. SOFTWARE that is subject to any evaluation or limited term license may contain code that can disable most or all of the features of such SOFTWARE upon expiration of such evaluation or limited term license, and unless Licensee has paid to Keysight the applicable license fee for any additional licenses, Licensee shall have no rights to use the SOFTWARE or the Documentation upon expiration of any such license.

(c) Licensee Obligations Upon Termination or Expiration. Licensee agrees, upon

any termination or expiration of this Agreement, to cease use of, and to destroy or return to Keysight, all copies of the SOFTWARE and any related Documentation.

7. LIMITED WARRANTY; DISCLAIMER; LIMITATION OF LIABILITY

PRESS <ENTER> TO CONTINUE:

(a) DISCLAIMER OF WARRANTY. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, AND EXCEPT AS EXPRESSLY SET FORTH HEREIN OR IN KEYSIGHT'S LIMITED WARRANTY OR ANY KEYSIGHT EXTENDED WARRANTY, THE SOFTWARE IS PROVIDED "AS IS", AND KEYSIGHT AND ITS SUPPLIERS AND LICENSORS DO NOT MAKE AND SPECIFICALLY DISCLAIM, ALL EXPRESS AND IMPLIED WARRANTIES OF EVERY KIND RELATING TO THE SOFTWARE AND/OR USE OF THE SOFTWARE (INCLUDING, WITHOUT LIMITATION, ACTUAL AND IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, AND NON-INFRINGEMENT), AS WELL AS ANY WARRANTIES THAT THE SOFTWARE (OR ANY ELEMENTS THEREOF) WILL ACHIEVE A PARTICULAR RESULT, OR WILL BE UNINTERRUPTED OR ERROR-FREE.

(b) GPL Software. Licensee acknowledges that the GPL Software is third-party software that has not been manufactured, tested, or otherwise approved by Keysight. THE GPL SOFTWARE IS PROVIDED "AS IS," AND KEYSIGHT DOES NOT MAKE AND SPECIFICALLY DISCLAIMS ALL EXPRESS AND IMPLIED WARRANTIES OF EVERY KIND RELATING TO THE GPL SOFTWARE AND/OR USE OF THE GPL SOFTWARE (INCLUDING, WITHOUT LIMITATION, ACTUAL AND IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, AND NON-INFRINGEMENT), AS WELL AS ANY WARRANTIES THAT THE GPL SOFTWARE (OR ANY ELEMENTS THEREOF) WILL ACHIEVE A PARTICULAR RESULT, OR WILL BE UNINTERRUPTED OR ERROR-FREE. Nothing in this Agreement shall obligate Keysight to provide any support for the GPL Software.

PRESS <ENTER> TO CONTINUE:

(c) LIMITATION OF LIABILITY. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL KEYSIGHT OR ITS LICENSORS BE LIABLE UNDER ANY THEORY OF LIABILITY FOR ANY CONSEQUENTIAL, INDIRECT, INCIDENTAL, SPECIAL, PUNITIVE, OR EXEMPLARY DAMAGES OF ANY KIND, INCLUDING, WITHOUT LIMITATION, DAMAGES ARISING FROM LOSS OF PROFITS, REVENUE, DATA, OR USE, OR FROM INTERRUPTED COMMUNICATIONS OR DAMAGED DATA, OR FROM ANY DEFECT OR ERROR, OR IN CONNECTION WITH LICENSEE'S ACQUISITION OF SUBSTITUTE GOODS OR SERVICES OR MALFUNCTION OF THE KEYSIGHT PRODUCT, OR ANY SUCH DAMAGES ARISING FROM BREACH OF CONTRACT OR WARRANTY OR FROM NEGLIGENCE OR STRICT LIABILITY, EVEN IF KEYSIGHT OR ANY OF ITS LICENSORS OR ANY OTHER PERSON HAS BEEN ADVISED OR SHOULD KNOW OF THE POSSIBILITY OF SUCH DAMAGES, AND NOTWITHSTANDING THE FAILURE OF ANY REMEDY TO ACHIEVE ITS INTENDED PURPOSE. THE AGGREGATE LIABILITY OF KEYSIGHT AND ITS LICENSORS UNDER THIS AGREEMENT WILL NOT EXCEED THE AMOUNT PAID BY LICENSEE FOR THE KEYSIGHT PRODUCT.

(d) KEYSIGHT LIMITED AND EXTENDED WARRANTIES. THE SOFTWARE IS LICENSED HEREUNDER SUBJECT TO ALL OF THE "OTHER LIMITATIONS" SET FORTH IN KEYSIGHT'S LIMITED WARRANTY AND ANY KEYSIGHT EXTENDED WARRANTY PURCHASED BY LICENSEE. IN THE CASE OF ANY CONFLICT BETWEEN A LIMITATION OF LIABILITY IN SUCH "OTHER LIMITATIONS" AND THE LIMITATION OF LIABILITY IN THIS AGREEMENT, THE LIMITATION OF LIABILITY THAT IS MORE RESTRICTIVE WILL PREVAIL.

PRESS <ENTER> TO CONTINUE:

(e) Responsibilities of Licensee. As a licensee of the SOFTWARE, Licensee is solely responsible for the proper installation and operation of the SOFTWARE in accordance with the instructions and specifications set forth in the Documentation. Keysight shall have no responsibility or liability to Licensee, under Keysight's Limited Warranty or otherwise, for improper installation or operation of the SOFTWARE. Any output or execution errors resulting from improper installation or operation of the SOFTWARE shall not be deemed "defects" for purposes of Keysight's Limited Warranty.

8. INDEMNITY

Licensee hereby agrees to indemnify, protect, defend, and hold Keysight harmless from and against any and all claims, losses, and damages, including without limitation, reasonable attorneys' and experts' fees and disbursements, (a) which may at any time be asserted against Keysight by any party for Licensee's failure to perform any of the covenants, agreements, terms, provisions, or conditions contained in this Agreement, (b) by any party by reason of Licensee's use or misuse of the Keysight product, or (c) resulting from any failure by Licensee to comply with any term, condition, or restriction in this Agreement.

9. NON-DISCLOSURE

PRESS <ENTER> TO CONTINUE:

Licensee shall take all reasonable steps necessary to ensure that the SOFTWARE, the Documentation, and any related Keysight information, or any portion thereof, is not made available or disclosed by Licensee (or by any of its employees, representatives, or agents) to any person other than as may be necessary to Licensee's employees, representatives, and agents to use the same as expressly permitted herein. Licensee agrees that all of its employees, representatives, and agents having access to the SOFTWARE and/or the Documentation shall observe and perform the terms of this Section.

10. USAGE DATA COLLECTION

(a) The SOFTWARE contains a data feed that provides usage data to Keysight. Keysight may use the data on an anonymous basis to troubleshoot and improve the user experience. Licensee consents to Keysight's collection and use of such data, and Licensee acknowledges that the data feed is "on" by default. If Licensee would like to stop the transmission of such data, Licensee must turn the data feed "off" in the user settings.

(b) Keysight collects information about Licensee and Licensee's use of this SOFTWARE license/service. Please review Keysight's Privacy Policy at <https://www.keysight.com> to understand the type of information that Keysight

PRESS <ENTER> TO CONTINUE:

collects, how Keysight uses it, and to whom Keysight shares it.

11. U.S. GOVERNMENT RESTRICTED RIGHTS

(a) Commercial Software. The SOFTWARE and its accompanying Documentation are deemed to be "commercial computer software" and "commercial computer software documentation," respectively, for purposes of Federal Acquisition Regulations ("FAR") 12.212 and the Defense FAR Supplement ("DFARS") 227.7202-1, 227.7202-3, and 227.7202-4, and the restrictions set forth in such regulations, and this Agreement shall be deemed to be the license described in such regulations. Any use, modification, reproduction, release, performance, display, or disclosure of the SOFTWARE or its accompanying Documentation by any agency, department, or entity of the United States Government (the "Government") shall be governed solely by the terms of this Agreement and is prohibited except to the extent expressly permitted by the terms of this Agreement. The SOFTWARE and its accompanying Documentation are also deemed to be "restricted computer software" for purposes of FAR 52.227- 14(g)(3) (Alternate III (June 1987)) and FAR 52.227-19, which clauses are incorporated herein by reference subject to the express restrictions and prohibitions set forth above.

(b) Certain Technical Data. Any technical data provided that is not covered by

PRESS <ENTER> TO CONTINUE:

the above provisions is deemed to be "technical information related to commercial computer software or commercial computer software documentation" for purposes of FAR 12.212 and the restrictions set forth therein, and is deemed to be "technical data or information related or pertaining to commercial items or processes" developed at private expense for purposes of DFARS 227.7102-1 and 227.7102-2 and the restrictions set forth therein, and this Agreement shall be deemed to be the license described in such regulations. Any use, modification, reproduction, release, performance, display, or disclosure of such technical data by the Government shall be governed solely by the terms of this Agreement and is prohibited except to the

extent expressly permitted by the terms of this Agreement. Such technical data is also deemed to be "limited rights data" as defined in FAR 52.227-14(a) (Alternate I (June 1987)) and for purposes of FAR 52.227-14(g)(2) (Alternate II (June 1987)), which clauses are incorporated herein by reference subject to the express restrictions and prohibitions set forth above. Such technical data shall also be deemed to be "technical data" for purposes of DFARS 252.227-7015, which clause is incorporated herein by reference subject to the express restrictions and prohibitions set forth above.

(c) Third Party Acceptance of Restrictions. Licensee shall not provide the SOFTWARE, its accompanying Documentation, or the technical data to any party, including the Government, unless such third party accepts the same

PRESS <ENTER> TO CONTINUE:

restrictions as are set forth in this Section 11. Licensee is responsible for ensuring that the proper notice is given to all such third parties and that the SOFTWARE, its accompanying Documentation, and the technical data are properly marked with the required legends. Nothing in this Section 11(c) shall be deemed to modify the restrictions on transfer or disclosure set forth elsewhere in this Agreement.

12. GOVERNING LAW; ENFORCEMENT

(a) Governing Law. This Agreement and the rights and obligations of the parties hereunder shall be governed by the laws of the State of California, without reference to conflicts of laws principles; provided, however, that if this product was acquired outside the United States, then certain local laws may apply. IN ADDITION, THIS AGREEMENT WILL NOT BE GOVERNED OR INTERPRETED IN ANY WAY BY REFERRING TO ANY LAW BASED ON THE UNIFORM COMPUTER INFORMATION TRANSACTIONS ACT (UCITA), EVEN IF THAT LAW HAS BEEN ADOPTED IN CALIFORNIA, AND THE UNITED NATIONS CONVENTION ON CONTRACTS FOR THE INTERNATIONAL SALE OF GOODS IS HEREBY EXCLUDED.

(b) Equitable Relief. Licensee acknowledges that any actual or threatened breach of the provisions of this Agreement will constitute immediate, irreparable harm to Keysight and its licensors (as applicable) for which

PRESS <ENTER> TO CONTINUE:

monetary damages would be an inadequate remedy; that injunctive relief is an appropriate remedy for any such breach or threatened breach; and that, in such event, Keysight (and/or its licensors, as applicable) will be entitled to immediate injunctive relief without the requirement of posting bond.

13. INVALIDITY OF PROVISIONS

If any provision in this Agreement is invalid or unenforceable, such provision

shall be construed, limited, or altered, as necessary, to eliminate the invalidity or unenforceability and all other provisions of this Agreement shall remain in effect.

14. MISCELLANEOUS

(a) This Agreement and Keysight's Limited Warranty and any Keysight Extended Warranty purchased by Licensee set forth the entire agreement between Keysight and Licensee with respect to the SOFTWARE and Licensee's use thereof. No provision of this Agreement or of Keysight's Limited Warranty or any Keysight Extended Warranty may be waived, modified, or superseded except by a written instrument signed by each of Keysight and Licensee. Both parties hereby acknowledge and agree that any and all licensors of Keysight (and any and all licensors of Keysight's licensors) shall be direct and intended third party

PRESS <ENTER> TO CONTINUE:

beneficiaries of this Agreement (including, without limitation, the provisions regarding intellectual property ownership, and the disclaimers of warranties and limitations on liability, as set forth herein), with the right to directly enforce same. No failure or delay in exercising any right or remedy shall operate as a waiver of any such (or any other) right or remedy. The language of this Agreement shall be construed as a whole, according to its fair meaning and intent, and not strictly for or against either party, regardless of who drafted or was principally responsible for drafting this Agreement or any specific term or conditions hereof. This Agreement shall bind and inure to the benefit of the parties and their successors and permitted assigns. Both parties are acting as independent contractors with respect to the activities hereunder. In the event of any legal proceeding between the parties arising out of or related to this Agreement, the prevailing party shall be entitled to recover, in addition to any other relief awarded or granted, its costs and expenses (including but not limited to reasonable attorneys' and expert witness' fees) incurred in any such proceeding. Attachment: Copy of the GNU General Public License GNU GENERAL

PUBLIC LICENSE

Version 2, June 1991

Copyright (C) 1989, 1991 Free Software Foundation, Inc. 59 Temple Place,
Suite 330, Boston, MA 02111-1307 USA

PRESS <ENTER> TO CONTINUE:

Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed. Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change free software--to make sure the

software is free for all its users. This General Public License applies to most of the Free Software Foundation's software and to any other program whose authors commit to using it. (Some other Free Software Foundation software is covered by the GNU Library General Public License instead.) You can apply it to your programs, too. When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs; and that you know you can do these things.

To protect your rights, we need to make restrictions that forbid anyone to deny you these rights or to ask you to surrender the rights. These restrictions translate to certain responsibilities for you if you distribute copies of the software, or if you modify it.

PRESS <ENTER> TO CONTINUE:

For example, if you distribute copies of such a program, whether gratis or for a fee, you must give the recipients all the rights that you have. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

We protect your rights with two steps: (1) copyright the software, and (2) offer you this license which gives you legal permission to copy, distribute and/or modify the software.

Also, for each author's protection and ours, we want to make certain that everyone understands that there is no warranty for this free software. If the software is modified by someone else and passed on, we want its recipients to know that what they have is not the original, so that any problems introduced by others will not reflect on the original authors' reputations.

Finally, any free program is threatened constantly by software patents. We wish to avoid the danger that redistributors of a free program will individually obtain patent licenses, in effect making the program proprietary. To prevent this, we have made it clear that any patent must be licensed for everyone's free use or not licensed at all.

The precise terms and conditions for copying, distribution and modification

PRESS <ENTER> TO CONTINUE:

follow.

GNU GENERAL PUBLIC LICENSE
TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

This License applies to any program or other work which contains a notice placed by the copyright holder saying it may be distributed under the terms of this General Public License. The "Program", below, refers to any such program or work, and a "work based on the Program" means either the Program or any derivative work under copyright law: that is to say, a work containing the Program or a portion of it, either verbatim or with modifications and/or translated into another language. (Hereinafter, translation is included without limitation in the term "modification".) Each licensee is addressed as "you".

Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running the Program is not restricted, and the output from the Program is covered only if its contents constitute a work based on the Program (independent of having been made by running the Program). Whether that is true depends on what the Program does.

PRESS <ENTER> TO CONTINUE:

1. You may copy and distribute verbatim copies of the Program's source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and give any other recipients of the Program a copy of this License along with the Program.

You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

2. You may modify your copy or copies of the Program or any portion of it, thus forming a work based on the Program, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:

a) You must cause the modified files to carry prominent notices stating that you changed the files and the date of any change.

b) You must cause any work that you distribute or publish, that in whole or in part contains or is derived from the Program or any part thereof, to be licensed as a whole at no charge to all third parties under the terms of this License.

PRESS <ENTER> TO CONTINUE:

c) If the modified program normally reads commands interactively when run, you must cause it, when started running for such interactive use in the most ordinary way, to print or display an announcement including an appropriate copyright notice and a notice that there is no warranty (or else, saying that you provide a warranty) and that users may redistribute the program under these conditions, and telling the user how to view a copy of this License. (Exception: if the Program itself is interactive but does not normally print such an announcement, your work based on the Program is not required to print an announcement.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Program, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Program, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it.

Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the

PRESS <ENTER> TO CONTINUE:

right to control the distribution of derivative or collective works based on the Program.

In addition, mere aggregation of another work not based on the Program with the Program (or with a work based on the Program) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may copy and distribute the Program (or a work based on it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you also do one of the following:

a) Accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,

b) Accompany it with a written offer, valid for at least three years, to give any third party, for a charge no more than your cost of physically performing source distribution, a complete machine-readable copy of the corresponding source code, to be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,

PRESS <ENTER> TO CONTINUE:

c) Accompany it with the information you received as to the offer to distribute corresponding source code. (This alternative is allowed only for noncommercial distribution and only if you received the program in object code or executable form with such an offer, in accord with Subsection b above.)

The source code for a work means the preferred form of the work for making modifications to it. For an executable work, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the executable. However, as a special exception, the source code distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

If distribution of executable or object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place counts as distribution of the source code, even though third parties are not compelled to copy the source along with the object code.

4. You may not copy, modify, sublicense, or distribute the Program except as

PRESS <ENTER> TO CONTINUE:

expressly provided under this License. Any attempt otherwise to copy, modify, sublicense or distribute the Program is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.

5. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Program or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Program (or any work based on the Program), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Program or works based on it.

6. Each time you redistribute the Program (or any work based on the Program), the recipient automatically receives a license from the original licensor to copy, distribute or modify the Program subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties to this License.

7. If, as a consequence of a court judgment or allegation of patent

PRESS <ENTER> TO CONTINUE:

infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Program at all. For example, if a patent license would not permit royalty-free redistribution of the Program by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Program.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply and the section as a whole is intended to apply in other circumstances.

It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system, which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to

PRESS <ENTER> TO CONTINUE:

distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

8. If the distribution and/or use of the Program is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Program under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.

9. The Free Software Foundation may publish revised and/or new versions of the General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new

problems or concerns. Each version is given a distinguishing version number. If the Program specifies a version number of this License which applies to it and "any later version", you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of

PRESS <ENTER> TO CONTINUE:

this License, you may choose any version ever published by the Free Software Foundation.

10. If you wish to incorporate parts of the Program into other free programs whose distribution conditions are different, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

NO WARRANTY

11. BECAUSE THE PROGRAM IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

PRESS <ENTER> TO CONTINUE:

12. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

END OF TERMS AND CONDITIONS

How to Apply These Terms to Your New Programs

If you develop a new program, and you want it to be of the greatest possible use to the public, the best way to achieve this is to make it free software

which everyone can redistribute and change under these terms.

To do so, attach the following notices to the program. It is safest to attach them to the start of each source file to most effectively convey the exclusion of warranty; and each file should have at least the "copyright" line and a pointer to where the full notice is found.

PRESS <ENTER> TO CONTINUE:

```
<one line to give the program's name and a brief idea of what it does.>
Copyright (C) <year> <name of author>
```

This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 59 Temple Place, Suite 330, Boston, MA 02111-1307 USA

Also add information on how to contact you by electronic and paper mail.
If the program is interactive, make it output a short notice like this when it starts in an interactive mode: Gnomovision version 69, Copyright
(C) year name of author
Gnomovision comes with ABSOLUTELY NO WARRANTY; for details type `show w'.

PRESS <ENTER> TO CONTINUE:

This is free software, and you are welcome to redistribute it under certain conditions; type `show c' for details.

The hypothetical commands `show w' and `show c' should show the appropriate parts of the General Public License. Of course, the commands you use may be called something other than `show w' and `show c'; they could even be mouse-clicks or menu items--whatever suits your program.

You should also get your employer (if you work as a programmer) or your school, if any, to sign a "copyright disclaimer" for the program, if necessary. Here is a sample; alter the names:

Yoyodyne, Inc., hereby disclaims all copyright interest in the program

'Gnomovision' (which makes passes at compilers) written by James Hacker.

<signature of Ty Coon>, 1 April 1989 Ty Coon,
President of Vice

This General Public License does not permit incorporating your program into
proprietary programs. If your program is a subroutine library, you may
consider it more useful to permit linking proprietary applications with the
library. If this is what you want to do, use the GNU Library General Public

PRESS <ENTER> TO CONTINUE:

License instead of this License.

Revision Date 1-Feb-2018
L400-17 Ver. No. 1

DO YOU ACCEPT THE TERMS OF THIS LICENSE AGREEMENT? (Y/N):
DO YOU ACCEPT THE TERMS OF THIS LICENSE AGREEMENT? (Y/N): Y

=====

Choose Install Folder

NOTE:

1. "ixnetwork/9.10.0.334" will be appended to the install location in case you change the default directory and you do not add that at the end
2. Only IxNetwork, IxOS and HLAPI libs will be installed at the provided custom path
3. Tcl, Perl & Python will be installed under a fixed path /opt/ixia/
4. Symbolic links created under /usr/bin for Tcl, Perl & Python will point to Tcl, Perl and Python installed under /opt/ixia/

Where would you like to install?

Default Install Folder: /opt/ixia/ixnetwork/9.10.0.334

ENTER AN ABSOLUTE PATH, OR PRESS <ENTER> TO ACCEPT THE DEFAULT
:

You do not have write permissions to the chosen installation destination.
Please choose a different location for installation

```
ENTER AN ABSOLUTE PATH, OR PRESS <ENTER> TO ACCEPT THE DEFAULT  
: /home/anupam/ixNetTCL
```

```
INSTALL FOLDER IS: /home/anupam/ixNetTCL  
IS THIS CORRECT? (Y/N): Y
```

```
=====  
Select HLAPI installation  
-----
```

```
Do you want to install HLAPI?
```

- >1- Yes
- 2- No

```
ENTER THE NUMBER FOR YOUR CHOICE, OR PRESS <ENTER> TO ACCEPT THE DEFAULT:
```

```
=====  
Please Wait  
-----
```

```
=====  
Pre-Installation Summary  
-----
```

```
Please Review the Following Before Continuing:
```

```
Product Name:  
IxNetworkTclClient9.10.0.334
```

```
Install Folder:  
/home/anupam/ixNetTCL/ixnetwork/9.10.0.334
```

```
Link Folder:  
/home/anupam/ixia
```

```
HLAPI Install Folder:  
/home/anupam/ixNetTCL/hlapi/9.10.0.127
```


```
IxOS Install Folder:  
/home/anupam/ixNetTCL/ixos-api/9.10.0.36
```

```
Python Install Folder:  
/opt/ixia/python/2.7.6  
  
Python 3.6 Install Folder  
/opt/ixia/python/3.6.4  
  
Perl Install Folder:  
/opt/ixia/perl/5.18.1.1800  
  
Tcl 8.5 Install Folder:  
/opt/ixia/tcl/8.5.17.0  
  
Tcl 8.6 Install Folder  
/opt/ixia/tcl/8.6.6.8606  
  
Disk Space Information (for Installation Target):  
Required: 1,681,555,004 Bytes  
Available: 324,742,246,400 Bytes  
  
PRESS <ENTER> TO CONTINUE:  
  
=====  
Installing...  
-----  
[=====|=====|=====|=====]  
[-----|-----|-----|-----]  
  
=====  
Please Wait  
-----  
  
Executing Installation Script...  
-  
  
=====  
Installation Complete  
-----
```


Installation Sequence Using the GUI Mode

For GUI installation, do the following steps:


1. Select **Next** in the **Introduction** dialog box of the wizard.

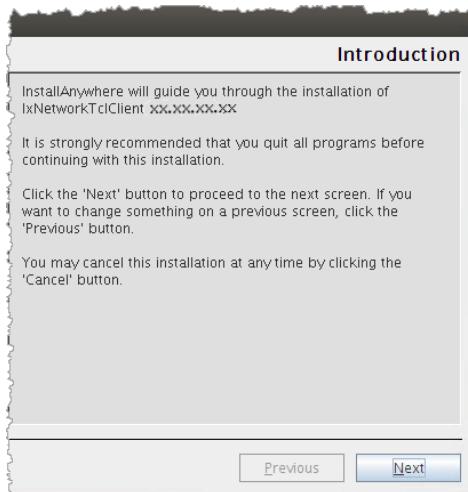


2. In the **Choose Install Folder** dialog box, select the folder location for the installer. Select **Restore Default Folder** to restore the default folder location.

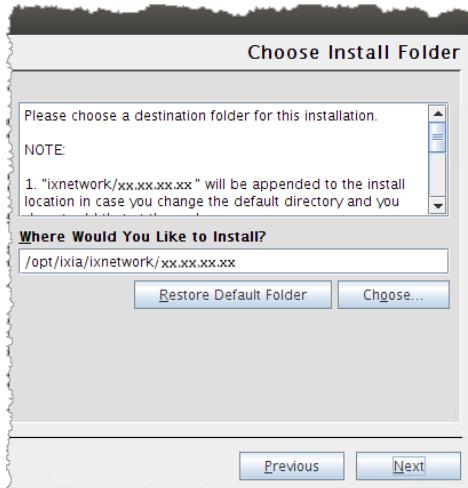

3. Select **Next**, and then **Yes** to install HLAPI as shown in the following image:

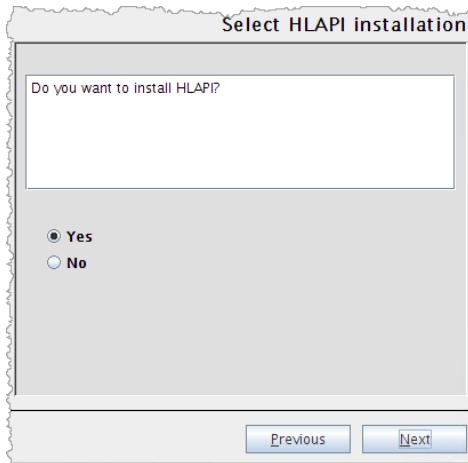


4. Select **Next**. The **Pre-Installation Summary** dialog box appears. Select **Install**.

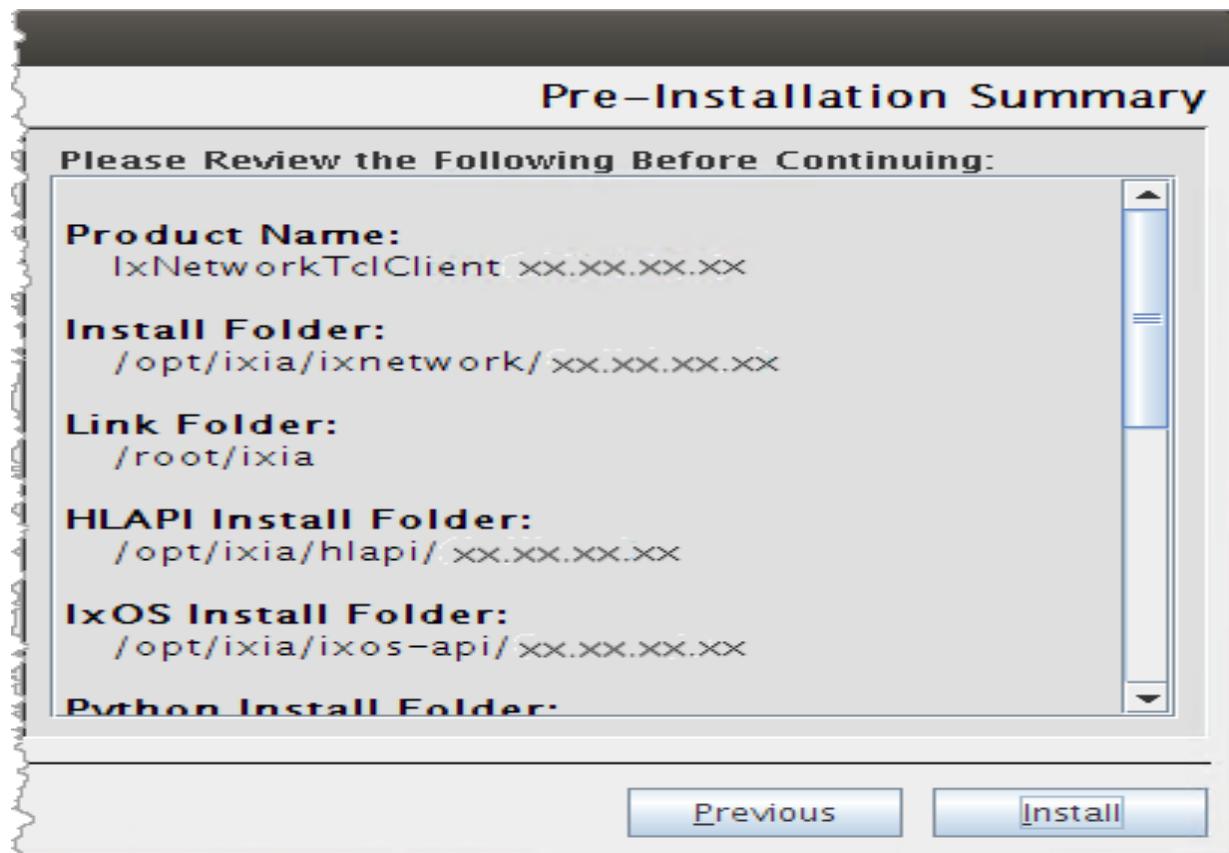

After the installation is complete, the **Install Complete** dialog box appears.

5. Select **Done** to close the installation wizard.

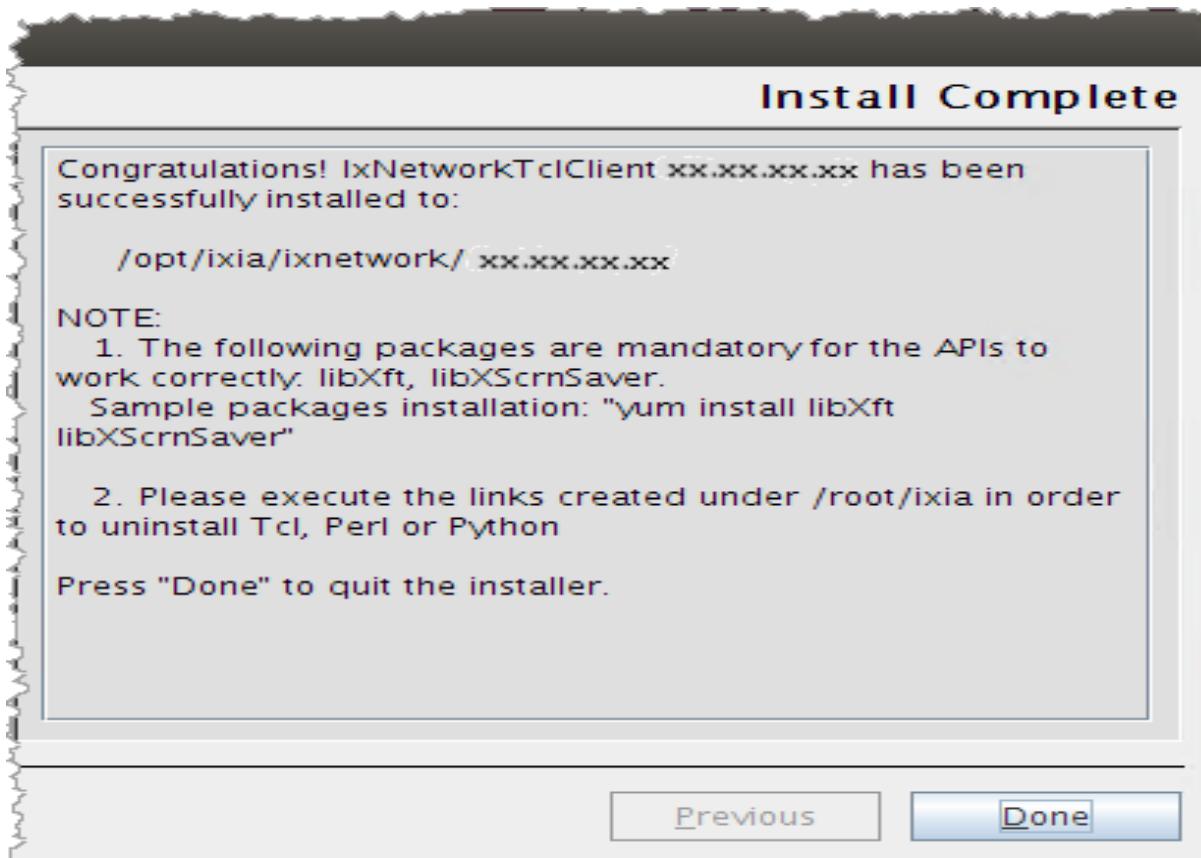

Shell Wrapper Installation

When IxNetworkTclClient bin file is installed, shell wrappers are installed in /<install folder->/ixnetwork/<version>/bin folder.

- ixnettcl : Sets TCLLIBPATH and calls the ixiatcl8.5.17 link in /usr/bin. To run Tcl script, run "ixnettcl <lowLevelScriptName>"
- ixnetperl : Sets PERL5LIB and calls the ixiaperl5.18 link in /usr/bin. To run Perl script, run "ixnetperl < lowLevelScriptName >"
- ixnetpython : Sets PYTHONPATH and calls the ixiapython2.7.6 link in /usr/bin. To run Python script, run "ixnetpython < lowLevelScriptName >"
- ixnetwish : Sets TCLLIBPATH and calls the ixiawish8.5.17 link in /usr/bin. To run Wish script, run "ixnetwish < lowLevelScriptName >"

TCL Automation Setup

The ScriptGen feature of IxNetwork requires an underlying TCL platform (compiled with Thread support). If Platform independent libraries are used, supported TCL version is 8.5. The binary installer delivers TCL 8.5.

During installation the Tcl files are installed in /opt/ixia/tcl/<version> location.

To run a Tcl script:

- Run the “ixnettcl <script name>” located in /<install folder>/ixnetwork/<version>/bin folder. The script sets TCLLIBPATH and calls ixiatcl8.5.17, which is a link in /usr/bin folder that points to ixiatcl file in /opt/ixia/tcl/<version>/bin location.
- ixiatcl file sets the other required environment variables and calls /opt/ixia/tcl/<version>/bin/tcl

The main low level automation package used by IxNetwork is called IxTclNetwork and should be loaded upon starting the TCL interpreter using the following command:

```
package req IxTclNetwork.
```

Optionally, for running Test Composer automation, the Thread and ix_tc package need to be loaded in this order.

Upon successful loading, it should print the IxNetwork version:

```
% package req IxTclNetwork
7.50.0.150
% package req Thread
2.6.5
% package req ix_tc
1.0
```

The binary installers create two environment variables on the system (LD_LIBRARY_PATH and TCLLIBPATH). Both variables are appended to existing values.

- LD_LIBRARY_PATH is used to specify all the locations of the dynamic .so or .dll libraries needed for the correct functionality of the Keysight TCL automation (For example, mpexpr1.0.so /mpexpr.dll for floating point extended precision).
- TCLLIBPATH is used to provide Tcl with additional site-specific locations to search for Keysight automation packages without installing it all the locations of the packages needed for “package require” commands.

See *TestComposer ScriptGen Tcl Reference Guide* for more information.

Python Automation Setup

Python 2.7.6 comes with both Linux and Windows IxNetwork installers.

The Python version installed by IxNetworkTclClient can be accessed using the `ixiapython2.7.6` command, which is a symbolic link created while installing IxNetworkTclClient. In case you have installed multiple versions of Python on your system, the `ixiapython` command runs the Python version added with the latest IxNetwork application installed.

The recommended version is `python.org 2.7.6`.

During installation the Python files are installed in /opt/ixia/python/<version> location.

To run a Python script:

- Run the “ixnetpython <script name>” located in /<install folder>/ixnetwork/<version>/bin folder. The script sets PYTHON5LIB and calls ixiapython2.7.6, which is a link in /usr/bin folder that points to ixiapython file in /opt/ixia/python/<version>/bin location.
- ixiapython file sets the other required environment variables and calls /opt/ixia/python/<version>/bin/python

PYTHON5LIB needs to be setup to include path to the required IxNetwork.py. To run your script using the latest version of Python installed, use the following syntax:

```
ixiapython <script name>
```

Perl Automation Setup

Perl 5.18.1 comes with the Windows IxNetwork installer, as well as with the Linux TCL client binary installer.

On a Linux system, the Perl version installed by IxNetwork can be accessed using the `ixiaperl5.18` command, which is a symbolic link created while installing IxNetwork. In case you have installed multiple versions of Perl, the `ixiaperl` command runs the highest version of Perl installed.

During installation the Perl files are installed in `/opt/ixia/perl/<version>` location.

To run a Perl script:

- Run the “`ixnetperl <script name>`” located in `/<install folder>/ixnetwork/<version>/bin` folder. The script sets PERL5LIB and calls `ixiaperl5.18`, which is a link in `/usr/bin` folder that points to `ixiaperl` file in `/opt/ixia/perl/<version>/bin` location.
- `ixiaperl` file sets the other required environment variables and calls `/opt/ixia/perl/<version>/bin/perl`

PERL5LIB needs to be setup correctly to include path to the required IxNetwork.pm. To run your script using the highest version of Perl installed, use the following syntax:

PERL5LIB needs to be setup correctly to include path to the required IxNetwork.pm. To run your script using the highest version of Perl installed, use the following syntax:

```
ixiaperl <script name>
```

NOTE

PIT Notes: The Platform Independent tgz packages do not contain Perl, Python or Tcl interpreters. The IxNetwork dependencies (`mpexpr`, `snit`, `tclx`) are also not included. Download the all-in-one language packages and dependencies installer for Linux x86 and x64 to use with any app PIT installer from the Keysight website.

Versions Supported by IxNetwork

Windows versions that are supported by the current release for the client machine are:

- Windows 2022 Server Standard 64-bit
- Windows 2019 Server Standard 64-bit
- Windows 2016 Server Standard 64-bit
- Windows 11 Consumer/Business Edition 64-bit
- Windows 10 Pro/Enterprise 64-bit

This page intentionally left blank.

CHAPTER 3**Running a Test with IxNetwork**

Follow the procedures in this guide to run a simple test and quickly gain experience with IxNetwork. If you need to perform more advanced testing, refer to *IxNetwork User Guide*.

For detailed information on IxNetwork installation and licensing, see:

- [Installation and Licensing](#)

For detailed information on licensing, see:

- [IxNetwork Licensing](#)
- [*Keysight License Management User Guide*](#)

Following are the topics covered in this chapter:

- [Requirements](#)
- [A Simple IxNetwork Test](#)
 - [Connect the Ports](#)
 - [Start IxNetwork](#)
 - [Select the Ports](#)
 - [Configure the Protocol](#)
 - [Review the Protocol Configuration](#)
 - [Ping the DUT](#)
 - [Start the BGP Protocol](#)
 - [Configure Traffic](#)
 - [Set Up the Test Composer](#)
 - [Set Up CSV Logging](#)
 - [Set Up a QuickTest](#)

NOTE The minimum resolution for viewing the IxNetwork GUI is 1024x768, with a DPI setting of Normal Size (96 DPI)

Requirements

IxNetwork is a client application that runs under Windows. It operates in conjunction with one or more chassis running IxOS/IxServer.

To run the IxNetwork test in this guide, you need the following:

- A Keysight chassis with an Ethernet-based CPU-per-port load module.
- Two ports available on the load module.
- Connection cables.
- A Windows PC to run IxNetwork. The IxNetwork Client is run on the Windows workstation, while IxOS/IxServer is run on the chassis.

A Simple IxNetwork Test

To get acquainted with IxNetwork, perform the following steps to set up and run a simple test.


The test configuration used as an example in this document is the BGP protocol, hence, install the IxNetwork BGP protocol emulation. Configure the Keysight ports to run the BGP protocol and send the traffic through the DUT to Route Ranges advertised by BGP.

To run a simple test in IxNetwork, you need to perform the following steps:

1. [Connect the Ports](#)
2. [Start IxNetwork](#)
3. [Select the Ports](#)
4. [Configure the Protocol](#)
5. [Review the Protocol Configuration](#)
6. [Ping the DUT](#)
7. [Start the BGP Protocol](#)
8. [Configure Traffic](#)
9. [Set Up the Test Composer](#)
10. [Set Up CSV Logging](#)
11. [Set Up a Quick Test](#)

Connect the Ports

Before starting a test, connect the DUT ports to the Keysight chassis, using the correct cables for the connection as shown in Keysight Chassis — DUT Cable Connections below. The PC running IxNetwork is connected to Keysight chassis through a network connection to the management port on the chassis.

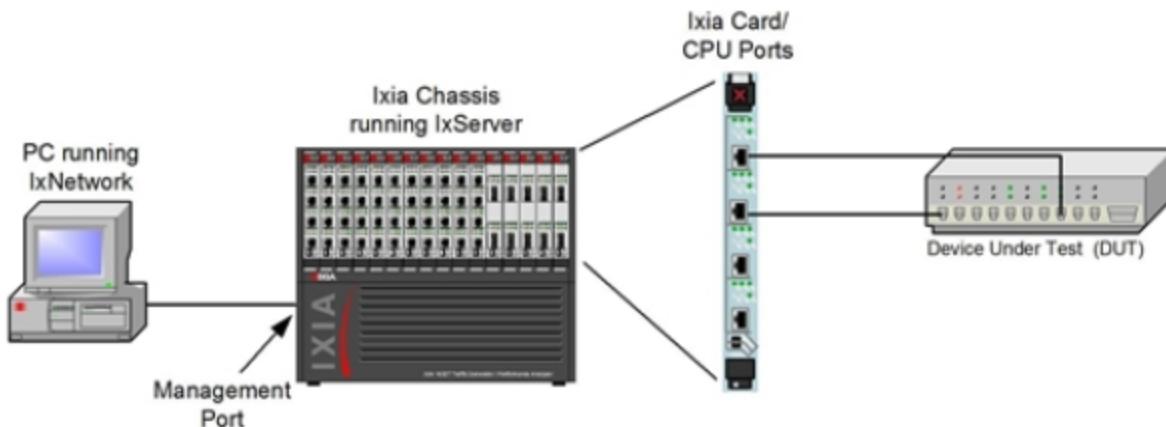

Start IxNetwork


Before you start IxNetwork:

- Make sure IxServer is running on Keysight chassis. IxServer normally starts automatically when the chassis boots up.
- Make sure you know the available ports on the chassis. Applications such as IxExplorer, Scriptmate, and Tcl scripts allow you to take ownership of the ports on Keysight chassis. If the ports are already in use, they are not available for assignment in the IxNetwork Port Management window.

To start the IxNetwork application, perform the following tasks:



1. Double-click the IxNetwork icon on your Desktop. The IxNetwork GUI window appears as shown in the following image:

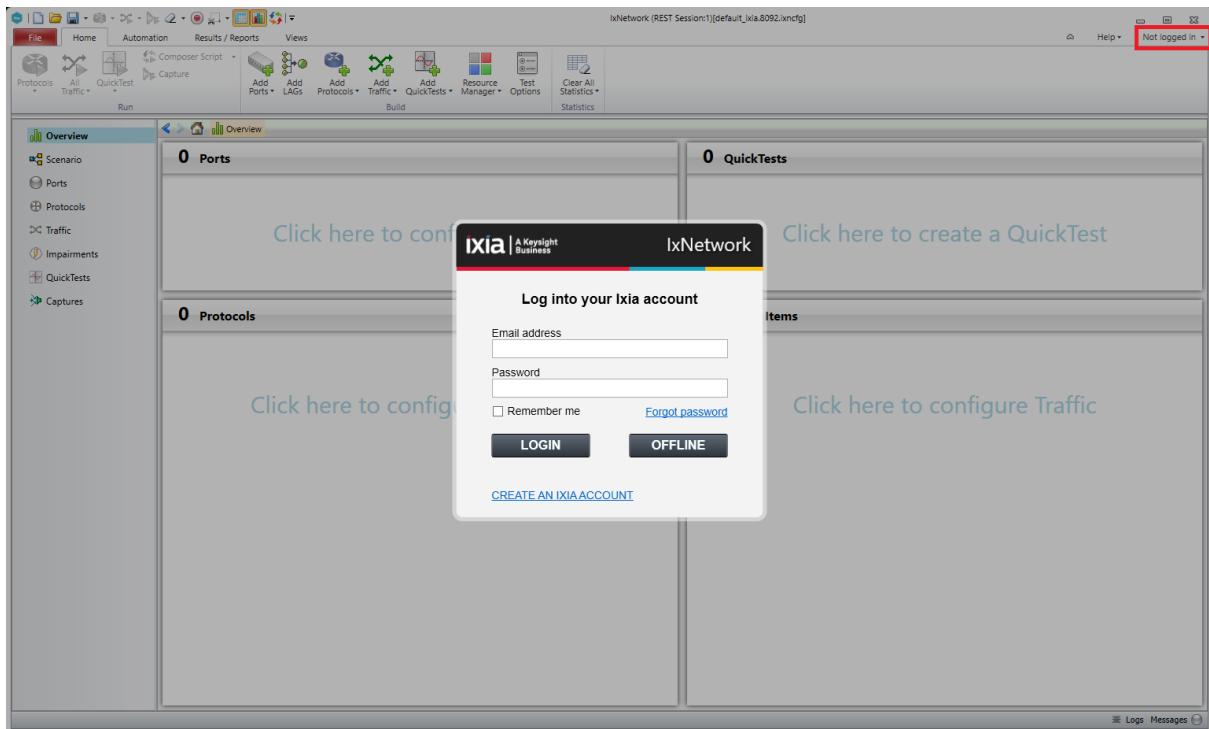

2. Sign in to your Keysight account to use IxNetwork. Select the **Remember me** check box, if you want to store your sign in information.

NOTE


- Your IxNetwork account is already created using your ixiacom.com email address. To sign in for the first time, select **Forgot Password** or go to <https://login.ixiacom.com/?forgot-password>. Enter your email address and submit the form. You receive an email with instructions on how to proceed.
- If you do not receive an email in your ixiacom.com account, select **CREATE AN IXIA ACCOUNT** link or go to <https://login.ixiacom.com/?create-account>.

3. Select **OFFLINE**, if you do not want to type any credential. In the offline mode, you do not get the following features:

- New Keysight product releases and feature notifications
- One-click feedback and support
- Cloud config storage
- One-click config sharing

At any point of time, you can sign in to IxNetwork by selecting **Not logged in** in the top right corner of the IxNetwork window. See the above screenshot for reference.

4. Select **Ports** on the Test Configuration pane to view the ports in use, as shown in [A Simple IxNetwork Test](#).

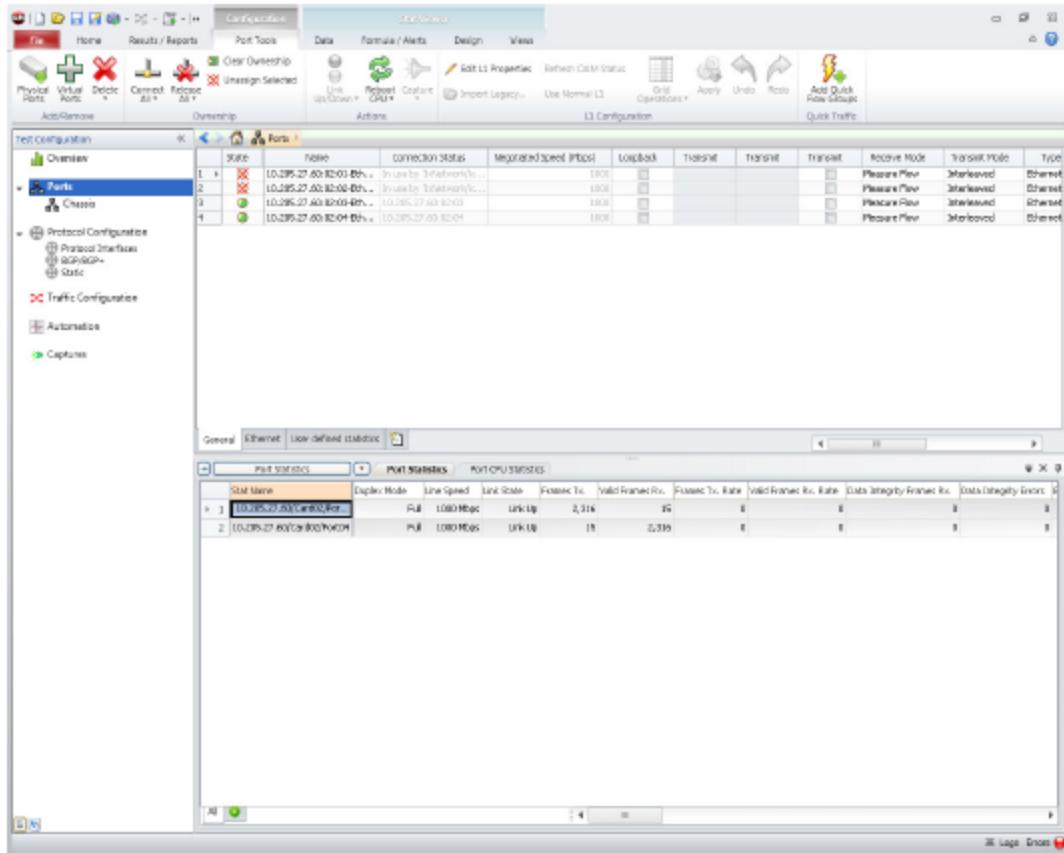

IxNetwork automatically logs you in using the local host name configured on your PC. When you select Keysight ports for the test, IxNetwork uses this name to identify those ports as being reserved for your exclusive use.


Select the Ports

You can make IxNetwork configurations directly on the physical ports, or create configuration images, which you can save and apply to the ports at a later time. For this test, apply the configuration directly on the physical ports.

1. Select **Add Ports** in the **Port Manager** window.



The **Port Selection** dialog box appears, as shown in the following image. The available ports appear in the left pane of the window.

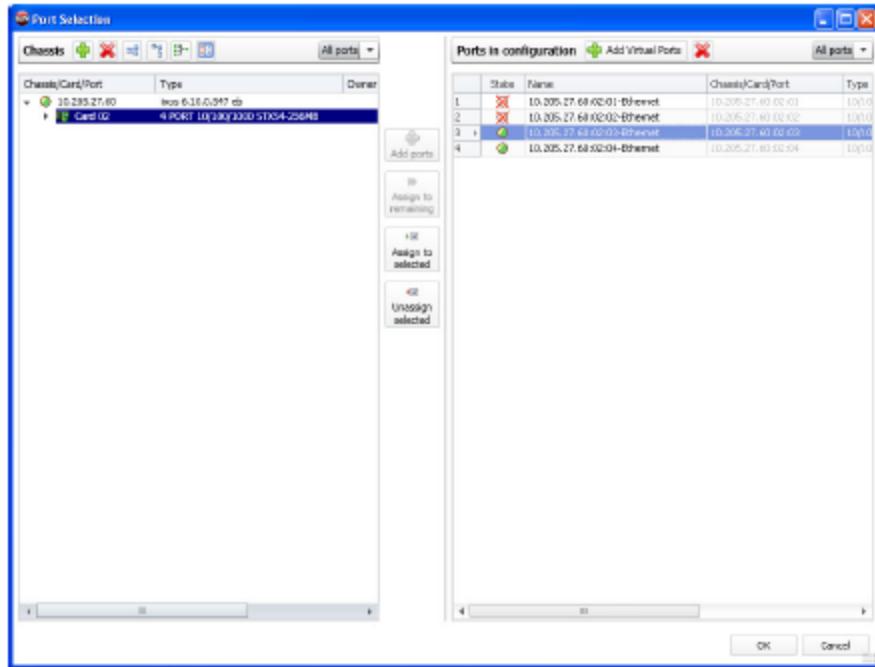

2. Select **Add Ports** to add the ports to the right pane.

3. Select **OK**.


The Ports window appears with a list of the newly added ports, as shown in the following image. The ports are available for protocol configuration.




Configure the Protocol

Configure the protocol. For this example, use the Protocol Wizards to configure the BGP protocol on Keysight ports.

1. On the Home tab, select **Add Protocols**. the **Protocol Wizards** dialog box appears as shown in the following image:

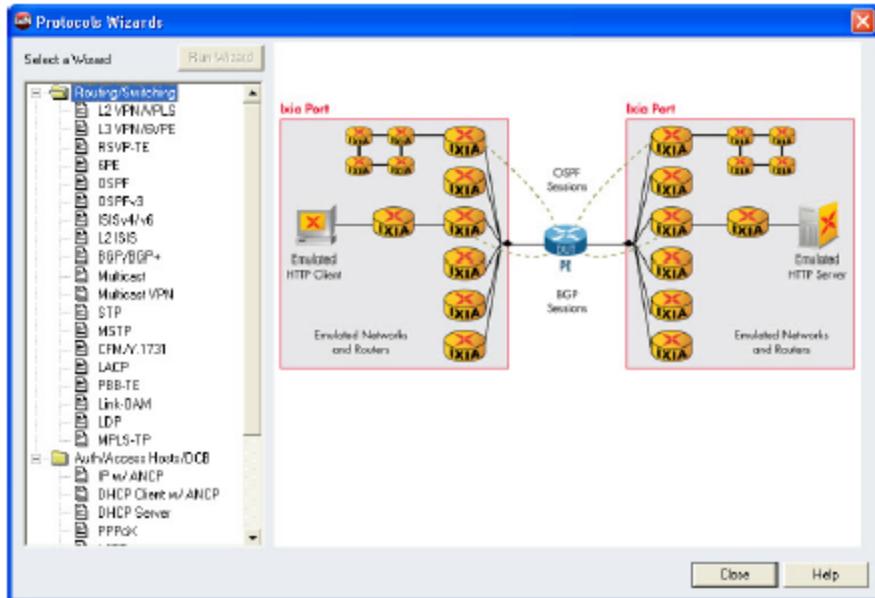


2. Select **BGP/BGP+**, and then **Run Wizard**. The *BGP/BGP+ Wizard - Port Select* dialog box appears, as shown in the following image:

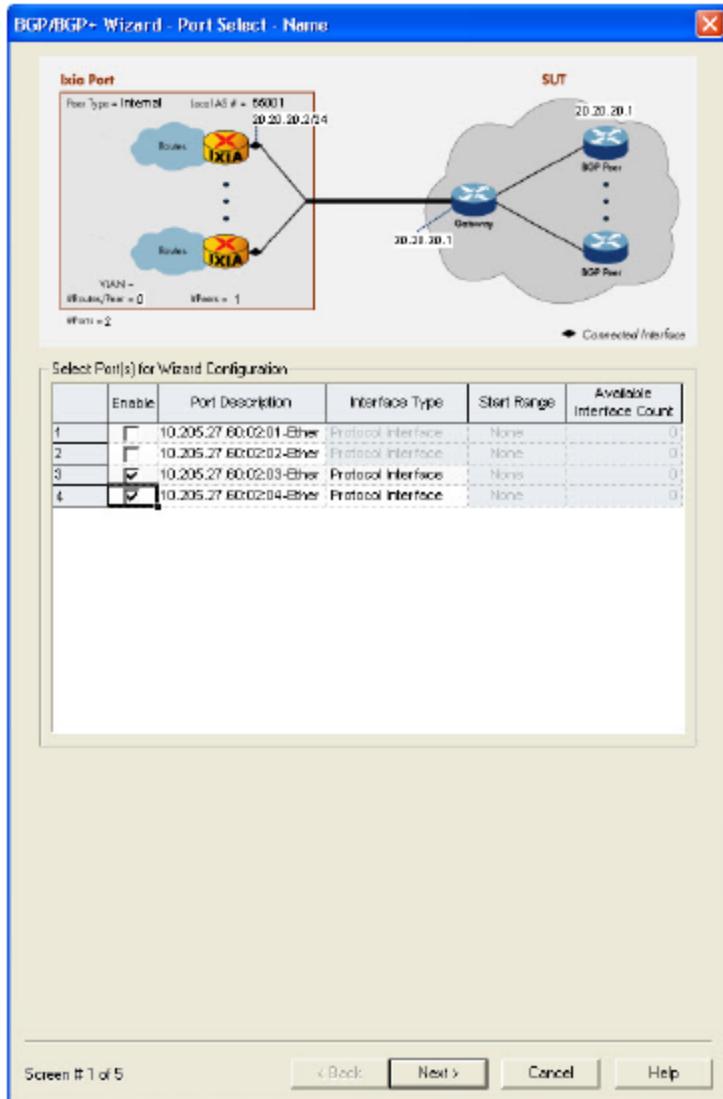


The two ports that you configured are listed with their description.

3. Select the **Enable** check box against each port, and then select **Next**.
4. The *BGP/BGP+ Wizard - Init* dialog box appears as shown in the following image:

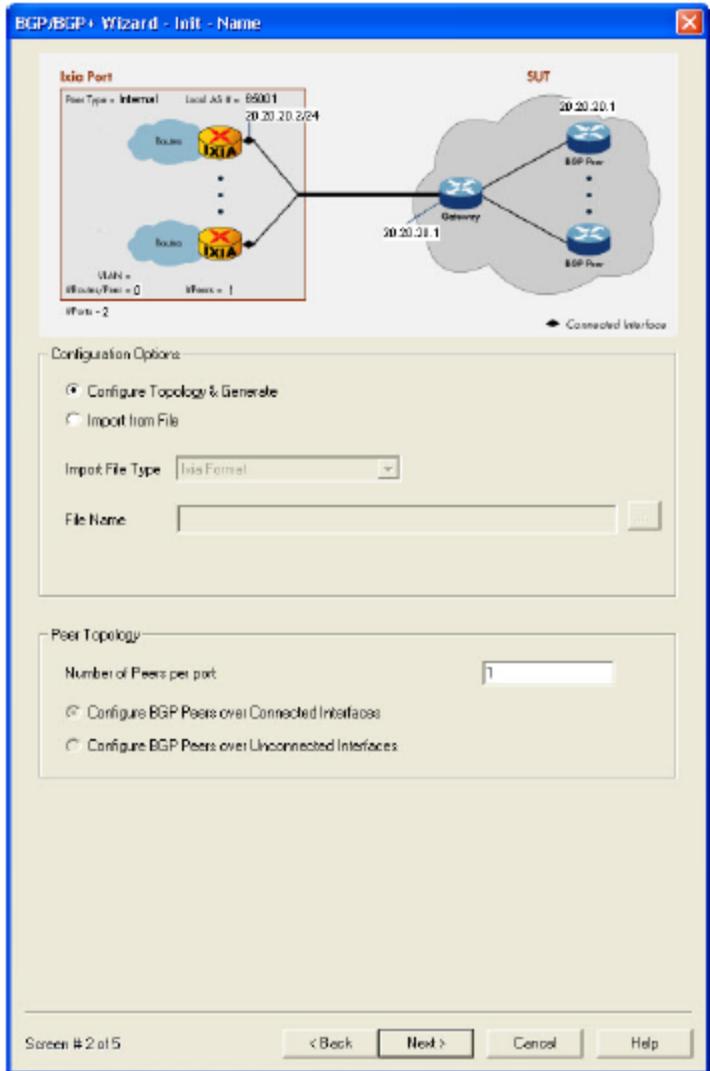


5. Select **Configure Topology & Generate**, and then select **Next**.

The *BGP/BGP+ Wizard - Peers* dialog box appears as shown in the following image:

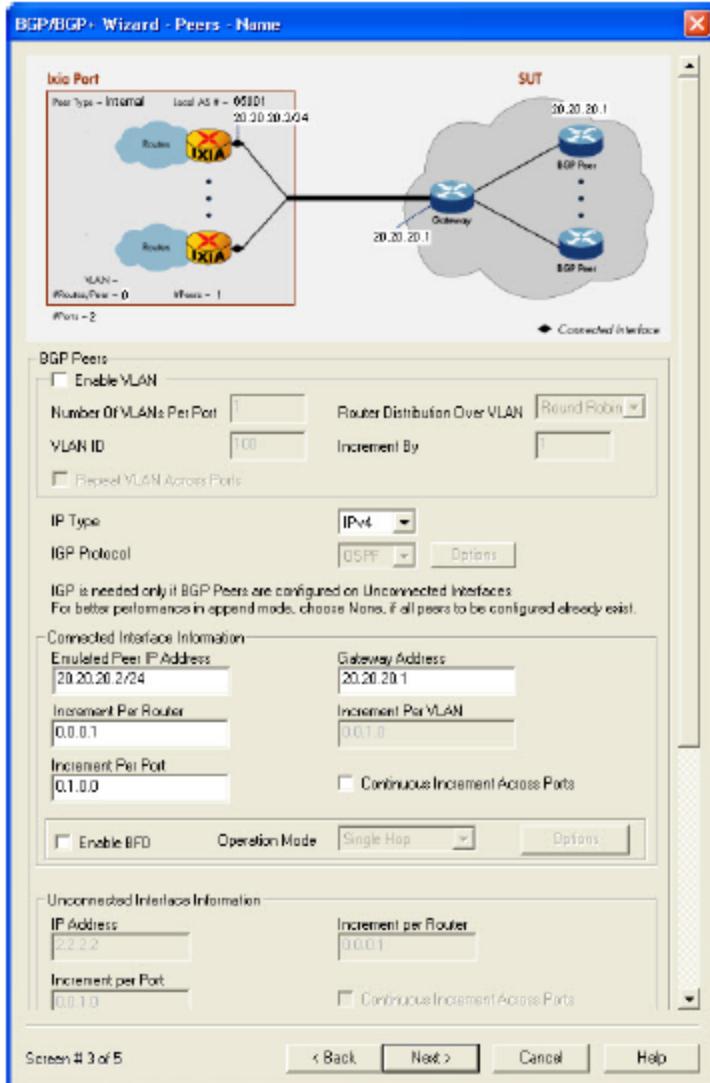


6. Enable VLAN and configure the IP addressing for Keysight and DUT ports.
7. Configure the number of Keysight-emulated BGP routers per port and select **Next**.

The *BGP/BGP+ Wizard - Route Ranges* dialog box appears as shown in the following image:

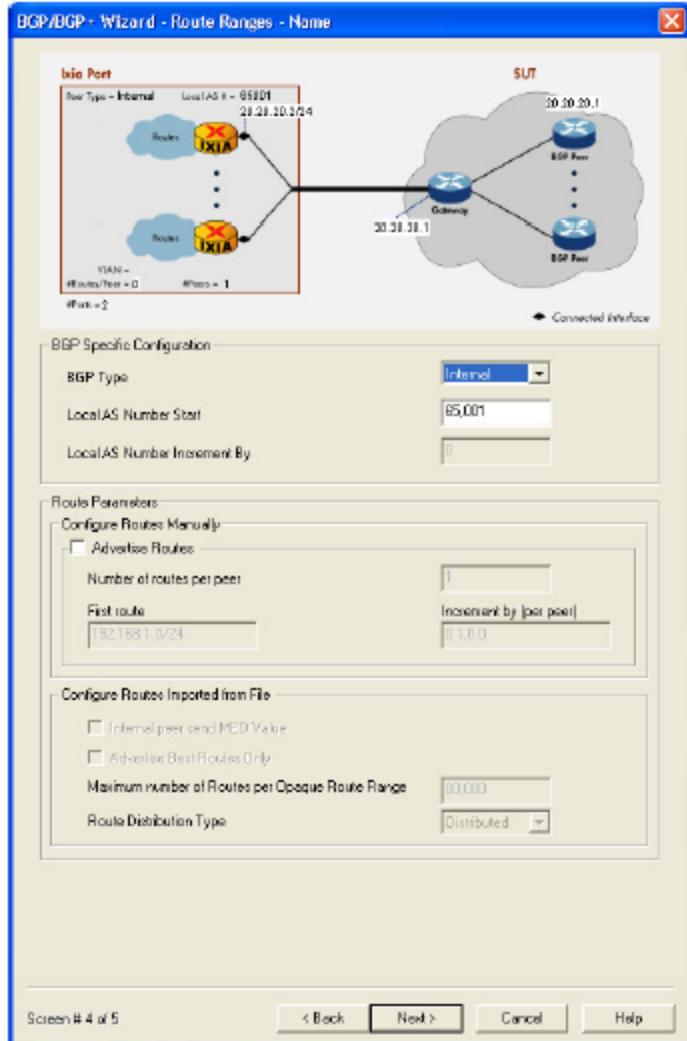

8. Set the BGP route ranges and select the **Advertise Routes** check box.
9. Select **Next**.


The *BGP/BGP+ Wizard - Save* dialog box appears, as shown in the following image:

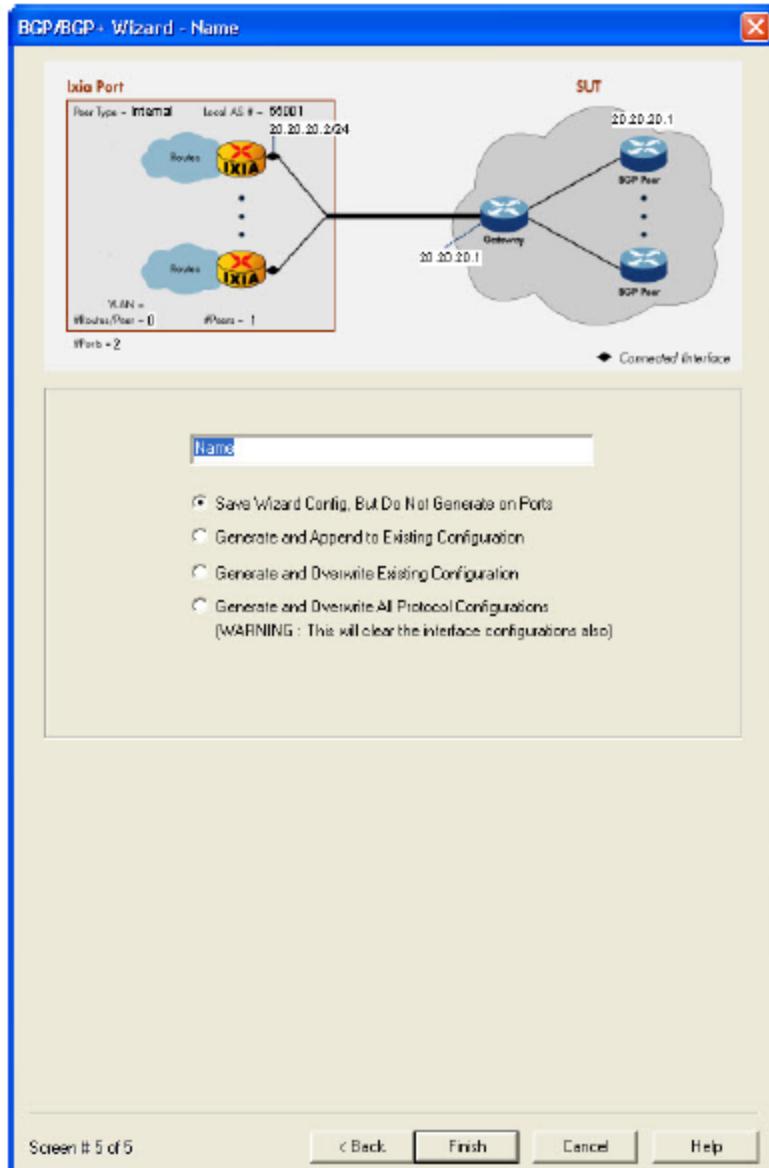


10. You can save the protocol configuration for later use, or apply to the port immediately. For this example, select **Generate and Overwrite Existing Configuration**.
11. Select **Finish** to close the dialog box and apply the protocol configuration to the ports.

Review the Protocol Configuration


The wizard automatically enables the BGP (and ARP) protocol, as shown in the following image:

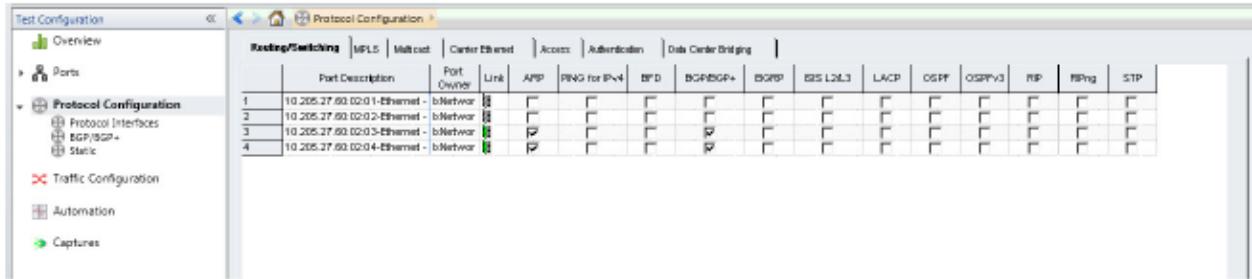


It creates connected protocol interfaces for each port, as shown in the following image:

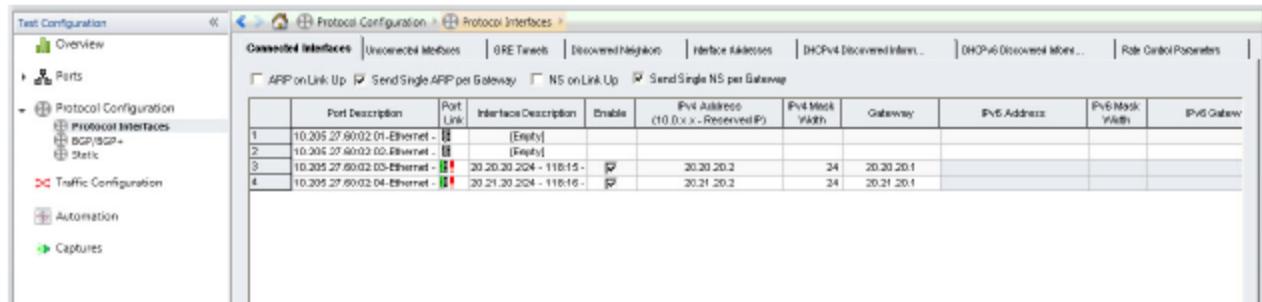

It also enters the BGP protocol configuration for each of the ports, as shown in the following image:

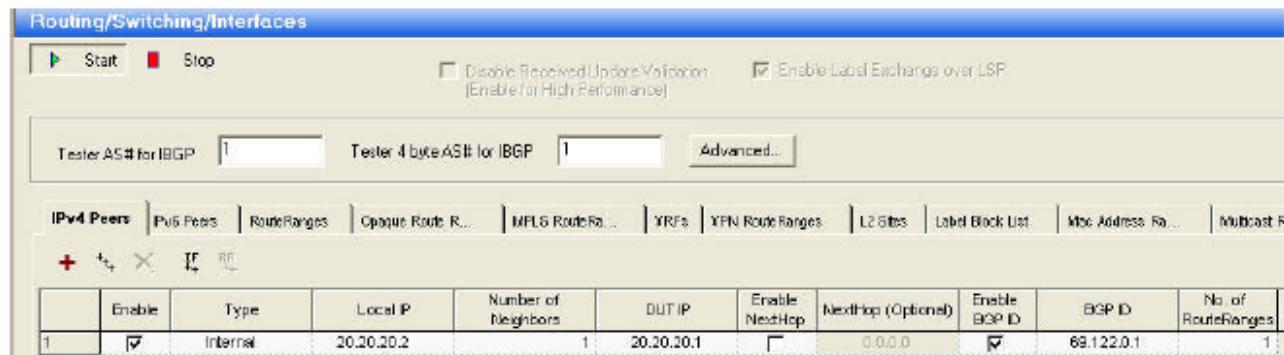


The emulated BGP topology is shown in the following image:

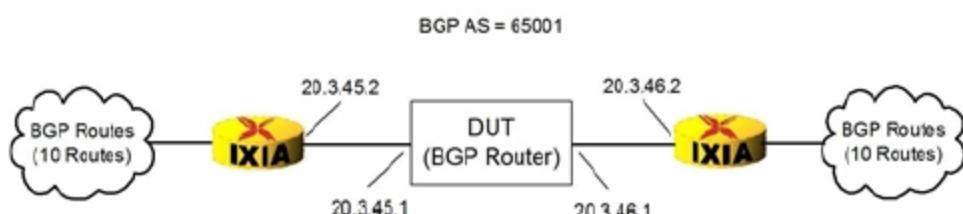

Ping the DUT


To ensure connectivity between Keysight ports and the device under test (DUT) ping the DUT.

1. You can select the port from the context menu, and then select **Ping** from the pop-up menu as shown in the following image:

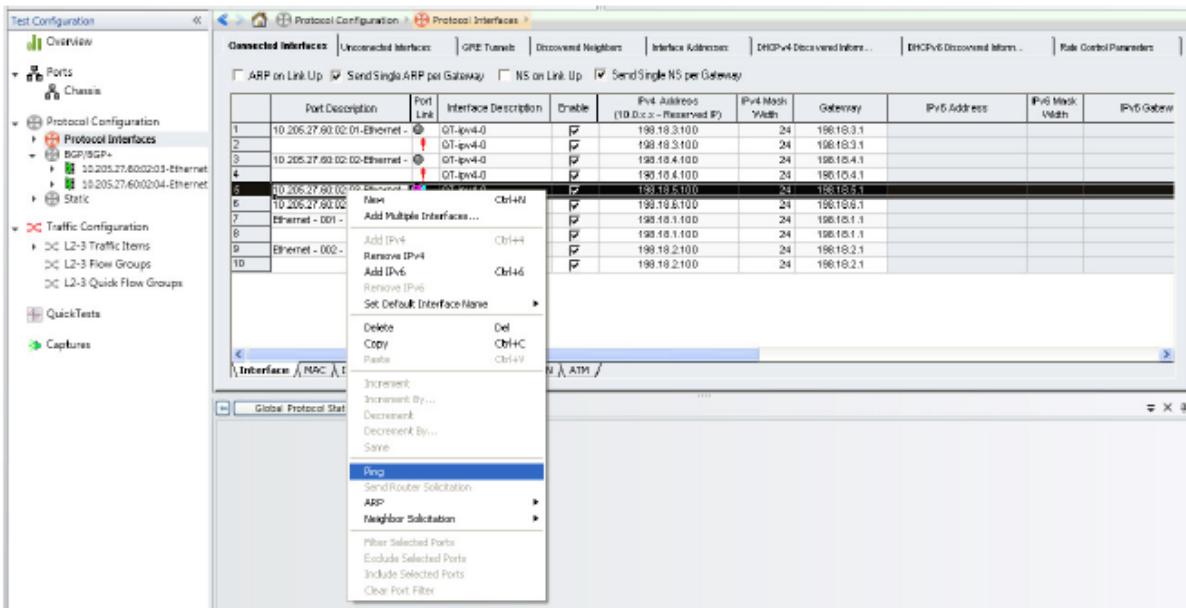

The *Trace and StatisticsWindow* appears.

2. Enter the IP address of the DUT in the Trace and Statistics Window and select **Send**. The received response appears on the Ping window as shown in the following image:

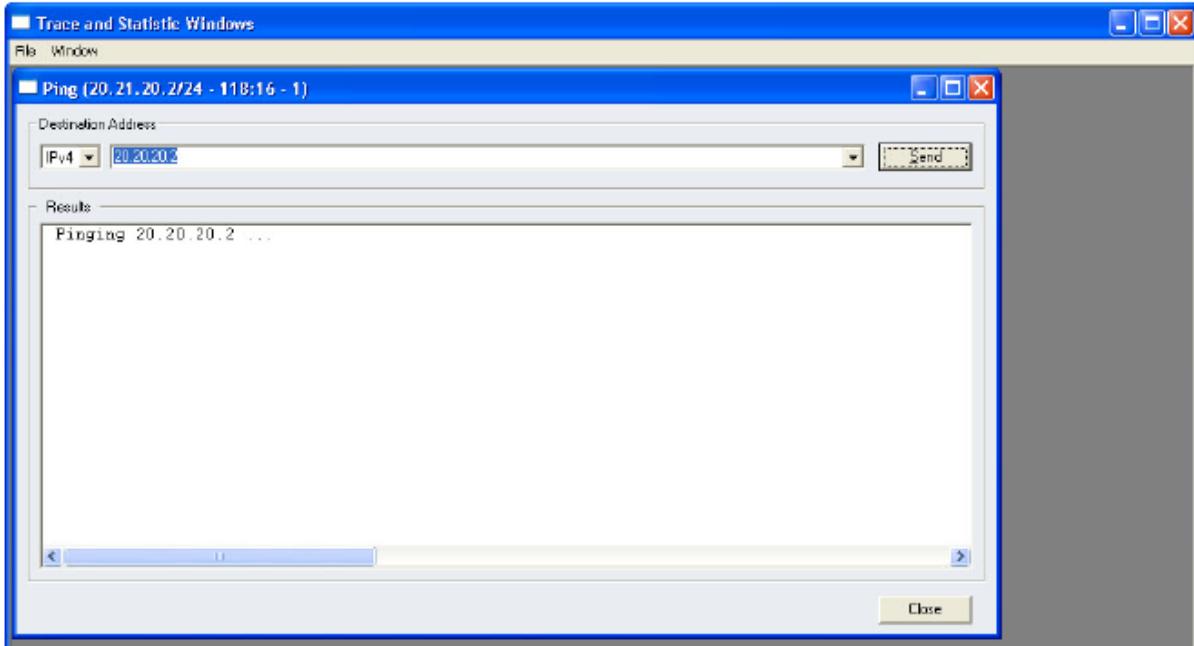

Start the BGP Protocol

Start BGP Protocol on both the ports in the Protocol window (see Start BGP Protocol below).

1. Select **Start All Protocols** to start the protocols for both the ports simultaneously.



You can view the Global Protocol Statistics in the Statistics window, as shown in the following image:

Global Protocol Statistics											
Stat Name	Control Packet Tx.	Control Packet Rx.	Ping Reply Tx.	Ping Request Tx.	Ping Reply Rx.	Ping Request Rx.	Arp Reply Tx.	Arp Request Tx.	Arp Request Rx.	Arp Rep.	
1 10.205.27.60 Card02 Port03	0	0	0	0	0	0	0	0	0	0	
2 10.205.27.60 Card02 Port04	0	0	0	0	0	0	0	0	0	0	


2. Verify that the BGP protocol is operating on both the ports.

Configure Traffic

You must configure a traffic for the protocol on the ports.


1. Select Traffic Configuration on the Test Configuration pane of the IxNetwork window.

The *Traffic Configuration* window appears, as shown in the following image:

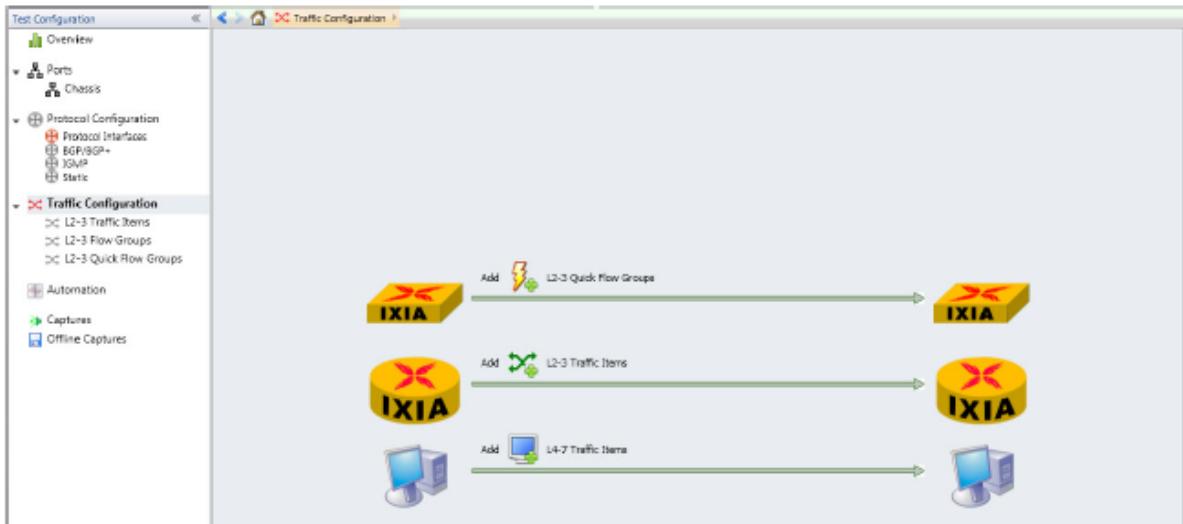


2. On the Home tab, select **Add Traffic**, and then **Advanced Traffic**. The Advanced Traffic Wizard window appears as shown in the following image.
3. Select the **One-One** option for **Source/Dest** and **Fully Meshed for Routes/Hosts** from the list to define the Mesh Type.
4. Select the source and destination IPs in Source and Destination IP Pairs below as shown in the

following image:

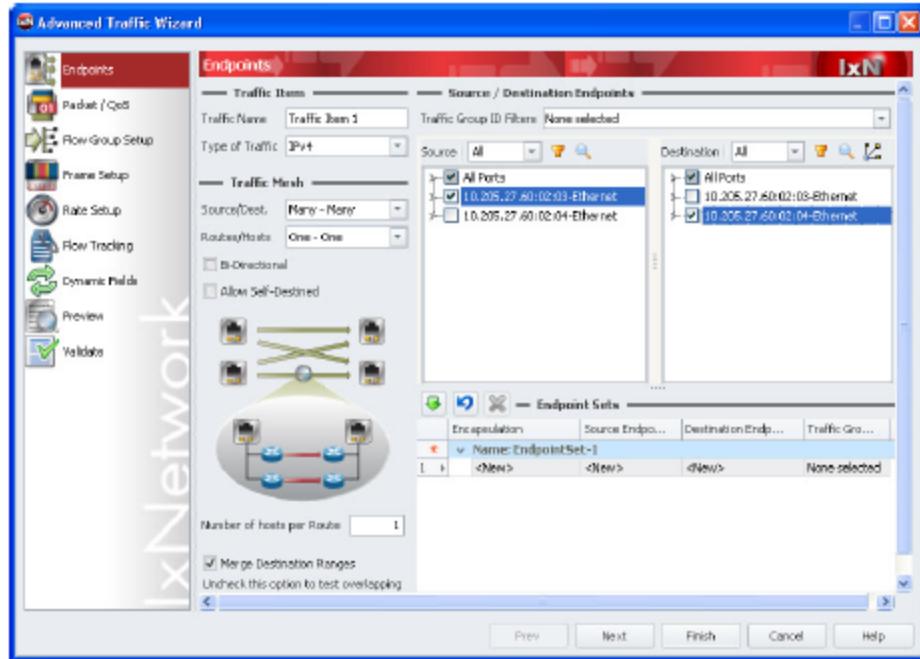

5. Select the apply icon to add the source and destination pairs in the lower pane of the window as shown in the following image:

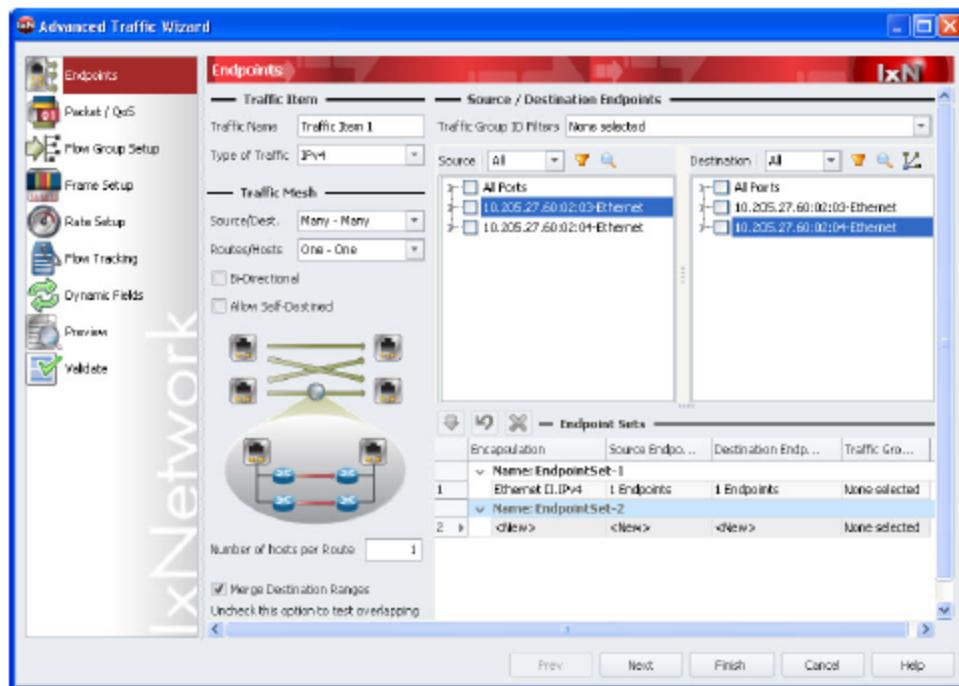

6. Repeat procedures 5 and 6 to add more pairs.


As shown in Applying the Source and Destination Pairs on the previous page, traffic is sent from the source (on the left pane) to the destination (on the right pane).

The Source/Destination Mesh type is, 'One-One.' Since two Keysight ports are being used, and bidirectional traffic is sent between the two ports, two sources and two destinations are created. (Each port acts as both source and destination.)


The Route Mesh type is, 'Fully Meshed'. Since there are 10 route ranges set up for each port, a full mesh creates 100 pair of route ranges. The Encapsulation type is non-MPLS, and the Endpoint type is IPv4.

Creating the pairs at the high-level of the trees saves configuration time. Each port acts as both source and destination, so the Source or Destination Pair includes 2 source items and 2 destination items. If you select individual items from the expanded tree, you must add two Source or Destination Pairs—one for each of the two directions of traffic.


7. Select **Next** to continue with the configuration.
8. The Packet QoS dialog box appears, as shown in the following image. You need not make any changes in the dialog box.

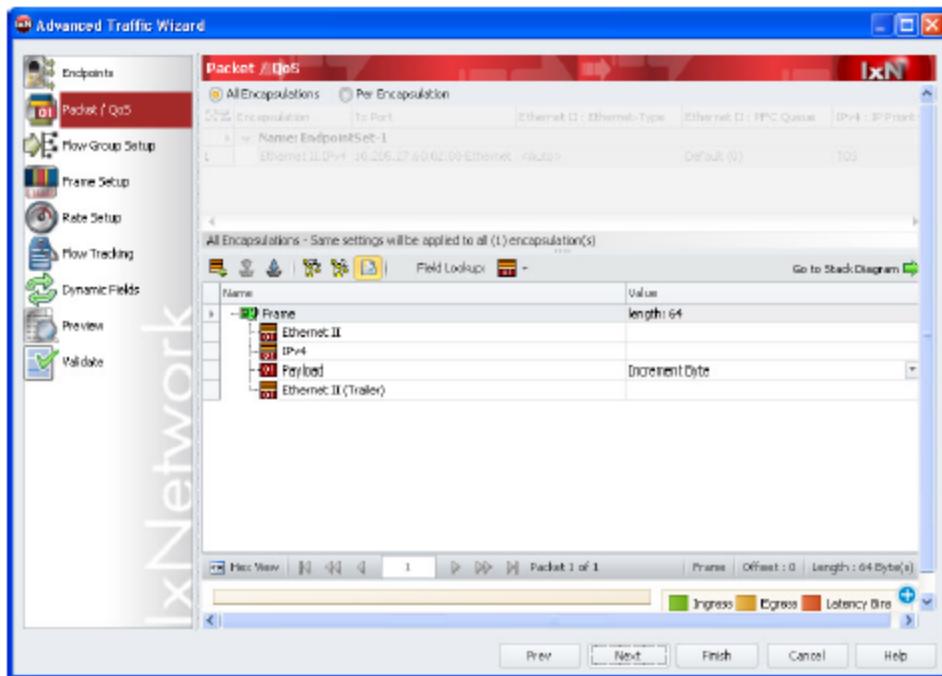

9. Select **Next** to continue with the configuration. The **Flow Group Setup** dialog box appears, as shown in the following image:

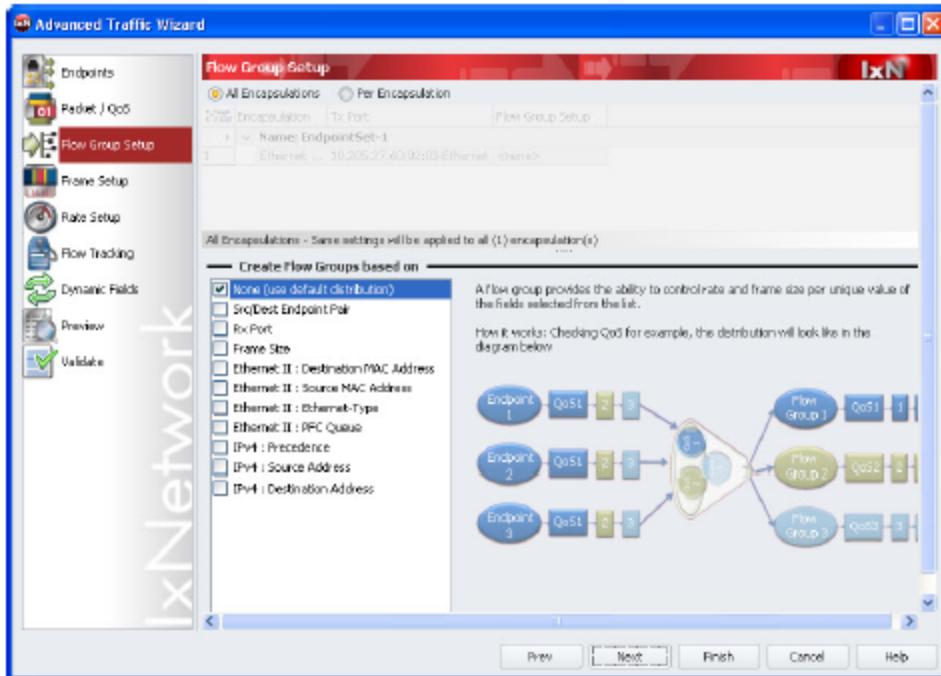


10. Select the Flow Group from the left navigation pane. If you select **None**, the default distribution is taken for the configuration.
11. Select **Next** to continue with the configuration. The Frame Setup dialog box appears, as shown in the following image. If required, increase the Frame Size from the default value (64).

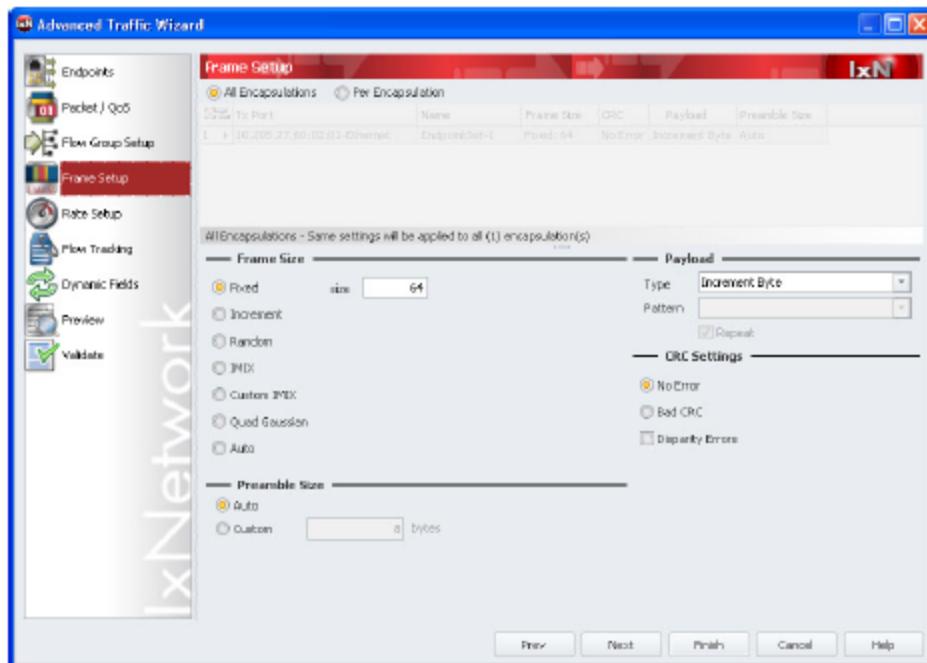


12. Select **Next** to continue with the configuration.


13. The *Rate Setup* dialog box appears, as shown in the following image. You can perform the rate setup per encapsulation or for all encapsulations by selecting the relevant option. Select the required transmission mode (Interleaved or Sequential) and specify 10 as **% Line rate**.

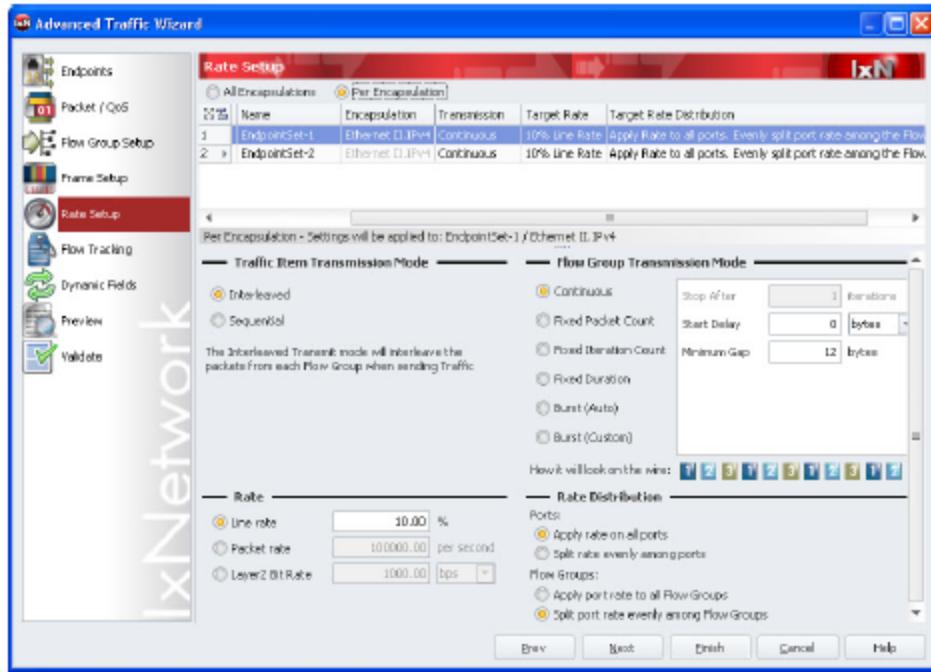

14. Select **Next** to continue with the configuration.
15. The Flow Tracking dialog box appears, as shown in the following image. Select the required track flow from the Traffic Flows by navigation pane. For this example, select Source/Dest Endpoint Pair.

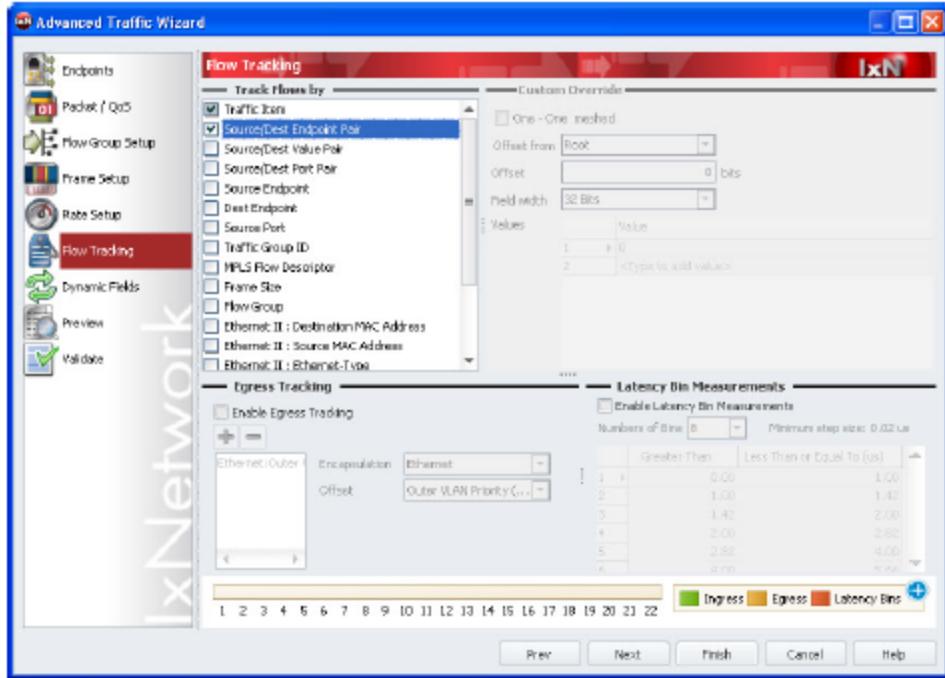


16. Select **Next** to continue with the configuration.
17. The Dynamic Fields dialog box appears, as shown in the following image. Select the MPLS Label Values check box.

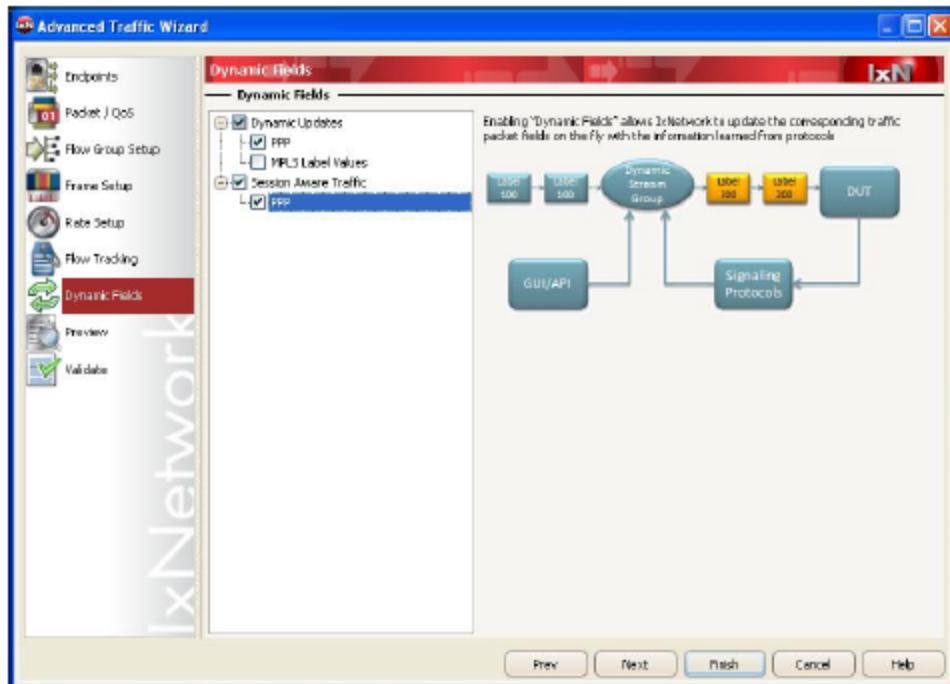


18. Select **Next** to continue with the configuration.

The *Preview* dialog box appears.

19. Select **View Flow Groups/Packets** in the upper right corner. The Flow Groups and Packets of the configured Traffic Item appear.
20. Select a flow group. The packets for the flow group appear in the lower pane as shown in the following image:

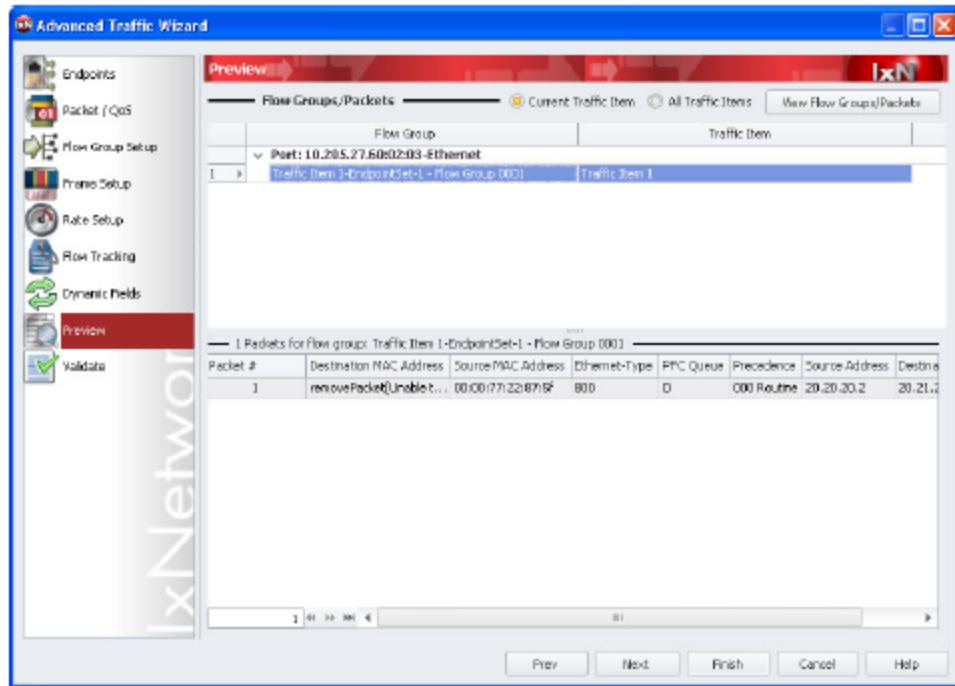


21. Select **Next** to continue. The **Validate** dialog box appears as shown in the following image:

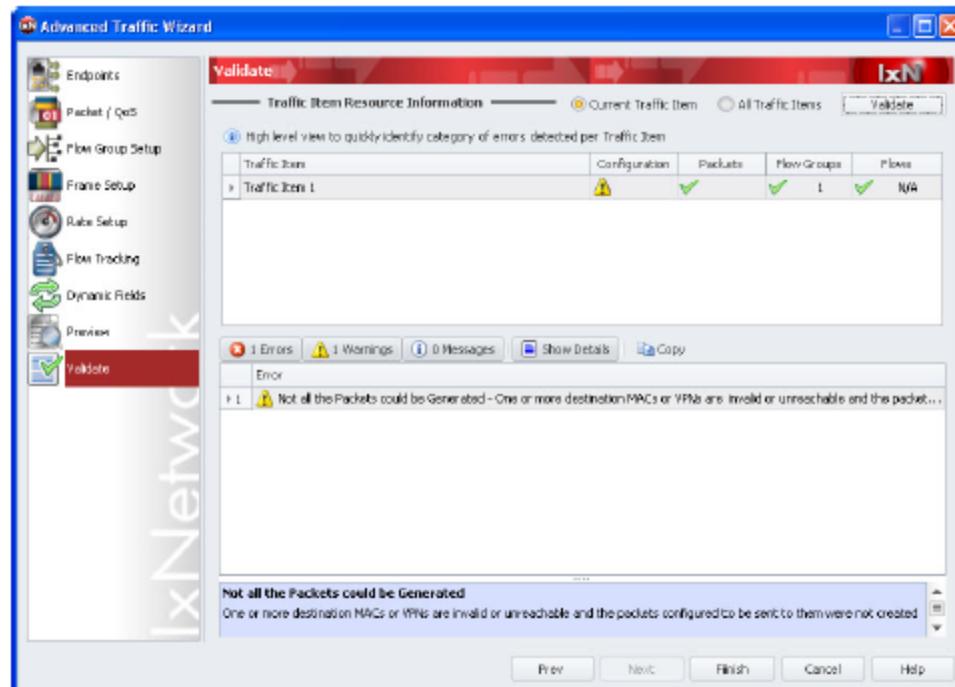


22. Select **Validate** in the upper right corner. The result of the configured Traffic Item appears, as shown in the image.
23. Select **Finish** to close the wizard.
24. Select **L2-3 Traffic Items** under **Traffic Configuration** in the Test Configuration pane.

The configured Traffic Item appears in the Traffic window, as shown in the following image:

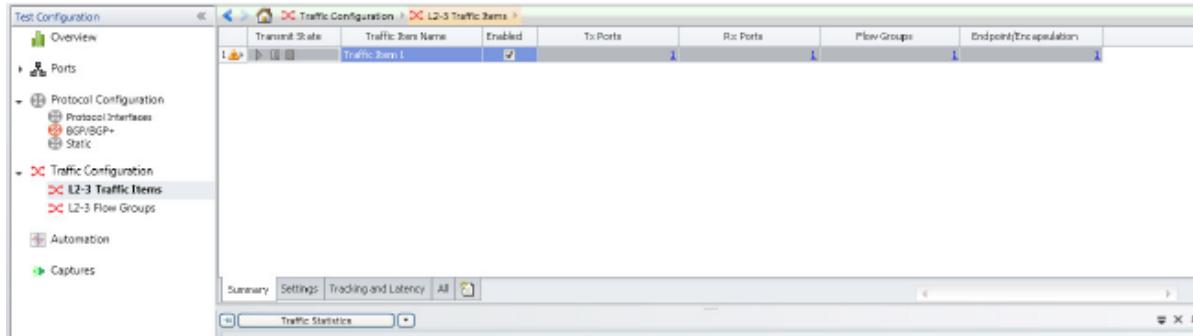

25. Double-click a traffic item to view the Flow Group Editor dialog box as shown in the following image:. Note that the information in the Properties reflects the changes that were made in [Frame Setup Dialog Box](#).

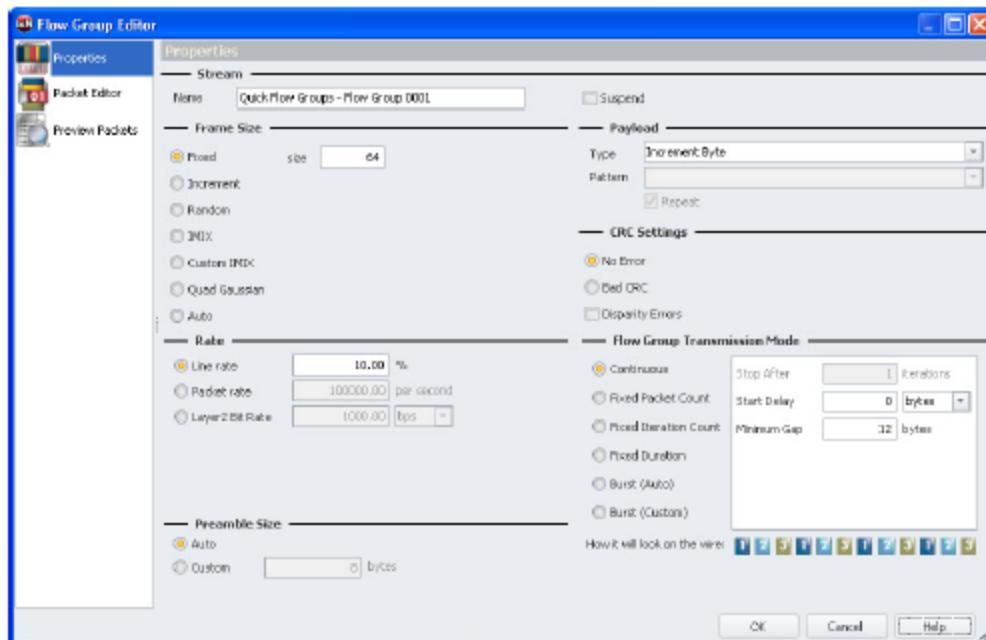

26. On the Home tab, select **L2-3 Traffic**, and then **Apply L2-3 Traffic** to write the traffic configuration to the ports. Then select **Start All L2-3**. as shown in the following image:



27. View the progress of the streams in the Statistics window, as shown in the following image:

Port	Enable	Type	Interface Type	Interfaces	Interface Start Index	Local IP	Number of Neighbors	DUT IP	Enable NeighHop	Next
1	<input checked="" type="checkbox"/>	Internal	ProtocolInterface	20.20.20.204 - 11815-1	20.20.20.2	1	20.20.20.1	<input type="checkbox"/>		
2	<input checked="" type="checkbox"/>	Internal	ProtocolInterface	20.21.20.204 - 11816-1	20.21.20.2	1	20.20.20.1	<input type="checkbox"/>		

Stat Name	ControlPacket Tx.	ControlPacket Rx.	Ping Reply Tx.	Ping Request Tx.	Ping Reply Rx.	Ping Request Rx.	Arp Reply Tx.	Arp Request Tx.	Arp Request Rx.	Arp Rx.
1 10.205.27.60(Card02 Port1)	2,348	47	1	2	1	1	8	64	47	
2 10.205.27.60(Card02 Port04)	51	51	0	2	0	0	0	51	43	

Set Up the Test Composer

Test Composer is a Keysight software component, integrated into IxNetwork that permits the creation of complex multi-step test scripts integrating Event Scheduler events, DUT configuration commands, local or external procedure calls, and flow control instructions that permit branching the script flow based on a step result evaluation.



To open the IxNetwork - Test Composer Window select the  dedicated button on the IxNetwork GUI Views tab.


The IxNetwork - Test Composer application appears as a separate panel.

The *TestComposer Online Help* provides detailed information on the Test Composer window features. Press F1 to access the online help in the Test Composer window.

To set up TestComposer, do the following:


1. Select **Test Composer** on the **Views** tab to view a separate panel on the right of the IxNetwork GUI.

2. Select  to add a new script as shown in the following image:

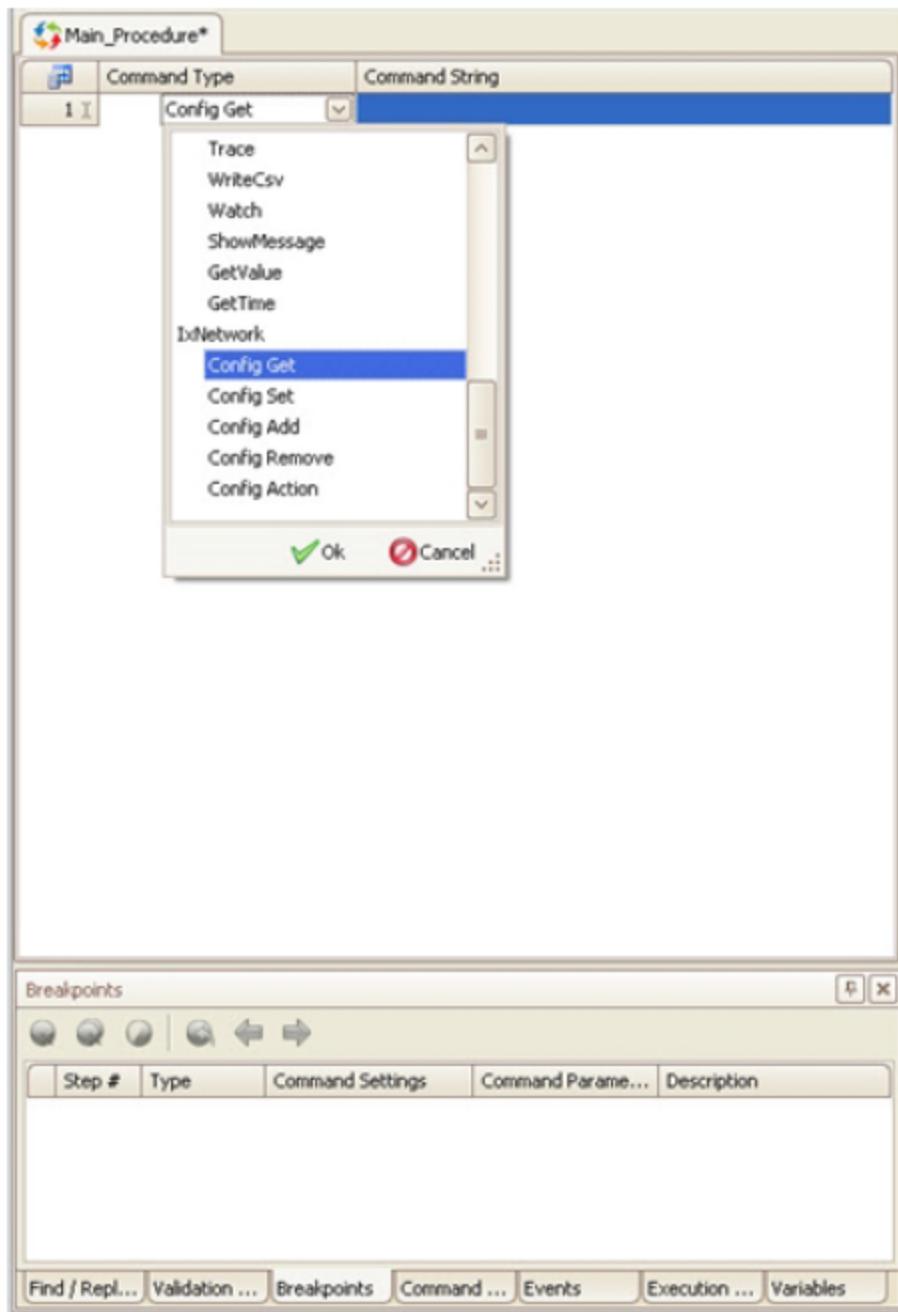

See Chapter 27: Test Composer in *TestComposer Online Help* for details on the Test Composer Script.

3. Select **UserEvents** on the **Test** tab to add an event as shown in the following image:

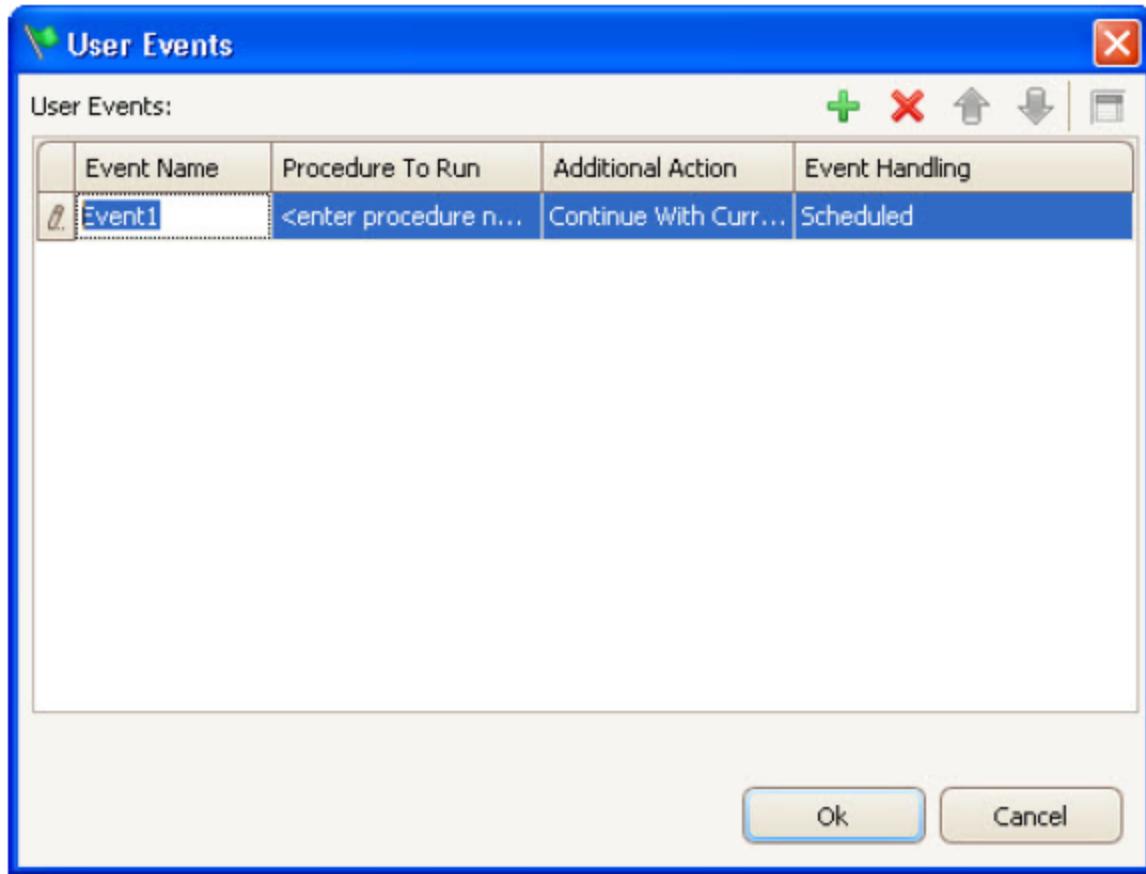

You can define global user events and associate them with procedures and additional actions.

An Execute command output or a device session to configured test devices can be monitored for the occurrence of specified messages. When a matching message is received by either a Run or a Watch script step, an event is triggered and processing for the event can be configured.

See Chapter 3: Defining User Events in *TestComposer Online Help* for details on User Events.

Creating a Test Composer Script

See Chapter 3: Creating and Editing a Test Composer Script in *TestComposer Online Help* for creating a Test Composer Script.

Creating a Sample Test Composer Script

This section describes a sample operations sequence for defining a Composer test and saving it with the IxNetwork configuration file.

Test Overview

For the purpose of our example, we are considering a TestComposer test script that runs against a router DUT that is connected to a Keysight chassis port. The test starts the PPoE and DHCP protocols

on the chassis port and tests repeatedly for a steady state condition with a total number of sessions below a configured amount no failed sessions and no sessions that are in an inconsistent state.

Initially the test script starts the protocols on the selected chassis port using the automatically created Built-In Event session of the IxNetwork type, waits for a period of 3 minutes and then writes all statistics to CSV files using the Write CSVs for all views command.

The resulting CSV file is opened by a CSVAnalyzer session and the Sessions_Initiated, Sessions_Successful and Sessions_Failed statistics are retrieved into the ProtocolStats composite variable using the CSVAnalyzer StatQuery command. The statistic values are shown using Trace commands that reference the composite variable retrieved previously.

The script then tests for a steady DUT condition that translates into a state whereby the number of initiated sessions equals the sum of successful and failed sessions. In addition, this state is characterized by a number of session lower than a configured amount, and no failed sessions. While this condition is not met, the script loops repeatedly (using a While statement) with a 1 minute frequency (Sleep statement), whereby at each new iteration the session statistics are written anew into CSV files, retrieved by the StatQuery function and then shown. Inside the While loop, an If statement tests if the initially allocated time of 15 minutes, or 900 seconds, expired, after which the test script calls an inline logging procedure and exits using a failed condition.

Execute	Built-In Event	
Sleep		00:03:00.000
Execute	Built-In Event	Statistics Write CSVs for all Views content="All Pages" newcsvfile/overwrite=Overwrite csvfilelocation... CSVAnalyzer.startSession csvfilename="\$port_stats" csvTemplateName="\$stat_template"
Execute	CSV_Stat	ProtocolStats StatQuery category="Statistics_1" filter="" items="(Statistics_1.Sessions_Initiated) with caption: (Se... \${ProtocolStats.Statistics_1.Sessions_Failed} \${ProtocolStats.Statistics_1.Sessions_Initiated} \${ProtocolStats.Statistics_1.Sessions_Succeeded}
Trace		[expr [clock seconds] + 900]
Trace		(\$ProtocolStats.Statistics_1.Sessions_Initiated) != (\$ProtocolStats.Statistics_1.Sessions_Succeeded) ... [clock.seconds] > \$maxtime
Trace		UGS-Info "Failed to start protocols"
Assign		0 "Failed to start protocols in 15 minutes"
While		
If		
RunProced...		
Return		
EndIf		
Sleep		00:01:00.000
Execute	Built-In Event	Statistics Write CSVs for all Views content="All Pages" newcsvfile/overwrite=Overwrite csvfilelocation... CSVAnalyzer.startSession csvfilename="\$port_stats" csvTemplateName="\$stat_template"
Execute	CSV_Stat	ProtocolStats StatQuery category="Statistics_1" filter="" items="(Statistics_1.Sessions_Initiated) with caption: (Se... \${ProtocolStats.Statistics_1.Sessions_Failed} \${ProtocolStats.Statistics_1.Sessions_Initiated} \${ProtocolStats.Statistics_1.Sessions_Succeeded}
Trace		
Trace		
Trace		
EndWhile		
StopSession	CSV_Stat	
Procedure	<none>	UGS-Info {String:msg}

Creating the Composer Test

To create the test script described in Test Overview proceed as follows:

1. In the TestComposer plugin you can select the script tab from the context menu, and select **Properties**, and then type in a test name and an optional description in the Information window that appears.
2. Start adding the steps sequence described below.

Select the **Append last Step** button and add an **Execute (All Protocols Start)** step on the default Built-In Event session that is created automatically for every TestComposer script. This command starts two protocols, PPoE and DHCP, on the selected Keysight chassis port.

```
All Protocols Start IxN::availableItems="{!!ixNet::OBJ-
/eventScheduler/availableEvents:\\"REG_Start\\"/availableItems/node:\\"aptixia.1\\"}
>{!!ixNet::OBJ-
/eventScheduler/availableEvents:\\"REG_Start\\"/availableItems/node:\\"aptixia.2\\"}"
```

- After pausing the script execution for 3 minutes using a Sleep statement, add a run step that writes all statistics to CSV files using the Write CSVs for all Views command on the Built-in Event Session:

```
Statistics Write CSVs for all Views content="All Pages" newcsvfile/overwrite=Overwrite
 csvfilelocation="$stat/.../"
```

- Add a startSession step that opens a CSVAnalyzer session to the file referenced by the \$port_stats variable:

```
CSVAnalyzer, startSession csvFileName="$port_stats" csvTemplateName="$stat_template"
```

- Using the previously created CSVAnalyzer session, add a statQuery step that retrieves the aggregate Sessions_Initiated, Sessions_Succeeded, and Sessions_Failed values using the *ProtocolStats* return variable assigned to the step:

```
StatQuery category="Statistics_1" filter=""items="{{Statistics_1.Sessions_Initiated}
with caption:
{Sessions_Initiated} aggregation:
Sum}}{{Statistics_1.Sessions_Succeeded} with caption:
{Sessions_Succeeded} aggregation:
Sum}}{{Statistics_1.Sessions_Failed} with caption:
{Sessions_Failed} aggregation: Sum}"
```

- Output all three variables to the screen using the Trace commands that reference the \${ProtocolStats.Statistics_1.Sessions_Failed}, \${ProtocolStats.Statistics_1.Sessions_Failed}, and \${ProtocolStats.Statistics_1.Sessions_Failed} variables respectively.

- Configure a maxtime timeout value using the following Tcl expression inside an Assign statement:

```
Assign maxtime [expr [clock seconds] + 900]
```

- Inside a While statement test for the steady state condition using a conditional expression that evaluates if the number of initiated sessions equals the sum of successful and failed sessions. In addition, the number of initiated sessions should be lower than 1000 and there should be no failed sessions:

```
(${ProtocolStats.Statistics_1.Sessions_Initiated} !=
${ProtocolStats.Statistics_1.Sessions_Succeeded} +
${ProtocolStats.Statistics_1.Sessions_Failed} ) || (
${ProtocolStats.Statistics_1.Sessions_Failed}== 0 ) ||
(${ProtocolStats.Statistics_1.Sessions_Initiated} < 1000)
```

- Nested within the While loop configure an If statement to test if the time expired since test start exceeds the initially configured amount (maxtime); while the initial time was not exceeded, similar operations with those from steps 4, 5, and 6 are performed repeatedly with a frequency of 1 minute, with the session statistics being retrieved and shown.

When the timeout expires, a `RunProcedure` statement calls the *UGS-info* logging procedure and terminates the test execution using a fail status (zero value) as an argument to the `Return` statement.

```
Return 0 "Failed to start protocols in 15 minutes"
```

10. Select the **Save** button. The TestComposer script is saved into the IxNetwork configuration using the name specified at step 1.

As part of the IxNetwork test configuration, it can then be run from the Home ribbon of IxNetwork. When run in this mode, script-generated logs and files are can be accessed from the IxNetwork Data Miner, while statistics exported by the script appear in the IxNetwork StatViewer plugin.

The script can also be run from **Test Composer** ribbon in the Edit or Debug mode.

Set Up CSV Logging


To set up CSV Logging, perform the following steps.

1. On the **Home tab**, select **Test Options**. The **Test Options** dialog box appears.
2. On the left panel, select **Stat Viewer Options**.
3. On the **Advanced Settings** tab, select the **Enable CSV Logging for All Views** check box.
4. Select the **File** tab, and then **Preferences**. The **Preferences** dialog box appears.
5. On the left panel, select **StatViewer Options**.
6. Select the location of the CSV file. The data is saved to the CSV file path. Use the CSV information with IxReporter to create a PDF or HTML report, or export the information to an Excel sheet.
7. Select **OK** to save the settings.

Set Up a QuickTest

To set up a QuickTest, do the following:

1. Select **QuickTests** on the Test Configuration pane.
2. On the configuration tab, select **Add QuickTests**. The *QuickTest* window appears.
3. Select a test from the list. For this example, select RFC 2544 Throughput/Latency test as shown in the following image:

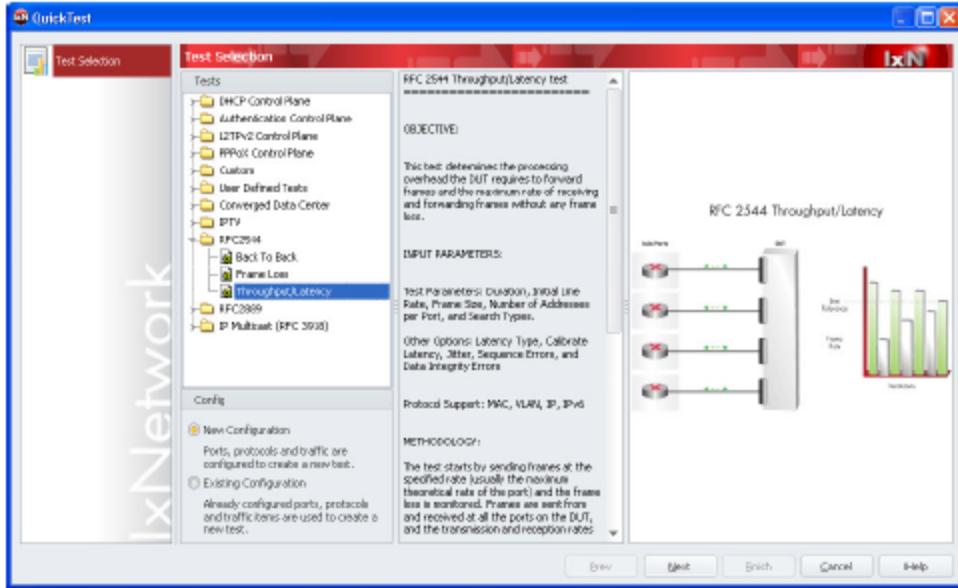

4. Select **Next**. The Ports page appears. Modify existing ports and add new ports. You can modify existing ports only if they are unassigned (virtual) as it is assumed that any assigned ports are already configured correctly through the Port Manager of IxNetwork. You can also add virtual ports.
5. Select **Next**. The Frame Data page appears. Configure the frame data.
6. Select **Next**. The Traffic page appears. This page displays the ports used in the test. You can map source/destination ports and add them.
7. Select **Next**. The **Traffic Options** page appears. This page enables you to set various parameters related to traffic, such as the frame sizes and delays used for the validation traffic and the learning process parameters.
8. Select **Next**. The **Test Parameters** page appears. This page enables you to configure the parameters for the test.
9. Select **Next**. The **Finish page** appears. This page allows to give a name to the newly configured test.
10. Select **Finish** to complete the configuration.



11. Select **Run** to begin the test.
12. Select **Data Miner** in the **Test Configuration** pane. The results of the test appear in the Results section of the *Data Miner* window.

CHAPTER 4

IxNetwork Licensing

With IxNetwork 4.30 EA release onwards, IxNetwork introduces a new license management system.

Keysight Licensing Utility (ILU) and License Server Plus (LS+) replace **Keysight Registration Utility (IRU)** and **License Server (LS)** used in earlier versions of IxLicensing.

By using Keysight's license management mechanism, you can:

- Centralize and monitor your software usage.
- Maintain an accurate license inventory.
- Transfer licenses across different hosts and teams smoothly.

The **Activation Code** for the purchased Keysight product(s) is sent in an email message, when you purchase Keysight software. Enter this **Activation Code** in Keysight Licensing Utility to generate a license. For the licensed software to work properly, licenses must be activated. (For activation steps, see *Keysight Licensing Management User Guide*). License activation for a Keysight product can be done after the software installation, but must be done before the software usage.

The licensing operation is done with a simple wizard and can be run in the following ways:

- The same computer on which the software was installed
- Some other Windows-based computer with the following minimum system requirements:
 - Microsoft® Windows® XP, Microsoft® Windows® 7 and later
 - 1 Ghz or higher processor
 - 512 MB of RAM
 - 950 MB of free hard drive space (x86)
 - 2.1 GB of free hard drive space (x64)

The computer used to perform the licensing process must be connected to the Keysight chassis and to workstations in the lab environment. If at all possible, it should also be connected to the Internet. If simultaneous connections to the lab network and Internet are not feasible, it is still possible to complete all licensing operations. For information about the offline activation and deactivation processes, see *Overview of Offline Activation/Deactivation section* in the *Keysight Licensing Management User Guide*.

This chapter covers the license information for IxNetwork software in the following sections:

- [IxNetwork-Specific License Information](#)
- [Types of Licenses](#)
- [Licensing Models](#)
- [Prerequisites](#)

IxNetwork-Specific License Information

Licenses for the IxNetwork based software and protocol emulation packages for load modules are available with separate purchase, including:

- IxNetwork base Software, Layer 2-3 Performance Test Application, which supports traffic generation and analysis.
- IxNetwork Protocol Emulation Bundles with multiple protocol emulations, for CPU-per-port load modules.
- IxNetwork Protocol Emulations (individual), for CPU-per-port load modules.

To place an order, see [Ordering](#) section in the Keysight website.

Types of Licenses

Keysight provides the following types of licenses for its products:

- [Node-Locked Licenses](#)
- [Floating Licenses](#)
- [Evaluation Licenses](#)

Node-Locked Licenses

Node-locked licenses are locked to a particular chassis or workstation and allow only certain product functions to run on that chassis or workstation.

Floating Licenses

Floating licenses are stored on a license server and allow a set number of chassis or workstations to use product software features. All chassis or workstations that use this type of license must be connected to the license server and the server must be up and running. Once the set number of users is reached for that particular feature, additional users for the product features are denied.

NOTE You can mix both node-locked and floating licenses to get the best solution according to your testing environment.

Evaluation Licenses

Evaluation licenses evaluate Keysight products. Except for a time limit, they act in all respects as a regular license (must be activated using ILU).

Licensing Models

Keysight provides the following licensing models for its products:

- [Subscription Licenses](#)
- [Perpetual Licenses](#)

Subscription Licenses

Subscription licenses are floating and limited licenses, stored on a license server. They are checked out from the defined license servers and allow only a limited number of licenses to be used concurrently.

NOTE For specific details on subscription licenses, please refer to the documentation of your product of interest.

Perpetual Licenses

Perpetual licenses are node-locked licenses, stored on a hardware. They are checked out from the individual chassis and cannot be installed on a different license server.

Perpetual licenses stored in a hardware can be of two types:

- Chassis-based licenses: Chassis-based licenses are usable only in Chassis-type hardware.
- Appliance-based licenses: Appliance-based licenses, can be either of the following:
 - AresOne: AresOne licenses can only be used in AresOne appliance.
 - NovusOnePlus: NovusOnePlus licenses can only be used in NovusOnePlus appliance.

NOTE

For specific details on perpetual licenses, please refer to the documentation of your product of interest.

Prerequisites

Before activating a license, you must have the following:

- The email message from Keysight with the activation code. The key contents of this email message are as follows:
 - Activation Code: A unique number for the license.
 - Quantity: The number of licenses.
 - Product: The product for which the license is activated.
 - Start Date: The date from which the license can be activated.
 - End Date: The date on which the license expires.
 - Entitlement Code: If you provide the entitlement code, ILU loads all the available activation codes associated with that entitlement code.

For Licensing Scenarios and guidance for installing Keysight Licensing Utility, see *Keysight Licensing Management User Guide*.

AppLibrary Licensing

AppLibrary supports counted licensing with subscription. The software license is counted by the number of cards for the chassis, but is able to float across any card in the chassis that supports the feature (node locked to the chassis).

On its application, it is counted per node and is floating across appliances. A single AppLibrary license enables the feature on a single appliance.

NOTE

AppLibrary license enables subscription valid for a year from purchase. Once expired, the feature can continue to be used; however, it is not entitled to new updates.

This page intentionally left blank.

Index

A

about this guide 10
applibrary licenses 89
applibrary licensing 89

C

chassis installation 16
configuring IxNetwork for silent installation 25
customer assistance 3

D

documentation conventions 5

E

evaluation licenses 88

F

floating licenses 88

G

general licensing steps 15

I

Introduction 1
introduction to licensing 87
IxNetwork installation 16
IxNetwork international language support 16
IxNetwork licensing 87

K

keyboard interactions 5

L

license information 87
license types 88

licensing information 87

licensing introduction 87

licensing models 88

perpetual 88

subscription 88

licensing overview 87

licensing prerequisites 89

licensing requirements 89

licensing types 88

evaluation 88

floating 88

node-locked 88

M

mouse interactions 5

N

node-locked licenses 88

O

overview of licensing 87

P

perpetual licenses 89

perpetual licensing types

appliance-based 89

chassis-based 89

prerequisites for licensing 89

product support 3

R

requirements for licensing 89

running IxNetwork test 59
running test 59
running test with IxNetwork 59

S

subscription 88

T

technical support 3
test run with IxNetwork 59
touch interactions 5
type of licenses 88
typographical conventions 10



© Keysight Technologies, 2006–2024

This information is subject to change
without notice.

www.keysight.com