


Leaving Auto mode automatically stops autonomous navigation

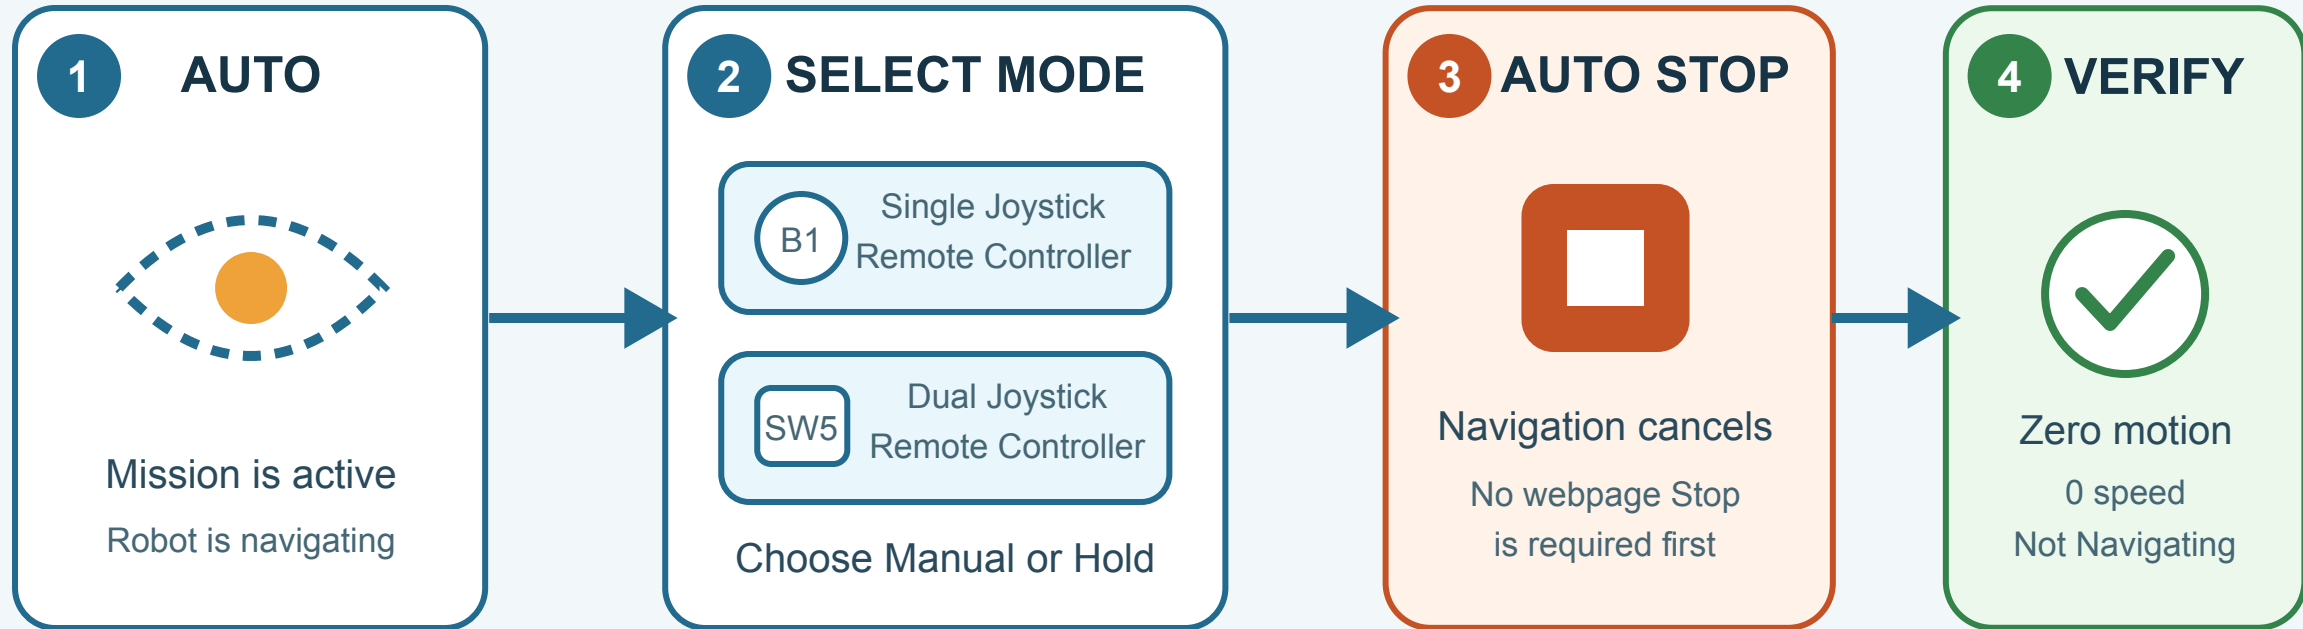

Manual permits joystick control after verification. Hold keeps the robot stopped.