


NAVIGATION CONTROLLER — HARDWARE AND ROBOT CONNECTIONS

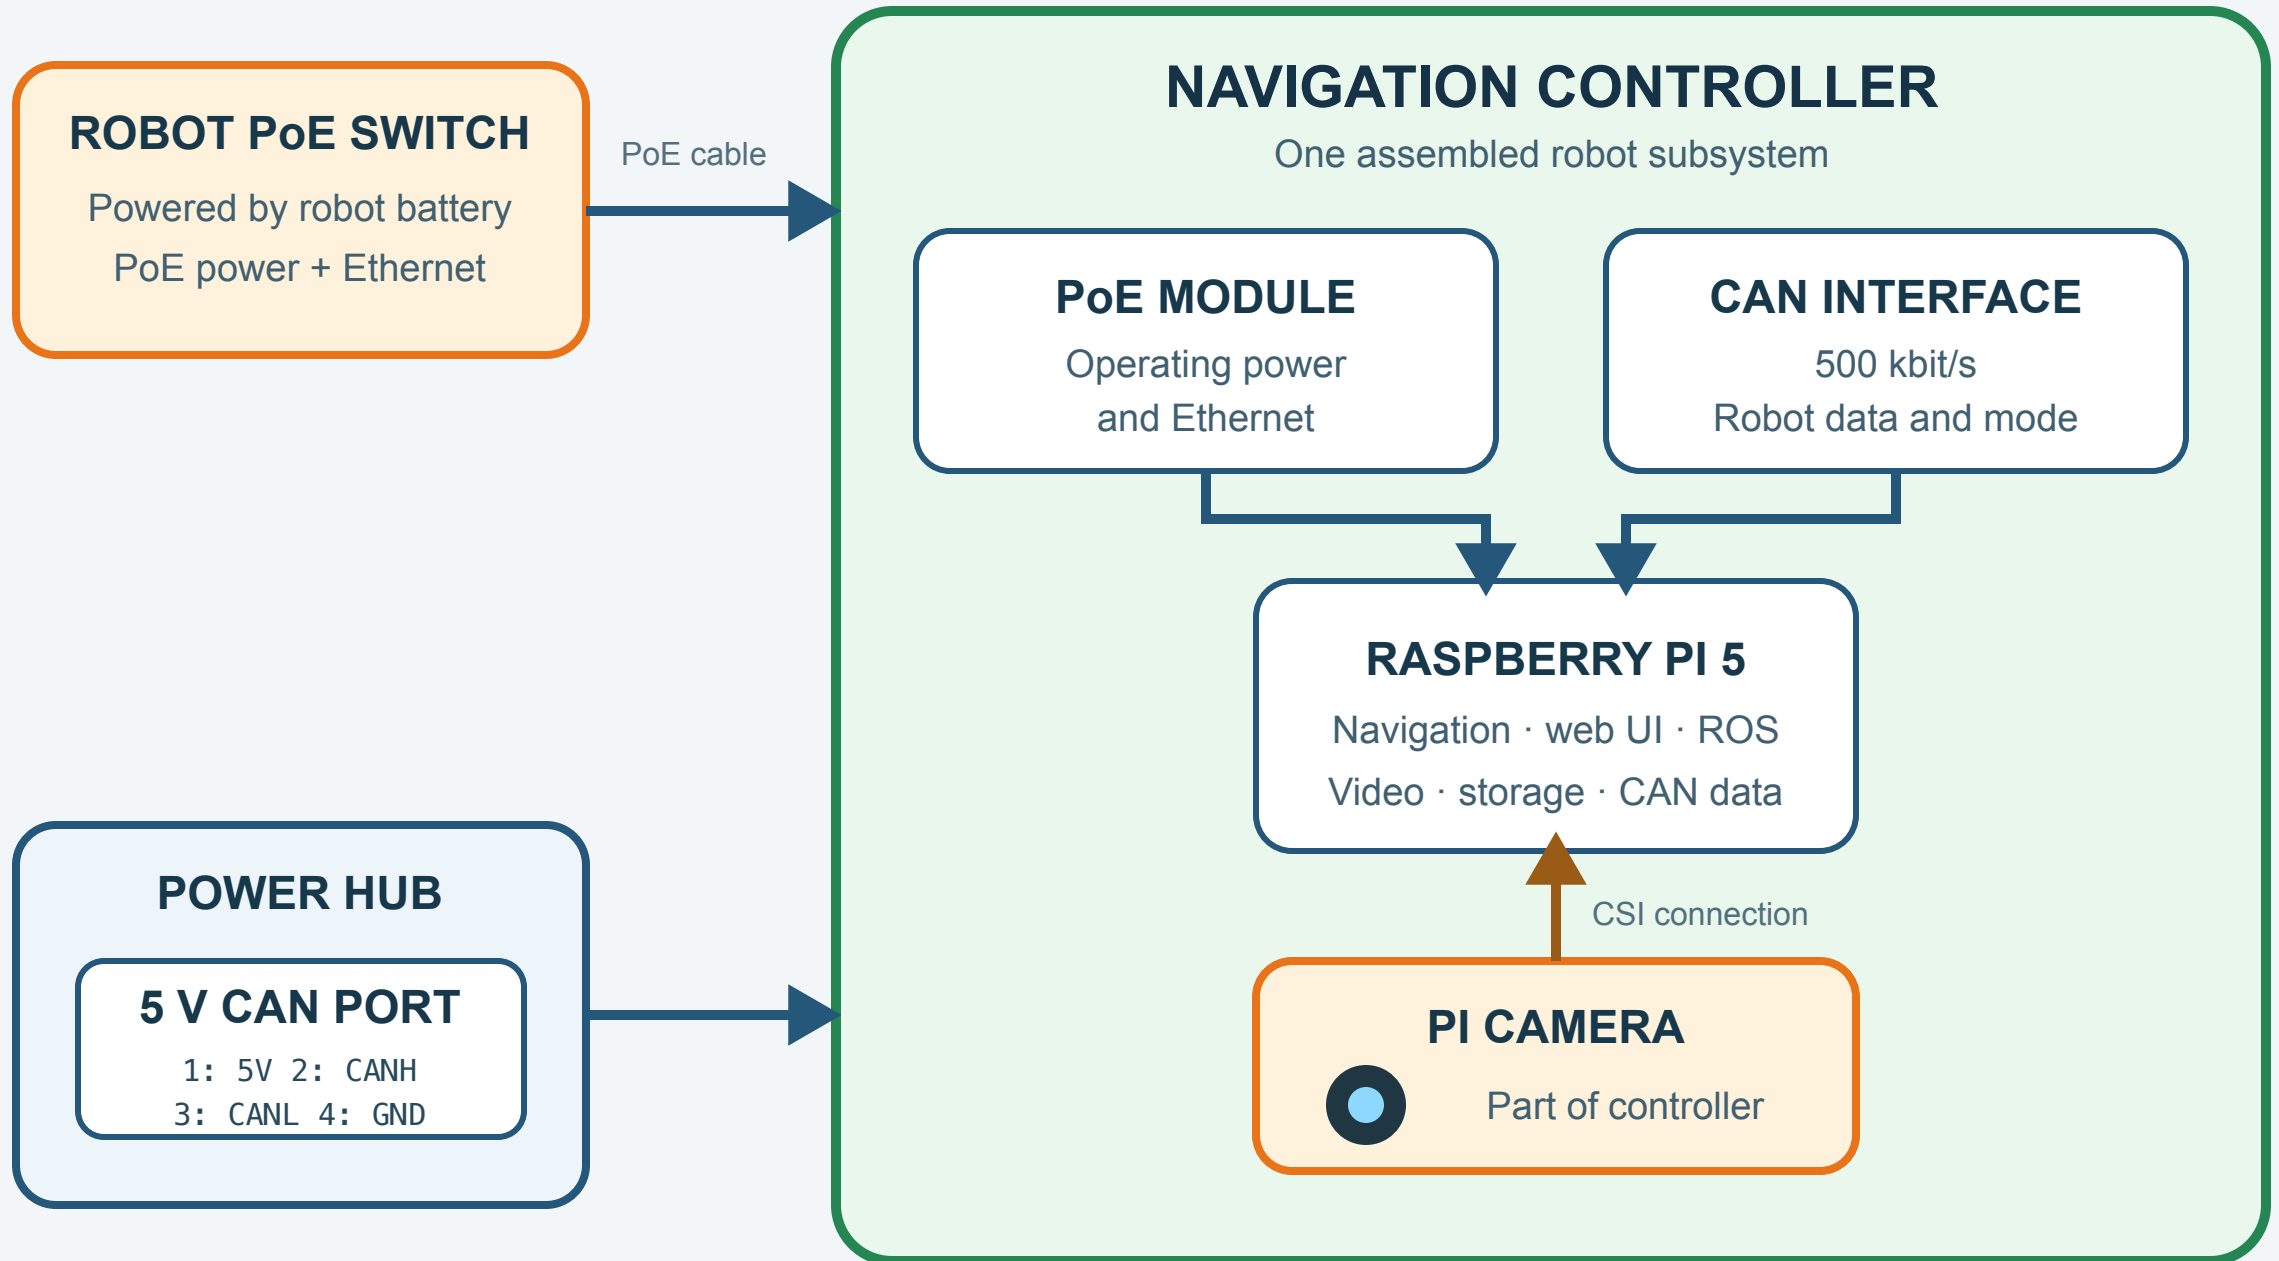

External connections: robot PoE switch → PoE port • power-hub 5 V CAN port → CAN connector