


ROBOT POWER-ON · EXPECTED BEHAVIOR

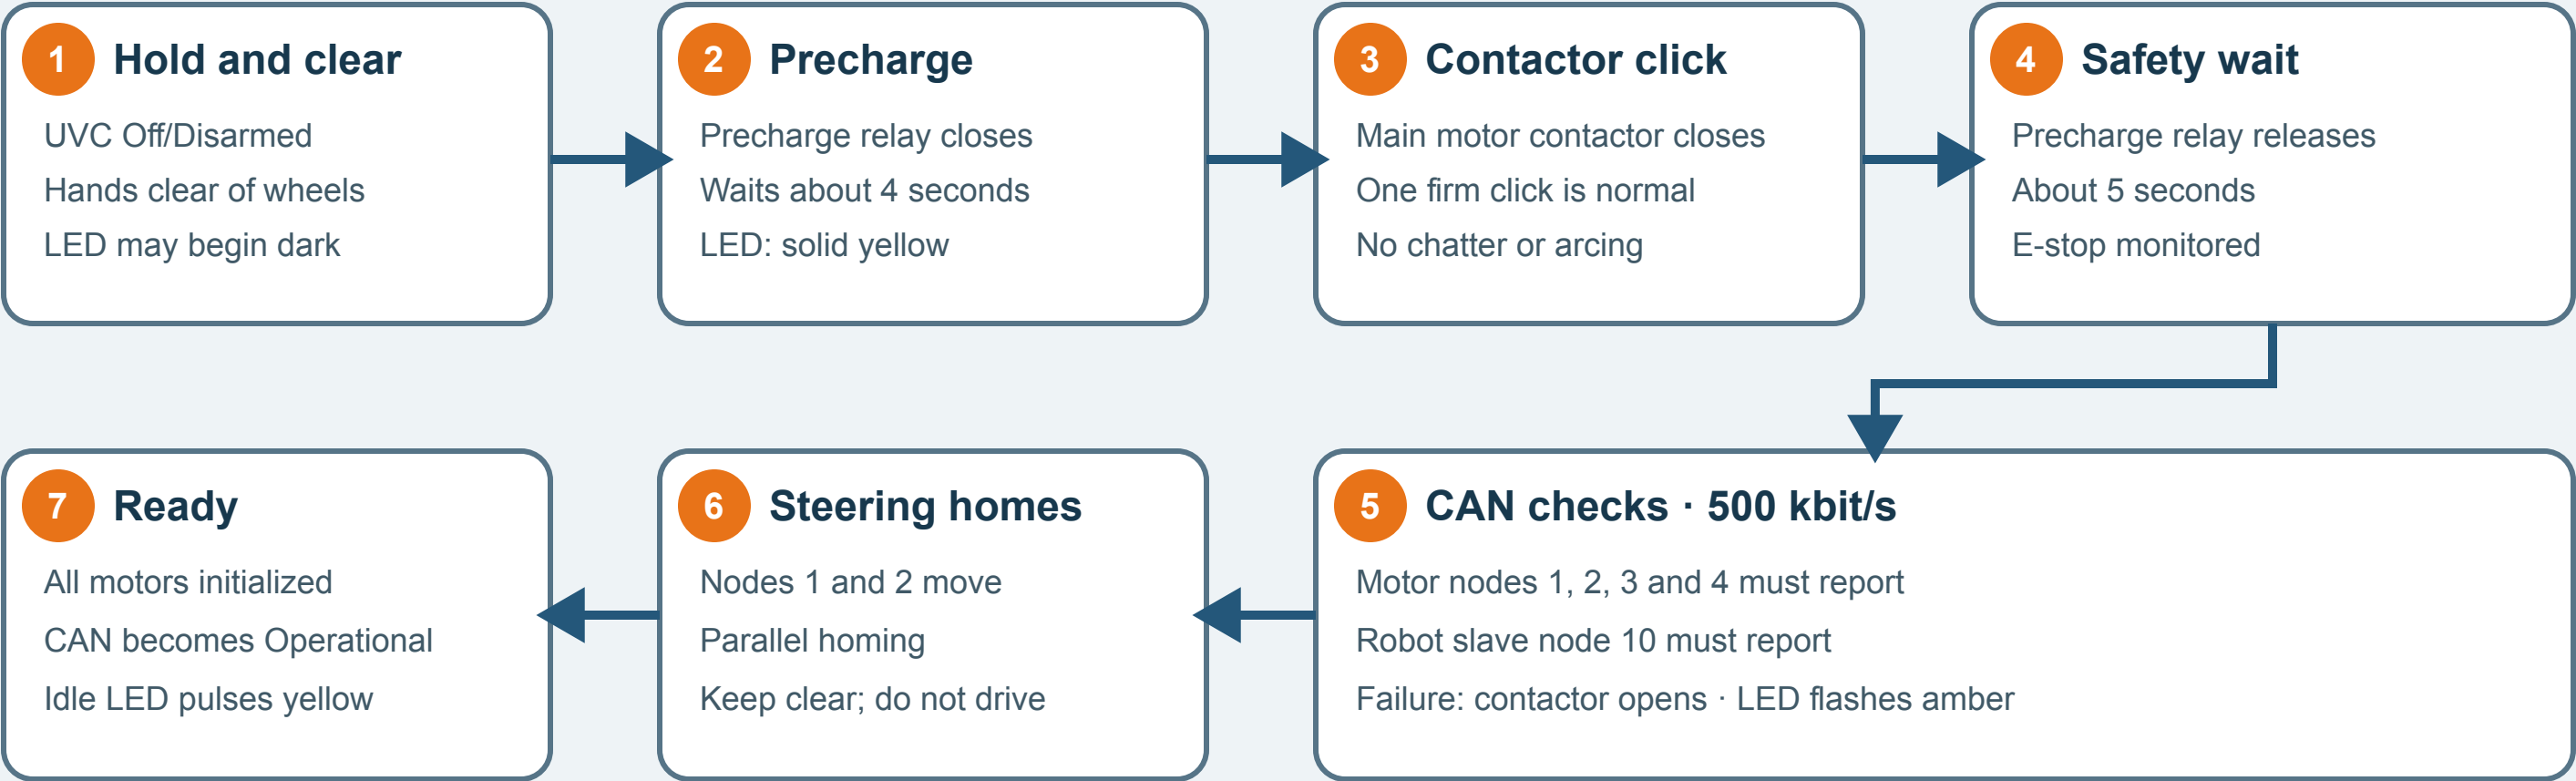

POWER-HUB LED · NODE 14 (0x0E)

	Solid yellow	Startup, precharge, node checks or homing in progress		Flashing amber	Startup fault; do not operate
	Pulsing yellow	Startup complete; robot connected and idle		Solid red	E-stop or CAN emergency
	Breathing blue	Robot running with a nonzero motion command		Blinking magenta	Operator-control link lost
				White	Night mode or Morse service mode

Safety priority: red E-stop → flashing amber fault → night override → startup → link lost → idle → running.