

ROLL PULLER XL

DIRECTIONS FOR USE

1,000 LB MAX / PULLER


RP3XL — cores 2.75"–3.25"

RP4XL — cores 3.75"–4.5"

FIVE STEPS

- 01 RIG.** Attach rope, strap, cable or 5/16" chain with grab hook — 4,700 lb WLL minimum — to the end ring.
- 02 INSERT.** Slide the puller into the core — 0.5" minimum thickness — up to the red tape. Leave about 2" of tape, the ring and the hook exposed.
- 03 SET.** Pull the ring back to lock the teeth into the cardboard. Tug the line to confirm the teeth bite and will not slip out.
- 04 PULL.** Pull horizontally or with a slight upward lift, using a forklift, loader or truck. Never pull downward.
- 05 RELEASE.** With the line slack, hold the red tape and push the ring in to release the teeth, then slide the puller out.

MULTIPLE PULLERS. Hook a short Grade 70 chain from each puller to one heavy steel O-ring, then pull from the centre with 65 ft of 1" rope rated 4,700 lb or above.

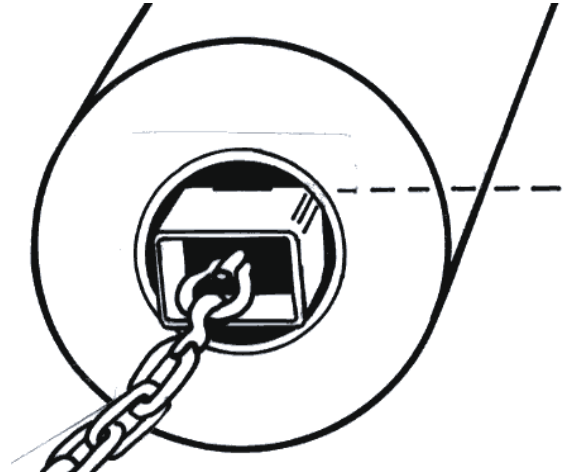

Red tape, ring and clevis grab hook stay outside the core. If the tape disappears into the core, the puller is in too far.

DO — PULL LEVEL OR UP



Raise the lift so the line runs level or slightly upward. Pressure comes off the rolls beneath and the roll slides out easily — faster unloading, lower cost.

NEVER — PULL DOWN OR TUG

Downward angles and jerking force the rolls into each other, push past 1,000 lb, tear cores, and stress the ring-to-shaft weld. It voids the warranty.

LOAD LIMITS

PULLERS PROVEN PULL

2	6 stacks of 3 banded 4 oz rolls, or 6 single rolls up to 16 oz
3	12 banded 4 oz stacks, or 12 single rolls up to 16 oz
3-5	Up to 25 banded 4 oz stacks — beyond recommended limits; depends on the winding

Core tears: check the core is 0.5" thick and stop tugging. **Core pulls out:** reduce the weight, move up a row, or use two pullers per core on loosely wound rolls.

THINK SAFETY

Hard hat, steel-toed boots, eye protection and gloves. Stand well clear — beside the truck or container, never in line with the rope and never where rolls can fall. If the line breaks it snaps back along its own path.

SAFETY ZONE = TO THE SIDE, OUT OF LINE



WATCH THE
90-SECOND
HOW-TO

MOUNQUE "MONK" BARAZONE — GAC® GEOTEXTILE APPARATUS COMPANY

+1(440)328-8200 · gacco@outlook.com · gacco.com · rollpuller.com

Used by contractors, distributors, manufacturers and truckers since 1980. © 1980–2026 Mounque Barazone & Geotextile Apparatus Company. All rights reserved.

USE
INSTRUCTIONS
2026