


SCAN EACH OF THE FOLLOWING BARCODES TO SETUP THE MOTOROLA LS7708:

STEP1:

Set Default Parameter

Scanning this bar code returns all parameters to the default values listed in *Table A-1 on page A-1*.

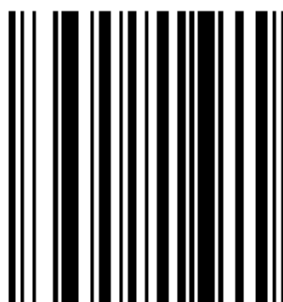

Set All Defaults

STEP 2:

RS-232 Host Types

To select an RS-232 host interface, scan one of the following bar codes.



Standard RS-232¹