
PM-2 50UA Test Procedure

1、 Test "Zero" position

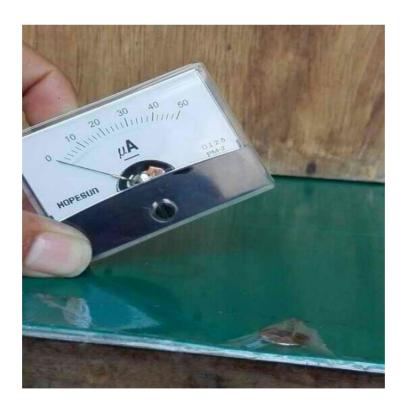

2、 The balance test at 45degree, horizontal and vertical



3 Test the scale between Zero and full scale





