SparkBench

Servo reference grid

Print the PDF at 100% / Actual size. Disable Fit to page.

Check both outer sides with a ruler: 50 mm wide and 50 mm high.

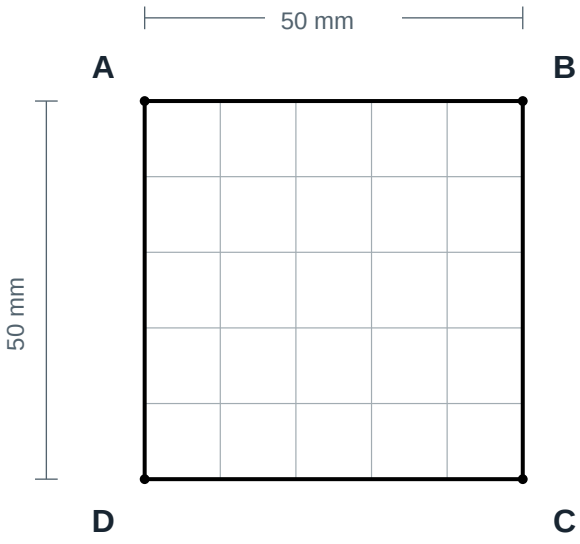

Each cell: 10 x 10 mm

Use the four outer corners.

Corner order: A, B, C, D.

Keep all four corners visible.

This target does not define the servo's zero angle.

Placement

Place beside the horn. Keep the grid face parallel to the flat face of the white horn. Keep the sheet flat and the horn unobstructed.

SIDE VIEW - ORIENTATION ONLY

The grid may be offset in height if its face stays parallel to the horn.

The diagram shows alignment, not a mounting method.

Leave the servo and wiring untouched. No servo movement is needed.

Calibration target only. Printed size and plane alignment must be checked.