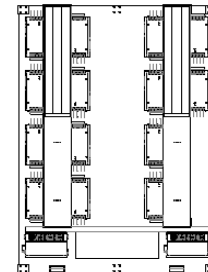
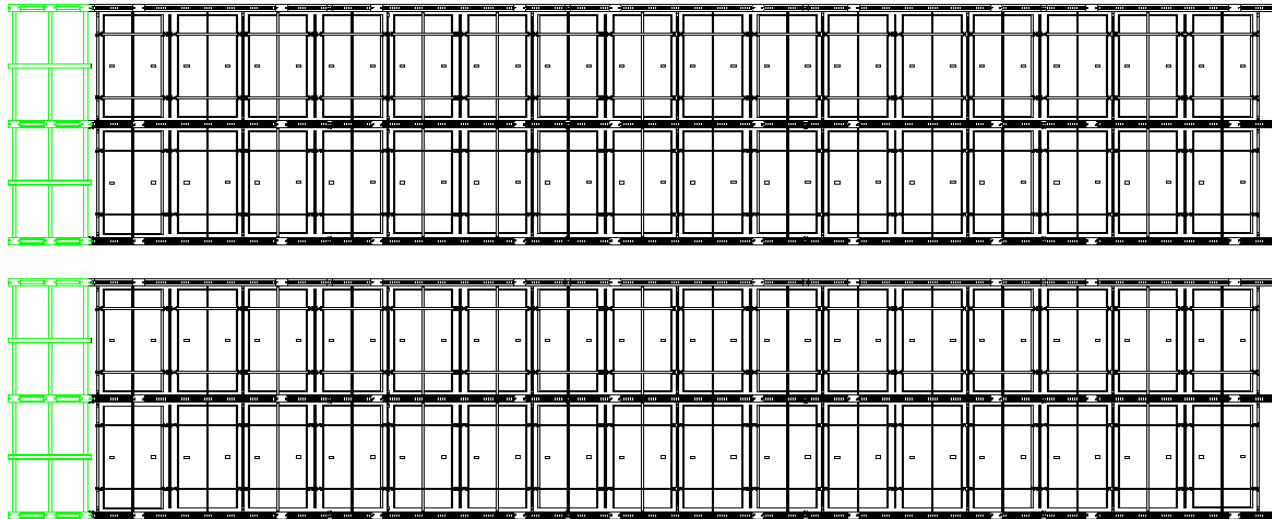


Debugging Work Instruction

Revision No.: A0



Prepared by: Yubo Wu

Reviewed by:

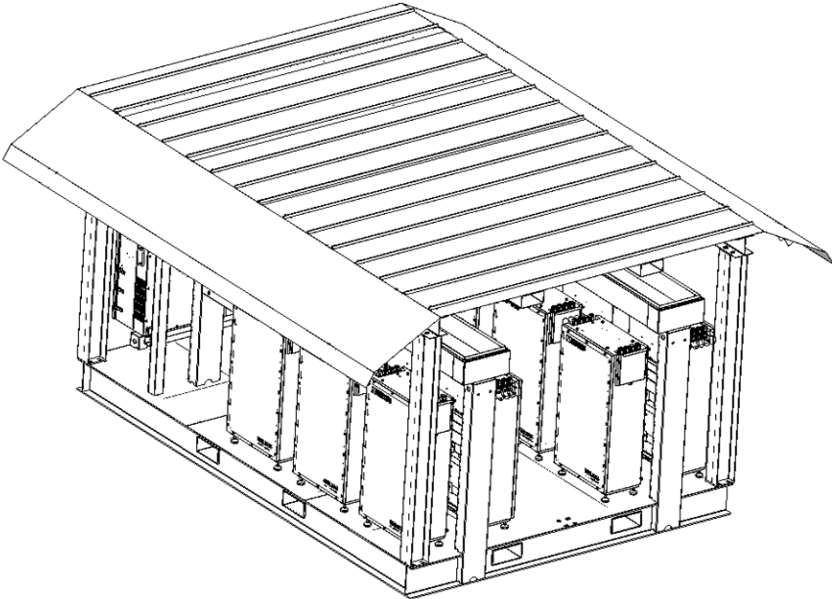
Countersigned by:

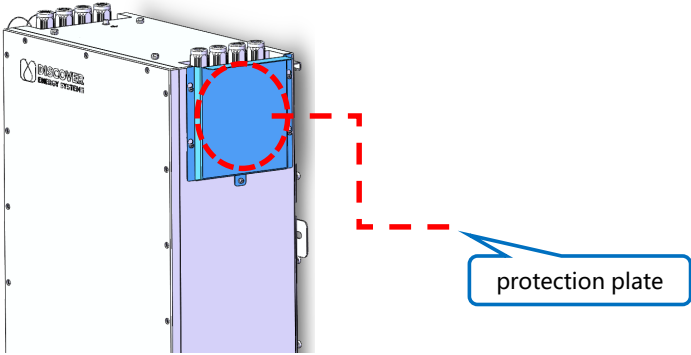
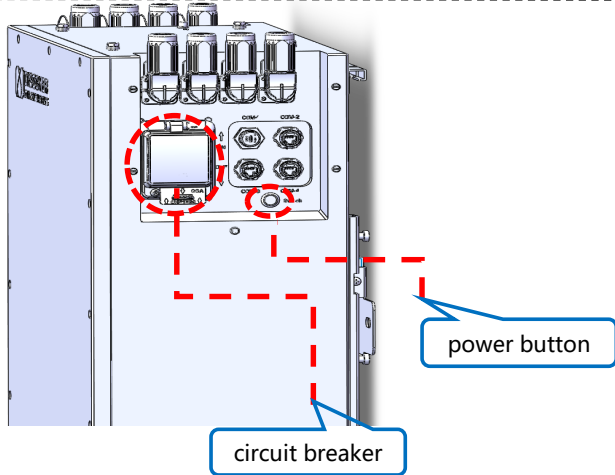
Approved by:

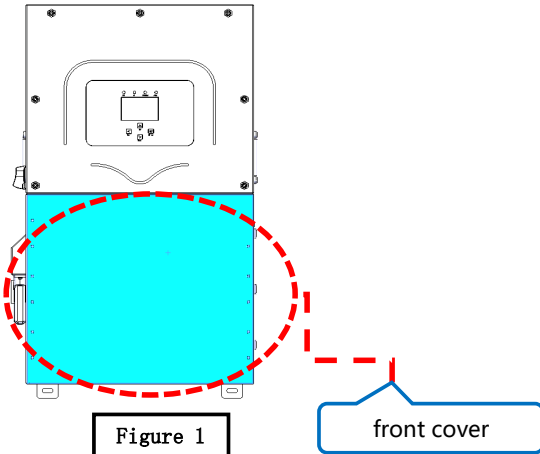
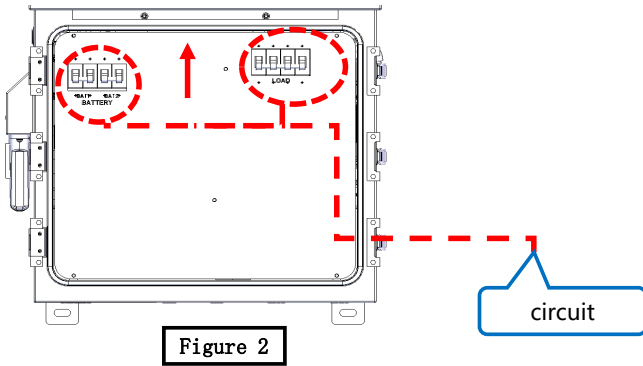
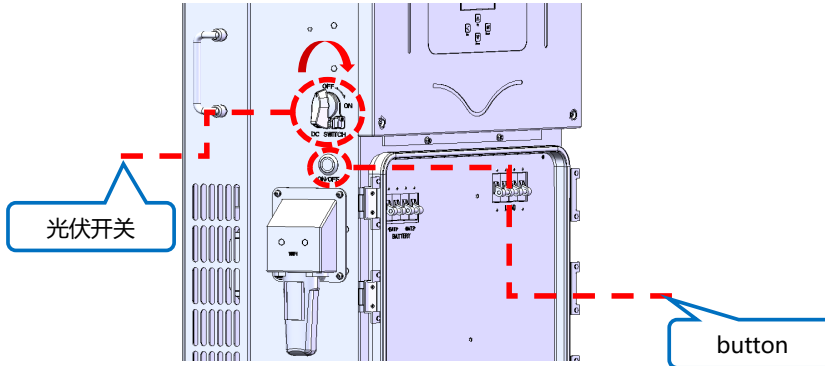


Document Revision History

No.	Revision No.	Revision Date	Description of Change (Clause No.)	Revised by	Remarks
1	A0	2025/1/29	Initial Release	Yubo Wu	
2					
3					
4					
5					
6					
7					
8					
9					
10					
11					
12					
13					
14					
15					
16					
17					
18					
19					
20					

VOLTAGE[®] Document Name: Debugging Work Instruction			Process Name:		Process No. : H-40	Document No.	YZ.WI.SG.007-2311	
			Equipment:		Revision:	A/00	Page	1/6
Part No.	Part Name	Quantity	Tools / PPE: Marker, insulated gloves.					
Procedure Steps								
1.Ensure the battery packs and inverters are turned off, and all circuit breakers in the Nexus Panel are in the OFF position.								
2. Inspect the overall tray, battery packs, inverters, and Nexus Panel for any defects such as bumps, deformation, or scratches.								
3.Verify that all screen printing and labels are correct and legible.								
4.Check that all pins and fasteners are properly installed.								
5.Ensure power cables, communication cables, and other connections are secure and free of looseness.								
6.Confirm there is no water accumulation or dust inside the unit.								
Notes								
1.Do not inspect while energized,								
2.Wear labor protection equipment during operation,								
3.Testing work must be carried out by two people working together,								
4.Operators must hold valid certificates to work,								
5.All subsequent operations must meet the above requirements.								
 必须戴防尘口罩  必须戴防护手套  质量控制								

VOLTAGE® Document Name: Debugging Work Instruction			Process Name:Turn on the battery pack.		Process No. H-20	Document No.	YZ.WI.SG.007-2311	
			Equipment:		Revision:	A/00	Page	2/6
Part No.	Part Name	Quantity	Tools / PPE:Flat-head screwdriver, Phillips screwdriver, insulated gloves.					
								
Procedure Steps								
1、 Remove the protection plate as shown in Figure 1;								
2、 Open the waterproof and dustproof cover of the circuit breaker;								
3、 Switch the circuit breaker to the ON position as shown in Figure 3;								
4、 Short press the battery start/stop button to power on the battery; the LED indicator will light up orange;								
5、 For details, refer to the Discover_Helios_314aH_OperationManual.								

VOLTAGE® Document Name: Debugging Work Instruction			Process Name:Start the inverter.		Process No. H-20	Document No.	YZ.WI.SG.007-2311	
			Equipment:		Revision:	A/00	Page	3/6
Part No.	Part Name	Quantity	Tools / PPE:Flat-head screwdriver, Phillips screwdriver, insulated gloves.					
			 Figure 1 front cover					
Procedure Steps 1、Remove the inverter front cover as shown in Figure 1; 2、Open the two circuit breakers as shown in Figure 2; 3、Switch the PV switch to the ON position as shown in Figure 3; 4、Press the start button as shown in Figure 3 to start the inverter; the LCD screen will light up; 5、For details, refer to the Sol-Ark_18K-2P-LV_UserManual.			 Figure 2 circuit					
Notes 1、Before starting the inverter, the DC side is already live. Do not touch any conductors; 2、After starting the inverter, the entire system is live. Do not touch any conductors; 3、The operation for both inverters is the same; start them in master-slave sequence.			 光伏开关 button Figure 3					
 必须戴防电口罩  必须戴防电手套  质量控制								

Debugging Work Instruction

Process Name: Turn on all circuit breakers.

Process No.
H-20

Document No.

YZ.WI.SG.007-2311

Equipment:

Revision:

A/00

Page

4/6

Part No.	Part Name	Quantity

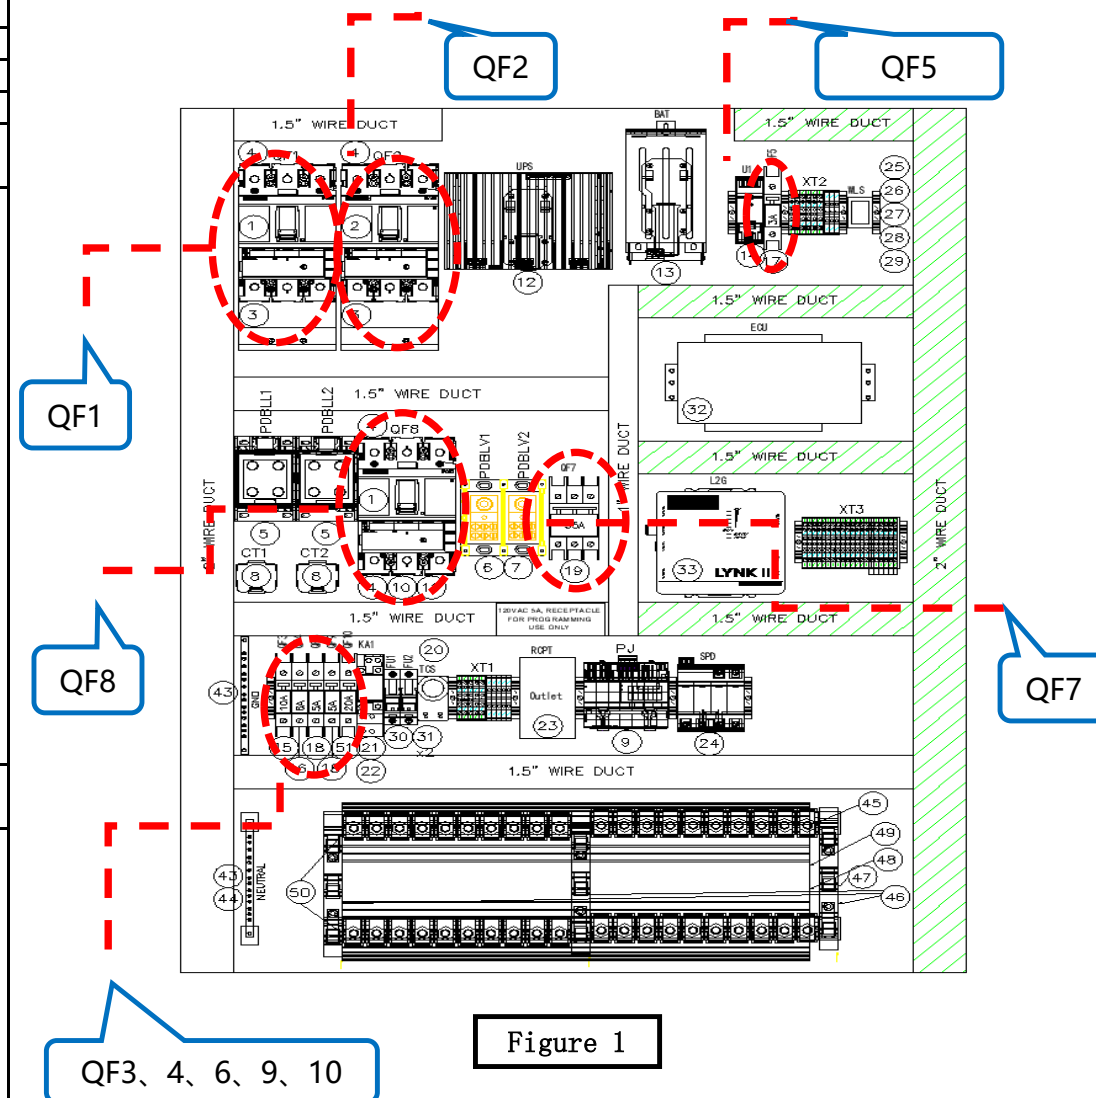
Procedure Steps

- 1、Turn on all circuit breakers in sequence as shown in Figure 1;
- 2、All components are now in operation.

Notes

- 1、Do not touch any conductors;
- 2、Ensure all circuit breakers are fully switched on.

Tools / PPE: insulated gloves



必须戴防尘口罩



必须戴防护手套



质量控制



Document Name:

Debugging Work Instruction

Process Name:EMS deployment (1)	Process No. H-20	Document No.	YZ.WI.SG.007-2311	
Equipment:laptop computer	Revision:	A/00	Page	5/6

Part No.	Part Name	Quantity

Tools / PPE:: Ethernet cable

Procedure Steps

- 1、Connect one end of the Ethernet cable to the network port of the laptop;
- 2、Connect the other end of the Ethernet cable to the LAN2 port of the ECU as shown in Figure 1.

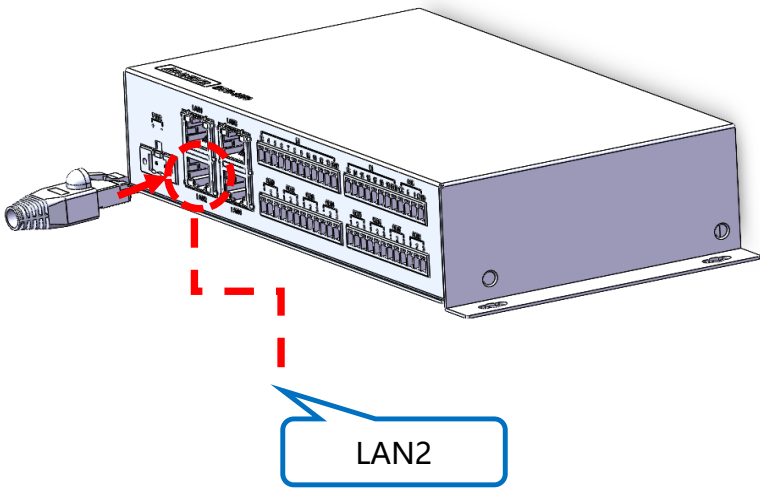
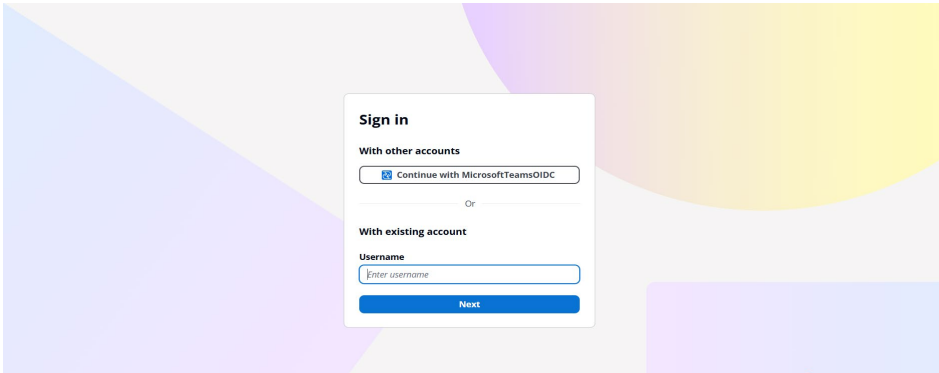


Figure 1

Notes

- 1、Ensure the network port is securely connected and not loose.



VOLTAGE Document Name: Debugging Work Instruction			Process Name:EMS deployment (2)		Process No. H-20	Document No.	YZ.WI.SG.007-2311																																																									
			Equipment:laptop computer		Revision:	A/00	Page	7/6																																																								
Part No.	Part Name	Quantity	Tools / PPE:																																																													
																																																																
Procedure Steps			Figure 1																																																													
1、Ensure the laptop has a network connection; 2、Download the configuration tool and open the webpage: https://dlhmpn6ieubr8i.cloudfront.net/manuals/system-config/ ; 3、Log in to the account as shown in Figure 1; 4、Access this page as shown in Figure 2, then download the configuration tool according to the webpage content and start the configuration process.																																																																
Notes			Monarch Edge 用户手册 搜索Ctrl K 基础认知核心功能配置常见问题 应用介绍 登录功能 应用更新 初始化配置 通道管理 通道点位配置 通道点位映射配置 设备实例配置 规则配置 系统配置 应用介绍 Monarch Edge Configuration Channel Config <table><tr><th>ID</th><th>Name</th><th>Description</th><th>Protocol</th><th>Enabled</th><th>Detail</th><th>Points</th><th>Delete</th></tr><tr><td>1</td><td>PCS41</td><td>逆变器 #1</td><td>modbus_tcp</td><td>☐</td><td>Detail</td><td>Points</td><td>Delete</td></tr><tr><td>2</td><td>BAM541</td><td>电池管理系统 #1 (kmp...</td><td>modbus_tcp</td><td>☐</td><td>Detail</td><td>Points</td><td>Delete</td></tr><tr><td>3</td><td>GENSET41</td><td>柴油发电机 #1</td><td>modbus_rtu</td><td>☒</td><td>Detail</td><td>Points</td><td>Delete</td></tr><tr><td>4</td><td>ECU1170_GND</td><td>ECU 1170 本机 DI/DO</td><td>dli_do</td><td>☒</td><td>Detail</td><td>Points</td><td>Delete</td></tr><tr><td>5</td><td>IDL2-2 (1)</td><td>ADW 152</td><td>modbus_tcp</td><td>☒</td><td>Detail</td><td>Points</td><td>Delete</td></tr><tr><td>6</td><td>IDL2-2 (2)</td><td>ADW 151</td><td>modbus_tcp</td><td>☒</td><td>Detail</td><td>Points</td><td>Delete</td></tr></table> On this page 下载地址 (V1.13版本) UI 介绍						ID	Name	Description	Protocol	Enabled	Detail	Points	Delete	1	PCS41	逆变器 #1	modbus_tcp	☐	Detail	Points	Delete	2	BAM541	电池管理系统 #1 (kmp...	modbus_tcp	☐	Detail	Points	Delete	3	GENSET41	柴油发电机 #1	modbus_rtu	☒	Detail	Points	Delete	4	ECU1170_GND	ECU 1170 本机 DI/DO	dli_do	☒	Detail	Points	Delete	5	IDL2-2 (1)	ADW 152	modbus_tcp	☒	Detail	Points	Delete	6	IDL2-2 (2)	ADW 151	modbus_tcp	☒	Detail	Points	Delete
ID	Name	Description							Protocol	Enabled	Detail	Points	Delete																																																			
1	PCS41	逆变器 #1	modbus_tcp	☐	Detail	Points	Delete																																																									
2	BAM541	电池管理系统 #1 (kmp...	modbus_tcp	☐	Detail	Points	Delete																																																									
3	GENSET41	柴油发电机 #1	modbus_rtu	☒	Detail	Points	Delete																																																									
4	ECU1170_GND	ECU 1170 本机 DI/DO	dli_do	☒	Detail	Points	Delete																																																									
5	IDL2-2 (1)	ADW 152	modbus_tcp	☒	Detail	Points	Delete																																																									
6	IDL2-2 (2)	ADW 151	modbus_tcp	☒	Detail	Points	Delete																																																									
1、Have a TEAMS account and be logged in.			 必须戴防尘口罩  必须戴防护手套  质量控制						Figure 2																																																							