

Software calibration

The robot dog has already calibrated the steering gear before leaving the factory, so please do not need to perform software calibration again if it is not necessary, otherwise the robot dog may not be able to be used normally.

Transfer the calibration.ipynb file we provided to the Raspberry Pi system. Then open Jupyter Lab, find the file path and run the program for all cells.



At the bottom of the program, we can see the generated control button.

布局控件并显示 Layout widgets and display them


```
In [ ]: # 布局控件并显示 Layout widgets and display them
output = widgets.Output()
box_calib = widgets.HBox([button_Calibration, button_Finish_Calib])
box_display = widgets.VBox([box_calib, output])
display(box_display)
```



Click to "start calibrate", at this time the robot dog will turn off the torque of all servos, we can manually change the angle of the servos (that is, enter the calibration mode)

As shown below.

Put a flat piece of A4 paper under the robot dog, so that the body is flush with the desktop, the thigh and the body are at a 90° angle, the calf and the thigh are at a 90° angle, and the calf is on the ground.

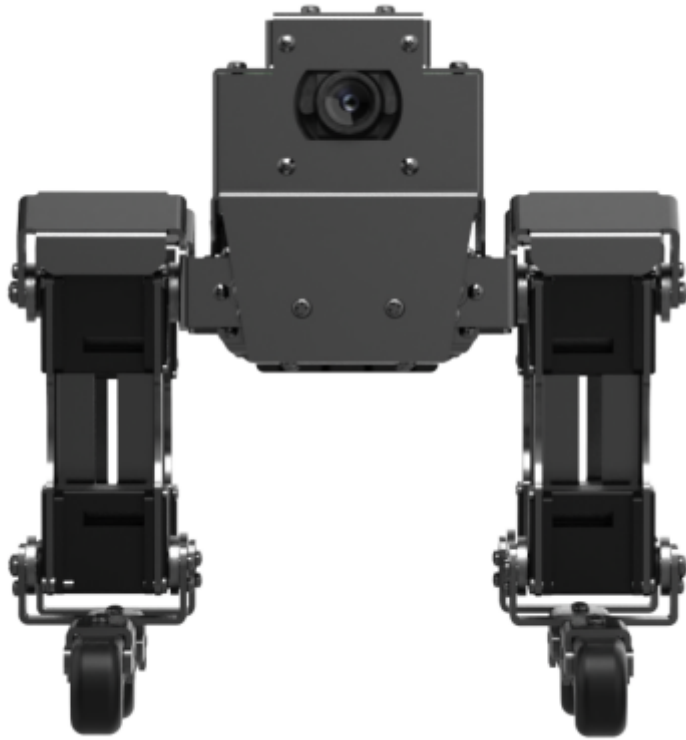

After posing the robot dog as shown above, click "Complete calibrate" to save the data.