


ONE-PIECE DESK WOBBLER • OWNER CARD

COMET PEBBLE

One flick. A wandering wobble. Star home.

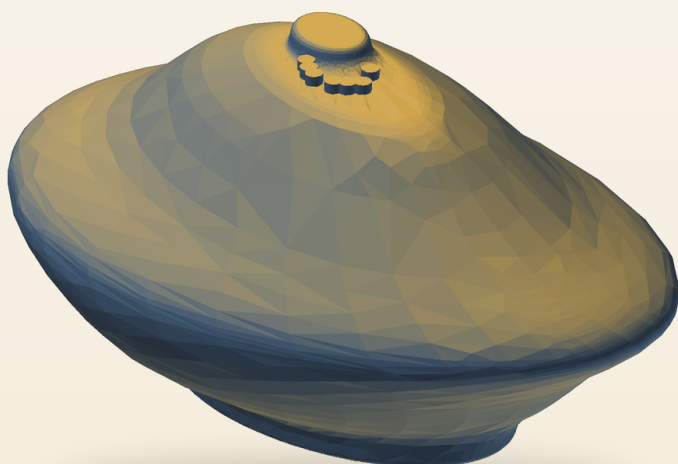

HOME POSITION

Raised smiling-star faces up

IN THE BOX

1 × Comet Pebble

ONE SOLID PIECE
NO ASSEMBLY

TURN OVER → CLEAR • FLICK • RELEASE


YOUR FIRST LAUNCH

MAKE THE COMET MOVE

Use a clear, hard, level desktop. The best start is a short sideways flick—not a shove.


1 STAR UP

Broad oval sole down.
Raised smiling-star up.

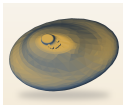

2 SIDE FLICK

Tap one long shoulder sideways. Tip it; do not launch it.

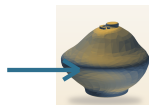

3 HANDS OFF

Release completely.
Wait for the wobble to stop.



FLICK

A crisp sideways tap on either long shoulder gives the liveliest start.



GENTLE ROLL

Tip onto one long edge, roll forward a little, then let go.



IF THE WOBBLE FEELS SHY

BARELY MOVES

Try a shorter, crisper tap on a smooth hard surface.

SLIDES AWAY

Use less force and strike the shoulder, not the center.

STOPS ON ITS SIDE

Turn the star up; retry from the opposite shoulder.

PATH FEELS SMALL

Turn the start 90°. Desk friction changes the path.

RESET • CARE • SAFE PLAY

Wait until it stops. Reset star-up with one hand. Wipe with a dry soft cloth and store dry. Use only on a clear desktop away from edges, faces, and breakables. Do not throw or mouth it. Inspect for cracks or sharp damage; stop using it if damaged.

MOTION VARIES WITH FLICK, MATERIAL, AND DESK SURFACE.

STAR UP • READY AGAIN