


# Vacuum Module: Ejector System/Vacuum Pump System

## Series ZX

■ For electronic components and precision components up to 100 g

■ Modular design

Customized application function through selection of module components.

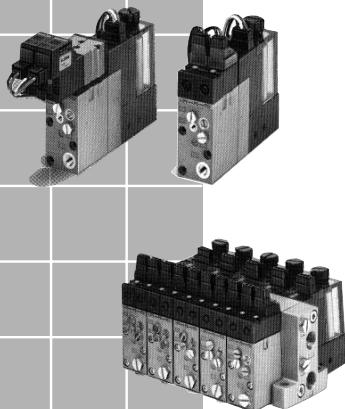

### INDEX

	Page
Features, example of application .....	13-2-2
Common specifications .....	13-2-3

#### Ejector System

How to order .....	13-2-4
Combination of supply valve and release valve .....	13-2-6
Construction .....	13-2-7
Ejector unit .....	13-2-8
Valve unit .....	13-2-10
Suction filter unit .....	13-2-12
Vacuum pressure switch unit .....	13-2-13
Dimensions/Without valve unit .....	13-2-19
Dimensions/Combination of supply valve and release valve	
Type K1, K3, K6, K8, J1 and J2 .....	13-2-20 to 31
Manifold .....	13-2-32
Dimensions .....	13-2-34 to 39

#### Vacuum Pump System

How to order .....	13-2-40
Combination of supply valve and release valve .....	13-2-42
Construction .....	13-2-43
Valve unit .....	13-2-44
Suction filter unit/Vacuum pressure switch unit .....	13-2-45
Combination of supply valve and release valve/Dimensions	
type K1, K3, K6 and K8 .....	13-2-44 to 53
Manifold .....	13-2-54
Dimensions .....	13-2-56 to 61

#### Unit Composition

Ejector system: Single/Manifold .....	13-2-62
Vacuum pump system: Single/Manifold .....	13-2-64
Manifold disassembly from individual unit .....	13-2-66

#### Made to Order Specifications

Other combinations of supply valve and release valve .....	13-2-68
--	---------

ZX  
ZR  
ZM  
ZH  
ZU  
ZL  
ZY  
ZQ  
ZF  
ZP  
ZCU  
AMJ  
Misc.

# Vacuum Module: Ejector System/Vacuum Pump System Series ZX


For electronic components and precision components up to 100 g

## ■ Modular design

Customized application function through selection of module components.


■ Compact size and lightweight (120 g with complete unit);  
well suitable for actuator mounting

■ Ejector nozzle size: ø0.5 to ø1.0 (Suction flow: 5 to 22 l/min (ANR))

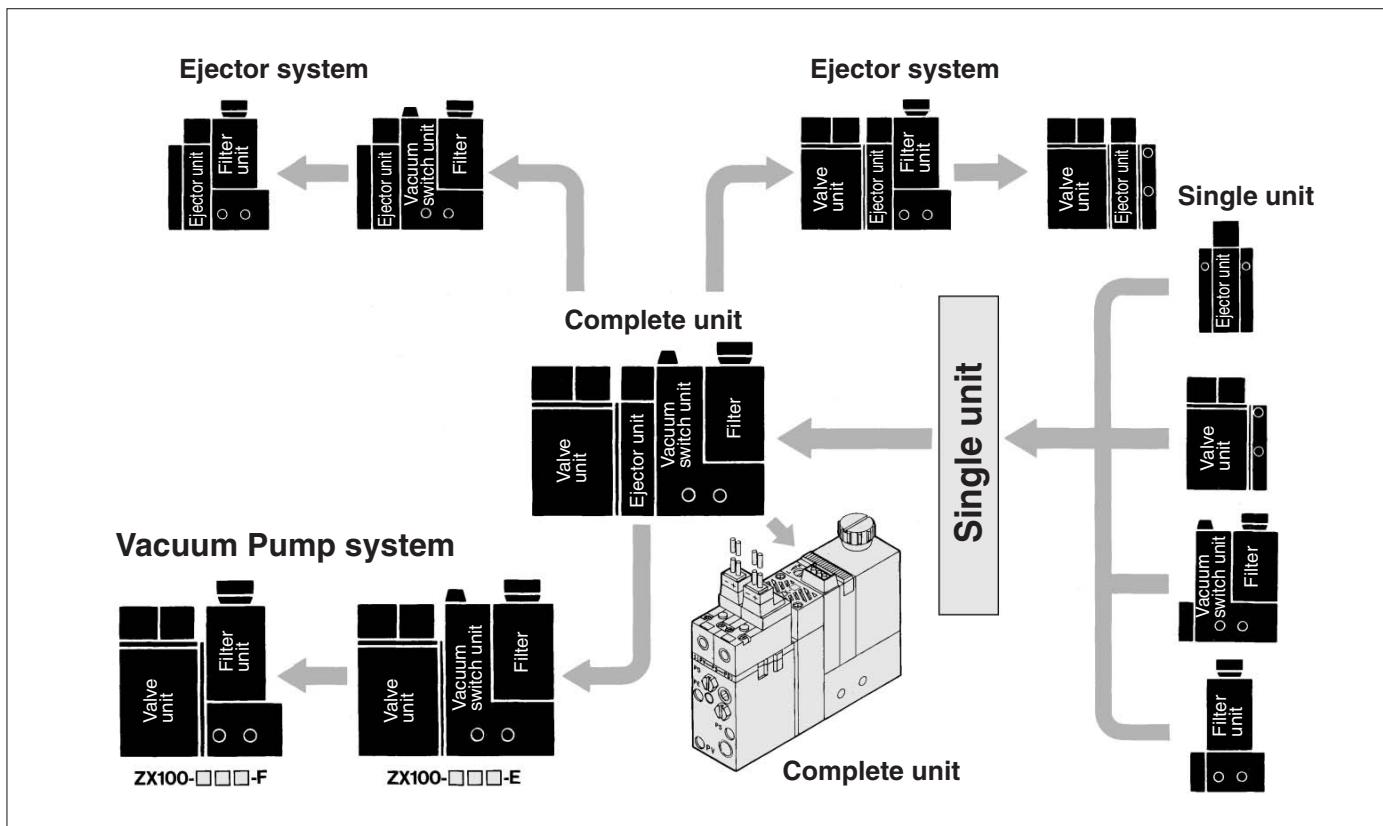


## Application Example


Chip bonding

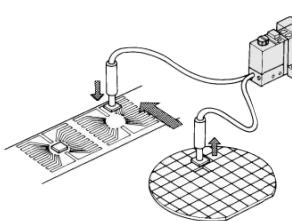


Chip mounting

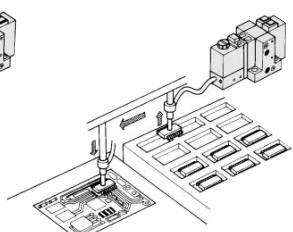

Picking & placing  
miniature components

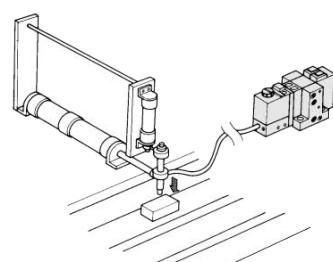

Escorting printed matter

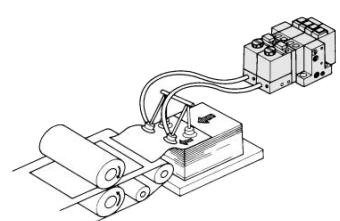

# Vacuum Module: Ejector System/Vacuum Pump System Series ZX


## Modular Components Introduction

System		Ejector System			Vacuum Pump System	
Component equipment	Characteristics	13-2-4 to 13-2-39			13-2-40 to 13-2-65	
<b>Ejector unit</b> <b>Series ZX1</b> 	Nozzle diameter ø(mm)	0.5	0.7	1.0		
	Max. suction flow (/min(ANR))	5	10	22		
	Air consumption (/min(ANR))	13	23	46		
	Maximum vacuum pressure	-84 kPa				
	Exhaust release	Built-in silencer/Manifold exhaust Individual exhaust port: (RC 1/8)				
<b>Valve unit</b> <b>ZX1-V□</b> 	Component equipment	Supply valve/Release valve				
	Function	N.C., N.O.				
	Operation	Solenoid valve/Air operated valve				
	Power supply voltage	3, 5, 6, 12, 24 VDC, 100, 110 VAC (50/60 Hz)				
<b>Vacuum pressure switch unit</b> <b>Series ZS</b> 	Series	Vacuum switch	Adsorption confirmation switch	Vacuum switch	Adsorption confirmation switch	
	Set pressure range	0 to -101 kPa	-20 kPa to -101 kPa	0 to -101 kPa	-20 kPa to -101 kPa	
	Hysteresis	3% or less		0.5 kPa		
	Applicable pad dia. (mm)	ø2 to ø25	ø0.3 to ø1.2	ø2 to ø25	ø0.3 to ø1.2	
	Supply voltage	24 VDC			24 VDC	
<b>Suction filter unit</b> <b>ZX1-F</b> 	Operating pressure range	Vacuum to 0.5 MPa				
	Filtration	30 µm				
<b>Common specifications</b>	Unit	Air supply port	M5 (Standard)/M6 (Option)			
		Vacuum pad connection port	M5 (Standard)/M6 (Option)			
	Manifold	Air supply port	Rc 1/8			
		Exhaust port	Rc 1/8			
	External pilot port	External pilot port	M5			
		Stations	Max. 8 units			



- Refer to pages 13-2-8 to 13-2-18 for more detailed specifications for each unit.
- Refer to pages 13-2-4 to 13-2-5 for ejector system unit.
- Refer to pages 13-2-32 for ejector system manifold.
- Refer to pages 13-2-40 to 13-2-41 for external vacuum supply system unit.

13-2-68 to 13-2-72

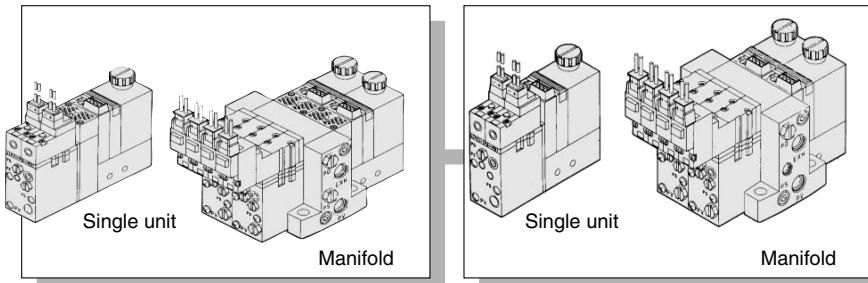


- Refer to page 13-2-54 for external vacuum supply system manifold.
- Refer to pages 13-2-62 to 13-2-65 for units for replacement.

**ZX**  
**ZR**  
**ZM**  
**ZH**  
**ZU**  
**ZL**  
**ZY**  
**ZQ**  
**ZF**  
**ZP**  
**ZCU**  
**AMJ**  
**Misc.**

# Vacuum Module: Ejector System

# Series ZX

## How to Order

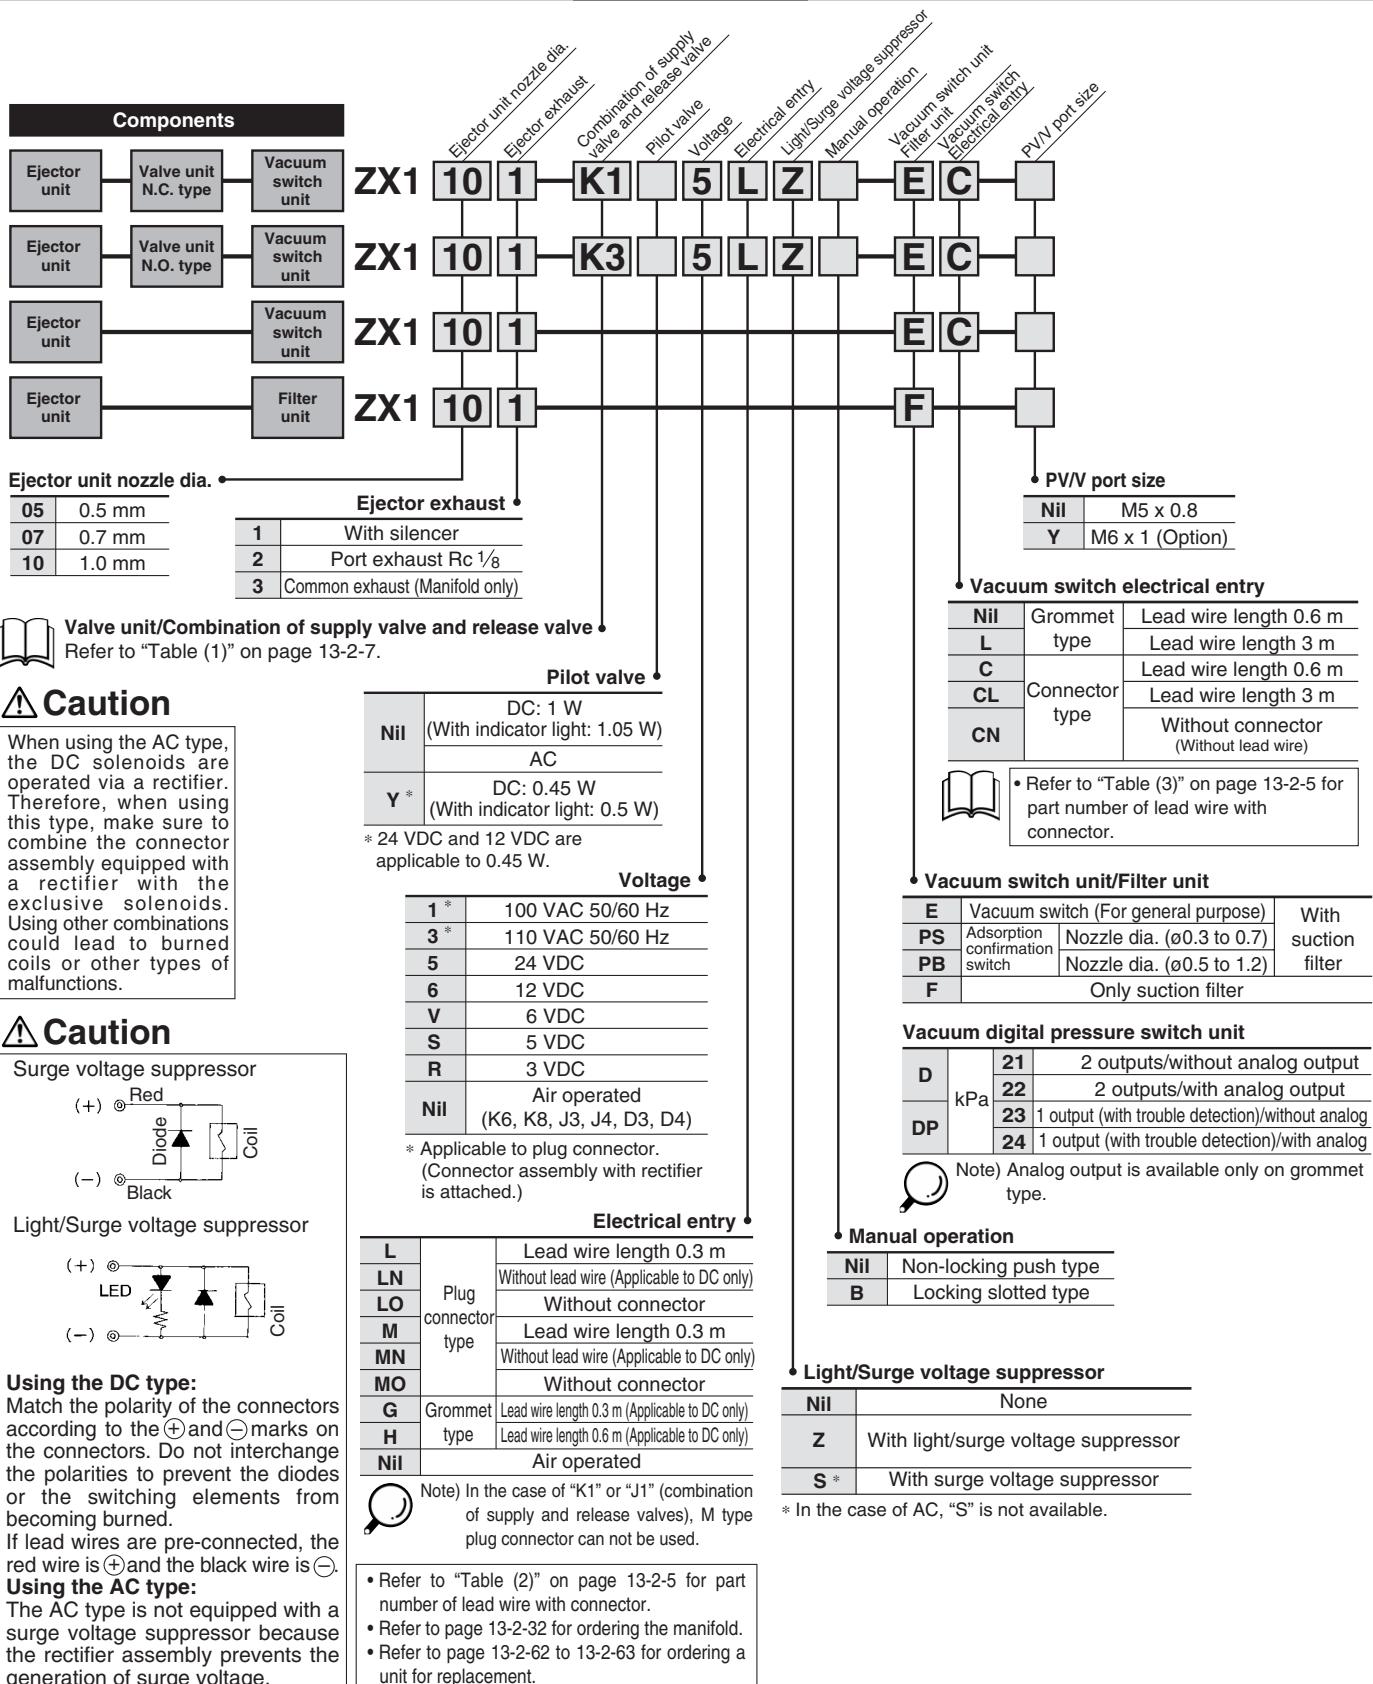

**Table (1) Valve Unit/Combination of Supply Valve and Release Valve**



(Refer to page 13-2-6 for detailed specifications.)

Components		Symbol	Supply valve				None	Release valve			None							
Supply valve	Release valve		Solenoid valve		Air operated			N.C. (VJ114)	N.O. (VJ324)	N.C. (ZX1A)	N.O. (VJA324)	N.C. (VJ114)	N.C. (VJ314)	N.C. (VJA314)	ZX1A			
			N.C. (VJ114)	N.O. (VJ324)	N.C. (ZX1A)	N.O. (VJA324)												
Solenoid (N.C.)	Solenoid (N.C.)	K1	●	—	—	—	—	●	—	—	—	—	—	—	—			
Solenoid (N.O.)	Solenoid (N.C.)	K3	—	●	—	—	—	—	—	●	—	—	—	—	—			
Air operated (N.C.)	External release	K6	—	—	●	—	—	—	—	—	—	●	—	—	—			
Air operated (N.O.)	Air operated (N.C.)	K8	—	—	—	●	—	—	—	—	●	—	—	—	—			
Solenoid (N.C.)	None	J1	●	—	—	—	—	—	—	—	—	—	●	—	●			
Solenoid (N.O.)	None	J2	—	●	—	—	—	—	—	—	—	—	—	●	●			
		Nil		Without valve module														

• Air operated valve: Controlled by external 3 port valve.

• Weight (g)/K1: 82, K3: 132, K6: 58, K8: 132, J1: 77, J2: 100

• External release: Directly released by external 2 port valve.

**Table (2) Valve Unit/Valve Plug Connector Assembly**

Connector ass'y part no.

(For DC)

**VJ10-20-4A-6**

Lead wire length	
Nil	0.3 m (Standard)
6	0.6 m
10	1 m
15	1.5 m
20	2 m
25	2.5 m
30	3 m

(For 100 VAC)

**VJ10-36-1A-6**

(For 110 VAC)

**VJ10-36-3A-6**

How to order

If ordering vacuum module with 600 m or the longer lead wire, specify both vacuum module and connector assembly part numbers.

Ordering example)

ZX1051-K15LOZ-EC ..... 1 pc.  
\*VJ10-20-4A-6 ..... 2 pcs.

**Table (3) Vacuum Switch/Plug Connector Assembly**

**ZS-10-5A-**



Lead wire length	
Nil	0.6 m
30	3 m
50	5 m


Note) If ordering a vacuum switch with 3 m lead wire, specify both the vacuum unit switch and the 3 m lead wire connector part numbers.

Ordering example)


ZX1051-K15LO-ECN ..... 1 pc.  
\*VJ10-20-4A-6 ..... 2 pcs.  
\*ZS-10-5A-50 ..... 1 pc.

**Ejector System/Recommended Model** (The models below will have shorter deliveries.)

Nozzle diameter (mm)	Model	Ejector unit exhaust type	Combination		Solenoid valve rated voltage	Lead wire electrical entry	Light/Surge voltage suppressor	Vacuum switch unit	Vacuum switch electrical entry
			Supply valve (Pilot valve)	Release valve (Direct operated)					
ø0.5	ZX1051-K15LZ-EC	With silencer	N.C. (VJ114)	N.C. (VJ114)	24 VDC	Plug connector type	With light/surge voltage suppressor	General vacuum switch (ZSE)	Connector type
	ZX1051-K35MZ-EC		N.O. (VJ324)	N.C. (VJ314)					
ø0.7	ZX1071-K15LZ-EC		N.C. (VJ114)	N.C. (VJ114)					
	ZX1071-K35MZ-EC		N.O. (VJ324)	N.C. (VJ314)					
ø1.0	ZX1101-K15LZ-EC		N.C. (VJ114)	N.C. (VJ114)					
	ZX1101-K35MZ-EC		N.O. (VJ324)	N.C. (VJ314)					

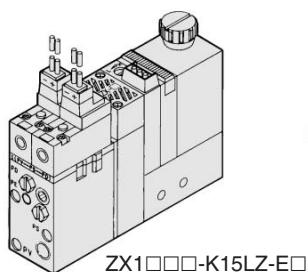

ZX1□□□-K15LZ-E□

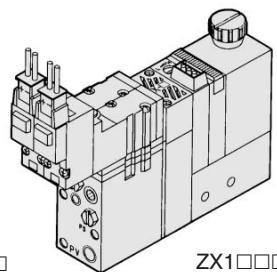

ZX1□□□-K35MZ-E□

**ZX**

**ZR**

**ZM**

**ZH**

**ZU**

**ZL**

**ZY**

**ZQ**

**ZF**

**ZP**

**ZCU**


**AMJ**

**Misc.**

# Series ZX

## Ejector System/Combination of Supply Valve and Release Valve

### Combination Symbol: K1

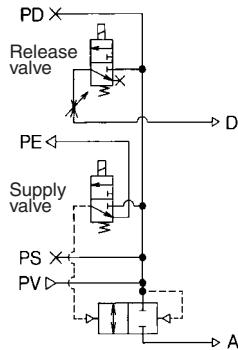


An N.C. solenoid valve is used for the supply valve. Also, an N.C. solenoid valve is used for the vacuum release valve.

**Application:** This combination is used for effecting control in accordance with electric signals.

#### How to Operate

Condition	Valve	Supply valve (N.C.)	Release valve (N.C.)
	Solenoid valve	Solenoid valve	
1. Work adsorption		ON	OFF
2. Vacuum release		OFF	ON
3. Operation stop		OFF	OFF

### Combination Symbol: K8

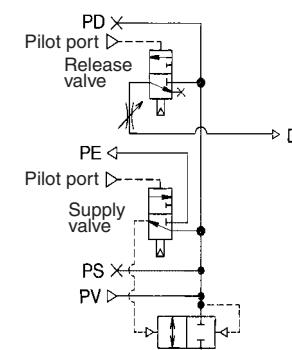


An air operated N.O. valve is used as the supply valve. An air operated N.C. valve is used for the vacuum release valve.

**Application:** This combination is used for effecting control in accordance with electric signals. Because the supply valve is N.O., the pressure that is supplied to the ejector is not interrupted during a power outage; as a result, the state of suction can be maintained. This combination is used for preventing the workpieces from dropping during power outages.

#### How to Operate

Condition	Valve	Supply valve (N.O.)	Release valve (N.C.)
	Air operated valve	Air operated valve	
1. Work adsorption		OFF	OFF
2. Vacuum release		ON	ON
3. Operation stop		ON	OFF

### Combination Symbol: K3

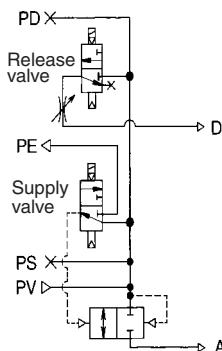


An N.O. solenoid valve is used for the supply valve. Also, an N.C. solenoid valve is used for the vacuum release valve.

**Application:** This combination is used for effecting control in accordance with electric signals. Because the supply valve is N.O., the pressure that is supplied to the ejector is not interrupted during a power outage; as a result, the state of suction can be maintained. This combination is used for preventing the workpieces from dropping during power outages.

#### How to Operate

Condition	Valve	Supply valve (N.O.)	Release valve (N.C.)
	Solenoid valve	Solenoid valve	
1. Work adsorption		OFF	OFF
2. Vacuum release		ON	ON
3. Operation stop		ON	OFF

### Combination Symbol: J1

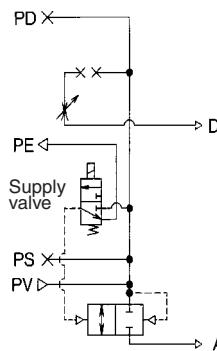


An N.C. solenoid valve is used as the supply valve. A vacuum release valve is not used.

**Application:** This combination is used for effecting control in accordance with electric signals. A vacuum release is effected by the intrusion of air between the silencer, pad, and the workpiece. This combination is used when there is no need to accelerate the vacuum release speed.

#### How to Operate

Condition	Valve	Supply valve (N.C.)	Release valve
	Solenoid valve	None	
1. Work adsorption		ON	—
2. Vacuum release		OFF	—
3. Operation stop		OFF	—

### Combination Symbol: K6

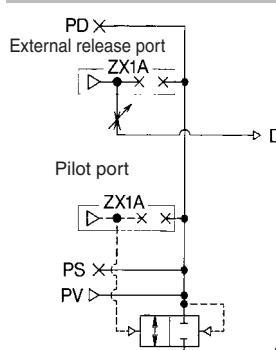


An external 3 port valve must be provided to serve as the supply valve. Also, an external 2 port valve (vacuum valve) must be provided to serve as the vacuum release valve.

**Application:** This combination is used for effecting control in accordance with electric signals.

#### How to Operate

Condition	Valve	Supply valve	Release valve
	External 3 port valve	External 2 port valve	
1. Work adsorption		ON	OFF
2. Vacuum release		OFF	ON
3. Operation stop		OFF	OFF

### Combination Symbol: J2

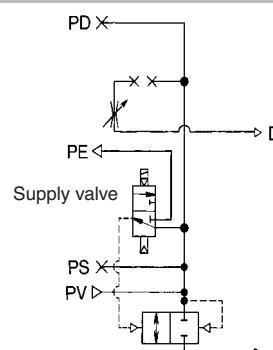


An N.O. solenoid valve is used as the supply valve. A vacuum release valve is not used.

**Application:** This combination is used for effecting control in accordance with electric signals. Because the supply valve is N.O., the pressure that is supplied to the ejector is not interrupted during a power outage; as a result, the state of suction can be maintained. This combination is used for preventing the workpieces from dropping during power outages. A vacuum release is effected by the intrusion of air between the silencer, pad, and the workpiece. This type is used when there is no need to accelerate the vacuum release speed.

#### How to Operate

Condition	Valve	Supply valve (N.O.)	Release valve
	Solenoid valve	None	
1. Work adsorption		OFF	—
2. Vacuum release		ON	—
3. Operation stop		OFF	—

## Ejector System/Construction

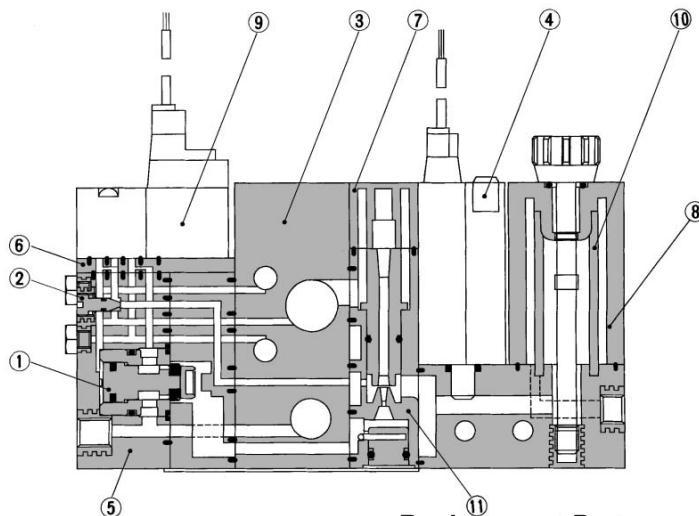

### Component Parts

No.	Description	Material	Note
①	Poppet valve assembly	—	ZX1-PV-O
②	Release flow rate adjustment needle	Stainless steel	
③	Manifold	Aluminum	
④	Vacuum switch	—	ZSE2, ZSP1
⑤	Valve unit	—	ZX1-VA□□□□□□-D-
⑥	Interface plate	—	(PV↔PS→PD)
⑦	Silencer case		
⑧ (Note)	Filter case	Polycarbonate	

### Replacement Parts

No.	Description	Material	Part no.
⑨	Pilot valve Air operated	—	Refer to "Table (1)", "(2)", "(3)".
⑩	Filter element	PVF	ZX1-FE
⑪	Ejector assembly	—	Refer to "Table (4)".

Note) Caution when handling filter case

- The case is made of polycarbonate. Therefore, do not use with or expose it to the following chemicals: paint thinner, carbon tetrachloride, chloroform, acetic ester, aniline, cyclohexane, trichloroethylene, sulfuric acid, lactic acid, watersoluble cutting oil (alkaline), etc.
- Do not expose it to direct sunlight.

Table (1) How to Order Pilot Valves

No.	Components		Model	Combination of supply and release valve
	Supply valve	Release valve		
①	Solenoid valve N.C. (VJ114)	Solenoid valve N.C. (VJ114)	ZX1-VJ114-□□□□	K1, J1
②	Solenoid valve N.O. (VJ324)	Solenoid valve N.C. (VJ314)	ZX1-VJ3 <sub>2</sub> 4-□□□□	K3, J2
③	Air operated N.O. (VJA324)	Air operated N.C. (VJA314)	ZX1-VJA3 <sub>2</sub> 4	K8
④	Air operated N.C. (ZX1A)		ZX1A-□	K6

Table (2) How to Order Solenoid Valves

<b>ZX1-VJ114</b>		5	L	Z	
<b>ZX1-VJ3</b>	2 4	5	L	Z	
Type of actuation					
1 N.C. (Normally closed)					
2 N.O. (Normally open)					
Body option					
Nil	Pilot valve Individual exhaust				
M	Common exhaust for main and pilot valves				
Note) In the case of N.C. type, indicate no symbol. (Individual exhaust for Pilot valve)					
Pilot valve					
Nil	DC: 1 W (With indicator light: 1.05 W)				
	AC				
Y*	DC: 0.45 W (With indicator light: 0.5 W)				
* 24 VDC and 12 VDC are applicable to 0.45 W.					
Note) Screw length of VJ100 and VJ300 for series ZX is different from that of the standard model.					
<Screw length> VJ100-M1.7 x 15 VJ300-M1.7 x 22					
* Applicable to plug connector					

Table (3) How to Order Air Operated Valves

**ZX1A-M3**

• Port size	
M3 M3 x 0.5	Pilot port/
M5 M5 x 0.8	External release port

Table (4) How to Order Ejector Assembly

**ZX1-W D 05 1**

Assembly no.

Ejector unit nozzle dia.

05	0.5 mm
07	0.7 mm
10	1.0 mm

Ejector type (Exhaust type)

1	With silencer
2	Port exhaust
3	Common exhaust

\* An adapter should be attached to the assembly to be used as a unit. PV port and V port can be connected.

Ejector assembly

- Combination/ ZX-WD
- Used as a unit by attaching an adapter/ ZX-W-□

### Caution

Turning the vacuum release flow volume adjustment needle clockwise reduces the vacuum release flow volume; the needle valve is fully closed when the needle stops turning. Turning the needle 2 full turns counterclockwise from the fully closed position renders the needle valve fully open. The needle will fall out if it is turned more than 4 full turns.

ZX

ZR

ZM

ZH

ZL

ZY

ZQ

ZF

ZP

ZCU

AMJ

Misc.

# Series ZX

## Ejector Unit




### Specifications

Unit no.	ZX1-W05 <sup>1</sup> <sub>2</sub>	ZX1-W07 <sup>1</sup> <sub>2</sub>	ZX1-W10 <sup>1</sup> <sub>2</sub>
Nozzle dia. $\phi$ (mm)	0.5	0.7	1.0
Max. suction flow (/min (ANR))	5	10	22
Air consumption (/min (ANR))	13	23	46
Maximum vacuum pressure		-84 kPa	
Maximum operating pressure		0.7 MPa	
Supply pressure range		0.2 to 0.55 MPa	
Standard supply pressure		0.45 MPa	
Operating temperature range		5 to 50°C	
Ejector exhaust type *	Code ① Code ②	Built-in silencer..... For single and manifold Individual exhaust..... For single and manifold	
Weight		Built-in silencer: 35 g/Port exhaust: 45 g	
Standard accessory		Bracket B	






\* Codes ① and ② are corresponding to the suffixes in "How to Order" to indicate the exhaust method.

### How to Order

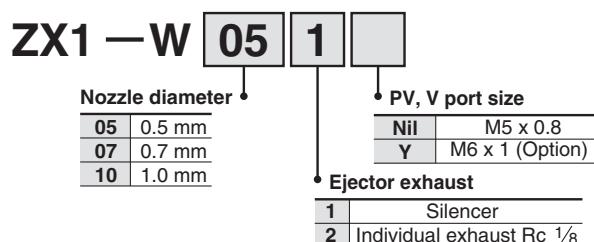

### Dimensions: ZX1-W□□<sup>1</sup><sub>2</sub>

#### JIS Symbol

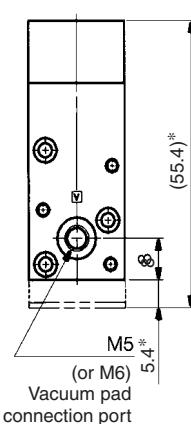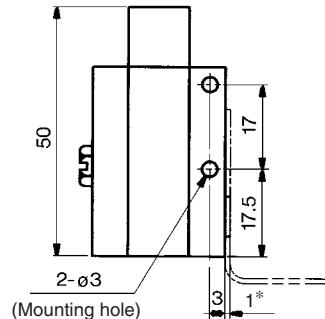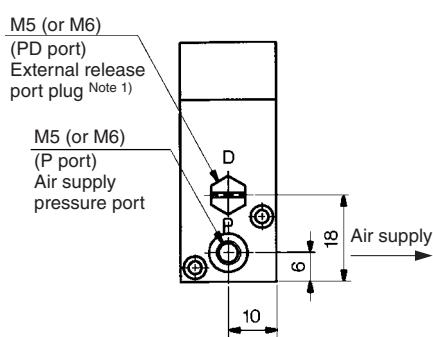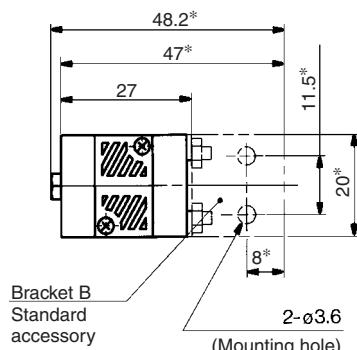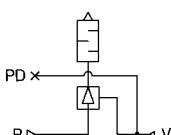

Note 1) Remove the plug at external release. Note 2) Dimensions \*: For mounting bracket B.


## Flow Characteristics/Exhaust Characteristics

ZX1-W05


[At 0.45 MPa]

How to Read Flow Characteristics Graph

### Exhaust Characteristics

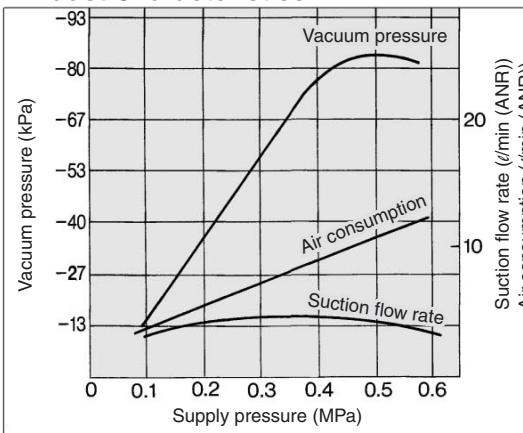


### Flow Characteristics

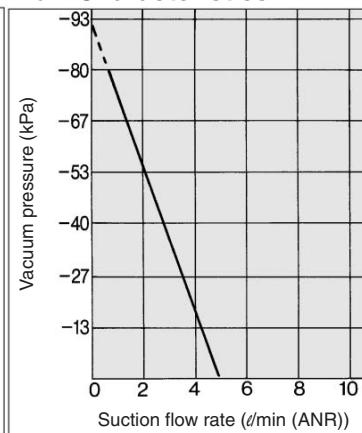


ZX1-W07

### Exhaust Characteristics

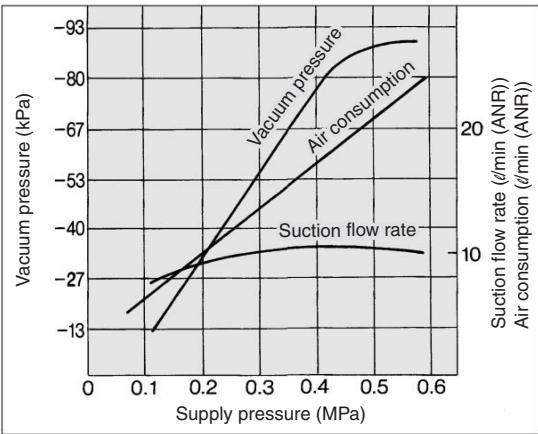


### Flow Characteristics


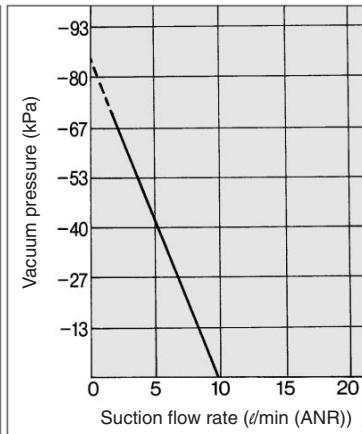


ZX1-W10

### Exhaust Characteristics

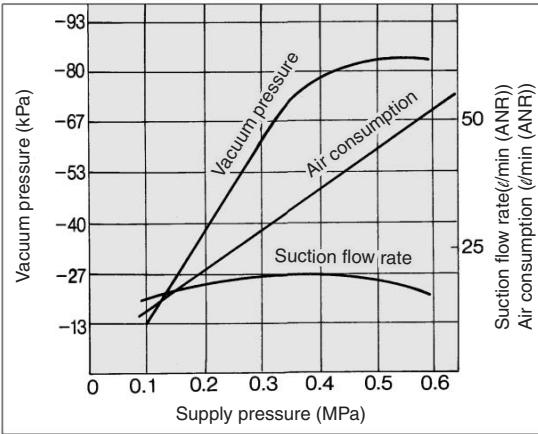

### Flow Characteristics

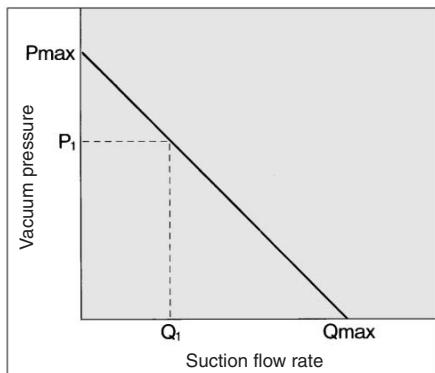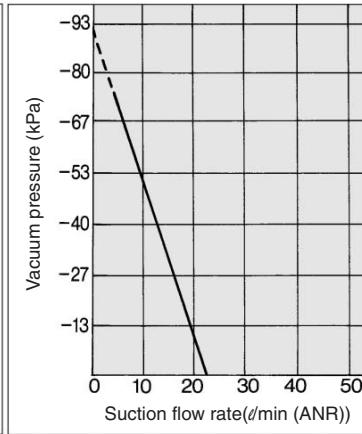

Flow characteristics are expressed in ejector vacuum pressure and suction flow. If suction flow rate changes, a change in vacuum pressure will also be expressed. Normally this relationship is expressed in ejector standard use.

In graph,  $P_{max}$  is max. vacuum pressure and  $Q_{max}$  is max. suction flow. The valves are specified according to catalog use. Changes in vacuum pressure are expressed in the below order.

1. When ejector suction port is covered and made airtight, suction flow becomes 0 and vacuum pressure is at maximum value ( $P_{max}$ ).
2. When suction port is opened gradually, air can flow through, (air leakage), suction flow increases, but vacuum pressure decreases. (condition  $P_1$  and  $Q_1$ )
3. When suction port is opened further, suction flow moves to maximum value ( $Q_{max}$ ), but vacuum pressure is near 0. (atmospheric pressure).

When vacuum port (vacuum piping) has no leakage, vacuum pressure becomes maximum, and vacuum pressure decreases as leakage increases. When leakage value is the same as max. suction flow, vacuum pressure is near 0.

When ventilative or leaky work must be adsorbed, please note that vacuum pressure will not be high.

## ⚠ Precautions

Be sure to read before handling.  
Refer to pages 13-15-3 to 13-15-4  
for Safety Instructions and  
Common Precautions on the  
products mentioned this  
catalog, and refer to page 13-1-5.


## ⚠ Caution

Refer to 13-1-10 to 13-1-19 for the product selection in series ZX and the sizing program.

**ZX**  
**ZR**  
**ZM**  
**ZH**  
**ZU**  
**ZL**  
**ZY**  
**ZQ**  
**ZF**  
**ZP**  
**ZCU**  
**AMJ**  
**Misc.**

# Series ZX

## Valve Unit: ZX1-VA

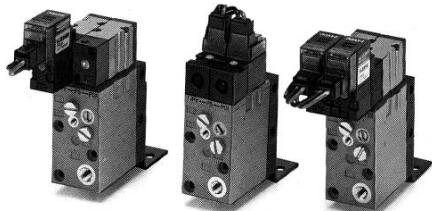

### Specifications

Unit no.	ZX1-VA□□□□□						
Components	Vacuum supply valve				Vacuum release valve		
Operation	Pilot operated				Direct operated		
	Solenoid valve	Air operated	Solenoid valve	External	N.O.	N.C.	Air operated
	N.C. (VJ314)	N.C. (VJ114)	N.O. (VJA324)	N.C. (ZX1A)	(VJA324)	(VJ114)	(ZX1A) (VJA314)
Effective area (mm <sup>2</sup> ) (Cv factor)	3 (0.17) Main valve				0.07 (0.004)	0.45 (0.025)	—
Operating pressure range	0.3 to 0.6 MPa						
Max.operating frequency	5 Hz						
Operating temperature range	5 to 50°C						
Interface plate symbol	PV↔PS↔PD						
Standard accessory	Bracket C						

### Solenoid Valve/Specifications

	VJ114	VJ314, VJ324
Rated voltage	24, 12, 6, 5, 3 VDC/100, 110 VAC* (50/60 Hz)	
Electrical entry	L plug connector, grommet	L plug connector, M plug connector, grommet
Light/Surge voltage suppressor	With or Without	
Manual operation	Non-locking push type/Locking slotted type	

\* Applicable to plug connector; connector assembly with rectifier is attached.


### Model/Solenoid Valve

Model		Supply valve			
		Solenoid valve N.C. (VJ114)	Solenoid valve N.O. (VJ324)	Air operated N.C. (ZX1A)	None
Release valve	Solenoid valve N.C. (VJ114)	● K1 [82]	—	● K5 [73]	● D1 [77]
	Solenoid valve N.C. (VJ314)	—	● K3 [132]	—	● D2 [100]
	External release (ZX1A)	● K2 [73]	—	● K6 [58]	● D3 [41]
	Air operated N.C. (VJA314)	—	● K4 [119]	—	● D2 [100]
	None	● J1 [77]	● J2 [100]	● J3 [41]	—

[ ]: Weight (g)

### How to Order

Refer to page 13-2-4 for details.

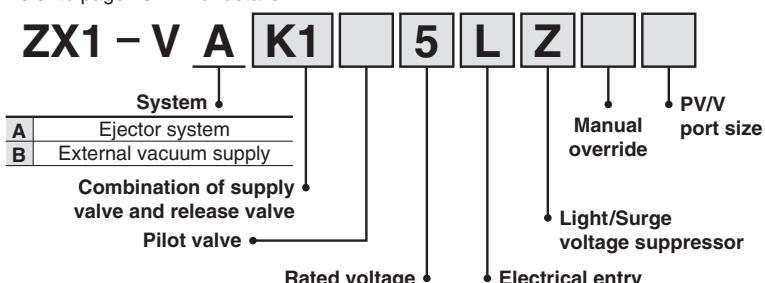

ZX  
ZR  
ZM  
ZH  
ZU  
ZL  
ZY  
ZQ  
ZF  
ZP  
ZCU  
AMJ  
Misc.

### Connector Assembly for 100 VAC

Connector assembly with rectifier attached.

### Connector Assembly with Rectifier Part No.


**VJ10—36—A**

Rated voltage

Symbol	Rated voltage	Lead wire color
1	100 VAC 50/60 Hz	Blue (2 pcs.)
3	110 VAC 50/60 Hz (115 VAC 60 Hz)	Gray (2 pcs.)





Lead wire length

Symbol	L (mm)
Nil	300
6	600
10	1000
15	1500
20	2000
25	2500
30	3000

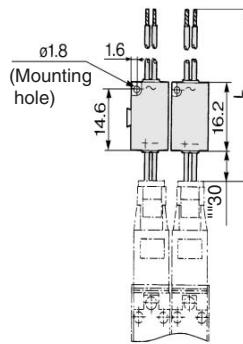




### Valve Unit

Normally closed

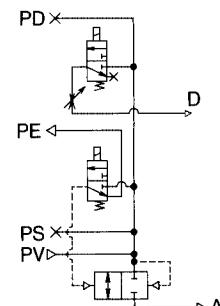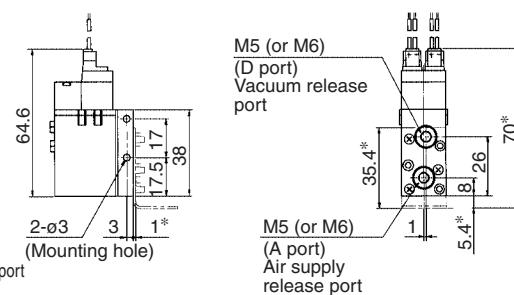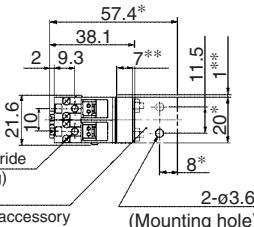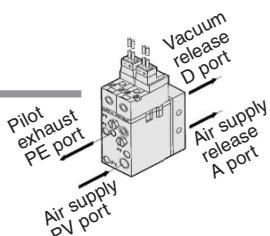

Circuit diagram

Normally open

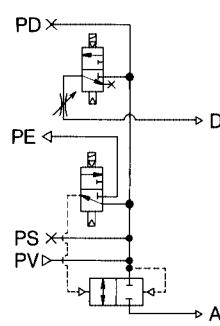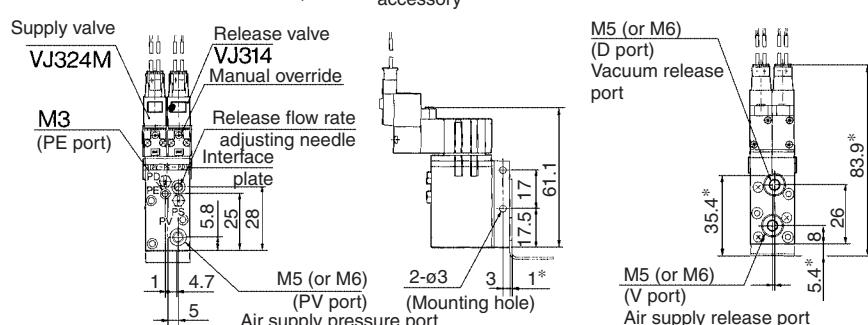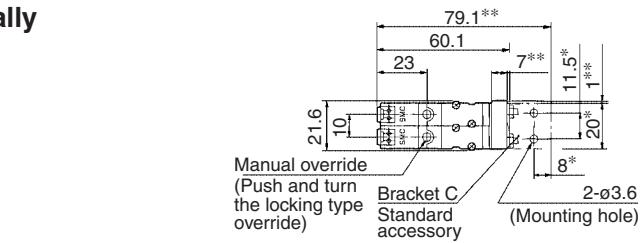

Circuit diagram



Note) Dimensions \*: For mounting bracket C \*\*: For mounting spacer.

# Series ZX

## Suction Filter Unit: ZX1-F





### Specifications

Unit no.	ZX1-F
Operating pressure range	Vacuum to 0.5 MPa
Operating temperature range	5 to 50°C
Filtration efficiency	30 µm
Element	PVF
Weight	35 g

Note) If not operated within the specified range of pressure and temperature, trouble may result.

## Filter

### JIS Symbol

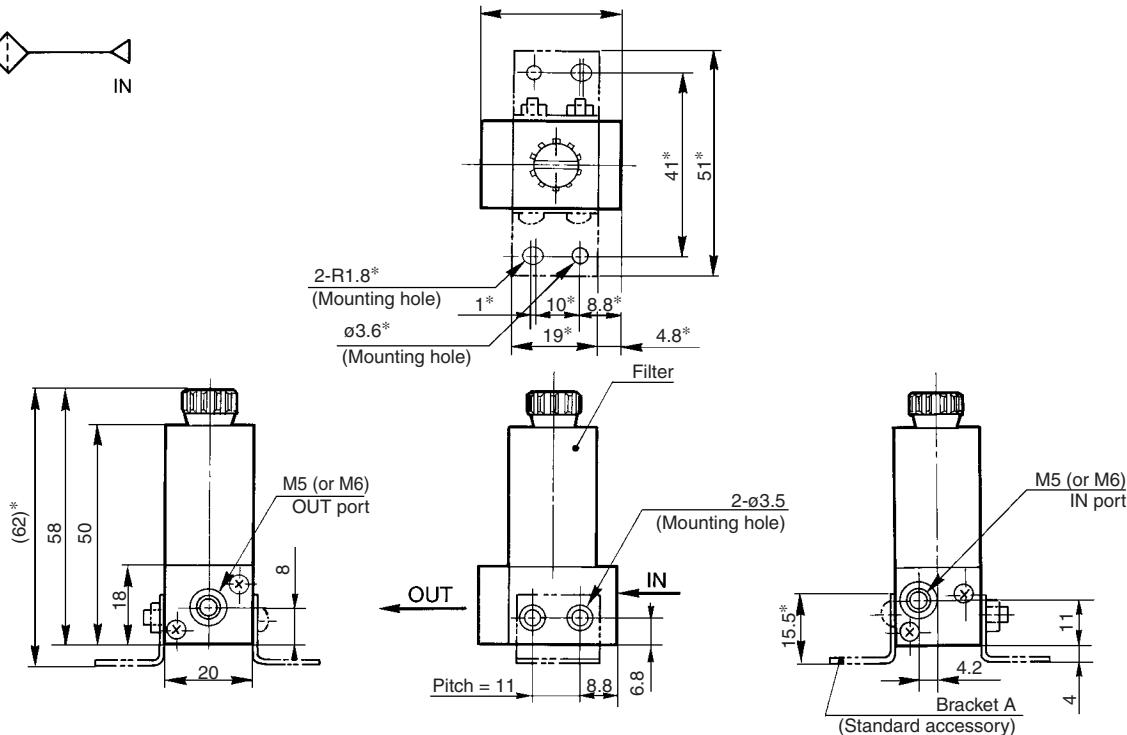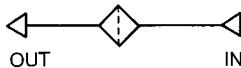

Note) Dimensions \*: For A mounting bracket.

### • Filter case

#### ⚠ Caution

1. The case is made of polycarbonate. Therefore, do not use it with or expose it to the following chemicals: paint thinner, carbon tetrachloride, chloroform, acetic ester, aniline, cyclohexane, trichloroethylene, sulfuric acid, lactic acid, water-soluble cutting oil (alkaline), etc.
2. Do not expose it to direct sunlight.

## Vacuum Pressure Switch Unit/Vacuum Pressure Switch: ZSE2-0X



**Quick response: 10 ms**

**Compact size: 39H x 20W x 15D  
(except the connecting portion)**

**Improved wiring: connector type**

**Uses a carrier diffusion semiconductor pressure sensor**

**Pressure detector**  
(A carrier diffusion semiconductor pressure sensor is used.)

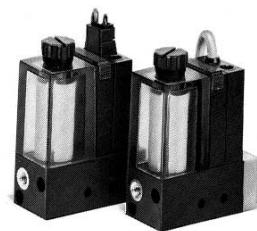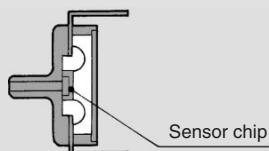

• **Filter case**

**⚠ Caution**

1. The case is made of polycarbonate. Therefore, do not use it with or expose it to the following chemicals: paint thinner, carbon tetrachloride, chloroform, acetic ester, aniline, cyclohexane, trichloroethylene, sulfuric acid, lactic acid, water-soluble cutting oil (alkaline), etc.

2. Do not expose it to direct sunlight.

• **Vacuum pressure setting**

**⚠ Caution**

Observe the following precautions when setting the vacuum pressure.

Lightly turn the screwdriver with your fingertips.

To prevent damage to the trimmer groove, do not use a screwdriver that has a large grip or a tip that does not fit in the trimmer groove.

### Vacuum Pressure Switch

Unit no.	ZSE2-0X
Fluid	Air
Set pressure range	0 to -101 kPa
Hysteresis	3% Full span or less
Accuracy	±3% Full span (5 to 40°C) ±5% Full span (0 to 60°C)
Voltage	12 to 24 VDC (Ripple ±10% or less)
Port size	M5 x 0.8


- Weight — 50 g • Output — Open collector 30 V/80 mA • Indicator light — Light at ON state
- Current consumption — 17 mA or less (24 VDC, at ON state)

- Operating temperature range — 0 to 60°C • Max. operating pressure — 0.2 MPa


\* When using ejector system, instantaneous pressure up to 0.5 MPa will not damage the switch.  
(Note) If not operated within the specified range of pressure or temperature, trouble may be result.

### Wiring

#### ZSE2 connection

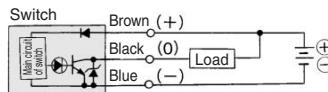

#### Connection with PLC at negative COM terminal

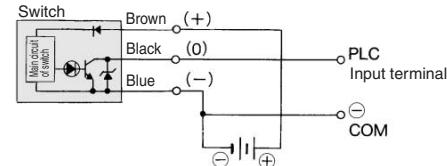

### How to Order

ZSE2 — 0X — 15

PV, V port size

Nil	M5 x 0.8
Y	M6 x 1 (Option)


Piping specifications

Nil	Grommet (0.6 m)
L	Grommet (3 m)
C	Connector (0.6 m)
CL	Connector (3 m)
CN	Without connector


### How to Set Vacuum Pressure

#### ZSE2

- Pressure setting trimmer selects the ON pressure. Clockwise rotation increases high vacuum set point.

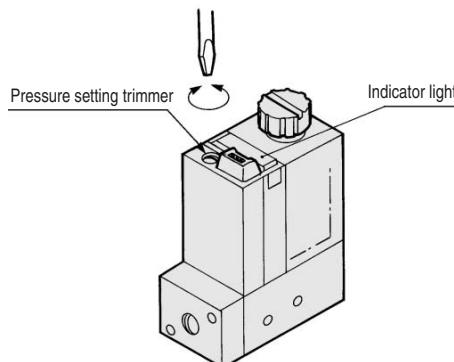

- When using the switch to confirm correct adsorption, the set pressure should be as low as possible. But not so low that a false confirmation signal is given when adsorption is incomplete.

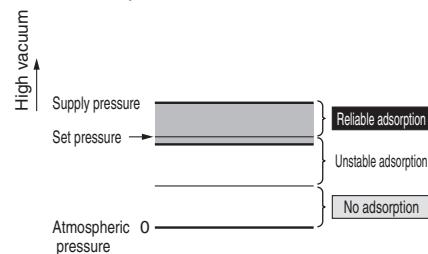

ZX  
ZR  
ZM  
ZH  
ZU  
ZL  
ZY  
ZQ  
ZF  
ZP  
ZCU  
AMJ  
Misc.


# Series ZX

## Vacuum Pressure Switch Unit/Vacuum Pressure Switch: ZSE2-0X


### Guidelines for Use of Vacuum Pressure Switch Unit

#### System circuit for work adsorption

Ejector style

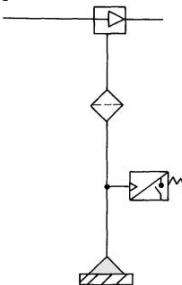

External vacuum supply style

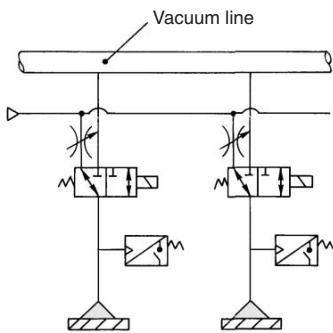


#### Set pressure

To use for picking verification, set a vacuum pressure that can pick the workpiece without fail. In some situations, the switch could turn ON even if the picking is not complete.

#### Using a small diameter picking nozzle

A nozzle that is used for picking electronic parts or small precision parts could be even smaller than  $\varnothing 2$ . If the nozzle diameter is approximately  $\varnothing 1$ , the pressure difference between ON and OFF becomes smaller, depending on the capacity of the ejector or the vacuum pump. In such a case, it is necessary to use the **picking verification switch ZSP1**, which provides a small hysteresis and high precision. On the other hand, an ejector with a large picking capacity will not be able to detect properly, so an ejector with an appropriate capacity must be used. Furthermore, it is necessary to stabilize the pressure of the ejector and the vacuum pump.


#### External vacuum supply system

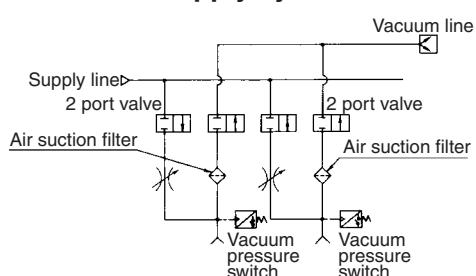

#### Using multiple pressure switches with a single vacuum source

If a single vacuum source is divided so that vacuum switches can be used on individual lines, the vacuum pressure might not come within the values set with the switches because the pressure of the vacuum source fluctuates depending on the number of picks and non-picks.




Especially, because pressure fluctuation exerts a great influence when picking with a small diameter nozzle, the countermeasures described below must be provided.

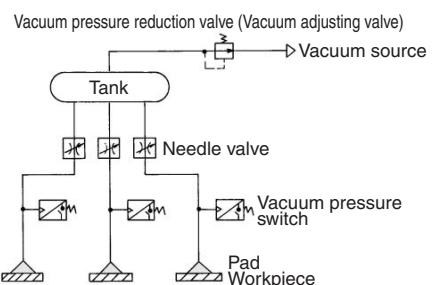

- Adjust the needle valve to reduce the pressure fluctuation between picking and non-picking.
- Stabilize the source pressure by providing a tank and a vacuum regulator.
- Provide a vacuum switch valve to individual lines. Thus, in case of an error, each valve can be turned OFF to minimize the influences on other pads.



### Vacuum Pressure Switch: ZSE2-0X-15

JIS Symbol

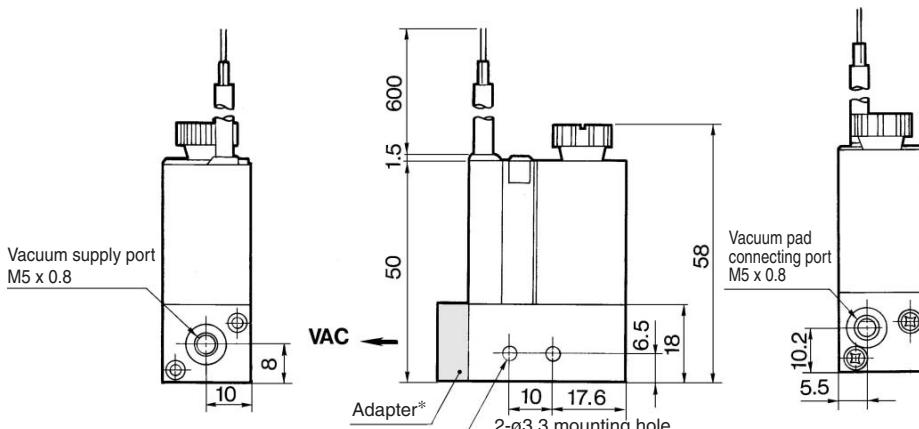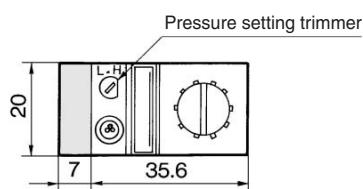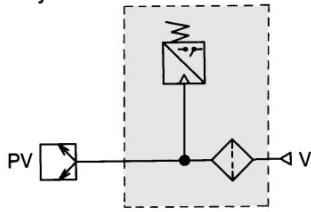

\* Remove the adapter when mounted on the ejector.

### Connector: ZSE2-0X-15C

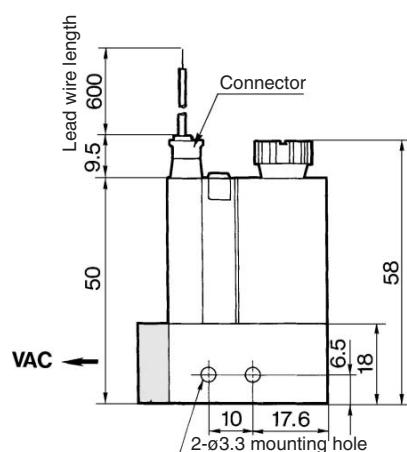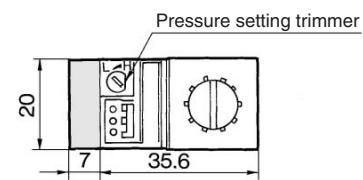

## Vacuum Pressure Switch Unit/Vacuum Pressure Switch: ZSE3-0X

### Built-in failure prediction output function


If the attainable amount of vacuum reduces due to a decrease in performance caused by clogging of the silencer of the vacuum system (ejectors), cracked pads, or the leakage of the vacuum pipes, this function quickly detects the abnormal condition and outputs a signal to halt the system.

### Two independent pressure settings possible

This feature is well suited for applications that require 2 separate pressure outputs due to a change in the vacuum suction pad diameters, or for applications that require 2 pressure verifications to effect line changes in the positive pressure line.

### Comprehensive self diagnosis function

- Overcurrent detection function
- Overvoltage detection function
- Data error

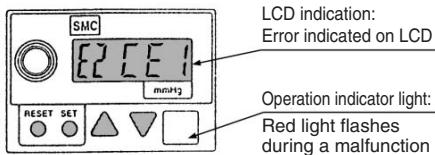

### Data saving function

Even if the power is cut off, the settings are stored for 100,000 hours (approximately 11 years) in the exclusive IC (EEPROM).

### • Filter case

### ⚠ Caution


1. The case is made of polycarbonate. Therefore, do not use it with or expose it to the following chemicals: paint thinner, carbon tetrachloride, chloroform, acetic ester, aniline, cyclohexane, trichloroethylene, sulfuric acid, lactic acid, water-soluble cutting oil (alkaline), etc.
2. Do not expose it to direct sunlight.

### Vacuum Pressure Switch

Unit no.	ZSE3-0X	
Fluid	Air, Non corrosive gas	
Set pressure range	-101 to 0 kPa	
Hysteresis	Hysteresis mode	Variable (3 digits or more)
	Window comparator mode	Fixed (3 digits)
Accuracy	±1% F.S. or less	
Operating voltage	12 to 24 VDC (Ripple ±10% or less)	
Port size	M5 x 0.8	

- Weight — 50 g
- Indicator light — Light at ON state
- Current consumption — 25 mA or less
- Operating temperature range — 0 to 60°C
- Max. operating pressure — 0.2 MPa

### Wiring

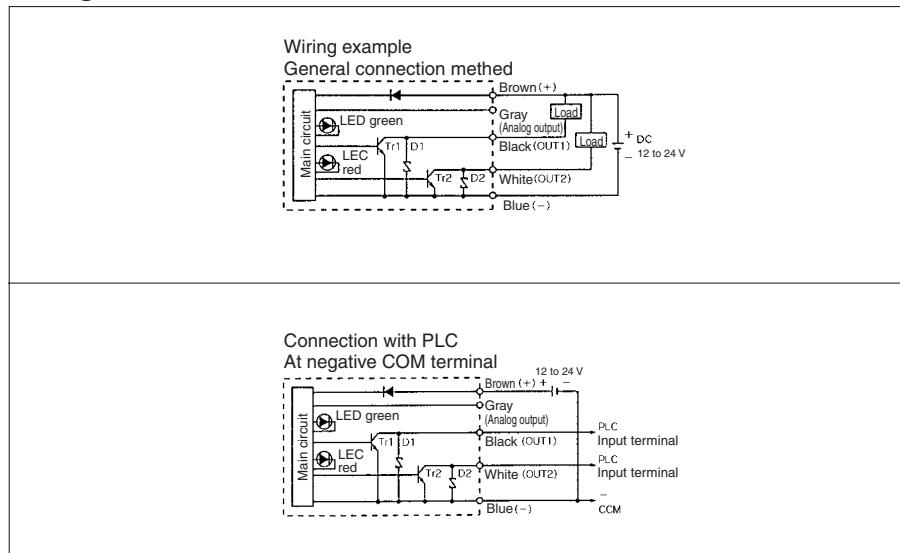

### How to Order

ZSE3 — 0X — **21** —

#### • Wiring specifications

Nil	Grommet (0.6 m)
L	Grommet (3 m)
C	Connector (0.6 m)
CL	Connector (3 m)
CN	Without connector

Note) Analog output is available only for grommet type.

### How to Set Vacuum Pressure

Refer to "Best Pneumatics Vol.16".

### Guidelines for Use of Vacuum Pressure Switch Unit

Refer to page 13-2-14.


**ZX**  
**ZR**  
**ZM**  
**ZH**  
**ZU**  
**ZL**  
**ZY**  
**ZQ**  
**ZF**  
**ZP**  
**ZCU**  
**AMJ**  
**Misc.**

# Series ZX


## Vacuum Pressure Switch Unit/Vacuum Pressure Switch: ZSE3-0X

### Vacuum Pressure Switch/ZSE3-0X-21, 22, 23, 24

Grommet: ZSE3-0X-□

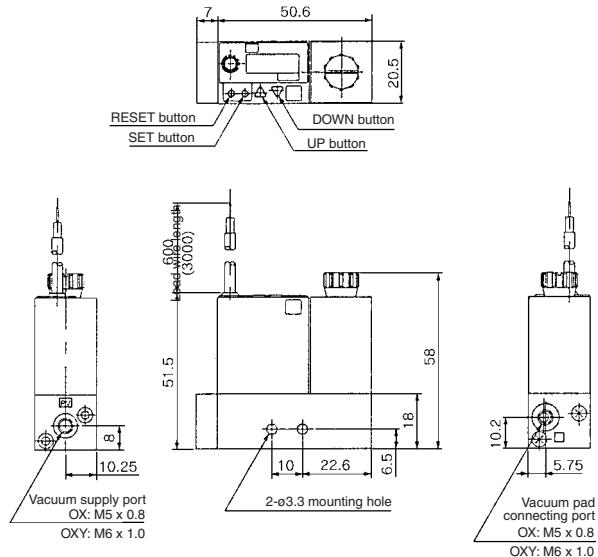


Connector: ZSE3-0X-□C

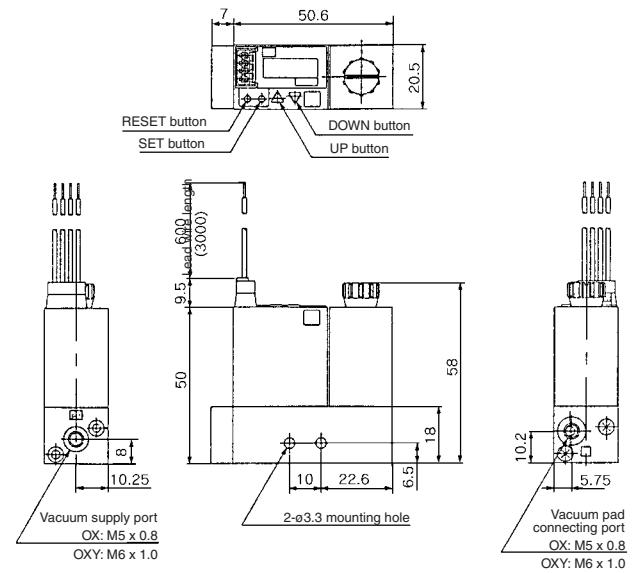

## Vacuum Pressure Switch Unit/Adsorption Confirmation Switch: ZSP1-S<sub>B</sub>

**Small diameter nozzle/ø0.3 to ø1.2**

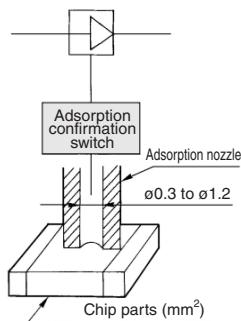

**With suction filter**

**Improved wiring: connector type**

**Uses a carrier diffusion semiconductor pressure sensor**



• Filter case

### ⚠ Caution

1. The case is made of polycarbonate. Therefore, do not use it with or expose it to the following chemicals: paint thinner, carbon tetrachloride, chloroform, acetic ester, aniline, cyclohexane, trichloroethylene, sulfuric acid, lactic acid, water-soluble cutting oil (alkaline), etc.

2. Do not expose it to direct sunlight.

• Other caution

### ⚠ Caution

It might not be possible to successfully pick a workpiece if a picking nozzle or a picking pad that is out of the applicable range is used.

### Adsorption Confirmation Switch Specifications

Unit no.	ZSP1-S	ZSP1-B
Fluid	Air	
Operating pressure range	-20 kPa to 101 kPa	
Applicable adsorption nozzle dia.	ø0.3 to ø0.7 (Refer to Graph (1).)	ø0.5 to ø1.2 (Refer to Graph (2).)
Hysteresis	0.5 kPa	
Internal orifice	ø0.5	ø0.8


- Weight—62 g • Voltage—12 to 24 VDC (Ripple ±10% or less) • Output—Open collector 30 V/80 mA
- Indicator light—Light at ON state • Current consumption—17 mA (24 VDC, at ON state)
- Operating temperature range—0 to 60°C • Port size—M5 x 0.8

Note) If not operated within the specified range of pressure and temperature, trouble may result.


### Applicable Adsorption Nozzle

Supply pressure and nozzle diameter are expressed in the graphs below.


#### Graph (1)/ZSP1-S

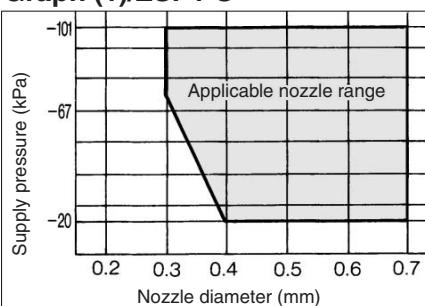

#### Graph (2)/ZSP1-B

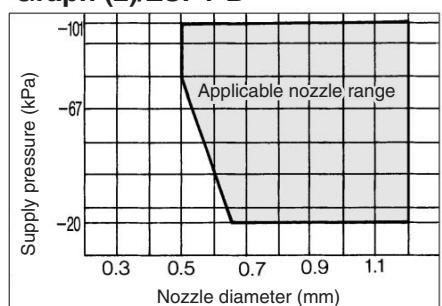

### Pneumatic Circuit and Principle

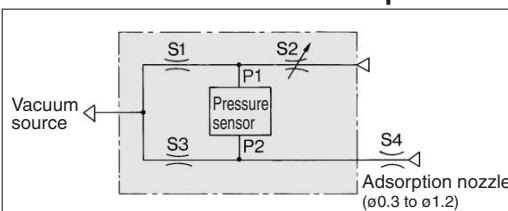

Comprised of a pneumatically operated bridge circuit, this function puts the S4 picking nozzle into the non-picking state, and uses the S2 adjustment needle to balance ( $P_1 \approx P_2$ ) the pressure that is applied to the pressure sensor. The small pressure difference ( $P_2 - P_1$ ) that is created when a part is picked by the (S4) picking nozzle and is detected by the pressure sensor.

\* Wiring is the same as ZSE2.

### How to Order

**ZSP1 — S 0X — 15**

Model

Symbol	Applicable model
<b>S</b>	Applicable nozzle dia. ø0.3 to ø0.7
<b>B</b>	Applicable nozzle dia. ø0.5 to ø1.2


PV, V port size

Nil	M5 x 0.8
Y	M6 x 1 (Option)

→ Piping specifications

Nil	Grommet (0.6 m)
L	Grommet (3 m)
C	Connector (0.6 m)
CL	Connector (3 m)

### Circuit and Wiring

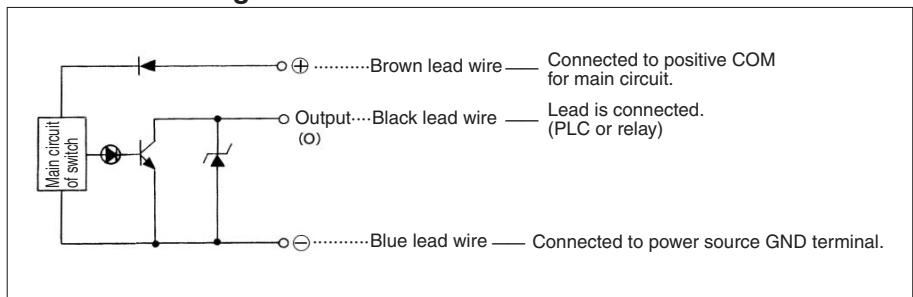


# Series ZX

## Vacuum Pressure Switch Unit/Absorption Confirmation Switch: ZSP1-S<sub>B</sub>


### Hysteresis

Hysteresis is the difference in pressure when the output signal is ON and OFF. The pressure to be set is the ON pressure.

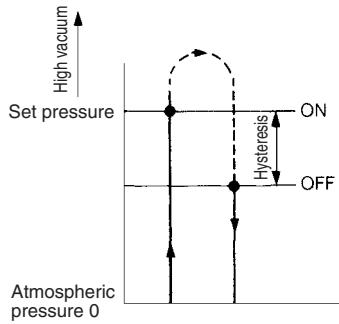


### How to Set Adsorption Confirmation Needle

1. Apply a vacuum and current. Turn the adjusting needle clockwise until it stops, thus fully closing the needle valve.
2. Without attaching a workpiece to the picking nozzle, turn the adjusting needle counterclockwise and verify the position in which the indicator light turns ON.
3. From the state described in step w, turn back the adjusting needle clockwise 1/4 turn to 1 full turn.




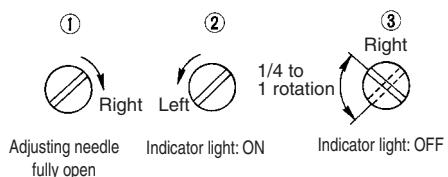


4. Pick a workpiece with the nozzle and readjust the adjusting needle so that the indicator light turns ON when the nozzle has picked the workpiece successfully.

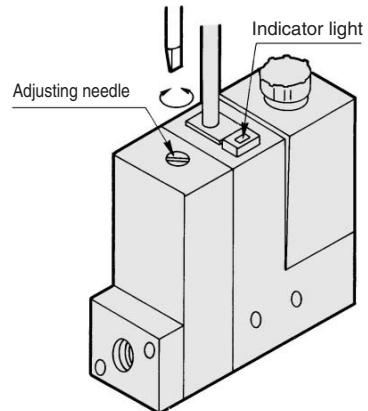

## Absorption Confirmation Switch: ZSP1-□0X-15

### Connector: ZSP1-□0X-15

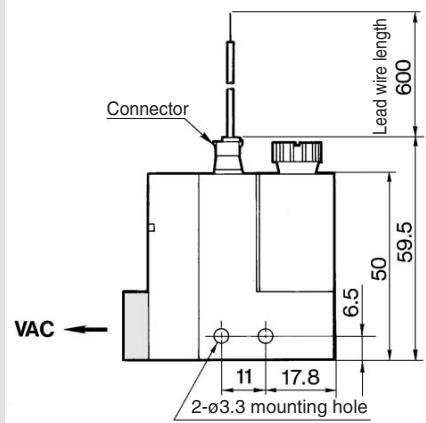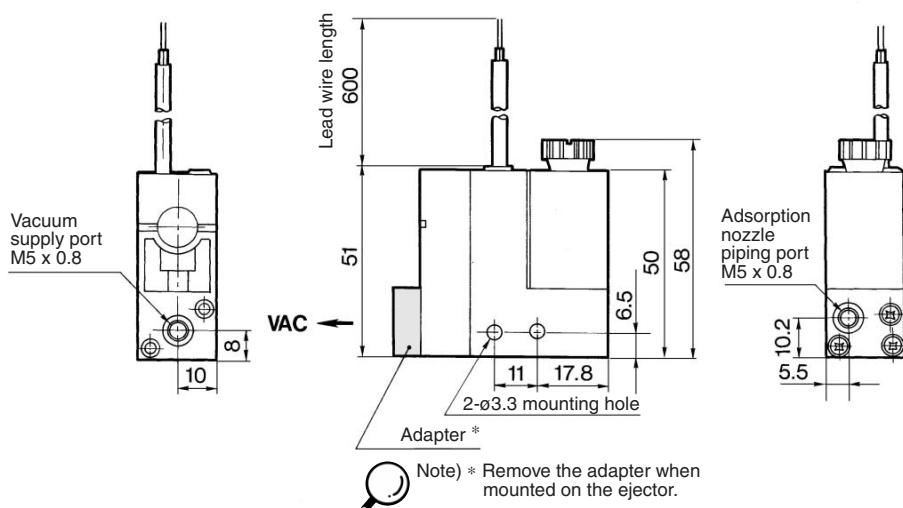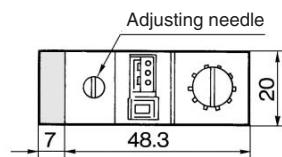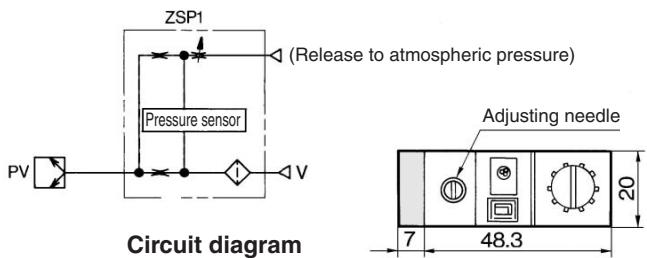

## Without Valve Unit

Configuration and combination


**Ejector unit**

+ **Vacuum switch (ZSE2)**  
+ **Adsorption confirmation switch (ZSP1)**  
**Filter unit (F)**



**Model**

**ZX1□□□**



### Vacuum switch (ZSE2) ZX1□□□-E□

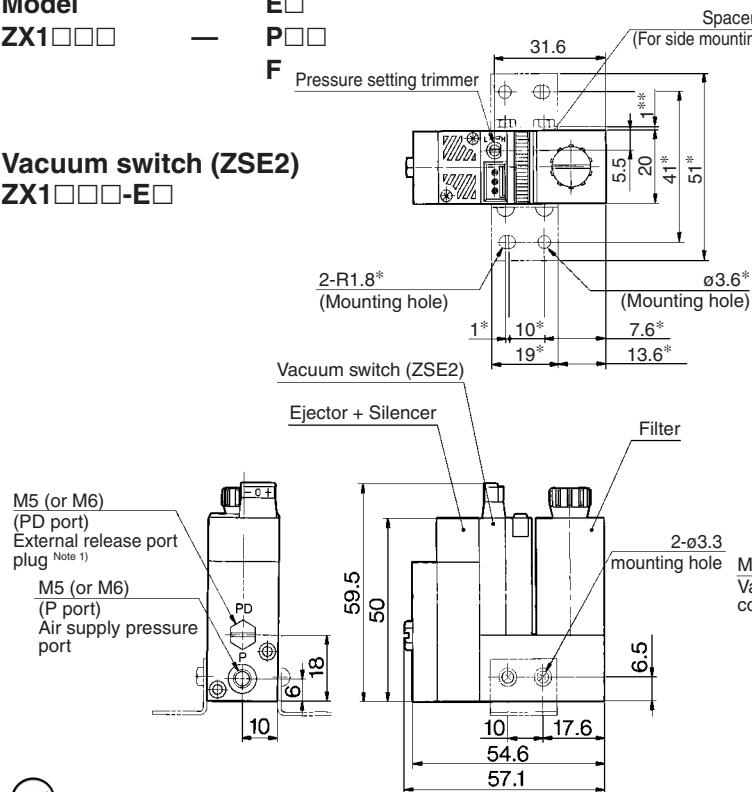

**Adsorption confirmation switch (ZSP1)**  
**ZX1□□□-P□□**


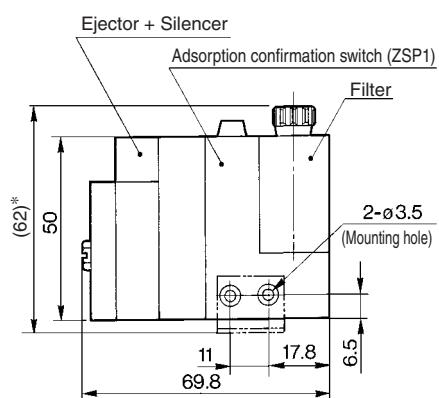
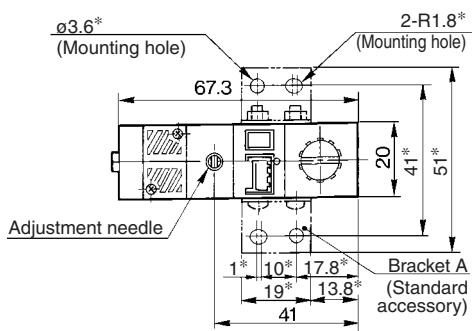


**Filter unit (F)**  
**ZX1□□□-F**

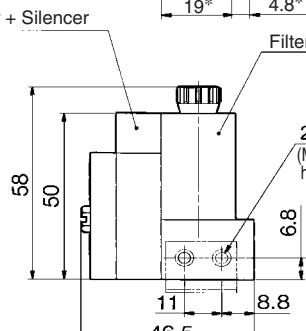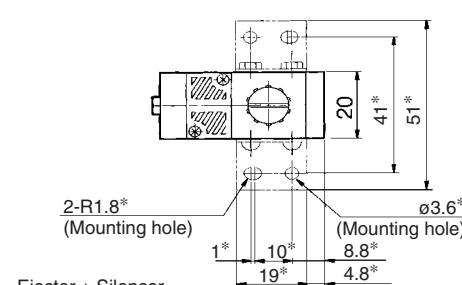

### Circuit diagram

(Circuits other than those with vacuum switch are shown as below.)

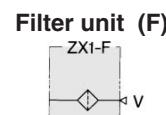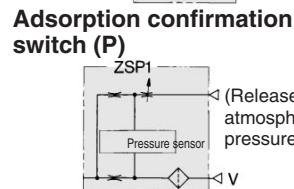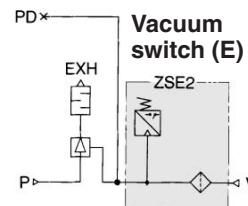


**ZX**  
**ZR**  
**ZM**  
**ZH**  
**ZU**  
**ZL**  
**ZY**  
**ZQ**  
**ZF**  
**ZP**  
**ZCU**  
**AMJ**

**Misc.**

# **Series ZX**

## **Valve Unit: Type K1**

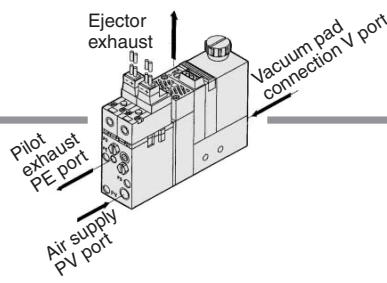

## Configuration and combination

Ejector unit + Valve unit (K1) + Adsorption confirmation switch

## Filter unit (F)


Without switch

**Without switch and filter**


**Model** D□  
**ZX1□□□□** — **K1□□□□** — P□□  
F□  
Nil

## Vacuum switch (ZSE2)


**ZX1□□□-K1□□□□-E□**

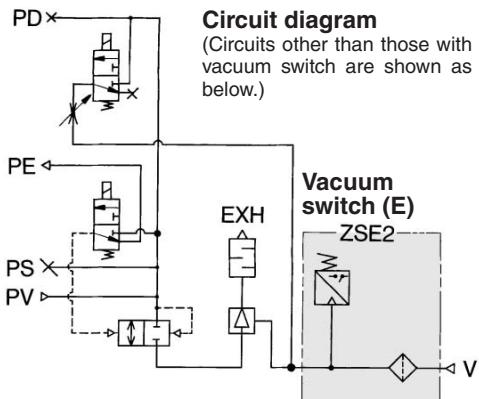


### **Adsorption confirmation switch (P)**

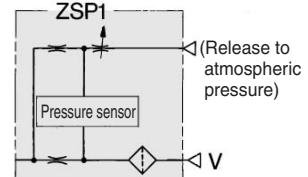

## Filter unit (F)

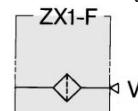


## Without switch and filter

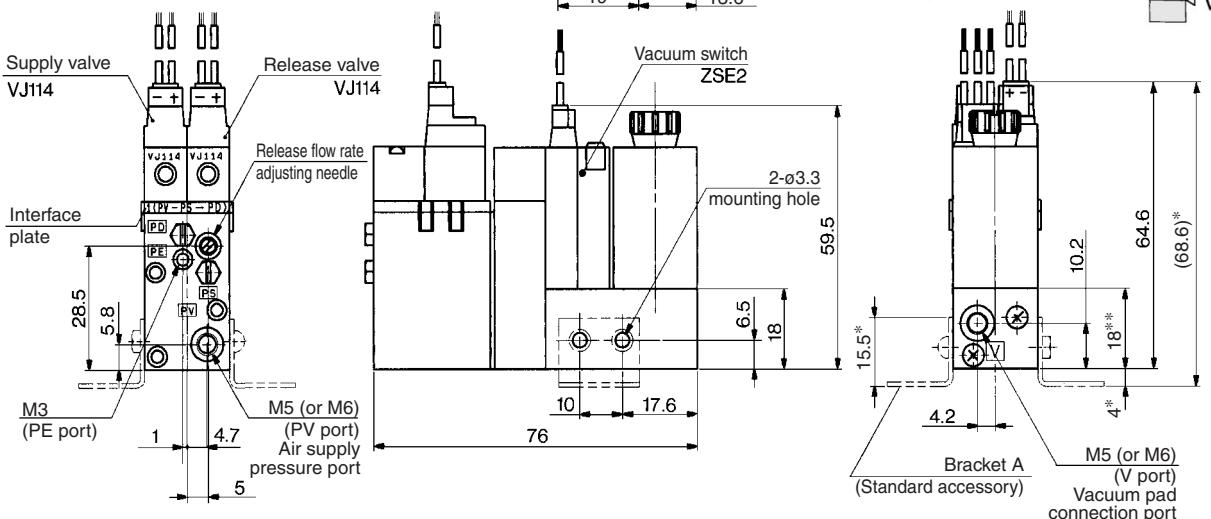


Note) Dimensions \*: For mounting bracket A \*\*: For mounting spacer 1.


**Vacuum switch (ZSE3)**  
**ZX1□□□-K1□□□-D□**

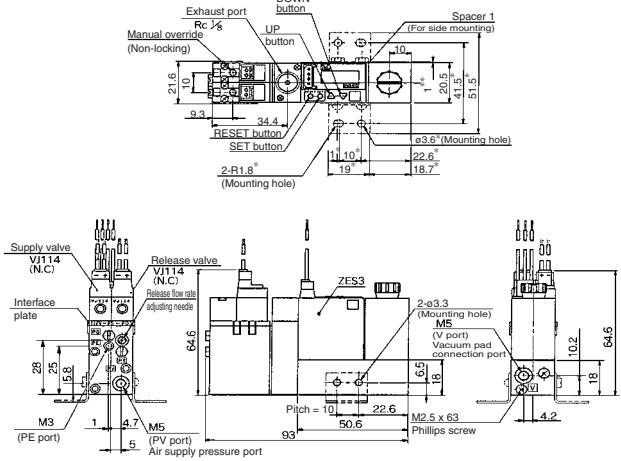


**Adsorption confirmation switch (ZSP1)**  
**ZX1□□□-K1□□□-P□□**

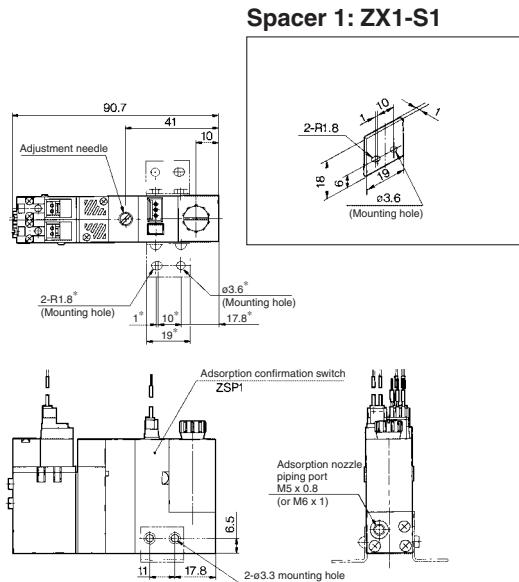

**Filter unit**  
**ZX1□□□-K1□□□-F**

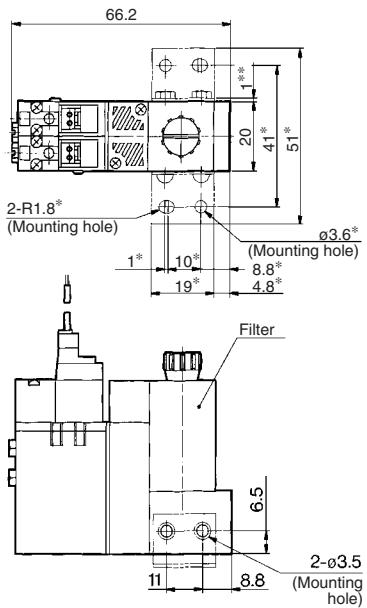

**Without switch and filter**  
**ZX1□□□-K1□□□**

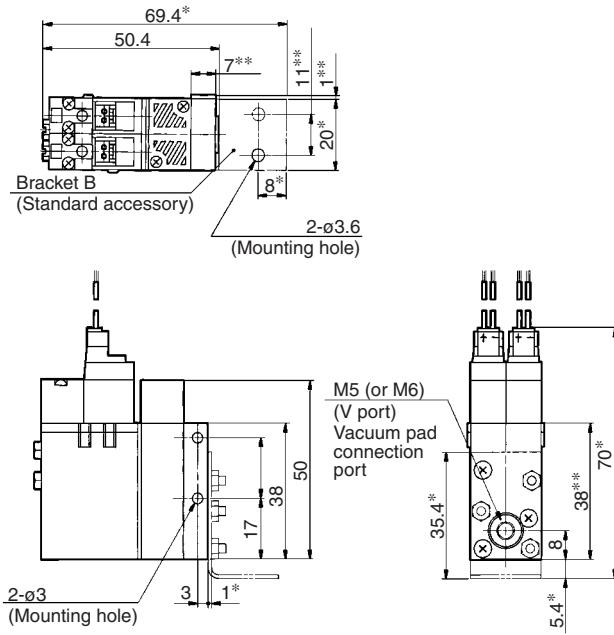

**ZX**  
**ZR**  
**ZM**  
**ZH**  
**ZU**  
**ZL**  
**ZY**  
**ZQ**  
**ZF**  
**ZP**  
**ZCU**  
**AMJ**

**Misc.**

# Series ZX

## Valve Unit: Type K3

Configuration and combination  
Ejector unit + Valve unit (K3) +



Vacuum switch (ZSE2)

Adsorption confirmation switch (ZSP1)


Filter unit (F)

Without switch and filter


**Model**  
ZX1□□□ — K3□□□□ —  
**E**□  
**P**□□  
**F**  
Nil

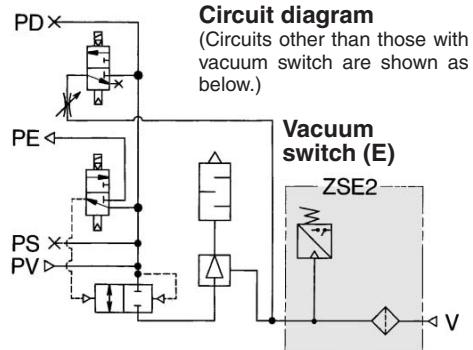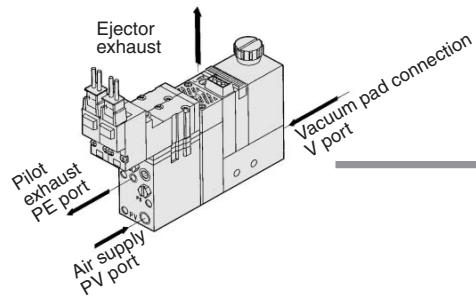


**Vacuum switch (ZSE2)**  
ZX1□□□-K3□□□-E□

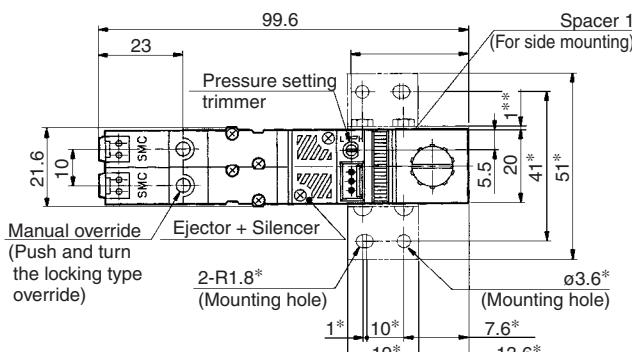



**Adsorption confirmation switch (P)**

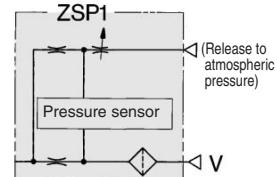

**Filter unit (F)**

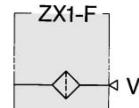


**Without switch and filter**

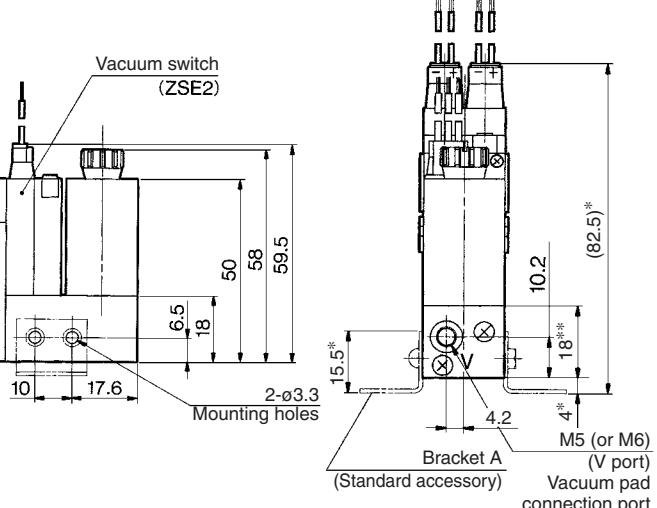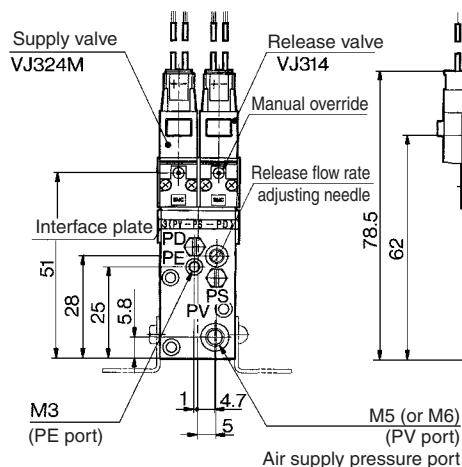


Note) Dimensions \*: For mounting bracket A \*\*: For mounting spacer 1.

## **Adsorption confirmation switch (ZSP1) ZX1□□□-K3□□□□-P□□**

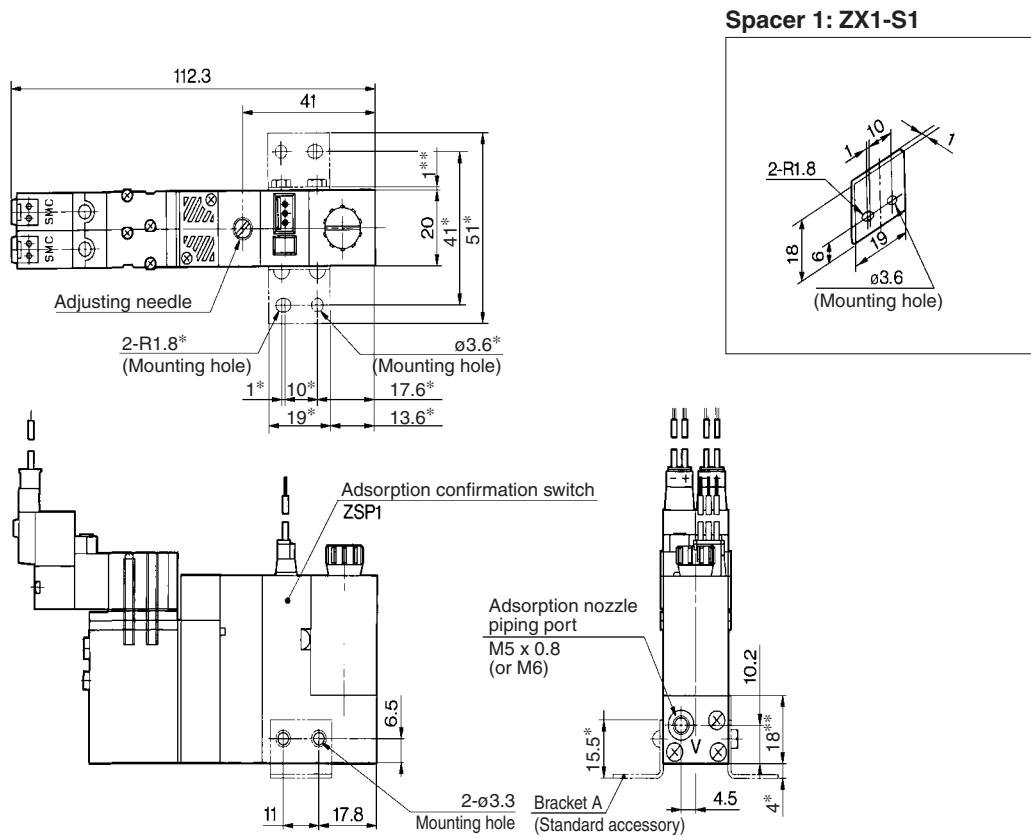


**ZX**  
**ZR**  
**ZM**  
**ZH**  
**ZU**  
**ZL**  
**ZY**  
**ZQ**  
**ZF**  
**ZP**  
**ZCU**  
**AMJ**  
**MJ**

## **Filter unit (F) ZX□□□-K3□□□□-F**

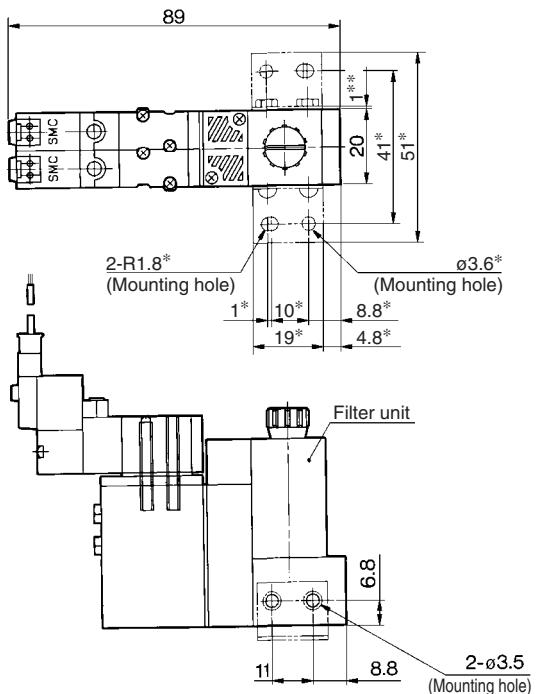

## **Without switch and filter**

**ZX1□□□-K3□□□□**

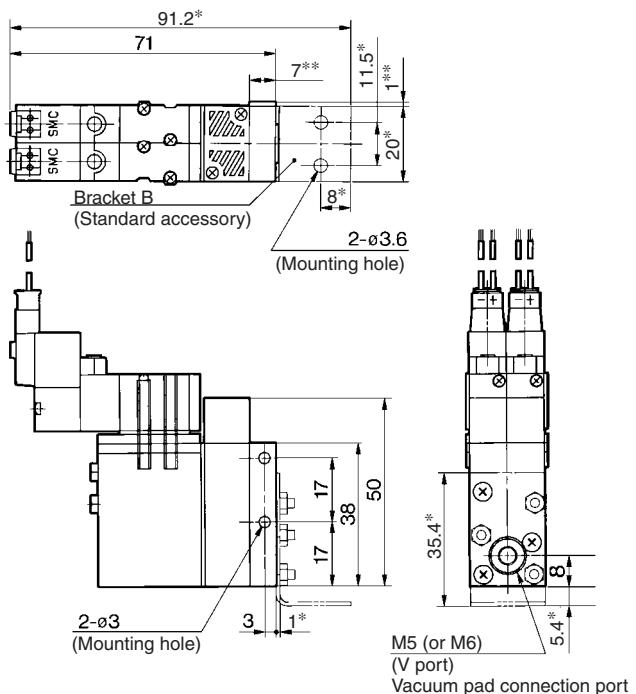

# Series ZX

## Valve Unit: Type K6

Configuration and combination  
**Ejector unit + Valve unit (K6) +**



**Vacuum switch (ZSE2)**

**Adsorption confirmation switch (ZSP1)**

**Filter unit (F)**


**Without switch and filter**

Model  
**ZX1□□□ — K6 —**  
**E□**  
**P□□**  
**F**  
**Nil**

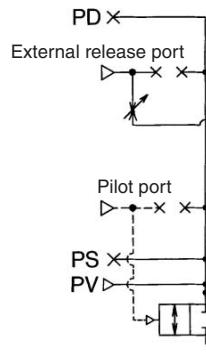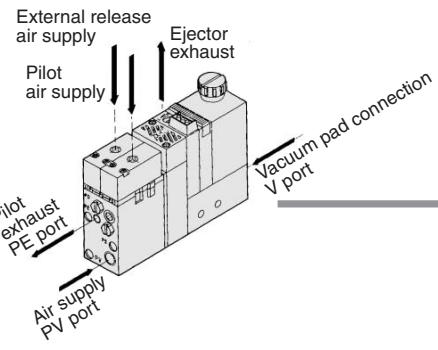


**Circuit diagram**  
(Circuits other than those with vacuum switch are shown as below.)

**Vacuum switch (ZSE2)**  
**ZX1□□□ - K6- E□**


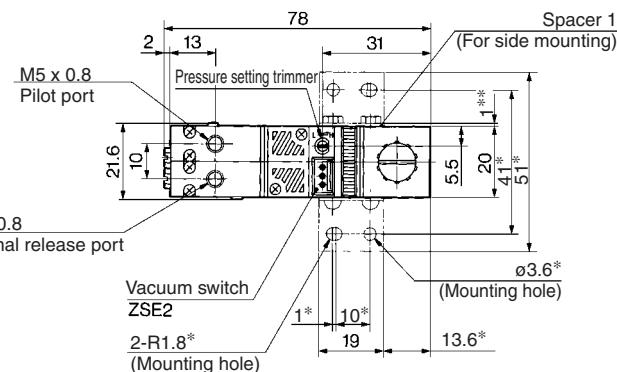


**Adsorption confirmation switch (P)**

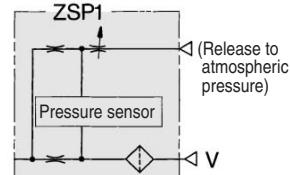


**Filter unit (F)**  
**ZX1-F**

**Without switch and filter**

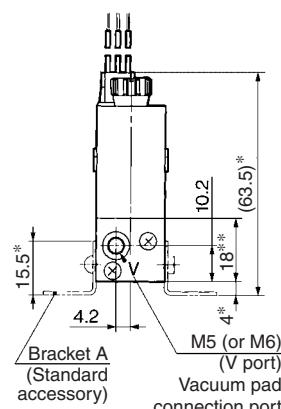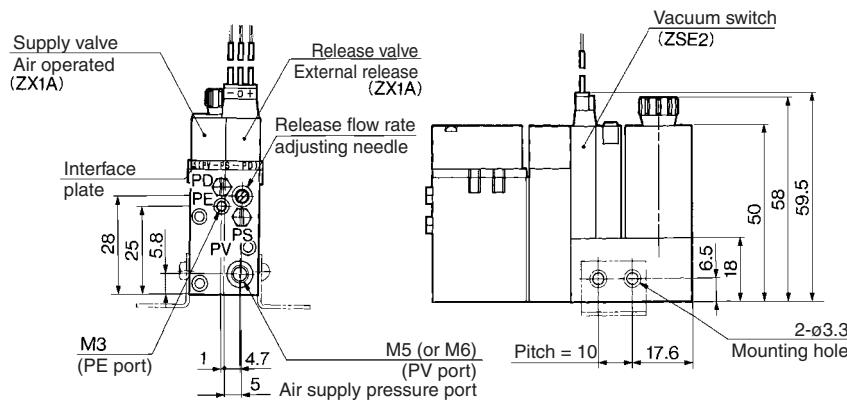


Note) Dimensions \*: For mounting bracket B \*\*: For mounting spacer 2.

**Adsorption confirmation switch (ZSP1)**  
**ZX1□□□-K6-P□□**

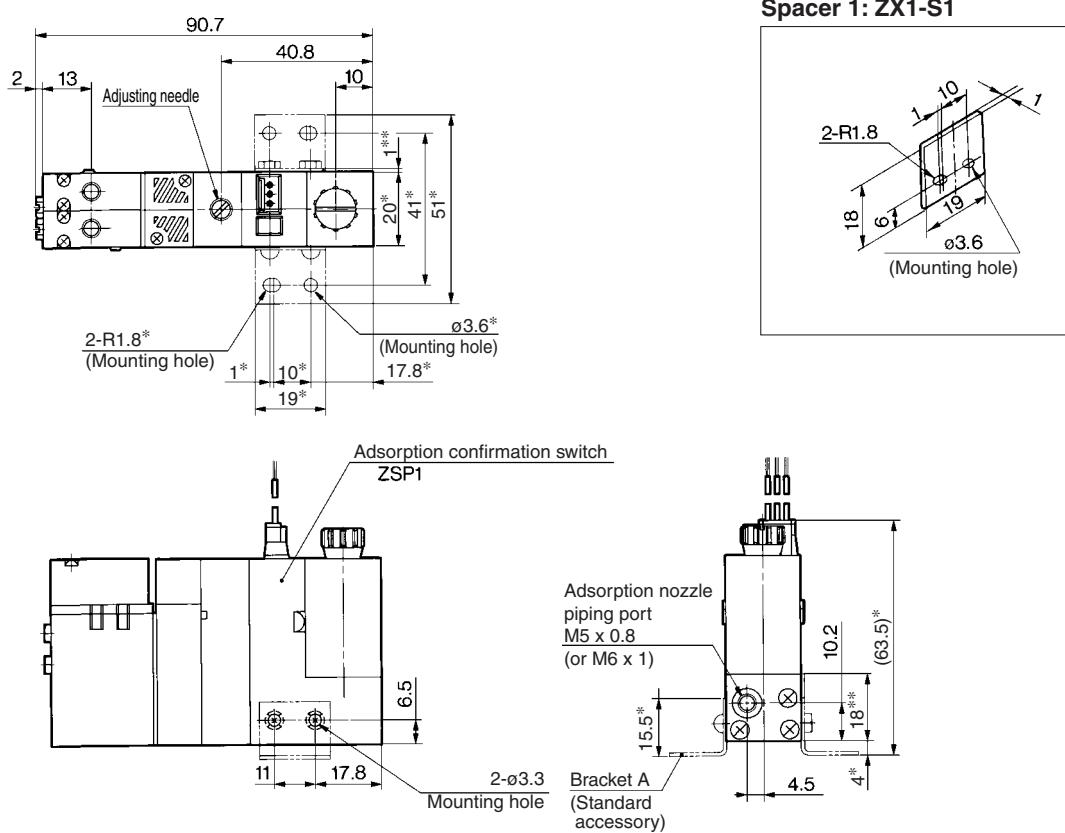

**Filter unit (F)**  
**ZX1-□□□-K6-F**

**Without switch and filter**  
**ZX1□□□-K6**

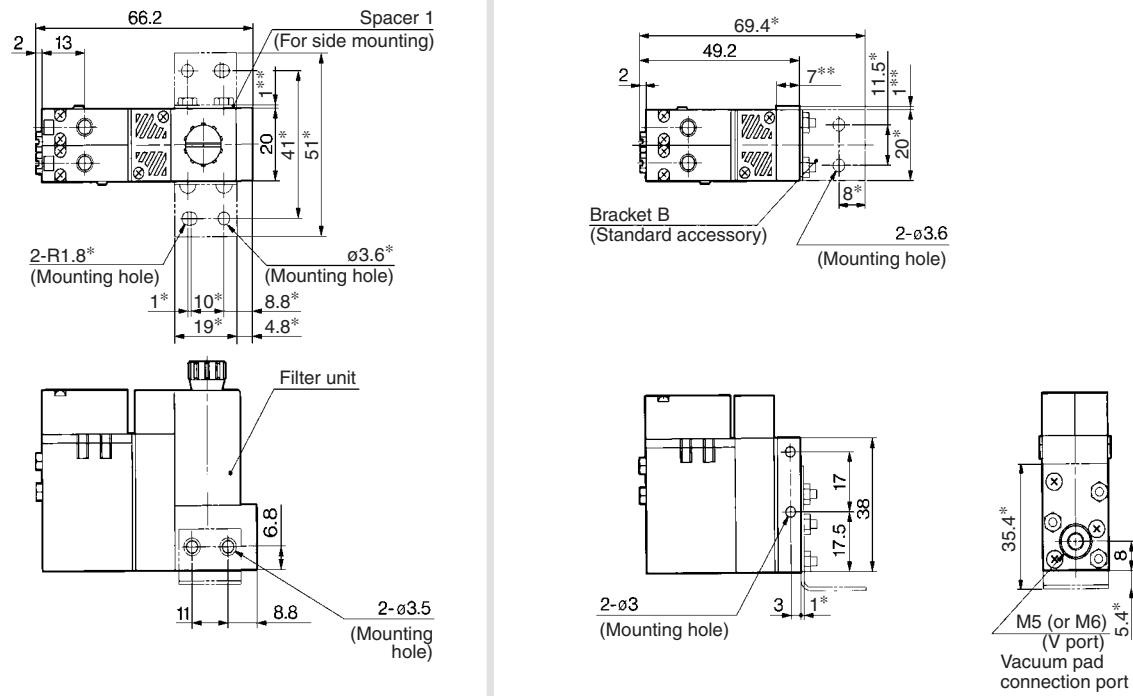

**ZX**  
**ZR**  
**ZM**  
**ZH**  
**ZU**  
**ZL**  
**ZY**  
**ZQ**  
**ZF**  
**ZP**  
**ZCU**  
**AMJ**

**Misc.**



# Series ZX

## Valve Unit: Type K8






Configuration and combination  
Ejector unit + Valve unit (K8) +

<b>Vacuum switch (ZSE2)</b>
<b>Adsorption confirmation switch (ZSP1)</b>
<b>Filter unit (F)</b>
<b>Without switch and filter</b>

Model  
ZX1□□□ — K8 — E□  
P□□  
F  
Nil

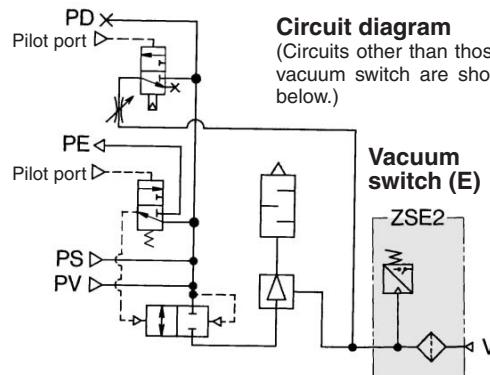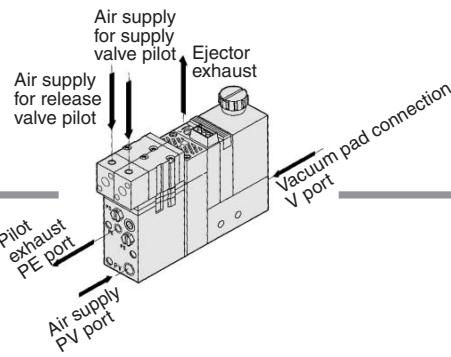


**Vacuum switch (ZSE2)**  
ZX1□□□-K8-E□

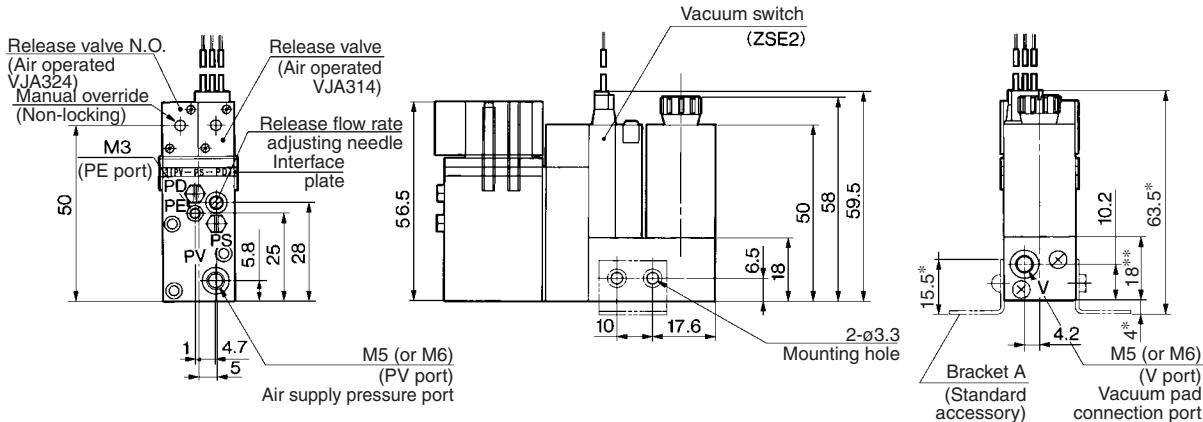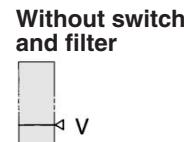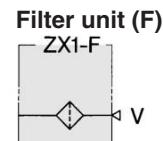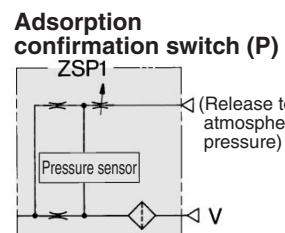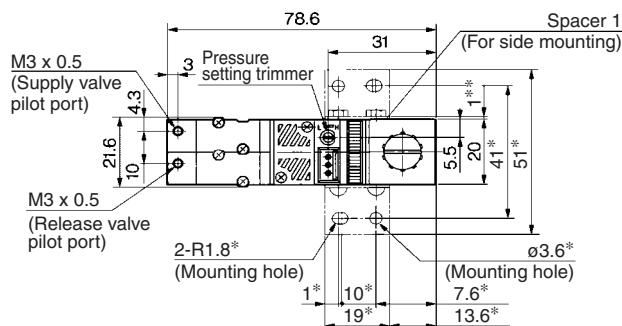


Note) Dimensions \*: For mounting bracket A \*\*: For mounting spacer 1.


**Adsorption confirmation switch (ZSP1)**  
**ZX1□□□-K8-P□□**

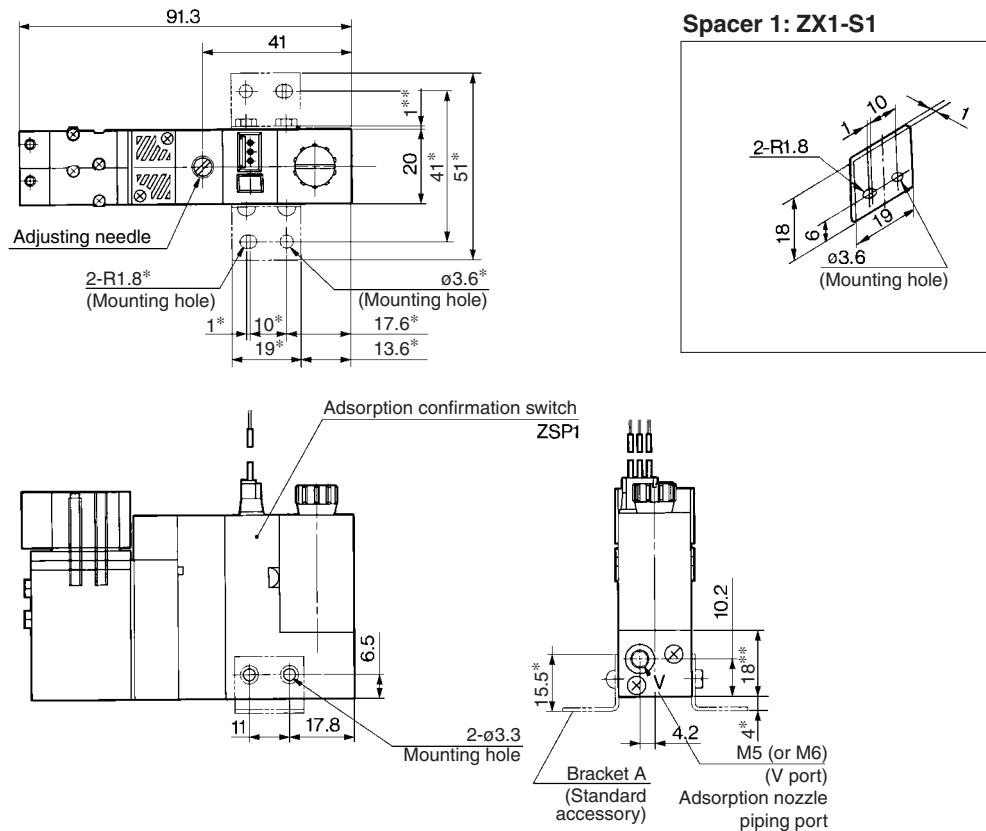

**Filter unit (F)**  
**ZX1□□□-K8-F**

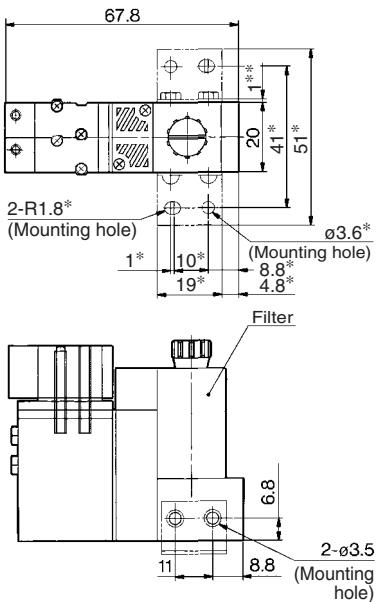

**Without switch and filter**  
**ZX1□□□-K8**

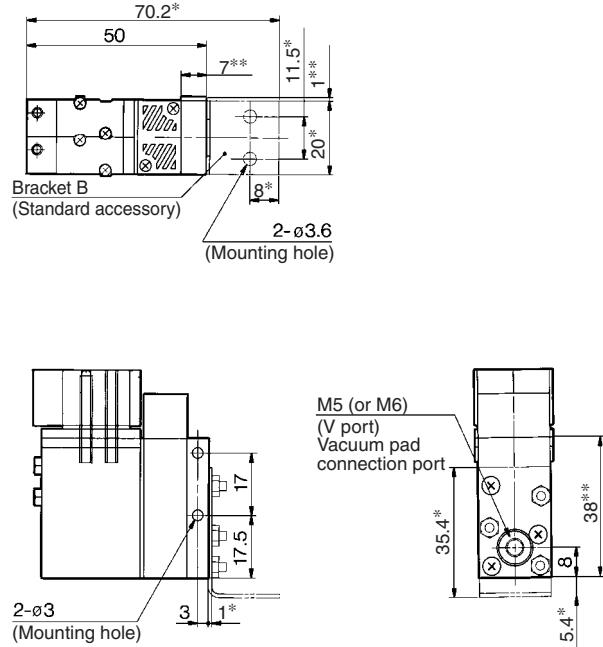


ZX  
ZR  
ZM  
ZH  
ZU  
ZL  
ZY  
ZQ  
ZF  
ZP  
ZCU  
AMJ  
Misc.

# Series ZX


## Valve Unit: Type J1

**Configuration and combination**  
**Ejector unit** + **Valve unit (J1)** + **Filter unit (F)**

<b>Vacuum switch (ZSE2)</b>
<b>Adsorption confirmation switch (ZSP1)</b>
<b>Filter unit (F)</b>
<b>Without switch and filter</b>





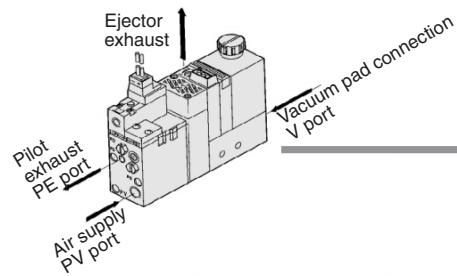


**Model**  
**ZX1□□□ — J1□□□□ — E□**  
**P□□**  
**F**  
**Nil**

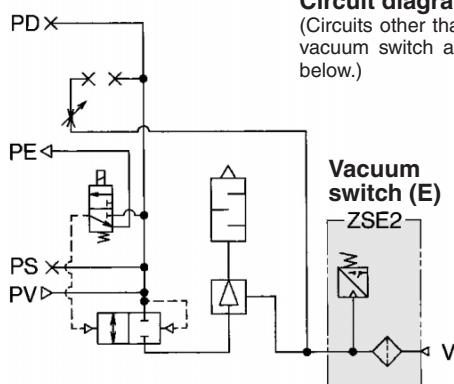

**Circuit diagram**  
(Circuits other than those with vacuum switch are shown as below.)


**Vacuum switch (ZSE2)**  
**ZX1□□□-J1□□□□-E□**

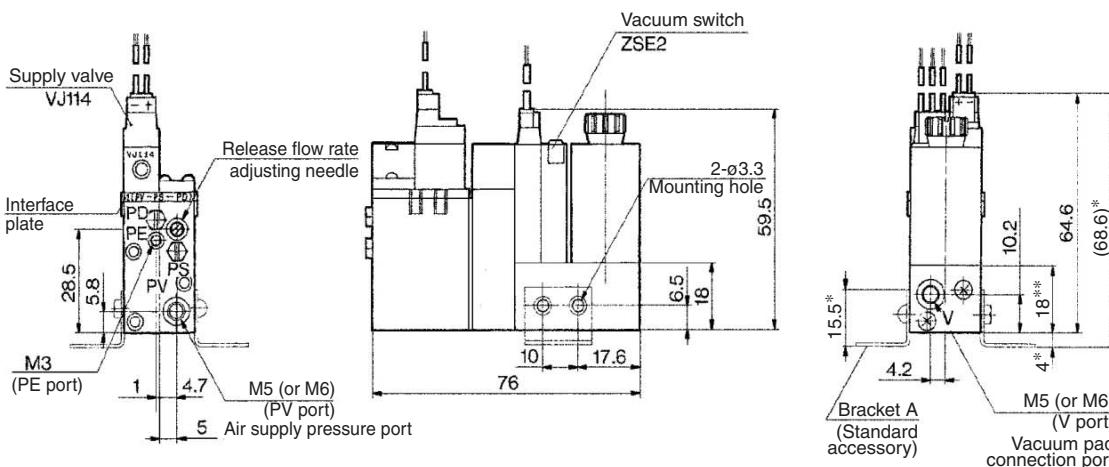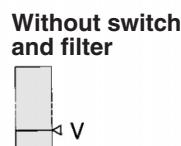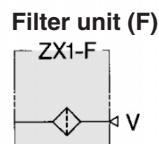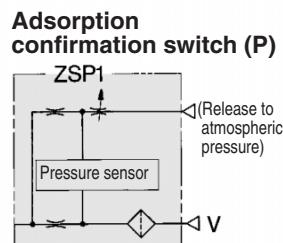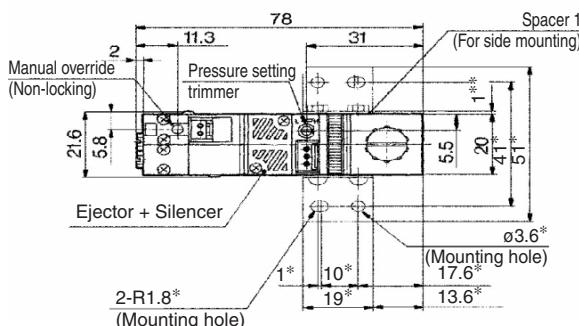


Note) Dimensions \*: For mounting bracket A \*\*: For mounting spacer 1.

ZX  
ZR  
ZM  
ZH  
ZU  
ZL  
ZY  
ZQ  
ZF  
ZP  
ZCU  
AMJ  
Misc.


**Absorption confirmation switch (ZSP1)**  
**ZX1□□-J1□□□□-P□□**

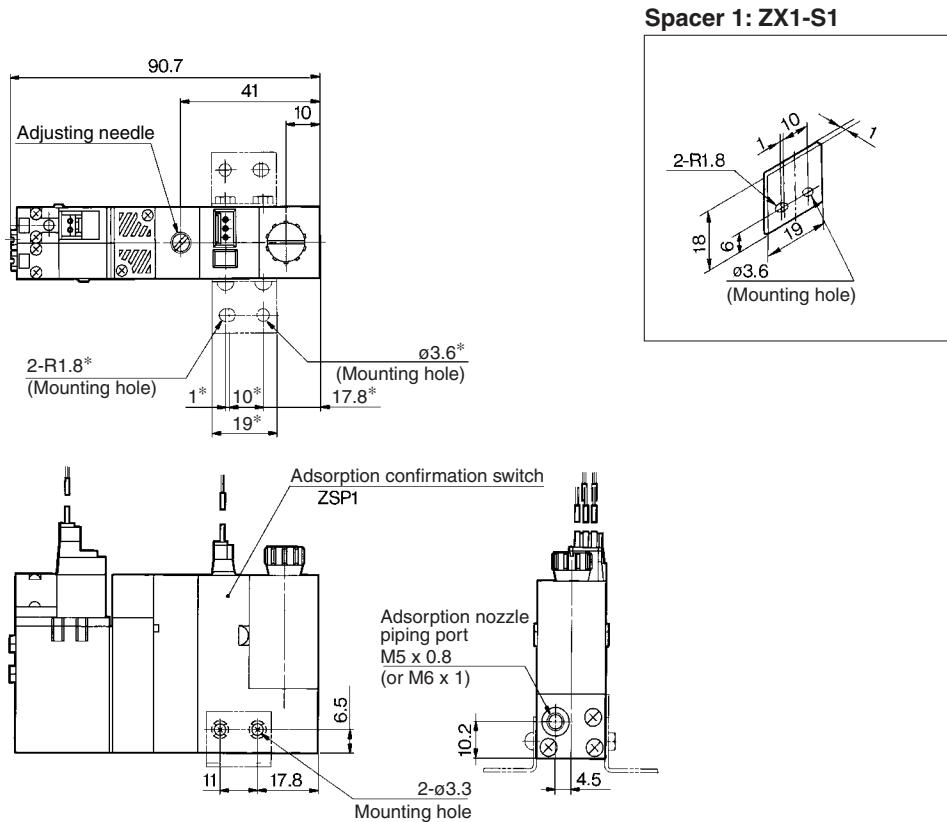

**Filter unit (F)**  
**ZX1□□□-J1□□□□-F**



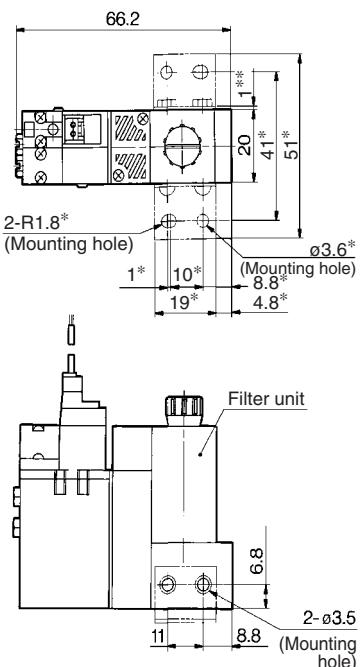


**Without switch and filter**  
**ZX1□□□-J1□□□□**

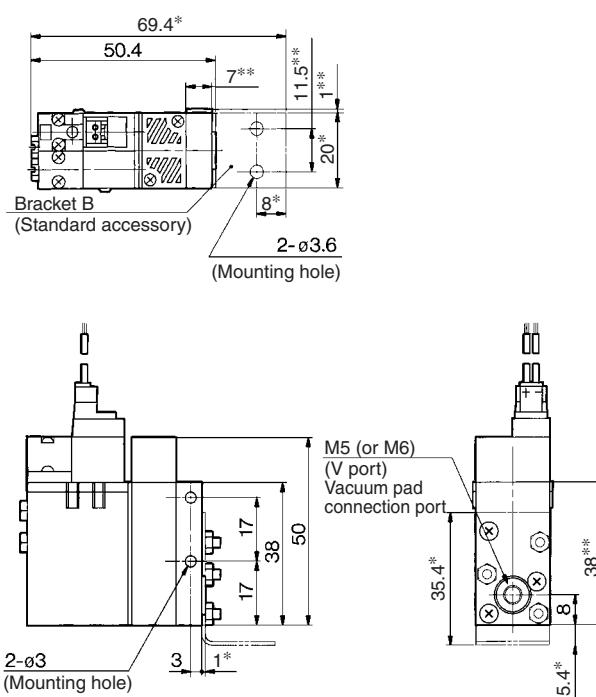


# **Series ZX**

## **Valve Unit: Type J2**

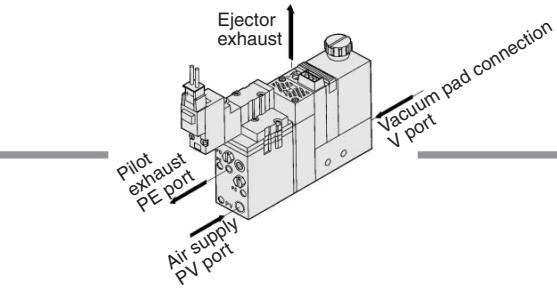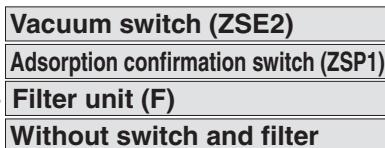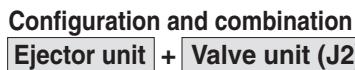


## Circuit diagram

(Circuits other than those with vacuum switch are shown as below.)

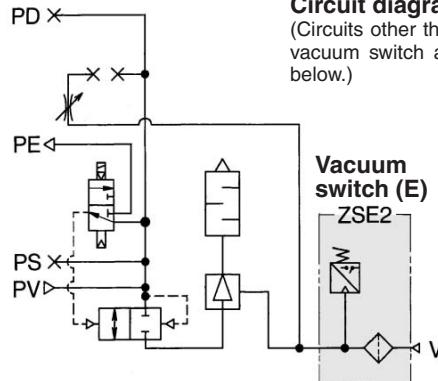


## Vacuum switch (ZSE2)


**ZX1□□□-J2□□□□□-E□**

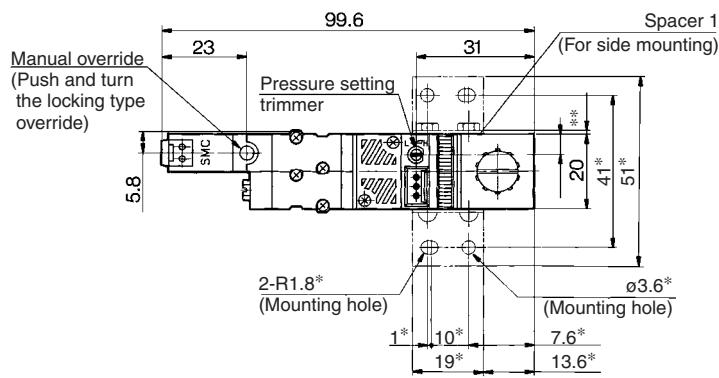




## Adsorption confirmation switch (P)

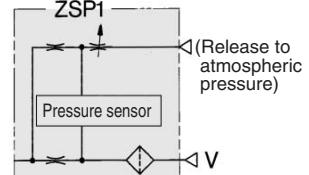

## **Filter unit (F)**

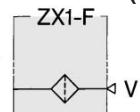


## Without switch and filter

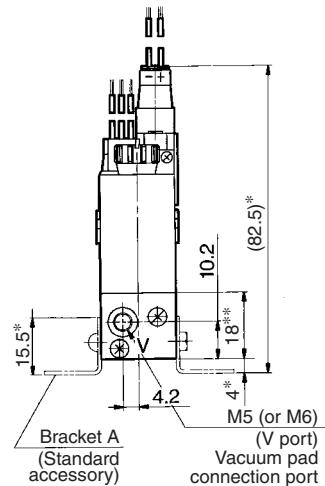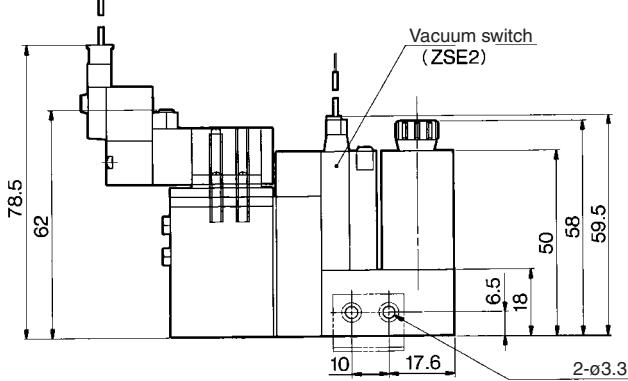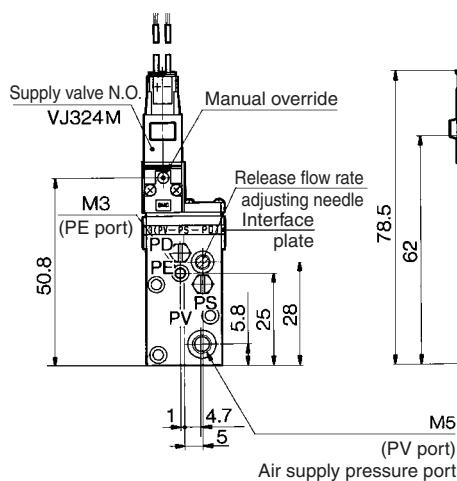


Note) Dimensions \*: For mounting bracket A \*\*: For mounting spacer 1.


**Adsorption confirmation switch (ZSP1)**  
**ZX1□□□-J2□□□□-P□□**

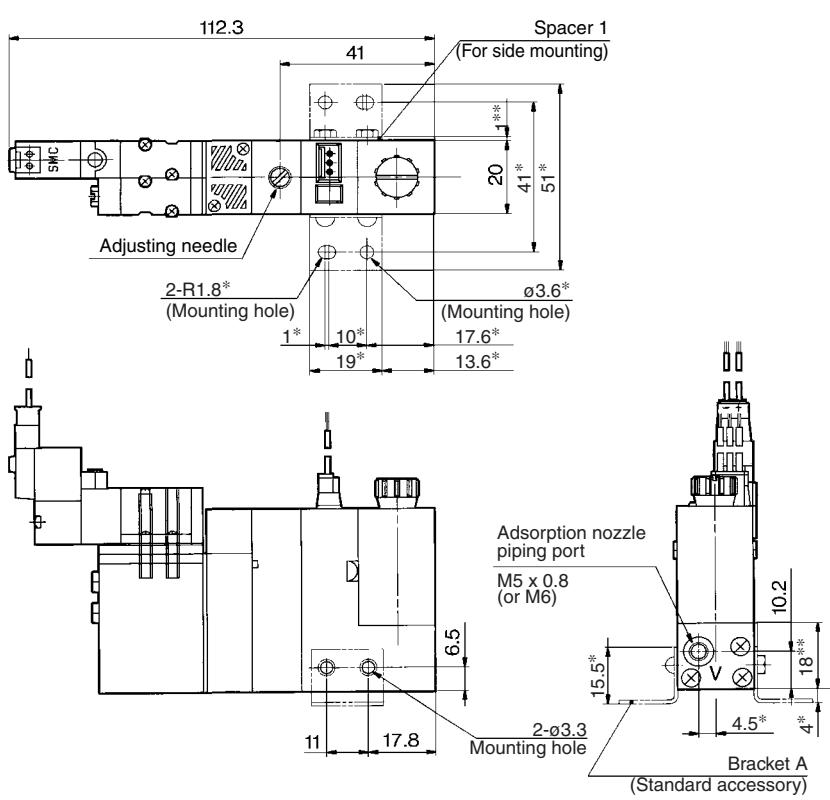


**Spacer 1: ZX1-S1**

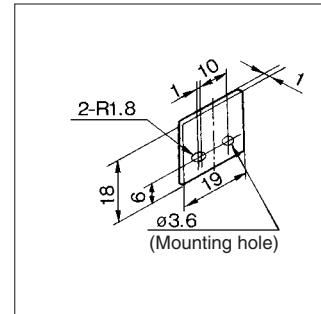

**Filter unit (F)**  
**ZX1□□□-J2□□□□-F**

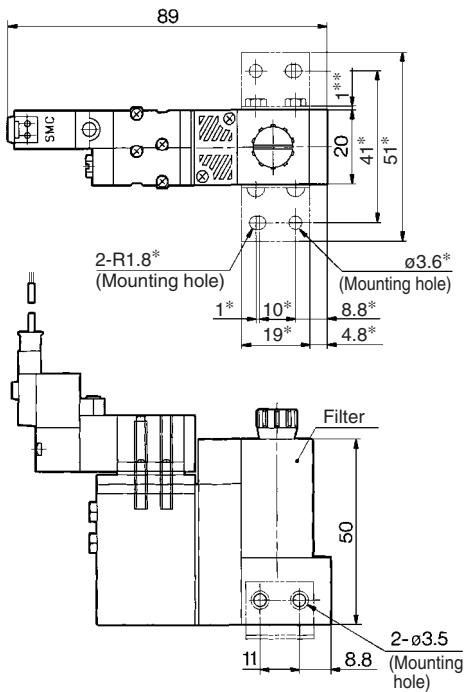

**Without switch and filter**  
**ZX1□□□-J2□□□□**


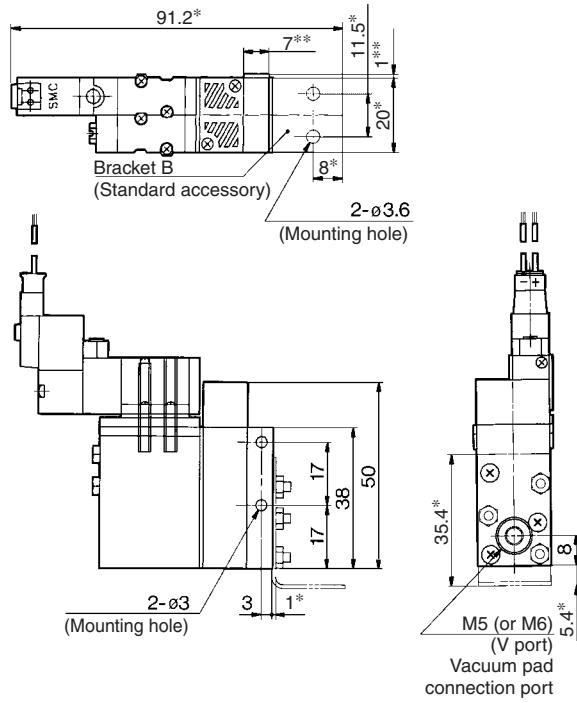


**ZX**  
**ZR**  
**ZM**  
**ZH**  
**ZU**  
**ZL**  
**ZY**  
**ZQ**  
**ZF**  
**ZP**  
**ZCU**  
**AMJ**

**Misc.**

# Series ZX

## Ejector System/Manifold Specifications

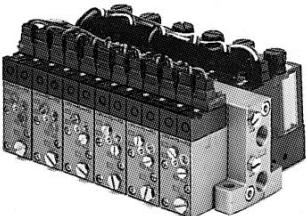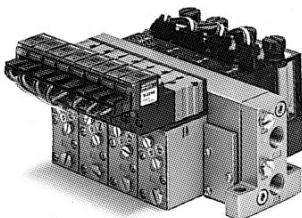

### Function

Max. number of units	8 units
Function	Supply air from PV port of manifold for common supply.

### When Using Individual Spacer R1

Function	Separates air supply from manifold and allows units to be used one by one.
----------	--

### Standard Specifications

Port	Port size	Function
PV port	Rc 1/8	Air supply
EXH port	Rc 1/8	Common exhaust
Weight	1 station: 73 g (50 g per additional station)	

Note 1) PD port: Blank

Note 2) Exhaust air from both sides for 4 or more stations of ZX1103 manifold.

### Air Supply

Supply port location Port	Manifold		Left side		Right side	
	PV	PS	PV	PS	PV	PS
L (Left)	○	●	●	●	●	●
R (Right)	●	●	○	●	●	●
B (Both sides)	○	●	○	●	●	●

○: Supply ●: Plugged (EXH port is released to atmospheric pressure.)

Note) Blank plugs are attached to all ports of each valve unit.



### Manifold Specification Sheet

When ordering the manifold type of series ZX, use the manifold specification sheet on page 13-14-18.

### When Using Individual Spacer R1

It functions as a single unit. Air is supplied from PV port of valve unit. PE port is released to atmospheric pressure. Other ports are plugged.

Note) When using individual spacer R1, other valves should be provided with dummy spacer R16. Functions are the same with the standard; common supply from the manifold.

## How to Order Manifold

Indicate the vacuum module, blank plate and individual spacer below the manifold base part number.

### <Manifold base>

**ZZX1 06 — R**

Stations	•
01	1
02	2
⋮	⋮
08	8

#### Supply port location

- R Right side (PV port on the right side)
- L Left side (PV port on the left side)
- B Both sides (PV port on both sides)

\*1 Viewed from the front side of valve unit, confirm the port location on the right and/or left side.

\*2 EXH ports are released to atmospheric pressure in both sides.  
Plugs are always attached to PD ports and all ports of the valve unit.

#### Thread of supply and exhaust valve

Nil	Rc
F	G
T	NPTF

(Ordering example)

**ZXX106-R**.....1 pc. (Manifold base)

\*ZX1101-K15LZ-EC.....5 pcs. (Vacuum single unit)

\*ZX1-BM1.....1 pc. (Blank plate)

• First station from the valve side

### <Individual spacer>

**ZX1 — R1 — 1**

#### Arrangement

(First station from the right end of the valve side is station 1.)

Nil	All stations
1	Station 1 only
⋮	⋮
8	Station 8 only

\*When spacers are mounted alternately, specify them together.

(Ordering example)

If installed on station 1 and station 3:

**ZZX106-R** .....1 pc.

\*ZX1101-K15LZ-EL .....6 pcs.


\*ZX1-R1-1

\*ZX1-R1-3

\*ZX1-R16 .....4 pcs.


Manifold/System Circuit Example

When not using individual air pressure supply

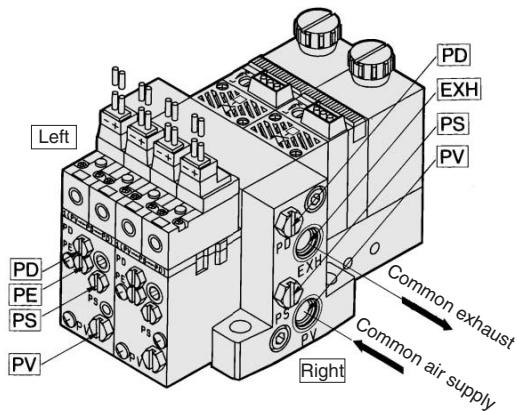


PV: Air supply port  
PS: Supply valve supply pressure port  
PD: Air supply port for release valve  
PE: Pilot exhaust port  
EXH: Common exhaust port


When using individual air pressure supply

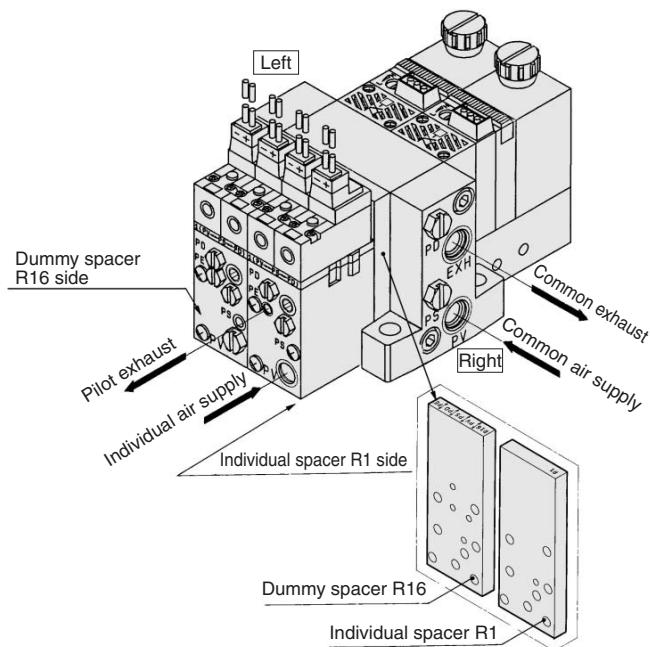

<System circuit example>

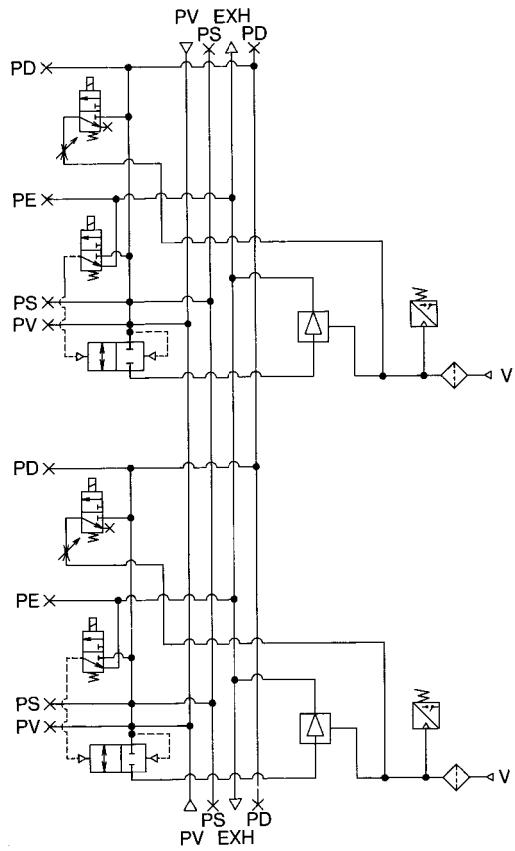





<System circuit example>

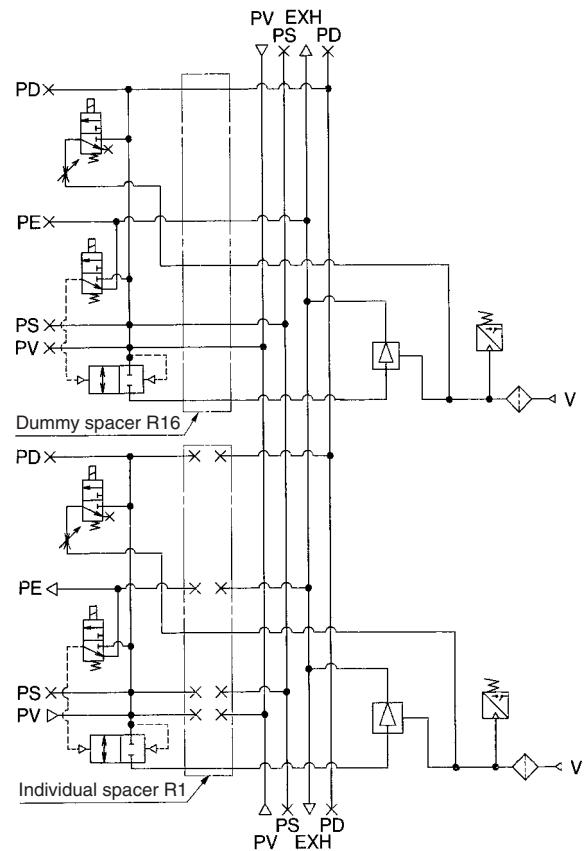

ZX  
ZR  
ZM  
ZH  
ZU  
ZL  
ZY  
ZQ  
ZF  
ZP  
ZCU  
AMJ  
Misc.

# Series ZX


## Ejector System Manifold

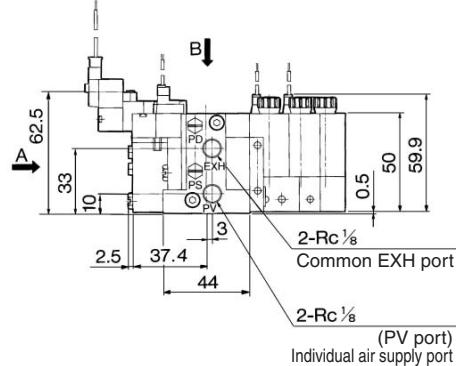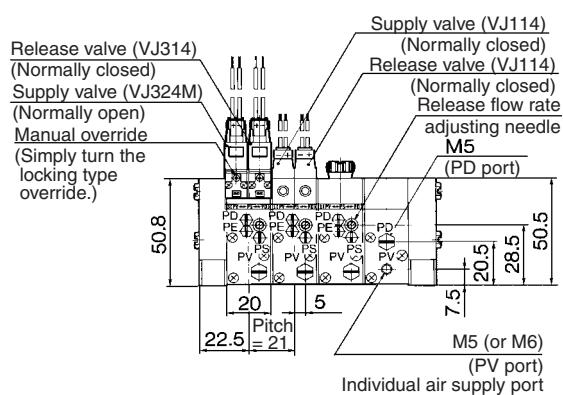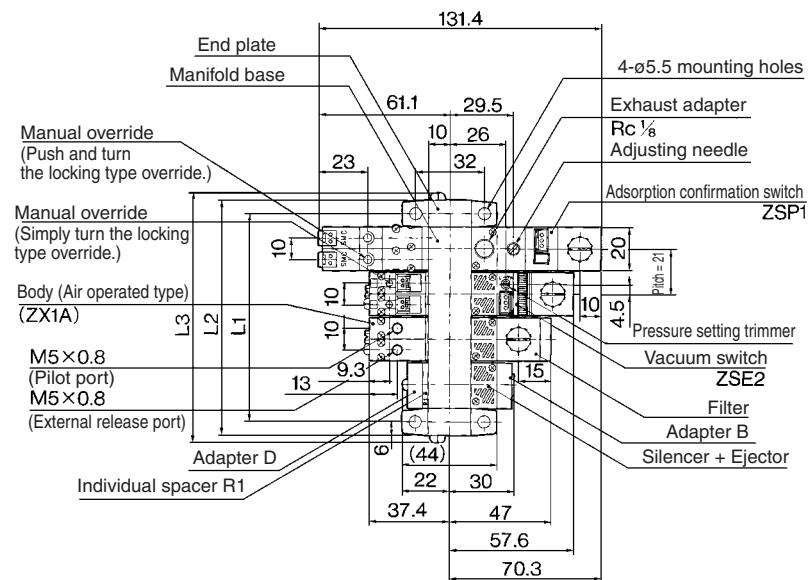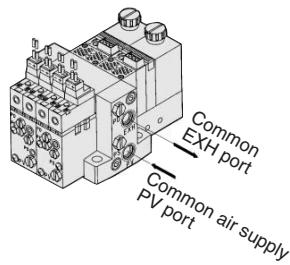



Symbol	Stations	1	2	3	4	5	6	7	8
<b>L1</b>		33	54	75	96	117	138	159	180
<b>L2</b>		45	66	87	108	129	150	171	192
<b>L3</b>		50	71	92	113	134	155	176	197

(In the case of individual air pressure supply)

B cross section

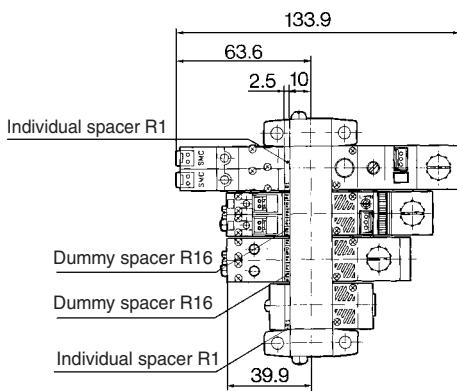


A cross section

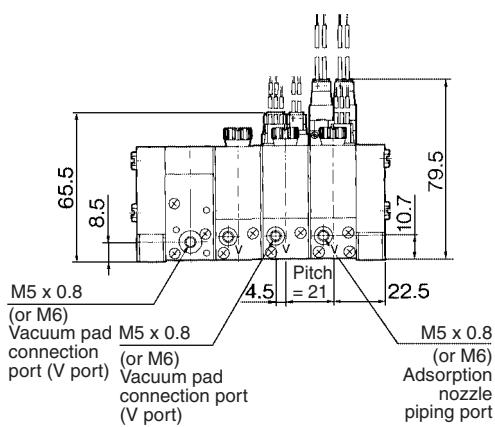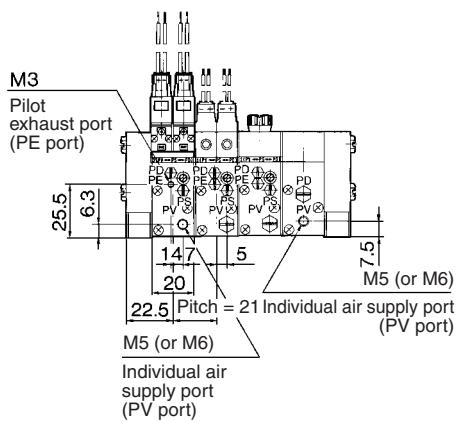

System circuit example


(Standard)

(Option)  
(In the case of individual vacuum pressure supply)

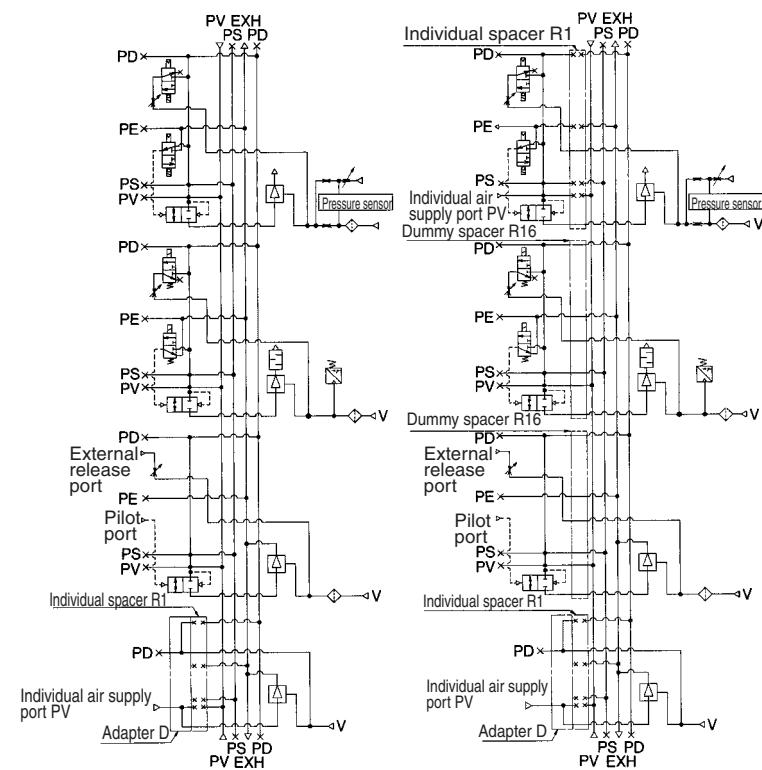

# Series ZX

## Ejector System



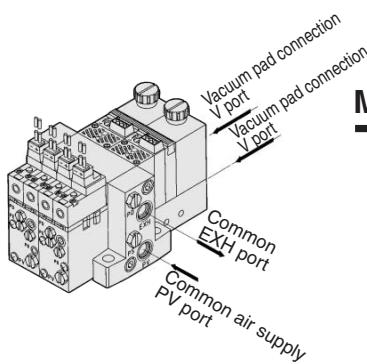


## Type K1

**ZZX1□□-□□**

**ZX1□□□-K1□L□-E□-□**



## Manifold: Type K1

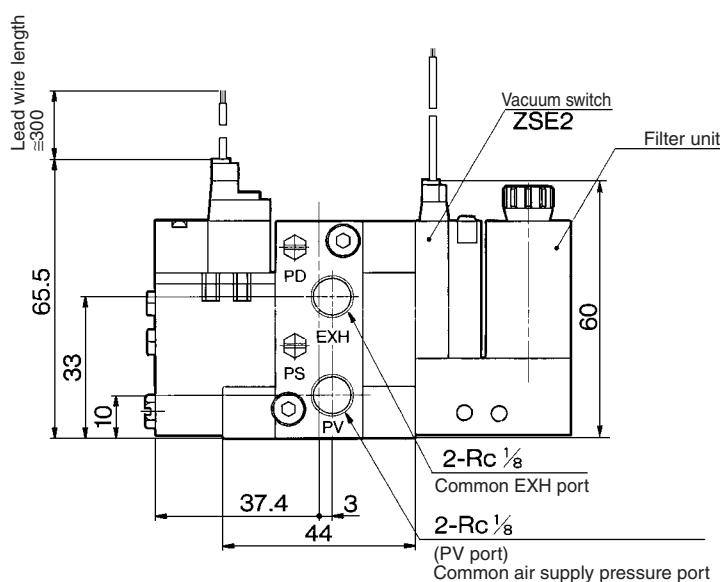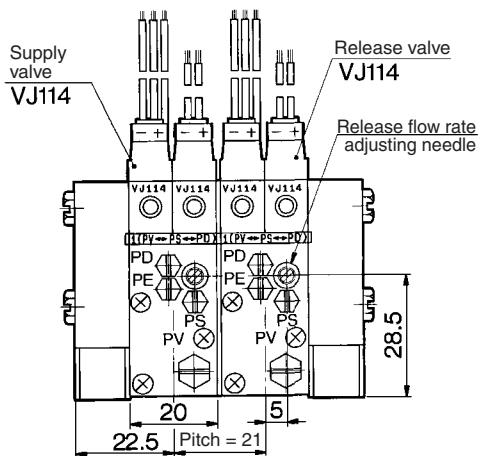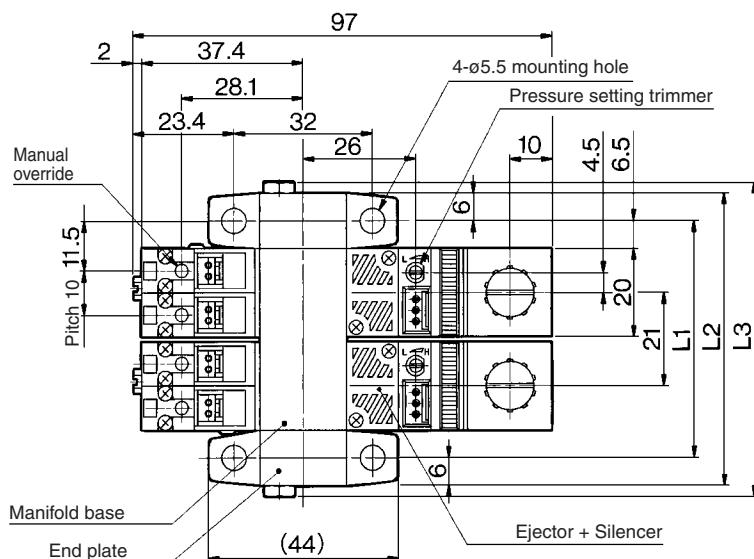

Symbol	Stations	(mm)							
		1	2	3	4	5	6	7	8
L <sub>1</sub>		33	54	75	96	117	138	159	180
L <sub>2</sub>		45	66	87	108	129	150	171	192
L <sub>3</sub>		50	71	92	113	134	155	176	197


ZX  
ZR  
ZM  
ZH  
ZU  
ZL  
ZY  
ZQ  
ZF  
ZP  
ZCU  
AMJ  
Misc.

Circuit diagram

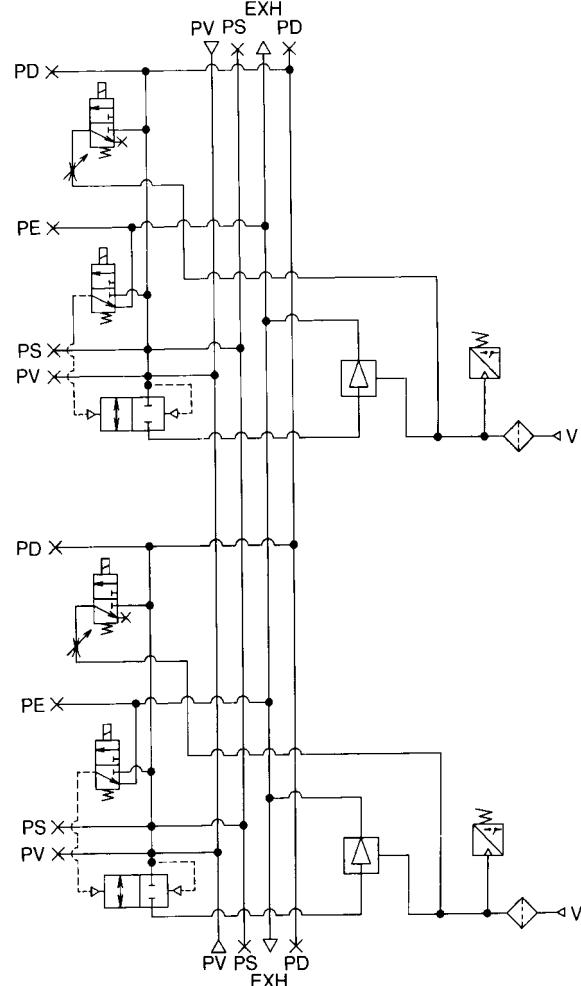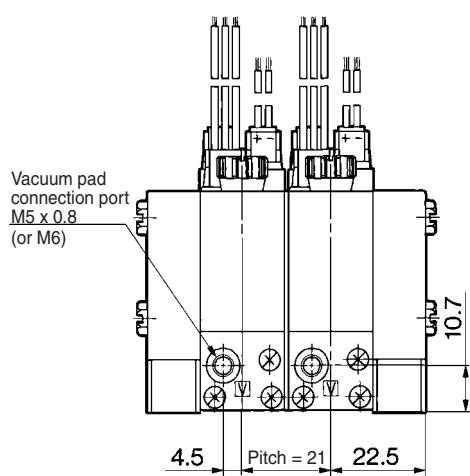

# Series ZX

## Ejector System



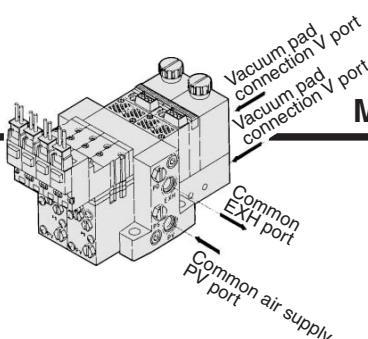


## Manifold: Type K3

### Type K3

ZZX1□□-□□


ZX1□□□-K3□□□-E□-□

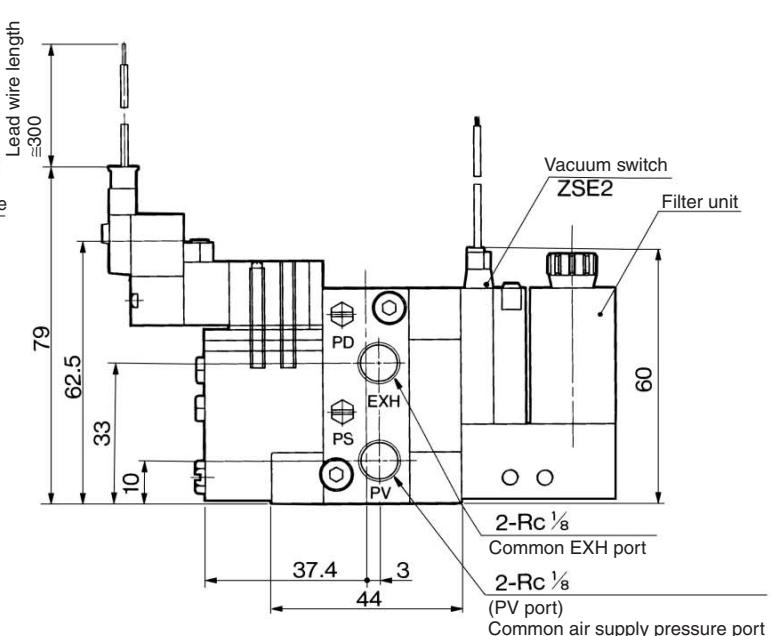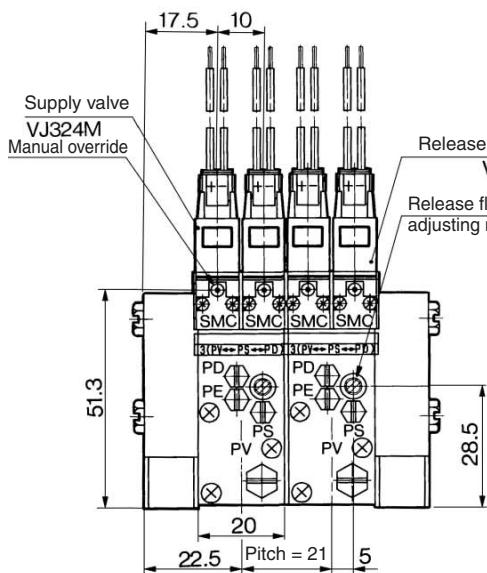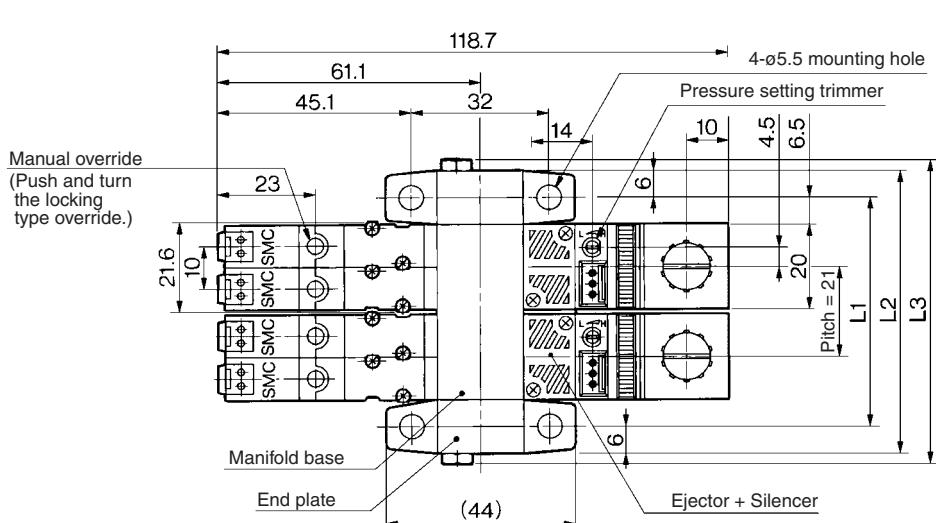

Symbol	Stations	(mm)							
		1	2	3	4	5	6	7	8
L <sub>1</sub>		33	54	75	96	117	138	159	180
L <sub>2</sub>		45	66	87	108	129	150	171	192
L <sub>3</sub>		50	71	92	113	134	155	176	197

ZX  
ZR  
ZM  
ZH  
ZU  
ZL  
ZY  
ZQ  
ZF  
ZP  
ZCU  
AMJ  
Misc.


Circuit diagram

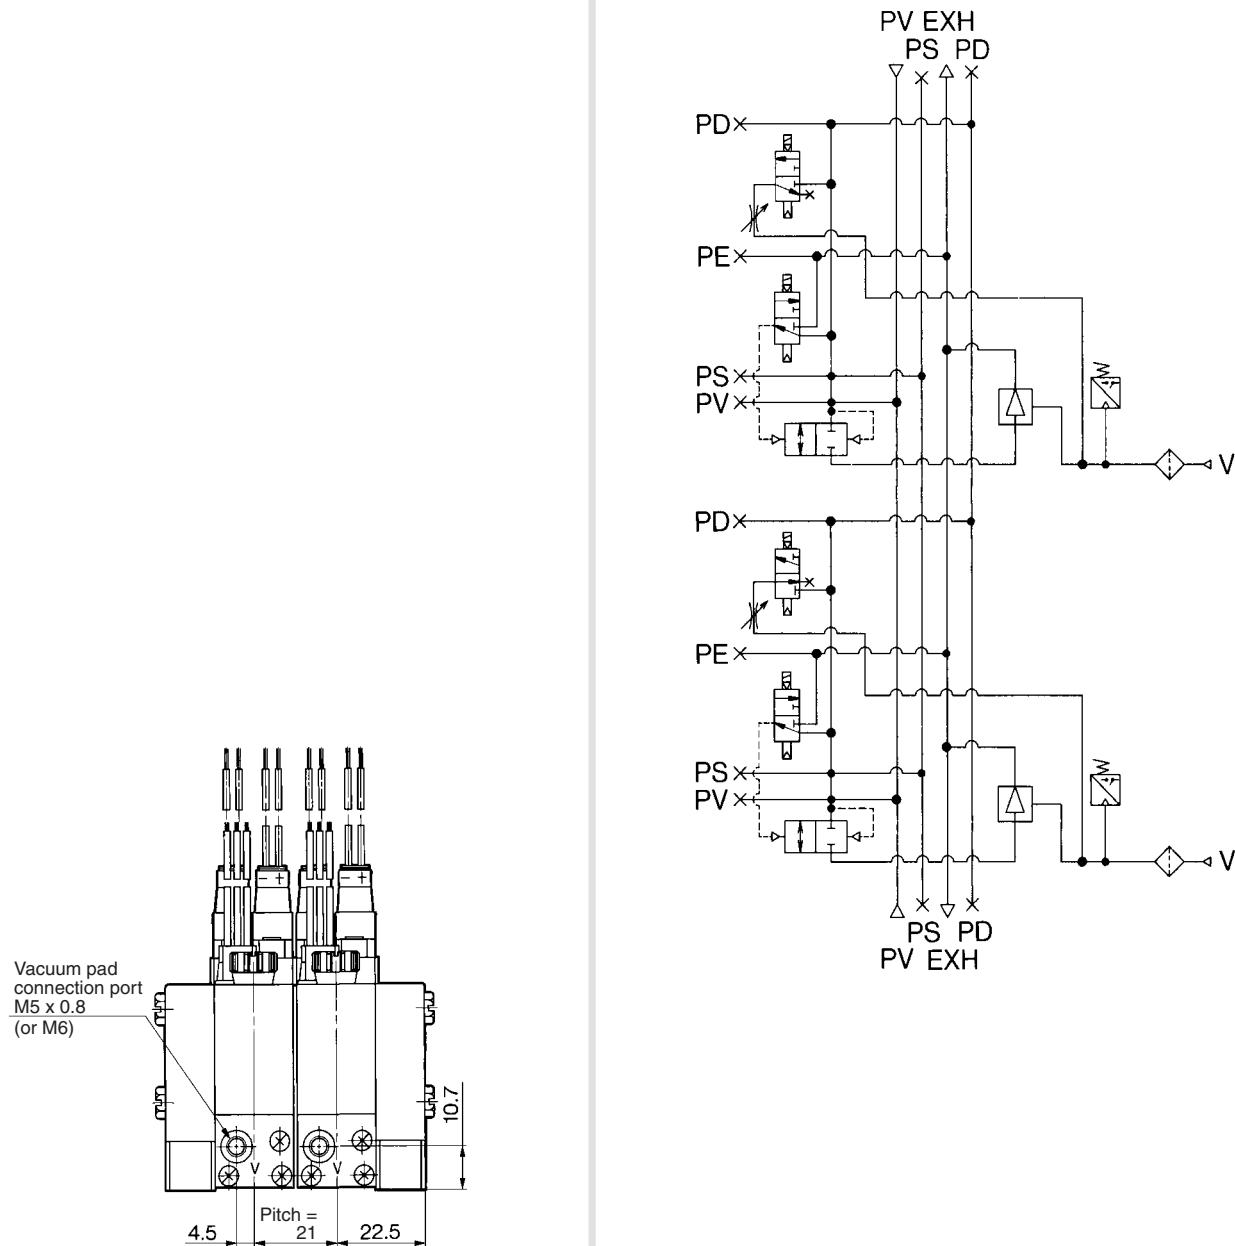

# Vacuum Module: Vacuum Pump System Series ZX

## How to Order

Components	
Valve unit N.C. type	Vacuum switch unit
Valve unit N.O. type	Vacuum switch unit
Valve unit N.C. type	Filter unit

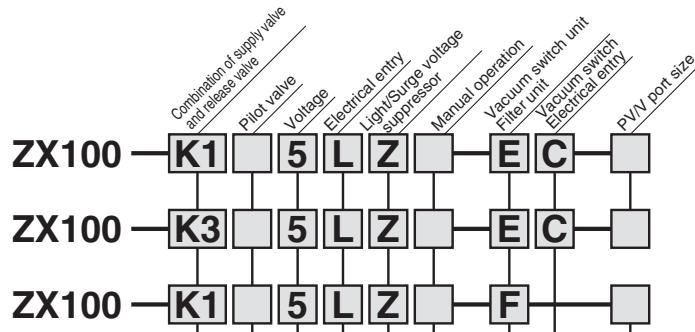

Valve unit/Combination of supply valve and release valve

Refer to "Table (1)" on page 13-2-41.

Pilot valve

Nil	DC: 1 W (With indicator light: 1.05 W)
	AC
Y *	DC: 0.45 W (With indicator light: 0.5 W)

\* 24 VDC and 12 VDC are applicable to 0.45 W.

Voltage

1 *	100 VAC 50/60 Hz
3 *	110 VAC 50/60 Hz
5	24 VDC
6	12 VDC
V	6 VDC
S	5 VDC
R	3 VDC
Nil	Air operated (K6, K8, J3, J4, D3, D4)

\* Applicable to plug connector.  
(Connector assembly with rectifier is attached.)

Electrical entry

L	Plug connector type	Lead wire length 0.3 m
LN		Without lead wire (Applicable to DC only)
LO		Without connector
M		Lead wire length 0.3 m
MN	Grommet type	Without lead wire (Applicable to DC only)
MO		Without connector
G	Grommet type	Lead wire length 0.3 m (Applicable to DC only)
H		Lead wire length 0.6 m (Applicable to DC only)
Nil	Air operated	



Note) In the case of "K1" (combination of supply and release valves), M type plug connector can not be used.



• Refer to "Table (2)" on page 13-2-41 for part number of lead wire with connector.

Nil

L

C

CL

CN

Nil	Grommet type	Lead wire length 0.6 m
L		Lead wire length 3 m
C		Lead wire length 0.6 m
CL	Connector type	Lead wire length 3 m
CN		Without connector (Without lead wire)



• Refer to "Table (3)" on page 13-2-41 for part number of lead wire with connector.

Vacuum switch unit/Filter unit

E	Vacuum switch (For general purpose)	With suction filter
PS	Adsorption confirmation switch	
PB	Nozzle dia. (ø0.3 to 0.7)	
F	Nozzle dia. (ø0.5 to 1.2)	
	Only suction filter	

Vacuum digital pressure switch unit

D	21	2 outputs/without analog output
	22	2 outputs/with analog output
DP	23	1 output (with trouble detection)/without analog
	24	1 output (with trouble detection)/with analog

Note) Analog output is available on grommet type only.



Manual operation

Nil	Non-locking push type
B	Locking slotted type


Light/Surge voltage suppressor

Nil	None
Z	With light/surge voltage suppressor
S *	With surge voltage suppressor

\* In the case of AC,  
"S" is not available.

## Caution

Surge voltage suppressor

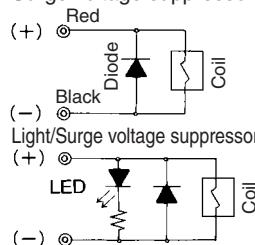

Using the DC type:

Match the polarity of the connectors according to the (+) and (-) marks on the connectors. Do not interchange the polarities to prevent the diodes or the switching elements from becoming burned. If lead wires are pre-connected, the red wire is (+) and the black wire is (-).

Using the AC type:

The AC type is not equipped with a surge voltage suppressor because the rectifier assembly prevents the generation of surge voltage.

**ZX**  
**ZR**  
**ZM**  
**ZH**  
**ZU**  
**ZL**  
**ZY**  
**ZQ**  
**ZF**  
**ZP**  
**ZCU**  
**AMJ**  
**Misc.**

**Table (1) Valve Unit/Combination of Supply Valve and Release Valve**



(Refer to page 13-2-42 for details specifications.)

Components		Symbol	Supply valve				Release valve				None		
Supply valve	Release valve		Solenoid valve		Air operated		None	Solenoid valve		Air operated			
			N.C. (VJ114)	N.O. (VJ324)	N.C. (ZX1A)	N.O. (VJA324)		N.C. (VJ114)	N.C. (VJ314)	N.C. (VJA314)	ZX1A		
Solenoid (N.C.)	Solenoid (N.C.)	K1	●	—	—	—	—	●	—	—	—	—	
Solenoid (N.O.)	Solenoid (N.C.)	K3	—	●	—	—	—	—	●	—	—	—	
Air operated (N.O.)	External release	K6	—	—	●	—	—	—	—	—	●	—	
Air operated (N.O.)	Air operated (N.C.)	K8	—	—	—	●	—	—	—	●	—	—	
Nil		Without valve module											

**Table (2) Valve Unit/Valve Plug Connector Assembly**

Connector assembly part no.

(For DC)

**VJ10-20-4A-6**

(For 100 VAC)

**VJ10-36-1A-6**

(For 110 VAC)

**VJ10-36-3A-6**

Lead wire length

Nil	0.3 m (Standard)
6	0.6 m
10	1 m
15	1.5 m
20	2 m
25	2.5 m
30	3 m

How to order

If ordering vacuum module with 600 m or the longer lead wire, specify both vacuum module and connector assembly part numbers.

Ordering example)

ZX100-K15LZ-EC.....1 pc.

\*VJ10-20-4A-6.....2 pcs.

**Table (3) Vacuum Switch/Plug Connector Assembly**

**ZS-10-5A-**□

Lead wire length

Nil	0.6 m
30	3 m
50	5 m

Note) If ordering switch with 5 m lead wire, specify both switch and lead wire with connector part numbers.

Ordering example)

ZX100-K150Z-ECN.....1 pc.


\*VJ10-20-4A-6.....2 pcs.

\*ZS-10-5A-50.....1 pc.


**Vacuum Pump System/Recommended Model (The models below will have faster delivery.)**

Model	Combination		Solenoid valve rated voltage	Lead wire electrical entry	Light/Surge voltage suppressor	Vacuum switch unit /Filter unit	Vacuum switch electrical entry
	Supply valve (Pilot valve)	Release valve (Direct operated)					
<b>ZX100-K15LZ-F</b>	N.C. (VJ114)	N.C. (VJ114)	24 VDC	Plug connector type	With light/surge voltage suppressor	Suction filter (ZX1-F)	Connector type
<b>ZX100-K15LZ-EC</b>	N.C. (VJ114)	N.C. (VJ114)				Vacuum switch (ZSE)	
<b>ZX100-K35MZ-EC</b>	N.O. (VJ324)	N.C. (VJ314)					

\*The above models are for short delivery.

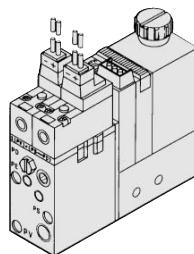

**ZX100-K15LZ-E□**

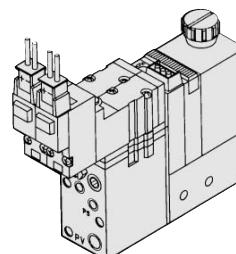

**ZX100-K35MZ-E□**


# Series ZX

## Vacuum Pump System/Combination of Supply Valve and Release Valve

### Combination Symbol: K1

An N.C. solenoid valve is used for the supply valve. Also, an N.C. solenoid valve is used for the vacuum release valve.

**Application:** This combination is used for effecting control in accordance with electric signals.

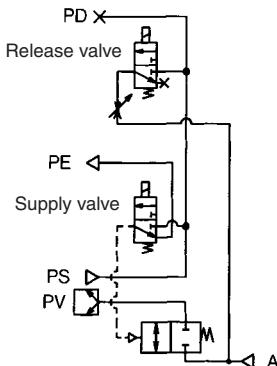


#### How to Operate

Condition	Valve	Supply valve	Release valve
		Solenoid valve	Solenoid valve
1. Work adsorption		ON	OFF
2. Vacuum release		OFF	ON
3. Operation stop		OFF	OFF

### Combination Symbol: K6

An external 3 port valve must be provided to serve as the supply valve. Also, an external 2 port valve (vacuum valve) must be provided to serve as the vacuum release valve.

**Application:** This combination is used for effecting control in accordance with electric signals.

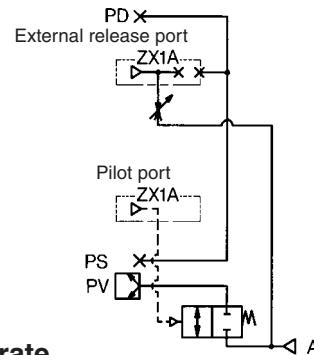


#### How to Operate

Condition	Valve	Supply valve	Release valve
		Solenoid valve	Solenoid valve
1. Work adsorption		ON	OFF
2. Vacuum release		OFF	ON
3. Operation stop		OFF	OFF

### Combination Symbol: K3

An N.O. solenoid valve is used for the supply valve. Also, an N.C. solenoid valve is used for the vacuum release valve.

**Application:** This combination is used for effecting control in accordance with electric signals. Because the supply valve is N.O., the pressure that is supplied to the ejector is not interrupted during a power outage; as a result, the state of suction can be maintained. This combination is used for preventing the workpieces from dropping during power outages.

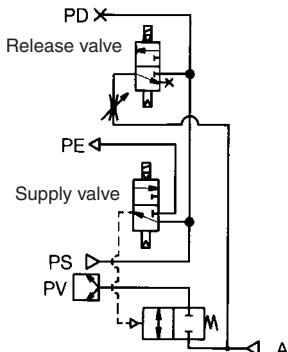


#### How to Operate

Condition	Valve	Supply valve	Release valve
		Solenoid valve	Solenoid valve
1. Work adsorption		OFF	OFF
2. Vacuum release		ON	ON
3. Operation stop		ON	OFF

### Combination Symbol: K8

An air operated N.O. valve is used as the supply valve. An air operated N.C. valve is used for the vacuum release valve.


**Application:** This combination is used for effecting control in accordance with electric signals. Because the supply valve is N.O., the pressure that is supplied to the ejector is not interrupted during a power outage; as a result, the state of suction can be maintained. This type is used for preventing the workpieces from dropping during

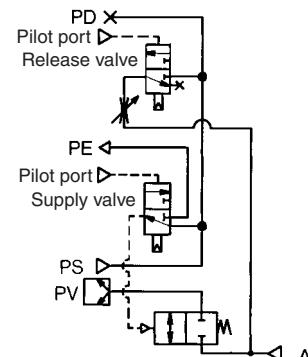

#### How to Operate

Condition	Valve	Supply valve	Release valve
		Air operated valve	Air operated valve
1. Work adsorption		OFF	OFF
2. Vacuum release		ON	ON
3. Operation stop		ON	OFF

## Vacuum Pump System/Construction

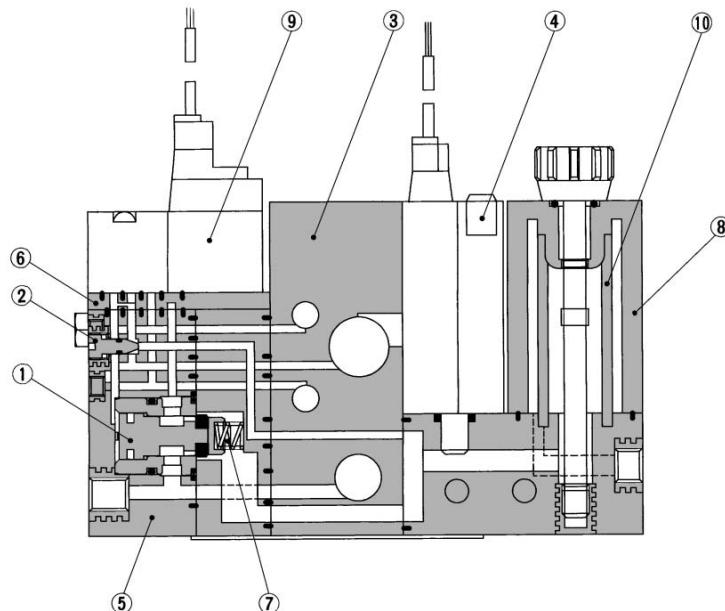

### Component Parts

No.	Description	Material	Note
①	Poppet valve assembly	—	ZX1-PV-O
②	Release flow rate adjusting needle	Stainless steel	
③	Manifold base	Aluminum	
④	Vacuum switch	—	ZSE2, ZSP1
⑤	Valve unit	—	ZX1-VB□□□□□-D-□
⑥	Interface plate	—	(PV)/(PS↔PD)
⑦	Return spring	Stainless steel	
⑧ Note)	Filter case	Polycarbonate	

**Table (1) How to Order Pilot Valves**

No.	Component equipment		Model	Combination of supply and release valve
	Supply valve	Release valve		
1	Solenoid valve N.C. (VJ114)	Solenoid valve N.C. (VJ114)	ZX1-VJ114-□□□□	K1, J1
2	Solenoid valve N.O. (VJ324)	Solenoid valve N.C. (VJ314)	ZX1-VJ3 <sub>2</sub> 4-□□□□	K3, J2
3	Air operated N.O. (VJA324)	Air operated N.C. (VJA314)	ZX1-VJA3 <sub>2</sub> 4	K6
4	Solenoid valve	Air operated	No. 2 and 3 models only are applicable.	
	Air operated	Solenoid valve	Indicate each part number.	

**Table (2) How to Order Solenoid Valves**

<b>ZX1-VJ114—□—5 L Z □</b>	
<b>ZX1-VJ3<sub>2</sub>4 □—5 L Z □</b>	
• Type of actuation	• Body option
1 N.C. (Normally closed)	Nil Pilot valve Individual exhaust
2 N.O. (Normally open)	M Common exhaust for main and pilot valves
Note) In the case of N.C. type, indicate no symbol. (Individual exhaust for Pilot valve)	

<b>Pilot valve</b>	DC: 1 W (With indicator light: 1.05 W)
	AC
Y *	DC: 0.45 W (With indicator light: 0.5 W)

\* 24 VDC and 12 VDC are applicable to 0.45 W.  
(Note) Screw length of VJ100 and VJ300 for series ZX is different from that of the standard model.  
<Screw length> VJ100-M1.7 x 15

### Replacement Parts

No.	Description	Material	Part no.
⑨	Pilot valve	—	Refer to "Table (2)", "(3)".
⑩	Filter element	PVF	ZX1-FE

(Note) Caution when handling filter case

1. The case is made of polycarbonate. Therefore, do not use it with or expose it to the following chemicals: paint thinner, carbon tetrachloride, chloroform, acetic ester, aniline, cyclohexane, trichloroethylene, sulfuric acid, lactic acid, water-soluble cutting oil (alkaline), etc.
2. Do not expose it to direct sunlight.

**Table (3) How to Order Air Operated Valves**

**ZX1A—M3**

• Port size

M3	M3 x 0.5	Pilot port/External release port
M5	M5 x 0.8	

### Caution

Turning the vacuum release flow volume adjusting needle clockwise reduces the vacuum release flow volume; the needle valve is fully closed when the needle stops turning. Turning the needle 2 full turns counterclockwise from the fully closed position renders the needle valve fully open. The needle will fall out if it is turned more than 4 full turns.

### Manual override

Nil	Non-locking push type
B	Locking slotted type

### Electrical entry

L	Connector (0.3 m)
LN	Connector (W/o lead wire)
LO	Without connector
M	Connector (0.3 m)
MN	Connector (W/o lead wire)
MO	Without connector
G	Grommet (0.3 m)
H	Grommet (0.6 m)

(Note) In the case of ZX1-VJ114, M, MN and MO cannot be used.

\* Applicable to plug connector


**ZX**  
**ZR**  
**ZM**  
**ZH**  
**ZU**  
**ZL**  
**ZY**  
**ZQ**  
**ZF**  
**ZP**  
**ZCU**  
**AMJ**  
**Misc.**

# Series ZX


## Valve Unit: ZX1-VB

Refer to page 13-2-10 for details.

### Specifications

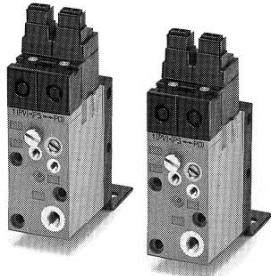


Unit no.	ZX1-VB□□□□□									
Components	Vacuum switch valve				Vacuum release valve					
	Pilot type		Direct operated type		Solenoid valve	Air operated				
Operation	N.C. (VJ114)	N.O. (VJ324)	N.C. (ZX1A)	N.O. (VJA324)	N.C. (VJ114)	N.C. (VJ314)	External release (ZX1A)	Air operated (VJA314)		
Effective area (mm <sup>2</sup> ) (Cv factor)	3 (0.17) Main valve				0.07	0.45	—			
Operating pressure range	0.3 to 0.6 MPa				5 Hz					
Max. operating frequency	5 Hz				5 to 50°C					
Operating temperature range					(PV) / (PS ↔ PD)					
Interface plate symbol					Bracket B/Spacer 2					
Standard accessory										

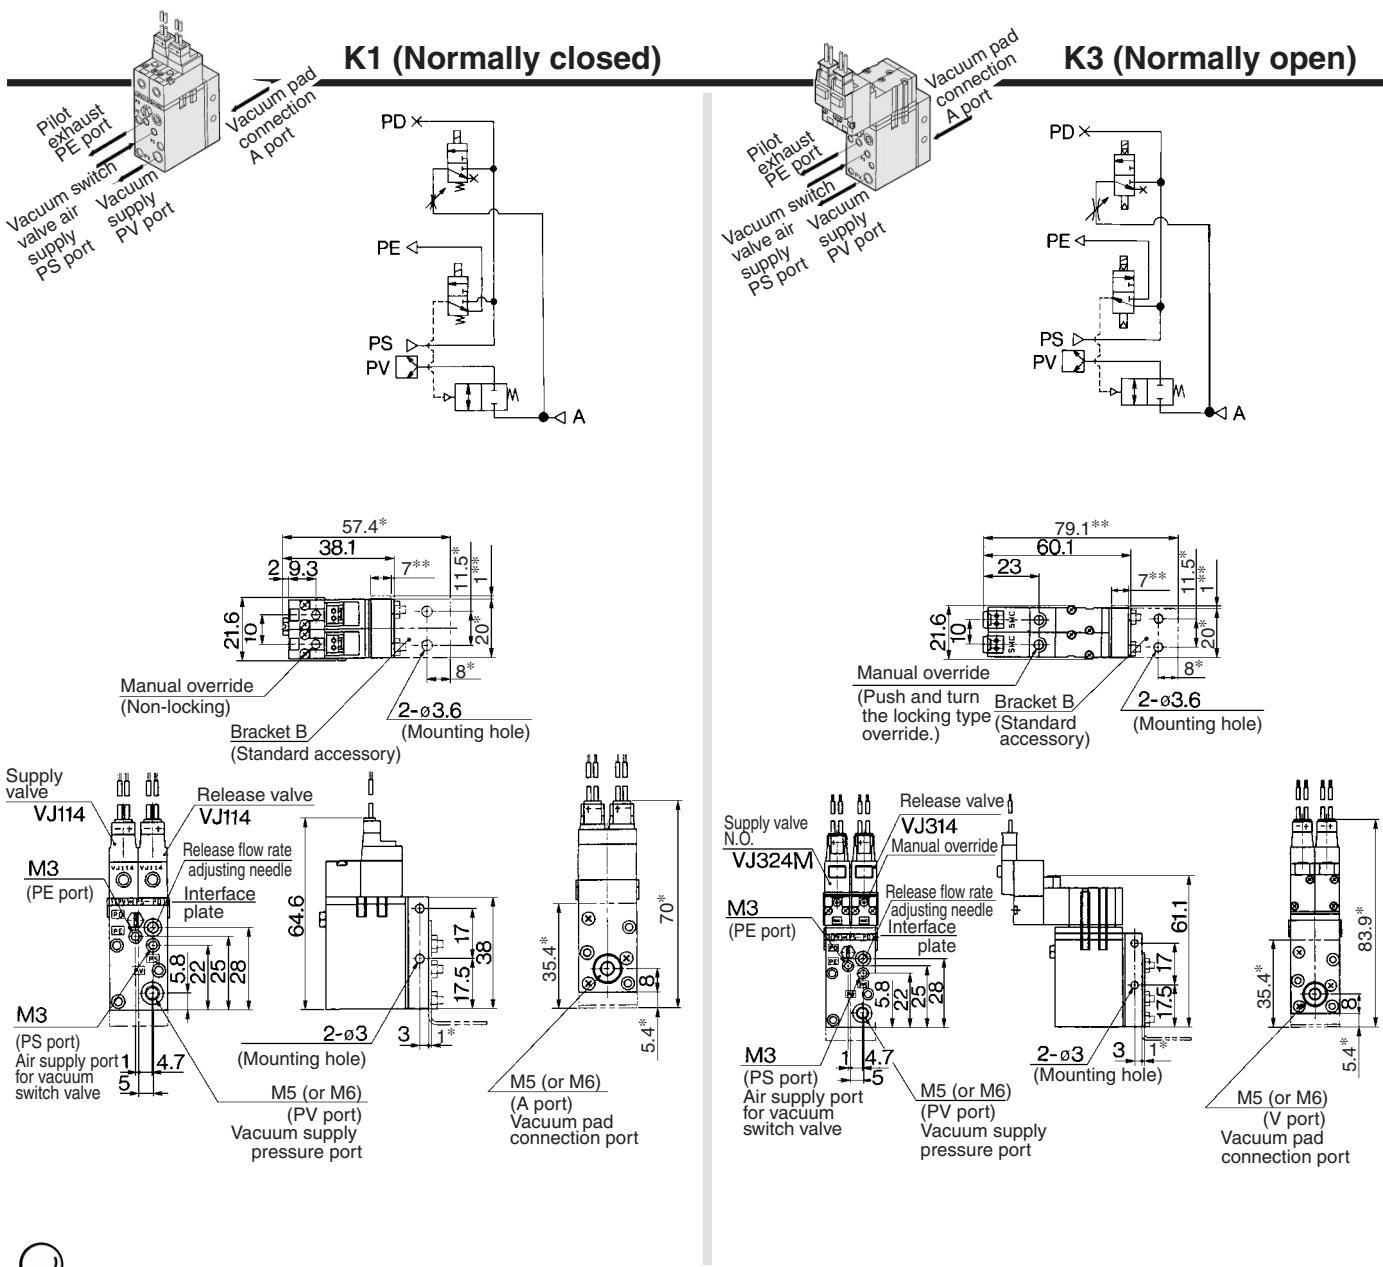

Note) Dimensions \*: For mounting bracket B \*\*: For mounting spacer

## Suction Filter Unit: ZX1-F

Refer to page 13-2-12 for details.

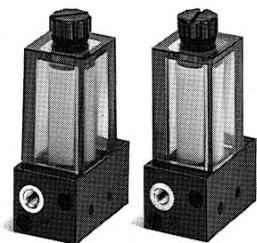

### Specifications

Unit no.	<b>ZX1-F</b>
Operating pressure range	Vacuum to 0.5 MPa
Operating temperature range	5 to 50°C
Filtration efficiency	30 µm
Element	PVF
Weight	35 g

Note) If not operated within the specified range of pressure and temperature, trouble may be caused.




## Vacuum Pressure Switch Unit/ZSE2, ZSE3, ZSP1

Refer to page 13-2-13 to 13-2-18 for details.

### Vacuum Pressure Switch

**High speed response/10 ms**

**Uses a carrier diffusion semiconductor pressure sensor**

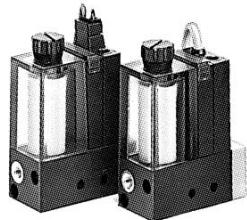

### Vacuum Pressure Switch Specifications



Refer to Best Pneumatics Vol.16 for details.

Unit no.	<b>ZSE2-0X</b>	<b>ZSE3-0X</b>
Fluid	Air	
Set pressure range	0 to -101 kPa	
Hysteresis	3% Full span or less	
Accuracy	±3% Full span (5 to 40°C) ±5% Full span (0 to 60°C)	±1% Full span
Voltage	12 to 24 VDC (Ripple ±10% or less)	
Port size	M5 x 0.8	

Note) If not operated within the specified range of pressure and temperature, trouble may be caused.




### Adsorption Confirmation Switch

**Suitable for small size adsorption nozzle/ø0.3 to ø1.2**

**With suction filter**

**Improved wiring: connector type**

**Uses a carrier diffusion semiconductor pressure sensor**

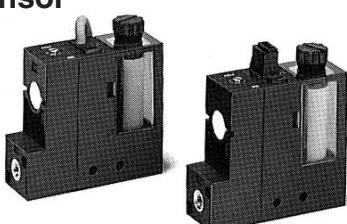

### Adsorption Confirmation Switch Specifications

Unit no.	<b>ZSP1-S</b>	<b>ZSP1-B</b>
Fluid	Air	
Operating pressure range	-20 to -101 kPa	
Applicable adsorption nozzle dia.	ø0.3 to ø0.7	ø0.5 to ø1.2
Hysteresis	0.5 kPa	
Internal orifice	ø0.5	ø0.8

#### • Filter case

#### ⚠ Caution

- The case is made of polycarbonate. Therefore, do not use it with or expose it to the following chemicals: paint thinner, carbon tetrachloride, chloroform, acetic ester, aniline, cyclohexane, trichloroethylene, sulfuric acid, lactic acid, water-soluble cutting oil (alkaline), etc.
- Do not expose it to direct sunlight.

#### • Other caution

#### ⚠ Caution

It might not be possible to successfully pick a workpiece if a picking nozzle or a picking pad that is out of the applicable range is used.

**ZX**

**ZR**

**ZM**

**ZH**

**ZU**

**ZL**

**ZY**

**ZQ**

**ZF**

**ZP**

**ZCU**

**AMJ**


**Misc.**

# Series ZX

## Valve Unit: Type K1

### Configuration and combination

<b>Valve unit (K1)</b>	<b>+ Vacuum switch (ZSE2)</b>
	<b>+ Vacuum switch (ZSE3)</b>
	<b>+ Adsorption confirmation switch (ZSP1)</b>
	<b>+ Filter unit (F)</b>

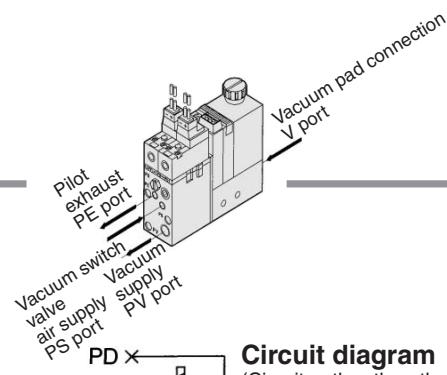


**Model**  
**ZX100**

K1□□□□


E□  
D□  
P□□  
F

### Vacuum switch (ZSE2)


**ZX100-K1□□□□-E□**

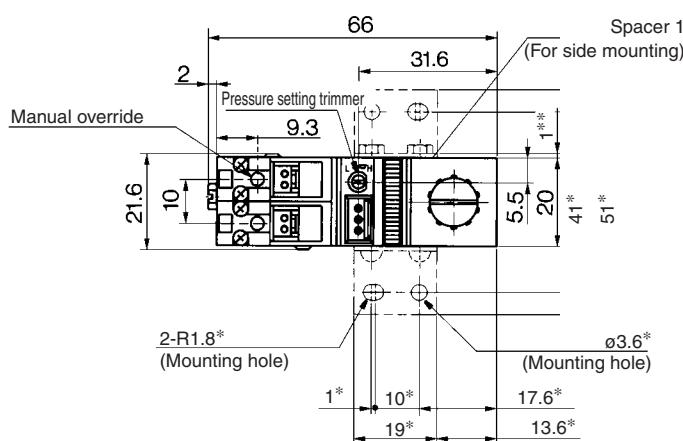



**Circuit diagram**  
(Circuits other than those with vacuum switch are shown as below.)

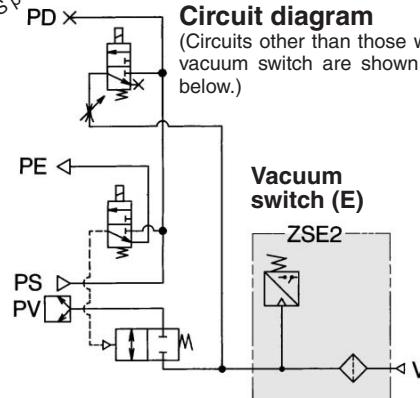

### Adsorption confirmation switch (P)

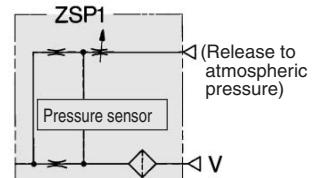


### Filter unit (F)

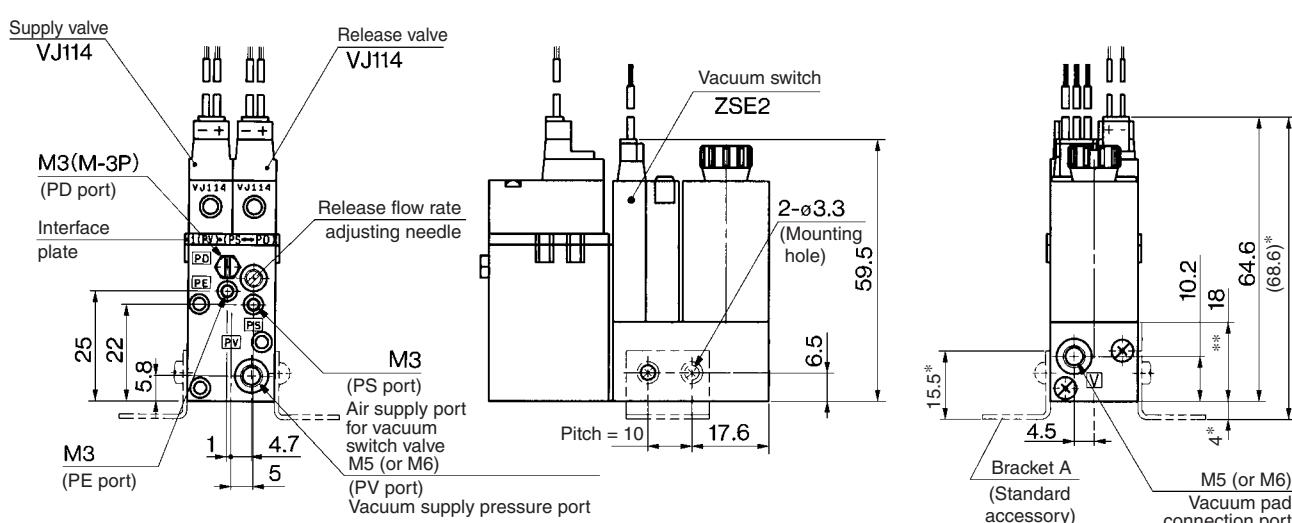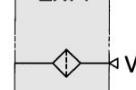


Note) Dimensions \*: For mounting bracket A \*\*: For mounting spacer 1.


**Vacuum switch (ZSE3)**  
**ZX100-K1□□□□-D□□**

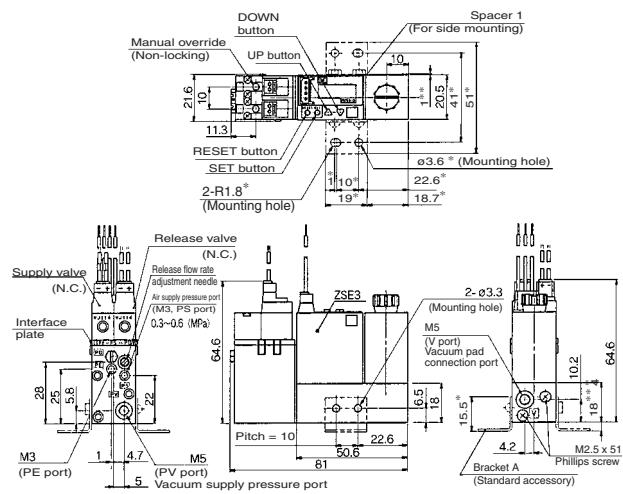

**Adsorption confirmation switch (ZSP1)**  
**ZX100-K1□□□□-P□□**

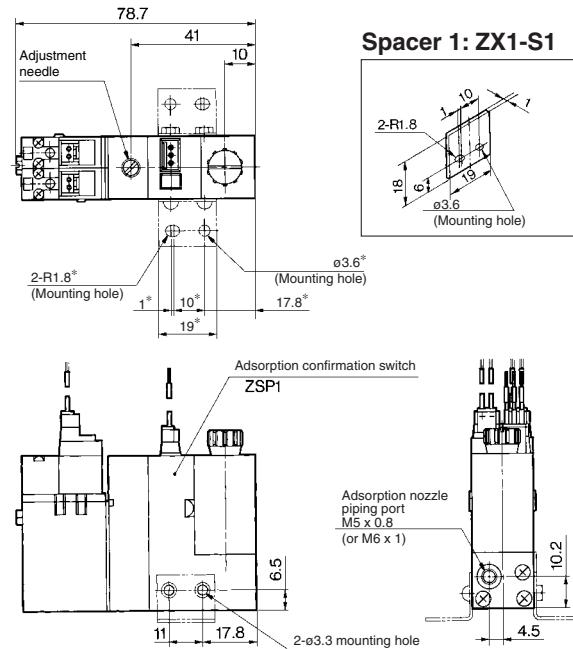

**Filter unit (F)**  
**ZX100-K1□□□□-F**

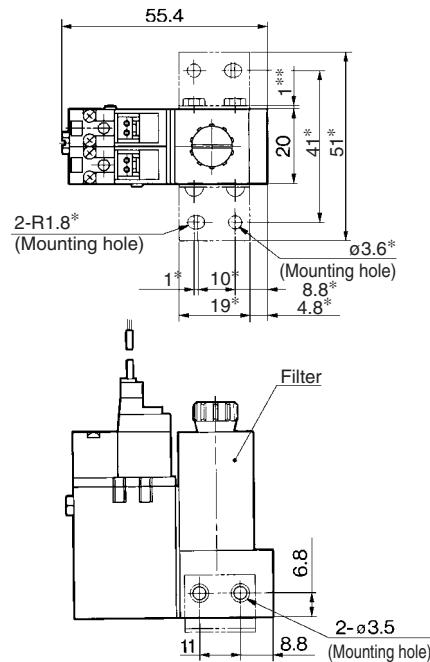


**ZX**  
**ZR**  
**ZM**  
**ZH**  
**ZU**  
**ZL**  
**ZY**  
**ZQ**  
**ZF**  
**ZP**  
**ZCU**  
**AMJ**  
**Misc.**

# Series ZX


## Valve Unit: Type K3

### Configuration and combination







**Valve unit (K3)** + **Vacuum switch (ZSE2)**  
**Adsorption confirmation switch (ZSP1)**  
**Filter unit (F)**

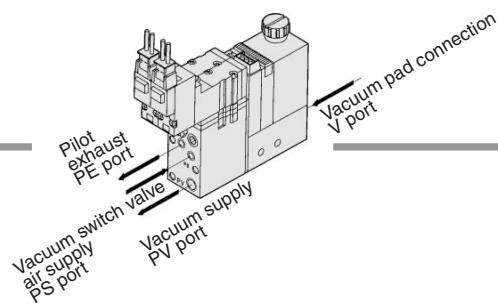

Model  
ZX100 — K3□□□□ — E□  
P□□ F

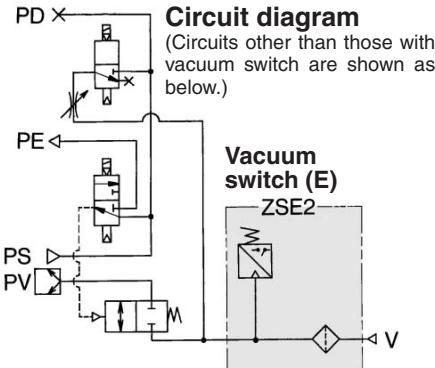


### Vacuum switch (ZSE2) ZX100-K3□□□-E□

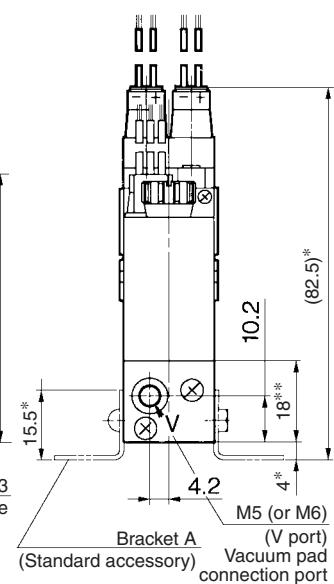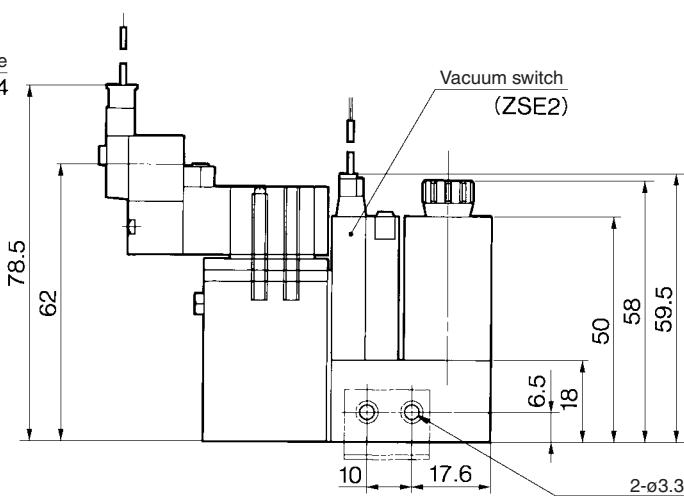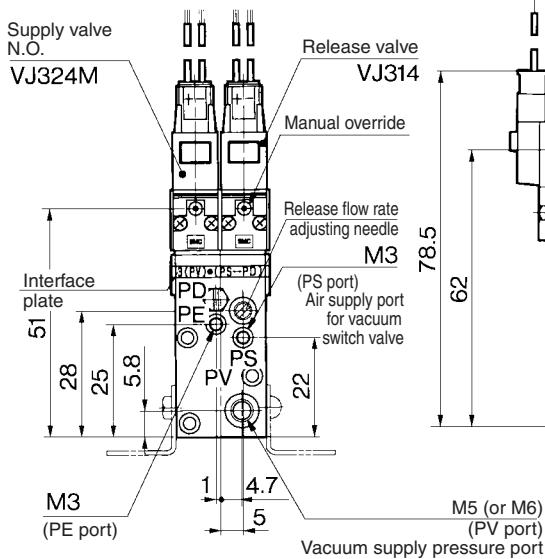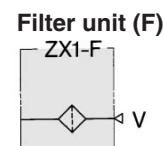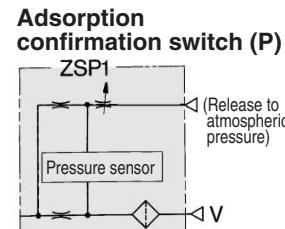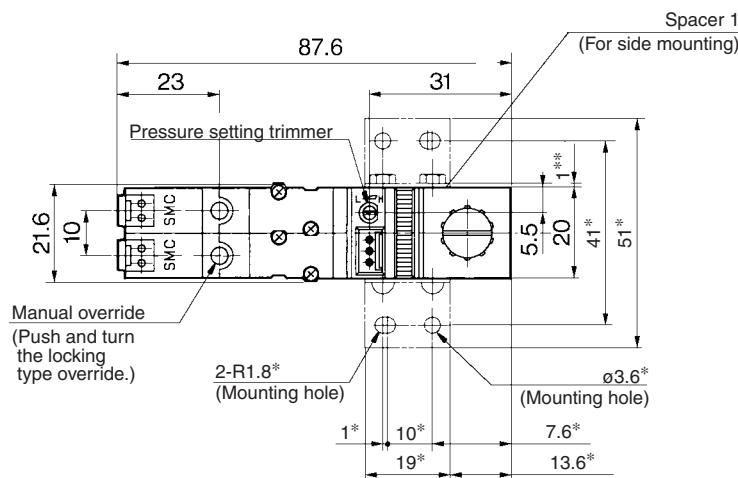


Note) Dimensions \*: For mounting bracket A \*\*: For mounting spacer 1.

**Adsorption confirmation  
switch (ZSP1)  
ZX100-K3□□□□-P□□**

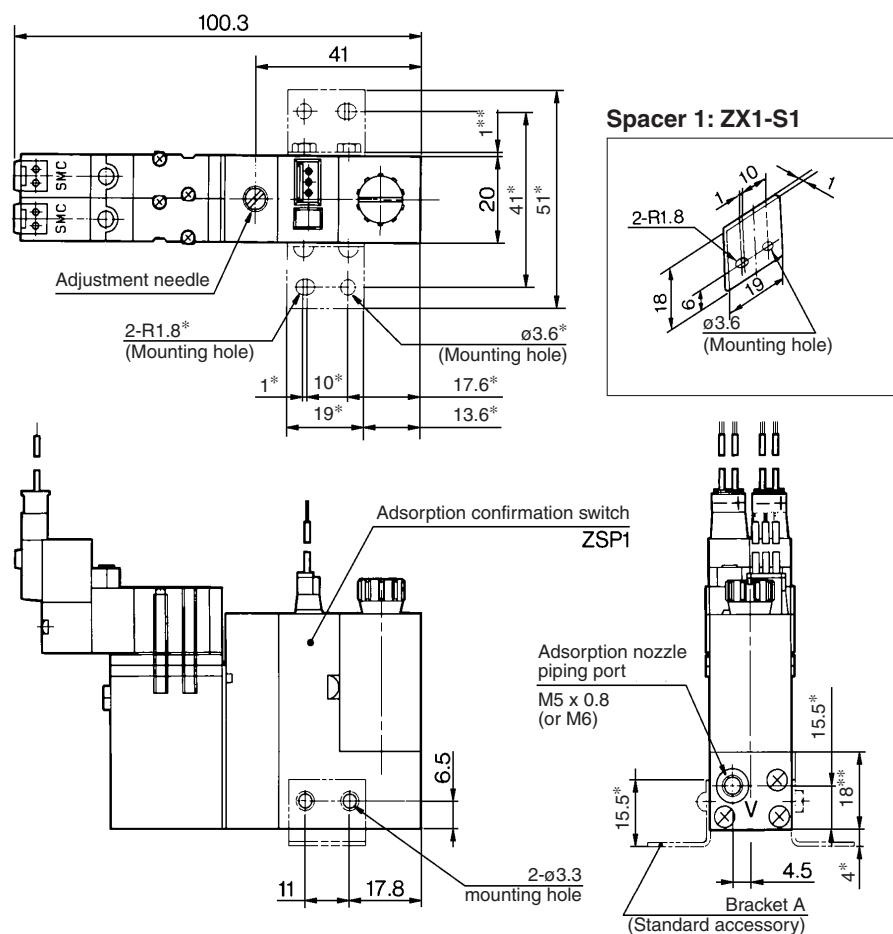

**Filter unit (F)  
ZX100-K3□□□□-F**

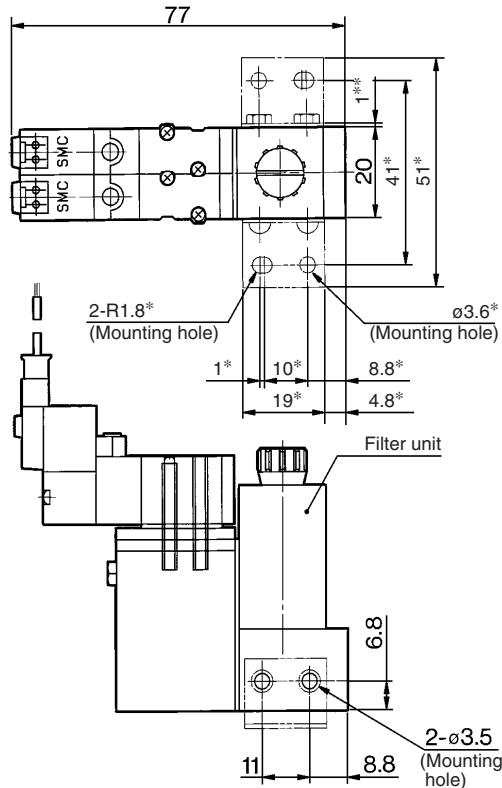

ZX  
ZR  
ZM  
ZH  
ZU  
ZL  
ZY  
ZQ  
ZF  
ZP  
ZCU  
AMJ

Misc.


# Series ZX

## Valve Unit: Type K6


### Configuration and combination

**Valve unit (K6)** + **Vacuum switch (ZSE2)**  
+ **Adsorption confirmation switch (ZSP1)**  
+ **Filter unit (F)**


**Model** **ZX100** **K6**  
**E**□ **P**□□ **F**

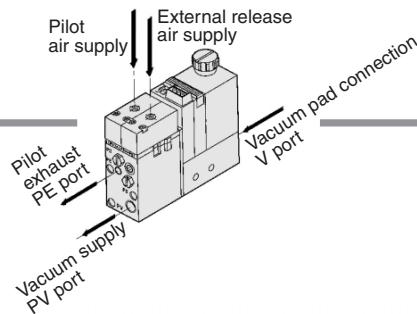


**Circuit diagram**  
(Circuits other than those with vacuum switch are shown as below.)

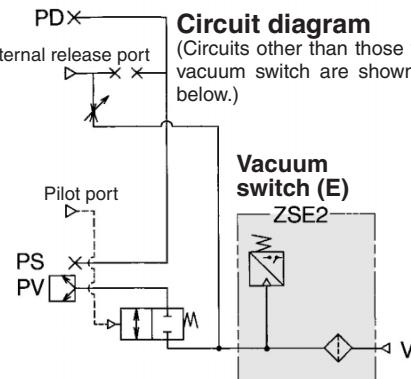




**Vacuum switch (ZSE2)**  
**ZX100-K6-E□**

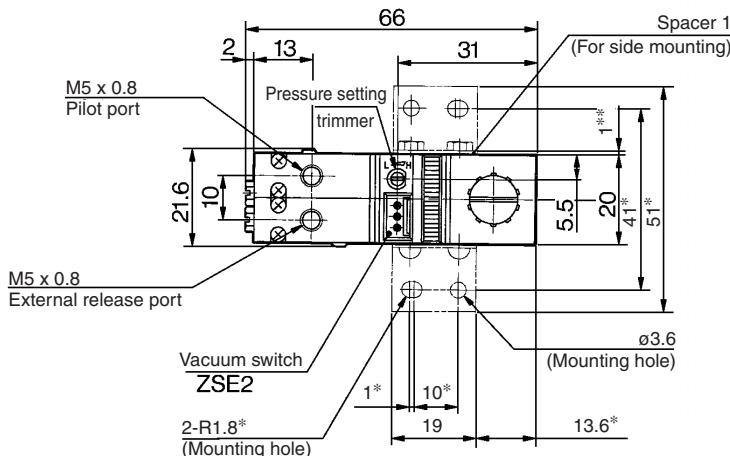

**Adsorption confirmation switch (P)**

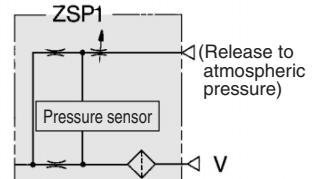


**Filter unit (F)**

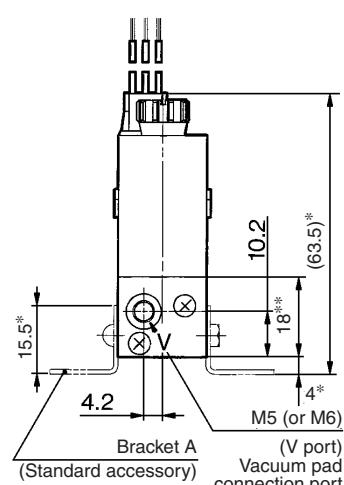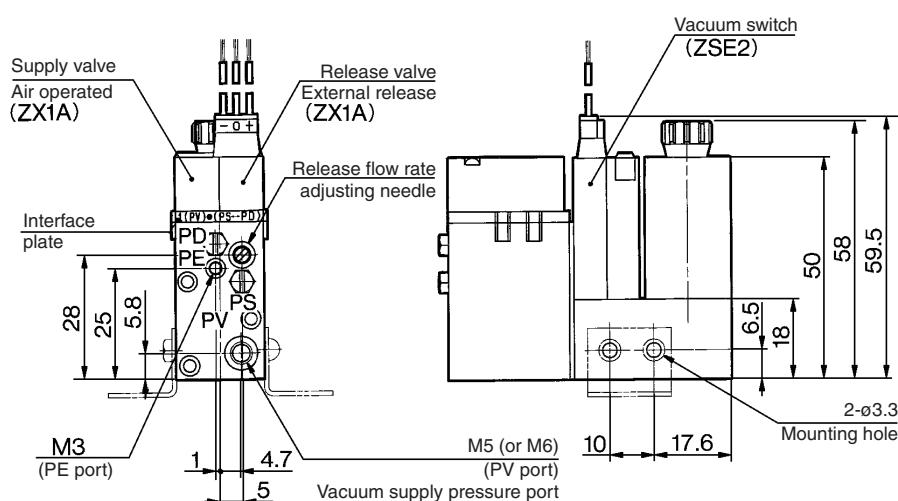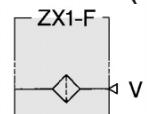



Note) Dimensions \*: For mounting bracket A \*\*: For mounting spacer 1.

**Adsorption confirmation switch (ZSP1)**



ZX100-K6-P□□

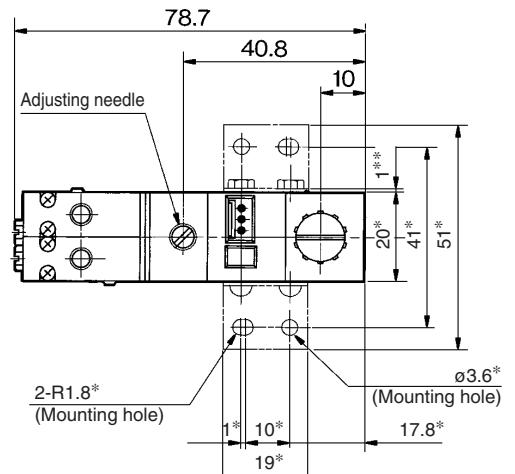

**Spacer 1: ZX1-S1**

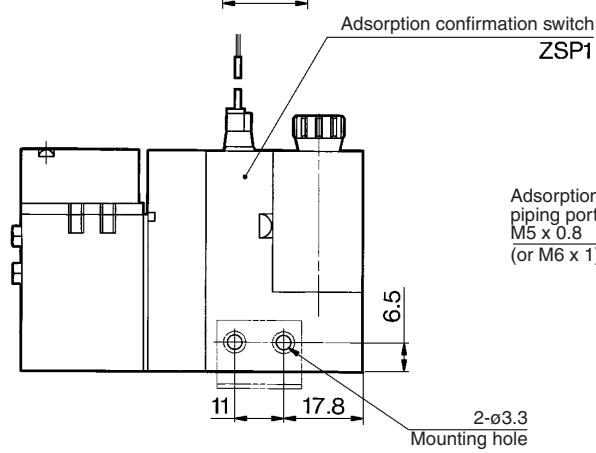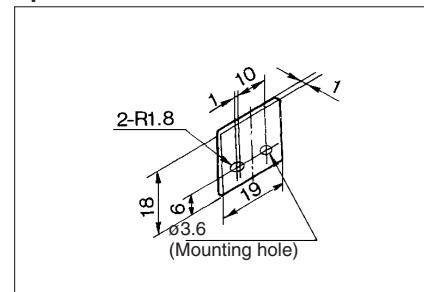

**Filter unit (F)**  
ZX100-K6-F

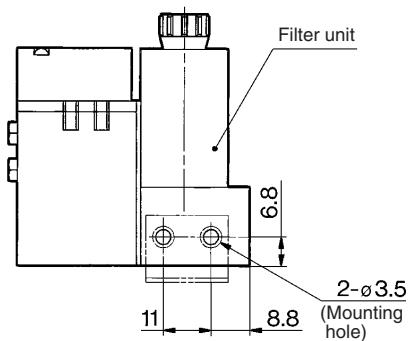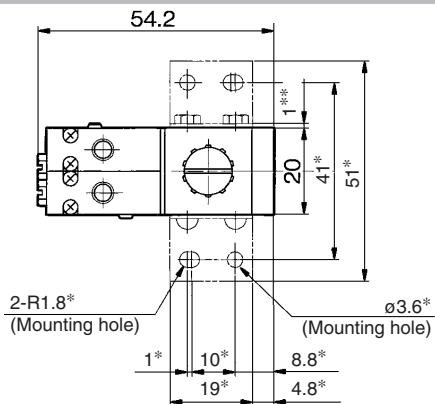

**ZX**  
**ZR**  
**ZM**  
**ZH**  
**ZU**  
**ZL**  
**ZY**  
**ZQ**  
**ZF**  
**ZP**  
**ZCU**  
**AMJ**  
**Misc.**


# Series ZX

## Valve Unit: Type K8

### Configuration and combination

**Valve unit (K8)** + **Vacuum switch (ZSE2)**  
**Valve unit (K8)** + **Adsorption confirmation switch (ZSP1)**  
**Valve unit (K8)** + **Filter unit (F)**

**Model**  
**ZX100** ————— **K8** —————  
**E**□  
**P**□□  
**F**

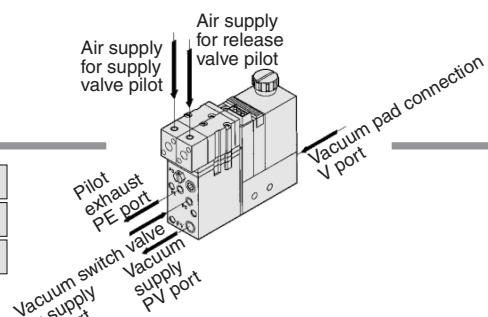

Vacuum switch valve  
Vacuum supply  
PV port

Pilot exhaust  
PE port

Air supply  
PS port

Air supply  
for release  
valve pilot

Air supply  
for supply  
valve pilot

**Circuit diagram**  
(Circuits other than those with vacuum switch are shown as below.)

PD×  
Pilot port ▷

PE◀  
Pilot port ▷

PS ▷  
PV ▷

M

V





**Vacuum switch (E)**  
**ZSE2**

**Adsorption confirmation switch (P)**  
**ZSP1**

(Release to atmospheric pressure)

**Filter unit (F)**  
**ZX1-F**


V

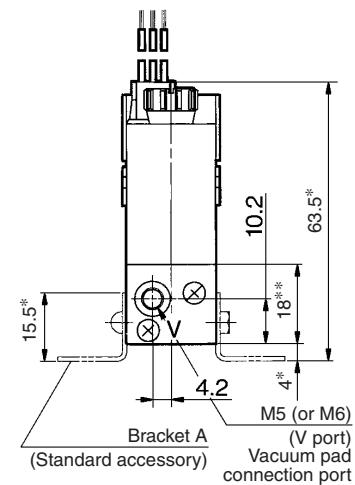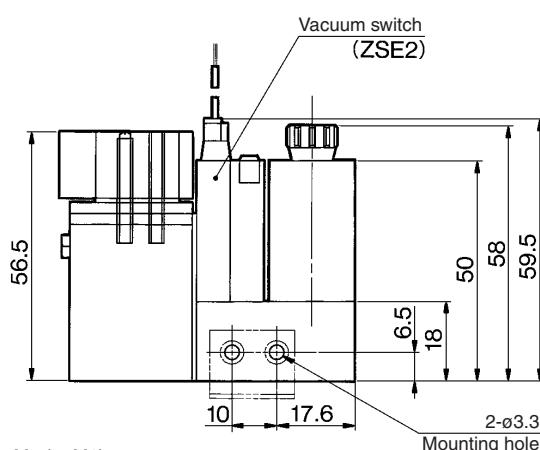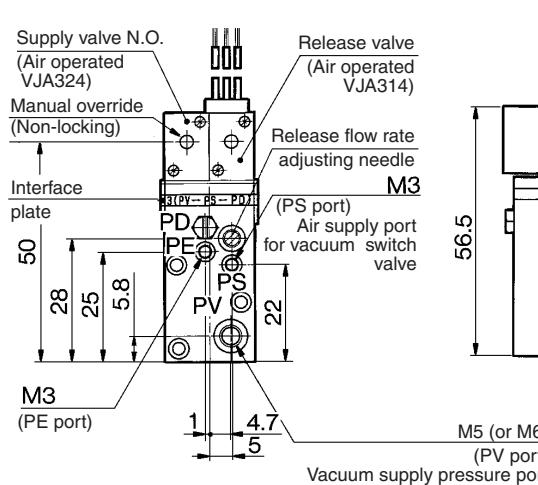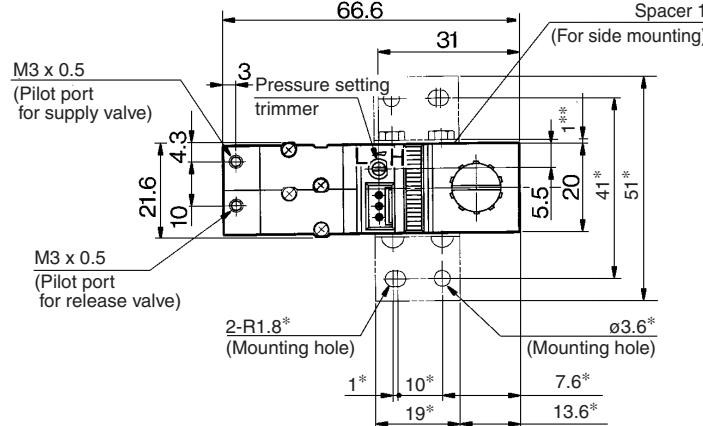




Note) Dimensions \*: For mounting bracket A \*\*: For mounting spacer 1.

**Adsorption confirmation switch (ZSP1)**

ZX100-K8-P□□


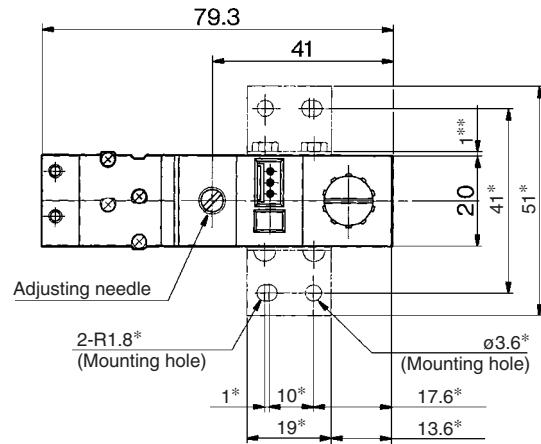


**Spacer 1: ZX1-S1**

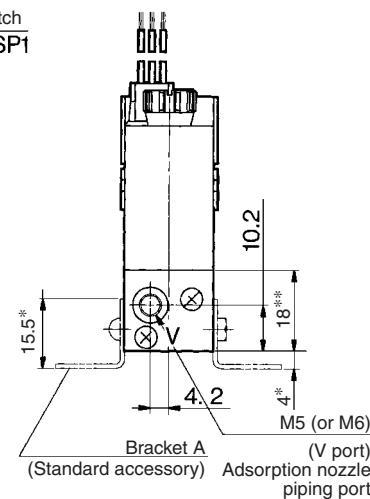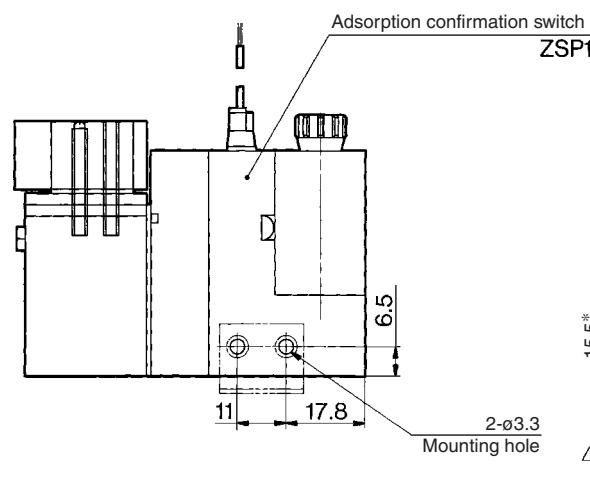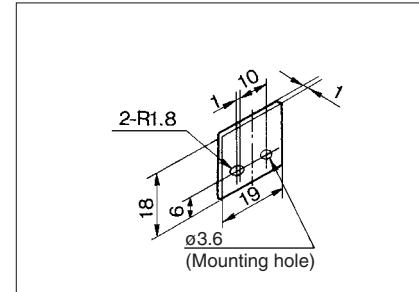

**Filter unit (F)**



ZX100-K8-F

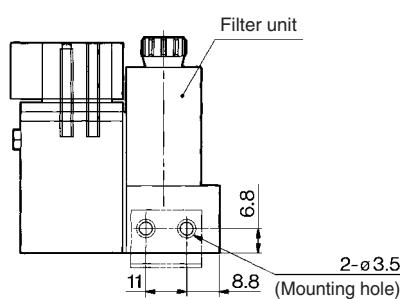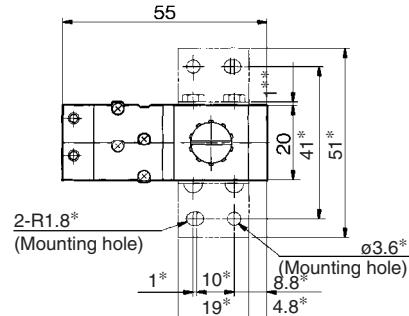

**ZX**  
**ZR**  
**ZM**  
**ZH**  
**ZU**  
**ZL**  
**ZY**  
**ZQ**  
**ZF**  
**ZP**  
**ZCU**  
**AMJ**  
**Misc.**

# Series ZX

## Vacuum Pump System/Manifold Specifications

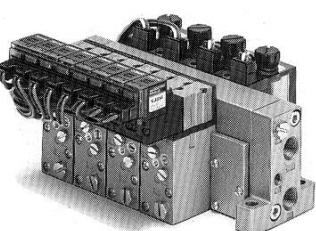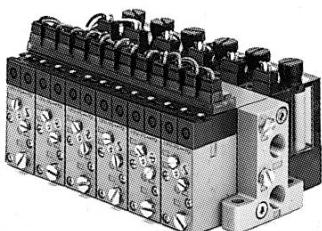

### Function

Max. number of units	8 units
Function	Vacuum supply from PV port of the manifold is common supply. Air supply from PS port is common supply.

### When Using Individual Spacer R1

Function	Separates air supply from manifold and makes units be used one by one.
----------	--

### Specifications

Port	Port size	Function
PV port	Rc 1/8	External vacuum pump connection
PS port	M5	Air supply for vacuum valve
EXH port	Rc 1/8	Common exhaust
Weight	1 station: 73 g (50 g per additional station)	

Note 1) PD port: Blank

Note 2) Vacuum from both sides of PV port for 6 or more stations of ZX100 external vacuum pump manifold.

### Air Supply

Supply port location	Port	Manifold		Left side		Right side	
		PV	PS	PV	PS	PV	PS
L		○	○	●	●		
R		●	●	○	○		
B		○	○	○	○		

○: Vacuum supply from PV port   ○: Air supply from PS port

●: Plugged

Note) All ports for each valve unit are provided with plugs.



### Manifold Specification Sheet

When ordering the manifold type of series ZX, use the manifold specification sheet on page 13-14-19.


### When Using Individual Spacer R1

It functions as a single unit. Vacuum is supplied from PV port of valve unit. PE port is released to atmospheric pressure. Other ports are plugged.

## How to Order Manifold

Indicate the vacuum module, blank plate and individual spacer below the manifold base part number.

### <Manifold base>

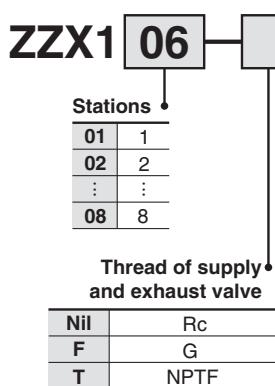

### Supply port location

Symbol	Supply port location *1	Air Supply	
		Vacuum supply	Air supply
R	Right side	PV port on the right side	PS port on the right side
L	Left side	PV port on the left side	PS port on the left side
B	Both sides	PV port on both sides	PS port on both sides

\* 1 Viewed from the front side of valve unit, confirm the port location on the right and/or left side.

\* 2 EXH ports are released to atmospheric pressure in both sides. Plugs are always attached to PD ports and all ports of the valve unit.

(Ordering example)

**ZZX106-R** ..... 1 pc. (Manifold base)  
\*ZX100-K15LZ-EC ..... 5 pcs. (Vacuum single unit)  
\*ZX-BM1 ..... 1 pc. (Blank plate)

### <Individual spacer>



### Arrangement

(First station from the right end of the valve side is station 1.)

Nil	All stations
1	Station 1 only
:	:
8	Station 8 only


\* When spacers are mounted alternately, specify them together.

(Ordering example)

If mounted on station 1 and station 3:  
**ZZX106-R** ..... 1 pc.  
\*ZX100-K15LZ-EC ..... 6 pcs.  
\*ZX1-R1-1  
\*ZX1-R1-3  
\*ZX1-R16 ..... 4 pcs.


**Manifold/System Circuit Example**

When not using individual air pressure supply

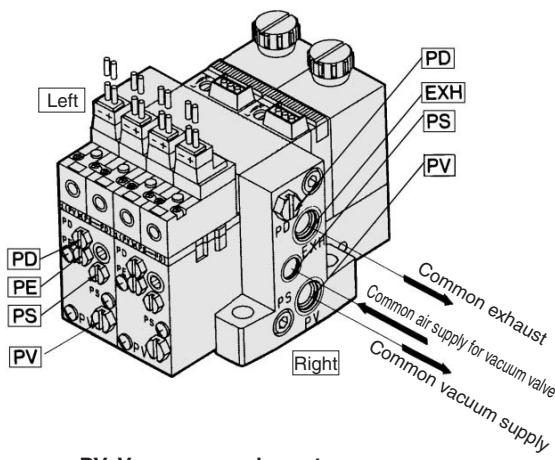


PV: Vacuum supply port  
PS: Air supply port for vacuum valve  
PD: Air supply port for release valve  
PE: Pilot exhaust port  
EXH: Common exhaust port


When using individual air pressure supply

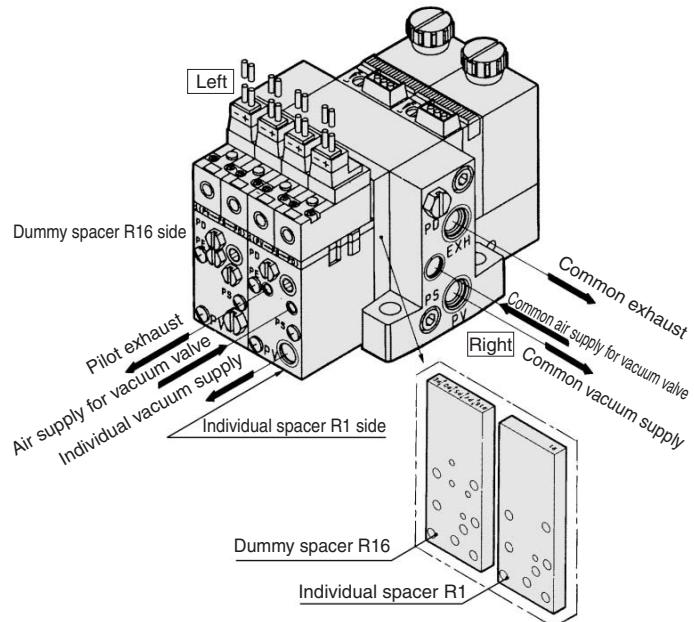

<System circuit example>

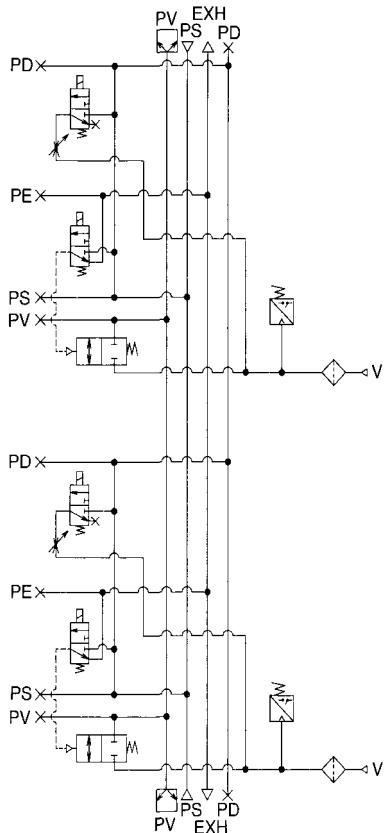





<System circuit example>

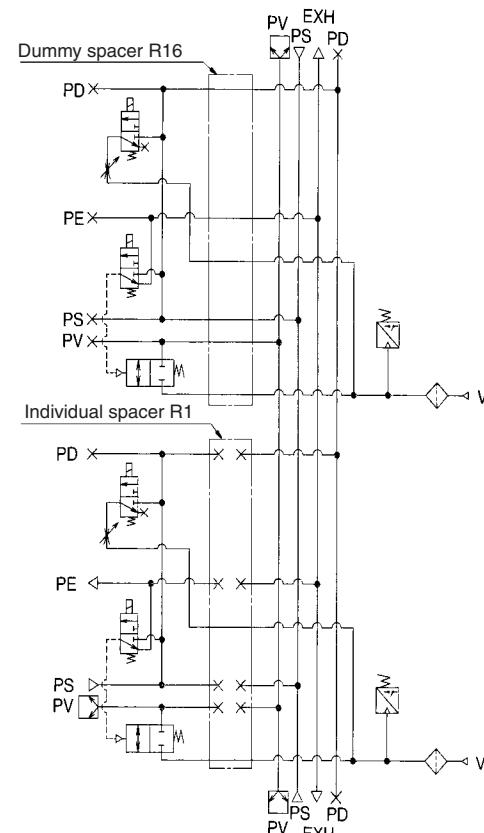

ZX  
ZR  
ZM  
ZH  
ZU  
ZL  
ZY  
ZQ  
ZF  
ZP  
ZCU  
AMJ  
Misc.

# Series ZX


## Vacuum Pump System Manifold

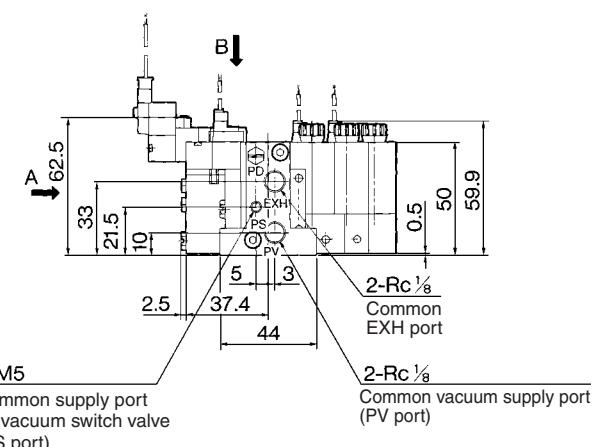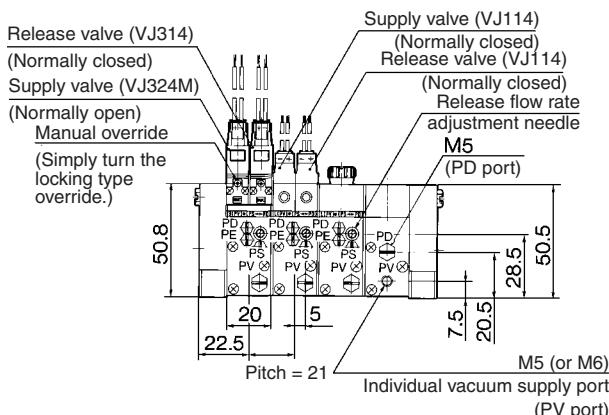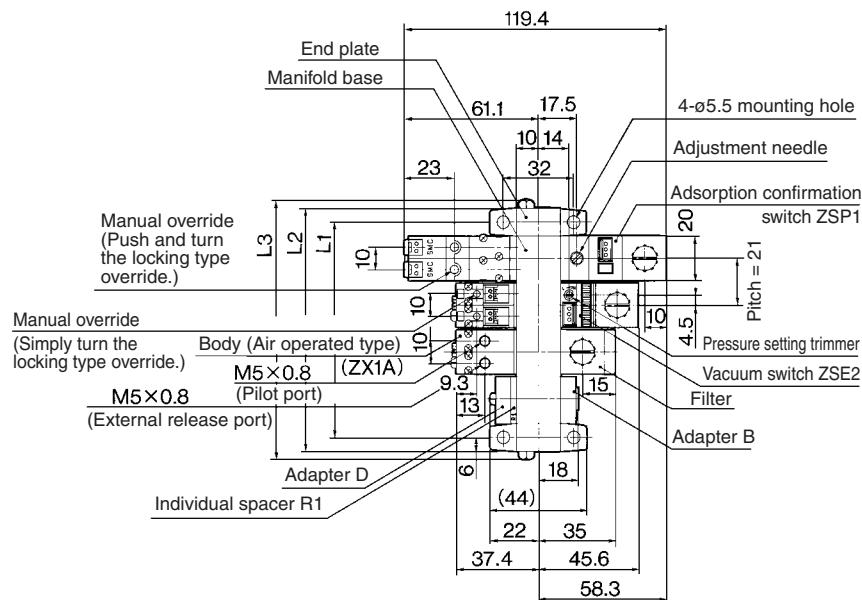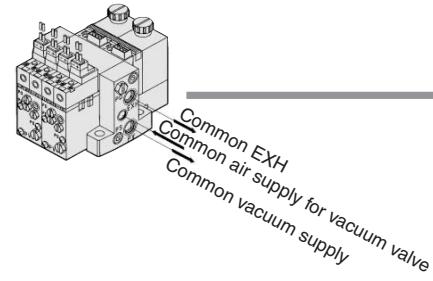



Symbol	Stations	1	2	3	4	5	6	7	8
L1		33	54	75	96	117	138	159	180
L2		45	66	87	108	129	150	171	192
L3		50	71	92	113	134	155	176	197

(In the case of  
individual air pressure supply)

**B cross section**

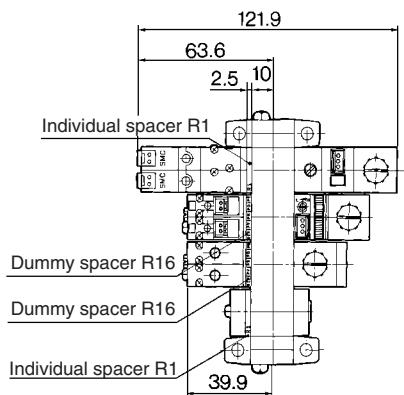


**A cross section**

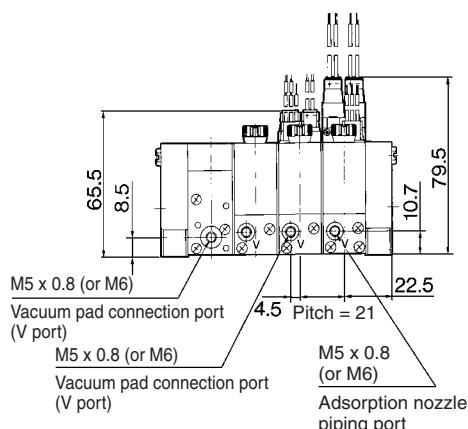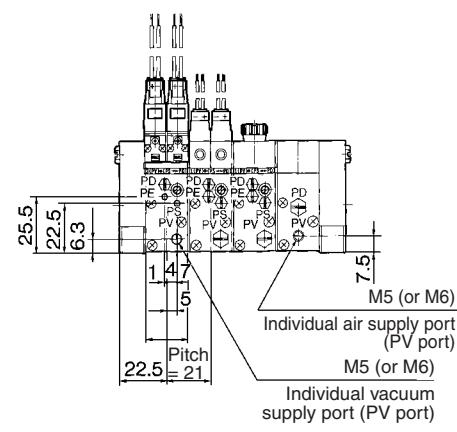


### System circuit example

**(Standard)**

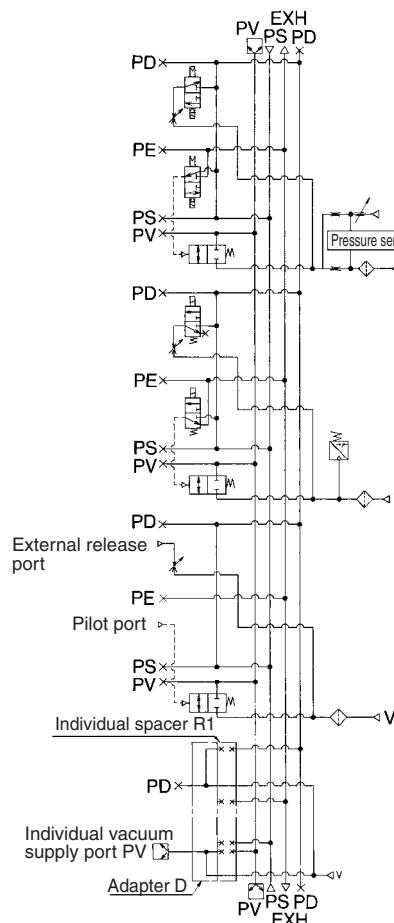


**(Option)  
(In the case of  
individual vacuum pressure supply)**

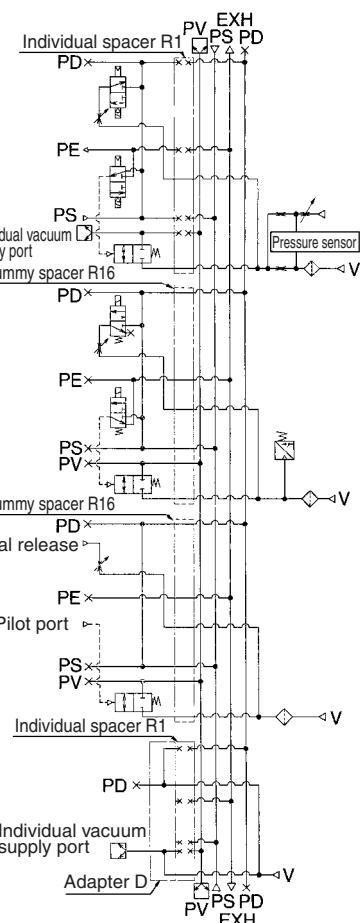

**ZX**  
**ZR**  
**ZM**  
**ZH**  
**ZU**  
**ZL**  
**ZY**  
**ZQ**  
**ZF**  
**ZP**  
**ZCU**  
**AMJ**  
**Misc.**

# Series ZX




## Vacuum Pump System Manifold: Type K1

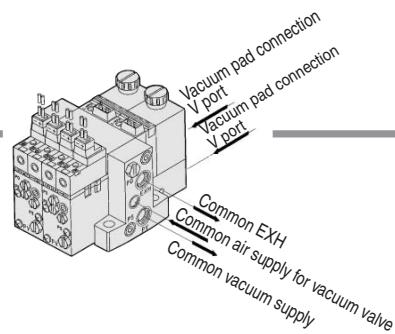

### Type K1

ZZX1□□-□□



ZX100-K1□L□-E□-□

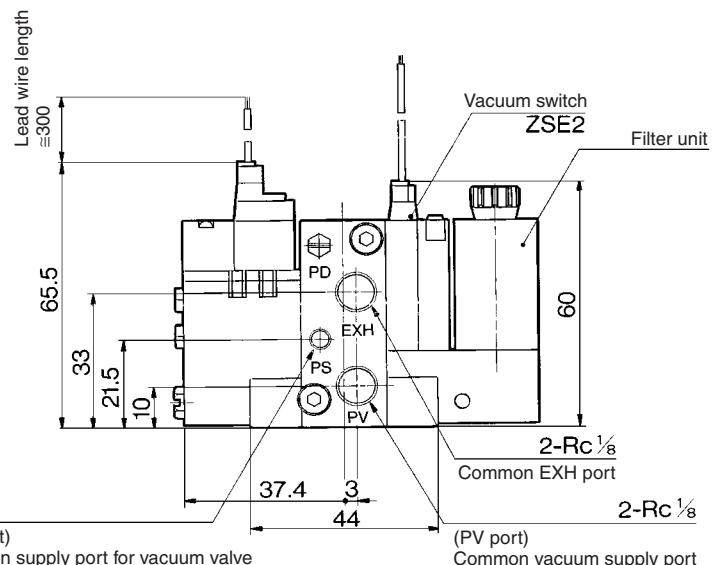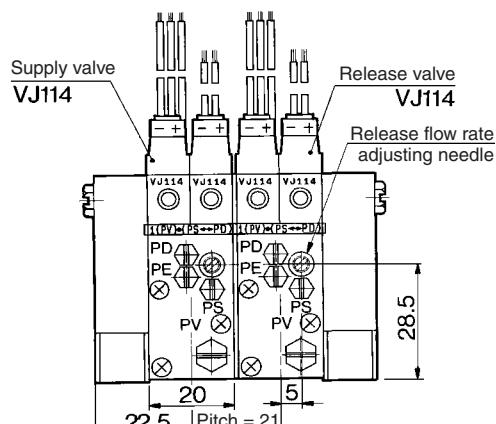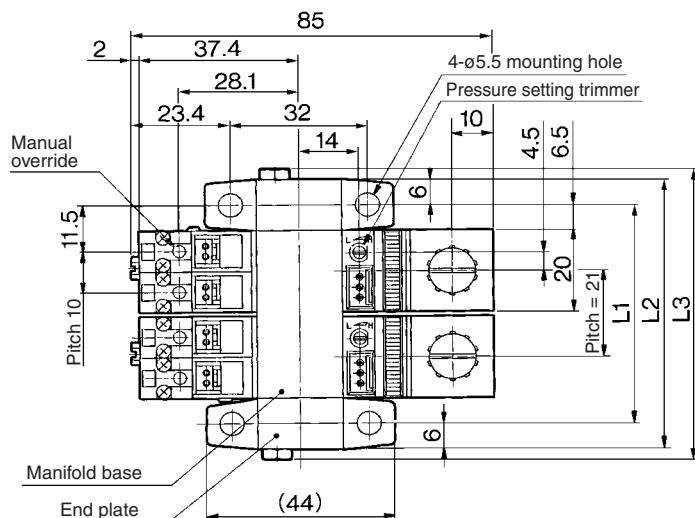

Symbol	Stations	(mm)							
		1	2	3	4	5	6	7	8
L <sub>1</sub>		33	54	75	96	117	138	159	180
L <sub>2</sub>		45	66	87	108	129	150	171	192
L <sub>3</sub>		50	71	92	113	134	155	176	197


ZX  
ZR  
ZM  
ZH  
ZU  
ZL  
ZY  
ZQ  
ZF  
ZP  
ZCU  
AMJ  
Misc.

Circuit diagram

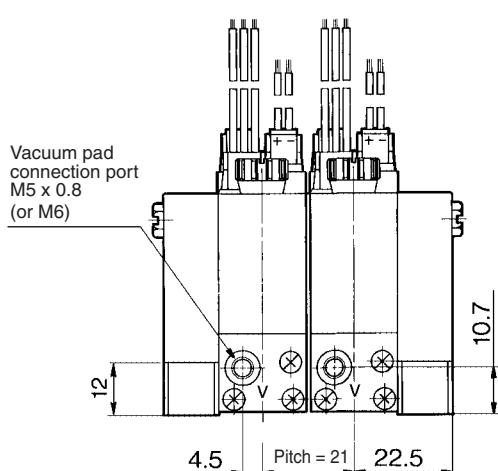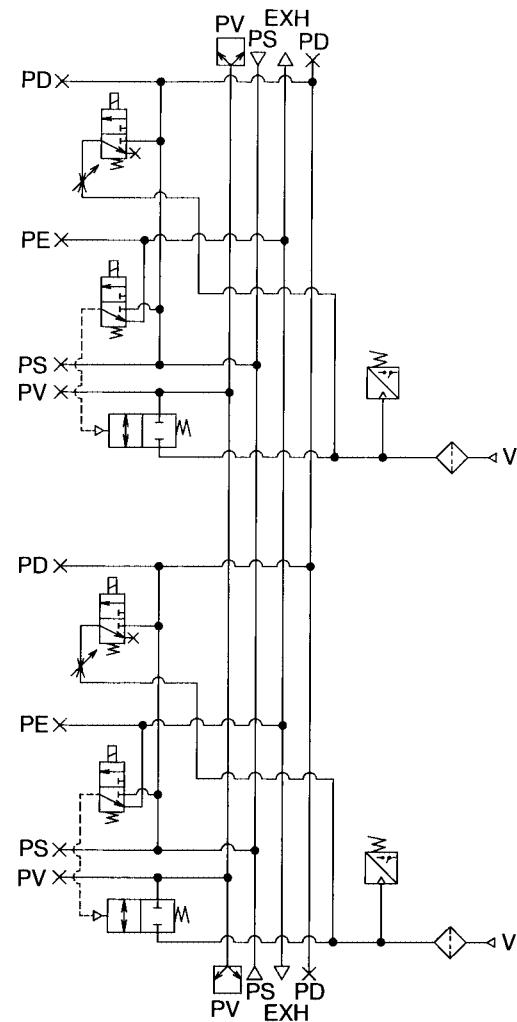

# Series ZX




## Vacuum Pump System Manifold: Type K3

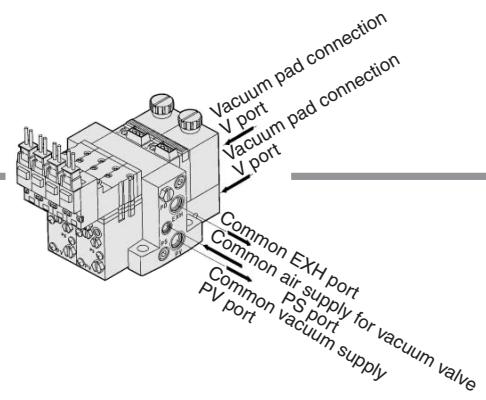

### Type K3


ZZX1□□-□□

ZX100-K3□□□-E□-□

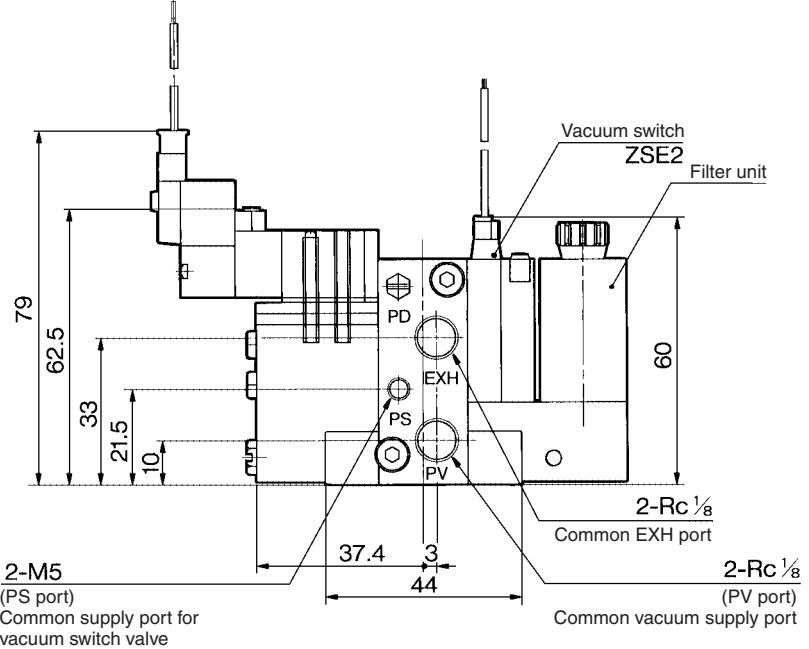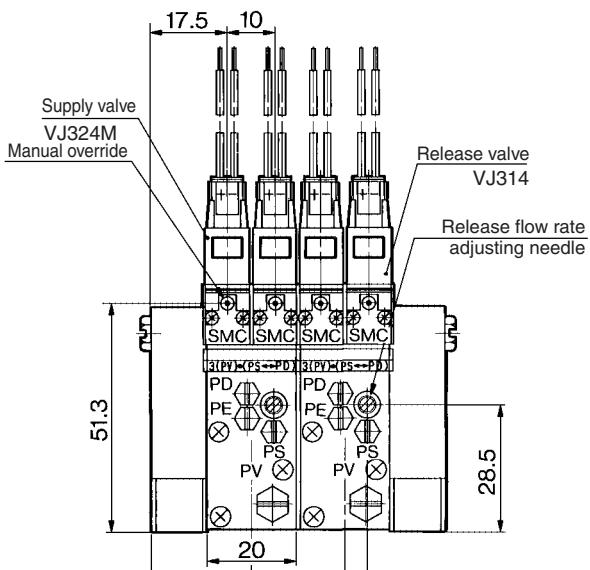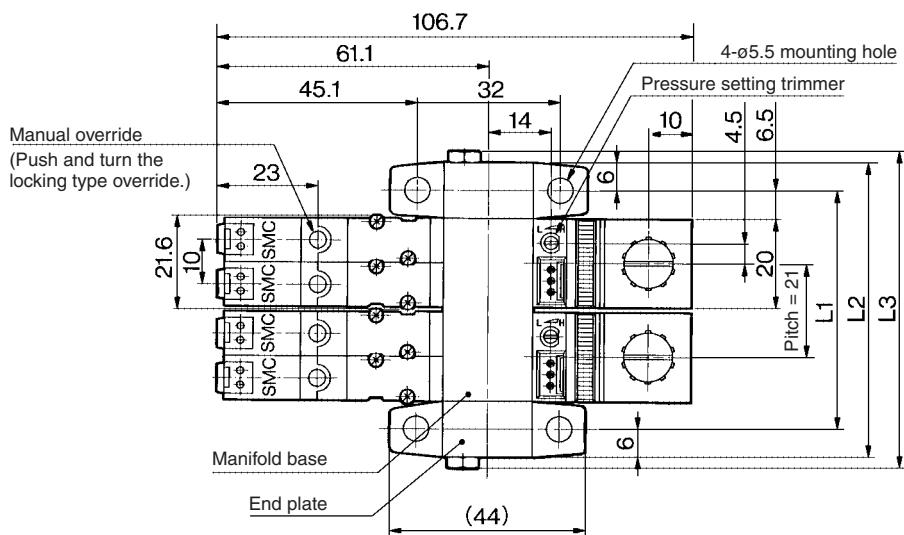


Symbol	Stations	1	2	3	4	5	6	7	8	(mm)
L <sub>1</sub>		33	54	75	96	117	138	159	180	
L <sub>2</sub>		45	66	87	108	129	150	171	192	
L <sub>3</sub>		50	71	92	113	134	155	176	197	

ZX  
ZR  
ZM  
ZH  
ZU  
ZL  
ZY  
ZQ  
ZF  
ZP  
ZCU  
AMJ  
Misc.

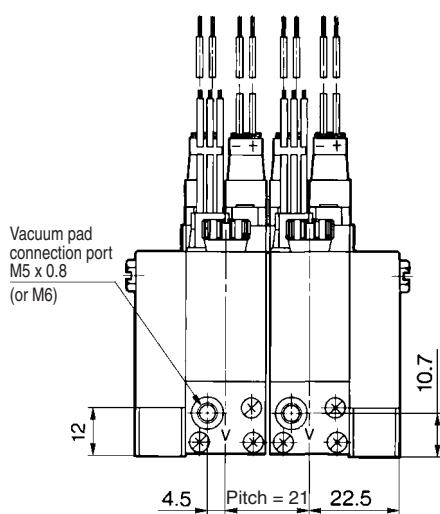


**Circuit diagram**

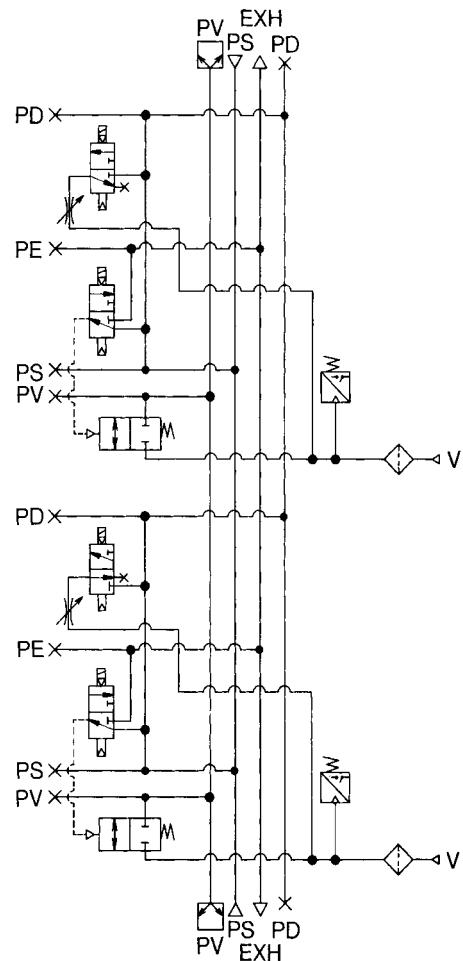

# Series ZX

## Ejector System/Unit Construction (Refer to below for unit replacement.)

### Single

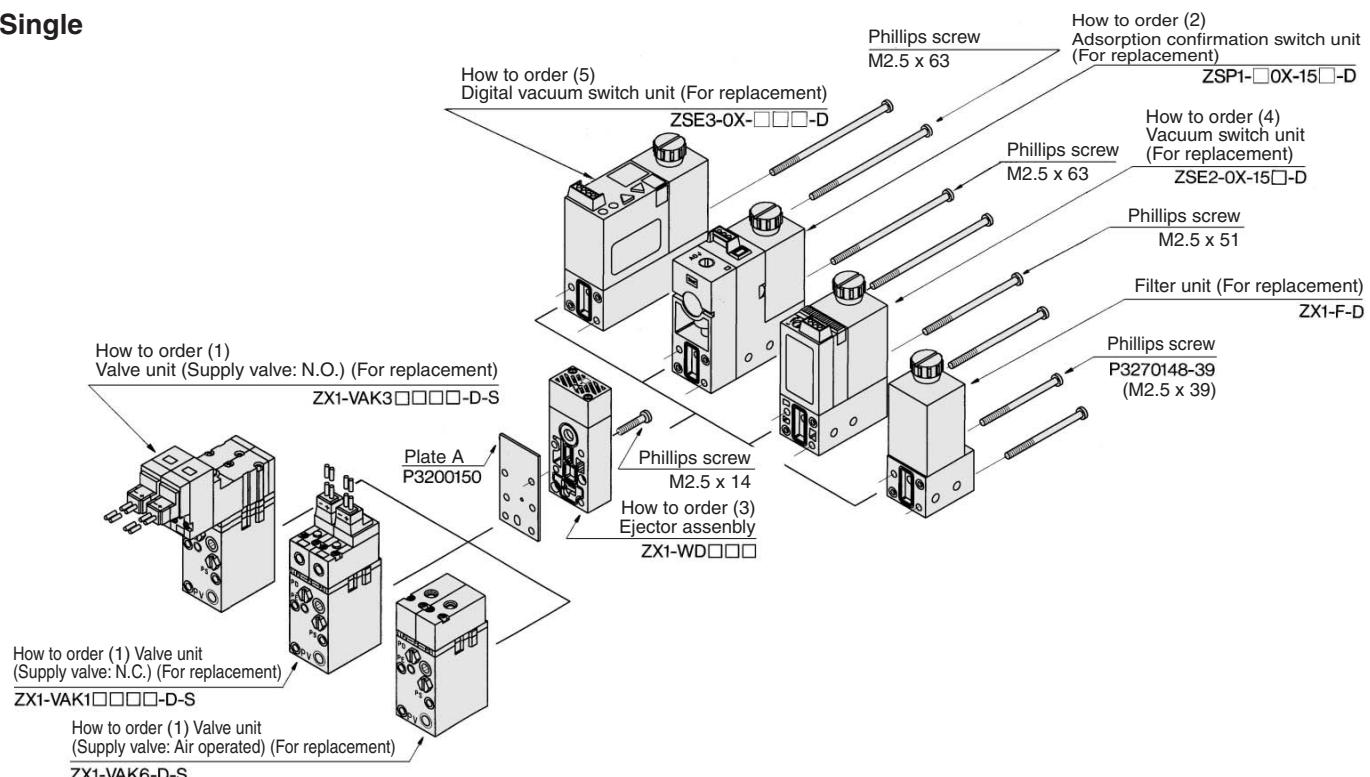

### How to Order Unit for Replacement

#### (1) Valve unit

<b>ZX1-V A K1</b>	<b>5</b>	<b>L</b>	<b>Z</b>	<b>B-D-S</b>
For ejector system				Single (PD and PS ports are equipped with plugs.)
Combination of supply valve and release valve (Refer to page 13-2-42 for details.)				Unit for replacement
Pilot valve				Manual operation
Nil DC: 1 W (With indicator light: 1.05 W)				Nil Non-locking push type
AC				B Locking slotted type
Y * DC: 0.45 W (With indicator light: 0.5 W)				Light/Surge voltage suppressor
* 24 VDC and 12 VDC are applicable to 0.45 W.				Nil None
Voltage				Z With light/surge voltage suppressor
1 * 100 VAC 50/60 Hz				Electrical entry
3 * 110 VAC 50/60 Hz				L L plug connector
5 24 VDC				
6 12 VDC				
V 6 VDC				
S 5 VDC				
R 3 VDC				

\* Applicable to plug connector. (Connector assembly with rectifier is attached.)

#### (2) Adsorption confirmation switch unit

<b>ZSP1-B 0X-15</b>	<b>C-D</b>
Applicable nozzle diameter	Unit for replacement
S ø0.3 to ø0.7 mm	Piping specifications
B ø0.5 to ø1.2 mm	Nil Grommet (0.6 m)
	L Grommet (3 m)
	C Connector (0.6 m)
	CL Connector (3 m)
	CN Without connector

#### (3) Ejector assembly

<b>ZX1-W D 05</b>	<b>1</b>
Unit for replacement	Ejector exhaust
Nozzle diameter	1 Built-in silencer
05 0.5 mm	2 Port exhaust Rc 1/8
07 0.7 mm	
10 1.0 mm	

#### (4) Vacuum switch unit

**ZSE2-0X-15 C-D**

<b>Piping specifications</b>	
Nil	Grommet (0.6 m)
L	Grommet (3 m)
C	Connector (0.6 m)
CL	Connector (3 m)
CN	Without connector

#### (5) Digital vacuum switch unit

**ZSE3-0X-21 C-D**

Unit for replacement	Piping specifications
Pressure indication	C Connector (0.6 m)
Output specifications	

Nil	kPa	21	2 outputs/without analog output
		22	2 outputs/with analog output
P	kPa	23	1 output (with trouble detection)/without analog
		24	1 output (with trouble detection)/with analog

Note) Analog output is available only on grommet type.


#### D: Unit for replacement

Ex.) If an adsorption confirmation switch is replaced for a vacuum switch on ZX1071-K15LZ-PBC, indicate as ZSE2-0X-15C-D. In this case, mounting screws 3270148-49 (2 pcs.) are required.

If the unit is used on its own, not combined with others, "D" is not required. (Valve unit, ejector assembly and switch unit)


Ex.) ZSE2-0X-15C, ZX1-VAK15LZ, ZX1-W051

## Manifold

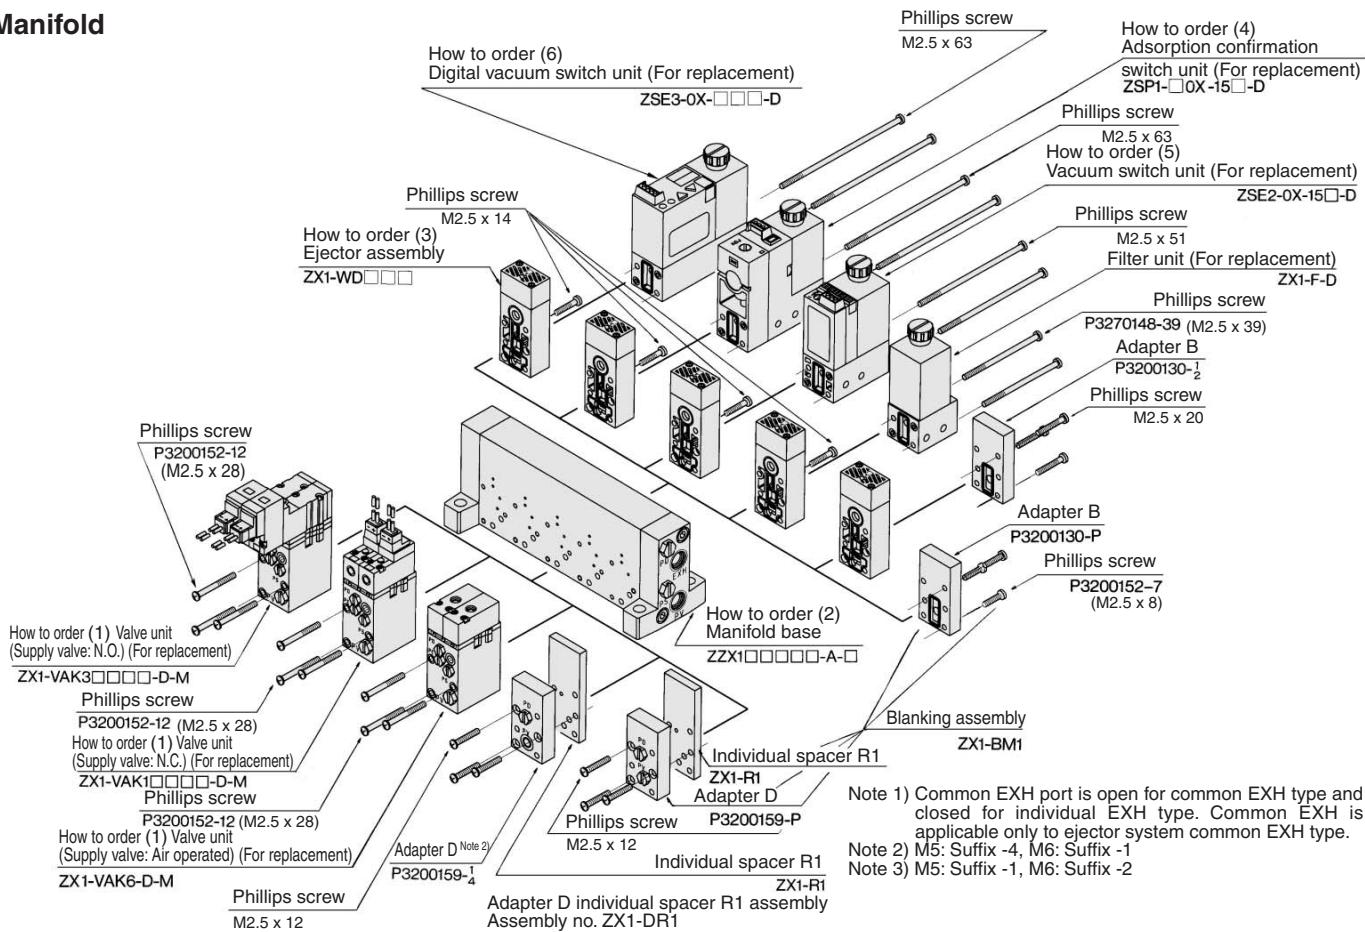


## How to Order Unit for Replacement


(1) Valve unit \* Refer to page 13-2-10 for details.

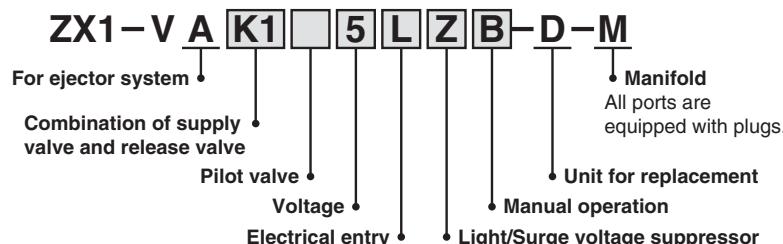

(2) Manifold base

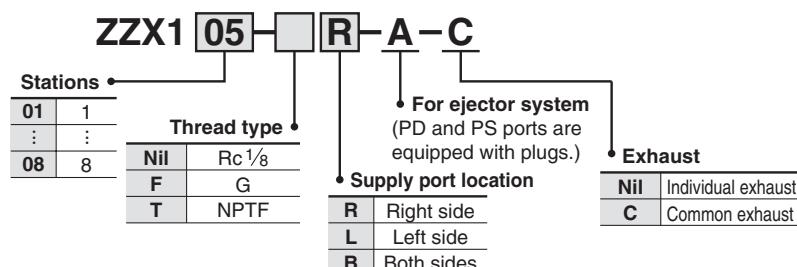

(3) Ejector assembly

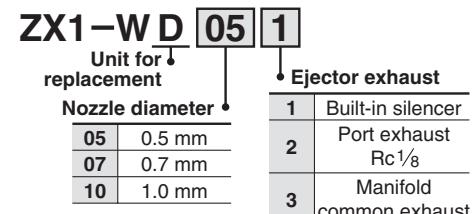

(4) Adsorption confirmation switch unit

**ZSP1-B 0X-15 C-D**

Applicable nozzle diameter	Piping specifications	Unit for replacement
S 0.03 to 0.07	Nil Grommet (0.6 m)	
B 0.05 to 0.12	L Grommet (3 m)	
	C Connector (0.6 m)	
	CL Connector (3 m)	
	CN Without connector	

(5) Vacuum switch unit

**ZSE2-0X-15 C-D**

Piping specifications	Unit for replacement
Nil Grommet (0.6 m)	CL Connector (3 m)
L Grommet (3 m)	CN Without connector
C Connector (0.6 m)	

(6) Digital vacuum switch unit

**ZSE3-0X-□□□ C-D**

Pressure indication	Output specifications
Nil kPa	21 2 outputs/without analog output
	22 2 outputs/with analog output
P kPa	23 1 output (with trouble detection)/without analog
	24 1 output (with trouble detection)/with analog

Note) Analog output is available only on grommet type.


**ZX**  
**ZR**  
**ZM**  
**ZH**  
**ZU**  
**ZL**  
**ZY**  
**ZQ**  
**ZF**  
**ZP**  
**ZCU**  
**AMJ**

Misc.

# Series ZX


## Vacuum Pump System/Unit Construction (Refer to below for unit replacement.)

### Single

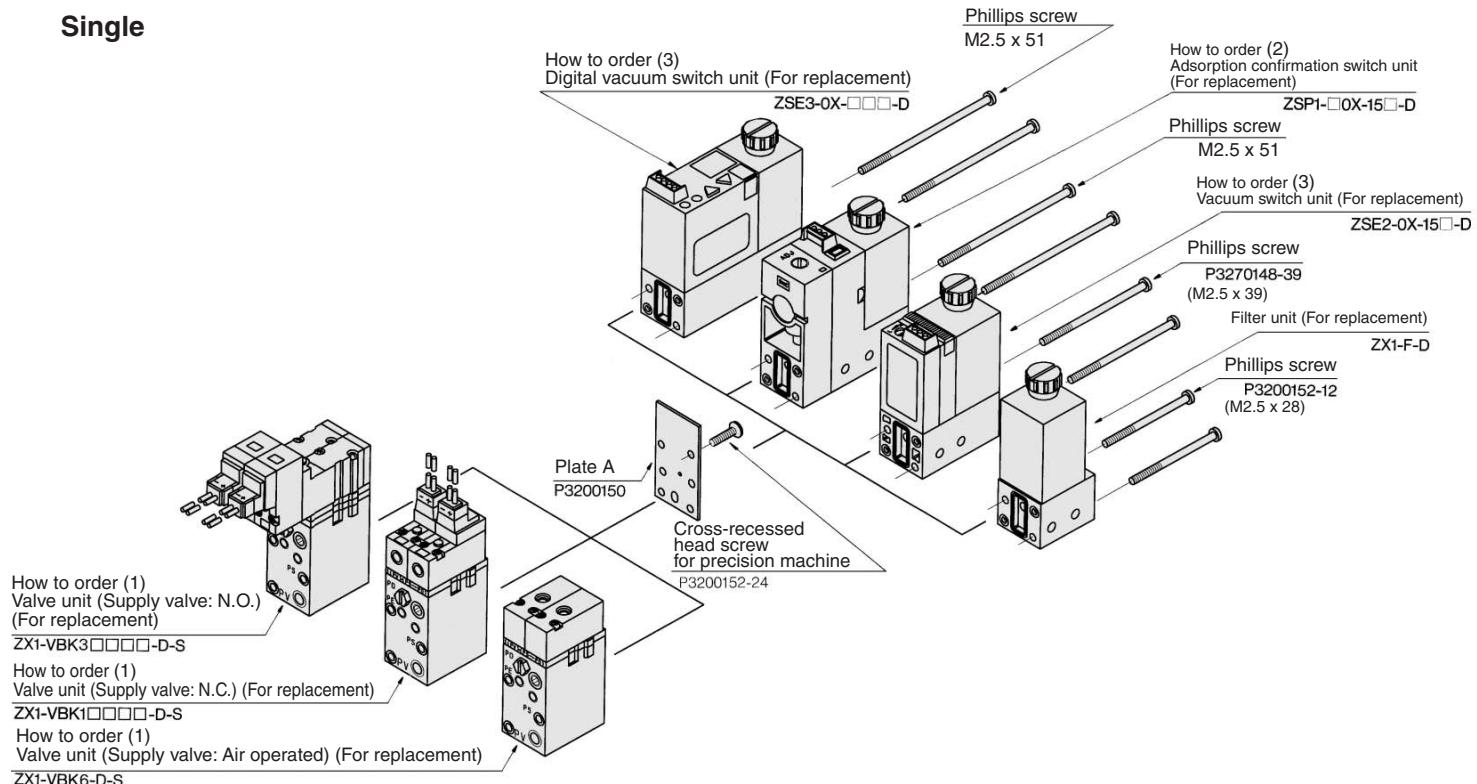

### How to Order Unit for Replacement


#### (1) Valve unit

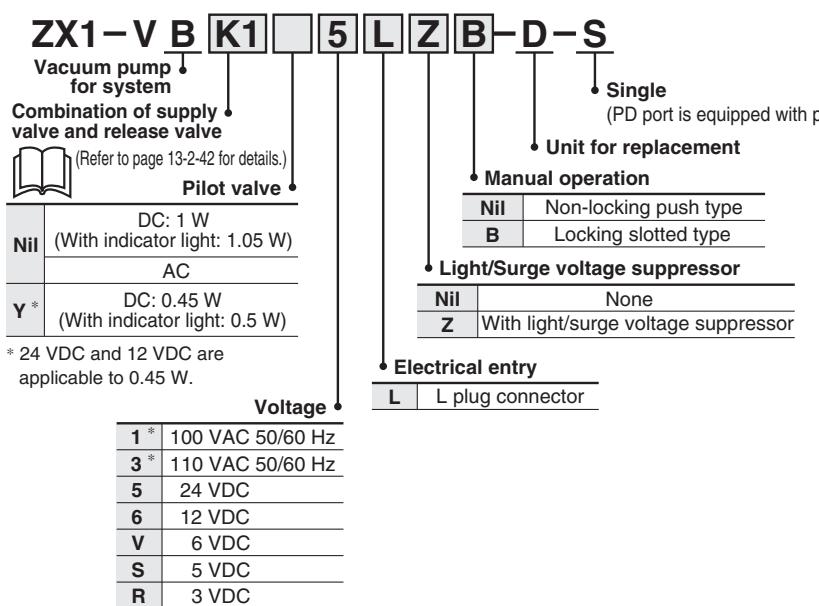


#### D: Unit for replacement

Ex.) If an adsorption confirmation switch is replaced for a vacuum switch on ZX1071-K15LZ-PBC, indicate as ZSE2-0X-15C-D. In this case, mounting screws P3270148-49 (2 pcs.) are required.  
If the unit is used on its own, not combined with others, "D" is not required.  
Ex.) ZSE2-0X-15C, ZX1-VAK15LZ

#### (2) Adsorption confirmation switch unit

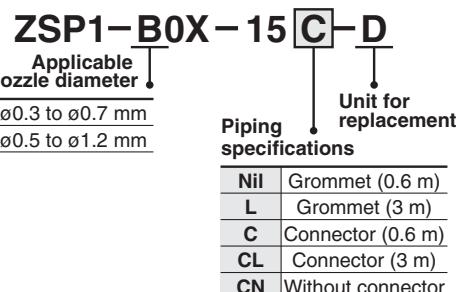

#### (3) Digital vacuum switch unit

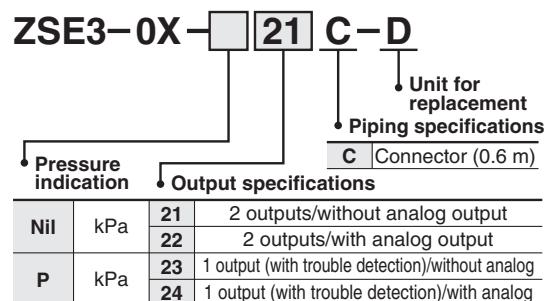

Note) Analog output is available only on grommet type.



# Series ZX

## Vacuum Pump System/Manifold Disassembly from Individual Unit

### Manifold disassembly from individual unit


1. Remove Philips screws.
  2. Remove cross-recessed head machine screw for precision machinery.
  3. Mount plugs to valve unit.
  4. Mount valve unit with Philips screws (P3200152-12) 3 pcs.
  5. Mount vacuum switch to manifold with Philips screws.
- Follow tightening screw torque on Table (1).

#### Note 1)

Even though screw type in use differs depending on the combination (Table (2)), screws for an individual unit and a manifold are common.

**Table (2)**

Combination	Part no.
Vacuum switch ZSE3, ZSP1	M2.5 x 51
Vacuum switch ZSE2	P3270148-39 (M2.5 x 39)
Filter unit ZX1-F	P3200152-12 (M2.5 x 28)

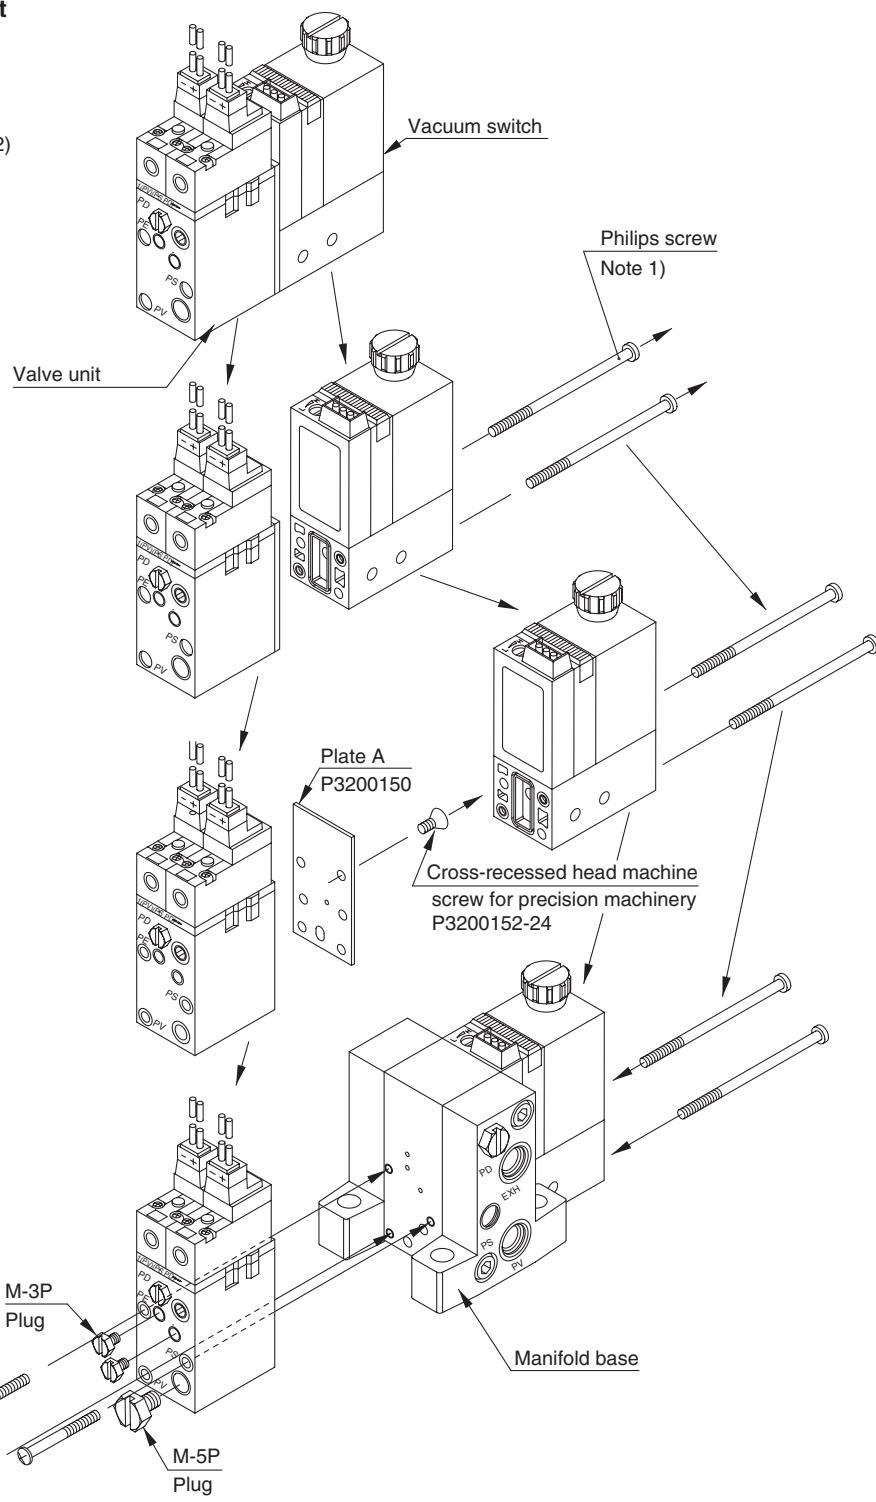

**Table (1)**

Part no.	Description	Quantity	Recommended tightening screw torque	In the case of manifold	Single unit
Note 1)	Philips screw	2	$0.28 \pm 0.1$ (N·m)	Necessary	Necessary
P3200150	Plate A	1		Not necessary	Necessary
P3200152-24	Cross-recessed head machine screw for precision machinery	1	$0.28 \pm 0.1$ (N·m)	Not necessary	Necessary
M-3P	Plug	2	$0.46 \pm 0.05$ (N·m)	Necessary	Not necessary
M-5P	Plug	1	$1.6 \pm 0.15$ (N·m)	Necessary	Not necessary
P3200152-12 (M2.5 x 28)	Philips screw	3	$0.28 \pm 0.1$ (N·m)	Necessary	Not necessary

## Ejector System/Manifold Disassembly from Individual Unit

### Manifold disassembly from individual unit

1. Remove Philips screws.
2. Remove Philips screws, and then remove ejector assembly from valve unit.
3. Mount plugs to valve unit.
4. Mount valve unit with Philips screws (P3200152-12) 3 pcs.
5. Mount ejector assembly to manifold with Philips screw (M2.5 x 14) 1 pc.
6. Mount vacuum switch to manifold with Philips screws 2 pcs.


#### Note 1)

Even though screw type in use differs depending on the combination (Table (2)), screws for an individual unit and a manifold are common.

Follow tightening screw torque on Table 1.

**Table (2)**

Combination	Part no.
Vacuum switch ZSE3, ZSP1	M2.5 x 63
Vacuum switch ZSE2	M2.5 x 61
Filter unit ZX1-F	P3270148-39 (M2.5 x 39)

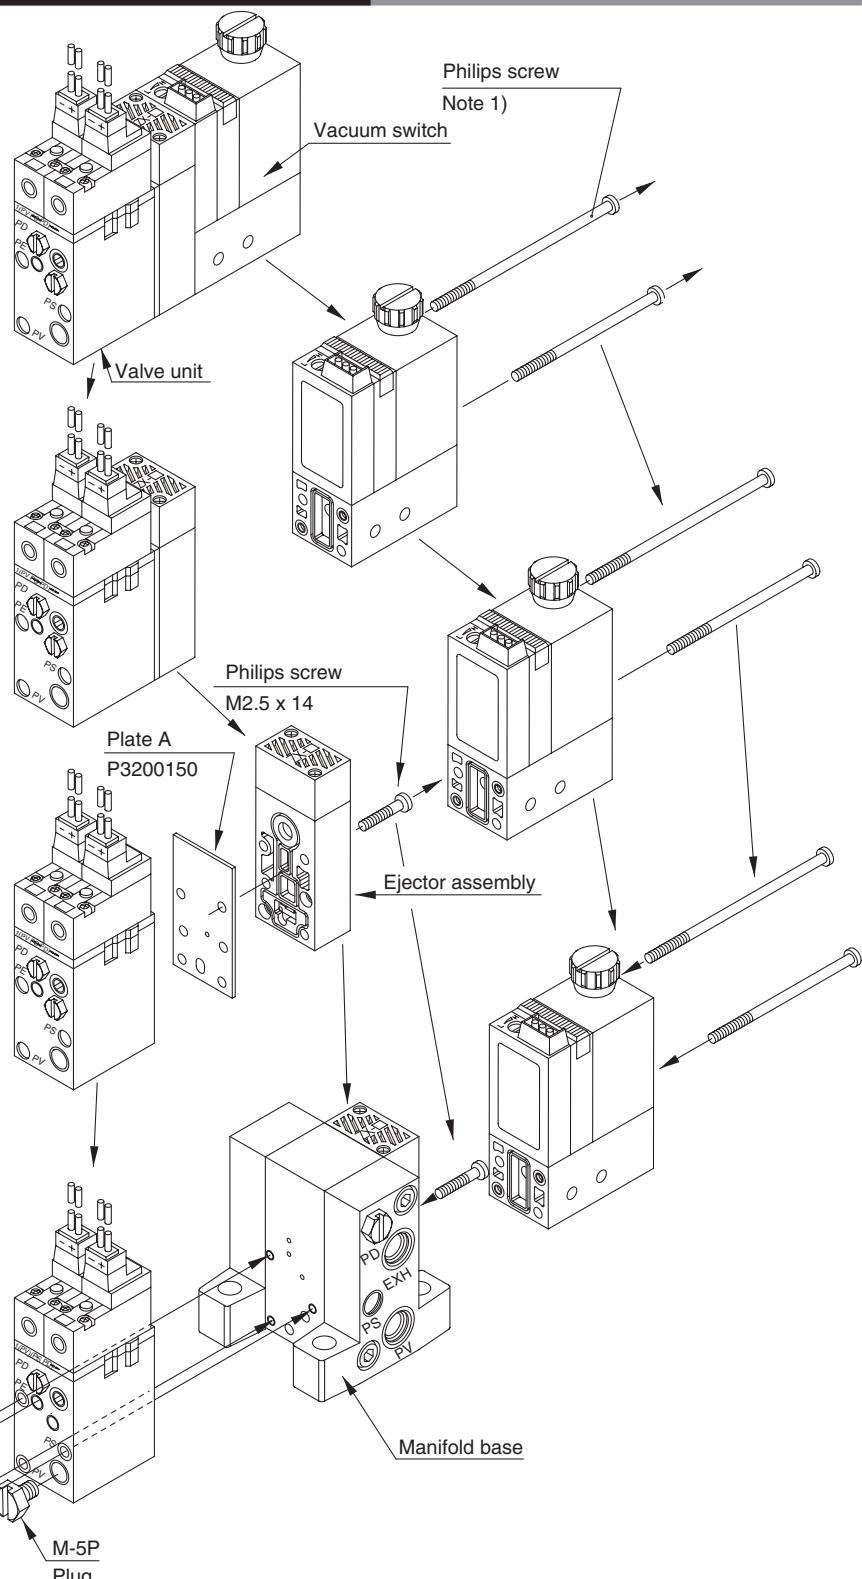

**Table (1)**

Part no.	Description	Quantity	Recommended tightening screw torque	In the case of manifold	Single unit
Note 1)	Philips screw	2	0.28 ± 0.1 (N·m)	Necessary	Necessary
P3200150	Plate A	1		Not necessary	Necessary
M2.5 x 14	Philips screw	1	0.28 ± 0.1 (N·m)	Necessary	Necessary
M-3P	Plug	1	0.46 ± 0.05 (N·m)	Necessary	Not necessary
M-5P	Plug	1	1.6 ± 0.15 (N·m)	Necessary	Not necessary
P3200152-12 (M2.5 x 28)	Philips screw	3	0.28 ± 0.1 (N·m)	Necessary	Not necessary

ZX  
ZR  
ZM  
ZH  
ZU  
ZL  
ZY  
ZQ  
ZF  
ZP  
ZCU  
AMJ  
Misc.

## Series ZX

# Made to Order Specifications:


Please consult with SMC for detailed specifications, size and delivery.

## 1. Valve Unit/Other Combinations of Supply Valve and Release Valve (Ejector unit)

### Ejector Unit

 If those other than the standard combination of supply valves and release valves (Refer to page 13-2-5.) are required, select from the following combinations. (Refer to page 13-2-4 for "How to Order".)

#### Combination Symbol: K2

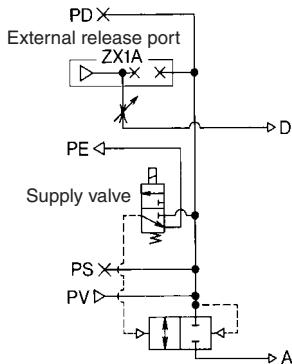


An N.C. solenoid valve is used as the supply valve. Also, an external 2 port valve (vacuum valve) must be provided to serve as the vacuum release valve.

**Application:** The supply pressure is controlled by electric signals and a vacuum release is effected by external air.

#### How to Operate

Valve	Supply valve	Release valve
Condition	Solenoid valve	External 2 port valve
1. Work adsorption	ON	OFF
2. Vacuum release	OFF	ON
3. Operation stop	OFF	OFF

#### Combination Symbol: K4

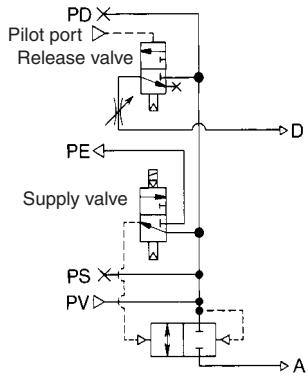


An N.O. solenoid valve is used as the supply valve. An air operated N.C. valve is used for the vacuum release valve.

**Application:** The supply pressure is restricted by electric signals and a vacuum release is effected by air signals. Because the supply valve is N.O., the pressure that is supplied to the ejector is not interrupted during a power outage; as a result, the state of suction can be maintained. This combination is used for preventing the workpieces from dropping during power outages.

#### How to Operate

Valve	Supply valve	Release valve
Condition	Solenoid valve	Air operated valve
1. Work adsorption	OFF	OFF
2. Vacuum release	ON	ON
3. Operation stop	ON	OFF

#### Combination Symbol: K5

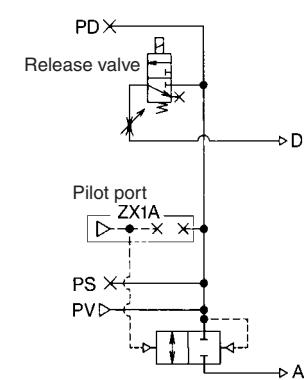


An external 3 port valve must be provided to serve as the supply valve. Also, an N.C. solenoid valve is used for the vacuum release valve.

**Application:** The supply pressure is controlled by external air signals and a vacuum release is effected by the solenoid valve.

#### How to Operate

Valve	Supply valve	Release valve
Condition	External 3 port valve	Solenoid valve
1. Work adsorption	ON	OFF
2. Vacuum release	OFF	ON
3. Operation stop	OFF	OFF

#### Combination Symbol: K7

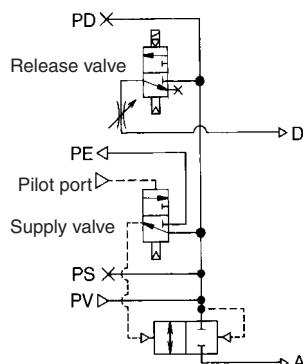


An air operated N.O. valve is used as the supply valve. An N.C. solenoid valve is used for the vacuum release valve.

**Application:** The supply pressure is controlled by external air signals and a vacuum release is effected by the solenoid valve. Because the supply valve is N.O., the pressure that is supplied to the ejector is not interrupted during a power outage; as a result, the state of suction can be maintained. This combination is used for preventing the workpieces from dropping during power outages.

#### How to Operate

Valve	Supply valve	Release valve
Condition	Air operated valve	Solenoid valve
1. Work adsorption	OFF	OFF
2. Vacuum release	ON	ON
3. Operation stop	ON	OFF

#### Combination Symbol: J1

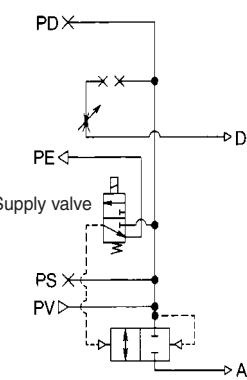


An N.C. solenoid valve is used as the supply valve. A vacuum release valve is not used.

**Application:** This combination is used for effecting control in accordance with electric signals. A vacuum release is effected by the intrusion of air between the silencer, pad, and the workpiece. This combination is used when there is no need to accelerate the vacuum release speed.

#### How to Operate

Valve	Supply valve	Release valve
Condition	Solenoid valve	—
1. Work adsorption	ON	—
2. Vacuum release	OFF	—
3. Operation stop	OFF	—

#### Combination Symbol: J2

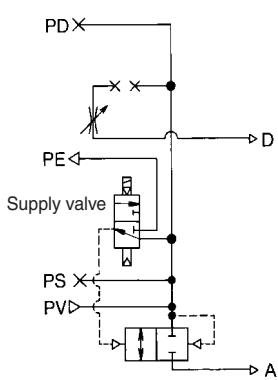

An N.O. solenoid valve is used as the supply valve. A vacuum release valve is not used.

**Application:** It is used for controlling the supply pressure through electric signals. Because the supply valve is N.O., the pressure that is supplied to the ejector is not interrupted during a power outage; as a result, the state of suction can be maintained. This is used for preventing the workpieces from dropping during power outages. A vacuum release is effected by the intrusion of air between the silencer, pad, and the workpiece. This combination is used when there is no need to accelerate the vacuum release speed.

#### How to Operate

Valve	Supply valve	Release valve
Condition	Solenoid valve	—
1. Work adsorption	OFF	—
2. Vacuum release	ON	—
3. Operation stop	ON	—

## Series ZX

## Made to Order Specifications:

Please consult with SMC for detailed specifications, size and delivery.

ZX

ZR

ZM

ZH

ZU

ZL

ZY

ZQ

ZF


ZP

ZCU

AMJ

Misc.

## Combination Symbol: J3

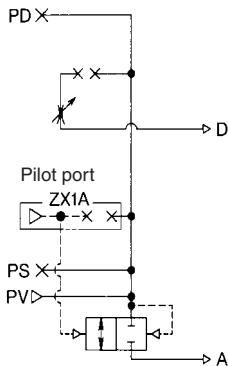


An N.C. solenoid valve is used as the supply valve. A vacuum release valve is not used.

**Application:** The supply pressure is controlled by external air signals. A vacuum release is effected by the intrusion of air between the silencer, pad, and the workpiece. This is used when there is no need to accelerate the vacuum release speed.

## How to Operate

Valve	Supply valve	Release valve
Condition	External 3 port valve	—
1. Work adsorption	ON	—
2. Vacuum release	OFF	—
3. Operation stop	OFF	—

## Combination Symbol: J4

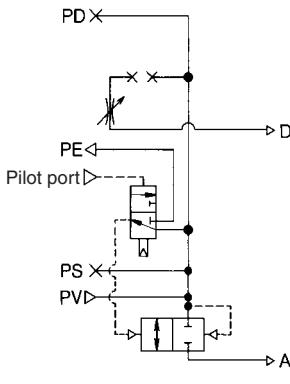


An air operated N.O. valve is used as the supply valve. A vacuum release valve is not used.

**Application:** The supply pressure is controlled by external air signals. Because the supply valve is N.O., the pressure that is supplied to the ejector is not interrupted during a power outage; as a result, the state of suction can be maintained. This is used for preventing the workpieces from dropping during power outages. A vacuum release is effected by the intrusion of air between the silencer, pad, and the workpiece. This type is used when there is no need to accelerate the vacuum release speed.

## How to Operate

Valve	Supply valve	Release valve
Condition	Air operated valve	—
1. Work adsorption	OFF	—
2. Vacuum release	ON	—
3. Operation stop	OFF	—

## Combination Symbol: D1

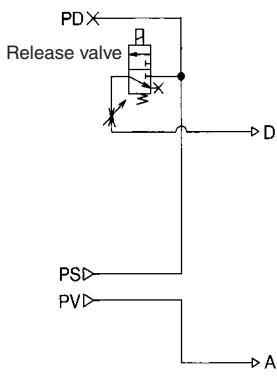


An N.C. solenoid valve is used for the vacuum release valve. An external supply valve must be provided.

**Application:** The supply pressure is controlled by the external valve and a vacuum release is effected by the solenoid valve.

## How to Operate

Valve	Supply valve	Release valve
Condition	External valve	Solenoid valve
1. Work adsorption	ON	OFF
2. Vacuum release	OFF	ON
3. Operation stop	OFF	OFF

## Combination Symbol: D2

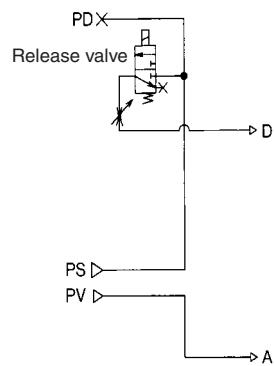


An N.C. solenoid valve is used for the vacuum release valve. An external supply valve must be provided.

**Application:** The supply pressure is controlled by the external valve and a vacuum release is effected by the solenoid valve.

## How to Operate

Valve	Supply valve	Release valve
Condition	External valve	Solenoid valve
1. Work adsorption	ON	OFF
2. Vacuum release	OFF	ON
3. Operation stop	OFF	OFF

## Combination Symbol: D3

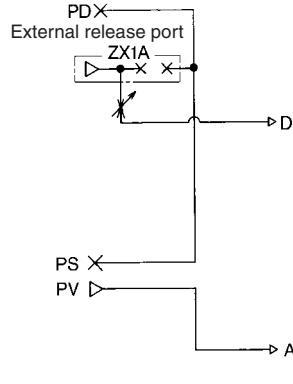


An external valve must be provided to serve as the supply valve. Also, an external 2 port valve (vacuum valve) must be provided to serve as the vacuum release valve.

**Application:** The supply pressure is controlled by the external valve and a vacuum release is effected by the external 2 port valve (vacuum valve).

## How to Operate

Valve	Supply valve	Release valve
Condition	External valve	Solenoid valve
1. Work adsorption	ON	OFF
2. Vacuum release	OFF	ON
3. Operation stop	OFF	OFF

## Combination Symbol: D4

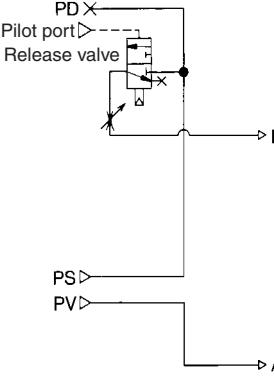

An external valve must be provided to serve as the supply valve. An air operated N.C. valve is used for the vacuum release valve.

**Application:** The supply pressure is controlled by the external valve and a vacuum release is effected by external air signals.

## How to Operate

Valve	Supply valve	Release valve
Condition	External valve	Air operated valve
1. Work adsorption	ON	OFF
2. Vacuum release	OFF	ON
3. Operation stop	OFF	OFF

Series ZX

# Made to Order Specifications:


Please consult with SMC for detailed specifications, size and delivery.

## 1. Valve Unit/Other Combinations of Supply Valve and Release Valve (Vacuum pump system)

### Vacuum Pump System

 If those other than the standard combination of supply valves (Refer to page 13-2-41.) and release valves are required, select from the following combinations. (Refer to page 13-2-40 for "How to Order".)

#### Combination Symbol: K2

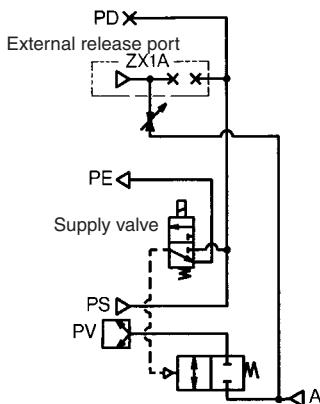


An N.C. solenoid valve is used as the supply valve. Also, an external 2 port valve (vacuum valve) must be provided to serve as the vacuum release valve.

**Application:** The supply pressure is controlled by electric signals and a vacuum release is effected by external air.

#### How to Operate

Valve Condition	Supply valve	Release valve
Solenoid valve	External 2 port valve	
1. Work adsorption	ON	OFF
2. Vacuum release	OFF	ON
3. Operation stop	OFF	OFF

#### Combination Symbol: K4

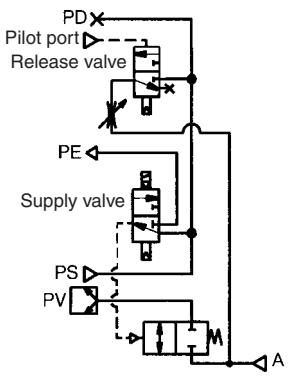


An N.O. solenoid valve is used as the supply valve. An air operated N.C. valve is used for the vacuum release valve.

**Application:** The supply pressure is controlled by electric signals and a vacuum release is effected by air signals. Because the supply valve is N.O., the pressure that is supplied to the ejector is not interrupted during a power outage; as a result, the state of suction can be maintained. This combination is used for preventing the workpieces from dropping during power outages.

#### How to Operate

Valve Condition	Supply valve	Release valve
Solenoid valve	Solenoid valve	
1. Work adsorption	OFF	OFF
2. Vacuum release	ON	ON
3. Operation stop	ON	ON

#### Combination Symbol: K5

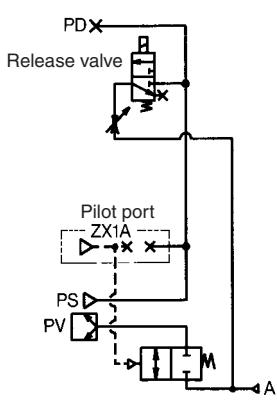


An external 3 port valve must be provided to serve as the supply valve. Also, an N.C. solenoid valve is used for the vacuum release valve.

**Application:** The supply pressure is controlled by external air signals and a vacuum release is effected by the solenoid valve.

#### How to Operate

Valve Condition	Supply valve	Release valve
External 3 port valve	Solenoid valve	
1. Work adsorption	ON	OFF
2. Vacuum release	OFF	ON
3. Operation stop	OFF	OFF

#### Combination Symbol: K7

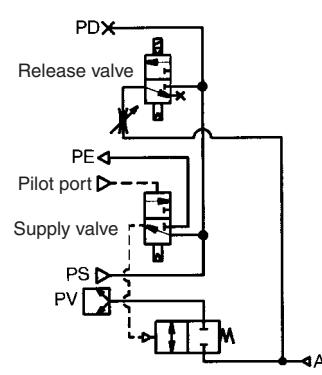


An air operated N.O. valve is used as the supply valve. An N.C. solenoid valve is used for the vacuum release valve.

**Application:** The supply pressure is controlled by external air signals and a vacuum release is effected by the solenoid valve. Because the supply valve is the N.O., the pressure that is supplied to the ejector is not interrupted during a power outage; as a result, the state of suction can be maintained. This combination is used for preventing the workpieces from dropping during power outages.

#### How to Operate

Valve Condition	Supply valve	Release valve
Air operated valve	Solenoid valve	
1. Work adsorption	OFF	OFF
2. Vacuum release	ON	ON
3. Operation stop	ON	OFF

#### Combination Symbol: J1

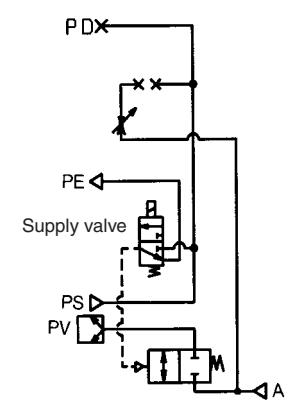


An N.C. solenoid valve is used as the supply valve. A vacuum release valve is not used.

**Application:** This combination is used for controlling the pressure by electric signals. Normally, the workpiece is released due to the air leakage that occurs between the pad and the workpiece. However, if there is no air leakage, the workpiece will not become detached because the vacuum state is maintained even when the supply valve is turned OFF. To effect releasing, an external 2 port valve (vacuum valve) must be provided.

#### How to Operate

Valve Condition	Supply valve	Release valve
Solenoid valve		
1. Work adsorption	ON	
2. Vacuum release	OFF	
3. Operation stop	OFF	

#### Combination Symbol: J2

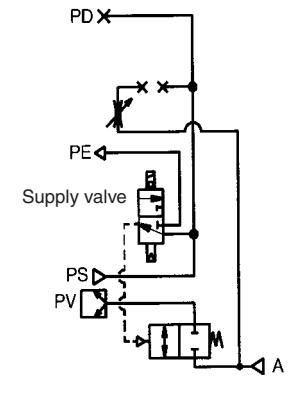

An N.O. solenoid valve is used as the supply valve. A vacuum release valve is not used.

**Application:** Used for controlling with electric signals. Because the supply N.O., the pressure is not interrupted during a power outage. This prevents the workpieces from dropping. Normally, the workpiece is released due to leakage. However, if no air leakage, the workpiece will not detach because the vacuum state is maintained even when the supply valve is turned ON. To release, an external 2 port valve (vacuum valve) must be used.

#### How to Operate

Valve Condition	Supply valve	Release valve
Solenoid valve		
1. Work adsorption	OFF	
2. Vacuum release	ON	
3. Operation stop	ON	

Series ZX

# Made to Order Specifications:

Please consult with SMC for detailed specifications, size and delivery.

ZX

ZR

ZM

ZH

ZU

ZL

ZY

ZQ


ZF

ZP

ZCU

AMJ

Misc.

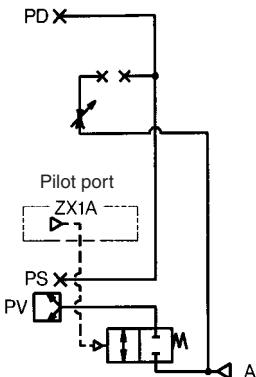
**Combination Symbol: J3**

An N.C. solenoid valve is used as the supply valve. A vacuum release valve is not used.

**Application:** The supply pressure is controlled by external air signals. Normally, the workpiece is released due to the air leakage that occurs between the pad and the workpiece. However, if there is no air leakage, the workpiece will not become detached because the vacuum state is maintained even when the supply valve is turned OFF. To effect releasing, an external 2 port valve (vacuum valve) must be provided.

**How to Operate**

Valve	Supply valve	Release valve
Condition	External 3 port valve	—
1. Work adsorption	ON	—
2. Vacuum release	OFF	—
3. Operation stop	OFF	—

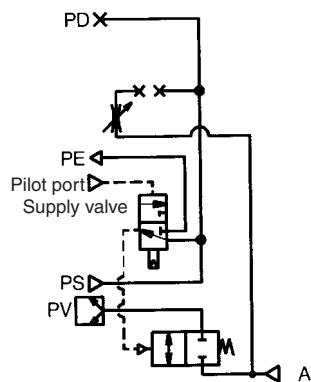
**Combination Symbol: J4**

An air operated N.O. valve is used as the supply valve. A vacuum release valve is not used.

**Application:** Supply is controlled by external air signals. Because the valve is N.O., the pressure is not interrupted during a power outage. This prevents the workpieces from dropping. Normally, the workpiece is released due to leakage. However, if no leakage, the workpiece will not detach because the vacuum state is maintained even when the valve is turned ON. To release, an external 2 port valve (vacuum valve) must be provided.

**How to Operate**

Valve	Supply valve	Release valve
Condition	Air operated valve	—
1. Work adsorption	OFF	—
2. Vacuum release	ON	—
3. Operation stop	ON	—

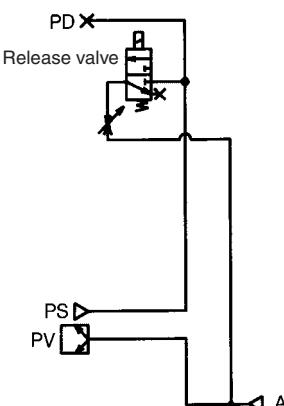
**Combination Symbol: D1**

An N.C. solenoid valve is used as the vacuum release valve. A supply valve is not used.

**Application:** The supply pressure is controlled by an external 2 port valve (vacuum valve) and a vacuum release is effected by the solenoid.

**How to Operate**

Valve	Supply valve	Release valve
Condition	External 2 port valve	Solenoid valve
1. Work adsorption	ON	OFF
2. Vacuum release	OFF	ON
3. Operation stop	OFF	OFF

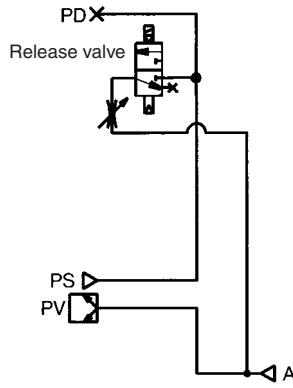
**Combination Symbol: D2**

An N.C. solenoid valve is used as the vacuum release valve. A supply valve is not used.

**Application:** The supply pressure is controlled by an external 2 port valve (vacuum valve) and a vacuum release is effected by the solenoid.

**How to Operate**

Valve	Supply valve	Release valve
Condition	External 2 port valve	Solenoid valve
1. Work adsorption	ON	OFF
2. Vacuum release	OFF	ON
3. Operation stop	OFF	OFF

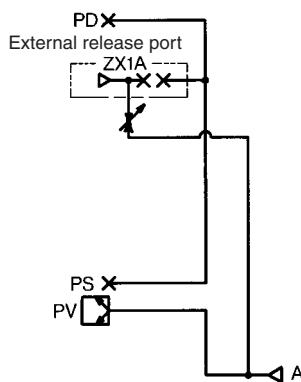
**Combination Symbol: D3**

An external 2 port valve (vacuum valve) must be provided to serve as the supply valve and the vacuum release valve.

**Application:** The supply pressure is controlled by the external 2 port valve (vacuum valve) and releasing is also effected by the external 2 port valve.

**How to Operate**

Valve	Supply valve	Release valve
Condition	External 2 port valve	Solenoid valve
1. Work adsorption	ON	OFF
2. Vacuum release	OFF	ON
3. Operation stop	OFF	OFF

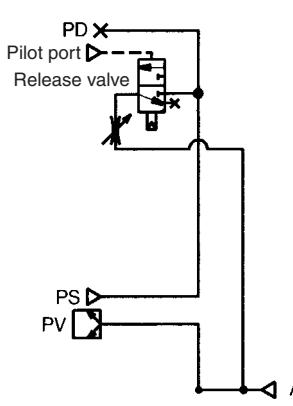**Combination Symbol: D4**

An external 2 port valve (vacuum valve) must be provided to serve as the supply valve. An air-operated N.C. valve is used for the vacuum release valve.

**Application:** The supply pressure is controlled by the external 2 port valve (vacuum valve) and vacuum release is effected by external air signals.

**How to Operate**


Valve	Supply valve	Release valve
Condition	External 2 port valve	Solenoid valve
1. Work adsorption	ON	OFF
2. Vacuum release	OFF	ON
3. Operation stop	OFF	OFF

Series ZX

# Made to Order Specifications:


Please consult SMC for detailed specifications, size and delivery.

## 1. Noise Reduction Silencer Assembly/The ejector exhaust style is applicable to the silencer equipped specifications.


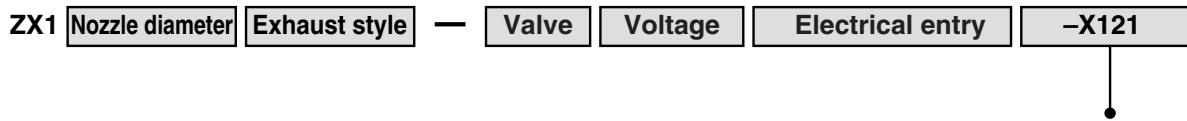


Noise reduction silencer assembly

Reduction in the exhaust noise from the ejector (Silencing effect 8 dB (A) Standard silencer assembly comparison)

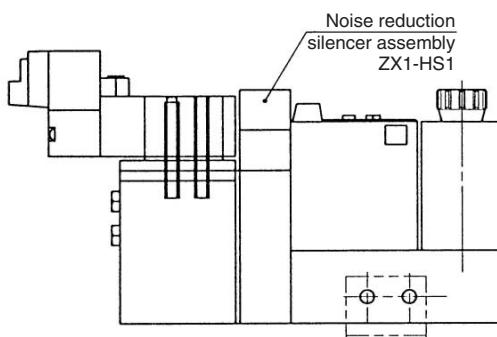

Ordering example  
ZX1101-K35LZ-D23C-X121

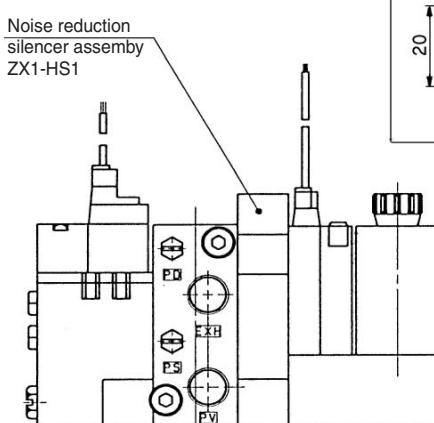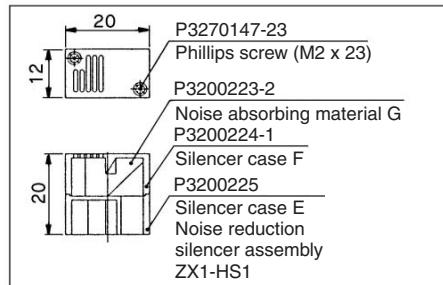

Ordering example  
\* ZX102-R  
ZX1101-K35LZ-EC-X121      1 pc.  
                                      2 pcs.